ILLUSTRATED PARTS CATALOG

For the

CIRRUS SR22 AND SR22T

Aircraft Serials 22-0002 thru 22-4434,
Serials 22T-0001 thru 22T-1459, 22T-1461 thru 22T-1470, 22T-1472

CIRRUS DESIGN INCORPORATED

4515 Taylor Circle

Duluth, MN 55811

FAA APPROVAL HAS BEEN OBTAINED ON THE TECHNICAL DATA IN THIS PUBLICATION THAT AFFECTS AIRPLANE TYPE DESIGN.

COPYRIGHT 1999 CIRRUS DESIGN CORPORATION DULUTH, MINNESOTA, USA

P/N 13774-001

ORIGINAL ISSUE JUNE 2002

REISSUE A APRIL 2007

REISSUE B JUNE 2010

REISSUE C DECEMBER 2014

Intentionally Left Blank

LOG OF REVISIONS

Revision Number	Issue Date		Revision Number	Issue Date		Revision Number	Issue Date
Original	15 Jun 2002						
1	15 Jun 2003						
2	31 Dec 2003						
3	15 Mar 2004						
4	30 Sep 2004						
5	31 Jan 2005						
6	31 Jul 2005						
7	15 Nov 2005						
8	15 Apr 2006						
E-8.1	23 Oct 2006						
Reissue A	15 Apr 2007						
E-A.1	17 Aug 2007						
A1	15 Dec 2007						
A2	30 May 2008						
E-A2.1	25 Jul 2008						
A3	15 Dec 2008						
E-A3.1	26 May 2009						
Reissue B	15 Jun 2010						
B1	31 May 2011						
B2	01 Jan 2012						
B3	01 May 2012						
B4	01 Feb 2013						
Reissue C	15 Dec 2014						
C1	01 Jan 2016						
C2	19 Sep 2017						
C3	04 Sep 2018						

Intentionally Left Blank

LOG OF TEMPORARY REVISIONS

Temp Rev Number	Issue Date		Temp Rev Number	Issue Date		Temp Rev Number	Issue Date

EFFECTIVITY:
All

Intentionally Left Blank

INTRODUCTION

1. PURPOSE

This Illustrated Parts Catalog (IPC) has been prepared by Cirrus Design Technical Publications as an aid to operators and mechanics in identifying and procuring replacement parts for the Cirrus Design SR22 and SR22T airplane. Information in this catalog covers the airplane and its options as delivered from the factory or as modified by Cirrus Design Service Bulletins. Information contained within this catalog does not authorize or provide authority to perform airplane modifications.

Note: When part effectivities are conditional to alterations performed on the airplane, such as Service Bulletins or installation of Supplemental Type Certificates, the airplane logbook should be checked to ensure the proper replacement parts are obtained.

Part information for Supplemental Type Certificates (STC) installed on the airplane are not included in this publication. Specifically, part information for airplanes equipped with the Tornado Alley Turbo Inc. “Turbonormalizer” system, installed by STC SA10588SC are not include in this publication. For part information related to any STC installation, refer to the STC’s Instructions for Continued Airworthiness.

A. Level of Coverage

The parts lists in this IPC contain all parts comprising this airplane except those parts that are attached by bonding or riveting. Bonded, and riveted parts are included when the part is considered normally replaceable.

The level of detail (breakdown) covered is to the Line Replaceable Unit (LRU) level.That is, coverage and breakdown in this IPC includes removal of components from the airplane but does not include bench disassembly of the components. Disassembly, inspection, test, and reassembly of components on a bench is beyond the scope of this manual and, where necessary, will be covered in appropriate overhaul manuals.

B. Illustrated Parts Catalog Numbering System

The content of this catalog is arranged and presented in the same Aircraft Group, Chapter, and Section arrangement as appears in the Airplane Maintenance Manual (AMM). Therefore, the user can usually expect to find coverage of items in the AMM in the same Chapter/Section of the IPC.

The numbering system employed in this catalog is composed of a six-digit number containing three elements. Each element consists of two digits as shown in the following example.

First Element		Second Element		Third Element
Chapter		Section		Figure
XX	-	XX	-	XX

C. Abbreviations

The following abbreviations have been used throughout this catalog:

ALT - Alternate	EXHTD - Exhausted	NP - Not Procurable
AR - As Required	FUS STA - Fuselage Station	P/N - Part Number
ASSY - Assembly	FWD - Forward	REF or RF- Reference
BHD - Bulkhead	INSTL- Installation	RH - Right Hand
BL - Buttock Line	LH - Left hand	WS - Wing Station
DET - Detail	NHA - Next Higher Assy	G3 - Redesigned Wing

2. USING THE ILLUSTRATED PARTS CATALOG

The following information provides detailed guidance on using the SR22 and SR22T Illustrated Parts Catalog. Familiarization with this information will help ensure the correct part is ordered for the proper aircraft configuration through a clear understanding of the various configurations and options that are, or have been installed on the aircraft.

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					12345678			
					.....			

A. NO PIC: Illustration Coverage

A dash in this column indicates the component is not pictorially covered. Typically this is because some IPC illustrations show the most recent configuration and the dashed component is no longer a current production part. Because Item 1 of all IPC Figures calls out the Installation, this item is dashed to avoid confusion on multi-sheet illustrations.

B. ITEM: Indentured List Item and Illustration Call-Out Number

The Item number and corresponding illustration call-out number is shown in this column. Item numbers in the 400 range are not part of the Figure Assembly/Installation. A detail reference to the appropriate IPC Chapter-Section-Figure, i.e. RF 34-10-01 DET, will be listed in the Part Number column.

When using Cirrus Design electronic publications, illustration call-outs and indentured list numbers are hyperlinked to facilitate more efficient page navigation. Hovering over the illustration call-out will display the item's part number and name.

C. PART NUMBER: Part Number

The component's part number is listed in this column. At the installation level this column identifies the IPC Figure Number. If the indenture list is broken into block effectivities, i.e. configurations grouped together within one Figure, NO PART NUMBER will be called out at the top level of each effectivity block. In the case where a component assembly (X) is not available at the piece part level, the item(s) not available for separate purchase will be noted with PRT OF ITEM X. For items that are not part of the Figure, this column will show a 400-series number with a detail reference to the appropriate IPC Chapter-Section-Figure, i.e. RF 34-10-01 DET.

(1) Hardware Substitution List

A list of qualified interchangeable parts are listed in the Hardware Substitution List. This hardware is interchangeable in all applications. No other substitutions are allowed. Contact Cirrus Design Customer Support with questions regarding hardware substitutions.

D. SYMBOL: Symbol Notes

A symbol note is indicated by a symbol character to the right of the part number column. The corresponding symbol character and symbol note appear immediately below the parts listing. Symbol notes may require that additional data be supplied when a part is ordered, may indicate that there are configuration differences, may indicate that the part listed is a bulk item and a quantity must be specified, or any additional data about the part or component in the listing. Airplane serial effectivities may be limited by symbol notes.

E. ATTACH: Attaching Parts

Attaching parts for an assembly or component are shown at the same indent level as the assembly or component they attach and are distinguished from other items by an "A" immediately preceding the description of the assembly or component in the nomenclature column.

F. NOMENCLATURE: Part Name and Assembly Order

The relationship of component parts in an installation or assembly is determined by the degree of indenture in the nomenclature column as indicated below:

```
ATTACH  NOMENCLATURE
        12345678
        ........
        INSTALLATION
        .DETAIL PARTS FOR INSTALLATION
        .ASSEMBLY
A       .ATTACHING PARTS FOR ASSEMBLY
        ..DETAIL PARTS FOR ASSEMBLY
        ..SUB ASSEMBLY
A       ..ATTACHING PARTS FOR SUB ASSEMBLY
        ...DETAIL PARTS FOR SUB ASSEMBLY
```

(1) Identical Parts: Left-Hand Right-Hand Assemblies

If two or more assemblies are made of a majority of identical parts, or the assemblies are mirror (reversed) images, as in the case of left-hand and right-hand parts, they are listed together in the nomenclature column. The detailed parts of each assembly are combined and listed together. All detail (indented) parts common to both assemblies are listed once with each part having a single item number. Parts not common to both assembles are noted “LH” or “RH” or other appropriate differentiating term. The quantity of parts listed under UNITS is for one assembly only.

(2) Nomenclature Notes

Notes for Service Bulletins, Spare Parts, and Alternate Parts are included in the Nomenclature column. Refer to the Effectivity description for Nomenclature Notes and how they are applied.

G. EFFECTIVITY: Part Effectivity

Part effectivity is given by airplane serial number in Start (FROM) – Stop (TO) order in the Indentured List’s Effectivity columns.

Model SR22 airplanes are equipped with a TCM normally aspirated engine. SR22 airplane serial numbers begin at 22-0002 and are shown directly under the **22** Effectivity column.

Model SR22T airplanes are equipped with a TCM turbocharged engine. SR22T airplane serial numbers begin at 22T-0001 and are shown directly under the **22T** Effectivity column.

(1) Standard Effectivity Break

Example:

EFFECTIVE	
FROM	TO
22 / 22T	22 / 22T
0820 /	2083 /
2084 / 0001	/

In the example above, the effectivity listing of “0820” “ “ / “2083” “ “ indicates that the component is installed only on SR22 airplane serial numbers 0820 through 2083. A blank TO effectivity column in the next row is the equivalent of saying “component installed on SR22 serial number 2084, SR22T serial number 0001, and on all subsequent SR22/SR22T serial numbers.

Note: For rows with a blank TO column, effectivity in this IPC ends as follows:

Model	End Effectivity
SR22	22-2234
SR22T	22T-1459, 22T-1461 thru 22T-1470, & 22T-1472

(2) Split Effectivity Break

Example:

EFFECTIVE	
FROM	TO
22 / 22T	22 / 22T
2083 / 0001	3020 / 0300
3050 / 0320	/

In the event that an effectivity is split, i.e., not sequential, the effectivity will consist of one or more effectivity lines.

The example above indicates that the component is installed on:

- SR22 airplane serial numbers 2083 through 3020,
- SR22T airplane serial numbers 0001 through 0300,

not installed on:

- SR22 serial numbers 3021 thru 3049,
- SR22T serial numbers 0301 thru 0319,

and resumed installation on:

- SR22 serial numbers 3050,
- SR22T serial numbers 0320.

(3) Nomenclature Notes Affecting Effectivity

Service Bulletins - Installation of service bulletins are shown by notations in the nomenclature column. The term “Before SB2X-xx-xx” in the nomenclature column indicates that the part effectivity is as written in the effectivity column unless SB2X-xx-xx was installed. The term “After SB2X-xx-xx” in the nomenclature column indicates that the part effectivity is as written in the effectivity column when the airplane has been modified in accordance with SB2X-xx-xx.

Spares Notes - Spares notes in the nomenclature column may redirect the user to a part that was not installed at original manufacture for a replacement part. These notes will usually state, “FOR SPARES USE P/N 12345-xxx” or “WHEN EXHTD USE 12345-xxx.” The “FOR SPARES …” note requires that the noted part be used as a replacement for the original part. The “WHEN EXHTD …” note allows use of the noted part when stock of the original part is exhausted.

Alternate Parts - Alternate parts are those parts that may be used in place of another part. Where alternate parts are listed, the term “ALTERNATE FOR …” will appear in the nomenclature column. Normally, the next item listed will be the alternate part and it will have an “ALTERNATE FOR …” notation referencing the first part. Alternate parts have identical serial effectivities.

(4) Additional Effectivity Information

Effectivity is also indicated in the Effectivity Block in the bottom inside corner of each page and in the title block beneath the illustration. Effectivity may also be shown on details found on the face of the illustration.

H. UNITS: Units per Assembly

Units per Assembly is shown in this column. In some instances where number of units is not applicable, i.e. washer stackup, shims, dual lock, lock ties etc..., number of units is listed as AR, As Required. Non-Procurable items are noted with NP abbreviation.

(1) Identical Parts: Left-and Right-hand Assemblies

Parts not common to both assembles are noted “LH” or “RH” or other appropriate differentiating term. The quantity of parts listed under UNITS is for one assembly only.

3. SPECIAL CONDITIONS

Aircraft used for evaluating new systems before entering regular production can cause a break in the aircraft serial number range due to a system being installed as a “pilot”, the system being removed from the production line configuration, and the system later being reintroduced at configuration launch. Additionally, similar effectivity breaks can be caused by factory built aircraft used as company demonstrators and then later updated to conform to type design with a more current configuration.

In many instances these effectivity breaks can result in difficult-to-interpret indentured parts lists. To address this condition, a unique, Special Condition symbol note (**) is used throughout the IPC to identify affected IPC figures and aircraft serial numbers.

Example:

SYMBOL	ATTACH	NOMENCLATURE
		12345678
		.....
**		MAIN LANDING GEAR INSTALLATION
		..... (PARTS LISTING).....
		..... (PARTS LISTING).....
		..... (END PARTS LISTING)....
		SYMBOL NOTES:
**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:
		SERIAL NUMBER 22-2334 AND 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

In the example above, Item 1, Main Landing Gear Installation, has an associated Special Condition symbol note (**). The Symbol Notes section following the parts listing then describes the Special Condition with a reference to see the following Special Conditions table for a list of affected aircraft serial numbers and instruction on how to disposition the aircraft’s as-built configuration. (See Figure IPC-Intro-001)

Serial Number	Special Condition	Disposition
22-1602	Aircraft installed with Primary Engine Instruments. Aircraft installed with Environmental Control System with factory installed Air Conditioning.	Unless otherwise noted, refer to serial number 22-1663 for part identification of Engine Instruments. Unless otherwise noted, refer to serial number 22-2438 for part identification of Environmental Control System.
22-1644	Aircraft installed with Primary Engine Instruments.	Unless otherwise noted, refer to serial number 22-1663 for part identification of Engine Instruments.
22-1821	Aircraft installed with Environmental Control System with factory installed fan.	Unless otherwise noted, refer to serial number 22-1863 for part identification of Environmental Control System.
22-1840	Aircraft installed with Environmental Control System with factory installed Air Conditioning.	Unless otherwise noted, refer to serial number 22-1863 for part identification of Environmental Control System.
22-2334	Aircraft installed with G3 Wing and associated systems.	Unless otherwise noted, refer to serial number 22-2438 for part identification of systems affected by G3 Wing.
22-2420	Aircraft installed with G3 Wing and associated systems.	Unless otherwise noted, refer to serial number 22-2438 for part identification of systems affected by G3 Wing.
22-2979	Aircraft installed with Perspective Avionics and associated systems.	Unless otherwise noted, refer to serial number 22-3026 for part identification of systems affected by Perspective Avionics installation.
22-2992	Aircraft installed with Perspective Avionics and associated systems.	Unless otherwise noted, refer to serial number 22-3026 for part identification of systems affected by Perspective Avionics installation.
22-3002	Aircraft installed with Perspective Avionics and associated systems.	Unless otherwise noted, refer to serial number 22-3026 for part identification of systems affected by Perspective Avionics installation.
22-3003	Aircraft installed with FIKI Ice Protection and associated systems.	Unless otherwise noted, refer to serial number 22-3403 for part identification of systems affected by FIKI installation.
22-3310	Aircraft installed with FIKI Ice Protection and associated systems.	Unless otherwise noted, refer to serial number 22-3403 for part identification of systems affected by FIKI installation.
22-3326	Aircraft installed with FIKI Ice Protection and associated systems.	Unless otherwise noted, refer to serial number 22-3403 for part identification of systems affected by FIKI installation.

Figure IPC-Intro-001: Special Conditions

Serial Number	Special Condition	Disposition
22T-0251	Aircraft installed with "2+1" rear seat configuration and associated systems. Aircraft installed with LED landing light configuration and associated systems. Aircraft installed with GMA 350 configuration and associated systems.	Unless otherwise noted, refer to serial number 22T-0268 for part identification of systems affected by identified installations.
22T-0311	Aircraft installed with digital fuel quantity indication. Aircraft installed with digital deicing fluid level indication.	Unless otherwise noted, refer to serial number 22T-0319 for part identification of systems affected by identified installations.
22T-0312	Aircraft installed with digital fuel quantity indication. Aircraft installed with digital deicing fluid level indication.	Unless otherwise noted, refer to serial number 22T-0319 for part identification of systems affected by identified installations.
22T-0313	Aircraft installed with digital fuel quantity indication. Aircraft installed with digital deicing fluid level indication.	Unless otherwise noted, refer to serial number 22T-0319 for part identification of systems affected by identified installations.
22T-0314	Aircraft installed with digital fuel quantity indication. Aircraft installed with digital deicing fluid level indication.	Unless otherwise noted, refer to serial number 22T-0319 for part identification of systems affected by identified installations.
22T-0316	Aircraft installed with digital fuel quantity indication. Aircraft installed with digital deicing fluid level indication.	Unless otherwise noted, refer to serial number 22T-0319 for part identification of systems affected by identified installations.
22T-0317	Aircraft installed with digital fuel quantity indication. Aircraft installed with digital deicing fluid level indication.	Unless otherwise noted, refer to serial number 22T-0319 for part identification of systems affected by identified installations.
22T-1198	Aircraft installed with redesigned cabin doors.	Unless otherwise noted, refer to serial number 22T-1233 for part identification of systems affected by identified installations.
22T-1203	Aircraft installed with updated cabin doors.	Unless otherwise noted, refer to serial number 22T-1233 for part identification of systems affected by identified installations.

Figure IPC-Intro-001: Special Conditions

A. G3 Wing

Airplane serial numbers 2334, 2420, and 2438 & subsequent are equipped with a redesigned wing. Where necessary, this document may use the terms “G3” or “G3 Wing” to identify this installation. The list below shows the primary structural and system changes which accompany G3 Wing configuration:

- 1 degree increase in wing dihedral,
- Removal of the aileron-rudder interconnect,
- Increased fuel capacity and associated updates to sensing and indicating system,
- Redesigned ice protection system,
- Main landing gear location moved slightly, strut angle increased, and strut lengthened,
- Redesigned main landing gear fairings,
- Redesigned nose landing gear fairings,
- Redesigned lightning protection plan,
- Relocation of stall warning port,
- RH lower engine cowling modified,
- Redesigned environmental control system,
- Redesigned wing root fairings,
- Modification of interior trim panels,
- Redesigned bolster switch panel,
- Leading-edge wing tip recognition lights.

B. Aircraft Equipped with TCM Turbocharged Engine

The list below shows the primary design changes associated with the SR22T model.

- Teledyne Continental TSIO-550-K turbocharged engine installation,
- Engine mount redesign,
- Nose landing gear redesign,
- Nose landing gear fairings redesign,
- Exhaust system redesign,
- Induction system redesign,
- Engine control system redesign,
- Heat shield installation for engine compartment,
- Engine baffling redesign,
- Firewall forward fuel system redesign,
- Engine cowling redesign.

C. Avionics Configuration

Airplane serial effectivities shown in the effectivity column may be further limited by the airplane's avionics configuration. Cirrus Design offers the SR22 and/or SR22T with the avionic options listed in the table below; therefore, the effectivity column for a figure may also be limited by the installed avionics.

Standard avionics suites are available in the following configurations:

Serials 22-0002 thru 22-0820:

Configuration A
Moving Map Display (Avidyne MFD)
Two-Axis Autopilot (S-TEC System 30)
Integrated Audio System with Intercom (Garmin GMA 340)
Marker Beacon Receiver (Garmin GMA 340)
Two IFR Approach-Certified GPS (Garmin GNS 430 and Garmin GNC 420)
Two VHF Communications Transceivers (Garmin GNS 430 and Garmin GNC 420)
Single Navigation (VOR/LOC/GS) Receiver (GNS 430)
Mode C Transponder with Altitude Encoder (Garmin GTX 327)
Horizontal Situation Indicator
Course Deviation Indicator

Configuration B
Moving Map Display (Avidyne MFD)
Two-Axis Autopilot (S-TEC System 55X)
Integrated Audio System with Intercom (Garmin GMA 340)
Marker Beacon Receiver (Garmin GMA 340)
Two IFR Approach-Certified GPS (Garmin GNS 430)
Two VHF Communications Transceivers (Garmin GNS 430)
Two Navigation (VOR/LOC/GS) Receiver (GNS 430)
Mode C Transponder with Altitude Encoder (Garmin GTX 327)
Electronic Navigation Display (Sandel SN3308)
Course Deviation Indicator

Serials 22-0435 & subs:

Configuration PFD
Moving Map Display (Avidyne MFD)
Primary Flight Display (Avidyne PFD)
Two-Axis Autopilot (S-TEC System 55X)
Integrated Audio System with Intercom (Garmin GMA 340)
Marker Beacon Receiver (Garmin GMA 340)
Two IFR Approach-Certified GPS (Garmin GNS 430)

Configuration PFD (Continued)
Two VHF Communications Transceivers (Garmin GNS 430)
Two Navigation (VOR/LOC/GS) Receiver (GNS 430)
Mode C Transponder with Altitude Encoder (Garmin GTX 327)

Serials 22-0656 thru 22-0685, 22-0687 thru 22-0717, 22-0730 thru 22-0768:

Configuration Centennial
Moving Map Display (Avidyne MFD)
Primary Flight Display (Avidyne PFD)
Two-Axis Autopilot (S-TEC System 55X)
Integrated Audio System with Intercom (Garmin GMA 340)
Marker Beacon Receiver (Garmin GMA 340)
Two IFR Approach-Certified GPS (Garmin GNS 430)
Two VHF Communications Transceivers (Garmin GNS 430)
Two Navigation (VOR/LOC/GS) Receiver (GNS 430)
Mode C Transponder with Altitude Encoder (Garmin GTX 327)
L3 SkyWatch
L3 Stormscope
Avidyne EMax Engine Monitoring System
Ice Protection System

Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs:

Configuration Perspective Avionics
Multi-Function Display (Garmin MFD)
Primary Flight Display (Garmin PFD)
Two-Axis Autopilot (Garmin GFC 700)
Serials 22-2979, 22-2992, 22-3002, 22-3026 thru 22-3827, 22T-0001 thru 22T-0267: Integrated Audio System with Intercom (Garmin GMA 347)
Serials 22-3828 & subs, 22T-0268 & subs: Integrated Audio System with Intercom (Garmin GMA 350)
Serials 22-2979, 22-2992, 22-3002, 22-3026 thru 22-3827, 22T-0001 thru 22T-0267: Marker Beacon Receiver (Garmin GMA 347)
Serials 22-3828 & subs, 22T-0268 & subs: Marker Beacon Receiver (Garmin GMA 350)
Two IFR Approach-Certified GPS (Garmin GIA 63W)
Two VHF Communications Transceivers (Garmin GIA 63W)
Two Navigation (VOR/LOC/GS) Receiver (Garmin GIA 63W)
Mode C Transponder with Altitude Encoder (Garmin GTX 32)

Configuration Perspective Avionics (Continued)
Flight Management System Keyboard (Garmin GCU 478)
Attitude and Heading Reference System (Garmin GRS 77)
Air Data Computer (Garmin GDC 74A)
Engine Airframe Unit (Garmin GEA 71)

Serials 22T-0079 thru 22T-0188, with Option Installed:

Configuration Anniversary
Perspective Avionics Configuration with following options installed:
- 12-inch Garmin MFD/PFD Displays
- Three-Axis Autopilot (Garmin GFC 700)
- Garmin Mode S Transponder
- Dual Attitude and Heading Reference System (Garmin GRS 77)
- Dual Air Data Computer (Garmin GDC 74A)
- Garmin Synthetic Vision
XM Weather/Radio/Remote System
FIKI Ice Protection System
Carbon Monoxide (CO) Detector
Air Conditioning System
Enhanced Vision System
Artex ME406 Emergency Locator Transmitter (ELT)
Terrain Awareness & Warning (TAWS)
Engine Pre-Heater
LED Landing Light
LED Anti-Collision Strobe Light

D. Optional Equipment

Airplane serial effectivities shown in the effectivity column may be further limited by optional equipment installations. Cirrus Design offers the SR22 and SR22T with the optional equipment listed in the table below; therefore, the effectivity column for a figure may also be limited by the installed optional equipment.

Optional Equipment
Serials 22-0002 & subs: L3 SkyWatch
Serials 22-0002 & subs: L3 Stormscope
Serials 22-0002 & subs, 22T-0001 & subs: S-TEC System 55X
Serials 22-0002 & subs: Sandel SN3308 Electronic Navigation Display
Serials 22-0142 & subs: Avidyne EX5000C MFD
Serials 22-0300 & subs: Avidyne EMax Engine Monitoring System

Optional Equipment
Serials 22-0002 & subs: Avidyne CMax Electronic Approach Charts
Serials 22-0334 thru 22-2437: Basic Ice Protection System
Serials 22-2438 & subs, 22T-0001 & subs: Basic² Ice Protection System
Serials 22-3403 & subs, 22T-0001 & subs: FIKI Ice Protection System
Serials 22-0687 & subs: McCauley Propeller
Serials 22-0821 & subs: Hartzell DF Propeller
Serials 22-2044 & subs, 22T-0001 & subs: Hartzell Composite Propeller
Serials 22-0821 & subs, 22T-0001 & subs: Garmin Mode S Transponder
Serials 22-1036 & subs, 22T-0001 & subs: Honeywell Terrain Awareness and Warning System
Serials 22-1104 & subs, 22T-0001 & subs: XM Weather System
Serials 22-3828 & subs, 22T-0268 & subs: Iridium Weather System
Serials 22-1307 & subs, 22T-0001 & subs: Flight Director
Serials 22-1511 & subs, 22T-0001 & subs: XM Radio System
Serials 22-1821, 22-1863 & subs, 22T-0001 & subs: Cabin Air Fan Assembly
Serials 22-1602, 22-1840, 22-1863 & subs, 22T-0001 & subs: Air Conditioning System
Serials 22-1863 & subs, 22T-0001 & subs: Artex ME406 Emergency Locator Transmitter (ELT)
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Bendix/King Distance Measuring Equipment
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Bendix/King Automatic Direction Finder
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Garmin Synthetic Vision
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Garmin GMC 705 AFCS Mode Controller
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Enhanced Vision System
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Yaw Axis Servo
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Garmin GRS 77 AHRS (Secondary)
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Garmin GMU 44 Magnetometer (secondary)
Serials 22-2979, 22-2992, 22-3002, 22-3026 & subs, 22T-0001 & subs: Carbon Monoxide (CO) Detector
Serials 22-3828 & subs, 22T-0268 & subs: 2+1 Rear Seat
Serials 22-3828 & subs, 22T-0268 & subs: Three-Harness Shoulder Belt
Serials 22-3828 & subs, 22T-0268 & subs: Cargo Net

4. HOW TO USE THE CATALOG LISTINGS

A. When the Part Number is unknown:

(1) Open the catalog to the applicable chapter and turn to the Table of Contents for that chapter.

(2) Select the applicable figure from the Table of Contents and turn to that figure.

(3) Examine the illustration to locate the required part and note the item number.

(4) Locate the item number in the parts listing associated with the illustration. The part information immediately to the right of the item number contains all the information required to order the part. Pay special attention to symbol notes and nomenclature notes.

B. When the Part Number is known:

(1) Open the catalog to the Numerical Index after the INTRODUCTION tab. All part numbers in the catalog and the corresponding Chapter-Section-Figure-Item Numbers are listed in part number sequence.

(2) Using the Numerical Index, determine the Chapter-Section-Figure and Item Number (if the item number is given) for the desired part number. Item numbers are not listed for part numbers that appear only in an “ORDER CIRRUS P/N …” notation.

(3) Turn to the applicable figure and locate the item number in the parts listing. The part information immediately to the right of the item number contains all the information required to order the part. Pay special attention to symbol notes and nomenclature notes.

5. HOW TO ORDER PARTS

Parts may be ordered by online, via email, or via telephone by contacting the Cirrus Direct parts department at the factory in Duluth, Minnesota, or by calling a parts representative at any Cirrus Design Authorized Service Center. Only Cirrus Authorized Service Centers may order parts directly through Cirrus.

When ordering parts, be prepared to supply the following data:

- Your Ship To address;
- Your billing information;
- The aircraft serial number;
- The part number and nomenclature; and
- The quantity required.

Additionally, warranty information and information relating to the aircraft and component reliability may be requested by Cirrus. This information is not required; however, the collection and analysis of this data will help enable Cirrus Design to identify and respond to field conditions arising from airplane utilization. In addition to the data required above, you may be asked to supply the following data:

- The total number of flight hours or landings on the airplane;
- The total number of flight hours or landings on the failed component;
- The number of hours or landings since the last annual or 100-hour inspection;
- The suspected reason for failure of the component; and
- Other questions relating to the in-service environment of the airplane.

For assistance in determining the correct part and effectivity from this catalog or other questions pertaining to parts procurement, contact any Cirrus Design Authorized Service Center or the Cirrus Direct parts department.

Cirrus Direct Parts Department

4515 Taylor Circle

Duluth, MN 55811

Phone: (218) 788-3000

E-mail: parts@cirrusdesign.com

Web: www.buycirrusdirect.com

Note: Cirrus Design Corporation reserves the right to add, change, or remove the parts and assemblies described in this catalog.

6. REVISIONS

This manual has been prepared in loose-leaf form for ease in inserting revisions. Tabbed dividers, throughout the manual, are in standard GAMA format and numbering and allow quick reference to data in each section. Logical and convenient Tables of Contents are located at the beginning of each chapter to aid in locating specific data within that chapter.

Numbered revisions will be issued periodically. These revisions are printed on white paper and contain a revision instruction sheet to assist the user in filing the change. Upon receipt of a numbered revision, file it according to the provided instructions as soon as possible. Additionally, a record of filing must be made on the Log of Revisions page in the front matter of the IPC.

7. TEMPORARY REVISIONS

Temporary revisions are used to provide time sensitive information and changes as they become available. Temporary revisions provide, with the least possible delay, new information which assists in maintaining safe and efficient flight/ground operations.Temporary revisions are incorporated at the next regularly scheduled revision and become a permanent part of the manual.

Upon receipt of a Temporary Revision, file the revision in the applicable chapter in accordance with filing instructions that appear on the Temporary Revision. Additionally, a record of filing the Temporary Revision must be made in the Log of Temporary Revisions just behind the Log of Revisions in the front matter of the IPC. Typically, the Log of Temporary Revisions will be replaced by a blank log when a numbered revision is issued.

Temporary Revisions should be removed from this manual only when removal instructions are noted on the regular revision summary sheet or by instructions noted on a superseding Temporary Revision.

8. REVISION BARS

Changes to data in an existing section will be identified by a revision bar in the outer margin of the page.

Pointing hands and change bars may be used in figures to indicate changes.

9. PUBLICATION CHANGE REQUEST FORM

A Publication Change Request form can be found online at the following link:

http://servicecenters.cirrusdesign.com/TechPubs/serviceloopform.asp

Use the form to submit a Publications Change Request to our Engineering Department and/or to tell us what you think of the quality of the publication. We will use the data you provide us to improve the quality of our technical publications.

10. HARDWARE SUBSTITUTION LIST

Part Number	Nomenclature	Substitution Part Number
AN526C1032R4	SCREW, TRUSS HEAD, CRES	MS51958-59
AN807-4D	ADAPTER, STRAIGHT, TUBE TO HOSE FITTING	AS5180D04
AN807-6D	ADAPTER, STRAIGHT, TUBE TO HOSE FITTING	AS5180D06
AN807-8D	ADAPTER, STRAIGHT, TUBE TO HOSE FITTING	AS5180D08
AN960-10	WASHER, FLAT, STEEL, #10	NAS1149F0363P
AN960-10L	WASHER, FLAT, STEEL, THIN, #10	NAS1149F0332P
AN960-1416L	WASHER, FLAT, STEEL, THIN, 7/8	NAS1149F1432P
AN960-2	WASHER, FLAT, STEEL, #2	NAS1149FN232P
AN960-2616L	WASHER, FLAT, STEEL, THIN, #1 5/8	NAS1149F2632P
AN960-3616	WASHER, FLAT, STEEL, #2 1/4	NAS1149F3690P
AN960-3L	WASHER, FLAT, STEEL, THIN, #3	NAS1149FN316P
AN960-4	WASHER, FLAT, STEEL, #4	NAS1149FN432P
AN960-416	WASHER, FLAT, STEEL, 1/4	NAS1149F0463P
AN960-416L	WASHER, FLAT, STEEL, THIN, 1/4	NAS1149F0432P
AN960-4L	WASHER, FLAT, STEEL, THIN, #4	NAS1149FN416P
AN960-516	WASHER, FLAT, STEEL, 5/16	NAS1149F0583P
AN960-516L	WASHER, FLAT, STEEL, THIN, 5/16	NAS1149F0532P
AN960-6	WASHER, FLAT, STEEL, #6	NAS1149FN632P
AN960-616	WASHER, FLAT, STEEL, 3/8	NAS1149F0663P
AN960-616L	WASHER, FLAT, STEEL, THIN, 3/8	NAS1149F0632P
AN960-6L	WASHER, FLAT, STEEL, THIN, #6	NAS1149FN616P
AN960-716	WASHER, FLAT, STEEL, 7/16	NAS1149F0763P
AN960-716L	WASHER, FLAT, STEEL, THIN, 7/16	NAS1149F0732P
AN960-8	WASHER, FLAT, STEEL, #8	NAS1149FN832P
AN960-816	WASHER, FLAT, STEEL, 1/2	NAS1149F0863P
AN960-816L	WASHER, FLAT, STEEL, THIN, 1/2	NAS1149F0832P
AN960-8L	WASHER, FLAT, STEEL, THIN, #8	NAS1149FN816P
AN960-916	WASHER, FLAT, STEEL, 9/16	NAS1149F0963P
AN960B6	WASHER, FLAT, BRASS, # 6	NAS1149BN632H
AN960C10	WASHER, FLAT, PASSIVATED, #10	NAS1149C0363R

Hardware Substitution List

Part Number	Nomenclature	Substitution Part Number
AN960C416	WASHER, FLAT, PASSIVATED, 1/4	NAS1149C0463R
AN960PD1216	WASHER, FLAT, TREATED, 3/4	NAS1149D1290K
AN960PD716	WASHER, FLAT, TREATED, 7/16	NAS1149D0763K
AN960PD916	WASHER, FLAT, TREATED, 9/16	NAS1149D0963P
CR3212	RIVET-BLIND, 100 DEG FLUSH HEAD	NAS9302B
CR3213	RIVET-BLIND, PROTRUDING HEAD	NAS9301B
CR3214	RIVET-BLIND, 100 DEG FLUSH SHEAR HEAD	NAS9303B
CR3222	RIVET-BLIND, 100 DEG FLUSH HEAD	NAS9302E
CR3223	RIVET-BLIND, PROTRUDING HEAD	NAS9301E
CR3224	RIVET-BLIND, 100 DEG FLUSH SHEAR HEAD	NAS9303E
CR3242	RIVET-BLIND, 100 DEG FLUSH HEAD	NAS9305B
CR3243	RIVET-BLIND, PROTRUDING HEAD	NAS9304B
CR3245	RIVET-BLIND, FLANGED DOME HEAD	NAS9306B
CR3252	RIVET-BLIND, 100 DEG FLUSH HEAD	NAS9305E
CR3253	RIVET-BLIND, PROTRUDING HEAD	NAS9304E
CR3255	RIVET-BLIND, FLANGED DOME HEAD	NAS9306E
CR3522	RIVET-BLIND, 100 DEG FLUSH HEAD	NAS9308M
CR3523	RIVET-BLIND, PROTRUDING HEAD	NAS9307M
CR3524	RIVET-BLIND, 100 DEG FLUSH SHEAR HEAD	NAS9309M
CR3552	RIVET-BLIND, 100 DEG FLUSH HEAD	NAS9311M
CR3553	RIVET-BLIND, PROTRUDING HEAD	NAS9310M
CR3555	RIVET-BLIND, FLANGED DOME HEAD	NAS9312M
CR3852	RIVET-BLIND, 100 DEG FLUSH HEAD	NAS9311C
CR3853	RIVET-BLIND, PROTRUDING HEAD	NAS9310C
MS21042-x	NUT, CAD PLATED, NOT DRY FILM LUBRICATED	MS21042Lx
MS21045-x	NUT, CAD PLATED, SOLUBLE LUBRICANT	MS21045Lx
MS21919WDG(x)	CLAMP, ADEL, ALUM BAND, CHLOROPRENE CUSH	AS4149WDG-(x)
MS21919WDF(x)	CLAMP, ADEL, ALUM BAND, NITRILE CUSHION	AS4149WDF-(x)
NAS1149BN632H	WASHER, FLAT, BRASS, # 6	AN960B6
NAS1149C0363R	WASHER, FLAT, PASSIVATED, #10	AN960C10
NAS1149C0463R	WASHER, FLAT, PASSIVATED, 1/4	AN960C416

Hardware Substitution List (Continued)

Part Number	Nomenclature	Substitution Part Number
NAS1149D0763K	WASHER, FLAT, TREATED, 7/16	AN960PD716
NAS1149D0963P	WASHER, FLAT, TREATED, 9/16	AN960PD916
NAS1149D1290K	WASHER, FLAT, TREATED, 3/4	AN960PD1216
NAS1149F0332P	WASHER, FLAT, STEEL, THIN, #10	AN960-10L
NAS1149F0363P	WASHER, FLAT, STEEL, #10	AN960-10
NAS1149F0432P	WASHER, FLAT, STEEL, THIN, 1/4	AN960-416L
NAS1149F0463P	WASHER, FLAT, STEEL, 1/4	AN960-416
NAS1149F0532P	WASHER, FLAT, STEEL, THIN, 5/16	AN960-516L
NAS1149F0583P	WASHER, FLAT, STEEL, 5/16	AN960-516
NAS1149F0632P	WASHER, FLAT, STEEL, THIN, 3/8	AN960-616L
NAS1149F0663P	WASHER, FLAT, STEEL, 3/8	AN960-616
NAS1149F0732P	WASHER, FLAT, STEEL, THIN, 7/16	AN960-716L
NAS1149F0763P	WASHER, FLAT, STEEL, 7/16	AN960-716
NAS1149F0832P	WASHER, FLAT, STEEL, THIN, 1/2	AN960-816L
NAS1149F0863P	WASHER, FLAT, STEEL, 1/2	AN960-816
NAS1149F0963P	WASHER, FLAT, STEEL, 9/16	AN960-916
NAS1149F1432P	WASHER, FLAT, STEEL, THIN, 7/8	AN960-1416L
NAS1149F2632P	WASHER, FLAT, STEEL, THIN, #1 5/8	AN960-2616L
NAS1149F3690P	WASHER, FLAT, STEEL, #2 1/4	AN960-3616
NAS1149FN232P	WASHER, FLAT, STEEL, #2	AN960-2
NAS1149FN316P	WASHER, FLAT, STEEL, THIN, #3	AN960-3L
NAS1149FN416P	WASHER, FLAT, STEEL, THIN, #4	AN960-4L
NAS1149FN432P	WASHER, FLAT, STEEL, #4	AN960-4
NAS1149FN616P	WASHER, FLAT, STEEL, THIN, #6	AN960-6L
NAS1149FN632P	WASHER, FLAT, STEEL, #6	AN960-6
NAS1149FN816P	WASHER, FLAT, STEEL, THIN, #8	AN960-8L
NAS1149FN832P	WASHER, FLAT, STEEL, #8	AN960-8
NAS9301B	RIVET-BLIND, PROTRUDING HEAD	CR3213
NAS9301E	RIVET-BLIND, PROTRUDING HEAD	CR3223
NAS9302B	RIVET-BLIND, 100 DEG FLUSH HEAD	CR3212
NAS9302E	RIVET-BLIND, 100 DEG FLUSH HEAD	CR3222

Hardware Substitution List (Continued)

Part Number	Nomenclature	Substitution Part Number
NAS9303B	RIVET-BLIND, 100 DEG FLUSH SHEAR HEAD	CR3214
NAS9303E	RIVET-BLIND, 100 DEG FLUSH SHEAR HEAD	CR3224
NAS9304B	RIVET-BLIND, PROTRUDING HEAD	CR3243
NAS9304E	RIVET-BLIND, PROTRUDING HEAD	CR3253
NAS9305B	RIVET-BLIND, 100 DEG FLUSH HEAD	CR3242
NAS9305E	RIVET-BLIND, 100 DEG FLUSH HEAD	CR3252
NAS9306B	RIVET-BLIND, FLANGED DOME HEAD	CR3245
NAS9306E	RIVET-BLIND, FLANGED DOME HEAD	CR3255
NAS9307M	RIVET-BLIND, PROTRUDING HEAD	CR3523
NAS9308M	RIVET-BLIND, 100 DEG FLUSH HEAD	CR3522
NAS9309M	RIVET-BLIND, 100 DEG FLUSH SHEAR HEAD	CR3524
NAS9310C	RIVET-BLIND, PROTRUDING HEAD	CR3853
NAS9310M	RIVET-BLIND, PROTRUDING HEAD	CR3553
NAS9311C	RIVET-BLIND, 100 DEG FLUSH HEAD	CR3852
NAS9311M	RIVET-BLIND, 100 DEG FLUSH HEAD	CR3552
NAS9312M	RIVET-BLIND, FLANGED DOME HEAD	CR3555

Hardware Substitution List (Continued)

11. NUMERICAL INDEX

Using the Numerical Index, determine the Chapter-Section-Figure and Item Number for the desired part number. Click on partnumber to open the associated file. If working with paper manuals, turn to the applicable figure and locate the item number in the parts listing. Pay special attention to symbol notes and nomenclature notes.

Intentionally Left Blank

PART NUMBER	CH–SEC–FIG–ITM
1253	22-11-02-48
2024	79-30-01-69
2102	28-10-01-6
2441	79-20-01-6
2441	79-20-01-48
3908	22-11-02-33
5510	22-11-02-30
5511	22-11-02-60
8302	25-60-02-154
12146	22-11-02-51
033708	28-20-03-147
033708	28-20-03-340
102885( )	61-10-01-153
102885( )	61-10-01-165
102892( )	61-10-01-171
102892( )	61-10-01-180
401506	81-20-01-69
535847	74-10-01-21
537750	81-20-01-24
569564	28-20-03-174
569565	28-20-03-177
628475	81-20-01-30
636465	81-20-01-6
642659	81-20-01-18
643947	71-60-02-135
643948	71-60-02-126
646073	71-60-02-117
646073	71-60-02-177
646532	79-20-02-3
646644	81-20-01-33
646644	81-20-01-54
646644	81-20-01-57
646677	81-20-01-3
649954	74-10-01-15
649961	79-20-01-15
649961	79-20-01-54
649989	79-20-01-39
649989	79-20-01-78
652100	81-20-01-21
652101	81-20-01-45
652421	79-20-01-18
652421	79-20-01-57
652456	78-20-02-84
652458	78-20-02-6
652458	78-20-02-27
654309	78-20-02-72
654585	79-20-01-3
654585	79-20-01-45
655862	77-10-01-18
657198	78-20-02-48
657198	78-20-02-57
657625	81-20-01-63
657626	81-20-01-60
657630	78-20-02-66
657631	78-20-02-12
657632	78-20-02-69
657633	78-20-02-33
657635	78-20-02-60
657636	78-20-02-51
657638	71-60-02-78
657639	71-60-02-87
657640	81-20-01-39
657641	81-20-01-42
657647	78-20-02-36
657648	78-20-02-15
657650	78-20-02-18
657651	78-20-02-39
657652	78-20-02-21
657652	78-20-02-42
657690	78-20-02-63
1742439	28-20-03-150
1742439	28-20-03-343
1763769	28-20-03-171
1763769	28-20-03-364
5903923	27-50-01-27
5903995	27-50-01-24
5904442	27-50-01-34
51540+006	28-20-01-329
00-225-FPM75	28-10-01-18
01-0271482-01	33-40-02-44
01-0271482-02	33-40-02-43
01-0290338-05	33-40-02-91
01-0290338-06	33-40-02-90
02-0350259-00	33-40-02-87
02-0350260-00	33-40-02-75
061-01800	32-42-02-18
061-01802	32-42-02-21
062-01500	32-42-02-24
062-01800	32-42-02-27
063-01100	32-42-02-45
064-01500	32-42-02-66
066-06200	32-42-02-51
066-06200	32-42-02-72
066-10500	32-42-02-48
066-10500	32-42-02-69
068-01100	32-42-02-114
069-00400	32-42-02-81
069-01900	32-42-02-84
06-171472-100	33-40-02-92
073-01000	32-42-02-39
073-02700	32-42-02-42
074-01000	32-42-02-60
074-03000	32-42-02-63
075-01500	32-42-02-108
079-00300	32-42-02-99
081-00100	32-42-02-96
082-02000	32-42-02-36
08721-10	30-06-01-515

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
091-02100	32-42-02-6
091-21202	32-42-02-9
094-10300	32-42-02-93
095-10200	32-42-02-87
095-10400	32-42-02-12
095-10400	32-42-02-90
10008-001	76-10-01-57
10009-003	76-10-01-18
10010-002	76-10-01-102
10011-001	76-10-01-45
10011-001	76-10-01-187
10012-001	76-10-01-96
10012-001	76-10-01-232
10014-001	76-10-01-48
10014-001	76-10-01-190
10024-003	32-20-02-216
10024-003	32-20-02-363
10033-002	32-20-02-213
10033-002	32-20-02-360
10046-002	57-10-02-3
10052-001	28-10-01-3
10055-001	28-10-01-27
10055-002	28-10-01-30
10073-003	52-10-01-15
10073-004	52-10-01-21
1010001-5	25-10-08-138
1010002-3	25-10-08-135
10146-005	55-20-01-3
10146-006	55-20-01-15
10146-007	55-20-01-6
10146-008	55-20-01-18
10146-009	55-20-01-9
10146-010	55-20-01-21
101-02700	32-42-02-30
101-34500	32-42-02-33
10209-001	32-10-02-45
10223-002	52-30-01-3
10318-005	27-50-01-108
10318-006	27-50-01-111
10318-007	27-50-01-114
10320-003	27-50-01-177
10320-004	27-50-01-178
10322-003	27-50-01-180
10322-004	27-50-01-181
10323-003	27-50-01-183
10325-008	27-00-02-114
10325-008	27-00-02-366
10325-008	27-00-05-153
10325-016	27-00-02-216
10325-020	27-00-02-547
10325-022	27-00-02-222
10325-040	27-00-02-363
10325-054	27-00-02-111
10325-072	27-00-02-219
10325-072	27-00-02-550
10326-004	27-00-05-171
10326-004	27-00-05-192
10330-003	57-50-02-90
10331-011	57-50-02-60
10331-012	57-50-02-66
10333-005	57-50-02-42
10333-005	57-50-02-198
10333-006	57-50-02-45
10333-006	57-50-02-201
10341-005	27-10-02-24
10341-006	27-10-02-27
10341-007	27-10-02-30
10341-008	27-10-02-33
10342-003	27-10-02-81
10342-004	27-10-02-90
10360-004	55-40-01-3
10360-005	55-40-01-6
10360-006	55-40-01-9
10376-001	55-40-01-90
10376-002	55-40-01-93
10377-003	57-50-01-3
10377-004	57-50-01-18
10377-005	57-50-01-6
10377-006	57-50-01-21
10377-007	57-50-01-9
10377-008	57-50-01-24
10377-009	57-50-01-12
10377-010	57-50-01-27
103-11800	32-42-02-15
10437-001	53-40-06-3
10437-002	53-40-06-6
10438-001	53-40-06-9
10438-001	53-40-06-138
10438-002	53-40-06-276
10438-002	53-40-06-300
10439-001	53-40-06-10
10479-002	52-10-01-294
10479-003	52-10-01-297
10480-002	52-10-01-348
10480-002	52-10-01-538
10484-001	52-10-01-339
10484-001	52-10-01-544
10484-002	52-10-01-336
10484-002	52-10-01-541
10492-001	32-10-02-246
10492-002	32-10-02-249
10492-003	32-10-02-252
10492-004	32-10-02-255
10493-002	53-20-01-9
10493-002	53-20-01-15
10493-002	53-20-01-48
10493-002	53-20-01-54
10494-002	53-20-01-3
10494-002	53-20-01-21
10494-002	53-20-01-42
10494-002	53-20-01-60
10496-002	55-50-01-57
10496-003	55-50-01-60
10496-004	55-50-01-63

PART NUMBER	CH–SEC–FIG–ITM
10498-002	53-40-03-111
10498-003	53-40-03-114
104-00500	32-42-02-105
10510-002	53-20-01-27
10510-003	53-20-01-132
10511-002	53-20-01-33
10517-001	27-00-04-198
10517-001	27-00-04-226
10517-002	27-00-04-45
10517-002	27-00-04-90
10520-003	27-00-04-99
10520-004	27-00-04-102
10521-003	27-00-04-156
10522-001	27-00-05-48
10523-002	27-20-03-24
10547-001	53-40-06-42
10547-001	53-40-06-63
10547-001	53-40-06-159
10547-001	53-40-06-186
10550-001	25-10-02-307
10584-001	53-40-01-304
10584-002	53-40-01-307
10586-001	57-10-01-87
10586-001	57-10-01-261
10588-001	55-50-02-24
10589-003	55-50-02-48
10595-001	53-20-03-3
105-00200	32-42-02-54
105-00200	32-42-02-75
10619-001	27-20-02-96
10619-002	27-20-02-102
10625-002	27-00-02-144
10628-003	27-00-02-96
10628-003	27-00-02-348
10628-004	27-00-02-349
10631-002	27-00-02-60
10631-002	27-00-02-312
10632-003	27-00-02-36
10632-003	27-00-02-288
10642-002	52-10-01-363
10652-103	53-40-03-18
10652-104	53-40-03-108
10653-005	27-00-04-3
10653-006	27-00-04-6
10654-001	27-00-03-75
10654-002	27-00-03-78
10655-003	27-00-03-57
10655-004	27-00-03-66
10655-005	27-00-03-60
10655-006	27-00-03-69
10659-002	57-50-01-129
10660-003	27-50-01-81
10661-002	27-00-02-156
10661-002	27-00-02-180
10664-002	53-40-04-3
10676-002	27-00-05-57
10678-002	27-00-05-18
10679-004	27-00-05-96
10680-004	27-30-02-6
10680-006	27-30-02-9
10684-003	27-30-02-93
10687-101	27-31-01-162
10687-106	27-31-01-159
10689-001	53-20-02-15
10689-002	53-20-02-46
10689-003	53-20-02-18
10689-004	53-20-02-47
10689-005	53-20-02-21
10689-006	53-20-02-48
10689-007	53-20-02-30
10689-008	53-20-02-60
10689-009	53-20-02-24
10689-010	53-20-02-51
10689-011	53-20-02-27
10689-012	53-20-02-54
10689-013	53-20-02-33
10689-014	53-20-02-57
10690-001	53-20-02-3
10690-002	53-20-02-6
10690-003	53-20-02-7
10690-004	53-20-02-8
10700-003	21-20-01-102
10700-004	21-20-01-105
10700-005	21-20-01-108
10700-005	21-20-01-677
10708-116	21-20-01-24
10711-002	56-10-01-3
10711-004	56-10-01-6
10711-005	56-10-01-9
10712-003	56-30-01-3
10712-004	56-30-01-9
10712-005	56-30-01-6
10712-006	56-30-01-12
10712-007	56-30-01-7
10712-008	56-30-01-15
10714-003	56-10-01-21
10714-004	56-10-01-33
10714-005	56-10-01-24
10714-006	56-10-01-36
10716-002	56-10-01-45
10716-003	56-10-01-48
10716-005	56-10-01-49
10717-002	56-10-01-15
10719-002	53-30-01-33
10719-003	53-30-01-36
10734-001	57-40-01-263
10734-001	57-40-01-277
10734-002	57-40-01-265
10734-002	57-40-01-275
10735-001	57-40-01-69
10735-002	57-40-01-72
10736-001	57-40-01-180
10736-002	57-40-01-183
10748-001	55-20-01-66

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
10748-002	55-20-01-68
10748-003	55-20-01-67
10751-001	57-50-02-129
10751-001	57-50-02-252
10751-001	57-50-02-267
10751-002	57-50-02-132
10751-002	57-50-02-255
10758-103	57-50-02-3
10758-106	57-50-02-9
10758-107	57-50-02-6
10758-108	57-50-02-12
10780-004	27-10-03-42
10780-005	27-10-03-45
10781-003	27-10-03-147
10840-002	71-10-01-81
10842-004	71-10-01-3
10842-005	71-10-01-6
10842-006	71-10-01-9
10842-007	71-10-01-12
10894-003	53-40-07-3
10894-004	53-40-07-6
10-500556-1	74-10-01-3
10-500556-1	74-10-01-6
10-500556-101	74-10-01-9
10-500556-101	74-10-01-12
1101C440-4	22-11-02-6
1101C632-6	22-11-02-36
11097-003	57-10-01-42
11099-001	53-40-01-337
11133-001	27-00-02-246
11133-002	27-00-02-237
11144-001	27-00-04-66
11144-003	27-00-04-75
11154-004	27-10-03-168
11155-003	27-10-03-114
11155-004	27-10-03-117

PART NUMBER	CH–SEC–FIG–ITM
11167-002	27-30-01-21
11168-002	27-00-02-120
11168-002	27-00-02-372
11169-002	27-00-02-123
11169-002	27-00-02-375
11171-001	27-00-04-93
11171-001	27-00-04-261
11171-002	27-10-03-180
11171-003	27-10-03-183
11185-003	27-50-01-30
11185-004	27-50-01-31
11185-005	27-50-01-32
11185-006	27-50-01-33
11195-007	57-50-02-111
11196-003	57-50-02-123
11196-003	57-50-02-246
11206-001	32-42-01-81
11216-001	27-10-03-78
11216-001	27-20-02-51
11220-004	27-10-03-129
11234-001	57-40-01-312
11235-001	57-40-01-132
11235-002	57-40-01-114
11236-001	57-40-01-207
11236-002	57-40-01-225
11237-001	57-40-01-169
11240-001	24-30-08-6
11241-002	53-40-01-334
11242-002	53-40-01-36
11242-002	53-40-01-253
11243-002	53-40-01-328
11245-002	53-40-01-12
11245-002	53-40-01-96
11245-002	53-40-01-162
11245-002	53-40-01-229
11247-001	53-40-01-120
11247-001	53-40-01-187
11248-003	53-40-01-135

PART NUMBER	CH–SEC–FIG–ITM
11248-003	53-40-01-202
11253-002	76-10-01-117
11253-002	76-10-01-250
11254-002	76-10-01-123
11268-001	27-30-02-39
11268-001	27-30-02-174
11282-002	57-40-01-36
11283-001	57-40-01-33
11284-002	32-10-02-21
11286-003	57-40-01-48
11301-001	55-50-02-33
11302-003	55-50-02-81
11303-001	27-10-02-54
11305-002	27-20-03-33
11313-003	27-00-05-159
11313-003	27-00-05-180
11314-003	27-10-03-81
11314-003	27-20-02-54
11314-003	27-30-02-42
11314-003	27-30-02-177
11314-003	76-10-02-12
11314-003	76-10-02-96
11314-003	76-10-03-12
11314-003	76-10-03-93
11314-003	76-10-04-12
11314-003	76-10-04-66
11314-004	57-50-01-123
11315-004	27-00-02-57
11315-004	27-00-02-93
11315-004	27-00-02-309
11315-004	27-00-02-345
11315-004	27-00-04-153
11315-004	27-00-04-312
11315-004	27-00-05-51
11315-004	27-00-05-90
11315-004	27-00-05-246
11315-004	27-00-05-285
11315-004	27-50-01-36

PART NUMBER	CH–SEC–FIG–ITM
11315-005	27-50-01-37
1133012-1	21-50-01-647
1133036-1	21-50-01-740
1133077-2	21-50-01-512
1133085-2	21-50-01-171
1133085-3	21-50-01-156
1133087-1	21-50-01-121
1133087-3	21-50-01-122
11330-003	27-00-04-120
1133175-1	21-50-01-78
1133175-2	21-50-01-79
1133215-7	21-50-01-525
1133480-1	21-50-01-644
11378-001	57-40-01-375
11378-002	57-40-01-378
11386-001	57-40-01-261
11394-002	27-50-01-135
11394-003	27-50-01-138
11397-001	27-50-01-90
11443-003	28-20-02-246
11443-004	28-20-02-249
11443-005	28-20-02-252
11444-003	28-20-02-216
11444-004	28-20-02-219
11444-005	28-20-02-222
11453-001	21-20-01-177
11453-001	24-30-07-49
11460-004	27-00-02-162
11460-005	27-00-02-165
11461-001	27-00-02-183
11462-001	57-40-01-171
11462-002	57-40-01-174
11467-002	57-40-01-535
11468-005	57-40-01-366
11468-006	57-40-01-369
11469-001	57-10-01-126
11469-001	57-10-01-294
11469-002	57-10-01-129
11469-002	57-10-01-297
11469-003	57-10-01-132
11469-003	57-10-01-300
11470-003	57-10-01-141
11470-004	57-10-01-147
11470-007	57-10-01-144
11470-007	57-10-01-306
11470-008	57-10-01-150
11470-008	57-10-01-309
11470-009	57-10-01-156
11470-009	57-10-01-312
11470-010	57-10-01-162
11470-010	57-10-01-315
11478-001	27-20-02-123
11478-002	27-20-02-126
11479-001	32-42-01-390
11479-002	32-42-01-393
11480-001	27-20-02-93
11490-101	27-10-02-108
11501-003	27-00-02-126
11501-004	27-00-02-129
11501-005	27-00-02-132
11501-005	27-00-02-378
11502-002	34-10-01-659
11504-001	27-20-02-120
11508-002	55-20-01-45
11508-003	55-20-01-48
11508-004	55-20-01-54
11508-005	55-20-01-60
11509-001	28-10-01-180
11513-002	32-42-01-78
11535-001	32-10-02-243
11553-001	32-42-01-65
11553-002	32-42-01-69
11557-004	27-50-01-192
11563-101	28-20-02-180
11563-102	28-20-02-42
11563-103	28-20-02-204
11569-001	57-40-01-177
11569-002	57-40-01-372
11570-001	27-00-02-195
11575-001	32-10-02-57
11582-003	27-00-04-36
11582-003	27-00-04-192
11582-003	27-00-04-222
11590-111	34-10-01-6
11590-112	34-10-01-500
11590-113	34-10-01-12
11590-114	34-10-01-15
11590-115	34-10-01-18
11590-116	34-10-01-21
11590-117	34-10-01-24
11590-118	34-10-01-27
11590-118	34-10-01-93
11590-119	34-10-01-30
11590-120	34-10-01-75
11590-121	34-10-01-84
11590-122	34-10-01-141
11590-123	34-10-01-150
11590-124	34-10-01-159
11590-125	34-10-01-168
11590-126	34-10-01-177
11590-127	34-10-01-201
11590-128	34-10-01-210
11590-129	34-10-01-228
11590-130	34-10-01-186
11590-131	34-10-01-291
11590-132	34-10-01-195
11593-001	71-20-01-81
11597-104	34-10-01-632
11597-105	34-10-01-33
11597-105	34-10-01-102
11598-001	34-10-01-656
11606-002	55-50-01-33
11611-001	28-20-01-3
11611-002	28-20-01-6

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
11613-002	34-10-01-644
11613-003	34-10-01-647
11617-003	53-50-01-3
11617-004	53-50-01-6
11617-005	53-50-01-4
11617-006	53-50-01-7
11621-001	55-50-01-18
11621-001	55-50-01-42
11621-002	55-50-01-21
11621-002	55-50-01-45
11626-002	55-50-01-3
11626-003	55-50-01-6
11626-004	55-50-01-9
11627-001	28-20-02-3
11628-002	28-20-03-3
11630-001	28-20-02-312
11630-002	28-20-02-315
11631-001	28-20-02-288
11631-002	28-20-02-294
11631-003	28-20-02-291
11631-004	28-20-02-297
11633-004	32-20-02-141
11633-005	32-20-02-142
11633-006	32-20-02-309
11633-007	32-20-02-310
11635-001	32-20-02-211
11635-001	32-20-02-357
11637-001	32-20-02-81
11638-002	32-20-02-117
11638-002	32-20-02-288
11638-003	32-20-02-118
11638-004	32-20-02-289
11639-016	27-00-04-39
11639-016	53-40-11-33
11639-016	57-50-02-36
11639-018	22-12-05-39
11639-018	53-40-11-36
11639-020	27-00-04-204
11639-020	27-00-04-231
11639-032	53-40-11-39
11639-032	76-10-03-18
11639-050	27-00-04-87
11646-002	32-42-01-72
11646-003	32-42-01-75
11648-001	27-00-04-150
11648-002	27-00-02-51
11648-002	27-00-04-300
11648-003	27-00-02-303
11652-003	57-30-01-51
11652-004	57-30-01-54
11654-003	57-30-01-99
11654-003	57-30-01-102
11655-002	57-30-01-132
11655-002	57-30-01-135
11657-001	34-10-01-399
11657-002	34-10-01-512
11657-002	34-10-01-807
11661-001	32-10-02-139
11663-001	32-10-02-141
11676-002	24-30-07-3
11686-001	53-40-11-3
11690-001	71-10-01-216
11690-001	71-10-01-312
11690-002	71-10-01-219
11723-101	32-10-02-213
11726-001	32-10-02-183
11727-001	32-42-01-279
11727-002	32-42-01-285
11729-001	27-50-01-201
11741-002	28-20-03-49
11746-101	57-30-01-72
11746-101	57-30-01-87
11746-101	57-30-01-153
11746-101	57-30-01-174
11746-101	57-30-01-195
11766-003	27-30-02-63
11767-002	25-10-04-226
11767-002	25-10-04-743
11767-003	25-10-04-747
11771-001	27-00-04-24
11771-001	27-00-04-180
11775-002	57-40-01-3
11776-002	28-20-02-126
11777-004	28-20-02-123
11783-002	27-00-03-132
11784-002	27-00-03-123
11787-002	27-50-01-6
11787-003	27-50-01-9
11788-105	57-40-01-393
11789-002	57-40-01-30
11789-003	57-40-01-27
11792-002	27-30-02-129
11792-003	27-30-02-132
11792-003	27-30-02-228
11792-004	27-30-02-229
11793-002	27-30-02-90
11794-003	27-30-02-51
11794-004	27-30-02-54
11796-002	27-10-03-150
11796-004	27-10-03-151
11796-005	27-10-03-152
11796-006	27-10-03-153
11796-007	27-10-03-154
11797-004	27-30-02-69
11797-006	27-30-02-207
11797-008	27-30-02-208
11799-001	32-20-02-144
11799-002	32-20-02-147
11799-003	32-20-02-150
11799-003	32-20-02-312
11799-004	32-20-02-313
11825-001	79-30-01-48
11828-102	25-60-01-48
11828-103	25-60-01-63

PART NUMBER	CH–SEC–FIG–ITM
11831-101	34-20-01-39
11831-102	34-20-01-42
11837-003	31-50-01-3
11837-013	31-50-01-6
11839-001	28-20-03-23
11839-002	28-20-03-253
11839-003	28-20-03-267
11839-004	28-20-03-268
11847-002	34-50-04-3
11847-003	34-50-04-15
11868-002	31-10-01-108
11868-003	31-10-01-111
11869-001	32-20-02-171
11869-001	32-20-02-321
11869-002	32-20-02-172
11869-002	32-20-02-322
11870-003	52-10-01-84
11871-005	52-10-01-66
11871-006	52-10-01-72
11872-003	27-00-05-198
11873-002	27-00-05-117
11874-001	27-00-05-156
11875-001	27-00-05-177
11876-001	27-00-05-210
11887-001	27-00-05-6
11890-001	24-50-02-54
11891-001	34-20-03-3
11892-001	53-40-11-15
11898-001	27-20-02-9
11898-002	27-20-02-12
11899-107	25-10-02-18
11900-101	57-10-01-39
11903-003	28-20-02-36
11904-003	28-20-02-27
11905-003	28-20-02-114
11908-005	53-40-03-84
11908-006	53-40-03-88
11908-009	53-40-03-85
11908-010	53-40-03-89
11908-011	53-40-03-86
11908-012	53-40-03-90
11908-013	53-40-03-87
11908-014	53-40-03-91
11910-005	53-40-03-3
11910-006	53-40-03-6
11921-005	52-10-01-30
11921-006	52-10-01-33
11923-005	52-10-01-39
11923-006	52-10-01-42
11933-003	25-10-02-3
11933-004	25-10-02-6
11963-003	52-10-01-90
11965-004	52-30-01-21
11982-001	28-20-02-168
11983-001	52-30-01-30
11984-001	53-40-04-15
11985-001	53-40-04-18
11989-002	28-20-02-177
11990-001	57-30-01-75
11990-001	57-30-01-78
11990-001	57-30-01-141
11990-001	57-30-01-144
11991-002	31-10-01-84
11991-003	31-10-01-87
11994-003	27-00-03-33
11994-004	27-00-03-42
11994-005	27-00-03-27
11994-006	27-00-03-30
11995-003	27-00-03-3
11995-004	27-00-03-6
11995-005	27-00-03-9
11995-006	27-00-03-18
11996-060	27-00-05-129
11996-070	27-20-03-36
11996-137	27-00-02-228
12006-001	32-42-01-189
12008-002	32-42-01-93
12008-003	32-42-01-96
12012-001	55-10-01-24
12013-001	55-10-01-27
12016-002	24-50-01-3
12017-002	27-50-01-363
12018-002	24-50-05-3
12018-002	33-10-01-3
12020-001	32-20-02-218
12020-002	32-20-02-219
12020-003	32-20-02-225
12020-003	32-20-02-366
12020-004	32-20-02-367
12020-005	32-20-02-368
12021-001	53-40-03-48
12021-002	53-40-03-51
12029-003	21-20-01-162
1202C4-015A	22-11-02-9
12033-003	52-10-01-177
12033-004	52-10-01-180
12050-101	53-40-04-30
12051-016	27-50-01-381
12055-101	25-10-03-36
12055-102	25-10-03-39
12061-001	27-50-01-165
12082-001	21-20-01-21
12082-001	21-20-01-48
12082-001	21-20-01-66
12082-001	21-20-01-87
12102-001	34-10-04-3
12102-002	34-10-04-6
12103-001	34-10-02-3
12110-001	21-60-01-3
12110-002	21-60-01-36
12111-001	21-60-01-174
12111-002	21-60-01-159
12111-103	21-60-01-165

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
12111-103	21-60-01-180
12121-002	25-10-04-141
12121-003	25-10-04-144
12121-003	25-10-04-657
12146-002	52-10-01-387
12146-003	52-10-01-390
12147-001	28-20-03-75
12148-001	71-70-01-21
12148-002	71-70-01-22
12155-005	52-10-01-99
12155-006	52-10-01-105
12155-007	52-10-01-102
12155-008	52-10-01-108
12157-003	52-10-01-514
12157-004	52-10-01-517
12157-005	52-10-01-520
12158-002	52-10-01-222
12159-002	52-10-01-255
12160-003	52-10-01-216
12160-004	52-10-01-219
12162-002	52-10-01-114
12163-001	52-10-01-144
12164-003	52-10-01-120
12164-004	52-10-01-126
12164-005	52-10-01-123
12164-006	52-10-01-129
12165-003	52-10-01-571
12165-004	52-10-01-577
12172-003	34-10-01-375
12172-004	34-10-01-381
12172-005	34-10-01-378
12172-006	34-10-01-384
12185-002	57-30-01-90
12185-002	57-30-01-93
12212-003	25-10-06-93
12216-002	25-10-04-84
12216-003	25-10-04-318
12216-005	25-10-04-321
12216-006	25-10-04-324
12216-007	25-10-04-327
12216-008	25-10-04-336
12216-009	25-10-04-330
12216-010	25-10-04-333
12217-002	25-10-04-81
12217-003	25-10-04-361
12217-005	25-10-04-362
12217-006	25-10-04-363
12217-007	25-10-04-366
12217-008	25-10-04-369
12217-009	25-10-04-372
12217-010	25-10-04-376
12217-011	25-10-04-367
12217-012	25-10-04-370
12217-013	25-10-04-373
12217-014	25-10-04-377
12217-109	25-10-04-368
12217-110	25-10-04-371
12217-111	25-10-04-374
12217-113	25-10-04-378
12219-002	25-10-04-135
12219-002	25-10-04-654
12219-003	25-10-04-136
12219-003	25-10-04-655
12221-003	25-10-04-72
12221-004	25-10-04-66
12221-006	25-10-04-69
12221-007	25-10-04-294
12221-008	25-10-04-304
12221-009	25-10-04-296
12221-010	25-10-04-306
12221-011	25-10-04-300
12221-012	25-10-04-310
12221-107	25-10-04-295
12221-108	25-10-04-305
12221-109	25-10-04-297
12221-110	25-10-04-307
12221-111	25-10-04-301
12221-112	25-10-04-311
12223-104	25-10-04-139
12227-001	25-10-04-99
12227-002	25-10-04-87
12227-004	25-10-04-90
12227-005	25-10-04-102
12227-006	25-10-04-93
12228-005	25-10-06-210
12228-006	25-10-06-213
12229-005	25-10-06-3
12229-006	25-10-06-6
12229-007	25-10-06-9
12229-008	25-10-06-12
12230-001	25-10-06-339
12230-002	25-10-06-342
12231-002	25-10-06-300
12231-003	25-10-06-303
12234-003	25-10-04-27
12234-004	25-10-04-30
12235-005	25-10-06-282
12235-006	25-10-06-285
12236-101	25-10-05-114
12238-004	25-10-05-63
12238-005	25-10-05-64
12239-003	25-10-05-66
12240-003	25-10-05-90
12241-001	25-10-07-135
12241-002	25-10-07-138
12241-003	25-10-07-139
12241-004	25-10-07-140
12241-005	25-10-07-141
12252-002	25-10-07-38
12252-004	25-10-07-39
12255-003	25-10-05-51
12255-004	25-10-05-54
12257-003	25-10-05-78
12257-004	25-10-05-81

PART NUMBER	CH–SEC–FIG–ITM
12258-002	25-10-04-132
12258-003	25-10-04-528
12258-004	25-10-04-531
12258-005	25-10-04-534
12260-002	25-10-04-138
12272-001	25-10-04-198
12272-001	25-10-04-687
12272-002	25-10-04-201
12272-002	25-10-04-690
12276-101	25-10-07-3
12276-102	25-10-07-15
12276-103	25-10-07-60
12276-105	25-10-07-42
12276-106	25-10-07-51
12276-107	25-10-07-123
12276-108	25-10-07-72
12276-109	25-10-07-81
12276-110	25-10-07-92
12276-116	25-10-07-108
12276-117	25-10-07-100
12321-002	27-20-02-72
12332-001	27-00-04-9
12332-002	27-00-04-12
12333-001	27-00-02-12
12333-001	27-00-02-264
12333-002	27-00-02-265
12334-001	27-00-04-48
12334-002	27-00-04-51
12338-007	57-30-01-177
12346-004	57-40-01-258
12346-103	57-40-01-622
12347-001	53-30-02-3
12347-002	53-30-02-6
12372-001	52-10-01-318
12373-001	78-20-01-345
12374-001	78-20-01-357
12376-001	34-20-01-51
12378-001	11-30-01-728
12378-002	11-30-12-3
12378-003	11-30-05-27
12378-004	11-30-04-21
12378-004	11-30-10-21
12378-005	11-30-03-21
12378-006	11-30-02-21
12378-007	11-30-06-21
12378-008	11-30-11-24
12378-008	11-30-13-27
12382-001	52-10-01-617
12386-001	34-30-01-3
12386-003	34-30-01-6
12386-004	34-30-01-7
12386-005	34-30-01-8
12386-006	34-30-01-5
12387-001	34-20-01-24
12389-001	11-30-01-599
12389-002	11-30-01-602
12391-002	11-30-01-821
12392-001	24-50-03-30
12394-001	55-50-02-3
12398-001	28-20-03-6
12402-103	27-31-01-81
12402-104	27-31-01-84
12403-001	53-20-03-27
12403-001	57-40-01-568
12403-001	57-40-01-712
12412-001	56-10-01-12
12412-003	56-10-01-13
12414-001	56-10-01-27
12414-002	56-10-01-39
12414-003	56-10-01-30
12414-004	56-10-01-42
12414-005	56-10-01-31
12414-006	56-10-01-43
12415-001	57-30-01-3
12415-001	57-30-01-6
12416-001	57-30-01-18
12416-002	57-30-01-15
12422-001	25-10-04-204
12422-002	25-10-04-207
12422-002	25-10-04-693
12423-001	57-50-01-132
12423-002	57-50-01-194
12423-003	57-50-01-227
12424-001	24-50-01-15
12424-002	24-50-01-18
12424-003	24-50-01-19
12430-001	11-20-01-24
12430-002	11-20-05-21
12430-003	11-20-04-15
12430-004	11-20-03-15
12430-005	11-20-05-24
12430-006	11-20-02-18
12430-008	11-20-01-25
12430-009	11-20-04-18
12430-010	11-20-03-18
12430-011	11-20-05-25
12430-012	11-20-02-21
12430-014	11-20-06-12
12430-014	11-20-10-12
12430-015	11-20-06-15
12430-015	11-20-10-15
12430-016	11-20-01-26
12430-017	11-20-12-12
12430-018	11-20-12-15
12431-001	11-20-01-27
12431-002	11-20-05-27
12431-002	11-20-06-18
12431-003	11-20-04-21
12431-004	11-20-03-21
12431-005	11-20-02-24
12431-006	11-20-10-18
12431-006	11-20-12-18
12431-007	11-20-01-28
12431-008	11-20-05-28

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
12431-008	11-20-06-19
12431-009	11-20-04-22
12431-010	11-20-03-22
12431-011	11-20-02-25
12431-012	11-20-10-19
12431-012	11-20-12-19
12431-013	11-20-01-29
12431-014	11-20-05-29
12431-014	11-20-06-20
12431-015	11-20-04-23
12431-016	11-20-03-23
12431-017	11-20-02-26
12431-018	11-20-10-20
12431-018	11-20-12-20
12432-001	11-20-01-63
12432-003	11-20-05-60
12432-003	11-20-06-51
12432-003	11-20-10-51
12432-003	11-20-12-51
12432-004	11-20-04-42
12432-005	11-20-03-42
12432-006	11-20-02-45
12432-007	11-20-01-64
12432-009	11-20-05-63
12432-009	11-20-06-52
12432-009	11-20-10-54
12432-009	11-20-12-54
12432-010	11-20-04-43
12432-011	11-20-03-43
12432-012	11-20-02-46
12433-001	11-20-01-61
12433-002	11-20-05-55
12433-003	11-20-04-40
12433-004	11-20-03-40
12433-005	11-20-05-57
12433-005	11-20-06-49
12433-005	11-20-10-49
12433-005	11-20-12-49
12433-006	11-20-02-43
12433-007	11-20-01-62
12433-008	11-20-04-41
12433-009	11-20-03-41
12433-010	11-20-05-58
12433-010	11-20-06-50
12433-010	11-20-10-50
12433-010	11-20-12-50
12433-011	11-20-02-44
12434-001	11-20-01-33
12434-002	11-20-01-36
12434-003	11-20-05-33
12434-003	11-20-06-27
12434-003	11-20-10-27
12434-003	11-20-12-27
12434-004	11-20-05-36
12434-004	11-20-06-30
12434-004	11-20-10-30
12434-004	11-20-12-30
12435-001	11-20-01-39
12435-002	11-20-01-42
12435-003	11-20-05-39
12435-003	11-20-06-33
12435-003	11-20-10-33
12435-003	11-20-12-33
12435-004	11-20-05-42
12435-004	11-20-06-36
12435-004	11-20-10-36
12435-004	11-20-12-36
12436-001	11-30-01-731
12436-002	11-30-01-734
12436-004	11-30-05-30
12436-005	11-30-04-15
12436-005	11-30-10-24
12436-006	11-30-03-15
12436-007	11-30-05-33
12436-008	11-30-02-15
12436-009	11-30-07-3
12436-010	11-30-06-24
12436-011	11-30-11-27
12436-012	11-30-03-16
12436-013	11-30-13-30
12437-001	11-20-01-30
12437-002	11-20-05-30
12437-003	11-20-04-24
12437-004	11-20-03-24
12437-005	11-20-02-27
12437-007	11-20-01-31
12437-008	11-20-05-31
12437-009	11-20-04-27
12437-010	11-20-03-27
12437-011	11-20-02-30
12437-013	11-20-06-21
12437-013	11-20-10-21
12437-013	11-20-12-21
12437-014	11-20-06-24
12437-014	11-20-10-24
12437-014	11-20-12-24
12440-001	32-42-01-126
12446-101	32-20-01-36
12446-102	32-20-01-45
12446-103	32-20-01-69
12446-105	32-20-01-12
12446-106	32-20-01-15
12450-001	32-42-01-36
12451-001	34-20-01-3
12451-002	34-20-01-6
12452-001	11-30-01-824
12452-002	11-30-01-827
12457-002	33-10-01-60
12458-001	33-10-01-9
12458-002	33-10-01-10
12459-002	33-10-01-79
12460-002	33-10-01-39
12463-001	23-50-01-3
12468-002	25-10-04-42

PART NUMBER	CH–SEC–FIG–ITM
12471-001	27-20-04-15
12472-001	27-20-04-63
12472-002	27-20-04-66
12490-003	53-40-01-3
12490-003	53-40-01-153
12490-004	53-40-01-87
12490-004	53-40-01-220
12490-009	53-40-01-6
12490-009	53-40-01-156
12490-010	53-40-01-90
12490-010	53-40-01-223
12491-001	25-10-03-6
12499-001	25-00-01-12
1250327-6	21-50-01-531
1250327-9	21-50-01-532
12503-101	21-20-01-111
12503-101	21-20-01-683
12503-102	21-20-01-117
12503-102	21-20-01-689
12504-001	33-10-01-32
12504-002	33-10-01-33
12517-002	25-10-06-393
12533-001	26-20-01-3
12533-002	26-20-01-6
12533-003	26-20-01-9
12533-004	26-20-01-10
12533-005	26-20-01-11
12535-001	25-10-02-36
12535-002	25-10-02-39
12535-003	25-10-02-42
12536-001	25-10-02-45
12536-002	25-10-02-48
12536-004	25-10-02-51
12537-001	27-10-03-99
12537-002	27-10-03-100
12537-003	27-10-03-101
12537-005	27-10-03-102
12537-101	27-10-03-123
12538-002	27-10-03-12
12538-101	27-10-03-24
12538-103	27-10-03-27
1253-1	22-11-02-45
12545-001	52-10-01-643
12546-001	27-10-03-86
12546-002	27-10-03-87
12546-003	27-10-03-88
12547-001	52-10-01-234
12551-001	53-30-02-9
12553-003	25-10-03-3
12562-003	34-50-04-42
12566-001	28-10-01-44
12566-001	28-10-01-115
12570-001	23-50-01-18
12574-002	33-10-01-82
12579-001	11-30-01-605
12579-003	11-30-05-21
12579-004	11-30-04-18
12579-004	11-30-10-18
12579-005	11-30-03-18
12579-006	11-30-05-24
12579-006	11-30-06-18
12579-007	11-30-02-18
12579-009	11-30-11-21
12579-009	11-30-13-24
12580-102	33-40-01-31
12580-104	33-40-01-126
12580-105	33-40-01-129
12580-106	33-40-01-132
12580-107	33-40-01-120
12580-108	33-40-01-54
12580-109	33-40-01-123
12580-123	33-40-01-28
12592-001	25-10-04-696
12595-001	25-00-01-18
12614-002	53-40-06-90
12614-002	53-40-06-210
12616-001	77-20-01-45
12618-001	24-30-08-3
12619-001	79-30-01-3
12622-001	21-60-01-153
12622-001	21-60-03-336
12622-001	21-60-04-81
12622-001	76-10-02-69
12622-001	76-10-03-72
12622-001	76-10-04-27
12626-002	53-40-06-78
12626-002	53-40-06-102
12626-002	53-40-06-198
12626-002	53-40-06-234
12629-001	53-40-06-45
12629-001	53-40-06-162
12634-001	79-30-01-18
12635-001	77-10-02-15
12635-002	79-30-01-51
12635-003	77-10-02-18
12635-004	79-30-01-52
12637-001	77-20-01-18
12638-102	28-40-01-48
12638-102	28-40-01-120
12645-001	21-60-01-144
12645-001	76-10-02-60
12645-001	76-10-03-63
12645-001	76-10-04-18
12645-002	21-60-03-333
12645-002	21-60-04-78
12645-002	76-10-02-57
12645-002	76-10-03-60
12645-002	76-10-04-15
12647-001	32-42-01-210
12655-001	25-10-04-123
12655-001	25-10-04-516
12655-002	25-10-04-519
12682-001	55-20-01-78
12682-001	55-40-01-108

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
12682-001	57-50-02-141
12683-001	53-50-03-3
12683-002	53-50-03-9
12683-003	53-20-02-87
12683-004	53-50-03-6
12683-005	53-50-03-12
12683-006	53-20-02-90
12687-003	53-40-01-331
12688-001	53-40-01-51
12688-002	53-40-01-268
12692-001	77-20-01-3
12694-001	53-40-01-84
12694-001	53-40-01-301
12696-001	25-10-08-69
12698-001	25-10-08-45
12698-002	25-10-08-48
12698-003	25-10-08-51
12707-002	25-10-10-3
12707-003	25-10-10-6
12707-005	25-10-10-9
12707-006	25-10-10-12
12708-002	21-20-02-12
12709-001	21-20-02-6
12710-001	21-20-02-3
12717-001	23-50-01-93
12718-050	34-50-01-3
12718-051	34-50-01-6
12718-051ST	34-50-01-7
12718-060	34-50-01-12
12718-061	34-50-01-15
12718-071	34-50-01-9
12718-072	34-50-01-10
12718-081	34-50-01-18
12718-082	34-50-01-19
12721-101	22-11-01-12
12722-001	22-10-01-54
12722-001	22-11-01-21
12722-002	22-10-01-57
12722-002	22-11-01-24
12723-102	34-50-04-6
12723-152	34-50-04-18
12724-002	21-60-02-150
12724-002	27-10-04-30
12724-002	27-30-03-30
12733-001	34-20-03-6
12734-111	34-50-05-24
12734-112	34-50-05-27
12734-151	34-50-05-3
12735-001	34-50-01-21
12735-051	34-50-01-27
12735-201	34-50-01-33
12735-202	34-50-01-36
12735-301	34-50-01-24
12735-351	34-50-01-30
12738-001	34-10-01-258
12738-050	34-10-01-261
12738-101	34-10-01-264
12738-111	34-10-01-276
12738-111	34-10-01-596
12738-112	34-10-01-279
12738-112	34-10-01-593
12738-113	34-10-01-267
12738-113	34-10-01-587
12738-114	34-10-01-282
12738-114	34-10-01-602
12738-115	31-30-01-33
12738-115	34-10-01-273
12738-115	34-10-01-285
12738-115	34-10-01-590
12738-115	34-10-01-599
12738-116	34-10-01-270
12739-001	34-50-03-21
12739-001	34-50-03-99
12740-001	34-50-02-33
12740-004	34-50-02-34
12741-001	34-50-02-90
12741-002	34-50-02-91
12742-001	34-50-04-27
12743-001	34-30-01-12
12743-002	34-30-01-13
12743-003	34-30-01-14
12744-001	34-50-02-9
12744-002	34-50-02-121
12744-003	34-50-06-151
12744-004	34-50-02-120
12744-004	34-50-02-141
12744-005	34-50-06-150
12745-050	34-40-01-3
12745-070	34-40-01-24
12745-142	34-40-01-39
12745-144	34-40-01-6
12745-201	34-40-01-27
12745-203	34-40-01-15
12745-204	34-40-01-30
12755-001	31-60-01-3
12756-050	25-60-01-3
12756-101	25-60-01-6
12756-102	25-60-01-12
12756-103	25-60-01-15
12756-104	25-60-01-30
12756-105	25-60-01-90
12756-106	25-60-01-78
12759-001	34-50-02-30
12760-001	34-50-02-87
12761-001	34-50-02-3
12762-002	34-50-02-6
12763-002	52-10-01-96
12764-001	52-10-01-192
12765-001	52-10-01-249
12767-002	25-10-05-180
12768-001	52-10-01-174
12768-002	52-10-01-175
12776-001	32-42-01-264

PART NUMBER	CH–SEC–FIG–ITM
12776-002	32-42-01-267
12789-002	25-10-05-222
12789-002	25-10-05-806
12789-003	25-10-05-808
12798-001	32-20-02-192
12798-001	32-20-02-339
12801-001	27-31-01-60
12816-001	25-10-04-195
12816-001	25-10-04-681
12816-002	25-10-04-684
12819-003	25-10-05-147
12819-004	25-10-05-150
12819-103	25-10-05-159
12819-104	25-10-05-162
12823-001	34-20-01-60
12824-001	21-20-01-33
12832-003	52-10-01-303
12832-004	52-10-01-315
12833-101	25-10-01-132
12833-102	25-10-01-147
12833-103	25-10-01-117
12833-104	25-10-01-135
12833-105	25-10-01-150
12833-106	25-10-01-120
12837-001	52-10-01-171
12837-002	52-10-01-172
12843-003	52-10-01-3
12843-004	52-10-01-9
12854-001	27-31-01-9
12854-002	27-31-01-12
12855-001	25-10-05-105
12856-001	52-10-01-150
12856-002	52-10-01-153
12856-003	52-10-01-151
12856-004	52-10-01-154
12858-002	52-10-01-48
12885-001	33-10-01-84
12905-001	57-40-01-243
12905-002	57-40-01-150
12905-003	57-40-01-339
12905-003	57-40-01-348
12905-004	57-40-01-357
12905-005	57-40-01-159
12905-006	57-40-01-249
12906-001	53-40-06-222
12911-001	25-10-05-39
12921-001	52-10-01-168
12925-001	27-50-01-132
12925-002	27-50-01-174
12934-001	55-40-01-78
12934-001	55-40-01-84
12934-002	55-20-01-129
12934-002	55-40-01-85
12939-001	53-20-01-66
12939-001	53-20-01-195
12945-001	25-10-05-213
12945-002	25-10-05-216
12949-002	25-10-01-39
12949-003	25-10-01-42
12949-004	25-10-01-45
12951-001	25-10-05-156
12951-001	25-10-05-225
12951-001	25-10-05-243
12951-001	25-10-05-810
12951-001	25-10-05-822
12956-001	25-10-05-228
12956-001	25-10-05-812
12956-002	25-10-05-231
12956-002	25-10-05-814
12959-001	27-00-02-159
12959-001	27-00-02-177
12959-001	27-00-02-514
12959-002	27-00-02-529
12963-001	25-10-05-183
12965-001	25-10-01-153
12966-001	25-10-01-138
12967-001	25-10-01-123
12968-003	25-10-04-210
12968-003	25-10-04-699
12968-004	25-10-04-213
12968-006	25-10-04-216
12968-006	25-10-04-723
12975-101	32-10-01-198
12976-101	32-10-01-141
12980-001	24-50-04-21
12980-001	24-50-04-45
12980-002	24-50-04-48
12980-003	24-50-04-4
12980-003	24-50-04-49
12980-004	24-50-04-51
12983-001	27-20-04-54
13025-001	27-30-02-21
13030-001	53-30-01-3
13030-001	53-30-01-18
13034-001	57-30-01-60
13034-001	57-30-01-63
13034-001	57-30-01-183
13034-001	57-30-01-186
13036-001	27-30-01-12
13036-002	27-30-01-6
13036-003	27-30-01-9
13037-001	27-20-01-6
13037-002	27-20-01-3
13037-002	27-20-01-33
13037-003	27-20-01-9
13037-003	27-20-01-54
13038-001	27-10-01-6
13038-002	27-10-01-9
13038-003	27-10-01-12
13050-001	27-10-03-36
13050-002	27-10-03-39
13090-001	27-20-04-18
13098-001	25-10-05-138
13098-002	25-10-05-141

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
13099-001	25-10-04-60
13099-002	25-10-04-57
13100-002	25-10-06-147
13103-001	25-10-05-123
13104-001	25-10-04-165
13104-002	25-10-04-168
13105-001	25-10-04-6
13105-002	25-10-04-9
13106-001	25-10-04-3
13107-001	25-10-05-9
13107-002	25-10-05-12
13108-001	25-10-05-3
13108-002	25-10-05-6
13109-001	25-10-05-52
13109-002	25-10-05-55
13109-003	25-10-05-53
13109-004	25-10-05-56
13110-001	25-10-05-79
13110-002	25-10-05-82
13110-003	25-10-05-80
13110-004	25-10-05-83
13119-003	25-10-04-177
13119-004	25-10-04-180
13120-001	25-10-06-536
13121-001	25-10-06-545
13121-003	25-10-06-548
13127-001	21-20-01-39
13127-002	21-20-01-132
13127-003	21-20-01-135
13127-101	21-20-01-147
13137-002	25-10-01-156
13138-001	25-10-01-105
13159-003	25-10-01-500
13159-004	25-10-01-503
13160-001	25-10-01-387
13170-001	25-10-01-569
13177-001	25-10-01-506
13180-001	25-10-01-354
13186-001	25-10-01-578
13186-002	25-10-01-581
13188-001	25-10-01-563
13188-002	25-10-01-566
131-0001	25-60-02-156
13205-001	53-40-03-21
13205-002	53-40-03-24
13205-003	53-40-03-27
13205-004	53-40-03-30
13214-001	61-20-01-3
13219-001	27-20-04-30
13220-001	27-20-04-39
13220-002	27-20-04-42
13221-101	27-20-04-51
13231-002	25-10-01-3
13231-004	25-10-01-9
13231-007	25-10-01-12
13231-009	25-10-01-15
13231-011	25-10-01-18
13232-002	25-10-01-342
13232-003	25-10-01-345
13233-02	30-07-01-34
13233-04	30-07-01-44
13247-001	25-10-01-393
13247-002	25-10-01-381
13249-002	25-10-01-572
13249-003	25-10-01-575
13284-001	32-10-02-133
13370-001	21-40-01-66
13374-001	11-20-01-9
13374-002	11-20-05-15
13375-001	32-20-01-6
13376-001	32-20-01-81
13376-102	32-20-01-93
13380-001	57-20-01-3
13380-002	57-20-01-9
13380-003	57-20-01-6
13380-004	57-20-01-12
13386-001	32-20-02-90
13397-001	32-10-01-147
13397-002	32-10-01-156
13398-001	28-10-01-138
13399-101	32-10-02-70
13399-103	32-42-02-3
13404-101	57-30-01-69
13404-101	57-30-01-84
13404-101	57-30-01-150
13404-101	57-30-01-171
13404-101	57-30-01-192
13405-005	57-30-01-27
13405-006	57-30-01-30
13407-101	28-10-01-144
13407-103	28-20-01-240
13407-104	28-10-01-150
13408-001	28-20-01-207
13411-001	28-20-01-72
13413-001	28-20-01-153
13413-001	28-20-01-186
13414-001	28-20-01-24
13415-001	28-20-01-225
13416-001	28-20-01-231
13417-001	28-20-01-54
13417-002	28-20-01-57
13418-001	28-20-01-174
13419-001	28-20-01-141
13420-101	32-10-01-126
13420-102	32-10-01-81
13422-001	57-30-01-156
13422-001	57-30-01-162
13422-002	57-30-01-159
13422-002	57-30-01-165
13423-105	57-10-01-36
13423-110	57-40-01-24
13437-001	57-10-01-3
13443-001	32-10-01-114
13443-002	32-10-01-120

PART NUMBER	CH–SEC–FIG–ITM
13443-101	32-10-01-138
13447-001	32-10-02-162
13449-001	57-20-01-21
13450-001	57-20-01-24
13450-002	57-20-01-27
13457-102	71-70-01-324
13464-101	24-30-01-33
13467-001	28-40-01-96
13467-002	28-40-01-99
13467-003	28-40-01-24
13467-004	28-40-01-27
13468-001	34-20-02-3
13468-114	34-20-02-6
13470-001	24-30-03-3
13470-011	24-30-03-4
13522-001	32-10-02-242
13524-001	32-10-02-144
13524-002	32-10-02-148
13529-001	78-20-01-174
13535-001	78-20-01-72
13538-001	78-20-01-45
13539-001	78-20-01-48
13539-002	78-20-01-51
13541-001	78-20-01-18
13542-001	78-20-01-21
13543-001	78-20-01-54
13544-001	78-20-01-57
13544-002	78-20-01-60
13545-001	78-20-01-24
13546-001	78-20-01-63
13547-001	78-20-01-30
13548-001	78-20-01-33
13549-002	32-20-02-55
13556-001	57-20-01-42
13556-001	57-20-01-48
13557-001	28-40-01-3
13557-002	28-40-01-6
13557-003	28-40-01-9
13558-001	77-10-02-33
13558-002	77-10-02-36
13559-001	77-10-01-3
13559-002	77-10-01-6
13560-001	22-11-01-3
13560-002	22-11-01-6
13560-004	22-11-01-9
13563-001	31-10-01-6
13563-002	31-10-01-3
13565-001	24-30-02-3
13565-020	24-30-02-9
13568-001	34-10-03-3
13568-002	34-10-03-6
13568-003	34-10-03-9
13568-004	34-10-03-12
13580-101	22-10-01-69
13580-101	22-11-01-42
13580-102	22-10-01-75
13580-102	22-11-01-51
13587-050	34-50-03-3
13587-101	34-50-03-9
13587-102	34-50-03-15
13587-201	34-50-03-18
13597-001	52-10-01-60
13601-001	28-20-01-126
13601-001	28-20-01-387
13610-001	31-10-02-18
13611-001	31-10-02-3
13614-001	11-30-01-629
13614-002	11-30-01-635
13614-003	11-30-01-641
13614-004	11-30-01-638
13614-005	11-30-01-683
13615-001	11-30-01-6
13615-002	11-30-01-9
13615-003	11-30-01-12
13615-004	11-30-01-15
13615-005	11-30-01-18
13615-011	11-30-01-30
13615-012	11-30-01-33
13615-021	11-30-01-45
13615-022	11-30-01-48
13616-001	11-30-01-573
13617-001	11-30-01-108
13618-001	11-30-01-587
13618-002	11-30-01-590
13618-011	11-30-01-575
13618-012	11-30-01-578
13641-001	32-10-01-201
13642-002	71-20-01-3
13642-003	71-20-01-6
13642-004	71-20-01-7
13651-001	71-00-02-142
13651-002	71-00-02-144
13651-101	71-00-02-170
13651-102	71-00-02-182
13651-103	71-00-02-188
13651-104	71-00-02-172
13653-002	71-00-03-147
13653-002	71-00-03-198
13654-001	71-00-02-196
13654-002	71-00-02-198
13654-003	71-00-02-200
13654-004	71-00-02-202
13654-101	71-00-02-224
13654-102	71-00-02-234
13654-103	71-00-02-240
13654-104	71-00-02-226
13660-002	71-00-03-99
13661-002	71-00-02-246
13661-003	71-00-02-248
13661-004	71-00-02-250
13661-104	71-00-02-294
13661-105	71-00-02-298
13661-106	71-00-02-278
13661-107	71-00-02-284

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
13661-108	71-00-02-288
13661-109	71-00-02-296
13661-110	71-00-02-280
13661-111	71-00-02-286
13661-112	71-00-02-290
13667-001	71-00-02-276
13668-002	71-00-02-388
13668-003	71-00-02-390
13668-004	71-00-02-392
13668-107	71-00-02-398
13668-108	71-00-02-500
13668-109	71-00-02-502
13668-110	71-00-02-514
13668-111	71-00-02-504
13668-112	71-00-02-506
13668-113	71-00-02-516
13668-114	71-00-02-508
13668-115	71-00-02-518
13668-116	71-00-02-512
13668-117	71-00-02-510
13669-002	71-00-02-312
13669-003	71-00-02-314
13669-004	71-00-02-316
13669-005	71-00-02-318
13669-105	71-00-02-366
13669-106	71-00-02-370
13669-107	71-00-02-376
13669-108	71-00-02-382
13669-109	71-00-02-338
13669-110	71-00-02-354
13669-111	71-00-02-346
13669-112	71-00-02-360
13669-114	71-00-02-378
13669-115	71-00-02-340
13669-116	71-00-02-356
13669-117	71-00-02-348
13669-118	71-00-02-362
13675-001	71-00-02-694
13677-002	71-00-02-520
13677-003	71-00-02-522
13677-004	71-00-02-524
13677-005	71-00-02-526
13677-107	71-00-02-536
13677-108	71-00-02-538
13677-109	71-00-02-540
13677-110	71-00-02-548
13677-111	71-00-02-552
13677-112	71-00-02-542
13677-113	71-00-02-544
13677-114	71-00-02-550
13677-115	71-00-02-554
13677-116	71-00-02-546
13681-001	71-00-02-336
13685-001	71-00-02-710
13703-001	32-20-02-93
13704-001	32-20-02-48
13705-001	32-20-02-27
13705-001	32-20-02-42
13705-002	32-20-02-111
13705-003	32-20-02-30
13705-003	32-20-02-45
13705-004	32-20-02-114
13720-001	24-50-02-3
13720-002	24-50-02-6
13722-003	57-10-01-102
13722-004	57-10-01-108
13722-005	57-10-01-105
13722-005	57-10-01-276
13722-006	57-10-01-111
13722-006	57-10-01-279
13755-001	78-20-01-90
13755-002	78-20-01-93
13755-003	78-20-01-96
13762-001	28-20-03-231
13767-101	71-60-01-144
13767-102	71-60-01-153
13767-102	71-60-01-156
13769-101	71-70-01-36
13769-102	71-70-01-84
13769-103	71-70-01-99
13769-104	71-70-01-234
13769-105	71-70-01-3
13769-106	71-70-01-114
13772-001	25-00-01-24
13772-002	25-00-01-27
13772-003	25-00-01-30
13772-004	25-00-01-33
13772-005	25-00-01-36
13834-001	71-00-02-586
13834-002	71-00-02-588
13837-001	32-42-01-90
13838-001	57-40-01-118
13838-001	57-40-01-136
13846-001	71-60-01-3
13846-001	71-60-01-9
13846-002	71-60-01-12
13857-001	30-06-01-604
13857-001	30-07-01-787
13857-003	30-06-01-601
13870-001	21-60-01-84
13876-001	76-10-03-75
13877-001	32-10-02-165
13877-002	32-10-02-174
13877-101	32-10-02-210
13877-102	32-42-01-297
13878-001	76-10-02-72
13879-001	76-10-04-48
13879-002	76-10-04-49
13880-001	76-10-04-30
13885-101	57-40-01-40
13888-001	32-10-02-234
13888-002	32-10-02-235
13888-003	32-10-02-236
13893-002	71-10-01-273

PART NUMBER	CH–SEC–FIG–ITM
13908-001	78-20-01-27
13909-001	78-20-01-66
13909-002	78-20-01-69
13913-001	71-70-01-141
13913-002	71-70-01-144
13914-001	71-70-01-183
13914-002	71-70-01-186
13916-001	73-30-01-3
13917-001	57-40-01-41
13925-001	78-20-01-201
13928-001	24-30-09-18
13929-001	24-30-03-105
13929-001	24-30-04-81
13929-001	24-30-06-120
13929-001	24-30-07-60
13929-002	24-30-05-117
13937-001	71-10-01-282
13937-001	71-10-01-336
13962-101	57-40-01-390
13964-001	57-40-01-384
13964-002	57-40-01-387
13965-001	57-40-01-381
13966-001	57-30-01-39
13966-001	57-30-01-42
13970-001	53-40-03-115
13974-001	57-40-01-51
13975-001	27-00-04-60
13975-002	27-00-04-63
13975-002	27-00-04-234
13975-003	27-00-04-235
13978-001	61-10-01-114
13978-001	61-10-01-132
13978-002	61-10-01-120
13978-002	61-10-01-138
13978-003	61-10-01-117
13978-003	61-10-01-135
13978-004	61-10-01-123
13978-004	61-10-01-141
13978-005	61-10-01-126
13978-005	61-10-01-144
13982-001	28-20-03-57
13983-001	57-30-01-120
13983-001	57-30-01-123
13983-002	57-30-01-108
13983-002	57-30-01-111
13993-003	32-42-01-234
13993-009	28-20-01-117
13996-001	57-40-01-547
14002-001	57-40-01-502
14002-002	57-40-01-399
14021-001	57-10-01-63
14021-001	57-10-01-237
14023-001	57-10-01-153
14023-002	57-10-01-159
14028-001	78-20-01-165
14050-002	78-20-01-114
14058-001	71-70-01-126
14059-001	71-20-01-30
14059-003	71-20-01-33
14059-003	71-20-01-54
14059-004	71-20-01-147
14059-005	71-20-01-159
14059-005	71-20-02-15
14059-006	71-20-02-27
14060-001	71-20-01-48
14060-002	71-20-01-51
14061-001	71-20-01-99
14062-001	71-60-01-165
14063-001	76-10-01-33
14064-101	76-10-03-3
14064-101	76-10-04-3
14064-102	76-10-03-4
14064-102	76-10-04-4
14064-103	76-10-03-5
14065-101	76-10-02-3
14067-001	71-60-01-180
14067-002	71-60-01-189
14067-004	71-60-01-330
14069-001	28-20-03-63
14069-002	28-20-03-373
14070-001	61-10-01-3
14070-002	61-10-01-9
14070-003	61-10-01-12
14070-004	61-10-01-15
14070-005	61-10-01-18
14070-006	61-10-01-21
14070-007	61-10-01-24
14070-008	61-10-01-27
14070-009	61-10-01-30
14070-010	61-10-01-33
14070-011	61-10-01-36
14070-012	61-10-01-39
14070-013	61-10-01-42
14070-014	61-10-01-45
14070-101	61-10-01-84
14070-102	61-10-01-195
14070-102	61-10-01-201
14070-103	61-10-01-87
14071-001	71-70-01-147
14071-001	71-70-01-189
14071-002	71-70-01-165
14071-003	71-70-01-150
14071-003	71-70-01-192
14071-003	71-70-01-563
14071-003	71-70-01-578
14071-003	71-70-01-596
14071-003	71-70-01-611
14072-001	32-20-02-98
14073-001	32-20-02-95
14075-002	32-10-02-59
14075-004	32-10-02-60
14075-005	32-10-02-63
14075-006	32-10-02-66
14075-007	32-10-02-67

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
14075-008	32-10-02-68
14076-001	32-20-02-228
14076-001	32-20-02-369
14076-002	32-10-02-69
14077-001	57-10-01-99
14082-001	32-20-02-3
14082-002	32-20-02-6
14082-003	32-20-02-7
14082-004	32-20-02-8
14083-001	57-40-01-324
14083-002	57-40-01-327
14083-003	57-40-01-330
14106-002	71-10-01-246
14116-001	21-40-01-3
14116-002	21-40-01-6
14118-001	57-20-02-3
14118-002	57-20-02-6
14119-001	57-20-02-9
14119-002	57-20-02-12
14120-001	55-10-01-3
14120-002	55-10-01-6
14120-101	55-50-01-12
14127-101	34-10-01-554
14127-101	34-10-01-608
14127-102	34-10-01-557
14127-102	34-10-01-611
14127-103	34-10-01-560
14127-103	34-10-01-614
14128-001	31-30-01-18
14128-001	34-40-02-123
14133-001	55-20-01-84
14133-002	55-20-01-105
14133-003	55-20-01-87
14133-004	55-20-01-108
14137-001	76-10-01-3
14137-002	76-10-01-6
14137-003	76-10-01-9
14137-004	76-10-01-12
14137-005	76-10-01-15
14139-001	71-00-02-3
14139-002	71-00-02-6
14139-101	71-00-02-42
14139-102	71-00-02-50
14139-103	71-00-02-58
14139-104	71-00-02-64
14139-105	71-00-02-60
14139-106	71-00-02-66
14141-001	71-00-02-72
14141-002	71-00-02-74
14141-003	71-00-02-76
14141-101	71-00-02-104
14141-102	71-00-02-114
14141-103	71-00-02-120
14141-104	71-00-02-128
14141-105	71-00-02-136
14141-106	71-00-02-140
14141-107	71-00-02-138
14143-001	71-00-02-606
14143-101	71-00-02-630
14143-102	71-00-02-632
14143-103	71-00-02-634
14148-001	22-11-01-15
14149-101	22-11-02-3
14149-102	22-11-02-12
14149-103	22-11-02-18
14149-104	22-11-02-15
14149-105	22-11-02-4
14152-004	25-10-01-99
14156-001	71-10-01-99
14156-002	71-10-01-102
14157-001	71-10-01-177
14170-101	21-20-01-3
14170-102	21-20-01-15
14170-103	21-20-01-30
14170-104	21-20-01-51
14170-105	21-20-01-69
14170-106	21-20-01-60
14170-107	21-20-01-42
14170-108	21-20-01-90
14170-109	21-20-01-96
14170-110	21-20-01-81
14170-111	21-20-01-9
14170-112	21-40-01-42
14170-113	21-40-01-54
14170-114	21-20-01-36
14176-001	71-00-02-638
14176-002	71-00-02-640
14176-101	71-00-02-682
14176-102	71-00-02-684
14176-103	71-00-02-686
14178-001	27-20-05-6
14178-105	27-20-05-51
14178-106	27-20-05-57
14178-107	27-20-05-60
14178-108	27-20-05-54
14183-001	27-20-02-3
14183-002	27-20-02-6
14196-001	32-10-01-3
14196-002	32-10-01-21
14197-101	71-10-01-69
14197-102	71-20-01-15
14197-102	71-20-01-135
14198-101	33-40-01-195
14198-102	33-40-01-183
14198-103	33-40-01-198
14199-001	33-40-01-3
14199-002	33-40-01-6
14202-001	21-60-01-69
14206-001	33-40-01-36
14210-001	33-40-01-33
14212-101	21-20-01-114
14212-101	21-20-01-686
14212-102	21-20-01-120
14212-102	21-20-01-692

PART NUMBER	CH–SEC–FIG–ITM
14217-001	24-30-10-27
14218-001	24-30-10-66
14222-001	24-30-10-18
14231-001	11-20-01-3
14231-003	11-20-05-6
14231-004	11-20-01-6
14231-005	11-20-05-9
14231-006	11-20-04-3
14231-007	11-20-03-3
14231-008	11-20-05-12
14231-009	11-20-02-6
14231-010	11-20-06-3
14231-011	11-20-10-3
14231-012	11-20-12-3
14232-001	27-20-05-9
14251-001	77-10-02-3
14257-001	33-40-01-18
14257-002	33-40-01-21
14257-002	33-40-01-22
14264-003	11-30-05-15
14264-004	11-30-04-3
14264-004	11-30-10-27
14264-005	11-30-03-3
14264-006	11-30-02-3
14264-008	11-30-06-15
14264-009	11-30-11-18
14264-010	11-30-13-18
14265-001	11-30-01-737
14265-002	11-30-01-740
14269-001	32-42-01-60
14270-001	24-30-10-87
14276-001	32-20-01-2
14276-002	32-20-01-3
14277-001	32-20-01-75
14277-002	32-20-01-78
14277-102	32-20-01-90
14286-002	33-40-02-99
14286-003	33-40-02-100
14296-001	32-20-02-84
14327-001	25-10-01-515
14327-003	25-10-01-518
14334-001	53-40-08-3
14335-003	25-10-01-108
14335-004	25-10-01-111
14341-003	32-10-01-6
14341-004	32-10-01-24
14346-001	25-10-01-6
14354-001	28-10-01-33
14354-001	28-10-01-103
14354-101	28-10-01-35
14354-101	28-10-01-105
14356-001	34-50-05-12
14356-101	34-50-05-21
14357-001	34-50-05-33
14358-001	34-50-05-42
14358-002	34-50-05-45
14390-001	57-50-02-153
14390-002	57-50-02-156
14390-002	57-50-02-285
14390-003	57-50-02-157
14390-003	57-50-02-286
14398-001	27-20-05-30
14398-002	27-20-05-39
14404-001	27-20-05-33
14404-002	27-20-05-42
14430-101	27-20-05-24
14435-001	57-50-02-147
14435-001	57-50-02-279
14445-001	32-42-01-282
14445-002	32-42-01-288
14447-001	32-10-02-168
14447-002	32-10-02-177
14447-101	32-10-02-216
14447-102	32-42-01-300
14457-001	28-20-01-18
14457-001	28-20-01-36
14457-001	28-20-01-147
14457-001	28-20-01-180
14457-001	28-20-01-237
14460-001	28-20-01-144
14460-001	28-20-01-177
14461-001	28-20-01-33
14461-001	28-20-01-234
14462-001	28-20-01-15
14473-001	71-70-01-231
14477-050	34-40-02-3
14477-051	34-40-02-6
14477-051	34-40-02-132
14477-052	34-40-02-135
14477-101	34-40-02-105
14477-203	34-40-02-45
14480-101	34-40-02-117
14488-002	34-40-02-12
14489-001	34-40-02-9
14490-101	34-40-02-96
14490-102	34-40-02-78
14490-103	34-40-02-84
14491-002	34-40-02-69
14491-003	34-40-02-72
14502-001	33-40-01-114
14502-002	33-40-01-108
14502-003	33-40-01-105
14502-003	33-40-01-111
14513-001	28-20-01-168
14513-001	28-20-01-201
14525-103	33-40-01-27
14538-001	32-10-01-150
14538-002	32-10-01-159
14539-001	32-10-01-117
14539-002	32-10-01-123
14554-001	77-20-01-6
14554-003	77-20-01-7
14559-001	33-40-01-57
14571-003	57-40-01-267

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
14571-004	57-40-01-279
14571-005	57-40-01-269
14571-006	57-40-01-281
14571-007	57-40-01-271
14571-008	57-40-01-283
14572-002	57-40-01-75
14572-003	57-40-01-76
14572-004	57-40-01-77
14573-002	57-40-01-186
14573-002	57-40-01-188
14573-003	57-40-01-189
14573-004	57-40-01-190
14579-001	31-10-01-12
14579-002	31-10-01-9
14593-001	71-60-01-6
14595-001	34-40-02-60
14595-001	34-40-04-45
14595-201	23-20-01-45
14595-201	23-20-01-96
14595-201	34-40-04-99
145-01000	32-42-02-111
14600-001	24-30-03-6
14600-002	24-30-03-9
14600-011	24-30-03-7
14600-012	24-30-03-10
14602-001	24-30-03-129
14602-002	24-30-03-132
14603-104	24-30-03-279
14604-001	24-30-03-180
14604-001	24-30-04-159
14605-001	24-30-03-259
14605-001	24-30-04-248
14605-001	24-30-05-611
14605-002	24-30-05-612
14605-010	24-30-03-265
14605-010	24-30-04-252
14605-010	24-30-05-618
14605-030	24-30-05-619

PART NUMBER	CH–SEC–FIG–ITM
14606-001	24-30-03-33
14606-010	24-30-03-54
14607-001	24-30-03-21
14607-002	24-30-03-24
14609-001	24-30-03-147
14609-001	24-30-04-108
14610-001	24-30-03-150
14610-002	24-30-03-153
14610-002	24-30-04-111
14610-003	24-30-03-154
14610-003	24-30-04-112
14617-001	24-30-03-273
14619-001	24-30-03-72
14619-010	24-30-03-90
14626-001	71-60-01-24
14626-002	71-60-01-25
14635-001	71-60-01-132
14636-002	71-60-01-243
14637-001	31-10-02-27
14637-004	31-10-02-30
14637-005	31-10-02-33
14646-001	24-30-03-117
14647-001	24-30-03-168
14647-001	24-30-04-147
14652-001	25-10-04-45
14652-002	25-10-04-48
14652-003	25-10-04-277
14652-004	25-10-04-278
14652-005	25-10-04-279
14653-001	25-10-04-33
14653-002	25-10-04-36
14653-003	25-10-04-39
14653-004	25-10-04-270
14659-001	24-30-03-204
14659-001	24-30-03-219
14659-001	24-30-03-234
14659-001	24-30-04-183
14659-001	24-30-04-204

PART NUMBER	CH–SEC–FIG–ITM
14659-001	24-30-04-222
14660-001	24-30-03-246
14660-001	24-30-04-234
14663-001	71-70-01-207
14663-001	71-70-01-612
14663-002	71-70-01-168
14663-002	71-70-01-579
14664-001	71-70-01-225
14682-001	33-40-01-69
14685-001	11-20-01-66
14686-001	53-40-03-252
14686-001	53-40-03-285
14686-001	55-40-01-66
14686-001	55-40-01-69
14686-002	53-40-03-286
14688-001	22-10-01-3
14690-001	22-10-01-36
14692-001	22-10-01-24
14693-051	22-10-01-48
14694-002	78-20-01-117
14704-001	57-40-01-187
14708-104	24-30-03-282
14708-104	24-30-04-267
14724-002	71-10-01-354
14728-001	24-30-01-36
14740-001	71-10-01-369
14741-001	71-10-01-372
14745-001	11-30-01-111
14745-002	11-30-01-114
14745-003	11-30-01-123
14750-002	31-60-01-6
14750-004	31-60-01-9
14750-006	31-60-01-12
14750-008	31-60-01-15
14750-009	31-60-01-18
14750-010	31-60-01-21
14750-011	31-60-01-24
14750-012	31-60-01-27

PART NUMBER	CH–SEC–FIG–ITM
14750-013	31-60-01-30
14750-014	31-60-01-33
14750-015	31-60-01-36
14753-001	25-10-08-81
14754-001	24-30-07-51
14779-101	22-11-01-39
14779-102	22-11-01-48
14783-001	31-60-01-51
14785-001	71-20-01-102
14785-001	71-20-01-207
14807-001	52-10-01-141
14812-001	57-40-01-246
14812-001	57-40-01-252
14812-002	57-40-01-153
14812-003	57-40-01-162
14812-003	57-40-01-345
14812-003	57-40-01-360
14812-004	57-40-01-165
14812-004	57-40-01-342
14812-004	57-40-01-351
14815-001	27-10-03-15
14815-002	27-10-03-16
14815-101	27-10-03-25
14815-102	27-10-03-28
14815-103	27-10-03-29
14824-001	34-40-04-9
14824-001	34-40-04-63
14824-002	34-40-04-12
14824-002	34-40-04-66
14824-007	23-20-01-42
14824-007	23-20-01-93
14825-001	34-40-04-15
14825-001	34-40-04-69
14825-002	23-20-01-48
14825-002	23-20-01-99
14828-001	33-40-01-72
14829-001	33-40-01-156
14829-001	33-40-01-321
14830-001	33-40-01-138
14830-001	33-40-01-303
14830-002	33-40-01-29
14830-003	33-40-01-30
14830-101	33-40-01-147
14830-101	33-40-01-312
14830-102	33-40-01-150
14830-102	33-40-01-315
14830-103	33-40-01-153
14830-103	33-40-01-318
14832-001	27-30-02-186
14832-003	27-30-02-187
14836-001	78-20-01-312
14836-002	78-20-01-313
14837-001	78-20-01-285
14843-001	77-40-01-6
14843-002	77-40-01-9
14848-001	34-10-05-24
14848-001	34-10-05-27
14856-001	78-20-01-303
14856-002	78-20-01-304
14857-001	27-20-02-99
14857-002	27-20-02-105
14873-001	11-20-11-6
14874-001	11-30-12-15
14875-001	11-30-12-6
14877-001	11-30-12-9
14877-002	11-30-12-12
14879-001	11-20-11-3
14880-001	77-20-01-33
14880-003	77-20-01-34
14899-001	27-00-05-216
14899-002	27-00-05-252
14902-003	27-30-02-144
14908-001	27-00-05-291
14909-001	27-30-02-216
14910-001	27-30-02-201
14912-002	27-00-05-306
14914-001	27-00-05-309
14918-001	27-30-01-42
14919-001	27-30-01-63
14920-001	27-30-01-33
14921-001	27-30-01-54
14922-001	27-20-01-42
14923-001	27-20-01-66
14923-002	27-20-01-63
14929-001	76-10-01-87
14929-001	76-10-01-223
14929-002	76-10-01-224
14930-001	27-00-05-324
14931-001	27-00-04-264
14932-001	27-00-04-285
14934-001	27-00-04-159
14934-002	27-00-04-162
14934-003	27-00-04-160
14934-004	27-00-04-163
14935-001	27-00-04-195
14935-001	27-00-04-225
14935-002	27-00-04-199
14935-002	27-00-04-227
14938-001	27-00-04-165
14938-002	27-00-04-168
14938-003	27-00-04-166
14938-004	27-00-04-169
14940-002	27-00-02-502
14940-003	27-00-02-503
14950-001	78-20-01-333
14972-001	52-10-01-6
14972-002	52-10-01-12
14973-001	52-10-01-18
14973-002	52-10-01-24
14976-001	52-10-01-574
14976-001	52-10-01-580
14977-001	52-10-01-69
14977-002	52-10-01-75
14981-001	27-00-02-553

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
14982-001	27-00-02-556
14983-138	27-00-02-571
14993-001	27-00-04-207
14993-002	27-00-04-210
14-0050508-27	33-40-02-36
14-0050581-03	33-40-02-37
14-0050581-03	33-40-02-93
14-0050581-05	33-40-02-94
15050-101	25-10-08-54
15050-101	25-10-08-111
15050-102	25-10-08-57
15050-102	25-10-08-114
15050-103	25-10-08-60
15050-103	25-10-08-117
15050-104	25-10-08-126
1505-12	22-11-02-57
15062-001	25-10-04-153
15062-001	25-10-04-666
15065-001	57-50-01-135
15065-002	57-50-01-195
15065-003	57-50-01-228
15065-004	57-50-01-138
15069-001	78-20-01-261
15070-001	78-20-01-264
15070-003	78-20-01-265
15072-001	78-20-01-240
15073-001	78-20-01-243
15074-001	78-20-01-246
15077-001	78-20-01-330
15077-002	78-20-01-331
15077-003	78-20-01-332
15080-001	78-20-01-258
15095-001	57-40-01-550
15106-001	78-20-01-267
15108-001	31-10-01-165
15123-001	57-50-02-63
15123-001	57-50-02-210
15123-002	57-50-02-69
15123-002	57-50-02-213
15123-003	57-50-02-211
15123-004	57-50-02-214
15124-001	30-10-01-9
15124-002	30-10-01-27
15124-003	30-10-01-57
15124-004	30-10-01-78
15124-005	30-10-01-99
15124-006	30-10-01-117
15124-007	30-10-01-102
15124-008	30-10-01-120
15124-009	30-10-01-60
15124-010	30-10-01-81
15133-101	27-31-01-123
15133-101	27-31-01-183
15133-102	27-31-01-114
15135-101	30-05-01-339
15135-101	30-05-01-342
15135-102	30-05-01-345
15135-103	30-05-01-231
15135-104	30-05-01-210
15135-105	30-05-01-152
15135-106	30-05-01-166
15135-107	30-05-01-120
15135-108	30-05-01-105
15135-110	30-05-01-42
15135-112	30-05-01-63
15135-113	30-05-01-341
15135-114	30-05-01-340
15135-115	30-05-01-232
15163-006	30-05-01-396
15163-009	30-05-01-160
15163-009	30-05-01-222
15163-009	30-06-01-216
15163-010	30-05-01-243
15163-011	30-05-01-550
15163-012	30-05-01-517
15163-013	30-05-01-93
15163-014	30-05-01-378
15163-015	30-05-01-12
15163-018	27-31-01-189
15163-021	30-05-01-21
15163-022	30-60-01-63
15163-023	30-60-01-66
15163-024	30-05-01-387
15163-024	30-06-01-524
15163-025	30-05-01-393
15163-025	30-07-01-722
15163-027	30-05-01-399
15163-028	30-05-01-500
15163-028	30-06-01-554
15163-028	30-07-01-746
15164-001	30-05-01-186
15164-001	30-05-01-294
15164-001	30-05-01-312
15164-001	30-05-01-348
15164-001	30-06-01-27
15164-001	30-06-01-111
15164-001	30-06-01-273
15164-001	30-06-01-348
15164-001	30-06-01-635
15164-001	30-06-01-650
15164-001	30-06-01-662
15164-001	30-06-01-680
15164-001	30-07-01-536
15164-001	30-07-01-706
15164-001	30-07-01-811
15164-002	30-05-01-18
15164-002	30-05-01-66
15164-002	30-05-01-111
15164-002	30-05-01-123
15164-002	30-05-01-154
15164-002	30-05-01-168

PART NUMBER	CH–SEC–FIG–ITM
15164-002	30-05-01-213
15164-002	30-05-01-234
15164-002	30-05-01-261
15164-002	30-06-01-162
15164-002	30-06-01-200
15164-002	30-06-01-212
15164-002	30-06-01-224
15164-002	30-06-01-232
15164-002	30-06-01-243
15164-002	30-06-01-375
15164-002	30-06-01-387
15164-002	30-07-01-8
15164-002	30-07-01-41
15164-002	30-07-01-136
15164-002	30-07-01-171
15164-002	30-07-01-183
15164-002	30-07-01-198
15164-002	30-07-01-288
15164-002	30-07-01-512
15164-002	30-07-01-524
15164-002	30-07-01-584
15164-002	30-07-01-626
15164-002	30-07-01-662
15164-003	30-05-01-45
15164-003	30-06-01-99
15164-003	30-06-01-363
15164-004	30-07-01-48
15164-004	30-07-01-78
15164-004	30-07-01-92
15164-004	30-07-01-106
15164-004	30-07-01-114
15164-004	30-07-01-150
15164-004	30-07-01-216
15164-004	30-07-01-228
15164-004	30-07-01-240
15164-004	30-07-01-276
15164-004	30-07-01-548
15164-011	30-05-01-195
15164-011	30-05-01-285
15164-011	30-05-01-318
15164-011	30-05-01-357
15164-011	30-05-01-529
15164-011	30-05-01-574
15164-011	30-06-01-264
15164-011	30-06-01-327
15164-011	30-06-01-339
15164-011	30-60-01-114
15164-012	27-31-01-192
15164-012	30-07-01-569
15164-012	30-07-01-653
15164-012	30-07-01-725
15164-021	30-05-01-189
15164-021	30-05-01-297
15164-021	30-05-01-315
15164-021	30-05-01-351
15164-021	30-06-01-114
15164-021	30-06-01-276
15164-021	30-06-01-351
15164-021	30-06-01-638
15164-021	30-06-01-653
15164-021	30-06-01-665
15164-021	30-06-01-677
15164-021	30-07-01-539
15164-021	30-07-01-708
15164-021	30-07-01-814
15164-022	30-05-01-69
15164-022	30-05-01-114
15164-022	30-05-01-126
15164-022	30-05-01-156
15164-022	30-05-01-170
15164-022	30-05-01-216
15164-022	30-05-01-237
15164-022	30-05-01-264
15164-022	30-06-01-165
15164-022	30-06-01-202
15164-022	30-06-01-226
15164-022	30-06-01-234
15164-022	30-06-01-246
15164-022	30-06-01-378
15164-022	30-06-01-390
15164-022	30-07-01-10
15164-022	30-07-01-42
15164-022	30-07-01-138
15164-022	30-07-01-174
15164-022	30-07-01-186
15164-022	30-07-01-291
15164-022	30-07-01-515
15164-022	30-07-01-527
15164-022	30-07-01-587
15164-022	30-07-01-629
15164-022	30-07-01-665
15164-023	30-05-01-48
15164-023	30-06-01-102
15164-023	30-06-01-366
15164-024	30-07-01-49
15164-024	30-07-01-79
15164-024	30-07-01-94
15164-024	30-07-01-107
15164-024	30-07-01-116
15164-024	30-07-01-153
15164-024	30-07-01-219
15164-024	30-07-01-231
15164-024	30-07-01-243
15164-024	30-07-01-279
15164-024	30-07-01-551
15164-031	30-05-01-198
15164-031	30-05-01-288
15164-031	30-05-01-321
15164-031	30-05-01-360
15164-031	30-05-01-532
15164-031	30-05-01-569
15164-031	30-06-01-267
15164-031	30-06-01-330
15164-031	30-06-01-342

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
15164-032	27-31-01-195
15164-032	30-07-01-572
15164-032	30-07-01-656
15164-032	30-07-01-728
15164-041	30-06-01-644
15164-041	30-06-01-659
15164-041	30-06-01-671
15164-041	30-07-01-557
15164-041	30-07-01-711
15164-042	30-07-01-560
15164-042	30-07-01-581
15164-061	30-06-01-24
15164-082	30-06-01-210
15164-082	30-07-01-195
15164-091	30-05-01-192
15164-091	30-05-01-291
15164-091	30-05-01-309
15164-091	30-05-01-354
15164-091	30-05-01-535
15164-091	30-05-01-571
15164-091	30-06-01-117
15164-091	30-06-01-270
15164-091	30-06-01-279
15164-091	30-06-01-333
15164-091	30-06-01-345
15164-091	30-06-01-354
15164-091	30-06-01-641
15164-091	30-06-01-656
15164-091	30-06-01-668
15164-091	30-06-01-674
15164-091	30-07-01-542
15164-091	30-07-01-710
15164-091	30-07-01-817
15164-091	30-60-01-111
15164-092	27-31-01-198
15164-092	30-05-01-72
15164-092	30-05-01-117
15164-092	30-05-01-128
15164-092	30-05-01-158
15164-092	30-05-01-171
15164-092	30-05-01-219
15164-092	30-05-01-240
15164-092	30-05-01-267
15164-092	30-06-01-168
15164-092	30-06-01-204
15164-092	30-06-01-209
15164-092	30-06-01-228
15164-092	30-06-01-237
15164-092	30-06-01-249
15164-092	30-06-01-381
15164-092	30-06-01-393
15164-092	30-07-01-12
15164-092	30-07-01-43
15164-092	30-07-01-140
15164-092	30-07-01-177
15164-092	30-07-01-189
15164-092	30-07-01-201
15164-092	30-07-01-294
15164-092	30-07-01-518
15164-092	30-07-01-530
15164-092	30-07-01-575
15164-092	30-07-01-590
15164-092	30-07-01-632
15164-092	30-07-01-659
15164-092	30-07-01-668
15164-092	30-07-01-731
15164-093	30-05-01-51
15164-093	30-06-01-105
15164-093	30-06-01-369
15164-094	30-05-01-30
15164-094	30-07-01-50
15164-094	30-07-01-80
15164-094	30-07-01-96
15164-094	30-07-01-108
15164-094	30-07-01-118
15164-094	30-07-01-156
15164-094	30-07-01-222
15164-094	30-07-01-234
15164-094	30-07-01-246
15164-094	30-07-01-282
15164-094	30-07-01-554
15164-101	30-06-01-33
15164-101	30-07-01-297
15164-101	30-40-01-6
15164-102	30-06-01-208
15164-111	30-05-01-381
15164-111	30-05-01-520
15164-111	30-05-01-556
15164-111	30-60-01-75
15164-122	30-05-01-24
15164-132	30-05-01-27
15164-142	30-05-01-75
15164-143	30-05-01-15
15164-143	30-05-01-96
15164-152	30-05-01-73
15165-002	30-05-01-174
15165-002	30-06-01-252
15165-006	30-05-01-52
15165-007	30-05-01-270
15165-009	30-05-01-130
15165-009	30-06-01-170
15165-010	30-05-01-366
15165-011	30-05-01-369
15165-012	30-05-01-78
15165-013	30-05-01-54
15165-014	30-05-01-271
15165-015	30-05-01-175
15165-015	30-06-01-253
15166-001	30-05-01-33
15166-004	30-05-01-39
15173-001	25-10-05-580
15173-002	25-10-05-582
15173-003	25-10-05-584
15173-004	25-10-05-586

PART NUMBER	CH–SEC–FIG–ITM
15173-005	25-10-05-588
15173-006	25-10-05-590
15174-001	53-40-03-255
15174-002	53-40-03-258
15176-001	61-10-01-6
15176-102	61-10-01-129
15177-101	30-05-01-183
15177-101	30-06-01-261
15178-101	30-05-01-306
15178-102	30-05-01-282
15178-103	30-05-01-258
15178-104	30-05-01-330
15180-001	30-05-01-279
15181-001	55-10-01-9
15181-002	55-10-01-10
15191-001	53-20-03-6
15191-002	53-20-03-9
15196-001	71-60-01-168
15196-002	71-60-01-171
15196-002	71-60-01-324
15200-001	71-10-01-288
15200-002	71-10-01-291
15200-003	71-10-01-294
15200-004	71-10-01-297
15201-101	71-10-01-72
15202-001	71-10-01-342
15202-002	71-10-01-345
15203-001	71-10-01-327
15203-002	71-10-01-330
15204-102	33-40-01-186
15204-105	33-40-01-52
15205-001	33-40-01-9
15222-001	31-60-02-3
15222-002	31-60-02-6
15222-003	31-60-02-9
15222-004	31-60-02-10
15222-005	31-60-02-13
15222-006	31-60-02-15
15222-007	31-60-02-18
15222-008	31-60-02-21
15222-009	31-60-02-24
15222-011	31-60-02-25
15222-101	34-20-04-3
15222-102	34-20-04-4
15231-001	27-50-01-120
15242-001	53-40-03-54
15242-002	53-40-03-57
15245-001	28-20-02-39
15245-002	28-20-02-40
15246-001	28-20-02-30
15246-002	28-20-02-31
15246-003	28-20-02-32
15247-001	28-20-02-144
15260-001	31-50-01-9
15260-002	31-50-01-21
15260-003	31-50-01-27
15260-004	31-50-01-15
15260-005	31-50-01-33
15260-011	31-50-01-12
15260-012	31-50-01-24
15260-013	31-50-01-30
15260-014	31-50-01-18
15260-015	31-50-01-36
15269-001	30-05-01-2
15269-002	30-05-01-3
15274-001	55-10-01-12
15292-001	31-10-01-144
15292-001	31-10-01-307
15293-001	31-10-01-135
15294-002	34-20-03-24
15296-001	71-60-01-21
15300-001	53-50-01-18
15300-001	53-50-01-30
15300-002	53-50-01-21
15300-002	53-50-01-33
15301-001	21-20-01-34
15306-001	28-10-01-139
15306-001	28-10-01-189
15308-001	53-50-02-3
15308-002	53-50-02-6
15310-001	32-20-01-18
15310-002	32-20-01-21
15311-001	32-10-01-9
15311-002	32-10-01-27
15311-003	32-10-01-12
15311-004	32-10-01-30
15311-005	32-10-01-15
15311-006	32-10-01-33
15311-007	32-10-01-16
15311-008	32-10-01-34
15311-101	32-10-01-39
15311-102	32-10-01-48
15311-103	32-10-01-57
15311-104	32-10-01-66
15311-107	32-10-01-42
15311-108	32-10-01-51
15311-109	32-10-01-60
15311-110	32-10-01-69
15312-001	32-20-01-24
15320-101	30-60-01-129
15321-001	30-60-01-57
15321-002	30-60-01-58
15321-003	30-60-01-59
15322-001	30-60-01-60
15323-001	30-60-01-69
15325-001	30-60-01-117
15326-003	30-60-01-185
15330-001	31-10-01-15
15330-002	31-10-01-18
15330-003	31-10-01-21
15330-004	31-10-01-24
15330-007	31-10-01-25
15330-008	31-10-01-26
15333-001	30-05-01-526

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
15333-002	30-05-01-527
15333-003	30-05-01-528
15333-003	30-06-01-569
15333-004	30-06-01-572
15333-004	30-07-01-761
15334-001	11-20-01-69
15334-003	11-20-05-69
15334-004	11-20-04-45
15334-005	11-20-03-45
15334-006	11-20-05-72
15334-007	11-20-02-48
15334-008	11-20-06-54
15334-008	11-20-10-57
15334-008	11-20-12-57
15343-001	21-20-01-150
15343-001	21-20-01-602
15351-001	34-50-05-75
15352-001	57-50-02-114
15352-001	57-50-02-237
15353-001	57-50-02-93
15355-001	11-30-01-632
15359-001	27-00-04-297
15364-001	25-10-04-105
15364-002	25-10-04-96
15364-003	25-10-04-387
15364-004	25-10-04-396
15373-001	30-05-01-589
15373-002	30-05-01-590
15373-002	30-06-01-620
15373-003	30-05-01-591
15373-004	30-05-01-592
15373-005	30-06-01-623
15373-005	30-07-01-797
15388-001	30-05-01-562
15388-002	30-05-01-565
15388-003	30-05-01-566
15388-003	30-06-01-600
15388-004	30-06-01-599
15388-005	30-06-01-603
15388-005	30-07-01-786
15388-006	30-06-01-602
15388-006	30-07-01-785
15400-001	71-60-01-99
15401-001	30-05-01-81
15407-001	30-60-01-105
15407-002	30-60-01-108
15407-003	30-60-01-109
15415-001	73-30-01-6
15428-001	27-00-02-517
15428-001	28-20-02-228
15428-001	28-20-02-258
15435-001	11-30-05-3
15436-001	11-30-05-6
15450-001	71-10-01-15
15456-001	27-00-04-237
15457-001	27-00-04-240
15460-101	24-30-02-30
15460-101	71-00-03-506
15461-001	71-00-02-594
15462-001	71-00-02-662
15462-002	71-00-02-664
15462-003	71-00-02-668
15462-004	71-00-02-670
15462-005	71-00-03-572
15462-006	71-00-03-575
15462-007	71-00-02-672
15463-001	71-00-02-618
15463-002	71-00-02-620
15463-004	71-00-03-620
15463-005	71-00-02-622
15464-001	71-00-02-700
15464-001	71-00-03-647
15464-002	71-00-02-702
15464-002	71-00-03-650
15465-001	71-00-02-704
15465-001	71-00-03-653
15465-002	71-00-02-706
15465-002	71-00-03-656
15466-001	71-00-02-624
15466-001	71-00-03-623
15466-002	71-00-02-626
15467-001	71-00-03-309
15467-002	71-00-03-312
15468-008	71-00-03-93
15468-009	71-00-02-98
15468-010	71-00-03-94
15468-011	71-00-02-100
15468-013	71-00-02-102
15469-001	71-00-02-78
15469-002	71-00-02-80
15469-005	71-00-02-82
15469-007	71-00-02-84
15469-008	71-00-03-63
15469-009	71-00-02-86
15469-010	71-00-03-66
15469-011	71-00-02-88
15469-012	71-00-03-69
15469-013	71-00-02-90
15469-101	71-00-03-114
15470-001	71-00-02-218
15470-002	71-00-02-220
15470-004	71-00-03-192
15470-005	71-00-03-195
15470-006	71-00-02-222
15471-001	71-00-02-204
15471-002	71-00-02-208
15471-003	71-00-02-206
15471-005	71-00-03-174
15471-006	71-00-03-177
15471-007	71-00-02-210
15472-001	71-00-02-32
15472-002	71-00-02-34
15472-005	71-00-03-24
15472-006	71-00-02-36

PART NUMBER	CH–SEC–FIG–ITM
15472-007	71-00-03-27
15472-008	71-00-02-38
15472-009	71-00-03-30
15472-010	71-00-03-33
15472-011	71-00-02-40
15473-001	71-00-02-9
15473-002	71-00-02-10
15473-004	71-00-03-3
15473-005	71-00-02-12
15473-006	71-00-03-6
15473-007	71-00-02-14
15473-008	71-00-03-9
15473-009	71-00-03-12
15473-010	71-00-02-16
15473-101	71-00-03-48
15474-001	71-00-02-160
15474-002	71-00-02-162
15474-003	71-00-02-164
15474-004	71-00-02-166
15474-005	71-00-03-141
15474-006	71-00-03-144
15474-007	71-00-02-168
15475-001	71-00-02-146
15475-002	71-00-02-148
15475-003	71-00-02-150
15475-004	71-00-03-123
15475-005	71-00-03-126
15475-006	71-00-02-152
15476-001	71-00-02-190
15476-001	71-00-02-242
15476-001	71-00-03-156
15476-001	71-00-03-207
15476-002	71-00-02-192
15476-002	71-00-03-162
15476-003	71-00-02-194
15476-003	71-00-02-244
15476-003	71-00-03-159
15476-003	71-00-03-210
15476-004	71-00-03-165
15477-001	71-00-02-252
15477-003	71-00-02-254
15477-003	71-00-03-219
15477-004	71-00-02-256
15477-004	71-00-03-222
15478-001	71-00-02-262
15478-002	71-00-02-264
15478-004	71-00-02-266
15478-004	71-00-03-234
15478-005	71-00-02-268
15478-005	71-00-03-237
15479-001	71-00-02-270
15479-004	71-00-02-272
15479-004	71-00-03-240
15479-005	71-00-02-274
15479-005	71-00-03-243
15480-001	71-00-02-556
15480-002	71-00-02-558
15480-003	71-00-02-560
15480-003	71-00-03-360
15480-005	71-00-02-562
15480-005	71-00-03-363
15481-001	71-00-02-568
15481-002	71-00-02-570
15481-004	71-00-02-572
15481-004	71-00-03-372
15481-006	71-00-02-574
15481-006	71-00-03-375
15483-006	71-00-03-303
15483-007	71-00-03-306
15484-007	71-00-03-297
15484-008	71-00-03-300
15485-001	71-00-03-315
15485-002	71-00-03-318
15486-001	71-00-02-642
15486-002	71-00-02-644
15486-003	71-00-02-646
15486-004	71-00-02-648
15486-005	71-00-03-557
15486-006	71-00-03-560
15486-007	71-00-02-650
15487-001	71-00-02-320
15487-002	71-00-02-322
15487-004	71-00-02-324
15487-005	71-00-02-328
15487-006	71-00-02-326
15487-007	71-00-03-282
15487-008	71-00-03-285
15487-009	71-00-02-330
15488-001	71-00-02-696
15488-001	71-00-03-629
15488-002	71-00-02-698
15488-002	71-00-03-632
15489-001	71-00-02-608
15489-002	71-00-02-610
15489-004	71-00-03-611
15489-005	71-00-02-612
15490-001	71-00-02-596
15490-002	71-00-02-598
15490-002	71-00-03-662
15490-003	71-00-02-600
15490-003	71-00-03-665
15491-001	71-00-03-354
15491-002	71-00-03-357
15494-001	28-20-02-141
15496-101	28-20-02-183
15496-102	28-20-02-45
15496-103	28-20-02-207
15496-104	28-20-02-186
15502-001	21-20-01-156
15502-001	21-20-01-605
15502-001	21-20-01-674
15515-001	71-00-01-30
15518-001	11-20-01-72
15518-002	11-20-05-75

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
15518-003	11-20-04-48
15518-004	11-20-03-48
15518-005	11-20-02-51
15518-006	11-20-06-57
15518-006	11-20-10-63
15518-006	11-20-12-63
15519-001	25-10-02-21
15524-001	61-20-01-6
15524-101	61-20-01-23
15546-002	71-20-01-108
15546-003	71-20-01-111
15566-001	32-20-01-84
15566-102	32-20-01-96
15567-001	32-20-01-9
15569-001	27-00-04-42
15569-001	27-00-04-201
15569-001	27-00-04-228
15569-003	57-40-01-373
15587-001	76-10-01-36
15587-001	76-10-01-40
15587-002	76-10-01-39
15588-001	76-10-01-60
15588-001	76-10-01-202
15589-001	76-10-01-21
15592-001	11-20-01-45
15592-002	11-20-01-48
15592-003	11-20-05-45
15592-003	11-20-06-39
15592-003	11-20-10-39
15592-003	11-20-12-39
15592-004	11-20-05-48
15592-004	11-20-06-42
15592-004	11-20-10-42
15592-004	11-20-12-42
15592-005	11-20-01-51
15592-006	11-20-01-54
15592-007	11-20-04-30
15592-008	11-20-04-33
15592-009	11-20-03-30
15592-010	11-20-03-33
15592-011	11-20-02-33
15592-012	11-20-02-36
15648-003	11-20-01-15
15648-004	11-20-01-12
15648-006	11-20-05-18
15648-009	11-20-04-6
15648-010	11-20-03-6
15648-012	11-20-02-9
15648-014	11-20-04-9
15648-016	11-20-03-9
15648-018	11-20-02-12
15648-020	11-20-06-6
15648-020	11-20-10-6
15648-020	11-20-12-6
15649-001	34-50-03-48
15649-002	34-50-03-36
15650-002	27-30-02-145
15660-001	27-10-03-46
15669-001	31-10-01-177
15669-002	31-10-01-180
15671-001	71-60-01-48
15671-002	71-60-01-51
15672-001	71-60-01-135
15691-001	78-20-01-46
15692-001	78-20-01-52
15693-001	78-20-01-55
15694-001	78-20-01-61
15695-001	78-20-01-31
15696-001	78-20-01-34
15698-001	71-20-01-213
15708-001	71-60-01-15
15708-002	71-60-01-18
15708-003	71-60-01-19
15710-001	71-60-01-36
15735-001	11-30-01-722
15735-002	11-30-05-9
15735-002	11-30-06-9
15735-003	11-30-04-12
15735-003	11-30-10-9
15735-004	11-30-03-12
15735-005	11-30-02-12
15735-006	11-30-01-725
15735-007	11-30-05-12
15735-007	11-30-06-12
15735-008	11-30-04-13
15735-008	11-30-10-12
15735-009	11-30-03-13
15735-010	11-30-02-13
15735-011	11-30-11-12
15735-011	11-30-13-12
15735-012	11-30-11-15
15735-012	11-30-13-15
15736-001	11-20-01-18
15760-001	71-60-01-246
15764-003	34-50-03-51
15778-001	76-10-01-126
15785-002	61-10-01-261
15786-001	25-10-08-6
15788-001	27-00-03-81
15788-002	27-00-03-84
15798-003	30-05-01-567
15798-004	30-05-01-568
15798-102	30-60-01-140
15798-104	30-60-01-161
15831-001	71-20-01-171
15832-001	61-10-01-273
15832-002	61-10-01-276
15848-001	79-30-01-21
15862-001	71-10-01-375
15868-001	11-30-01-746
15868-002	11-30-02-24
15871-001	27-10-03-120
15872-001	71-00-02-106
15872-002	71-00-02-108

PART NUMBER	CH–SEC–FIG–ITM
15872-004	71-00-02-110
15872-005	71-00-02-112
15872-005	71-00-03-96
15873-001	71-00-02-130
15873-002	71-00-02-132
15873-002	71-00-03-108
15873-005	71-00-02-134
15873-005	71-00-03-111
15874-001	71-00-02-122
15874-002	71-00-02-124
15874-002	71-00-03-102
15874-005	71-00-02-126
15874-005	71-00-03-105
15875-001	71-00-02-236
15875-002	71-00-02-238
15875-002	71-00-03-201
15876-001	71-00-02-228
15876-002	71-00-02-230
15876-003	71-00-02-232
15876-003	71-00-03-204
15877-001	71-00-02-44
15877-002	71-00-02-46
15877-005	71-00-02-48
15877-005	71-00-03-45
15878-001	71-00-02-62
15878-001	71-00-03-36
15879-001	71-00-02-68
15879-001	71-00-03-39
15879-002	71-00-02-70
15879-002	71-00-03-42
15880-001	71-00-02-184
15880-002	71-00-02-186
15880-003	71-00-03-150
15881-001	71-00-02-174
15881-002	71-00-02-176
15881-003	71-00-02-178
15881-004	71-00-02-180
15881-004	71-00-03-153
15883-001	71-00-02-54
15883-001	71-00-02-116
15883-001	71-00-02-292
15883-001	71-00-02-386
15883-001	71-00-03-249
15883-001	71-00-03-321
15883-002	71-00-02-56
15883-002	71-00-03-252
15883-002	71-00-03-324
15884-001	71-00-02-52
15884-001	71-00-02-118
15885-002	71-00-02-282
15885-002	71-00-03-246
15887-001	71-00-02-300
15887-002	71-00-02-302
15887-002	71-00-03-255
15888-001	71-00-02-304
15888-002	71-00-02-306
15888-003	71-00-02-308
15888-003	71-00-03-258
15890-001	71-00-02-580
15890-001	71-00-03-381
15891-002	71-00-02-576
15891-003	71-00-02-578
15891-003	71-00-03-378
15892-001	71-00-02-342
15892-002	71-00-02-344
15892-002	71-00-03-351
15893-001	71-00-02-690
15893-002	71-00-02-692
15893-002	71-00-03-578
15894-001	71-00-02-688
15896-001	71-00-02-358
15896-001	71-00-03-348
15897-001	71-00-02-380
15897-001	71-00-03-333
15898-001	71-00-02-384
15898-001	71-00-03-336
15899-001	71-00-02-350
15899-001	71-00-02-364
15899-001	71-00-03-327
15899-002	71-00-02-352
15899-002	71-00-03-330
15902-001	71-00-02-368
15902-001	71-00-03-339
15903-001	71-00-02-372
15903-001	71-00-03-342
15903-002	71-00-02-374
15903-002	71-00-03-345
15904-001	71-00-02-708
15904-001	71-00-03-659
15905-001	71-00-02-628
15905-001	71-00-02-636
15905-001	71-00-03-626
15906-002	71-00-02-582
15906-003	71-00-02-584
15906-003	71-00-03-384
15914-001	24-30-10-30
15918-001	11-30-01-644
15918-002	11-30-01-662
15918-003	11-30-01-686
15919-001	11-30-01-117
15919-002	11-30-01-120
15919-003	11-30-01-126
15919-004	11-30-01-129
15919-005	11-30-01-132
15919-006	11-30-01-135
15919-007	11-30-01-138
15919-008	11-30-01-141
15946-001	55-10-01-18
15947-001	55-10-01-21
15963-001	34-40-03-3
15963-201	34-40-03-21
15963-202	34-40-03-24
15963-203	34-40-03-27
15966-050	34-50-03-6

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
15966-101	34-50-03-12
15977-003	34-50-03-57
16027-002	53-40-08-6
16027-003	53-40-08-9
16048-001	25-10-01-96
16070-002	27-20-02-7
16118-001	34-50-06-27
16118-003	34-50-06-30
16118-004	34-50-06-33
16119-001	34-50-06-48
16119-003	34-50-06-51
16121-001	34-50-06-3
16123-001	27-30-01-45
16124-001	27-30-01-66
16125-001	27-30-01-36
16126-001	27-30-01-57
16127-001	34-50-02-54
16127-002	34-50-06-123
16168-001	25-10-04-390
16180-001	32-10-01-144
16198-001	25-10-08-99
16198-002	25-10-08-102
16284-001	22-11-03-3
16284-002	22-11-03-18
16284-101	22-11-03-16
16284-101	22-11-03-33
16330-001	25-00-01-6
16330-002	25-00-01-7
16344-003	11-30-04-6
16344-003	11-30-10-3
16344-004	11-30-03-6
16344-006	11-30-02-6
16344-007	11-30-06-4
16344-007	11-30-11-6
16344-007	11-30-13-6
16344-008	11-30-04-7
16344-009	11-30-03-7
16344-010	11-30-02-7
16344-011	11-30-06-3
16344-011	11-30-11-3
16344-011	11-30-13-3
16345-001	11-30-04-9
16345-001	11-30-10-15
16345-002	11-30-03-9
16345-003	11-30-02-9
16350-001	71-00-02-674
16350-003	71-00-03-593
16381-001	24-30-08-30
16469-001	32-10-02-244
16470-004	24-30-04-270
16472-001	24-30-08-9
16494-002	27-50-01-60
16528-001	25-10-04-567
16528-002	25-10-04-570
16528-003	25-10-04-576
16528-004	25-10-04-573
16528-005	25-10-04-579
16528-006	25-10-04-582
16528-007	25-10-04-585
16528-008	25-10-04-588
16528-009	25-10-04-589
16528-010	25-10-04-590
16528-011	25-10-04-591
16528-012	25-10-04-592
16528-013	25-10-04-593
16528-014	25-10-04-594
16528-015	25-10-04-595
16528-016	25-10-04-596
16529-001	25-10-04-339
16529-002	25-10-04-342
16529-003	25-10-04-345
16529-004	25-10-04-346
16544-001	27-50-01-54
16544-002	27-50-01-57
16546-001	71-20-01-112
16578-001	77-20-01-39
16579-001	77-20-01-9
16579-002	77-20-01-12
16600-001	24-30-04-3
16600-011	24-30-03-11
16600-011	24-30-04-4
16604-001	24-30-04-15
16604-001	24-30-05-48
16604-003	24-30-05-51
16607-001	24-30-04-93
16609-001	24-30-04-141
16613-001	24-30-05-57
16615-001	24-30-04-21
16615-001	24-30-05-66
16615-004	24-30-05-69
16615-010	24-30-04-36
16615-010	24-30-05-81
16615-020	24-30-04-51
16615-020	24-30-05-93
16615-030	24-30-04-66
16615-031	24-30-05-105
16653-001	71-00-02-678
16653-001	71-00-03-599
16653-002	71-00-02-680
16653-002	71-00-03-602
16665-001	34-50-06-6
16665-002	34-50-06-9
16665-003	34-50-06-12
16665-004	34-50-06-13
16665-501	34-50-06-72
16665-502	34-50-06-75
16667-001	57-50-01-165
16668-001	57-50-01-201
16669-001	57-50-01-234
16675-001	27-50-01-45
16675-002	27-50-01-48
16675-003	27-50-01-51
16677-001	57-50-01-168
16677-002	57-50-01-171

PART NUMBER	CH–SEC–FIG–ITM
16678-001	53-20-03-33
16678-001	53-20-03-90
16684-001	57-50-01-183
16684-001	57-50-01-216
16684-001	57-50-01-249
16688-001	24-30-05-162
16692-001	77-40-02-3
16692-002	77-40-02-6
16701-001	11-30-01-144
16701-002	11-30-01-147
16701-003	11-30-01-150
16701-004	11-30-01-153
16701-005	11-30-01-156
16701-006	11-30-01-159
16701-007	11-30-01-162
16701-008	11-30-01-165
16701-009	11-30-01-168
16718-002	55-20-01-111
16718-003	55-20-01-114
16718-004	55-20-01-117
16720-002	55-20-01-90
16720-003	55-20-01-93
16720-004	55-20-01-96
16728-101	34-40-02-27
16728-102	34-40-02-42
16728-103	34-40-02-102
16738-101	57-50-01-162
16738-102	57-50-01-198
16738-103	57-50-01-231
16763-001	34-40-02-75
16763-001	34-40-04-36
16763-002	23-20-01-6
16763-002	23-20-01-57
16763-002	34-40-04-90
16771-002	24-30-05-135
16775-001	53-40-07-7
16775-002	53-40-07-8
16790-001	57-50-02-94
16790-001	57-50-02-226
16814-001	57-40-01-640
16814-002	57-40-01-641
16815-001	57-40-01-589
16815-002	57-40-01-590
16816-001	57-40-01-607
16816-002	57-40-01-608
16817-002	57-40-01-571
16817-003	57-40-01-572
16818-002	57-40-01-619
16818-003	57-40-01-620
16861-001	51-80-01-36
16870-001	27-10-02-96
16875-001	57-50-02-159
16875-002	57-50-02-162
16875-003	57-50-02-160
16875-004	57-50-02-163
16876-001	27-10-02-87
16881-001	57-40-01-697
16881-002	57-40-01-698
16891-001	57-50-01-15
16891-002	57-50-01-30
16892-002	57-50-01-186
16892-003	57-50-01-187
16893-002	57-50-01-219
16893-003	57-50-01-220
16894-002	57-50-01-252
16894-003	57-50-01-253
16915-002	57-10-01-213
16919-002	57-30-01-300
16919-002	57-30-01-303
16919-002	57-30-01-312
16919-002	57-30-01-315
16921-002	57-30-01-288
16921-002	57-30-01-291
16922-002	57-30-01-237
16922-002	57-30-01-339
16922-002	57-30-01-342
16923-001	57-30-01-375
16923-002	57-30-01-378
16937-001	32-10-02-48
16937-002	32-10-02-49
16939-002	32-10-02-30
16940-001	32-10-02-262
16945-001	57-40-01-658
16947-001	32-10-02-186
16950-001	57-10-01-273
16970-101	34-50-06-141
16978-001	27-50-01-204
16982-001	22-11-02-90
16985-001	27-50-01-118
16985-002	27-50-01-119
16989-001	11-30-01-24
16989-002	11-30-01-21
16989-011	11-30-01-39
16989-012	11-30-01-36
16989-021	11-30-01-51
16990-101	24-30-01-90
16997-001	21-20-01-728
17031-001	22-11-02-75
17032-001	22-11-02-78
17034-001	27-20-01-69
17034-002	27-20-01-45
17035-001	27-20-01-57
17035-002	27-20-01-36
17048-001	21-50-01-701
17054-001	22-11-02-102
17055-001	22-11-02-96
17055-001	22-12-02-141
17075-020	25-10-01-521
17075-021	25-10-01-524
17075-040	25-10-01-527
17075-041	25-10-01-530
17075-060	25-10-01-533
17075-061	25-10-01-536
17075-080	25-10-01-539

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
17075-081	25-10-01-542
17079-001	32-10-02-24
17080-001	32-10-02-27
17091-001	11-30-01-171
17091-002	11-30-01-174
17091-003	11-30-01-180
17091-004	11-30-01-183
17091-005	11-30-01-189
17091-006	11-30-01-192
17091-007	11-30-01-198
17091-008	11-30-01-201
17091-009	11-30-01-204
17091-010	11-30-01-186
17091-011	11-30-01-195
17091-012	11-30-01-177
17091-013	11-30-01-234
17091-014	11-30-01-216
17091-015	11-30-01-225
17091-016	11-30-01-207
17091-017	11-30-01-237
17091-018	11-30-01-219
17091-019	11-30-01-228
17091-020	11-30-01-210
17091-021	11-30-01-240
17091-022	11-30-01-222
17091-023	11-30-01-231
17091-024	11-30-01-213
17091-025	11-30-01-270
17091-026	11-30-01-252
17091-027	11-30-01-261
17091-028	11-30-01-243
17091-029	11-30-01-273
17091-030	11-30-01-255
17091-031	11-30-01-264
17091-032	11-30-01-246
17091-033	11-30-01-276
17091-034	11-30-01-258
17091-035	11-30-01-267
17091-036	11-30-01-249
17093-001	11-30-01-749
17107-001	53-20-01-207
17107-001	53-20-01-210
17122-101	32-10-02-71
17122-103	32-42-02-4
17125-001	53-20-01-108
17125-001	53-20-01-111
17125-001	53-20-01-114
17127-101	25-10-07-9
17127-102	25-10-07-12
17127-103	25-10-07-21
17127-104	25-10-07-24
17127-105	25-10-07-27
17127-106	25-10-07-30
17127-107	25-10-07-66
17127-108	25-10-07-69
17127-109	25-10-07-114
17127-110	25-10-07-117
17127-111	25-10-07-48
17127-112	25-10-07-57
17127-113	25-10-07-129
17127-114	25-10-07-87
17127-115	25-10-07-78
17127-116	25-10-07-105
17127-117	25-10-07-96
17127-118	25-10-07-132
17127-119	25-10-07-33
17127-120	25-10-07-35
17135-001	25-10-06-557
17135-002	25-10-06-560
17137-001	11-30-01-3
17137-002	11-30-04-24
17137-003	11-30-03-24
17137-004	11-30-02-27
17140-001	33-40-02-6
17140-002	33-40-02-15
17140-005	33-40-02-9
17140-006	33-40-02-18
17140-007	33-40-02-11
17140-008	33-40-02-20
17140-101	33-40-02-73
17144-001	24-30-01-57
17174-001	31-30-01-12
17174-002	31-30-01-9
17185-001	57-40-01-659
17190-100	25-60-02-3
17190-101	25-60-02-4
17190-120	25-60-02-33
17190-121	25-60-02-36
17190-140	25-60-02-135
17190-180	25-60-02-93
17190-200	25-60-02-60
17190-202	25-60-02-63
17190-220	25-60-02-6
17190-221	25-60-02-7
17190-312	25-60-02-96
17190-313	25-60-02-97
17190-342	25-60-02-108
17190-343	25-60-02-111
17190-352	25-60-02-114
17191-101	25-60-02-67
17191-102	25-60-02-69
17205-001	32-10-02-147
17205-002	32-10-02-149
17298-001	33-40-01-210
17298-001	33-40-01-384
17299-001	33-40-01-213
17299-001	33-40-01-387
17302-001	28-20-01-309
17304-002	28-20-01-352
17306-001	28-20-01-396
17307-001	28-20-01-518
17308-001	28-20-01-524
17309-001	28-20-01-258
17310-001	28-20-01-261

PART NUMBER	CH–SEC–FIG–ITM
17313-001	28-20-01-264
17313-001	28-20-01-267
17313-002	28-20-01-265
17313-002	28-20-01-268
17314-001	28-20-01-294
17315-001	28-20-01-295
17315-001	28-20-01-296
17315-002	28-20-01-297
17316-001	28-20-01-306
17317-001	28-20-01-554
17318-001	28-20-01-560
17319-001	28-10-01-216
17320-001	28-20-01-500
17320-002	28-20-01-503
17323-001	28-20-01-512
17323-001	28-20-01-533
17324-001	28-20-01-539
17332-001	28-20-01-515
17332-001	28-20-01-536
17345-001	32-42-01-339
17345-002	32-42-01-345
17346-001	32-42-01-360
17346-002	32-42-01-361
17350-101	30-06-01-96
17350-102	30-06-01-222
17350-103	30-06-01-159
17350-104	30-06-01-198
17350-105	30-06-01-230
17350-106	30-06-01-108
17350-108	30-06-01-336
17350-109	30-06-01-240
17350-110	30-06-01-372
17350-111	30-06-01-384
17350-112	30-06-01-360
17351-001	30-06-01-130
17351-002	30-06-01-132
17351-102	30-06-01-141
17351-103	30-06-01-144
17351-104	30-06-01-153
17354-001	30-06-01-288
17354-002	30-06-01-289
17355-002	30-06-01-300
17355-002	30-07-01-258
17362-001	51-80-01-9
17364-001	30-06-01-536
17366-001	11-20-01-21
17366-002	11-20-01-22
17367-001	51-80-01-15
17367-002	51-80-01-18
17368-001	51-80-01-12
17369-001	51-80-01-3
17369-002	51-80-01-6
17371-001	30-06-01-206
17372-001	30-06-01-214
17378-001	57-10-01-183
17378-002	57-10-01-184
17378-003	57-10-01-185
17380-101	30-06-01-303
17380-102	30-06-01-306
17380-103	30-06-01-309
17380-104	30-06-01-312
17380-105	30-06-01-75
17382-005	30-06-01-683
17382-005	30-07-01-363
17382-006	30-07-01-364
17382-501	30-06-01-686
17382-511	30-06-01-687
17382-511	30-07-01-367
17382-601	30-07-01-368
17383-001	30-06-01-93
17383-001	30-07-01-348
17384-001	30-06-01-120
17384-001	30-07-01-304
17385-001	57-20-01-81
17385-002	57-20-01-84
17386-001	30-06-01-21
17386-001	30-07-01-303
17387-001	30-06-01-9
17388-001	21-40-02-99
1739275-02	28-20-03-165
1739275-09	28-20-03-328
17401-001	32-42-01-312
1740235-04	28-20-03-370
1740235-08	28-20-03-144
1740235-08	28-20-03-337
17402-002	32-42-01-315
17417-002	21-60-03-6
17419-002	21-60-03-39
17421-001	57-40-01-685
1742224-12	28-20-03-141
1742226-04	28-20-03-334
1742240-01	28-20-03-153
1742241-02	28-20-03-346
1742243-04	28-20-03-156
1742243-04	28-20-03-349
17422-001	57-40-01-682
17422-002	57-40-01-683
17427-002	21-60-03-3
17430-101	27-31-01-186
17433-002	21-40-02-87
17433-003	21-40-02-90
17433-004	21-40-02-93
17433-005	21-40-02-94
17439-001	21-60-03-348
17440-101	34-10-01-668
17440-101	34-10-01-766
17440-301	34-10-01-669
17446-002	21-40-02-186
17468-101	34-50-06-147
17472-001	32-20-01-133
17472-001	32-20-01-174
17472-101	32-20-01-135
17472-101	32-20-01-177
17472-102	32-20-01-141

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
17472-102	32-20-01-183
17473-001	32-20-01-120
17481-001	32-20-02-103
17499-002	76-10-01-256
17517-001	31-30-02-3
17518-002	31-30-03-3
17518-005	31-30-03-4
1753014-01	28-20-03-367
17531-001	32-42-01-342
17531-002	32-42-01-348
17540-004	71-00-02-734
17540-004	71-00-03-527
17540-007	71-00-02-736
17540-007	71-00-03-530
17541-003	71-00-02-724
17541-003	71-00-03-512
17541-006	71-00-02-726
17541-006	71-00-03-515
17542-003	71-00-02-728
17542-003	71-00-03-518
17542-006	71-00-02-730
17542-006	71-00-03-521
17542-007	71-00-02-732
17542-007	71-00-03-524
17544-002	71-00-03-261
17544-003	71-00-03-264
17545-001	71-00-03-267
17545-002	71-00-03-270
17547-004	71-00-02-714
17547-004	71-00-03-387
17547-006	71-00-02-716
17547-006	71-00-03-390
17547-007	71-00-02-718
17547-007	71-00-03-393
17556-001	21-50-01-285
17556-001	21-50-01-294
17556-002	21-50-01-291
17557-001	21-50-01-3
17557-101	21-50-01-282
17557-101	21-50-01-288
17557-102	21-50-01-261
17557-103	21-50-01-33
17557-104	21-50-01-24
17557-105	21-50-01-186
17557-106	21-50-01-189
17557-108	21-50-01-240
17557-109	21-50-01-213
17557-110	21-50-01-216
17561-006	21-50-01-513
17561-006	21-50-01-561
17561-006	21-50-01-737
17561-006	21-50-01-743
17561-008	21-50-01-222
17561-008	21-50-01-510
17561-008	21-50-01-731
17561-010	21-50-01-225
17561-010	21-50-01-511
17561-010	21-50-01-551
17573-001	27-50-01-117
17578-001	52-10-01-587
17578-002	52-10-01-588
17578-003	52-10-01-593
17578-004	52-10-01-596
17580-001	25-10-09-3
17581-001	52-10-01-589
17581-002	52-10-01-590
17581-003	52-10-01-599
17581-004	52-10-01-602
17582-001	52-10-02-572
17582-002	52-10-02-575
17582-003	52-10-02-578
17582-004	52-10-02-581
17582-005	52-10-03-99
17582-006	52-10-03-102
17582-007	52-10-01-605
17582-007	52-10-02-582
17582-008	52-10-01-608
17582-008	52-10-02-583
17582-009	52-10-02-586
17582-009	52-10-03-100
17582-010	52-10-02-589
17582-010	52-10-03-103
17618-001	11-30-01-593
17618-002	11-30-01-596
17618-011	11-30-01-581
17618-012	11-30-01-584
1763759-01	28-20-03-168
1763759-01	28-20-03-331
17663-001	27-31-01-39
17667-002	24-30-01-60
17667-003	24-30-01-61
17668-001	24-30-07-61
17672-001	27-00-03-12
17672-002	27-00-03-21
17672-005	27-00-03-15
17672-006	27-00-03-24
17674-001	27-00-03-36
17674-002	27-00-03-45
17674-005	27-00-03-39
17674-006	27-00-03-48
17674-009	27-00-03-40
17674-010	27-00-03-49
17676-001	27-00-03-63
17676-002	27-00-03-72
17677-001	27-00-03-126
17678-001	27-00-03-135
17714-001	27-50-01-207
17714-002	27-50-01-210
17838-001	33-10-01-34
17838-002	33-10-01-35
17921-001	28-20-02-4
17980-001	28-20-01-93
17981-001	28-20-01-75
17982-001	34-10-01-330

PART NUMBER	CH–SEC–FIG–ITM
17982-001	34-10-01-834
17985-001	28-20-01-90
17985-001	28-20-01-108
17986-001	28-20-01-78
17986-001	28-20-01-96
17987-001	28-20-01-81
17987-001	28-20-01-99
17987-001	28-20-01-342
17987-001	28-20-01-360
17992-001	24-30-05-321
17996-001	25-10-04-708
17996-002	25-10-04-732
17996-003	25-10-04-733
17996-004	25-10-04-734
18033-101	57-30-01-258
18033-101	57-30-01-270
18033-101	57-30-01-285
18033-101	57-30-01-336
18033-101	57-30-01-357
18033-101	57-30-01-372
18043-001	57-40-01-580
18044-001	27-50-01-142
18044-002	27-50-01-143
18044-003	27-50-01-144
18044-004	27-50-01-141
18044-005	27-50-01-145
18044-006	27-50-01-146
18044-007	27-50-01-147
18044-008	27-50-01-148
18051-002	28-10-01-63
18051-201	28-10-01-85
18051-203	28-10-01-84
18052-001	30-06-01-66
18052-001	30-07-01-351
18052-002	30-07-01-352
18052-003	30-07-01-353
18052-101	30-07-01-354
18052-102	30-07-01-357
18052-103	30-07-01-360
18052-201	30-07-01-355
18052-202	30-07-01-358
18052-301	30-07-01-356
18052-302	30-07-01-359
18059-001	34-10-01-515
18059-002	34-10-01-518
18059-002	34-10-01-819
18063-001	53-50-03-15
18063-002	53-50-03-18
18063-003	53-50-03-21
18063-004	53-50-03-24
18063-005	53-50-03-22
18063-006	53-50-03-27
18096-001	32-10-02-237
18096-002	32-10-02-238
18096-003	32-10-02-239
18096-004	32-10-02-240
18097-015	32-10-02-219
18097-030	32-10-02-222
18097-040	32-10-02-225
18097-050	32-10-02-228
18097-063	32-10-02-231
18101-001	32-20-02-9
18101-002	32-20-02-10
18101-003	32-20-02-11
18101-004	32-20-02-12
18103-001	32-10-02-135
18103-002	32-10-02-136
18103-003	32-10-02-137
18104-001	32-20-02-96
18105-002	32-20-02-99
18108-001	32-42-01-520
18110-001	32-20-02-82
18110-001	32-20-02-83
18137-001	32-10-01-18
18137-002	32-10-01-36
18137-003	32-10-01-19
18137-004	32-10-01-37
18137-101	32-10-01-45
18137-102	32-10-01-54
18137-105	32-10-01-46
18137-106	32-10-01-55
18138-001	32-10-01-63
18138-002	32-10-01-72
18138-003	32-10-01-64
18138-004	32-10-01-73
18139-001	32-10-01-153
18139-002	32-10-01-162
18145-001	51-80-01-57
18145-002	51-80-01-60
18146-001	51-80-01-63
18146-002	51-80-01-69
18148-001	34-10-01-695
18148-002	34-10-01-696
18170-101	28-10-01-195
18172-001	28-20-01-339
18172-001	28-20-01-357
18177-001	30-06-01-399
18178-001	30-06-01-396
18183-001	30-06-01-36
18183-002	30-06-01-39
18184-001	30-06-01-45
18192-001	28-20-01-312
18192-001	28-20-01-315
18200-001	52-10-02-633
18200-002	52-10-02-636
18200-003	52-10-01-644
18200-003	52-10-02-639
18200-003	52-10-03-138
18200-004	52-10-03-139
18200-102	52-10-01-649
18200-102	52-10-02-643
18200-102	52-10-03-142
18201-001	53-20-02-36
18201-002	53-20-02-63

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
18201-003	53-20-02-40
18201-004	53-20-02-67
18207-001	57-40-01-691
18218-001	51-80-01-111
18218-001	51-80-01-114
18229-001	51-80-01-99
18229-002	51-80-01-102
18231-001	51-80-01-105
18231-002	51-80-01-108
18267-003	24-30-06-132
18268-003	24-30-06-136
18273-001	11-20-01-78
18276-001	21-60-03-267
18277-002	21-60-03-264
18278-001	33-40-02-132
18278-002	30-80-01-9
18278-002	33-40-02-133
18278-002	30-80-04-9
18285-001	33-40-02-121
18285-002	33-40-02-126
18288-001	21-40-02-36
18289-001	21-20-01-695
18290-301	21-40-02-75
18290-302	21-40-02-42
18290-303	21-40-02-48
18290-304	21-40-02-57
18290-305	21-40-02-66
18293-001	71-60-01-174
18303-001	32-20-01-117
18303-002	32-20-01-156
18311-001	53-40-05-24
18317-001	57-20-01-72
18317-002	57-20-01-75
18317-005	57-20-01-73
18317-006	57-20-01-76
18317-007	57-20-01-74
18317-008	57-20-01-77
18319-001	57-30-01-198
18319-002	57-30-01-207
18322-001	21-20-01-701
18324-001	57-40-01-634
18324-001	57-40-01-652
18324-002	57-40-01-595
18324-003	57-40-01-673
18324-004	57-40-01-674
18331-001	28-20-03-281
18336-002	28-20-03-286
18337-001	28-20-03-292
18343-001	55-20-01-120
18343-002	55-20-01-99
18343-003	55-20-01-100
18343-004	55-20-01-121
18346-002	28-10-01-90
18347-001	11-20-05-19
18347-002	11-20-04-12
18347-003	11-20-03-12
18347-004	11-20-02-15
18347-006	11-20-06-9
18347-006	11-20-10-9
18347-006	11-20-12-9
18349-001	27-10-03-148
18350-002	28-20-01-370
18354-001	30-06-01-3
18355-001	30-10-01-12
18355-002	30-10-01-30
18355-007	30-10-01-15
18355-008	30-10-01-33
18358-001	57-30-01-225
18358-001	57-30-01-228
18361-001	32-10-01-207
18362-001	32-10-01-210
18371-001	28-20-03-263
18371-001	28-20-03-277
18378-001	28-20-03-295
18378-002	28-20-03-298
18378-003	28-20-03-299
18380-001	32-20-02-94
18389-001	25-60-01-102
18396-001	71-10-01-111
18396-002	71-10-01-112
18396-003	71-10-01-113
18396-004	71-10-01-114
18396-005	71-10-01-115
183-00100	32-42-02-102
18403-001	11-20-09-3
18405-001	11-20-09-6
18407-001	11-20-09-12
18407-002	11-20-09-15
18408-001	11-20-09-39
18408-002	11-20-09-42
18411-001	11-20-09-18
18411-002	11-20-09-19
18411-003	11-20-09-20
18412-001	11-20-09-37
18412-002	11-20-09-38
18413-001	11-20-09-21
18413-002	11-20-09-24
18414-001	11-20-09-27
18414-002	11-20-09-30
18415-001	11-20-09-45
18416-001	11-20-09-33
18416-002	11-20-09-34
18419-001	11-20-09-51
18423-005	11-30-04-8
18423-005	11-30-10-6
18423-006	11-30-03-8
18423-007	11-30-02-8
18456-001	32-42-01-513
18457-003	76-10-01-259
18457-003	76-10-01-265
18458-001	11-20-02-54
18458-002	11-20-05-78
18458-003	11-20-04-51
18458-004	11-20-03-51

PART NUMBER	CH–SEC–FIG–ITM
18458-005	11-20-09-54
18458-006	11-20-06-60
18458-006	11-20-10-66
18458-006	11-20-12-66
18460-001	32-10-02-150
18461-001	21-20-01-680
18466-001	51-80-01-75
18470-001	34-10-01-671
18472-001	11-30-01-647
18472-002	11-30-01-665
18472-003	11-30-01-689
18473-001	11-30-01-279
18473-002	11-30-01-282
18473-003	11-30-01-285
18473-004	11-30-01-288
18473-005	11-30-01-291
18473-006	11-30-01-294
18473-007	11-30-01-297
18473-008	11-30-01-300
18473-009	11-30-01-303
18473-013	11-30-01-324
18473-014	11-30-01-312
18473-015	11-30-01-318
18473-016	11-30-01-306
18473-017	11-30-01-327
18473-018	11-30-01-315
18473-019	11-30-01-321
18473-020	11-30-01-309
18473-021	11-30-01-330
18473-025	11-30-01-351
18473-026	11-30-01-339
18473-027	11-30-01-345
18473-028	11-30-01-333
18473-029	11-30-01-354
18473-030	11-30-01-342
18473-031	11-30-01-348
18473-032	11-30-01-336
18473-033	11-30-01-357
18475-001	57-30-01-273
18475-001	57-30-01-276
18475-001	57-30-01-324
18475-001	57-30-01-327
18477-001	57-30-01-387
18477-002	57-30-01-384
18477-002	57-30-01-390
18479-001	57-20-02-15
18482-001	57-30-01-240
18482-001	57-30-01-261
18482-001	57-30-01-360
18482-001	57-30-01-363
18483-001	28-40-01-51
18483-001	28-40-01-61
18483-002	28-40-01-54
18483-002	28-40-01-62
18483-003	28-40-01-57
18483-003	28-40-01-63
18483-005	28-40-01-58
18483-005	28-40-01-64
18484-001	28-40-01-123
18484-001	28-40-01-133
18484-002	28-40-01-126
18484-002	28-40-01-134
18484-003	28-40-01-129
18484-003	28-40-01-135
18484-005	28-40-01-130
18484-005	28-40-01-136
18484-101	28-40-01-81
18484-101	28-40-01-153
18484-102	28-40-01-93
18484-102	28-40-01-165
18484-102	30-06-01-689
18484-102	30-07-01-369
18484-102	30-07-01-378
18484-201	28-40-01-84
18484-201	28-40-01-156
18484-301	28-40-01-87
18484-301	28-40-01-159
18484-311	28-40-01-90
18484-311	28-40-01-162
18484-501	28-40-01-91
18484-501	28-40-01-163
18488-001	28-20-01-351
18488-001	28-20-01-369
18491-001	28-20-01-336
18494-001	28-20-01-354
18499-001	57-30-01-509
18505-001	25-10-04-549
18505-002	25-10-04-552
18505-003	25-10-04-558
18505-004	25-10-04-555
18505-005	25-10-04-561
18505-006	25-10-04-564
18508-001	25-10-04-750
18508-002	25-10-04-753
18508-003	25-10-04-756
18508-004	25-10-04-759
18510-001	25-10-06-563
18512-001	25-10-04-609
18512-002	25-10-04-612
18512-003	25-10-04-615
18512-004	25-10-04-618
18513-001	34-50-02-117
18513-101	34-50-02-144
18513-101	34-50-06-162
18514-001	34-50-02-138
18515-001	34-50-02-135
18515-002	34-50-02-156
18515-004	34-50-02-159
18525-001	51-80-01-39
18525-002	51-80-01-42
18530-003	11-30-01-27
18530-013	11-30-01-42
18530-023	11-30-01-54
18538-002	31-10-02-63

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
18554-001	31-10-02-36
18554-002	31-10-02-48
18554-010	31-10-02-37
18554-020	31-10-02-51
18561-001	32-10-02-171
18561-002	32-10-02-180
18562-001	32-10-02-267
18583-001	53-50-01-42
18583-002	53-50-01-45
18583-003	53-50-01-43
18583-004	53-50-01-46
18585-001	57-30-01-201
18585-002	57-30-01-210
18585-005	57-30-01-204
18585-006	57-30-01-213
18588-002	28-10-01-86
18588-003	28-10-01-87
18588-004	28-10-01-88
18588-005	28-10-01-89
18591-001	28-20-03-60
18593-001	71-70-01-25
18593-002	71-70-01-26
18593-003	71-70-01-27
18593-004	71-70-01-28
18603-001	30-06-01-514
18612-101	34-50-06-144
18615-001	24-30-10-6
186191-003	57-20-02-22
18632-003	32-20-02-243
18632-004	32-20-02-244
18645-002	32-20-02-256
18646-001	32-20-02-257
18646-002	32-20-02-258
18646-003	32-20-02-259
18689-001	30-10-01-108
18689-002	30-10-01-123
18689-003	30-10-01-63
18689-004	30-10-01-84
18689-005	30-10-01-66
18689-006	30-10-01-87
18690-101	30-06-01-315
18690-102	30-06-01-318
18690-103	30-06-01-321
18690-104	30-06-01-324
18690-105	30-06-01-76
18690-106	30-06-01-647
18690-107	30-06-01-632
18690-115	30-06-01-77
18691-001	57-20-02-18
18691-002	57-20-02-21
18691-004	57-20-02-24
18733-001	28-20-01-575
18734-001	32-42-01-321
18740-001	57-10-01-186
18760-001	25-00-01-21
18773-001	30-06-01-12
18778-001	28-20-03-159
18778-001	28-20-03-352
18779-001	28-20-03-162
18779-001	28-20-03-355
18797-001	51-80-01-66
18797-002	51-80-01-72
18801-001	28-20-03-322
18801-002	28-20-03-126
18810-002	28-20-03-123
18810-005	28-20-03-319
18810-006	28-20-03-124
18826-001	32-20-02-97
18827-001	32-20-02-100
18841-001	33-40-02-135
18841-002	33-40-02-136
18892-001	21-20-01-704
18892-002	21-20-01-707
18892-003	21-20-01-710
18914-001	28-20-01-391
18937-001	27-20-04-72
18940-001	57-30-01-396
18940-002	57-30-01-500
18940-005	57-30-01-393
18940-006	57-30-01-399
18954-001	52-10-02-548
18957-001	33-40-02-123
18957-002	33-40-02-129
18957-003	33-40-02-124
18957-004	33-40-02-130
18968-001	24-50-04-5
18969-101	33-40-01-228
18969-102	33-40-01-141
18969-102	33-40-01-264
18969-102	33-40-01-306
18969-103	33-40-01-246
18969-104	33-40-01-297
18969-105	33-40-01-144
18969-105	33-40-01-282
18969-105	33-40-01-309
18975-001	61-10-01-48
18975-002	61-10-01-51
18975-003	61-10-01-54
18975-004	61-10-01-57
18975-005	61-10-01-60
18975-006	61-10-01-63
18975-007	61-10-01-66
18975-008	61-10-01-69
18975-009	61-10-01-72
18975-010	61-10-01-75
18975-011	61-10-01-78
18975-012	61-10-01-81
18975-101	61-10-01-90
18975-102	61-10-01-93
18975-104	61-10-01-96
18975-105	61-10-01-99
18975-106	61-10-01-204
18984-001	24-30-10-90
18988-001	32-10-01-154

PART NUMBER	CH–SEC–FIG–ITM
18988-002	32-10-01-163
18988-003	32-10-01-155
18988-004	32-10-01-164
18992-001	11-30-01-626
18993-001	22-12-02-156
18993-002	22-12-02-159
18994-041	11-30-01-57
18994-042	11-30-01-60
18994-044	11-30-01-66
18994-046	11-30-01-69
18994-048	11-30-01-72
18994-051	11-30-01-78
18994-053	11-30-01-81
18994-062	11-30-01-84
18994-063	11-30-01-85
18994-065	11-30-01-93
18994-071	11-30-01-99
18994-072	11-30-01-102
18994-075	11-30-01-105
18994-082	11-30-01-90
18994-085	11-30-01-96
19003-001	57-30-01-348
19003-002	57-30-01-243
19003-002	57-30-01-249
19003-002	57-30-01-345
19003-004	57-30-01-246
19020-001	25-10-01-21
19020-002	25-10-01-24
19020-003	25-10-01-27
19022-001	25-10-01-396
19022-002	25-10-01-384
19023-001	25-10-01-357
19024-001	25-10-01-390
19026-001	25-10-01-348
19026-002	25-10-01-351
19029-001	53-20-03-42
19030-001	52-10-01-641
19030-001	52-10-02-591
19030-001	52-10-02-595
19030-001	52-10-03-111
19040-001	24-30-10-24
19042-001	53-40-10-3
19049-001	22-12-02-204
19049-001	22-12-03-108
19049-001	22-12-03-126
19049-001	22-12-04-117
19049-001	22-12-04-135
19049-002	22-12-02-207
19049-002	22-12-03-111
19049-002	22-12-03-123
19049-002	22-12-04-120
19049-002	22-12-04-132
19052-001	53-40-10-12
19056-001	71-00-02-738
19056-001	71-00-02-758
19056-001	71-00-03-533
19056-004	71-00-02-740
19056-004	71-00-03-536
19057-001	71-00-02-742
19057-001	71-00-03-539
19057-003	71-00-02-744
19057-003	71-00-03-542
19057-004	71-00-02-746
19057-004	71-00-03-545
19059-001	71-00-02-748
19059-001	71-00-02-754
19059-001	71-00-03-548
19061-001	71-00-02-750
19061-001	71-00-02-756
19061-001	71-00-03-551
19061-002	71-00-02-752
19061-002	71-00-03-554
19065-001	33-10-01-70
19065-004	33-10-01-72
19065-005	33-10-01-74
19065-006	33-10-01-76
19094-001	28-20-03-266
19094-002	28-20-03-35
19118-001	25-10-04-711
19118-002	25-10-04-712
19130-001	31-30-02-21
19131-001	31-30-02-12
19153-001	25-10-04-660
19165-003	76-10-01-136
19169-001	76-10-01-148
19179-001	76-10-01-175
19181-001	76-10-01-172
19184-001	76-10-01-238
19214-001	31-10-01-279
19214-002	31-10-01-280
19219-001	34-20-05-42
19219-001	34-20-05-75
19221-002	31-10-01-241
19222-001	31-10-01-249
19222-002	31-10-01-252
19222-003	31-10-01-255
19222-004	31-10-01-258
19222-005	31-10-01-261
19223-001	34-50-07-6
19233-001	31-10-01-298
19234-001	21-20-02-66
19234-001	34-20-05-18
19234-001	34-20-05-27
19234-001	34-20-05-36
19234-001	34-20-05-60
19234-001	34-20-05-69
19236-001	31-10-01-288
19236-002	31-10-01-289
19260-002	31-10-01-200
19260-003	31-10-01-203
19260-005	31-10-01-208
19261-001	31-10-01-198
19261-002	31-10-01-201
19261-003	31-10-01-204

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
19261-004	31-10-01-206
19261-005	31-10-01-209
19262-001	31-10-01-195
19262-002	31-10-01-199
19262-003	31-10-01-202
19262-004	31-10-01-205
19262-005	31-10-01-207
19265-001	34-20-04-63
19268-001	25-10-11-30
19269-001	25-10-11-15
19269-002	25-10-11-18
19280-001	25-10-11-3
19287-001	25-10-10-39
19287-002	25-10-10-42
19287-003	25-10-10-45
19287-004	25-10-10-48
19289-001	22-12-01-9
19292-001	21-20-01-198
19293-001	25-10-04-239
19293-002	25-10-04-240
19293-003	25-10-04-241
19293-004	25-10-04-242
19293-005	25-10-04-243
19293-006	25-10-04-244
19293-007	25-10-04-245
19294-001	25-10-04-259
19294-002	25-10-04-260
19294-003	25-10-04-261
19294-004	25-10-04-262
19294-005	25-10-04-263
19294-006	25-10-04-264
19294-007	25-10-04-265
19296-001	25-10-06-33
19296-002	25-10-06-36
19296-003	25-10-06-39
19296-004	25-10-06-42
19296-005	25-10-06-45
19296-006	25-10-06-48
19296-007	25-10-06-49
19297-001	25-10-06-69
19297-002	25-10-06-72
19297-003	25-10-06-75
19297-004	25-10-06-78
19297-005	25-10-06-81
19297-006	25-10-06-84
19297-007	25-10-06-85
19298-001	25-10-04-347
19298-002	25-10-04-349
19298-003	25-10-04-351
19298-004	25-10-04-356
19298-005	25-10-04-348
19298-006	25-10-04-350
19298-007	25-10-04-352
19298-008	25-10-04-357
19299-001	25-10-04-271
19300-001	32-20-02-260
19308-001	53-40-08-12
19309-001	22-12-02-51
19321-001	24-50-02-93
19331-001	22-12-04-147
19331-003	22-12-02-222
19331-004	22-12-03-138
19331-005	22-12-04-148
19333-001	22-12-05-12
19335-001	53-40-09-21
19336-001	53-40-09-3
19337-001	53-40-09-36
19337-002	53-40-09-45
19338-001	53-40-09-12
19456-001	34-20-04-19
19456-001	34-20-04-75
19488-001	30-06-01-42
19489-001	30-06-01-48
19514-001	32-10-02-256
19516-001	25-10-06-111
19516-002	25-10-06-114
19516-003	25-10-06-117
19516-005	25-10-06-120
19516-006	25-10-06-123
19516-007	25-10-06-124
19535-001	22-12-02-225
19535-002	22-12-02-228
19537-001	74-30-01-4
19540-002	57-40-01-686
19540-003	57-40-01-687
19547-001	93-50-01-18
19547-002	93-50-01-19
19550-002	76-10-01-139
19551-001	25-60-01-22
19551-001	25-60-02-21
19554-001	53-30-01-57
19558-001	57-40-01-694
19593-001	11-30-01-815
19593-002	11-30-01-818
19594-001	11-30-01-812
19595-001	11-30-01-764
19595-004	11-30-01-767
19595-006	11-30-01-800
19595-007	11-30-01-779
19595-007	11-30-01-803
19595-008	11-30-01-806
19595-ASN	11-30-01-788
19610-001	30-40-01-3
19623-001	30-40-01-9
19629-001	21-20-01-698
19633-001	55-20-01-102
19633-002	55-20-01-123
19633-003	55-20-01-103
19633-004	55-20-01-124
19637-001	22-12-02-54
19639-001	51-80-01-31
19648-001	31-10-01-223
19655-001	11-20-01-79
19658-001	55-20-01-12

PART NUMBER	CH–SEC–FIG–ITM
19658-002	55-20-01-24
19680-005	11-20-09-9
19696-001	25-60-01-23
19696-001	25-60-02-24
19700-001	30-10-01-111
19700-002	30-10-01-129
19700-003	30-10-01-72
19700-004	30-10-01-93
19700-006	30-10-01-94
19701-001	30-10-01-135
19702-003	30-10-01-45
19702-004	30-10-01-51
19703-001	30-10-01-21
19703-002	30-10-01-39
19746-001	28-20-03-310
19758-001	57-40-01-715
19761-001	71-00-01-34
19772-001	28-20-03-376
19772-002	28-20-03-377
19779-003	71-20-02-3
19800-001	24-30-06-3
19800-002	24-30-06-4
19800-003	24-30-06-5
19805-001	24-30-06-72
19811-004	24-30-06-78
19815-003	24-30-06-81
19815-004	24-30-06-82
19815-011	24-30-06-90
19815-012	24-30-06-93
19815-016	24-30-06-94
19815-020	24-30-06-102
19815-030	24-30-06-111
19831-001	24-30-06-18
19831-002	24-30-06-19
19832-001	24-30-06-21
19833-001	24-30-06-24
19834-001	24-30-06-27
19837-001	24-30-06-198
19845-002	25-10-04-637
19846-002	11-30-01-770
19846-003	11-30-01-773
19848-002	31-10-01-210
19848-003	31-10-01-212
19849-002	31-10-01-211
19850-001	31-10-01-262
19854-001	11-20-01-84
19855-001	11-30-01-752
19865-001	61-20-01-7
19868-106	30-07-01-647
19868-107	30-07-01-650
19869-101	30-07-01-623
19871-101	71-70-01-88
19871-102	71-70-01-238
19871-103	71-70-01-7
19871-104	71-70-01-103
19871-105	71-70-01-118
19871-106	71-70-01-40
19871-401	71-70-01-89
19871-402	71-70-01-239
19871-403	71-70-01-8
19871-404	71-70-01-104
19871-405	71-70-01-119
19871-406	71-70-01-41
19871-407	71-70-01-78
19880-001	27-30-01-39
19880-002	27-30-01-40
19881-001	27-30-01-48
19881-002	27-30-01-51
19881-003	27-30-01-52
19882-001	27-30-01-60
19882-002	27-30-01-61
19883-001	27-30-01-69
19883-002	27-30-01-72
19883-003	27-30-01-73
19884-001	27-20-01-60
19884-002	27-20-01-39
19884-003	27-20-01-61
19884-004	27-20-01-40
19885-001	27-20-01-72
19885-002	27-20-01-48
19885-003	27-20-01-73
19885-004	27-20-01-51
19885-006	27-20-01-52
19900-001	24-30-05-3
19900-002	24-30-05-6
19900-011	24-30-05-4
19900-012	24-30-05-7
19901-101	24-30-05-375
19903-002	24-30-05-18
19903-003	24-30-05-21
19906-002	24-30-05-60
19909-001	24-30-05-24
19913-001	34-40-02-138
19915-001	34-40-02-153
19916-001	34-40-02-156
19918-001	34-40-02-159
19919-101	57-40-01-695
19946-001	27-10-03-89
19964-002	11-30-01-390
19964-003	11-30-01-393
19964-005	11-30-01-396
19964-006	11-30-01-399
19964-012	11-30-01-500
19964-013	11-30-01-503
19964-015	11-30-01-506
19964-016	11-30-01-509
19964-022	11-30-01-512
19964-023	11-30-01-515
19964-025	11-30-01-518
19964-026	11-30-01-521
19964-032	11-30-01-524
19964-033	11-30-01-527
19964-042	11-30-01-530
19964-043	11-30-01-533

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
19964-052	11-30-01-536
19964-053	11-30-01-539
19964-062	11-30-01-542
19964-063	11-30-01-545
19964-092	11-30-01-548
19964-093	11-30-01-551
19964-102	11-30-01-554
19964-103	11-30-01-557
19964-112	11-30-01-560
19964-113	11-30-01-563
19964-122	11-30-01-564
19964-123	11-30-01-565
19968-001	11-30-01-566
19968-002	11-30-01-567
19968-003	11-30-01-568
19968-004	11-30-01-569
19968-005	11-30-01-570
19968-006	11-30-01-571
19968-ASN	11-30-01-572
19969-001	32-20-02-285
19976-001	21-40-02-54
19977-001	21-40-02-63
19980-001	25-10-04-228
19984-001	30-80-01-3
19984-001	30-80-04-3
19984-002	30-80-01-6
19984-002	30-80-04-6
19987-001	25-10-04-651
19-151003-100	33-40-02-32
19-170049-010	33-40-02-30
19-171471-100	33-40-02-31
20072-001	57-10-02-15
20072-002	57-10-02-18
20096-001	25-60-01-18
20096-002	25-60-01-21
20096-002	25-60-02-18

PART NUMBER	CH–SEC–FIG–ITM
20098-001	24-30-10-21
20101-002	55-50-02-6
20101-003	55-50-02-9
20101-004	55-50-02-10
20102-003	55-50-02-27
20102-004	55-50-02-30
20103-002	55-50-02-51
20104-001	55-50-02-84
20107-001	53-40-01-332
20108-002	53-40-01-52
20108-002	53-40-01-269
20110-001	34-50-04-45
20111-002	53-20-03-12
20111-003	53-20-03-15
20126-003	53-40-05-25
20126-004	53-40-05-26
20133-001	53-40-06-135
20133-002	53-40-06-136
20134-001	53-40-06-132
20134-002	53-40-06-133
20135-001	53-20-01-144
20135-002	53-20-01-145
20138-001	28-20-02-225
20139-001	28-20-02-255
20140-002	53-40-05-3
20140-003	53-40-05-4
20146-001	27-50-01-93
20148-001	30-06-01-542
20153-001	78-20-01-268
20153-002	78-20-01-269
20155-004	78-20-01-360
20155-005	78-20-01-366
20155-006	78-20-01-369
20155-007	78-20-01-363
20155-009	78-20-01-370
20155-010	78-20-01-364
20158-001	71-20-01-132
20166-001	78-20-01-334

PART NUMBER	CH–SEC–FIG–ITM
20174-001	71-10-01-75
20174-002	71-10-02-33
20175-001	71-10-01-84
20179-001	33-40-01-207
20181-002	71-10-01-18
20181-003	71-10-01-20
20181-005	71-10-01-21
20181-101	71-10-01-78
20181-102	71-10-01-80
20181-102	71-10-02-37
20182-002	71-10-01-180
20182-004	71-10-01-183
20182-005	71-10-01-186
20182-006	71-10-01-187
20182-008	71-10-01-188
20182-010	71-10-01-189
20182-011	71-10-01-190
20183-002	53-40-05-6
20184-001	53-30-02-12
20184-002	53-30-02-18
20184-003	53-30-02-15
20184-004	53-30-02-21
20220-101	25-60-01-51
20220-102	25-60-01-66
20223-001	27-10-02-93
20224-001	27-10-02-84
20228-001	31-10-01-90
20229-001	31-10-01-114
20233-001	53-40-11-6
20234-001	53-40-11-9
20234-002	53-40-11-12
20246-001	71-10-01-93
20246-002	71-10-01-94
20246-002	71-10-02-45
20247-101	33-40-01-222
20247-103	33-40-01-258
20247-104	33-40-01-231
20247-105	33-40-01-285

PART NUMBER	CH–SEC–FIG–ITM
20247-106	33-40-01-240
20247-107	33-40-01-291
20247-201	33-40-01-225
20247-203	33-40-01-261
20247-205	33-40-01-288
20247-206	33-40-01-243
20247-207	33-40-01-294
20247-209	33-40-01-280
20254-001	25-10-05-576
20254-002	25-10-05-578
20256-001	52-10-02-9
20256-002	52-10-02-12
20257-001	52-10-02-3
20257-002	52-10-02-6
20258-001	52-10-02-21
20258-002	52-10-02-24
20258-003	52-10-02-25
20259-001	52-10-02-15
20259-002	52-10-02-18
20259-003	52-10-02-19
20267-001	52-10-02-255
20267-001	52-10-02-333
20267-002	52-10-02-264
20267-002	52-10-02-345
20267-003	52-10-02-258
20267-003	52-10-02-261
20267-003	52-10-02-336
20267-003	52-10-02-339
20267-004	52-10-02-267
20267-004	52-10-02-270
20267-004	52-10-02-348
20267-004	52-10-02-351
20268-001	53-40-03-225
20268-001	53-40-03-270
20268-002	53-40-03-228
20268-002	53-40-03-273
20268-003	53-40-03-231
20268-003	53-40-03-249
20268-003	53-40-03-276
20268-004	53-40-03-277
20269-001	52-10-02-30
20270-001	52-10-02-111
20270-001	52-10-03-69
20270-002	52-10-02-117
20270-002	52-10-03-72
20270-003	52-10-02-114
20270-004	52-10-02-120
20271-003	52-10-02-126
20271-004	52-10-02-135
20271-005	52-10-02-132
20271-005	52-10-03-81
20271-006	52-10-02-141
20271-006	52-10-03-87
20271-007	52-10-02-129
20271-007	52-10-03-78
20271-008	52-10-02-138
20271-008	52-10-03-84
20272-001	52-10-02-600
20272-002	52-10-02-606
20272-003	52-10-02-603
20272-003	52-10-03-114
20272-004	52-10-02-609
20272-004	52-10-03-117
20273-001	52-10-02-530
20273-002	52-10-02-545
20274-001	52-10-02-228
20274-002	52-10-02-237
20274-003	52-10-02-231
20274-003	52-10-02-234
20274-004	52-10-02-240
20274-004	52-10-02-243
20275-001	52-10-02-153
20275-002	52-10-02-156
20275-003	52-10-02-159
20276-001	52-10-02-165
20277-001	52-30-01-63
20278-001	52-10-02-195
20289-001	52-10-02-306
20289-002	52-10-02-309
20289-002	52-10-02-312
20290-001	52-10-02-394
20290-002	52-10-02-396
20291-001	52-10-02-297
20291-002	52-10-02-300
20291-002	52-10-02-303
20292-001	52-10-02-512
20292-003	52-10-02-515
20292-004	52-10-02-518
20293-001	52-10-02-276
20293-002	52-10-02-282
20293-003	52-10-02-279
20293-004	52-10-02-285
20294-001	52-10-02-360
20294-002	52-10-02-369
20294-003	52-10-02-363
20294-003	52-10-02-366
20294-004	52-10-02-372
20294-004	52-10-02-375
20294-005	52-10-02-367
20294-006	52-10-02-376
20296-001	52-10-02-387
20297-001	52-10-02-630
20298-001	52-10-02-273
20298-001	52-10-02-357
20299-001	53-40-03-129
20299-002	53-40-03-132
20300-001	53-40-03-144
20300-002	53-40-03-147
20302-001	52-30-01-54
20303-102	52-30-01-60
20305-001	52-30-01-57
20307-001	53-40-04-42
20307-002	53-40-04-43
20309-001	52-30-01-58

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
20310-001	52-10-02-198
20310-003	52-10-02-201
20311-001	53-40-03-162
20311-002	53-40-03-163
20311-003	53-40-03-164
20313-001	52-10-02-177
20313-002	52-10-02-180
20314-001	53-20-01-81
20314-001	53-20-01-90
20314-001	53-20-01-99
20314-001	53-20-01-117
20314-001	53-20-01-159
20314-001	53-20-01-168
20314-001	53-20-01-177
20314-001	53-20-01-186
20317-001	53-30-01-51
20317-002	53-30-01-52
20319-001	53-30-01-6
20319-001	53-30-01-21
20322-001	52-10-02-213
20322-002	52-10-02-216
20324-001	52-10-02-147
20324-002	52-10-02-150
20334-001	25-10-05-608
20334-002	25-10-05-604
20334-003	25-10-05-610
20334-004	25-10-05-606
20334-005	25-10-05-612
20335-001	25-10-05-634
20335-002	25-10-05-630
20335-003	25-10-05-636
20335-004	25-10-05-632
20335-005	25-10-05-638
20336-001	25-10-05-710
20336-002	25-10-05-714
20336-003	25-10-05-712
20336-004	25-10-05-716
20336-005	25-10-05-718
20337-001	25-10-05-730
20337-002	25-10-05-736
20337-003	25-10-05-732
20337-004	25-10-05-738
20338-001	25-10-06-15
20338-002	25-10-06-21
20338-003	25-10-06-18
20338-004	25-10-06-24
20338-005	25-10-06-27
20339-001	25-10-06-51
20339-002	25-10-06-57
20339-003	25-10-06-54
20339-004	25-10-06-60
20339-005	25-10-06-63
20340-001	25-10-06-216
20340-002	25-10-06-222
20340-003	25-10-06-219
20340-004	25-10-06-225
20341-001	25-10-06-246
20341-002	25-10-06-252
20341-003	25-10-06-249
20341-004	25-10-06-255
20342-001	25-10-04-229
20342-002	25-10-04-230
20342-003	25-10-04-231
20342-004	25-10-04-232
20342-005	25-10-04-233
20343-001	25-10-04-249
20343-002	25-10-04-250
20343-003	25-10-04-251
20343-004	25-10-04-252
20343-005	25-10-04-253
20344-001	25-10-05-680
20344-002	25-10-05-682
20344-003	25-10-05-684
20345-001	25-10-06-150
20345-002	25-10-06-153
20345-003	25-10-06-159
20346-001	25-10-06-306
20346-002	25-10-06-309
20346-003	25-10-06-315
20346-005	25-10-06-318
20346-006	25-10-06-321
20346-007	25-10-06-322
20347-001	25-10-06-345
20347-002	25-10-06-348
20347-003	25-10-06-354
20347-005	25-10-06-357
20347-006	25-10-06-360
20347-007	25-10-06-361
20348-001	25-10-05-258
20348-002	25-10-05-266
20348-005	25-10-05-260
20348-006	25-10-05-268
20348-007	25-10-05-274
20348-008	25-10-05-286
20348-010	25-10-05-292
20348-011	25-10-05-298
20348-012	25-10-05-304
20348-013	25-10-05-310
20348-113	25-10-05-264
20348-114	25-10-05-262
20348-114	25-10-05-276
20348-117	25-10-05-278
20348-118	25-10-05-288
20349-001	25-10-05-346
20349-002	25-10-05-354
20349-005	25-10-05-348
20349-006	25-10-05-356
20349-007	25-10-05-362
20349-008	25-10-05-374
20349-010	25-10-05-380
20349-011	25-10-05-386
20349-012	25-10-05-392
20349-013	25-10-05-398
20349-113	25-10-05-352

PART NUMBER	CH–SEC–FIG–ITM
20349-114	25-10-05-350
20349-114	25-10-05-364
20349-115	25-10-05-360
20349-116	25-10-05-358
20349-117	25-10-05-366
20349-118	25-10-05-376
20350-001	25-10-06-96
20350-002	25-10-06-102
20350-003	25-10-06-99
20350-004	25-10-06-105
20351-118	34-10-01-96
20351-120	34-10-01-78
20351-120	34-10-01-503
20351-121	34-10-01-87
20351-122	34-10-01-144
20351-123	34-10-01-153
20351-124	34-10-01-162
20351-125	34-10-01-171
20351-126	34-10-01-180
20351-127	34-10-01-204
20351-128	34-10-01-213
20351-129	34-10-01-231
20351-130	34-10-01-189
20351-131	34-10-01-294
20351-132	34-10-01-198
20351-133	34-10-01-216
20351-134	34-10-01-572
20351-135	34-10-01-578
20351-136	34-10-01-584
20351-137	34-10-01-222
20352-001	71-70-01-129
20357-001	71-70-01-24
20359-101	71-70-01-39
20359-102	71-70-01-87
20359-103	71-70-01-102
20359-104	71-70-01-237
20359-105	71-70-01-6
20359-106	71-70-01-117
20364-001	53-40-03-192
20365-001	55-40-01-12
20365-002	55-40-01-15
20365-003	55-40-01-16
20366-001	53-20-01-153
20375-001	33-40-01-237
20375-001	33-40-01-375
20377-101	34-40-02-24
20377-102	34-40-02-39
20377-103	34-40-02-99
20378-001	34-40-02-15
20381-001	53-40-03-195
20383-001	53-40-03-165
20383-002	53-40-03-166
20383-003	53-40-03-167
20384-001	53-40-05-9
20386-001	34-50-03-54
20387-001	25-10-04-597
20387-002	25-10-04-600
20387-003	25-10-04-603
20387-004	25-10-04-606
20396-001	25-10-05-770
20396-002	25-10-05-778
20396-003	25-10-04-380
20396-004	25-10-05-772
20397-102	25-10-06-189
20397-103	25-10-06-183
20409-001	25-10-05-800
20409-002	25-10-05-802
20421-001	25-10-05-556
20421-002	25-10-05-566
20421-003	25-10-05-558
20421-004	25-10-05-568
20422-001	25-10-05-656
20422-002	25-10-05-660
20422-003	25-10-05-658
20422-004	25-10-05-662
20423-001	25-10-04-537
20423-002	25-10-04-540
20423-003	25-10-04-546
20423-004	25-10-04-543
20424-001	25-10-04-288
20425-001	25-10-04-291
20429-001	25-10-05-664
20429-002	25-10-05-666
20429-003	25-10-05-670
20431-001	34-20-01-63
20433-001	27-00-05-327
20439-001	71-10-01-105
20439-003	71-10-01-106
20439-004	71-10-01-107
20439-005	71-10-01-108
20439-006	71-10-01-109
20439-008	71-10-01-110
20515-001	52-10-02-390
20515-002	52-10-02-393
20522-001	53-40-03-234
20522-001	53-40-03-279
20522-002	53-40-03-237
20522-002	53-40-03-282
20524-001	25-10-06-126
20527-001	25-10-04-639
20527-002	25-10-04-642
20530-101	25-10-07-6
20530-102	25-10-07-18
20530-103	25-10-07-63
20530-104	25-10-07-111
20530-105	25-10-07-45
20530-106	25-10-07-54
20530-107	25-10-07-126
20530-108	25-10-07-120
20530-109	25-10-07-84
20530-110	25-10-07-75
20530-113	25-10-07-102
20530-114	25-10-07-93
20531-001	71-10-01-249

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
20532-001	71-10-01-252
20537-002	79-20-02-6
20538-001	25-10-06-396
20538-002	25-10-06-399
20547-001	11-20-01-57
20547-002	11-20-05-51
20547-002	11-20-06-45
20547-003	11-20-04-36
20547-004	11-20-03-36
20547-005	11-20-02-39
20547-006	11-20-07-3
20547-007	11-20-10-45
20547-007	11-20-12-45
20547-008	11-20-01-59
20547-009	11-20-05-52
20547-009	11-20-06-46
20547-010	11-20-04-37
20547-011	11-20-03-37
20547-012	11-20-02-40
20547-013	11-20-07-6
20547-014	11-20-10-46
20547-014	11-20-12-46
20554-001	52-30-01-72
20573-001	25-10-01-48
20575-001	53-40-03-222
20575-001	53-40-03-246
20575-001	53-40-03-267
20579-001	52-30-01-75
20583-001	32-20-02-87
20587-001	25-10-10-15
20647-001	71-70-01-540
20660-002	71-10-01-255
20660-003	71-10-01-258
20660-004	71-10-01-259
20665-002	71-10-01-261
20665-003	71-10-01-262
20688-001	25-10-04-702
20688-003	25-10-04-705
20688-004	25-10-04-729
20708-001	21-60-02-240
20708-001	21-60-02-255
20708-001	21-60-03-189
20709-001	21-50-01-611
20709-002	21-50-01-614
20713-002	21-20-01-351
20713-003	21-20-01-354
20713-004	21-20-01-357
20714-001	21-20-01-315
20715-001	21-20-01-309
20716-001	21-20-01-330
20719-001	21-60-02-258
20719-001	21-60-03-192
20722-002	21-60-02-228
20722-002	21-60-03-177
20723-001	21-60-02-198
20724-001	21-60-02-207
20725-001	21-60-02-174
20725-001	21-60-03-111
20726-001	21-60-02-222
20726-001	21-60-03-171
20727-002	21-60-02-105
20727-003	21-60-02-108
20728-002	21-60-02-111
20728-003	21-60-02-114
20729-002	21-60-02-180
20729-002	21-60-02-204
20730-002	21-60-02-15
20730-003	21-60-02-9
20730-004	21-60-02-3
20730-005	21-60-02-18
20730-006	21-60-02-12
20730-007	21-60-02-6
20732-002	21-60-02-96
20732-002	21-60-02-126
20732-002	21-60-03-87
20732-003	21-60-02-135
20732-004	21-60-02-97
20732-004	21-60-02-127
20732-004	21-60-03-88
20733-001	21-20-01-366
20735-002	21-60-02-243
20739-001	21-60-02-159
20740-101	21-20-01-393
20740-102	21-20-01-617
20740-103	21-20-01-500
20740-104	21-20-01-626
20741-101	21-20-01-584
20741-102	21-20-01-656
20741-103	21-20-01-593
20741-104	21-20-01-665
20741-105	21-20-01-189
20742-001	21-60-02-183
20745-002	21-60-02-348
20747-003	21-40-01-72
20747-004	21-40-01-78
20754-001	21-40-01-30
20754-002	21-40-01-33
20755-001	21-40-01-69
20755-002	21-40-02-96
20756-001	21-60-02-270
20756-001	21-60-03-204
20756-002	21-60-02-273
20763-001	21-40-01-9
20763-002	21-40-01-12
20763-003	21-40-01-15
20855-001	71-10-01-222
20855-001	71-10-02-141
20855-002	71-10-01-223
20855-002	71-10-02-142
20874-002	71-10-01-357
20896-001	25-10-05-734
20896-002	25-10-05-740
20896-003	25-10-05-742
20896-004	25-10-05-744

PART NUMBER	CH–SEC–FIG–ITM
20896-005	25-10-05-746
20896-006	25-10-05-748
20901-001	25-10-01-51
20901-002	25-10-01-54
20901-003	25-10-01-57
20901-004	25-10-01-60
20901-005	25-10-01-63
20901-006	25-10-01-66
20901-007	25-10-01-69
20901-008	25-10-01-72
20902-001	25-10-01-635
20902-002	25-10-01-611
20902-003	25-10-01-674
20902-004	25-10-01-650
20902-005	25-10-01-612
20902-006	25-10-01-675
20902-007	25-10-01-613
20903-001	25-10-01-617
20903-005	25-10-01-644
20903-006	25-10-01-647
20903-008	25-10-01-618
20904-002	25-10-01-398
20904-003	25-10-01-399
20906-001	25-10-01-641
20917-001	55-40-01-96
20917-002	55-40-01-95
20917-003	55-40-01-97
20919-001	34-10-01-635
20919-001	34-10-01-686
20920-001	11-20-01-81
20920-004	11-20-02-57
20920-005	11-20-01-82
20920-006	11-20-02-60
20920-007	11-20-01-83
20920-008	11-20-02-63
20937-101	23-50-01-31
20961-002	21-60-04-102
20964-002	21-60-04-93
20970-001	21-20-01-285
20970-002	21-20-01-288
20970-003	21-20-01-291
20970-202	21-20-01-294
20970-203	21-20-01-297
20972-002	21-60-02-500
20974-001	21-50-01-698
20975-001	21-50-01-674
20982-003	21-60-02-285
20983-002	21-60-02-300
20983-002	21-60-03-216
20984-002	21-60-02-324
20984-003	21-60-03-240
20997-001	21-60-02-75
20997-002	21-60-02-54
20997-003	21-60-02-78
20997-004	21-60-02-57
20998-001	21-60-02-81
20998-002	21-60-02-60
20998-003	21-60-02-84
20998-004	21-60-02-63
21062-001	24-30-10-69
21063-001	24-30-10-9
21114-002	21-50-01-381
21114-003	21-50-01-384
21114-004	21-50-01-387
21114-005	21-50-01-390
21114-006	21-50-01-393
21114-101	21-50-01-548
21114-102	21-50-01-554
21114-103	21-50-01-399
21114-104	21-50-01-515
21114-201	21-50-01-396
21114-401	21-50-01-500
21114-402	21-50-01-530
21114-403	21-50-01-536
21114-501	21-50-01-503
21114-502	21-50-01-557
21114-503	21-50-01-516
21114-504	21-50-01-521
21114-601	21-50-01-506
21114-602	21-50-01-560
21114-603	21-50-01-518
21114-604	21-50-01-524
21114-605	21-50-01-527
21114-606	21-50-01-533
21114-607	21-50-01-508
21114-608	21-50-01-509
21119-002	21-50-01-6
21119-003	21-50-01-9
21119-005	21-50-01-11
21119-006	21-50-01-12
21119-007	21-50-01-13
21119-008	21-50-01-14
21119-101	21-50-01-27
21119-102	21-50-01-36
21119-103	21-50-01-273
21119-104	21-50-01-241
21119-105	21-50-01-192
21119-107	21-50-01-88
21119-109	21-50-01-37
21119-111	21-50-01-91
21119-112	21-50-01-90
21119-301	21-50-01-30
21119-302	21-50-01-198
21119-303	21-50-01-195
21119-304	21-50-01-10
21119-504	21-50-01-243
21119-604	21-50-01-244
21120-001	21-50-01-596
21180-001	11-20-08-3
21180-002	11-20-08-12
21180-003	11-20-08-15
21180-004	11-20-08-21
21180-005	11-20-08-45
21180-006	11-20-08-39

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
21180-007	11-20-08-49
21180-008	11-30-08-21
21180-009	11-30-08-24
21180-010	11-30-08-27
21180-011	11-30-08-30
21180-012	11-30-08-6
21180-013	11-30-08-3
21180-015	11-30-08-18
21180-016	11-30-08-9
21180-017	11-20-08-18
21180-018	11-20-08-24
21180-019	11-30-08-12
21180-020	11-30-08-15
21180-021	11-20-08-42
21180-022	11-20-08-9
21180-023	11-20-08-6
21180-036	11-20-08-30
21180-037	11-20-08-27
21180-038	11-20-08-36
21180-039	11-20-08-33
21180-043	11-30-08-36
21180-044	11-30-08-33
21180-045	11-30-08-42
21180-046	11-20-08-51
21180-047	11-30-08-39
21180-048	11-20-08-54
21180-052	11-20-08-46
21209-001	21-50-01-620
21209-002	21-50-01-623
21209-003	21-50-01-624
21209-101	21-50-01-626
21209-102	21-50-01-638
21209-103	21-50-01-632
21209-104	21-50-01-728
21209-105	21-50-01-734
21209-201	21-50-01-629
21209-202	21-50-01-641
21209-301	21-50-01-630
21209-305	21-50-01-735
21285-001	61-20-01-32
21285-101	61-20-01-44
21307-002	24-30-04-201
21307-002	24-30-04-219
21307-002	24-30-05-515
21307-002	24-30-05-548
21311-016	24-30-05-183
21311-018	24-30-05-279
21311-023	24-30-05-195
21311-024	24-30-05-500
21311-025	24-30-05-363
21311-026	24-30-05-336
21311-027	24-30-05-575
21311-028	24-30-05-518
21312-007	24-30-05-599
21312-010	24-30-05-267
21312-011	24-30-05-297
21312-014	24-30-01-39
21313-001	24-30-04-261
21392-001	53-20-01-120
21392-002	53-20-01-118
21397-001	21-50-01-605
21404-003	24-30-05-171
21405-001	24-30-05-378
21416-003	24-30-05-387
21452-003	21-50-01-514
21463-001	24-30-05-225
21466-001	24-50-02-9
21467-001	25-10-04-393
21472-001	24-30-05-129
21476-001	21-60-02-363
21476-001	21-60-02-521
21476-001	21-60-03-291
21476-001	21-60-04-63
21481-001	21-60-02-503
21482-001	21-60-02-506
21483-001	21-60-02-351
21489-001	21-50-01-686
21490-101	21-50-01-584
21492-001	24-30-05-527
21492-001	24-30-05-584
21492-002	24-30-05-521
21492-002	24-30-05-578
21497-001	21-60-02-45
21500-001	21-20-01-228
21518-001	21-20-01-324
21525-001	25-10-04-726
21528-001	21-20-01-264
21528-001	21-50-01-572
21528-002	21-20-01-267
21528-002	21-50-01-575
21529-001	21-50-01-713
21533-001	21-20-01-345
21535-001	21-20-01-249
21535-002	21-20-01-252
21548-001	21-20-01-279
21549-001	21-20-01-243
21550-001	21-20-01-210
21550-002	21-20-01-213
21550-003	21-20-01-216
21551-001	21-40-01-57
21552-001	21-40-01-45
21552-001	21-40-02-12
21552-002	21-40-02-15
21576-001	21-50-01-608
21579-001	24-30-02-27
21583-001	25-10-04-399
21587-001	25-10-01-509
21587-001	25-10-02-710
21656-002	21-60-03-135
21659-002	21-60-03-42
21660-002	21-60-03-9
21662-002	21-60-03-75
21663-002	21-60-03-72
21686-101	34-10-01-548

PART NUMBER	CH–SEC–FIG–ITM
21686-102	34-10-01-99
21686-103	34-10-01-81
21686-104	34-10-01-90
21686-105	34-10-01-147
21686-106	34-10-01-156
21686-107	34-10-01-165
21686-108	34-10-01-174
21686-109	34-10-01-183
21686-110	34-10-01-207
21686-111	34-10-01-234
21686-112	34-10-01-192
21686-113	34-10-01-297
21686-115	34-10-01-219
21686-116	34-10-01-575
21686-117	34-10-01-581
21686-118	34-10-01-225
21686-119	34-10-01-354
21686-120	34-10-01-360
21686-121	34-10-01-509
21686-122	34-10-01-542
21686-123	34-10-01-249
21686-124	34-10-01-252
21686-125	34-10-01-246
21701-001	25-10-04-234
21702-001	25-10-04-254
21703-001	25-10-05-280
21703-101	25-10-05-284
21703-101	25-10-05-290
21703-102	25-10-05-282
21704-001	25-10-05-368
21704-101	25-10-05-372
21704-101	25-10-05-378
21704-102	25-10-05-370
21705-001	25-10-06-30
21706-001	25-10-06-66
21707-001	25-10-06-228
21708-001	25-10-06-258
21709-001	25-10-05-686
21710-001	25-10-06-156
21711-001	25-10-06-312
21712-001	25-10-06-351
21714-001	25-10-06-108
21715-001	25-10-05-614
21716-001	25-10-05-640
21717-001	25-10-05-720
21718-001	25-10-05-750
21719-001	25-10-04-235
21719-002	25-10-04-236
21719-003	25-10-04-237
21719-004	25-10-04-238
21721-001	25-10-05-674
21722-001	25-10-04-645
21722-002	25-10-04-648
21743-001	11-20-01-75
21744-001	27-00-03-165
21747-001	11-30-01-791
21751-001	24-30-05-339
21752-001	24-30-05-282
21753-001	24-30-05-602
21770-003	71-60-01-20
21770-202	71-60-01-318
21770-203	71-60-01-306
21770-204	71-60-01-288
21771-002	71-60-01-282
21772-002	71-60-01-285
21774-001	71-60-01-303
21784-001	21-60-03-138
21784-101	21-60-03-153
21784-102	21-60-03-162
21786-001	21-60-03-96
21787-001	21-60-03-117
21795-002	21-60-03-294
21799-001	21-20-01-231
21802-101	21-50-01-587
21806-001	21-20-01-270
21812-002	32-42-01-99
21812-003	32-42-01-100
21815-002	76-10-01-262
21820-001	71-00-03-273
21820-002	71-00-03-276
21821-001	71-00-02-310
21821-001	71-00-03-279
21823-002	21-40-02-3
21823-003	21-40-02-6
21823-004	21-40-02-9
21828-002	32-42-01-66
21829-001	25-10-04-255
21829-002	25-10-04-256
21829-003	25-10-04-257
21829-004	25-10-04-258
21832-001	21-40-02-156
21836-001	21-40-02-135
21836-002	21-40-02-138
21836-003	21-40-02-141
21837-001	21-40-02-108
21837-002	21-40-02-111
21837-003	21-40-02-114
21842-001	21-40-02-147
21844-001	21-40-02-132
21845-001	52-10-02-39
21845-002	52-10-02-42
21845-002	52-10-03-21
21861-001	52-10-02-262
21861-001	52-10-02-342
21861-112	52-10-02-263
21861-112	52-10-02-343
21866-001	21-20-01-255
21866-002	21-20-01-258
21877-001	21-60-03-330
21889-001	52-10-02-271
21889-001	52-10-02-354
21889-112	52-10-02-272
21889-112	52-10-02-355
21891-001	21-20-01-219

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
21891-002	21-20-01-222
21892-001	78-20-01-286
21892-002	78-20-01-287
21899-002	53-40-05-39
21903-003	53-40-05-63
21903-004	53-40-05-64
21906-001	25-10-04-621
21906-003	25-10-04-624
21906-004	25-10-04-627
21922-001	53-40-05-42
21924-002	53-40-05-45
21924-003	53-40-05-46
21928-001	21-50-01-207
21928-002	21-50-01-210
21928-003	21-50-01-211
21929-001	21-50-01-201
21929-002	21-50-01-204
21929-003	21-50-01-205
21933-003	52-10-02-57
21933-004	52-10-02-60
21933-004	52-10-03-24
21942-101	30-07-01-134
21942-102	30-07-01-180
21942-106	30-07-01-521
21942-110	30-07-01-509
21942-111	30-07-01-533
21942-117	30-07-01-104
21942-118	30-07-01-147
21942-119	30-07-01-105
21942-121	30-07-01-545
21942-122	30-07-01-90
21942-123	30-07-01-91
21942-127	30-07-01-285
21942-133	30-07-01-6
21942-135	30-07-01-808
21942-136	30-07-01-47
21942-139	30-07-01-77
21942-140	30-07-01-76
21943-101	30-07-01-578
21943-102	30-07-01-593
21943-103	30-07-01-596
21943-104	30-07-01-599
21943-105	30-07-01-602
21943-106	30-07-01-333
21943-116	30-07-01-334
21946-002	30-07-01-192
21946-003	30-07-01-82
21946-004	30-07-01-159
21946-006	30-07-01-249
21946-007	30-07-01-820
21946-009	30-07-01-716
21946-010	30-07-01-724
21947-004	30-07-01-261
21947-005	30-07-01-262
21950-003	30-07-01-98
21951-002	30-07-01-119
21951-003	30-07-01-122
21951-102	30-07-01-121
21951-201	30-07-01-120
21951-301	30-07-01-123
21951-302	30-07-01-124
21953-002	30-07-01-142
21955-001	30-07-01-2
21956-001	30-07-01-396
21965-001	30-07-01-72
21978-001	30-07-01-70
21981-001	30-06-01-546
21981-001	30-07-01-737
21986-001	30-07-01-14
21986-002	30-07-01-51
21986-201	30-07-01-52
21986-202	30-07-01-53
21986-203	30-07-01-61
21986-204	30-07-01-65
21986-205	30-07-01-54
21986-206	30-07-01-62
21986-207	30-07-01-57
21986-209	30-07-01-59
21986-210	30-07-01-60
21992-001	30-07-01-371
21992-002	30-07-01-372
21992-111	30-07-01-375
21992-201	30-07-01-376
22008-001	55-20-01-51
22008-002	55-20-01-57
22008-003	55-20-01-63
22029-001	76-10-01-151
22029-002	76-10-01-152
22032-001	22-12-02-162
22032-002	22-12-02-165
22042-001	11-30-01-755
22042-003	11-30-01-758
22042-004	11-30-09-3
22042-005	11-30-09-6
22043-001	11-30-01-761
22044-001	11-30-01-650
22044-002	11-30-01-668
22044-003	11-30-01-692
22044-004	11-30-01-653
22044-005	11-30-01-671
22044-006	11-30-01-695
22044-008	11-30-01-674
22044-009	11-30-01-698
22068-001	11-30-01-656
22068-002	11-30-01-677
22068-003	11-30-01-710
22068-004	11-30-01-659
22068-005	11-30-01-680
22068-006	11-30-01-713
22070-002	30-07-01-210
22070-003	30-07-01-211
22071-001	22-12-05-15
22072-001	30-07-01-324
22072-002	30-07-01-325

PART NUMBER	CH–SEC–FIG–ITM
22072-003	30-07-01-326
220-0455-10	21-50-01-63
220-1412-1	21-50-01-72
22101-001	21-60-04-15
22101-002	21-60-04-18
22101-003	21-60-04-21
22102-001	21-60-04-3
22102-002	21-60-04-5
22102-003	21-60-04-7
22102-004	21-60-04-6
22102-005	21-60-04-8
22103-001	21-60-04-30
22104-001	21-60-04-38
22104-002	21-60-04-39
22105-001	21-40-02-159
22106-001	21-20-01-375
22106-002	21-20-01-376
22106-003	21-20-01-377
22106-004	21-20-01-378
22107-001	21-60-04-36
22108-001	21-60-04-33
22111-001	21-40-02-165
22111-002	21-40-02-168
22114-101	21-20-01-620
22114-102	21-20-01-542
22114-103	21-20-01-396
22114-104	21-20-01-548
22114-105	21-20-01-554
22114-106	21-20-01-560
22114-107	21-20-01-503
22114-108	21-20-01-629
22115-101	21-20-01-587
22115-102	21-20-01-659
22115-103	21-20-01-596
22115-104	21-20-01-668
22115-105	21-20-01-192
22116-001	21-20-01-384
22119-001	21-60-04-45
22120-003	21-60-04-42
22122-001	21-20-01-533
22125-001	21-20-01-207
22132-001	32-42-01-525
22132-002	32-42-01-526
22133-001	25-10-06-231
22133-002	25-10-06-234
22133-003	25-10-06-237
22133-005	25-10-06-240
22133-006	25-10-06-243
22133-007	25-10-06-244
22134-001	25-10-06-261
22134-002	25-10-06-264
22134-003	25-10-06-267
22134-005	25-10-06-270
22134-006	25-10-06-273
22134-007	25-10-06-274
22150-001	22-12-04-150
23001-001	21-50-01-297
23137-001	28-40-01-131
23137-001	28-40-01-137
23137-002	28-40-01-59
23137-002	28-40-01-65
23137-003	30-06-01-684
23137-003	30-07-01-365
23137-004	30-07-01-373
23137-009	28-40-01-94
23137-009	28-40-01-168
23137-009	30-06-01-690
23137-009	30-07-01-370
23137-009	30-07-01-379
23137-011	28-40-01-132
23137-011	28-40-01-138
23137-012	28-40-01-60
23137-012	28-40-01-66
23137-013	30-07-01-366
23137-014	30-07-01-374
23505-001	76-10-01-221
23506-001	53-40-06-258
23508-001	27-50-01-41
23598-001	25-10-06-162
23598-002	25-10-06-165
23598-003	25-10-06-168
23598-005	25-10-06-171
23598-006	25-10-06-174
23623-102	71-00-04-66
23623-103	71-00-04-69
23623-104	71-00-04-72
23623-105	71-00-04-78
23623-106	71-00-04-81
23623-107	71-00-04-87
23623-108	71-00-04-90
23623-110	71-00-04-3
23623-111	71-00-04-75
23999-001	25-00-01-39
24278-019	11-30-06-6
24278-019	11-30-11-9
24278-019	11-30-13-9
24289-101	21-20-01-524
24289-101	21-20-01-575
24289-101	21-20-01-647
24289-102	21-20-01-515
24289-102	21-20-01-567
24289-102	21-20-01-638
24289-103	21-20-01-527
24289-103	21-20-01-578
24289-103	21-20-01-650
24289-105	21-20-01-516
24289-105	21-20-01-568
24289-105	21-20-01-539
24289-106	21-20-01-519
24289-106	21-20-01-571
24289-106	21-20-01-542
24510-101	34-10-01-711
24510-102	34-10-01-714
24510-103	34-10-01-717

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
24510-104	34-10-01-720
24510-104	34-10-01-753
24510-105	34-10-01-723
24510-106	34-10-01-726
24510-107	34-10-01-729
24510-108	34-10-01-732
24510-109	34-10-01-735
24510-110	34-10-01-738
24510-111	34-10-01-741
24510-112	34-10-01-744
24510-113	34-10-01-747
24510-114	34-10-01-750
24510-115	34-10-01-748
24510-116	34-10-01-749
24510-117	34-10-01-756
24510-118	34-10-01-759
24510-119	34-10-01-762
24510-120	34-10-01-765
24510-121	34-10-01-763
24510-122	34-10-01-764
24510-123	34-10-01-715
24510-124	34-10-01-733
24511-002	32-42-01-524
24523-001	27-31-01-15
24524-101	27-31-01-126
24524-102	27-31-01-117
24555-001	22-20-01-3
24557-002	24-30-10-33
24557-003	24-30-10-36
24576-001	27-00-03-138
24577-001	27-00-03-129
24584-001	77-20-01-42
24585-001	77-20-01-15
24618-001	31-30-03-5
24618-002	31-30-03-6
24618-005	31-30-03-7
24618-006	31-30-03-8
24640-001	23-30-01-3
24641-001	34-50-06-117
24642-001	27-50-01-223
24642-003	27-50-01-224
24642-004	27-50-01-225
24642-010	115-00-01-3
24642-011	115-00-01-4
24642-012	115-00-01-5
24643-001	22-12-05-3
24644-001	22-12-04-3
24644-002	22-12-02-3
24644-002	22-12-03-3
24644-003	22-12-04-6
24644-004	22-12-02-6
24644-004	22-12-03-6
24644-011	22-12-02-9
24644-011	22-12-04-9
24644-012	22-12-03-9
24644-013	22-12-02-12
24644-013	22-12-03-12
24644-013	22-12-04-12
24644-211	22-12-02-96
24644-211	22-12-03-75
24644-211	22-12-04-84
24644-212	22-12-02-66
24644-212	22-12-03-45
24644-212	22-12-04-54
24644-213	22-12-02-108
24644-213	22-12-03-87
24644-213	22-12-04-96
24644-220	22-12-03-15
24644-239	22-12-02-15
24644-261	22-12-04-15
24644-301	22-12-02-111
24644-301	22-12-02-114
24644-301	22-12-03-90
24644-301	22-12-03-93
24644-301	22-12-04-99
24644-301	22-12-04-102
24644-303	22-12-02-21
24644-303	22-12-03-21
24644-303	22-12-04-21
24644-304	22-12-02-117
24644-304	22-12-03-96
24644-304	22-12-04-105
24644-305	22-12-02-126
24644-305	22-12-03-105
24644-305	22-12-04-114
24644-306	22-12-02-120
24644-306	22-12-03-99
24644-306	22-12-04-108
24644-307	22-12-02-30
24644-307	22-12-03-30
24644-307	22-12-04-30
24644-320	22-12-03-18
24644-339	22-12-02-18
24644-361	22-12-04-18
24645-001	22-12-01-3
24645-002	22-12-01-6
24647-002	21-20-02-96
24647-003	21-20-02-99
24647-004	21-20-02-100
24649-001	32-42-02-162
24650-001	34-20-04-39
24650-001	34-20-04-51
24650-002	34-20-04-40
24650-002	34-20-04-52
24651-001	34-10-06-3
24651-001	34-10-06-15
24651-101	34-10-06-6
24651-101	34-10-06-18
24652-001	34-50-03-78
24652-101	34-50-03-84
24652-103	34-50-03-90
24653-001	34-50-03-75
24653-002	34-50-03-76
24653-101	34-50-03-81

PART NUMBER	CH–SEC–FIG–ITM
24653-102	34-50-03-87
24654-002	34-60-01-3
24655-001	31-60-02-51
24655-002	31-60-01-84
24655-003	31-60-02-42
24655-004	31-60-01-72
24655-011	31-60-02-52
24655-012	31-60-01-85
24655-161	31-60-01-90
24655-201	31-60-01-81
24655-201	31-60-01-93
24655-201	31-60-02-48
24655-201	31-60-02-57
24655-251	31-60-01-78
24656-002	23-50-01-96
24656-003	23-50-01-97
24657-001	34-50-06-84
24657-002	34-50-06-87
24657-003	34-50-06-88
24657-101	34-50-06-90
24657-102	34-50-06-93
24657-201	34-50-06-114
24658-001	34-50-07-3
24658-100	34-50-07-21
24659-001	34-50-08-3
24659-100	34-50-08-6
24659-101	34-50-08-9
24660-001	31-20-01-3
24660-002	31-20-01-6
24660-003	31-20-01-7
24660-004	31-20-01-8
24661-001	34-20-05-3
24661-001	34-20-05-45
24661-002	34-20-05-4
24661-002	34-20-05-46
24661-003	34-20-05-5
24661-003	34-20-05-47
24661-101	34-20-05-6
24661-101	34-20-05-48
24662-001	31-40-01-3
24662-001	31-40-01-21
24662-002	31-40-01-4
24662-002	31-40-01-22
24662-101	31-40-01-6
24662-101	31-40-01-24
24663-050	34-10-05-45
24666-001	77-40-03-3
24666-101	77-40-03-6
24668-001	34-20-02-7
24668-003	34-20-02-8
24685-001	24-30-10-39
24685-002	24-30-10-42
24695-001	11-30-01-608
24695-002	11-30-01-614
24698-001	25-60-02-64
24716-001	34-50-08-27
24732-001	34-50-07-30
24737-005	93-50-01-3
24737-006	93-50-01-4
24737-007	93-50-01-5
24737-010	93-50-01-6
24738-001	34-50-03-114
24742-101	34-50-02-123
24742-101	34-50-06-165
24742-111	34-50-02-124
24742-111	34-50-06-168
24743-001	33-10-01-48
24743-002	33-10-01-54
24748-001	31-60-03-3
24748-002	31-60-03-12
24761-002	79-30-01-40
24763-001	24-30-10-43
24763-101	24-30-10-82
24849-001	27-20-02-73
24881-002	30-07-01-330
24900-001	31-10-02-39
24900-002	31-10-02-42
24900-003	31-10-02-45
24900-004	31-10-02-54
24900-005	31-10-02-57
24920-001	11-20-06-55
24920-001	11-20-10-60
24920-001	11-20-12-60
24920-002	11-20-04-46
24920-003	11-20-03-46
24920-004	11-20-02-49
24920-005	11-20-05-73
24920-006	11-20-09-48
24932-001	33-10-01-23
24944-001	71-30-01-63
24946-001	33-40-01-363
24947-001	24-30-10-15
25019-015	32-10-02-257
25019-030	32-10-02-258
25019-040	32-10-02-259
25019-050	32-10-02-260
25019-063	32-10-02-261
25022-001	25-10-02-306
25037-001	76-10-01-222
25038-001	28-10-01-52
25038-001	28-10-01-127
25046-001	53-40-02-21
25046-001	53-40-02-27
25321-001	25-00-01-16
25322-001	25-00-01-15
25498-001	30-07-01-312
25498-002	30-07-01-315
25498-003	30-07-01-313
25498-004	30-07-01-316
2550-25	30-07-01-73
25597-003	77-20-02-3
25598-002	77-20-03-3
25632-102	11-30-01-360
25632-104	11-30-01-363

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
25632-112	11-30-01-369
25632-114	11-30-01-372
25632-122	11-30-01-381
25632-124	11-30-01-384
25632-132	11-30-01-366
25632-134	11-30-01-367
25632-142	11-30-01-375
25632-144	11-30-01-379
25632-152	11-30-01-387
25632-154	11-30-01-388
25758-001	27-31-01-216
25758-002	27-31-01-219
25759-001	27-31-01-210
25759-002	27-31-01-211
25769-001	11-20-01-70
25901-001	25-10-04-272
25901-002	25-10-04-273
25901-003	25-10-04-274
25901-004	25-10-04-275
25901-008	25-10-04-276
25904-001	71-00-02-766
25904-001	71-00-03-683
25907-002	11-30-01-794
25907-003	11-30-01-797
25907-ASN	11-30-01-809
25909-001	11-30-01-701
25921-102	30-07-01-701
25921-103	30-07-01-704
25996-001	25-10-05-752
25996-002	25-10-05-754
25996-003	25-10-05-756
25996-004	25-10-05-758
25997-001	25-10-05-722
25997-002	25-10-05-724
25997-003	25-10-05-726
25997-004	25-10-05-728
26034-001	30-07-01-213
26034-002	30-07-01-225
26034-003	30-07-01-237
26034-008	30-07-01-168
26034-010	30-07-01-75
26034-011	30-07-01-46
26034-012	30-07-01-112
26034-013	30-07-01-273
26115-001	30-06-01-171
26115-002	30-06-01-177
26115-101	30-07-01-16
26137-001	93-50-01-21
26137-002	93-50-01-22
26164-001	30-07-01-88
26168-001	32-20-01-159
26168-001	32-20-01-201
26310-001	32-20-02-375
26355-002	30-07-01-399
26355-003	30-07-01-500
26358-104	78-10-01-3
26358-108	71-70-01-638
26358-109	71-60-02-96
26358-109	71-60-02-144
26358-110	71-60-02-129
26358-110	71-60-02-138
26358-111	71-60-02-132
26358-111	71-60-02-141
26358-112	71-60-02-81
26358-112	71-60-02-90
26358-113	71-60-02-84
26358-113	71-60-02-93
26359-001	71-60-02-3
26359-101	71-60-02-27
26359-102	71-60-02-57
26367-001	71-60-02-9
26367-001	71-60-02-11
26367-002	71-60-02-10
26367-002	71-60-02-12
26370-002	73-30-01-7
26371-001	71-30-01-51
26371-002	71-30-01-57
26371-005	71-30-01-54
26371-006	71-30-01-60
26372-001	71-30-01-42
26373-001	71-30-01-12
26374-001	71-30-01-3
26376-001	71-30-01-21
26376-002	71-30-01-22
26377-001	71-20-02-39
26378-001	71-20-02-42
26380-001	71-00-03-581
26380-002	71-00-03-584
26381-001	71-00-03-587
26381-002	71-00-03-590
26391-001	71-60-02-7
26391-002	71-60-02-4
26391-003	71-60-02-6
26391-004	71-60-02-8
26391-005	71-60-02-5
26393-001	71-00-03-51
26393-001	71-00-03-117
26393-002	71-00-03-54
26393-003	71-00-03-57
26393-003	71-00-03-120
26396-001	71-60-02-99
26396-001	71-60-02-147
26397-001	71-00-03-60
26397-001	71-00-03-168
26397-003	71-00-03-171
26401-001	30-07-01-723
26405-101	71-30-01-9
26405-101	71-30-01-48
26607-001	32-20-01-216
26607-101	32-20-01-219
26607-102	32-20-01-222
26607-103	32-20-01-225
26607-104	32-20-01-231
26607-105	32-20-01-228

PART NUMBER	CH–SEC–FIG–ITM
26611-001	71-60-02-24
26612-101	28-10-01-196
26613-001	30-06-01-121
26613-001	30-07-01-305
26618-001	32-42-01-91
26656-001	23-20-01-108
26656-001	34-40-04-135
26659-001	34-40-04-4
26659-001	34-40-04-57
26659-050	34-40-04-111
26659-101	34-40-04-6
26659-101	34-40-04-60
26659-303	34-40-04-51
26659-303	34-40-04-105
26664-101	34-40-04-21
26664-102	34-40-04-24
26664-201	23-20-01-33
26664-201	23-20-01-84
26664-201	34-40-04-78
26664-202	23-20-01-36
26664-202	23-20-01-87
26664-202	34-40-04-75
26664-203	23-20-01-39
26664-203	23-20-01-90
26665-101	34-40-04-126
26666-001	34-40-04-147
26666-002	34-40-04-129
26666-003	34-40-04-132
26720-001	32-10-02-142
26721-001	28-10-01-37
26721-001	28-10-01-107
26722-001	28-10-01-39
26722-001	28-10-01-109
26723-001	25-10-03-81
26725-001	27-50-01-158
26725-002	27-50-01-159
26725-003	27-50-01-160
26725-004	27-50-01-157
26725-005	27-50-01-161
26725-006	27-50-01-162
26725-007	27-50-01-163
26725-008	27-50-01-164
26733-002	34-50-09-18
26740-002	53-40-06-351
26740-003	53-40-06-354
26755-001	30-07-01-66
26756-001	28-10-01-40
26756-001	28-10-01-110
26756-101	28-10-01-43
26756-101	28-10-01-113
26756-102	28-10-01-42
26756-102	28-10-01-112
26756-103	28-10-01-41
26756-103	28-10-01-111
26757-001	71-20-01-160
26757-001	71-20-02-28
26782-001	25-10-02-596
26783-001	25-10-02-599
26861-001	32-10-01-20
26861-002	32-10-01-38
26861-101	32-10-01-47
26861-102	32-10-01-56
26873-001	32-20-01-202
26880-001	32-20-01-246
26929-001	30-06-01-558
26929-001	30-07-01-750
26930-001	30-06-01-573
26930-001	30-07-01-762
26931-001	71-70-01-559
26931-002	71-70-01-145
26931-003	71-70-01-146
26931-003	71-70-01-560
26932-001	71-70-01-592
26932-002	71-70-01-187
26932-003	71-70-01-188
26932-003	71-70-01-593
26933-001	71-70-01-29
26933-001	71-70-01-366
26935-101	71-70-01-518
26935-102	71-70-01-650
26935-103	71-70-01-341
26935-104	71-70-01-543
26935-105	71-70-01-530
26935-106	71-70-01-378
26937-001	71-00-03-213
26937-003	71-00-03-216
26938-001	78-10-01-15
26938-002	78-10-01-16
26939-002	71-70-01-130
26939-003	71-70-01-551
26939-004	71-70-01-552
26951-001	71-70-01-632
26957-003	71-10-02-105
26960-001	32-20-01-198
26960-103	32-20-01-234
26960-104	32-20-01-235
27050-101	76-10-02-4
27052-001	71-00-03-674
27057-002	32-20-02-282
27075-001	71-60-02-39
27160-001	11-30-01-716
27160-002	11-30-01-704
27160-004	11-30-01-719
27160-005	11-30-01-707
27166-001	71-60-02-14
27203-002	71-10-01-22
27203-002	71-10-02-2
27203-003	71-10-01-23
27203-004	71-10-02-3
27203-005	71-10-01-24
27203-101	71-10-01-79
27203-101	71-10-02-36
27230-001	71-10-01-85
27230-001	71-10-02-39

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
27230-002	71-10-01-86
27230-002	71-10-02-40
27280-001	11-30-01-611
27280-002	11-30-01-617
27280-003	11-30-01-623
27280-004	11-30-01-624
27280-012	11-30-01-620
27280-014	11-30-01-625
27301-001	21-40-02-237
27425-001	27-50-01-40
27667-001	25-10-04-394
27668-001	25-10-04-500
27731-001	76-10-01-205
27731-002	76-10-01-206
27737-001	53-40-06-321
27739-003	71-10-02-82
27740-001	71-10-02-81
27742-001	71-10-02-51
27742-004	71-10-02-52
27971-001	76-10-01-142
27971-002	76-10-01-145
27971-003	76-10-01-143
27971-004	76-10-01-146
27976-001	76-10-01-178
27980-001	115-00-01-57
27981-001	115-00-01-60
27987-001	115-00-01-78
27988-001	115-00-01-9
28304-001	76-10-01-184
28310-001	30-07-01-738
28310-002	30-07-01-739
28403-001	71-00-03-78
28403-001	71-00-03-81
28403-001	71-60-02-159
28439-001	32-10-01-205
28439-002	32-10-01-206
28637-001	71-20-01-113
28658-001	53-20-02-37
28658-002	53-20-02-64
28658-003	53-20-02-41
28658-004	53-20-02-68
28658-005	53-20-02-38
28658-006	53-20-02-65
28658-007	53-20-02-42
28658-008	53-20-02-69
28658-009	53-20-02-44
28658-010	53-20-02-71
28658-017	53-20-02-39
28658-018	53-20-02-66
28658-019	53-20-02-43
28658-020	53-20-02-70
28658-021	53-20-02-45
28658-022	53-20-02-72
28659-001	21-20-02-27
28659-002	21-20-02-30
28704-001	77-10-02-6
28720-001	115-00-01-15
28723-001	115-00-01-87
28830-001	25-10-04-379
28830-002	25-10-04-375
28831-001	25-10-05-676
28831-002	25-10-05-668
28831-004	25-10-05-672
28851-101	25-10-07-88
28851-102	25-10-07-90
28851-104	25-10-07-97
28851-105	25-10-07-133
28851-106	25-10-07-79
28851-107	25-10-07-58
28851-109	25-10-07-49
28851-110	25-10-07-13
28851-111	25-10-07-31
28851-112	25-10-07-98
28851-113	25-10-07-99
28851-114	25-10-07-106
28851-115	25-10-07-118
28851-116	25-10-07-121
28851-117	25-10-07-130
28851-118	25-10-07-70
28851-122	25-10-07-32
28851-123	25-10-07-91
28851-124	25-10-07-89
28851-125	25-10-07-80
28851-126	25-10-07-119
28851-127	25-10-07-107
28851-128	25-10-07-131
28851-132	25-10-07-50
28878-001	21-20-01-536
28884-001	21-40-02-72
28886-101	25-10-07-34
28887-101	25-10-07-36
28891-001	71-60-02-48
28893-001	21-60-04-108
28895-002	71-60-02-37
28895-003	71-60-02-38
28941-002	25-10-05-270
28941-002	25-10-05-318
28941-003	25-10-05-324
28941-004	25-10-05-330
28941-005	25-10-05-294
28941-005	25-10-05-336
28941-006	25-10-05-300
28941-006	25-10-05-342
28941-007	25-10-05-306
28941-007	25-10-05-312
28942-002	25-10-05-506
28942-003	25-10-05-512
28942-004	25-10-05-518
28942-005	25-10-05-382
28942-005	25-10-05-524
28942-006	25-10-05-388
28942-006	25-10-05-530
28942-007	25-10-05-394
28942-007	25-10-05-500

PART NUMBER	CH–SEC–FIG–ITM
28943-001	25-10-05-296
28943-001	25-10-05-302
28943-001	25-10-05-308
28943-001	25-10-05-332
28943-001	25-10-05-338
28943-001	25-10-05-344
28943-002	25-10-05-272
28943-002	25-10-05-314
28943-002	25-10-05-320
28943-003	25-10-05-326
28944-001	25-10-05-384
28944-001	25-10-05-390
28944-001	25-10-05-396
28944-001	25-10-05-520
28944-001	25-10-05-526
28944-001	25-10-05-532
28944-002	25-10-05-502
28944-002	25-10-05-508
28944-003	25-10-05-514
28946-001	57-50-01-16
28946-002	57-50-01-31
28954-001	57-40-01-642
28954-002	57-40-01-643
28955-001	57-40-01-591
28956-001	57-40-01-609
28959-001	21-20-02-24
28962-001	25-10-04-308
28962-002	25-10-04-312
28962-003	25-10-04-309
28962-004	25-10-04-313
28963-001	25-10-04-298
28963-002	25-10-04-302
28963-003	25-10-04-299
28963-004	25-10-04-303
28965-001	21-20-01-234
28966-001	25-10-04-532
28966-002	25-10-04-535
28967-001	25-10-04-358
28967-002	25-10-04-354
28974-001	53-40-07-9
28986-001	27-50-01-166
28995-001	27-00-03-87
28995-002	27-00-03-105
28995-003	27-00-03-90
28995-004	27-00-03-108
28995-005	27-00-03-93
28995-006	27-00-03-111
28995-007	27-00-03-96
28995-0079L	27-00-03-102
28995-0079R	27-00-03-120
28995-008	27-00-03-114
28995-009	27-00-03-99
28995-010	27-00-03-117
28995-011	27-00-03-103
28995-012	27-00-03-118
29011-001	25-10-01-165
29011-002	25-10-01-168
29011-003	25-10-01-171
29011-004	25-10-01-174
29011-005	25-10-01-177
29011-006	25-10-01-180
29011-007	25-10-01-183
29011-008	25-10-01-186
29011-009	25-10-01-189
29011-010	25-10-01-192
29011-011	25-10-01-195
29011-012	25-10-01-198
29011-013	25-10-01-201
29011-014	25-10-01-204
29011-015	25-10-01-207
29012-001	25-10-02-54
29012-002	25-10-02-57
29012-003	25-10-02-60
29012-004	25-10-02-63
29012-005	25-10-02-66
29012-006	25-10-02-69
29012-007	25-10-02-72
29012-008	25-10-02-75
29012-009	25-10-02-78
29012-010	25-10-02-81
29012-011	25-10-02-84
29012-012	25-10-02-87
29012-013	25-10-02-90
29012-014	25-10-02-93
29012-015	25-10-02-96
29035-001	27-50-01-184
29077-002	25-10-05-616
29077-003	25-10-05-618
29077-004	25-10-05-620
29077-005	25-10-05-622
29077-006	25-10-05-624
29077-007	25-10-05-626
29077-008	25-10-05-628
29078-002	25-10-05-642
29078-003	25-10-05-644
29078-004	25-10-05-646
29078-005	25-10-05-648
29078-006	25-10-05-650
29078-007	25-10-05-652
29078-008	25-10-05-654
29080-004	53-40-06-360
29080-005	53-40-06-363
29080-006	53-40-06-393
29085-003	25-10-02-590
29085-004	25-10-02-593
29086-002	25-10-02-207
29087-003	25-10-02-617
29087-004	25-10-02-620
29089-002	25-10-02-204
29093-003	53-40-06-348
29093-004	53-40-06-345
29098-001	71-30-01-69
29103-001	25-10-03-45

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
29103-002	25-10-03-57
29132-001	79-20-02-9
29147-001	32-10-02-172
29147-002	32-10-02-181
29148-001	32-10-02-241
29149-001	32-10-02-151
29154-001	32-10-02-138
29191-001	25-10-05-688
29191-002	25-10-05-690
29191-003	25-10-05-692
29191-004	25-10-05-694
29191-005	25-10-05-696
29191-006	25-10-05-698
29199-001	32-10-02-270
29199-002	32-10-02-273
29200-001	53-40-05-78
29200-002	53-40-05-87
29211-001	77-20-02-6
29225-001	32-42-01-343
29225-002	32-42-01-349
29236-001	21-40-02-55
29245-001	53-40-06-584
29245-002	53-40-06-587
29246-001	53-40-06-572
29251-001	27-50-01-150
29251-002	27-50-01-151
29251-003	27-50-01-152
29251-004	27-50-01-149
29251-005	27-50-01-153
29251-006	27-50-01-154
29251-007	27-50-01-155
29251-008	27-50-01-156
29253-001	25-10-02-216
29254-001	71-60-02-28
29258-001	53-40-06-387
29258-002	53-40-06-390
29273-002	25-10-05-560
29273-003	25-10-05-562
29273-004	25-10-05-564
29275-002	25-10-05-570
29275-003	25-10-05-572
29275-004	25-10-05-574
29277-001	33-40-01-396
29293-001	53-40-06-375
29293-002	53-40-06-551
29293-003	53-40-06-554
29293-004	53-40-06-376
29293-005	53-40-06-552
29293-006	53-40-06-555
29296-001	53-40-06-521
29298-001	34-50-02-145
29301-001	34-50-02-142
29302-001	34-50-02-160
29302-002	34-50-02-161
29305-001	25-10-12-3
29305-002	25-10-12-4
29306-001	25-10-02-213
29307-001	34-50-09-3
29307-101	34-50-09-6
29307-102	34-50-09-9
29335-001	25-10-02-653
29335-002	25-10-02-656
29336-001	25-10-02-683
29337-002	25-10-02-692
29338-001	25-10-02-704
29339-001	25-10-02-695
29341-001	11-30-01-63
29341-002	11-30-01-75
29343-001	11-30-01-86
29343-002	11-30-01-87
29343-009	11-30-01-88
29343-010	11-30-01-89
29343-091	11-30-01-97
29343-092	11-30-01-98
29344-002	11-30-01-106
29344-091	11-30-01-107
29345-001	25-10-02-210
29375-001	25-10-02-884
29375-002	25-10-02-887
29376-001	25-10-02-219
29384-020	53-40-06-611
29384-032	53-40-06-614
29384-040	53-40-06-617
29384-050	53-40-06-620
29384-063	53-40-06-623
29385-001	53-40-06-270
29385-002	53-40-06-273
29385-003	53-40-06-297
29389-001	25-10-02-222
29389-002	25-10-02-225
29389-003	25-10-02-228
29389-004	25-10-02-231
29389-005	25-10-02-234
29389-006	25-10-02-237
29389-007	25-10-02-240
29389-008	25-10-02-243
29389-009	25-10-02-246
29389-010	25-10-02-249
29389-011	25-10-02-252
29389-012	25-10-02-255
29394-001	27-50-01-167
29395-001	25-10-02-602
29395-002	25-10-02-605
29396-001	23-50-01-98
29396-002	23-50-01-100
29396-003	23-50-01-99
29404-001	25-10-02-890
29409-001	27-50-01-392
29409-002	27-50-01-393
29412-001	53-40-06-324
29419-001	53-40-06-626
29427-001	25-10-02-120
29427-002	25-10-02-123
29427-003	25-10-02-126

PART NUMBER	CH–SEC–FIG–ITM
29427-004	25-10-02-129
29427-005	25-10-02-132
29427-006	25-10-02-135
29427-007	25-10-02-138
29427-008	25-10-02-141
29427-009	25-10-02-144
29427-010	25-10-02-147
29427-011	25-10-02-150
29427-012	25-10-02-153
29428-001	25-10-02-324
29428-002	25-10-02-327
29428-003	25-10-02-330
29428-004	25-10-02-333
29428-005	25-10-02-336
29428-006	25-10-02-339
29428-007	25-10-02-342
29428-008	25-10-02-345
29428-009	25-10-02-348
29428-010	25-10-02-351
29428-011	25-10-02-354
29428-012	25-10-02-357
29429-001	25-10-02-506
29429-002	25-10-02-509
29429-003	25-10-02-512
29429-004	25-10-02-515
29429-005	25-10-02-518
29429-006	25-10-02-521
29429-007	25-10-02-524
29429-008	25-10-02-527
29429-009	25-10-02-530
29429-010	25-10-02-533
29429-011	25-10-02-536
29429-012	25-10-02-539
29430-001	25-10-02-800
29430-002	25-10-02-803
29430-003	25-10-02-806
29430-004	25-10-02-809
29430-005	25-10-02-812
29430-006	25-10-02-815
29430-007	25-10-02-818
29430-008	25-10-02-821
29430-009	25-10-02-824
29430-010	25-10-02-827
29430-011	25-10-02-830
29430-012	25-10-02-833
29431-001	25-10-02-716
29431-002	25-10-02-719
29431-003	25-10-02-722
29431-004	25-10-02-725
29431-005	25-10-02-728
29431-006	25-10-02-731
29431-007	25-10-02-734
29431-008	25-10-02-737
29431-009	25-10-02-740
29431-010	25-10-02-743
29431-011	25-10-02-746
29431-012	25-10-02-749
29434-001	24-30-03-266
29434-001	24-30-04-253
29434-001	24-30-05-620
29434-001	24-30-06-137
29434-002	24-30-03-267
29434-002	24-30-04-254
29434-002	24-30-05-621
29434-002	24-30-06-138
29434-003	24-30-03-268
29434-003	24-30-04-256
29434-003	24-30-05-622
29434-003	24-30-06-140
29435-001	24-30-03-260
29435-001	24-30-04-249
29435-001	24-30-05-613
29435-001	24-30-06-133
29435-002	24-30-03-262
29435-002	24-30-04-250
29435-002	24-30-05-615
29435-002	24-30-06-134
29486-001	71-60-02-13
29489-001	25-10-01-210
29489-002	25-10-01-213
29489-003	25-10-01-216
29489-004	25-10-01-219
29489-005	25-10-01-222
29489-006	25-10-01-225
29489-007	25-10-01-228
29489-008	25-10-01-231
29489-009	25-10-01-234
29489-010	25-10-01-237
29489-011	25-10-01-240
29489-012	25-10-01-243
29494-001	25-10-02-707
29498-001	25-10-02-638
29498-002	25-10-02-641
29498-003	25-10-02-623
29498-004	25-10-02-626
29504-001	25-10-03-75
29507-001	30-07-01-69
29523-001	71-70-01-671
29523-001	71-70-01-680
29553-001	25-10-05-708
29553-001	25-10-06-503
29567-001	27-50-01-121
29568-001	25-10-06-500
29569-001	23-50-01-4
29585-002	24-30-10-115
29588-002	24-30-10-25
29589-001	53-40-10-4
29592-001	34-50-04-28
29592-050	34-50-04-82
29593-001	11-30-01-776
29593-002	11-30-01-782
29593-003	11-30-01-785
29611-001	53-30-01-53
29925-001	11-30-01-743

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
29925-002	11-30-04-4
29925-003	11-30-03-4
29925-004	11-30-02-4
29925-005	11-30-06-16
29925-006	11-30-11-19
29925-007	11-30-13-21
29926-008	11-30-05-18
30156-002	23-20-01-27
30156-002	23-20-01-78
30156-101	23-20-01-30
30156-101	23-20-01-81
30156-104	23-20-01-51
30156-104	23-20-01-102
30499-004	34-10-07-3
30499-006	34-10-07-4
30499-211	34-10-01-775
30499-212	34-10-07-6
30499-214	34-10-07-18
31392-001	32-42-02-120
31392-101	32-42-02-138
31392-102	32-42-02-126
31392-103	32-42-02-129
31392-104	32-42-02-123
31392-105	32-42-02-135
31392-106	32-42-02-150
31392-107	32-42-02-132
31392-108	32-42-02-147
31392-109	32-42-02-141
31392-110	32-42-02-144
31393-001	32-42-01-61
31393-002	32-42-01-388
31393-003	32-42-01-62
31393-004	32-42-01-63
31393-005	32-42-01-64
31394-001	32-42-01-166
31394-002	32-42-01-167
31490-001	32-42-01-376
31490-002	32-42-01-11
31490-003	32-42-01-17
31490-004	32-42-01-20
31490-005	32-42-01-22
31490-006	32-42-01-23
31490-006	32-42-01-187
31490-007	32-42-01-24
31490-007	32-42-01-188
31490-007	32-42-01-379
31490-008	32-42-01-186
31490-009	32-42-01-378
31491-001	32-10-02-140
31491-002	32-20-02-364
31491-003	32-20-02-361
31491-004	32-10-02-55
31492-001	32-20-02-340
31493-001	32-10-02-72
31796-001	71-60-02-102
31796-001	71-60-02-150
31796-002	71-60-02-105
31959-112	11-30-01-378
31982-001	25-10-01-246
31982-002	25-10-01-252
31982-003	25-10-01-258
31982-004	25-10-01-264
31982-005	25-10-01-270
31982-006	25-10-01-276
31982-007	25-10-01-282
31982-008	25-10-01-288
31982-009	25-10-01-294
31982-010	25-10-01-300
31982-011	25-10-01-306
31982-012	25-10-01-312
31982-013	25-10-01-318
31982-014	25-10-01-324
31982-015	25-10-01-330
31982-016	25-10-01-336
31982-051	25-10-01-249
31982-052	25-10-01-255
31982-053	25-10-01-261
31982-054	25-10-01-267
31982-055	25-10-01-273
31982-056	25-10-01-279
31982-057	25-10-01-285
31982-058	25-10-01-291
31982-059	25-10-01-297
31982-060	25-10-01-303
31982-061	25-10-01-309
31982-062	25-10-01-315
31982-063	25-10-01-321
31982-064	25-10-01-327
31982-065	25-10-01-333
31982-066	25-10-01-339
31983-001	25-10-02-156
31983-002	25-10-02-159
31983-003	25-10-02-162
31983-004	25-10-02-165
31983-005	25-10-02-168
31983-006	25-10-02-171
31983-007	25-10-02-174
31983-008	25-10-02-177
31983-009	25-10-02-180
31983-010	25-10-02-183
31983-011	25-10-02-186
31983-012	25-10-02-189
31983-013	25-10-02-192
31983-014	25-10-02-195
31983-015	25-10-02-198
31983-016	25-10-02-201
31984-001	25-10-02-258
31984-002	25-10-02-261
31984-003	25-10-02-264
31984-004	25-10-02-267
31984-005	25-10-02-270
31984-006	25-10-02-273
31984-007	25-10-02-276
31984-008	25-10-02-279

PART NUMBER	CH–SEC–FIG–ITM
31984-009	25-10-02-282
31984-010	25-10-02-285
31984-011	25-10-02-288
31984-012	25-10-02-291
31984-013	25-10-02-294
31984-014	25-10-02-297
31984-015	25-10-02-300
31984-016	25-10-02-303
31985-001	25-10-02-360
31985-002	25-10-02-363
31985-003	25-10-02-366
31985-004	25-10-02-369
31985-005	25-10-02-372
31985-006	25-10-02-375
31985-007	25-10-02-378
31985-008	25-10-02-381
31985-009	25-10-02-384
31985-010	25-10-02-387
31985-011	25-10-02-390
31985-012	25-10-02-393
31985-013	25-10-02-396
31985-014	25-10-02-399
31985-015	25-10-02-500
31985-016	25-10-02-503
31986-001	25-10-02-542
31986-002	25-10-02-545
31986-003	25-10-02-548
31986-004	25-10-02-551
31986-005	25-10-02-554
31986-006	25-10-02-557
31986-007	25-10-02-560
31986-008	25-10-02-563
31986-009	25-10-02-566
31986-010	25-10-02-569
31986-011	25-10-02-572
31986-012	25-10-02-575
31986-013	25-10-02-578
31986-014	25-10-02-581
31986-015	25-10-02-584
31986-016	25-10-02-587
31987-001	25-10-02-752
31987-002	25-10-02-755
31987-003	25-10-02-758
31987-004	25-10-02-761
31987-005	25-10-02-764
31987-006	25-10-02-767
31987-007	25-10-02-770
31987-008	25-10-02-773
31987-009	25-10-02-776
31987-010	25-10-02-779
31987-011	25-10-02-782
31987-012	25-10-02-785
31987-013	25-10-02-788
31987-014	25-10-02-791
31987-015	25-10-02-794
31987-016	25-10-02-797
31988-001	25-10-02-836
31988-002	25-10-02-839
31988-003	25-10-02-842
31988-004	25-10-02-845
31988-005	25-10-02-848
31988-006	25-10-02-851
31988-007	25-10-02-854
31988-008	25-10-02-857
31988-009	25-10-02-860
31988-010	25-10-02-863
31988-011	25-10-02-866
31988-012	25-10-02-869
31988-013	25-10-02-872
31988-014	25-10-02-875
31988-015	25-10-02-878
31988-016	25-10-02-881
31995-001	25-10-01-141
31995-002	25-10-01-144
31996-001	25-10-01-126
31996-001	25-10-01-129
31997-001	25-10-01-159
31997-002	25-10-01-162
32918-001	52-10-03-3
32918-002	52-10-03-6
32918-003	52-10-03-4
32918-004	52-10-03-7
32918-007	52-10-03-5
32918-008	52-10-03-8
32920-009	52-10-03-261
32920-010	52-10-03-264
32920-011	52-10-03-230
32920-012	52-10-03-234
32920-015	52-10-03-231
32920-016	52-10-03-235
33265-001	23-60-01-12
33266-001	23-60-01-15
33351-001	23-60-01-9
33361-001	23-60-01-3
33361-002	23-60-01-6
33361-101	23-60-01-30
33479-001	23-60-01-21
33514-001	52-10-03-271
33514-002	52-10-03-276
33514-003	52-10-03-272
33514-004	52-10-03-277
33514-005	52-10-03-273
33514-006	52-10-03-278
33515-001	52-10-03-246
33515-002	52-10-03-249
33520-001	52-10-03-294
33525-001	52-10-03-150
33525-002	52-30-01-64
33525-101	52-10-03-153
33525-102	52-10-03-156
33525-103	52-10-03-159
33525-104	52-10-03-162
33525-105	52-10-03-165
33573-001	52-10-03-174

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
33589-001	52-10-03-9
33589-002	52-10-03-12
33589-003	52-10-03-10
33589-004	52-10-03-13
33590-001	52-10-03-225
33938-001	25-60-02-70
33938-010	25-60-02-65
33938-011	25-60-02-66
33940-001	25-60-02-5
33940-010	25-60-02-8
33940-011	25-60-02-98
33940-012	25-60-02-37
33975-001	57-40-01-692
34390-001	11-30-10-28
34441-001	23-60-01-33
34506-003	25-10-04-628
34506-004	25-10-04-629
34727-001	31-10-01-308
34734-001	23-60-01-36
34815-001	11-30-01-588
34815-002	11-30-01-591
34841-001	24-50-01-42
34841-112	24-50-01-45
34983-001	34-10-07-9
34983-002	34-10-07-12
34983-003	34-10-07-15
350-4-0104	32-42-01-15
350-4-0120	32-42-01-12
350-4-0150	32-42-01-9
350-4-0164	32-42-01-18
35179-001	52-10-03-210
35180-001	52-10-03-213
35181-002	52-10-03-186
35245-001	23-20-01-120
35245-010	23-20-01-123
35574-001	95-00-02-15
35574-103	95-00-02-18
35574-104	95-00-02-21
35575-001	95-00-01-3
35591-001	23-30-02-3
35774-001	24-30-10-96
35854-001	95-00-03-3
35865-001	95-00-02-12
35888-105	95-00-02-27
35888-106	95-00-02-30
36517-002	24-50-06-3
36517-003	24-50-06-4
36774-001	52-10-03-333
36-0050626-03	33-40-02-42
37078-001	33-10-01-93
37078-002	33-10-01-105
37078-003	33-40-03-3
37158-001	24-50-03-3
37205-001	52-10-03-236
37205-002	52-10-03-266
37205-003	52-10-03-237
37205-004	52-10-03-267
37209-001	33-10-01-26
37210-001	33-10-01-27
37210-002	33-10-01-28
37223-001	52-10-03-324
37223-001	52-30-01-105
37248-001	33-10-01-24
37248-002	33-10-01-25
37250-001	33-10-01-117
37305-001	52-30-01-99
37305-002	52-30-01-102
37306-001	52-10-03-327
37312-001	11-20-01-58
37312-002	11-20-05-53
37312-002	11-20-06-47
37312-002	11-20-10-47
37312-002	11-20-12-47
37312-003	11-20-04-38
37312-004	11-20-03-38
37312-005	11-20-08-47
37312-006	11-20-02-41
37312-007	11-20-07-9
37312-008	11-20-09-35
37312-011	11-20-01-60
37312-012	11-20-05-54
37312-012	11-20-06-48
37312-012	11-20-10-48
37312-012	11-20-12-48
37312-013	11-20-04-39
37312-014	11-20-03-39
37312-015	11-20-08-48
37312-016	11-20-02-42
37312-017	11-20-07-12
37312-018	11-20-09-36
37364-001	33-10-01-71
37364-004	33-10-01-73
37364-005	33-10-01-75
37364-006	33-10-01-77
37364-101	33-10-01-78
37403-001	25-10-06-163
37403-002	25-10-06-166
37403-003	25-10-06-169
37403-005	25-10-06-172
37403-006	25-10-06-175
37613-001	52-10-03-201
37638-006	25-10-05-316
37638-007	25-10-05-322
37638-008	25-10-05-328
37638-010	25-10-05-334
37638-011	25-10-05-340
37639-006	25-10-05-504
37639-007	25-10-05-510
37639-008	25-10-05-516
37639-010	25-10-05-522
37639-011	25-10-05-528
38562-001	79-30-01-75
38562-002	79-30-01-96

PART NUMBER	CH–SEC–FIG–ITM
38-0130090-00	33-40-02-69
38-0130107-00	33-40-02-48
38-0130878-01	33-40-02-47
38-0231219-00	33-40-02-49
38-0250901-00	33-40-02-72
39731-001	57-40-01-273
39731-001	57-40-01-284
3-6N552-90	28-20-03-99
3-6N552-90	28-20-03-500
40-416	28-40-01-78
40-416	28-40-01-150
4410-1	22-11-02-63
452-6499	25-60-02-153
455-0012	25-60-02-150
50008-001	53-50-01-12
50008-001	53-50-01-15
50008-001	53-50-01-24
50008-001	53-50-01-27
50020-125	21-60-01-156
50020-125	21-60-03-345
50020-125	21-60-04-90
50020-125	76-10-02-117
50020-125	76-10-03-114
50020-125	76-10-04-87
50029-001	21-60-01-21
50029-001	21-60-01-54
50029-001	21-60-01-75
50029-001	27-50-01-279
50031-090	33-40-01-342
50042-001	24-30-07-54
50042-002	24-30-07-57
50042-214	53-40-11-18
50048-001	24-30-07-43
50048-002	24-30-07-33
50048-201	52-10-01-183
50048-201	52-10-01-273
50064-062	32-42-01-369
50083-090	33-40-01-339
50095-001	24-50-02-81
50095-003	25-10-06-145
50127-001	27-30-02-96
50132-001	21-20-01-72
50132-001	21-20-01-737
50132-001	21-20-02-123
50132-001	21-50-01-599
50132-001	21-60-02-530
50132-001	21-60-03-354
50132-001	24-30-10-135
50132-001	24-50-04-99
50132-001	25-10-01-668
50132-001	25-10-01-677
50132-001	25-60-01-42
50132-001	25-60-02-51
50132-001	27-31-01-93
50132-001	27-31-01-138
50132-001	27-31-01-174
50132-001	27-31-01-204
50132-001	28-10-01-156
50132-001	28-10-01-183
50132-001	28-10-01-201
50132-001	28-20-02-57
50132-001	30-05-01-162
50132-001	30-05-01-202
50132-001	30-05-01-225
50132-001	30-05-01-246
50132-001	30-05-01-300
50132-001	30-05-01-324
50132-001	30-05-01-361
50132-001	30-05-01-372
50132-001	30-06-01-218
50132-001	30-06-01-509
50132-001	30-06-01-518
50132-001	30-07-01-84
50132-001	30-07-01-109
50132-001	30-07-01-144
50132-001	30-07-01-162
50132-001	30-07-01-204
50132-001	30-07-01-563
50132-001	30-07-01-605
50132-001	30-07-01-635
50132-001	30-07-01-680
50132-001	30-07-01-714
50132-001	30-07-01-802
50132-001	31-30-03-18
50132-001	32-42-01-84
50132-001	32-42-01-291
50132-001	32-42-01-363
50132-001	32-42-02-177
50132-001	33-40-01-171
50132-001	33-40-01-252
50132-001	33-40-01-378
50132-001	34-10-01-48
50132-001	34-10-01-114
50132-001	34-10-01-777
50132-001	34-20-04-30
50132-001	34-20-04-78
50132-001	34-50-02-18
50132-001	34-50-02-75
50132-001	34-50-02-105
50132-001	34-50-02-162
50132-001	34-50-03-117
50132-001	34-50-04-75
50132-001	34-50-04-90
50132-001	34-50-07-24
50132-001	34-50-08-30
50132-001	115-00-01-72
50133-001	24-30-10-84
50141-001	28-10-01-51
50141-001	28-10-01-126
50141-001	30-05-01-99

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
50145-001	21-60-01-33
50145-001	21-60-01-66
50145-001	21-60-02-72
50145-001	21-60-02-93
50145-001	21-60-02-123
50145-001	21-60-03-51
50145-001	21-60-03-84
50145-002	52-10-01-330
50145-002	52-10-01-556
50145-005	25-10-02-698
50145-101	27-20-02-90
50145-201	27-31-01-105
50145-301	21-20-02-9
50145-301	34-10-01-66
50145-408	21-60-02-360
50145-408	52-10-02-315
50145-408	52-10-02-399
50145-601	30-07-01-641
50145-601	34-50-04-60
50145-701	27-31-01-108
50145-701	27-31-01-147
50146-001	21-60-01-27
50146-001	21-60-01-60
50146-001	21-60-01-81
50146-001	21-60-02-168
50146-001	21-60-02-192
50146-001	21-60-02-216
50146-001	21-60-03-105
50146-001	21-60-03-147
50152-001	24-30-09-45
50152-001	71-70-01-318
50152-002	28-10-01-198
50152-004	71-70-01-541
50152-209	71-70-01-15
50152-209	71-70-01-48
50152-209	71-70-01-75
50152-209	71-70-01-77
50152-209	71-70-01-79
50152-209	71-70-01-96
50152-209	71-70-01-108
50152-209	71-70-01-123
50152-209	71-70-01-243
50152-209	71-70-01-348
50152-209	71-70-01-387
50152-209	71-70-01-509
50152-209	71-70-01-527
50152-209	71-70-01-536
50152-209	71-70-01-542
50152-209	71-70-01-548
50152-209	71-70-01-656
50154-001	31-10-01-191
50154-001	31-60-01-45
50154-001	31-60-01-48
50157-001	22-10-01-21
50157-001	27-00-03-144
50157-001	27-50-01-75
50157-001	27-50-01-318
50157-001	34-10-02-9
50157-001	34-10-03-18
50157-001	34-10-04-12
50157-001	34-20-01-36
50157-001	34-20-03-21
50157-002	27-50-01-78
50158-002	22-10-01-18
50158-002	22-20-01-9
50158-002	34-10-02-6
50158-002	34-10-03-15
50158-002	34-10-04-9
50158-002	34-20-01-33
50158-002	34-20-03-18
50158-003	27-10-03-165
50158-003	27-30-02-138
50158-003	27-30-02-234
50158-003	34-40-03-42
50158-009	27-50-01-72
50158-009	27-50-01-285
50158-009	27-50-01-309
50158-012	27-00-03-141
50158-012	27-50-01-288
50158-012	27-50-01-312
50158-015	27-50-01-315
50162-001	73-30-01-18
50164-001	77-10-02-27
50165-001	77-10-02-30
50167-001	77-10-02-21
50167-001	79-30-01-54
50167-002	77-10-02-24
50167-002	79-30-01-57
50167-003	79-30-01-58
50167-004	79-30-01-59
50169-001	28-20-01-171
50169-001	28-20-01-204
50181-001	24-50-03-12
50200-001	27-30-02-48
50200-001	27-30-02-183
50200-101	71-60-01-33
50200-101	71-60-01-57
50200-201	27-20-02-45
50200-301	21-40-02-144
50200-301	27-20-04-69
50200-501	27-50-01-195
50204-001	32-42-01-165
50206-250	71-60-01-147
50206-250	71-60-01-159
50206-250	71-60-01-300
50207-001	71-60-01-114
50207-200	71-60-01-117
50208-001	71-00-02-96
50208-001	71-00-03-231
50208-001	71-00-03-294
50209-001	71-70-01-321
50215-001	32-42-01-273
50216-001	24-30-05-180
50221-001	78-20-01-126

PART NUMBER	CH–SEC–FIG–ITM
50221-001	78-20-01-189
50221-001	78-20-01-300
50221-001	78-20-01-327
50223-001	52-10-03-315
50223-001	76-10-02-84
50223-001	76-10-03-81
50223-001	76-10-04-54
50224-001	55-20-01-33
50239-010	21-40-02-198
50239-010	22-10-01-78
50239-010	22-11-01-54
50239-010	25-60-02-57
50239-010	27-50-01-300
50239-010	31-60-03-9
50239-010	31-60-03-27
50239-010	34-20-04-33
50239-010	34-20-04-81
50239-020	21-20-01-141
50239-020	21-20-02-78
50239-020	21-20-02-120
50239-020	24-30-10-138
50239-020	24-50-04-12
50239-020	24-50-04-102
50239-020	25-10-01-671
50239-020	25-10-01-680
50239-020	25-60-01-45
50239-020	25-60-02-54
50239-020	27-10-03-159
50239-020	27-31-01-90
50239-020	27-31-01-135
50239-020	28-20-02-60
50239-020	31-30-03-21
50239-020	32-42-02-180
50239-020	34-50-02-21
50239-020	34-50-02-78
50239-020	34-50-02-108
50239-020	34-50-02-165
50239-020	34-50-03-120
50239-020	34-50-04-78
50239-020	34-50-04-93
50239-020	34-50-07-27
50239-020	34-50-08-33
50239-020	115-00-01-39
50239-020	115-00-01-75
50239-040	21-20-01-6
50239-040	21-20-01-12
50239-040	21-20-01-18
50239-040	21-20-01-27
50239-040	21-20-01-45
50239-040	21-20-01-63
50239-040	21-20-01-75
50239-040	21-20-01-84
50239-040	21-20-01-195
50239-040	21-20-01-225
50239-040	21-20-01-246
50239-040	21-20-01-282
50239-040	21-20-01-312
50239-040	21-20-01-333
50239-040	21-20-01-399
50239-040	21-20-01-506
50239-040	21-20-01-539
50239-040	21-20-01-545
50239-040	21-20-01-551
50239-040	21-20-01-557
50239-040	21-20-01-563
50239-040	21-20-01-590
50239-040	21-20-01-599
50239-040	21-20-01-623
50239-040	21-20-01-632
50239-040	21-20-01-662
50239-040	21-20-01-671
50239-040	21-20-01-719
50239-040	21-50-01-602
50239-040	21-60-02-533
50239-040	21-60-03-357
50239-040-1	71-00-04-33
50242-001	71-70-01-33
50242-001	71-70-01-375
50246-001	27-20-02-60
50257-001	34-10-05-18
50274-001	34-50-05-69
50274-001	77-10-01-15
50274-001	77-10-02-45
50274-001	77-20-01-54
50274-001	79-30-01-12
50279-003	77-40-01-30
50285-001	34-50-03-66
50285-001	34-50-04-69
50288-001	22-11-03-51
50288-001	24-50-02-78
50288-001	24-50-02-150
50288-001	24-50-03-27
50288-001	27-10-04-3
50288-001	27-10-04-6
50288-001	27-30-03-3
50288-001	27-30-03-6
50288-001	27-50-01-390
50288-001	27-50-01-391
50288-006	27-50-01-387
50288-006	27-50-01-388
50289-001	22-11-03-54
50289-001	24-50-02-63
50289-001	24-50-02-138
50289-001	24-50-03-18
50289-001	27-10-04-9
50289-001	27-30-03-9
50289-001	27-50-01-394
50293-001	21-60-02-144
50293-001	27-10-04-27
50293-001	27-30-03-27
50295-001	21-60-02-147
50295-001	27-10-04-42
50295-001	27-30-03-42
50296-002	23-50-01-69

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
50297-001	23-50-01-36
50298-001	23-50-01-48
50299-001	23-50-01-60
50299-002	23-50-01-64
50300-001	24-50-01-33
50301-001	24-50-01-36
50314-001	74-30-01-3
50321-001	24-50-03-15
50322-001	27-50-01-264
50323-001	27-50-01-261
50325-001	23-50-01-45
50325-001	23-50-01-57
50327-001	21-60-02-162
50327-001	21-60-02-186
50327-001	21-60-02-210
50327-001	21-60-02-276
50327-001	21-60-03-99
50327-001	21-60-03-141
50327-001	23-50-01-42
50327-001	23-50-01-54
50327-006	30-40-01-12
50327-007	25-10-01-554
50328-001	24-50-03-3
50329-101	28-20-03-33
50329-101	28-20-03-45
50329-101	28-20-03-265
50329-101	28-20-03-279
50331-001	28-20-02-105
50332-001	31-50-01-51
50333-001	24-30-08-27
50333-001	31-50-01-54
50334-001	24-30-08-24
50334-001	31-50-01-57
50336-001	27-50-01-213
50336-002	27-50-01-216
50336-003	27-50-01-219
50336-004	21-60-03-54
50336-004	21-60-03-120
50336-005	27-50-01-222
50337-001	27-00-03-162
50339-001	27-00-03-153
50339-001	27-00-03-168
50340-001	27-00-03-147
50340-003	27-00-03-150
50349-001	34-10-01-4
50349-001	34-10-01-73
50349-001	34-10-01-709
50350-002	24-50-02-18
50350-002	24-50-02-105
50350-003	24-50-02-21
50350-003	24-50-02-108
50350-005	24-50-02-24
50350-005	24-50-02-111
50350-007	24-50-02-27
50350-007	24-50-02-114
50350-010	24-30-10-144
50350-010	24-50-02-30
50350-010	24-50-02-117
50350-015	24-50-02-33
50350-015	24-50-02-120
50350-020	24-50-02-36
50350-020	24-50-02-123
50352-001	34-10-05-3
50365-002	34-50-04-81
50366-001	24-30-09-3
50370-001	28-20-03-31
50370-001	28-20-03-43
50371-001	71-70-01-228
50372-001	71-70-01-76
50372-001	71-70-01-81
50372-001	71-70-01-111
50372-001	71-70-01-515
50372-001	71-70-01-539
50379-002	25-60-01-99
50379-002	34-50-04-51
50385-001	22-10-01-66
50385-001	22-11-01-33
50385-001	27-31-01-96
50385-001	34-10-01-36
50385-001	34-10-01-105
50385-001	34-10-01-357
50385-001	34-10-01-563
50385-001	34-10-01-617
50385-001	34-10-01-768
50385-001	34-10-01-861
50386-001	27-31-01-99
50386-001	34-10-01-39
50386-001	34-10-01-108
50386-001	34-10-01-363
50386-001	34-10-01-393
50386-001	34-10-01-626
50386-001	34-10-01-692
50386-001	34-10-01-771
50386-001	34-10-01-864
50387-001	34-10-01-42
50387-001	34-10-01-111
50387-001	34-10-01-774
50387-001	34-10-01-792
50388-001	24-30-10-132
50388-001	34-10-01-312
50388-001	34-10-01-351
50388-001	34-10-01-831
50389-002	34-10-01-45
50391-001	34-10-01-303
50404-100	71-70-01-659
50404-100	71-70-01-665
50404-750	71-70-01-264
50404-750	71-70-01-270
50404-750	71-70-01-692
50405-001	31-60-01-54
50408-001	27-50-01-44
50428-001	30-05-01-199
50428-001	30-06-01-285
50428-001	30-07-01-671

PART NUMBER	CH–SEC–FIG–ITM
50428-001	34-10-01-60
50428-001	34-10-01-129
50428-001	34-10-01-751
50428-001	34-10-01-795
50428-002	30-05-01-200
50428-002	30-06-01-282
50428-002	30-07-01-674
50433-002	21-20-01-144
50435-736	76-10-02-120
50435-736	76-10-03-117
50435-736	76-10-04-90
50442-001	78-20-01-390
50455-001	25-00-01-3
50456-001	78-20-01-81
50456-001	78-20-01-105
50456-001	78-20-01-138
50456-001	78-20-01-156
50456-001	78-20-01-282
50457-001	23-50-01-24
50457-001	25-10-04-129
50457-001	25-10-04-525
50457-001	25-10-05-99
50457-001	25-10-05-108
50457-001	25-10-06-297
50457-001	26-20-01-24
50457-001	53-20-01-69
50457-001	53-20-01-198
50458-001	25-10-04-126
50458-001	25-10-04-522
50458-001	25-10-05-102
50458-001	25-10-05-111
50458-001	25-10-05-153
50458-001	25-10-05-219
50458-001	25-10-05-804
50458-001	25-10-07-37
50458-001	53-20-01-72
50458-001	53-20-01-201
50458-002	23-50-01-27
50458-002	25-10-06-294
50463-200	21-20-01-78
50464-002	21-20-01-57
50465-001	34-30-01-27
50465-001	34-50-02-27
50465-001	34-50-02-84
50465-001	34-50-02-114
50465-001	34-50-03-63
50465-001	34-50-03-69
50465-001	34-50-04-66
50475-001	52-10-01-195
50478-001	25-60-01-93
50479-001	25-60-01-96
50485-001	31-30-01-3
50486-002	52-30-01-27
50486-002	78-20-01-171
50486-002	78-20-01-309
50486-101	25-10-04-120
50486-101	25-10-04-192
50486-101	32-42-01-523
50486-101	53-20-01-87
50486-101	53-20-01-96
50486-101	53-20-01-105
50486-101	53-20-01-129
50486-101	53-20-01-141
50486-101	53-20-01-165
50486-101	53-20-01-174
50486-101	53-20-01-183
50486-101	53-20-01-192
50486-102	25-10-04-225
50486-102	25-10-04-721
50486-102	25-10-04-742
50487-001	52-10-01-562
50487-002	52-30-01-6
50491-001	33-10-01-63
50491-002	33-10-01-69
50494-001	23-50-01-90
50494-001	25-10-02-321
50494-001	25-10-04-24
50494-001	25-10-05-60
50494-001	25-10-05-75
50494-001	25-10-05-87
50494-001	25-10-05-132
50494-001	25-10-06-129
50494-001	25-10-06-177
50494-001	25-10-06-288
50494-001	25-10-06-539
50494-001	25-10-06-551
50494-001	34-40-02-81
50494-001	34-50-02-12
50494-002	21-20-01-99
50494-002	25-10-04-21
50494-002	25-10-05-57
50494-002	25-10-05-84
50494-002	25-10-05-135
50494-002	25-10-06-132
50494-002	25-10-06-180
50494-002	25-10-06-291
50494-002	25-10-06-542
50494-002	25-10-06-554
50494-002	34-40-02-87
50494-002	34-50-02-15
50497-001	53-40-02-3
50498-200	32-10-01-204
50498-200	32-20-01-114
50498-200	32-20-01-153
50498-200	32-20-01-195
50498-200	32-20-01-243
50498-200	53-30-01-48
50499-001	52-10-01-351
50499-001	52-10-01-369
50499-001	52-10-01-396
50499-001	52-10-01-526
50500-003	52-10-01-345
50500-003	52-10-01-550
50500-004	33-40-01-87

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
50500-005	33-40-01-50
50500-005	33-40-01-84
50507-002	33-40-02-120
50511-012	33-10-01-87
50511-016	33-10-01-90
50525-101	28-10-01-15
50525-103	28-10-01-21
50525-104	28-10-01-24
50525-105	28-10-01-12
50526-001	28-10-01-9
50527-001	25-10-04-54
50527-001	25-10-04-174
50527-001	25-10-04-633
50527-001	25-10-05-27
50527-001	25-10-05-72
50527-001	25-10-05-120
50527-001	25-10-05-129
50527-001	25-10-06-90
50527-001	25-10-06-279
50527-001	25-10-06-336
50527-001	25-10-06-390
50527-001	25-10-06-524
50532-001	25-10-08-3
50533-001	23-50-01-84
50533-002	23-50-01-87
50543-001	32-20-02-177
50543-001	32-20-02-327
50544-001	32-20-02-174
50544-001	32-20-02-324
50545-001	32-20-02-180
50545-001	32-20-02-330
50546-001	32-20-02-183
50550-001	25-10-05-144
50550-001	57-50-01-260
50551-052	32-42-01-102
50553-001	21-60-01-129
50553-001	21-60-01-135
50553-001	32-42-01-120
50555-046	32-42-01-303
50555-072	32-42-01-249
50555-072	32-42-01-306
50555-072	32-42-01-375
50555-105	32-42-01-16
50555-120	32-42-01-13
50555-150	32-42-01-10
50555-164	32-42-01-19
50555-200	32-42-01-21
50557-001	21-60-01-141
50561-045	53-50-01-39
50566-002	27-31-01-78
50566-002	27-31-01-120
50566-002	34-10-01-566
50566-002	34-10-01-620
50566-002	34-40-02-126
50566-003	28-20-02-63
50566-003	28-20-02-201
50566-050	28-10-01-147
50566-050	30-06-01-78
50566-050	30-07-01-336
50566-063	21-50-01-590
50566-063	28-10-01-153
50567-001	52-10-01-586
50567-001	52-10-01-634
50567-001	52-10-02-563
50567-001	52-10-02-621
50567-001	52-10-03-96
50567-001	52-10-03-129
50568-001	53-40-03-63
50568-001	53-40-03-75
50568-001	53-40-03-171
50568-001	53-40-03-183
50577-131	27-10-03-126
50577-131	27-10-03-132
50577-132	21-60-01-24
50577-132	21-60-01-57
50577-132	21-60-01-78
50577-132	27-30-02-66
50579-001	52-10-01-631
50580-001	52-10-01-629
50597-001	76-10-01-85
50598-001	76-10-01-54
50598-001	76-10-01-199
50608-001	33-10-01-21
50608-001	33-10-01-66
50610-001	27-10-03-103
50625-001	33-40-02-96
50626-001	33-40-02-12
50626-002	33-40-02-3
50627-001	25-00-01-9
50640-045	25-10-05-678
50640-045	53-30-02-27
50640-045	53-50-01-36
50640-045	53-50-02-9
50641-025	25-10-01-102
50641-025	31-30-01-6
50648-012	71-00-04-84
50648-033	21-20-01-615
50649-001	27-50-01-105
50657-002	25-10-08-12
50657-002	25-10-08-33
50657-002	25-10-08-36
50673-001	25-10-04-169
50673-001	57-50-01-261
50683-001	25-10-05-165
50683-001	25-10-05-198
50691-001	52-10-01-207
50692-001	52-10-01-246
50692-004	25-10-05-600
50692-010	21-40-02-129
50698-001	71-10-01-33
50698-001	71-10-01-54
50698-001	71-10-01-57
50698-001	71-10-01-126
50698-001	71-10-01-156

PART NUMBER	CH–SEC–FIG–ITM
50698-001	71-10-01-159
50698-001	71-10-01-162
50698-001	71-10-01-207
50698-001	71-10-01-210
50698-001	71-10-01-243
50698-001	71-10-01-309
50698-001	71-10-01-324
50698-001	71-10-02-24
50698-001	71-10-02-72
50698-001	71-10-02-102
50698-001	71-10-02-132
50698-001	71-10-02-162
50699-007	71-10-01-36
50699-007	71-10-01-39
50699-007	71-10-01-129
50699-007	71-10-01-132
50699-007	71-10-01-135
50699-007	71-10-01-225
50699-007	71-10-01-300
50699-007	71-10-01-315
50699-007	71-10-02-6
50699-007	71-10-02-54
50699-007	71-10-02-84
50699-007	71-10-02-114
50699-007	71-10-02-144
50699-009	71-10-01-25
50699-009	71-10-01-118
50699-009	71-10-01-191
50699-009	71-10-01-192
50700-063	71-10-01-96
50700-063	71-10-01-174
50700-063	71-10-01-285
50700-063	71-10-01-339
50701-001	71-10-01-87
50701-001	71-10-01-90
50701-002	71-10-01-91
50701-002	71-10-02-42
50704-001	71-10-01-30
50704-001	71-10-01-48
50704-001	71-10-01-51
50704-001	71-10-01-123
50704-001	71-10-01-147
50704-001	71-10-01-150
50704-001	71-10-01-153
50704-001	71-10-01-201
50704-001	71-10-01-204
50704-001	71-10-01-240
50704-001	71-10-01-306
50704-001	71-10-01-321
50704-001	71-10-02-21
50704-001	71-10-02-69
50704-001	71-10-02-99
50704-001	71-10-02-129
50704-001	71-10-02-159
50713-001	34-30-01-24
50713-001	34-50-02-24
50713-001	34-50-02-81
50713-001	34-50-02-111
50713-001	34-50-03-60
50713-001	34-50-04-72
50713-002	34-30-01-25
50713-002	34-50-02-72
50713-002	34-50-02-112
50713-002	34-50-04-73
50722-001	21-20-02-75
50722-001	21-20-02-117
50739-001	25-10-08-90
50741-005	32-10-01-132
50742-020	21-40-02-46
50742-020	21-40-02-52
50742-020	21-40-02-61
50742-020	21-40-02-70
50742-020	21-40-02-79
50742-020	33-40-02-119
50742-020	71-20-01-216
50743-101	24-30-02-54
50743-101	57-40-01-396
50743-101	71-70-01-276
50743-102	71-60-02-60
50743-201	27-30-02-87
50743-301	21-20-01-54
50743-301	21-20-01-93
50743-301	21-40-01-48
50743-301	21-40-01-60
50743-401	71-70-01-12
50743-401	71-70-01-45
50743-401	71-70-01-72
50743-401	71-70-01-93
50743-401	71-70-01-105
50743-401	71-70-01-120
50743-401	71-70-01-240
50743-401	71-70-01-345
50743-401	71-70-01-384
50743-401	71-70-01-506
50743-401	71-70-01-524
50743-401	71-70-01-533
50743-401	71-70-01-545
50743-401	71-70-01-653
50743-451	32-42-01-276
50743-501	57-40-01-693
50743-501	71-20-01-105
50743-501	71-20-01-210
50743-501	71-70-01-677
50743-501	71-70-01-686
50743-601	71-30-01-6
50743-601	71-30-01-45
50743-601	71-30-01-66
50743-601	71-70-01-273
50743-601	71-70-01-279
50743-601	71-70-01-668
50743-601	71-70-01-683
50743-601	71-70-01-695
50743-651	21-40-02-47
50743-651	21-40-02-53

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
50743-651	21-40-02-62
50743-651	21-40-02-71
50743-651	21-40-02-80
50743-701	71-60-01-177
50743-701	71-60-01-327
50743-751	21-20-01-123
50743-751	21-20-01-713
50743-751	21-20-01-731
50743-801	21-20-01-226
50743-801	21-20-01-722
50743-801	21-40-01-51
50743-801	21-40-01-63
50743-801	21-40-02-18
50743-801	21-40-02-39
50743-801	21-40-02-45
50743-801	21-40-02-51
50743-801	21-40-02-60
50743-801	21-40-02-69
50743-801	21-40-02-78
50743-801	28-20-03-47
50743-801	28-20-03-283
50743-801	71-30-01-72
50743-801	71-60-01-150
50743-801	71-60-01-162
50743-801	71-60-01-321
50743-901	21-20-01-126
50743-901	21-20-01-716
50743-901	21-20-01-734
50743-901	71-60-01-231
50743-901	71-60-02-25
50743-901	71-60-02-35
50743-902	71-60-02-26
50743-902	71-60-02-36
50743-902	79-20-02-12
50745-005 TO -008	53-40-01-69
50745-005 TO -008	53-40-01-138
50745-005 TO -008	53-40-01-205
50745-005 TO -008	53-40-01-286
50745-005 TO -008	53-40-01-310
50745-010	53-40-01-54
50745-010	53-40-01-271
50745-010	57-10-01-45
50748-001	28-20-02-48
50748-001	28-20-02-189
50748-101	25-10-06-506
50748-101	34-20-01-30
50750-101	32-20-02-135
50757-006	25-10-05-546
50757-006	25-10-05-706
50757-006	34-20-04-12
50757-006	34-50-05-60
50757-006	52-30-01-96
50757-007	34-20-04-15
50757-007	34-50-05-63
50757-008	25-10-05-766
50757-008	25-10-05-830
50757-008	25-10-05-834
50757-008	25-10-05-844
50757-008	25-10-06-138
50757-008	25-10-06-378
50757-008	25-10-06-569
50757-008	34-20-04-17
50757-008	34-50-05-66
50757-011	25-10-05-542
50757-014	25-10-05-764
50757-014	25-10-05-832
50757-014	25-10-05-842
50757-014	25-10-06-566
50759-001	23-50-01-30
50759-001	25-10-05-18
50759-001	25-10-05-96
50763-001	25-10-07-162
50763-002	25-10-05-36
50763-002	25-10-05-48
50763-002	25-10-05-192
50763-002	25-10-05-240
50763-002	25-10-05-252
50763-002	25-10-05-820
50763-002	25-10-05-828
50763-002	25-10-07-159
50764-001	71-00-02-768
50764-001	71-00-03-686
50787-063	27-31-01-75
50788-001	71-10-01-231
50788-001	71-10-02-9
50788-001	71-10-02-57
50788-001	71-10-02-87
50788-001	71-10-02-117
50788-001	71-10-02-147
50788-002	71-10-01-27
50788-002	71-10-01-42
50788-002	71-10-01-45
50788-002	71-10-01-120
50788-002	71-10-01-138
50788-002	71-10-01-141
50788-002	71-10-01-144
50788-002	71-10-01-195
50788-002	71-10-01-198
50788-002	71-10-01-228
50788-002	71-10-01-303
50788-002	71-10-01-318
50788-002	71-10-02-12
50788-002	71-10-02-60
50788-002	71-10-02-90
50788-002	71-10-02-120
50788-002	71-10-02-150
50788-101	71-10-01-237
50788-101	71-10-02-18
50788-101	71-10-02-66
50788-101	71-10-02-96

PART NUMBER	CH–SEC–FIG–ITM
50788-101	71-10-02-126
50788-101	71-10-02-156
50788-102	71-10-01-234
50788-102	71-10-02-15
50788-102	71-10-02-63
50788-102	71-10-02-93
50788-102	71-10-02-123
50788-102	71-10-02-153
50789-001	24-50-04-3
50791-001	25-10-08-21
50791-002	25-10-08-24
50792-001	25-10-08-84
50793-375	53-20-01-30
50793-375	53-20-01-135
50793-500	53-20-01-138
50801-001	25-10-05-174
50801-001	25-10-05-207
50802-001	32-10-01-168
50803-001	32-10-01-174
50804-006	25-10-02-102
50804-006	25-10-04-150
50809-007	25-10-04-315
50809-007	25-10-10-18
50809-007	25-10-10-57
50809-010	25-10-04-314
50813-001	22-10-01-9
50813-001	24-30-08-15
50813-001	25-10-02-111
50813-001	25-10-04-15
50813-001	25-10-04-159
50813-001	25-10-04-675
50813-001	25-10-05-30
50813-001	25-10-05-33
50813-001	25-10-05-45
50813-001	25-10-05-189
50813-001	25-10-05-237
50813-001	25-10-05-249
50813-001	25-10-05-818
50813-001	25-10-05-826
50813-001	25-10-05-840
50813-001	25-10-06-575
50813-001	27-20-05-18
50813-001	28-40-01-15
50813-001	31-10-01-171
50813-001	31-10-01-186
50813-001	31-50-01-45
50813-001	34-10-02-15
50813-001	34-10-03-24
50813-001	34-10-04-18
50813-001	34-20-01-69
50813-001	34-20-02-12
50813-001	34-20-03-12
50813-001	34-40-03-9
50813-001	34-50-04-12
50813-001	34-50-04-24
50813-001	34-50-05-9
50813-001	77-10-01-12
50813-001	77-10-02-42
50813-001	77-20-01-51
50813-001	79-30-01-9
50813-001	115-00-01-30
50813-001	115-00-01-45
50813-002	25-10-05-538
50813-002	25-10-05-704
50813-002	25-10-05-850
50813-002	25-10-06-141
50813-002	25-10-06-381
50813-002	25-10-06-521
50813-002	25-10-06-590
50813-002	25-10-09-9
50813-002	31-10-01-229
50813-002	31-10-01-237
50813-002	77-40-01-27
50813-002	77-40-02-12
50813-002	115-00-01-21
50813-003	25-10-08-87
50813-003	31-10-01-30
50813-003	31-10-01-45
50813-003	31-10-01-48
50813-003	31-10-01-60
50813-003	31-10-01-69
50813-003	33-40-01-219
50813-003	33-40-01-393
50823-001	21-60-02-237
50823-001	21-60-02-252
50823-001	21-60-03-186
50823-001	76-10-01-81
50823-001	76-10-01-220
50825-001	52-10-01-165
50826-001	52-10-01-159
50829-001	24-30-08-18
50830-001	25-10-02-99
50831-375	53-20-03-30
50832-004	25-10-04-51
50832-006	25-10-04-85
50832-006	25-10-04-171
50832-006	25-10-04-359
50832-006	25-10-05-69
50832-006	25-10-05-117
50832-006	25-10-06-333
50833-004	25-10-05-24
50833-006	25-10-05-126
50833-006	25-10-06-87
50833-006	25-10-06-276
50833-006	25-10-06-387
50833-006	25-10-06-512
50834-007	25-10-04-636
50834-007	25-10-05-702
50834-007	25-10-05-838
50834-007	25-10-06-518
50834-007	31-50-01-48
50834-007	34-40-03-6
50834-007	115-00-01-33
50834-007	115-00-01-48

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
50834-010	25-10-04-630
50834-010	25-10-05-760
50834-010	25-10-05-848
50834-010	25-10-06-578
50834-010	31-10-01-168
50834-010	34-20-01-15
50834-010	34-20-01-66
50834-010	34-50-05-6
50834-012	22-10-01-6
50834-012	25-10-06-581
50834-014	24-30-08-12
50834-014	25-10-04-12
50834-014	25-10-04-63
50834-014	25-10-05-536
50834-014	25-10-06-384
50834-014	25-10-06-584
50834-014	27-20-05-21
50834-014	28-40-01-12
50834-014	34-20-02-9
50834-014	34-20-03-9
50834-014	34-50-04-9
50834-014	34-50-04-21
50834-014	77-10-01-9
50834-014	77-10-02-39
50834-014	77-20-01-48
50834-014	79-30-01-6
50834-016	25-10-06-587
50834-016	31-10-01-183
50834-016	34-10-02-12
50834-016	34-10-03-21
50834-016	34-10-04-15
50834-024	25-10-06-144
50834-024	34-20-03-10
50835-007	77-40-01-12
50835-007	77-40-02-9
50835-010	25-10-09-6
50835-010	31-10-01-228
50835-010	31-10-02-6
50835-010	31-10-02-60
50835-012	24-50-02-15
50835-012	25-10-05-15
50835-012	25-10-05-93
50835-012	25-10-06-327
50835-012	25-10-06-369
50835-012	25-10-06-599
50835-012	31-10-01-236
50835-012	31-10-02-21
50835-012	34-50-05-18
50835-012	115-00-01-24
50835-020	23-50-01-9
50835-032	34-50-05-15
50837-001	25-10-06-330
50837-001	25-10-06-372
50838-006	22-10-01-51
50838-006	22-11-01-18
50838-006	34-10-05-6
50840-010	31-10-01-27
50840-010	31-10-01-39
50840-010	31-10-01-42
50840-010	31-10-01-57
50840-010	31-10-01-66
50840-012	25-10-08-78
50842-075	25-10-07-144
50842-120	25-10-07-147
50842-160	25-10-07-150
50842-200	25-10-07-153
50842-240	25-10-07-156
50845-001	25-10-01-93
50856-001	27-00-04-114
50856-001	27-00-04-276
50857-001	71-00-01-45
50865-518	52-10-01-615
50865-518	52-10-01-640
50865-518	52-10-02-569
50865-518	52-10-02-594
50865-518	52-10-02-627
50865-518	52-10-03-108
50865-518	52-10-03-135
50866-001	34-40-01-18
50866-075	34-40-01-19
50888-250	25-10-01-545
50892-001	21-40-02-162
50893-001	21-20-01-261
50893-001	25-10-02-677
50893-002	25-10-01-683
50893-002	31-60-03-6
50893-002	31-60-03-24
50895-001	71-00-01-24
50897-001	61-20-01-9
50903-008	71-60-01-96
50908-001	28-20-03-108
50908-001	28-20-03-509
50909-001	33-40-02-39
50910-001	33-40-02-78
50911-001	33-40-02-81
50928-025	22-10-01-72
50928-025	22-11-01-57
50928-025	27-31-01-87
50928-025	27-31-01-165
50928-025	34-10-01-63
50928-025	34-10-01-132
50928-025	34-10-01-325
50928-025	34-10-01-367
50928-025	34-10-01-504
50928-025	34-10-01-543
50928-025	34-10-01-549
50928-025	34-10-01-567
50928-025	34-10-01-621
50928-025	34-10-01-662
50928-025	34-10-01-701
50928-025	34-10-01-828
50928-025	34-10-01-858
50929-025	24-30-10-129
50936-001	33-40-02-51

PART NUMBER	CH–SEC–FIG–ITM
50937-001	33-40-02-54
50943-025	21-60-02-527
50943-025	21-60-03-351
50943-025	24-30-05-42
50943-025	33-40-01-168
50943-025	33-40-01-201
50943-035	24-30-06-54
50943-035	24-30-06-66
50943-035	34-50-02-82
50943-035	71-00-04-39
50943-050	24-30-04-126
50943-050	24-30-05-36
50943-050	33-40-01-249
50943-063	24-30-06-48
50943-063	24-30-06-60
50943-063	33-40-01-357
50943-063	71-00-04-36
50943-063	71-70-01-80
50943-063	71-70-01-512
50947-001	25-10-05-21
50947-001	71-10-01-363
50958-037	55-20-01-126
50958-050	55-40-01-99
50961-001	24-50-04-15
50961-001	24-50-04-40
50961-001	24-50-04-72
50962-001	24-30-10-93
50962-002	24-30-10-94
50962-003	24-30-10-95
50964-015	21-50-01-345
50964-015	24-30-04-129
50964-015	24-30-05-39
50964-015	24-30-05-45
50964-015	24-30-06-51
50964-015	24-30-06-57
50964-015	24-30-06-63
50964-015	24-30-06-69
50964-015	30-05-01-506
50965-001	78-20-01-12
50965-001	78-20-01-39
50965-001	78-20-01-234
50965-001	78-20-01-252
50966-001	78-20-01-15
50966-001	78-20-01-42
50966-001	78-20-01-237
50966-001	78-20-01-255
50979-001	24-30-10-3
50979-001	24-30-10-12
50987-001	33-40-02-66
50988-001	33-40-02-27
50991-001	33-40-02-84
50996-001	24-30-10-81
50996-001	25-10-06-527
51012-001	25-10-06-324
51012-001	25-10-06-363
51018-001	28-20-03-213
51018-001	28-20-03-536
51018-002	28-20-03-219
51018-002	28-20-03-539
51018-003	28-20-03-201
51018-003	28-20-03-524
51019-001	28-20-03-189
51020-001	28-20-03-221
51020-001	28-20-03-542
51020-003	28-20-03-546
51021-001	71-00-02-712
51021-001	71-00-03-569
51033-030	24-30-10-117
51034-001	24-30-10-48
51038-337	25-10-01-557
51042-005	57-50-02-158
51042-005	57-50-02-289
51042-105	32-10-01-213
51047-001	57-50-01-144
51047-002	57-50-01-147
51047-003	57-50-01-207
51047-003	57-50-01-240
51050-038	30-05-01-337
51050-038	30-06-01-533
51050-038	30-07-01-734
51050-075	34-10-01-126
51050-075	34-10-01-786
51050-088	30-06-01-547
51050-088	30-07-01-740
51050-100	30-07-01-644
51050-100	34-50-04-63
51050-100	71-70-01-327
51050-150	30-07-01-741
51052-001	24-30-02-6
51054-011	21-60-01-30
51054-011	21-60-01-63
51054-025	25-10-05-602
51055-001	25-10-06-530
51110-050	21-50-01-677
51110-050	21-50-01-704
51113-218	24-30-05-177
51118-002	24-30-03-159
51118-002	24-30-04-132
51118-002	24-30-05-168
51118-002	24-30-06-168
51118-007	24-30-06-171
51119-001	24-30-03-285
51119-001	24-30-04-273
51119-001	24-30-05-632
51119-001	24-30-06-189
51123-200	24-30-03-249
51123-200	24-30-04-237
51123-300	24-30-03-207
51123-300	24-30-03-222
51123-300	24-30-04-186
51123-300	24-30-04-207
51124-018	24-30-03-75
51124-018	24-30-03-93
51124-018	24-30-03-108

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
51124-018	24-30-04-54
51124-018	24-30-04-69
51124-018	24-30-04-84
51124-018	24-30-05-102
51124-018	24-30-05-114
51124-018	24-30-05-126
51124-018	24-30-06-87
51124-018	24-30-06-99
51124-018	24-30-06-108
51124-018	24-30-06-117
51124-018	24-30-06-129
51124-024	24-30-05-192
51125-020	24-30-03-39
51125-020	24-30-03-57
51125-020	24-30-03-216
51125-020	24-30-03-231
51125-020	24-30-03-252
51125-020	24-30-04-24
51125-020	24-30-04-39
51125-020	24-30-04-198
51125-020	24-30-04-216
51125-020	24-30-04-240
51125-028	24-30-05-78
51125-028	24-30-05-90
51125-028	24-30-05-509
51125-028	24-30-05-542
51126-019	24-30-03-240
51126-019	24-30-04-228
51126-025	24-30-03-45
51126-025	24-30-03-63
51126-025	24-30-03-210
51126-025	24-30-03-225
51126-025	24-30-03-258
51126-025	24-30-04-30
51126-025	24-30-04-45
51126-025	24-30-04-189
51126-025	24-30-04-210
51126-025	24-30-04-246
51126-025	24-30-05-530
51126-025	24-30-05-587
51126-031	24-30-03-81
51126-031	24-30-03-99
51126-031	24-30-03-114
51126-031	24-30-04-60
51126-031	24-30-04-75
51126-031	24-30-04-90
51126-031	24-30-05-96
51126-031	24-30-05-108
51126-031	24-30-05-120
51126-031	24-30-05-186
51126-031	24-30-06-123
51127-025	24-30-03-42
51127-025	24-30-03-60
51127-025	24-30-03-213
51127-025	24-30-03-228
51127-025	24-30-03-255
51127-025	24-30-04-27
51127-025	24-30-04-42
51127-025	24-30-04-195
51127-025	24-30-04-213
51127-025	24-30-04-243
51127-025	24-30-05-75
51127-025	24-30-05-87
51127-025	24-30-05-506
51127-025	24-30-05-539
51127-031	24-30-03-78
51127-031	24-30-03-96
51127-031	24-30-03-111
51127-031	24-30-04-57
51127-031	24-30-04-72
51127-031	24-30-04-87
51127-031	24-30-05-99
51127-031	24-30-05-111
51127-031	24-30-05-123
51127-031	24-30-05-189
51127-031	24-30-06-84
51127-031	24-30-06-96
51127-031	24-30-06-105
51127-031	24-30-06-114
51127-031	24-30-06-126
51134-001	24-30-05-626
51134-002	24-30-06-183
51136-030	24-30-05-327
51136-040	24-30-03-186
51136-040	24-30-04-165
51136-050	24-30-03-162
51136-050	24-30-04-135
51136-050	24-30-05-240
51136-050	24-30-05-249
51136-050	24-30-05-563
51136-080	24-30-03-192
51136-100	24-30-03-198
51136-100	24-30-04-171
51136-100	24-30-05-351
51136-100	24-30-06-144
51136-125	24-30-04-177
51136-125	24-30-05-228
51136-125	24-30-06-156
51146-440	24-30-03-27
51146-440	24-30-03-264
51146-440	24-30-03-270
51146-440	24-30-04-18
51146-440	24-30-04-144
51146-440	24-30-04-251
51146-440	24-30-04-258
51146-440	24-30-05-54
51146-440	24-30-05-63
51146-440	24-30-05-132
51146-440	24-30-05-138
51146-440	24-30-05-309
51146-440	24-30-05-318
51146-440	24-30-05-324
51146-440	24-30-05-617
51146-440	24-30-05-623

PART NUMBER	CH–SEC–FIG–ITM
51146-441	24-30-03-156
51146-441	24-30-03-183
51146-441	24-30-03-276
51146-441	24-30-04-114
51146-441	24-30-04-162
51146-441	24-30-04-264
51146-441	24-30-06-75
51146-443	24-30-05-165
51146-443	24-30-05-174
51146-446	21-60-04-96
51146-446	21-60-04-105
51146-448	24-30-05-141
51146-450	71-30-01-15
51147-032	24-30-03-165
51147-032	24-30-03-189
51147-032	24-30-03-195
51147-032	24-30-03-201
51147-032	24-30-04-138
51147-032	24-30-04-168
51147-032	24-30-04-174
51147-032	24-30-04-180
51147-440	24-30-06-135
51147-440	24-30-06-141
51150-063	24-30-03-237
51150-063	24-30-04-225
51157-001	25-10-05-177
51157-001	25-10-05-210
51157-001	25-10-05-798
51157-001	52-10-02-525
51161-001	21-40-02-117
51161-001	27-30-02-135
51161-001	27-30-02-231
51164-001	31-60-01-60
51164-001	31-60-02-33
51164-001	34-40-03-18
51164-002	31-60-02-36
51168-002	57-50-01-267
51168-002	57-50-01-270
51168-002	71-60-02-88
51169-001	31-60-01-57
51170-001	25-10-02-33
51170-001	25-10-02-318
51170-001	27-00-02-574
51178-005	57-50-01-264
51179-001	25-10-05-168
51179-001	25-10-05-201
51179-001	25-10-05-784
51179-001	25-10-05-796
51183-426	32-20-02-186
51183-426	32-20-02-333
51184-001	34-10-05-31
51184-001	34-10-05-33
51185-001	34-10-05-37
51185-001	34-10-05-39
51186-002	27-30-02-219
51190-245	27-30-02-204
51207-247	25-10-04-189
51208-002	23-50-01-75
51217-001	31-60-02-30
51219-044	33-40-01-15
51219-050	33-40-01-390
51219-050	71-10-01-66
51219-050	71-10-01-171
51219-050	71-10-01-270
51219-050	71-10-01-333
51219-050	71-10-01-348
51219-050	71-10-02-30
51219-050	71-10-02-78
51219-050	71-10-02-111
51219-050	71-10-02-138
51228-001	34-10-01-237
51228-002	34-10-01-243
51228-002	34-10-01-533
51228-002	34-10-01-813
51228-003	34-10-01-536
51228-003	34-10-01-810
51236-001	30-05-01-598
51239-001	27-31-01-141
51240-001	27-31-01-132
51241-001	27-31-01-144
51242-001	27-31-01-153
51246-001	27-31-01-129
51246-001	30-05-01-108
51250-001	30-05-01-102
51252-001	34-50-05-72
51256-001	52-10-01-81
51259-001	27-00-05-330
51261-048	71-60-01-79
51265-001	22-11-03-36
51265-002	22-11-03-39
51268-001	21-20-01-153
51268-002	21-20-01-154
51268-002	21-20-01-518
51268-002	21-20-01-569
51268-002	21-20-01-608
51268-002	21-20-01-641
51268-003	21-20-01-521
51268-003	21-20-01-572
51268-003	21-20-01-644
51268-004	21-20-01-522
51268-004	21-20-01-573
51268-004	21-20-01-573
51268-005	21-20-01-530
51268-005	21-20-01-581
51268-005	21-20-01-653
51268-006	21-20-01-525
51268-006	21-20-01-576
51268-006	21-20-01-576
51270-001	21-20-01-159
51270-001	21-20-01-509
51270-001	21-20-01-614
51270-001	21-20-01-635
51270-002	21-20-01-512
51270-002	21-20-01-566

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
51270-002	21-20-01-611
51272-002	34-10-01-288
51274-001	24-50-04-54
51274-001	24-50-04-63
51276-001	28-20-03-192
51276-001	28-20-03-554
51277-001	28-20-03-223
51277-001	28-20-03-545
51296-001	34-10-01-240
51300-001	34-50-04-70
51300-002	34-30-01-28
51300-002	34-50-02-115
51300-002	34-50-04-67
51308-001	25-10-05-19
51308-001	25-10-05-97
51324-001	71-20-02-43
51358-606	52-10-02-183
51359-806	52-10-02-162
51364-250	53-20-01-156
51372-015	53-20-02-93
51372-020	53-20-02-96
51375-001	30-05-01-241
51375-001	30-06-01-545
51377-001	25-10-05-592
51378-001	32-20-01-111
51378-001	32-20-01-150
51378-001	32-20-01-192
51378-001	32-20-01-240
51381-001	78-20-01-393
51382-001	25-10-04-280
51383-001	33-10-01-80
51385-001	25-10-04-381
51385-001	25-10-05-774
51385-002	25-10-05-780
51385-002	25-10-05-786
51386-001	25-10-04-384
51386-001	25-10-05-776
51386-001	25-10-05-782
51386-001	25-10-05-792
51389-001	78-20-01-396
51392-001	25-10-04-247
51392-001	25-10-04-268
51392-001	25-10-05-552
51397-001	25-10-04-246
51397-001	25-10-04-267
51397-001	25-10-05-550
51407-001	34-40-03-31
51408-001	34-40-03-30
51408-001	34-40-03-36
51412-887	25-10-06-186
51413-862	25-10-06-192
51414-001	34-40-03-51
51415-001	34-40-03-48
51419-001	34-40-03-45
51424-001	34-50-06-69
51427-001	34-50-02-69
51428-001	34-50-06-66
51436-001	24-30-05-312
51436-002	24-30-05-315
51437-001	24-30-05-306
51442-001	24-30-05-210
51442-001	24-30-05-390
51442-001	24-30-05-551
51445-006	24-30-06-201
51445-008	24-30-05-198
51445-008	24-30-05-213
51445-008	24-30-05-285
51445-008	24-30-05-342
51445-008	24-30-05-354
51445-008	24-30-05-366
51445-008	24-30-05-393
51445-008	24-30-05-554
51445-008	24-30-05-566
51445-008	24-30-06-147
51445-008	24-30-06-159
51445-012	24-30-05-231
51445-012	24-30-05-258
51445-012	24-30-05-270
51446-001	24-30-05-201
51446-001	24-30-05-216
51446-001	24-30-05-234
51446-001	24-30-05-246
51446-001	24-30-05-255
51446-001	24-30-05-261
51446-001	24-30-05-273
51446-001	24-30-05-288
51446-001	24-30-05-291
51446-001	24-30-05-300
51446-001	24-30-05-330
51446-001	24-30-05-345
51446-001	24-30-05-357
51446-001	24-30-05-369
51446-001	24-30-05-396
51446-001	24-30-05-557
51446-001	24-30-05-569
51446-001	24-30-05-596
51446-001	24-30-05-605
51446-001	24-30-06-153
51446-001	24-30-06-165
51456-001	25-10-05-598
51456-180	25-10-05-596
51472-001	52-10-02-249
51523-001	25-10-06-533
51540-008	28-20-01-281
51543-001	34-20-01-22
51543-001	34-20-01-76
51589-001	34-50-06-79
51592-001	24-30-04-192
51592-001	24-30-05-72
51592-001	24-30-05-84
51592-001	24-30-05-512
51592-001	24-30-05-545
51598-001	25-10-06-593
51598-001	25-10-08-105

PART NUMBER	CH–SEC–FIG–ITM
51604-001	21-60-02-48
51604-001	21-60-03-33
51606-019	21-60-03-174
51606-050	21-60-02-177
51606-050	21-60-02-201
51606-050	21-60-02-225
51606-050	21-60-03-114
51614-001	77-40-02-15
51618-001	77-40-02-18
51620-001	77-40-02-21
51625-002	52-10-03-198
51626-001	21-60-02-165
51626-001	21-60-02-189
51626-001	21-60-02-213
51626-001	21-60-03-102
51626-001	21-60-03-144
51629-001	25-10-06-596
51630-001	24-30-05-503
51630-001	24-30-05-536
51631-001	53-20-03-36
51631-001	53-20-03-93
51648-001	24-30-05-204
51648-001	24-30-05-219
51648-001	24-30-05-237
51648-001	24-30-05-264
51648-001	24-30-05-276
51648-001	24-30-05-294
51648-001	24-30-05-348
51648-001	24-30-05-360
51648-001	24-30-05-372
51648-001	24-30-05-399
51648-001	24-30-05-560
51648-001	24-30-05-572
51656-001	24-30-05-524
51656-001	24-30-05-581
51658-001	21-60-02-282
51660-250	21-60-02-279
51660-250	21-60-03-207
51675-010	21-20-01-336
51684-001	31-10-01-231
51684-001	31-10-01-240
51684-002	31-10-01-230
51684-002	31-10-01-239
51698-001	32-42-02-117
51698-003	32-42-02-118
51698-004	32-42-02-159
51722-001	25-00-01-42
51734-001	115-00-01-27
51734-002	25-60-02-81
51734-002	27-50-01-297
51761-001	27-00-03-171
51761-002	22-20-01-6
51761-002	27-00-03-156
51761-005	27-00-03-159
51762-001	25-10-04-248
51762-001	25-10-04-269
51762-001	25-10-05-554
51771-001	27-50-01-321
51780-001	24-30-01-78
51780-001	24-30-06-195
51790-030	24-30-06-174
51790-050	24-30-06-177
51790-080	24-30-06-180
51815-002	34-10-01-521
51815-002	34-10-01-822
51817-001	30-05-01-519
51817-001	30-06-01-566
51817-001	30-07-01-758
51827-001	28-20-01-328
51827-002	28-20-01-330
51828-001	28-20-01-280
51828-002	28-20-01-282
51832-001	21-60-03-129
51835-001	21-60-03-210
51836-001	34-10-01-550
51836-001	34-10-01-804
51837-001	34-10-01-545
51837-001	34-10-01-801
51838-001	34-10-01-524
51838-001	34-10-01-825
51842-002	23-50-01-101
51847-045	53-50-01-9
51847-045	53-50-01-48
51851-001	30-06-01-539
51853-001	32-20-02-136
51853-001	32-20-02-303
51853-001	32-20-02-381
51856-001	33-40-02-138
51867-313	57-50-01-188
51867-313	57-50-01-221
51867-313	57-50-01-254
51874-001	28-20-03-307
51877-003	21-40-02-126
51885-001	28-20-03-237
51900-001	31-30-03-24
51900-002	25-60-02-162
51903-001	28-20-03-551
51904-001	21-60-03-213
51916-001	28-20-01-279
51917-001	28-20-01-327
51939-001	32-42-01-48
51952-138	34-50-02-126
51952-138	34-50-02-147
51952-138	34-50-06-153
51969-001	32-42-01-521
51986-001	34-10-05-51
51988-001	22-11-01-36
51989-001	22-11-01-45
51991-009	23-30-01-15
52010-002	53-40-03-45
52010-002	53-40-04-36
52010-008	53-40-03-42
52010-008	53-40-03-160
52010-008	53-40-04-33

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
52010-008	53-40-04-54
52010-009	53-40-03-159
53009-015	24-50-04-105
53019-001	25-60-02-165
53022-001	21-20-02-21
53022-001	21-20-02-111
53023-001	24-50-04-78
53030-001	24-30-09-4
53031-001	28-20-03-195
53031-002	28-20-03-555
53036-001	22-12-02-87
53036-001	22-12-03-66
53036-001	22-12-04-75
53037-001	22-12-02-84
53037-001	22-12-03-63
53037-001	22-12-04-72
53039-001	22-12-02-72
53039-001	22-12-03-51
53039-001	22-12-04-60
53040-001	22-12-02-69
53040-001	22-12-03-48
53040-001	22-12-04-57
53041-001	22-12-02-105
53041-001	22-12-03-84
53041-001	22-12-04-93
53042-001	22-12-02-78
53042-001	22-12-02-102
53042-001	22-12-02-123
53042-001	22-12-03-57
53042-001	22-12-03-81
53042-001	22-12-03-102
53042-001	22-12-04-66
53042-001	22-12-04-90
53042-001	22-12-04-111
53043-001	22-12-02-75
53043-001	22-12-02-99
53043-001	22-12-03-54
53043-001	22-12-03-78
53043-001	22-12-04-63
53043-001	22-12-04-87
53055-001	24-50-02-99
53057-001	24-50-02-96
53059-001	27-00-03-174
53074-001	28-20-02-106
53102-001	33-10-01-45
53102-002	33-10-01-46
53117-001	24-50-02-102
53132-001	79-30-01-45
53167-063	53-30-01-56
53176-001	27-10-04-45
53176-001	27-30-03-45
53205-001	53-40-11-45
53283-001	30-06-01-556
53283-001	30-07-01-748
53289-001	30-05-01-501
53289-001	30-06-01-555
53289-001	30-07-01-747
53292-002	71-60-02-15
53296-001	28-20-03-537
53297-001	28-20-03-540
53298-001	28-20-03-525
53318-002	78-10-01-54
53320-001	78-10-01-51
53324-001	78-10-01-57
53326-001	79-20-02-27
53327-001	78-10-01-60
53331-001	27-31-01-36
53338-063	71-10-01-340
53338-063	71-10-02-48
53419-001	33-40-01-32
53419-001	33-40-01-230
53422-001	23-50-01-66
53426-001	23-50-01-65
53434-088	33-10-01-30
53434-175	33-10-01-31
53435-001	25-10-02-686
53436-001	25-10-02-689
53437-125	34-50-02-148
53440-002	25-10-02-611
535847-1	74-10-01-18
53668-002	24-30-03-283
53668-002	24-30-04-271
53668-002	24-30-05-629
53668-002	24-30-06-184
53669-001	24-30-03-286
53669-001	24-30-04-274
53669-001	24-30-05-635
53669-001	24-30-06-192
53695-138	34-50-02-127
53695-138	34-50-06-154
53722-063	71-10-01-341
53722-063	71-10-02-49
53805-015	23-30-02-15
53878-001	24-30-01-105
53878-001	24-30-02-123
53879-001	24-30-01-108
53879-001	24-30-02-126
54117-003	52-10-03-297
54506-001	25-60-01-100
54506-001	34-50-04-52
54653-001	33-10-01-29
54678-001	33-10-01-22
54688-001	52-10-03-222
60617-4	23-50-01-33
60619-4	34-50-06-78
6202-1	22-11-02-42
630979-16	78-10-01-30
630979-16	78-10-01-36
630979-16	78-10-01-42
630979-18	78-10-01-48
637255-4	71-60-02-123
637255-4	71-60-02-183
639319-26	71-60-02-186
642917-3	71-60-02-120

PART NUMBER	CH–SEC–FIG–ITM
642917-3	71-60-02-180
646318-10	78-10-01-24
646644Y	81-20-01-36
649386-44A16	71-00-01-39
657121-4	78-20-02-81
68-2290005-34	33-40-02-33
68-3950902A30	33-40-02-57
68-3950903A30	33-40-02-63
68-3990574A30	33-40-02-34
68-4250066-30	33-40-02-60
68-5451007-00	33-40-02-45
70041-101	27-50-01-384
70048-101	78-20-01-28
70048-102	78-20-01-70
70054-101	57-20-01-45
70066-101	28-20-02-78
70066-102	28-20-02-90
70077-101	71-70-01-267
70077-102	71-70-01-312
70091-001	25-10-05-534
70091-001	25-10-05-700
70091-001	25-10-06-135
70091-002	25-10-06-375
70097-101	28-20-02-81
70116-101	55-50-01-84
70116-102	55-50-01-87
70116-103	55-50-01-90
70116-104	55-50-01-93
70205-001	71-70-01-330
70205-002	71-70-01-333
70207-001	32-42-01-531
70207-002	32-42-01-534
70207-003	32-42-01-537
70207-004	32-42-01-540
70207-005	32-42-01-543
70207-006	32-42-01-546
70208-003	28-10-01-219
70208-004	28-10-01-222
70211-001	28-20-03-569
70211-002	28-20-03-572
70211-003	28-20-03-575
70211-004	28-20-03-578
70211-101	28-20-03-581
70211-102	28-20-03-584
70229-001	32-20-02-372
70244-001	33-40-01-135
70244-001	33-40-01-300
70259-103	71-70-01-674
70-6-N-PG	34-10-01-539
70-6-N-PG	34-10-01-798
8HCLW	25-10-08-66
8HCLW	25-10-08-123
8-6C50X-S	28-20-03-96
8-6-F50X-S	28-20-03-397
90295A110	25-10-08-147
908-01	30-07-01-18
908-02	30-05-01-138
908-02	30-06-01-176
908-02	30-07-01-20
908-03	30-05-01-140
908-03	30-06-01-180
908-03	30-07-01-22
908-04	30-05-01-142
908-04	30-06-01-184
908-04	30-07-01-24
908-1	30-05-01-136
908-1	30-06-01-174
94805A221	34-10-05-36
98017A204	34-10-05-30
99-701	25-10-08-141
A1348-8--1	25-10-04-720
A1348-8--1	25-10-04-741
A2433	61-10-01-216
AS3582-017	30-07-01-55
AS3582-112	30-06-01-6
AS3582-112	30-06-01-516
AS3582-112	30-07-01-74
AS3582-112	30-07-01-327
AS3582-235	30-07-01-63
AS4149WDG12	71-00-04-45
AS4149WDG16	79-30-01-102
AS4149WDG18	79-30-01-84
AS4149WDG8	71-00-04-48
AS4561-2	30-05-01-148
AS4561-2	30-06-01-190
AS4561-2	30-07-01-30
AS5174D0404	32-42-01-57
AS5180D04	71-70-01-636
AS5194D0806	28-20-03-259
AS568114HNBR-70	21-50-01-238
AS568116HNBR-70	21-50-01-239
A-1020	61-10-01-189
A-1196A	74-30-01-21
A-1381	61-10-01-108
A-1633-3	61-10-01-270
A-1635-133	61-10-01-303
A-1635-5	61-10-01-306
A-1635-76	61-10-01-312
A-1638-15	61-10-01-315
A-1638-26	61-10-01-288
A-1639-2	61-10-01-267
A-1639-4	61-10-01-285
A-1866-3	30-60-01-48

EFFECTIVITY:
All

PART NUMBER	CH–SEC–FIG–ITM
A-1932-82-1	57-30-01-12
A-1932-8--1	57-30-01-24
A-2044	61-10-01-102
A-2246-3	61-10-01-213
A-2246-3	61-10-01-249
A-2433	61-10-01-255
A-2513-42	61-10-01-294
A-3600	74-30-01-15
A-4692	30-60-01-12
A-546-A	74-30-01-18
B100509	28-20-03-102
B100509	28-20-03-503
B100511	28-20-03-114
B100511	28-20-03-515
B100512	28-20-03-90
B100512	28-20-03-391
B100513	28-20-03-120
B100513	28-20-03-521
B1-27	76-10-01-84
B-19679	25-10-08-144
B-3384-17H	30-60-01-6
B-3410-32	61-10-01-300
B-3599	30-60-01-39
B-3599	61-10-01-207
B-3599	61-10-01-234
B-3808-4	30-60-01-18
B-3834-0463	30-60-01-9
B-3834-0463	30-60-01-15
B-3834-0663	30-60-01-42
B-3834-0663	61-10-01-210
B-3834-0663	61-10-01-237
B-3834-0832	61-10-01-243
B-3860-10L	61-10-01-192
B-3867-272	61-10-01-186
B-4689	30-60-01-45
B-7423	61-10-01-240
B-7424-1	61-10-01-252
B-7425	61-10-01-246
B-7806	61-10-01-291
C307PRF11	34-10-05-9
C8090-632-3B	25-10-04-86
C8090-632-3B	25-10-04-360
C8090-632-3B	25-10-06-515
CB3001AA06-11	25-10-05-540
CB3001AA06-6	25-10-05-544
CB3001AA06-8	34-20-04-16
CR3523-4	53-30-02-24
CR3524-4	30-10-01-24
CR3524-4	30-10-01-42
CR3524-4	30-10-01-48
CR3524-4	30-10-01-54
CR3524-4	30-10-01-75
CR3524-4	30-10-01-96
CR3524-4	30-10-01-114
CR3524-4	30-10-01-132
CR3524-4	30-10-01-138
C-2131-8	30-60-01-54
C-2294-12P	61-10-01-168
C-2294-12P	61-10-01-177
C-3317-228	61-10-01-111
C-3498	61-10-01-309
C-3532-5	61-10-01-150
C-3532-5	61-10-01-162
C-3532-5P	61-10-01-147
C-3532-5P	61-10-01-159
C-6619	61-10-01-297
D-4688	30-60-01-3
D-7782-X	61-10-01-279
D-7783	61-10-01-282
EF110	52-10-01-646
EF110	52-10-02-641
EF110	52-10-03-141
HL20-12-10	57-10-01-48
HL64PB8-13	27-00-02-512
HL-21-6-4	52-10-03-120
IT-5752-48-0200	21-50-01-671
JM44CC1SS48	71-60-01-78
M12133/1-14P	57-10-01-75
M12133/1-14P	57-10-01-249
M25988-1-021	28-10-01-34
M25988-1-021	28-10-01-104
ML34-14M	52-10-02-36
MN6847	30-07-01-40
PLT2S-C	27-10-03-162
QS100M96H	21-50-01-668
R1010003	25-10-08-129
R6176-101	78-20-01-224
R6176-101	78-20-01-226
R7483-101	28-20-02-84
TMS195-1	34-50-06-111

CHAPTER 11

PLACARDS AND MARKINGS

Intentionally Left Blank

CHAPTER 11 - PLACARDS AND MARKINGS
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
11-LOEP	1	04 SEP 2018
11-LOEP	2	04 SEP 2018
11-LOEP	3	04 SEP 2018
11-LOEP	4	04 SEP 2018
11-TOC	1	04 SEP 2018
11-TOC	2	04 SEP 2018
11-TOC	3	04 SEP 2018
11-TOC	4	04 SEP 2018
11-20-01	1	15 DEC 2014
11-20-01	2	15 DEC 2014
11-20-01	3	01 JAN 2016
11-20-01	4	15 DEC 2014
11-20-01	5	01 JAN 2016
11-20-01	6	01 JAN 2016
11-20-02	1	15 DEC 2014
11-20-02	2	01 JAN 2016
11-20-02	3	15 DEC 2014
11-20-02	4	01 JAN 2016
11-20-03	1	15 DEC 2014
11-20-03	2	01 JAN 2016
11-20-03	3	15 DEC 2014
11-20-03	4	01 JAN 2016
11-20-04	1	15 DEC 2014
11-20-04	2	01 JAN 2016
11-20-04	3	15 DEC 2014
11-20-04	4	01 JAN 2016
11-20-05	1	15 DEC 2014
11-20-05	2	15 DEC 2014
11-20-05	3	01 JAN 2016
11-20-05	4	01 JAN 2016
11-20-06	1	15 DEC 2014
11-20-06	2	15 DEC 2014
11-20-06	3	01 JAN 2016
11-20-06	4	01 JAN 2016
11-20-07	1	01 JAN 2016
11-20-07	2	01 JAN 2016
11-20-08	1	15 DEC 2014
11-20-08	2	15 DEC 2014
11-20-08	3	01 JAN 2016
11-20-08	4	01 JAN 2016

CHAPTER 11 - PLACARDS AND MARKINGS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
11-20-09	1	15 DEC 2014
11-20-09	2	01 JAN 2016
11-20-09	3	15 DEC 2014
11-20-09	4	01 JAN 2016
11-20-10	1	15 DEC 2014
11-20-10	2	15 DEC 2014
11-20-10	3	01 JAN 2016
11-20-10	4	01 JAN 2016
11-20-11	1	15 DEC 2014
11-20-11	2	15 DEC 2014
11-20-12	1	15 DEC 2014
11-20-12	2	15 DEC 2014
11-20-12	3	01 JAN 2016
11-20-12	4	01 JAN 2016
11-30-01	1	04 SEP 2018
11-30-01	2	04 SEP 2018
11-30-01	3	04 SEP 2018
11-30-01	4	04 SEP 2018
11-30-01	5	04 SEP 2018
11-30-01	6	04 SEP 2018
11-30-01	7	04 SEP 2018
11-30-01	8	04 SEP 2018
11-30-01	9	04 SEP 2018
11-30-01	10	04 SEP 2018
11-30-01	11	04 SEP 2018
11-30-01	12	04 SEP 2018
11-30-01	13	04 SEP 2018
11-30-01	14	04 SEP 2018
11-30-01	15	04 SEP 2018
11-30-01	16	04 SEP 2018
11-30-01	17	04 SEP 2018
11-30-01	18	04 SEP 2018
11-30-01	19	04 SEP 2018
11-30-01	20	04 SEP 2018
11-30-01	21	04 SEP 2018
11-30-01	22	04 SEP 2018
11-30-01	23	04 SEP 2018
11-30-01	24	04 SEP 2018
11-30-02	1	15 DEC 2014
11-30-02	2	15 DEC 2014

EFFECTIVITY:
All

CHAPTER 11 - PLACARDS AND MARKINGS
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
11-30-02	3	15 DEC 2014
11-30-02	4	15 DEC 2014
11-30-02	5	15 DEC 2014
11-30-02	6	15 DEC 2014
11-30-03	1	15 DEC 2014
11-30-03	2	15 DEC 2014
11-30-03	3	15 DEC 2014
11-30-03	4	15 DEC 2014
11-30-03	5	15 DEC 2014
11-30-03	6	15 DEC 2014
11-30-04	1	15 DEC 2014
11-30-04	2	15 DEC 2014
11-30-04	3	15 DEC 2014
11-30-04	4	15 DEC 2014
11-30-04	5	15 DEC 2014
11-30-04	6	15 DEC 2014
11-30-05	1	15 DEC 2014
11-30-05	2	15 DEC 2014
11-30-05	3	15 DEC 2014
11-30-05	4	15 DEC 2014
11-30-06	1	15 DEC 2014
11-30-06	2	15 DEC 2014
11-30-06	3	15 DEC 2014
11-30-06	4	15 DEC 2014
11-30-07	1	15 DEC 2014
11-30-07	2	15 DEC 2014
11-30-08	1	15 DEC 2014
11-30-08	2	15 DEC 2014
11-30-08	3	15 DEC 2014
11-30-08	4	15 DEC 2014
11-30-09	1	15 DEC 2014
11-30-09	2	15 DEC 2014
11-30-10	1	19 SEP 2017
11-30-10	2	19 SEP 2017
11-30-10	3	19 SEP 2017
11-30-10	4	19 SEP 2017
11-30-10	5	19 SEP 2017
11-30-10	6	19 SEP 2017
11-30-11	1	15 DEC 2014
11-30-11	2	15 DEC 2014

CHAPTER 11 - PLACARDS AND MARKINGS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
11-30-11	3	15 DEC 2014
11-30-11	4	15 DEC 2014
11-30-12	1	15 DEC 2014
11-30-12	2	15 DEC 2014
11-30-12	3	15 DEC 2014
11-30-12	4	15 DEC 2014
11-30-13	1	15 DEC 2014
11-30-13	2	15 DEC 2014
11-30-13	3	15 DEC 2014
11-30-13	4	15 DEC 2014

CHAPTER 11 - PLACARDS AND MARKINGS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Exterior Placards - Serials w/ English (1 of 4)	11-20-01
Exterior Placards - Serials w/ English (2 of 4)	11-20-01
Exterior Placards - Serials w/ English (3 of 4)	11-20-01
Exterior Placards - Serials w/ English (4 of 4)	11-20-01
Exterior Placards - Serials w/ Portuguese (1 of 3)	11-20-02
Exterior Placards - Serials w/ Portuguese (2 of 3)	11-20-02
Exterior Placards - Serials w/ Portuguese (3 of 3)	11-20-02
Exterior Placards - Serials w/ German (1 of 3)	11-20-03
Exterior Placards - Serials w/ German (2 of 3)	11-20-03
Exterior Placards - Serials w/ German (3 of 3)	11-20-03
Exterior Placards - Serials w/ French (1 of 3)	11-20-04
Exterior Placards - Serials w/ French (2 of 3)	11-20-04
Exterior Placards - Serials w/ French (3 of 3)	11-20-04
Exterior Placards - Serials w/ Spanish (1 of 3)	11-20-05
Exterior Placards - Serials w/ Spanish (2 of 3)	11-20-05
Exterior Placards - Serials w/ Spanish (3 of 3)	11-20-05
Exterior Placards - Serials w/ Argentine (1 of 3)	11-20-06
Exterior Placards - Serials w/ Argentine (2 of 3)	11-20-06
Exterior Placards - Serials w/ Argentine (3 of 3)	11-20-06
Exterior Placards - Serials w/ Russian	11-20-07
Exterior Placards - Serials w/ Japanese (1 of 3)	11-20-08
Exterior Placards - Serials w/ Japanese (2 of 3)	11-20-08
Exterior Placards - Serials w/ Japanese (3 of 3)	11-20-08
Exterior Placards - Serials w/ Chinese (1 of 3)	11-20-09
Exterior Placards - Serials w/ Chinese (2 of 3)	11-20-09
Exterior Placards - Serials w/ Chinese (3 of 3)	11-20-09
Exterior Placards - Serials w/ Colombian (1 of 3)	11-20-10
Exterior Placards - Serials w/ Colombian (2 of 3)	11-20-10
Exterior Placards - Serials w/ Colombian (3 of 3)	11-20-10
Exterior Placards - Serials w/ Australian	11-20-11
Exterior Placards - Serials w/ Chilean (1 of 3)	11-20-12
Exterior Placards - Serials w/ Chilean (2 of 3)	11-20-12
Exterior Placards - Serials w/ Chilean (3 of 3)	11-20-12

CHAPTER 11 - PLACARDS AND MARKINGS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Interior Placards and Overlays - Serials w/ English (1 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (2 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (3 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (4 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (5 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (6 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (7 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (8 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (9 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (10 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (11 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (12 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (13 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (14 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (15 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ English (16 of 16)	11-30-01
Interior Placards and Overlays - Serials w/ Portuguese (1 of 4)	11-30-02
Interior Placards and Overlays - Serials w/ Portuguese (2 of 4)	11-30-02
Interior Placards and Overlays - Serials w/ Portuguese (3 of 4)	11-30-02
Interior Placards and Overlays - Serials w/ Portuguese (4 of 4)	11-30-02
Interior Placards and Overlays - Serials w/ German (1 of 4)	11-30-03
Interior Placards and Overlays - Serials w/ German (2 of 4)	11-30-03
Interior Placards and Overlays - Serials w/ German (3 of 4)	11-30-03
Interior Placards and Overlays - Serials w/ German (4 of 4)	11-30-03
Interior Placards and Overlays - Serials w/ French (1 of 4)	11-30-04
Interior Placards and Overlays - Serials w/ French (2 of 4)	11-30-04
Interior Placards and Overlays - Serials w/ French (3 of 4)	11-30-04
Interior Placards and Overlays - Serials w/ French (4 of 4)	11-30-04
Interior Placards and Overlays - Serials w/ Spanish (1 of 3)	11-30-05
Interior Placards and Overlays - Serials w/ Spanish (2 of 3)	11-30-05
Interior Placards and Overlays - Serials w/ Spanish (3 of 3)	11-30-05
Interior Placards and Overlays - Serials w/ Argentine (1 of 3)	11-30-06
Interior Placards and Overlays - Serials w/ Argentine (2 of 3)	11-30-06

CHAPTER 11 - PLACARDS AND MARKINGS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Interior Placards and Overlays - Serials w/ Argentine (3 of 3)	11-30-06
Interior Placards and Overlays - Serials w/ Russian	11-30-07
Interior Placards and Overlays - Serials w/ Japanese (1 of 3)	11-30-08
Interior Placards and Overlays - Serials w/ Japanese (2 of 3)	11-30-08
Interior Placards and Overlays - Serials w/ Japanese (3 of 3)	11-30-08
Interior Placards and Overlays - Serials w/ South African	11-30-09
Interior Placards and Overlays - Serials w/ Chinese (1 of 4)	11-30-10
Interior Placards and Overlays - Serials w/ Chinese (2 of 4)	11-30-10
Interior Placards and Overlays - Serials w/ Chinese (3 of 4)	11-30-10
Interior Placards and Overlays - Serials w/ Chinese (4 of 4)	11-30-10
Interior Placards and Overlays - Serials w/ Colombian (1 of 3)	11-30-11
Interior Placards and Overlays - Serials w/ Colombian (2 of 3)	11-30-11
Interior Placards and Overlays - Serials w/ Colombian (3 of 3)	11-30-11
Interior Placards and Overlays - Serials w/ Australian (1 of 2)	11-30-12
Interior Placards and Overlays - Serials w/ Australian (2 of 2)	11-30-12
Interior Placards and Overlays - Serials w/ Chilean (1 of 3)	11-30-13
Interior Placards and Overlays - Serials w/ Chilean (2 of 3)	11-30-13
Interior Placards and Overlays - Serials w/ Chilean (3 of 3)	11-30-13

Intentionally Left Blank

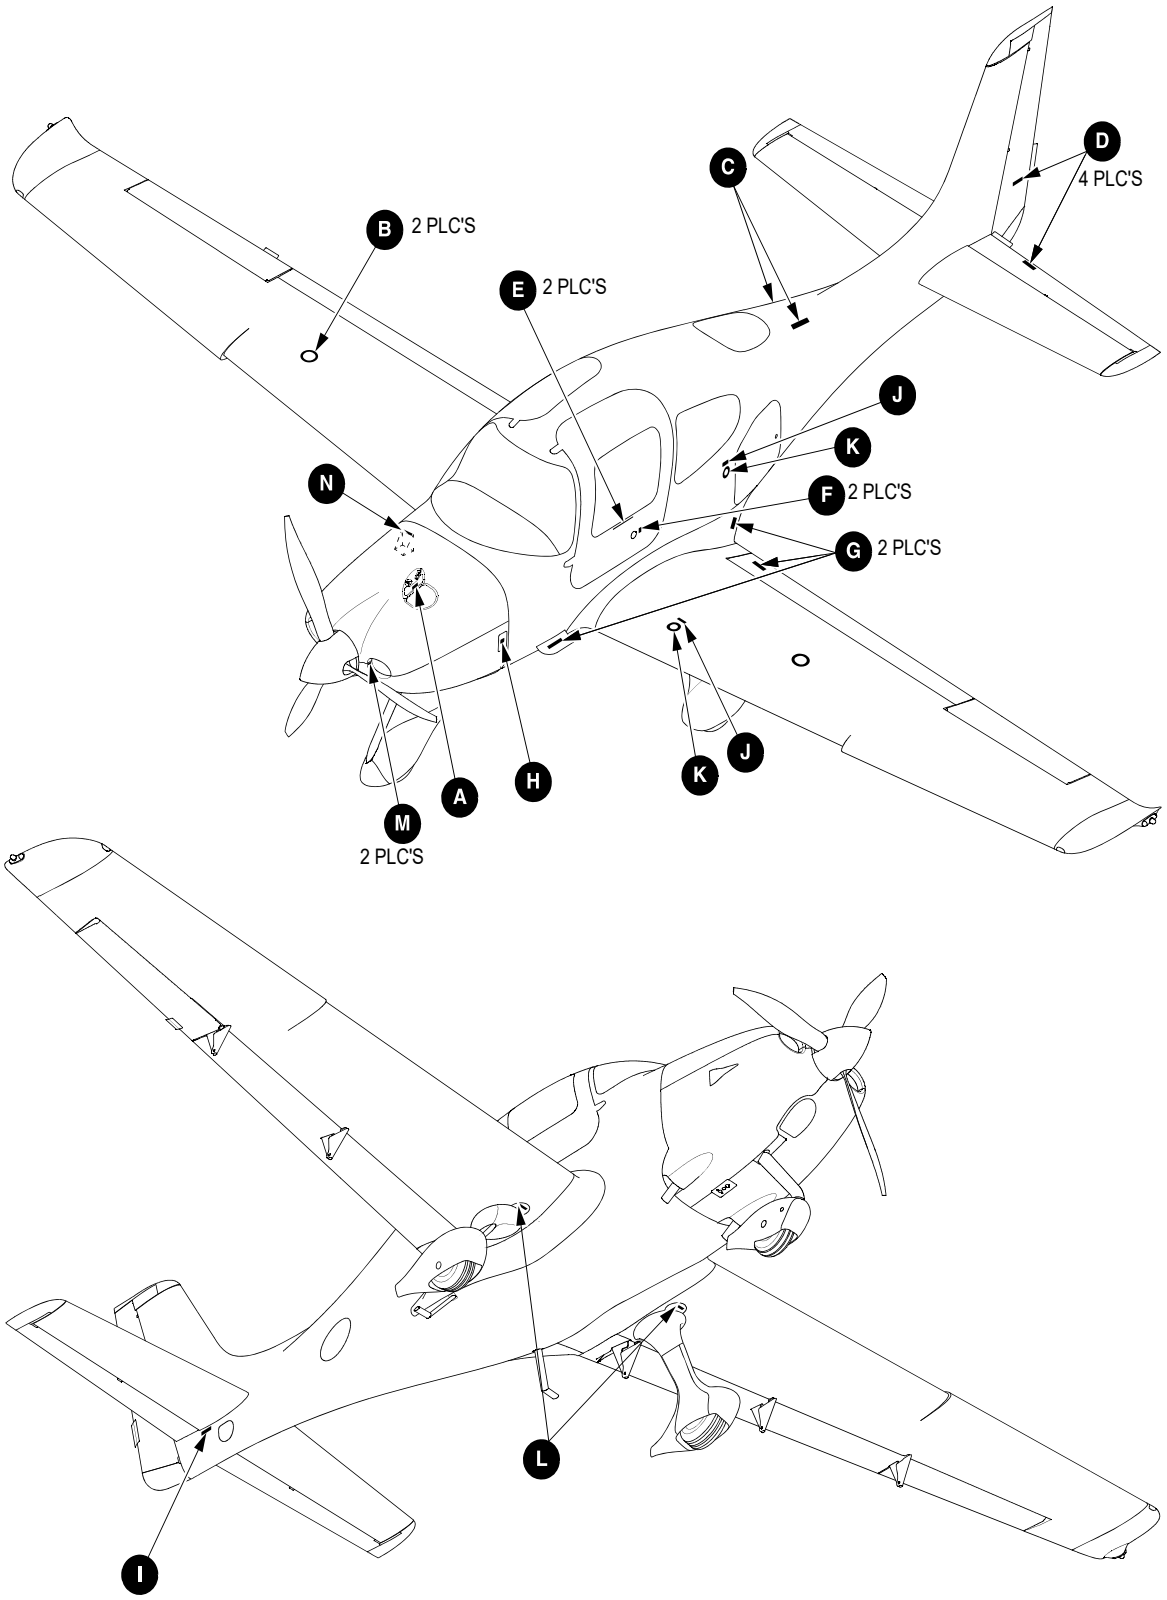

Figure-01
Exterior Placards - Serials w/ English (1 of 4)

EFFECTIVITY:
Serials w/ English

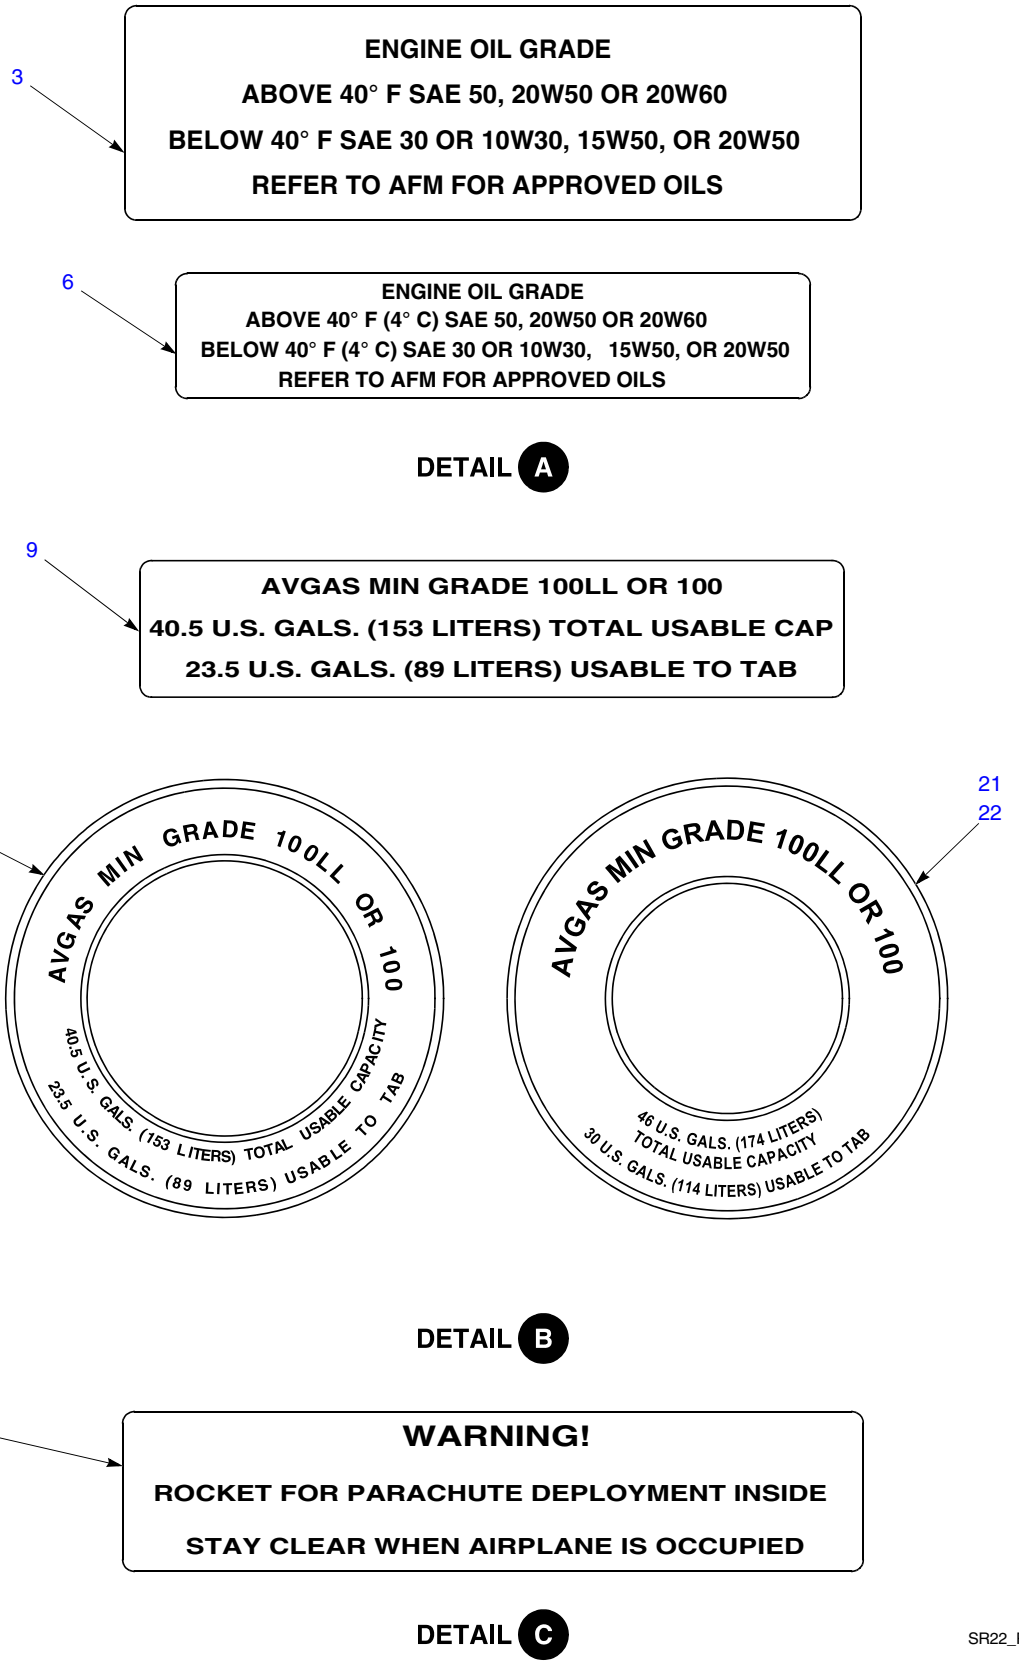

Figure-01
Exterior Placards - Serials w/ English (2 of 4)

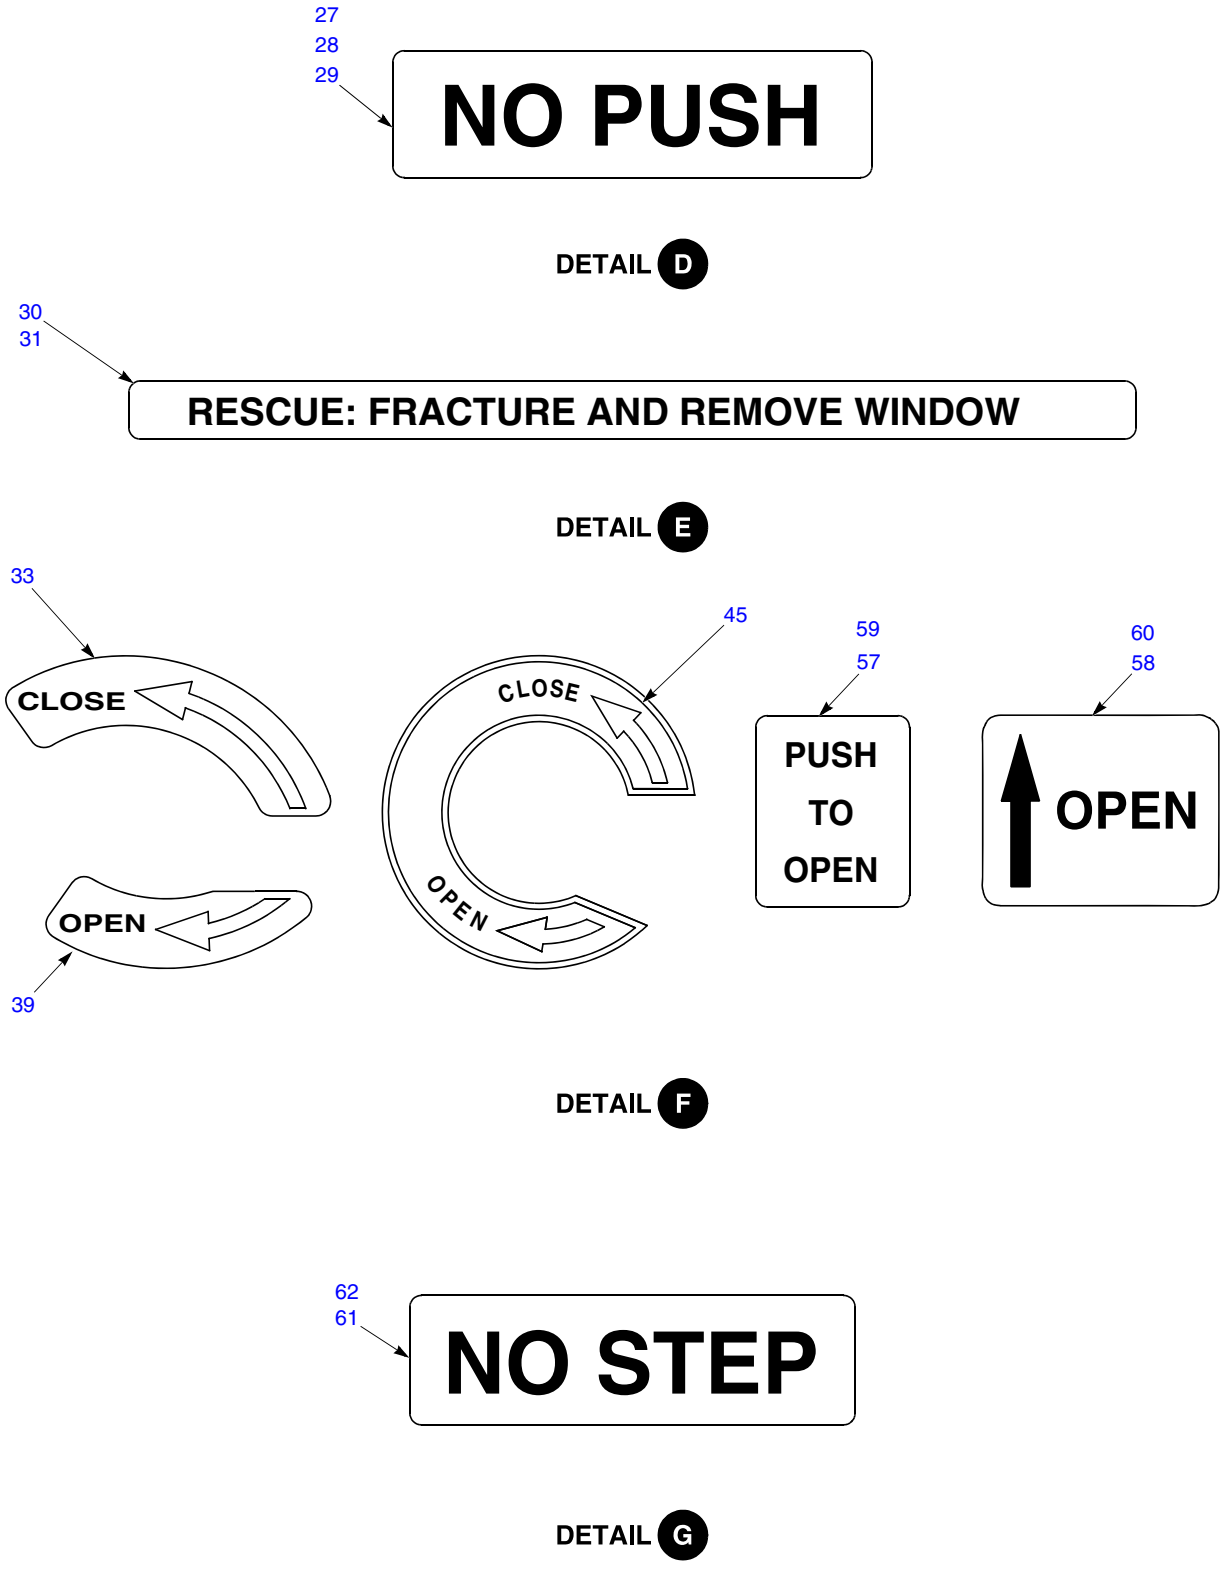

SR22_PC11_1366C

Figure-01
Exterior Placards - Serials w/ English (3 of 4)

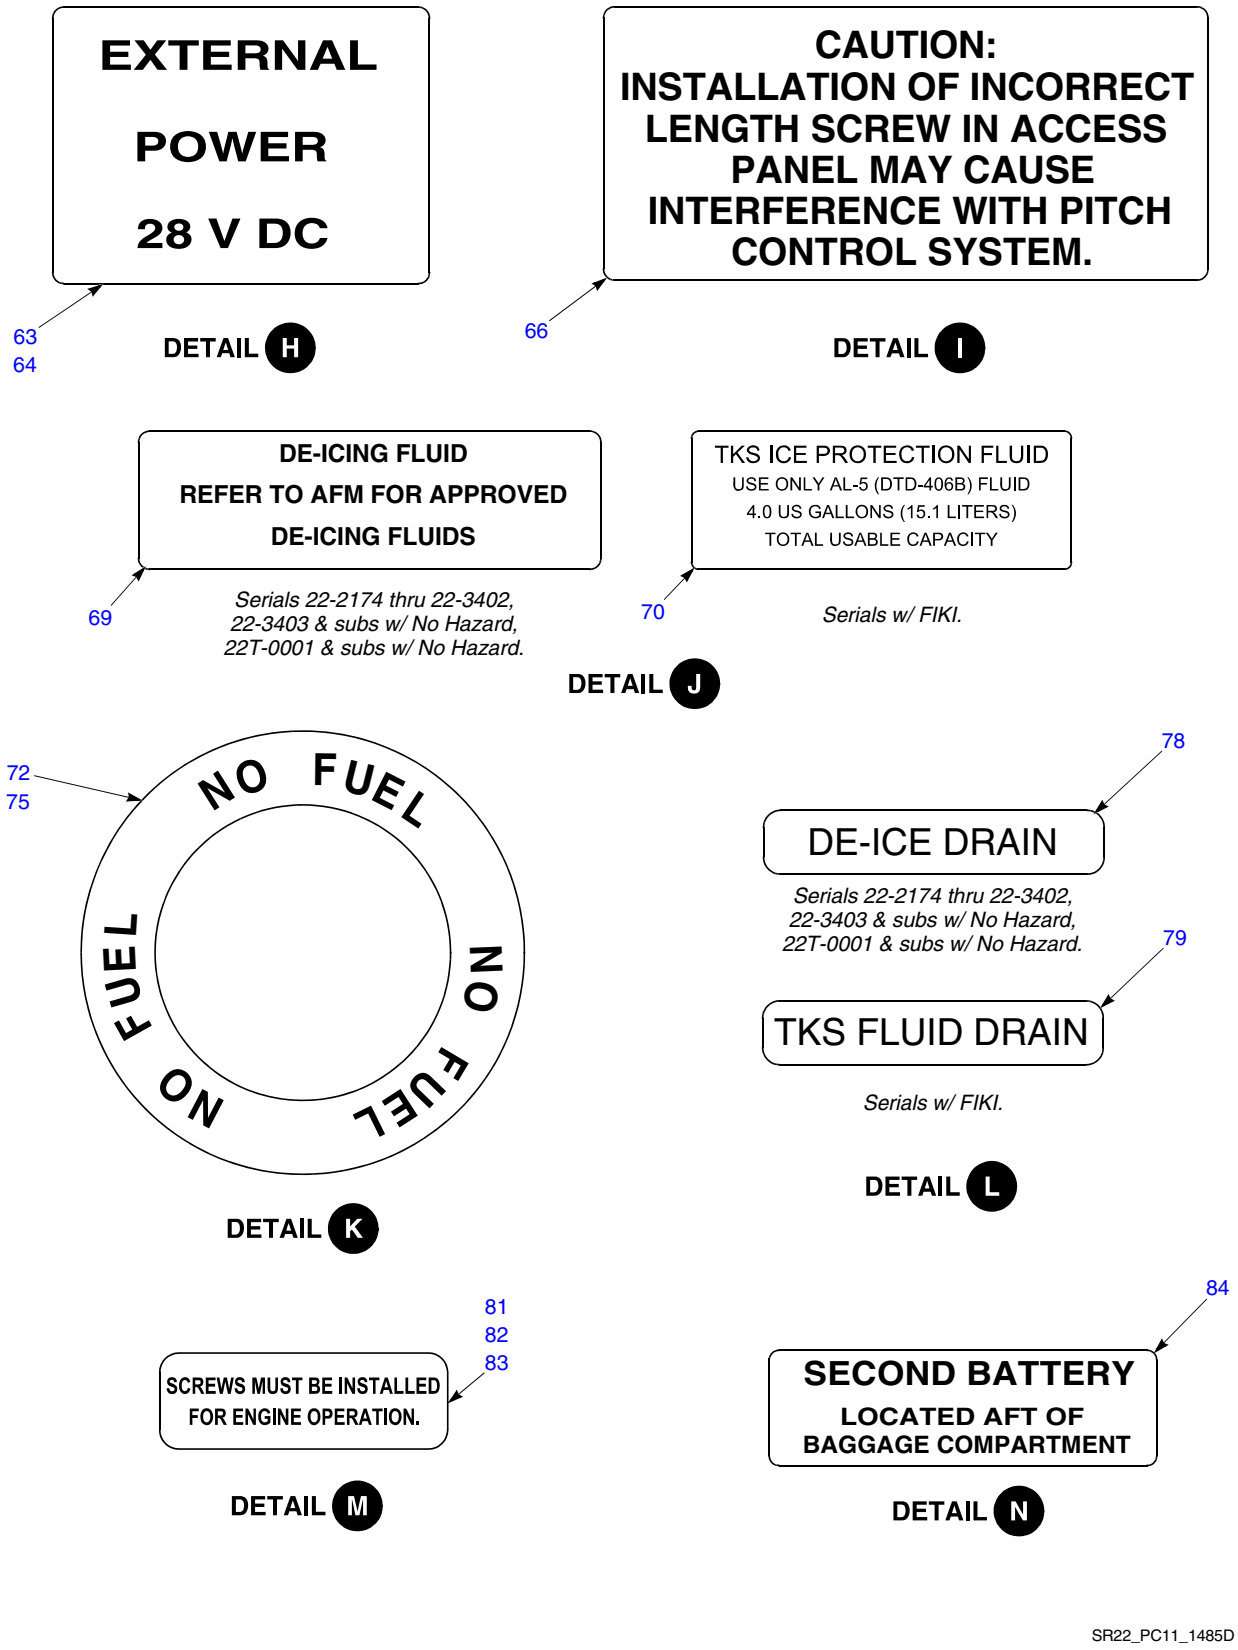

Figure-01
Exterior Placards - Serials w/ English (4 of 4)

EFFECTIVITY:
Serials w/ English

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		EXTERIOR PLACARDS	0002 / 0001	/	NP
	3	14231-001			·PLACARD, OIL DOOR	0002	0819	AR
	6	14231-004			·PLACARD, OIL DOOR	0820 / 0001	/	AR
	9	13374-001			·PLACARD, FUEL RING	0002	0549	AR
					FOR SPARES USE P/N 15648-004			
	12	15648-004			·PLACARD, FUEL RING	0550	2437	AR
					ALTERNATE FOR P/N 15648-003			
-	15	15648-003			·PLACARD, FUEL RING	0550	2437	AR
					ALTERNATE FOR P/N 15648-004			
-	18	15736-001	@		·PLACARD, FUEL RING	0656 / 0001	/	AR
	21	17366-001			·PLACARD, FUEL RING	2438	3034	AR
	22	17366-002			·PLACARD, FUEL RING	3035 / 0001	/	AR
	24	12430-001	#		·PLACARD, CAPS COVER, CLEAR	0002 / 0001	/	AR
	25	12430-008	#		·PLACARD, CAPS COVER, WHITE	0002 / 0001	/	AR
	26	12430-016	#		·PLACARD, CAPS COVER, WHITE TEXT, CLEAR	0002 / 0001	/	AR
	27	12431-001	#		·PLACARD, NO PUSH, GRAY TEXT	0002 / 0001	/	AR
	28	12431-007	#		·PLACARD, NO PUSH, WHITE TEXT	0002 / 0001	/	AR
	29	12431-013	#		·PLACARD, NO PUSH, BLACK TEXT	0002 / 0001	/	AR
	30	12437-001	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	31	12437-007	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	33	12434-001			·PLACARD, DOOR LATCH, CLOSE, LH	0002	0521	AR
					FOR SPARES USE P/N 15592-001			
-	36	12434-002			·PLACARD, DOOR LATCH, CLOSE, RH	0002	0521	AR
					FOR SPARES USE P/N 15592-002			
	39	12435-001			·PLACARD, DOOR LATCH, OPEN, LH	0002	0521	AR
					FOR SPARES USE P/N 15592-001			
-	42	12435-002			·PLACARD, DOOR LATCH, OPEN, RH	0002	0521	AR
					FOR SPARES USE P/N 15592-002			
	45	15592-001			·PLACARD, DOOR LATCH, LH	0522	0819	AR
-	48	15592-002			·PLACARD, DOOR LATCH, RH	0522	0819	AR
-	51	15592-005	@		·PLACARD, DOOR LATCH, LH	0656 / 0001	/	AR
-	54	15592-006	@		·PLACARD, DOOR LATCH, RH	0656 / 0001	/	AR
	57	20547-001	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	58	37312-001	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233	/	AR
	59	20547-008	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	60	37312-011	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233	/	AR
	61	12433-001	#		·PLACARD, NO STEP, BLACK TEXT	0002 / 0001	/	AR
	62	12433-007	#		·PLACARD, NO STEP, WHITE TEXT	0002 / 0001	/	AR
	63	12432-001	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002 / 0001	/	AR
	64	12432-007	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0002 / 0001	/	AR
	66	14685-001			·PLACARD, ACCESS PANEL ELEVATOR TORQUE TUBE	0119	0497	AR
					AFTER SA 02-09	0002	0118	AR
	69	15334-001			·PLACARD, TANK, W/ ICE PROTECTION, BASIC2	0334 / 0001	/	AR
	70	25769-001			·PLACARD, TANK, W/ ICE PROTECTION, FIKI	3403 / 0001	/	AR
	72	15518-001			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	0458	2437	AR
					AFTER SB2X-11-03	0334	0457	AR
	75	21743-001			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438 / 0001	/	AR
	78	18273-001			·PLACARD, DRAIN, W/ ICE PROTECTION, BASIC2	2174 / 0001	/	AR
	79	19655-001			·PLACARD, DRAIN, W/ ICE PROTECTION, FIKI	3403 / 0001	/	AR
	81	20920-001	#		·PLACARD, COWL INLET, RED TEXT	1414 / 0001	/	AR
	82	20920-005	#		·PLACARD, COWL INLET, BLACK TEXT	1414 / 0001	/	AR
	83	20920-007	#		·PLACARD, COWL INLET, WHITE TEXT	1414 / 0001	/	AR
	84	19854-001			·PLACARD, SECOND BATTERY LOCATION	2420 / 0001	/	AR

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 W/ FIKI FOR PART IDENTIFICATION.			
			@		INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT.			
			#		CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.			

EFFECTIVITY:
All

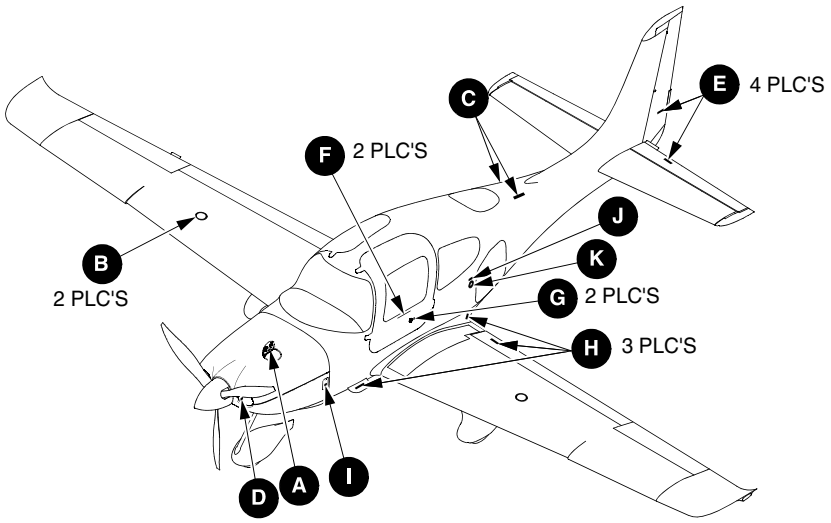

TIPO DE ÓLEO DO MOTOR
ACIMA DE 4° C (40° F): SAE 50, 20W50 OU 20W60
ABAIXO DE 4° C (40° F): SAE 30 OU 10W30, 15W50 OU 20W50
CONSULTE O AFM PARA ÓLEOS APROVADOS

6

DETAIL A

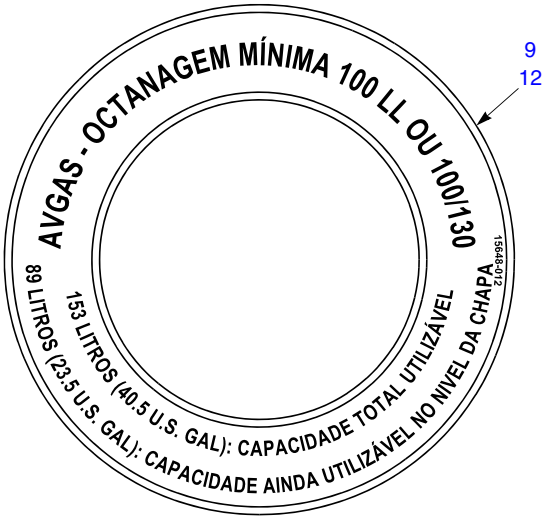

9
12

DETAIL B

15

ATENÇÃO!
FOGUETE PARA LANÇAMENTO DE PARAQUEDAS NO INTERIOR DA FUSELAGEM
MANTENHA-SE AFASTADO QUANDO EXISTIREM PESSOAS NA CABINE

18
21

DETAIL C

OS PARAFUSOS DEVEM ESTAR ATARRACHADOS PARA OPERAÇÃO DO MOTOR

57
60
63

DETAIL D

BR_SR22_PC11_1461B

Figure-02
Exterior Placards - Serials w/ Portuguese (1 of 3)

EFFECTIVITY:
Serials w/ Portuguese

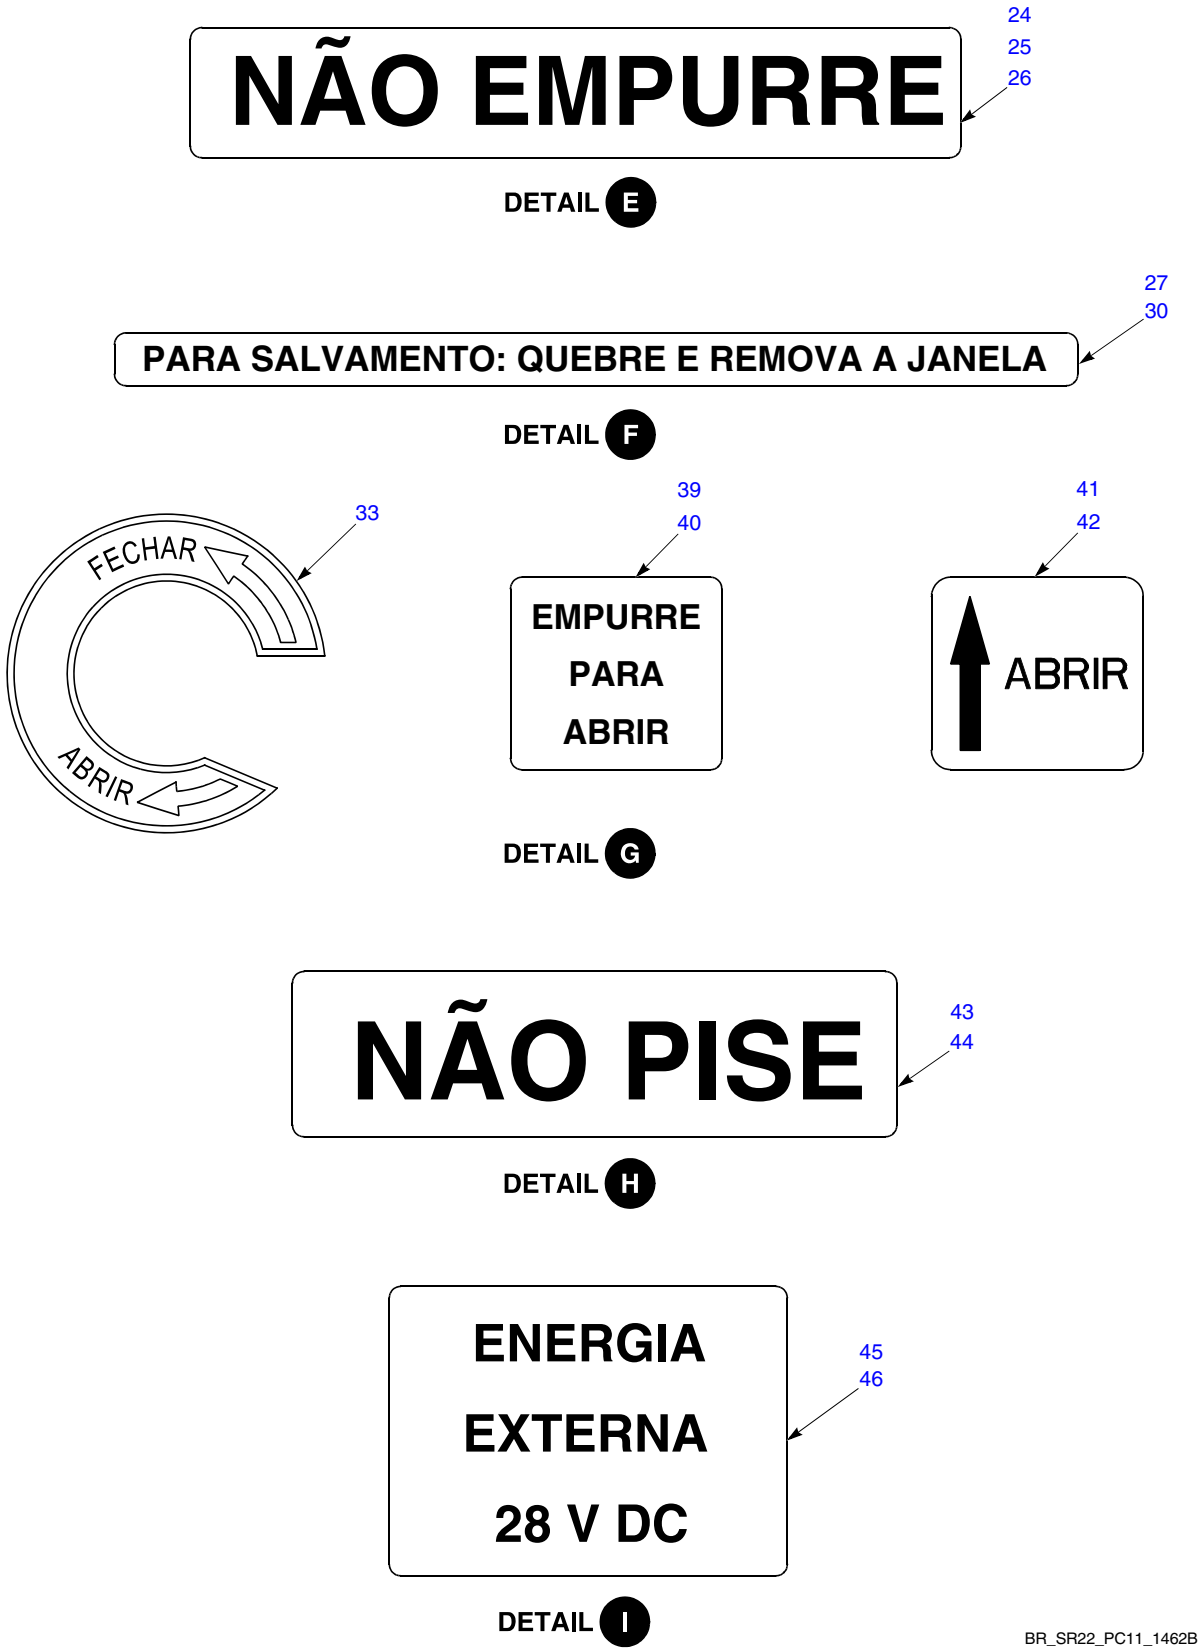

Figure-02
Exterior Placards - Serials w/ Portuguese (2 of 3)

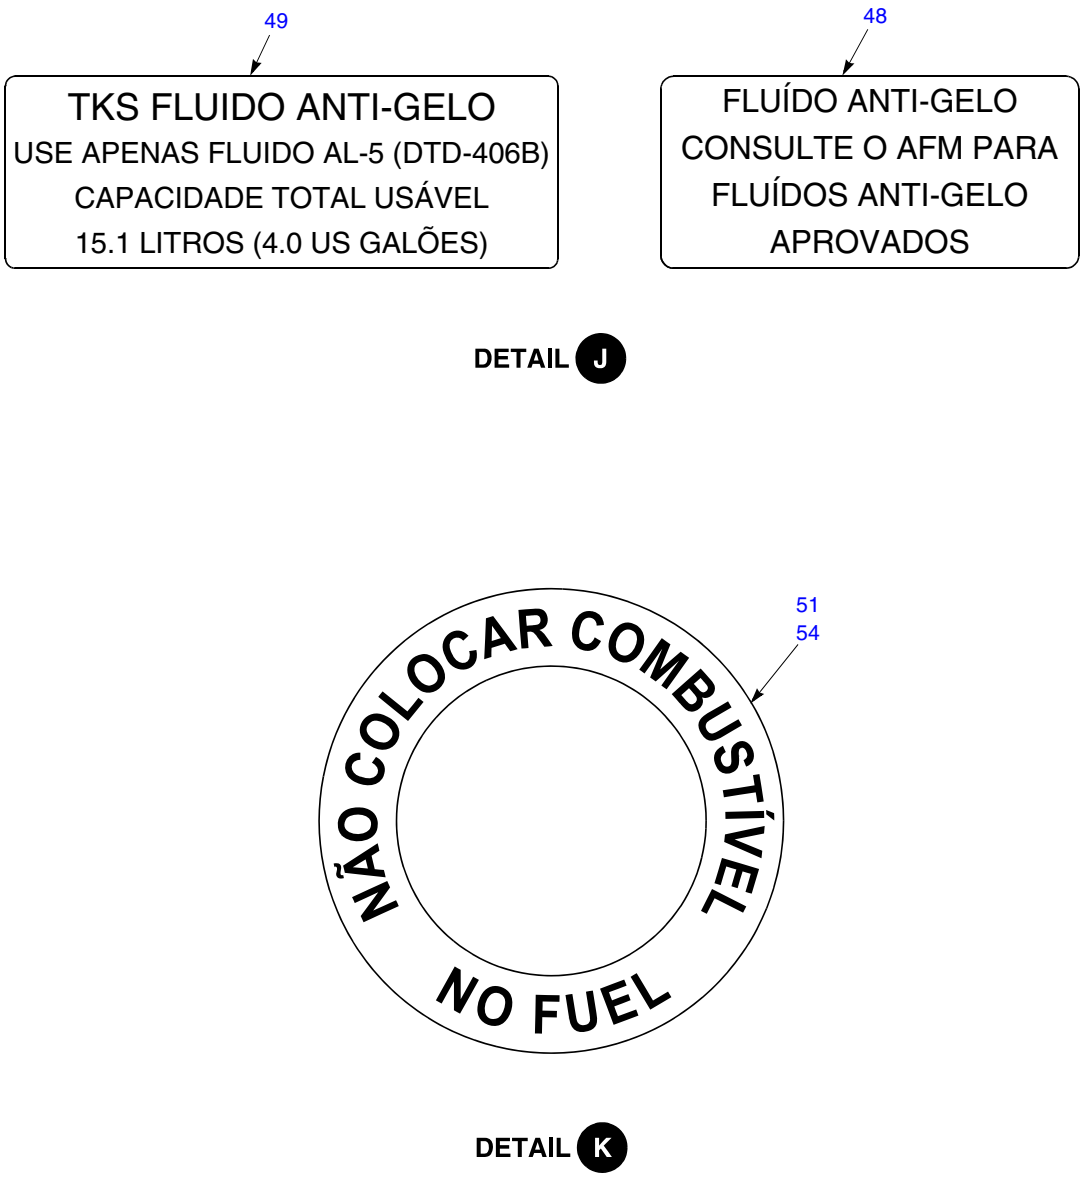

BR_SR22_PC11_1463A

Figure-02
Exterior Placards - Serials w/ Portuguese (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		EXTERIOR PLACARDS, PORTUGUESE	0002 / 0001	/	NP
	6	14231-009			·PLACARD, OIL DOOR	0002 / 0001	/	AR
	9	15648-012			·FUEL RING, PLACARD	0002	2437	AR
					ALTERNATE FOR P/N 15648-018			
	12	15648-018			·FUEL RING, PLACARD	0002	2437	AR
					ALTERNATE FOR P/N 15648-012			
	15	18347-004			·FUEL RING, PLACARD	2438 / 0001	/	AR
	18	12430-006	#		·PLACARD, CAPS COVER, CLEAR	0002 / 0001	/	AR
	21	12430-012	#		·PLACARD, CAPS COVER, WHITE	0002 / 0001	/	AR
	24	12431-005	#		·PLACARD, NO PUSH, GRAY TEXT	0002 / 0001	/	AR
	25	12431-011	#		·PLACARD, NO PUSH, WHITE TEXT	0002 / 0001	/	AR
	26	12431-017	#		·PLACARD, NO PUSH, BLACK TEXT	0002 / 0001	/	AR
	27	12437-005	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	30	12437-011	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	33	15592-011			·PLACARD, DOOR LATCH, LH	0002	0819	AR
-	36	15592-012			·PLACARD, DOOR LATCH, RH	0002	0819	AR
	39	20547-005	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	40	20547-012	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	41	37312-006	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233		AR
	42	37312-016	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233		AR
	43	12433-006	#		·PLACARD, NO STEP, BLACK TEXT	0002 / 0001	/	AR
	44	12433-011	#		·PLACARD, NO STEP, WHITE TEXT	0002 / 0001	/	AR
	45	12432-006	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002 / 0001	/	AR
	46	12432-012	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0002 / 0001	/	AR
	48	15334-007			·PLACARD, TANK, W/ ICE PROTECTION	0002 / 0001	/	AR
	49	24920-004			·PLACARD, DRAIN, W/ ICE PROTECTION, FIKI	3403 / 0001	/	AR
	51	15518-005			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	0002	2437	AR
	54	18458-001			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438 / 0001	/	AR
	57	20920-004	#		·PLACARD, COWL INLET, RED TEXT	0002 / 0001	/	AR
	60	20920-006	#		·PLACARD, COWL INLET, BLACK TEXT	0002 / 0001	/	AR
	63	20920-008	#		·PLACARD, COWL INLET, WHITE TEXT	0002 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:
SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

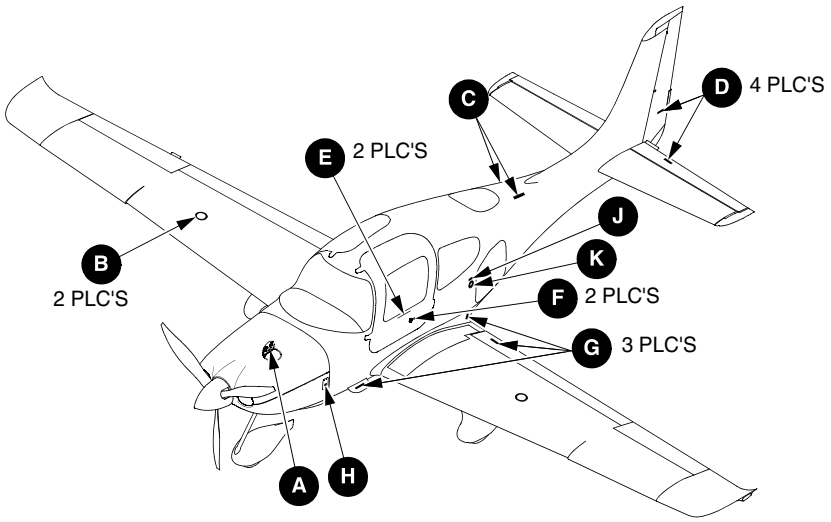

MOTORÖLGÜTE
ÜBER 40°F (4°C): SAE 50, 20W50 ODER 20W60
UNTER 40°F (4°C): SAE 30, 10W30, 15W50 ODER 20W50
SIEHE AFM-ANHANG FÜR ZUGELASSENE ÖLE

3

DETAIL A

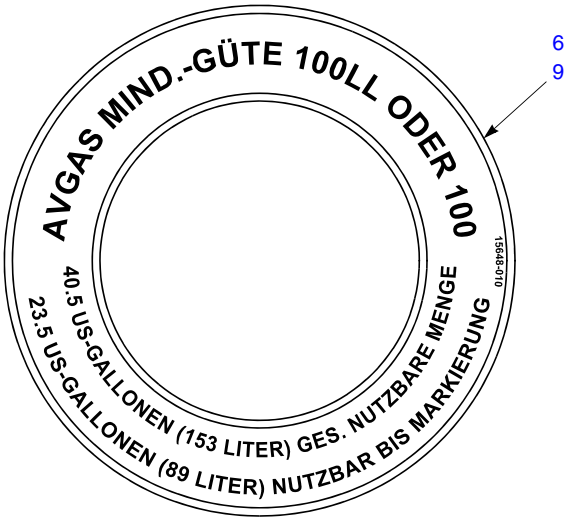

6
9

12

DETAIL B

WARNUNG!
ENTHÄLT RAKETE FÜR FALLSCHIRM-AKTIVIERUNG
INSASSEN MÜSSEN SICHEREN ABSTAND EINHALTEN

15
18

DETAIL C

GR_SR22_PC11_1141F

Figure-03
Exterior Placards - Serials w/ German (1 of 3)

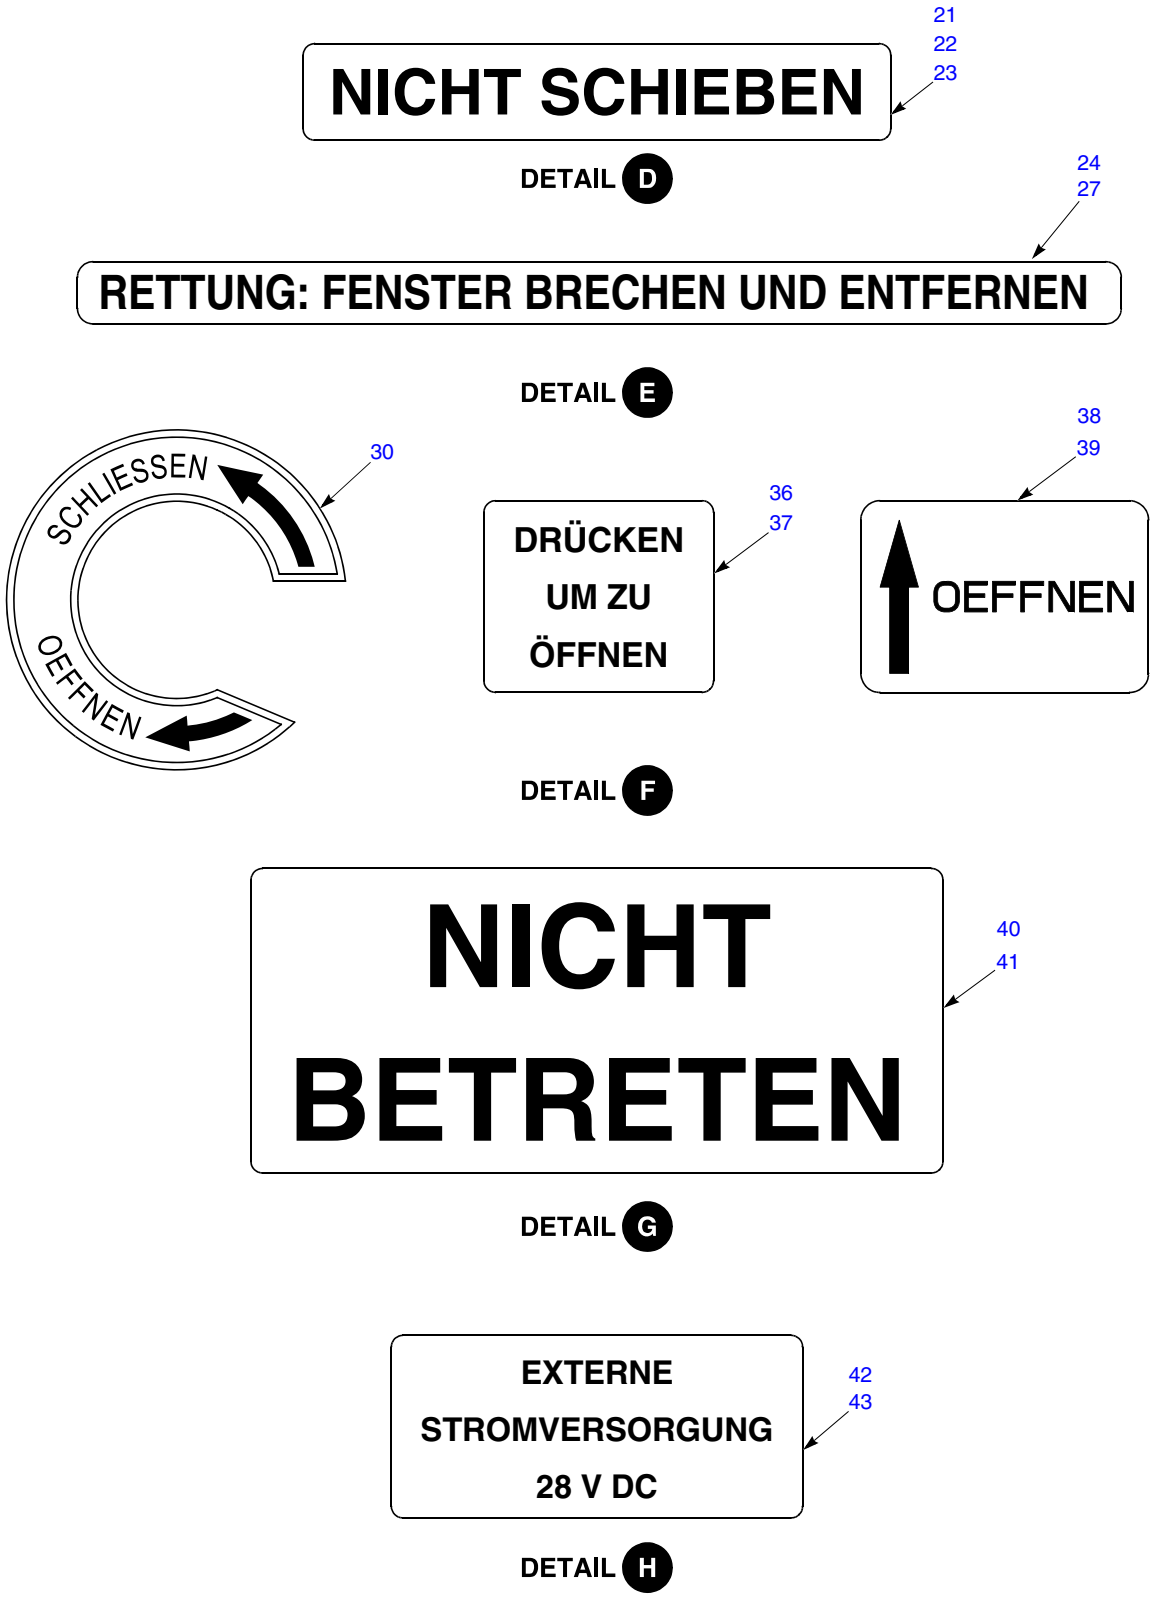

GR_SR22_PC11_1186E

Figure-03
Exterior Placards - Serials w/ German (2 of 3)

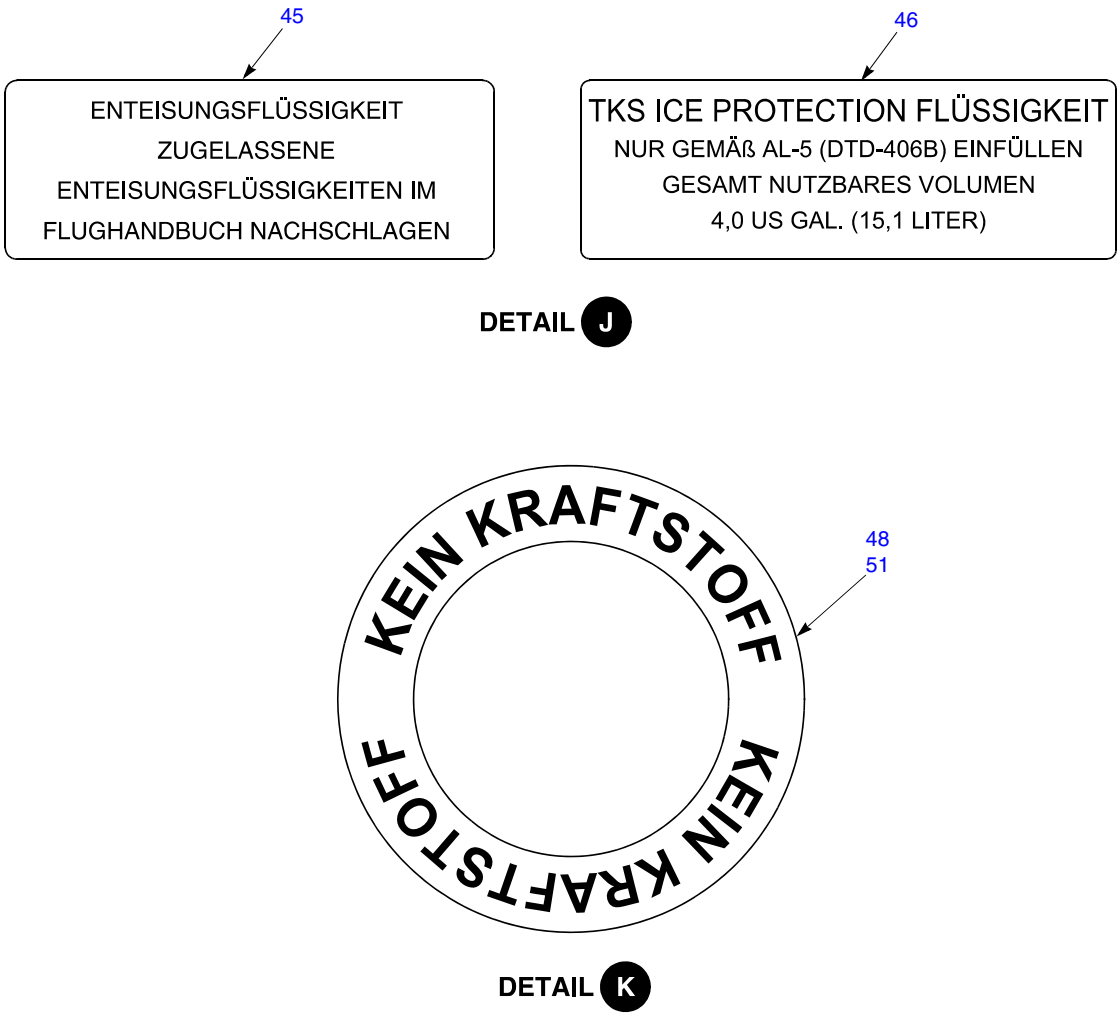

GR_SR22_PC11_1366

Figure-03
Exterior Placards - Serials w/ German (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		EXTERIOR PLACARDS, GERMAN	0002 / 0001	/	NP
	3	14231-007			·PLACARD, OIL DOOR	0002 / 0001	/	AR
	6	15648-010			·FUEL RING, PLACARD	0002	2437	AR
					ALTERNATE FOR P/N 15648-016			
	9	15648-016			·FUEL RING, PLACARD	0002	2437	AR
					ALTERNATE FOR P/N 15648-010			
	12	18347-003			·FUEL RING, PLACARD	2438 / 0001	/	AR
	15	12430-004	#		·PLACARD, CAPS COVER, CLEAR	0002 / 0001	/	AR
	18	12430-010	#		·PLACARD, CAPS COVER, WHITE	0002 / 0001	/	AR
	21	12431-004	#		·PLACARD, NO PUSH, GRAY TEXT	0002 / 0001	/	AR
	22	12431-010	#		·PLACARD, NO PUSH, WHITE TEXT	0002 / 0001	/	AR
	23	12431-016	#		·PLACARD, NO PUSH, BLACK TEXT	0002 / 0001	/	AR
	24	12437-004	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	27	12437-010	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	30	15592-009			·PLACARD, DOOR LATCH, LH	0002	0819	AR
-	33	15592-010			·PLACARD, DOOR LATCH, RH	0002	0819	AR
	36	20547-004	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	37	20547-011	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	38	37312-004	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233	/	AR
	39	37312-014	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233	/	AR
	40	12433-004	#		·PLACARD, NO STEP, BLACK TEXT	0002 / 0001	/	AR
	41	12433-009	#		·PLACARD, NO STEP, WHITE TEXT	0002 / 0001	/	AR
	42	12432-005	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002 / 0001	/	AR
	43	12432-011	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0002 / 0001	/	AR
	45	15334-005			·PLACARD, TANK, W/ ICE PROTECTION	0002 / 0001	/	AR
	46	24920-003			·PLACARD, TANK, W/ FIKI	3403 / 0001	/	AR
	48	15518-004			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	0002	2437	AR
	51	18458-004			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

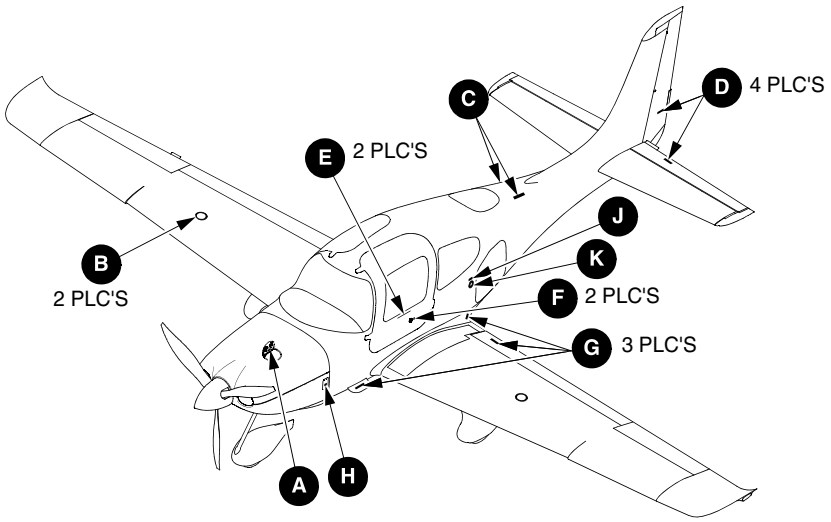

TYPE D'HUILE MOTEUR
AU-DESSUS DE 4°C (40°F) SAE 50, 20W50 OU 20W60
AU-DESSOUS DE 4°C (40°F) SAE 30, 10W30, 15W50 OU 20W50
CONSULTER LA LISTE DES HUILES APPROUVEES DANS
LE MANUEL D'UTILISATION DE L'AVION

3

DETAIL A

6
9

12

DETAIL B

MISE EN GARDE

FUSEE POUR DEPLOIEMENT DU PARACHUTE, A L'INTERIEUR

RESTER A L'ECART QUAND L'AVION EST OCCUPE

15
18

DETAIL C

FR_SR22_PC11_1461B

Figure-04
Exterior Placards - Serials w/ French (1 of 3)

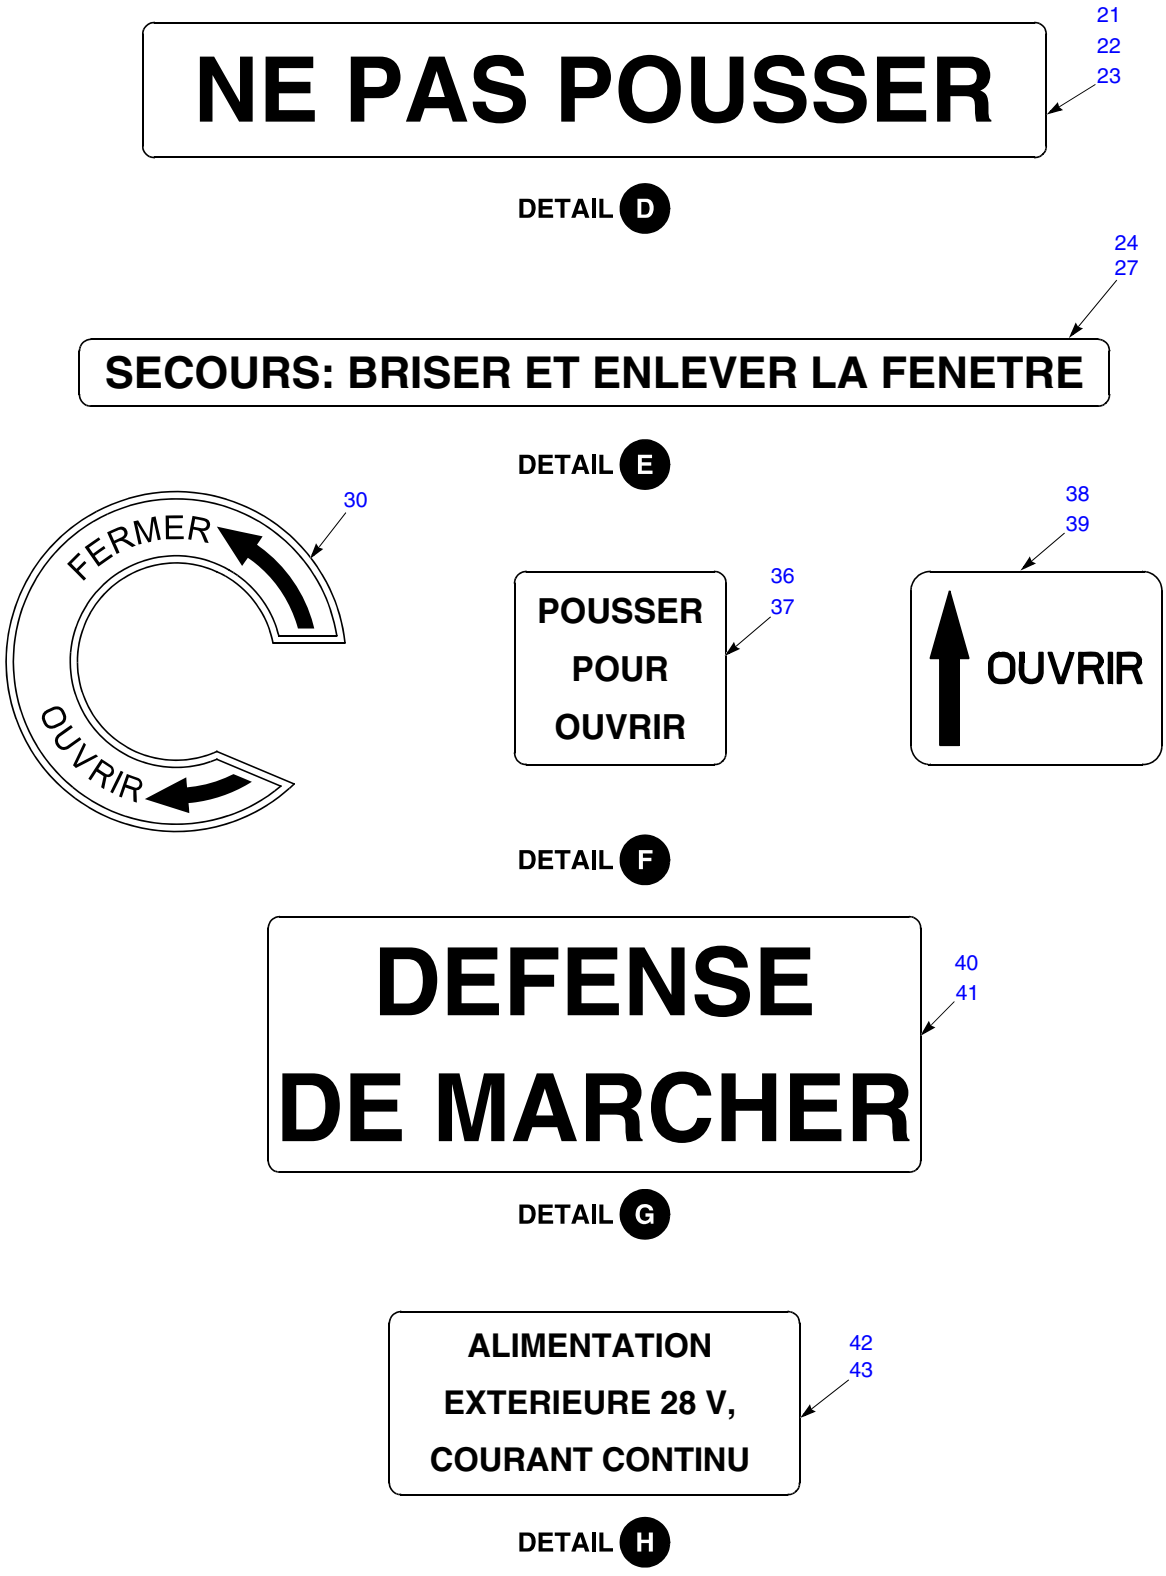

Figure-04
Exterior Placards - Serials w/ French (2 of 3)

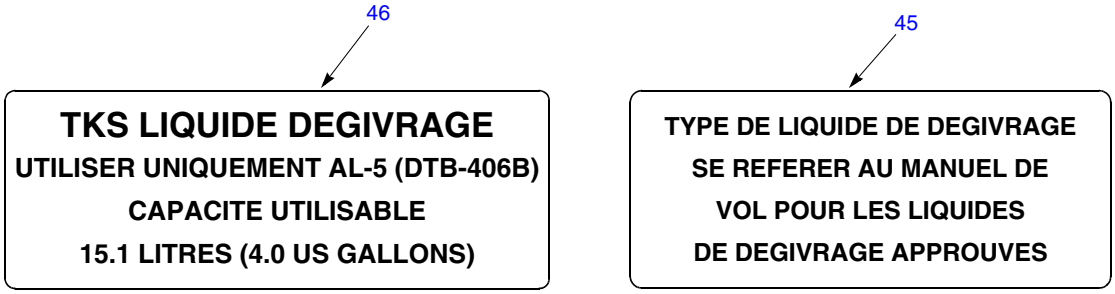

DETAIL J

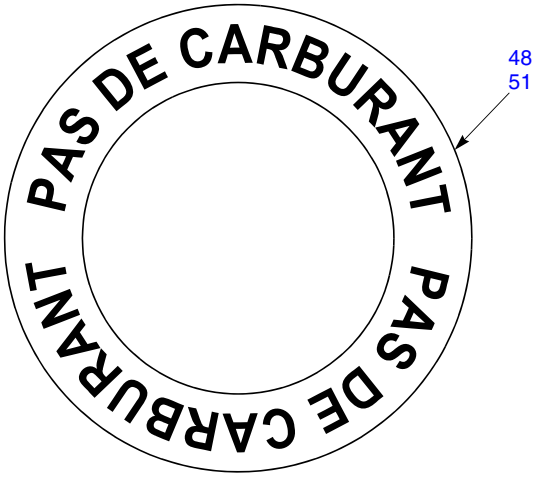

DETAIL K

FR_SR22_PC11_1463A

Figure-04
Exterior Placards - Serials w/ French (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04	**		EXTERIOR PLACARDS, FRENCH	0002 / 0001	/	NP
	3	14231-006			·PLACARD, OIL DOOR	0002 / 0001	/	AR
	6	15648-009			·FUEL RING, PLACARD	0002	2437	AR
					ALTERNATE FOR P/N 15648-014			
	9	15648-014			·FUEL RING, PLACARD	0002	2437	AR
					ALTERNATE FOR P/N 15648-009			
	12	18347-002			·FUEL RING, PLACARD	2438 / 0001	/	AR
	15	12430-003	#		·PLACARD, CAPS COVER, CLEAR	0002 / 0001	/	AR
	18	12430-009	#		·PLACARD, CAPS COVER, WHITE	0002 / 0001	/	AR
	21	12431-003	#		·PLACARD, NO PUSH, GRAY TEXT	0002 / 0001	/	AR
	22	12431-009	#		·PLACARD, NO PUSH, WHITE TEXT	0002 / 0001	/	AR
	23	12431-015	#		·PLACARD, NO PUSH, BLACK TEXT	0002 / 0001	/	AR
	24	12437-003	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	27	12437-009	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	30	15592-007			·PLACARD, DOOR LATCH, LH	0002	0819	AR
-	33	15592-008			·PLACARD, DOOR LATCH, RH	0002	0819	AR
	36	20547-003	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	37	20547-010	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	38	37312-003	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233	/	AR
	39	37312-013	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233	/	AR
	40	12433-003	#		·PLACARD, NO STEP, BLACK TEXT	0002 / 0001	/	AR
	41	12433-008	#		·PLACARD, NO STEP, WHITE TEXT	0002 / 0001	/	AR
	42	12432-004	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002 / 0001	/	AR
	43	12432-010	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0002 / 0001	/	AR
	45	15334-004			·PLACARD, TANK, W/ ICE PROTECTION	0002 / 0001	/	AR
	46	24920-002			·PLACARD, TANK, W/ FIKI	3403 / 0001	/	AR
	48	15518-003			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	0002	2437	AR
	51	18458-003			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

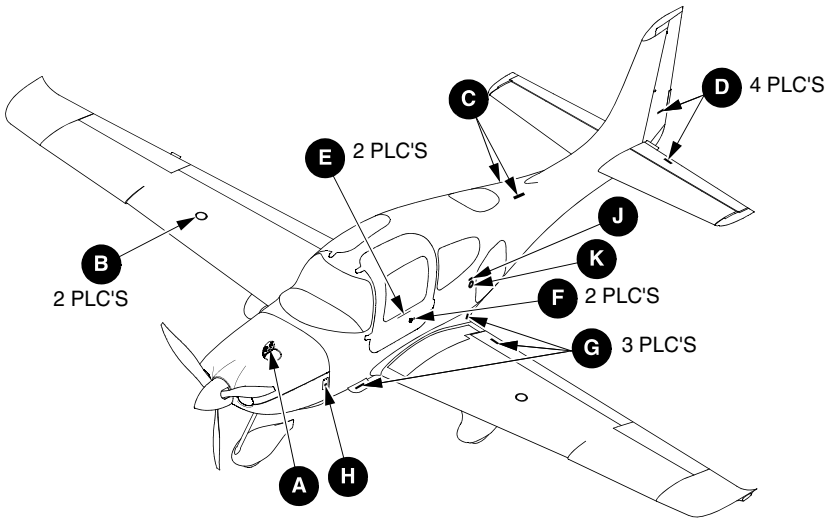

ENGINE OIL GRADE
ABOVE 40°F SAE 50 OR 20W50
BELOW 40°F SAE 30, 10W30, 15W50 OR 20W50
REFER TO AFM FOR APPROVED OILS

CALIDADES DE ACEITE PARA MOTOR
SOBRE 40°F (4°C) SAE 50 O 20W50
DEBAJO 40°F (4°C) SAE 30, 10W30, 15W50, O 20W50
REFERIRSE AL MVA PARA LOS LUBRICANTES APROBADOS

12

DETAIL A

AVGAS GRADO MIN 100LL O 100
40.5 EE.UU.GALS. (153 LITROS) CAPACIDAD TOTAL UTLIZABLE.
23.5 EE.UU. GALS. (89 LITROS) UTLIZABLE APENDICE METALICO

18

AVGAS GRADO MIN 100LL O 100
46 EE.UU.GALS. (174 LITROS) CAPACIDAD TOTAL UTLIZABLE.
30 EE.UU. GALS. (114 LITROS) UTLIZABLE APENDICE METALICO

19

DETAIL B

SP_SR22_PC11_1529A

Figure-05
Exterior Placards - Serials w/ Spanish (1 of 3)

EFFECTIVITY:
Serials w/ Spanish

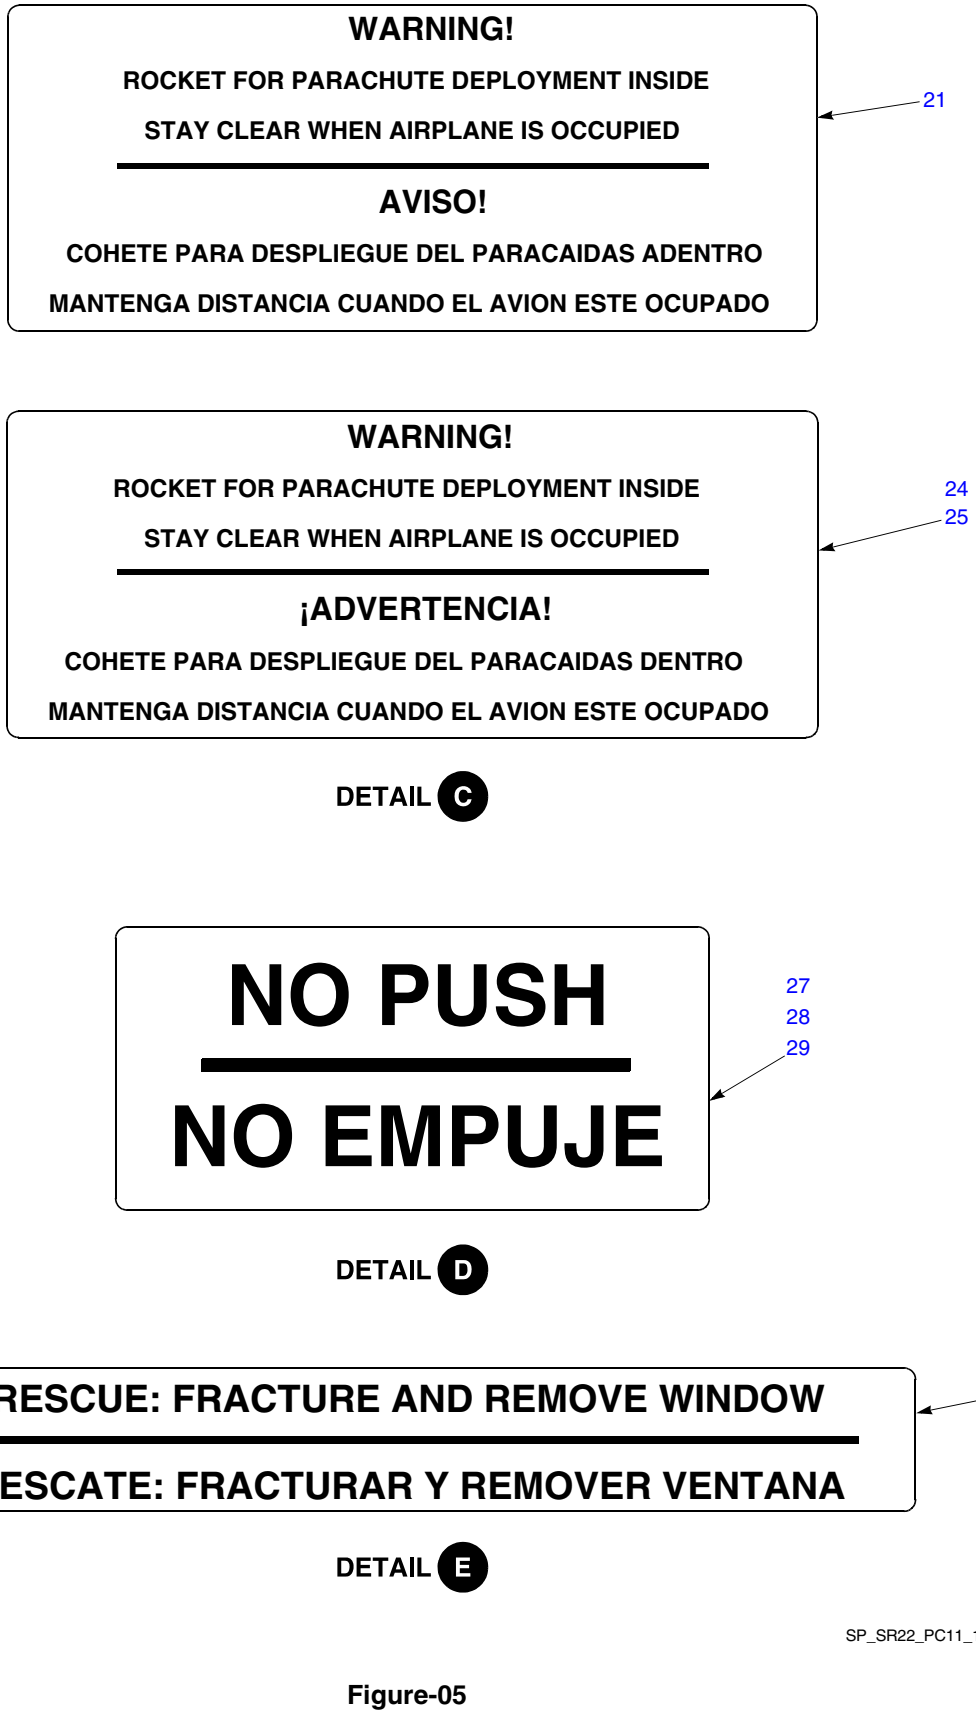

Figure-05
Exterior Placards - Serials w/ Spanish (2 of 3)

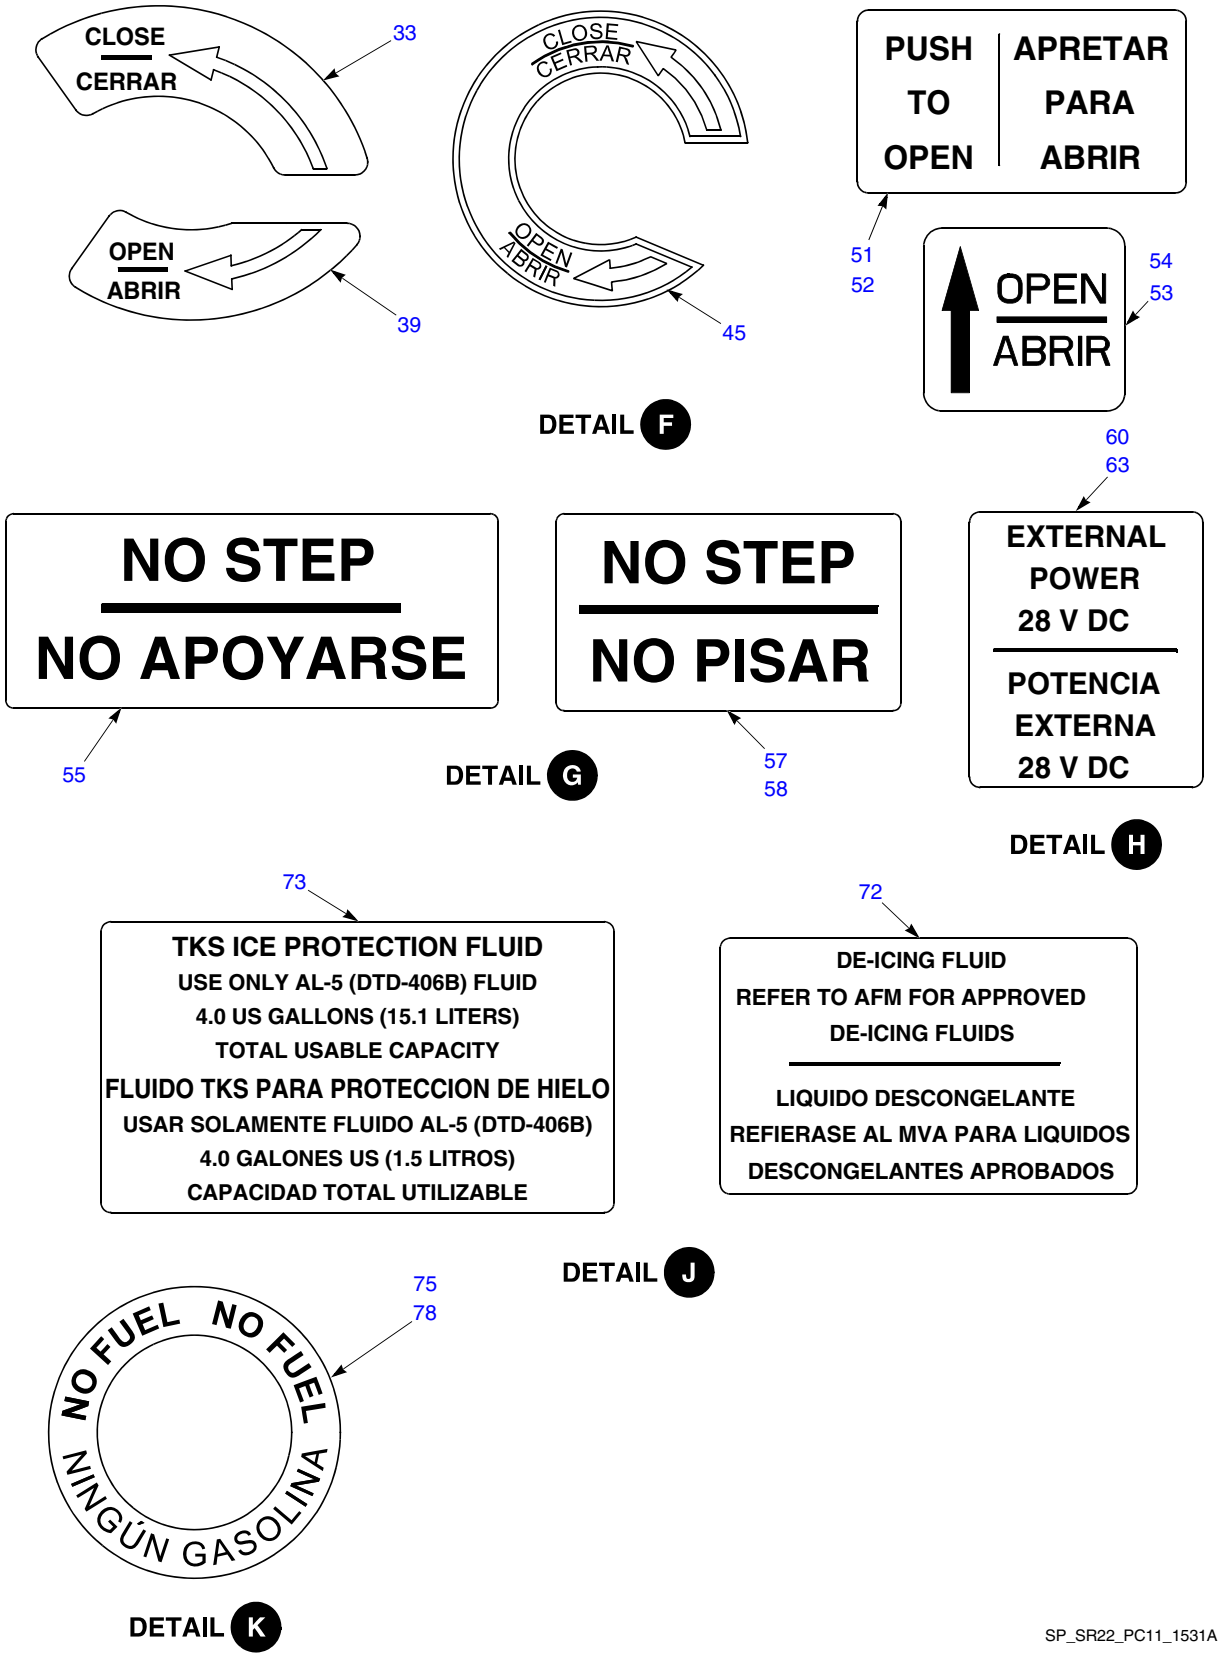

Figure-05
Exterior Placards - Serials w/ Spanish (3 of 3)

EFFECTIVITY:
Serials w/ Spanish

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05	**		EXTERIOR PLACARDS, SPANISH	0002 / 0001	/	NP
-	6	14231-003			·PLACARD, OIL DOOR	0002	0819	AR
					FOR SPARES USE P/N 14231-008			
-	9	14231-005			·PLACARD, OIL DOOR	0820	0820	AR
					FOR SPARES USE P/N 14231-008			
	12	14231-008			·PLACARD, OIL DOOR	0821 / 0001	/	AR
-	15	13374-002			·PLACARD, FUEL FILLER	0002	0521	AR
	18	15648-006			·PLACARD, FUEL FILLER	0522	2437	AR
	19	18347-001			·PLACARD, FUEL FILLER	2438 / 0001	/	AR
	21	12430-002			·PLACARD, CAPS COVER	0002	0493	AR
					FOR SPARES USE P/N 12430-005			
					FOR SPARES USE P/N 12430-011			
	24	12430-005	#		·PLACARD, CAPS COVER, CLEAR	0494 / 0001	/	AR
	25	12430-011	#		·PLACARD, CAPS COVER, WHITE	0494 / 0001	/	AR
	27	12431-002	#		·PLACARD, NO PUSH, GRAY TEXT	0002 / 0001	/	AR
	28	12431-008	#		·PLACARD, NO PUSH, WHITE TEXT	0002 / 0001	/	AR
	29	12431-014	#		·PLACARD, NO PUSH, BLACK TEXT	0002 / 0001	/	AR
	30	12437-002	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	31	12437-008	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	33	12434-003			·PLACARD, DOOR LATCH, CLOSE, LH	0002	0521	AR
-	36	12434-004			·PLACARD, DOOR LATCH, CLOSE, RH	0002	0521	AR
	39	12435-003			·PLACARD, DOOR LATCH, OPEN, LH	0002	0521	AR
-	42	12435-004			·PLACARD, DOOR LATCH, OPEN, RH	0002	0521	AR
	45	15592-003			·PLACARD, DOOR LATCH, LH	0522	0819	AR
-	48	15592-004			·PLACARD, DOOR LATCH, RH	0522	0819	AR
	51	20547-002	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	52	20547-009	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	53	37312-002	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233		AR
	54	37312-012	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233		AR
	55	12433-002			·PLACARD, NO STEP	0002	0493	AR
					FOR SPARES USE P/N 12433-005			
	57	12433-005	#		·PLACARD, NO STEP, BLACK TEXT	0494 / 0001	/	AR
	58	12433-010	#		·PLACARD, NO STEP, WHITE TEXT	0494 / 0001	/	AR
	60	12432-003	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002 / 0001	/	AR
	63	12432-009	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0002 / 0001	/	AR
-	69	15334-003			·PLACARD, TANK, W/ ICE PROTECTION, BASIC	0334	0493	AR
					FOR SPARES USE P/N 15334-006			
	72	15334-006			·PLACARD, TANK, W/ ICE PROTECTION	0494 / 0001	/	AR
	73	24920-005			·PLACARD, TANK, W/ FIKI	3403 / 0001	/	AR
	75	15518-002			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	1150	2437	AR
	78	18458-002			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

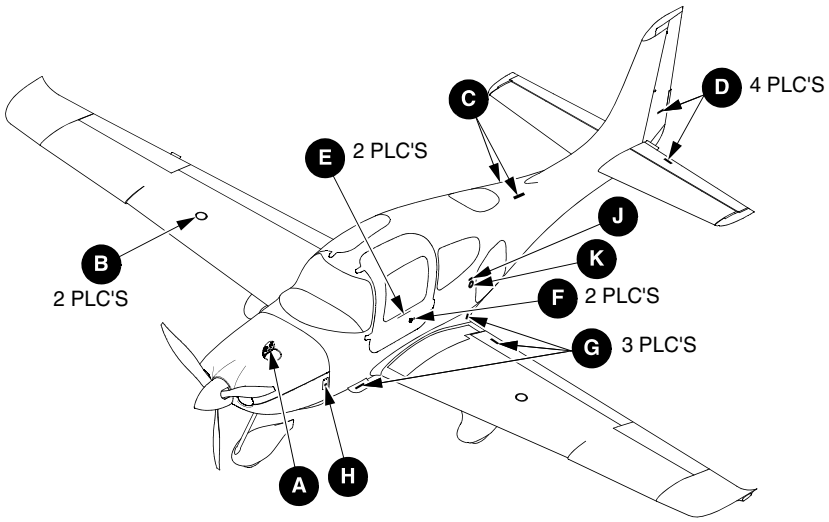

ENGINE OIL GRADE
ABOVE 40°F SAE 50 OR 20W50
BELOW 40°F SAE 30, 10W30, 15W50 OR 20W50
REFER TO AFM FOR APPROVED OILS

CUALIDADES DEL ACEITE DE MOTOR
POR ARRIBA DE LOS 4°C (40°F) SAE 50 O 20W50
POR DEBAJO DE 4°C (40°F) SAE 30, 10W30, 15W50 O 20W50
REFERIRSE AL POH PARA LOS LUBRICANTES APROBADOS

3

DETAIL A

6

9

DETAIL B

EM_SR22_PC11_192A

Figure-06
Exterior Placards - Serials w/ Argentine (1 of 3)

EFFECTIVITY:
Serials w/ Argentine

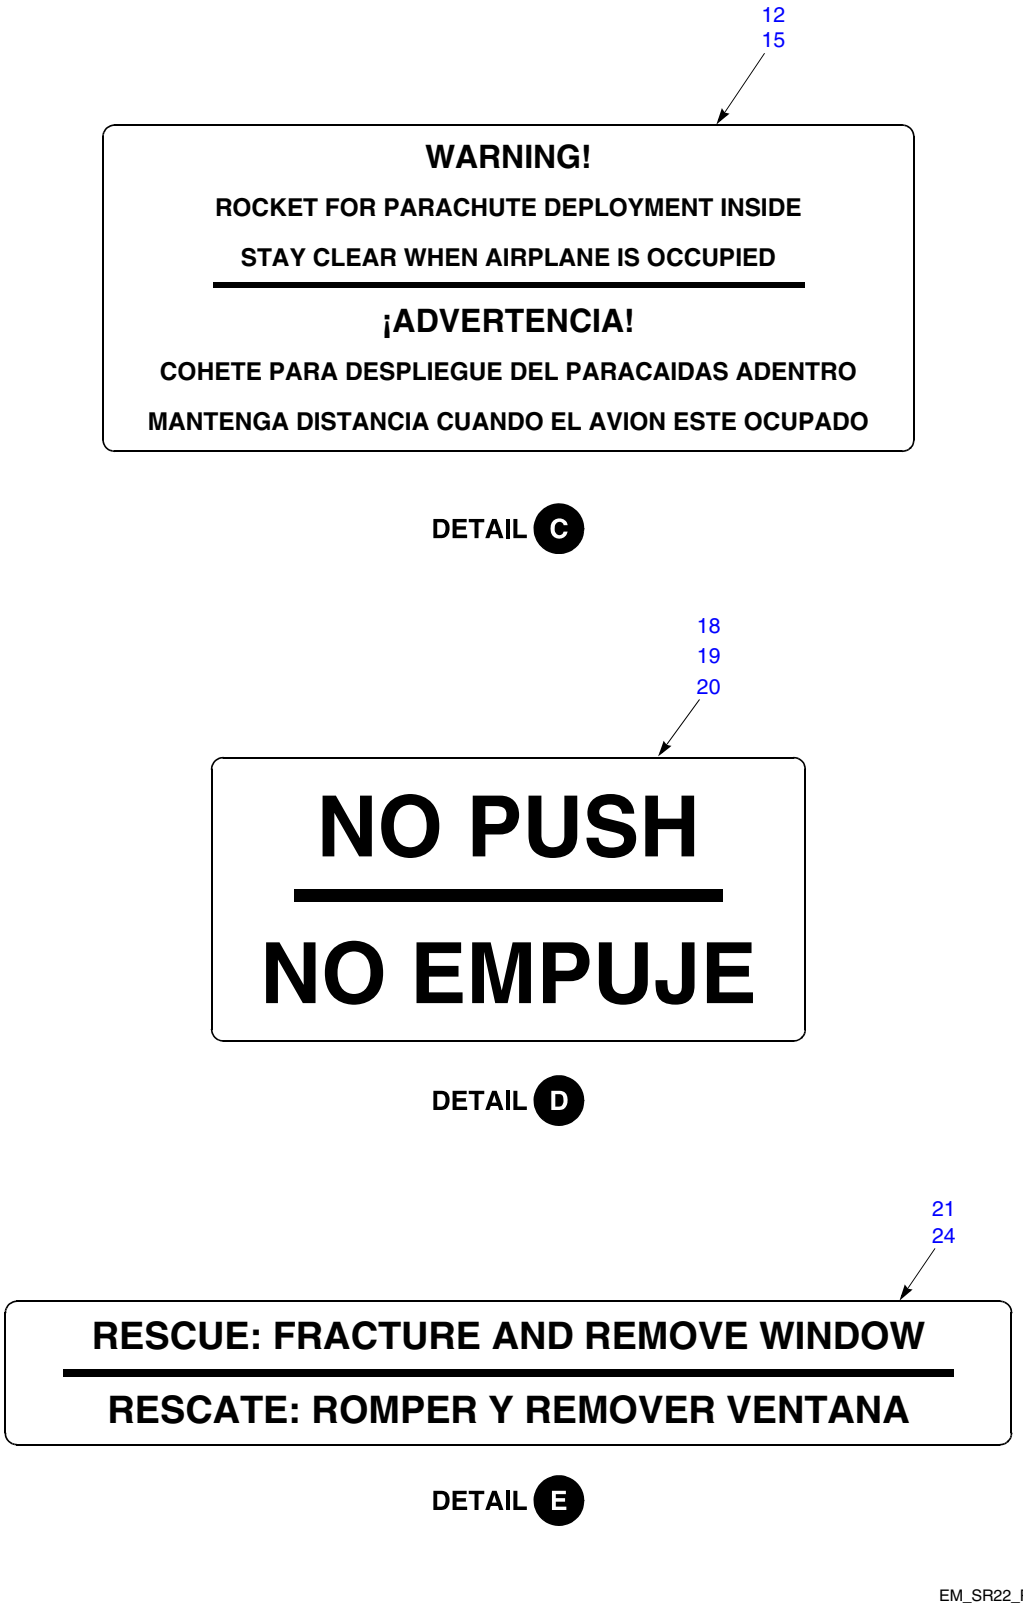

Figure-06
Exterior Placards - Serials w/ Argentine (2 of 3)

EFFECTIVITY:
Serials w/ Argentine

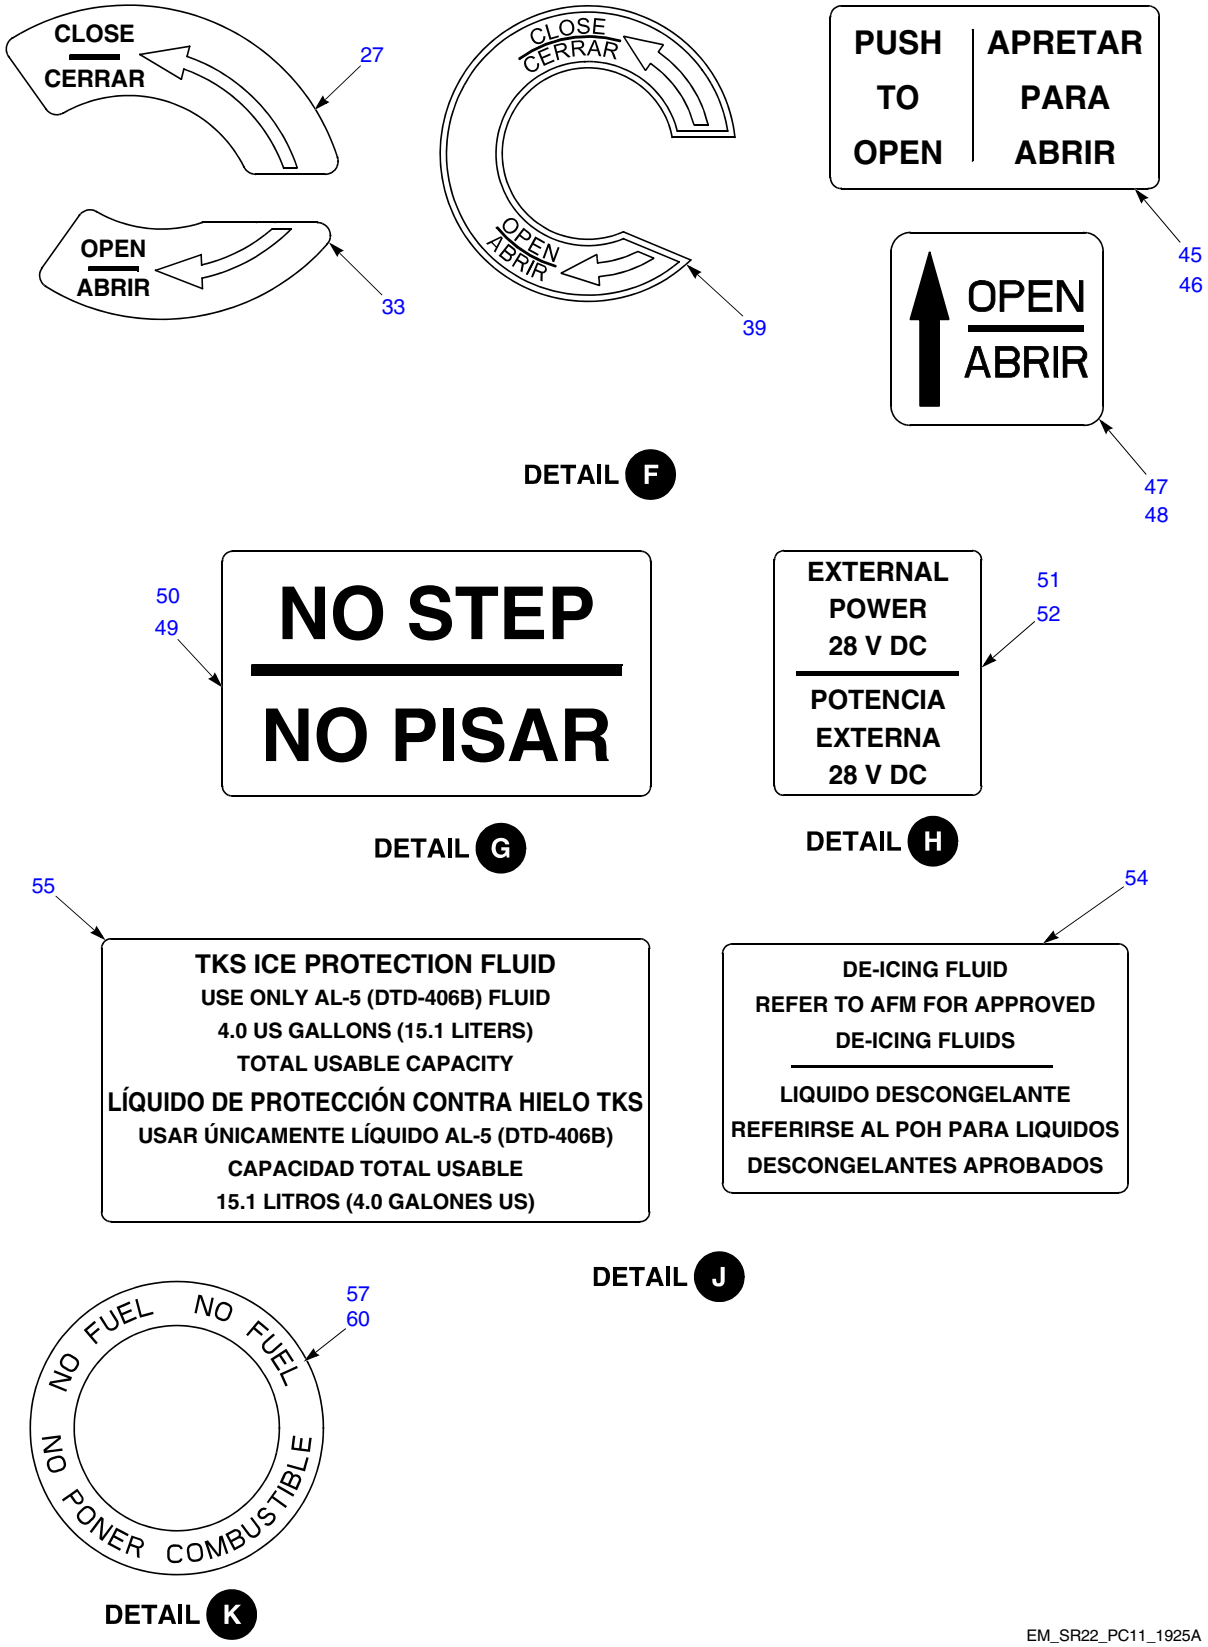

Figure-06
Exterior Placards - Serials w/ Argentine (3 of 3)

EFFECTIVITY:
Serials w/ Argentine

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 06	**		EXTERIOR PLACARDS, ARGENTINE	0002 / 0001	/	NP
	3	14231-010			·PLACARD, OIL DOOR	0002 / 0001	/	AR
	6	15648-020			·PLACARD, FUEL FILLER	0002	2437	AR
	9	18347-006			·PLACARD, FUEL FILLER	2438 / 0001	/	AR
	12	12430-014	#		·PLACARD, CAPS COVER, CLEAR	0002 / 0001	/	AR
	15	12430-015	#		·PLACARD, CAPS COVER, WHITE	0002 / 0001	/	AR
	18	12431-002	#		·PLACARD, NO PUSH, GRAY TEXT	0002 / 0001	/	AR
	19	12431-008	#		·PLACARD, NO PUSH, WHITE TEXT	0002 / 0001	/	AR
	20	12431-014	#		·PLACARD, NO PUSH, BLACK TEXT	0002 / 0001	/	AR
	21	12437-013	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	24	12437-014	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	27	12434-003			·PLACARD, DOOR LATCH, CLOSE, LH	0002	0521	AR
-	30	12434-004			·PLACARD, DOOR LATCH, CLOSE, RH	0002	0521	AR
	33	12435-003			·PLACARD, DOOR LATCH, OPEN, LH	0002	0521	AR
-	36	12435-004			·PLACARD, DOOR LATCH, OPEN, RH	0002	0521	AR
	39	15592-003			·PLACARD, DOOR LATCH, LH	0522	0819	AR
-	42	15592-004			·PLACARD, DOOR LATCH, RH	0522	0819	AR
	45	20547-002	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	46	20547-009	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	47	37312-002	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233	/	AR
	48	37312-012	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233	/	AR
	49	12433-005	#		·PLACARD, NO STEP, BLACK TEXT	0002 / 0001	/	AR
	50	12433-010	#		·PLACARD, NO STEP, WHITE TEXT	0002 / 0001	/	AR
	51	12432-003	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002 / 0001	/	AR
	52	12432-009	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0003 / 0001	/	AR
	54	15334-008			·PLACARD, TANK, W/ ICE PROTECTION	0334 / 0001	/	AR
	55	24920-001			·PLACARD, TANK, W/ FIKI	3403 / 0001	/	AR
	57	15518-006			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	0334	2437	AR
	60	18458-006			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

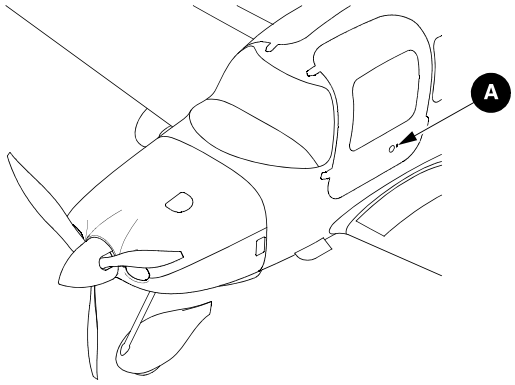

DETAIL A

RU_SR22_PC11_1957

Figure-07
Exterior Placards - Serials w/ Russian

EFFECTIVITY:
Serials w/ Russian

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ·····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 07			EXTERIOR PLACARDS, RUSSIAN	0002 / 0001	/	NP
	3	20547-006	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	6	20547-013	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	9	37312-007	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233	/	AR
	12	37312-017	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233	/	AR
					SYMBOL NOTES:			
				#	CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.			

EFFECTIVITY:
All

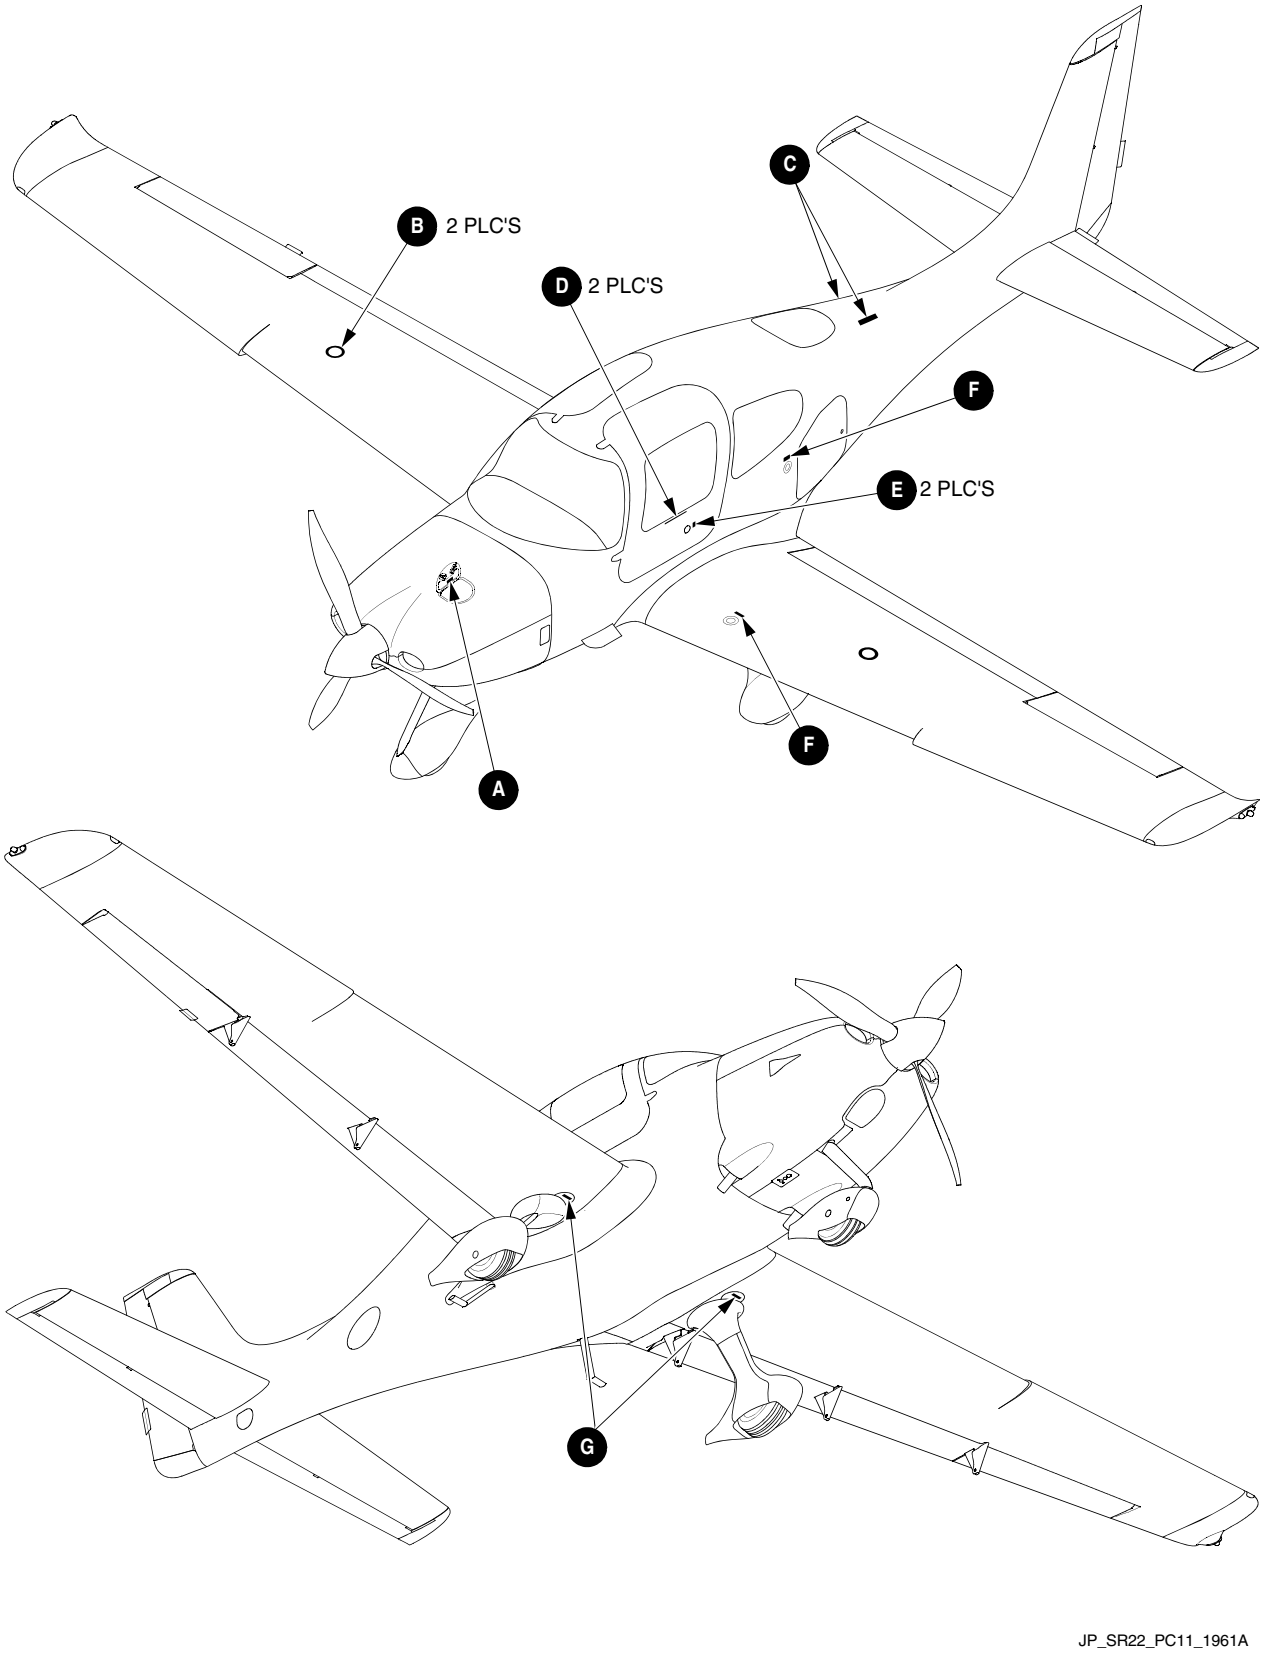

Figure-08
Exterior Placards - Serials w/ Japanese (1 of 3)

EFFECTIVITY:
Serials w/ Japanese

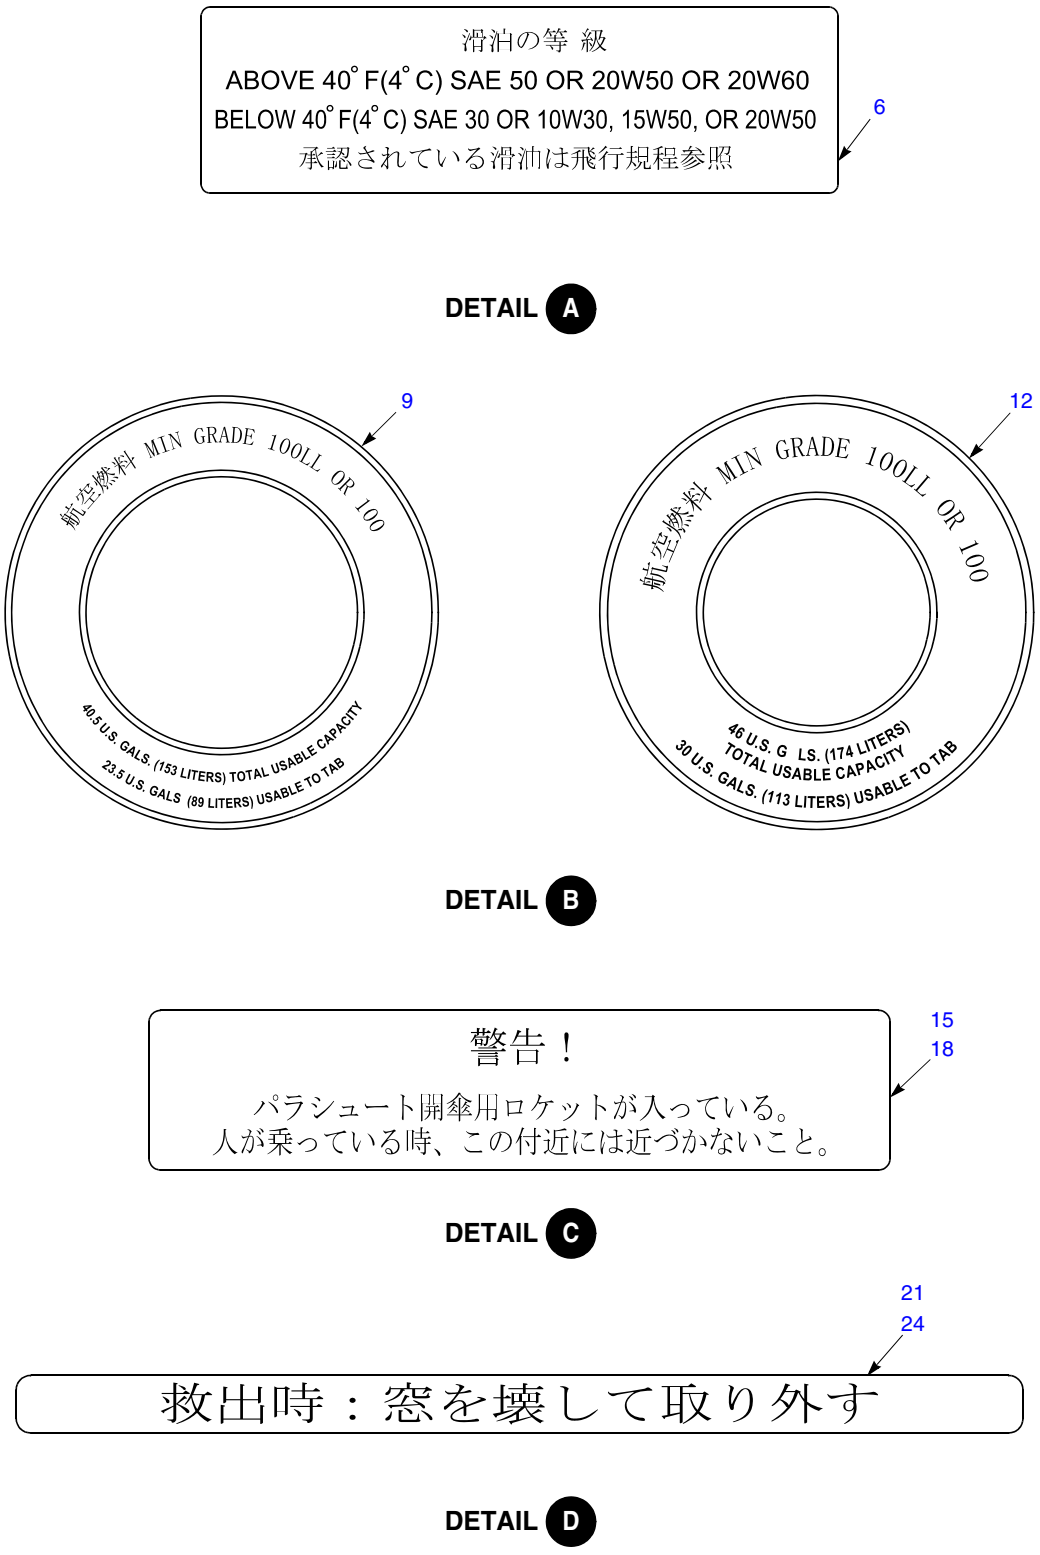

JP_SR22_PC11_1963A

Figure-08
Exterior Placards - Serials w/ Japanese (2 of 3)

EFFECTIVITY:
Serials w/ Japanese

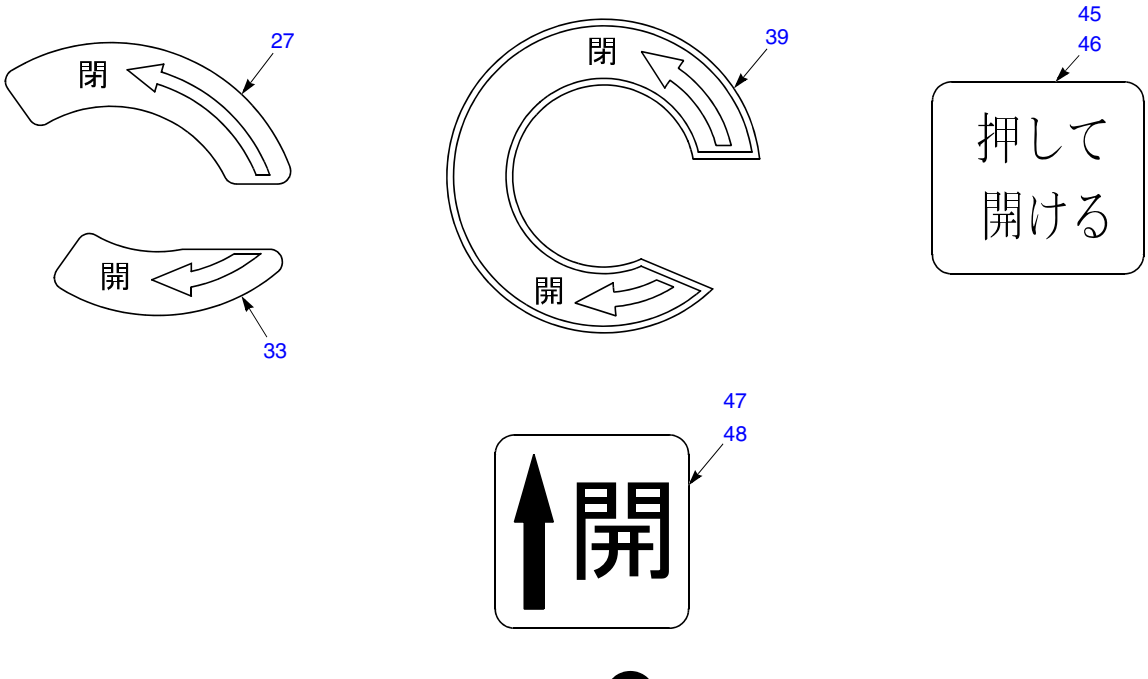

DETAIL E

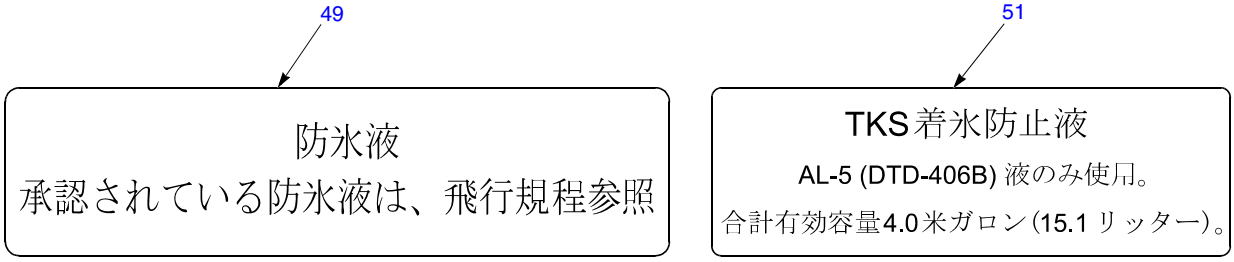

DETAIL F

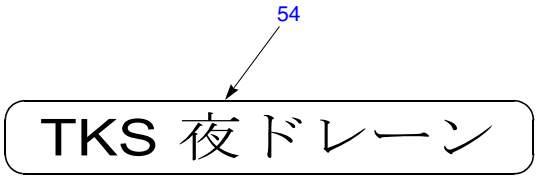

DETAIL G

JP_SR22_PC11_2103

Figure-08
Exterior Placards - Serials w/ Japanese (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 08	**		EXTERIOR PLACARDS, JAPANESE	0002 / 0001	/	NP
-	3	21180-001			·PLACARD, OIL DOOR	0002	0819	AR
	6	21180-023			·PLACARD, OIL DOOR	0820 / 0001	/	AR
	9	21180-022			·PLACARD, FUEL FILLER	0002	2437	AR
	12	21180-002			·PLACARD, FUEL FILLER	2438 / 0001	/	AR
	15	21180-003	#		·PLACARD, CAPS COVER, CLEAR	0002 / 0001	/	AR
	18	21180-017	#		·PLACARD, CAPS COVER, WHITE	0002 / 0001	/	AR
	21	21180-004	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	24	21180-018	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	27	21180-037			·PLACARD, DOOR LATCH, CLOSE, LH	0002	0521	AR
-	30	21180-036			·PLACARD, DOOR LATCH, CLOSE, RH	0002	0521	AR
	33	21180-039			·PLACARD, DOOR LATCH, OPEN, LH	0002	0521	AR
-	36	21180-038			·PLACARD, DOOR LATCH, OPEN, RH	0002	0521	AR
	39	21180-006			·PLACARD, DOOR LATCH, LH	0522	0819	AR
-	42	21180-021			·PLACARD, DOOR LATCH, RH	0522	0819	AR
	45	21180-005	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	46	21180-052	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	47	37312-005	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233		AR
	48	37312-015	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233		AR
	49	21180-007			·PLACARD, TANK, W/ ICE PROTECTION	0334 / 0001	/	AR
	51	21180-046			·PLACARD, TANK, W/ FIKI	3403 / 0001	/	AR
	54	21180-048			·PLACARD, TKS DRAIN	2438 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:
SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

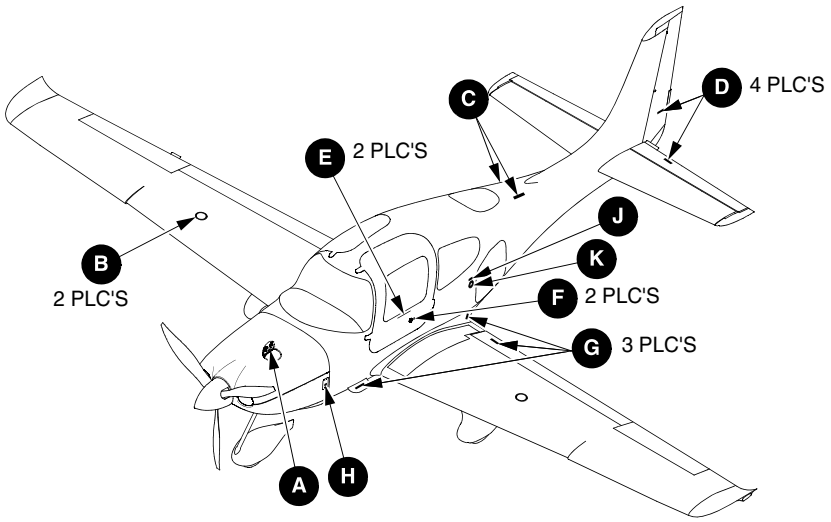

发动机滑油等级
高于 40° F 时: SAE 50, 20W50 或 20W60
低于 40° F 时: SAE 30, 或 10W30, 15W50 或 20W50
有关获准滑油请参阅 << 飞机飞行手册 >>

3

DETAIL A

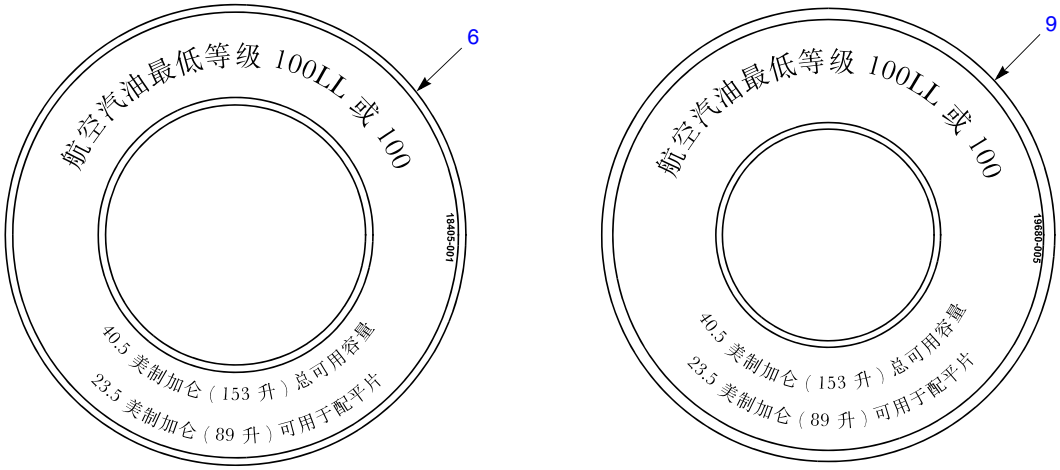

DETAIL B

警告!
内有降落伞展开火箭
机上有人时须远离此处

12
15

DETAIL C

CH_SR22_PC11_2074

Figure-09
Exterior Placards - Serials w/ Chinese (1 of 3)

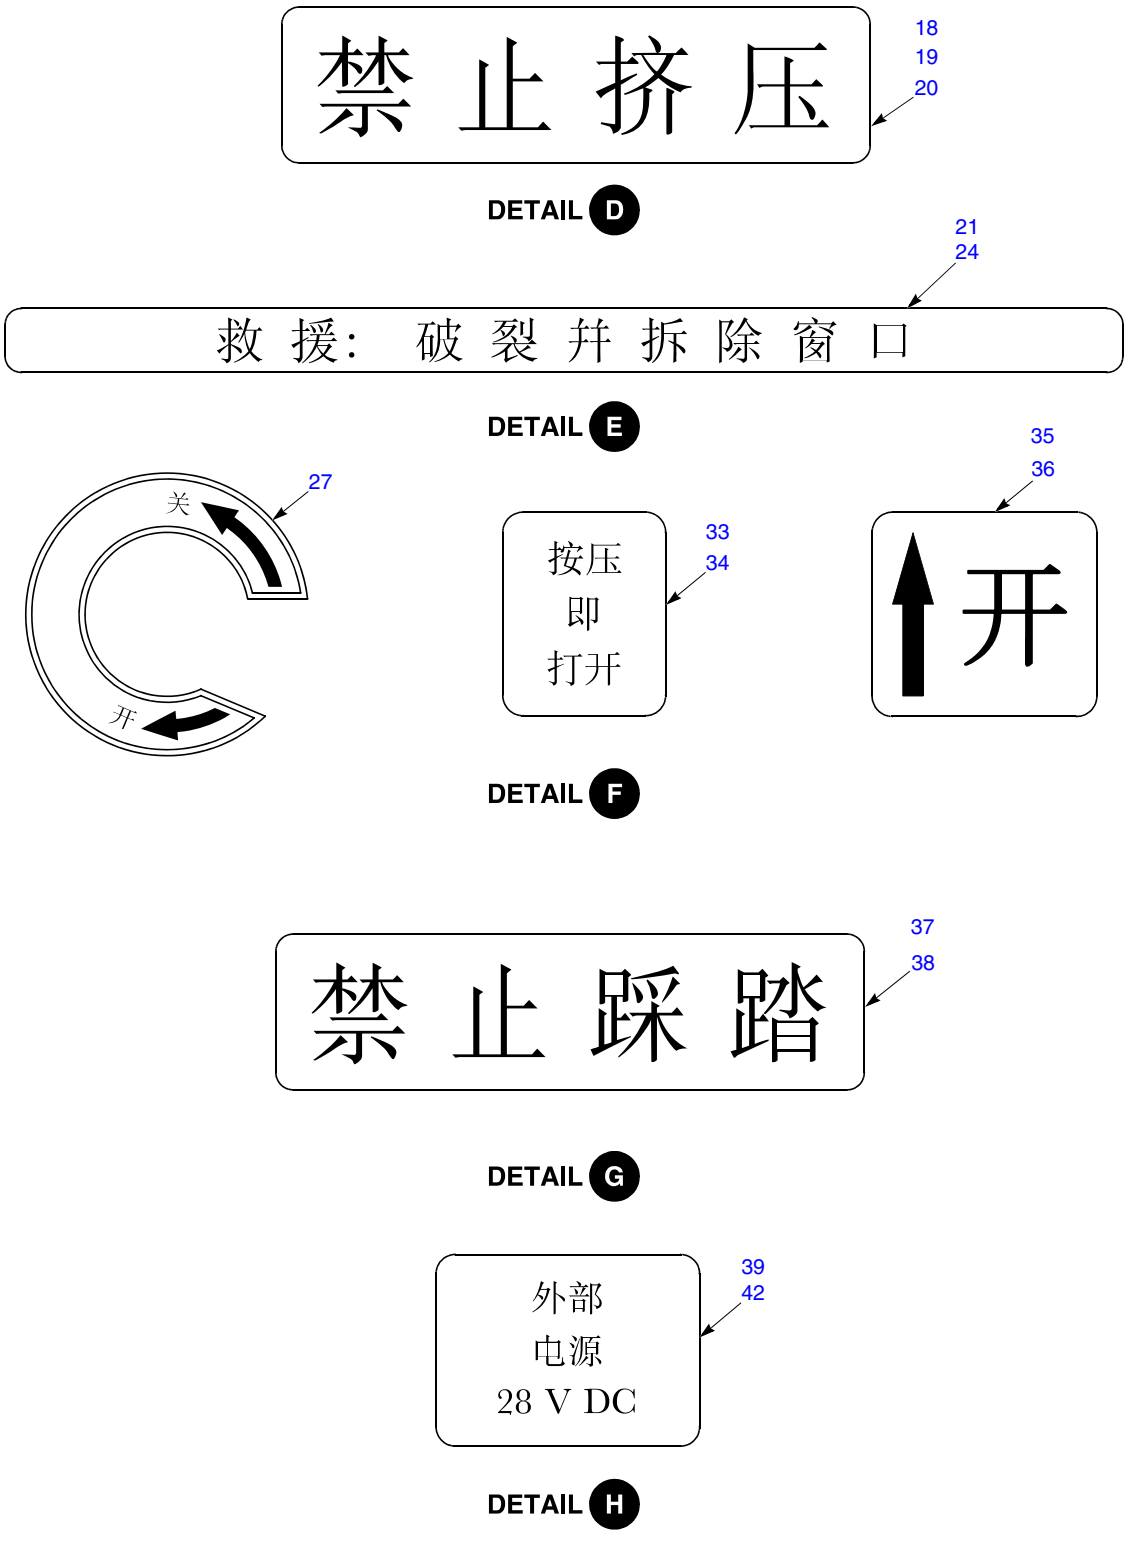

Figure-09
Exterior Placards - Serials w/ Chinese (2 of 3)

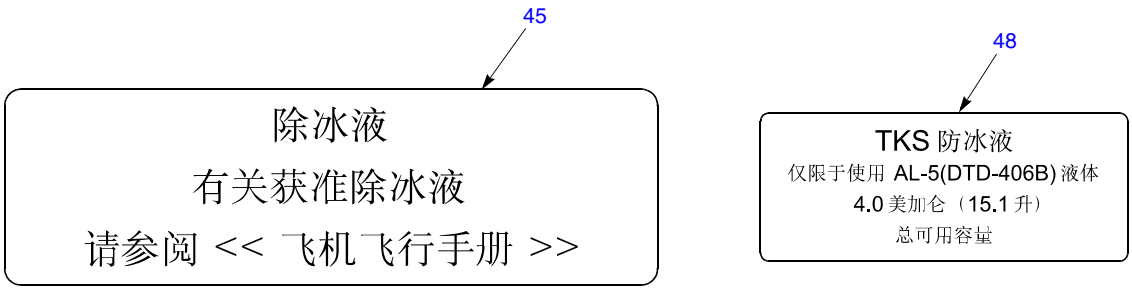

DETAIL J

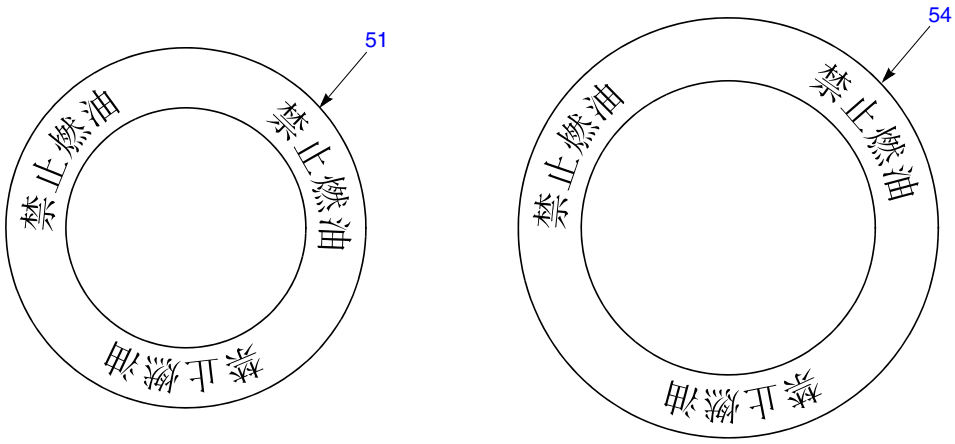

DETAIL K

CH_SR22_PC11_2077

Figure-09
Exterior Placards - Serials w/ Chinese (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 09	**		EXTERIOR PLACARDS, CHINESE	0002		NP
	3	18403-001			·PLACARD, OIL DOOR	0002		AR
	6	18405-001			·FUEL RING, PLACARD	0002	2437	AR
	9	19680-005			·FUEL RING, PLACARD	2438		AR
	12	18407-001	#		·PLACARD, CAPS COVER, CLEAR	0002		AR
	15	18407-002	#		·PLACARD, CAPS COVER, WHITE	0002		AR
	18	18411-001	#		·PLACARD, NO PUSH, GRAY TEXT	0002		AR
	19	18411-002	#		·PLACARD, NO PUSH, WHITE TEXT	0002		AR
	20	18411-003	#		·PLACARD, NO PUSH, BLACK TEXT	0002		AR
	21	18413-001	#		·PLACARD, RESCUE, CLEAR	0002		AR
	24	18413-002	#		·PLACARD, RESCUE, WHITE	0002		AR
	27	18414-001			·PLACARD, DOOR LATCH, LH	0002	0819	AR
-	30	18414-002			·PLACARD, DOOR LATCH, RH	0002	0819	AR
	33	18416-001	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820	4299	AR
	34	18416-002	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820	4299	AR
	35	37312-008	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300		AR
	36	37312-018	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300		AR
	37	18412-001	#		·PLACARD, NO STEP, BLACK TEXT	0002		AR
	38	18412-002	#		·PLACARD, NO STEP, WHITE TEXT	0002		AR
	39	18408-001	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002		AR
	42	18408-002	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0002		AR
	45	18415-001			·PLACARD, TANK, W/ ICE PROTECTION	0002		AR
	48	24920-006			·PLACARD, TANK, W/ FIKI	3403		AR
	51	18419-001			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	0334	2437	AR
	54	18458-005			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438		AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:
SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

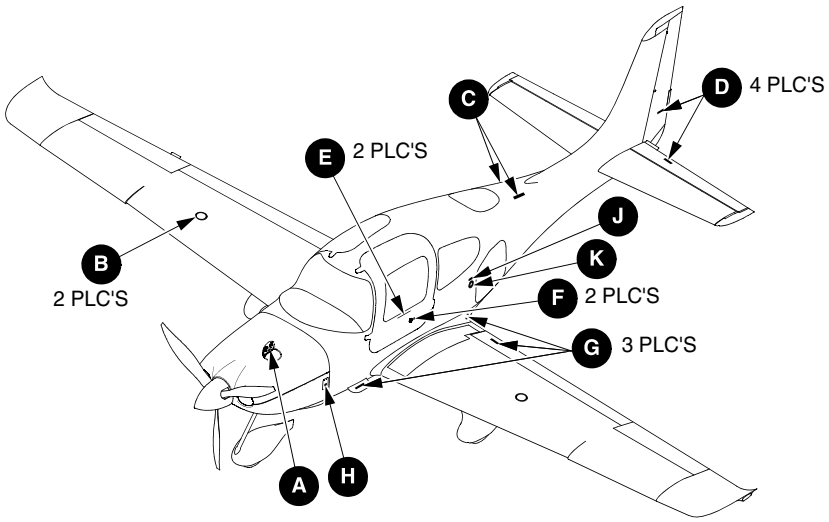

3

ENGINE OIL GRADE
ABOVE 40°F SAE 50, 20W50 OR 20W60
BELOW 40°F SAE 30, 10W30, 15W50 OR 20W50
REFER TO AFM FOR APPROVED OILS

TIPO DEL ACEITE DE MOTOR
POR ARRIBA DE LOS 4°C (40°F) SAE 50, 20W50 O 20W60
POR DEBAJO DE 4°C (40°F) SAE 30, 10W30, 15W50 O 20W50
REFERIRSE AL POH PARA LOS LUBRICANTES APROBADOS

DETAIL A

DETAIL B

CO_SR22_PC11_2083

Figure-10
Exterior Placards - Serials w/ Colombian (1 of 3)

EFFECTIVITY:
Serials w/ Colombian

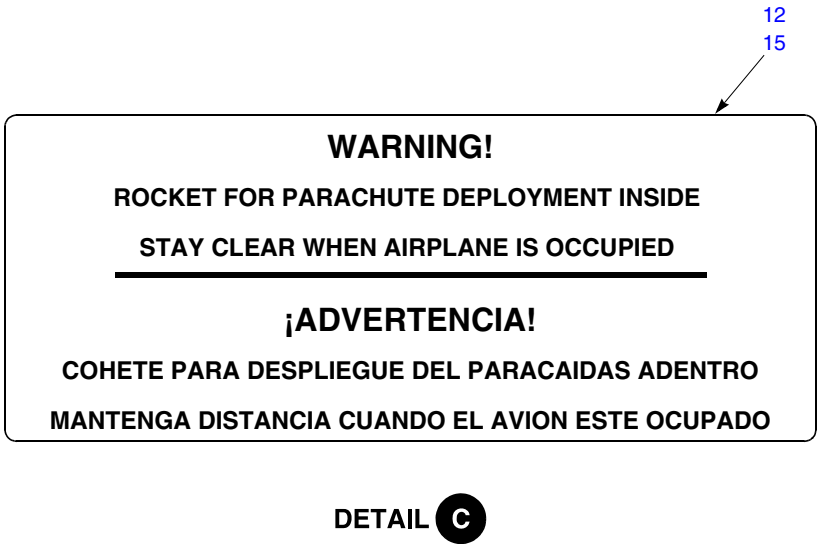

DETAIL C

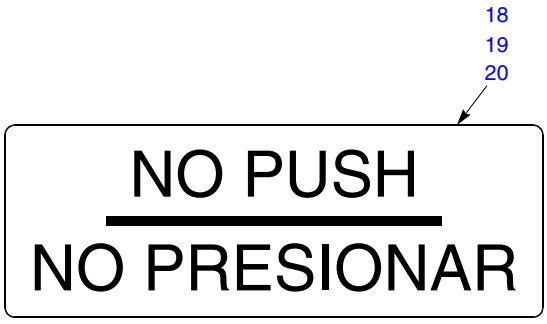

DETAIL D

DETAIL E

CO_SR22_PC11_2085

Figure-10
Exterior Placards - Serials w/ Colombian (2 of 3)

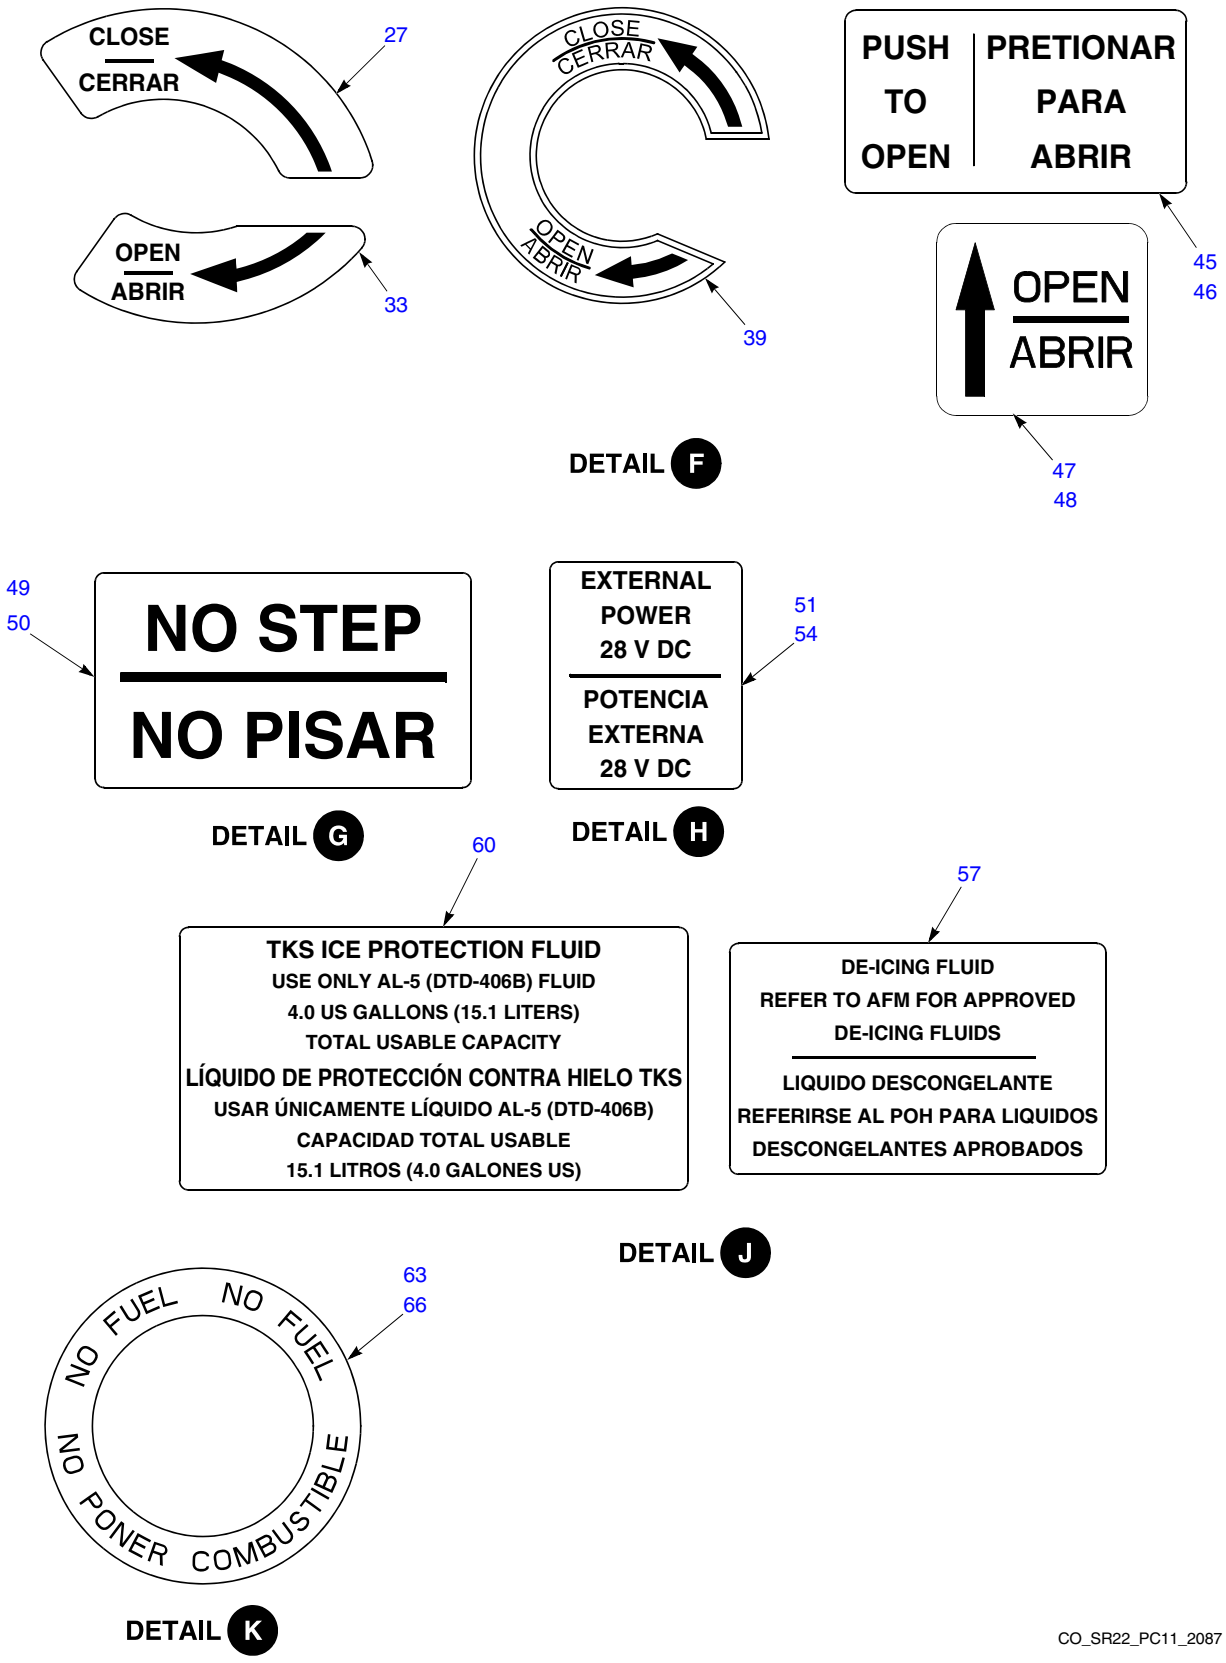

Figure-10
Exterior Placards - Serials w/ Colombian (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 10	**		EXTERIOR PLACARDS, COLOMBIAN	0002 / 0001	/	NP
	3	14231-011			·PLACARD, OIL DOOR	0002 / 0001	/	AR
	6	15648-020			·PLACARD, FUEL FILLER	0002	2437	AR
	9	18347-006			·PLACARD, FUEL FILLER	2438 / 0001	/	AR
	12	12430-014	#		·PLACARD, CAPS COVER, CLEAR	0002 / 0001	/	AR
	15	12430-015	#		·PLACARD, CAPS COVER, WHITE	0002 / 0001	/	AR
	18	12431-006	#		·PLACARD, NO PUSH, GRAY TEXT	0002 / 0001	/	AR
	19	12431-012	#		·PLACARD, NO PUSH, WHITE TEXT	0002 / 0001	/	AR
	20	12431-018	#		·PLACARD, NO PUSH, BLACK TEXT	0002 / 0001	/	AR
	21	12437-013	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	24	12437-014	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	27	12434-003			·PLACARD, DOOR LATCH, CLOSE, LH	0002	0521	AR
-	30	12434-004			·PLACARD, DOOR LATCH, CLOSE, RH	0002	0521	AR
	33	12435-003			·PLACARD, DOOR LATCH, OPEN, LH	0002	0521	AR
-	36	12435-004			·PLACARD, DOOR LATCH, OPEN, RH	0002	0521	AR
	39	15592-003			·PLACARD, DOOR LATCH, LH	0522	0819	AR
-	42	15592-004			·PLACARD, DOOR LATCH, RH	0522	0819	AR
	45	20547-007	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	46	20547-014	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	47	37312-002	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233	/	AR
	48	37312-012	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233	/	AR
	49	12433-005	#		·PLACARD, NO STEP, BLACK TEXT	0002 / 0001	/	AR
	50	12433-010	#		·PLACARD, NO STEP, WHITE TEXT	0002 / 0001	/	AR
	51	12432-003	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002 / 0001	/	AR
	54	12432-009	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0003 / 0001	/	AR
	57	15334-008			·PLACARD, TANK, W/ ICE PROTECTION	0334 / 0001	/	AR
	60	24920-001			·PLACARD, TANK, W/ FIKI	3403 / 0001	/	AR
	63	15518-006			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	0334	2437	AR
	66	18458-006			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

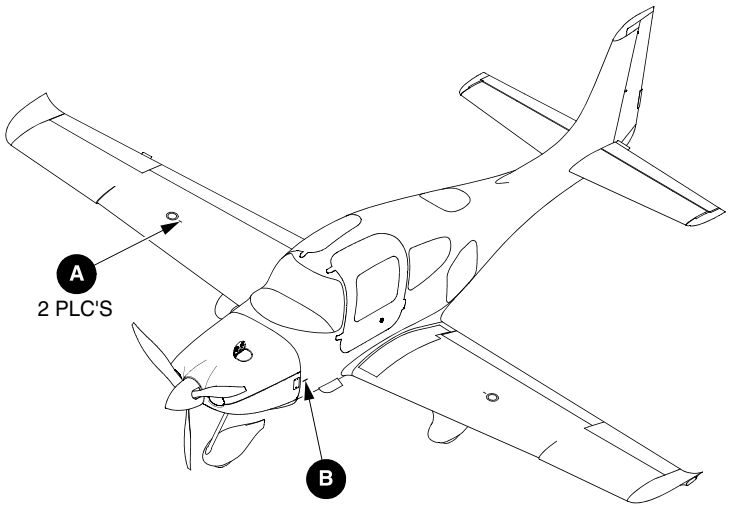

DETAIL A

DETAIL B

AU_SR22_PC11_2089

Figure-11
Exterior Placards - Serials w/ Australian

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 11	**		EXTERIOR PLACARDS, AUSTRALIAN	0002 / 0001	/	NP
	3	14879-001			·PLACARD, EARTH	0002 / 0001	/	AR
	6	14873-001			·PLACARD, EARTH TO EXHAUST	0002 / 0001	/	AR
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

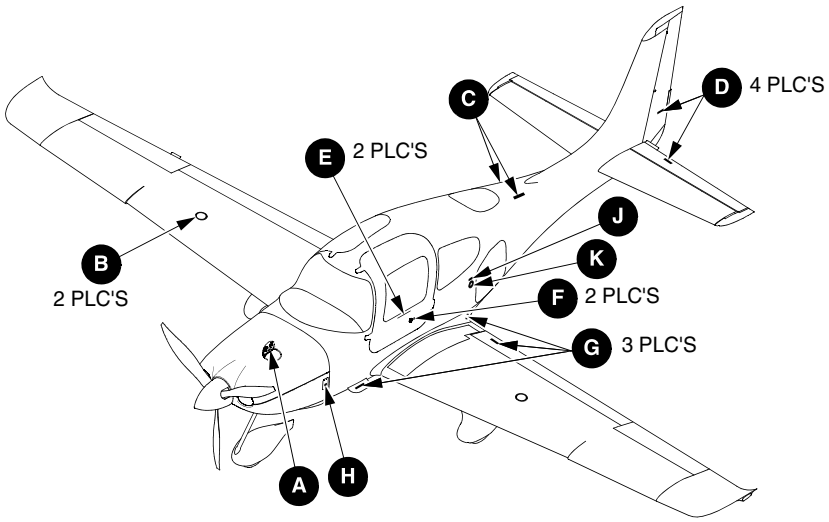

3

ENGINE OIL GRADE
ABOVE 40°F SAE 50, 20W50 OR 20W60
BELOW 40°F SAE 30, 10W30, 15W50 OR 20W50
REFER TO AFM FOR APPROVED OILS

TIPO DEL ACEITE DE MOTOR
SUPERIOR DE 4°C (40°F) SAE 50, 20W50 O 20W60
INFERIOR DE 4°C (40°F) SAE 30, 10W30, 15W50 O 20W50
REFERIRSE AL POH PARA LOS LUBRICANTES APROBADOS

DETAIL A

DETAIL B

CL_SR22_PC11_2110

Figure-12
Exterior Placards - Serials w/ Chilean (1 of 3)

EFFECTIVITY:
Serials w/ Chilean

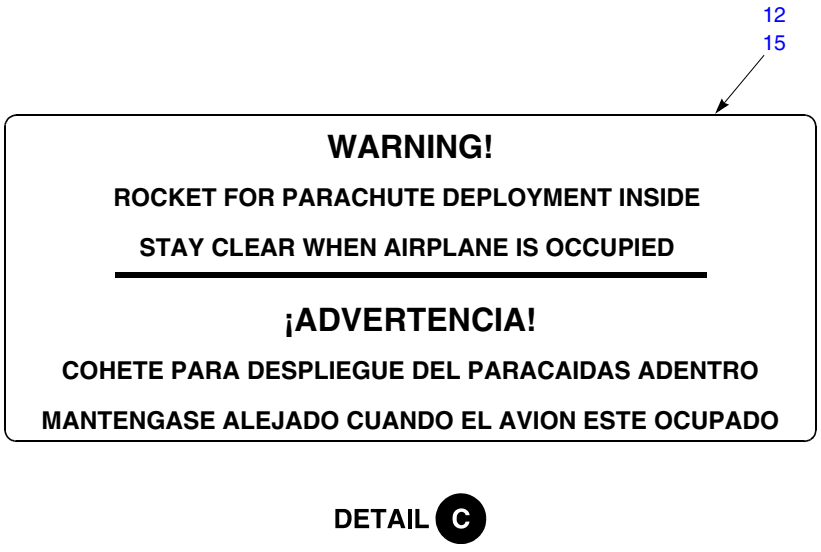

DETAIL C

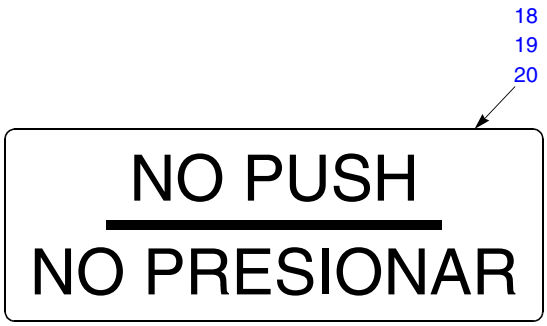

DETAIL D

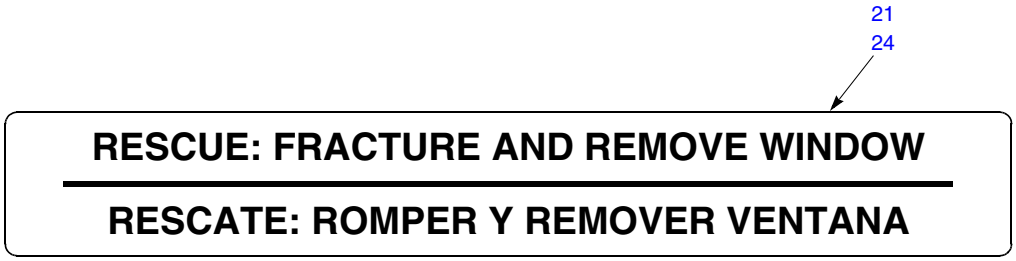

DETAIL E

CL_SR22_PC11_2111

Figure-12
Exterior Placards - Serials w/ Chilean (2 of 3)

EFFECTIVITY:
Serials w/ Chilean

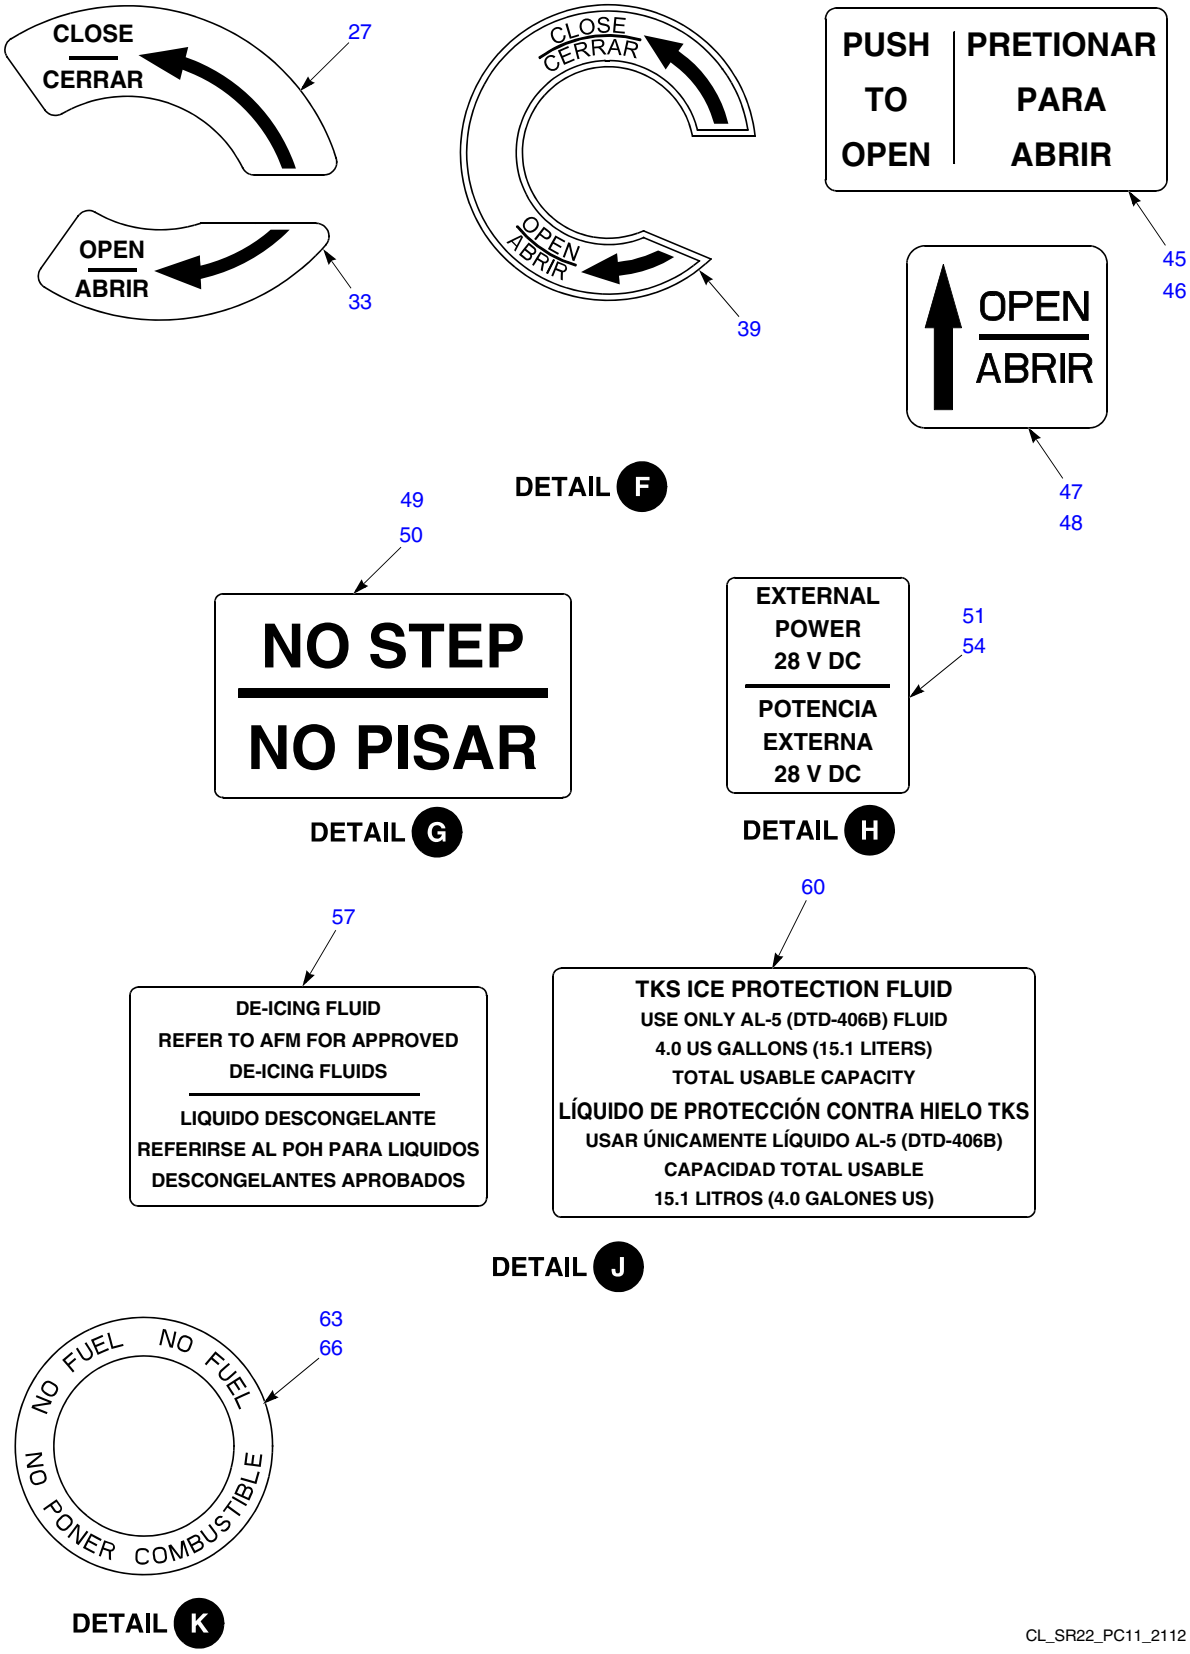

Figure-12
Exterior Placards - Serials w/ Chilean (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 12	**		EXTERIOR PLACARDS, CHILEAN	0002 / 0001	/	NP
	3	14231-012			·PLACARD, OIL DOOR	0002 / 0001	/	AR
	6	15648-020			·PLACARD, FUEL FILLER	0002	2437	AR
	9	18347-006			·PLACARD, FUEL FILLER	2438 / 0001	/	AR
	12	12430-017	#		·PLACARD, CAPS COVER, CLEAR	0002 / 0001	/	AR
	15	12430-018	#		·PLACARD, CAPS COVER, WHITE	0002 / 0001	/	AR
	18	12431-006	#		·PLACARD, NO PUSH, GRAY TEXT	0002 / 0001	/	AR
	19	12431-012	#		·PLACARD, NO PUSH, WHITE TEXT	0002 / 0001	/	AR
	20	12431-018	#		·PLACARD, NO PUSH, BLACK TEXT	0002 / 0001	/	AR
	21	12437-013	#		·PLACARD, RESCUE, CLEAR	0002 / 0001	/	AR
	24	12437-014	#		·PLACARD, RESCUE, WHITE	0002 / 0001	/	AR
	27	12434-003			·PLACARD, DOOR LATCH, CLOSE, LH	0002	0521	AR
-	30	12434-004			·PLACARD, DOOR LATCH, CLOSE, RH	0002	0521	AR
	33	12435-003			·PLACARD, DOOR LATCH, OPEN, LH	0002	0521	AR
-	36	12435-004			·PLACARD, DOOR LATCH, OPEN, RH	0002	0521	AR
	39	15592-003			·PLACARD, DOOR LATCH, LH	0522	0819	AR
-	42	15592-004			·PLACARD, DOOR LATCH, RH	0522	0819	AR
	45	20547-007	#		·PLACARD, DOOR LATCH, BLACK TEXT	0820 / 0001	4299 / 1232	AR
	46	20547-014	#		·PLACARD, DOOR LATCH, WHITE TEXT	0820 / 0001	4299 / 1232	AR
	47	37312-002	#		·PLACARD, DOOR LATCH, BLACK TEXT	4300 / 1233	/	AR
	48	37312-012	#		·PLACARD, DOOR LATCH, WHITE TEXT	4300 / 1233	/	AR
	49	12433-005	#		·PLACARD, NO STEP, BLACK TEXT	0002 / 0001	/	AR
	50	12433-010	#		·PLACARD, NO STEP, WHITE TEXT	0002 / 0001	/	AR
	51	12432-003	#		·PLACARD, GRD POWER RECEPTACLE, GRAY TEXT	0002 / 0001	/	AR
	54	12432-009	#		·PLACARD, GRD POWER RECEPTACLE, WHITE TEXT	0003 / 0001	/	AR
	57	15334-008			·PLACARD, TANK, W/ ICE PROTECTION	0334 / 0001	/	AR
	60	24920-001			·PLACARD, TANK, W/ FIKI	3403 / 0001	/	AR
	63	15518-006			·PLACARD, NO FUEL, W/ ICE PROTECTION, BASIC	0334	2437	AR
	66	18458-006			·PLACARD, NO FUEL, W/ ICE PROTECTION	2438 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

EFFECTIVITY:
All

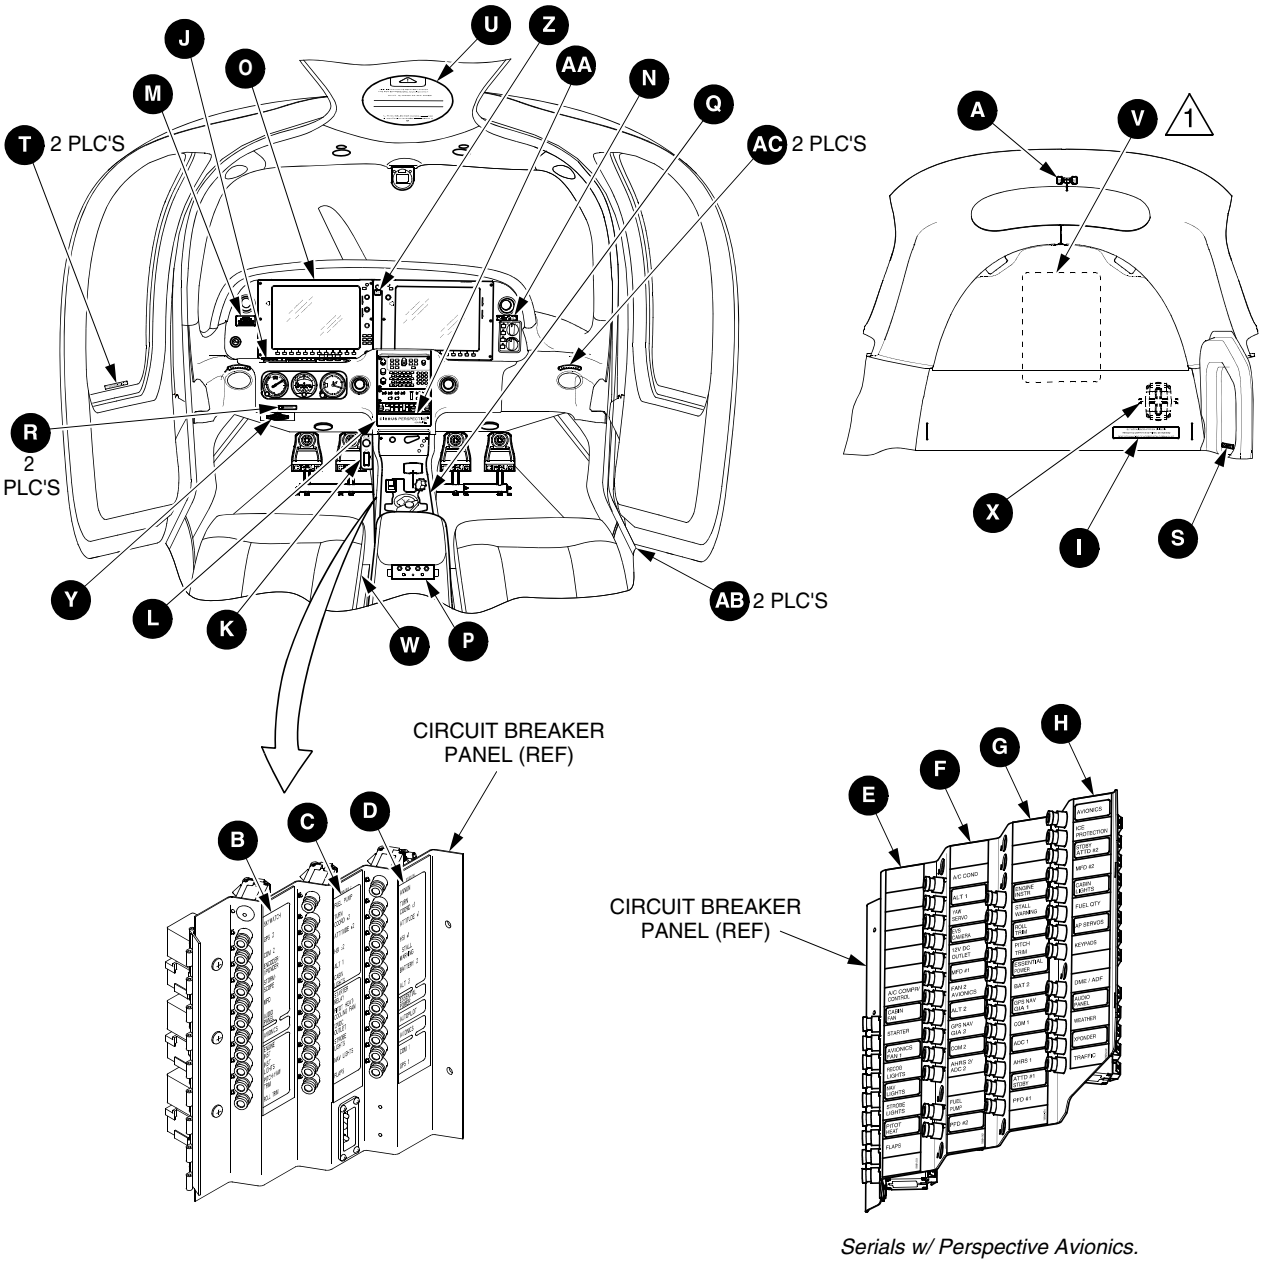

Serials w/ Perspective Avionics.

3

HOOK CAPACITY:
10 LB (4.5 KG) MAX

DETAIL A

1 **NOTE**
CAPS Warning Placard found behind bulkhead 222 interior trim.

SR22_PC11_1142N

Figure-01
Interior Placards and Overlays - Serials w/ English (1 of 16)

EFFECTIVITY:
Serials w/ English

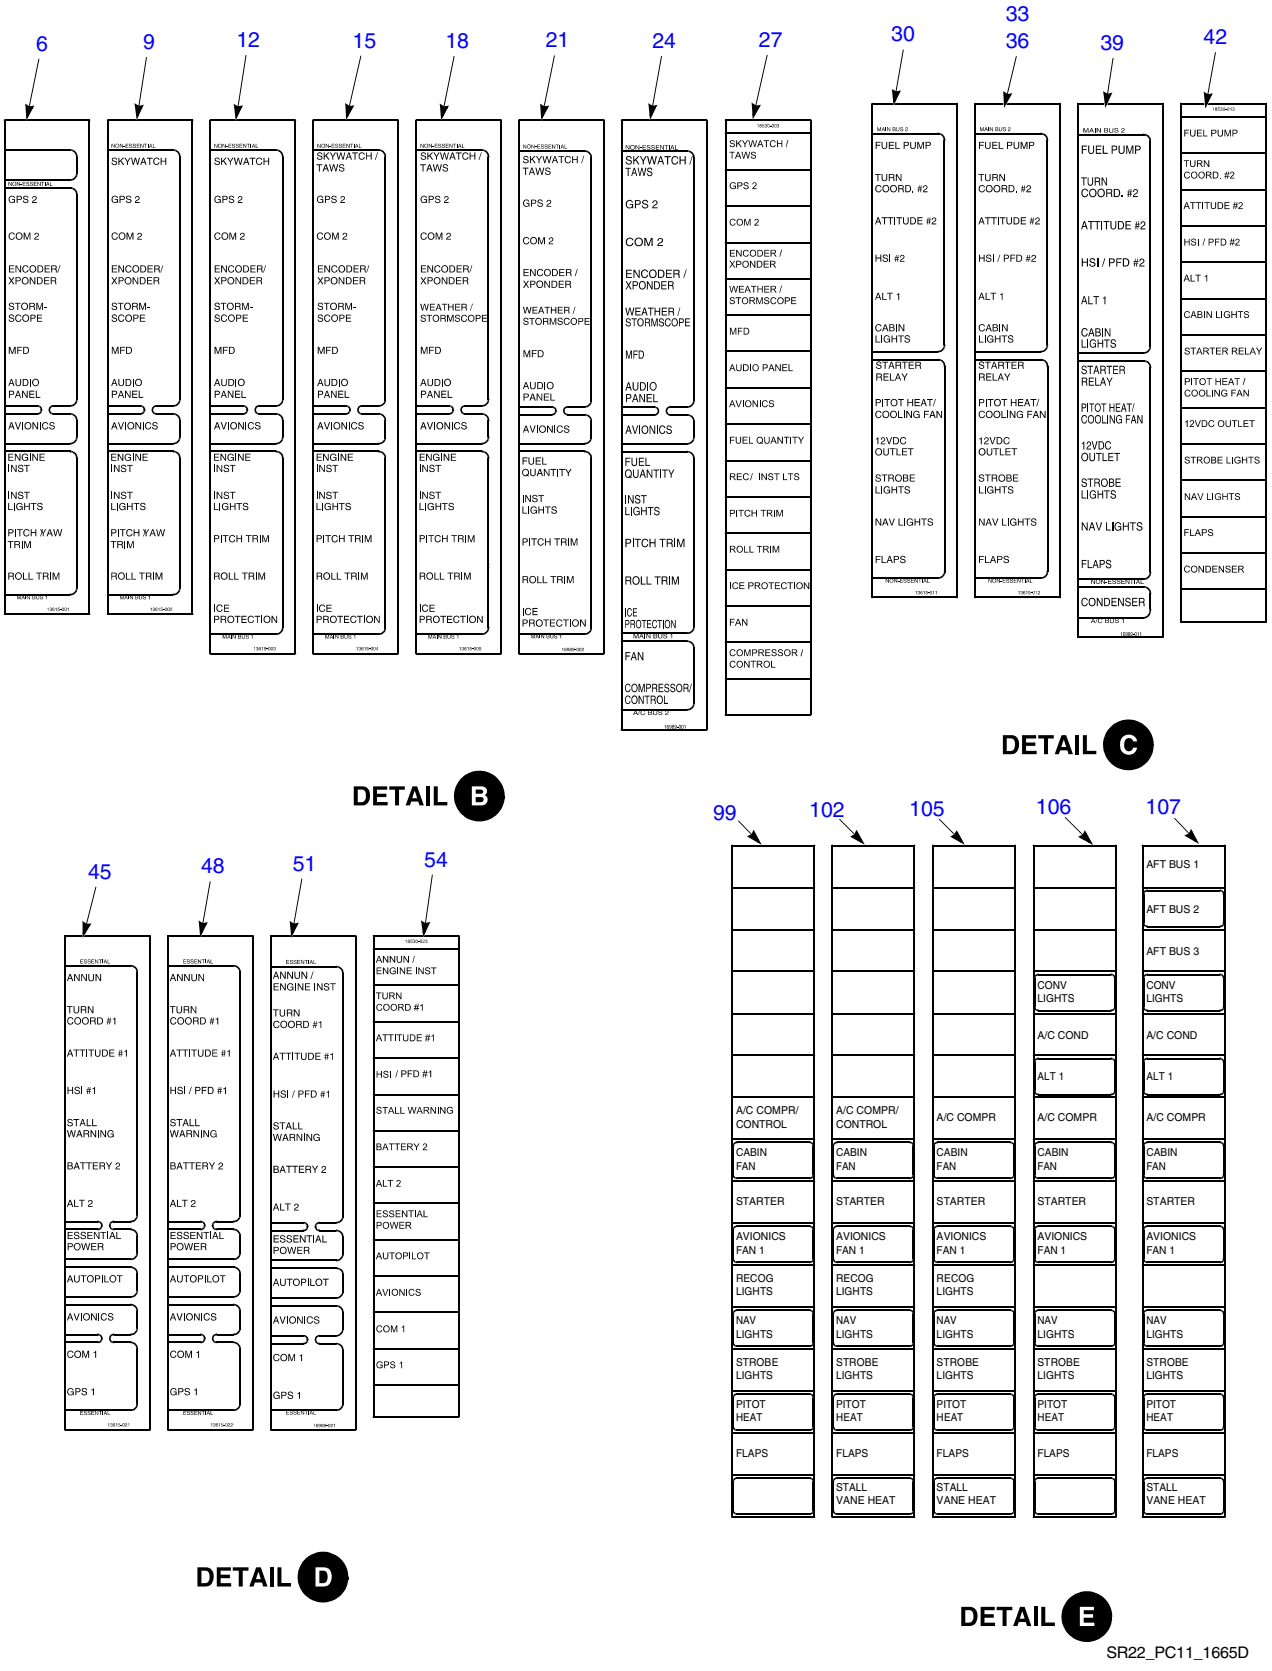

Figure-01

Interior Placards and Overlays - Serials w/ English (2 of 16)

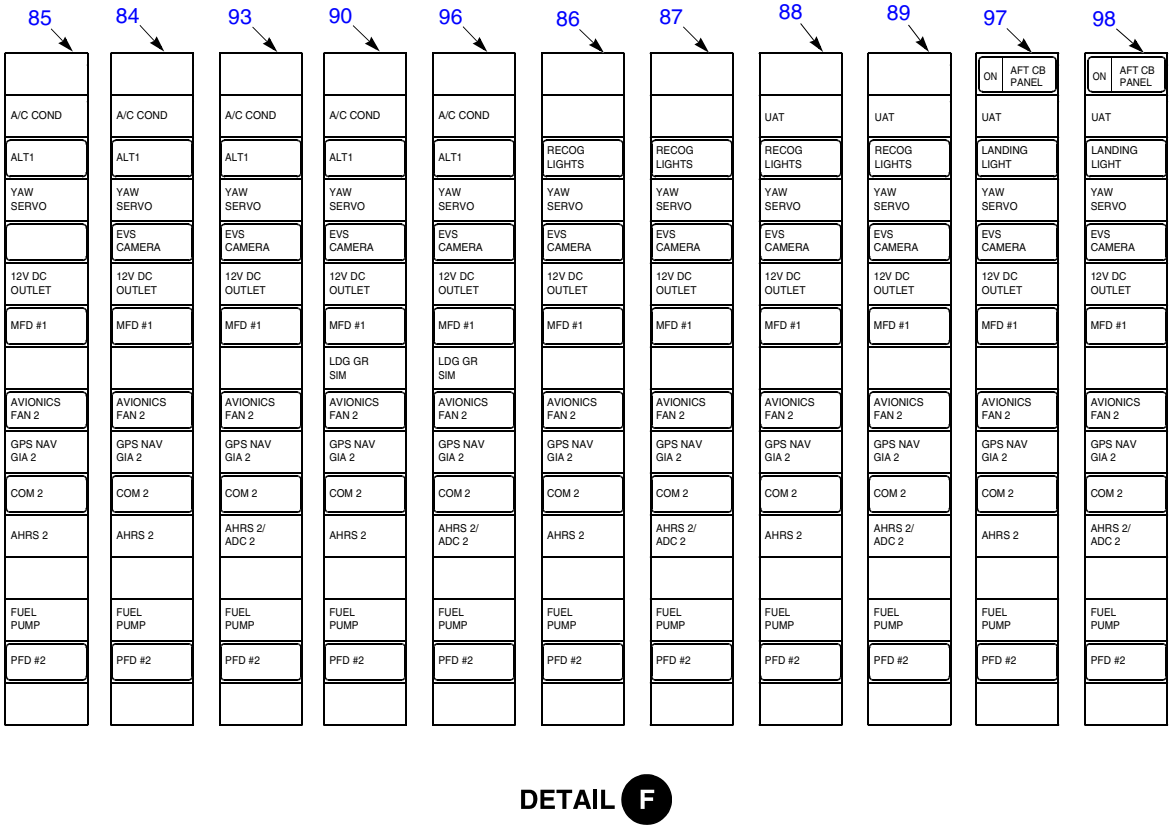

Figure-01

Interior Placards and Overlays - Serials w/ English (3 of 16)

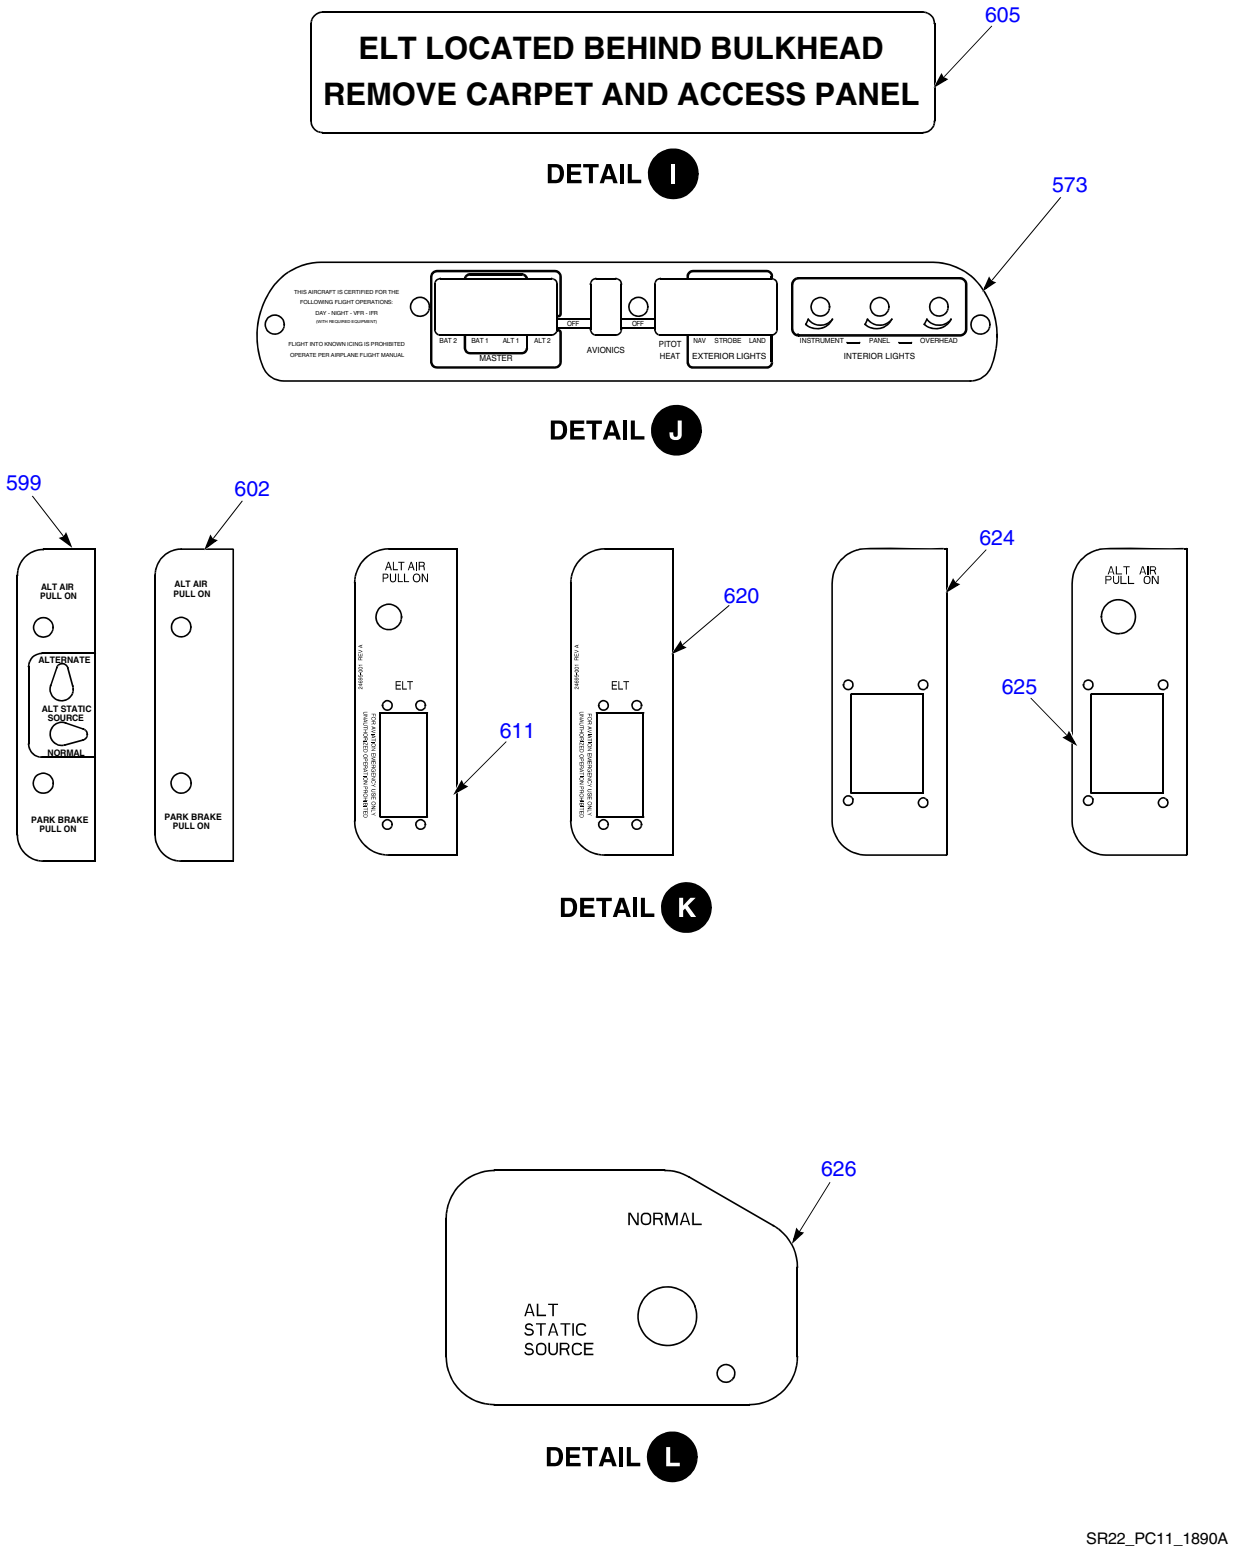

SR22_PC11_1890A

Figure-01
Interior Placards and Overlays - Serials w/ English (4 of 16)

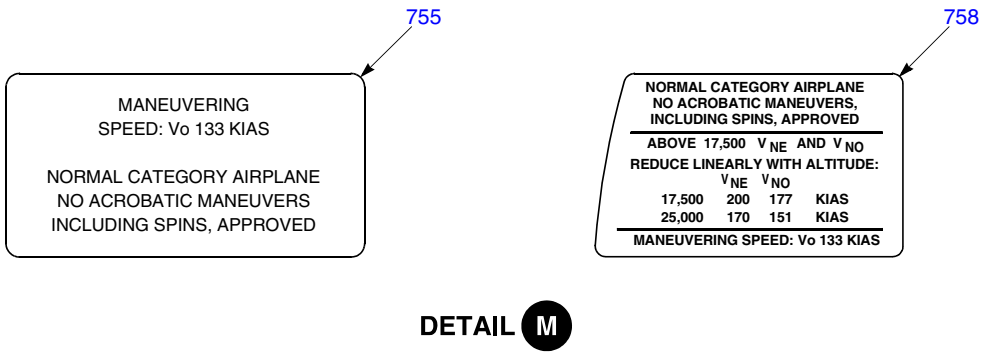

SR22_PC11_1825F

Figure-01
Interior Placards and Overlays - Serials w/ English (5 of 16)

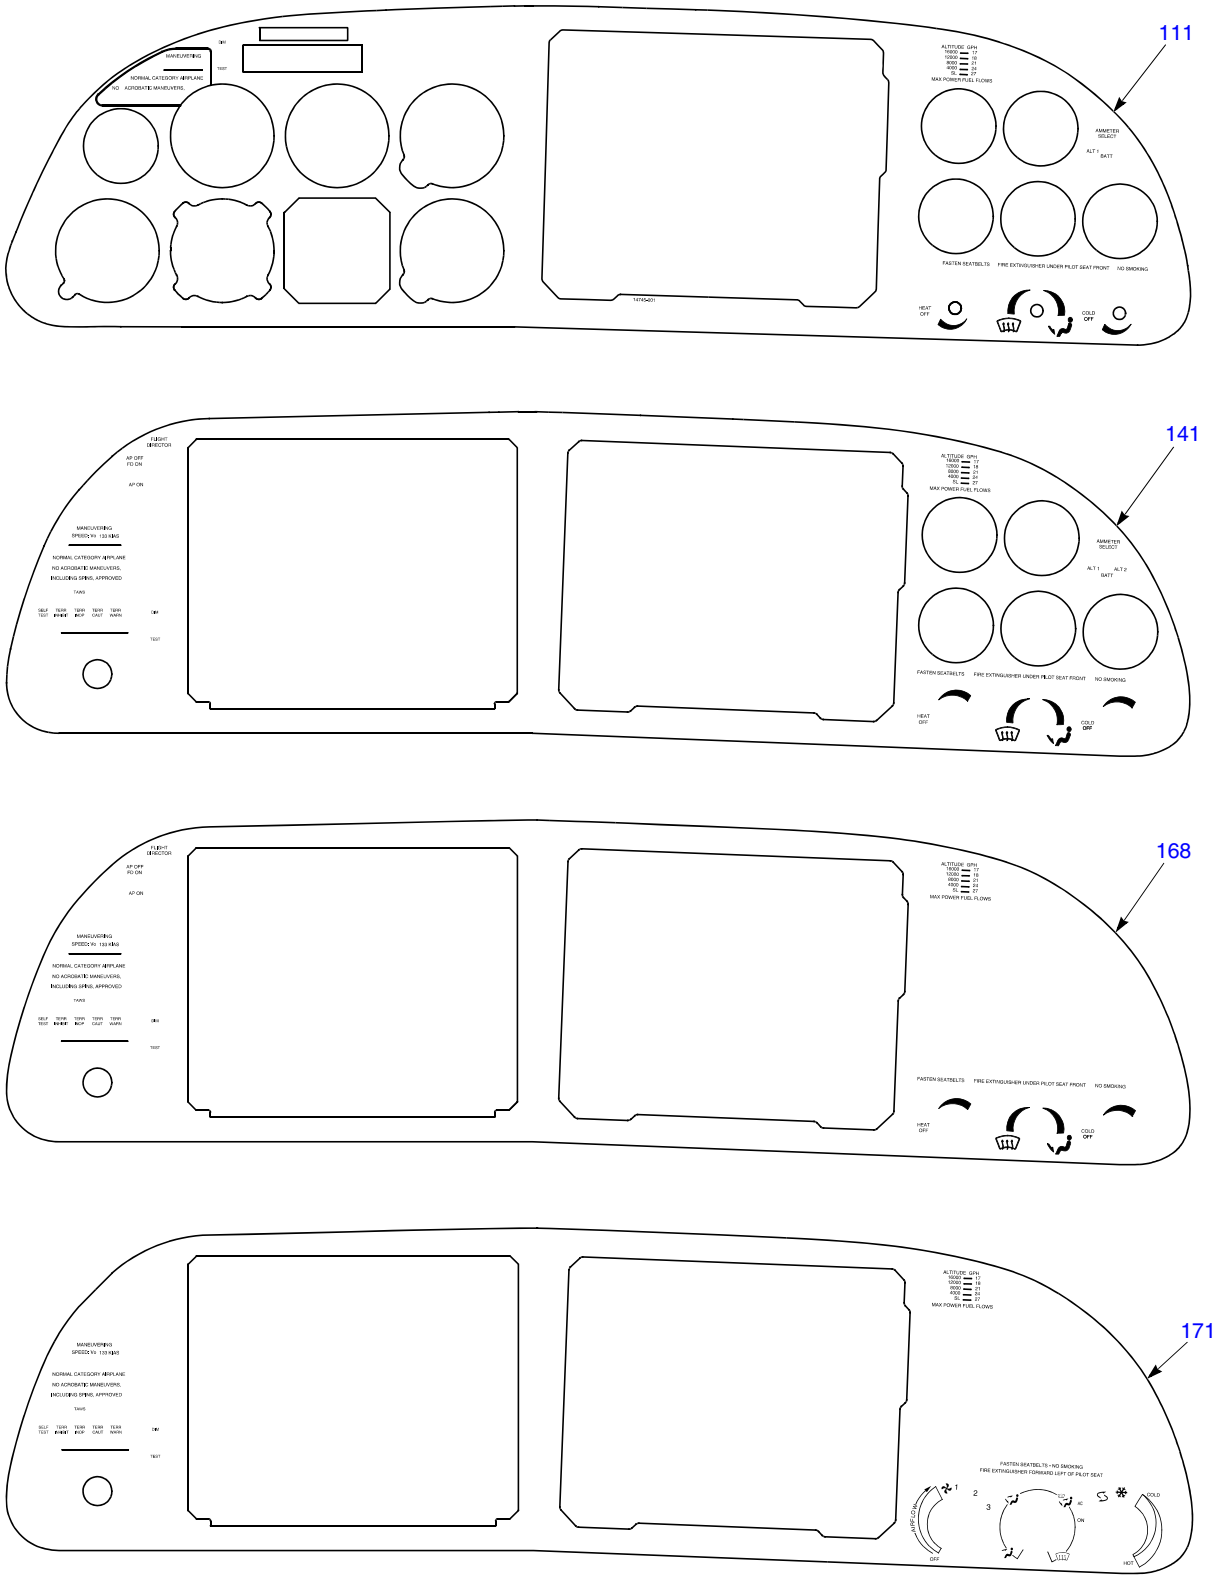

Figure-01

Interior Placards and Overlays - Serials w/ English (6 of 16)

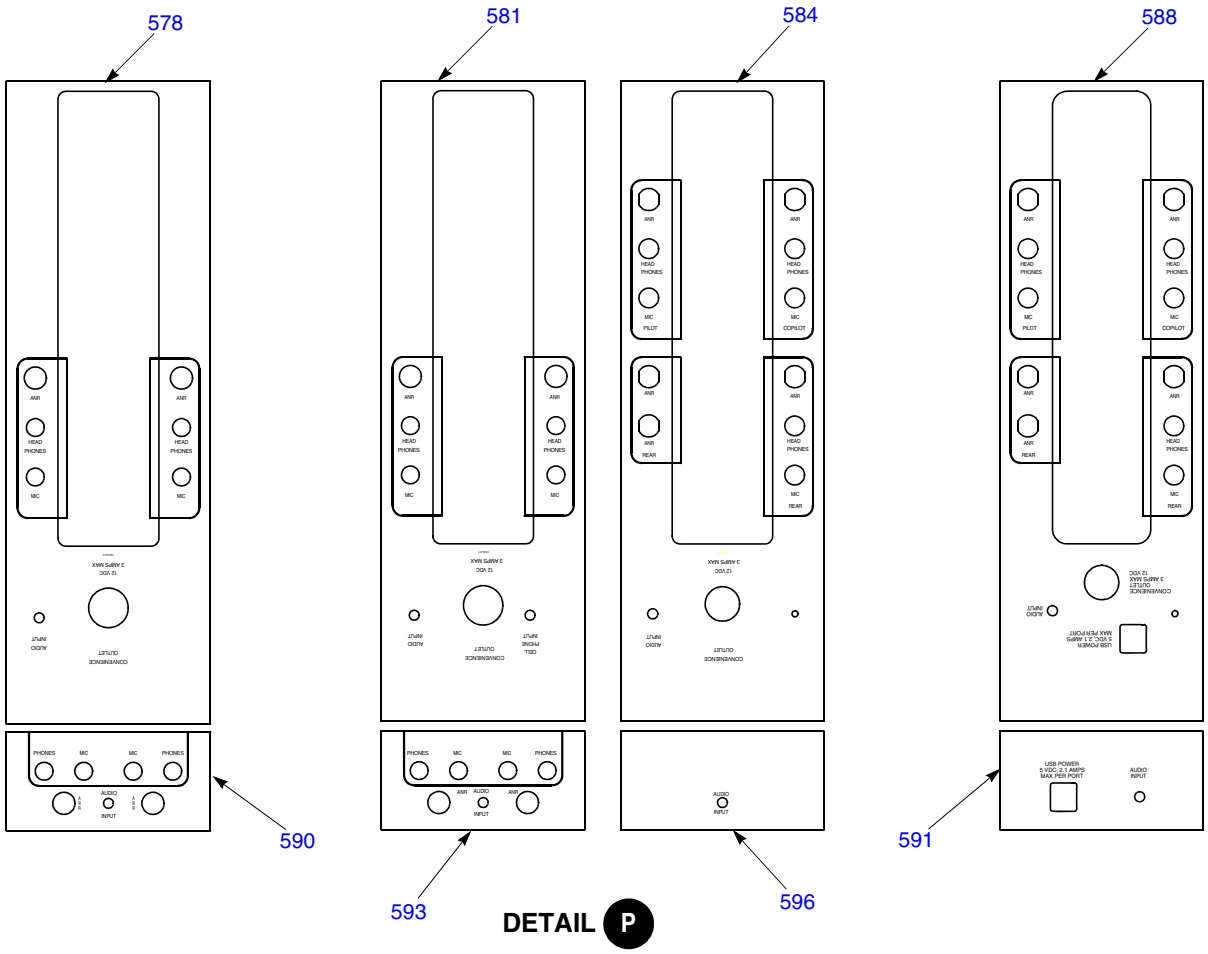

SR22_PC11_1143J

Figure-01
Interior Placards and Overlays - Serials w/ English (7 of 16)

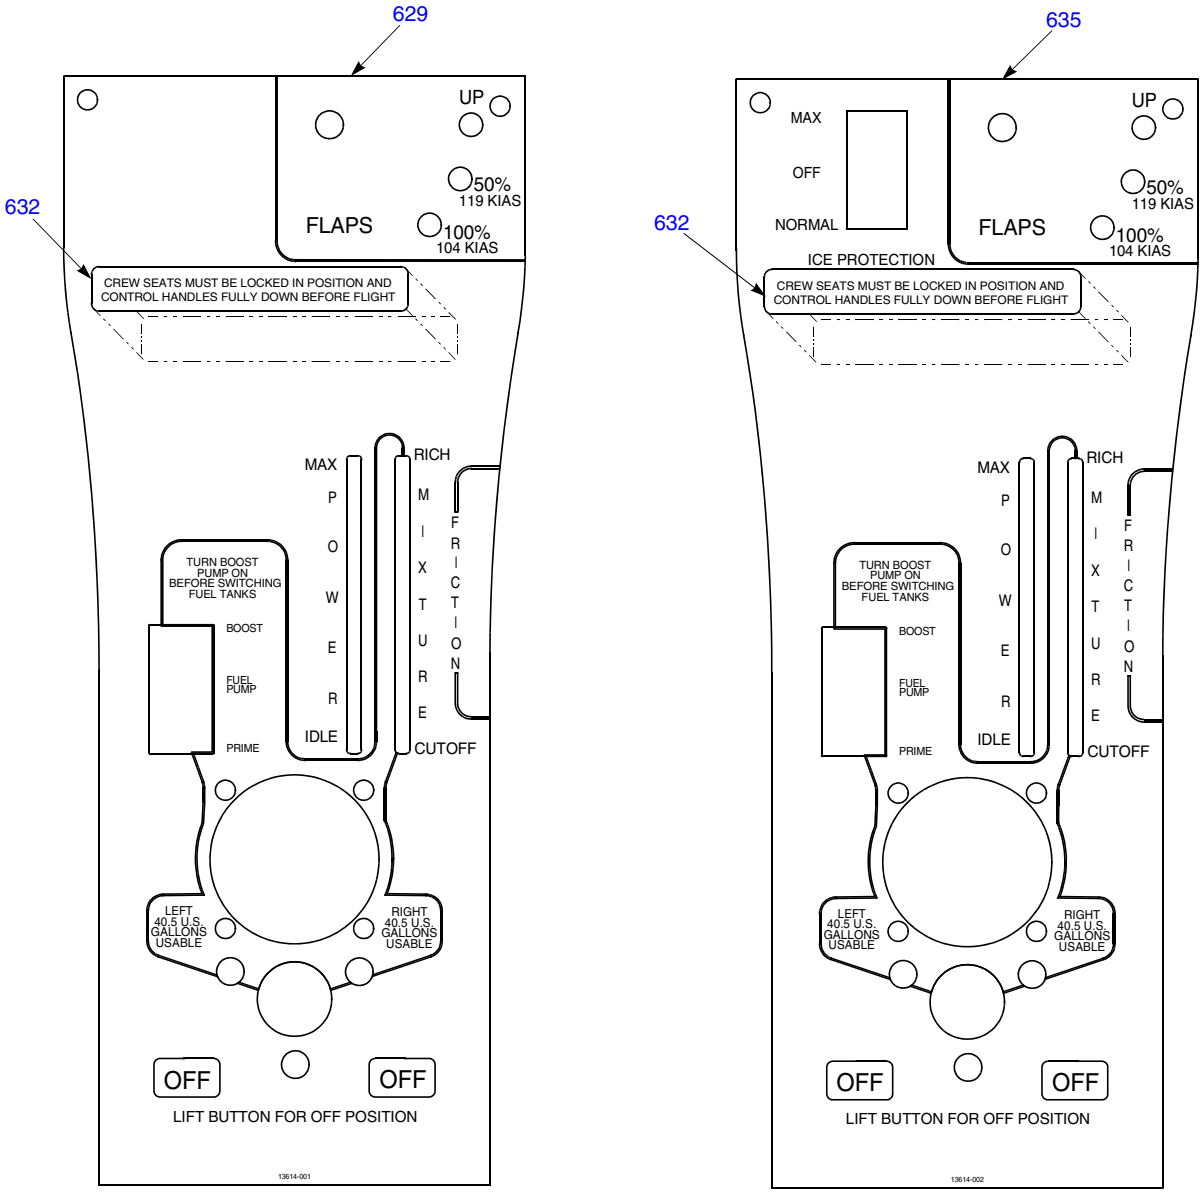

DETAIL Q

SR22_PC11_1293C

Figure-01

Interior Placards and Overlays - Serials w/ English (8 of 16)

EFFECTIVITY:
Serials w/ English

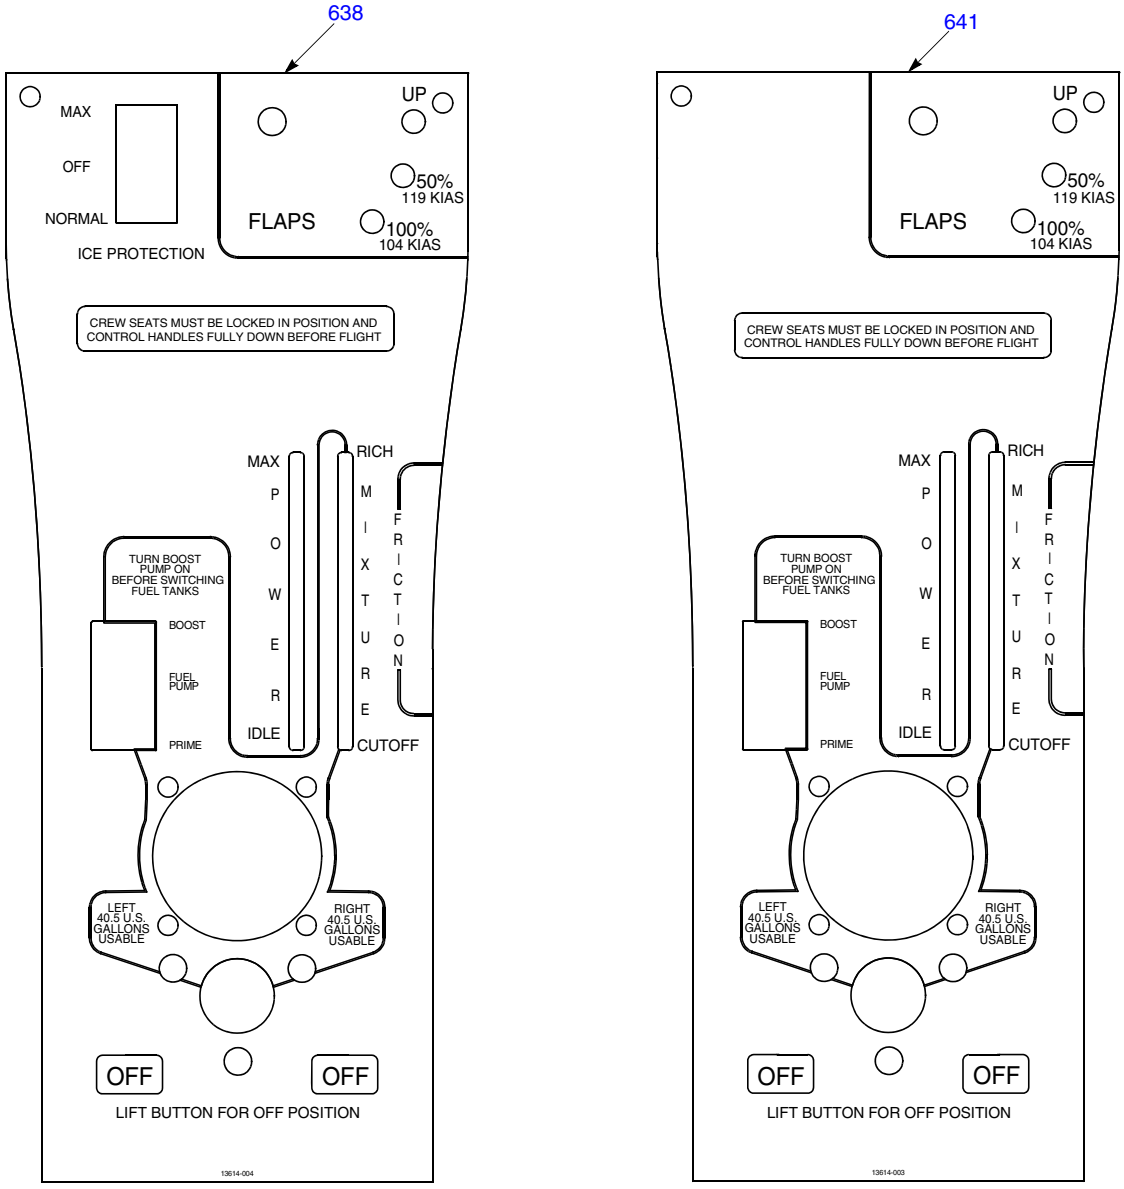

DETAIL Q

SR22_PC11_1294C

Figure-01
Interior Placards and Overlays - Serials w/ English (9 of 16)

EFFECTIVITY:
Serials w/ English

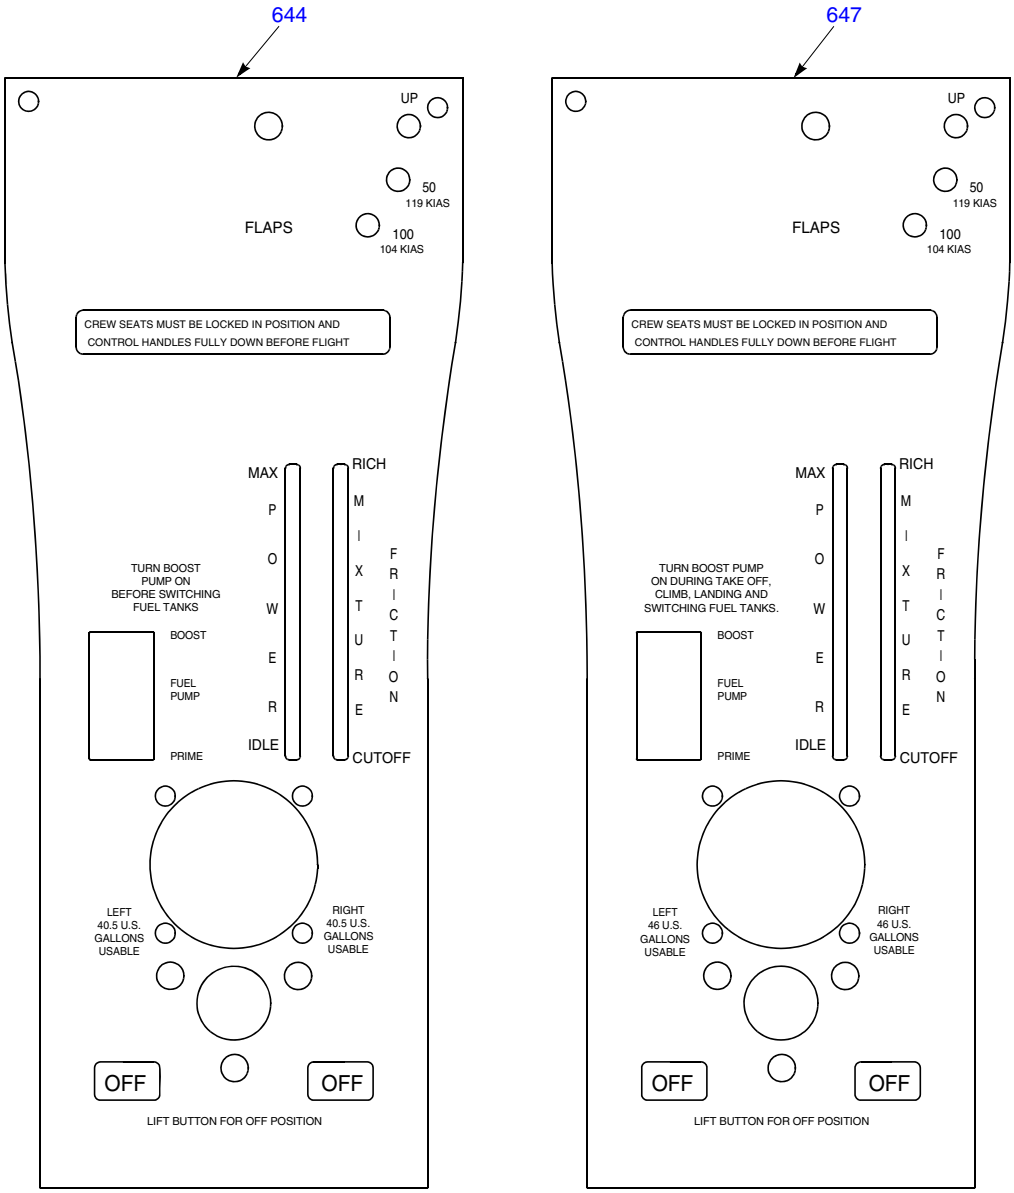

DETAIL Q

SR22_PC11_1436C

Figure-01
Interior Placards and Overlays - Serials w/ English (10 of 16)

EFFECTIVITY:
Serials w/ English

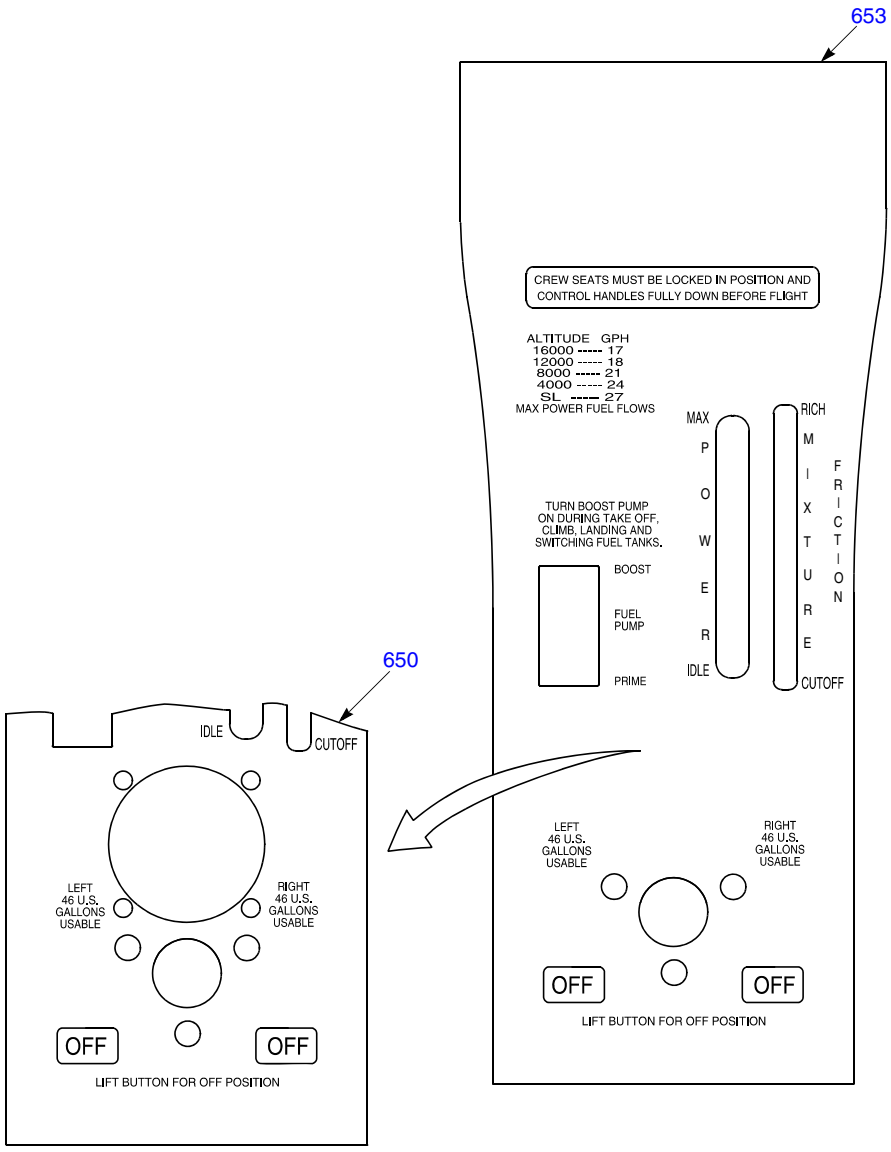

DETAIL Q

SR22_PC11_2059A

Figure-01
Interior Placards and Overlays - Serials w/ English (11 of 16)

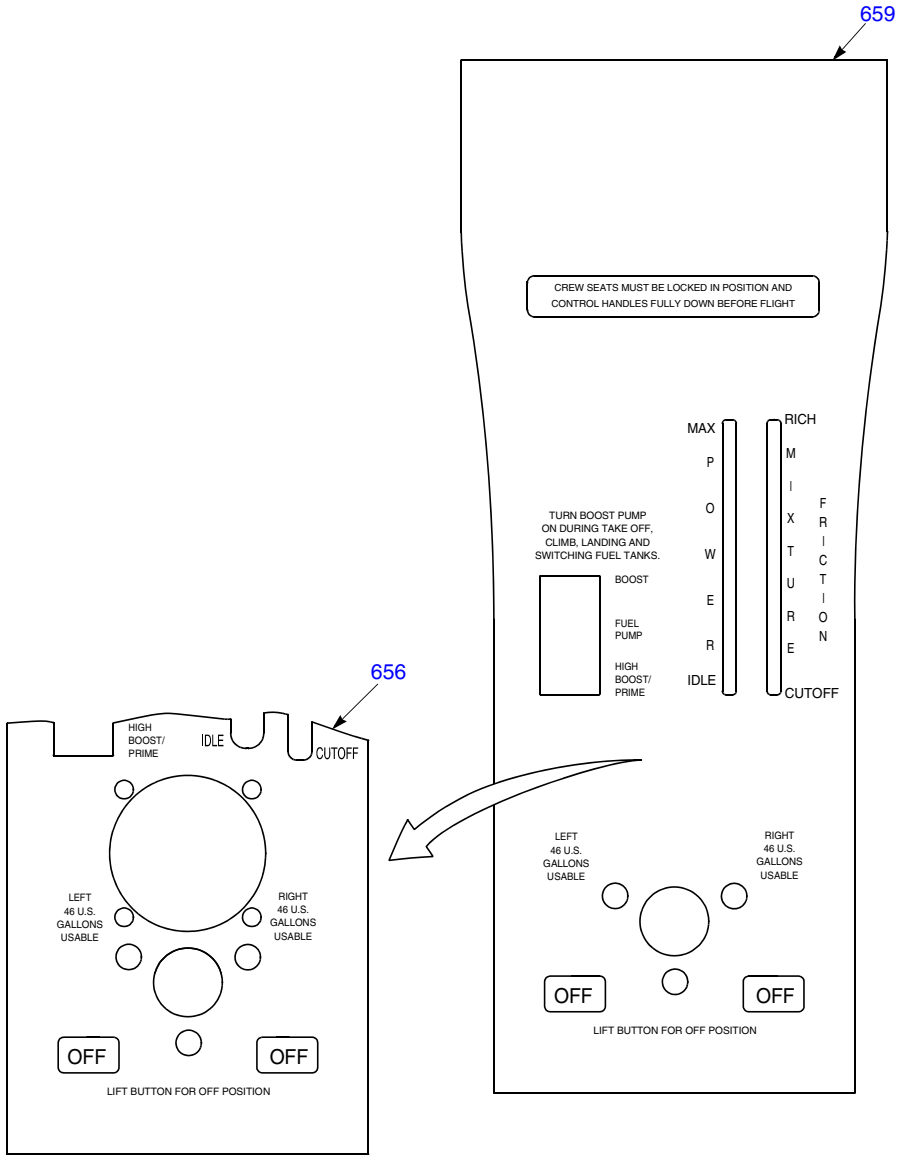

DETAIL Q

SR22_PC11_1828D

Figure-01
Interior Placards and Overlays - Serials w/ English (12 of 16)

EFFECTIVITY:
All

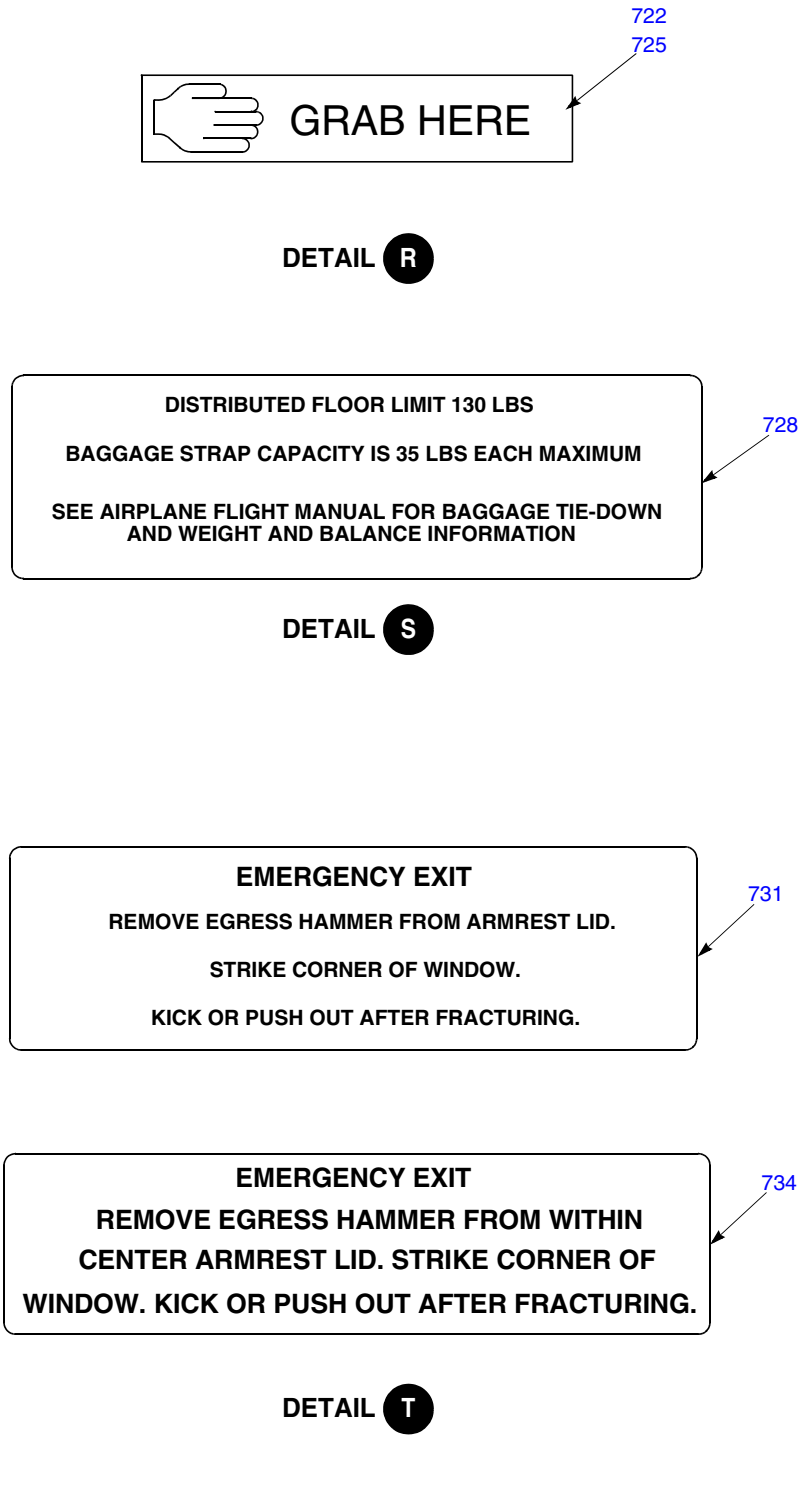

Figure-01
Interior Placards and Overlays - Serials w/ English (13 of 16)

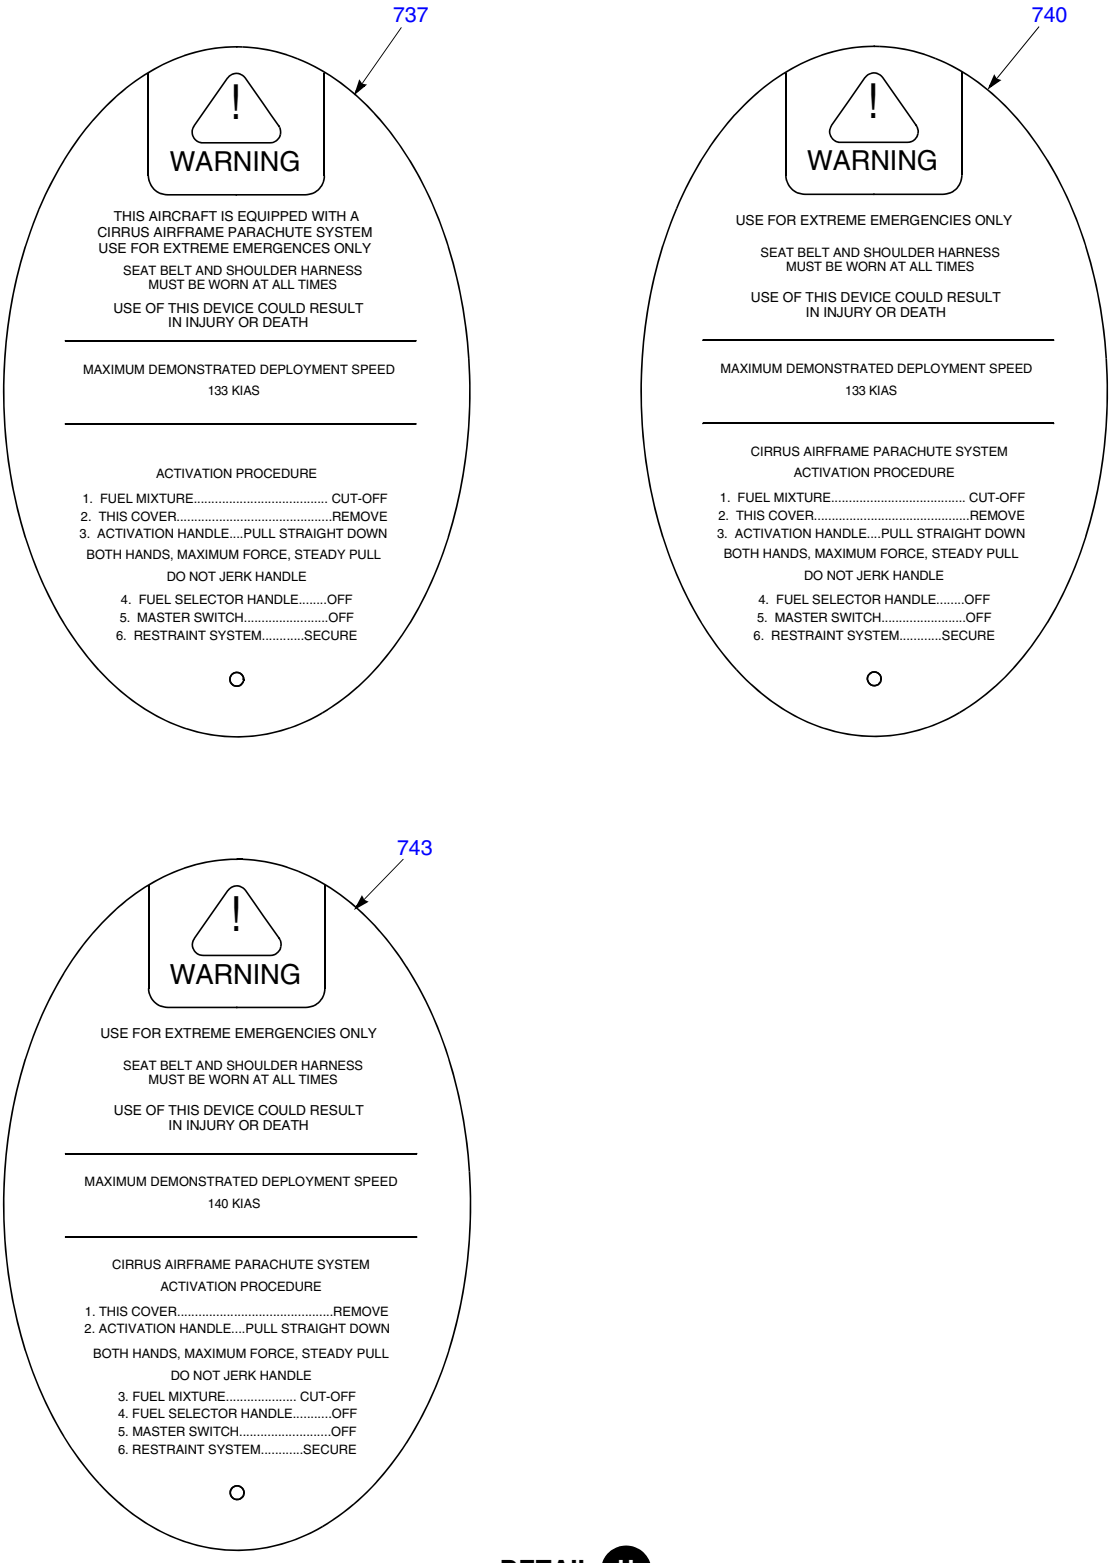

Figure-01
Interior Placards and Overlays - Serials w/ English (14 of 16)

EFFECTIVITY:
All

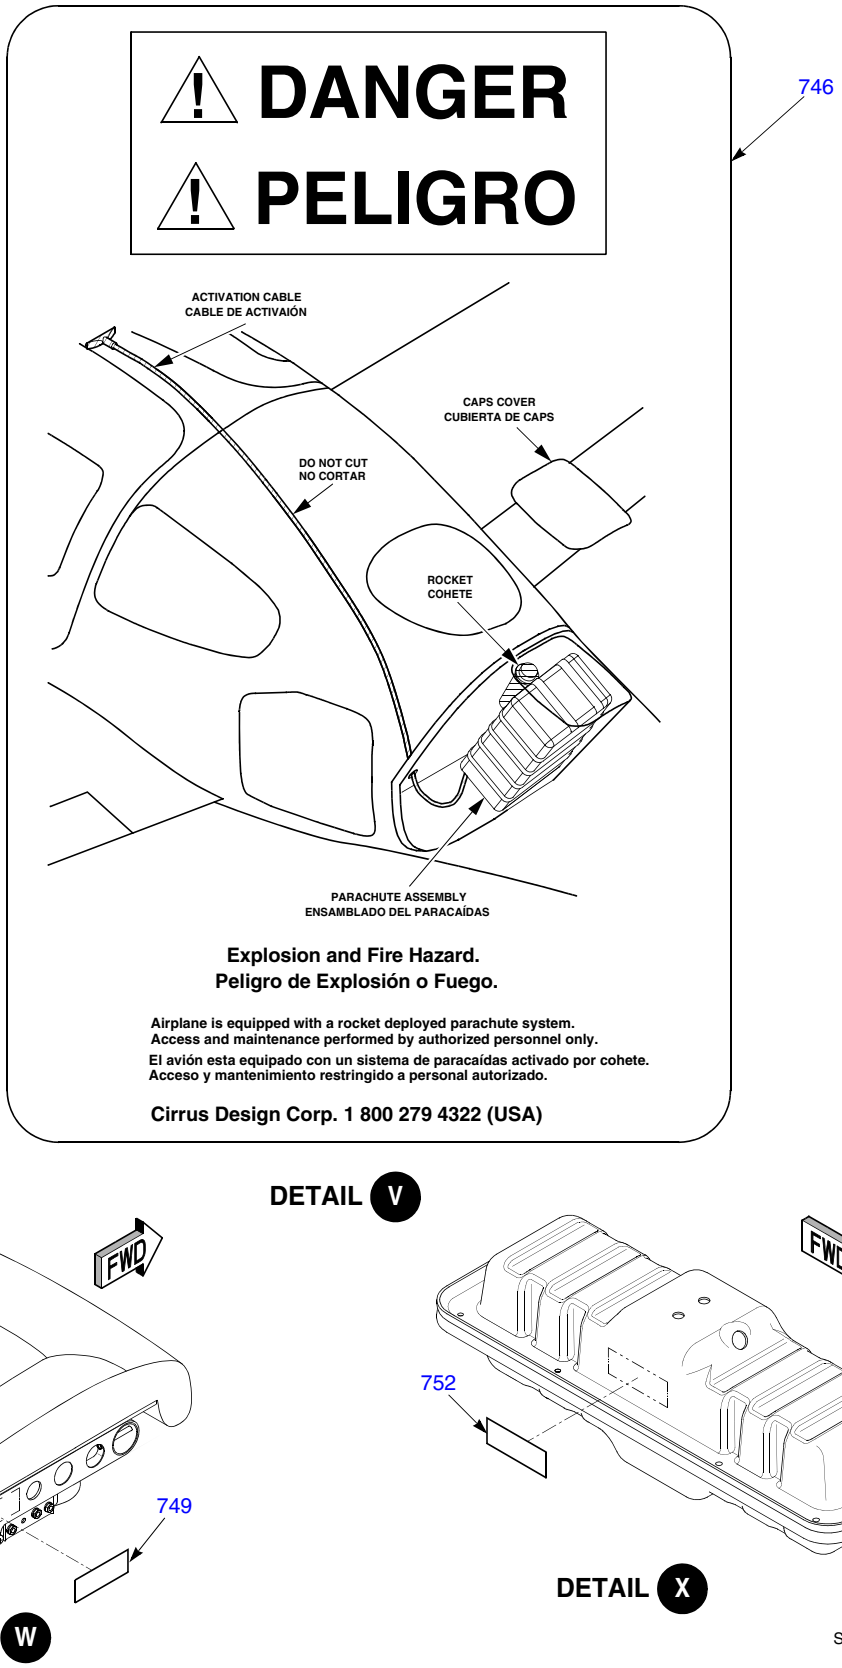

Figure-01

Interior Placards and Overlays - Serials w/ English (15 of 16)

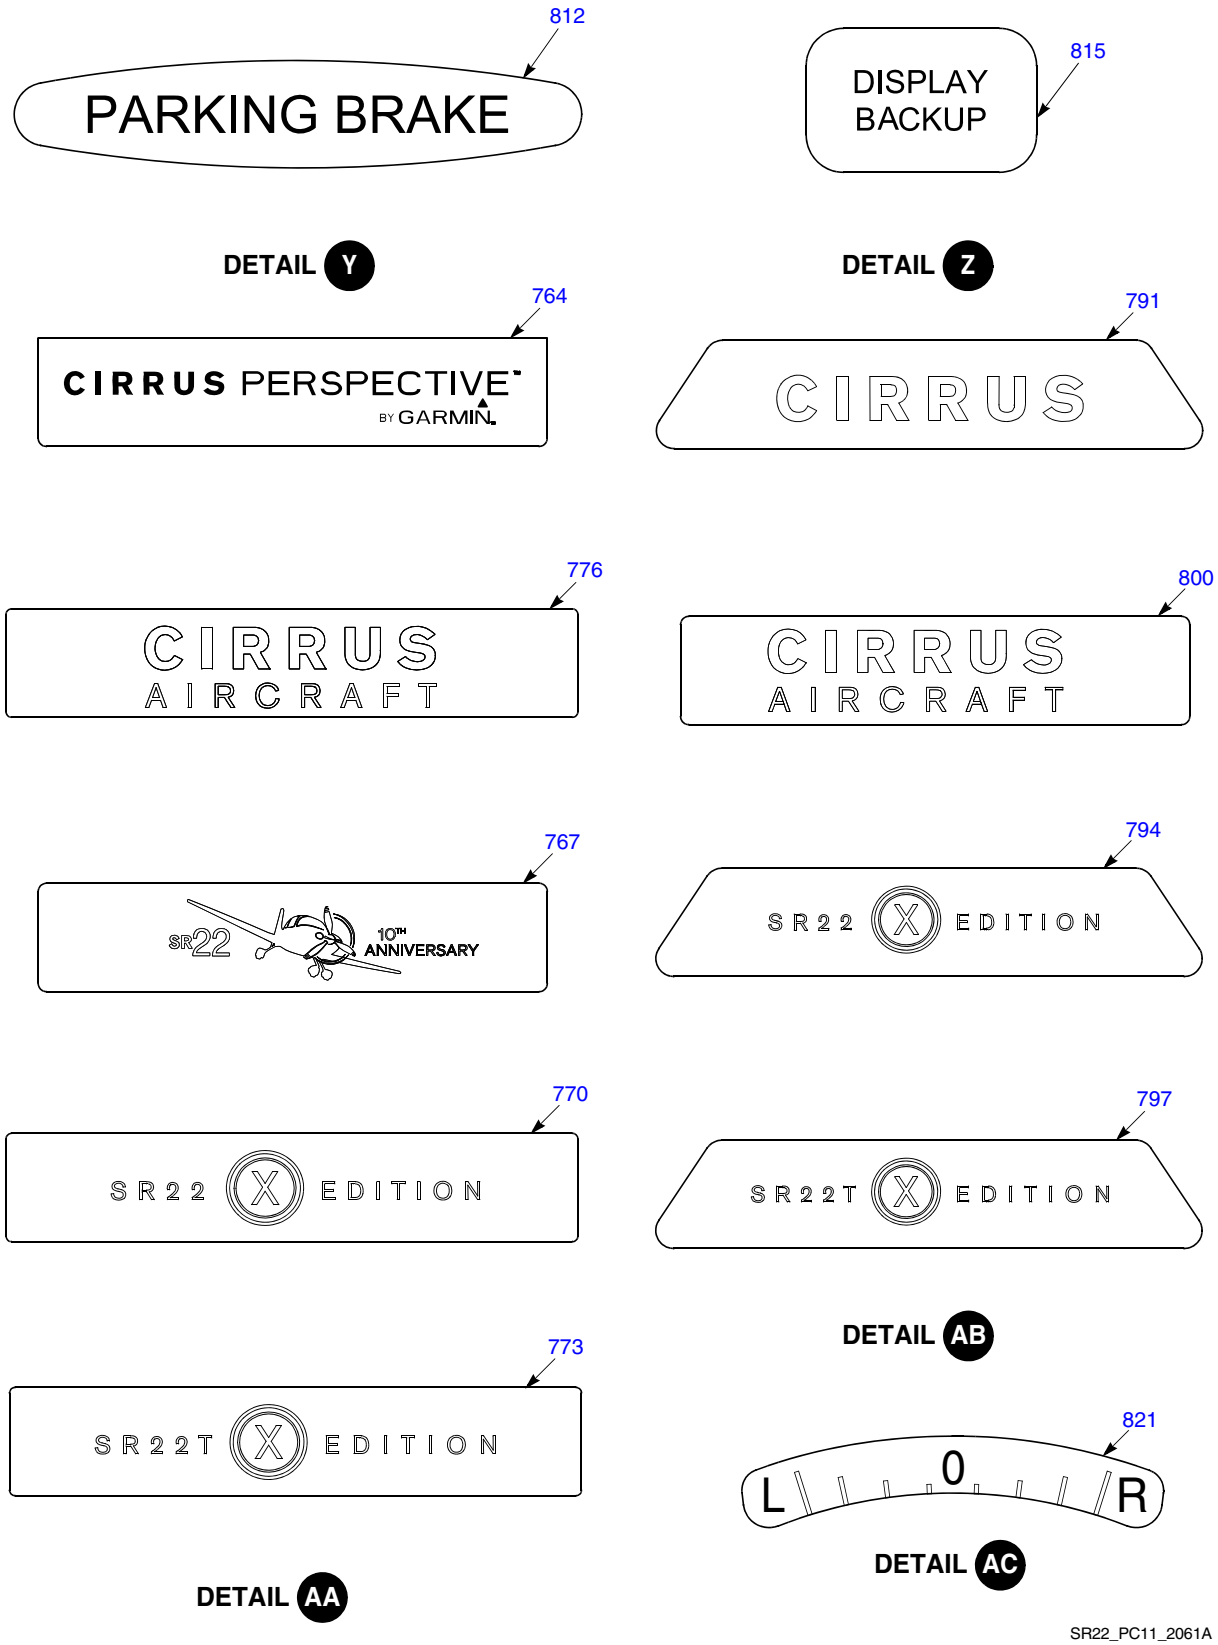

Figure-01

Interior Placards and Overlays - Serials w/ English (16 of 16)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**			INTERIOR PLACARDS AND OVERLAYS	0002 / 0001	/	NP
	3	17137-001	$			·GARMENT BRACKET, OVERLAY	1520 / 0001	/	AR
	6	13615-001				·CIRCUIT BREAKER PNL, LH OVERLAY	0002	0074	AR
	9	13615-002				·CIRCUIT BREAKER PNL, LH OVERLAY	0075	0333	AR
	12	13615-003				·CIRCUIT BREAKER PNL, LH OVERLAY	0334	1035	AR
	15	13615-004				·CIRCUIT BREAKER PNL, LH OVERLAY, W/O WEATHER	1036	1086	AR
	18	13615-005				·CIRCUIT BREAKER PNL, LH OVERLAY, W/ WEATHER	1087	1662	AR
	21	16989-002				·CIRCUIT BREAKER PNL, LH OVERLAY, W/ PEI	1663	1862	AR
	24	16989-001				·CIRCUIT BREAKER PNL, LH OVERLAY, W/ PEI, W/AC	1863	2437	AR
	27	18530-003				·CIRCUIT BREAKER PNL, LH OVERLAY	2438		AR
	30	13615-011				·CIRCUIT BREAKER PNL, CTR OVERLAY, W/O PFD	0002	0820	AR
	33	13615-012				·CIRCUIT BREAKER PNL, CTR OVERLAY, W/ PFD	0435	1662	AR
	36	16989-012				·CIRCUIT BREAKER PNL, CTR OVERLAY, W/ PEI	1663	1862	AR
	39	16989-011				·CIRCUIT BREAKER PNL, CTR OVERLAY, W/ PEI, W/AC	1863	2437	AR
	42	18530-013				·CIRCUIT BREAKER PNL, CTR OVERLAY	2438		AR
	45	13615-021				·CIRCUIT BREAKER PNL, RH OVERLAY, W/O PFD	0002	0820	AR
	48	13615-022				·CIRCUIT BREAKER PNL, RH OVERLAY, W/ PFD	0435	1662	AR
	51	16989-021				·CIRCUIT BREAKER PNL, RH OVERLAY, W/ PEI	1663	2437	AR
	54	18530-023				·CIRCUIT BREAKER PNL, RH OVERLAY	2438		AR
	57	18994-041				·CIRCUIT BREAKER PNL, RH, W/ PERSPECTIVE	3026	3100	AR
	60	18994-042				·CIRCUIT BREAKER PNL, RH, W/ PERSP & W/O FIKI	3101	3827	AR
	63	29341-001				·CIRCUIT BREAKER PNL, RH, W/ PERSP & W/O FIKI	3828		AR
	66	18994-044				·CIRCUIT BREAKER PNL, RH, W/ PERSPECTIVE & FIKI	3403	3492	AR
	69	18994-046				·CIRCUIT BREAKER PNL, RH, W/ PERSPECTIVE & FIKI	3493	3643	AR
	72	18994-048				·CIRCUIT BREAKER PNL, RH, W/ PERSPECTIVE & FIKI	3644 / 0001	3827 / 0267	AR
	75	29341-002				·CIRCUIT BREAKER PNL, RH, W/ PERSPECTIVE & FIKI	3828 / 0268	/	AR
	78	18994-051				·CIRCUIT BREAKER PNL, RH CTR, W/ PERSP & W/O FIKI	3026		AR
	81	18994-053				·CIRCUIT BREAKER PNL, RH CTR, W/ PERSP & FIKI	3403 / 0001	/	AR
	84	18994-062				·CIRCUIT BREAKER PNL, LH CTR, W/ PERSPECTIVE	3026 / 0001	3100 /	AR
	85	18994-063				·CIRCUIT BREAKER PNL, LH CTR, W/ PERSPECTIVE	3101	3402	AR
	86	29343-001				·CIRCUIT BREAKER PNL, LH CTR, W/ PERSPECTIVE	4081 / 0775	4299 / 1232	AR
	87	29343-002				·CIRCUIT BREAKER PNL, LH CTR, W/ DUAL ADC	4081 / 0775	4299 / 1232	AR
	88	29343-009				·CIRCUIT BREAKER PNL, LH CTR, W/ SINGLE ADC	4300 / 1233	/	AR
	89	29343-010				·CIRCUIT BREAKER PNL, LH CTR, W/ DUAL ADC	4300 / 1233	/	AR
	90	18994-082				·CIRCUIT BREAKER PNL, LH CTR, W/ PERSP & CLGS	3026 / 0001	/	AR
	93	18994-065				·CIRCUIT BREAKER PNL, LH CTR, W/ PERSP & DUAL ADC	3026 / 0001	/	AR
	96	18994-085				·CIRCUIT BRKR PNL, LH CTR, W/ PERSP,CLGS,DUAL ADC	3026 / 0001	/	AR
	97	29343-091	(			·CIRCUIT BRKR PNL, LH CTR, W/ PERCEPTION, ADC	4369 / 1384	/	AR
	98	29343-092	(			·CIRCUIT BRKR PNL, LH CTR, W/ PERCEPTION,DUAL ADC	4369 / 1384	/	AR
	99	18994-071				·CIRCUIT BREAKER PNL, LH, W/ PERSP & W/O FIKI	3026 / 0001	/	AR
	102	18994-072				·CIRCUIT BREAKER PNL, LH, W/ PERSPECTIVE & FIKI	3403	3643	AR
	105	18994-075				·CIRCUIT BREAKER PNL, LH, W/ PERSPECTIVE & FIKI	3644 / 0001	/	AR
	106	29344-002				·CIRCUIT BREAKER PNL, LH, W/ PERSPECTIVE & A/C	4031 / 0690	/	AR
	107	29344-091	(			·CIRCUIT BREAKER PNL, LH, W/ PERCEPTION & A/C	4369 / 1384	/	AR
-	108	13617-001				·INST PNL, W/ ARNAV MFD	0002	0141	AR
	111	14745-001				·INST PNL, W/ AVIDYNE MFD	0142	0820	AR
-	114	14745-002				·INST PNL, W/ PFD, MFD	0435	0820	AR
-	117	15919-001				·INST PNL, W/ PFD, MFD (BEIGE)	0821	1662	AR
-	120	15919-002				·INST PNL, W/ PFD, MFD (BLACK)	0821	1662	AR
-	123	14745-003	@			·INST PNL, W/ PFD, MFD	0656	1662	AR
-	126	15919-003				·INST PNL, W/ PFD, MFD, TAWS (BEIGE)	1036	1662	AR
-	129	15919-004				·INST PNL, W/ PFD, MFD, TAWS (BLACK)	1036	1662	AR
-	132	15919-005				·INST PNL, W/ PFD, MFD, FD (BEIGE)	1307	1662	AR
-	135	15919-006				·INST PNL, W/ PFD, MFD, FD (BLACK)	1307	1662	AR

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	138	15919-007			·INST PNL, W/ PFD, MFD, TAWS, FD (BEIGE)	1307	1662	AR
	141	15919-008			·INST PNL, W/ PFD, MFD, TAWS, FD (BLACK)	1307	1662	AR
-	144	16701-001			·INST PNL W/ PEI, OVERLAY (BEIGE)	1663	1862	AR
-	147	16701-002			·INST PNL W/ PEI, OVERLAY (BLACK)	1663	1862	AR
-	150	16701-003			·INST PNL W/ PEI, TAWS, OVERLAY (BEIGE)	1663	1862	AR
-	153	16701-004			·INST PNL W/ PEI, TAWS, OVERLAY (BLACK)	1663	1862	AR
-	156	16701-005			·INST PNL W/ PEI, FD OVERLAY (BEIGE)	1663	1862	AR
-	159	16701-006			·INST PNL W/ PEI, FD OVERLAY (BLACK)	1663	1862	AR
-	162	16701-007			·INST PNL W/ PEI, TAWS, FD OVERLAY (BEIGE)	1663	1862	AR
-	165	16701-008			·INST PNL W/ PEI, TAWS, FD OVERLAY (BLACK)	1663	1862	AR
	168	16701-009			·INST PNL W/ PEI, TAWS, FD OVERLAY (IVORY)	1663	1862	AR
	171	17091-001			·INST PNL W/ A/C, OVERLAY (TAN)	1863	2437	AR
-	174	17091-002			·INST PNL W/ A/C, OVERLAY (BLACK)	1863	2437	AR
-	177	17091-012			·INST PNL W/ A/C, OVERLAY (IVORY)	1863	2437	AR
-	180	17091-003			·INST PNL W/ A/C, TAWS, OVERLAY (TAN)	1863	2437	AR
-	183	17091-004			·INST PNL W/ A/C, TAWS, OVERLAY (BLACK)	1863	2437	AR
-	186	17091-010			·INST PNL W/ A/C, TAWS, OVERLAY (IVORY)	1863	2437	AR
-	189	17091-005			·INST PNL W/ A/C, FD, OVERLAY (TAN)	1863	2437	AR
-	192	17091-006			·INST PNL W/ A/C, FD, OVERLAY (BLACK)	1863	2437	AR
-	195	17091-011			·INST PNL W/ A/C, FD, OVERLAY (IVORY)	1863	2437	AR
-	198	17091-007			·INST PNL W/ A/C, TAWS, FD, OVERLAY (TAN)	1863	2437	AR
-	201	17091-008			·INST PNL W/ A/C, TAWS, FD, OVERLAY (BLACK)	1863	2437	AR
-	204	17091-009			·INST PNL W/ A/C, TAWS, FD, OVERLAY (IVORY)	1863	2437	AR
-	207	17091-016			·INST PNL W/ FAN, OVERLAY (TAN)	1863	2437	AR
-	210	17091-020			·INST PNL W/ FAN, OVERLAY (BLACK)	1863	2437	AR
-	213	17091-024			·INST PNL W/ FAN, OVERLAY (IVORY)	1863	2437	AR
-	216	17091-014			·INST PNL W/ FAN, TAWS, OVERLAY (TAN)	1863	2437	AR
-	219	17091-018			·INST PNL W/ FAN, TAWS, OVERLAY (BLACK)	1863	2437	AR
-	222	17091-022			·INST PNL W/ FAN, TAWS, OVERLAY (IVORY)	1863	2437	AR
-	225	17091-015			·INST PNL W/ FAN, FD, OVERLAY (TAN)	1863	2437	AR
-	228	17091-019			·INST PNL W/ FAN, FD, OVERLAY (BLACK)	1863	2437	AR
-	231	17091-023			·INST PNL W/ FAN, FD, OVERLAY (IVORY)	1863	2437	AR
-	234	17091-013			·INST PNL W/ FAN, TAWS, FD, OVERLAY (TAN)	1863	2437	AR
-	237	17091-017			·INST PNL W/ FAN, TAWS, FD, OVERLAY (BLACK)	1863	2437	AR
-	240	17091-021			·INST PNL W/ FAN, TAWS, FD, OVERLAY (IVORY)	1863	2437	AR
-	243	17091-028			·INST PNL W/ VENT, OVERLAY (TAN)	1863	2437	AR
-	246	17091-032			·INST PNL W/ VENT, OVERLAY (BLACK)	1863	2437	AR
-	249	17091-036			·INST PNL W/ VENT, OVERLAY (IVORY)	1863	2437	AR
-	252	17091-026			·INST PNL W/ VENT, TAWS, OVERLAY (TAN)	1863	2437	AR
-	255	17091-030			·INST PNL W/ VENT, TAWS, OVERLAY (BLACK)	1863	2437	AR
-	258	17091-034			·INST PNL W/ VENT, TAWS, OVERLAY (IVORY)	1863	2437	AR
-	261	17091-027			·INST PNL W/ VENT, FD, OVERLAY (TAN)	1863	2437	AR
-	264	17091-031			·INST PNL W/ VENT, FD, OVERLAY (BLACK)	1863	2437	AR
-	267	17091-035			·INST PNL W/ VENT, FD, OVERLAY (IVORY)	1863	2437	AR
-	270	17091-025			·INST PNL W/ VENT, TAWS, FD, OVERLAY (TAN)	1863	2437	AR
-	273	17091-029			·INST PNL W/ VENT, TAWS, FD, OVERLAY (BLACK)	1863	2437	AR
-	276	17091-033			·INST PNL W/ VENT, TAWS, FD, OVERLAY (IVORY)	1863	2437	AR
-	279	18473-001			·INST PNL W/ A/C, OVERLAY (TAN)	2438		AR
-	282	18473-002			·INST PNL W/ A/C, OVERLAY (BLACK)	2438		AR
-	285	18473-003			·INST PNL W/ A/C, TAWS, OVERLAY (TAN)	2438		AR
-	288	18473-004			·INST PNL W/ A/C, TAWS, OVERLAY (BLACK)	2438		AR
-	291	18473-005			·INST PNL W/ A/C, FD, OVERLAY (TAN)	2438		AR
-	294	18473-006			·INST PNL W/ A/C, FD, OVERLAY (BLACK)	2438		AR
-	297	18473-007			·INST PNL W/ A/C, TAWS, FD, OVERLAY (TAN)	2438		AR

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	300	18473-008			·INST PNL W/ A/C, TAWS, FD, OVERLAY (BLACK)	2438		AR
-	303	18473-009			·INST PNL W/ A/C, TAWS, FD, OVERLAY (IVORY)	2438		AR
-	306	18473-016			·INST PNL W/ FAN, OVERLAY (TAN)	2438		AR
-	309	18473-020			·INST PNL W/ FAN, OVERLAY (BLACK)	2438		AR
-	312	18473-014			·INST PNL W/ FAN, TAWS, OVERLAY (TAN)	2438		AR
-	315	18473-018			·INST PNL W/ FAN, TAWS, OVERLAY (BLACK)	2438		AR
-	318	18473-015			·INST PNL W/ FAN, FD, OVERLAY (TAN)	2438		AR
-	321	18473-019			·INST PNL W/ FAN, FD, OVERLAY (BLACK)	2438		AR
-	324	18473-013			·INST PNL W/ FAN, TAWS, FD, OVERLAY (TAN)	2438		AR
-	327	18473-017			·INST PNL W/ FAN, TAWS, FD, OVERLAY (BLACK)	2438		AR
-	330	18473-021			·INST PNL W/ FAN, TAWS, FD, OVERLAY (IVORY)	2438		AR
-	333	18473-028			·INST PNL W/ VENT, OVERLAY (TAN)	2438		AR
-	336	18473-032			·INST PNL W/ VENT, OVERLAY (BLACK)	2438		AR
-	339	18473-026			·INST PNL W/ VENT, TAWS, OVERLAY (TAN)	2438		AR
-	342	18473-030			·INST PNL W/ VENT, TAWS, OVERLAY (BLACK)	2438		AR
-	345	18473-027			·INST PNL W/ VENT, FD, OVERLAY (TAN)	2438		AR
-	348	18473-031			·INST PNL W/ VENT, FD, OVERLAY (BLACK)	2438		AR
-	351	18473-025			·INST PNL W/ VENT, TAWS, FD, OVERLAY (TAN)	2438		AR
-	354	18473-029			·INST PNL W/ VENT, TAWS, FD, OVERLAY (BLACK)	2438		AR
-	357	18473-033			·INST PNL W/ VENT, TAWS, FD, OVERLAY (IVORY)	2438		AR
-	360	25632-102			·INST PNL W/ 10-INCH PERSP, OVERLAY (TAN)	3446	3914	AR
-	363	25632-104			·INST PNL W/ 10-INCH PERSP, FD, OVERLAY (TAN)	3446	3914	AR
-	366	25632-132			·INST PNL W/ 10-INCH PERSP, OVERLAY, 140 KIAS (TAN)	3915		AR
-	367	25632-134			·INST PNL W/ 10-INCH PERSP, FD, OVERLAY, 140 KIAS (TAN)	3915		AR
-	369	25632-112			·INST PNL W/ 10-INCH PERSP, OVERLAY (SLATE)	3446	3914	AR
-	372	25632-114			·INST PNL W/ 10-INCH PERSP, FD, OVERLAY (SLATE)	3446	3914	AR
-	375	25632-142			·INST PNL W/ 10-INCH PERSP, OVERLAY, 140 KIAS (SLATE)	3915		AR
-	378	31959-112			·INST PNL W/ 10-INCH PERSP, OVERLAY, 140 KIAS (SLATE)	/ 0623	/	AR
-	379	25632-144			·INST PNL W/ 10-INCH PERSP, FD, OVERLAY, 140 KIAS (SLATE)	3915		AR
-	381	25632-122			·INST PNL W/ 10-INCH PERSP, OVERLAY (IVORY)	3446	3914	AR
-	384	25632-124			·INST PNL W/ 10-INCH PERSP, FD, OVERLAY (IVORY)	3446	3914	AR
-	387	25632-152			·INST PNL W/ 10-INCH PERSP, OVERLAY, 140 KIAS (IVORY)	3915		AR
-	388	25632-154			·INST PNL W/ 10-INCH PERSP, FD, OVERLAY, 140 KIAS (IVORY)	3915		AR
-	390	19964-002			·INST PNL W/ 12-INCH PERSP, OVERLAY, LH (CARBON)	3446	3827	AR
-	393	19964-003			·INST PNL W/ 12-INCH PERSP, OVERLAY, LH (CARBON)	/ 0001	/ 0267	AR
-	396	19964-005			·INST PNL W/ 12-INCH PERSP, FD, OVERLAY, LH (CAR-BON)	3446	3827	AR
-	399	19964-006			·INST PNL W/ 12-INCH PERSP, FD, OVERLAY, LH (CAR-BON)	/ 0001	/ 0267	AR
-	500	19964-012			·INST PNL W/ 12-INCH PERSP, OVERLAY, LH (ANOD BLK)	3446	3827	AR
-	503	19964-013			·INST PNL W/ 12-INCH PERSP, OVERLAY, LH (ANOD BLK)	/ 0001	/ 0267	AR
-	506	19964-015			·INST PNL W/ 12-INCH PERSP, FD, OVERLAY, LH (ANOD BLK)	3446	3827	AR
-	509	19964-016			·INST PNL W/ 12-INCH PERSP, FD, OVERLAY, LH (ANOD BLK)	/ 0001	/ 0267	AR
-	512	19964-022			·INST PNL W/ 12-INCH PERSP, OVERLAY, LH (PNT BLK)	3446	3827	AR
-	515	19964-023			·INST PNL W/ 12-INCH PERSP, OVERLAY, LH (PNT BLK)	/ 0001	/ 0267	AR

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	518	19964-025			·INST PNL W/ 12-INCH PERSP, FD, OVERLAY, LH (PNT BLK)	3446	3827	AR
-	521	19964-026			·INST PNL W/ 12-INCH PERSP, FD, OVERLAY, LH (PNT BLK)	/ 0001	/ 0267	AR
-	524	19964-032			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (BRUSHED ALUM)	3828	3914	AR
-	527	19964-033			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (BRUSHED ALUM)	/ 0268	/ 0441	AR
-	530	19964-042			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (TECH PATTERN)	3828	3914	AR
-	533	19964-043			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (TECH PATTERN)	/ 0268	/ 0441	AR
-	536	19964-052			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (CARBON PATTERN)	3828	3914	AR
-	539	19964-053			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (CARBON PATTERN)	/ 0268	/ 0441	AR
-	542	19964-062			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (CARBON)	3828	3914	AR
-	545	19964-063			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (CARBON)	/ 0268	/ 0441	AR
-	548	19964-092			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (BRUSHED ALUM)	3915		AR
-	551	19964-093			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (BRUSHED ALUM)	/ 0442	/	AR
-	554	19964-102			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (TECH PATTERN)	3915		AR
-	557	19964-103			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (TECH PATTERN)	/ 0442	/	AR
-	560	19964-112			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (CARBON PATTERN)	3915		AR
-	563	19964-113			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (CARBON PATTERN)	/ 0442	/	AR
-	564	19964-122			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (CARBON)	3915		AR
-	565	19964-123			·INST PNL W/ 12-INCH PERSP W/LOGO, OVERLAY, LH (CARBON)	/ 0442	/	AR
-	566	19968-001			·INST PNL W/ 12-INCH PERSP, NO SMOKING & FASTEN SEATBELTS, RH (CARBON)	3828 / 0001	/	AR
-	567	19968-002			·INST PNL W/ 12-INCH PERSP, NO SMOKING & FASTEN SEATBELTS, RH (ANODIZED BLK)	3828 / 0001	/	AR
-	568	19968-003			·INST PNL W/ 12-INCH PERSP, NO SMOKING & FASTEN SEATBELTS, RH (BLACK)	3828 / 0001	/	AR
-	569	19968-004			·INST PNL W/ 12-INCH PERSP, NO SMOKING & FASTEN SEATBELTS, RH (BRUSHED ALUM)	3828 / 0001	/	AR
-	570	19968-005			·INST PNL W/ 12-INCH PERSP, NO SMOKING & FASTEN SEATBELTS, RH (TECH PATTERN)	3828 / 0001	/	AR
-	571	19968-006			·INST PNL W/ 12-INCH PERSP, NO SMOKING & FASTEN SEATBELTS, RH (CARBON PATTERN)	3828 / 0001	/	AR
-	572	19968-ASN			·INST PNL W/ 12-INCH PERSP, NO SMOKING & FASTEN SEATBELTS, RH (CUSTOM)	3828 / 0001	/	AR
	573	13616-001			·BOLSTER PNL, OVERLAY	0002	0138	AR
-	575	13618-011			·AUDIO PNL, OVERLAY, FWD	0002	0333	AR
					FOR SPARES USE P/N 13618-012			
	578	13618-012			·AUDIO PNL, OVERLAY, FWD, W/O PERSPECTIVE	0334	3026	AR
	581	17618-011			·AUDIO PNL, OVERLAY, FWD, W/ PERSPECTIVE	3026 / 0001	3828 / 0267	AR
	584	17618-012	&		·AUDIO PNL, OVERLAY, FWD, W/ PERSPECTIVE	3828 / 0268	4163 / 0962	AR
-	587	13618-001			·AUDIO PNL, OVERLAY, FWD	0002	0333	AR

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 13618-002			
	588	34815-001			·AUDIO PNL, OVERLAY, FWD	4164 / 0963	/	AR
	590	13618-002			·AUDIO PNL, OVERLAY, AFT, W/O PERSPECTIVE	0334	4163	AR
	591	34815-002			·AUDIO PNL, OVERLAY, AFT	4164 / 0963	/	AR
	593	17618-001			·AUDIO PNL, OVERLAY, AFT, W/ PERSPECTIVE	3026 / 0001	4163 / 0962	AR
	596	17618-002	&		·AUDIO PNL, OVERLAY, AFT, W/ PERSPECTIVE	3828 / 0268	4163 / 0962	AR
	599	12389-001			·ALTERNATE AIR/BRAKE RELEASE, OVERLAY	0002	2042	AR
	602	12389-002			·ALTERNATE AIR/BRAKE RELEASE, OVERLAY	2043 / 0001	/	AR
	605	12579-001			·PLACARD, ELT LOCATION	0002 / 0001	/	AR
-	608	24695-001	%		·ALT AIR/BRAKE/RCPI OVERLAY W/ PERSPECTIVE	3026	3504	AR
	611	27280-001	%		·ALT AIR/BRAKE/RCPI OVERLAY W/ PERSPECTIVE	3505 / 0001	3827 / 0267	AR
-	614	24695-002	!		·ALT AIR/BRAKE/RCPI OVERLAY W/ PERSPECTIVE	3026	3504	AR
-	617	27280-002	!		·ALT AIR/BRAKE/RCPI OVERLAY W/ PERSPECTIVE	3505 / 0001	3632 / 0001	AR
	620	27280-012	!		·ALT AIR/BRAKE/RCPI OVERLAY W/ PERSPECTIVE	3633 / 0002	4163 / 0011	AR
-	623	27280-003	!		·ALT AIR/BRAKE/RCPI OVERLAY W/ PERSPECTIVE	/ 0012	/ 0962	AR
	624	27280-004			·ELT RCPI BRACKET OVERLAY	/ 0963	/	AR
	625	27280-014			·ALT AIR/ELT RCPI BRACKET OVERLAY	4164		AR
	626	18992-001			·ALT STATIC, OVERLAY, W/ PERSPECTIVE	3026 / 0001	/	AR
	629	13614-001			·ENGINE CONTROL PNL, OVERLAY	0002	0409	AR
					FOR SPARES USE P/N 13614-003			
	632	15355-001			··PLACARD, CREW SEAT LOCKING	0002	0434	AR
					AFTER SA 02-13			
	635	13614-002			·ENGINE CONTROL PNL, OVERLAY, W/ ICE PROTECT	0334	0434	AR
					FOR SPARES USE P/N 13614-004			
	638	13614-004			·ENG CONTROL PNL, OVERLAY, W/ ICE PROTECT	0334	0434	AR
	641	13614-003			·ENG CONTROL PNL, OVERLAY	0410	0820	AR
	644	15918-001			·ENG CONTROL PNL, OVERLAY (BEIGE)	0821	2437	AR
	647	18472-001			·ENG CONTROL PNL, OVERLAY (BEIGE) W/O PERSPECTIVE	2438		AR
	650	22044-001			·ENG CNTRL PNL OVERLAY (BEIGE) W/ PERSPECTIVE	3026	3848	AR
	653	22044-004			·ENG CNTRL PNL OVERLAY (BEIGE) W/ PERSPECTIVE	3849		AR
	656	22068-001			·ENG CNTRL PNL OVERLAY (BEIGE) W/ PERSPECTIVE	/ 0001	/ 0318	AR
	659	22068-004			·ENG CNTRL PNL OVERLAY (BEIGE) W/ PERSPECTIVE	/ 0319	/	AR
-	662	15918-002			·ENG CONTROL PNL, OVERLAY (BLACK)	0821	2437	AR
-	665	18472-002			·ENG CONTROL PNL, OVERLAY (BLACK) W/O PERSPECTIVE	2438		AR
-	668	22044-002			·ENG CNTRL PNL OVERLAY (BLACK) W/ PERSPECTIVE	3026	3848	AR
					FOR SPARES USE P/N 22044-008			
-	671	22044-005			·ENG CNTRL PNL OVERLAY (BLACK) W/ PERSPECTIVE	3849	3959	AR
					FOR SPARES USE P/N 22044-008			
-	674	22044-008			·ENG CNTRL PNL OVERLAY (BLACK) W/ PERSPECTIVE	3960		AR
-	677	22068-002			·ENG CNTRL PNL OVERLAY (BLACK) W/ PERSPECTIVE	/ 0001	/ 0318	AR
-	680	22068-005			·ENG CNTRL PNL OVERLAY (BLACK) W/ PERSPECTIVE	/ 0319	/	AR
-	683	13614-005	@		·ENG CONTROL PNL, OVERLAY	0656		AR
-	686	15918-003			·ENG CONTROL PNL, OVERLAY (IVORY)	1663	2437	AR
-	689	18472-003			·ENG CONTROL PNL, OVERLAY (IVORY) W/O PERSPECTIVE	2438		AR
-	692	22044-003			·ENG CNTRL PNL OVERLAY (IVORY) W/ PERSPECTIVE	3026	3848	AR
					FOR SPARES USE P/N 22044-009			
-	695	22044-006			·ENG CNTRL PNL OVERLAY (IVORY) W/ PERSPECTIVE	3849	3959	AR
					FOR SPARES USE P/N 22044-009			
-	698	22044-009			·ENG CNTRL PNL OVERLAY (IVORY) W/ PERSPECTIVE	3960		AR
-	701	25909-001			·ENG CONTROL PNL OVERLAY (CARBON) W/ PERSPECTIVE	3026	3600	AR
					FOR SPARES USE P/N 27160-002			
-	704	27160-002			·ENG CNTRL PNL OVERLAY (CARBON) W/ PERSPECTIVE	3601	3848	AR
-	707	27160-005			·ENG CNTRL PNL OVERLAY (CARBON) W/ PERSPECTIVE	3849		AR
-	710	22068-003			·ENG CONTROL PNL OVERLAY (IVORY) W/ PERSPECTIVE	/ 0001	/ 0318	AR

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	713	22068-006			·ENG CONTROL PNL OVERLAY (IVORY) W/ PERSPECTIVE	0319	/	AR
-	716	27160-001			·ENG CONTROL PNL OVERLAY (CARBON) W/ PERSPECTIVE	/ 0001	/ 0318	AR
-	719	27160-004			·ENG CONTROL PNL OVERLAY (CARBON) W/ PERSPECTIVE	0319	/	AR
	722	15735-001	#		·PLACARD, GRAB, WHITE TEXT	0656 / 0001	/	AR
	725	15735-006	#		·PLACARD, GRAB, BLACK TEXT	0656 / 0001	/	AR
	728	12378-001			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	731	12436-001			·PLACARD, EMERGENCY EXIT	0002	0168	AR
					FOR SPARES USE P/N 12436-002			
	734	12436-002			·PLACARD, EMERGENCY EXIT	0169 / 0001	/	AR
	737	14265-001			·PLACARD, CAPS COVER	0002	0209	AR
	740	14265-002			·PLACARD, CAPS COVER	0210 / 0001	3914 / 0441	AR
					AFTER SB22-95-03	0002	0209	AR
	743	29925-001			·PLACARD, CAPS COVER	3915 / 0442	/	AR
	746	15868-001			·PLACARD, CAPS WARNING	0820 / 0001	/	AR
	749	17093-001	)		·PLACARD, SEAT	0002 / 0001	/	AR
	752	19855-001			·PLACARD, BATTERY #2	2420 / 0001	/	AR
	755	22042-001			·PLACARD, MANEUVERING, VO W/ PERSPECTIVE	3026	3914	AR
	758	22042-003			·PLACARD, MANEUVERING, VO W/ PERSPECTIVE	/ 0001	/ 0441	AR
	761	22043-001			·PLACARD, NO SMOKING, FASTEN SEAT BELT	3026 / 0001	/	AR
	764	19595-001			·PLACARD, CONSOLE, CIRRUS PERSPECTIVE	3026 / 0001	3827 / 0267	AR
	767	19595-004			·PLACARD, CONSOLE, 10TH ANNIVERSARY	/ 0079	/ 0188	AR
	770	19846-002			·PLACARD, CONSOLE, X EDITION	3414		AR
	773	19846-003			·PLACARD, CONSOLE, X EDITION	/ 0001	/	AR
	776	29593-001			·PLACARD, CONSOLE, CIRRUS AIRCRAFT, BRUSHED ALUM	3828 / 0268	/	AR
-	779	19595-007			·PLACARD, CONSOLE, CIRRUS AIRCRAFT, TECH	/ 0251	/ 0251	AR
-	782	29593-002			·PLACARD, CONSOLE, CIRRUS AIRCRAFT, TECH	3828 / 0268	/	AR
-	785	29593-003			·PLACARD, CONSOLE, CIRRUS AIRCRAFT, CARBON	3828 / 0268	/	AR
-	788	19595-ASN			·PLACARD, CONSOLE, CIRRUS AIRCRAFT, CUSTOM	3828 / 0268	/	AR
	791	21747-001			·PLACARD, DOOR SILL, CIRRUS	2044 / 0001	3827 / 0267	AR
	794	25907-002			·PLACARD, DOOR SILL, X EDITION	3414 / 0001	/	AR
	797	25907-003			·PLACARD, DOOR SILL, X EDITION	/ 0001	/	AR
	800	19595-006			·PLACARD, DOOR SILL, CIRRUS AIRCRAFT, BRSHED ALUM	3828 / 0268	/	AR
-	803	19595-007			·PLACARD, DOOR SILL, CIRRUS AIRCRAFT, TECH	3828 / 0268	/	AR
-	806	19595-008			·PLACARD, DOOR SILL, CIRRUS AIRCRAFT, CARBON	3828 / 0268	/	AR
-	809	25907-ASN			·PLACARD, DOOR SILL, CIRRUS AIRCRAFT, CUSTOM	3828 / 0268	/	AR
	812	19594-001			·PLACARD, PARKING BRAKE	3026 / 0001	/	AR
	815	19593-001			·PLACARD, DISPLAY BACKUP	3026 / 0001	/	AR
-	818	19593-002	^		·PLACARD, DISPLAY BACKUP, CARBON	3026 / 0001	/	AR
	821	12391-002			·PLACARD, ROLL TRIM	0002 / 0001	/	AR
-	824	12452-001			·PLACARD, PITCH TRIM, LEFT	0002 / 0001	/	AR
-	827	12452-002			·PLACARD, PITCH TRIM, RIGHT	0002 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-1602, 22-1644; REFER TO 22-1663 FOR PART IDENTIFICATION.

2) SERIAL NUMBER 22-1602, 22-1821, 22-1840; REFER TO 22-1863 FOR PART IDENTIFICATION.

3) SERIAL NUMBER 22-2037; REFER TO 22-2043 FOR PART IDENTIFICATION.

4) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					5) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					6) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 W/ FIKI FOR PART IDENTIFICATION.			
					7) SERIAL NUMBER 22-3453, 22-3465, 22-3491; REFER TO 22-3493 W/ FIKI FOR PART IDENTIFICATION.			
					8) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 FOR PART IDENTIFICATION.			
					9) SERIAL NUMBER 22T-0311 THRU 22T-0314, 22T-0316 THRU 22T-0317; REFER TO 22T-0319 FOR PART IDENTIFICATION.			
			(		INSTALLED ON SERIALS W/ PERCEPTION			
			@		INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT.			
			$		INSTALLED ON SERIAL NUMBER 22-1500.			
			%		INSTALLED ON AIRCRAFT W/ 121.5 MHZ ELT.			
			!		INSTALLED ON AIRCRAFT W/ 406 MHZ ELT.			
			)		INSTALLED ON AIRCRAFT W/ ECCENTRIC PIN MODIFICATION.			
			#		CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.			
			^		PLACARD HEIGHT IS APPROXIMATELY 9-INCHES.			
			&		INSTALLED ON AIRCRAFT W/ 2+1 REAR SEAT.			

Intentionally Left Blank

NOTA

Os Tampões que advertem o cartaz encontraram atrás da quqrnição do interior do anteparo 222.

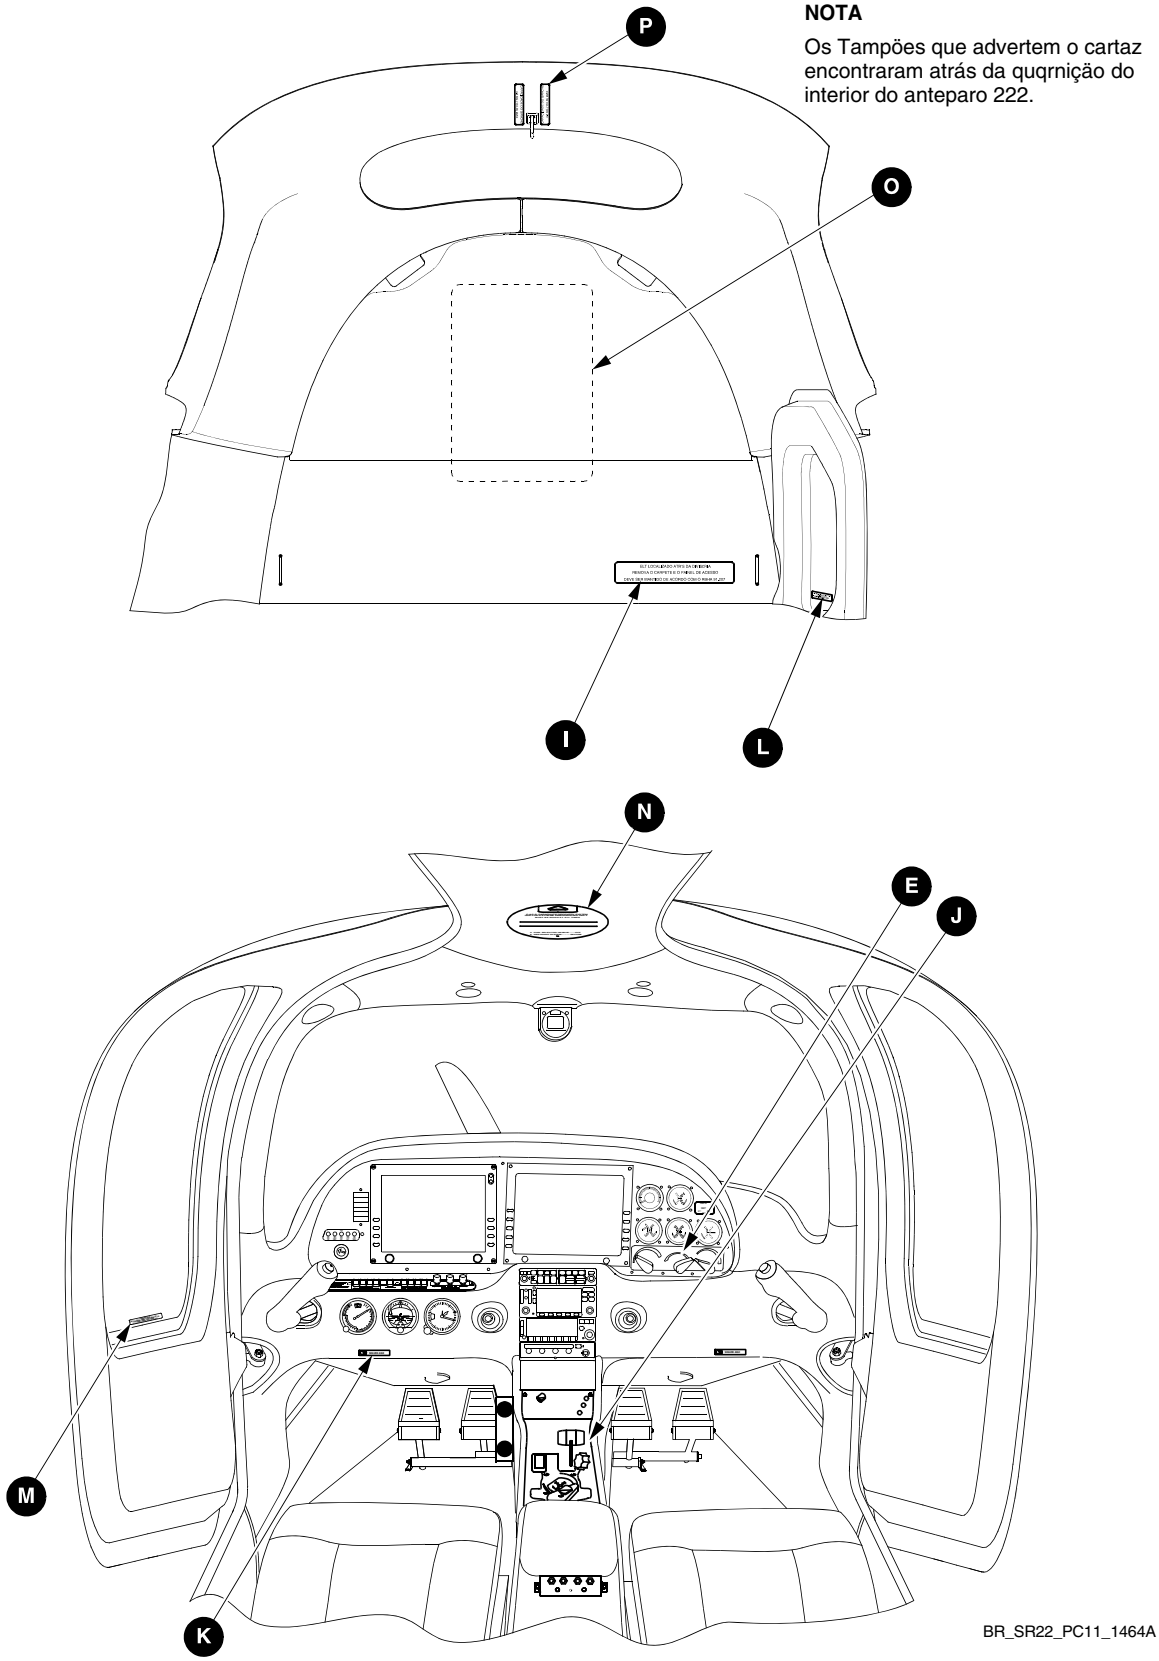

Figure-02

Interior Placards and Overlays - Serials w/ Portuguese (1 of 4)

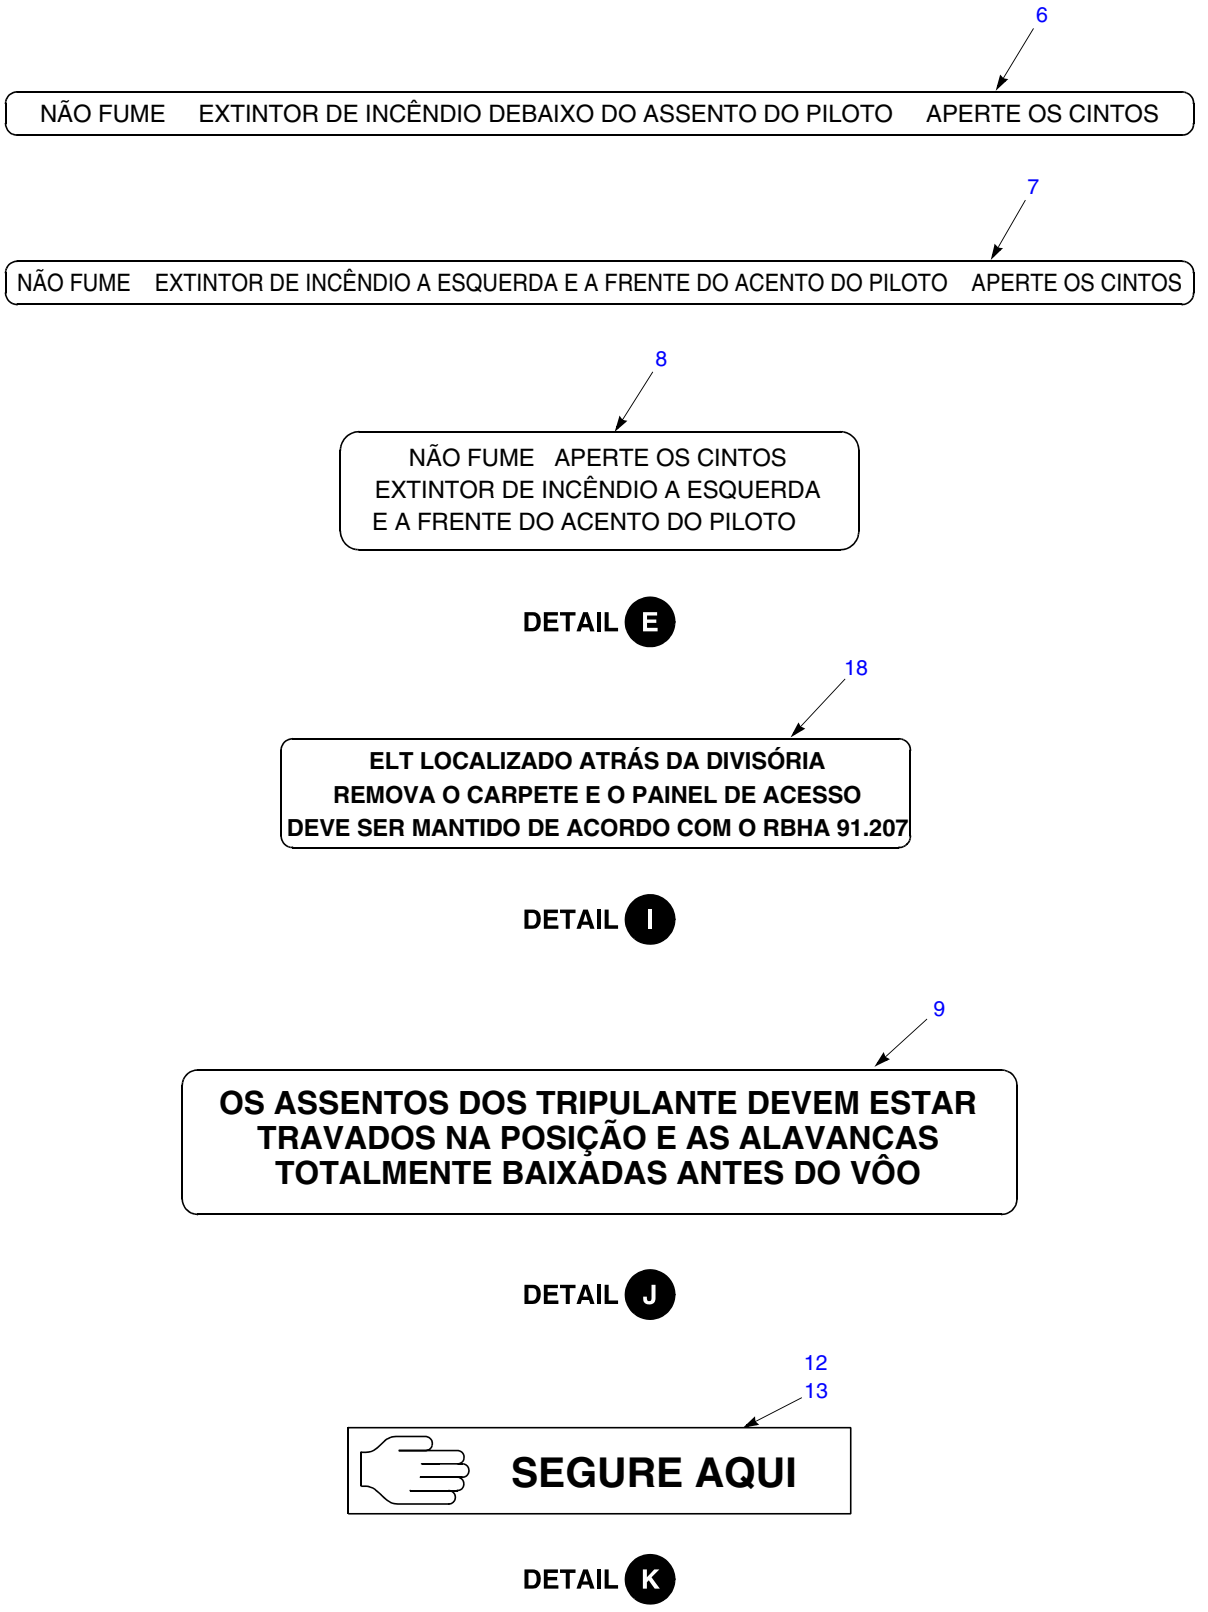

Figure-02
Interior Placards and Overlays - Serials w/ Portuguese (2 of 4)

EFFECTIVITY:
Serials w/ Portuguese

Figure-02

Interior Placards and Overlays - Serials w/ Portuguese (3 of 4)

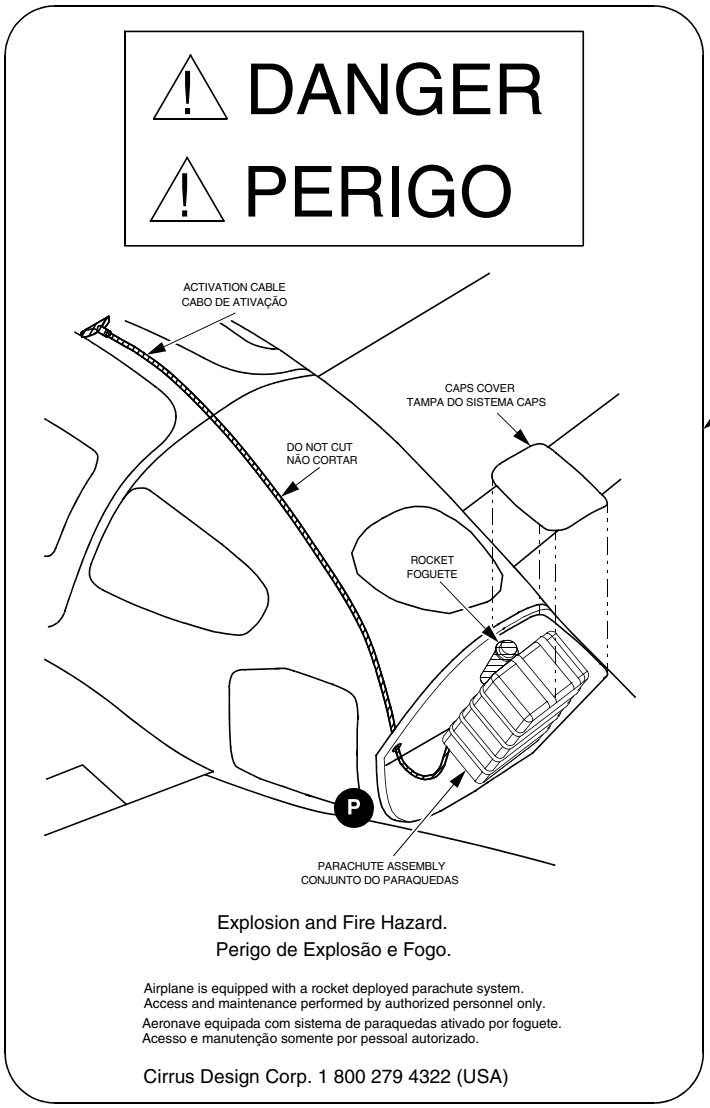

DETAIL O

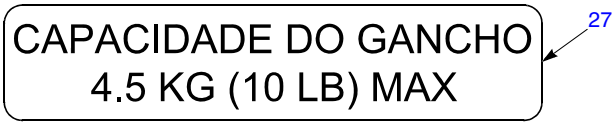

DETAIL P

BR_SR22_PC11_1468A

Figure-02
Interior Placards and Overlays - Serials w/ Portuguese (4 of 4)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			INTERIOR PLACARDS AND OVERLAYS, PORTUGUESE	0002 / 0001	/	NP
	3	14264-006			·PLACARD, CAPS COVER	0002 / 0001	3914 / 0441	AR
	4	29925-004			·PLACARD, CAPS COVER	3915 / 0442	/	AR
	6	16344-006			·PLACARD, FASTEN SEAT BELT W/O PERSPECTIVE	0002	1862	AR
	7	16344-010			·PLACARD, FASTEN SEAT BELT W/O PERSPECTIVE	1863		AR
	8	18423-007			·PLACARD, FASTEN SEAT BELT W/ PERSPECTIVE	3026 / 0001	/	AR
	9	16345-003			·PLACARD, CONSOLE	0002 / 0001	/	AR
	12	15735-005	#		·PLACARD, GRAB	0002 / 0001	/	AR
	13	15735-010	#		·PLACARD, GRAB	0002 / 0001	/	AR
	15	12436-008			·PLACARD, EMERGENCY EXIT	0002 / 0001	/	AR
	18	12579-007			·PLACARD, ELT LOCATION	0002 / 0001	/	AR
	21	12378-006			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	24	15868-002			·PLACARD, CAPS WARNING	0821 / 0001	/	AR
	27	17137-004			·PLACARD, GARMENT BRACKET	1520 / 0001	/	AR
					SYMBOL NOTES:			
			#		CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.			

Intentionally Left Blank

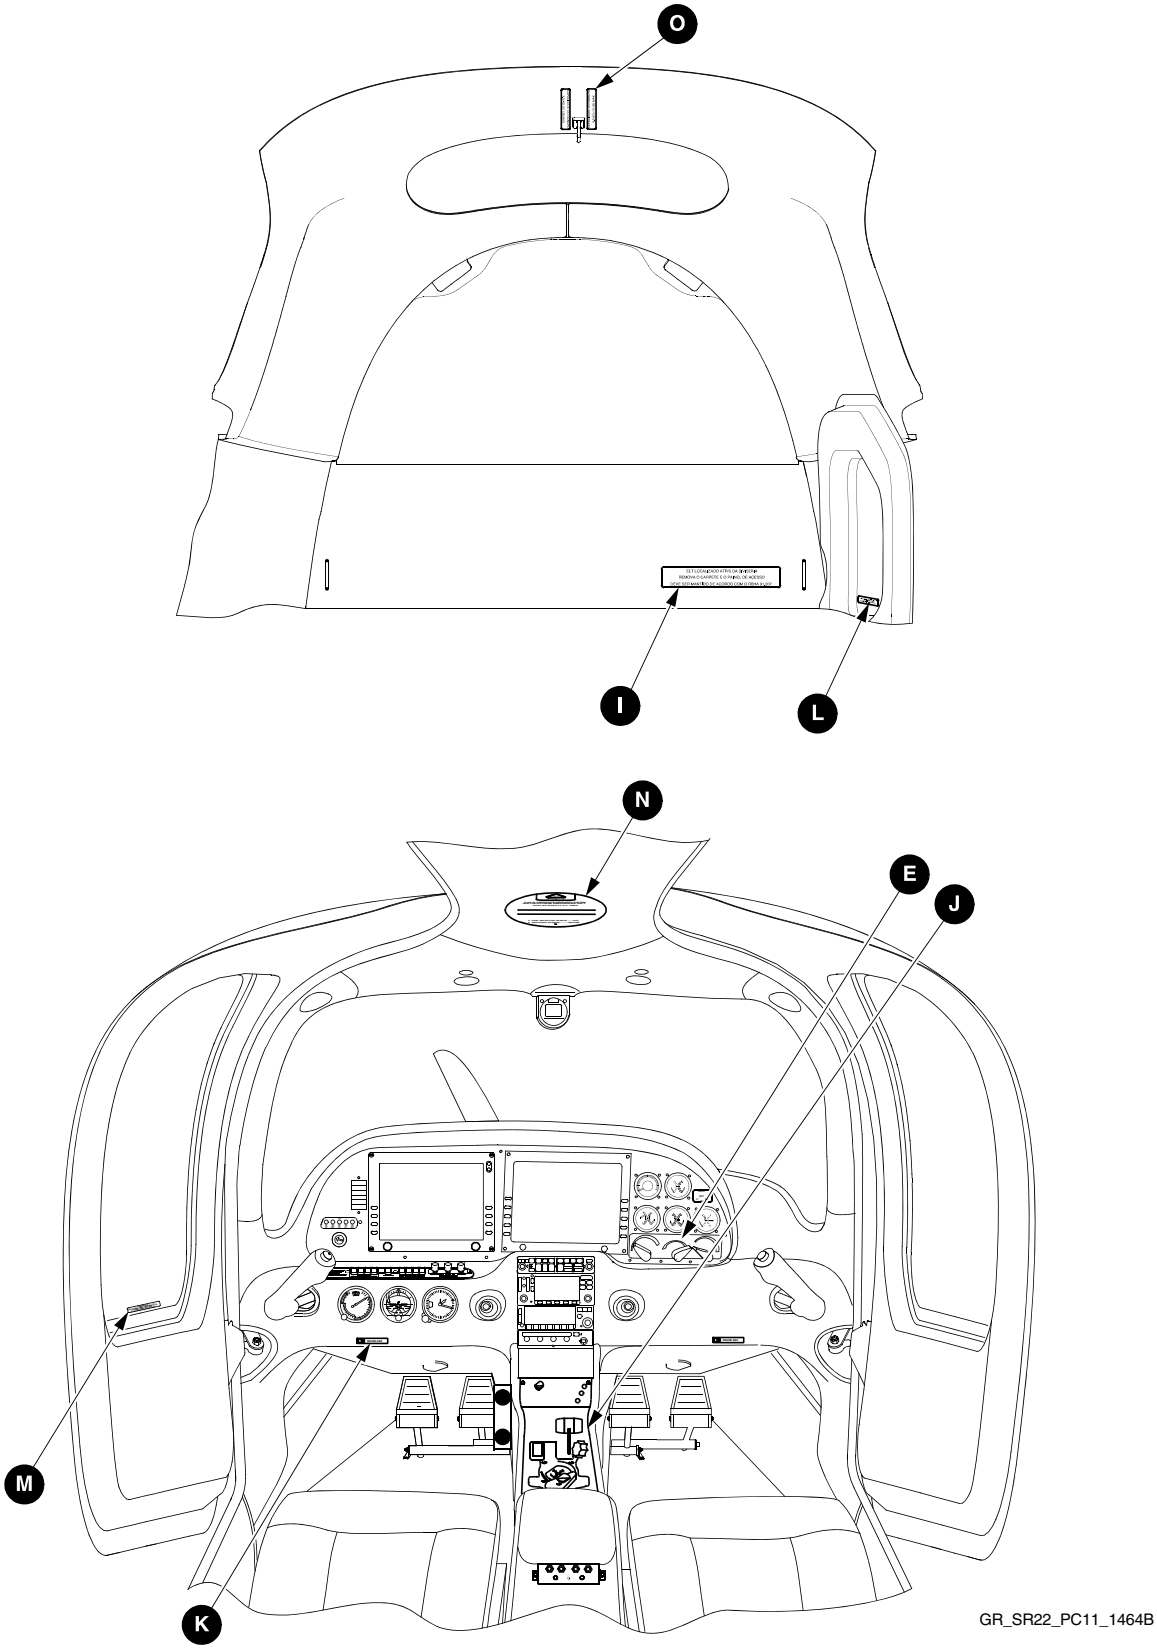

Figure-03
Interior Placards and Overlays - Serials w/ German (1 of 4)

EFFECTIVITY:
Serials w/ German

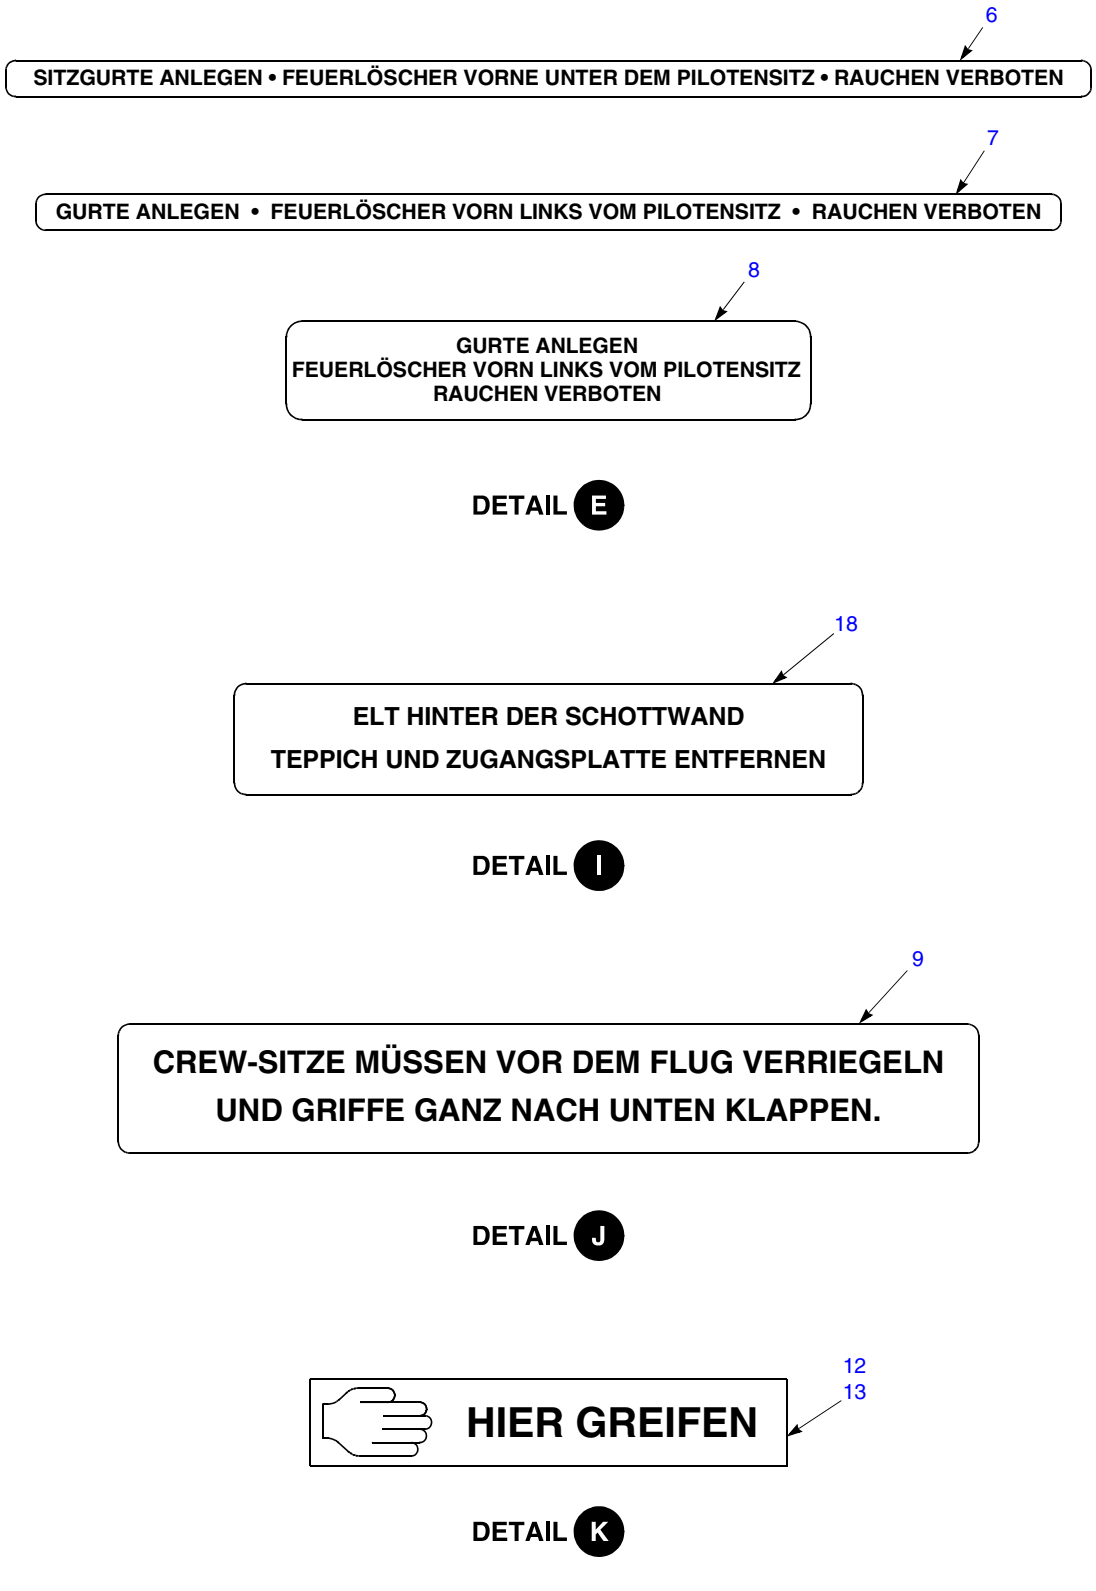

Figure-03
Interior Placards and Overlays - Serials w/ German (2 of 4)

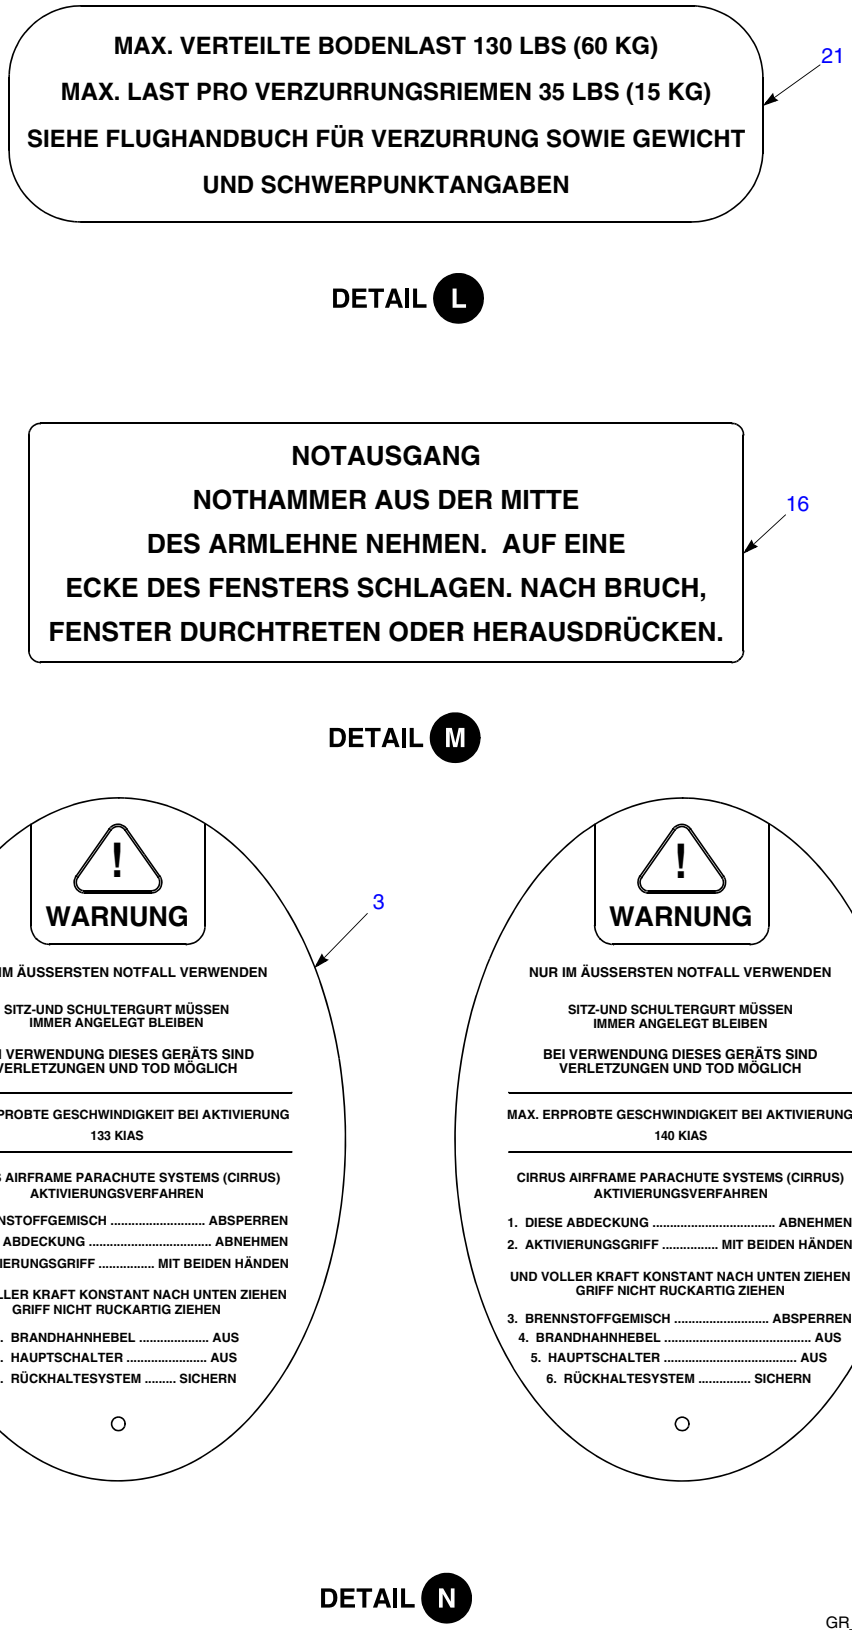

Figure-03
Interior Placards and Overlays - Serials w/ German (3 of 4)

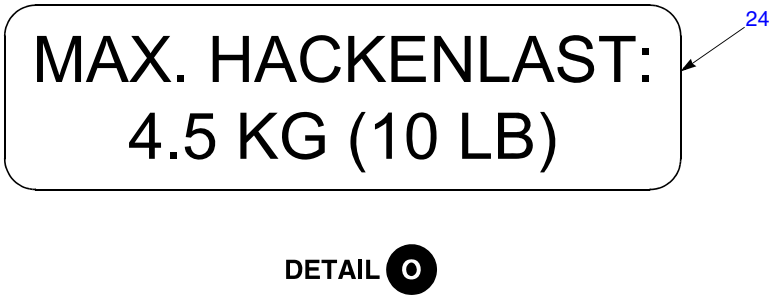

DETAIL O

GR_SR22_PC11_1468B

Figure-03

Interior Placards and Overlays - Serials w/ German (4 of 4)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		INTERIOR PLACARDS AND OVERLAYS, GERMAN	0002 / 0001	/	NP
	3	14264-005			·PLACARD, CAPS COVER	0002 / 0001	3914 / 0441	AR
	4	29925-003			·PLACARD, CAPS COVER	3915 / 0442	/	AR
	6	16344-004			·PLACARD, FASTEN SEAT BELT W/O PERSPECTIVE	0002	1862	AR
	7	16344-009			·PLACARD, FASTEN SEAT BELT W/O PERSPECTIVE	1863		AR
	8	18423-006			·PLACARD, FASTEN SEAT BELT W/ PERSPECTIVE	3026 / 0001	/	AR
	9	16345-002			·PLACARD, CONSOLE	0002 / 0001	/	AR
	12	15735-004	#		·PLACARD, GRAB	0002 / 0001	/	AR
	13	15735-009	#		·PLACARD, GRAB	0002 / 0001	/	AR
-	15	12436-006			·PLACARD, EMERGENCY EXIT	0002	3022	AR
					FOR SPARES USE P/N 12436-012			
	16	12436-012			·PLACARD, EMERGENCY EXIT	3023 / 0001	/	AR
	18	12579-005			·PLACARD, ELT LOCATION	0002 / 0001	/	AR
	21	12378-005			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	24	17137-003			·PLACARD, GARMENT BRACKET	1520 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

Intentionally Left Blank

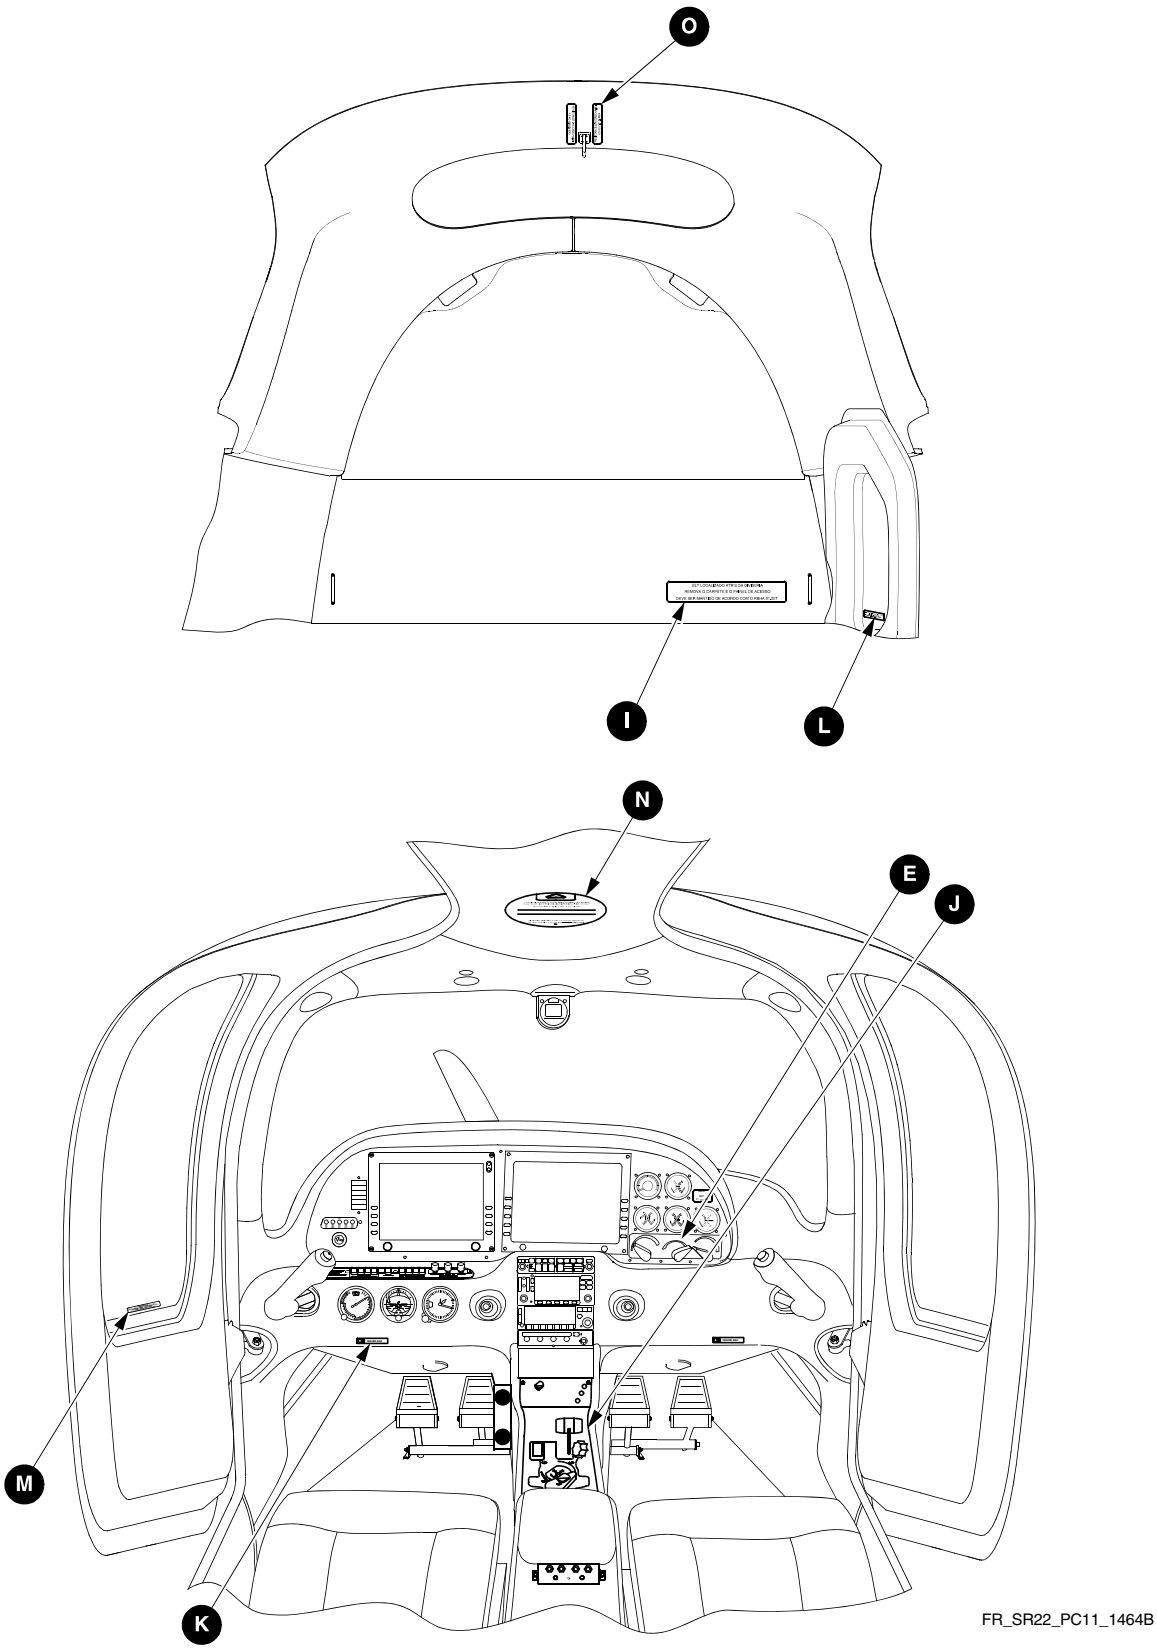

Figure-04
Interior Placards and Overlays - Serials w/ French (1 of 4)

EFFECTIVITY:
Serials w/ French

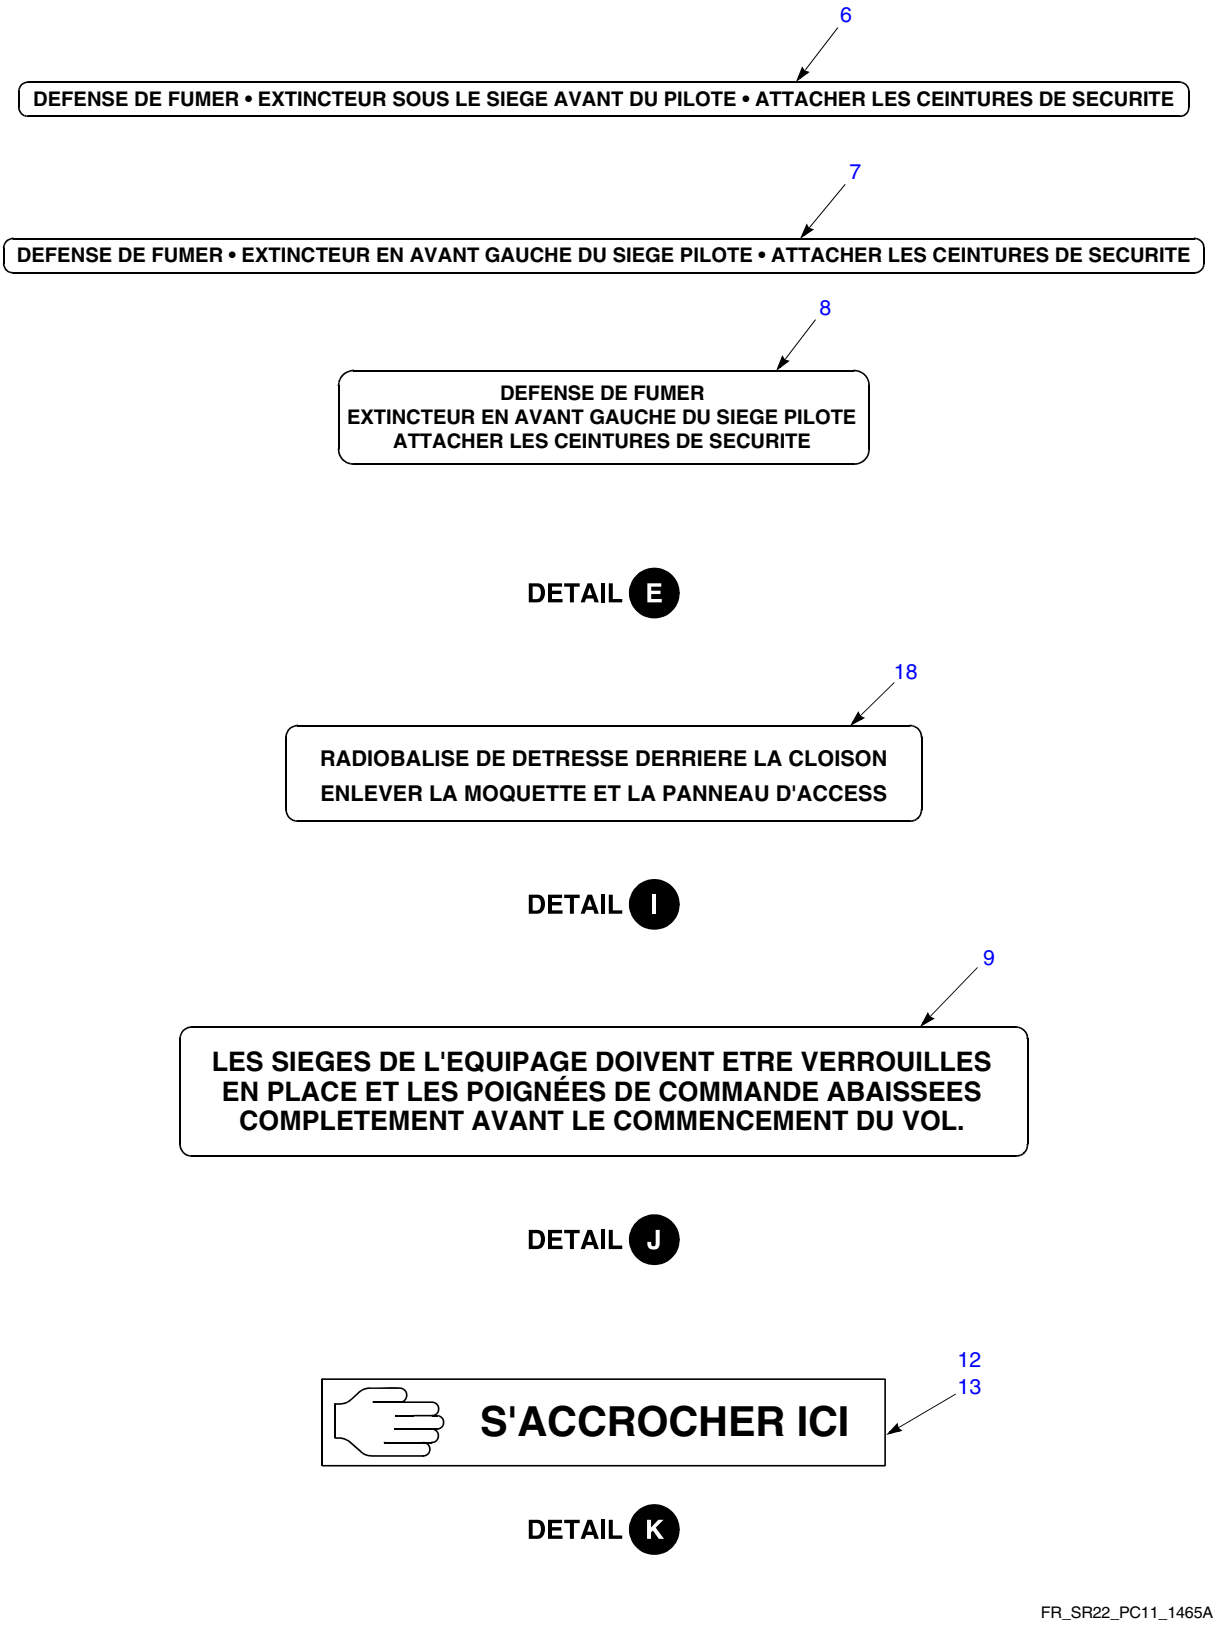

Figure-04
Interior Placards and Overlays - Serials w/ French (2 of 4)

EFFECTIVITY:
Serials w/ French

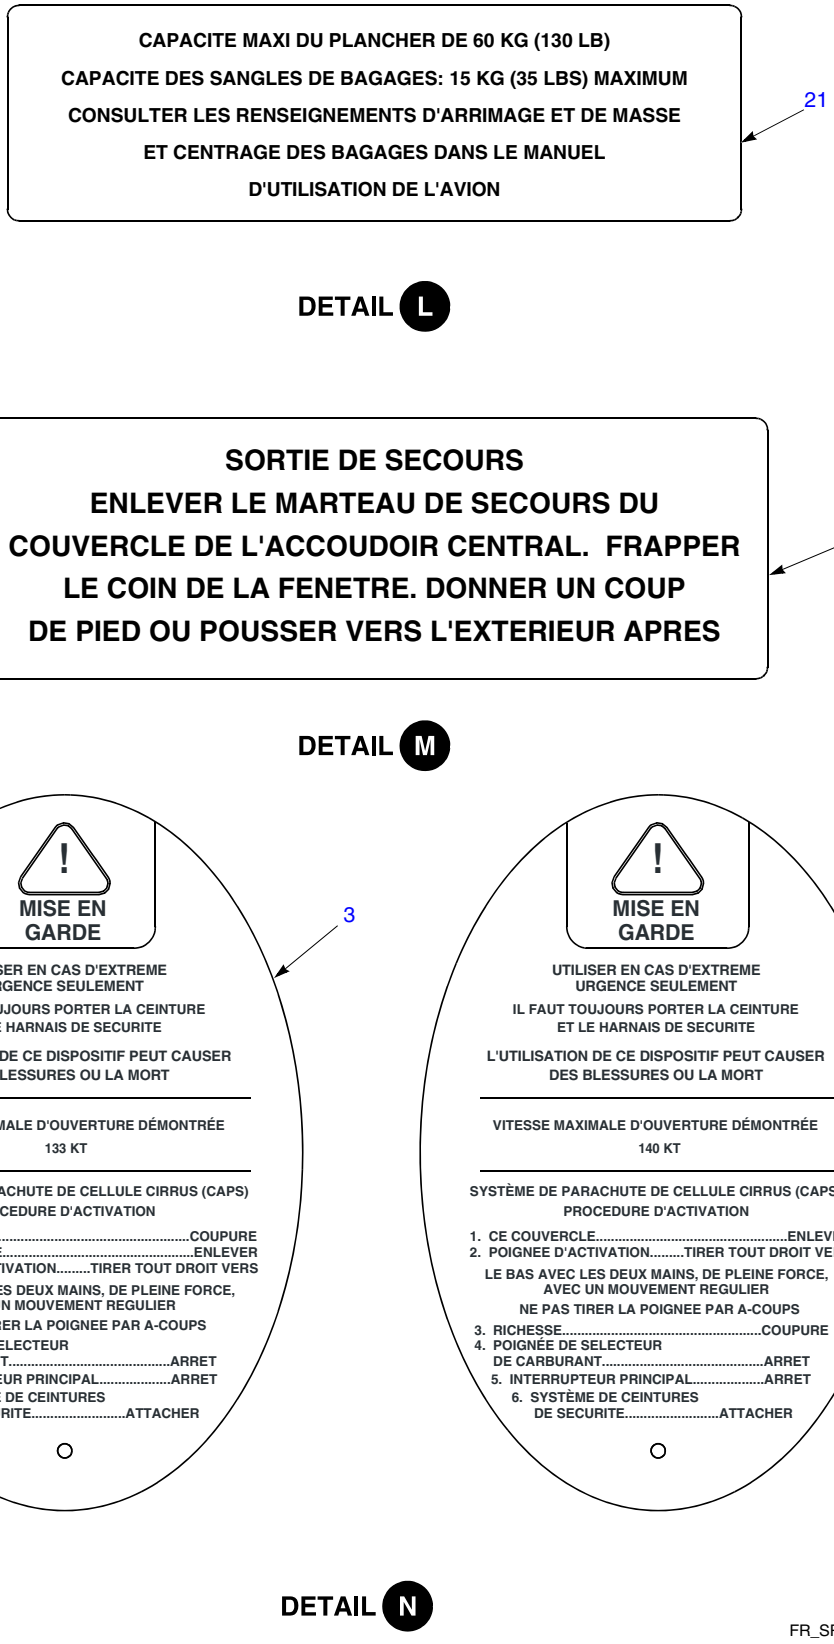

Figure-04
Interior Placards and Overlays - Serials w/ French (3 of 4)

FR_SR22_PC11_1468B

Figure-04
Interior Placards and Overlays - Serials w/ French (4 of 4)

EFFECTIVITY:
Serials w/ French

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04			INTERIOR PLACARDS AND OVERLAYS, FRENCH	0002 / 0001	/	NP
	3	14264-004			·PLACARD, CAPS COVER	0002 / 0001	3914 / 0441	AR
	4	29925-002			·PLACARD, CAPS COVER	3915 / 0442	/	AR
	6	16344-003			·PLACARD, FASTEN SEAT BELT W/O PERSPECTIVE	0002	1862	AR
	7	16344-008			·PLACARD, FASTEN SEAT BELT W/O PERSPECTIVE	1863		AR
	8	18423-005			·PLACARD, FASTEN SEAT BELT W/ PERSPECTIVE	3026 0001		AR
	9	16345-001			·PLACARD, CONSOLE	0002 / 0001	/	AR
	12	15735-003	#		·PLACARD, GRAB	0002 / 0001	/	AR
	13	15735-008	#		·PLACARD, GRAB	0002 / 0001	/	AR
	15	12436-005			·PLACARD, EMERGENCY EXIT	0002 / 0001	/	AR
	18	12579-004			·PLACARD, ELT LOCATION	0002 / 0001	/	AR
	21	12378-004			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	24	17137-002			·PLACARD, GARMENT BRACKET	1520 / 0001	/	AR
					SYMBOL NOTES:			
			#		CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.			

Intentionally Left Blank

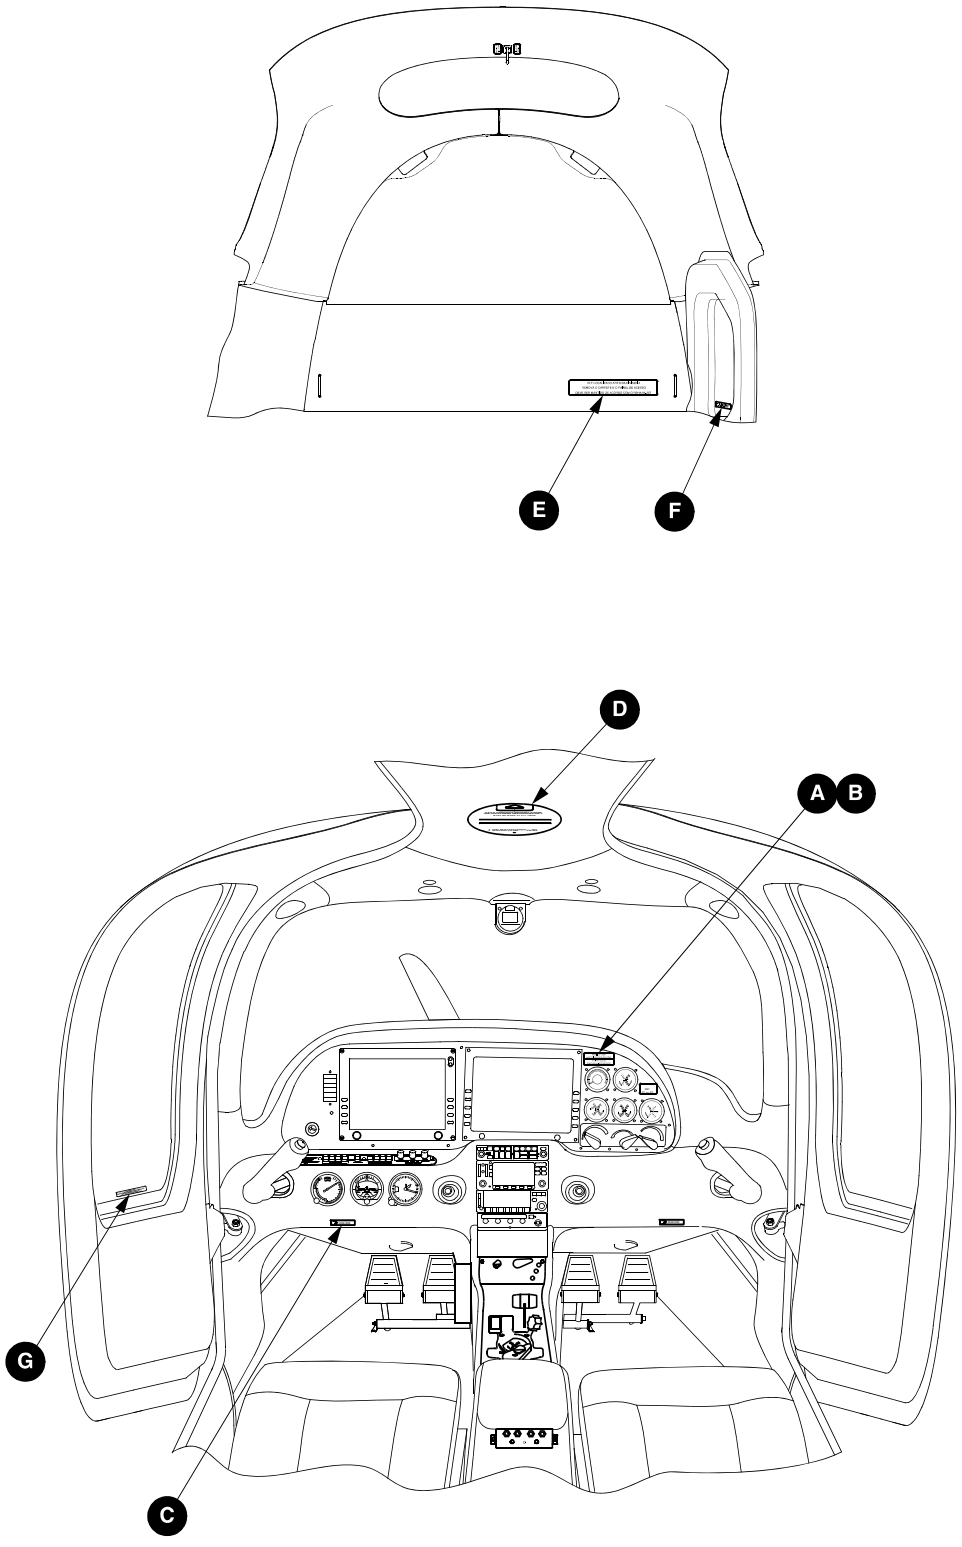

SP_SR22_PC11_1532

Figure-05
Interior Placards and Overlays - Serials w/ Spanish (1 of 3)

EFFECTIVITY:
Serials w/ Spanish

Figure-05

Interior Placards and Overlays - Serials w/ Spanish (2 of 3)

EFFECTIVITY:
Serials w/ Spanish

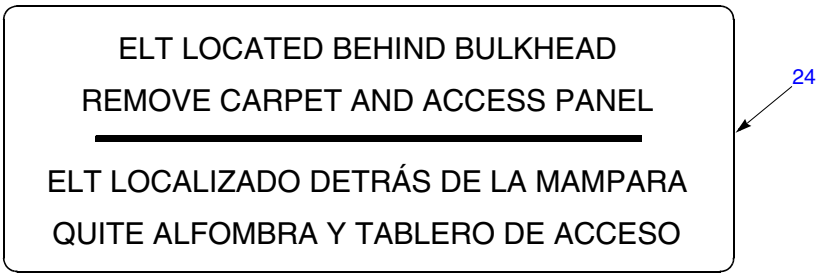

DETAIL E

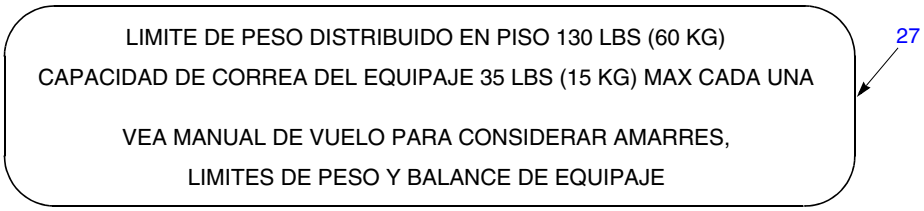

DETAIL F

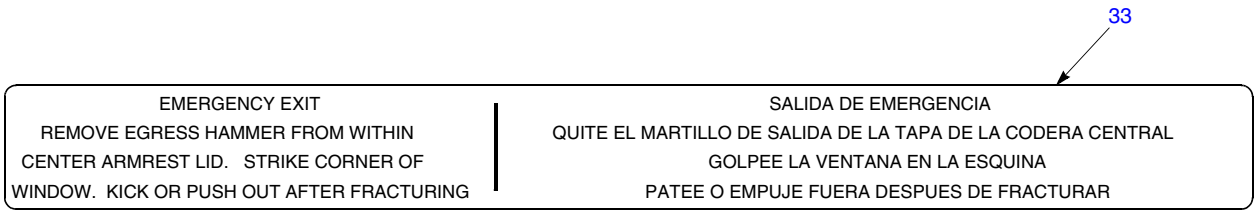

DETAIL G

SP_SR22_PC11_1534A

Figure-05
Interior Placards and Overlays - Serials w/ Spanish (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05	#		INTERIOR PLACARDS AND OVERLAYS, SPANISH	0002 / 0001	/	NP
	3	15435-001			·PLACARD, NO SMOKING & FASTEN SEATBELTS	0002 / 0001	/	AR
	6	15436-001			·PLACARD, FIRE EXTINGUISHER	0002 / 0001	/	AR
	9	15735-002	#		·PLACARD, GRAB	0002 / 0001	/	AR
	12	15735-007	#		·PLACARD, GRAB	0002 / 0001	/	AR
	15	14264-003			·PLACARD, CAPS COVER, SPANISH	0002 / 0001	3914 / 0441	AR
	18	29926-008			·PLACARD, CAPS COVER, SPANISH	3915 / 0442	/	AR
-	21	12579-003			·PLACARD, ELT LOCATION	0002	0493	AR
					FOR SPARES USE P/N 12579-006			
	24	12579-006			·PLACARD, ELT LOCATION	0494 / 0001	/	AR
	27	12378-003			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
-	30	12436-004			·PLACARD, EMERGENCY EXIT	0002	0493	AR
					FOR SPARES USE P/N 12436-007			
	33	12436-007			·PLACARD, EMERGENCY EXIT	0494 / 0001	/	AR
					SYMBOL NOTES:			
			#		CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.			

EFFECTIVITY:
All

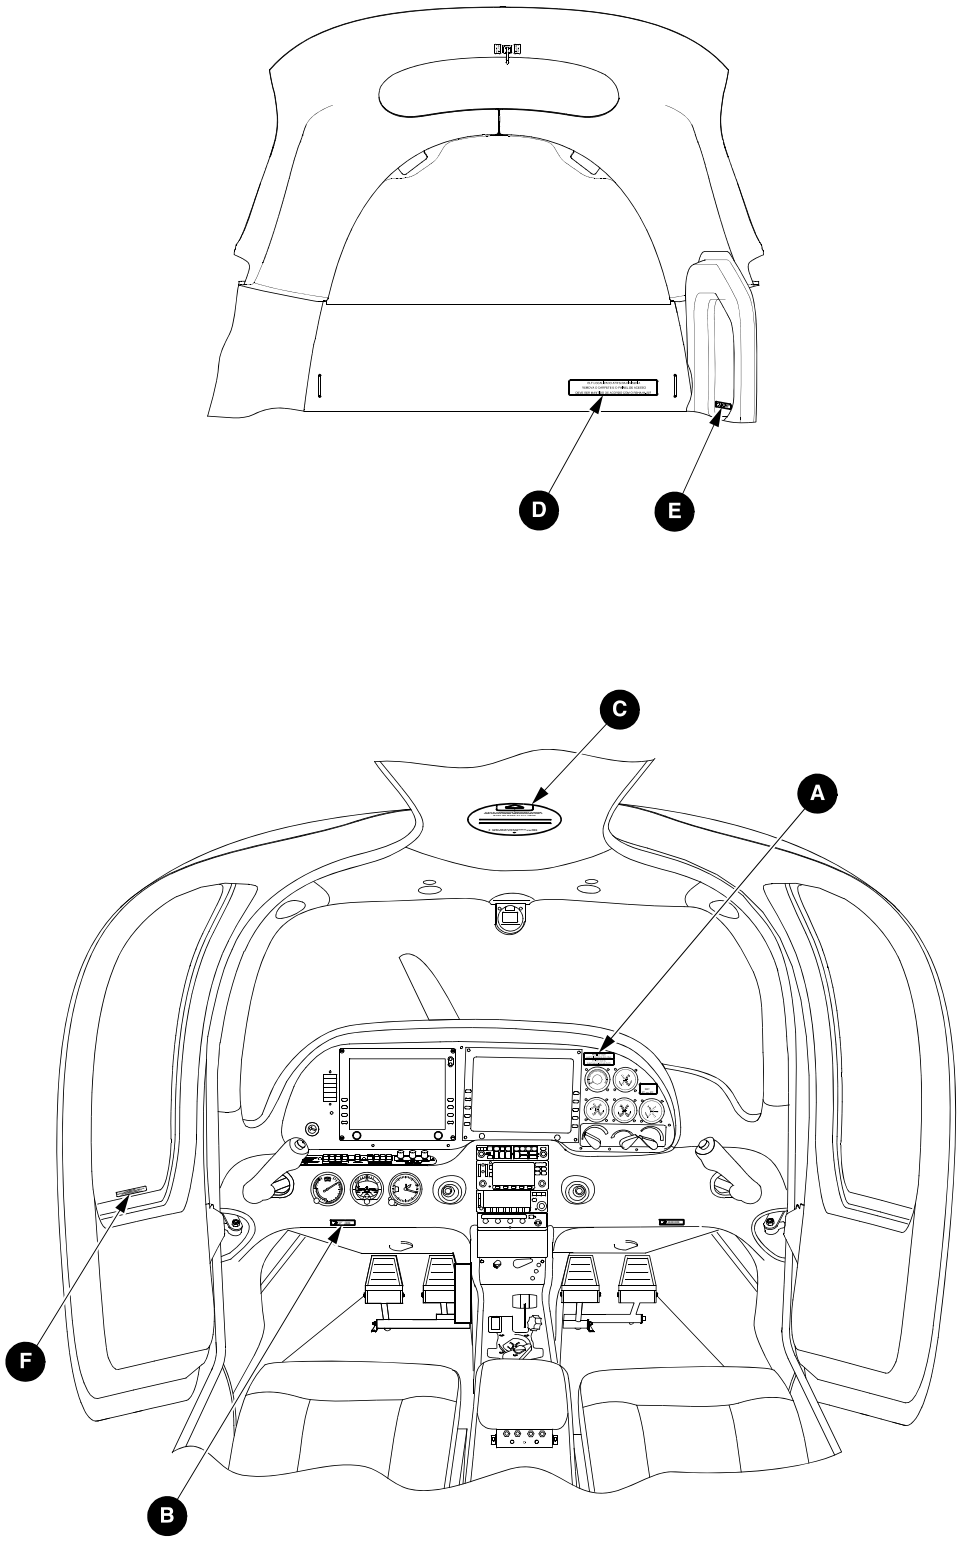

EM_SR22_PC11_1926

Figure-06
Interior Placards and Overlays - Serials w/ Argentine (1 of 3)

EFFECTIVITY:
Serials w/ Argentine

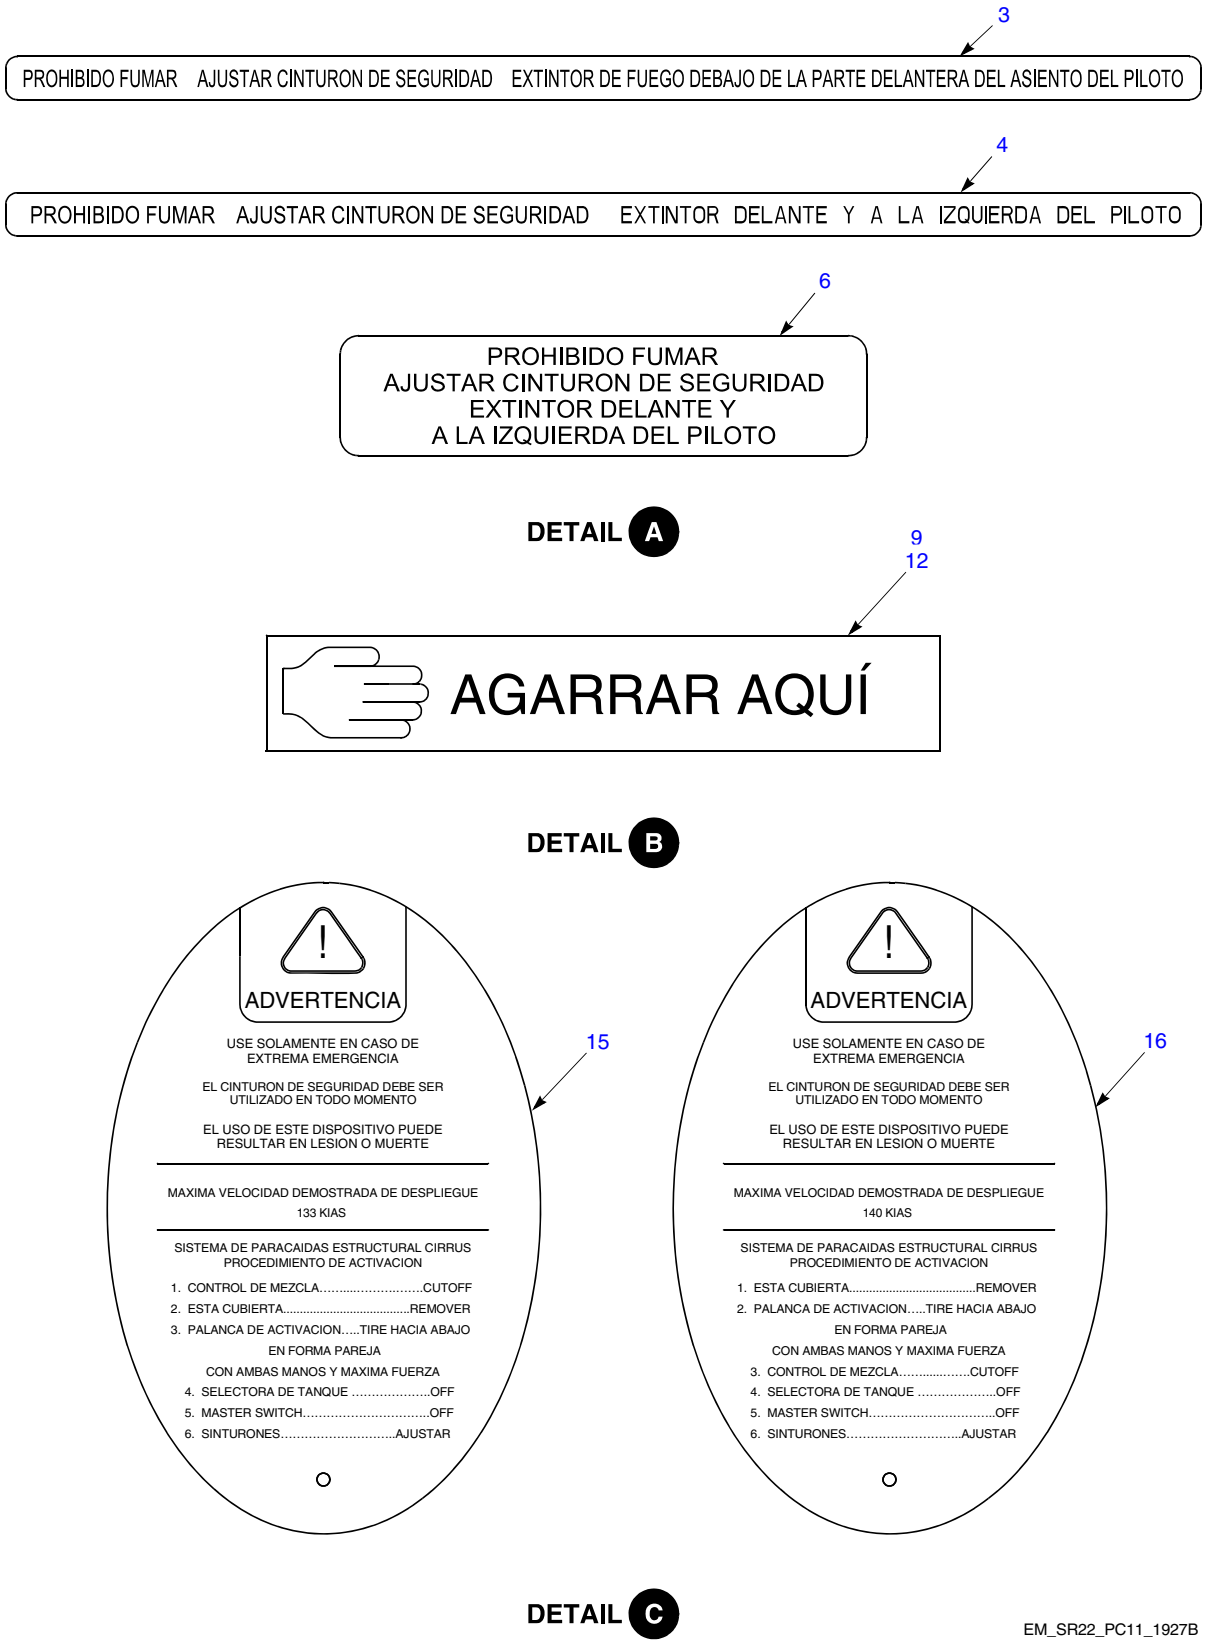

Figure-06

Interior Placards and Overlays - Serials w/ Argentine (2 of 3)

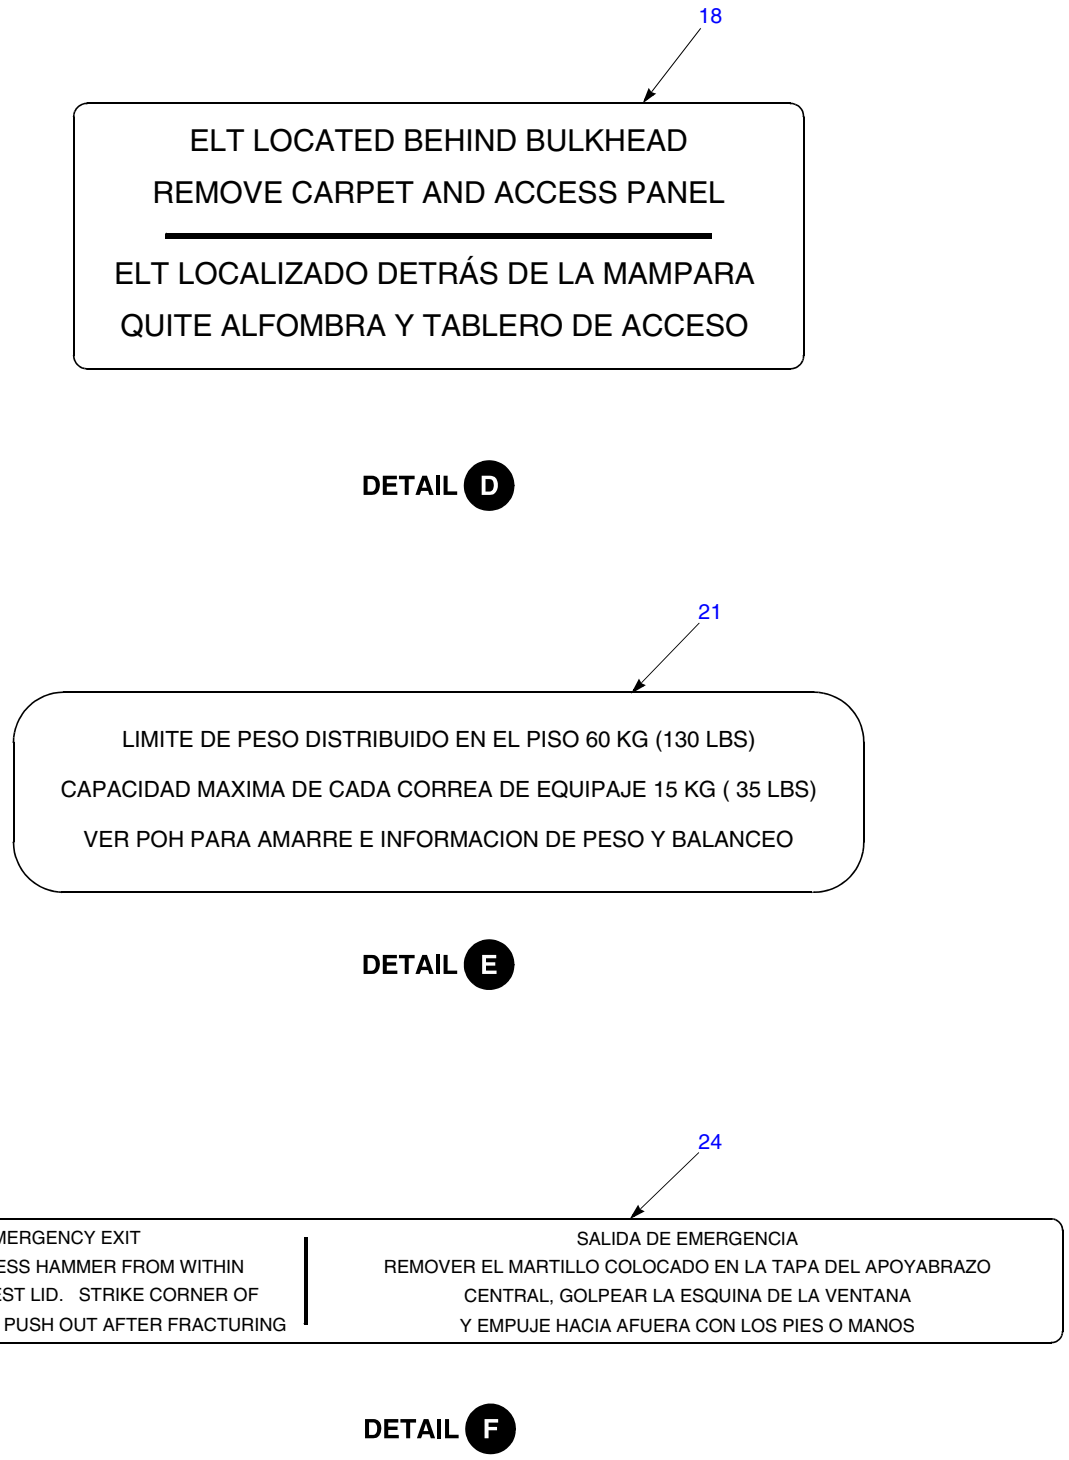

Figure-06
Interior Placards and Overlays - Serials w/ Argentine (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 06	**		INTERIOR PLACARDS AND OVERLAYS, ARGENTINE	0002 / 0001	/	NP
	3	16344-011	@		·PLACARD, NO SMOKING & FASTEN SEATBELTS	0002	1862	AR
	4	16344-007	@		·PLACARD, NO SMOKING & FASTEN SEATBELTS	1863		AR
	6	24278-019			·PLACARD, NO SMOKING & FASTEN SEATBELTS	3026 / 0001	/	AR
	9	15735-002	#		·PLACARD, GRAB	0002 / 0001	/	AR
	12	15735-007	#		·PLACARD, GRAB	0002 / 0001	/	AR
	15	14264-008			·PLACARD, CAPS COVER	0002 / 0001	3914 / 0441	AR
	16	29925-005			·PLACARD, CAPS COVER	3915 / 0442	/	AR
	18	12579-006			·PLACARD, ELT LOCATION	0002 / 0001	/	AR
	21	12378-007			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	24	12436-010			·PLACARD, EMERGENCY EXIT	0002 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

@ INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.

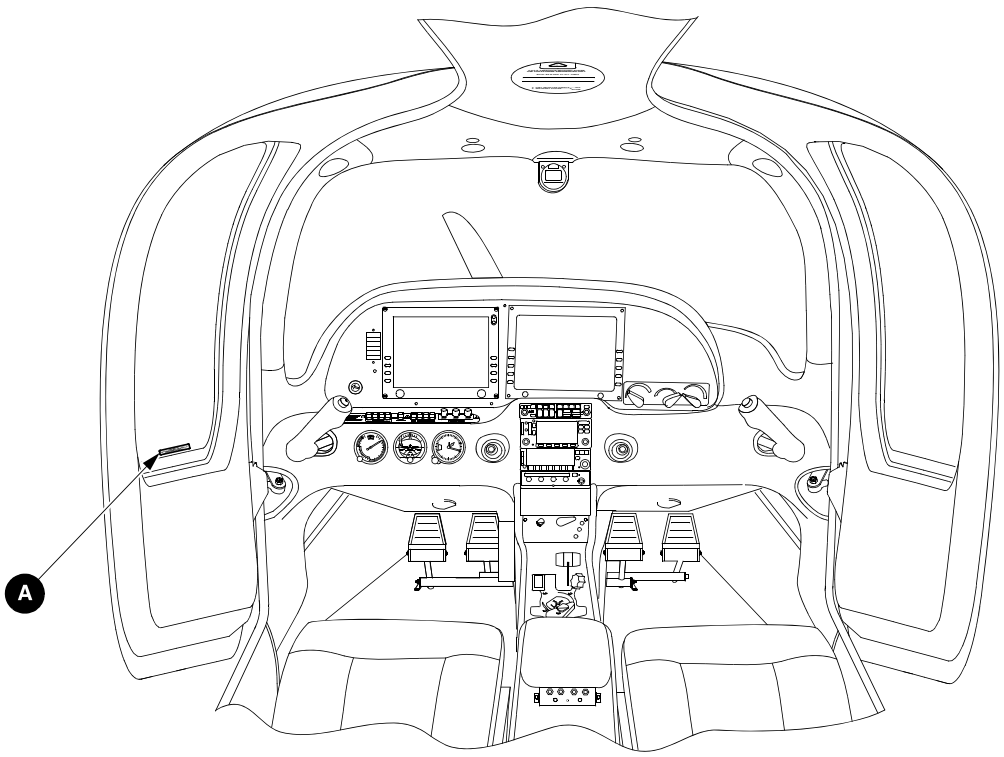

DETAIL A

RU_SR22_PC11_1959

Figure-07
Interior Placards and Overlays - Serials w/ Russian

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 07	**		INTERIOR PLACARDS AND OVERLAYS, RUSSIAN	0002 / 0001	/	NP
	3	12436-009			·PLACARD, EMERGENCY EXIT	0002 / 0001	/	AR

EFFECTIVITY:
All

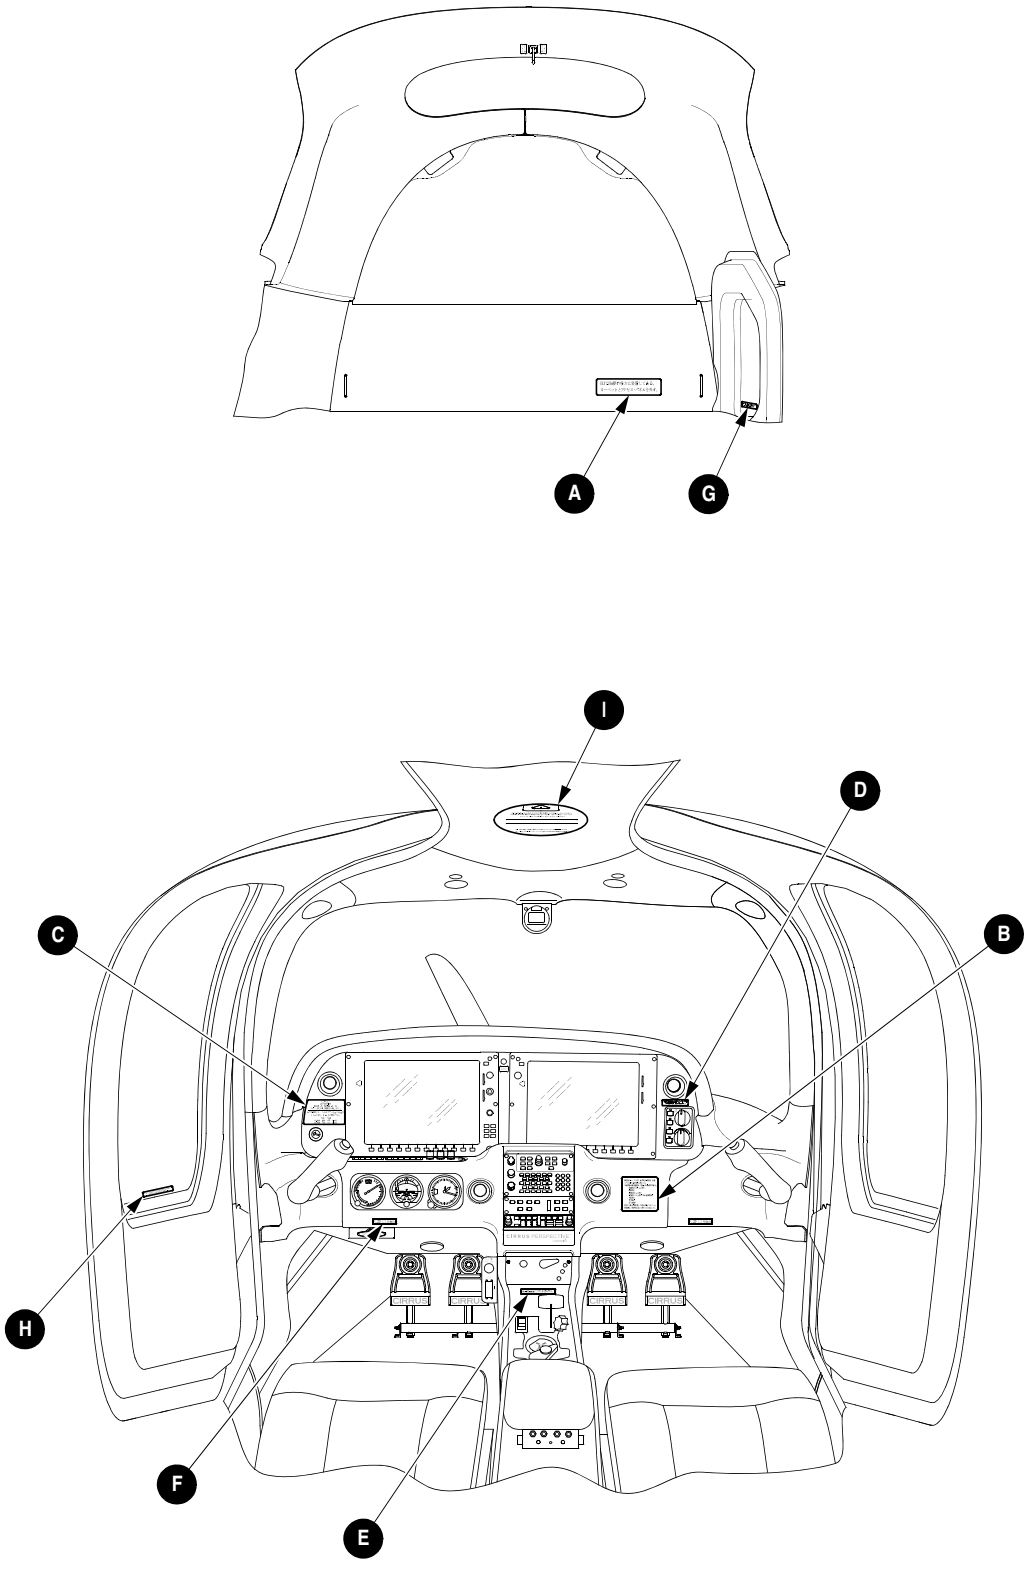

JP_SR22_PC11_1965A

Figure-08

Interior Placards and Overlays - Serials w/ Japanese (1 of 3)

EFFECTIVITY:
Serials w/ Japanese

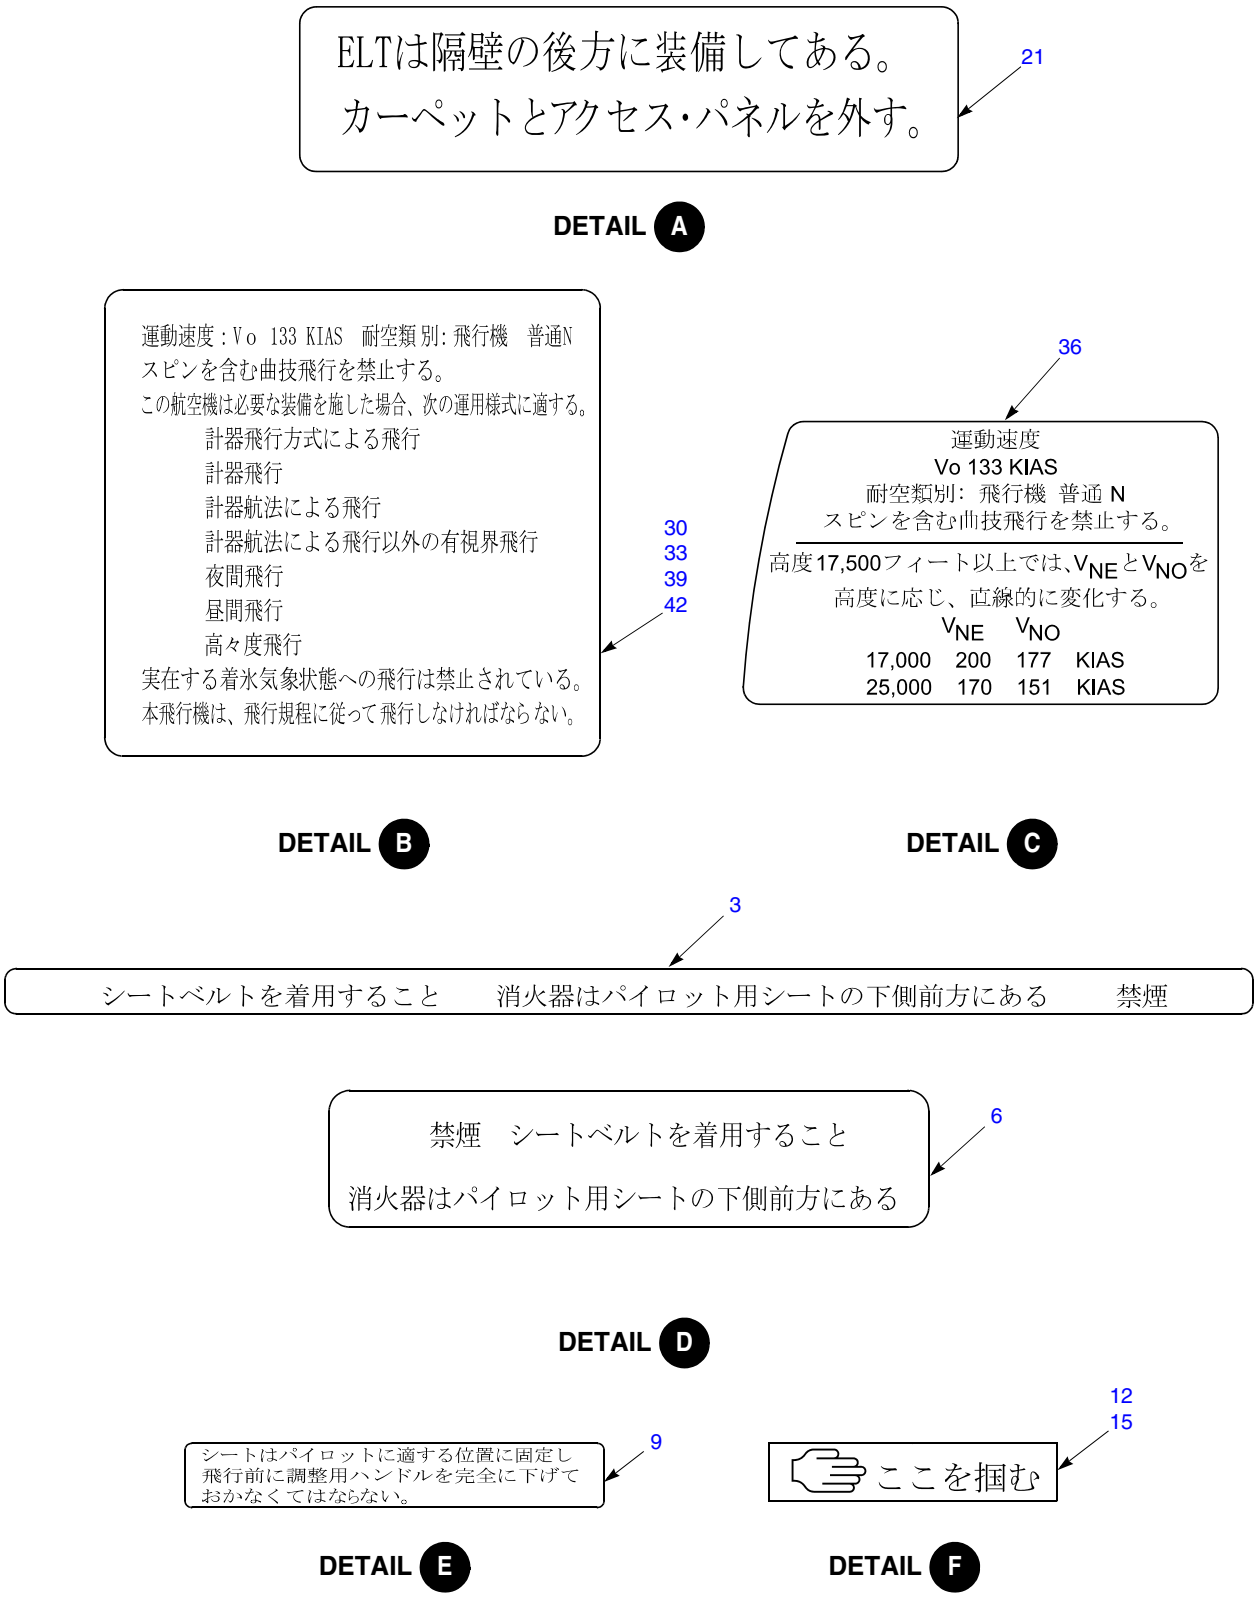

Figure-08

Interior Placards and Overlays - Serials w/ Japanese (2 of 3)

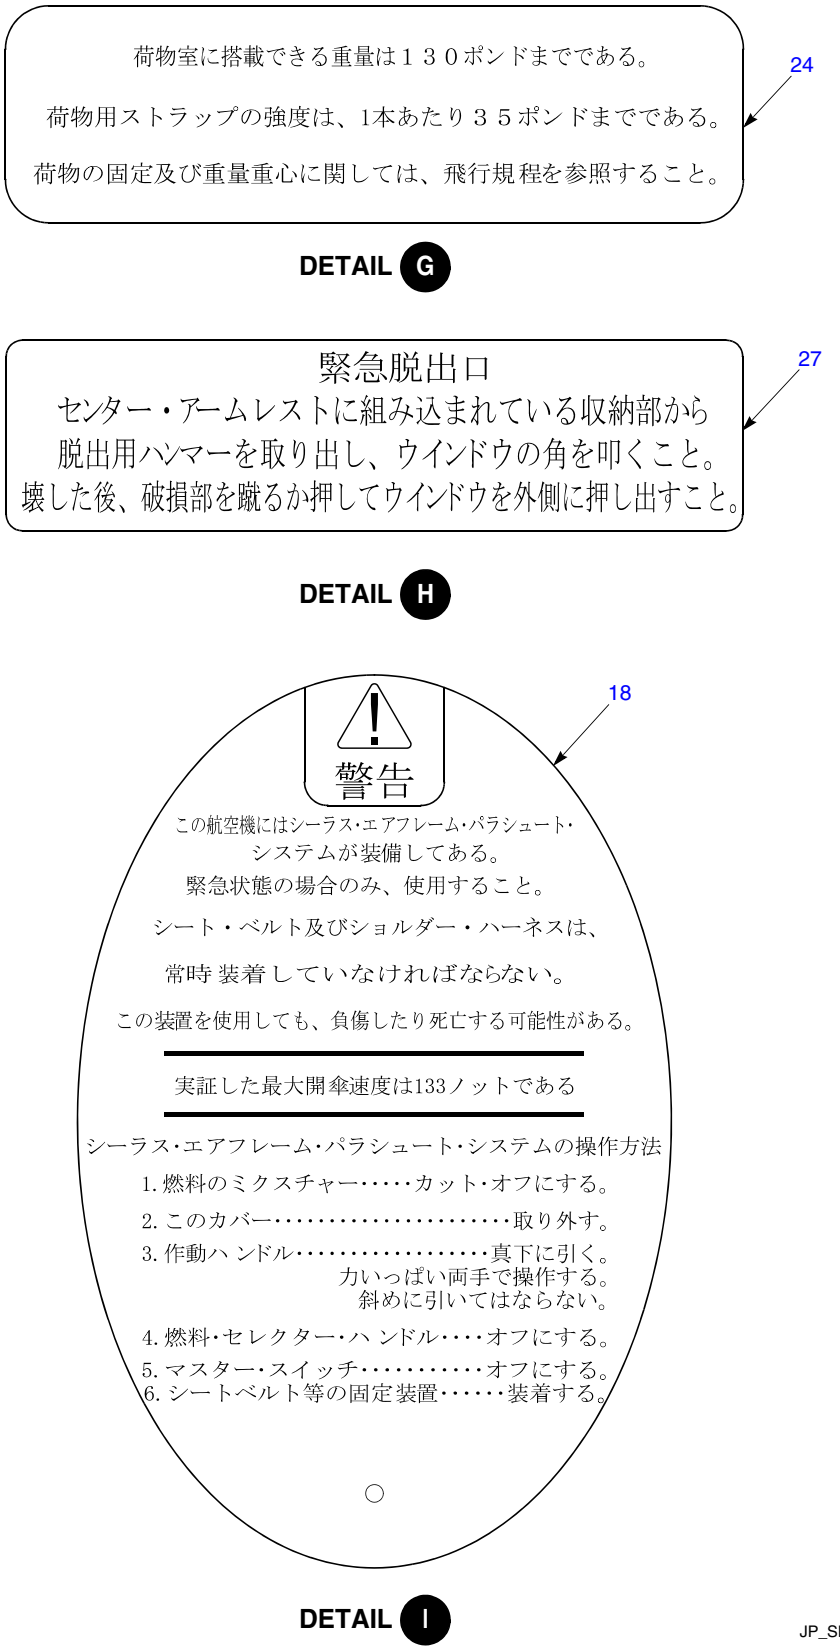

Figure-08
Interior Placards and Overlays - Serials w/ Japanese (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 08	**		INTERIOR PLACARDS AND OVERLAYS, JAPANESE	0002 / 0001	/	NP
	3	21180-013	@		·PLACARD, NO SMOKING & FASTEN SEATBELTS	0002		AR
	6	21180-012			·PLACARD, NO SMOKING & FASTEN SEATBELTS	3026 / 0001	/	AR
	9	21180-016			·PLACARD, CONSOLE	0002 / 0001	/	AR
	12	21180-019	#		·PLACARD, GRAB	0002 / 0001	/	AR
	15	21180-020	#		·PLACARD, GRAB	0002 / 0001	/	AR
	18	21180-015			·PLACARD, CAPS COVER	0002 / 0001	/	AR
	21	21180-008			·PLACARD, ELT LOCATION	0002 / 0001	/	AR
	24	21180-009			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	27	21180-010			·PLACARD, EMERGENCY EXIT	0002 / 0001	/	AR
	30	21180-011			·PLACARD, MANEUVERING, VO W/ PERSPECTIVE	3026		AR
	33	21180-044			·PLACARD, MANEUVERING, VO W/ FIKI	3403		AR
	36	21180-043			·PLACARD, MANEUVERING, VO	/ 0001	/	AR
	39	21180-047			·PLACARD, BOLSTER PANEL	/ 0001	/	AR
	42	21180-045			·PLACARD, BOLSTER PANEL W/ FIKI	/ 0001	/	AR
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PART IDENTIFICATION.			
			#		CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.			
			@		INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			

EFFECTIVITY:
All

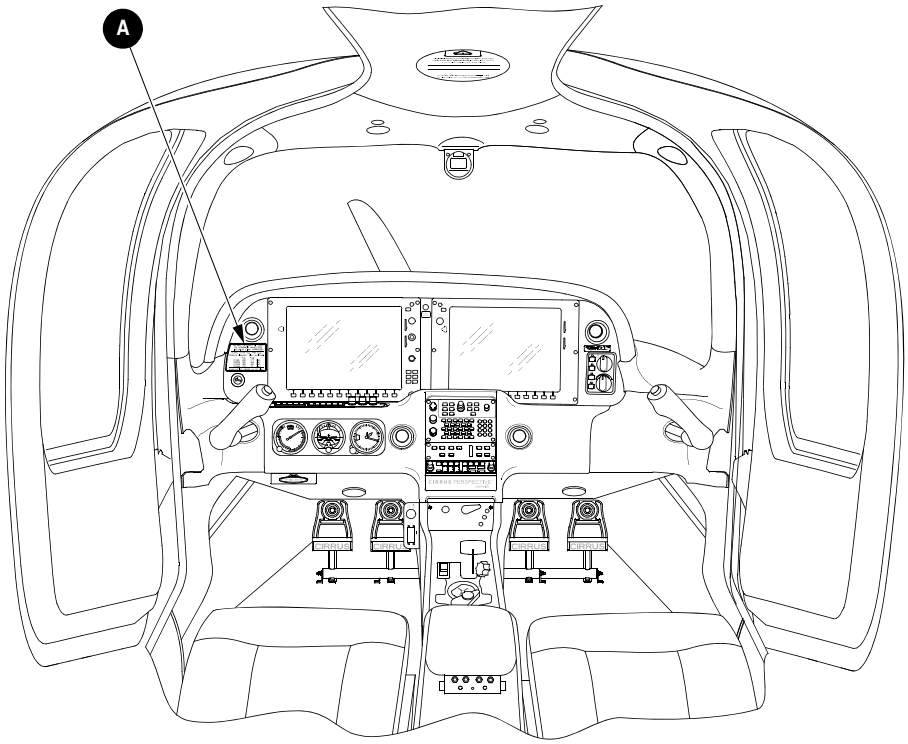

3

NORMAL CATEGORY AIRPLANE
NO ACROBATIC MANEUVERS
INCLUDING SPINS, APPROVED

ABOVE 17,500 V_{NE} AND V_{NO}
REDUCE LINEARLY WITH ALTITUDE:

	V_{NE}	V_{NO}	
17, 500	200	177	KIAS
20, 000	190	168	KIAS
22, 500	180	160	KIAS
25, 000	170	151	KIAS

MANEUVERING SPEED: Vo 133 KIAS

Serials 22T-0001 thru 22T-0441.

6

NORMAL CATEGORY AIRPLANE
NO ACROBATIC MANEUVERS
INCLUDING SPINS, APPROVED

ABOVE 17,500 V_{NE} AND V_{NO}
REDUCE LINEARLY WITH ALTITUDE:

	V_{NE}	V_{NO}	
17, 500	205	176	KIAS
20, 000	195	167	KIAS
22, 500	185	158	KIAS
25, 000	175	150	KIAS

MANEUVERING SPEED: Vo 140 KIAS

Serials 22T-0442 & subs.

DETAIL A

SA_SR22_PC11_2064A

Figure-09
Interior Placards and Overlays - Serials w/ South African

EFFECTIVITY:
Serials w/ South African

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 09	**		INTERIOR PLACARDS AND OVERLAYS, SOUTH AFRICAN	/ 0001	/	NP
	3	22042-004			·PLACARD, MANEUVERING, VO	/ 0001	/ 0441	AR
	6	22042-005			·PLACARD, MANEUVERING, VO	/ 0442	/	AR

EFFECTIVITY:
All

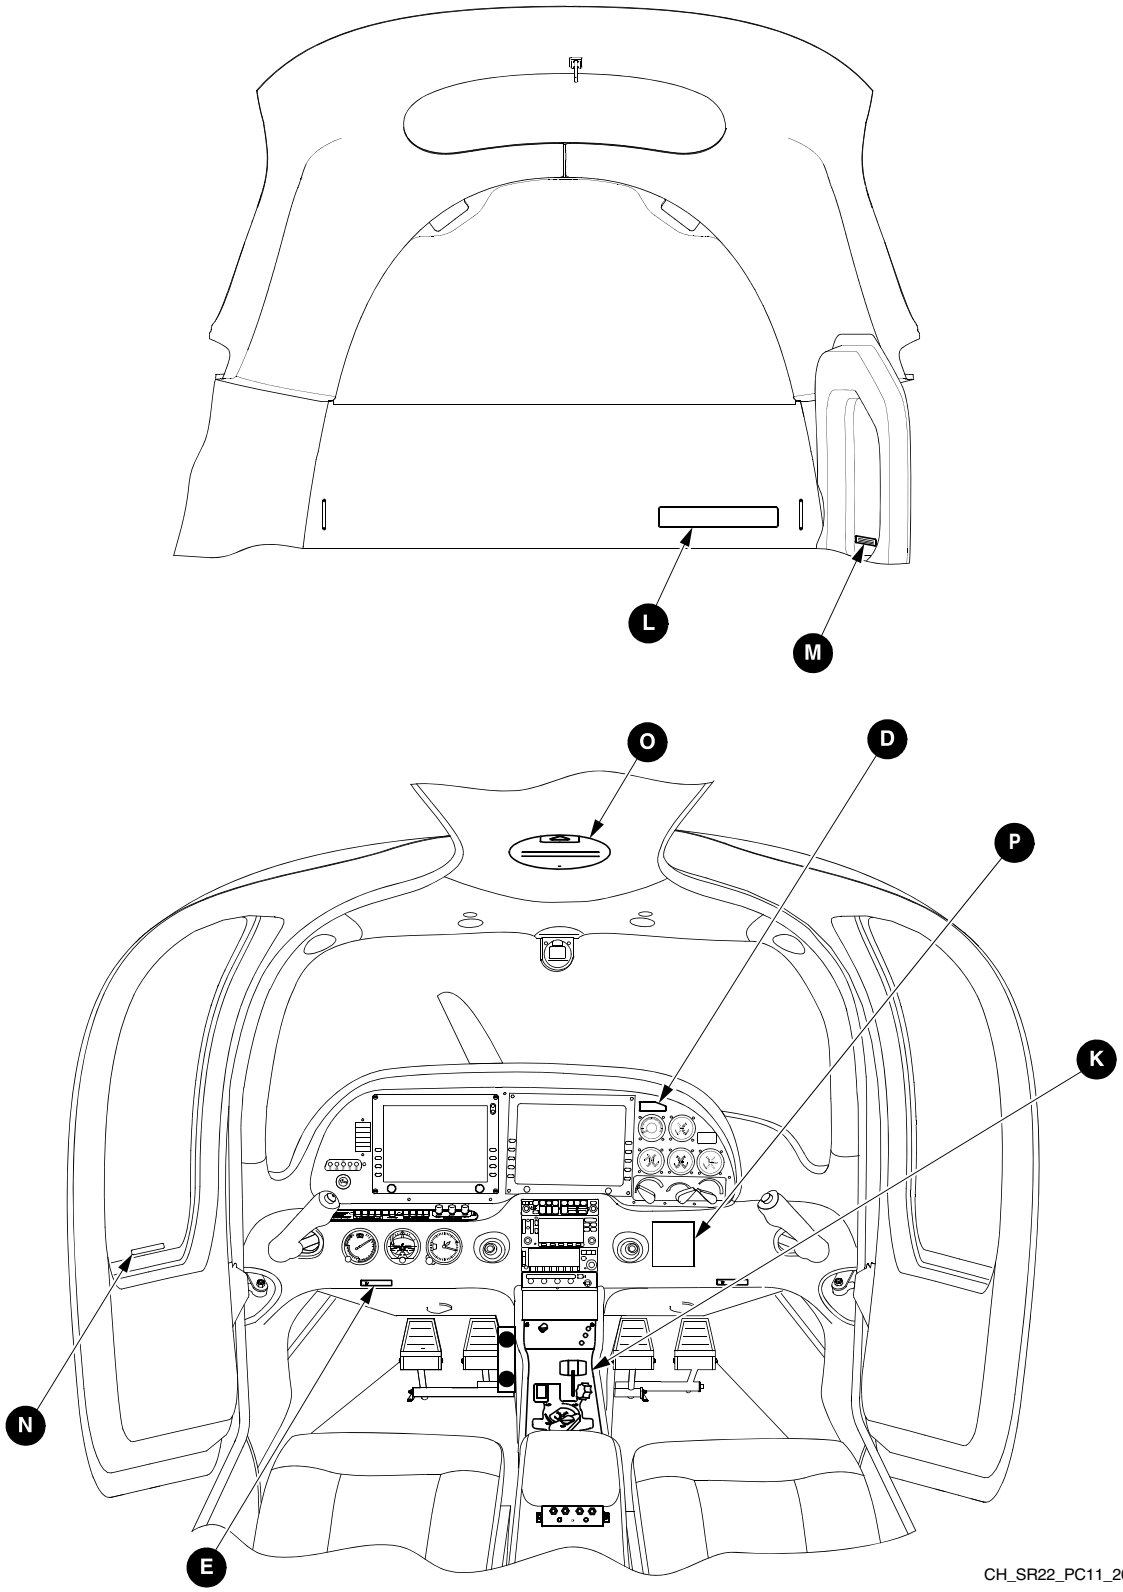

Figure-10
Interior Placards and Overlays - Serials w/ Chinese (1 of 4)

EFFECTIVITY:
Serials w/ Chinese

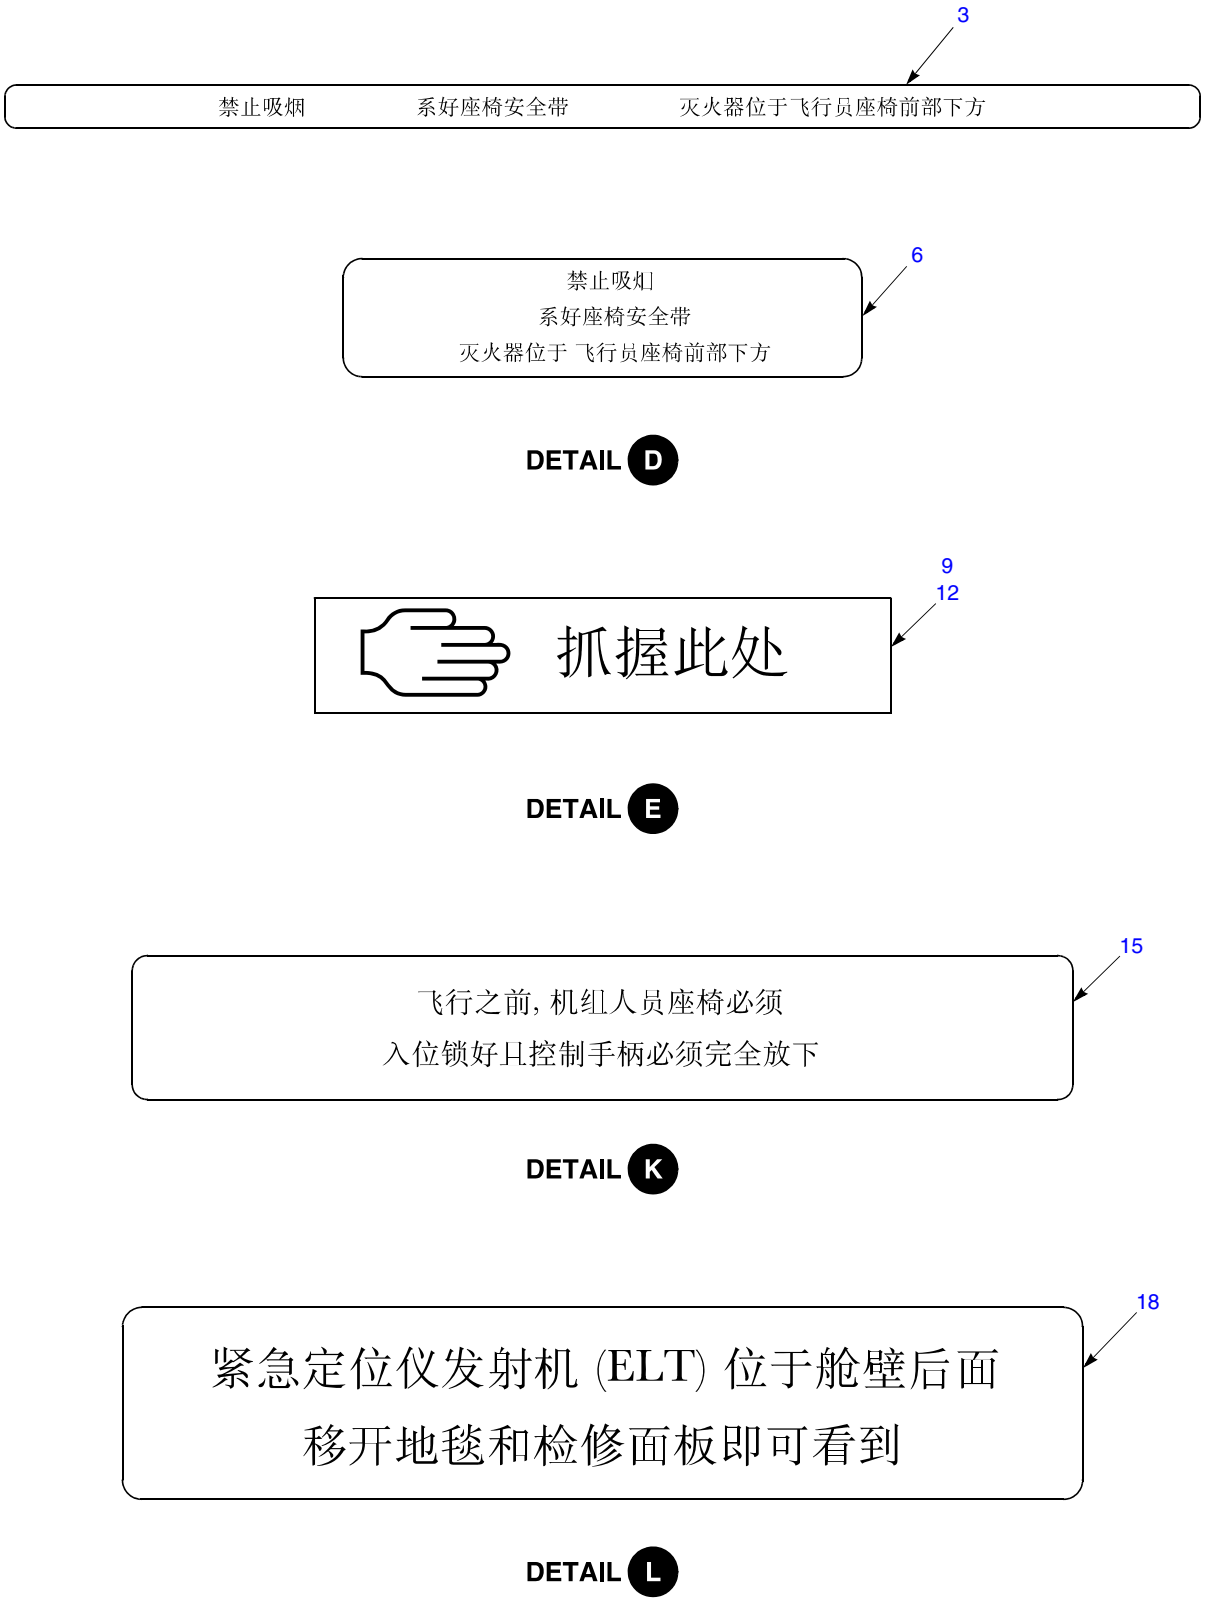

Figure-10
Interior Placards and Overlays - Serials w/ Chinese (2 of 4)

Figure-10
Interior Placards and Overlays - Serials w/ Chinese (3 of 4)

EFFECTIVITY:
Serials w/ Chinese

28

FEET 英尺	METERS 米	FEET 英尺	METERS 米	FEET 英尺	METERS 米
100	30	2400	732	6500	1981
200	61	2600	792	7000	2134
300	91	2800	853	7500	2286
400	122	3000	914	8000	2438
500	152	3200	975	8500	2591
600	183	3400	1036	9000	2743
700	213	3600	1097	9500	2896
800	244	3800	1158	10000	3048
900	274	4000	1219	10500	3200
1000	305	4200	1280	11000	3353
1200	366	4400	1341	12000	3658
1400	427	4600	1402	13000	3962
1600	488	4800	1463	14000	4267
1800	549	5000	1524	15000	4572
2000	610	5500	1676	16000	4877
2200	671	6000	1829	17000	5182

DETAIL P

CH_SR22_PC11_2146

Figure-10
Interior Placards and Overlays - Serials w/ Chinese (4 of 4)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 10			INTERIOR PLACARDS AND OVERLAYS, CHINESE	0002		NP
	3	16344-003			·PLACARD, FASTEN SEAT BELT W/O PERSPECTIVE	0002		AR
	6	18423-005			·PLACARD, FASTEN SEAT BELT W/ PERSPECTIVE	3026		AR
	9	15735-003	#		·PLACARD, GRAB, WHITE TEXT	0002		AR
	12	15735-008	#		·PLACARD, GRAB, BLACK TEXT	0002		AR
	15	16345-001			·PLACARD, CONSOLE	0002		AR
	18	12579-004			·PLACARD, ELT LOCATION	0002		AR
	21	12378-004			·PLACARD, BAGGAGE DOOR	0002		AR
	24	12436-005			·PLACARD, EMERGENCY EXIT	0002		AR
	27	14264-004			·PLACARD, CAPS COVER	0002		AR
	28	34390-001			·PLACARD, ALTITUDE CONVERSION TABLE	0002		AR
					SYMBOL NOTES:			
			#		CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.			

Intentionally Left Blank

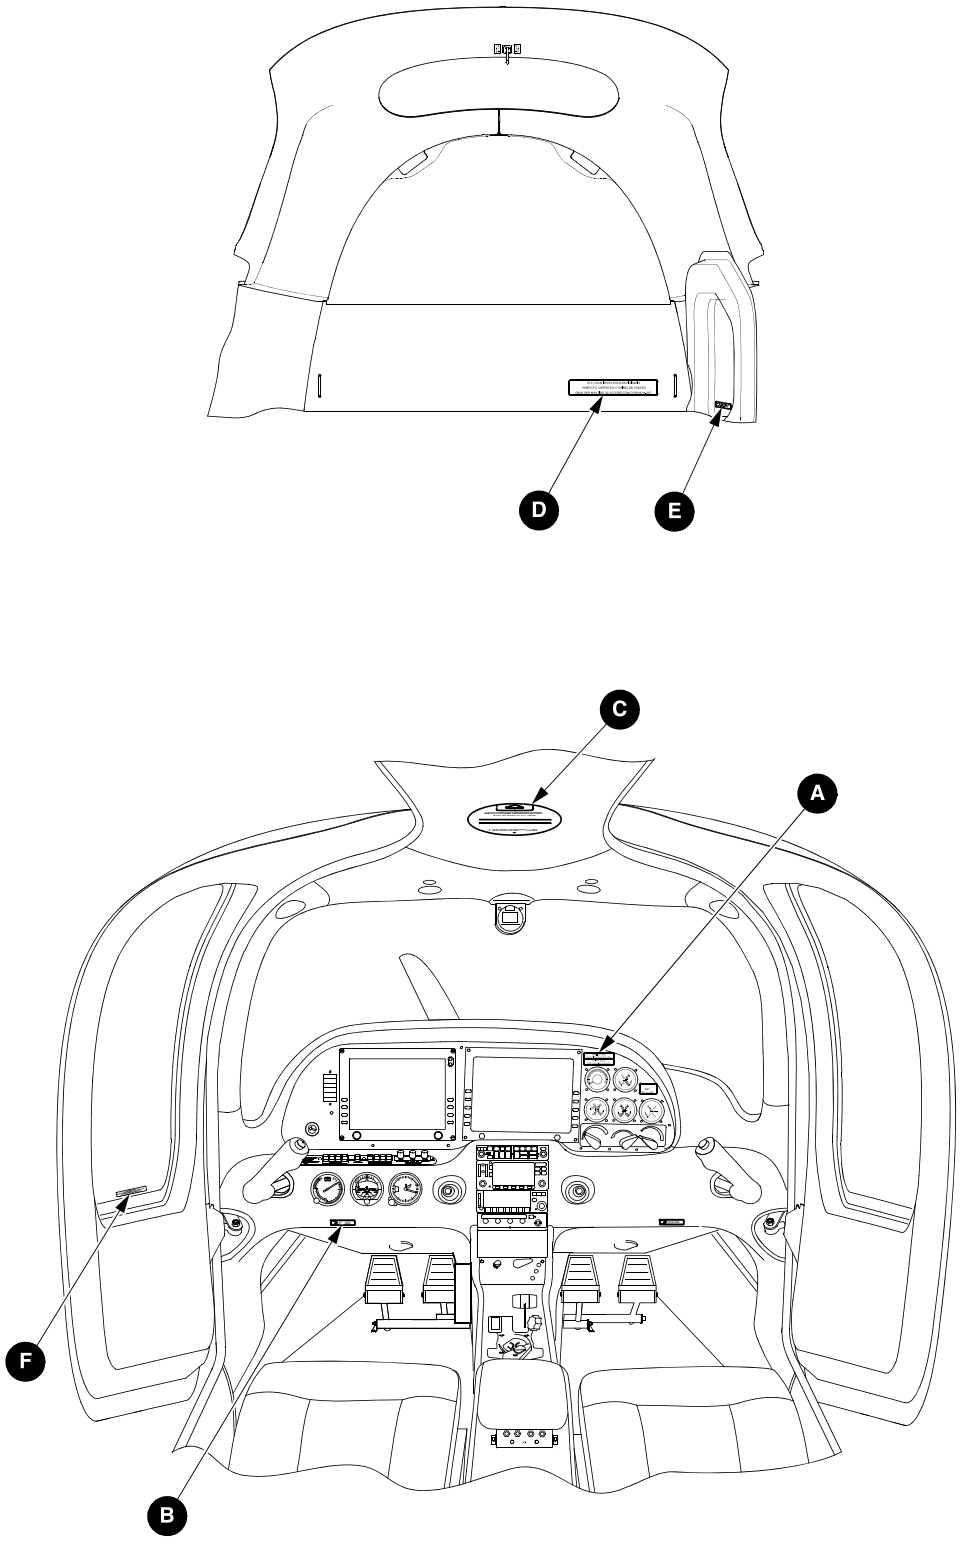

CO_SR22_PC11_2072

Figure-11
Interior Placards and Overlays - Serials w/ Colombian (1 of 3)

EFFECTIVITY:
Serials w/ Colombian

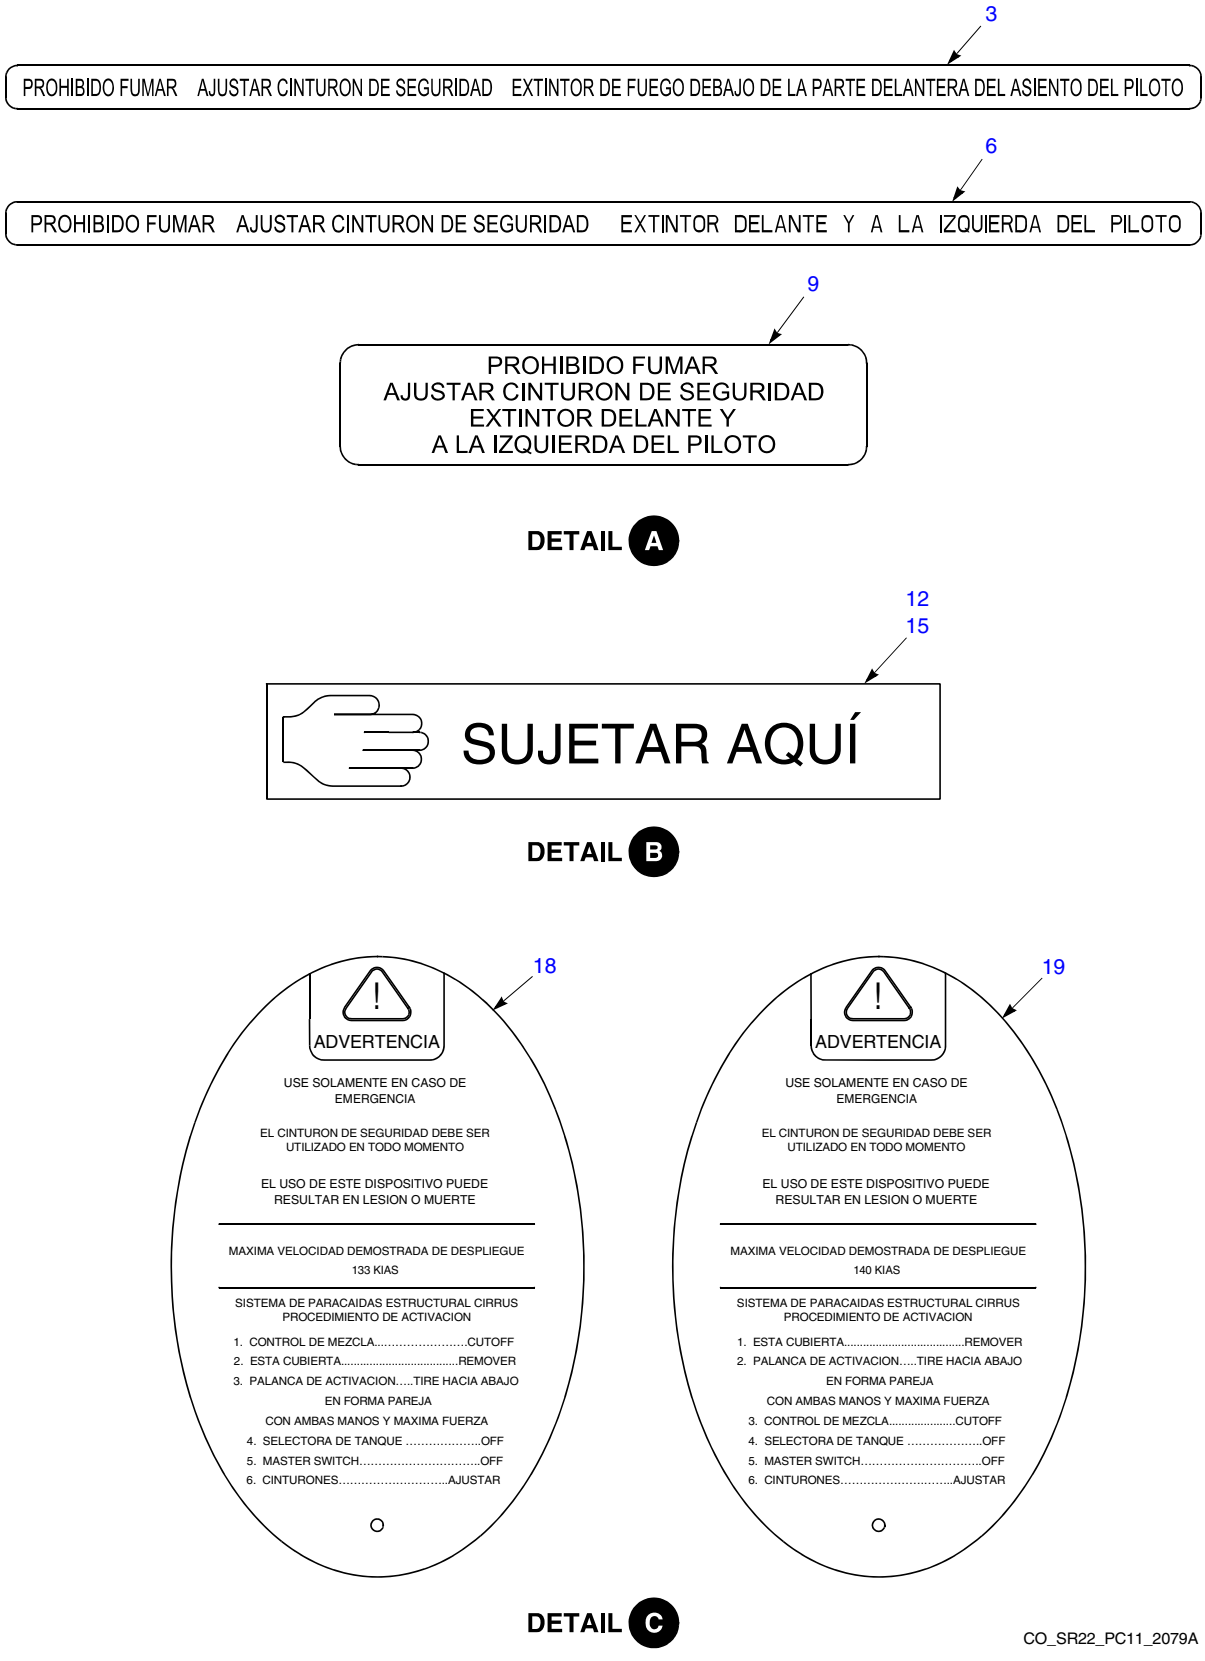

Figure-11

Interior Placards and Overlays - Serials w/ Colombian (2 of 3)

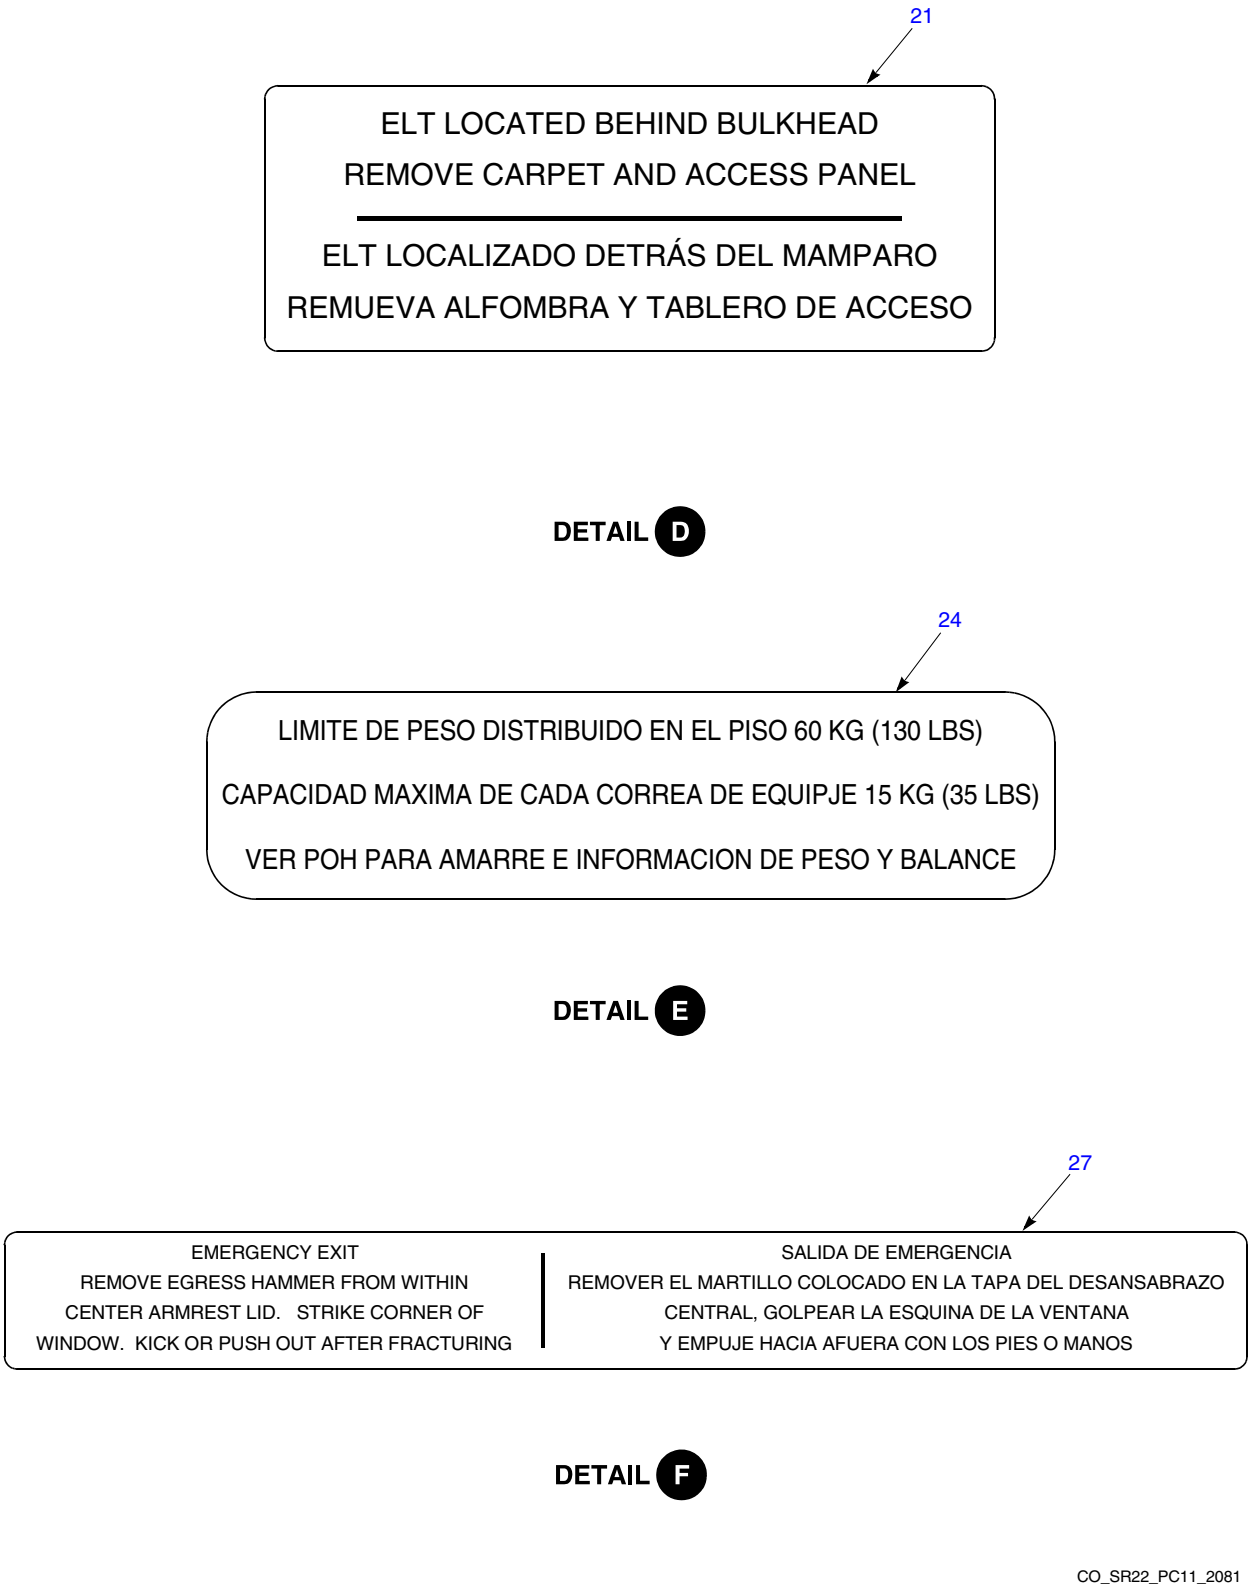

Figure-11
Interior Placards and Overlays - Serials w/ Colombian (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 11	**		INTERIOR PLACARDS AND OVERLAYS, COLOMBIAN	0002 / 0001	/	NP
	3	16344-011	@		·PLACARD, NO SMOKING & FASTEN SEATBELTS	0002	1862	AR
	6	16344-007	@		·PLACARD, NO SMOKING & FASTEN SEATBELTS	1863		AR
	9	24278-019			·PLACARD, NO SMOKING & FASTEN SEATBELTS	3026 / 0001	/	AR
	12	15735-011	#		·PLACARD, GRAB	0002 / 0001	/	AR
	15	15735-012	#		·PLACARD, GRAB	0002 / 0001	/	AR
	18	14264-009			·PLACARD, CAPS COVER	0002 / 0001	3914 / 0441	AR
	19	29925-006			·PLACARD, CAPS COVER	3915 / 0442	/	AR
	21	12579-009			·PLACARD, ELT LOCATION	0002 / 0001	/	AR
	24	12378-008			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	27	12436-011			·PLACARD, EMERGENCY EXIT	0002 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

@ INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.

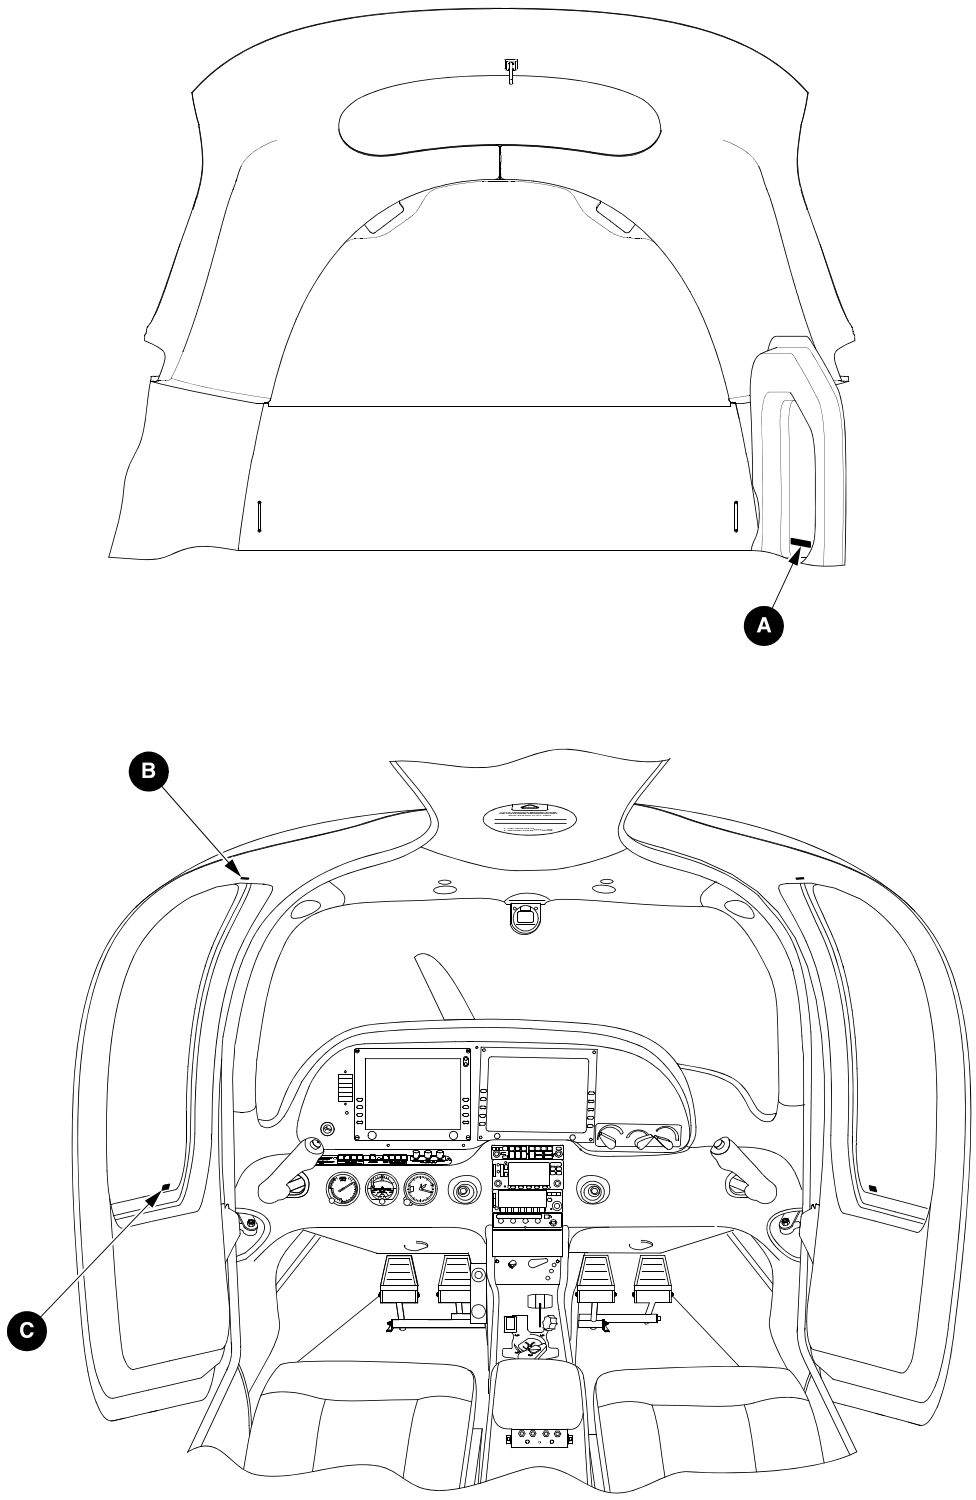

AU_SR22_PC11_2091

Figure-12
Interior Placards and Overlays - Serials w/ Australian (1 of 2)

EFFECTIVITY:
Serials w/ Australian

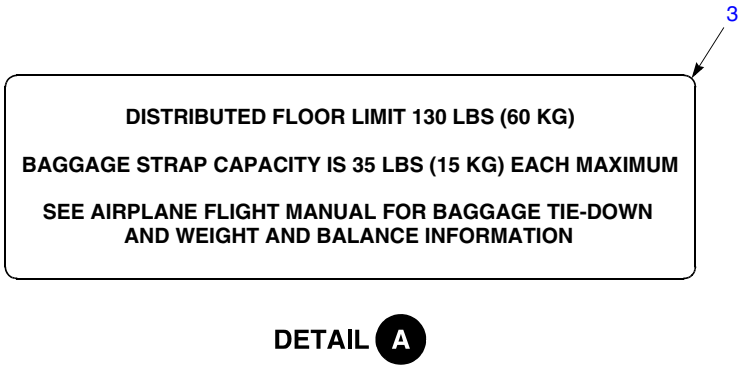

DETAIL A

DETAIL B

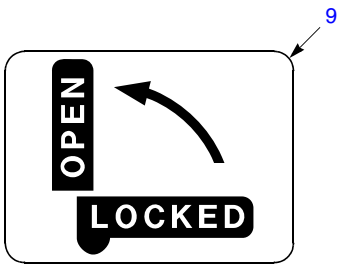

DETAIL C

AU_SR22_PC11_2093

Figure-12
Interior Placards and Overlays - Serials w/ Australian (2 of 2)

EFFECTIVITY:
Serials w/ Australian

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 12			INTERIOR PLACARDS AND OVERLAYS, AUSTRALIAN	0002 / 0001	/	NP
	3	12378-002			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	6	14875-001			·PLACARD, EXIT	0002 / 0001	/	AR
	9	14877-001			·PLACARD, DOOR OPERATION, INTERIOR, LH	0002 / 0001	/	AR
-	12	14877-002			·PLACARD, DOOR OPERATION, INTERIOR, RH	0002 / 0001	/	AR
-	15	14874-001			·PLACARD, NO SMOKING	0002 / 0001	/	AR

Intentionally Left Blank

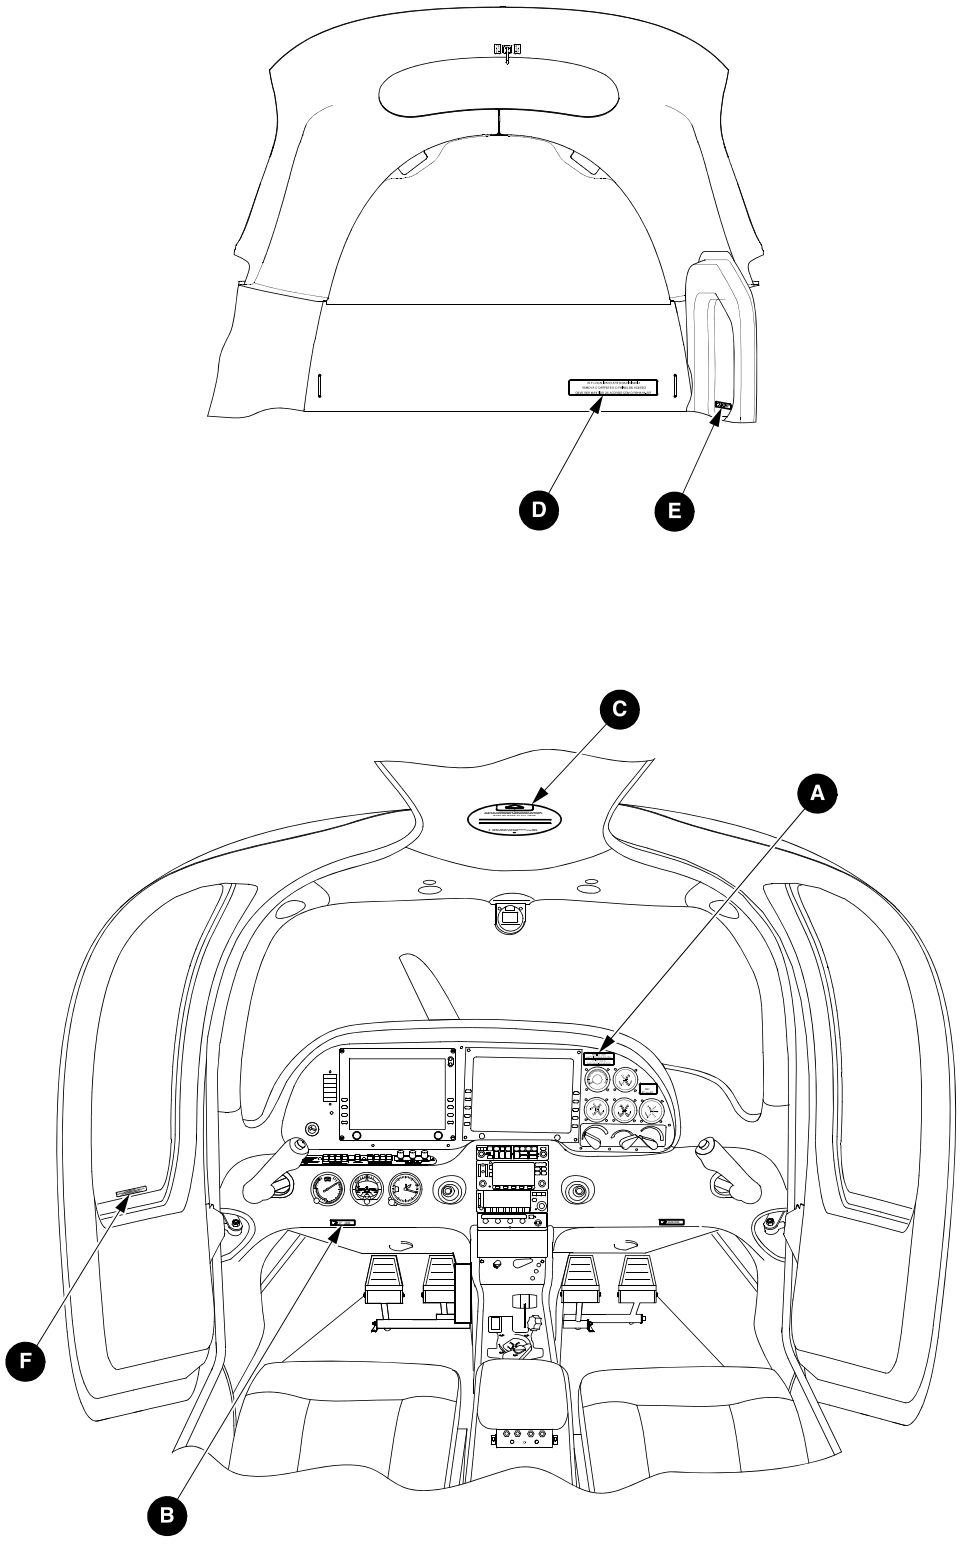

CL_SR22_PC11_2113

Figure-13
Interior Placards and Overlays - Serials w/ Chilean (1 of 3)

EFFECTIVITY:
Serials w/ Chilean

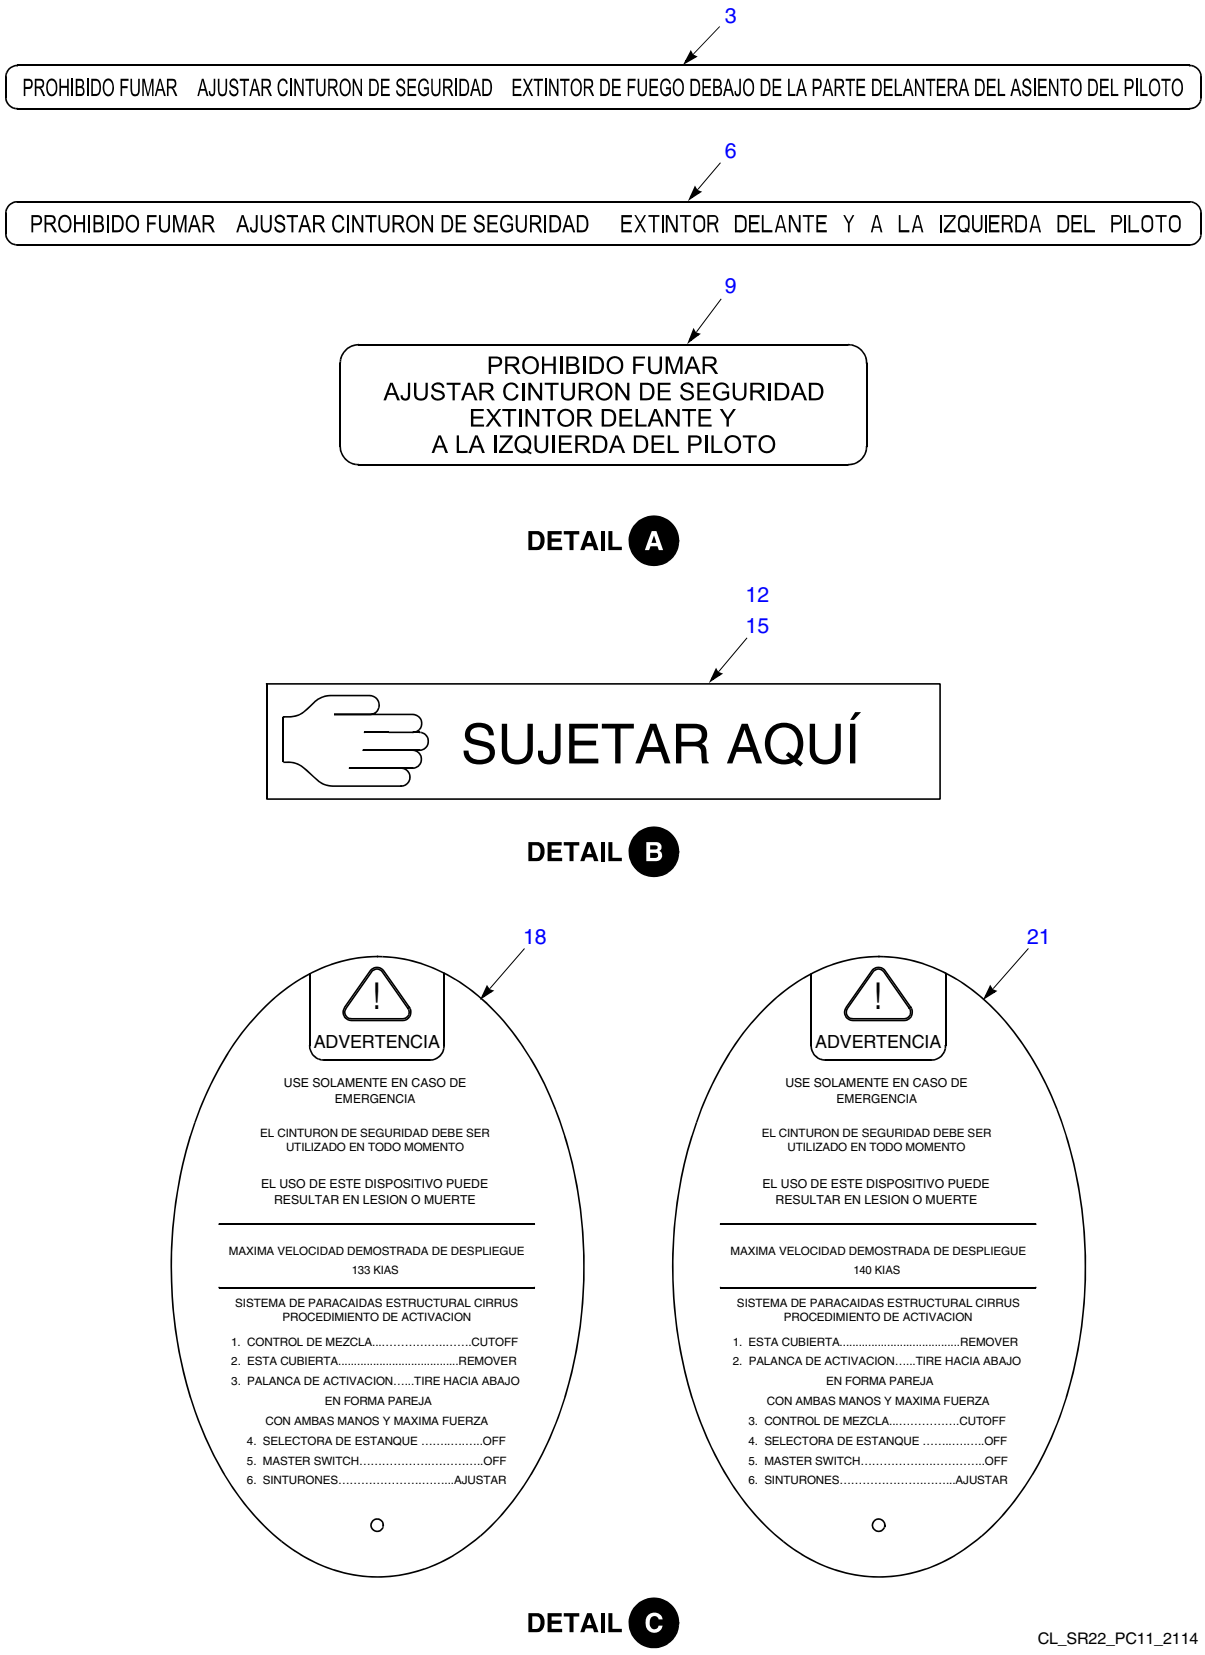

Figure-13

Interior Placards and Overlays - Serials w/ Chilean (2 of 3)

Figure-13
Interior Placards and Overlays - Serials w/ Chilean (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 13	**		INTERIOR PLACARDS AND OVERLAYS, CHILEAN	0002 / 0001	/	NP
	3	16344-011	@		·PLACARD, NO SMOKING & FASTEN SEATBELTS	0002	1862	AR
	6	16344-007	@		·PLACARD, NO SMOKING & FASTEN SEATBELTS	1863		AR
	9	24278-019			·PLACARD, NO SMOKING & FASTEN SEATBELTS	3026 / 0001	/	AR
	12	15735-011	#		·PLACARD, GRAB	0002 / 0001	/	AR
	15	15735-012	#		·PLACARD, GRAB	0002 / 0001	/	AR
	18	14264-010			·PLACARD, CAPS COVER	0002 / 0001	3914 / 0441	AR
	21	29925-007			·PLACARD, CAPS COVER	3915 / 0442	/	AR
	24	12579-009			·PLACARD, ELT LOCATION	0002 / 0001	/	AR
	27	12378-008			·PLACARD, BAGGAGE DOOR	0002 / 0001	/	AR
	30	12436-013			·PLACARD, EMERGENCY EXIT	0002 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

\# CHOOSE PLACARD APPROPRIATE FOR INSTALLATION LOCATION ON AIRCRAFT.

@ INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.

EFFECTIVITY:
All

CHAPTER

21

ENVIRONMENTAL SYSTEMS

Intentionally Left Blank

CHAPTER 21 - ENVIRONMENTAL SYSTEMS
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
21-LOEP	1	19 SEP 2017
21-LOEP	2	19 SEP 2017
21-TOC	1	19 SEP 2017
21-TOC	2	19 SEP 2017
21-20-01	1	15 DEC 2014
21-20-01	2	15 DEC 2014
21-20-01	3	15 DEC 2014
21-20-01	4	15 DEC 2014
21-20-01	5	15 DEC 2014
21-20-01	6	15 DEC 2014
21-20-01	7	15 DEC 2014
21-20-01	8	19 SEP 2017
21-20-01	9	15 DEC 2014
21-20-01	10	15 DEC 2014
21-20-01	11	15 DEC 2014
21-20-01	12	15 DEC 2014
21-20-01	13	15 DEC 2014
21-20-01	14	19 SEP 2017
21-20-01	15	19 SEP 2017
21-20-01	16	19 SEP 2017
21-20-01	17	19 SEP 2017
21-20-01	18	19 SEP 2017
21-20-01	19	19 SEP 2017
21-20-01	20	15 DEC 2014
21-20-02	1	15 DEC 2014
21-20-02	2	01 JAN 2016
21-20-02	3	15 DEC 2014
21-20-02	4	01 JAN 2016
21-20-02	5	01 JAN 2016
21-20-02	6	15 DEC 2014
21-40-01	1	15 DEC 2014
21-40-01	2	15 DEC 2014
21-40-01	3	15 DEC 2014
21-40-01	4	15 DEC 2014
21-40-02	1	15 DEC 2014
21-40-02	2	15 DEC 2014
21-40-02	3	15 DEC 2014
21-40-02	4	15 DEC 2014
21-40-02	5	15 DEC 2014
21-40-02	6	15 DEC 2014

CHAPTER 21 - ENVIRONMENTAL SYSTEMS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
21-50-01	1	15 DEC 2014
21-50-01	2	15 DEC 2014
21-50-01	3	15 DEC 2014
21-50-01	4	19 SEP 2017
21-50-01	5	19 SEP 2017
21-50-01	6	19 SEP 2017
21-50-01	7	19 SEP 2017
21-50-01	8	15 DEC 2014
21-50-01	9	19 SEP 2017
21-50-01	10	19 SEP 2017
21-50-01	11	19 SEP 2017
21-50-01	12	19 SEP 2017
21-50-01	13	19 SEP 2017
21-50-01	14	19 SEP 2017
21-60-01	1	15 DEC 2014
21-60-01	2	15 DEC 2014
21-60-01	3	15 DEC 2014
21-60-01	4	15 DEC 2014
21-60-02	1	15 DEC 2014
21-60-02	2	15 DEC 2014
21-60-02	3	15 DEC 2014
21-60-02	4	19 SEP 2017
21-60-02	5	19 SEP 2017
21-60-02	6	19 SEP 2017
21-60-02	7	19 SEP 2017
21-60-02	8	19 SEP 2017
21-60-03	1	15 DEC 2014
21-60-03	2	15 DEC 2014
21-60-03	3	15 DEC 2014
21-60-03	4	19 SEP 2017
21-60-03	5	19 SEP 2017
21-60-03	6	19 SEP 2017
21-60-04	1	15 DEC 2014
21-60-04	2	15 DEC 2014
21-60-04	3	15 DEC 2014
21-60-04	4	15 DEC 2014

EFFECTIVITY:
All

CHAPTER 21 - ENVIRONMENTAL SYSTEMS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Cabin Duct - Serials 22-0002 thru 22-1862 (1 of 13)	21-20-01
Cabin Duct - Serials 22-0002 thru 22-1862 (2 of 13)	21-20-01
Cabin Duct - Serials 22-0002 thru 22-1862 (3 of 13)	21-20-01
Cabin Duct - Serials 22-1863 & subs w/o Perspective (4 of 13)	21-20-01
Cabin Duct - Serials w/ Perspective (5 of 13)	21-20-01
Cabin Duct - Serials 22-1863 & subs, 22T-0001& subs (6 of 13)	21-20-01
Cabin Duct - Serials 22-1863 & subs w/o Perspective (7 of 13)	21-20-01
Cabin Duct - Serials w/ Perspective (8 of 13)	21-20-01
Cabin Duct - Serials 22-1863 thru 22-3660, 22T-0001 thru 22T-0003 w/o Fan (9 of 13)	21-20-01
Cabin Duct - Serials 22-3661 & subs, 22T-0004 & subs w/o Fan (10 of 13)	21-20-01
Cabin Duct - Serials 22-1863 thru 22-2437 w/ Fan (11 of 13)	21-20-01
Cabin Duct - Serials 22-2438 & subs, 22T-0001 & subs w/ Fan (12 of 13)	21-20-01
Cabin Duct - Serials 22-1863 & subs, 22T-0001 & subs (13 of 13)	21-20-01
Cooling Fan - Serials 22-0002 & subs w/o Perspective (1 of 3)	21-20-02
Cooling Fan - Serials w/ Perspective (2 of 3)	21-20-02
Cooling Fan - Serials 22-3026 thru 22-3369 w/ Perspective (3 of 3)	21-20-02
Hot Air Valve - Serials 22-0002 thru 22-1862 (1 of 2)	21-40-01
Hot Air Valve - Serials 22-1863 thru 22-2437 (2 of 2)	21-40-01
Air Mixing Chamber - Serials 22-2438 & subs (1 of 3)	21-40-02
Air Mixing Chamber - Serials 22T-0001 & subs (2 of 3)	21-40-02
Air Mixing Chamber - Serials 22-2438 & subs, 22T-0001 & subs (3 of 3)	21-40-02
Air Conditioning System - Serials 22-1863 & subs, 22T-0001 & subs (1 of 8)	21-50-01
Air Conditioning System - Serials 22-1863 thru 22-1956 (2 of 8)	21-50-01
Air Conditioning System - Serials 22-1957 thru 22-2619 (3 of 8)	21-50-01
Air Conditioning System - Serials 22-2620 & subs, 22T-0001 & subs (4 of 8)	21-50-01
Air Conditioning System - Serials 22-1863 thru 22-1956 (5 of 8)	21-50-01
Air Conditioning System - Serials 22-1957 & subs, 22T-0001 & subs (6 of 8)	21-50-01
Air Conditioning System - Serials 22-1863 & subs, 22T-0001 & subs (7 of 8)	21-50-01
Air Conditioning System - Serials 22-1863 & subs, 22T-0001 & subs (8 of 8)	21-50-01
Cabin Air Controls - Serials 22-0002 thru 22-1862	21-60-01
Cabin Air Controls - Serials 22-1863 thru 22-2437 (1 of 3)	21-60-02
Cabin Air Controls - Serials 22-1863 thru 22-2437 (2 of 3)	21-60-02
Cabin Air Controls - Serials 22-1863 thru 22-2437 (3 of 3)	21-60-02

CHAPTER 21 - ENVIRONMENTAL SYSTEMS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Cabin Air Controls - Serials 22-2438 & subs w/o Perspective (1 of 3)	21-60-03
Cabin Air Controls - Serials 22-2438 & subs w/o Perspective (2 of 3)	21-60-03
Cabin Air Controls - Serials 22-2438 & subs w/o Perspective (3 of 3)	21-60-03
Cabin Air Controls - Serials w/ Perspective (1 of 2)	21-60-04
Cabin Air Controls - Serials w/ Perspective (2 of 2)	21-60-04

EFFECTIVITY:
All

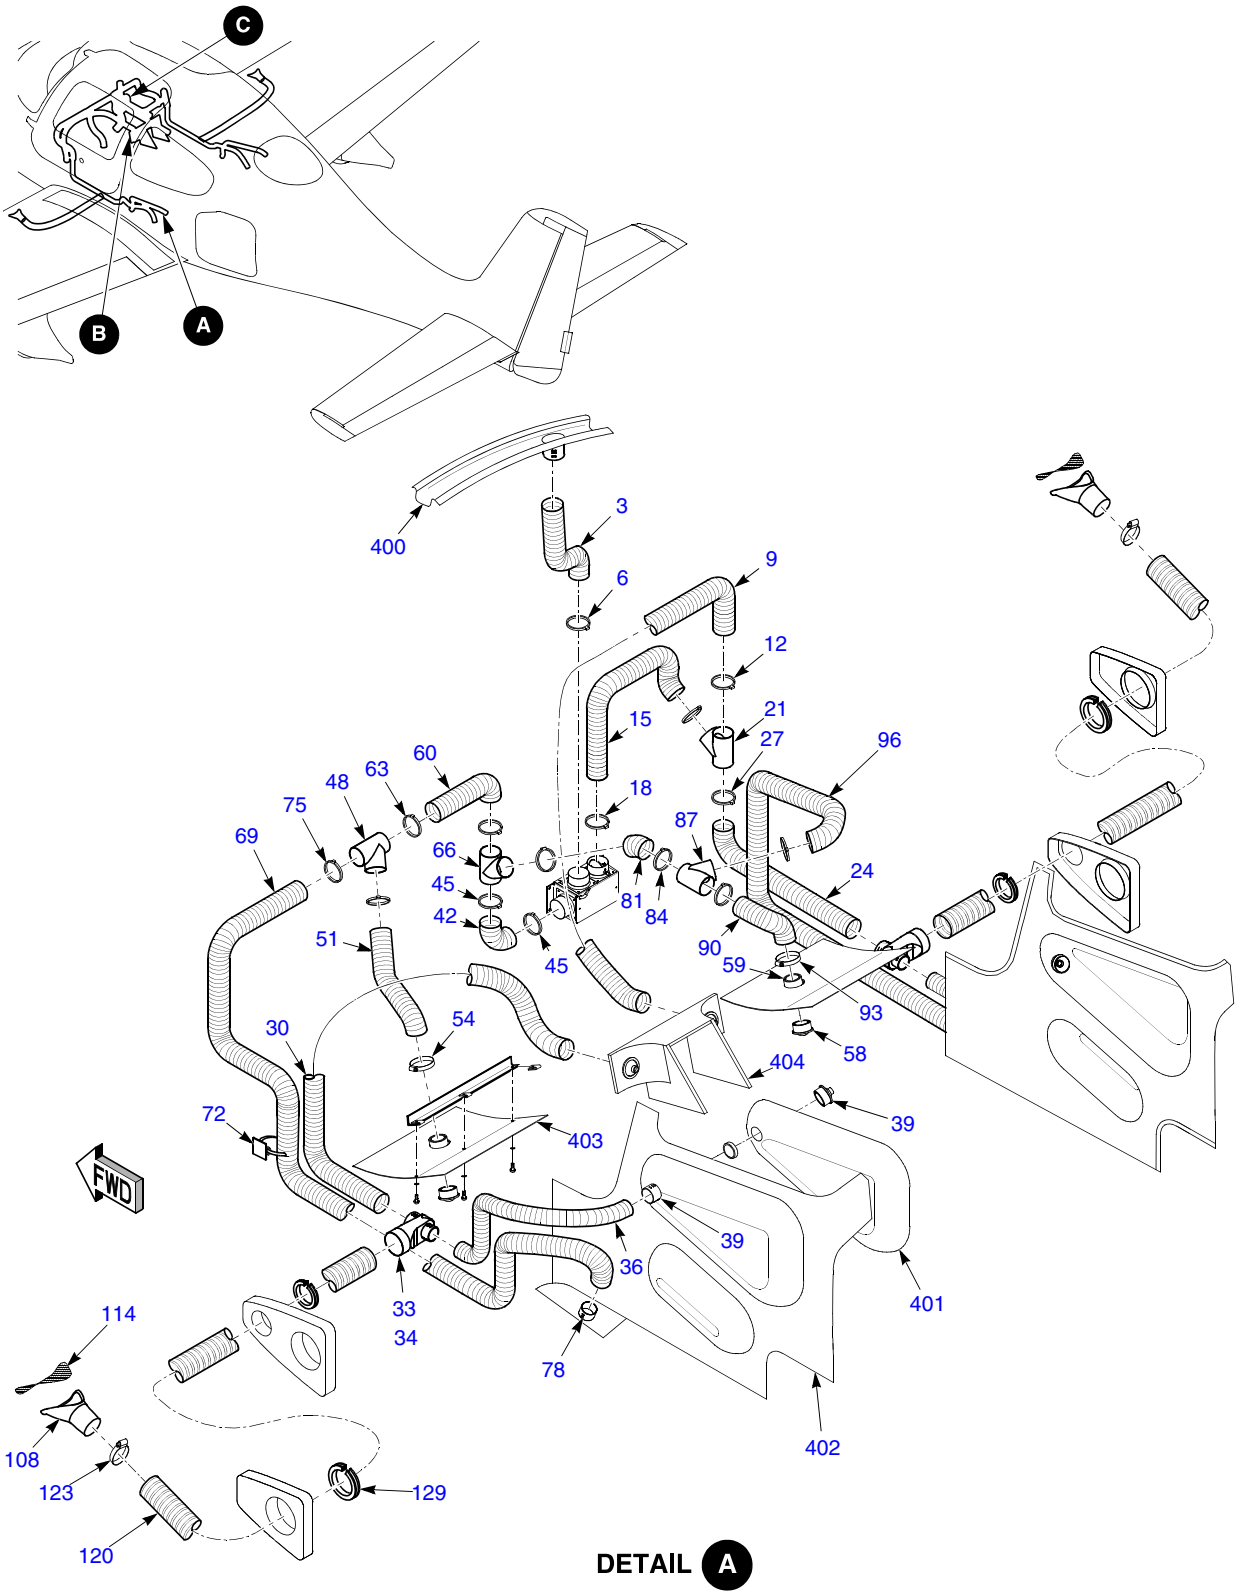

DETAIL A

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

SR22_PC21_1147B

Figure-01

Cabin Duct - Serials 22-0002 thru 22-1862 (1 of 13)

EFFECTIVITY:
Serials 22-0002 thru 22-1862

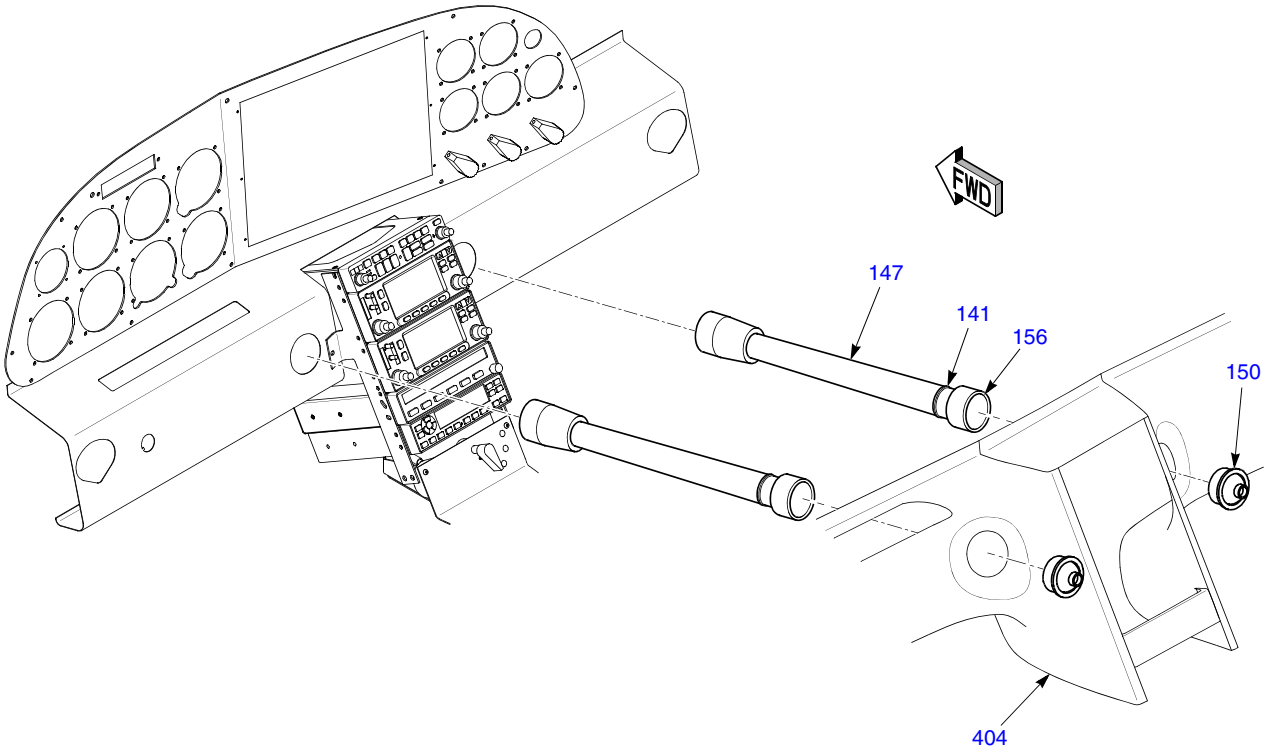

DETAIL B

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

SR22_PC21_1148C

Figure-01

Cabin Duct - Serials 22-0002 thru 22-1862 (2 of 13)

EFFECTIVITY:
Serials 22-0002 thru 22-1862

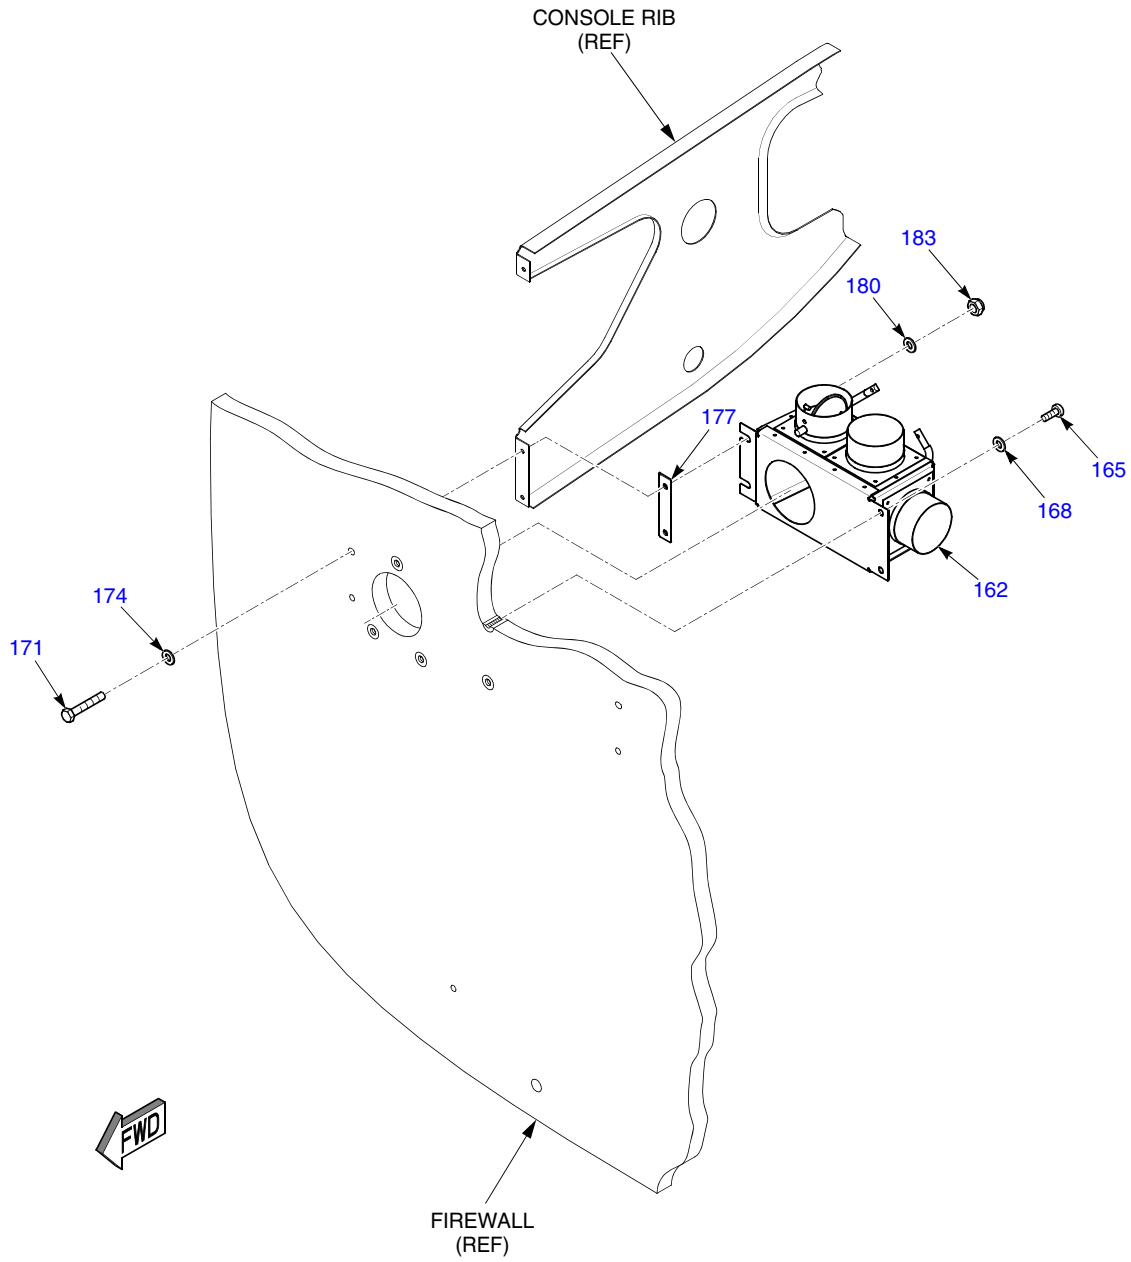

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

DETAIL C

SR22_PC21_1561

Figure-01

Cabin Duct - Serials 22-0002 thru 22-1862 (3 of 13)

EFFECTIVITY:
Serials 22-0002 thru 22-1862

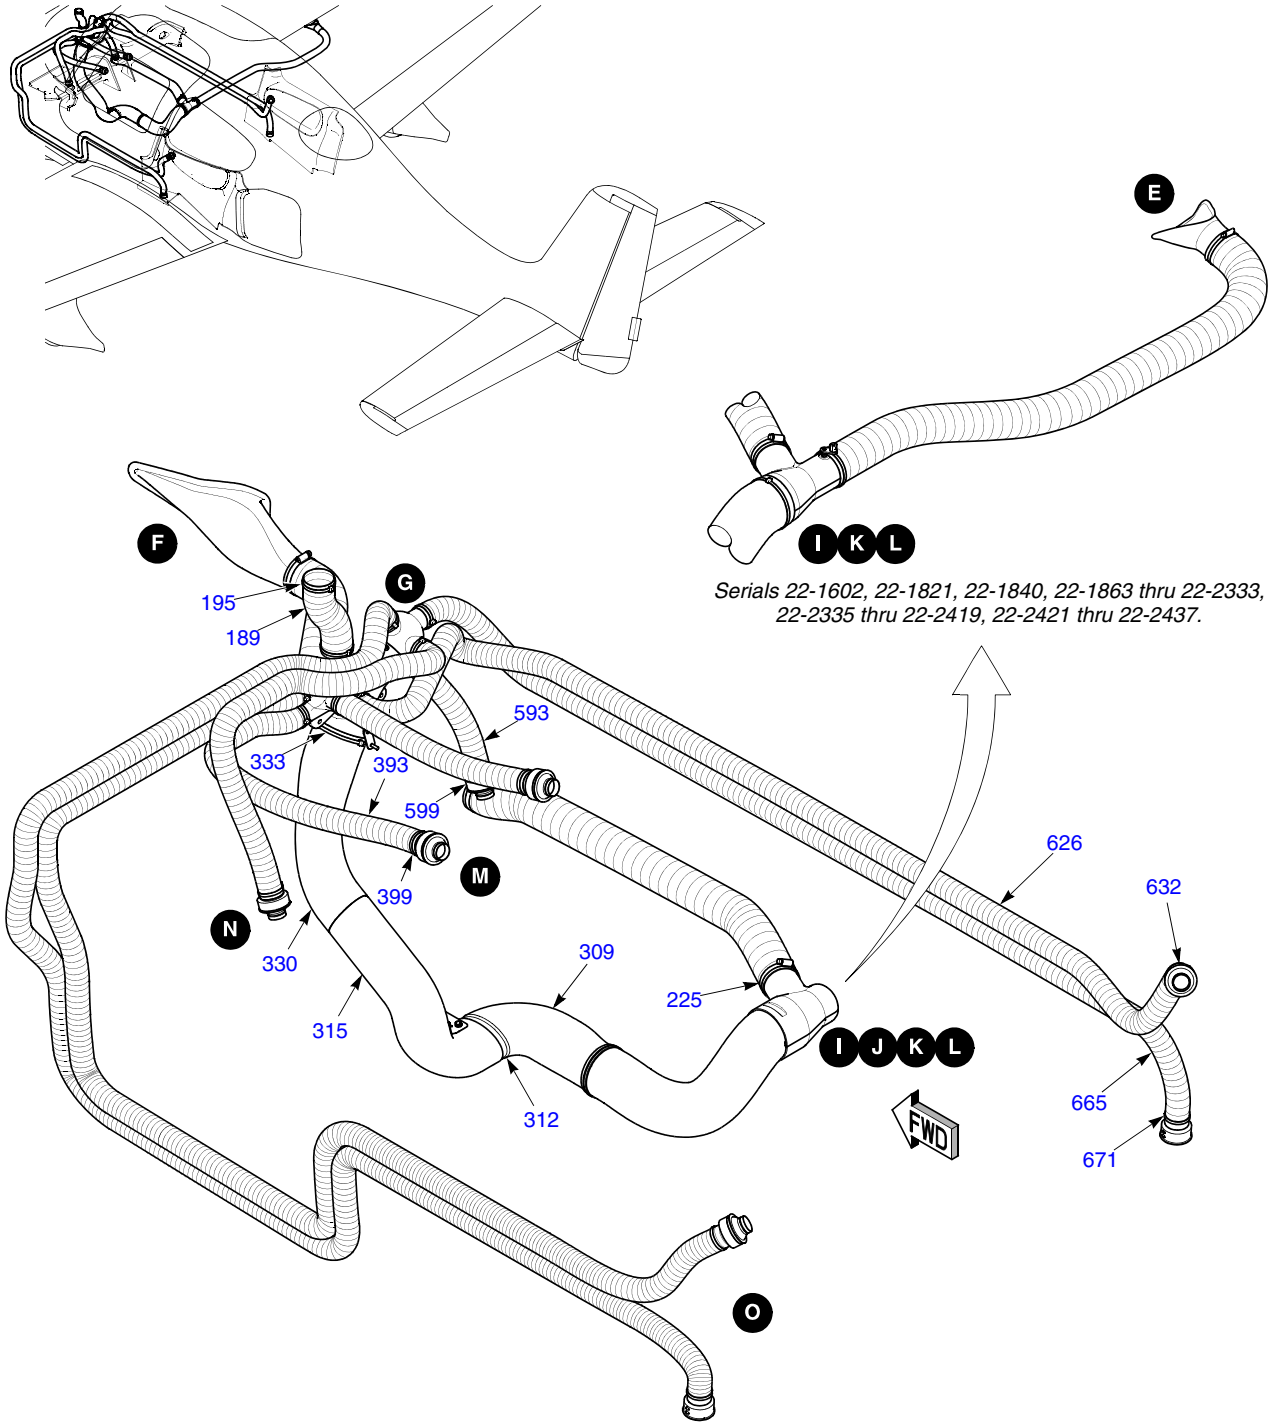

Figure-01

Cabin Duct - Serials 22-1863 & subs w/o Perspective (4 of 13)

EFFECTIVITY:
Serials 22-1863 & subs w/o Perspective

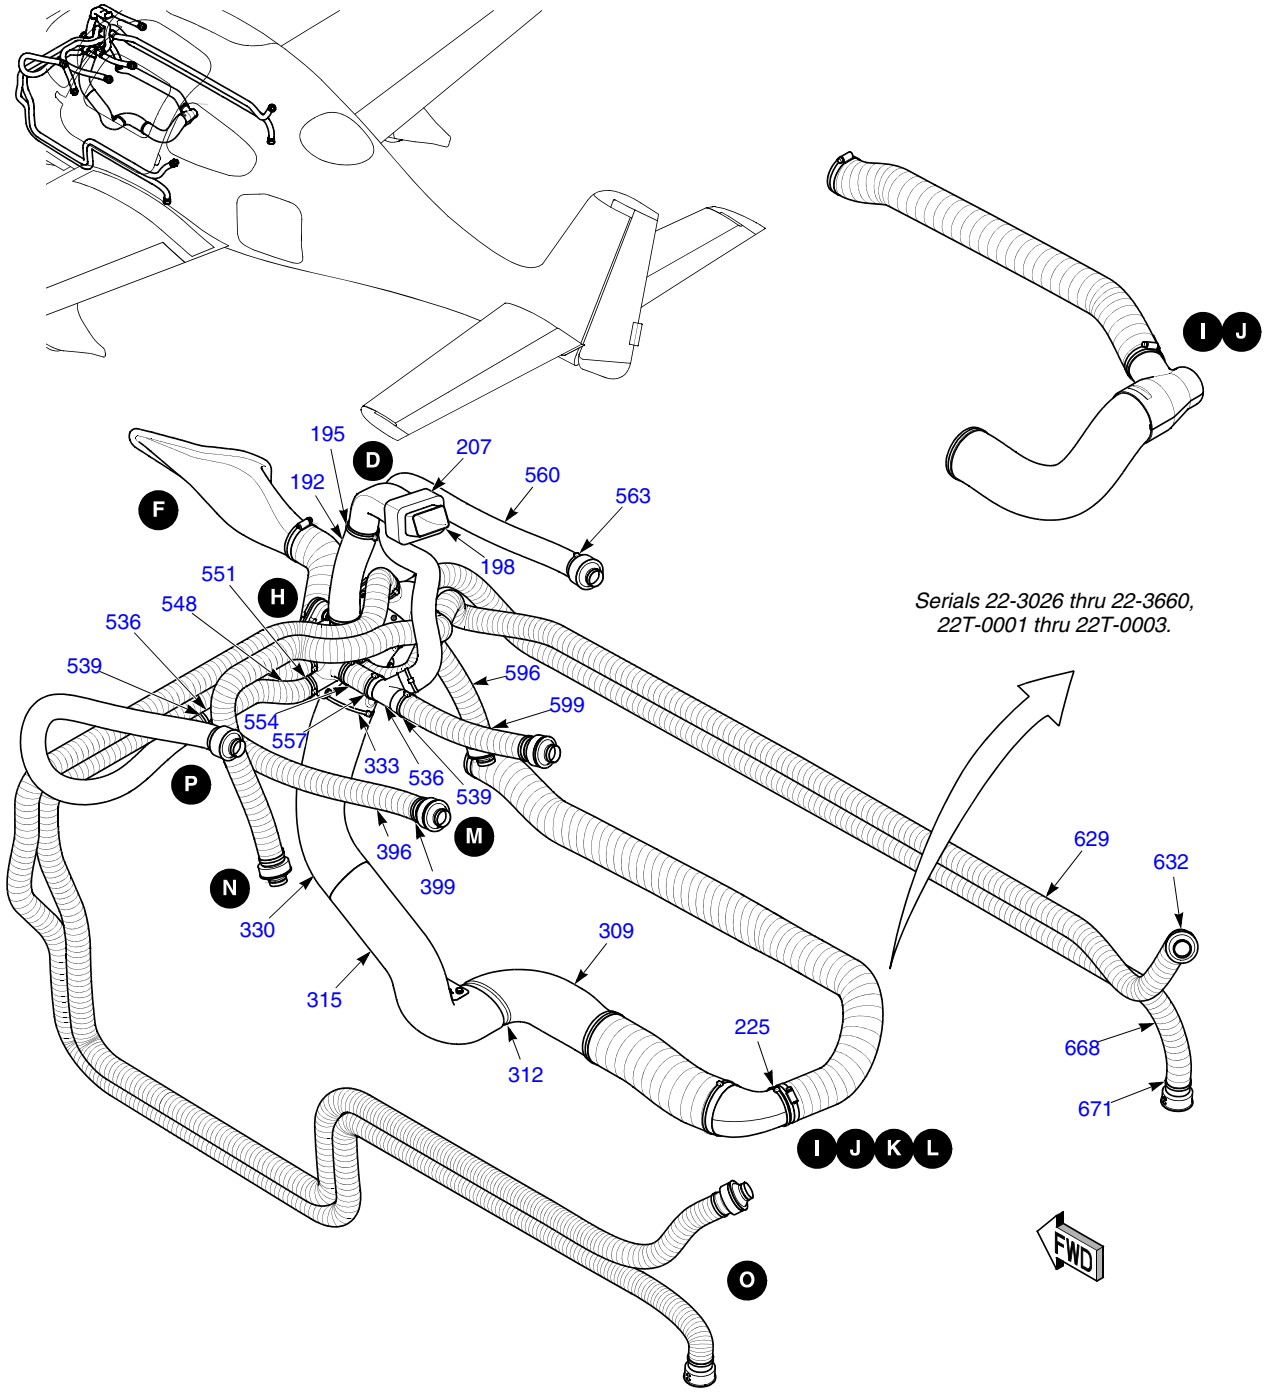

Figure-01
Cabin Duct - Serials w/ Perspective (5 of 13)

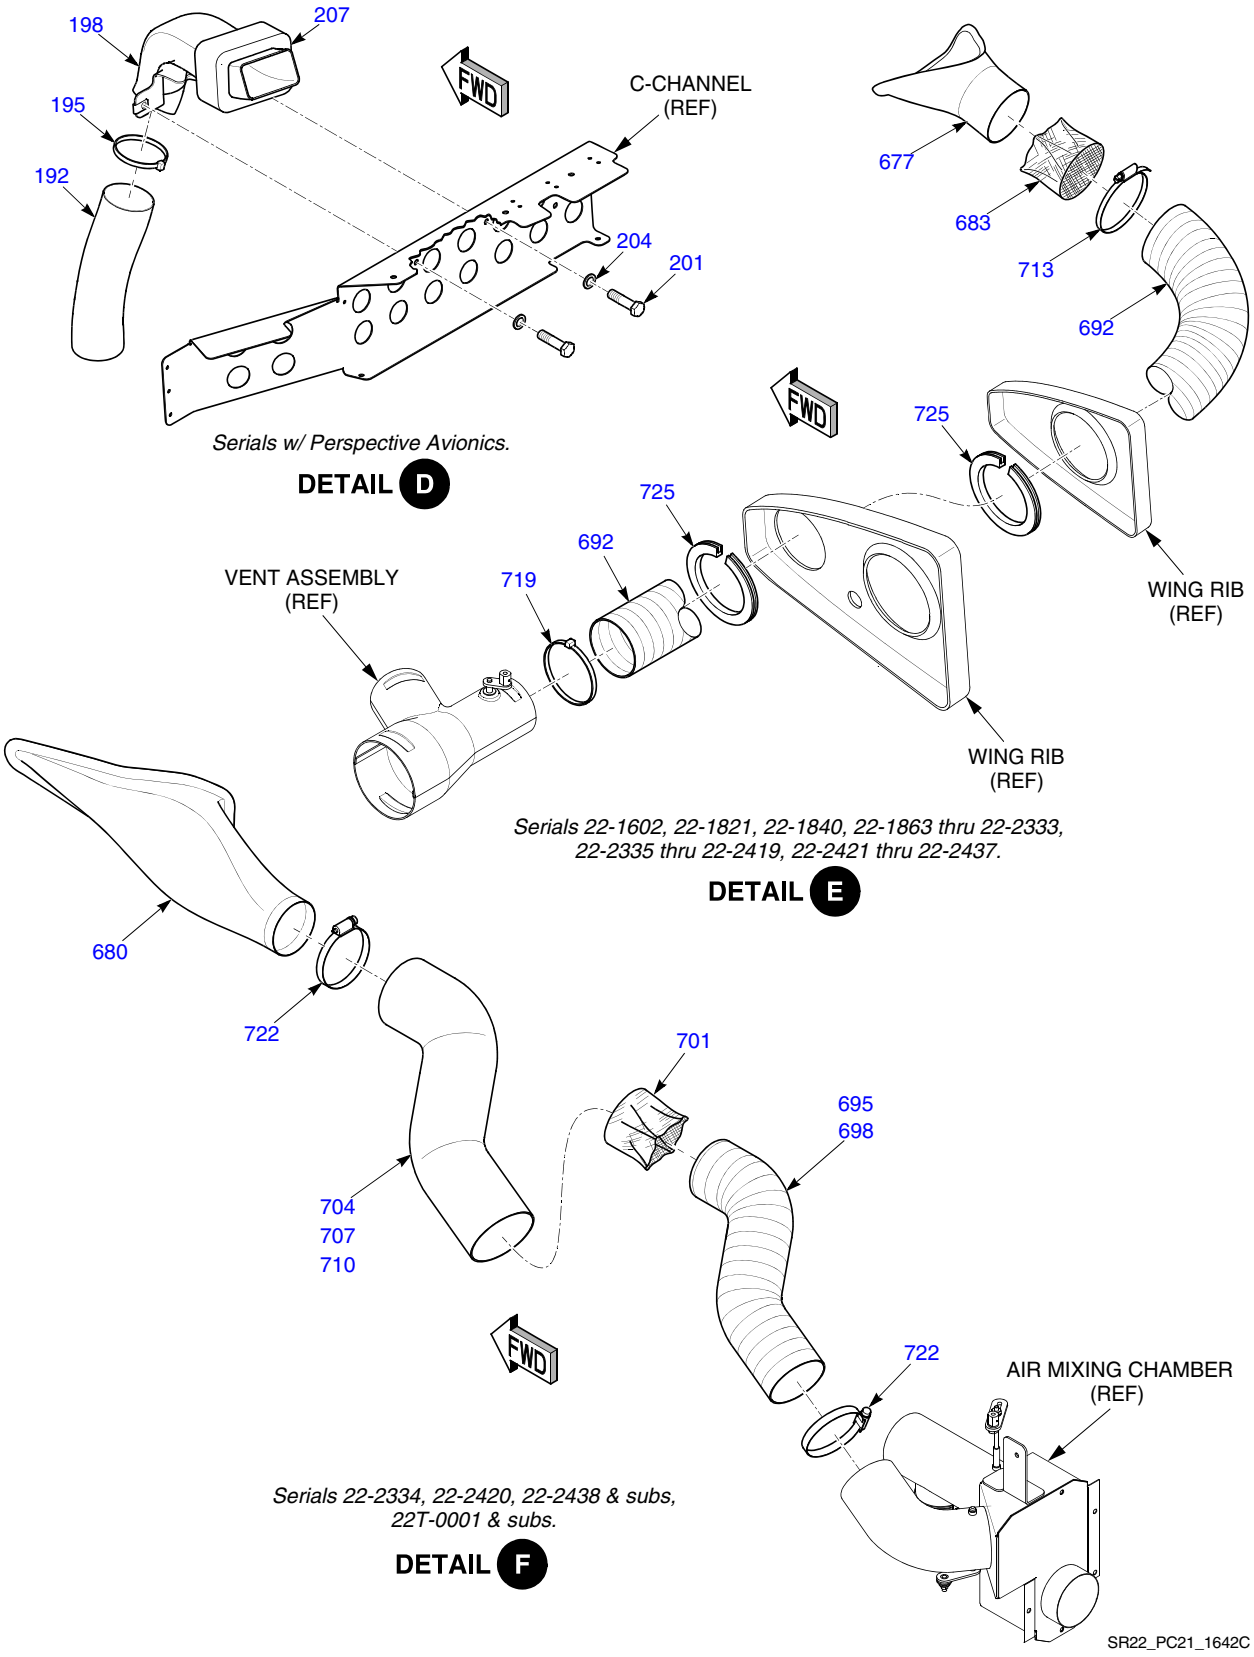

Figure-01

Cabin Duct - Serials 22-1863 & subs, 22T-0001& subs (6 of 13)

EFFECTIVITY:
Serials 22-1863 & subs, 22T-0001& subs

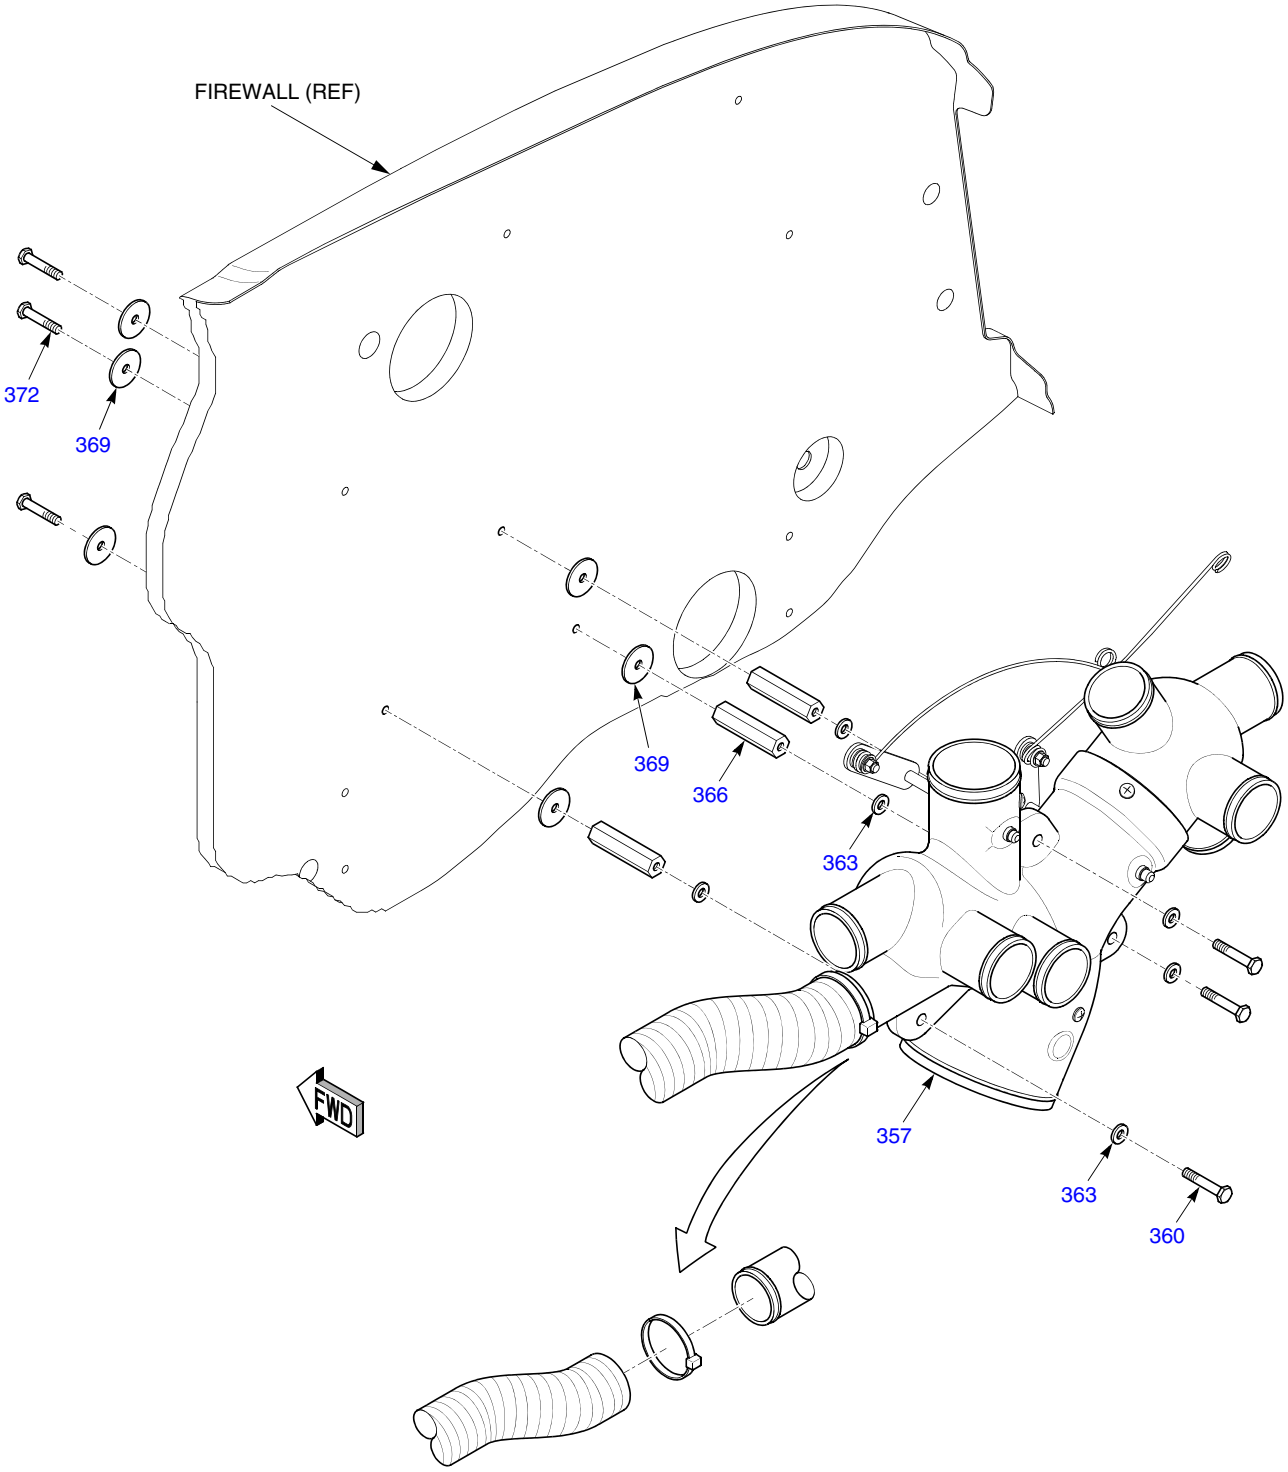

TYPICAL INSTALLATION

Serials 22-1602, 22-1821, 22-1840, 22-1863 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

DETAIL G

SR22_PC21_1560C

Figure-01

Cabin Duct - Serials 22-1863 & subs w/o Perspective (7 of 13)

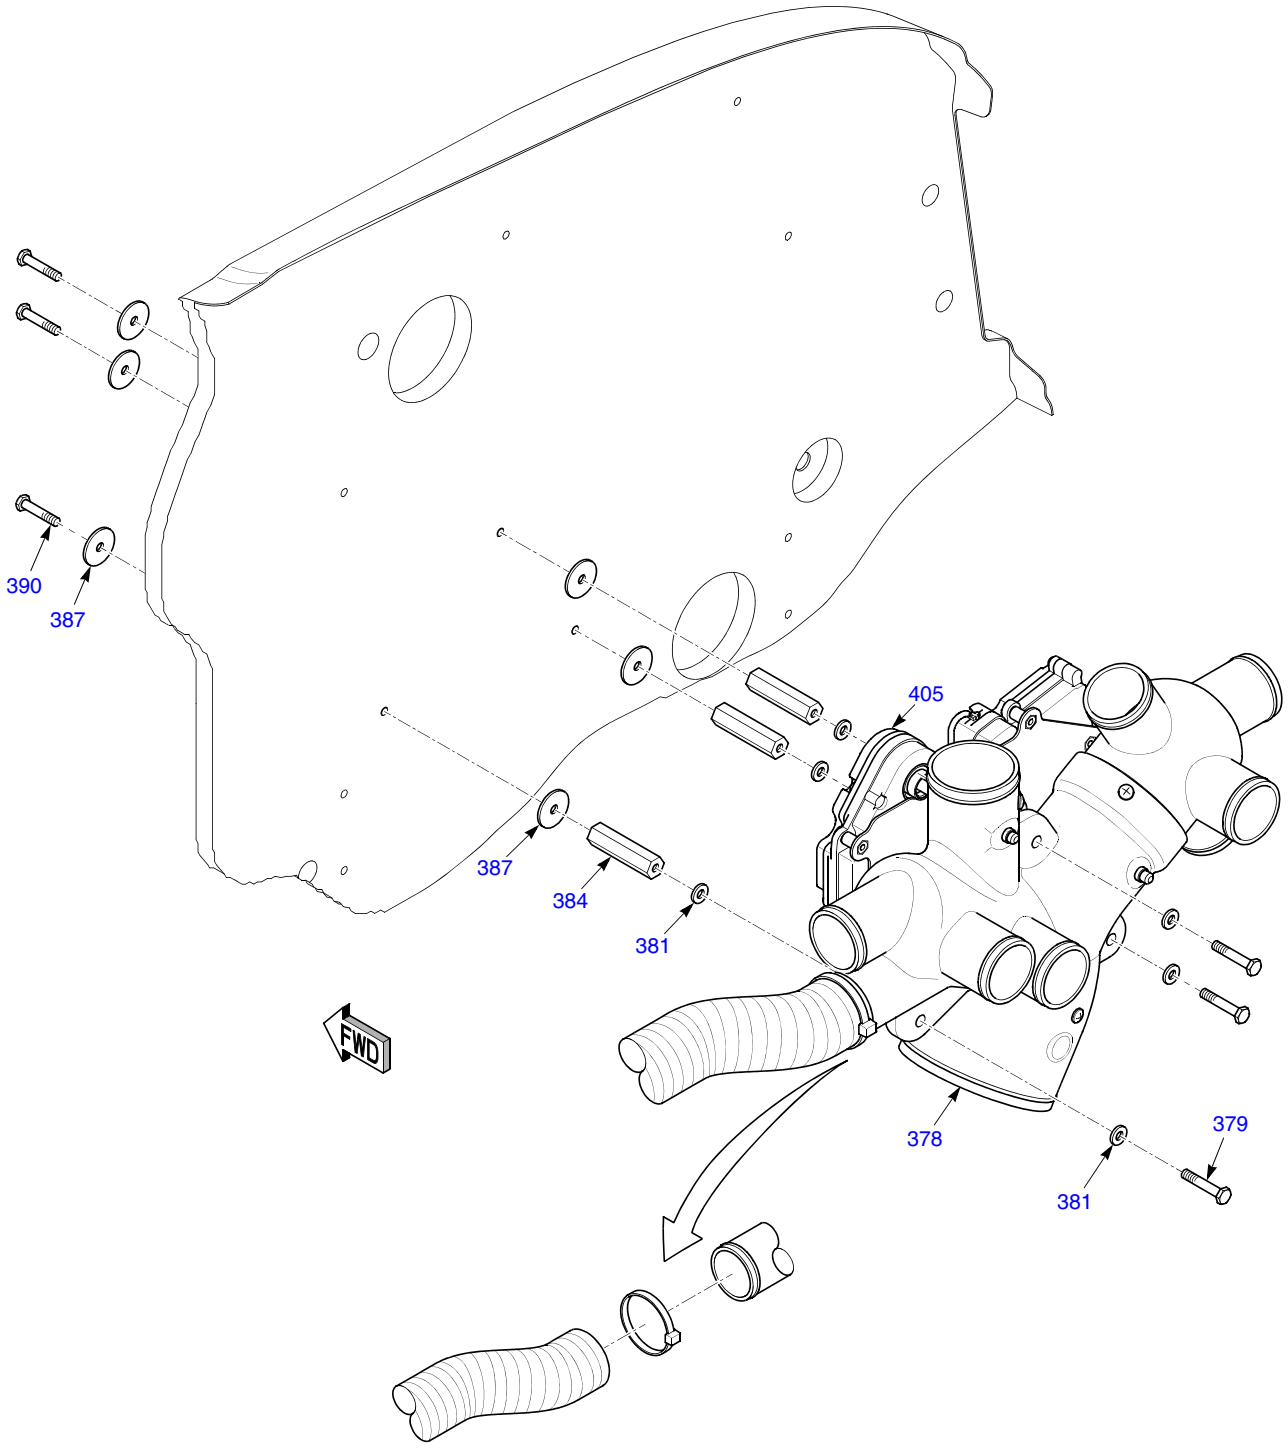

TYPICAL INSTALLATION

Serials w/ Perspective Avionics.

DETAIL H

SR22_PC21_1820A

Figure-01
Cabin Duct - Serials w/ Perspective (8 of 13)

EFFECTIVITY:
All

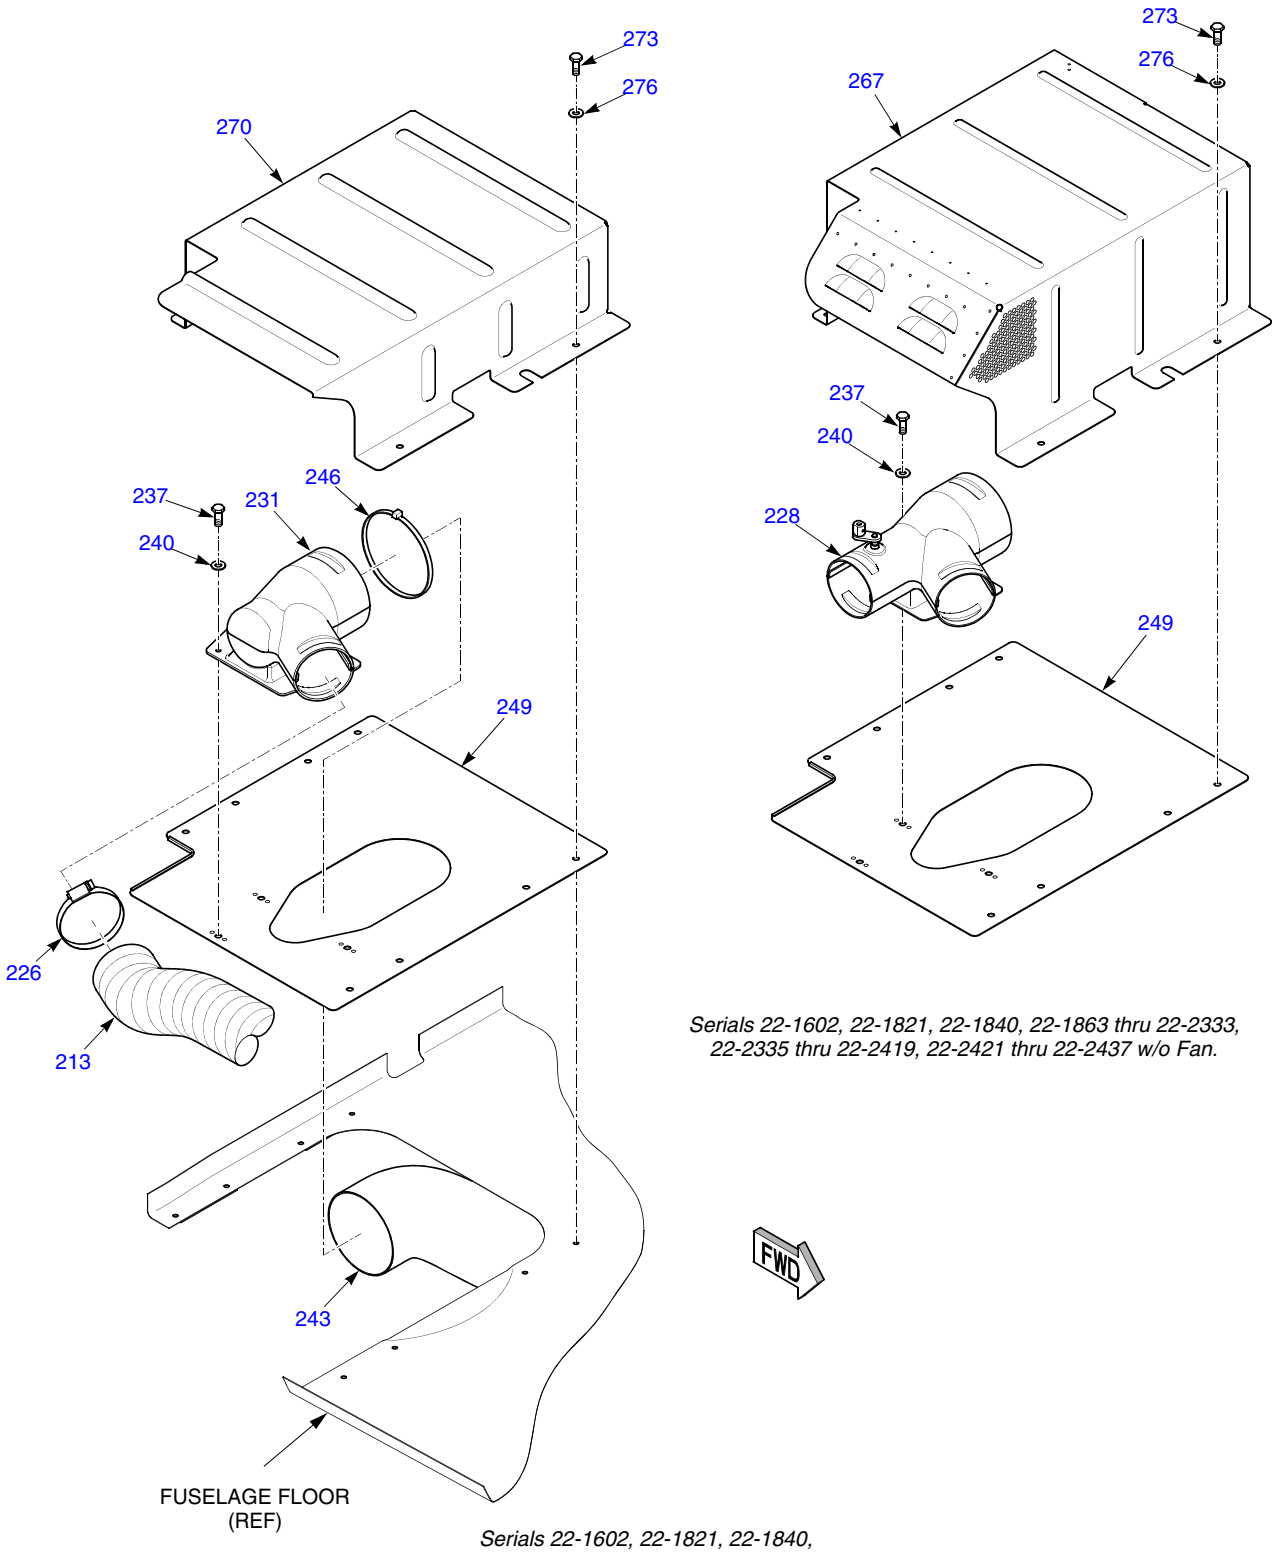

Figure-01

Cabin Duct - Serials 22-1863 thru 22-3660, 22T-0001 thru 22T-0003 w/o Fan (9 of 13)

EFFECTIVITY:
Serials 22-1863 thru 22-3660, 22T-0001 thru 22T-0003 w/o Fan

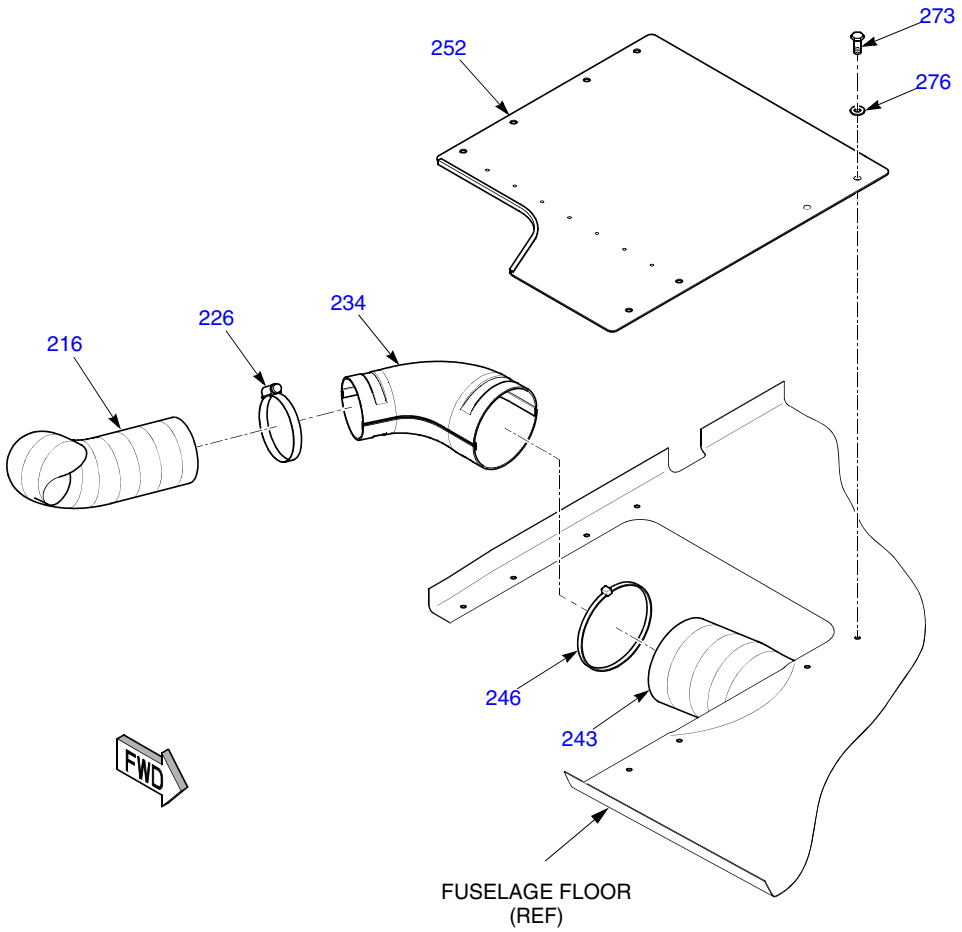

Serials 22-3661 & subs, 22T-0004 & subs w/o Fan.

DETAIL J

SR22_PC21_2006A

Figure-01

Cabin Duct - Serials 22-3661 & subs, 22T-0004 & subs w/o Fan (10 of 13)

EFFECTIVITY:
Serials 22-3661 & subs, 22T-0004 & subs w/o Fan

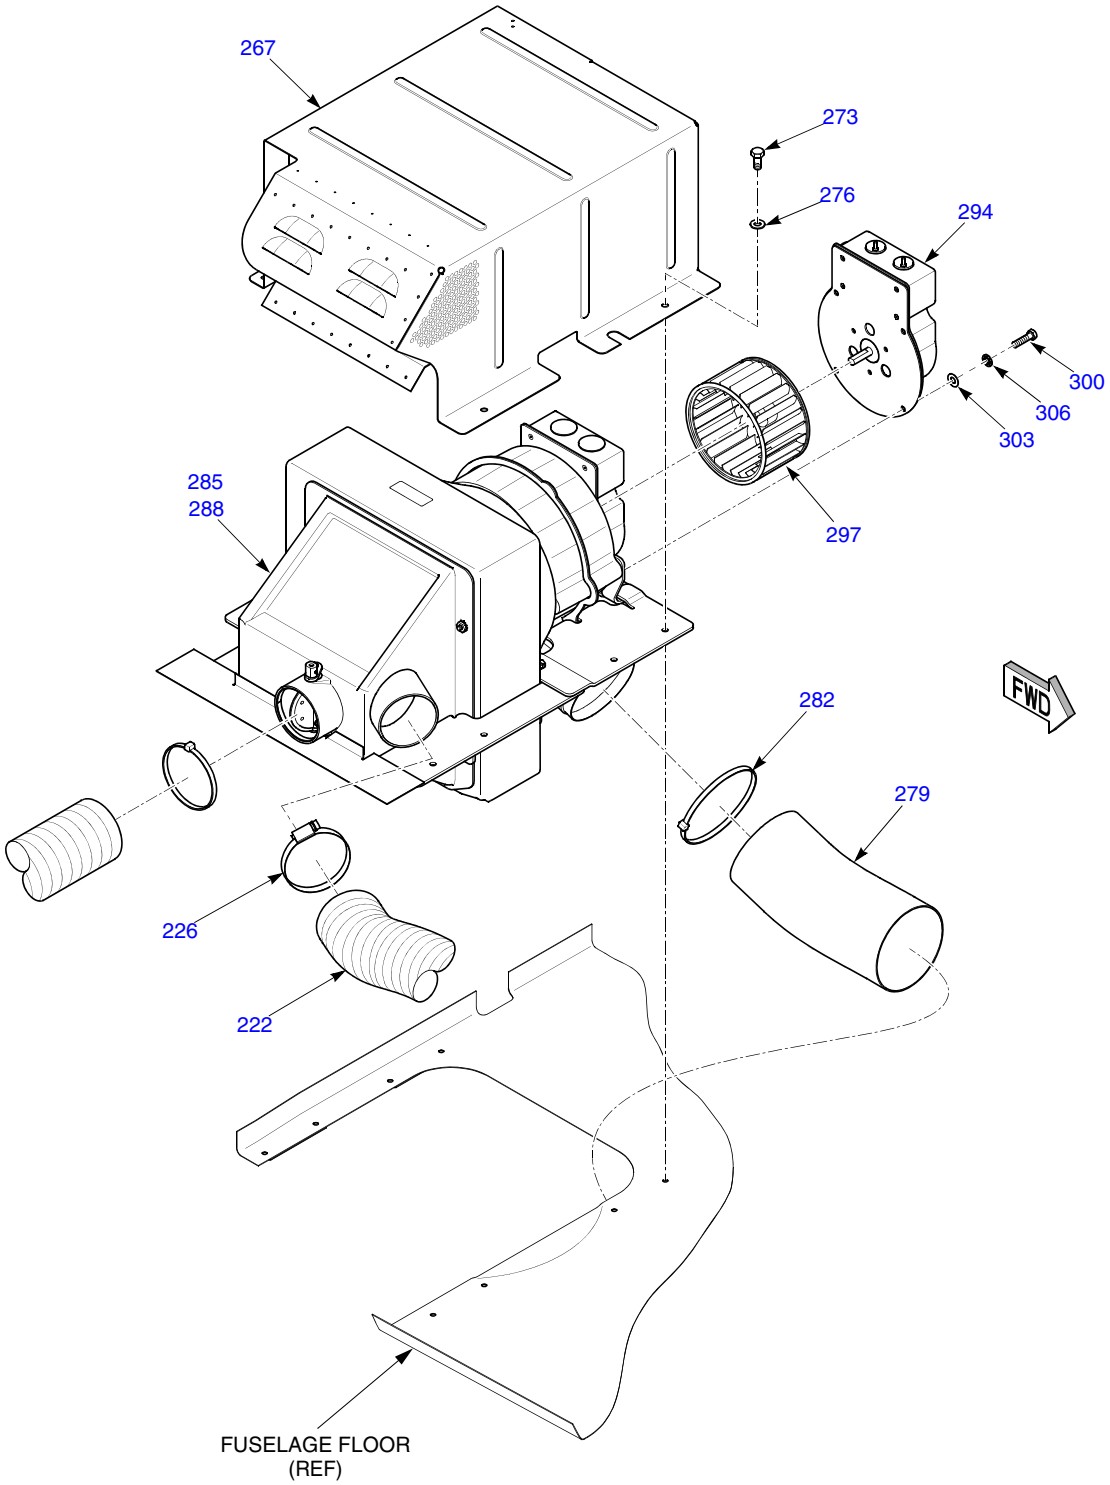

Serials 22-1602, 22-1821, 22-1840, 22-1863 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437 w/ Fan.

DETAIL K

SR22_PC21_1648D

Figure-01
Cabin Duct - Serials 22-1863 thru 22-2437 w/ Fan (11 of 13)

EFFECTIVITY:
Serials 22-1863 thru 22-2437 w/ Fan

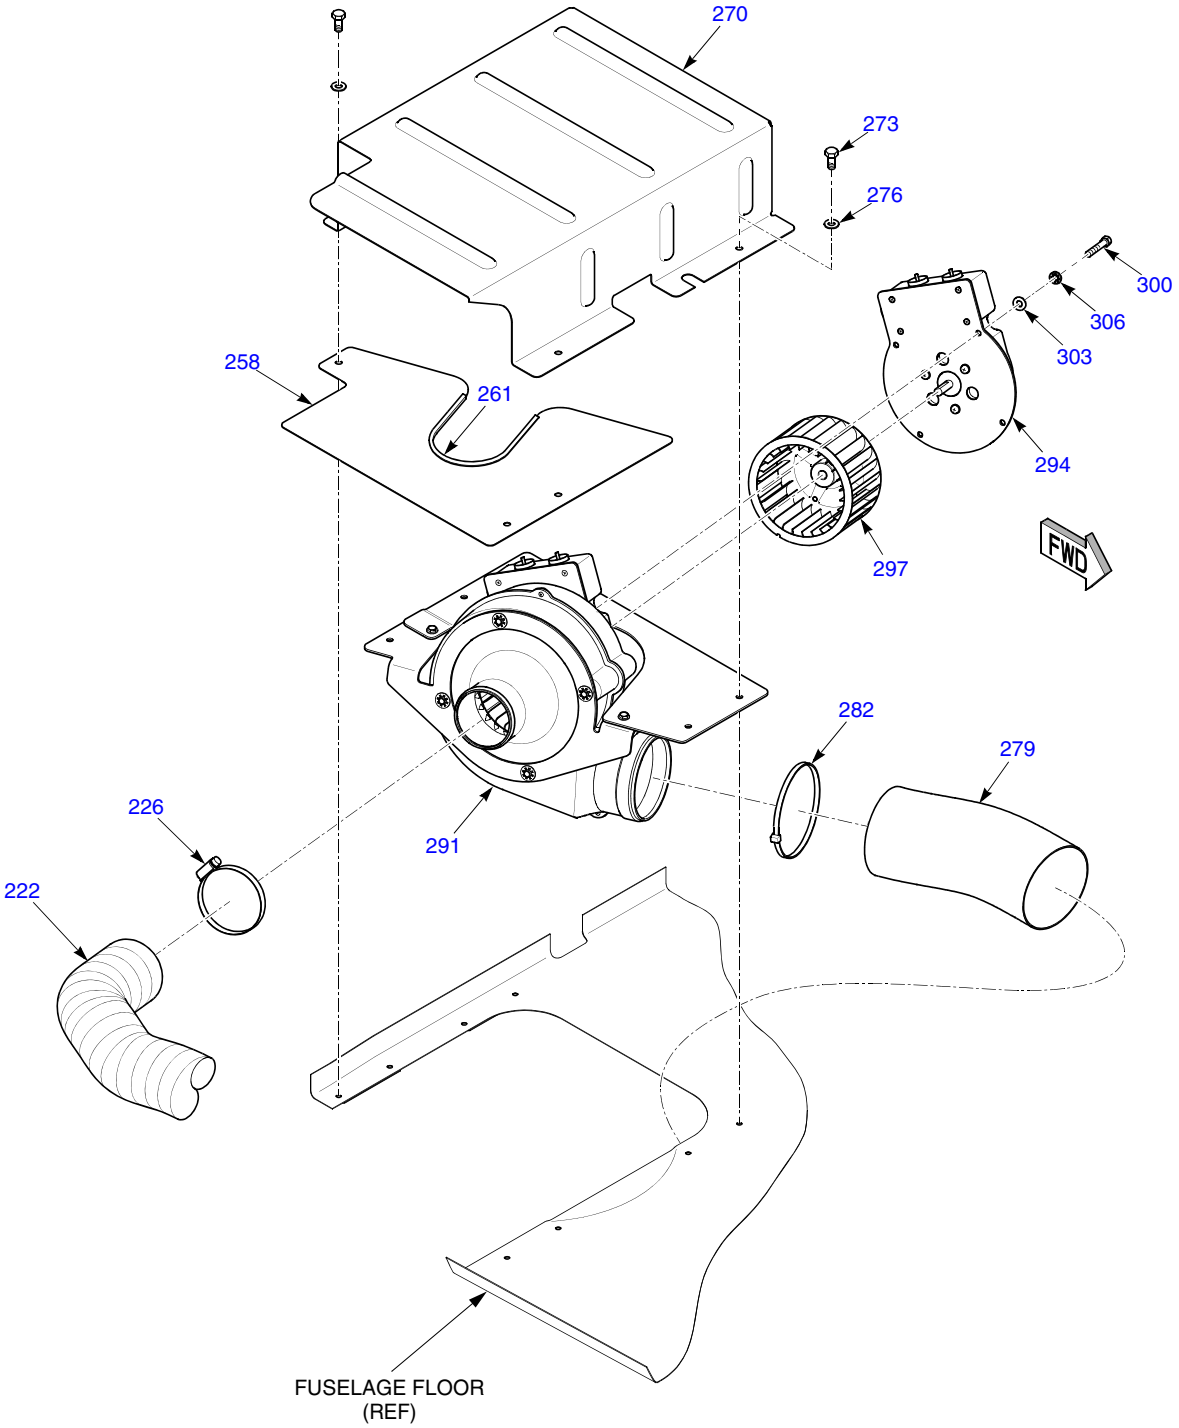

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs w/ Fan.

DETAIL L

SR22_PC21_1650D

Figure-01

Cabin Duct - Serials 22-2438 & subs, 22T-0001 & subs w/ Fan (12 of 13)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs w/ Fan

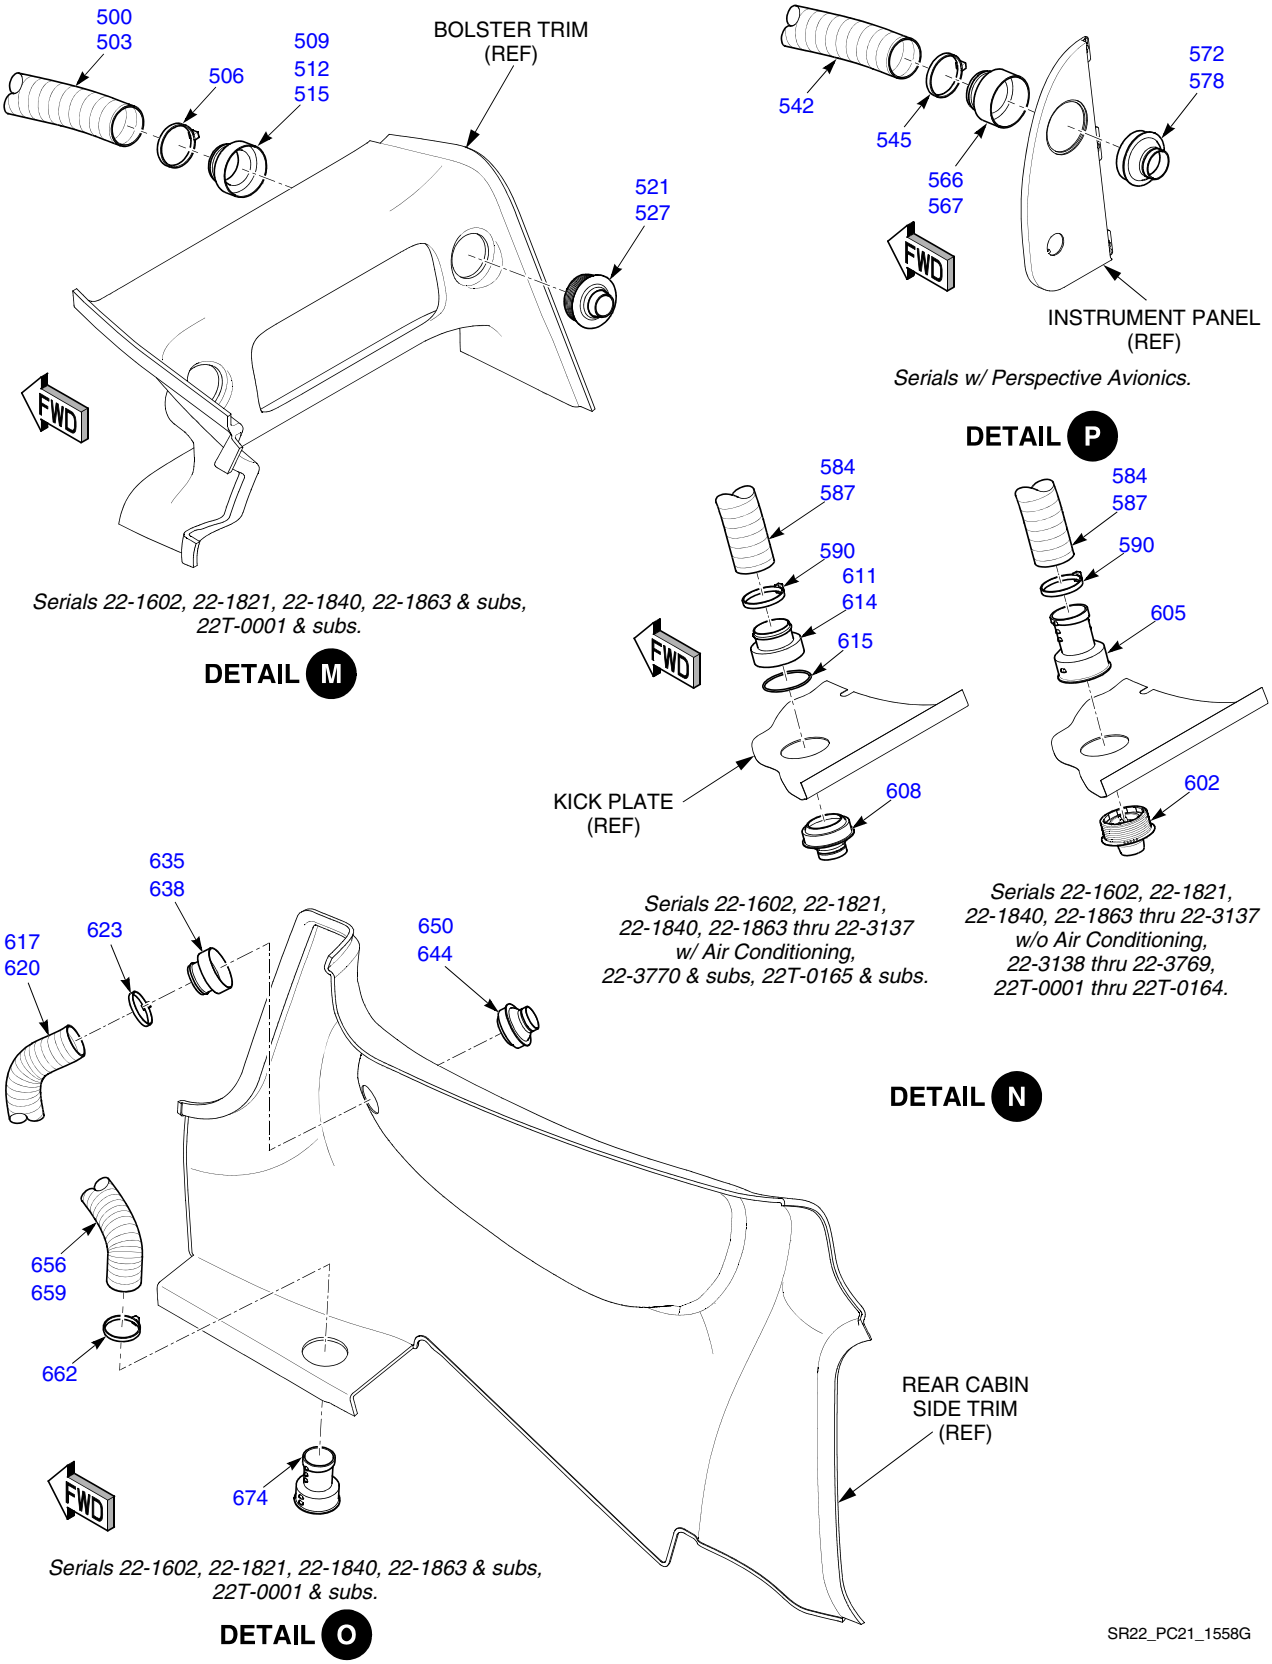

Figure-01

Cabin Duct - Serials 22-1863 & subs, 22T-0001 & subs (13 of 13)

EFFECTIVITY:
Serials 22-1863 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		CABIN DUCT INSTALLATION	0002	1862	NP
	3	14170-101			·DEFROST DUCT	0002	1862	1
	6	50239-040		A	·CABLE TIE	0002	1862	AR
	9	14170-111			·CO-PILOT FRESH AIR DUCT	0002	1862	1
	12	50239-040		A	·CABLE TIE	0002	1862	AR
	15	14170-102			·FRESH AIR TO PLENUM DUCT	0002	1862	1
	18	50239-040		A	·CABLE TIE	0002	1862	AR
	21	12082-001			·LATERAL "Y"	0002	1862	1
	24	10708-116			·PASSENGER AIR DUCT	0002	1862	1
	27	50239-040		A	·CABLE TIE	0002	1862	AR
	30	14170-103			·PILOT FRESH AIR DUCT	0002	1862	1
	33	12824-001			·INLET TEE	0002	1862	2
					ALTERNATE FOR P/N 15301-001			
	34	15301-001			·INLET TEE	0002	1862	2
					ALTERNATE FOR P/N 12824-001			
	36	14170-114			·PASSENGER AIR DUCT	0002	1862	2
	39	13127-001			·VENT ASSEMBLY	0002	1862	2
	42	14170-107			·HEAT RETURN ELBOW DUCT	0002	1862	1
	45	50239-040		A	·CABLE TIE	0002	1862	AR
	48	12082-001			·LATERAL "Y"	0002	1862	1
	51	14170-104			·PILOT HEAT RETURN DUCT	0002	1862	1
	54	50743-301		A	·CLAMP	0002	1862	AR
-	57	50464-002			·AIRDUCT, BALL LOUVER ASSEMBLY	0002	1862	2
	58	PRT OF ITM 57			··BALL LOUVER	0002	1862	2
	59	PRT OF ITM 57			··HOUSING	0002	1862	2
	60	14170-106			·PILOT HEAT DUCT	0002	1862	1
	63	50239-040		A	·CABLE TIE	0002	1862	AR
	66	12082-001			·LATERAL "Y"	0002	1862	1
	69	14170-105			·PASSENGER HEAT DUCT	0002	1862	1
	72	50132-001		A	·TIE DOWN	0002	1862	AR
	75	50239-040		A	·CABLE TIE	0002	1862	AR
	78	50463-200			·HOSE ADAPTOR	0002	1862	2
	81	14170-110			·Y TO Y CONNECTION DUCT	0002	1862	1
	84	50239-040		A	·CABLE TIE	0002	1862	AR
	87	12082-001			·LATERAL "Y"	0002	1862	1
	90	14170-108			·CO-PILOT HEAT DUCT	0002	1862	1
	93	50743-301		A	·CLAMP	0002	1862	AR
	96	14170-109			·PASSENGER HEAT DUCT	0002	1862	1
-	99	50494-002			·DUAL LOCK	0002	1862	AR
-	102	10700-003			·FRESH AIR INLET	0002	1199	2
-	105	10700-004			·FRESH AIR INLET	1200	1435	2
	108	10700-005			·FRESH AIR INLET	1436	1862	2
-	111	12503-101			·WIRE MESH	0002	1862	2
					ALTERNATE FOR P/N 14212-101			
	114	14212-101			·WIRE MESH	0002	1862	2
					ALTERNATE FOR P/N 12503-101			
-	117	12503-102			·AERODUCT TUBE	0002	1862	2
					ALTERNATE FOR P/N 14212-102			
	120	14212-102			·AERODUCT TUBE	0002	1862	2
					ALTERNATE FOR P/N 12503-102			
	123	50743-751		A	·BREEZE CLAMP	0002	1862	2
					ALTERNATE FOR P/N 50743-901			
-	126	50743-901		A	·BREEZE CLAMP	0002	1636	2
					ALTERNATE FOR P/N 50743-751			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	129	MS21266-2N			·GROMMET	0002	1862	AR
-	132	13127-002			·VENT ASSEMBLY	0002	0457	2
-	135	13127-003			·VENT ASSEMBLY	0458	1862	2
-	138	PRT OF ITM 132		A	·NUT	0002	0457	2
	141	50239-020		A	·CABLE, TIE STRAP	0458	1862	1
-	144	50433-002			··EYEBALL AIR VENT	0002	0457	2
	147	13127-101			··FLEXIBLE DUCTING, 1.5" DIAMETER	0002	1862	2
	150	15343-001			··AIR VENTILATION OUTLET ASSEMBLY	0458	1862	2
					ALTERNATE FOR P/N 51268-001			
					ALTERNATE FOR P/N 51268-002			
-	153	51268-001			··AIR VENTILATION OUTLET ASSEMBLY	0458	1862	2
					WHEN EXHTD USE P/N 15343-001			
					ALTERNATE FOR P/N 15343-001			
					ALTERNATE FOR P/N 51268-002			
-	154	51268-002			··AIR VENTILATION OUTLET ASSEMBLY	0458	1862	2
					ALTERNATE FOR P/N 15343-001			
					ALTERNATE FOR P/N 51268-001			
	156	15502-001			··AIR VENTILATION OUTLET SLEEVE	0458	1862	2
					ALTERNATE FOR P/N 51270-001			
-	159	51270-001			··AIR VENTILATION OUTLET SLEEVE	0458	1862	2
					ALTERNATE FOR P/N 15502-001			
	162	12029-003			·CABIN AIR PLENUM	0002	1862	1
	165	MS27039-1-06		A	·SCREW	0002	1862	2
	168	NAS1149F0332P		A	·WASHER	0002	1862	2
	171	AN3-10A		A	·BOLT	0002	1862	2
	174	NAS1149F0332P		A	·WASHER	0002	1862	2
	177	11453-001		A	·RADIUS BLOCK	0002	1862	1
	180	NAS1149F0363P		A	·WASHER	0002	1862	2
	183	MS21044N3		A	·NUT	0002	1862	2
-	186	NO PRT NUMBER			CABIN DUCT INSTALLATION	1863 / 0001	/	NP
	189	20741-105	@		·DEFROST DUCT	1863		1
	192	22115-105	%		·DEFROST DUCT	3026 / 0001	/	1
	195	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	198	19292-001	%		·DUCT, ECS DEFROST	3026 / 0001	/	1
	201	MS35206-244	%	A	·SCREW	3026 / 0001	/	2
	204	NAS1149FN832P	%	A	·WASHER	3026 / 0001	/	2
	207	22125-001	%		·FOAM SEAL, DEFROST DUCT	3026 / 0001	/	1
-	210	21550-001			·COUPLER DUCT	1863	3600	1
					FOR SPARES USE P/N 21550-002			
	213	21550-002			·COUPLER DUCT	3601 / 0001	3660 / 0003	1
	216	21550-003			·COUPLER DUCT	3661 / 0004	/	1
-	219	21891-001	#		·COUPLER DUCT	1863	3608	1
					FOR SPARES USE P/N 21891-002			
	222	21891-002	#		·COUPLER DUCT	3609 / 0001	/	1
	225	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	226	50743-801		A	·CLAMP	1863 / 0001	/	1
	228	21500-001			·VENT ASSEMBLY	1863	2437	1
	231	21799-001			·VENT ASSEMBLY	2438 / 0001	3660 / 0003	1
	234	28965-001			·VENT ASSEMBLY	3661 / 0004	/	1
	237	AN3-4A		A	·BOLT	2438 / 0001	3660 / 0003	3
	240	NAS1149F0332P		A	·WASHER	2438 / 0001	3660 / 0003	3
	243	21549-001			·VENT DUCT	1863 / 0001	/	1
	246	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	249	21535-001			·FLOOR COVER	1863 / 0001	3660 / 0003	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	252	21535-002			·FLOOR COVER	3661 / 0004	/	1
-	255	21866-001			·FLOOR COVER	2438	2946	1
					FOR SPARES USE P/N 21866-002			
	258	21866-002			·FLOOR COVER	2947 / 0001	/	1
	261	50893-001			·GROMMET, FLEXIBLE	2438 / 0001	/	AR
-	264	21528-001			·COVER ASSEMBLY	1863	1966	1
					FOR SPARES USE P/N 21528-002			
	267	21528-002			·COVER ASSEMBLY	1967	2437	1
	270	21806-001			·COVER ASSEMBLY	2438 / 0001	/	1
	273	AN3-4A		A	·BOLT	1863 / 0001	/	8
	276	NAS1149F0332P		A	·WASHER	1863 / 0001	/	8
	279	21548-001			·FAN DUCT	1863 / 0001	/	1
	282	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	285	20970-001			·FAN ASSEMBLY	1863	2420	1
					FOR SPARES USE P/N 20970-002			
	288	20970-002			·FAN ASSEMBLY	2421	2437	1
	291	20970-003			·FAN ASSEMBLY	2438 / 0001	/	1
	294	20970-202			··BLOWER MOTOR	2421 / 0001	/	1
	297	20970-203			··BLOWER WHEEL	2421 / 0001	/	1
	300	NAS1096-2-10		A	··BOLT	2421 / 0001	/	4
	303	NAS1149FN816P		A	··WASHER	2421 / 0001	/	4
	306	MS35333		A	··STAR WASHER	2421 / 0001	/	4
	309	20715-001			·AFT DUCT	1863 / 0001	/	1
	312	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	315	20714-001			·MID DUCT	1863 / 0001	/	1
-	318	AN3-5A		A	·BOLT	1863 / 0001	/	2
-	321	NAS1149F0363P		A	·WASHER	1863 / 0001	/	2
-	324	21518-001		A	·MOUNTING BRACKET	1863 / 0001	/	1
-	327	MS51861-34		A	·SCREW	1863 / 0001	/	3
	330	20716-001			·FORWARD DUCT	1863 / 0001	/	1
	333	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
-	336	51675-010		A	·STUD	1863 / 0001	/	1
-	339	AN970-3		A	·WASHER	1863 / 0001	/	2
-	342	MS21044N3		A	·NUT	1863 / 0001	/	1
-	345	21533-001		A	·SUPPORT	1863 / 0001	/	1
-	348	MS51861-34		A	·SCREW	1863 / 0001	/	1
-	351	20713-002			·AIR DISTRIBUTION MANIFOLD	1863	2201	1
					FOR SPARES USE P/N 20713-003			
-	354	20713-003			·AIR DISTRIBUTION MANIFOLD	2202	2437	1
	357	20713-004	@		·AIR DISTRIBUTION MANIFOLD	2438		1
	360	AN3-11A		A	··BOLT	1863 / 0001	/	3
	363	NAS1149F0363P		A	··WASHER	1863 / 0001	/	6
	366	20733-001		A	··STAND OFF	1863 / 0001	/	3
	369	AN970-3		A	··WASHER	1863 / 0001	/	6
	372	AN3-10A		A	··BOLT	1863 / 0001	/	3
-	375	22106-001	%		·AIR DISTRIBUTION MANIFOLD	3026 / 0001	3932 / 0486	1
					FOR SPARES USE P/N 22106-004			
-	376	22106-002	%		·AIR DISTRIBUTION MANIFOLD	3929 / 0487	4222 / 1083	1
					FOR SPARES USE P/N 22106-004			
-	377	22106-003	%		·AIR DISTRIBUTION MANIFOLD	4223 / 1084	4318 / 1278	1
					FOR SPARES USE P/N 22106-004			
	378	22106-004	%		·AIR DISTRIBUTION MANIFOLD	4319 / 1279	/	1
					ALTERNATE FOR P/N 22106-003			
	379	AN3-11A		A	··BOLT	3026 / 0001	/	3

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	381	NAS1149F0363P		A	··WASHER	3026 / 0001	/	6
	384	22116-001		A	··STAND OFF	3026 / 0001	/	3
	387	AN970-3		A	··WASHER	3026 / 0001	/	6
	390	AN3-10A		A	··BOLT	3026 / 0001	/	3
	393	20740-101	@		·PILOT PANEL DUCT	1863		1
	396	22114-103	%		·PILOT PANEL DUCT	3026 / 0001	/	1
	399	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	500	20740-103	@		·CO-PILOT PANEL DUCT	1863		1
	503	22114-107	%		·CO-PILOT PANEL DUCT	3026 / 0001	/	1
	506	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	509	51270-001	@		·AIR VENT BACKSHELL	1863		2
	512	51270-002	%		·AIR VENT BACKSHELL	3026 / 0001	3661 / 0003	2
			^			3828 / 0268		
	515	24289-102	%		·AIR VENT BACKSHELL	3662 / 0004	/	2
-	516	24289-105			·AIR VALVE ASSEMBLY (METAL, NICKLE)	2056		2
-	518	51268-002			·AIR VALVE ASSEMBLY (PLASTIC, BLACK)	1863 / 0001	3661 / 0003	2
-	519	24289-106			·AIR VALVE ASSEMBLY (METAL, BRUSHED ALUMINUM)	2056		2
	521	51268-003			·AIR VALVE ASSEMBLY (METAL, BLACK)	1863 / 0001	3661 / 0003	2
-	522	51268-004			·AIR VALVE ASSEMBLY (METAL, CHROME)	1639	2055	2
-	524	24289-101			·AIR VALVE ASSEMBLY (PLASTIC, BLACK)	3662 / 0004	/	2
-	525	51268-006			·AIR VALVE ASSEMBLY (METAL, BUFF & CLEAR ANODIZE)	1639	2055	2
	527	24289-103			·AIR VALVE ASSEMBLY (METAL, BLACK)	3662 / 0004	/	2
-	530	51268-005	$		·AIR VALVE ASSEMBLY (METAL, BRIGHT NICKLE)	/ 0079	/	2
			^			3828 / 0268		
-	533	22122-001	%		·LATERAL "Y" DUCT	3026	3638	2
					FOR SPARES USE P/N 28878-001			
	536	28878-001	%		·LATERAL "Y" DUCT	3639 / 0001	/	2
	539	50239-040	%	A	·CABLE TIE	3026 / 0001	/	AR
	542	22114-102	%		·PILOT DISPLAY DUCT	3026 / 0001	/	1
	545	50239-040	%	A	·CABLE TIE	3026 / 0001	/	AR
	548	22114-104	%		·PILOT PANEL "Y" DUCT	3026 / 0001	/	1
	551	50239-040	%	A	·CABLE TIE	3026 / 0001	/	AR
	554	22114-105	%		·CO-PILOT PANEL "Y" DUCT	3026 / 0001	/	1
	557	50239-040	%	A	·CABLE TIE	3026 / 0001	/	AR
	560	22114-106	%		·CO-PILOT DISPLAY DUCT	3026 / 0001	/	1
	563	50239-040	%	A	·CABLE TIE	3026 / 0001	/	AR
	566	51270-002	%		·AIR VENT BACKSHELL	3026 / 0001	3661 / 0003	2
			^			3828 / 0268		
	567	24289-102	%		·AIR VENT BACKSHELL	3662 / 0004	/	2
-	568	24289-105			·AIR VALVE ASSEMBLY (METAL, NICKLE)	2056		2
-	569	51268-002	%		·AIR VALVE ASSEMBLY (PLASTIC, BLACK)	3026 / 0001	3661 / 0003	2
-	571	24289-106			·AIR VALVE ASSEMBLY (METAL, BRUSHED ALUMINUM)	2056		2
	572	51268-003	%		·AIR VALVE ASSEMBLY (METAL, BLACK)	3026 / 0001	3661 / 0003	2
-	573	51268-004			·AIR VALVE ASSEMBLY (METAL, CHROME)	1639	2055	2
-	575	24289-101			·AIR VALVE ASSEMBLY (PLASTIC, BLACK)	3662 / 0004	/	2
-	576	51268-006			·AIR VALVE ASSEMBLY (METAL, BUFF & CLEAR ANODIZE)	1639	2055	2
	578	24289-103			·AIR VALVE ASSEMBLY (METAL, BLACK)	3662 / 0004	/	2
-	581	51268-005	$		·AIR VALVE ASSEMBLY (METAL, BRIGHT NICKLE)	/ 0079	/	2
			^			3828 / 0268		
	584	20741-101	@		·PILOT FLOOR DUCT	1863		1
	587	22115-101	%		·PILOT FLOOR DUCT	3026 / 0001	/	1
	590	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	593	20741-103	@		·CO-PILOT FLOOR DUCT	1863		1
	596	22115-103	%		·CO-PILOT FLOOR DUCT	3026 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	599	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	602	15343-001			·AIR VENTILATION OUTLET W/O AIR CON	1863	3137	2
					W/ OR W/O AIR CON	3138 / 0001	3769 / 0164	2
	605	15502-001			·AIR VENTILATION OUTLET SLEEVE W/O AIR CON	1863	3137	2
					W/ OR W/O AIR CON	3138 / 0001	3769 / 0164	2
	608	51268-002			·AIR VALVE ASSEMBLY W/ AIR CON	1863	3137	2
					W/ OR W/O AIR CON	3770 / 0165	/	2
	611	51270-002			·AIR VENT BACKSHELL W/ AIR CON	1863	3137	2
			@		ALTERNATE FOR P/N 51270-001			
					W/ OR W/O AIR CON	3770 / 0165	/	2
	614	51270-001	@		·AIR VENT BACKSHELL W/ AIR CON	1863	3137	2
			@		ALTERNATE FOR P/N 51270-002			
					W/ OR W/O AIR CON	3770 / 0165		2
	615	50648-033			·O-RING W/ AIR CON	1863	3137	2
					W/ OR W/O AIR CON	3770 / 0165		
	617	20740-102	@		·PASSENGER PANEL DUCT, PILOT SIDE	1863		1
	620	22114-101	%		·PASSENGER PANEL DUCT, PILOT SIDE	3026 / 0001	/	1
	623	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	626	20740-104	@		·PASSENGER PANEL DUCT, CO-PILOT SIDE	1863		1
	629	22114-108	%		·PASSENGER PANEL DUCT, CO-PILOT SIDE	3026 / 0001	/	1
	632	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	635	51270-001			·AIR VENT BACKSHELL	1863 / 0001	3661 / 0003	2
			^			3828 / 0268		
	638	24289-102			·AIR VENT BACKSHELL	3662 / 0004	/	2
-	539	24289-105			·AIR VALVE ASSEMBLY (METAL, NICKLE)	2056		2
-	641	51268-002			·AIR VALVE ASSEMBLY (PLASTIC, BLACK)	1863 / 0001	3661 / 0003	2
-	542	24289-106			·AIR VALVE ASSEMBLY (METAL, BRUSHED ALUMINUM)	2056		2
	644	51268-003			·AIR VALVE ASSEMBLY (METAL, BLACK)	1863 / 0001	3661 / 0003	2
-	573	51268-004			·AIR VALVE ASSEMBLY (METAL, CHROME)	1639	2055	2
-	647	24289-101			·AIR VALVE ASSEMBLY (PLASTIC, BLACK)	3662 / 0004	/	2
-	576	51268-006			·AIR VALVE ASSEMBLY (METAL, BUFF & CLEAR ANODIZE)	1639	2055	2
	650	24289-103			·AIR VALVE ASSEMBLY (METAL, BLACK)	3662 / 0004	/	2
-	653	51268-005	$		·AIR VALVE ASSEMBLY (METAL, BRIGHT NICKLE)	/ 0079	/	2
			^			3828 / 0268		
	656	20741-102	@		·PASSENGER FLOOR DUCT, PILOT SIDE	1863		1
	659	22115-102	%		·PASSENGER FLOOR DUCT, PILOT SIDE	3026 / 0001	/	1
	662	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	665	20741-104	@		·PASSENGER FLOOR DUCT, CO-PILOT SIDE	1863		1
	668	22115-104	%		·PASSENGER FLOOR DUCT, CO-PILOT SIDE	3026 / 0001	/	1
	671	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	674	15502-001			·AIR VENTILATION OUTLET SLEEVE	1863 / 0001	/	2
	677	10700-005			·FRESH AIR INLET	1863	2437	2
	680	18461-001			·FRESH AIR INLET	2438 / 0001	/	1
	683	12503-101			·WIRE MESH	1863	2437	2
					ALTERNATE FOR P/N 14212-101			
-	686	14212-101			·WIRE MESH	1863	2437	2
					ALTERNATE FOR P/N 12503-101			
-	689	12503-102			·FRESH AIR DUCT	1863	2437	1
					ALTERNATE FOR P/N 14212-102			
	692	14212-102			·FRESH AIR DUCT	1863	2437	1
					ALTERNATE FOR P/N 12503-102			
	695	18289-001			·FRESH AIR DUCT	2438	3124	1
					FOR SPARES USE P/N 19629-001			
	698	19629-001			·FRESH AIR DUCT	3125 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	701	18322-001			·FRESH AIR FILTER	2438 / 0001	/	1
	704	18892-001			·DUCT INSULATION	2664	3124	1
					BEFORE SB2X-21-02			
					·DUCT INSULATION	2438	2663	1
					AFTER SB2X-21-02			
					FOR SPARES USE P/N 18892-002			
	707	18892-002			·DUCT INSULATION	3125 / 0001	3747 / 0110	1
					FOR SPARES USE P/N 18892-003			
	710	18892-003			·DUCT INSULATION	3748 / 0111	/	1
	713	50743-751		A	·BREEZE CLAMP	1863	2437	1
					ALTERNATE FOR P/N 50743-901			
-	716	50743-901		A	·BREEZE CLAMP	1863	2437	1
					ALTERNATE FOR P/N 50743-751			
	719	50239-040		A	·CABLE TIE	1863	2437	AR
	722	50743-801		A	·CLAMP	2438 / 0001	/	2
	725	MS21266-2N			·GROMMET	1863	2437	AR
-	728	16997-001			·FRESH AIR INLET CAP	1863	2437	1
-	731	50743-751		A	·BREEZE CLAMP	1863	2437	1
					ALTERNATE FOR P/N 50743-901			
-	734	50743-901		A	·BREEZE CLAMP	1863	2437	1
					ALTERNATE FOR P/N 50743-751			
-	737	50132-001		A	·TIE DOWN	1863 / 0001	/	AR
					REFERENCE ITEMS NOT PART OF ASSY/INSTL			
	400	RF 25-10-04 DET			INTERIOR TRIM, GLARESHIELD ASSY			
	401	RF 25-10-04 DET			INTERIOR TRIM, ARMREST			
	402	RF 25-10-05 DET			INTERIOR TRIM, LH REAR CABIN SIDE			
	403	RF 25-10-04 DET			INTERIOR TRIM, KICK PLATE			
	404	RF 25-10-04 DET			INTERIOR TRIM, CENTER BOLSTER ASSY			
	405	RF 21-60-01 DET			DUAL ACTUATOR/MOUNTING PLATE ASSEMBLY			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2334, 22-2420; REFER TO SERIAL 22-2438 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					4) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 FOR PART IDENTIFICATION.			
			@		INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			
			%		INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.			
			#		INSTALLED ON AIRCRAFT W/ FAN OPTION.			
			$		INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 & SUBS AS OPTIONAL EQUIPMENT.			
			^		NICKEL VENT OPTION.			

Intentionally Left Blank

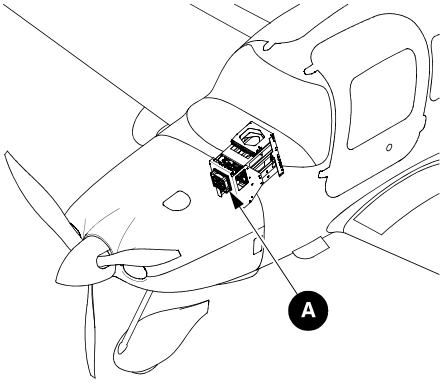

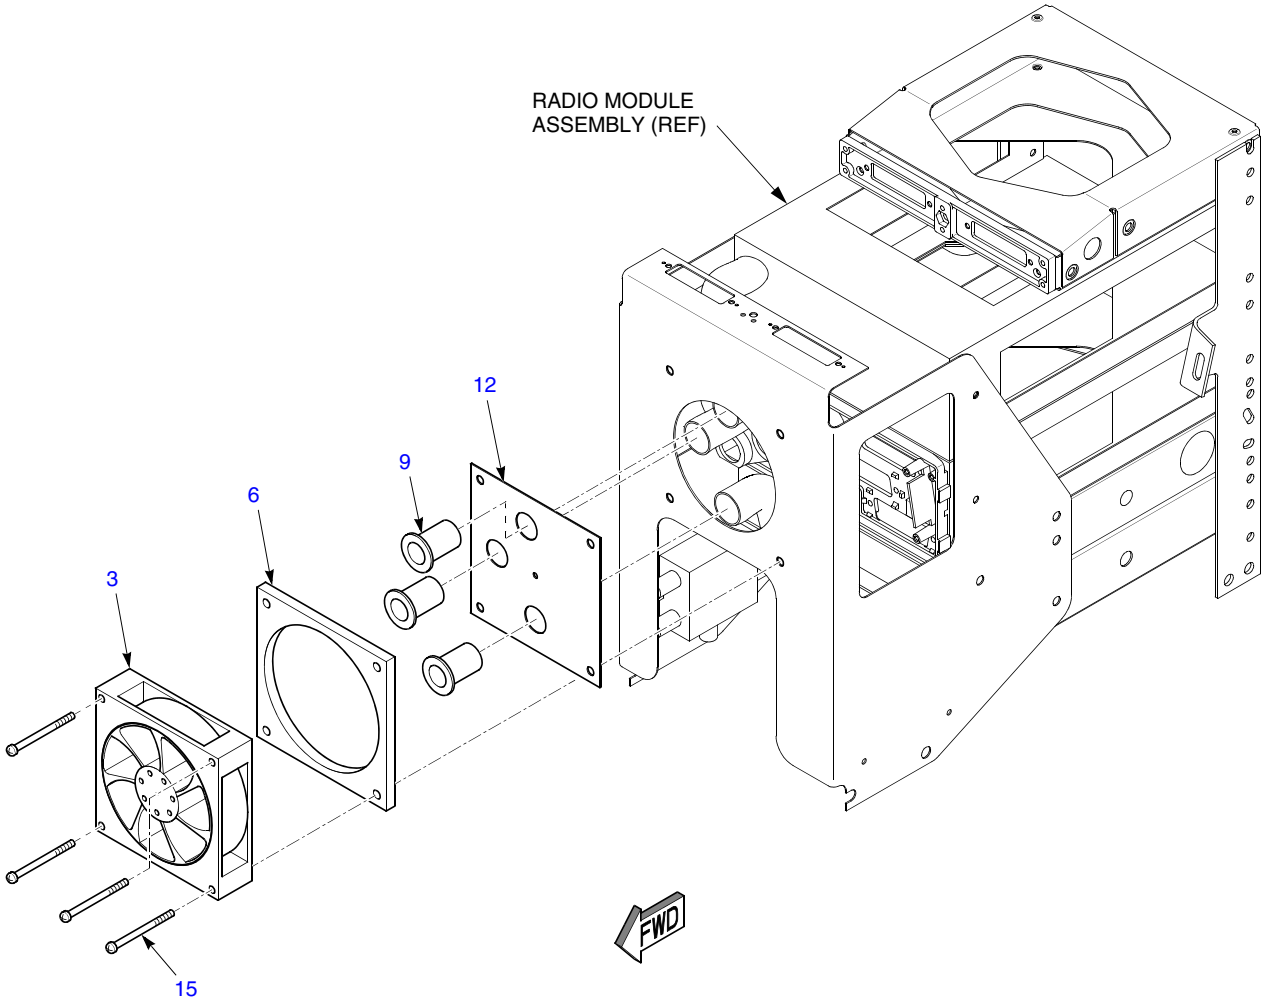

Serials 22-0002 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

DETAIL A

SR22_PC21_1456A

Figure-02
Cooling Fan - Serials 22-0002 & subs w/o Perspective (1 of 3)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

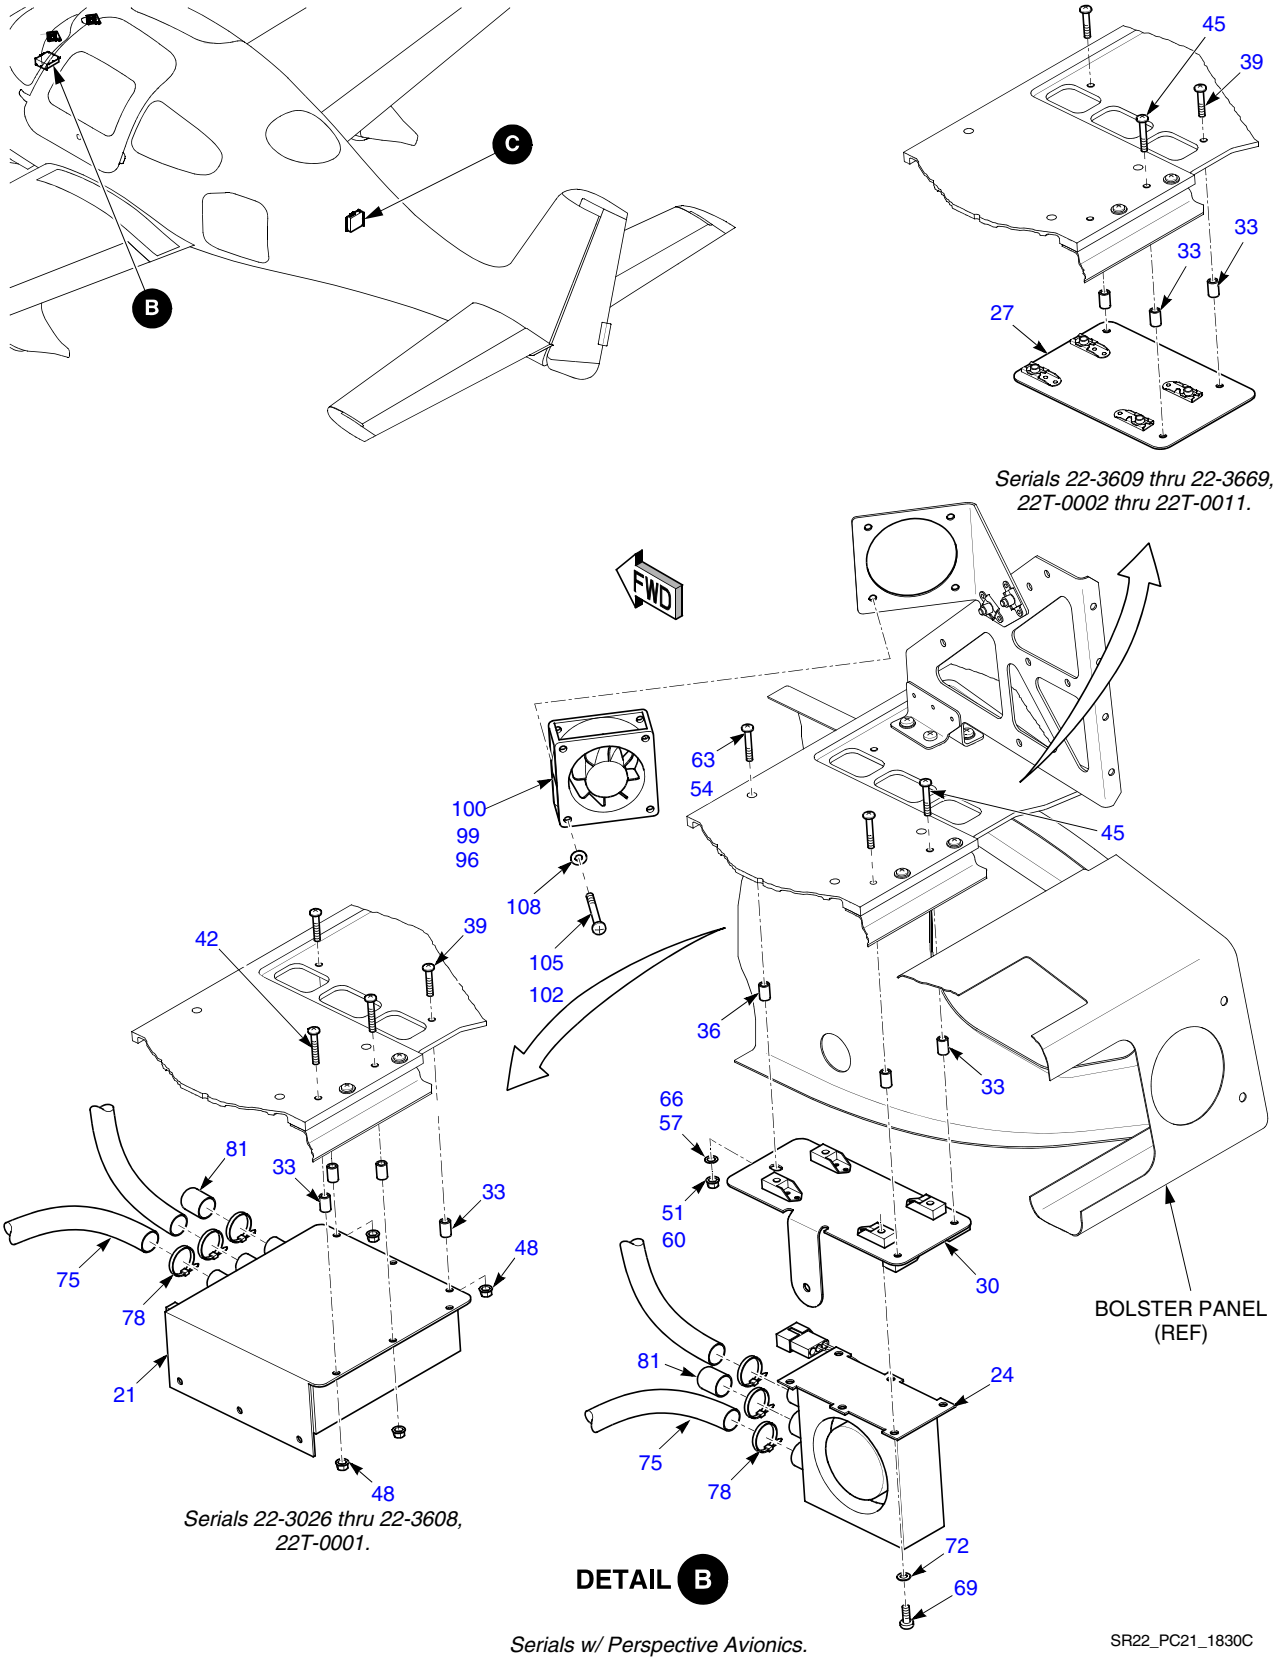

Figure-02
Cooling Fan - Serials w/ Perspective (2 of 3)

EFFECTIVITY:
All

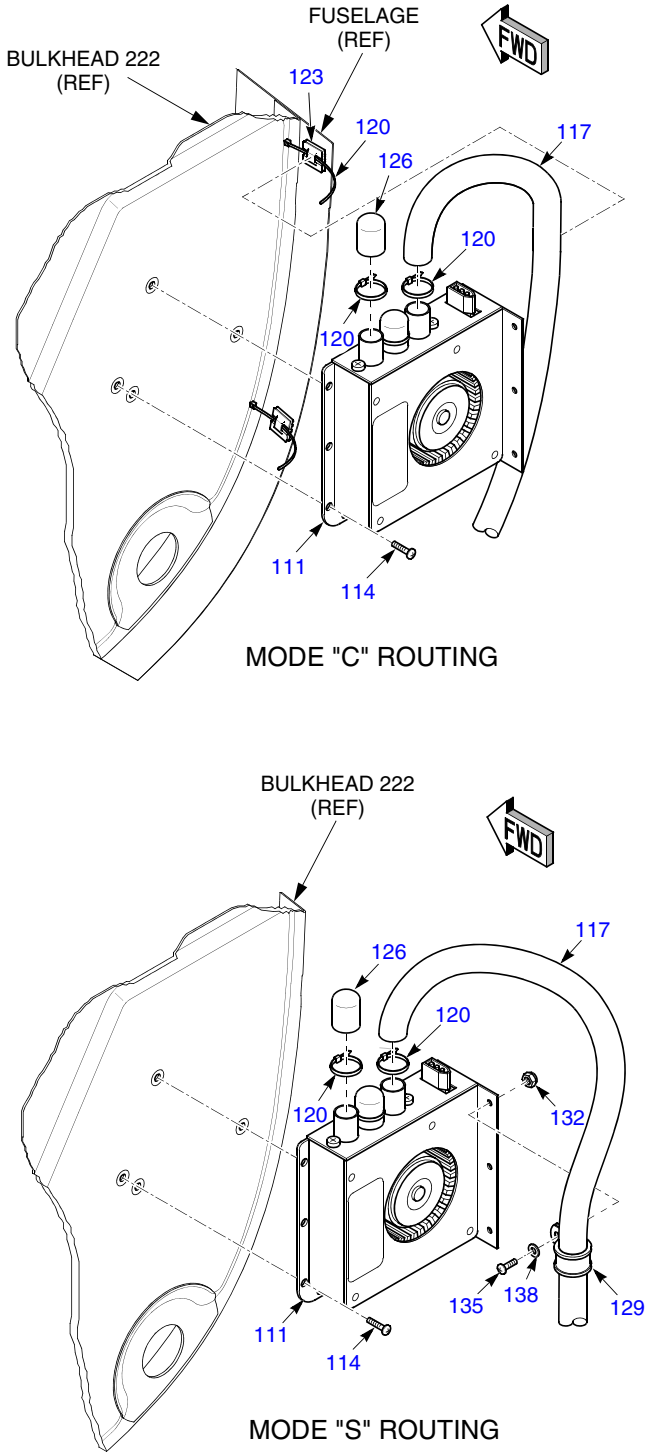

Serials 22-3026 thru 22-3369 w/ Perspective Avionics.

SR22_PC21_1865A

Figure-02

Cooling Fan - Serials 22-3026 thru 22-3369 w/ Perspective (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		COOLING FAN INSTALL W/O PERSPECTIVE AVIONICS	0002		NP
	3	12710-001			·FAN, RADIO MODULE ASSEMBLY COOLING	0002		1
	6	12709-001			·SPACER	0002		1
	9	50145-301			·BUSHING	0002		3
	12	12708-002			·FAN PLATE	0002		1
	15	MS35206-237		A	·SCREW	0002		4
-	18	NO PRT NUMBER			COOLING FAN INSTALL W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	21	53022-001			·FAN, AVIONICS COOLING	3026 / 0001	3608 / 0001	1
	24	28959-001			·FAN, AVIONICS COOLING	3609 / 0002	/	1
	27	28659-001			·MOUNTING PLATE	3609 / 0002	3669 / 0011	1
	30	28659-002			·MOUNTING PLATE	3670 / 0012	/	1
	33	NAS43DD1-24FC		A	·SPACER	3026 / 0001	3608 / 0001	4
						3609 / 0002	3669 / 0011	3
						3670 / 0012	/	2
	36	NAS43DD4-30FC		A	·SPACER	3670 / 0012	/	1
	39	MS35206-232		A	·SCREW	3026 / 0001	3669 / 0011	2
	42	MS35206-233		A	·SCREW	3026 / 0001	3608 / 0001	2
	45	MS35206-234		A	·SCREW	3609 / 0002	3669 / 0011	1
						3670 / 0012	/	2
	48	MS21042L06		A	·NUT	3026 / 0001	3608 / 0001	4
	51	MS21044N3	#	A	·NUT	3670 / 0012	/	1
	54	MS27039-1-16	#	A	·SCREW	3670 / 0012	/	1
	57	NAS1149F0332P	#	A	·WASHER	3670 / 0012	/	1
	60	MS21083N3	$	A	·NUT	3670 / 0012	/	1
	63	MS27039-1-23	$	A	·SCREW	3670 / 0012	/	1
	66	19234-001	$	A	·WASHER	3670 / 0012	/	1
	69	MS27039-0807		A	·SCREW	3609 / 0002	/	4
	72	NAS1149FN832P		A	·WASHER	3609 / 0002	/	4
	75	50722-001			·HOSE	3026 / 0001	/	AR
	78	50239-020			·CABLE TIE	3026 / 0001	/	AR
	81	PRT OF ITM 21	@		·PLUG	3026 / 0001	/	1
-	84	MS21919WDG12		A	·CLAMP	3026 / 0001	/	1
-	87	MS35206-247		A	·SCREW	3026 / 0001	/	1
-	90	MS35206-245		A	·SCREW	3026 / 0001	/	1
-	93	NAS1149FN816P		A	·WASHER	3026 / 0001	/	1
	96	24647-002			·FAN, DISPLAY COOLING	3026	3428	2
					FOR SPARES USE P/N 24647-003			
	99	24647-003			·FAN, DISPLAY COOLING	3429 / 0001	3914 / 0443	2
					FOR SPARES USE P/N 24647-004			
	100	24647-004			·FAN, DISPLAY COOLING	3915 / 0444	/	2
	102	MS27039-0823		A	·SCREW	3026	3428	8
	105	MS27039-0819		A	·SCREW	3429 / 0001	/	8
	108	NAS1149FN832P		A	·WASHER	3026 / 0001	/	8
	111	53022-001			·FAN, TRANSPONDER COOLING	3026	3369	1
	114	MS35206-228		A	·SCREW	3026	3369	4
	117	50722-001			·HOSE	3026	3369	AR
	120	50239-020			·CABLE TIE	3026	3369	AR
	123	50132-001			ANCHOR, CABLE TIE	3026	3369	AR
	126	PRT OF ITM 111			·PLUG	3026	3369	1
	129	MS21919WDG12		A	·CLAMP	3026	3369	1
	132	MS21044N06		A	·NUT	3026	3369	1
	135	MS35206-230		A	·SCREW	3026	3369	1
	138	NAS1149FN332P		A	·WASHER	3026	3369	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
			@		INSTALLED ON AIRCRAFT WITH GFC 700 AUTOPILOT.			
			#		WITH SINGLE AHRS UNIT			
			$		WITH DUAL AHRS UNIT			

Intentionally Left Blank

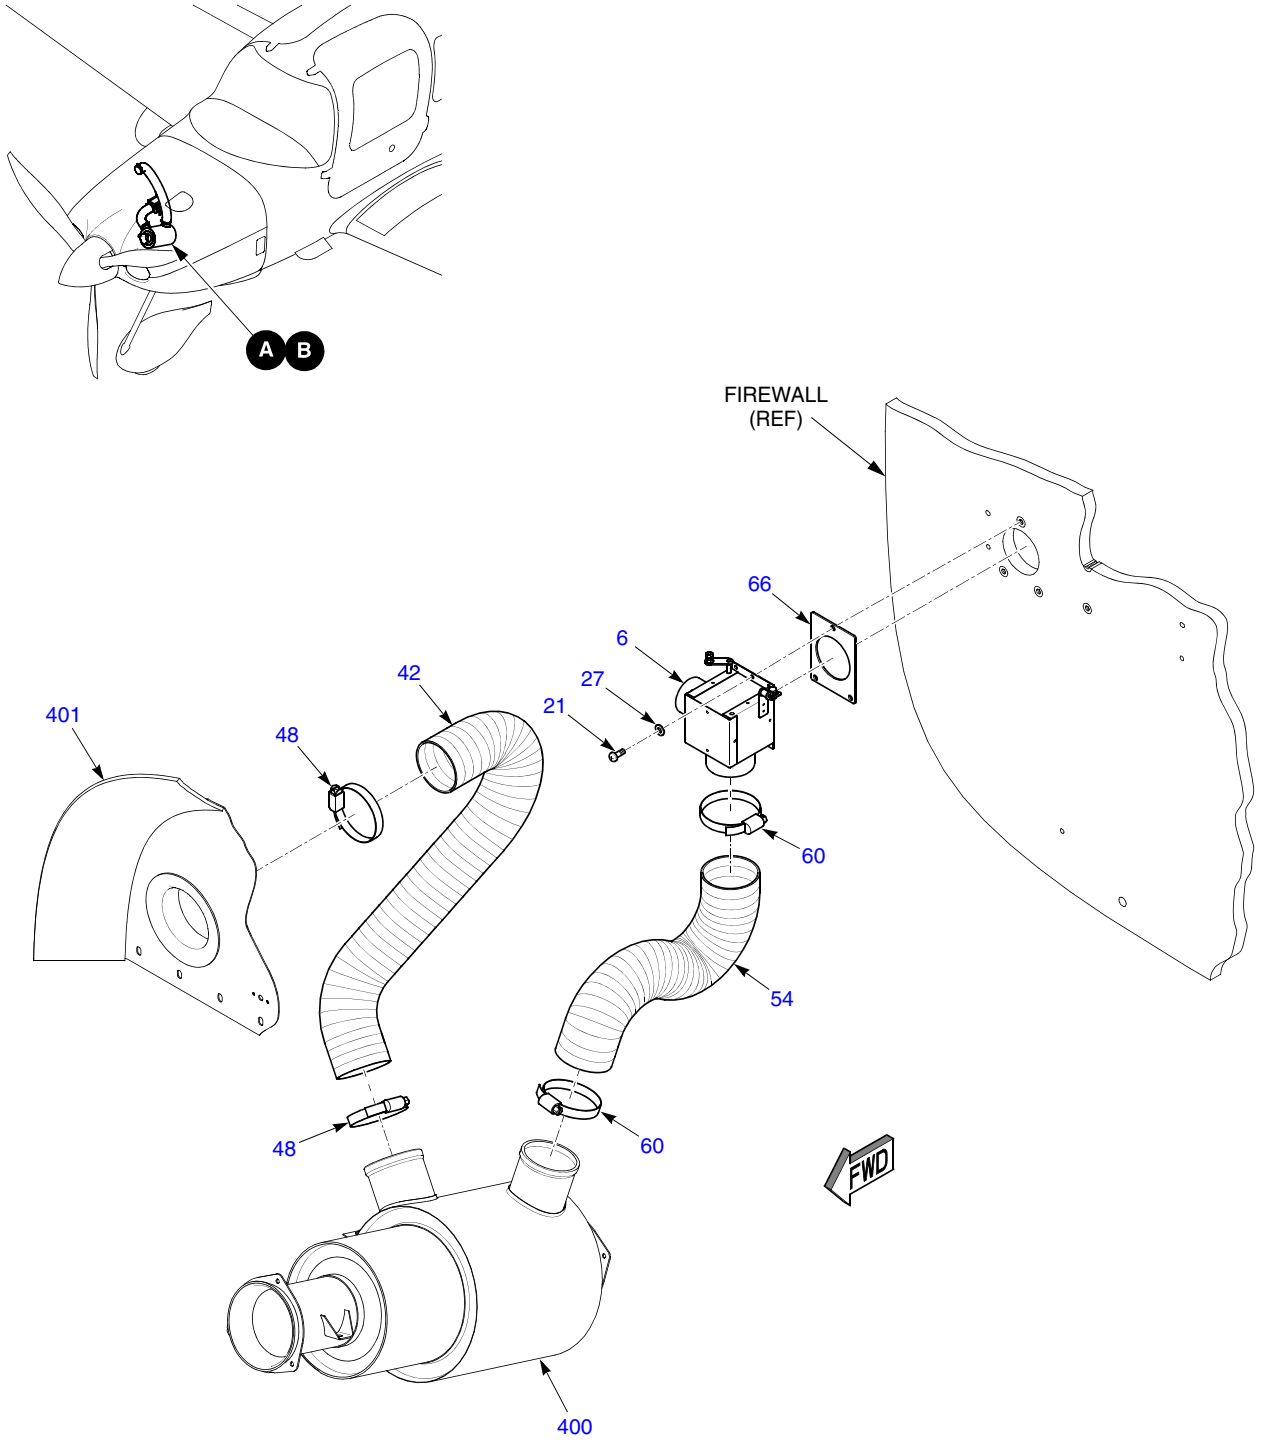

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

DETAIL A

SR22_PC21_1146C

Figure-01

Hot Air Valve - Serials 22-0002 thru 22-1862 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-1862

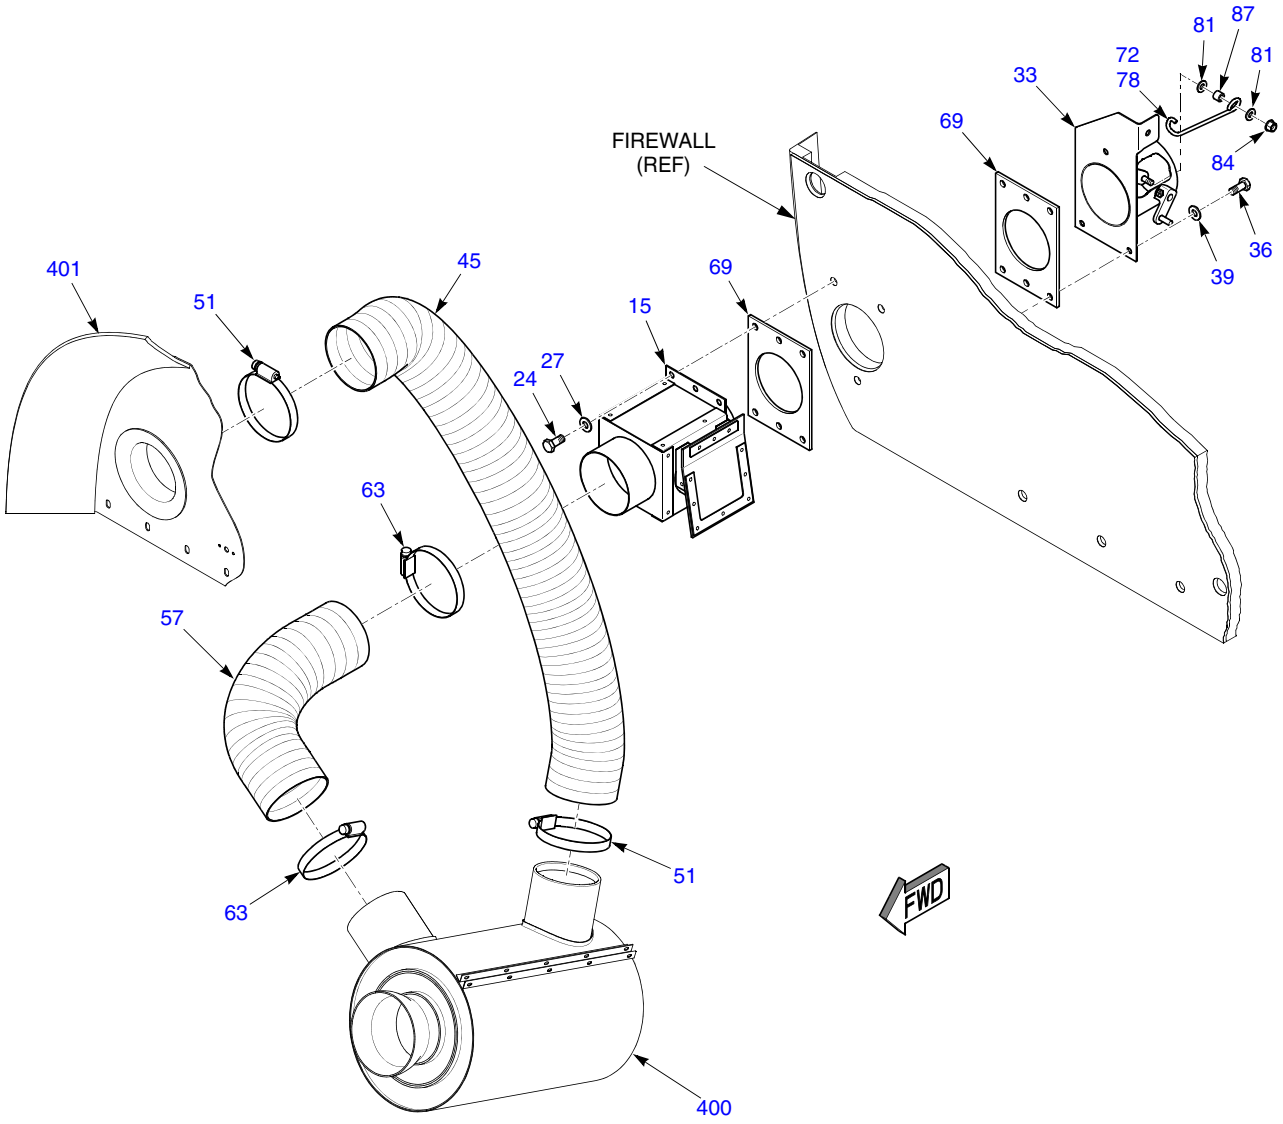

Serials 22-1602, 22-1821, 22-1840, 22-1863 thru 22-2437.

DETAIL B

SR22_PC21_1547C

Figure-01

Hot Air Valve - Serials 22-1863 thru 22-2437 (2 of 2)

EFFECTIVITY:
Serials 22-1863 thru 22-2437

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		HOT AIR VALVE	0002	2437	NP
-	3	14116-001			·HOT AIR VALVE	0002	0251	1
					WHEN EXHTD USE P/N 14116-002			
	6	14116-002			·HOT AIR VALVE	0252	1601	1
					ALTERNATE FOR P/N 14116-001	1603	1862	
-	9	20763-001			·HOT AIR VALVE	1602	1602	1
-	12	20763-002			·HOT AIR VALVE	1863	1914	1
					FOR SPARES USE P/N 20763-003			
	15	20763-003			·HOT AIR VALVE	1915	2437	1
					BEFORE SB2X-21-01			
					·HOT AIR VALVE	1863	1914	1
					AFTER SB2X-21-01			
	21	MS27039-1-06		A	·SCREW	0002	1862	3
	24	AN3-4A		A	·BOLT	1863	2437	3
	27	NAS1149F0332P		A	·WASHER	0002	2437	3
-	30	20754-001			·COUPLER ASSEMBLY	1602	1602	1
	33	20754-002			·COUPLER ASSEMBLY	1863	2437	1
	36	AN3-4A		A	·BOLT	1863	2437	3
	39	NAS1149F0332P		A	·WASHER	1863	2437	3
	42	14170-112			·DUCT	0002	1862	1
	45	21552-001			·DUCT	1863	2437	1
	48	50743-301		A	·CLAMP	0002	1862	2
	51	50743-801		A	·CLAMP	1863	2437	2
	54	14170-113			·DUCT	0002	1862	1
	57	21551-001			·DUCT	1863	2437	1
	60	50743-301		A	·CLAMP	0002	1862	2
	63	50743-801		A	·CLAMP	1863	2437	2
	66	13370-001			·GASKET	0010	1862	1
	69	20755-001			·GASKET	1863	2437	2
	72	20747-003			·LINKAGE	1863	2437	1
					BEFORE SB2X-21-01			
				75	·LINKAGE	1863	1914	1
					AFTER SB2X-21-01			
					ALTERNATE FOR P/N 20747-004			
	78	20747-004		78	·LINKAGE	1863	1914	1
					AFTER SB2X-21-01			
					ALTERNATE FOR P/N 20747-003			
	81	NAS1149F0332P		A	·WASHER	1863	2437	2
	84	MS21042-3		A	·NUT	1863	2437	1
	87	NAS43HT3-14			·SPACER	1863	2437	1
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 78-20-01 DET			HEAT EXCHANGER			
	401	RF 71-00-02 DET			ENGINE BAFFLING			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PRT IDENTIFICATION.			
					2) SERIAL NUMBER 22-1864, 22-1870, 22-1881, 22-1883, 22-1884, 22-1890, 22-1893, 22-1900, 22-1901, 22-1905, 22-1911, 22-1913,; REFER TO 22-1915 FOR PRT IDENTIFICATION.			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					3) SERIAL NUMBER 22-2334 AND 22-2420; REFER TO 22-2438 FOR PRT IDENTIFICATION.			
			#		ALTERNATE LINKAGE LENGTH VARIES BETWEEN AFFECTED SERIAL NUMBERS.			

EFFECTIVITY:
All

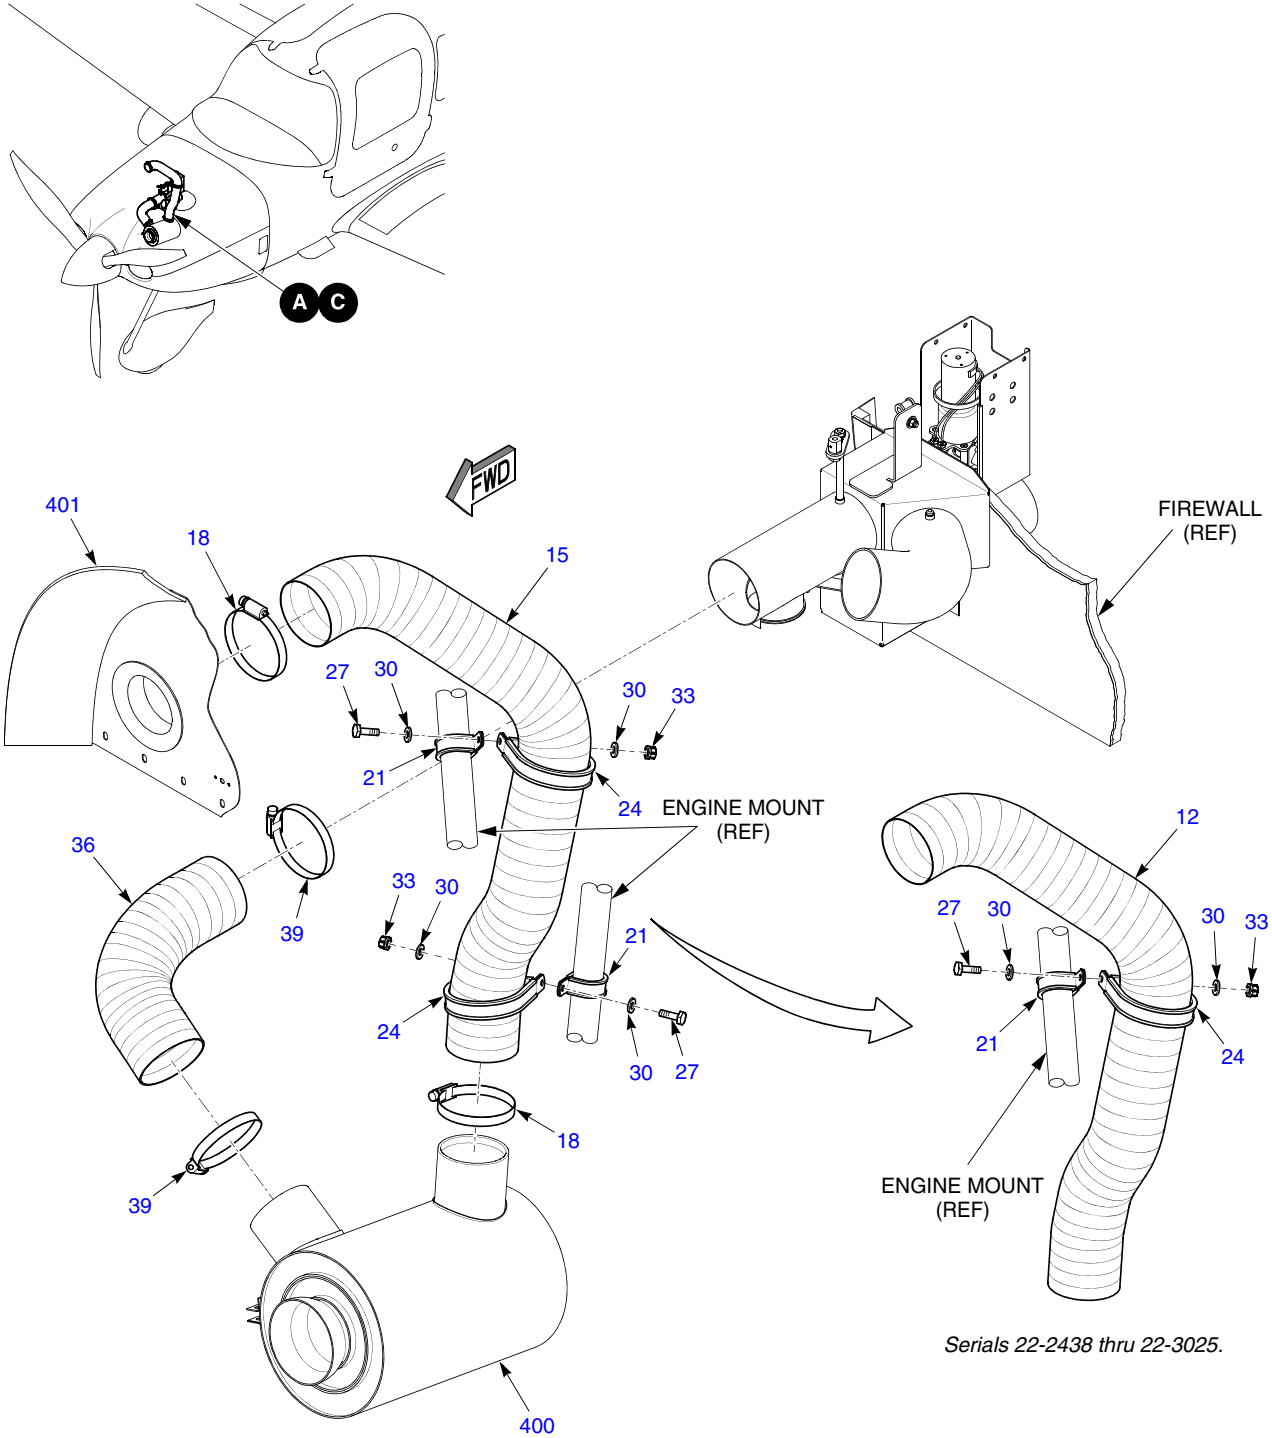

Serials 22-2438 thru 22-3025.

DETAIL A

Serials 22-2438 & subs.

SR22_PC21_1652D

Figure-02
Air Mixing Chamber - Serials 22-2438 & subs (1 of 3)

EFFECTIVITY:
Serials 22-2438 & subs

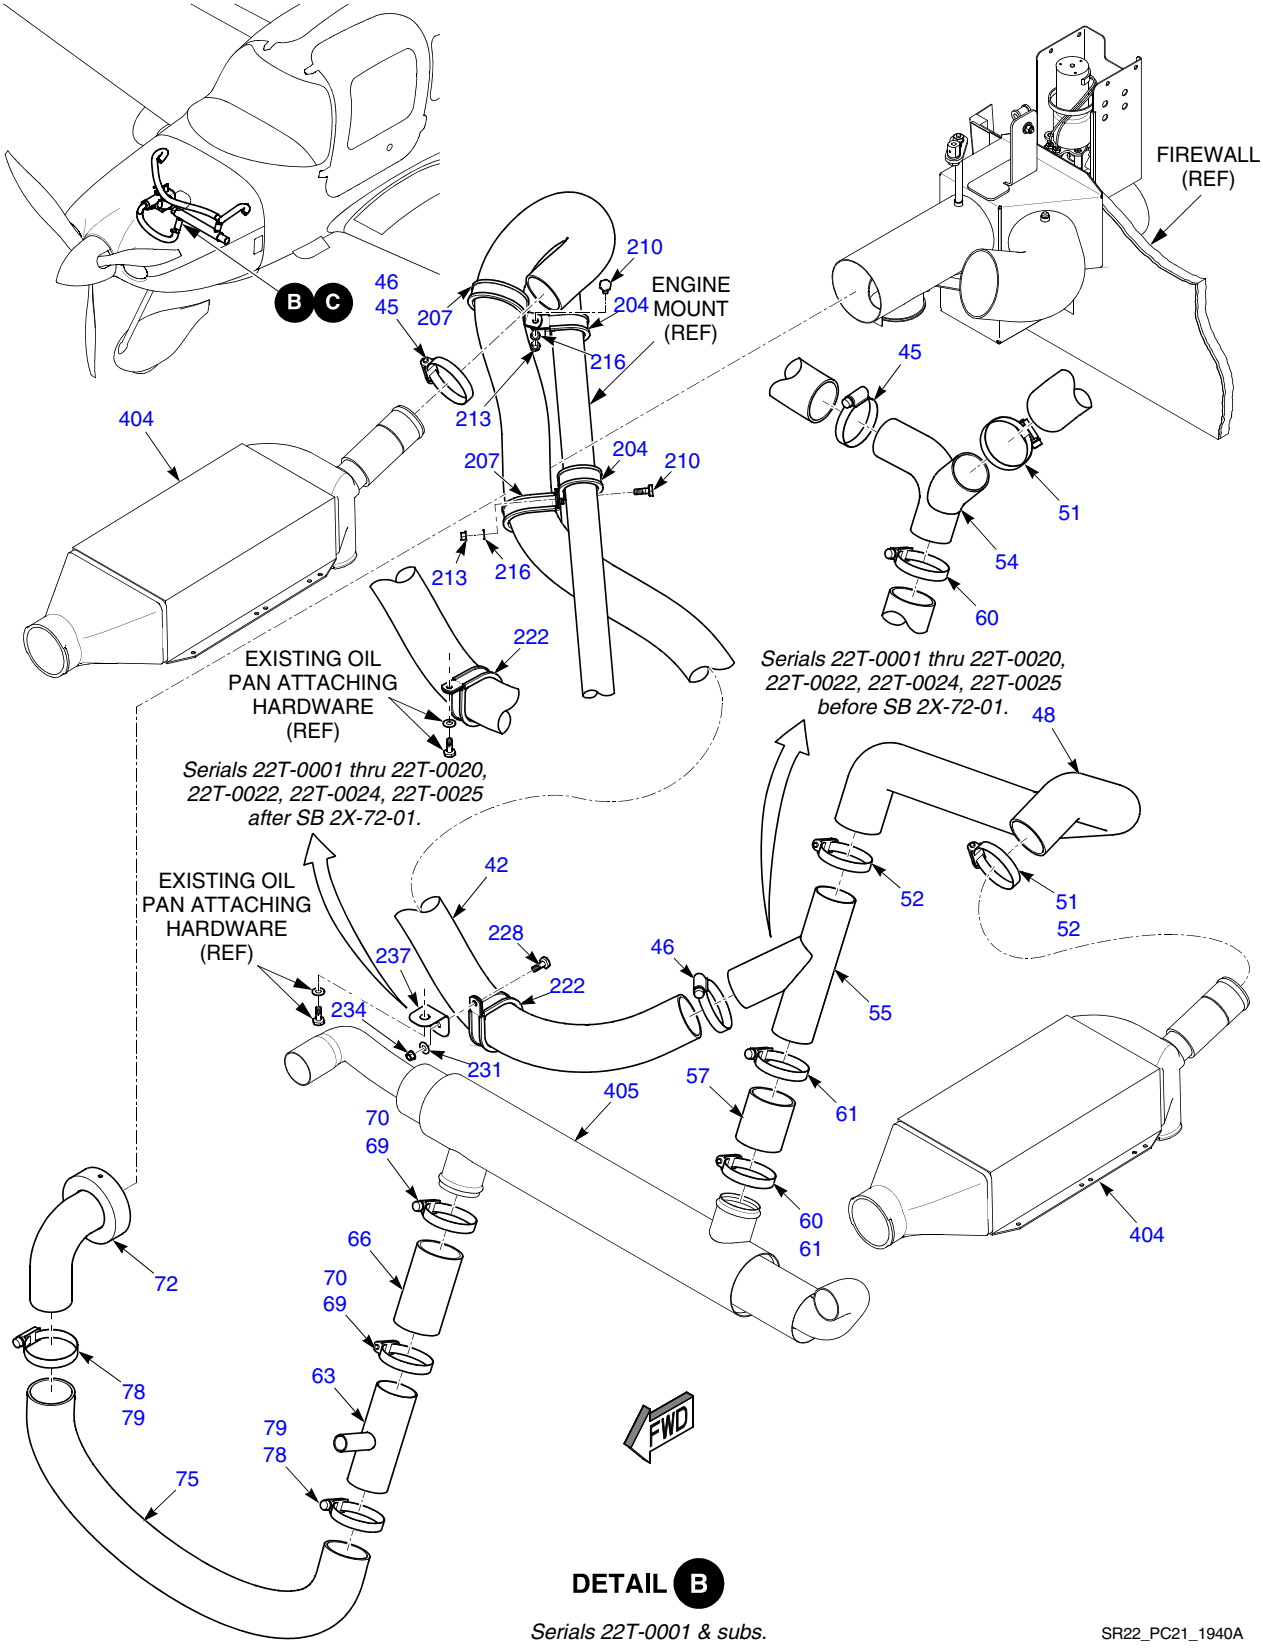

Figure-02

Air Mixing Chamber - Serials 22T-0001 & subs (2 of 3)

EFFECTIVITY:
Serials 22T-0001 & subs

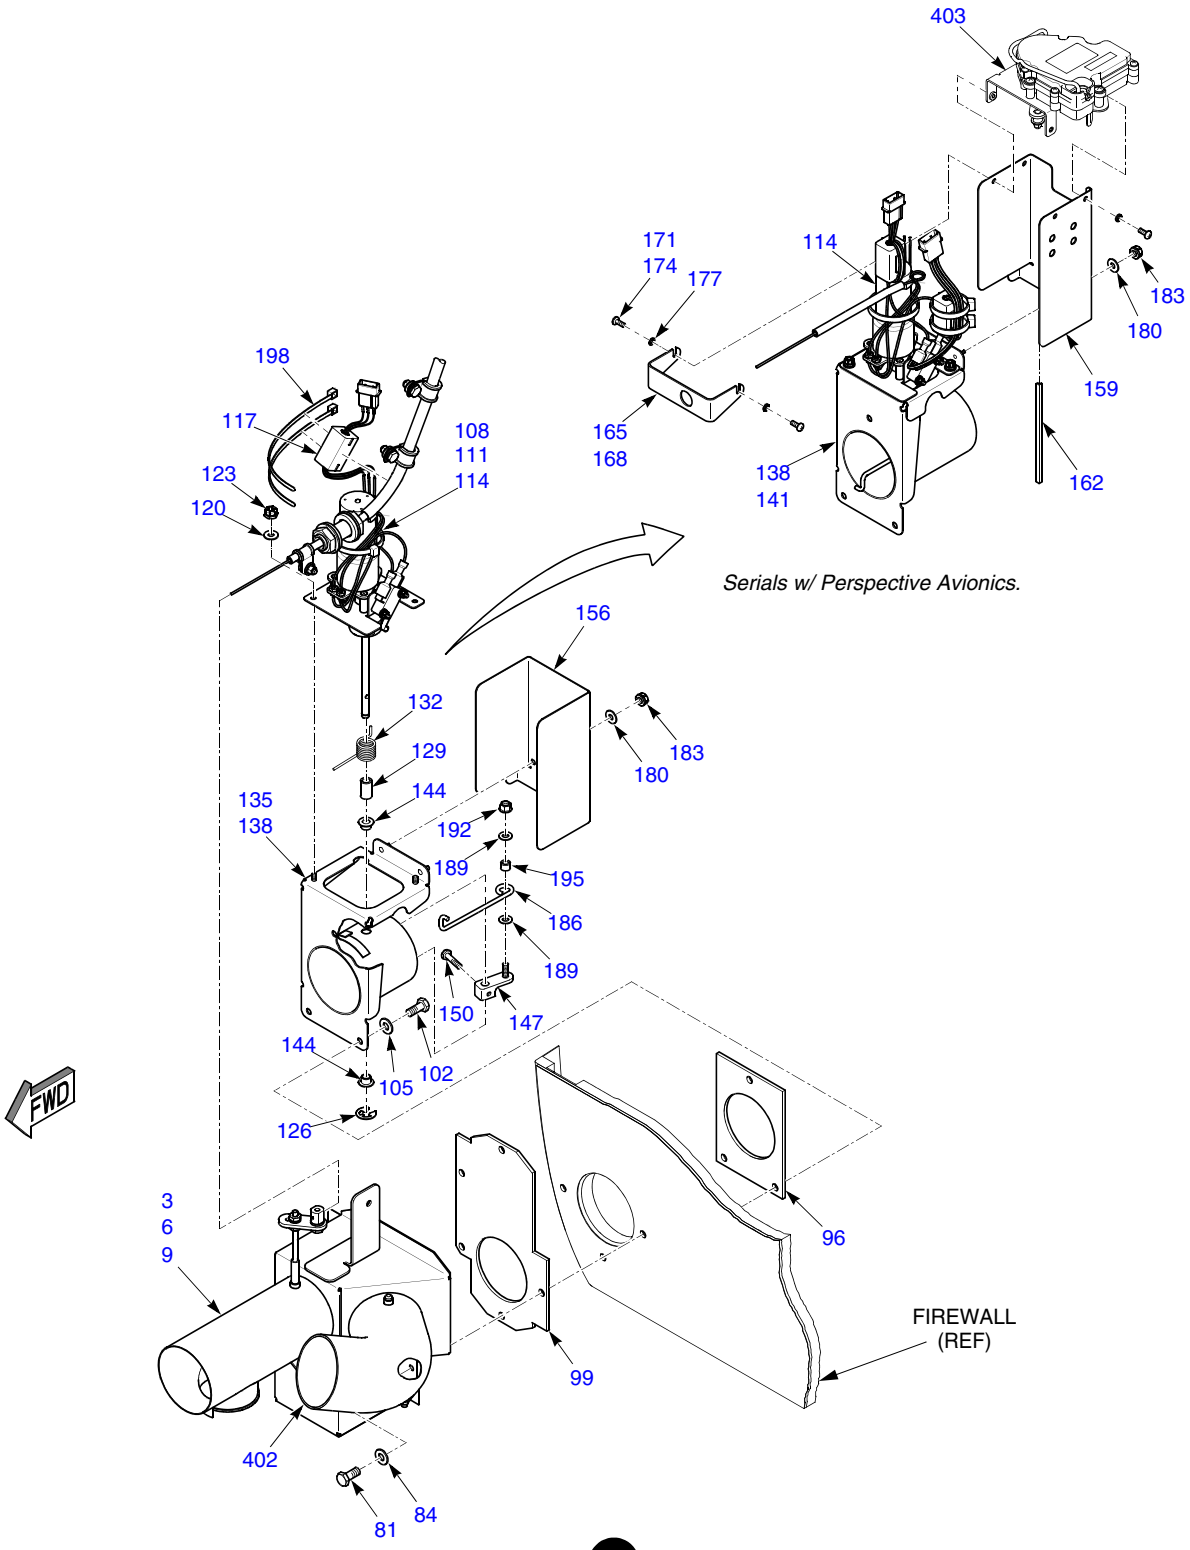

Serials 22-2438 & subs, 22T-0001 & subs.

SR22_PC21_1942

Figure-02

Air Mixing Chamber - Serials 22-2438 & subs, 22T-0001 & subs (3 of 3)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		AIR MIXING CHAMBER INSTALLATION	2438 / 0001	/	NP
	3	21823-002			·AIR MIXING CHAMBER	2438	2533	1
					FOR SPARES USE P/N 21823-004			
	6	21823-003			·AIR MIXING CHAMBER	2534	3025	1
					FOR SPARES USE P/N 21823-004			
	9	21823-004			·AIR MIXING CHAMBER	3026 / 0001	/	1
	12	21552-001			·DUCT	2438	3025	1
	15	21552-002			·DUCT	3026		1
	18	50743-801		A	·CLAMP	2438		2
	21	MS21919WDG16		A	·CLAMP	2438	3025	1
						3026		2
	24	MS21919WDG40		A	·CLAMP	2438	3025	1
						3026		2
	27	AN3-5A		A	·BOLT	2438	3025	1
						3026		2
	30	NAS1149F0363P		A	·WASHER	2438	3025	2
						3026		4
	33	MS21045-3		A	·NUT	2438	3025	1
						3026		2
	36	18288-001			·DUCT	2438		1
	39	50743-801		A	·CLAMP	2438		2
	42	18290-302			·DUCT	/ 0001	/	1
	45	50743-801		A	·CLAMP	/ 0001	/ 0025	2
	46	50742-020		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50743-651			
-	47	50743-651		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50742-020			
	48	18290-303			·DUCT	/ 0001	/	1
	51	50743-801		A	·CLAMP	/ 0001	/ 0025	2
	52	50742-020		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50743-651			
-	53	50743-651		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50742-020			
	54	19976-001			·WYE DUCT	/ 0001	/ 0025	1
	55	29236-001			·WYE DUCT	/ 0026	/	1
	57	18290-304			·DUCT	/ 0001	/	1
	60	50743-801		A	·CLAMP	/ 0001	/ 0025	2
	61	50742-020		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50743-651			
-	62	50743-651		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50742-020			
	63	19977-001			·WELDMENT, TEE	/ 0001	/	1
	66	18290-305			·DUCT	/ 0001	/	1
	69	50743-801		A	·CLAMP	/ 0001	/ 0025	2
	70	50742-020		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50743-651			
-	71	50743-651		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50742-020			
	72	28884-001			·WELDMENT	/ 0001	/	1
	75	18290-301			·DUCT	/ 0001	/	1
	78	50743-801		A	·CLAMP	/ 0001	/ 0025	2
	79	50742-020		A	·CLAMP	/ 0026	/	2
					ALTERNATE FOR P/N 50743-651			
-	80	50743-651		A	·CLAMP	/ 0026	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					ALTERNATE FOR P/N 50742-020			
	81	AN3-4A		A	·BOLT	2438 / 0001	/	5
	84	NAS1149F0332P		A	·WASHER	2438 / 0001	/	5
-	87	17433-002			·COUPLER ASSEMBLY	2438	2719	1
					FOR SPARES USE P/N 17433-005			
-	90	17433-003			·COUPLER ASSEMBLY	2720	3025	1
					FOR SPARES USE P/N 17433-005			
-	93	17433-004			·COUPLER ASSEMBLY	3026	3636	1
					FOR SPARES USE P/N 17433-005			
-	94	17433-005			·COUPLER ASSEMBLY	3637 / 0001	/	1
	96	20755-002			·GASKET	2438 / 0001	/	1
	99	17388-001			·GASKET	2438 / 0001	/	1
	102	AN3-4A		A	·BOLT	2438 / 0001	/	3
	105	NAS1149F0332P		A	·WASHER	2438 / 0001	/	3
	108	21837-001			··DRIVE ASSEMBLY	2438	2719	1
	111	21837-002			··DRIVE ASSEMBLY	2720	3025	1
					FOR SPARES USE P/N 21837-003			
	114	21837-003			··DRIVE ASSEMBLY	3026 / 0001	/	1
	117	51161-001			···EMI SUPPRESSOR	2438 / 0001	/	1
	120	NAS1149FN632P		A	··WASHER	2438 / 0001	/	2
	123	MS21044N06		A	··NUT	2438 / 0001	/	2
	126	51877-003		A	··E-CLIP	2438 / 0001	/	1
	129	50692-010			··BEARING	2438 / 0001	/	1
	132	21844-001			··SPRING	2438 / 0001	/	1
	135	21836-001			··COUPLER WELDMENT	2438	2719	1
	138	21836-002			··COUPLER WELDMENT	2720		1
	141	21836-003			··COUPLER WELDMENT	/ 0001	/	1
	144	50200-301			··BEARING, FLANGED	2438 / 0001	/	2
	147	21842-001			··LINKAGE LEVER	2438 / 0001	/	1
	150	NAS1801-06-10		A	··SCREW	2438 / 0001	/	1
					ALTERNATE FOR P/N MS35206-231			
-	153	MS35206-231			··SCREW	2438 / 0001	/	1
					ALTERNATE FOR P/N NAS1801-06-10			
	156	21832-001			·COUPLER COVER W/O PERSPECTIVE AVIONICS	2438		1
	159	22105-001			·COUPLER COVER W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	162	50892-001			·GROMMET W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	165	22111-001			·BRACKET W/ PERSPECTIVE AVIONICS	3026	3436	1
					FOR SPARES USE P/N 22111-002			
	168	22111-002			·BRACKET W/ PERSPECTIVE AVIONICS	3437 / 0001	/	1
	171	MS35206-228		A	·SCREW W/ PERSPECTIVE AVIONICS	3026	3436	4
					FOR SPARES USE P/N NAS1801-06-6			
	174	NAS1801-06-6		A	·SCREW W/ PERSPECTIVE AVIONICS	3437 / 0001	/	4
	177	MS35338-41		A	·WASHER W/ PERSPECTIVE AVIONICS	3026 / 0001	/	4
	180	NAS1149FN632P		A	·WASHER	2438 / 0001	/	2
	183	MS21044N06		A	·NUT	2438 / 0001	/	2
	186	17446-002			·LINKAGE	2438 / 0001	/	1
	189	NAS1149F0332P		A	·WASHER	2438 / 0001	/	2
	192	MS21042-3		A	·NUT	2438 / 0001	/	1
	195	NAS43HT3-14			·SPACER	2438 / 0001	/	1
	198	50239-010			·CABLE TIE	2438 / 0001	/	2
-	201	NO PRT NUMBER			·ADEL CLAMP ASSEMBLY	/ 0026	/	NP
					AFTER SB2X-72-01	/ 0001	/ 0025	
	204	MS21919WDG18		A	··ADEL CLAMP	/ 0026	/	2
	207	MS21919WDG24		A	··ADEL CLAMP	/ 0026	/	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	210	AN3-4A		A	··BOLT	/ 0026	/	2
	213	MS21042-3		A	··NUT	/ 0026	/	2
	216	NAS1149D0332K		A	··WASHER	/ 0026	/	2
					ALTERNATE FOR P/N NAS1149F0332P			
-	219	NAS1149F0332P		A	··WASHER	/ 0026	/	2
					ALTERNATE FOR P/N NAS1149D0332K			
	222	MS21919WDG24		A	·ADEL CLAMP	/ 0026	/	1
			@		AFTER SB2X-72-01	/ 0001	/ 0025	1
-	225	NO PRT NUMBER			BRACKET ASSEMBLY	/ 0026	/	NP
	228	AN3-4A		A	·BOLT	/ 0026	/	1
	231	NAS1149D0332K		A	·WASHER	/ 0026	/	1
	234	MS21042-3		A	·NUT	/ 0026	/	1
	237	27301-001			·BRACKET	/ 0026	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 78-20-01 DET			HEAT EXCHANGER			
	401	RF 71-00-02 DET			ENGINE BAFFLING			
	402	RF 21-20-01 DET			FRESH AIR DUCT			
	403	RF 21-60-03 DET			MIXING BOX ACTUATOR			
	404	RF 71-60-02 DET			INDUCTION SYSTEM INSTALLATION			
	405	RF 78-20-02 DET			EXHAUST SYSTEM INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDEN-TIFICATION.			
					3) SERIAL NUMBER 22T-0021, 22T-0023; REFER TO 22T-0026 FOR PART IDENTIFICATION.			
			@		A/C IN COMPLIANCE W/ SB2X-72-01, USE 0.323 INCH (8.204 MM) DRILL BIT TO UPSIZE ADEL CLAMP ATTACH-ING HOLE.			

EFFECTIVITY:
All

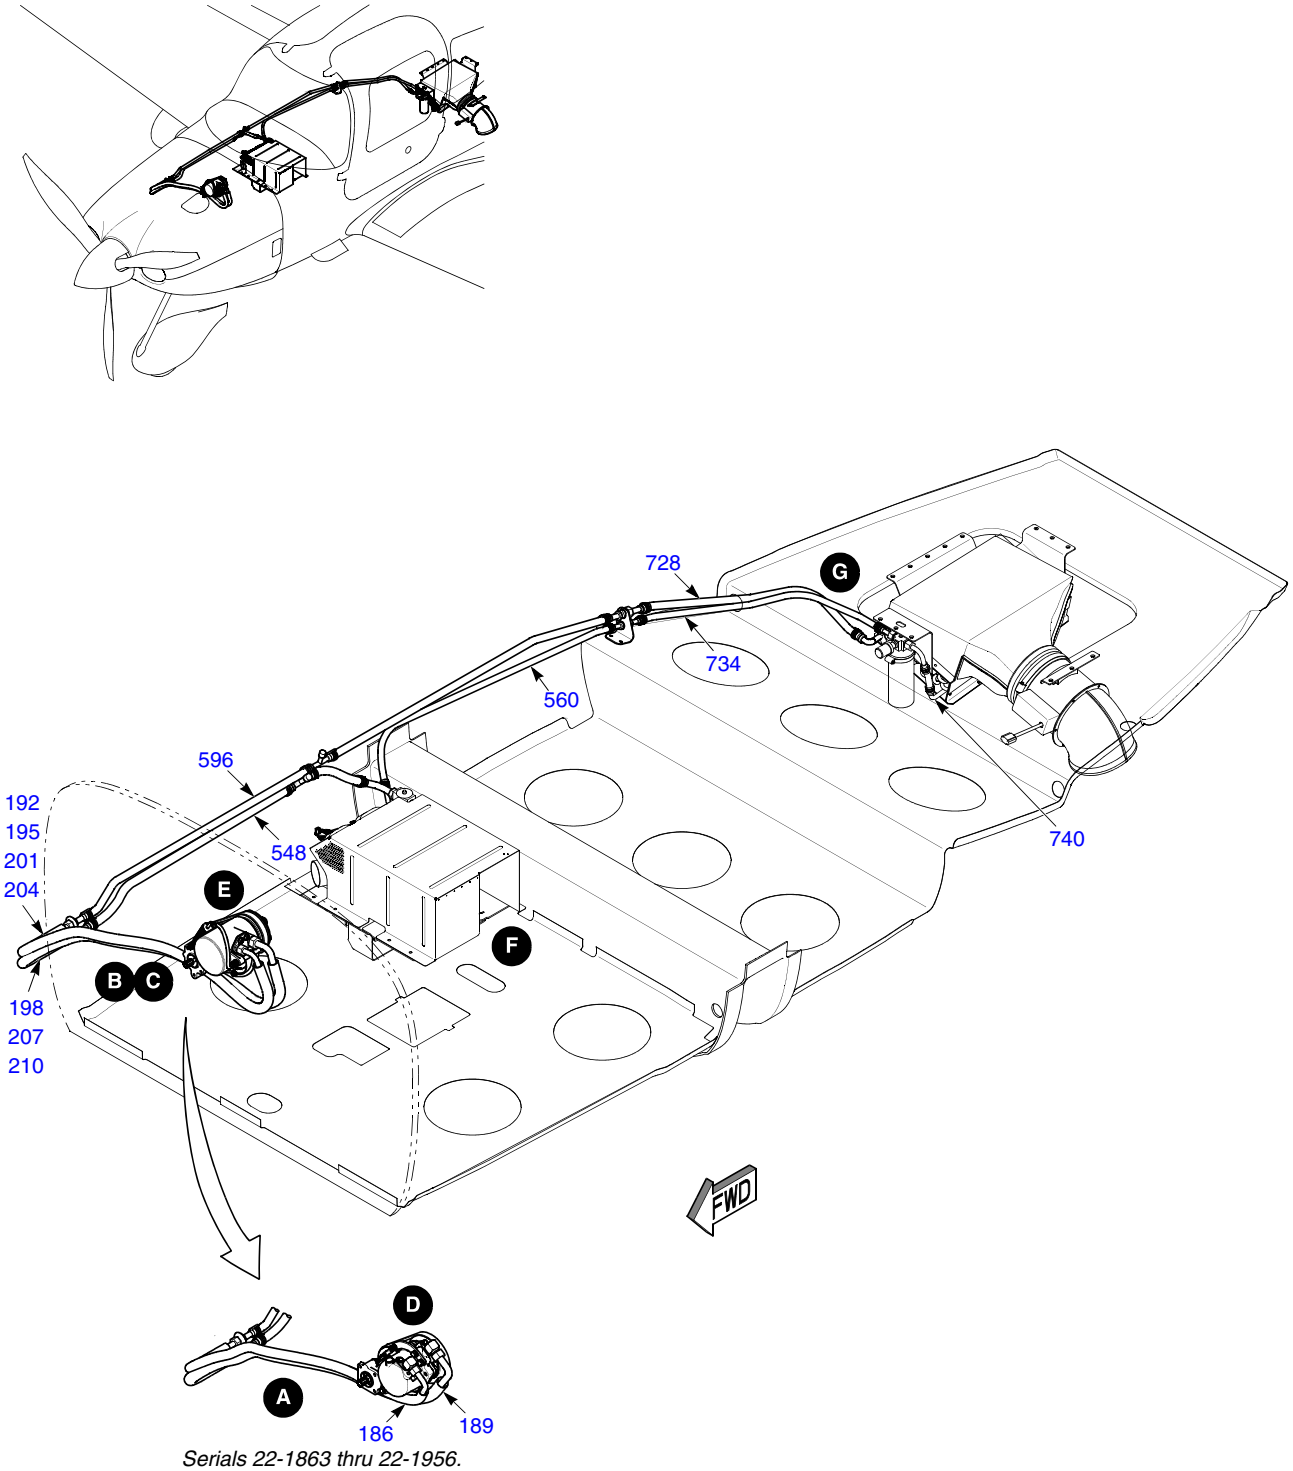

Serials 22-1863 thru 22-1956.

SR22_PC21_1568D

Figure-01

Air Conditioning System - Serials 22-1863 & subs, 22T-0001 & subs (1 of 8)

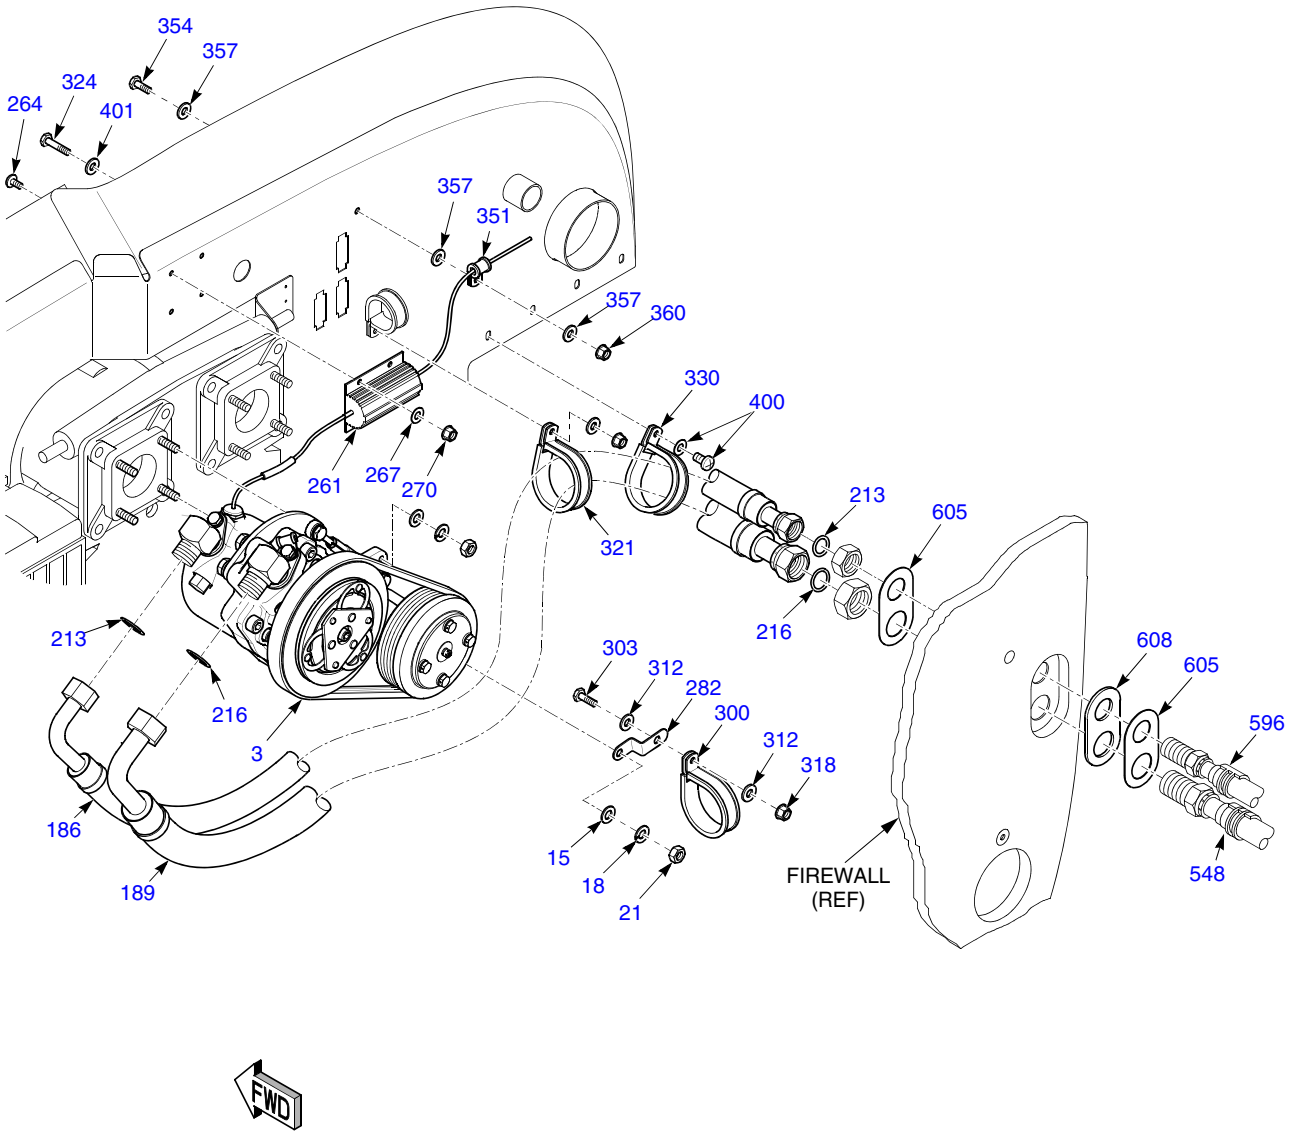

DETAIL A

Serials 22-1602, 22-1821, 22-1840, 22-1863 thru 22-1956.

SR22_PC21_1569E

Figure-01

Air Conditioning System - Serials 22-1863 thru 22-1956 (2 of 8)

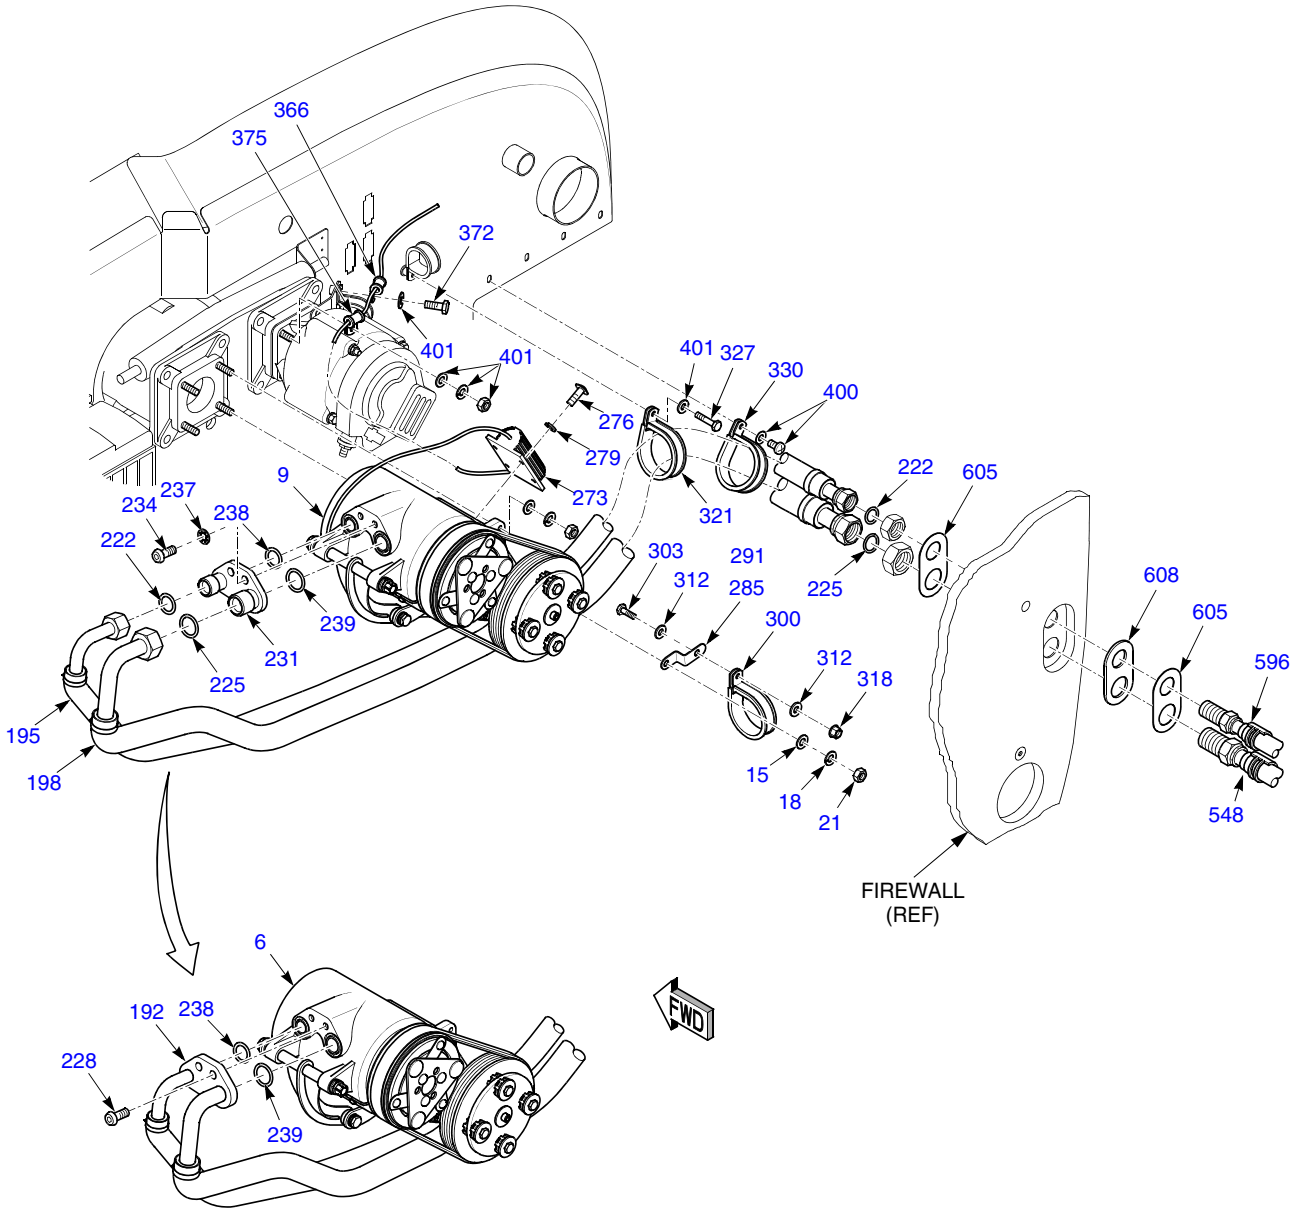

Serials 22-1957 thru 22-2277.

Serials 22-1957 thru 22-2609, 22-2611 thru 22-2617, 22-2619.

DETAIL B

SR22_PC21_1582F

Figure-01

Air Conditioning System - Serials 22-1957 thru 22-2619 (3 of 8)

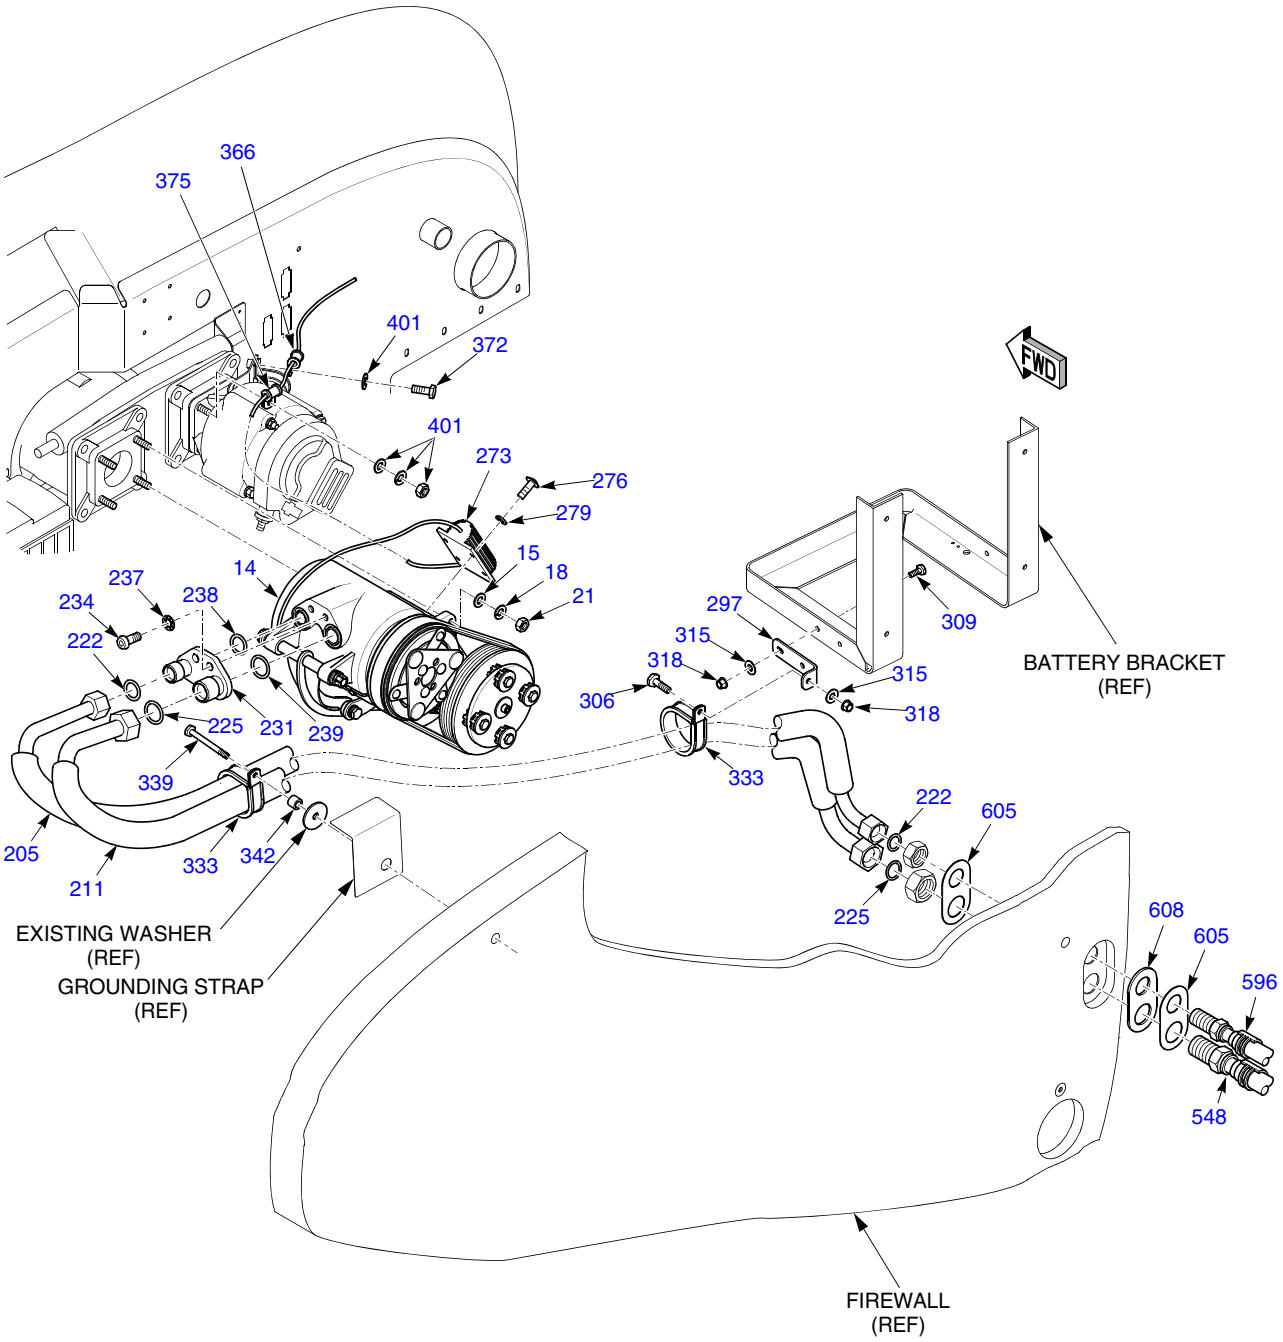

Serials 22-2010, 22-2618, 22-2620 & subs, 22T-0001 & subs.

DETAIL C

SR22_PC21_1713E

Figure-01

Air Conditioning System - Serials 22-2620 & subs, 22T-0001 & subs (4 of 8)

EFFECTIVITY:
All

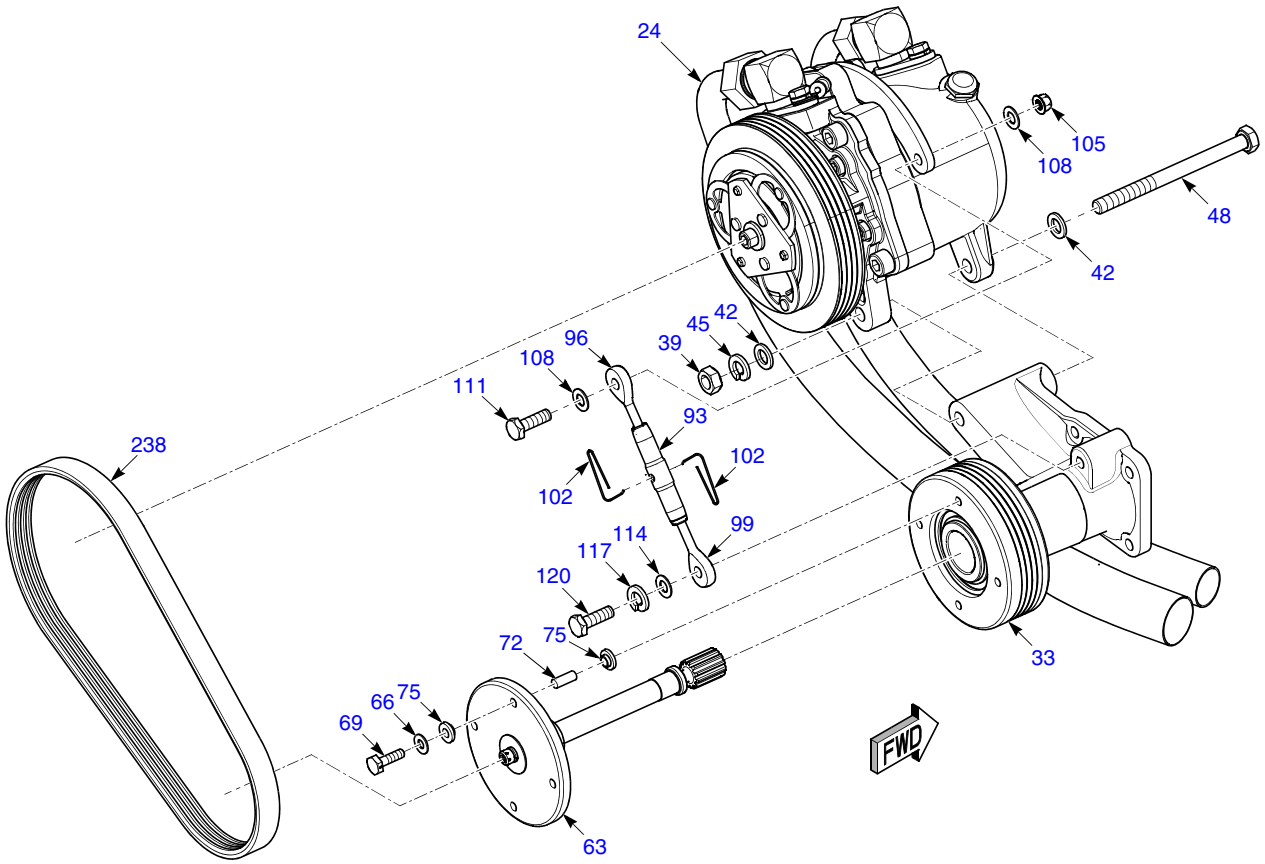

DETAIL D

Serials 22-1863 thru 22-1956.

SR22_PC21_1933

Figure-01

Air Conditioning System - Serials 22-1863 thru 22-1956 (5 of 8)

EFFECTIVITY:
All

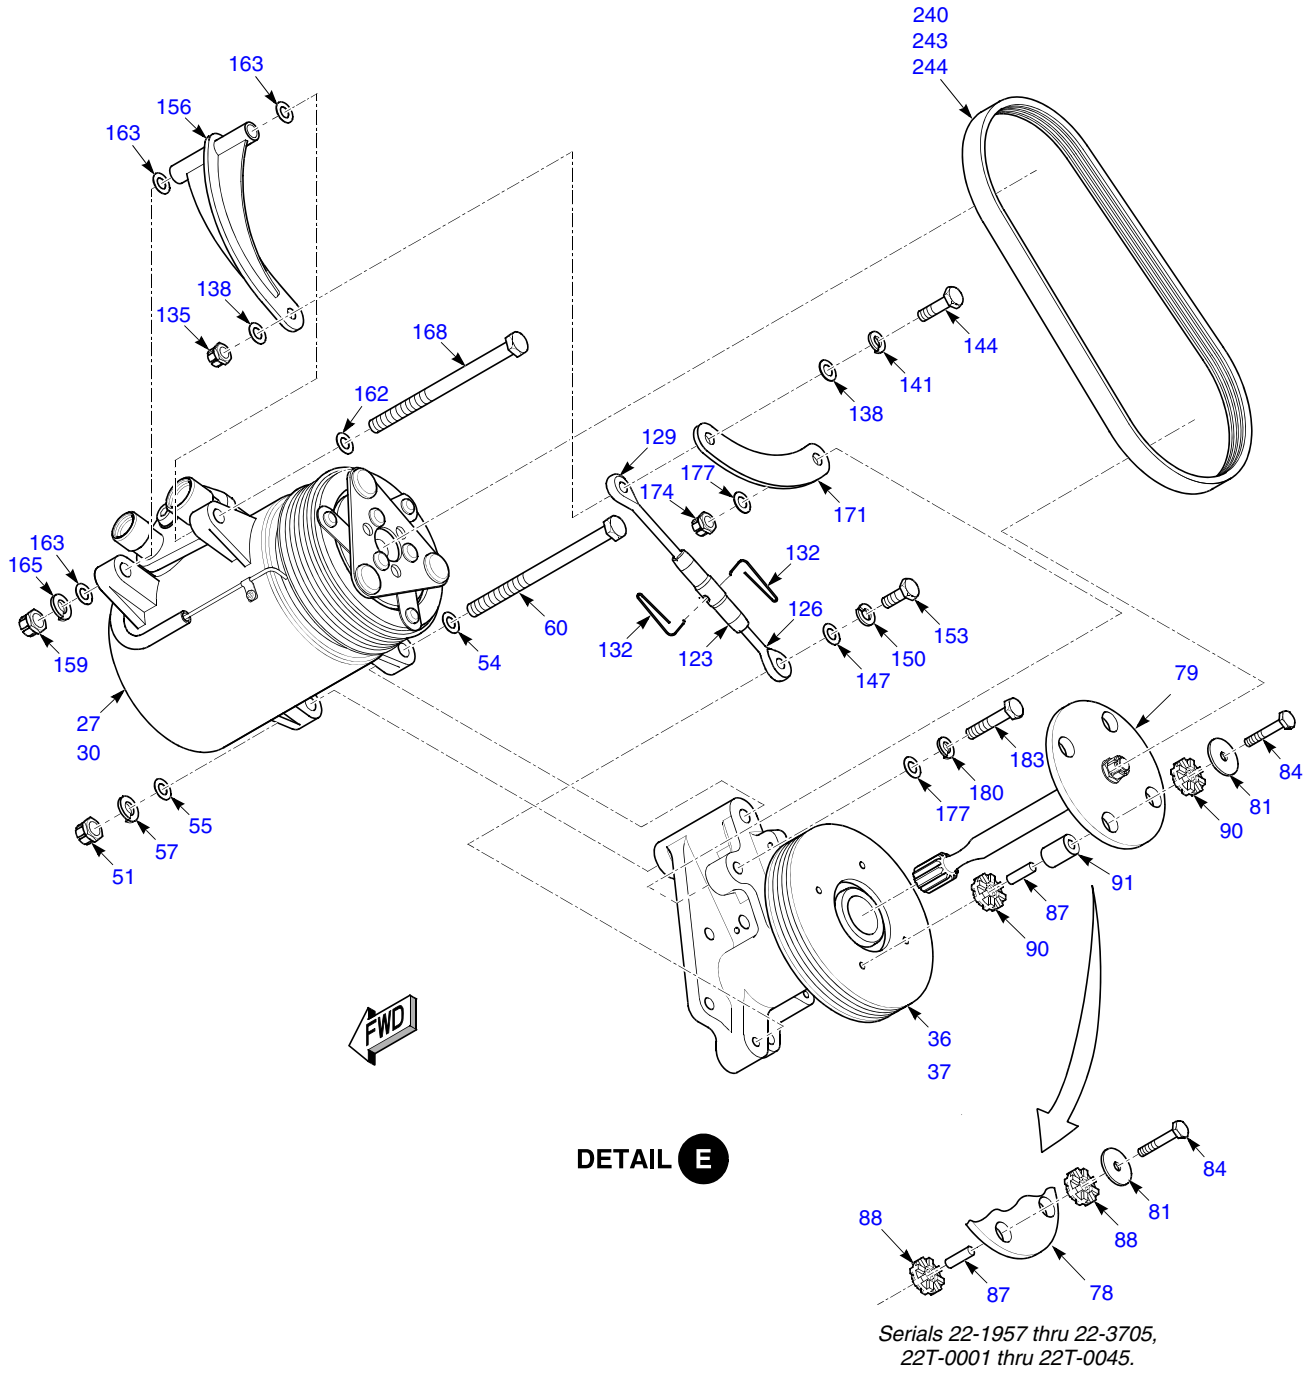

Serials 22-1957 thru 22-3705, 22T-0001 thru 22T-0045.

Serials 22-1957 & subs, 22T-0001 & subs.

SR22_PC21_1934A

Figure-01

Air Conditioning System - Serials 22-1957 & subs, 22T-0001 & subs (6 of 8)

EFFECTIVITY:
All

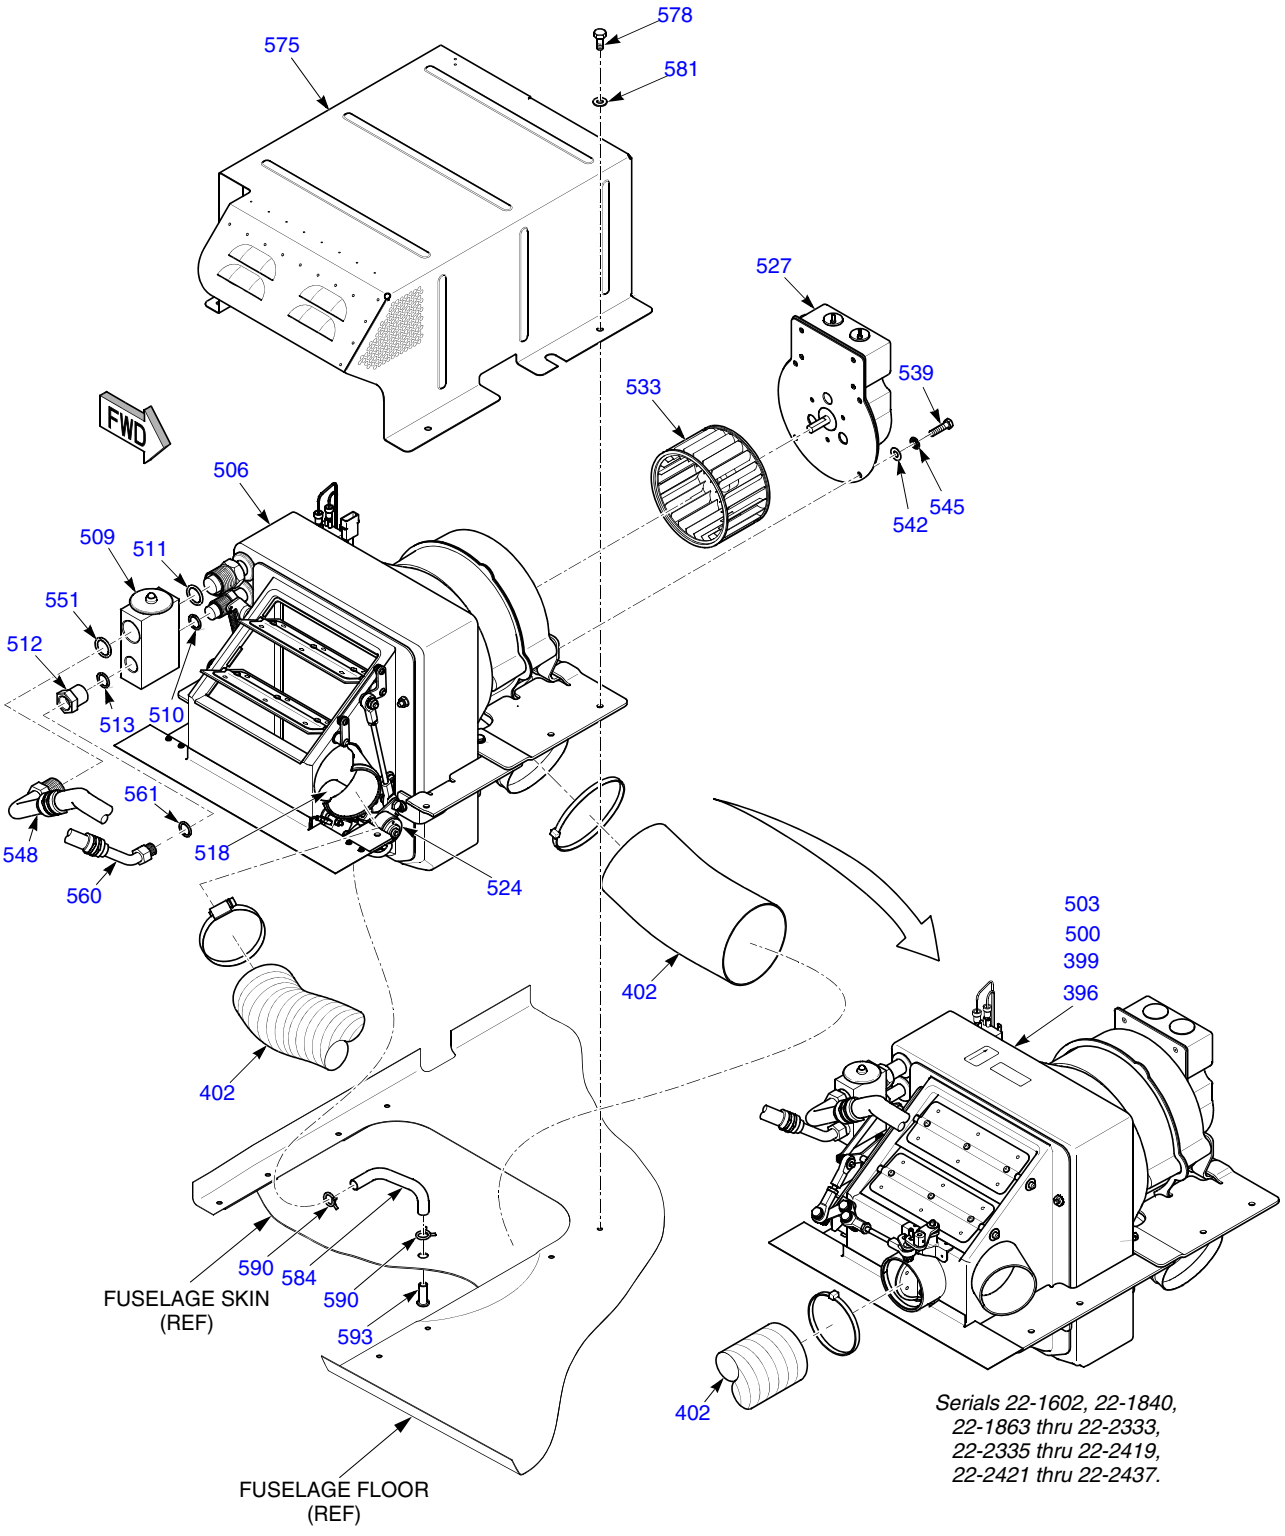

DETAIL F

SR22_PC21_1570F

Figure-01

Air Conditioning System - Serials 22-1863 & subs, 22T-0001 & subs (7 of 8)

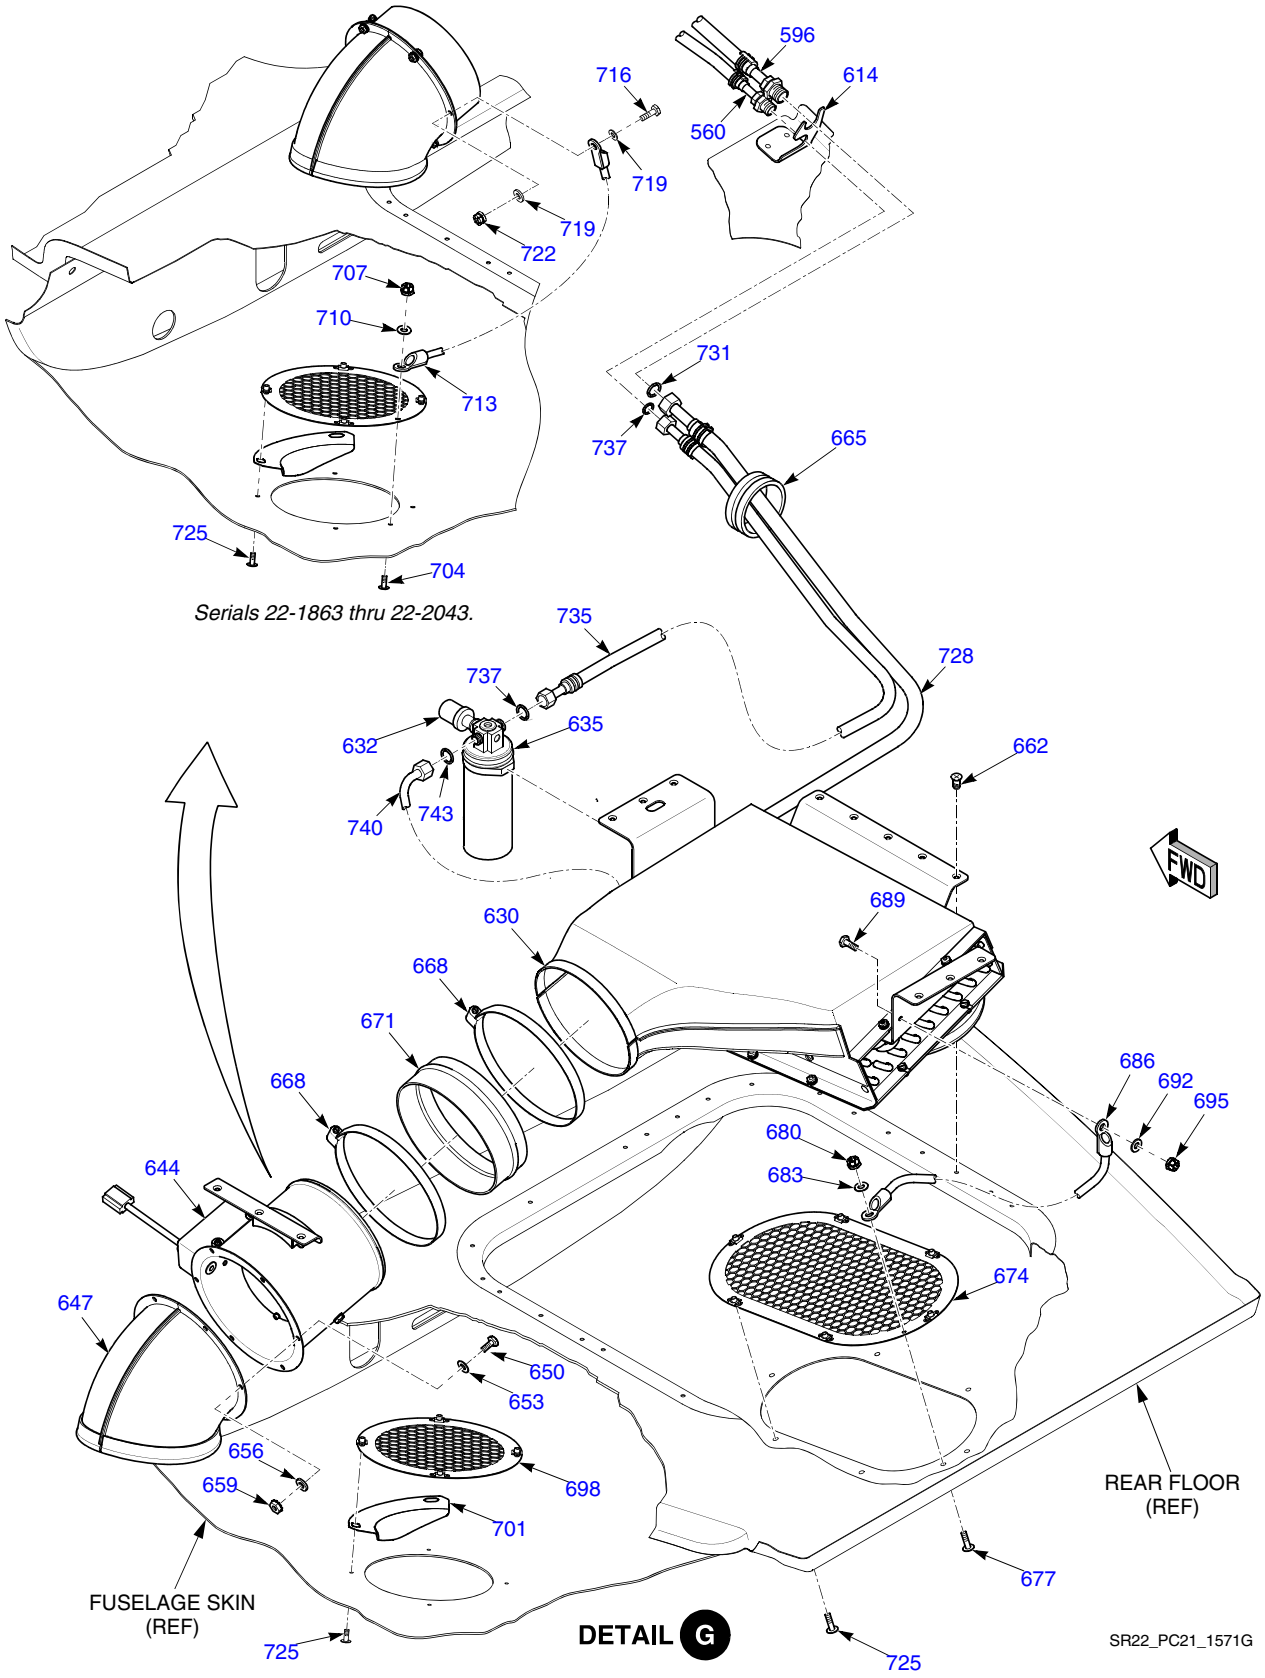

Figure-01

Air Conditioning System - Serials 22-1863 & subs, 22T-0001 & subs (8 of 8)

EFFECTIVITY:
Serials 22-1863 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		AIR CONDITIONING SYSTEM INSTALLATION	1863 / 0001	/	NP
	3	17557-001	@		·COMPRESSOR ASSEMBLY	1863	1956	1
			^		FOR SPARES USE P/N 21119-002			
	6	21119-002			·COMPRESSOR ASSEMBLY W/ HOSES	1957	2277	1
	9	21119-003	#		·COMPRESSOR ASSEMBLY W/ HOSES	2278	2619	1
-	10	21119-304			·COMPRESSOR ASSEMBLY W/O HOSES	2620	3613	1
					FOR SPARES USE P/N 21119-008			
-	11	21119-005			·COMPRESSOR ASSEMBLY W/O HOSES	3614 / 0001	3705 / 0045	1
					FOR SPARES USE P/N 21119-008			
-	12	21119-006			·COMPRESSOR ASSEMBLY W/O HOSES	3706 / 0046	3843 / 0307	1
					FOR SPARES USE P/N 21119-008			
-	13	21119-007			·COMPRESSOR ASSEMBLY W/O HOSES	3844 / 0308	4119 / 0858	1
					FOR SPARES USE P/N 21119-008			
	14	21119-008			·COMPRESSOR ASSEMBLY W/O HOSES	4120 / 0859	/	1
	15	PRT OF ENGINE		A	·WASHER	0002 / 0001	/	4
	18	PRT OF ENGINE		A	·WASHER	0002 / 0001	/	4
	21	PRT OF ENGINE		A	·NUT	0002 / 0001	/	4
	24	17557-104			··COMPRESSOR	1863	1956	1
	27	21119-101			··COMPRESSOR	1957	2277	1
	30	21119-301			··COMPRESSOR	2278 / 0001	/	1
	33	17557-103			··DRIVE ASSEMBLY	1863	1956	1
	36	21119-102			··DRIVE ASSEMBLY	1957 / 0046	3613 /	1
	37	21119-109			··DRIVE ASSEMBLY	3614 / 0001	3705 / 0045	1
	39	AN315-5		A	··NUT	1863	1956	1
	42	AN960-516		A	··WASHER	1863	1956	2
	45	MS35338-45		A	··LOCKWASHER	1863	1956	1
	48	AN5-37A		A	··BOLT	1863	1956	1
	51	MS21045-5		A	··NUT	1957 / 0001	/	1
	54	NAS1149F0516P		A	··WASHER	1957 / 0001	/	1
	55	NAS1149F0563P		A	··WASHER	1957 / 0001	/	1
	57	MS35338-45		A	··LOCKWASHER	1957 / 0001	/	1
	60	AN5-42A		A	··BOLT	1957 / 0001	/	1
	63	220-0455-10			··DRIVE SHAFT HUB ASSEMBLY	1863	1956	1
	66	AN970-3		A	··WASHER	1863	1956	4
	69	AN3H11A		A	··BOLT	1863	1956	4
	72	220-1412-1			··SPACER	1863	1956	4
	75	PRT OF ITM 30			···BUSHING	1863	1956	8
	78	1133175-1	!		··DRIVE SHAFT HUB ASSEMBLY	1957 / 0001	3705 / 0045	1
					FOR SPARES USE P/N 1133175-2			
	79	1133175-2			··DRIVE SHAFT HUB ASSEMBLY	3706 / 0046	/	1
	81	AN970-3		A	··WASHER	1957 / 0001	/	4
	84	AN3H10A		A	··BOLT	1957 / 0001	/	4
	87	NAS43DD3-42FC			···SPACER	1957 / 0001	/	4
	88	21119-107	!		···RING GROMMET	1957 / 0001	3705 / 0045	8
	90	21119-112			···RING GROMMET	3706 / 0046	/	8
	91	21119-111			···SLEEVE BUSHING	3706 / 0046	/	4
	93	MS21251-A5S			··TURNBUCKLE BODY	1863	1956	1
	96	MS21254-5LS			··TURNBUCKLE END	1863	1956	1
	99	MS21254-5RS			··TURNBUCKLE END	1863	1956	1
	102	MS21256-1			··LOCKING CLIP	1863	1956	2
	105	MS21042-4		A	··NUT	1863	1956	1
	108	AN960-416L		A	··WASHER	1863	1956	2
	111	AN4-6A		A	··BOLT	1863	1956	1
	114	AN960-416L		A	··WASHER	1863	1956	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	117	MS36338-44		A	··LOCKWASHER	1863	1956	1
	120	AN4-6A		A	··BOLT	1863	1956	1
-	121	1133087-1			··TURNBUCKLE ASSEMBLY	1957	3613	1
						3706 / 0046	/	
-	122	1133087-3			··TURNBUCKLE ASSEMBLY	3614 / 0001	3705 / 0045	1
	123	MS21251-A5S			···TURNBUCKLE BODY	1957 / 0001	/	1
	126	MS21254-5LS			···TURNBUCKLE END	1957 / 0001	/	1
	129	MS21254-5RL			···TURNBUCKLE END	1957 / 0001	/	1
	132	MS21256-1			··LOCKING CLIP	1957 / 0001	/	2
	135	MS21045-4		A	··NUT	1957 / 0001	/	1
	138	NAS1149F0416P		A	··WASHER	1957 / 0001	/	2
	141	MS35338-44		A	··LOCKWASHER	1957 / 0001	/	1
	144	AN4-7A		A	··BOLT	1957 / 0001	/	1
	147	NAS1149F0416P		A	··WASHER	1957 / 0001	/	1
	150	MS35338-44		A	··LOCKWASHER	1957 / 0001	/	1
	153	AN4-5A		A	··BOLT	1957 / 0001	/	1
	156	1133085-3			··ARM WELDMENT	1957 / 0001	/	1
	159	MS21045-5		A	··NUT	1957 / 0001	/	1
	162	NAS1149F0516P		A	··WASHER	1957 / 0001	/	1
	163	NAS1149F0563P		A	··WASHER	1957 / 0001	/	3
	165	MS35338-45		A	··LOCKWASHER	1957 / 0001	/	1
	168	AN5-42A		A	··BOLT	1957 / 0001	/	1
	171	1133085-2			··ARM	1957 / 0001	/	1
	174	MS21045-4		A	··NUT	1957 / 0001	/	1
	177	NAS1149F0416P		A	··WASHER	1957 / 0001	/	2
	180	MS35338-44		A	··LOCKWASHER	1957 / 0001	/	1
	183	AN4-12A		A	··BOLT	1957 / 0001	/	1
	186	17557-105			··HOSE ASSEMBLY	1863	1956	1
	189	17557-106			··HOSE ASSEMBLY	1863	1956	1
	192	21119-105			··HOSE ASSEMBLY	1957	2277	1
	195	21119-303			··HOSE ASSEMBLY	2278	2619	1
	198	21119-302			··HOSE ASSEMBLY	2278	2619	1
-	201	21929-001			··HOSE ASSEMBLY	2620	3156	1
-	204	21929-002			··HOSE ASSEMBLY	3157 / 0001	4000 / 0612	1
					FOR SPARES USE P/N 21929-003			
	205	21929-003			··HOSE ASSEMBLY	4001 / 0613	/	1
-	207	21928-001			··HOSE ASSEMBLY	2620	3156	1
-	210	21928-002			··HOSE ASSEMBLY	3157 / 0001	4000 / 0612	1
					FOR SPARES USE P/N 21928-003			
	211	21928-003			··HOSE ASSEMBLY	4001 / 0613	/	1
	213	17557-109			··O-RING	1863	1956	2
	216	17557-110			··O-RING	1863	1956	2
	222	17561-008			···O-RING	1957 / 0001	/	2
	225	17561-010			···O-RING	1957 / 0001	/	2
	228	PRT OF ITM 6		A	··BOLT	1957	2277	2
	231	PRT OF ITM 9		A	··FITTING	2278 / 0001	/	1
	234	PRT OF ITM 9		A	··SCREW	2278 / 0001	/	2
	237	PRT OF ITM 9		A	··WASHER	2278 / 0001	/	2
	238	AS568114HNBR-70			···O-RING	1957 / 0001	/	1
	239	AS568116HNBR-70			···O-RING	1957 / 0001	/	1
	240	17557-108			··BELT	1863	1956	1
-	241	21119-104			··BELT	1957	3613	1
					FOR SPARES USE P/N 21119-504			
-	243	21119-504			··BELT	3614 / 0001	3705 / 0045	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	244	21119-604			··BELT		3706 / 0046	/	1
	261	17557-102			··RESISTOR ASSEMBLY		1863	1956	1
	264	AN525-832R6		A	··SCREW		1863	1956	4
	267	NAS1149FN816P		A	··WASHER		1863	1956	4
	270	MS21042-08		A	··NUT		1863	1956	4
	273	21119-103			··RESISTOR ASSEMBLY		1957 / 0001	/	1
	276	AN525-832R8		A	··SCREW		1957 / 0001	/	4
	279	MS35338-42		A	··WASHER		1957 / 0001	/	4
	282	17557-101			·BRACKET		1863	1956	1
	285	17556-001			·BRACKET		1957	2437	1
						ALTERNATE FOR P/N 17557-101			
-	288	17557-101			·BRACKET		1957	2437	1
						ALTERNATE FOR P/N 17556-001			
	291	17556-002			·BRACKET		2438	2619	1
						ALTERNATE FOR P/N 17556-001			
-	294	17556-001			·BRACKET		2438	2619	1
						ALTERNATE FOR P/N 17556-002			
	297	23001-001			·BRACKET		2620 / 0001	/	1
	300	MS21919WDG27			·CLAMP		1863	2619	1
	303	AN3-4A		A	·BOLT		1863	2619	1
	306	AN3-5A		A	·BOLT		2620 / 0001	/	1
	309	AN3-4A		A	·BOLT		2620 / 0001	/	2
	312	NAS1149F0363P		A	·WASHER		1863	2619	2
	315	NAS1149F0363F		A	·WASHER		2620 / 0001	/	1
	318	MS21042-3		A	·NUT		1863 / 0001	/	1
	321	MS21919WDG27			·CLAMP		1863	2619	1
	324	AN3-7A		A	·BOLT		1863	1956	1
	327	AN3-10A		A	·BOLT		1957 / 0001	/	1
	330	MS21919WDG27			·CLAMP		1863	2619	1
	333	MS21919WDG27			·CLAMP		2620 / 0001	/	2
						ALTERNATE FOR P/N MS21919WDG24			
-	336	MS21919WDG24			·CLAMP		2620 / 0001	/	2
						ALTERNATE FOR P/N MS21919WDG27			
	339	AN3-7A		A	·BOLT		2620 / 0001	/	1
	342	NAS43DD3-16FC		A	·SPACER		2620 / 0001	/	1
-	345	50964-015			·CABLE TIE		1863	2437	AR
-	348	MS3367-2-0			·CABLE TIE		1863 / 0001	/	AR
	351	MS21919DG1			·CLAMP		1863	1956	1
	354	AN3-4A		A	·BOLT		1863	1956	1
	357	NAS1149F0363P		A	·WASHER		1863	1956	3
	360	MS21042-3		A	·NUT		1863	1956	1
						ALTERNATE FOR P/N MS21045-3			
-	363	MS21045-3		A	·NUT		1863	1956	1
						ALTERNATE FOR P/N MS21042-3			
	366	MS21919DG1			·CLAMP		1957 / 0001	/	1
						ALTERNATE FOR P/N MS21919WDG4			
-	369	MS21919WDG4			·CLAMP		1957 / 0001	/	1
						ALTERNATE FOR P/N MS21919DG1			
	372	AN3-5A		A	·BOLT		1957 / 0001	/	1
	375	MS21919DG1			·CLAMP		1957 / 0001	/	1
						ALTERNATE FOR P/N MS21919WDG4			
-	378	MS21919WDG4			·CLAMP		1957 / 0001	/	1
						ALTERNATE FOR P/N MS21919DG1			
-	381	21114-002			·EVAPORATOR ASSEMBLY		1863	1979	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 21114-004			
-	384	21114-003			·EVAPORATOR ASSEMBLY	1980	2437	1
					FOR SPARES USE P/N 21114-004			
-	387	21114-004			·EVAPORATOR ASSEMBLY	2420	2420	1
-	390	21114-005			·EVAPORATOR ASSEMBLY	1602	1602	1
					FOR SPARES USE P/N 21114-006			
-	393	21114-006			·EVAPORATOR ASSEMBLY	2438 / 0001	/	1
	396	21114-201			··EVAPORATOR	1863	1979	1
	399	21114-103			··EVAPORATOR	1980	2437	1
	500	21114-401			··EVAPORATOR	2420	2420	1
	503	21114-501			··EVAPORATOR	1602	1602	1
	506	21114-601			··EVAPORATOR	2438 / 0001	/	1
-	508	21114-607			··EXPANSION VALVE	1863 / 0001	/	1
					FOR SPARES USE 21114-608			
	509	21114-608			··EXPANSION VALVE	1863 / 0001	/	1
	510	17561-008			··O-RING	1863 / 0001	/	1
	511	17561-010			··O-RING	1863 / 0001	/	1
	512	1133077-2			··EXTENSION	1863 / 0001	/	1
	513	17561-006			··O-RING	1863 / 0001	/	1
-	514	21452-003			··RECIRCULATING MOTOR	1863	1979	1
-	515	21114-104			··RECIRCULATING MOTOR	1980	2437	1
-	516	21114-503			··RECIRCULATING MOTOR	1602	1602	1
	518	21114-603			··RECIRCULATING MOTOR	2438 / 0001	/	1
-	521	21114-504			··CLUTCH	1602	1602	1
	524	21114-604			··CLUTCH	2438 / 0001	/	1
-	525	1133215-7			··BLOWER MOTOR	1863	2437	1
	527	21114-605			··BLOWER MOTOR	2438 / 0001	/	1
-	530	21114-402			··BLOWER MOTOR	2420	2420	1
-	531	1250327-6			··BLOWER WHEEL	1863	1979	1
-	532	1250327-9			··BLOWER WHEEL	1980	2437	1
	533	21114-606			··BLOWER WHEEL	2438 / 0001	/	1
-	536	21114-403			··BLOWER WHEEL	2420	2420	1
	539	NAS1096-2-10		A	··BOLT	1863 / 0001	/	4
	542	NAS1149FN816P		A	··WASHER	1863 / 0001	/	4
					ALTERNATE FOR P/N AN960-8L			
-	543	AN960-8L		A	··WASHER	1863 / 0001	/	4
					ALTERNATE FOR P/N NAS1149FN816P			
	545	MS35333-38		A	··STAR WASHER	1863	2419	4
						2421 / 0001	/	
	548	21114-101			··PRESSURE HOSE	1863 / 0001	/	1
	551	17561-010			··O-RING	1863 / 0001	/	1
-	554	21114-102			··PRESSURE HOSE	1863	2437	1
-	557	21114-502			··PRESSURE HOSE	1602	1602	1
	560	21114-602			··PRESSURE HOSE	2438 / 0001	/	1
	561	17561-006			··O-RING	1863 / 0001	/	1
-	572	21528-001			·COVER ASSEMBLY	1863	1966	1
					FOR SPARES USE P/N 21528-002			
	575	21528-002			·COVER ASSEMBLY	1967 / 0001	/	1
	578	AN3-4A		A	·BOLT	1863 / 0001	/	8
	581	NAS1149F0332P		A	·WASHER	1863 / 0001	/	8
	584	21490-101			·DRAIN HOSE	1863 / 0001	/	1
					ALTERNATE FOR P/N 21802-101			
-	587	21802-101			·DRAIN HOSE	1863 / 0001	/	1
					ALTERNATE FOR P/N 21490-101			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	590	50566-063		A	·SPRING CLAMP	1863 / 0001	/	2
	593	NAS1329A4-320		A	·NUT, BLIND RIVET	1863 / 0001	/	1
	596	21120-001			·PRESSURE HOSE	1863 / 0001	/	1
-	599	50132-001		A	·TIE DOWN	1863 / 0001	/	AR
-	602	50239-040		A	·CABLE TIE	1863 / 0001	/	AR
	605	21397-001			·WASHER	1863 / 0001	/	2
	608	21576-001			·SEAL	1863 / 0001	/	1
-	611	20709-001			·PLUMBING BULKHEAD	1863	1956	1
	614	20709-002			·PLUMBING BULKHEAD	1957 / 0001	/	1
-	617	MS21266-4N			·GROMMET	1863 / 0001	/	AR
-	620	21209-001			·CONDENSER ASSEMBLY	1863	3293	1
					FOR SPARES USE P/N 21209-002			
-	623	21209-002			·CONDENSER ASSEMBLY	3294 / 0001	3827 / 0267	1
-	624	21209-003			·CONDENSER ASSEMBLY	3828 / 0268	/	1
-	626	21209-101			··CONDENSER COIL ASSEMBLY	1863	3293	1
-	629	21209-201			··CONDENSER COIL ASSEMBLY	3294 / 0001	/	1
	630	21209-301			··CONDENSER COIL ASSEMBLY			
	632	21209-103	#		··CONDENSER RECEIVER/DRYER	1863 / 0001	/	1
	635	PRT OF ITM 632			··CLAMP	1863 / 0001	/	1
-	638	21209-102			··CONDENSER BLOWER ASSEMBLY	1863	3293	1
-	641	21209-202			··CONDENSER BLOWER ASSEMBLY	3294 / 0001	/	1
	644	1133480-1			··CONDENSER BLOWER	1863 / 0001	/	1
	647	1133012-1			··OUTLET DUCT	1863 / 0001	/	1
	650	AN3-3A		A	··BOLT	3294 / 0001	/	6
	653	AN960-10L		A	··WASHER	3294 / 0001	/	6
					ALTERNATE FOR P/N NAS1149F0332P			
-	654	NAS1149F0332P		A	··WASHER	3294 / 0001	/	6
					ALTERNATE FOR P/N AN960-10L			
	656	AN960-10		A	··WASHER	3294 / 0001	/	6
					ALTERNATE FOR P/N NAS1149F0363P			
-	657	NAS1149F0363P		A	··WASHER	3294 / 0001	/	6
					ALTERNATE FOR P/N AN960-10			
	659	MS21083N3		A	··NUT	3294 / 0001	/	6
	662	MS24694-48		A	··SCREW	1863 / 0001	/	14
	665	MS21266-3N			··GROMMET	1863 / 0001	/	AR
	668	QS100M96H			··CLAMP	1863 / 0001	/	2
	671	IT-5752-48-0200			··FLEX COUPLING	1863 / 0001	/	1
	674	20975-001			·CONDENSER INTAKE SCREEN	1863 / 0001	/	1
	677	51110-050		A	·PEM STUD	1863 / 0001	/	1
	680	AN315C3		A	·NUT	1863 / 0001	/	1
	683	NAS1149F0332P		A	·WASHER	1863 / 0001	/	1
	686	21489-001			·GROUNDING STRAP	1863 / 0001	/	1
	689	AN3-5A		A	·BOLT	1863 / 0001	/	1
	692	NAS1149F0332P		A	·WASHER	1863 / 0001	/	1
	695	MS21044N3		A	·NUT	1863 / 0001	/	1
	698	20974-001			·CONDENSER EXHAUST SCREEN	1863 / 0001	/	1
	701	17048-001			·AIR DEFLECTOR	1863 / 0001	/	1
	704	51110-050		A	·PEM STUD	1863	2043	1
	707	AN315C3		A	·NUT	1863	2043	1
	710	NAS1149F0332P		A	·WASHER	1863	2043	1
	713	21529-001			·GROUNDING STRAP	1863	2043	1
	716	AN3-5A		A	·BOLT	1863	2043	1
	719	NAS1149F0332P		A	·WASHER	1863	2043	2
	722	MS21044N3		A	·NUT	1863	2043	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	725	AN525-832R10		A	·SCREW	1863 / 0001	/	10
	728	21209-104	#		··PRESSURE HOSE	1863 / 0001	/	1
	731	17561-008			··O-RING	1863 / 0001	/	2
-	734	21209-105			··PRESSURE HOSE	1863 / 0001	/	1
	735	21209-305	#		··PRESSURE HOSE	1863 / 0001	/	1
	737	17561-006			··O-RING	1863 / 0001	/	2
	740	1133036-1			··PRESSURE HOSE	1863 / 0001	/	1
	743	17561-006			··O-RING	1863 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 71-00-02			ENGINE BAFFLING INSTALLATION			
	401	RF 24-30-02			ALTERNATOR 2 INSTALLATION			
	402	RF 21-20-01			CABIN DUCT INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840; REFER TO 22-1863 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2334, 22-2420; REFER TO SERIAL 22-2438 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-2610, 22-2618; REFER TO 22-2620 FOR PART IDENTIFICATION.			
					4) SERIAL NUMBER 22-3543, 22-3556; REFER TO 22-3614 FOR PART IDENTIFICATION.			
			!		IF REPLACING DRIVE SHAFT 1133175-1 WITH 1133175-2, EXISTING RING GROMMET MUST BE REPLACED WITH RING GROMMET 1133089-3 AND SLEEVE BUSHING 1133089-2.			
			@		21119-002 AND 21119-003 MAY NOT BE USED AS SPARES TO 17557-001 UNLESS ALL POE OIL IS REMOVED FROM SYSTEM AND REPLACED WITH PAG OIL.			
			#		21209-103, 21209-104, & 21209-305 ARE FOR FIELD SERVICE USE ONLY AS A SPARE.			
			^		IF SPARING COMPRESSOR INSTALLATION FROM KEITH TO ENVIRO, OIL MUST BE FLUSHED AND REPLACED PER COMPRESSOR REQUIREMENTS.			

EFFECTIVITY:
All

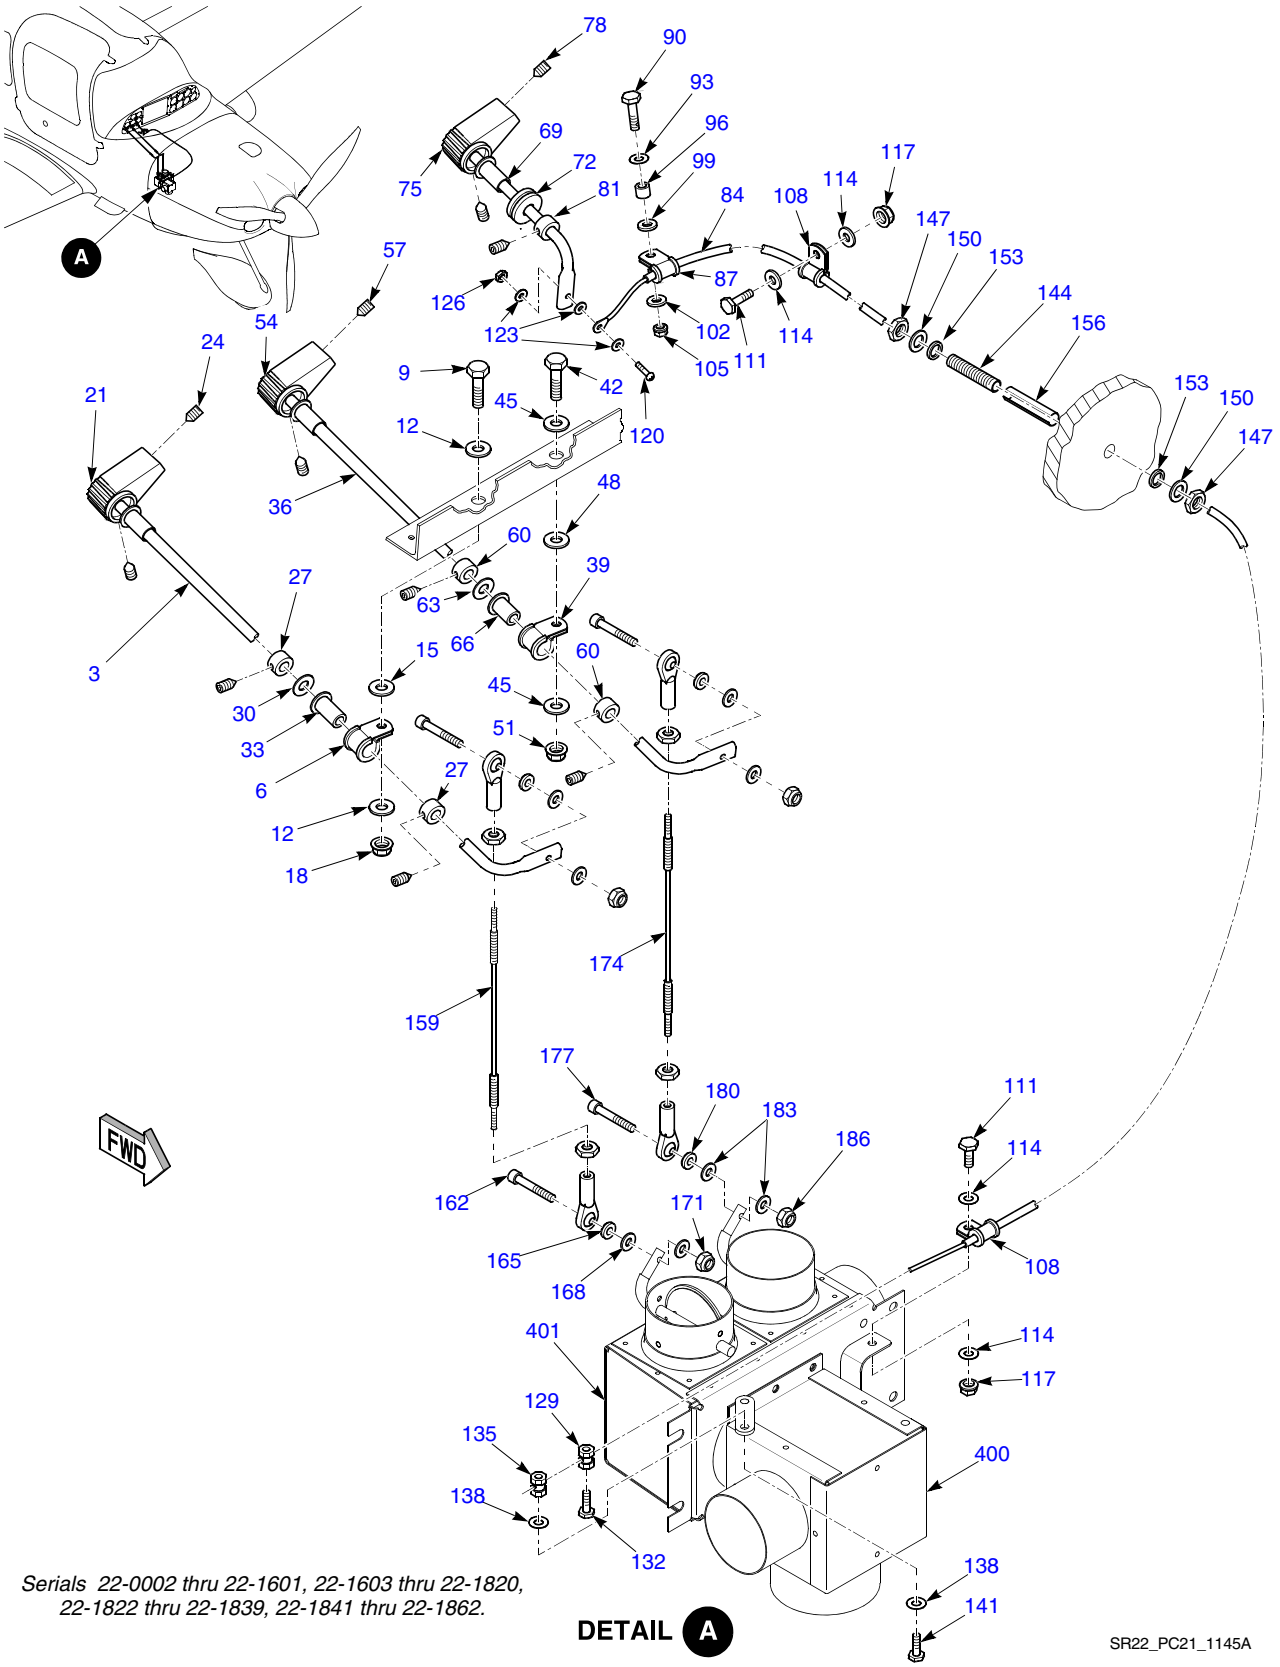

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

DETAIL A

SR22_PC21_1145A

Figure-01

Cabin Air Controls - Serials 22-0002 thru 22-1862

EFFECTIVITY:
Serials 22-0002 thru 22-1862

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		CABIN AIR CONTROLS	0002	1862	NP
	3	12110-001			·LINKAGE SHAFT ASSEMBLY, COLD AIR	0002	1862	1
	6	MS21919WDG6		A	·CLAMP	0002	1862	1
	9	AN3-4A		A	·BOLT	0002	1862	1
	12	NAS1149F0332P		A	·WASHER	0002	1862	2
	15	NAS1149F0363P		A	·WASHER	0002	1862	1
	18	MS21042-3		A	·NUT	0002	1862	1
	21	50029-001			··CONTROL KNOB	0002	1862	1
	24	50577-132		A	··CONE PT SET SCREW	0002	1862	2
	27	50146-001			··SHAFT COLLAR	0002	1862	2
	30	51054-011			··RUBBER WASHER	0002	1862	1
	33	50145-001			··BUSHING	0002	1862	2
	36	12110-002			·LINKAGE SHAFT ASSEMBLY, DEFROST	0002	1862	1
	39	MS21919WDG6		A	·CLAMP	0002	1862	1
	42	AN3-4A		A	·BOLT	0002	1862	1
	45	NAS1149F0332P		A	·WASHER	0002	1862	2
	48	NAS1149F0363P		A	·WASHER	0002	1862	1
	51	MS21042-3		A	·NUT	0002	1862	1
	54	50029-001			··CONTROL KNOB	0002	1862	1
	57	50577-132		A	··CONE PT SET SCREW	0002	1862	2
	60	50146-001			··SHAFT COLLAR	0002	1862	2
	63	51054-011			··RUBBER WASHER	0002	1862	1
	66	50145-001			··BUSHING	0002	1862	2
	69	14202-001			·LINKAGE SHAFT ASSEMBLY, HEAT	0002	1862	1
	72	MS35489-9		A	·GROMMET	0002	1862	1
	75	50029-001			··CONTROL KNOB	0002	1862	1
	78	50577-132		A	··CONE PT SET SCREW	0002	1862	2
	81	50146-001			··SHAFT COLLAR	0002	1862	2
	84	13870-001			·CABLE ASSEMBLY	0002	1862	1
	87	MS21919WDG3		A	·CLAMP	0002	1862	1
	90	AN3-6A		A	·BOLT	0002	1862	1
	93	NAS1149F0332P		A	·WASHER	0002	1862	1
	96	NAS43DD3-16FC		A	·SPACER	0002	1862	1
	99	NAS1149F0363P		A	·WASHER	0002	1862	1
	102	NAS1149F0332P		A	·WASHER	0002	1862	1
	105	MS21042-3		A	·NUT	0002	1862	1
	108	MS21919WDG3		A	·CLAMP	0002	1862	1
	111	AN3-4A		A	·BOLT	0002	1862	2
	114	NAS1149F0332P		A	·WASHER	0002	1862	4
	117	MS21042-3		A	·NUT	0002	1862	2
	120	MS35206-217		A	·BOLT	0002	1862	1
	123	NAS1149DN416K		A	·WASHER	0002	1862	3
	126	MS21044N04		A	·NUT	0002	1862	1
	129	50553-001		A	·CABLE STOP	0002	1862	1
	132	PRT OF ITM 129		A	·BOLT	0002	1862	1
	135	50553-001		A	·CABLE STOP	0002	1862	1
	138	NAS1149F0332P		A	·WASHER	0002	1862	2
	141	50557-001		A	·BOLT	0002	1862	1
	144	12645-001			·CABLE PASS THROUGH	0002	1862	1
	147	AN924-6		A	·NUT	0002	1862	2
	150	NAS1149F0963P		A	·WASHER	0002	1862	2
	153	12622-001		A	·FIBER WASHER	0002	1862	2
	156	50020-125			·FIBERFRAX PAPER	0002	1862	AR
	159	12111-002			·PLENUM LINKAGE ASSY	0002	1862	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	162	MS35206-218		A	·SCREW	0002	1862	2
	165	12111-103		A	·SWIVEL BALL LINK	0002	1862	2
	168	NAS1149F-N416P		A	·WASHER	0002	1862	4
	171	MS21044N04		A	·FIBERLOCK NUT	0002	1862	2
	174	12111-001			·PLENUM LINKAGE ASSY	0002	1862	1
	177	MS35206-218		A	·PAN HEAD SCREW 4-40	0002	1862	2
	180	12111-103		A	·SWIVEL BALL LINK SHIM	0002	1862	2
	183	NAS1149F-N416P		A	·WASHER	0002	1862	4
	186	MS21044N04		A	·FIBERLOCK NUT	0002	1862	2
					REFERENCE ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 21-40-01			HOT AIR VALVE			
	401	RF 21-20-01			CABIN AIR PLENUM			

Intentionally Left Blank

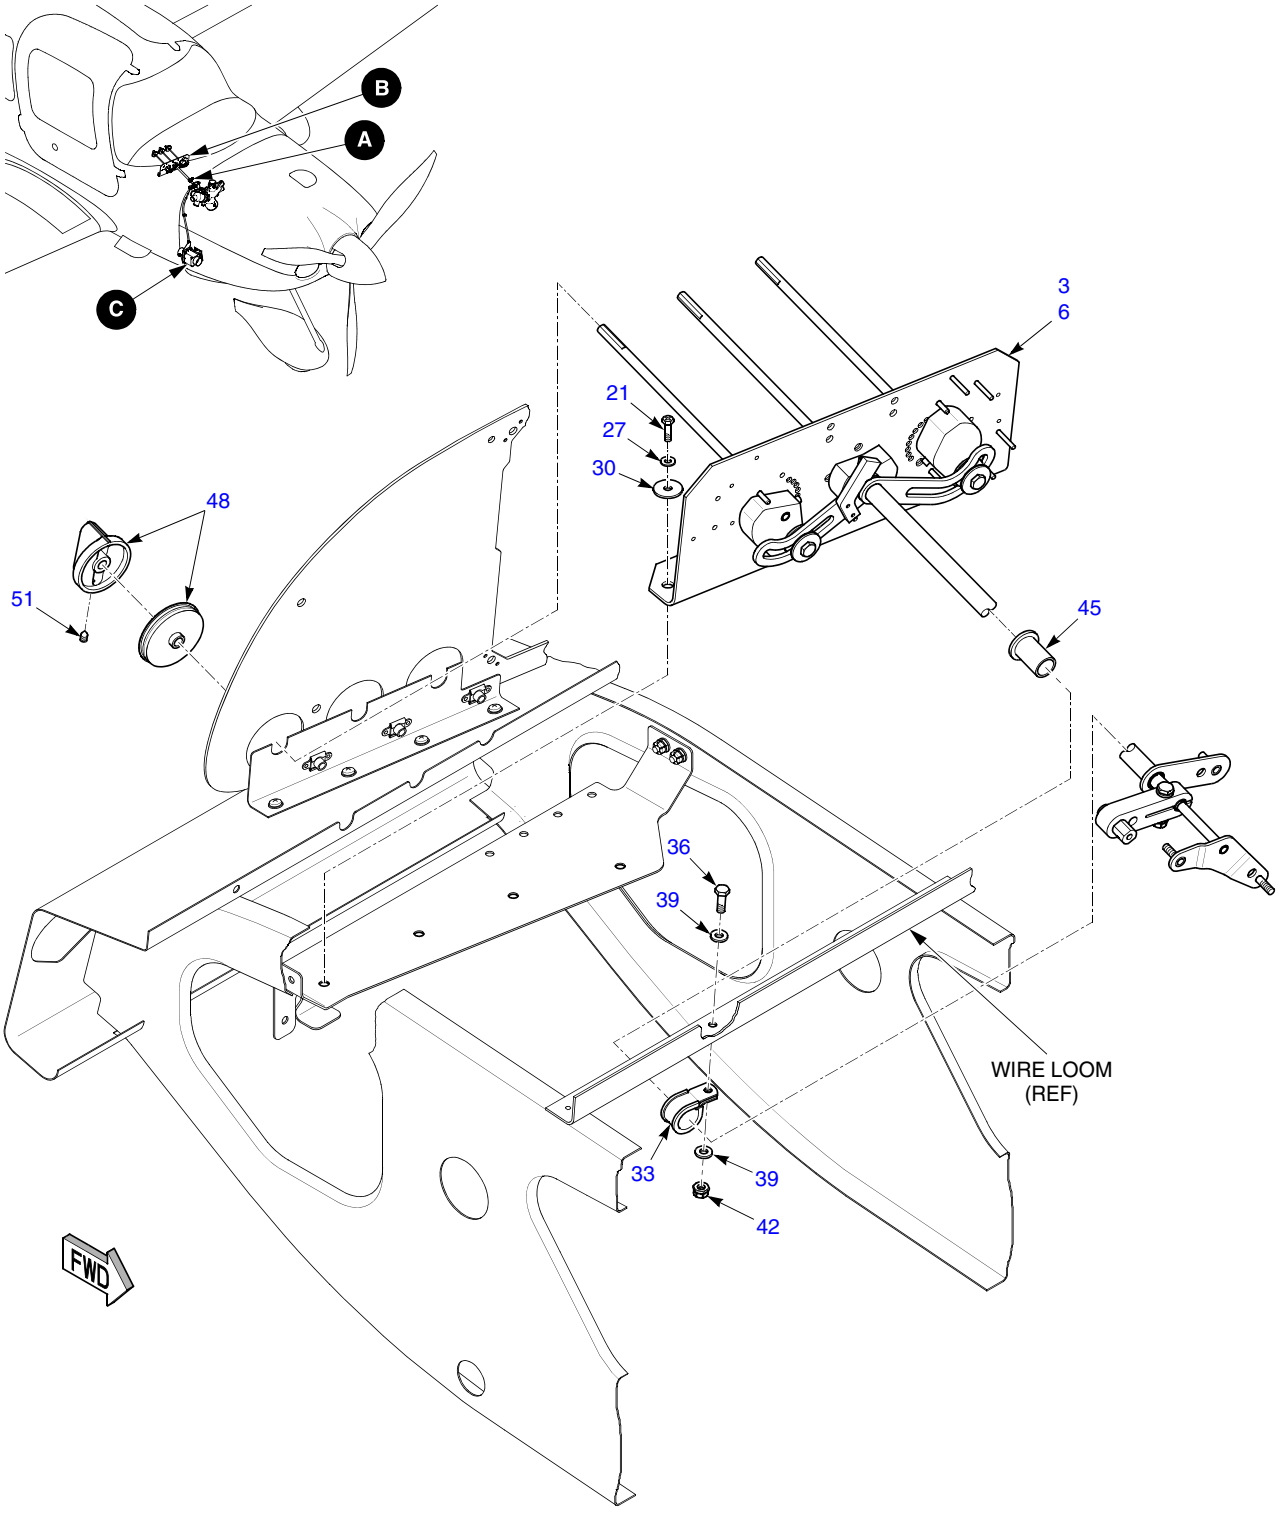

Serials 22-1602, 22-1821, 22-1840, 22-1863 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

DETAIL A

SR22_PC21_1563B

Figure-02
Cabin Air Controls - Serials 22-1863 thru 22-2437 (1 of 3)

EFFECTIVITY:
Serials 22-1863 thru 22-2437

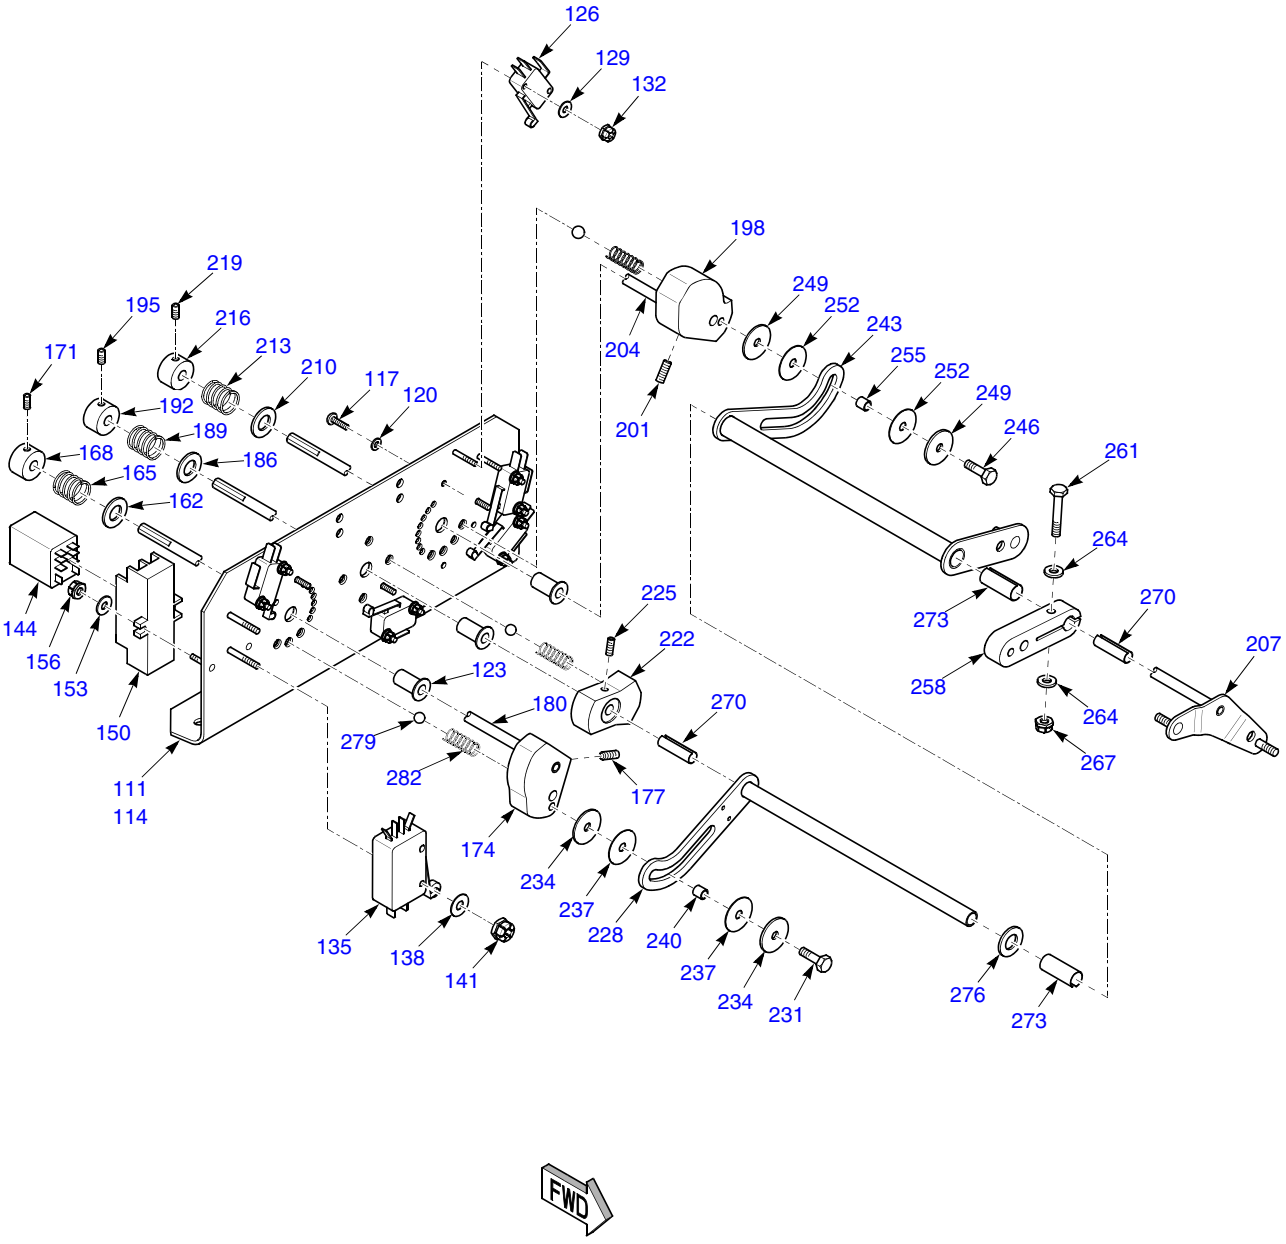

Serials 22-1602, 22-1821, 22-1840, 22-1863 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

DETAIL B

SR22_PC21_1567C

Figure-02

Cabin Air Controls - Serials 22-1863 thru 22-2437 (2 of 3)

EFFECTIVITY:
Serials 22-1863 thru 22-2437

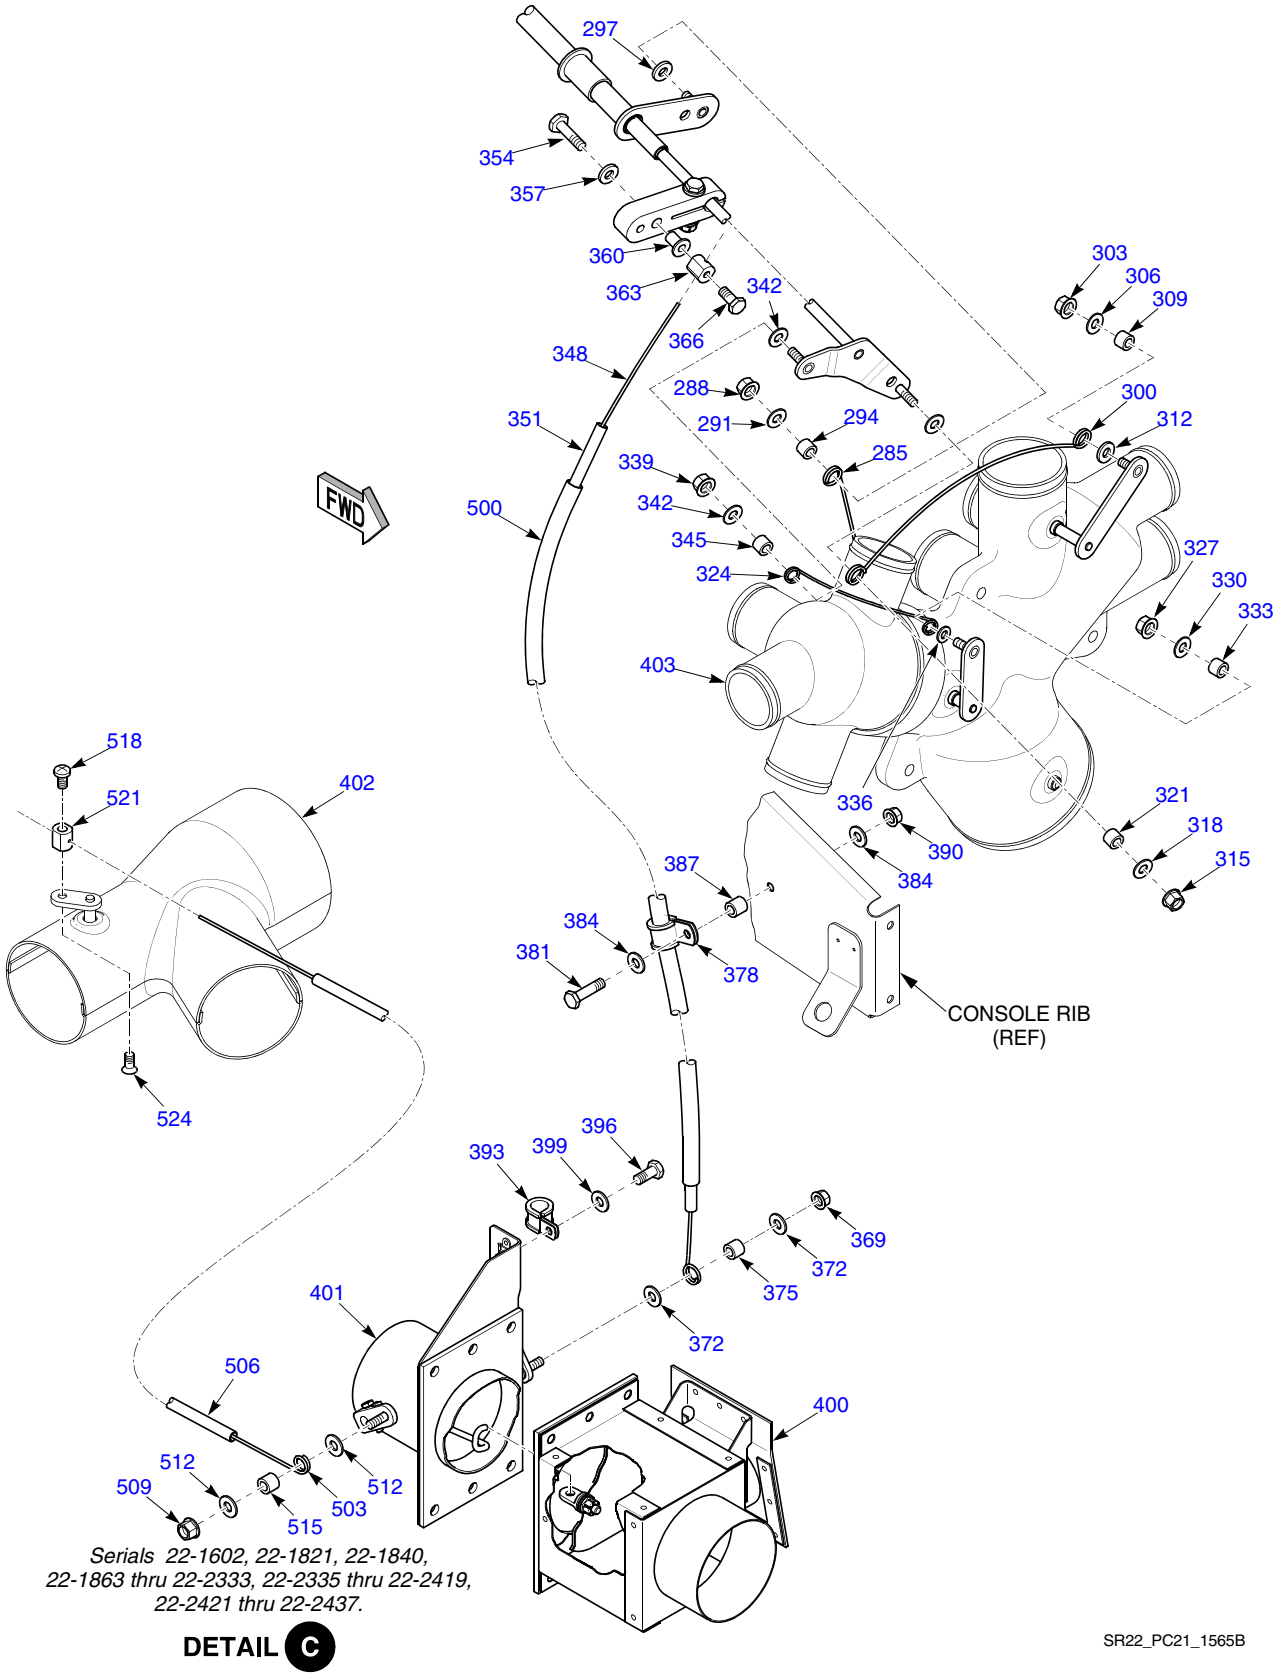

Figure-02

Cabin Air Controls - Serials 22-1863 thru 22-2437 (3 of 3)

EFFECTIVITY:
Serials 22-1863 thru 22-2437

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		CABIN AIR CONTROLS INSTALLATION	1863	2437	NP
	3	20730-004			·CONTROL ASSEMBLY W/O FAN	1863	1966	1
	6	20730-007			·CONTROL ASSEMBLY W/O FAN	1967	2437	1
-	9	20730-003			·CONTROL ASSEMBLY W/ FAN	1863	1966	1
-	12	20730-006			·CONTROL ASSEMBLY W/ FAN	1967	2437	1
-	15	20730-002			·CONTROL ASSEMBLY W/ AIR CONDITIONING	1863	1966	1
-	18	20730-005			·CONTROL ASSEMBLY W/ AIR CONDITIONING	1967	2437	1
	21	NAS1801-08-9		A	·SCREW	1863	2437	4
					ALTERNATE FOR P/N MS27039-0808			
-	24	MS27039-0808		A	·SCREW	1863	2437	4
					ALTERNATE FOR P/N NAS1801-08-9			
	27	NAS1149FN832P		A	·WASHER	1863	2437	4
	30	AN970-3		A	·WASHER	1863	2437	4
	33	MS21919WDG11			·CLAMP	1863	2437	1
	36	AN3-4A		A	·BOLT	1863	2437	1
	39	NAS1149F0332P		A	·WASHER	1863	2437	2
	42	MS21044N3		A	·NUT	1863	2437	1
	45	21497-001			·BUSHING	1863	2437	1
	48	51604-001			·KNOB	1863	2437	3
	51	PRT OF ITM 48		A	·SET SCREW	1863	2437	3
-	54	20997-002			··SWITCH PLATE ASSEMBLY W/O FAN	1863	1966	1
-	57	20997-004			··SWITCH PLATE ASSEMBLY W/O FAN	1967 / 0001	/	1
-	60	20998-002			···SWITCH PLATE	1863	1966	1
-	63	20998-004			···SWITCH PLATE	1967	2437	1
-	66	MS35206-217			···SCREW	1967	2437	5
-	69	NAS1149FN432P			···WASHER	1967	2437	5
-	72	50145-001			···BUSHING	1863	2437	3
-	75	20997-001			··SWITCH PLATE ASSEMBLY W/ FAN	1863	1966	1
-	78	20997-003			··SWITCH PLATE ASSEMBLY W/ FAN	1967	2437	1
-	81	20998-001			···SWITCH PLATE	1863	1966	1
-	84	20998-003			···SWITCH PLATE	1967	2437	1
-	87	MS35206-217			···SCREW	1967	2437	5
-	90	NAS1149FN432P			···WASHER	1967	2437	5
-	93	50145-001			···BUSHING	1863	2437	3
-	96	20732-002			···SWITCH	1863	2437	2
					ALTERNATE FOR P/N 20732-004			
-	97	20732-004			···SWITCH	1863	2437	2
					ALTERNATE FOR P/N 20732-002			
-	99	NAS1149FN416P		A	···WASHER	1863	2437	4
-	102	MS21044N04		A	···NUT	1863	2437	4
-	105	20727-002			··SWITCH PLATE ASSEMBLY W/ AIR CONDITIONING	1863	1966	1
-	108	20727-003			··SWITCH PLATE ASSEMBLY W/ AIR CONDITIONING	1967	2437	1
	111	20728-002			···SWITCH PLATE	1863	1966	1
	114	20728-003			···SWITCH PLATE	1967	2437	1
	117	MS35206-217			···SCREW	1967	2437	4
	120	NAS1149FN432P			···WASHER	1967	2437	4
	123	50145-001			···BUSHING	1863	2437	3
	126	20732-002			···SWITCH	1863	2437	5
					ALTERNATE FOR P/N 20732-004			
-	127	20732-004			···SWITCH	1863	2437	5
					ALTERNATE FOR P/N 20732-002			
	129	NAS1149FN416P		A	···WASHER	1863	2437	10
	132	MS21044N04		A	···NUT	1863	2437	10
	135	20732-003			···SWITCH	1863	2437	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	138	NAS1149FN616P		A	···WASHER	1863	2437	2
	141	MS21044N06		A	···NUT	1863	2437	2
	144	50293-001			···RELAY	1863	2437	1
-	147	50295-001			···RELAY HOLD DOWN SPRING	1863	2437	1
	150	12724-002			···RELAY SOCKET	1863	2437	1
	153	NAS1149FN416P		A	···WASHER	1863	2437	2
	156	MS21044N04		A	···NUT	1863	2437	2
-	159	20739-001			··TEMPERATURE CONTROL ASSEMBLY	1863	2437	1
	162	50327-001		A	··WASHER	1863	2437	1
	165	51626-001		A	··SPRING	1863	2437	1
	168	50146-001		A	··SHAFT COLLAR	1863	2437	1
	171	PRT OF ITM 168		A	··SET SCREW	1863	2437	1
	174	20725-001			···TEMPERATURE CAM	1863	2437	1
	177	51606-050		A	···SET SCREW	1863	2437	1
	180	20729-002			···CONTROL SHAFT	1863	2437	1
-	183	20742-001			··FAN CONTROL ASSEMBLY	1863	2437	1
	186	50327-001		A	··WASHER	1863	2437	1
	189	51626-001		A	··SPRING	1863	2437	1
	192	50146-001		A	··SHAFT COLLAR	1863	2437	1
	195	PRT OF ITM 192		A	··SET SCREW	1863	2437	1
	198	20723-001			···FAN CAM	1863	2437	1
	201	51606-050		A	···SET SCREW	1863	2437	1
	204	20729-002			···CONTROL SHAFT	1863	2437	1
	207	20724-001			··VENT BELLCRANK	1863	2437	1
	210	50327-001		A	··WASHER	1863	2437	1
	213	51626-001		A	··SPRING	1863	2437	1
	216	50146-001		A	··SHAFT COLLAR	1863	2437	1
	219	PRT OF ITM 216		A	··SET SCREW	1863	2437	1
	222	20726-001			··VENT CAM	1863	2437	1
	225	51606-050		A	··SET SCREW	1863	2437	1
	228	20722-002			··TEMPERATURE CAM LEVER ASSEMBLY	1863	2437	1
	231	AN3-5A		A	··BOLT	1863	2437	1
	234	AN970-3		A	··WASHER	1863	2437	2
	237	50823-001		A	··TEFLON WASHER	1863	2437	2
	240	20708-001			··SPACER	1863	2437	1
	243	20735-002			··AIRFLOW CAM LEVER ASSEMBLY	1863	2437	1
	246	AN3-5A		A	··BOLT	1863	2437	1
	249	AN970-3		A	··WASHER	1863	2437	2
	252	50823-001		A	··TEFLON WASHER	1863	2437	2
	255	20708-001			··SPACER	1863	2437	1
	258	20719-001			··AIRFLOW CONTROL LEVER	1863	2437	1
	261	AN3-11A		A	··BOLT	1863	2437	1
	264	NAS1149F0363P		A	··WASHER	1863	2437	2
	267	MS21044N3		A	··NUT	1863	2437	1
	270	20756-001			··BEARING STRIP	1863	2437	2
	273	20756-002			··BEARING STRIP	1863	2437	2
	276	50327-001		A	··WASHER	1863	2437	1
	279	51660-250			··DETENT BALL	1863	2437	3
	282	51658-001			··SPRING	1863	2437	3
	285	20982-003			·LINKAGE, CONTROLS/AIR VOLUME	1863	2437	1
	288	MS21042-3		A	·NUT	1863	2437	2
	291	NAS1149F0332P		A	·WASHER	1863	2437	2
	294	NAS43HT3-14		A	·SPACER	1863	2437	2
	297	NAS1149F0363P		A	·WASHER	1863	2437	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	300	20983-002			·LINKAGE, DEFROST	1863	2437	1
	303	MS21042-3		A	·NUT	1863	2437	1
	306	NAS1149F0332P		A	·WASHER	1863	2437	1
	309	NAS43HT3-14		A	·SPACER	1863	2437	1
	312	NAS1149F0363P		A	·WASHER	1863	2437	1
	315	MS21042-3		A	·NUT	1863	2437	1
	318	NAS1149F0332P		A	·WASHER	1863	2437	2
	321	NAS43HT3-14		A	·SPACER	1863	2437	1
	324	20984-002			·LINKAGE, HEAT	1863	2437	1
	327	MS21042-3			·NUT	1863	2437	1
	330	NAS1149F0332P			·WASHER	1863	2437	1
	333	NAS43HT3-14			·SPACER	1863	2437	1
	336	NAS1149F0363P		A	·WASHER	1863	2437	1
	339	MS21042-3		A	·NUT	1863	2437	1
	342	NAS1149F0332P		A	·WASHER	1863	2437	2
	345	NAS43HT3-14		A	·SPACER	1863	2437	1
	348	20745-002			·LINKAGE, COUPLER TO MANIFOLD	1863	2437	1
	351	21483-001			·LINKAGE SLEEVE, COUPLER TO MANIFOLD	1863	2437	1
	354	AN3-6A		A	·BOLT	1863	2437	1
	357	NAS1149F0332P		A	·WASHER	1863	2437	1
	360	50145-408		A	·BUSHING	1863	2437	1
	363	21476-001		A	·WIRE-STOP	1863	2437	1
	366	AN3-3A		A	·BOLT	1863	2437	1
	369	MS21042-3		A	·NUT	1863	2437	1
	372	NAS1149F0332P		A	·WASHER	1863	2437	2
	375	NAS43HT3-14		A	·SPACER	1863	2437	1
	378	MS21919WDG6			·CLAMP	1863	2437	2
	381	AN3-6A		A	·BOLT	1863	2437	1
	384	NAS1149F0332P		A	·WASHER	1863	2437	2
	387	NAS43DD3-20FC		A	·SPACER	1863	2437	1
	390	MS21042-3		A	·NUT	1863	2437	1
	393	MS21919WDG6			·CLAMP	1863	2437	2
	396	AN3-4A		A	·BOLT	1863	2437	1
	399	NAS1149F0332P		A	·WASHER	1863	2437	16
	500	20972-002			·CABLE GUIDE	1863	2437	1
	503	21481-001			·LINKAGE, COUPLER TO VENT/FAN/EVAPORATOR	1863	2437	1
	506	21482-001			·LINKAGE SLEEVE	1863	2437	1
	509	MS21042-3		A	·NUT	1863	2437	1
	512	NAS1149F0332P		A	·WASHER	1863	2437	2
	515	NAS43HT3-14		A	·SPACER	1863	2437	1
	518	MS35207-260		A	·SCREW	1863	2437	1
	521	21476-001		A	·WIRE-STOP	1863	2437	1
	524	MS24693-S270		A	·SCREW	1863	2437	1
-	527	50943-025			·LOOM	1863	2437	AR
-	530	50132-001		A	·TIE DOWN	1863	2437	AR
-	533	50239-040		A	·CABLE TIE	1863	2437	AR
					REFERENCE ITEMS NOT PART OF ASSY/INSTL			
	400	RF 21-40-01			HOT AIR VALVE			
	401	RF 21-40-01			HOT AIR VALVE COUPLER			
	402	RF 21-20-01			VENT DUCT			
	403	RF 21-20-01			AIR DISTRIBUTION MANIFOLD			
					SYMBOL NOTES:			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PART IDENTIFICATION.			

Intentionally Left Blank

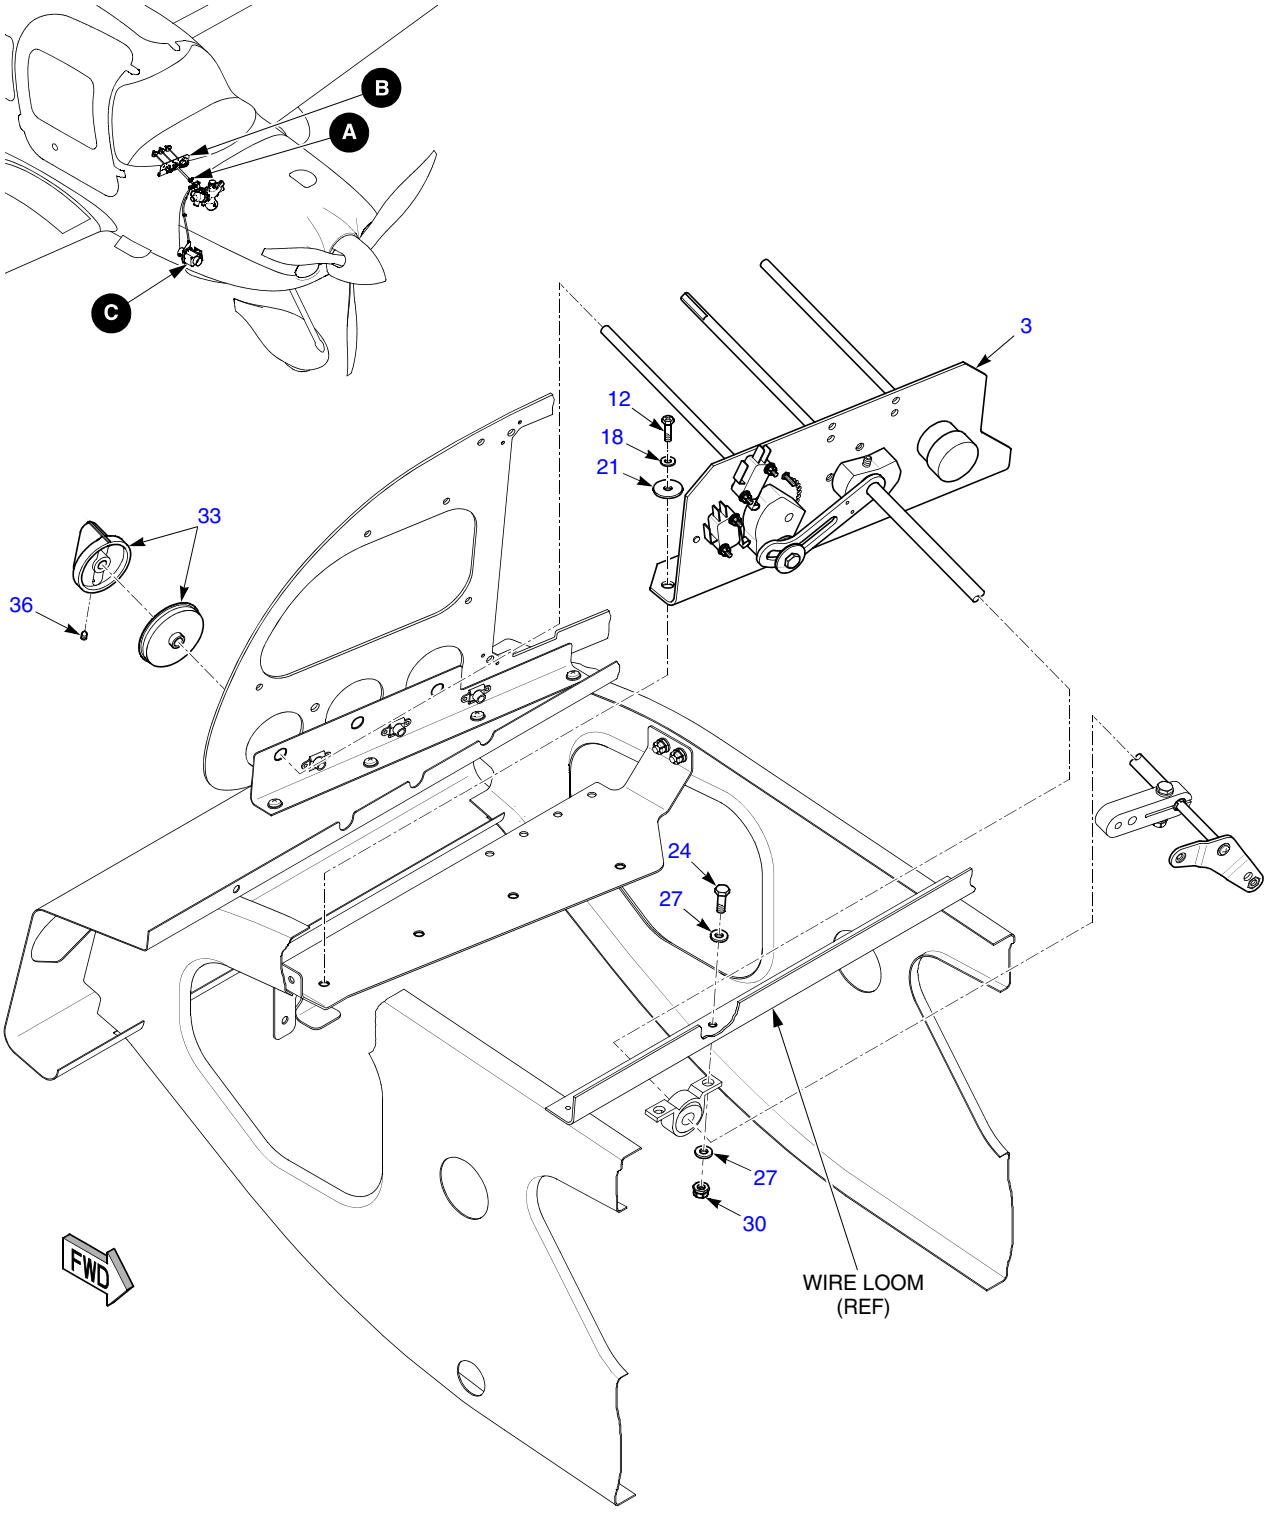

Serials 22-2334, 22-2420, 22-2438 & subs w/o Perspective Avionics.

DETAIL A

SR22_PC21_1654A

Figure-03

Cabin Air Controls - Serials 22-2438 & subs w/o Perspective (1 of 3)

EFFECTIVITY:
Serials 22-2438 & subs w/o Perspective

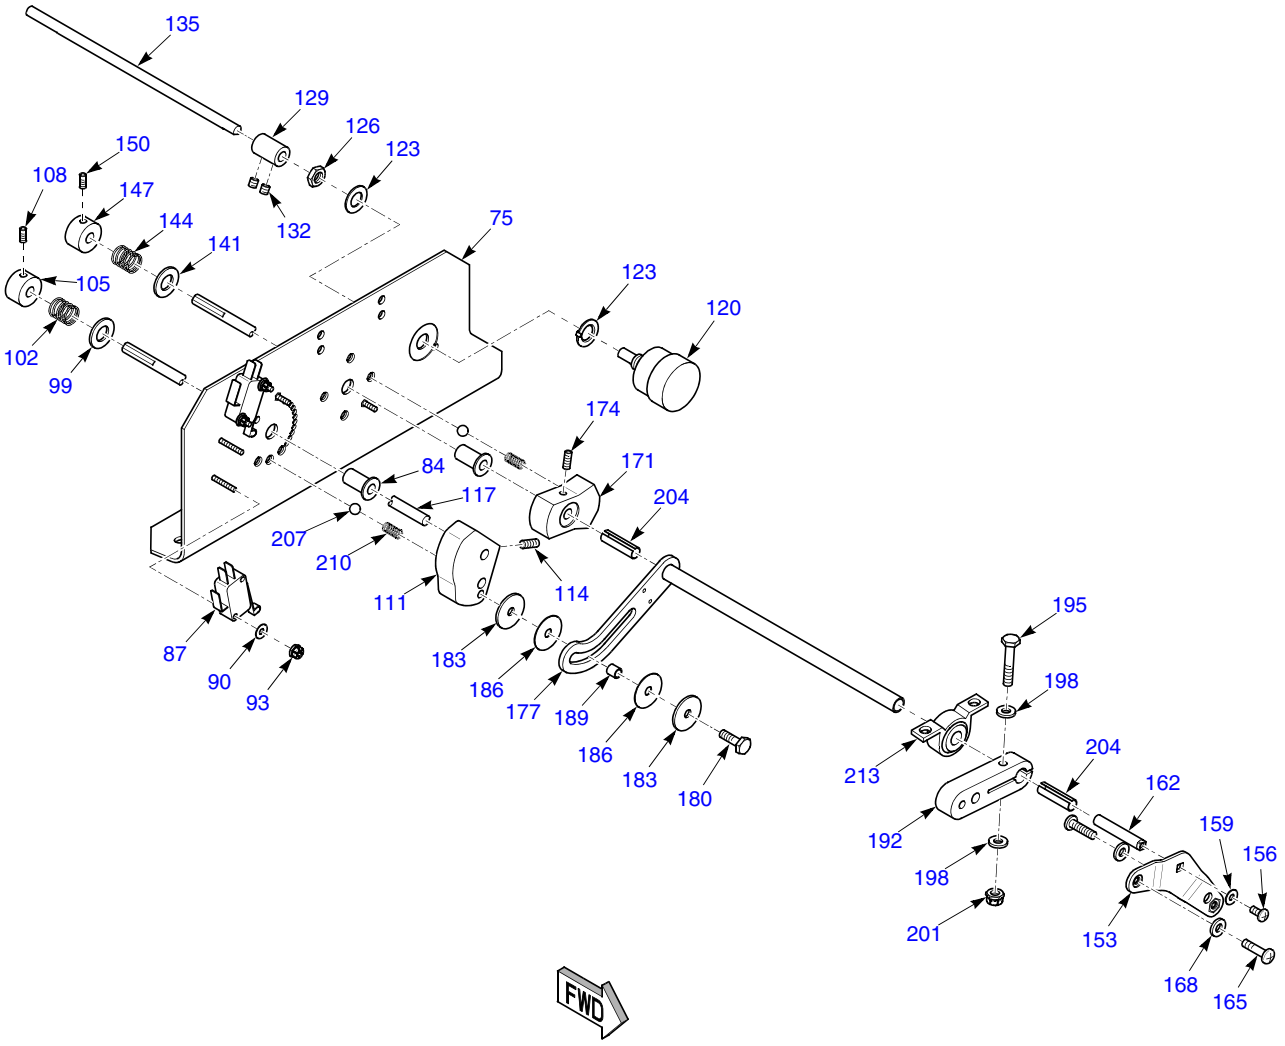

Serials 22-2334, 22-2420, 22-2438 & subs w/o Perspective Avionics.

DETAIL B

SR22_PC21_1658A

Figure-03

Cabin Air Controls - Serials 22-2438 & subs w/o Perspective (2 of 3)

EFFECTIVITY:
Serials 22-2438 & subs w/o Perspective

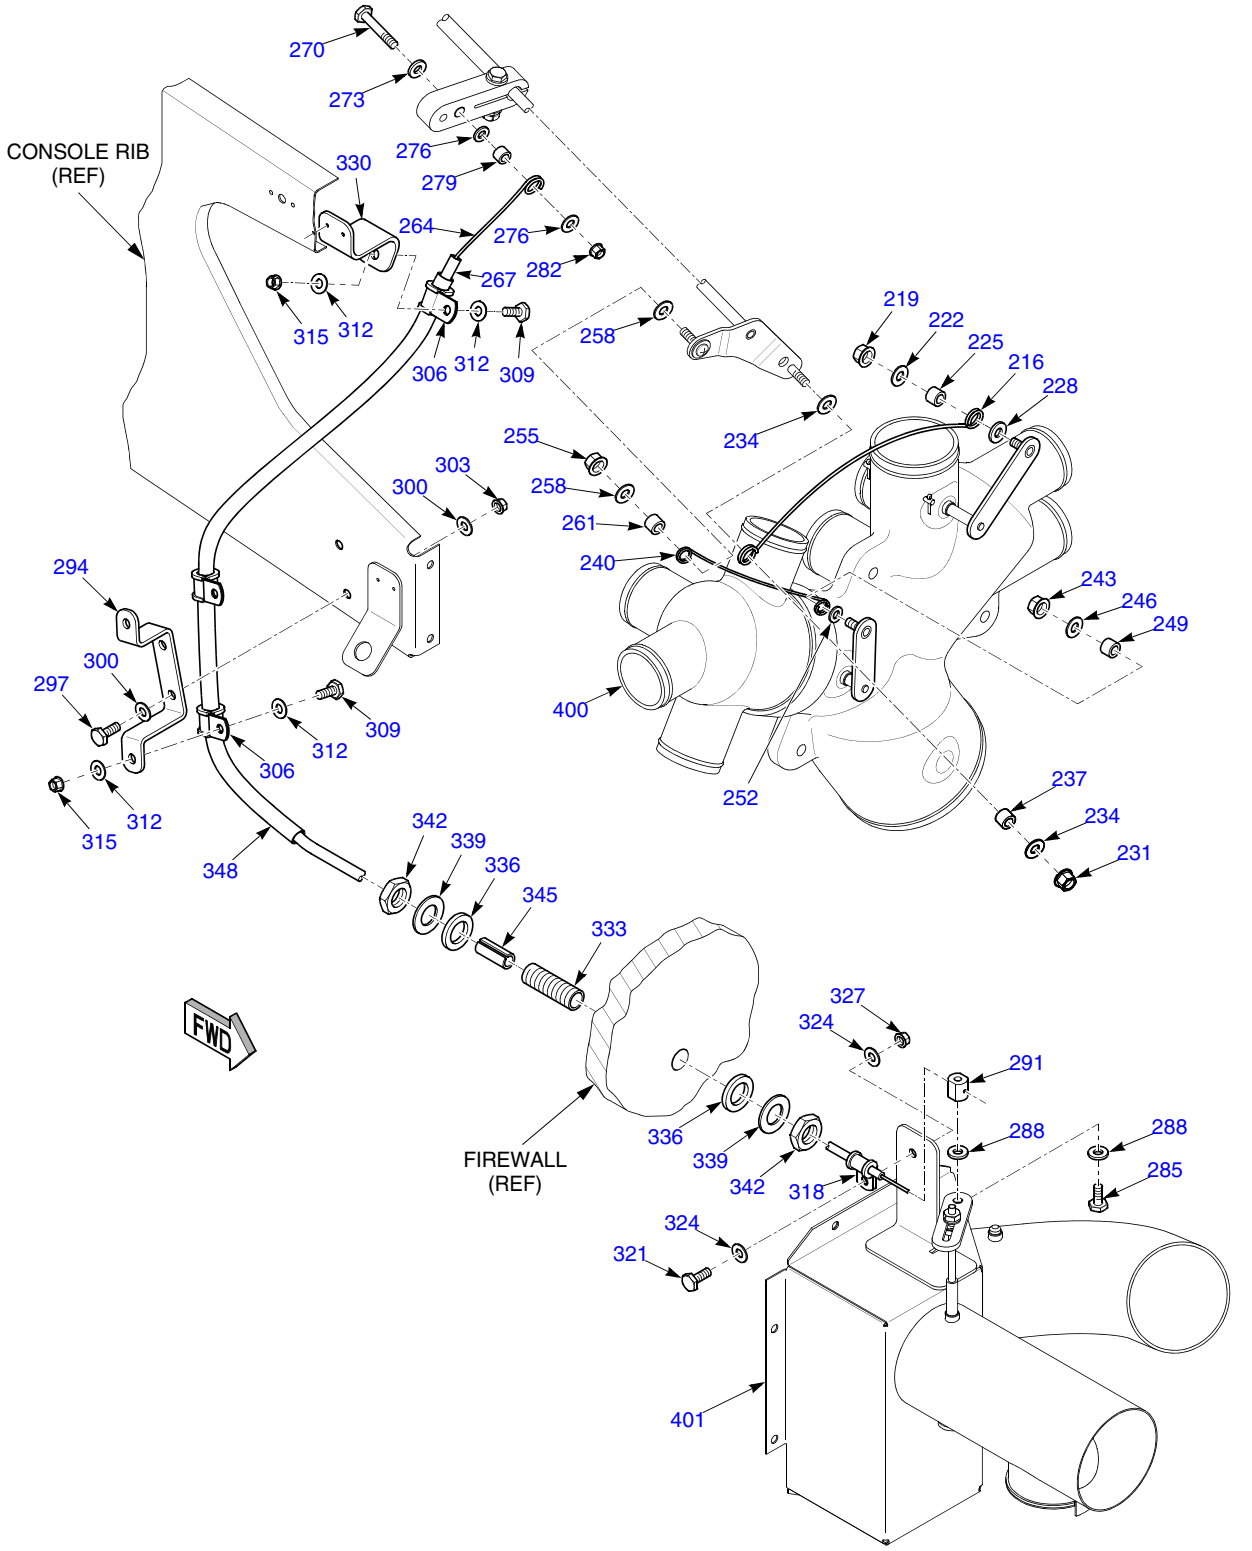

Serials 22-2334, 22-2420, 22-2438 & subs w/o Perspective Avionics.

DETAIL C

SR22_PC21_1656A

Figure-03

Cabin Air Controls - Serials 22-2438 & subs w/o Perspective (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		CABIN AIR CONTROLS INSTALL W/O PERSPECTIVE AVIONICS	2438		NP
	3	17427-002			·CONTROL ASSEMBLY W/O FAN	2438		1
-	6	17417-002			·CONTROL ASSEMBLY W/ FAN	2438		1
-	9	21660-002			·CONTROL ASSEMBLY W/ AIR CONDITIONING	2438		1
	12	NAS1801-08-9		A	·SCREW	2438		4
					ALTERNATE FOR P/N MS27039-0808			
-	15	MS27039-0808		A	·SCREW	2438		4
					ALTERNATE FOR P/N NAS1801-08-9			
	18	NAS1149FN832P		A	·WASHER	2438		4
	21	AN970-3		A	·WASHER	2438		4
	24	AN3-4A		A	·BOLT	2438		2
	27	NAS1149F0332P		A	·WASHER	2438		4
	30	MS21044N3		A	·NUT	2438		2
	33	51604-001			·KNOB	2438		3
	36	PRT OF ITM 33		A	·SET SCREW	2438		3
-	39	17419-002			··SWITCH PLATE ASSEMBLY W/O AIR CONDITIONING	2438		1
-	42	21659-002			···SWITCH PLATE	2438		1
-	45	MS35206-217			···SCREW	2438		3
-	48	NAS1149FN432P			···WASHER	2438		3
-	51	50145-001			···BUSHING	2438		2
-	54	50336-004			··SWITCH W/O FAN	2438		1
-	72	21663-002			··SWITCH PLATE ASSEMBLY W/ AIR CONDITIONING	2438		1
	75	21662-002			···SWITCH PLATE	2438		1
-	78	MS35206-217			···SCREW	2438		2
-	81	NAS1149FN432P			···WASHER	2438		2
	84	50145-001			···BUSHING	2438		2
	87	20732-002			···SWITCH	2438		2
					ALTERNATE FOR P/N 20732-004			
-	88	20732-004			···SWITCH	2438		2
					ALTERNATE FOR P/N 20732-002			
	90	NAS1149FN416P		A	···WASHER	2438		4
	93	MS21044N04		A	···NUT	2438		4
-	96	21786-001			··TEMPERATURE CONTROL ASSEMBLY	2438		1
	99	50327-001		A	··WASHER	2438		1
	102	51626-001		A	··SPRING	2438		1
	105	50146-001		A	··SHAFT COLLAR	2438		1
	108	PRT OF ITM 105		A	··SET SCREW	2438		1
	111	20725-001			···TEMPERATURE CAM	2438		1
	114	51606-050		A	···SET SCREW	2438		1
	117	21787-001			···CONTROL SHAFT	2438		1
	120	50336-004			··SWITCH	2438		1
	123	PRT OF ITM 120		A	··WASHER	2438		2
	126	PRT OF ITM 120		A	··NUT	2438		1
	129	51832-001			··COUPLER	2438		1
	132	PRT OF ITM 129		A	··SET SCREW	2438		2
	135	21656-002			··CONTROL SHAFT	2438		1
-	138	21784-001			··VENT BELLCRANK ASSEMBLY	2438		1
	141	50327-001		A	··WASHER	2438		1
	144	51626-001		A	··SPRING	2438		1
	147	50146-001		A	··SHAFT COLLAR	2438		1
	150	PRT OF ITM 147		A	··SET SCREW	2438		1
	153	21784-101			···VENT BELLCRANK	2438		1
	156	MS35207-227		A	···SCREW	2438		1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	159	NAS11149FN616P		A	···WASHER	2438		1
	162	21784-102			···CONTROL SHAFT	2438		1
	165	MS35207-265			···SCREW	2438		2
	168	NAS1149F0363P			···WASHER	2438		2
	171	20726-001			··VENT CAM	2438		1
	174	51606-019		A	··SET SCREW	2438		1
	177	20722-002			··TEMPERATURE CAM LEVER ASSEMBLY	2438		1
	180	AN3-5A		A	··BOLT	2438		1
	183	AN970-3		A	··WASHER	2438		2
	186	50823-001		A	··TEFLON WASHER	2438		2
	189	20708-001			··SPACER	2438		1
	192	20719-001			··AIRFLOW CONTROL LEVER	2438		1
	195	AN3-11A		A	··BOLT	2438		1
	198	NAS1149F0363P		A	··WASHER	2438		2
	201	MS21044N3		A	··NUT	2438		1
	204	20756-001			··BEARING STRIP	2438		2
	207	51660-250			··DETENT BALL	2438		2
	210	51835-001			··SPRING	2438		2
	213	51904-001			··SPHERICAL BEARING	2438		1
	216	20983-002			·LINKAGE, DEFROST	2438		1
	219	MS21042-3		A	·NUT	2438		1
	222	NAS1149F0332P		A	·WASHER	2438		1
	225	NAS43HT3-14		A	·SPACER	2438		1
	228	NAS1149F0363P		A	·WASHER	2438		1
	231	MS21042-3		A	·NUT	2438		1
	234	NAS1149F0332P		A	·WASHER	2438		2
	237	NAS43HT3-14		A	·SPACER	2438		1
	240	20984-003			·LINKAGE, HEAT	2438		1
	243	MS21042-3			·NUT	2438		1
	246	NAS1149F0332P			·WASHER	2438		1
	249	NAS43HT3-14			·SPACER	2438		1
	252	NAS1149F0363P		A	·WASHER	2438		1
	255	MS21042-3		A	·NUT	2438		1
	258	NAS1149F0332P		A	·WASHER	2438		2
	261	NAS43HT3-14		A	·SPACER	2438		1
	264	18277-002			·LINKAGE, TEMPERATURE CONTROL	2438		1
	267	18276-001			·LINKAGE SLEEVE, TEMPERATURE CONTROL	2438		1
	270	AN3-11A		A	·BOLT	2438		1
	273	NAS1149F0363P		A	·WASHER	2438		1
	276	NAS1149F0332P		A	·WASHER	2438		2
	279	NAS43HT3-14		A	·SPACER	2438		1
	282	MS21042-3		A	·NUT	2438		1
	285	AN3C3A		A	·BOLT	2438		1
	288	NAS1149C0363R		A	·WASHER	2438		2
	291	21476-001		A	·WIRE-STOP	2438		1
	294	21795-002			·BRACKET, CABLE GUIDE	2438		1
	297	AN3-4A		A	·BOLT	2438		2
	300	NAS1149F0332P		A	·WASHER	2438		4
	303	MS21042-3		A	·NUT	2438		2
	306	MS21919WDG6			·CLAMP	2438		3
	309	AN3-3A		A	·BOLT	2438		3
	312	NAS1149F0332P		A	·WASHER	2438		6
	315	MS21042-3		A	·NUT	2438		3
	318	MS21919WH3			·CLAMP	2438		1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	321	AN3-3A		A	·BOLT	2438		1
	324	NAS1149F0332P		A	·WASHER	2438		2
	327	MS21042-3		A	·NUT	2438		1
	330	21877-001			·BRACKET, CABLE GUIDE	2438		1
	333	12645-002			·CABLE PASS THROUGH	2438		1
	336	12622-001		A	·FIBER WASHER	2438		2
	339	NAS1149F0963P		A	·WASHER	2438		2
	342	AN924-6		A	·NUT	2438		2
	345	50020-125			·FIBERFRAX PAPER	2438		AR
	348	17439-001			·CABLE GUIDE	2438		1
-	351	50943-025			·LOOM	2438		AR
-	354	50132-001		A	·TIE DOWN	2438		AR
-	357	50239-040		A	·CABLE TIE	2438		AR
					REFERENCE ITEMS NOT PART OF ASSY/INSTL			
	400	RF 21-20-01			AIR DISTRIBUTION MANIFOLD			
	401	RF 21-40-01			AIR MIXING CHAMBER			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

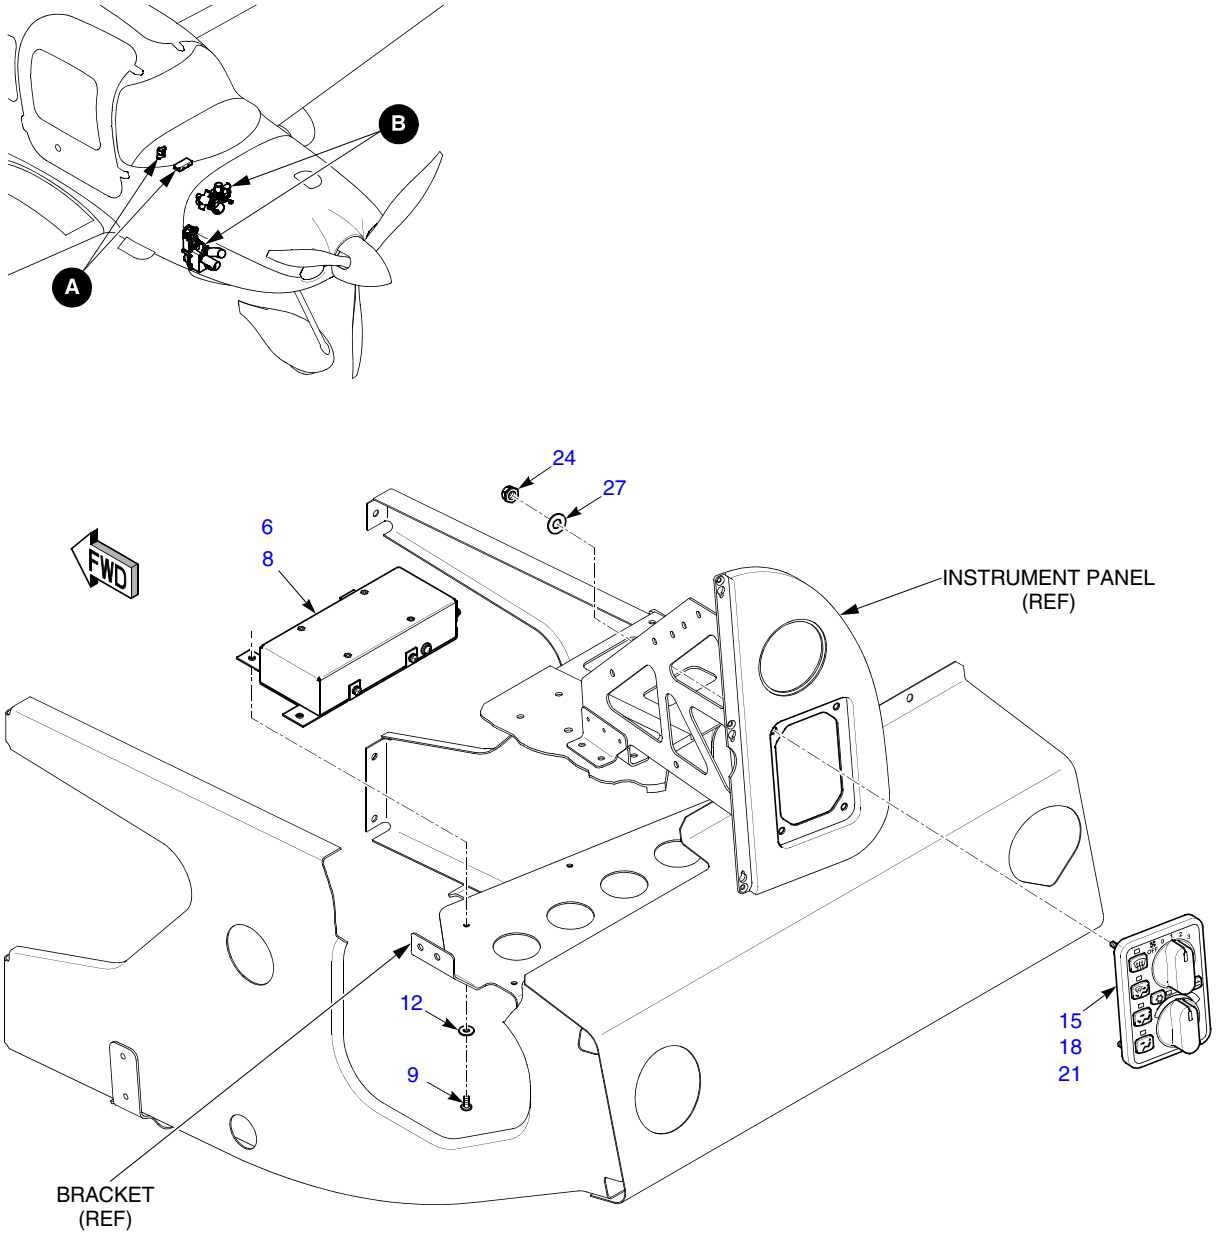

Serials w/ Perspective Avionics.

DETAIL A

SR22_PC21_1808A

Figure-04
Cabin Air Controls - Serials w/ Perspective (1 of 2)

EFFECTIVITY:
All

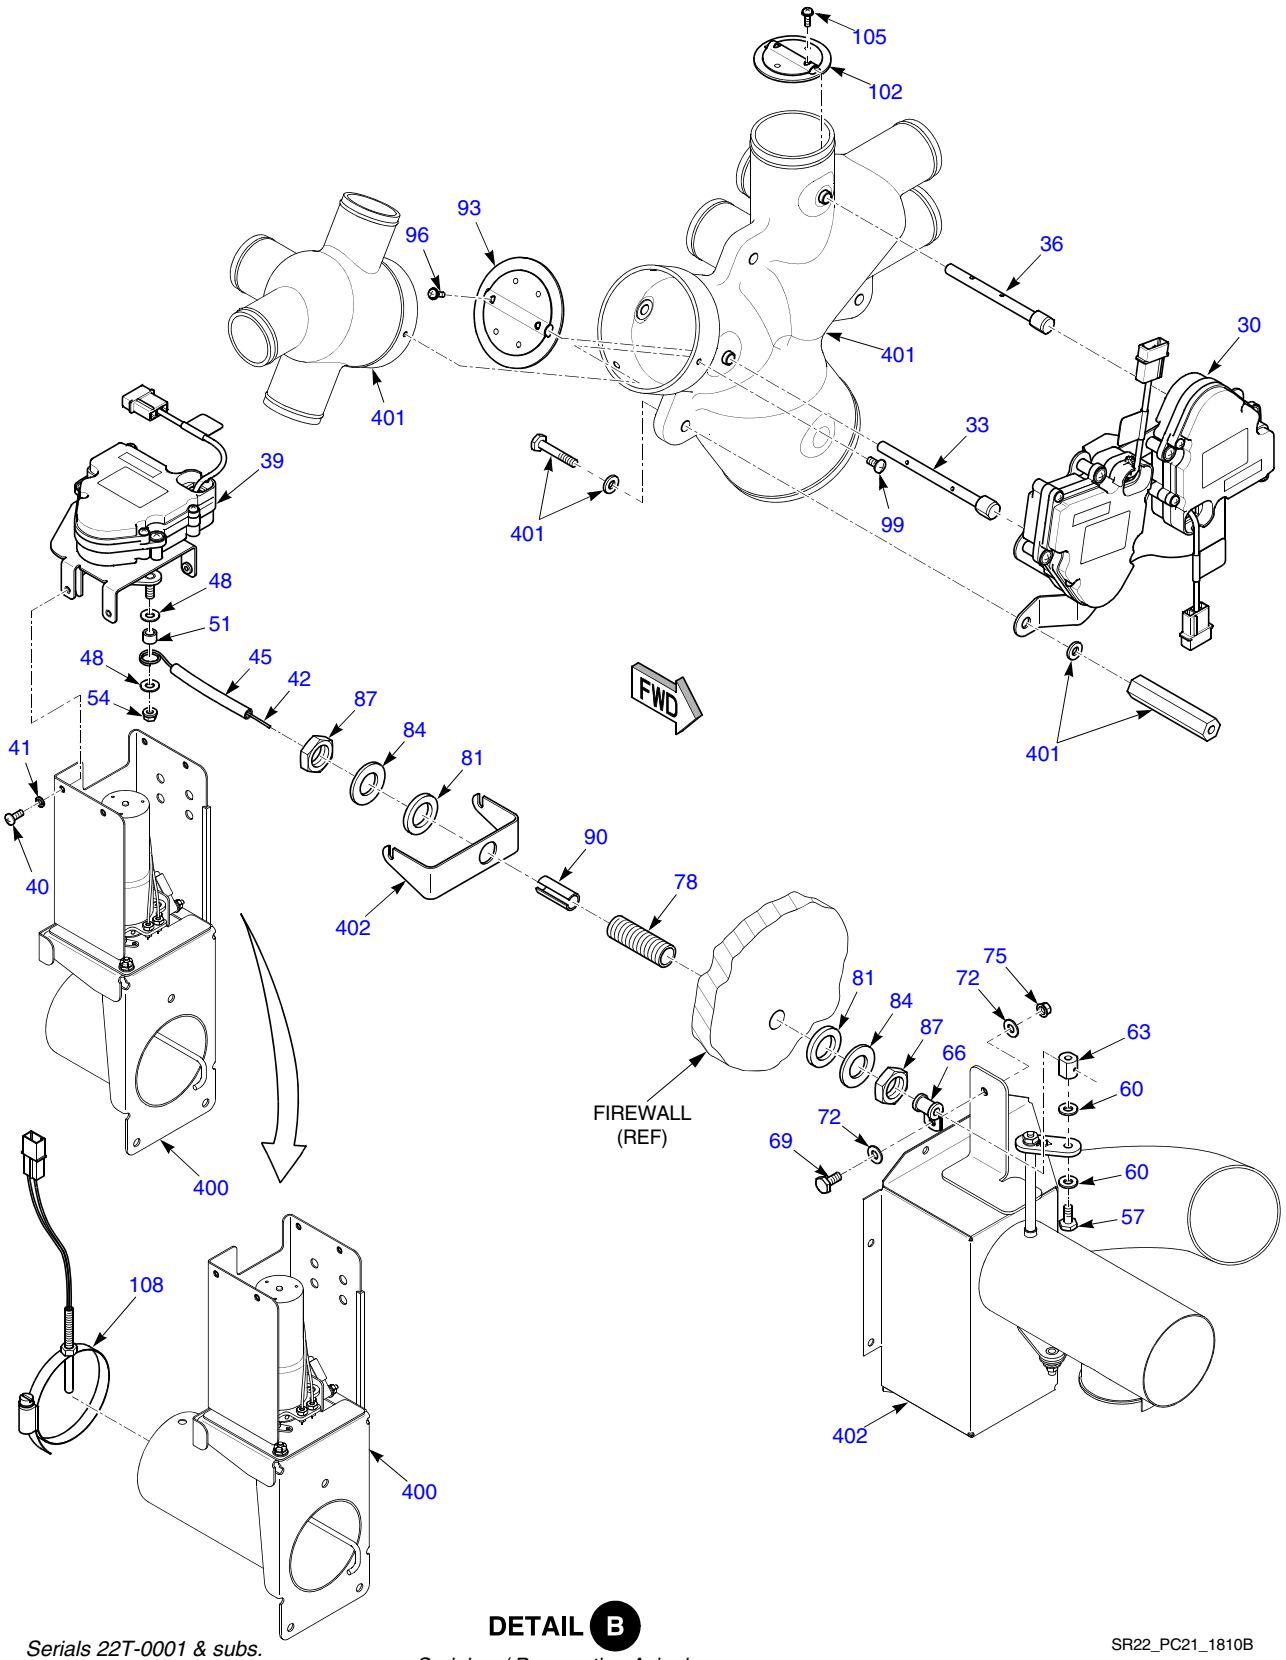

Figure-04

Cabin Air Controls - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04			CABIN AIR CONTROLS INSTL W/ PERSPECTIVE	3026 / 0001	/	NP
-	3	22102-001			·ECS CONTROLLER	3026	3418	1
					FOR SPARES USE P/N 22102-002			
-	5	22102-002			·ECS CONTROLLER	3419	3960	1
	6	22102-004			·ECS CONTROLLER	3961		1
-	7	22102-003			·ECS CONTROLLER	/ 0001	/ 0523	1
	8	22102-005			·ECS CONTROLLER	/ 0524	/	1
	9	MS35206-213		A	·SCREW	3026 / 0001	/	3
	12	NAS1149FN432P		A	·WASHER	3026 / 0001	/	3
	15	22101-001			·DISPLAY PANEL, ECS ELECTRICAL (FAN W/ A/C)	3026 / 0001	/	1
	18	22101-002			·DISPLAY PANEL, ECS ELECTRICAL (FAN ONLY)	3026 / 0001	/	1
	21	22101-003			·DISPLAY PANEL, ECS ELECTRICAL (VENT ONLY)	3026 / 0001	/	1
	24	MS21083N06		A	·NUT	3026 / 0001	/	4
	27	NAS1149FN632P		A	·WASHER	3026 / 0001	/	4
	30	22103-001			·DUAL ACTUATOR/MOUNTING PLATE ASSEMBLY	3026 / 0001	/	1
	33	22108-001			·DRIVE PIN, FLOOR VALVE	3026 / 0001	/	1
	36	22107-001			·DRIVE PIN, DEFROST VALVE	3026 / 0001	/	1
-	38	22104-001			·MIXING BOX ACTUATOR ASSEMBLY	3026 / 0001	3932 / 0486	1
					FOR SPARES USE P/N 22104-002			
	39	22104-002			·MIXING BOX ACTUATOR ASSEMBLY	3933 / 0487	/	1
	40	NAS1801-06-6		A	·SCREW	3026 / 0001	/	4
	41	MS35338-41		A	·WASHER	3026 / 0001	/	4
	42	22120-003			·LINKAGE, TEMPERATURE CONTROL	3026 / 0001	/	1
	45	22119-001			·LINKAGE SLEEVE, TEMPERATURE CONTROL	3026 / 0001	/	1
	48	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	51	NAS43HT3-14		A	·SPACER	3026 / 0001	/	1
	54	MS21042-3		A	·NUT	3026 / 0001	/	1
	57	AN3C3A		A	·BOLT	3026 / 0001	/	1
	60	NAS1149C0363R		A	·WASHER	3026 / 0001	/	2
	63	21476-001		A	·WIRE-STOP	3026 / 0001	/	1
	66	MS21919WH3			·CLAMP	3026 / 0001	/	1
	69	AN3-3A		A	·BOLT	3026 / 0001	/	1
	72	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	75	MS21042-3		A	·NUT	3026 / 0001	/	1
	78	12645-002			·CABLE PASS THROUGH	3026 / 0001	/	1
	81	12622-001		A	·FIBER WASHER	3026 / 0001	/	2
	84	NAS1149F0963P		A	·WASHER	3026 / 0001	/	2
	87	AN924-6		A	·NUT	3026 / 0001	/	2
	90	50020-125			·FIBERFRAX PAPER	3026 / 0001	/	AR
	93	20964-002			·ASSEMBLY, BAFFLE, VALVE, FLOOR	3026 / 0001	/	1
	96	51146-446		A	·SCREW	3026 / 0001	/	2
	99	MS51861-36		A	·SCREW	3026 / 0001	/	3
	102	20961-002			·ASSEMBLY, BAFFLE, VALVE, DEFROST	3026 / 0001	/	1
	105	51146-446		A	·SCREW	3026 / 0001	/	2
	108	28893-001			·ECS TEMPERATURE SENSOR	/ 0001	/	1
					REFERENCE ITEMS NOT PART OF ASSY/INSTL			
	400	RF 21-40-01			HOT AIR VALVE COUPLER			
	401	RF 21-20-01			AIR DISTRIBUTION MANIFOLD			
	402	RF 21-40-02			AIR MIXING CHAMBER			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					1) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			

CHAPTER

22

AUTO FLIGHT

Intentionally Left Blank

CHAPTER 22 - AUTOFLIGHT
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
22-LOEP	1	15 DEC 2014
22-LOEP	2	15 DEC 2014
22-TOC	1	15 DEC 2014
22-TOC	2	15 DEC 2014
22-10-01	1	15 DEC 2014
22-10-01	2	15 DEC 2014
22-11-01	1	15 DEC 2014
22-11-01	2	15 DEC 2014
22-11-01	3	15 DEC 2014
22-11-01	4	15 DEC 2014
22-11-02	1	15 DEC 2014
22-11-02	2	15 DEC 2014
22-11-02	3	15 DEC 2014
22-11-02	4	15 DEC 2014
22-11-03	1	15 DEC 2014
22-11-03	2	15 DEC 2014
22-11-03	3	15 DEC 2014
22-11-03	4	15 DEC 2014
22-12-01	1	15 DEC 2014
22-12-01	2	15 DEC 2014
22-12-02	1	15 DEC 2014
22-12-02	2	15 DEC 2014
22-12-02	3	15 DEC 2014
22-12-02	4	15 DEC 2014
22-12-03	1	15 DEC 2014
22-12-03	2	15 DEC 2014
22-12-03	3	15 DEC 2014
22-12-03	4	15 DEC 2014
22-12-04	1	15 DEC 2014
22-12-04	2	15 DEC 2014
22-12-04	3	15 DEC 2014
22-12-04	4	15 DEC 2014
22-12-05	1	15 DEC 2014
22-12-05	2	15 DEC 2014
22-12-05	3	15 DEC 2014
22-12-05	4	15 DEC 2014
22-20-01	1	15 DEC 2014
22-20-01	2	15 DEC 2014

Intentionally Left Blank

EFFECTIVITY:
All

CHAPTER 22 - AUTOFLIGHT

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
System 30 w/ GPSS	22-10-01
System 55X - Serials 22-0002 & subs w/ 55X and w/ Avidyne Avionics (1 of 2)	22-11-01
System 55X - Serials 22-3446 & subs, 22T-0001 & subs w/ 55X and w/ Perspective (2 of 2)	22-11-01
Pitch Servo - Serials 22-0002 & subs w/ System 55 and w/o Air Conditioning (1 of 2)	22-11-02
Pitch Servo - Serials 22-1863 & subs w/ GFC 700 and w/ Air Conditioning (2 of 2)	22-11-02
Flight Director - Serials 22-1307 & subs w/o Perspective (1 of 2)	22-11-03
Flight Director - Serials 22-3446 & subs, 22T-0001 & subs w/ Perspective & 55X (2 of 2)	22-11-03
GMC 705 Autopilot - Serials w/ Perspective	22-12-01
Pitch Servo - Serials w/ Perspective	22-12-02
Roll Servo - Serials w/ Perspective	22-12-03
Yaw Servo - Serials w/ Perspective	22-12-04
GTA 82 Pitch Trim Adapter - Serials w/ Perspective and w/o FIKI (1 of 2)	22-12-05
GTA 82 Pitch Trim Adapter - Serials w/ Perspective and w/ FIKI (2 of 2)	22-12-05
Take-Off/Go-Around Switch - Serials w/ Perspective	22-20-01

Intentionally Left Blank

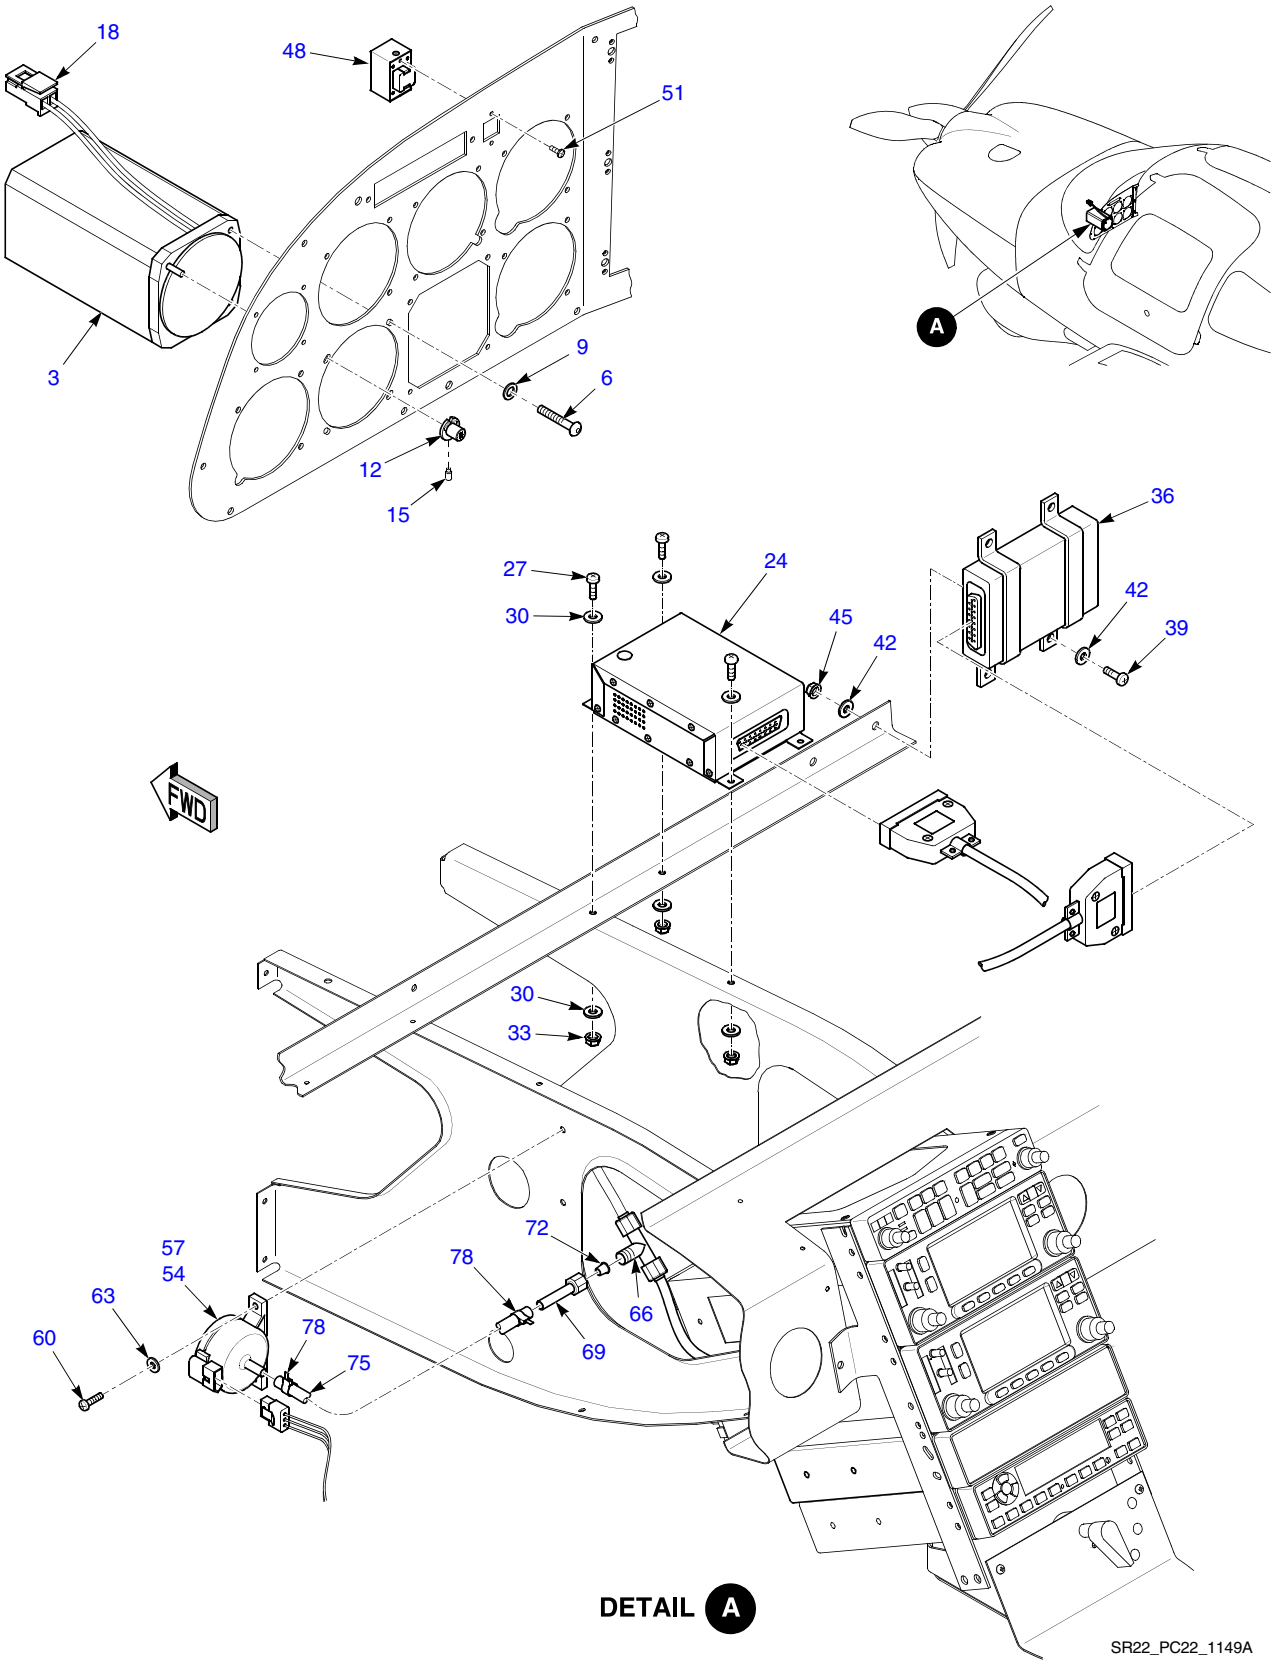

Figure-01
System 30 w/ GPSS

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			SYSTEM 30 W/ GPSS	0118		NP
	3	14688-001			·TURN COORDINATOR/ROLL COMPUTER	0118		1
	6	50834-012		A	·SCREW	0118		3
	9	50813-001		A	·WASHER	0118		3
	12	PRT OF ITM 3			··MULTI-FUNCTION KNOB	0118		1
	15	PRT OF ITM 3			··SET SCREW	0118		1
	18	50158-002			··CONNECTOR	0118		1
-	21	50157-001			··PIN	0118		2
	24	14692-001			·PITCH COMPUTER	0118		1
	27	MS35206-246		A	·SCREW	0118		3
	30	NAS1149FN832P		A	·WASHER	0118		6
	33	MS21044N08		A	·NUT	0118		3
	36	14690-001			·GPSS 429 CONVERTER	0118		1
	39	MS35206-245		A	·SCREW	0118		2
	42	NAS1149FN816P		A	·WASHER	0118		2
	45	MS21044N08		A	·NUT	0118		2
	48	14693-051			·REMOTE GPSS SWITCH	0118		1
	51	50838-006		A	·SCREW	0118		2
	54	12722-001			·ALTITUDE TRANSDUCER	0118	2687	1
					FOR SPARES USE P/N 12722-002			
	57	12722-002			·ALTITUDE TRANSDUCER	2688		1
	60	MS35206-246		A	·SCREW	0118		2
	63	NAS1149FN832P		A	·WASHER	0118		2
	66	50385-001			·UNION TEE	0118		1
	69	13580-101			·STATIC TUBE	0118		1
	72	50928-025			·NYLON INSERT	0118		3
	75	13580-102			·TUBING, 10 IN.	0118		1
	78	50239-010		A	·CABLE TIE	0118		AR

EFFECTIVITY:
All

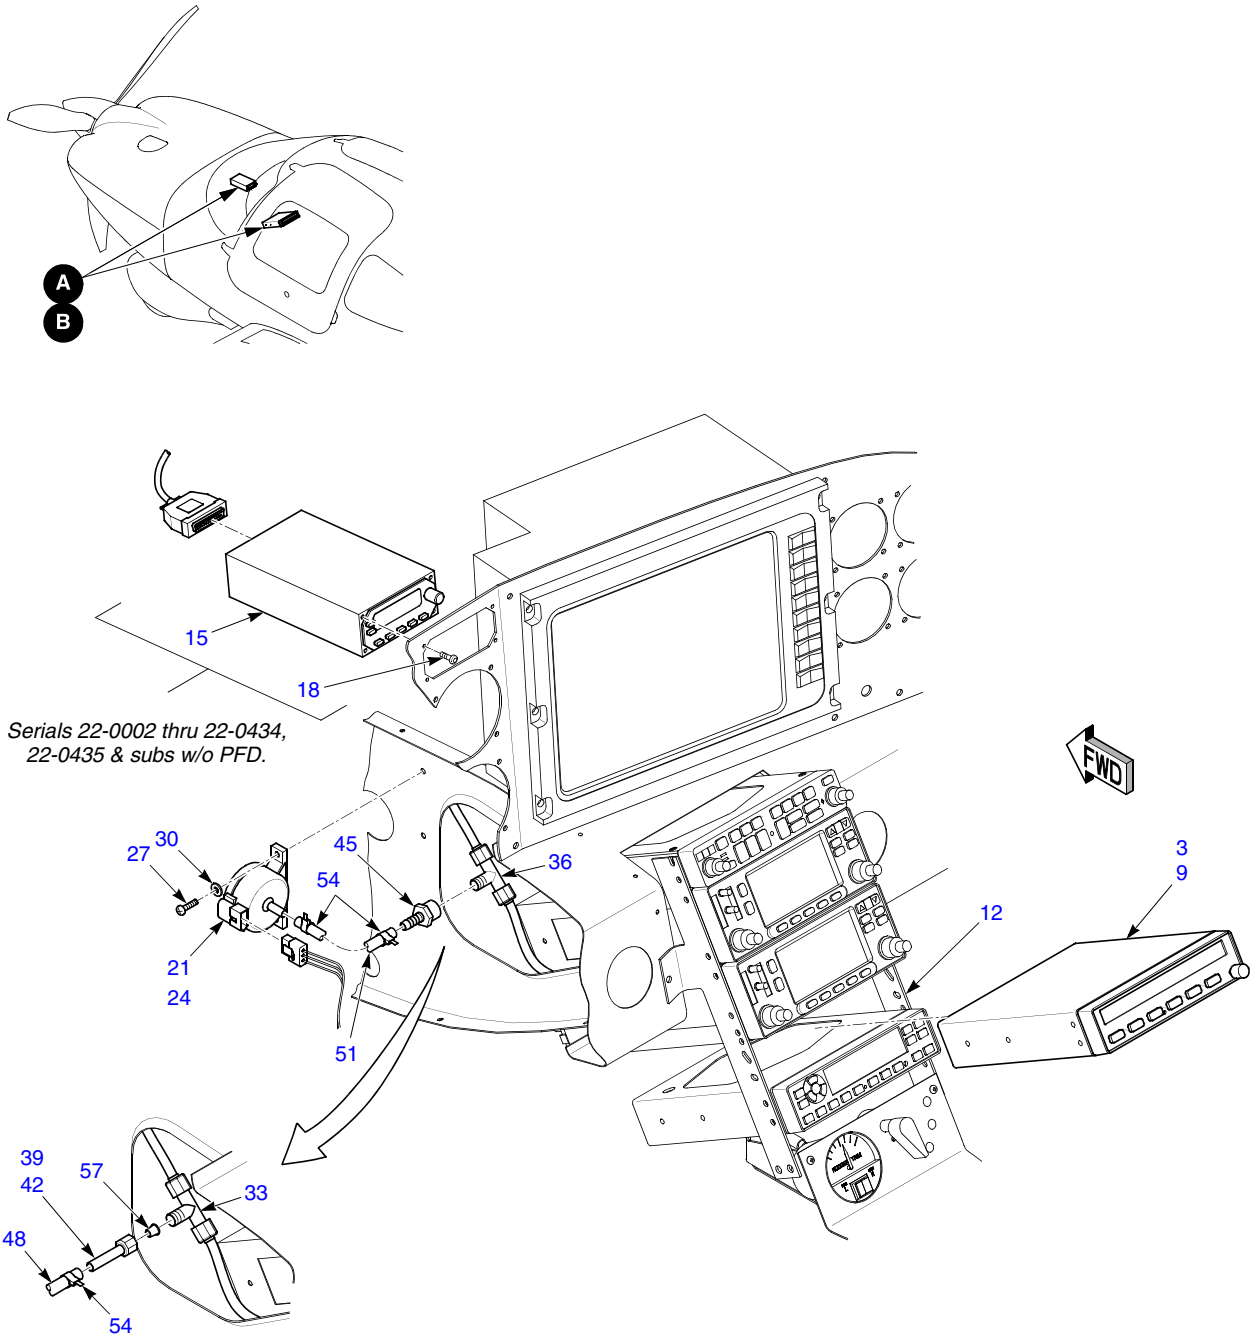

Serials 22-0002 thru 22-2701.

DETAIL A

Serials 22-0002 & subs w/ System 55X and Avidyne Avionics.

SR22_PC22_1150E

Figure-01

System 55X - Serials 22-0002 & subs w/ 55X and w/ Avidyne Avionics (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs w/ 55X and w/ Avidyne Avionics

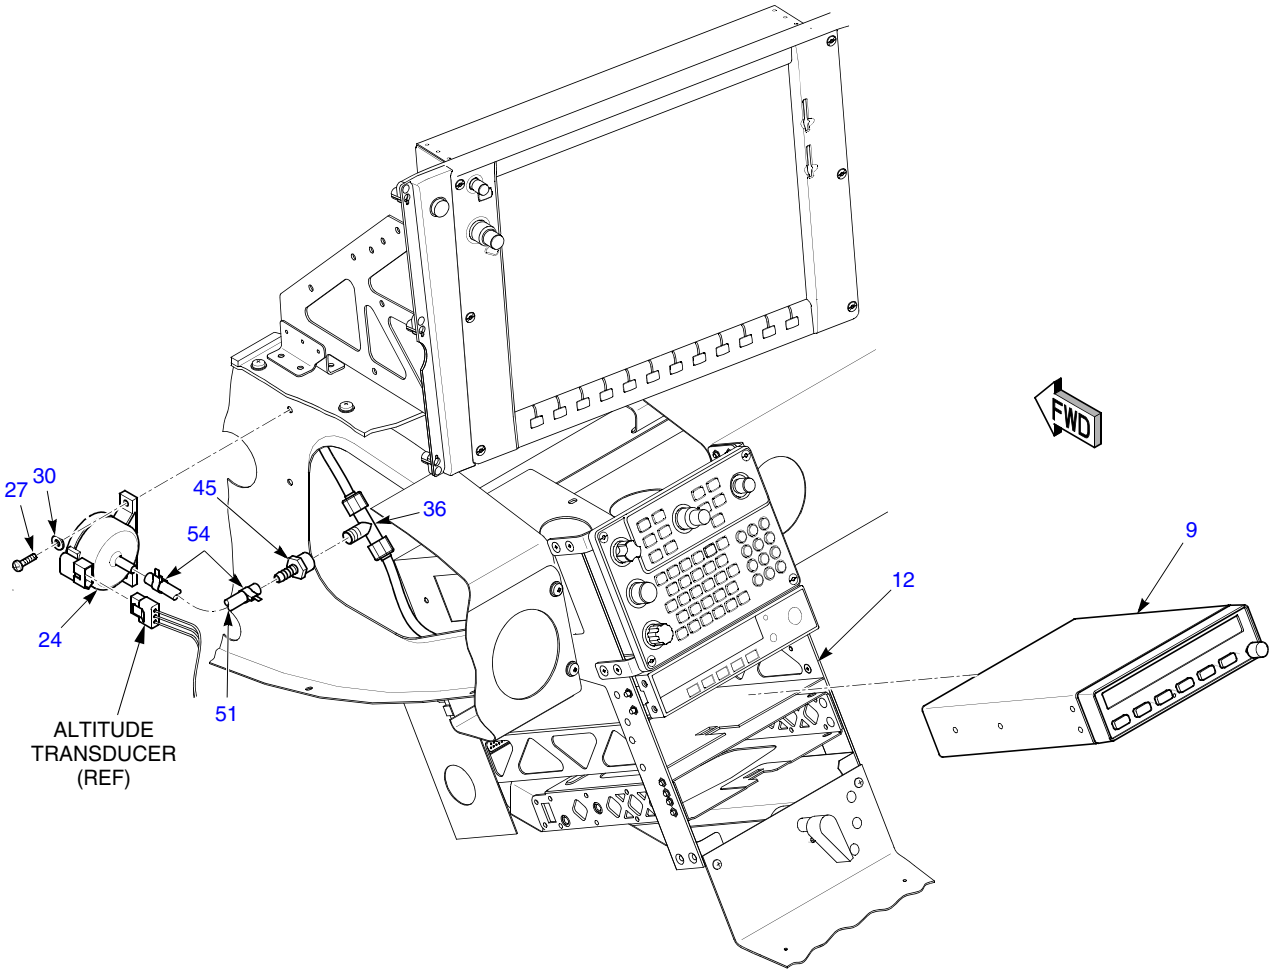

DETAIL B

Serials 22-3446 & subs, 22T-0001 & subs w/ System 55X and Perspective Avionics.

SR22_PC22_1906

Figure-01

System 55X - Serials 22-3446 & subs, 22T-0001 & subs w/ 55X and w/ Perspective (2 of 2)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			SYSTEM 55X	0002 / 0001	/	NP
	3	13560-001			·PROGRAMMER/COMPUTER (SYSTEM 55X)	0002	0434	1
-	6	13560-002			·PROGRAMMER/COMPUTER (SYSTEM 55X)	0435	3445	1
					FOR SPARES USE P/N 13560-004			
	9	13560-004			·PROGRAMMER/COMPUTER (SYSTEM 55X)	3446 / 0001	/	1
	12	12721-101		A	·MOUNTING RACK	0002 / 0001	/	1
	15	14148-001			·ALTITUDE SELECTOR/ALERTER	0002 / 0001	/	1
	18	50838-006		A	·SCREW	0002 / 0001	/	4
	21	12722-001			·ALTITUDE TRANSDUCER	0002 / 0001	/	1
					FOR SPARES USE P/N 12722-002			
	24	12722-002			·ALTITUDE TRANSDUCER	0002 / 0001	/	1
	27	MS35206-246		A	·SCREW	0002 / 0001	/	2
	30	NAS1149FN832P		A	·WASHER	0002 / 0001	/	2
	33	50385-001			·UNION TEE	0002	2701	1
	36	51988-001			·MALE BRANCH TEE	2702 / 0001	/	1
	39	14779-101			·STATIC TUBE	0002	2701	1
					ALTERNATE FOR P/N 13580-101			
	42	13580-101			·STATIC TUBE	0002	2701	1
					ALTERNATE FOR P/N 14779-101			
	45	51989-001			·BARBED FITTING	2702 / 0001	/	1
	48	14779-102			·TUBING, 20 IN.	0002 / 0001	/	1
					ALTERNATE FOR P/N 13580-102			
	51	13580-102			·TUBING, 20 IN.	0002 / 0001	/	1
					ALTERNATE FOR P/N 14779-102			
	54	50239-010		A	·CABLE TIE	0002 / 0001	/	AR
	57	50928-025			·NYLON INSERT	0002	2701	3
						2702 / 0001	/	2

Intentionally Left Blank

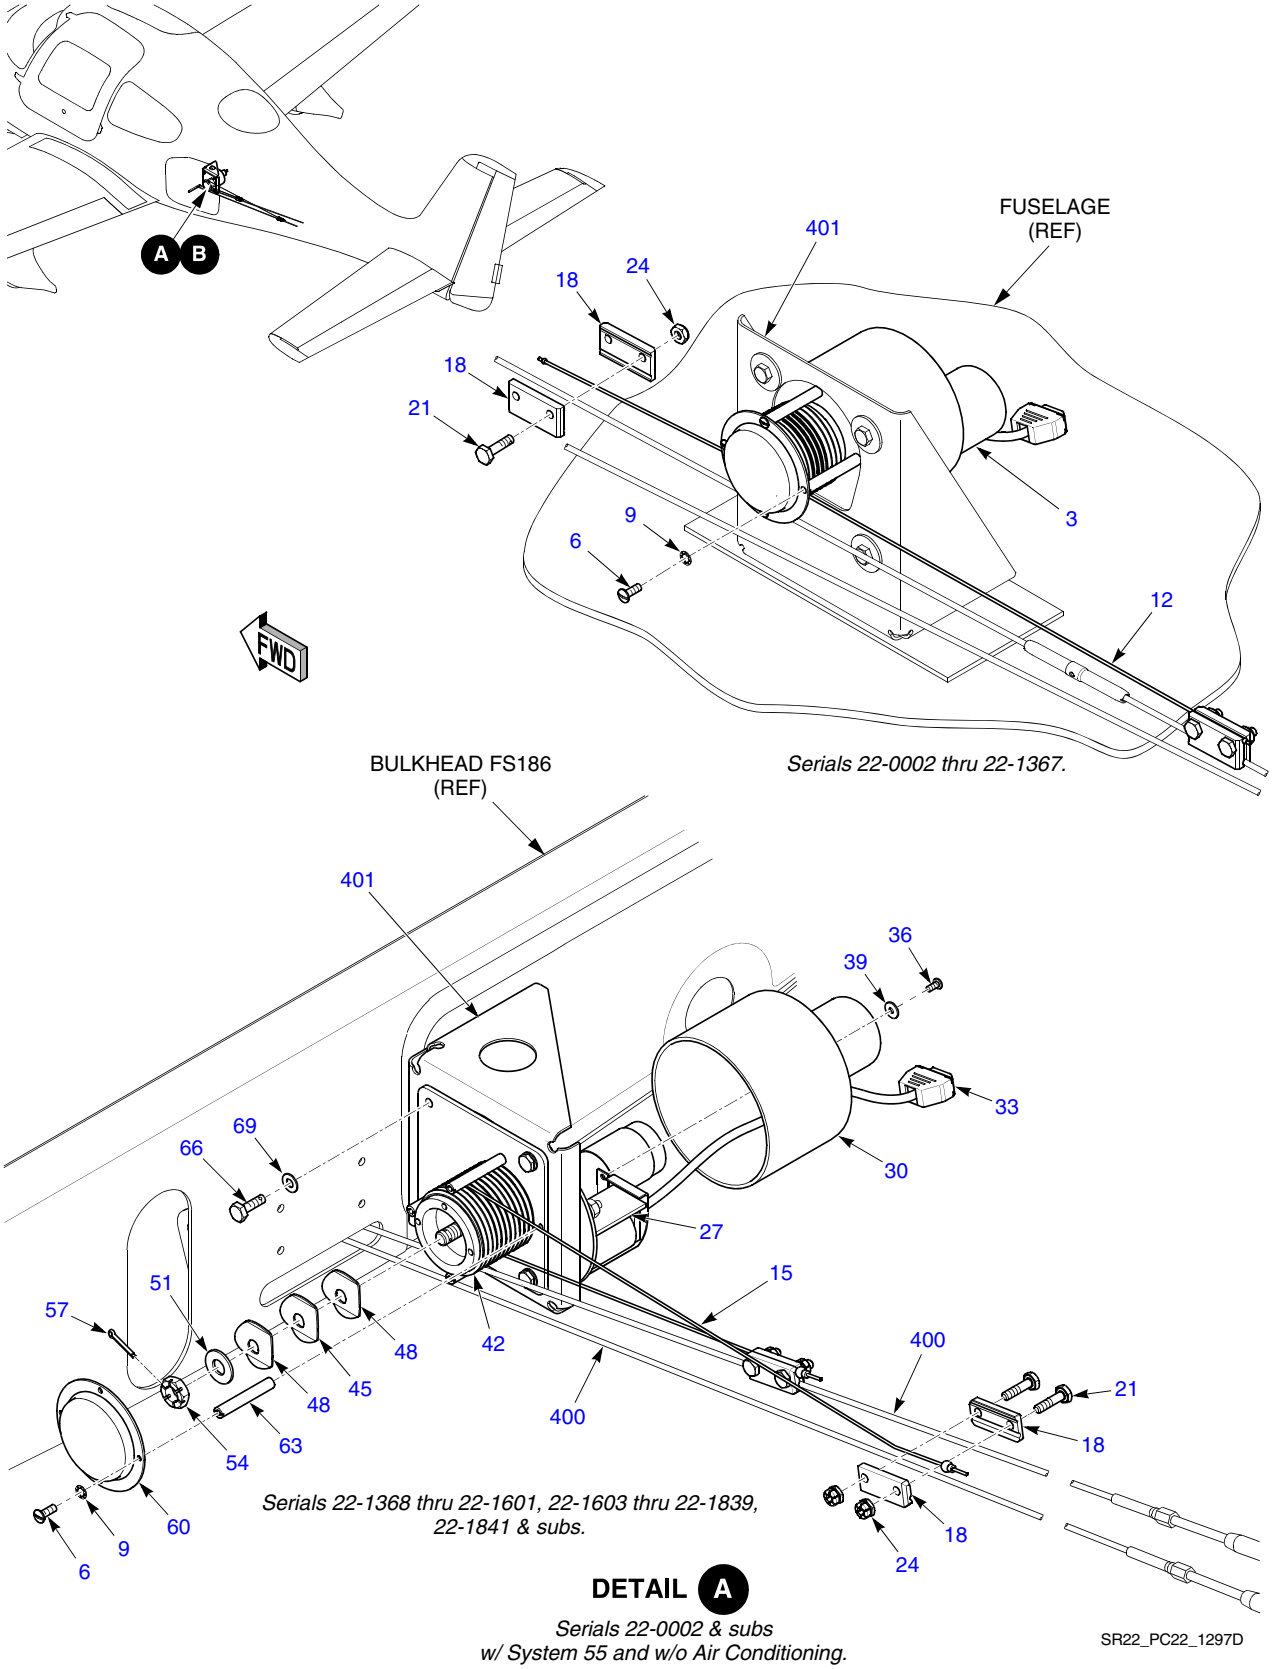

Figure-02

Pitch Servo - Serials 22-0002 & subs w/ System 55 and w/o Air Conditioning (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs w/ System 55 and w/o Air Conditioning

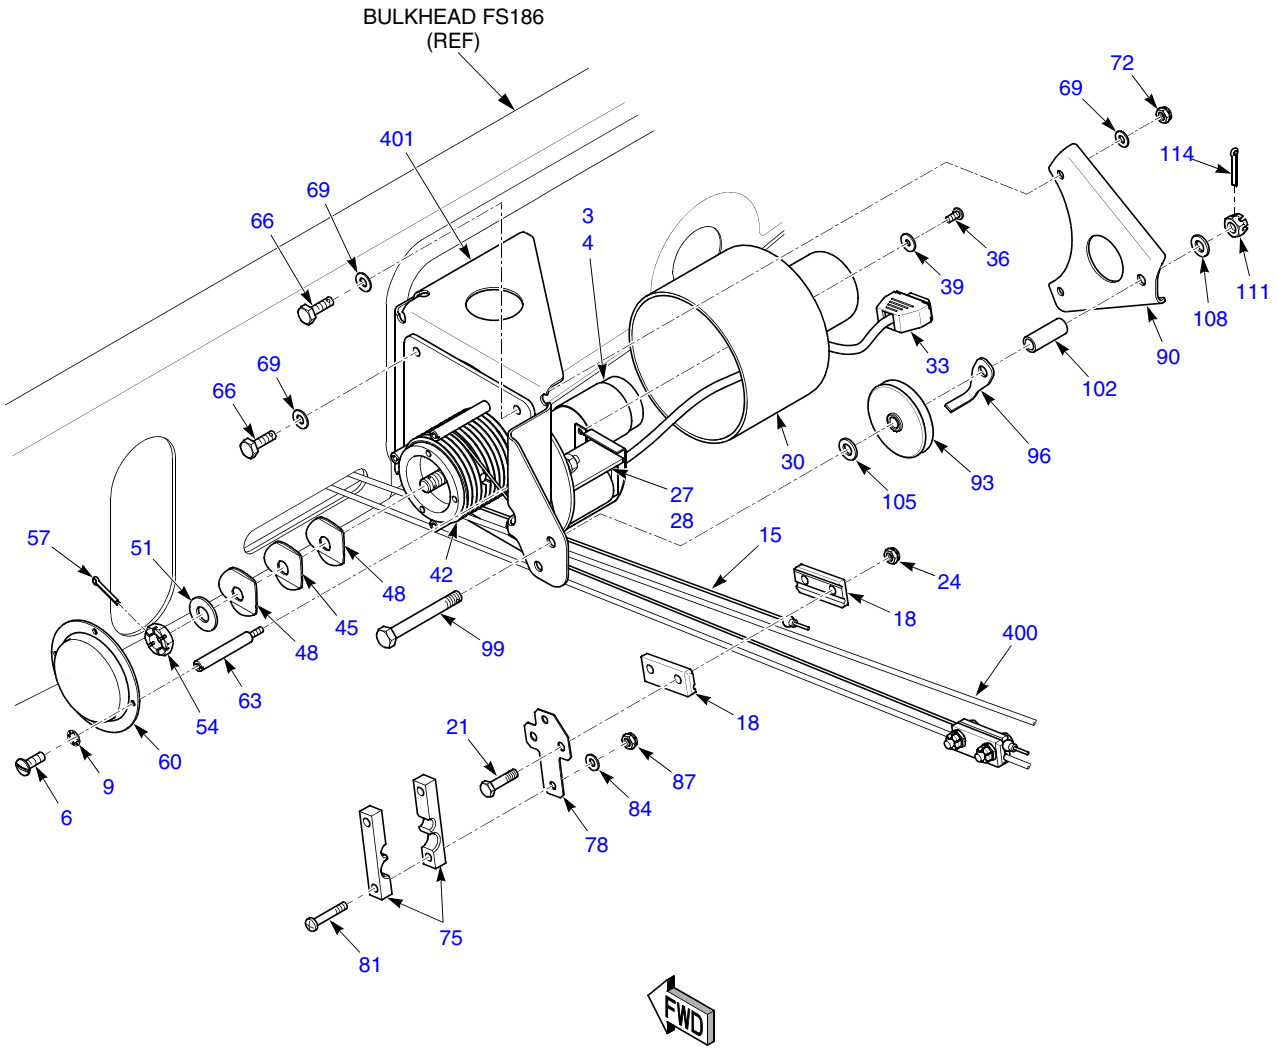

DETAIL B

Serials 22-1602, 22-1840, 22-1863 & subs w/ GFC 700 and w/ Air Conditioning.

SR22_PC22_1556A

Figure-02

Pitch Servo - Serials 22-1863 & subs w/ GFC 700 and w/ Air Conditioning (2 of 2)

EFFECTIVITY:
Serials 22-1863 & subs w/ GFC 700 and w/ Air Conditioning

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		PITCH TRIM SERVO W/O PERSPECTIVE	0002		NP
	3	14149-101			·AUTOPILOT PITCH SERVO	0002	2434	1
					FOR SPARES USE P/N 14149-105			
	4	14149-105			·AUTOPILOT PITCH SERVO	2435		1
	6	1101C440-4		A	·SCREW	0002		4
	9	1202C4-015A		A	·WASHER	0002		4
	12	14149-102			··BRIDLE CABLE	0002	1367	1
	15	14149-104			··BRIDLE CABLE	1368		1
	18	14149-103		A	··CABLE CLAMP	0002		2
	21	AN3-6A		A	·BOLT	0002		4
	24	MS21044C3		A	·NUT	0002		4
	27	PRT OF ITM 3			·FLAPPER	0002	2434	1
	28	PRT OF ITM 4			·FLAPPER	2435		1
	30	5510			·COVER	0002		1
	33	3908			·PLUG	0002		1
	36	1101C632-6		A	·SCREW	0002		1
	39	AN960-6		A	·WASHER	0002		1
	42	6202-1			·CAPSTAN	0002		1
	45	1253-1		A	·TENSION WASHERS	0002		1
	48	1253		A	·TENSION WASHERS	0002		2
	51	12146		A	·WASHER	0002		1
	54	AN320-5		A	·NUT	0002		1
	57	1505-12		A	·COTTER PIN	0002		1
	60	5511			·CAPSTAN COVER	0002		1
	63	4410-1		A	·STANDOFF	0002		4
	66	AN3-5A		A	·BOLT	0002		4
	69	NAS1149B0332J		A	·WASHER	0002		4
	72	MS21044N3		A	·NUT	1863		2
	75	17031-001			·FAIRLEAD	1863		2
	78	17032-001			·BRACKET	1863		1
	81	MS35206-249		A	·SCREW	1863		2
	84	NAS1149DN832J		A	·WASHER	1863		2
	87	MS21044N08		A	·NUT	1863		2
	90	16982-001			·PLATE	1863		1
	93	MS20219-2			·PULLEY	1863		1
	96	17055-001			·CABLE KEEPER	1863		1
	99	AN4-21		A	·BOLT	1863		1
	102	17054-001		A	·SPACER	1863		1
	105	NAS1149D0463J		A	·WASHER	1863		1
	108	NAS1149D0432J		A	·WASHER	1863		1
	111	MS17825-4		A	·NUT	1863		1
	114	MS24665-132		A	·COTTER PIN	1863		1
					REFERENCED ITEMS NOT PRT OF ASSY/ INSTL			
	400	RF 27-30-01 DET			ELEVATOR SYSTEM CABLES			
	401	RF 53-40-08 DET			PITCH SERVO BRACKET			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBERS 1602 AND 1840, REFER TO 22-1863 FOR PRT IDENTIFICATION.			

Intentionally Left Blank

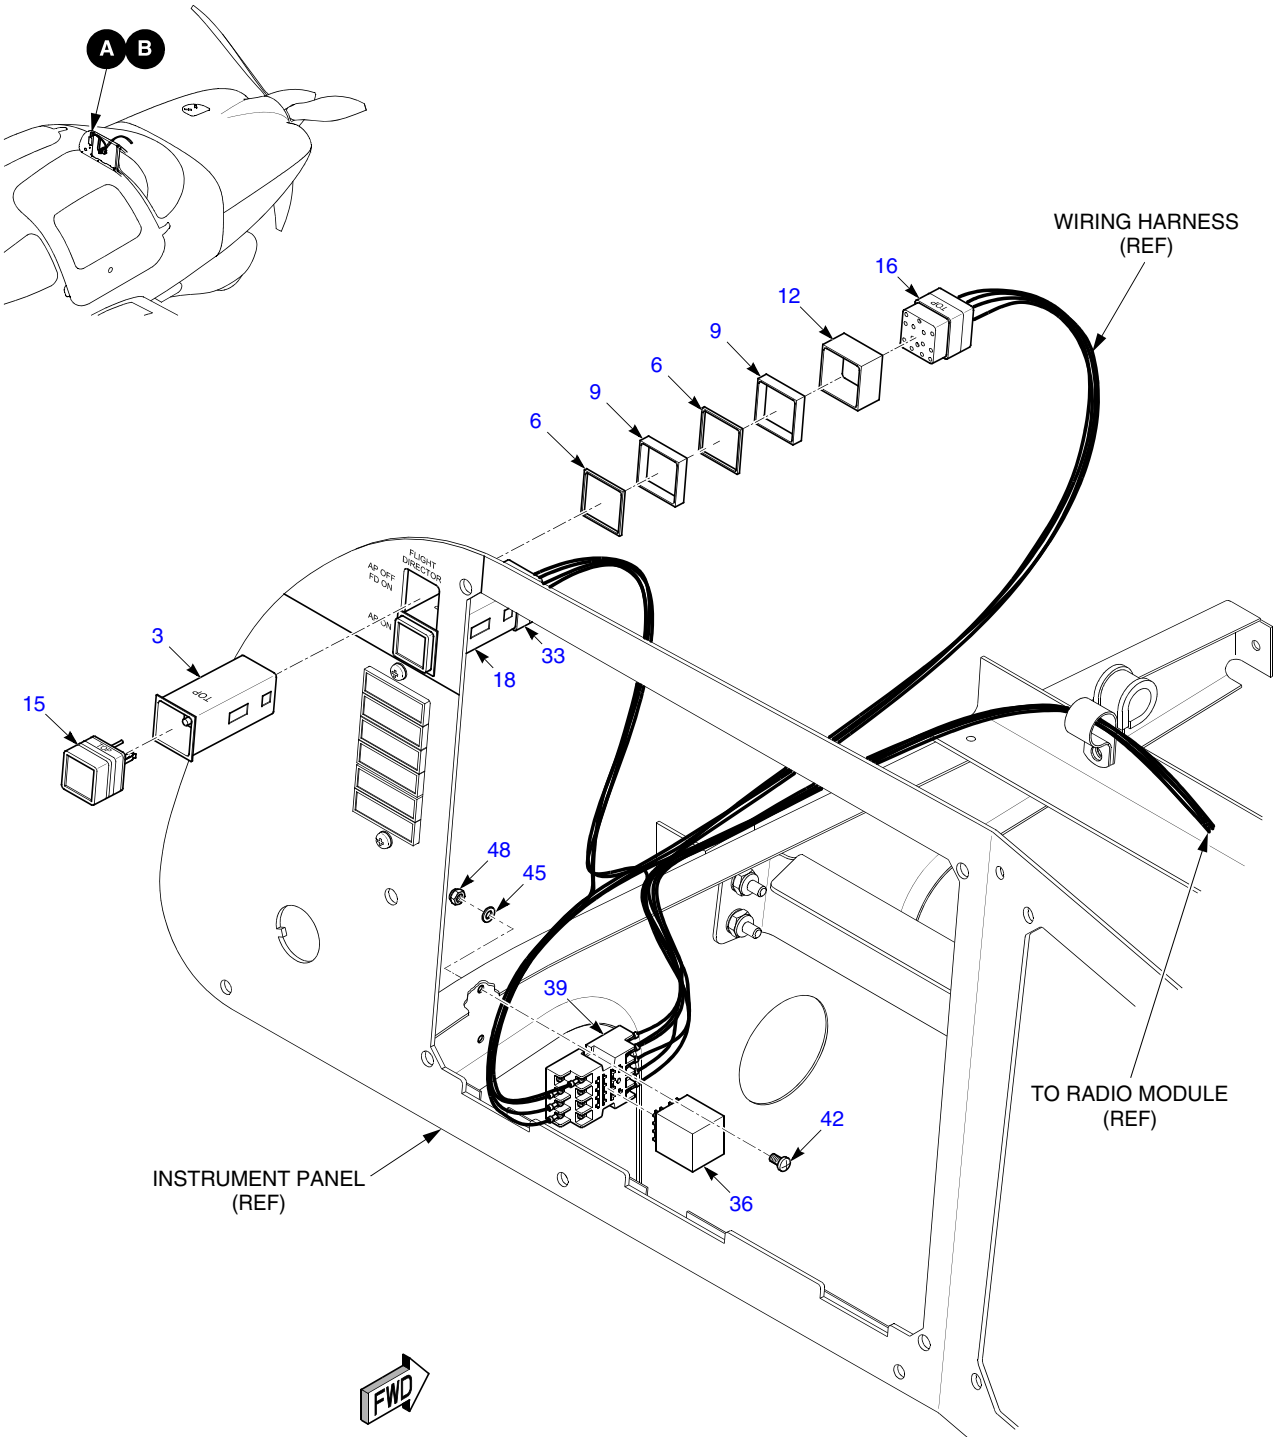

DETAIL A

Serials 22-0435 thru 22-1306 after SB 2X-22-03,
Serials 22-1307 & subs w/o Perspective Avionics.

SR22_PC22_1460A

Figure-03

Flight Director - Serials 22-1307 & subs w/o Perspective (1 of 2)

EFFECTIVITY:
Serials 22-1307 & subs w/o Perspective

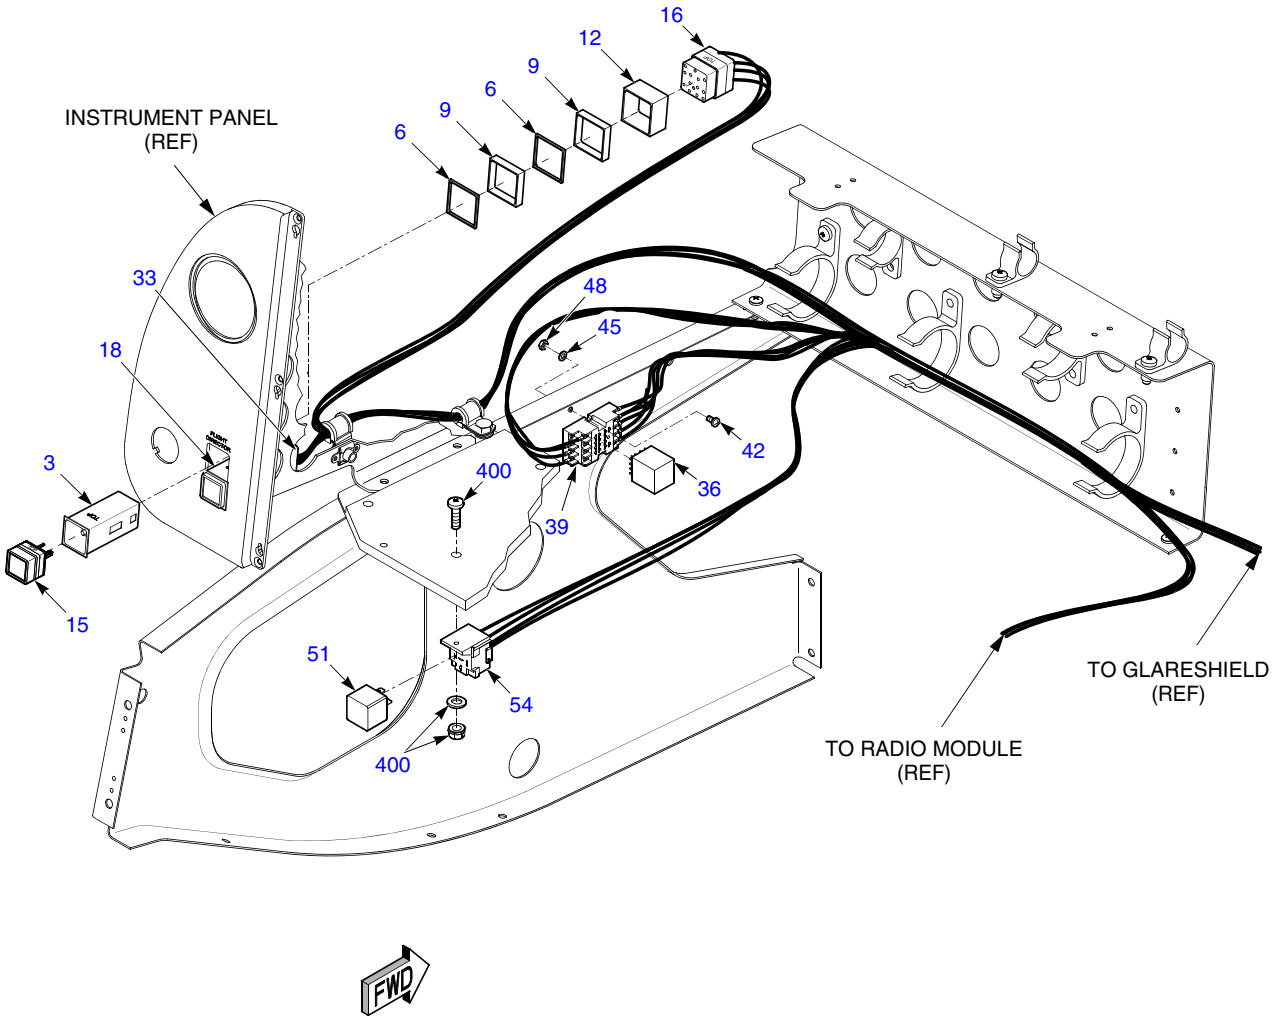

DETAIL B

Serials 22-3446 & subs, 22T-0001 & subs w/ Perspective Avionics and System 55X Autopilot.

SR22_PC22_1905A

Figure-03

Flight Director - Serials 22-3446 & subs, 22T-0001 & subs w/ Perspective & 55X (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			FLIGHT DIRECTOR	1307 / 0001	/	NP
					AFTER SB2X-22-03	0435 / 0001	/	
	3	16284-001			·SWITCH ASSEMBLY (AP OFF/FD ON, AMBER)	1307 / 0001	/	1
	6	PRT OF ITM 3	@	A	·SEAL	1307 / 0001	/	2
	9	PRT OF ITM 3	@	A	·SPACER	1307 / 0001	/	2
	12	PRT OF ITM 3		A	·MOUNTING SLEEVE	1307 / 0001	/	1
	15	PRT OF ITM 3			·PUSHBUTTON	1307 / 0001	/	1
	16	16284-101			·SOCKET	1307 / 0001	/	1
	18	16284-002			·SWITCH ASSEMBLY (AP ON, GREEN)	1307 / 0001	/	1
-	21	PRT OF ITM 18	@	A	·SEAL	1307 / 0001	/	2
-	24	PRT OF ITM 18	@	A	·SPACER	1307 / 0001	/	2
-	27	PRT OF ITM 18		A	·MOUNTING SLEEVE	1307 / 0001	/	1
-	30	PRT OF ITM 18			·PUSHBUTTON	1307 / 0001	/	1
	33	16284-101			·SOCKET	1307 / 0001	/	1
	36	51265-001			·RELAY	1307 / 0001	/	1
	39	51265-002			·RELAY SOCKET	1307 / 0001	/	1
	42	MS35206-231		A	·SCREW	1307 / 0001	/	2
	45	NAS1149FN616P		A	·WASHER	1307 / 0001	/	2
	48	MS21044N06		A	·NUT	1307 / 0001	/	2
	51	50288-001	#		·RELAY	3446 / 0001	/	1
	54	50289-001	#		·RELAY SOCKET	3446 / 0001	/	1
					REFERENCED ITEMS NOT PRT OF ASSY/ INSTL			
	400	RF 34-20-05 DET			AHRS			
					SYMBOL NOTES:			
			@		ONE SEAL AND SPACER MAY BE DISCARDED TO FACILI-TATE SWITCH.			
			#		S-TEC AUTOPILOT FLIGHT DIRECTOR W/ GARMIN AVION-ICS			

Intentionally Left Blank

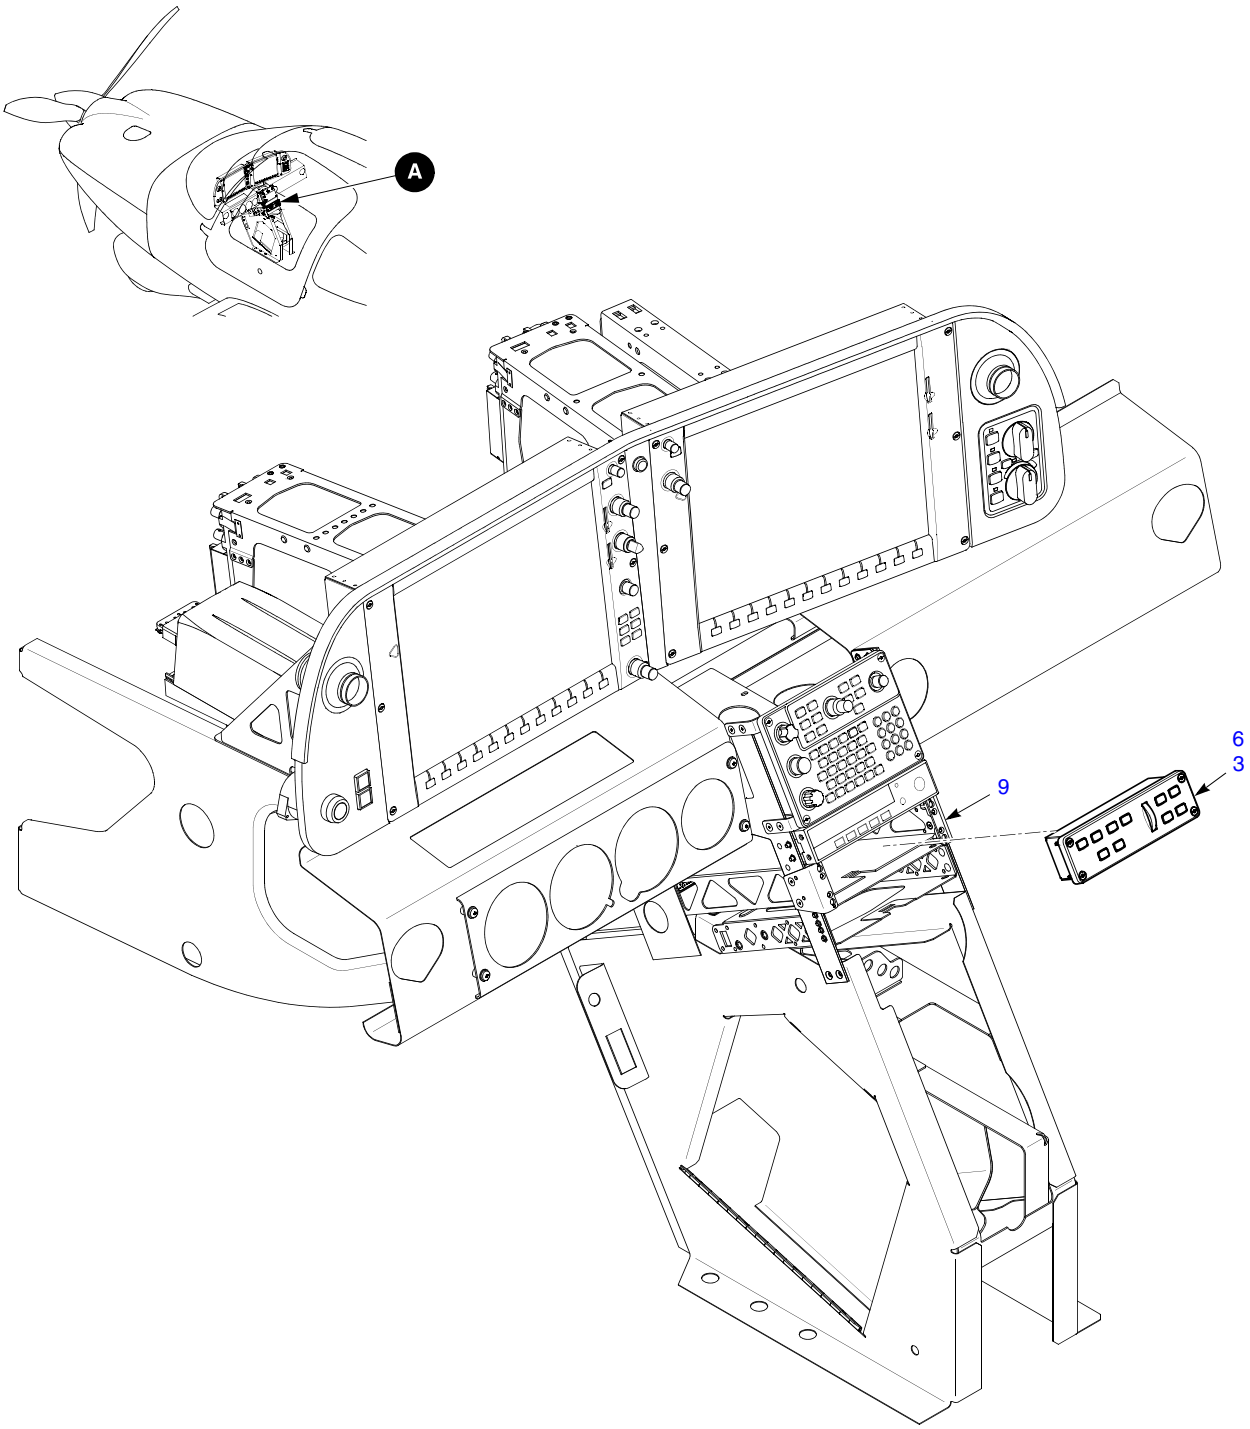

Figure-01
GMC 705 Autopilot - Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		GMC 705 A/P INSTALL W/ PERSPECTIVE	3026 / 0001	/	NP
	3	24645-001			·AUTOPILOT CONTROLLER, GMC705	3026 / 0001	/	1
	6	24645-002			·AUTOPILOT CONTROLLER, GMC705 (W/ YD)	3026 / 0001	/	1
	9	19289-001		A	·MOUNTING BRACKET	3026 / 0001	/	2
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

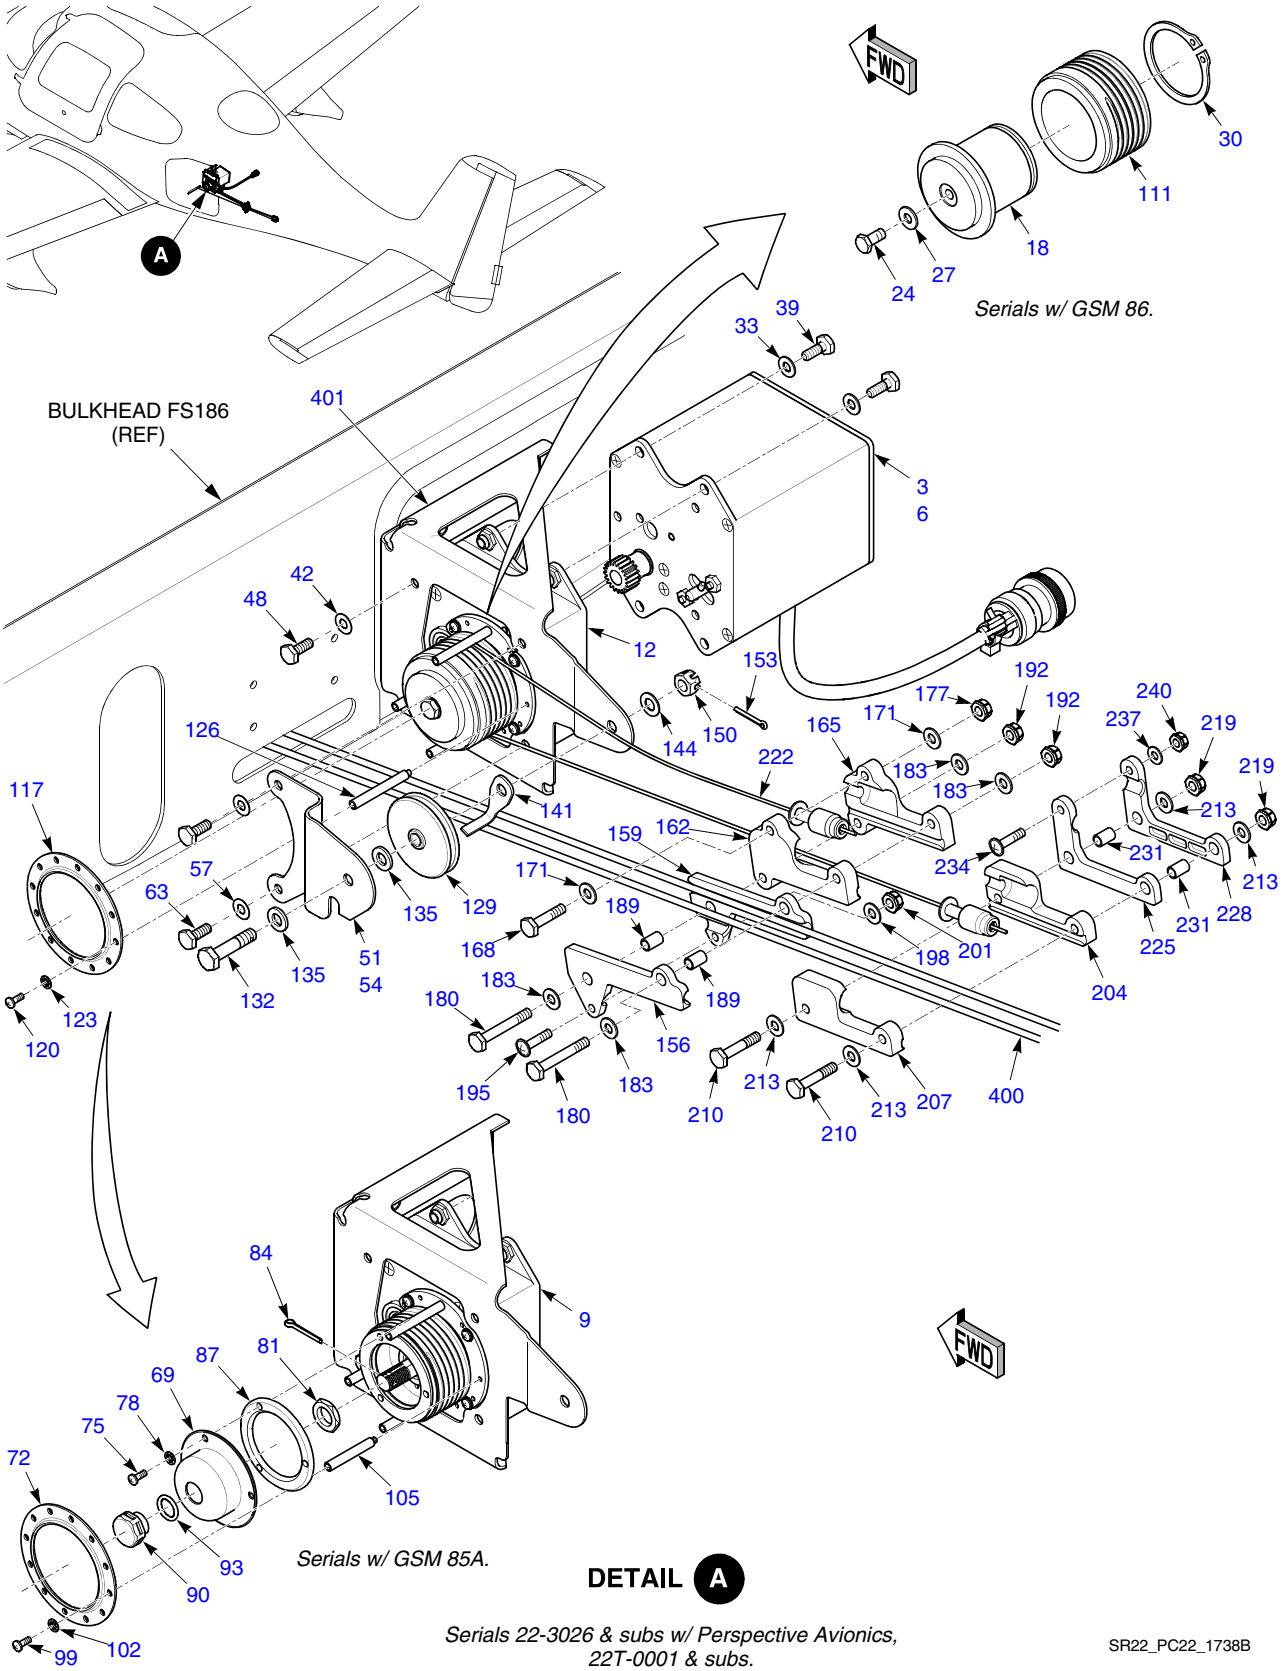

Figure-02

Pitch Servo - Serials w/ Perspective

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		PITCH SERVO INSTALL W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	3	24644-002			·AUTOPILOT SERVO ACTUATOR	3026	3585	1
	6	24644-004			·AUTOPILOT SERVO ACTUATOR	3586 / 0001		1
	9	24644-011			·SERVO GEARBOX	3026	3585	1
	12	24644-013			·SERVO GEARBOX	3586 / 0001		1
-	15	24644-239			·CLUTCH CARTRIDGE KIT	3586 / 0001		1
	18	24644-339			··CLUTCH CARTRIDGE, 39 IN-LBS	3586 / 0001		1
-	21	24644-303			··MOUNTING KIT	3586 / 0001		1
	24	AN3-4A			···BOLT	3586 / 0001		1
	27	AN960-10			···WASHER	3586 / 0001		1
	30	24644-307			···RETAINING RING	3586 / 0001		1
	33	NAS1149F0332P		A	·WASHER	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0332J			
-	36	NAS1149D0332J		A	·WASHER	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0332P			
	39	AN3-4A		A	·BOLT	3026 / 0001	/	4
	42	NAS1149F0363P		A	·WASHER	3026 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0363K			
-	45	NAS1149D0363K		A	·WASHER	3026 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0363P			
	48	AN3-4A		A	·BOLT	3026 / 0001	/	2
	51	19309-001			·PLATE	3026	3393	1
					WHEN EXHTD USE P/N 19637-001			
	54	19637-001			·PLATE	3394 / 0001	/	1
	57	NAS1149F0316P		A	·WASHER	3026 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0316J			
-	60	NAS1149D0316J		A	·WASHER	3026 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0316P			
	63	AN3-4A		A	·BOLT	3026 / 0001	/	2
-	66	24644-212			·CAPSTAN COVER KIT	3026	3585	1
	69	53040-001			··COVER	3026	3585	1
	72	53039-001			··STIFFENER RING	3026	3585	1
	75	53043-001		A	··SCREW	3026	3585	3
	78	53042-001		A	··STAR WASHER	3026	3585	3
	81	PRT OF ITM 9		A	··NUT	3026	3585	1
	84	53037-001		A	··COTTER PIN	3026	3585	1
	87	53036-001		A	··GASKET	3026	3585	1
	90	PRT OF ITM 66			··PLUG	3026	3585	1
	93	PRT OF ITM 66			··O-RING	3026	3585	1
-	96	24644-211			·STAND OFF KIT	3026	3585	1
	99	53043-001		A	··SCREW	3026	3585	4
	102	53042-001		A	··STAR WASHER	3026	3585	4
	105	53041-001			··CABLE GUARD	3026	3585	4
-	108	24644-213			·CAPSTAN ASSEMBLY KIT	3586 / 0001	/	1
	111	24644-301			··CAPSTAN	3586 / 0001	/	1
-	114	24644-301			··STAND OFF KIT	3586 / 0001	/	1
	117	24644-304			···STIFFENER RING	3586 / 0001	/	1
	120	24644-306		A	···SCREW	3586 / 0001	/	4
	123	53042-001		A	···STAR WASHER	3586 / 0001	/	4
	126	24644-305			···CABLE GUARD	3586 / 0001	/	4
	129	MS20219-2			·PULLEY	3026 / 0001	/	1
	132	AN4-12		A	·BOLT	3026 / 0001	/	1
	135	NAS1149F0463P		A	·WASHER	3026 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0463J			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	138	NAS1149D0463J		A	·WASHER	3026 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0463P			
	141	17055-001		A	·CABLE KEEPER	3026 / 0001	/	1
	144	NAS1149F0432P		A	·WASHER	3026 / 0001	/	1
					ALTERNATE FOR P/N NAS1149D0432J			
-	147	NAS1149D0432J		A	·WASHER	3026 / 0001	/	1
					ALTERNATE FOR P/N NAS1149F0432P			
	150	MS17825-4		A	·NUT	3026 / 0001	/	1
	153	MS24665-132		A	··COTTER PIN	3026 / 0001	/	1
	156	18993-001			·CABLE CLAMP	3026 / 0001	/	1
	159	18993-002			·CABLE CLAMP	3026 / 0001	/	1
	162	22032-001			·CABLE CLAMP	3026 / 0001	/	1
	165	22032-002			·CABLE CLAMP	3026 / 0001	/	1
	168	AN3-10A		A	·BOLT	3026 / 0001	/	1
	171	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0332J			
-	174	NAS1149D0332J		A	·WASHER	3026 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0332P			
	177	MS21083N3		A	·NUT	3026 / 0001	/	1
	180	AN3-13A		A	·BOLT	3026 / 0001	/	2
	183	NAS1149F0332P		A	·WASHER	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0332J			
-	186	NAS1149D0332J		A	·WASHER	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0332P			
	189	NAS42DD6A-24FC			·SPACER	3026 / 0001	/	2
	192	MS21083N3		A	·NUT	3026 / 0001	/	2
	195	AN525-832R12		A	·SCREW	3026 / 0001	/	1
	198	NAS1149FN832P		A	·WASHER	3026 / 0001	/	1
	201	MS21044N08		A	·NUT	3026 / 0001	/	1
	204	19049-001			·CABLE CLAMP RH	3026 / 0001	/	1
	207	19049-002			·CABLE CLAMP LH	3026 / 0001	/	1
	210	AN3-13A		A	·BOLT	3026 / 0001	/	2
	213	NAS1149F0332P		A	·WASHER	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0332J			
-	216	NAS1149D0332J		A	·WASHER	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0332P			
	219	MS21083N3		A	·NUT	3026 / 0001	/	2
	222	19331-003			·CABLE, BRIDLE PITCH	3026 / 0001	/	1
	225	19535-001			·CABLE CLAMP RH	3026 / 0001	/	1
	228	19535-002			·CABLE CLAMP LH	3026 / 0001	/	1
	231	NAS42DD6A-24FC			·SPACER	3026 / 0001	/	2
	234	AN525-832R12		A	·SCREW	3026 / 0001	/	1
	237	NAS1149FN832P		A	·WASHER	3026 / 0001	/	1
	240	MS21044N08		A	·NUT	3026 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/ INSTL			
	400	RF 27-30-01 DET			ELEVATOR SYSTEM CABLES			
	401	RF 53-40-08 DET			PITCH SERVO BRACKET			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
				12345678				
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			

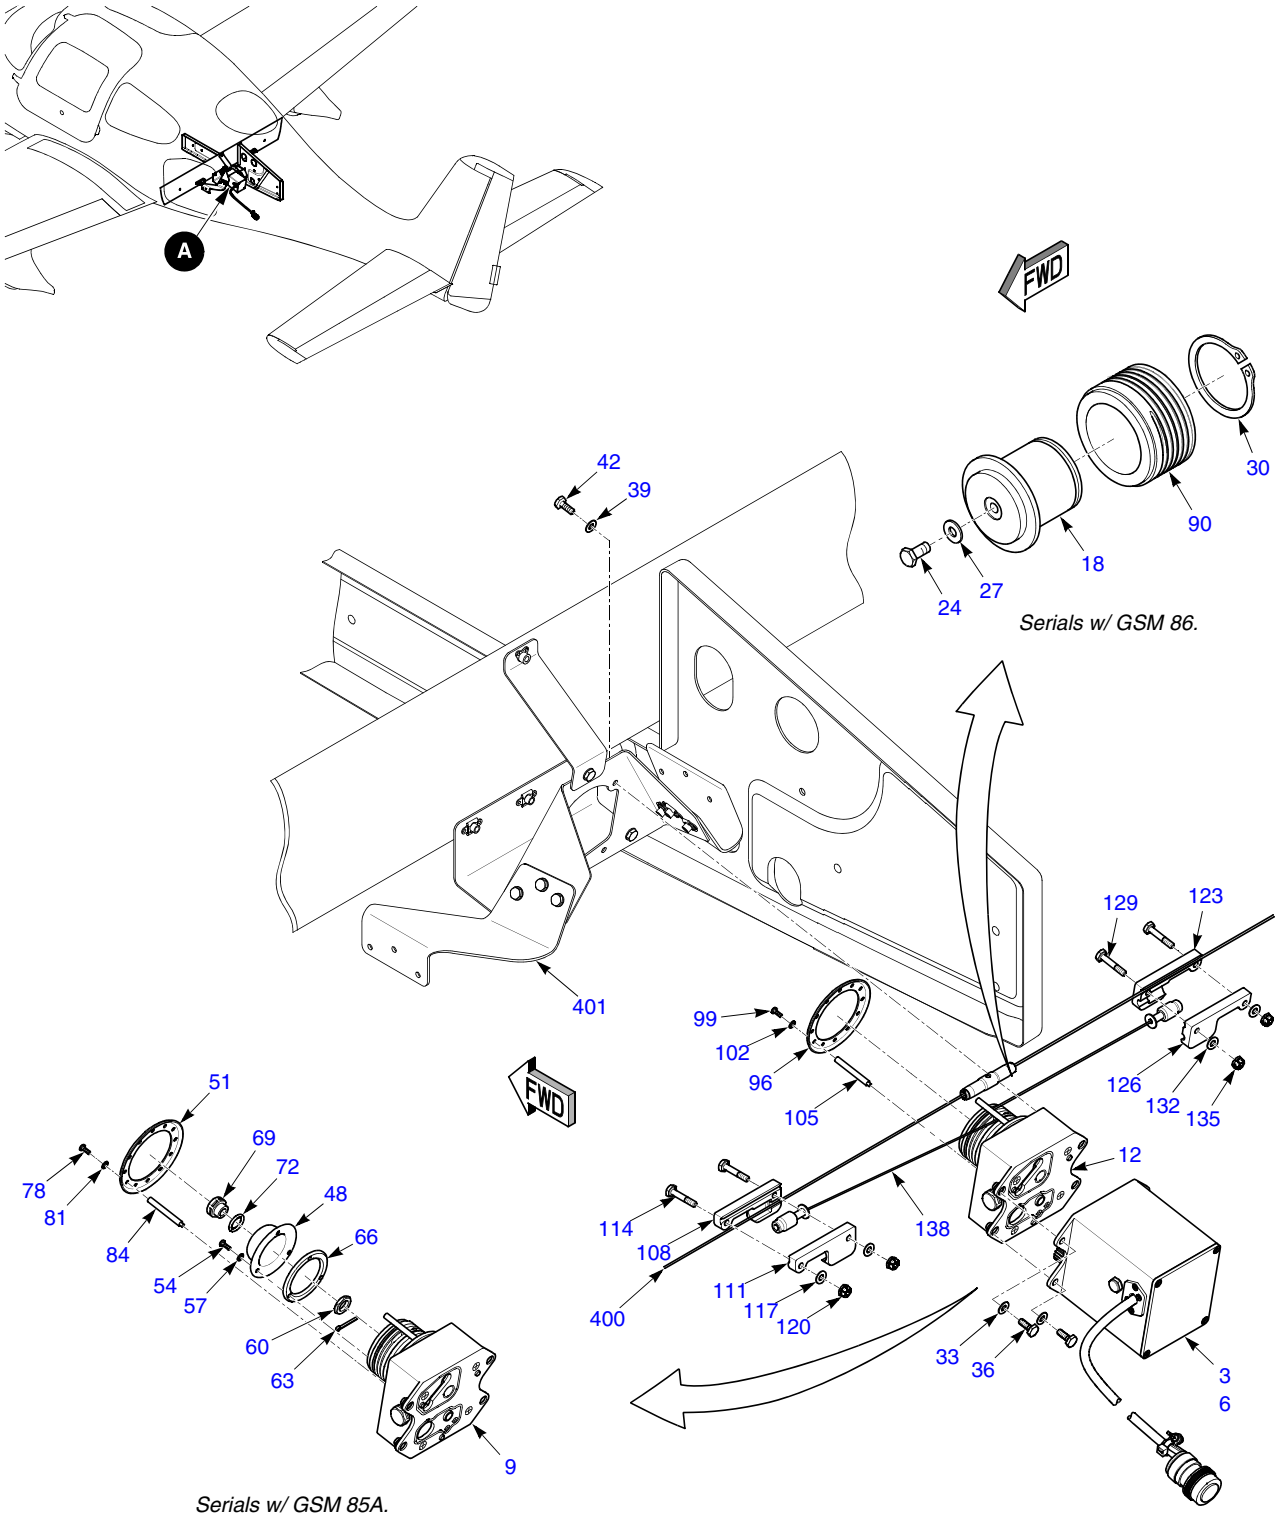

DETAIL A

Serials 22-3026 & subs w/ Perspective Avionics, 22T-0001 & subs.

SR22_PC22_1739A

Figure-03
Roll Servo - Serials w/ Perspective

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		ROLL SERVO INSTALL W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	3	24644-002			·AUTOPILOT SERVO ACTUATOR	3026	3585	1
	6	24644-004			·AUTOPILOT SERVO ACTUATOR	3586 / 0001		1
	9	24644-012			·SERVO GEARBOX	3026	3585	1
	12	24644-013			·SERVO GEARBOX	3586 / 0001		1
-	15	24644-220			·CLUTCH CARTRIDGE KIT	3586 / 0001		1
	18	24644-320			··CLUTCH CARTRIDGE, 20 IN-LBS	3586 / 0001		1
-	21	24644-303			··MOUNTING KIT	3586 / 0001		1
	24	AN3-4A			···BOLT	3586 / 0001		1
	27	AN960-10			···WASHER	3586 / 0001		1
	30	24644-307			···RETAINING RING	3586 / 0001		1
	33	NAS1149F0332P		A	·WASHER	3026 / 0001	/	4
	36	AN3-4A		A	·BOLT	3026 / 0001	/	4
	39	NAS1149F0332P		A	·WASHER	3026 / 0001	/	4
	42	AN3-4A		A	·BOLT	3026 / 0001	/	4
-	45	24644-212			·CAPSTAN COVER KIT	3026	3585	1
	48	53040-001			··COVER	3026	3585	1
	51	53039-001			··STIFFENER RING	3026	3585	1
	54	53043-001		A	··SCREW	3026	3585	3
	57	53042-001		A	··STAR WASHER	3026	3585	3
	60	PRT OF ITM 9		A	··NUT	3026	3585	1
	63	53037-001		A	··COTTER PIN	3026	3585	1
	66	53036-001		A	··GASKET	3026	3585	1
	69	PRT OF ITM 45			··PLUG	3026	3585	1
	72	PRT OF ITM 45			··O-RING	3026	3585	1
-	75	24644-211			·STAND OFF KIT	3026	3585	1
	78	53043-001		A	··SCREW	3026	3585	4
	81	53042-001		A	··STAR WASHER	3026	3585	4
	84	53041-001			··CABLE GUARD	3026	3585	4
-	87	24644-213			·CAPSTAN ASSEMBLY KIT	3586 / 0001	/	1
	90	24644-301			··CAPSTAN	3586 / 0001	/	1
-	93	24644-301			··STAND OFF KIT	3586 / 0001	/	1
	96	24644-304			···STIFFENER RING	3586 / 0001	/	1
	99	24644-306		A	···SCREW	3586 / 0001	/	4
	102	53042-001		A	···STAR WASHER	3586 / 0001	/	4
	105	24644-305			···CABLE GUARD	3586 / 0001	/	4
	108	19049-001			·CABLE CLAMP RH	3026 / 0001	/	1
	111	19049-002			·CABLE CLAMP LH	3026 / 0001	/	1
	114	AN3-10A		A	·BOLT	3026 / 0001	/	2
	117	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	120	MS21083N3		A	·NUT	3026 / 0001	/	2
	123	19049-002			·CABLE CLAMP LH	3026 / 0001	/	1
	126	19049-001			·CABLE CLAMP RH	3026 / 0001	/	1
	129	AN3-10A		A	·BOLT	3026 / 0001	/	2
	132	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	135	MS21083N3		A	·NUT	3026 / 0001	/	2
	138	19331-004			·CABLE, BRIDLE	3026 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/ INSTL			
	400	RF 27-30-01 DET			AILERON SYSTEM CABLES			
	401	RF 53-40-09 DET			ROLL SERVO BRACKET			
					SYMBOL NOTES:			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			

Intentionally Left Blank

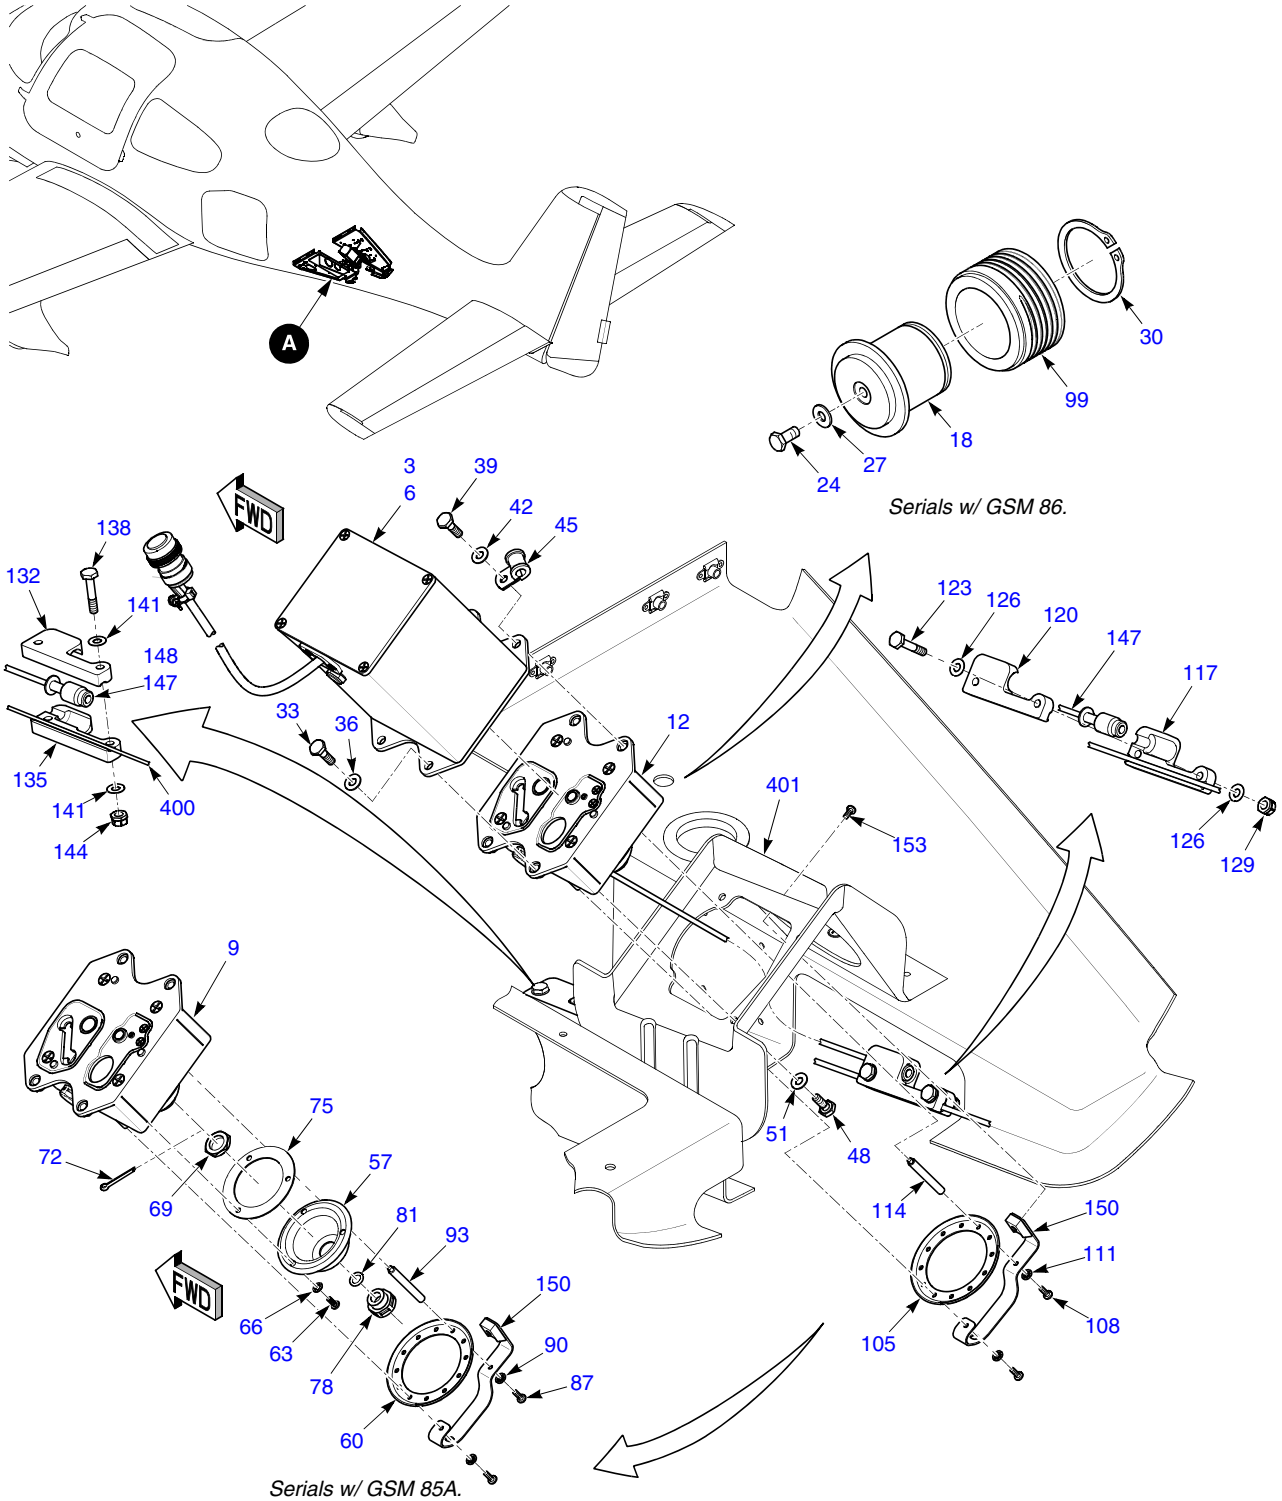

DETAIL A

Serials 22-3026 & subs w/ Perspective Avionics, 22T-0001 & subs.

SR22_PC22_1740A

Figure-04
Yaw Servo - Serials w/ Perspective

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04	**		YAW SERVO INSTALL W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	3	24644-001			·AUTOPILOT SERVO ACTUATOR	3026	3585	1
	6	24644-003			·AUTOPILOT SERVO ACTUATOR	3586 / 0001		1
	9	24644-011			·SERVO GEARBOX	3026	3585	1
	12	24644-013			·SERVO GEARBOX	3586 / 0001		1
-	15	24644-261			·CLUTCH CARTRIDGE KIT	3586 / 0001		1
	18	24644-361			··CLUTCH CARTRIDGE, 61 IN-LBS	3586 / 0001		1
-	21	24644-303			··MOUNTING KIT	3586 / 0001		1
	24	AN3-4A			···BOLT	3586 / 0001		1
	27	AN960-10			···WASHER	3586 / 0001		1
	30	24644-307			···RETAINING RING	3586 / 0001		1
	33	AN3-4A		A	·BOLT	3026 / 0001	/	3
	36	NAS1149F0332P		A	·WASHER	3026 / 0001	/	3
	39	AN3-5A		A	·BOLT	3026 / 0001	/	1
	42	NAS1149F0332P		A	·WASHER	3026 / 0001	/	1
	45	MS21919WDG4		A	·CLAMP, ADEL	3026 / 0001	/	1
	48	AN3-4A		A	·BOLT	3026 / 0001	/	4
	51	NAS1149D0332K			·WASHER	3026 / 0001	/	4
-	54	24644-212			·CAPSTAN COVER KIT	3026	3585	1
	57	53040-001			··COVER	3026	3585	1
	60	53039-001			··STIFFENER RING	3026	3585	1
	63	53043-001		A	··SCREW	3026	3585	3
	66	53042-001		A	··STAR WASHER	3026	3585	3
	69	PRT OF ITM 9		A	··NUT	3026	3585	1
	72	53037-001		A	··COTTER PIN	3026	3585	1
	75	53036-001		A	··GASKET	3026	3585	1
	78	PRT OF ITM 54			··PLUG	3026	3585	1
	81	PRT OF ITM 54			··O-RING	3026	3585	1
-	84	24644-211			·STAND OFF KIT	3026	3585	1
	87	53043-001		A	··SCREW	3026	3585	4
	90	53042-001		A	··STAR WASHER	3026	3585	4
	93	53041-001			··CABLE GUARD	3026	3585	4
-	96	24644-213			·CAPSTAN ASSEMBLY KIT	3586 / 0001	/	1
	99	24644-301			··CAPSTAN	3586 / 0001	/	1
-	102	24644-301			··STAND OFF KIT	3586 / 0001	/	1
	105	24644-304			···STIFFENER RING	3586 / 0001	/	1
	108	24644-306		A	···SCREW	3586 / 0001	/	4
	111	53042-001		A	···STAR WASHER	3586 / 0001	/	4
	114	24644-305			···CABLE GUARD	3586 / 0001	/	4
	117	19049-001			·CABLE CLAMP RH	3026 / 0001	/	1
	120	19049-002			·CABLE CLAMP LH	3026 / 0001	/	1
	123	AN3-10A		A	·BOLT	3026 / 0001	/	2
	126	NAS1149F0332P		A	·WASHER	3026 / 0001	/	4
	129	MS21083N3		A	·NUT	3026 / 0001	/	2
	132	19049-002			·CABLE CLAMP LH	3026 / 0001	/	1
	135	19049-001			·CABLE CLAMP RH	3026 / 0001	/	1
	138	AN3-10A		A	·BOLT	3026 / 0001	/	2
	141	NAS1149F0332P		A	·WASHER	3026 / 0001	/	4
	144	MS21083N3		A	·NUT	3026 / 0001	/	2
	147	19331-001			·CABLE, BRIDLE	3026 / 0001	3914 / 0441	1
	148	19331-005			·CABLE, BRIDLE	3915 / 0442	/	1
	150	22150-001			·CABLE DIVERTER, YAW SERVO	3026 / 0001	/	1
	153	AN525-832R8			·SCREW	3026 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					REFERENCED ITEMS NOT PART OF ASSY/ INSTL			
	400	RF 27-20-01 DET			RUDDER SYSTEM CABLES			
	401	RF 53-40-10 DET			YAW SERVO BRACKET			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			

Intentionally Left Blank

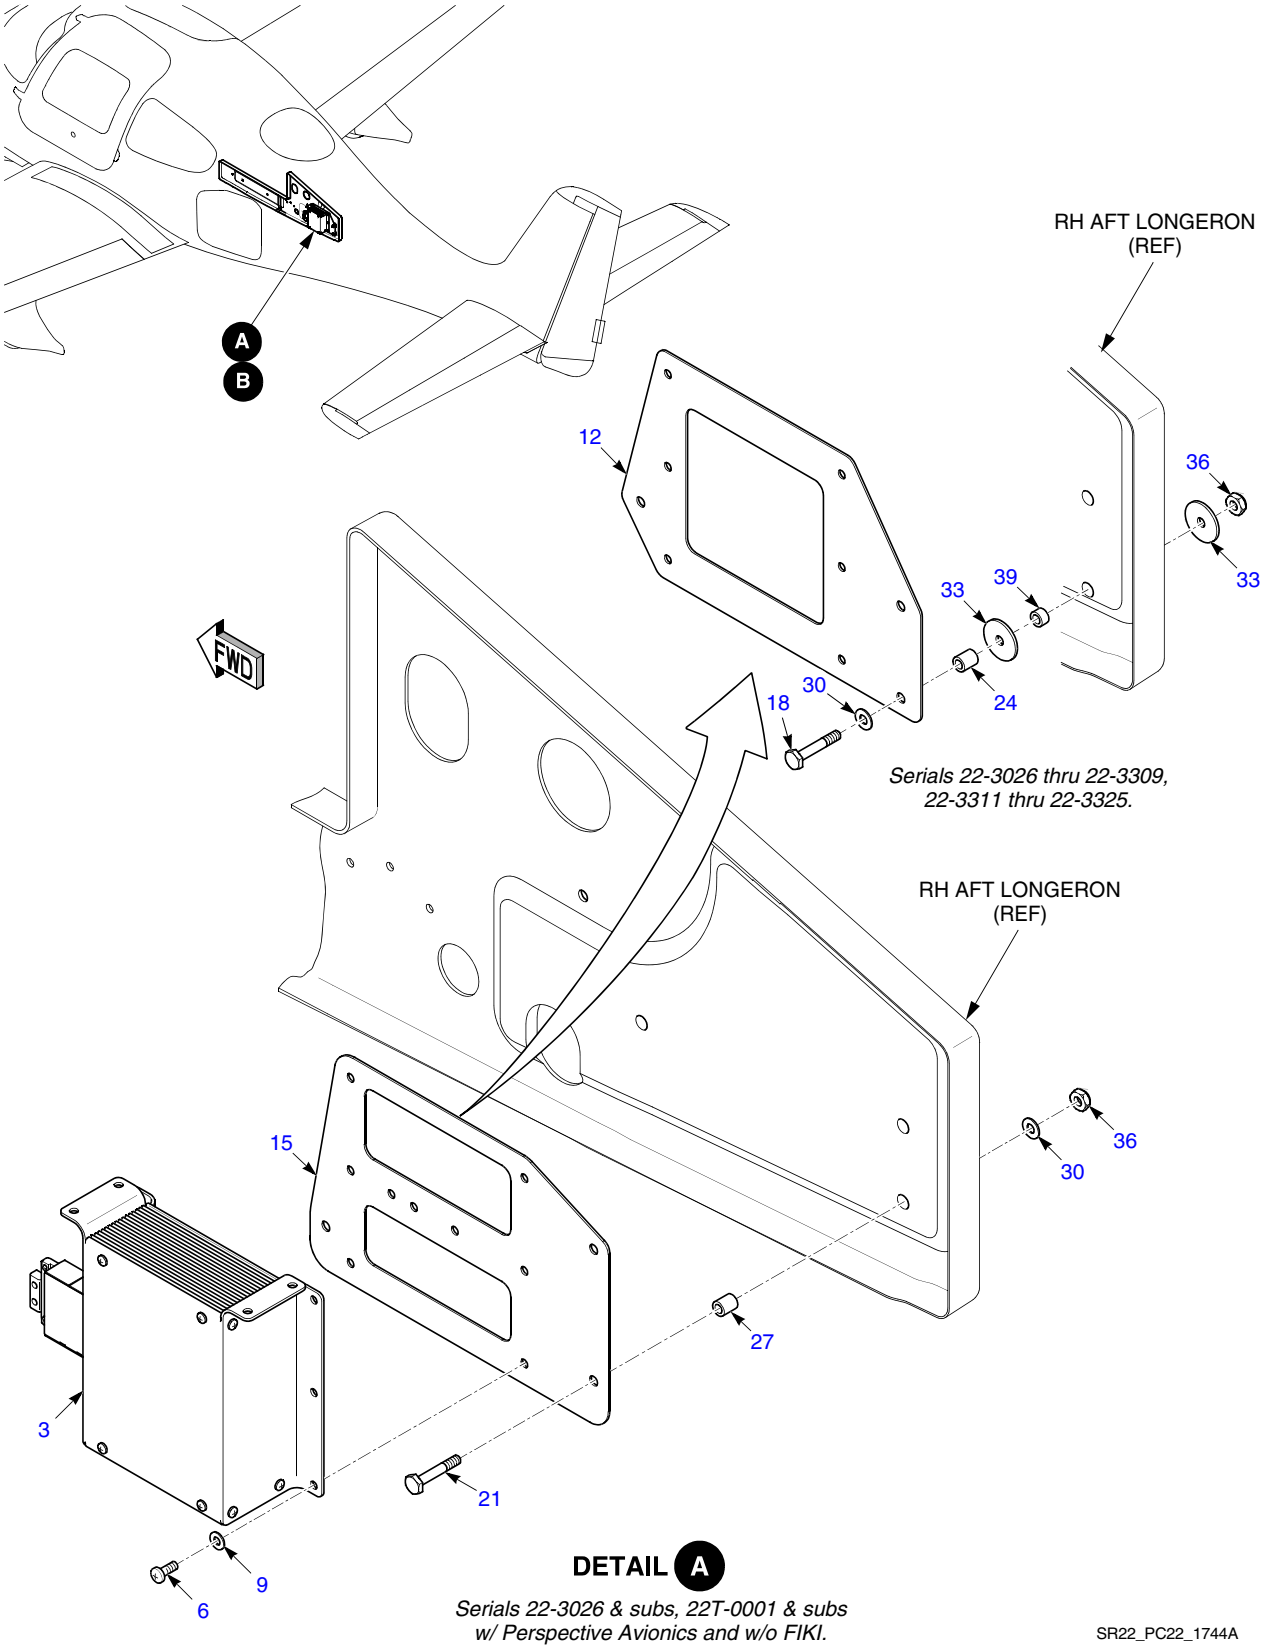

Figure-05

GTA 82 Pitch Trim Adapter - Serials w/ Perspective and w/o FIKI (1 of 2)

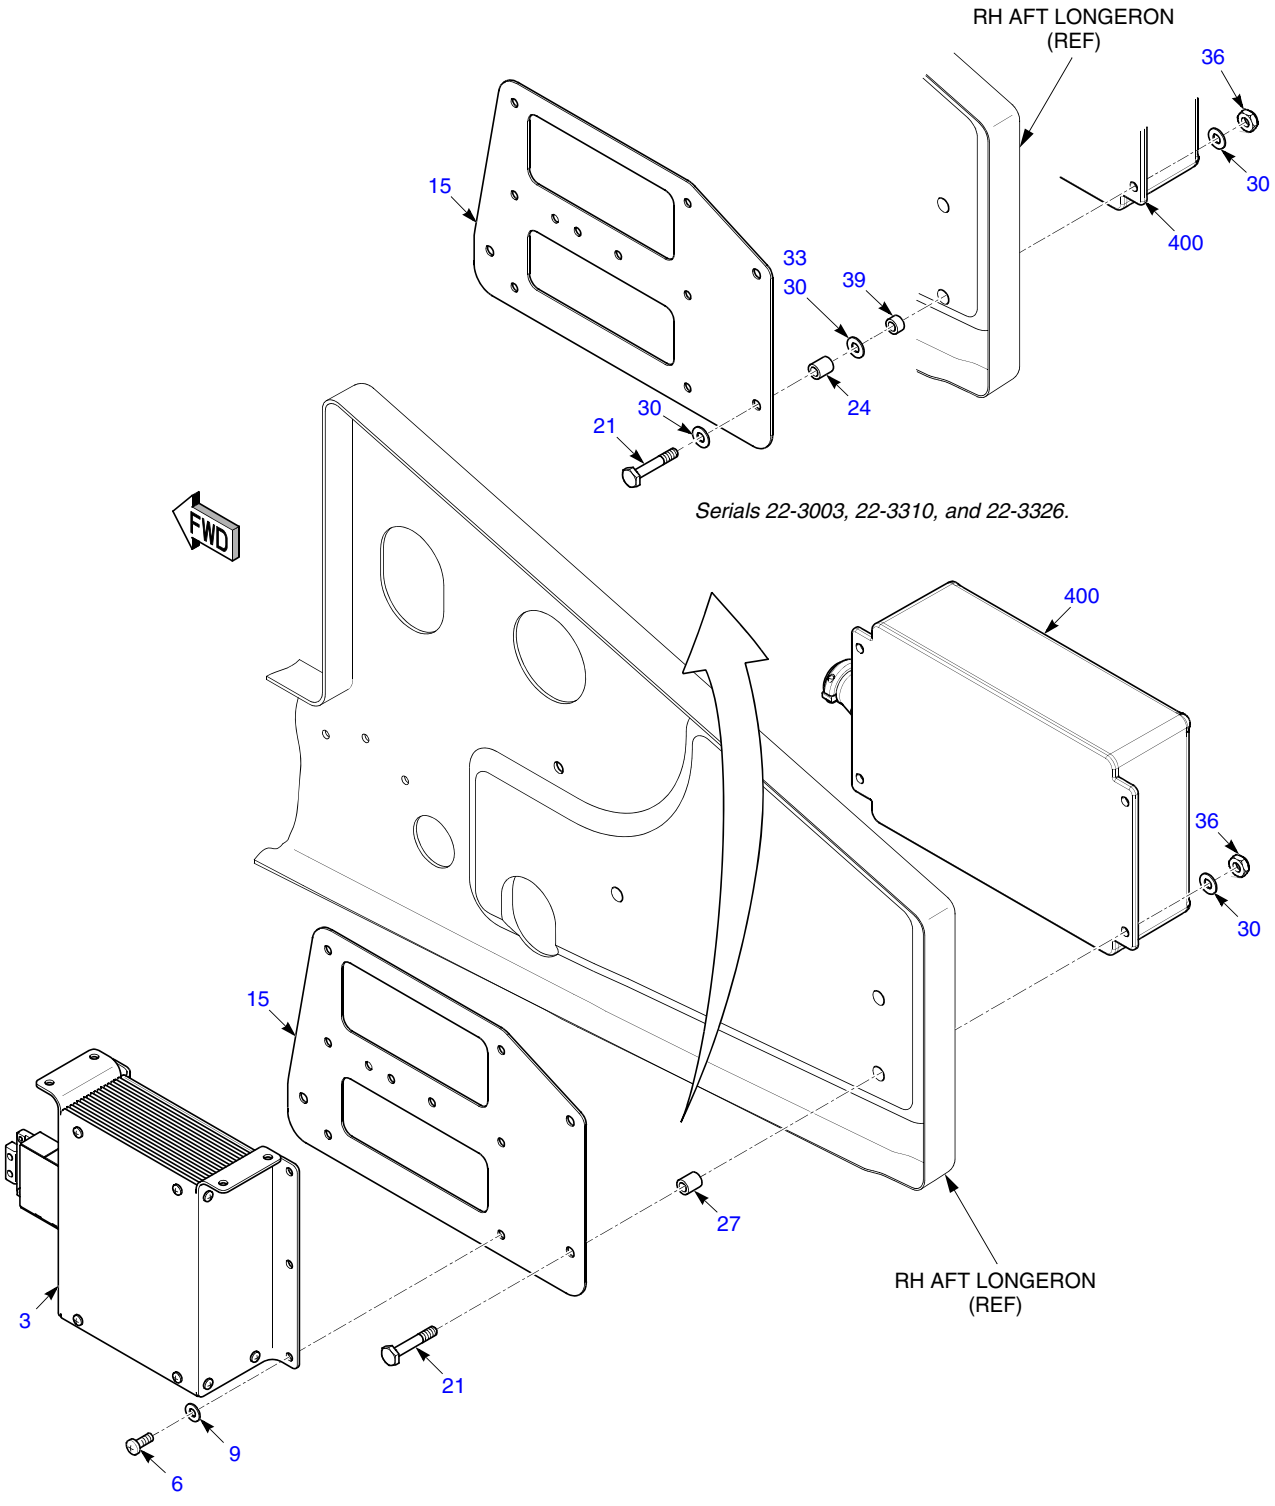

DETAIL B

Serials 22-3403 & subs, 22T-0001 & subs w/ Perspective Avionics and w/ FIKI.

SR22_PC22_1888

Figure-05

GTA 82 Pitch Trim Adapter - Serials w/ Perspective and w/ FIKI (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05	**		GTA 82 PITCH TRIM ADAPTER INSTL W/ PERSPECTIVE	3026 / 0001	/	NP
	3	24643-001			·AUTOPILOT PITCH TRIM ADAPTER	3026 / 0001	/	1
	6	MS27039-0807		A	·SCREW	3026 / 0001	/	6
	9	NAS1149FN832P		A	·WASHER	3026 / 0001	/	6
	12	19333-001			·MOUNTING PLATE	3026	3309	1
						3311	3325	
	15	22071-001			·MOUNTING PLATE	3310	3310	1
						3326 / 0001	/	
						3311	3325	
	21	AN3-12A		A	·BOLT	3003	3003	3
						3310	3310	
						3326 / 0001	/	
	24	NAS43DD3-24FC		A	·SPACER	3003	3003	3
						3026	3326	
	27	NAS43DD3-28FC		A	·SPACER	3327 / 0001	/	3
	30	NAS1149F0332P		A	·WASHER	3003	3003	6
						3026	3309	3
						3310	3310	9
						3311	3325	3
						3326	3326	9
						3327 / 0001	/	3
	33	AN970-3		A	·WASHER	3003	3003	3
						3026	3309	6
						3311	3325	6
	36	MS21044N3		A	·NUT	3003	3003	3
						3026 / 0001	/	
	39	11639-018		A	·SPACER	3003	3003	3
						3026	3326	
					REFERENCED ITEMS NOT PRT OF ASSY/ INSTL			
	400	RF 30-05-03 DET			TIMER BOX			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002 AND 22-3003; REFER TO 22-3026 W/ PERSPECTIVE FOR PRT IDENTIFICATION.			

Intentionally Left Blank

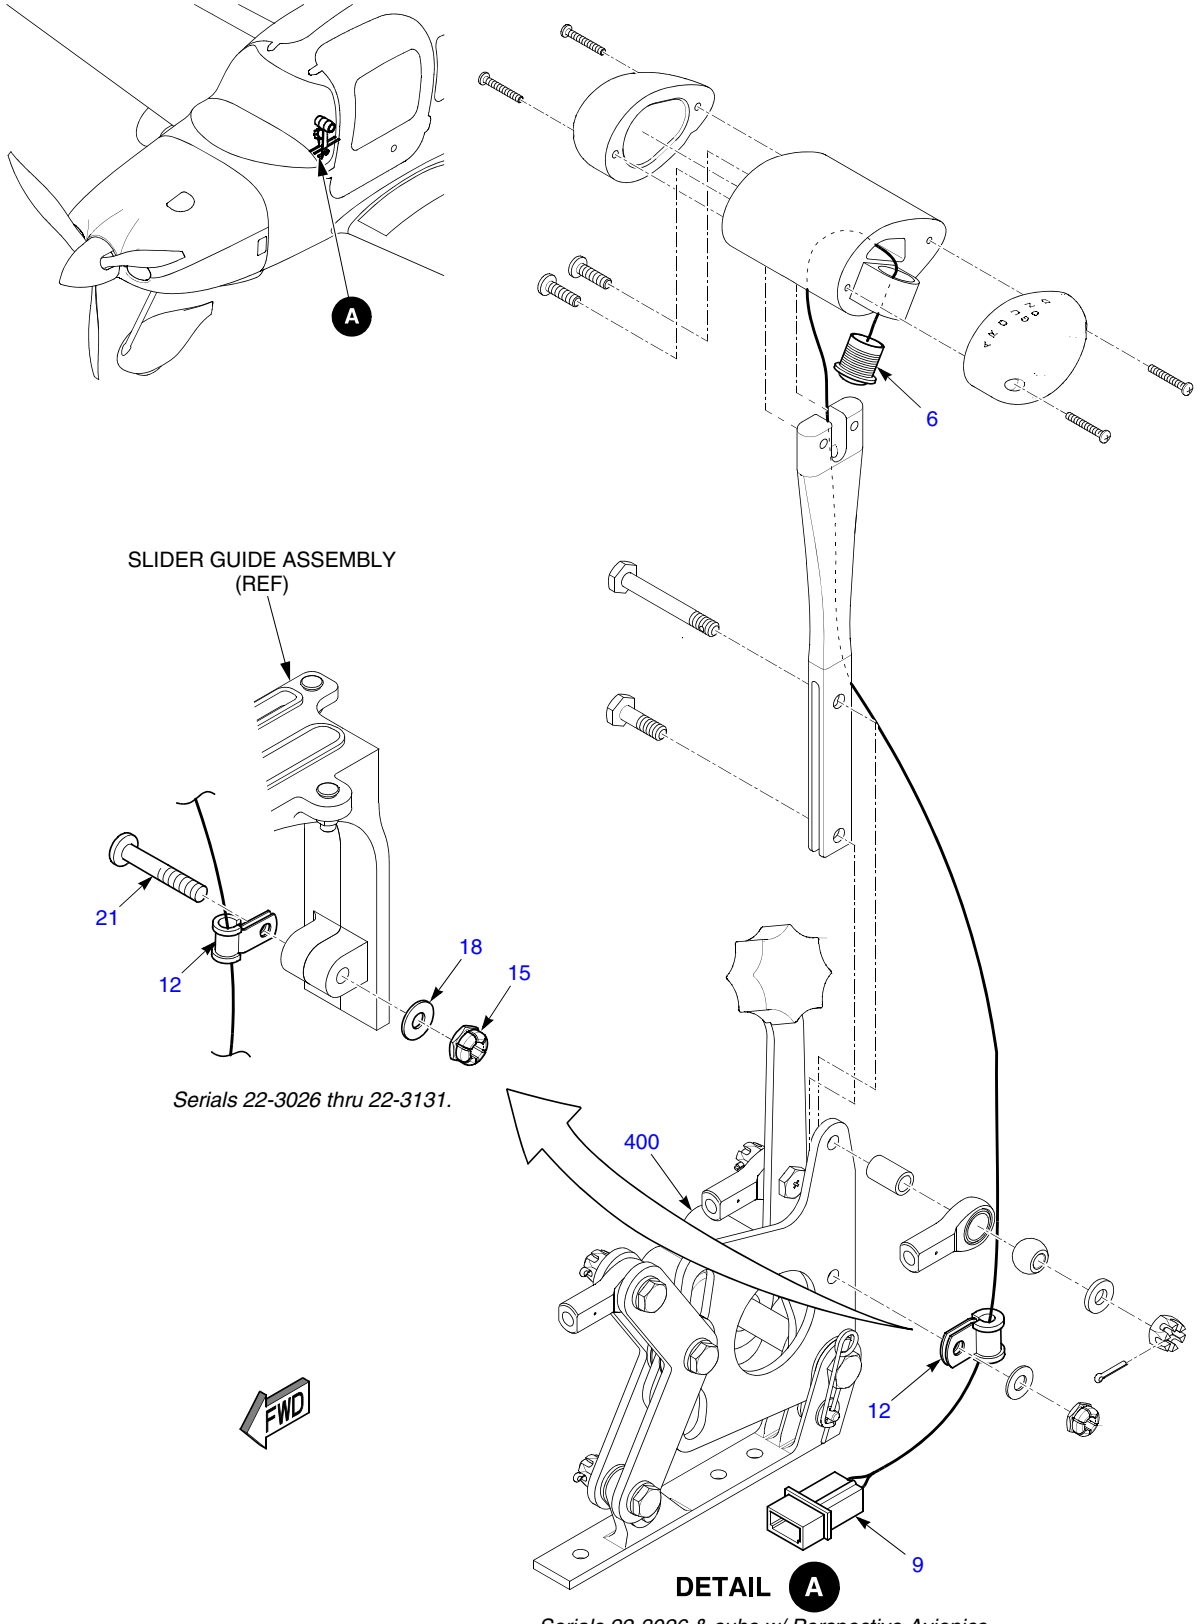

Figure-01
Take-Off/Go-Around Switch - Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		TO/GA SWITCH INSTL W/ PERSPECTIVE	3026 / 0001	/	NP
-	3	24555-001			·SWITCH ASSEMBLY	3026 / 0001	/	1
	6	51761-002			··SWITCH	3026 / 0001	/	1
	9	50158-002			··PLUG	3026 / 0001	/	1
	12	MS21919WDG3			·CLAMP	3026 / 0001	/	1
	15	MS21083N3			·NUT	3026	3131	1
	18	NAS1149F0332P			·WASHER	3026	3131	1
	21	MS27039-1-016			·SCREW	3026	3131	1
					REFERENCED ITEMS NOT PRT OF ASSY/ INSTL			
	400	RF 76-10-01 DET			ENGINE CONTROL QUADRANT			
					SYMBOL NOTES:			
				**	SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

CHAPTER 23

COMMUNICATIONS

Intentionally Left Blank

CHAPTER 23 - COMMUNICATIONS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
23-LOEP	1	19 SEP 2017
23-LOEP	2	19 SEP 2017
23-TOC	1	19 SEP 2017
23-TOC	2	19 SEP 2017
23-20-01	1	01 JAN 2016
23-20-01	2	01 JAN 2016
23-20-01	3	01 JAN 2016
23-20-01	4	01 JAN 2016
23-20-01	5	01 JAN 2016
23-20-01	6	01 JAN 2016
23-30-01	1	15 DEC 2014
23-30-01	2	01 JAN 2016
23-30-02	1	01 JAN 2016
23-30-02	2	01 JAN 2016
23-50-01	1	15 DEC 2014
23-50-01	2	15 DEC 2014
23-50-01	3	01 JAN 2016
23-50-01	4	01 JAN 2016
23-50-01	5	01 JAN 2016
23-50-01	6	01 JAN 2016
23-60-01	1	19 SEP 2017
23-60-01	2	19 SEP 2017
23-60-01	3	19 SEP 2017
23-60-01	4	19 SEP 2017
23-60-01	5	19 SEP 2017
23-60-01	6	19 SEP 2017

Intentionally Left Blank

CHAPTER 23 - COMMUNICATIONS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
GDL 88 UAT/ADS-B Transceiver - Serials w/ GDL 88 and w/o GTS 800 (Sheet 1 of 2)	23-20-01
GDL 88 UAT/ADS-B Transceiver - Serials w/ GDL 88 and GTS 800	23-20-01
GDL 88 Antenna - Serials w/ GDL 88	23-20-01
XM Radio Transceiver - Serials w/ Perspective	23-30-01
Flight Stream 210	23-30-02
Audio Integration (1 of 4)	23-50-01
Audio Integration - Serials 22-0002 & subs w/o Perspective Avionics (2 of 4)	23-50-01
Audio Integration - Serials 22-3026 thru 22-3827 w/ Perspective, 22T-0001 thru 22T-0267 (3 of 4)	23-50-01
Audio Integration - Serials 22-3828 & subs w/ Perspective, 22T-0268 & subs (4 of 4)	23-50-01
Static Wick Installation (1 of 4)	23-60-01
Static Wick Installation (2 of 4)	23-60-01
Static Wick Installation (3 of 4)	23-60-01
Static Wick Installation (4 of 4)	23-60-01

Intentionally Left Blank

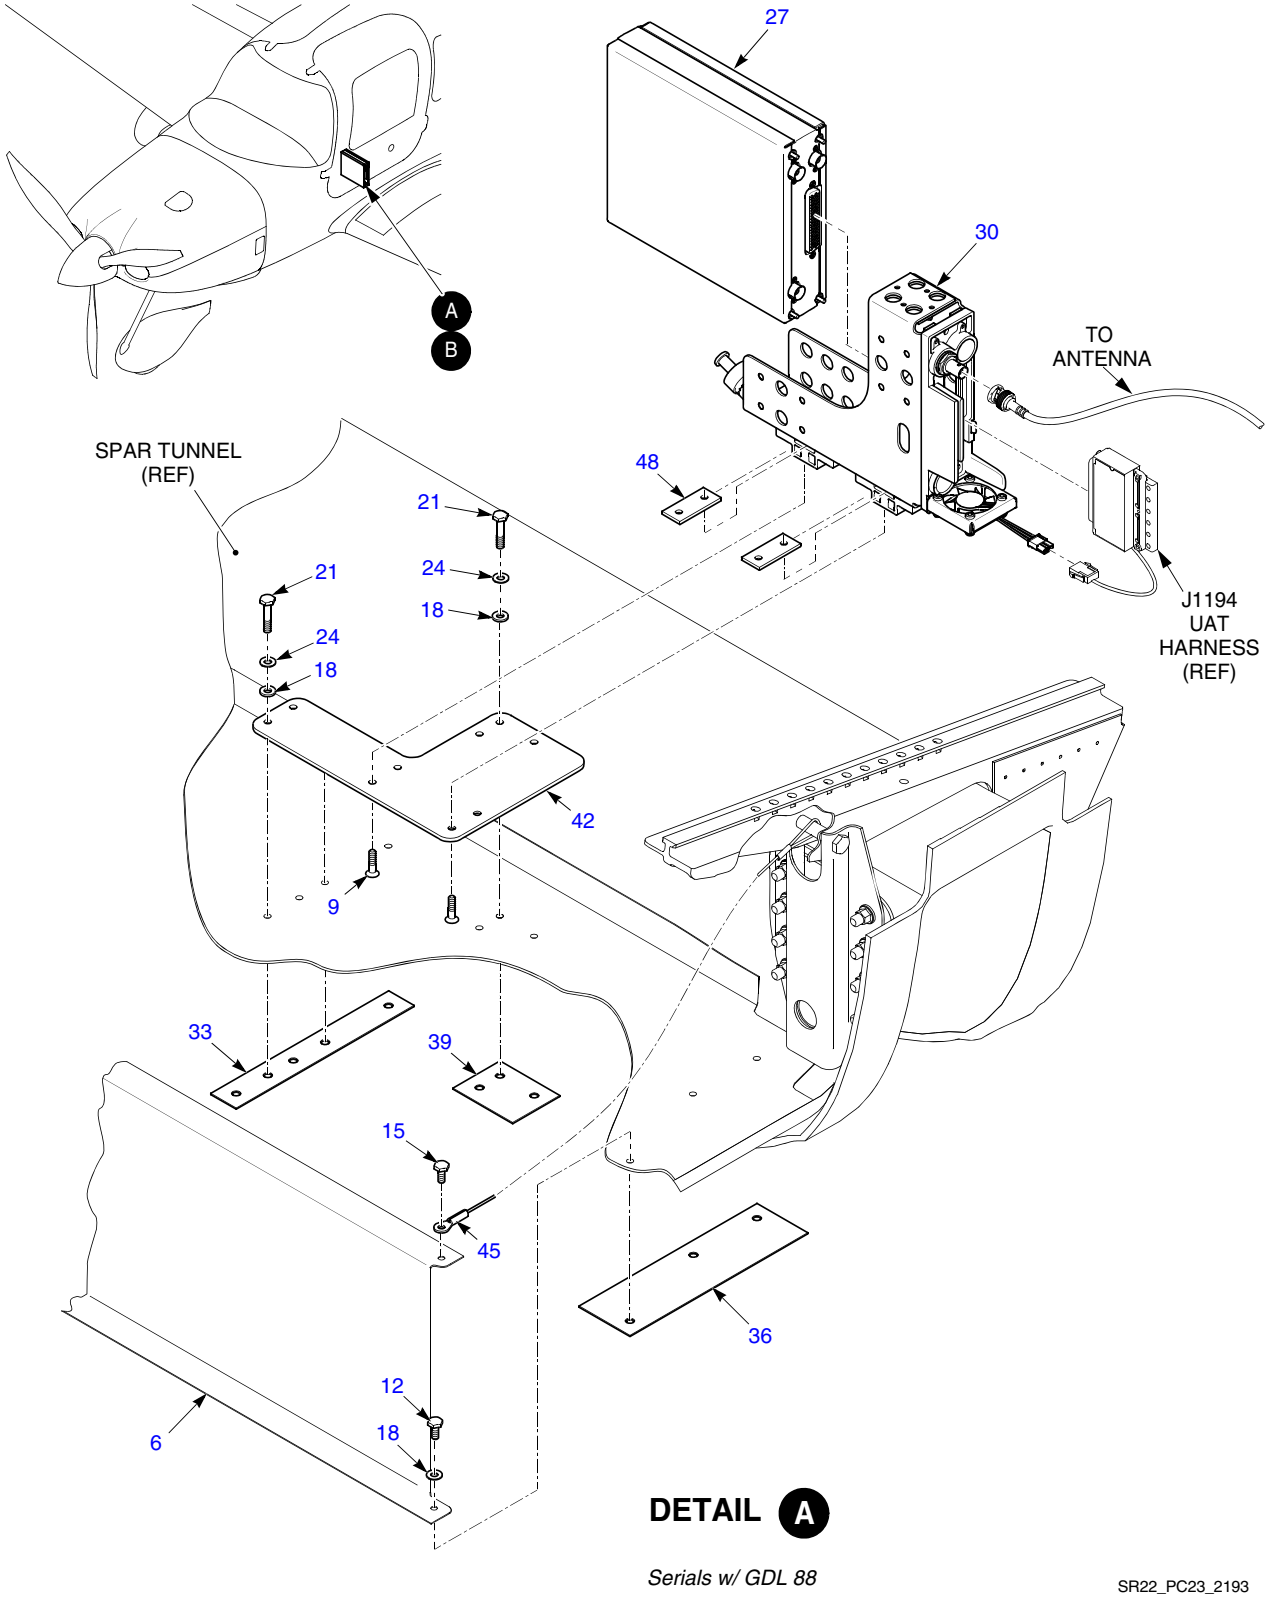

Figure-01
GDL 88 UAT/ADS-B Transceiver - Serials w/ GDL 88 and w/o GTS 800 (Sheet 1 of 2)

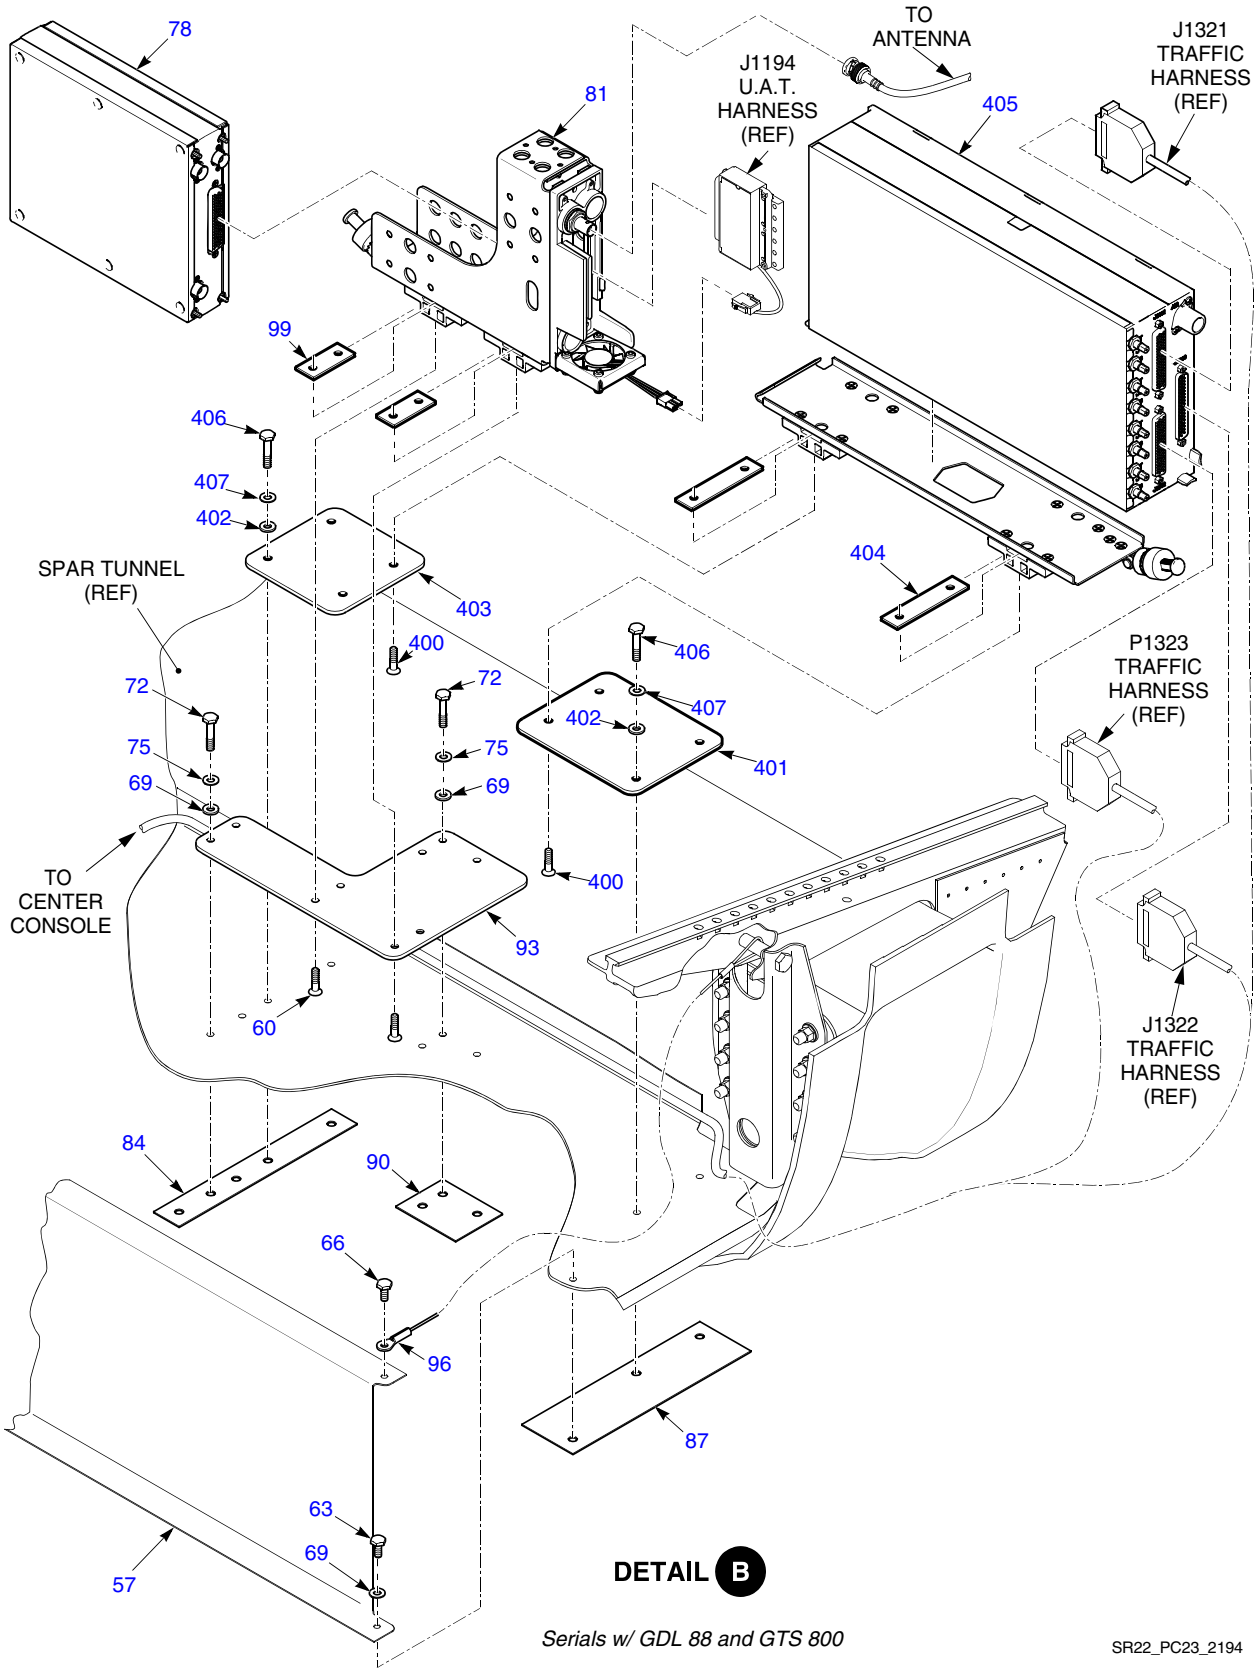

Figure-01

GDL 88 UAT/ADS-B Transceiver - Serials w/ GDL 88 and GTS 800

EFFECTIVITY:
All

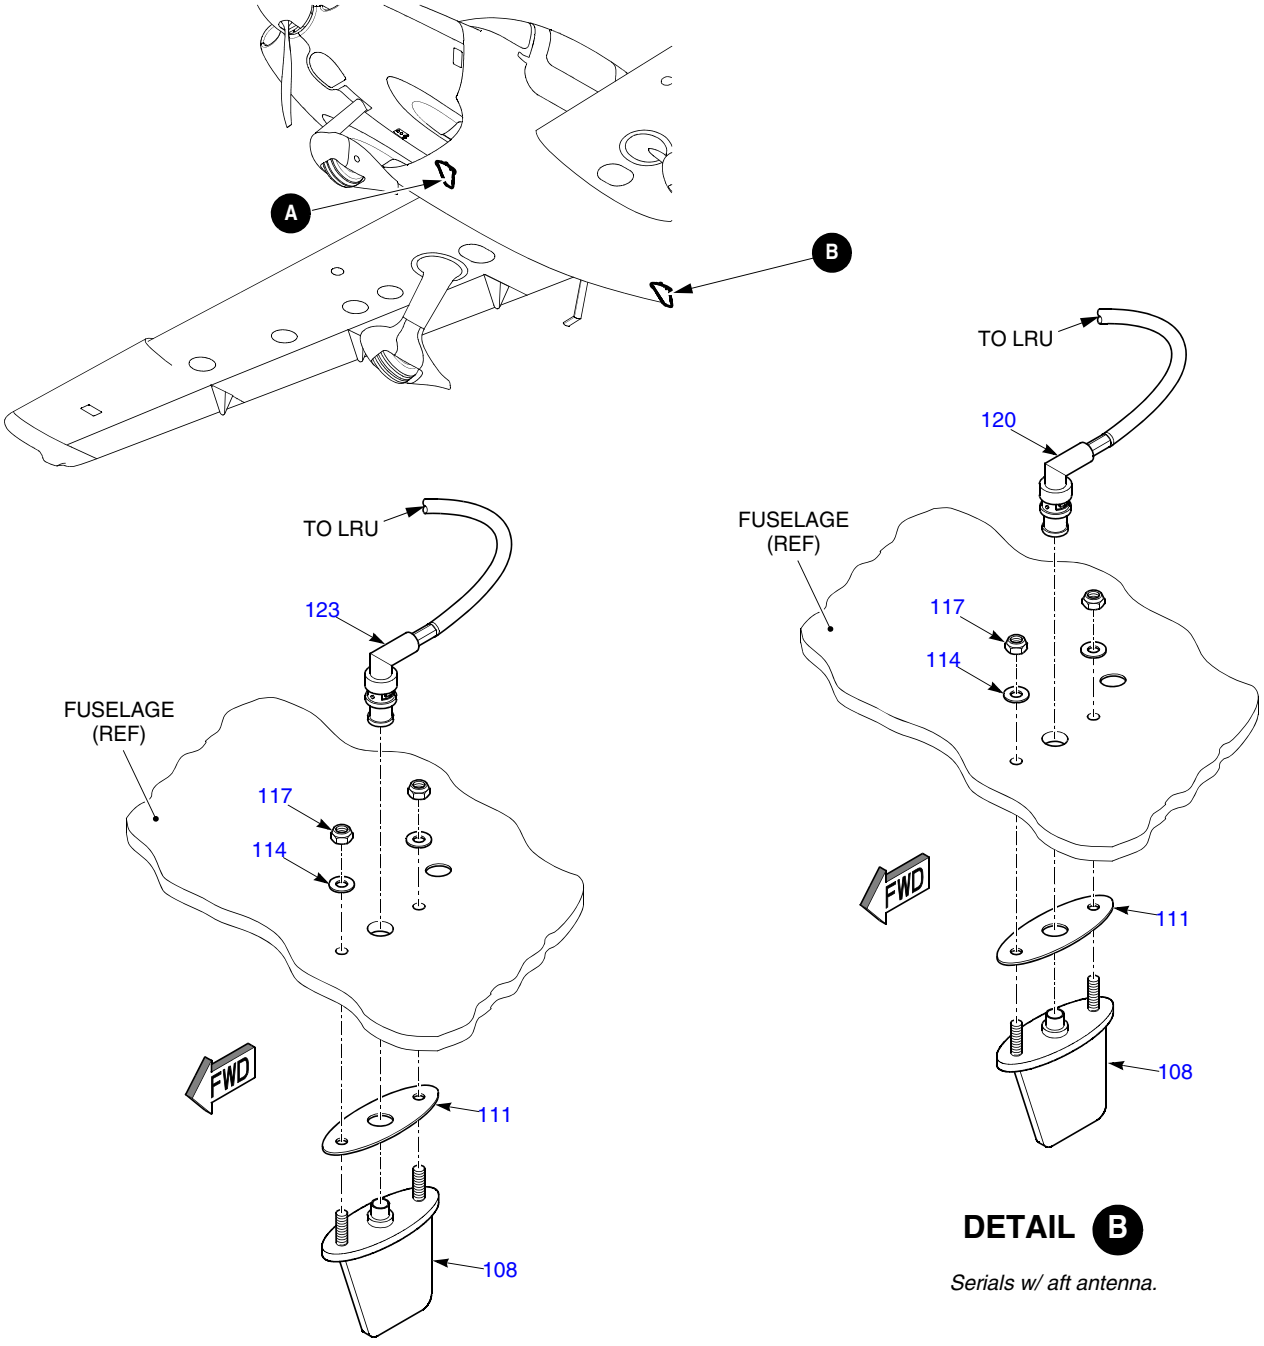

SR22_PC23_2195

Figure-01
GDL 88 Antenna - Serials w/ GDL 88

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM	TO	UNITS
-	1	NO PRT NUMBER			GDL 88 INSTALLATION	4300 1233		NP
-	3	NO PRT NUMBER			·GDL 88 INSTALLATION W/O GTS 800	4300 1233		NP
	6	16763-002			··COVER PANEL	4300 1233		1
	9	MS24694-S54		A	··SCREW	4300 1233		4
	12	AN3-7A		A	··BOLT	4300 1233		4
	15	AN3-3A		A	··BOLT	4300 1233		2
	18	NAS1149D0363K		A	··WASHER	4300 1233		9
	21	AN3-10A		A	··BOLT	4300 1233		5
	24	NAS1149D0332K		A	··WASHER	4300 1233		5
	27	30156-002			··GDL 88 UAT LINE REPLACEABLE UNIT	4300 1233		1
	30	30156-101			··GDL 88 UAT LINE REPLACEABLE UNIT RACK	4300 1233		1
	33	26664-201		A	··ASSY, UAT NUTPLATE, INBOARD	4300 1233		1
	36	26664-202		A	··ASSY, UAT NUTPLATE, OUTBOARD	4300 1233		1
	39	26664-203		A	··ASSY, UAT NUTPLATE, MID	4300 1233		1
	42	14824-007			··BRACKET, GARMIN UAT GDL88	4300 1233		1
	45	14595-201			··LANYARD, EYELET AND LOOP ENDS	4300 1233		2
	48	14825-002			··RETAINER PLATE	4300 1233		2
-	51	30156-104			··GDL 88 UAT LINE REPLACEABLE UNIT RACK HEAT SINK	4300 1233		1
-	54	NO PRT NUMBER			·GDL 88 INSTALLATION W/ GTS 800	4300 1233		NP
	57	16763-002			··COVER PANEL	4300 1233		1
	60	MS24694-S54		A	··SCREW	4300 1233		4
	63	AN3-7A		A	··BOLT	4300 1233		2
	66	AN3-3A		A	··BOLT	4300 1233		2
	69	NAS1149D0363K		A	··WASHER	4300 1233		7
	72	AN3-10A		A	··BOLT	4300 1233		5
	75	NAS1149D0332K		A	··WASHER	4300 1233		5
	78	30156-002			··GDL 88 UAT LINE REPLACEABLE UNIT	4300 1233		1
	81	30156-101			··GDL 88 UAT LINE REPLACEABLE UNIT RACK	4300 1233		1
	84	26664-201		A	··ASSY, UAT NUTPLATE, INBOARD	4300 1233		1
	87	26664-202		A	··ASSY, UAT NUTPLATE, OUTBOARD	4300 1233		1
	90	26664-203		A	··ASSY, UAT NUTPLATE, MID	4300 1233		1
	93	14824-007			··BRACKET, GARMIN UAT GDL88	4300 1233		1
	96	14595-201			··LANYARD, EYELET AND LOOP ENDS	4300 1233		2
	99	14825-002			··RETAINER PLATE	4300 1233		2
-	102	30156-104			··GDL 88 UAT LINE REPLACEABLE UNIT RACK HEAT SINK	4300 1233		1
-	105	NO PRT NUMBER			·GDL 88 ANTENNA INSTALLATION	4300 1233		NP
	108	26656-001			··ANTENNA, MONOPOLE	4300 1233		1
	111	PRT OF ITEM 108			··GASKET	4300 1233		1
	114	AN970-3		A	··WASHER	4300 1233		2
	117	MS21083N08		A	··NUT	4300 1233		2
	120	35245-001	**		··UAT CABLE ASSEMBLY	4300 1233		1
	123	35245-010	@		··UAT CABLE ASSEMBLY	4300 1233		1
						4300 1233		
					REFERENCED ITEMS NOT PART OF ASSY/ INSTL			
	400	RF 34-40-04 DET			SCREW			
	401	RF 34-40-04 DET			BRACKET, OUTBOARD, GTS 800			
	402	RF 34-40-04 DET			WASHER			
	403	RF 34-40-04 DET			BRACKET, INBOARD, GTS 800			
	404	RF 34-40-04 DET			RETAINER PLATE			
	405	RF 34-40-04 DET			GTS 800 LINE REPLACEABLE UNIT			
	406	RF 34-40-04 DET			BOLT			
	407	RF 34-40-04 DET			WASHER			
					SYMBOL NOTES:			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM	EFFECTIVE TO	UNITS
			**		SERIALS W/ AFT ANTENNA			
			@		SERIALS W/ FORWARD ANTENNA			

Intentionally Left Blank

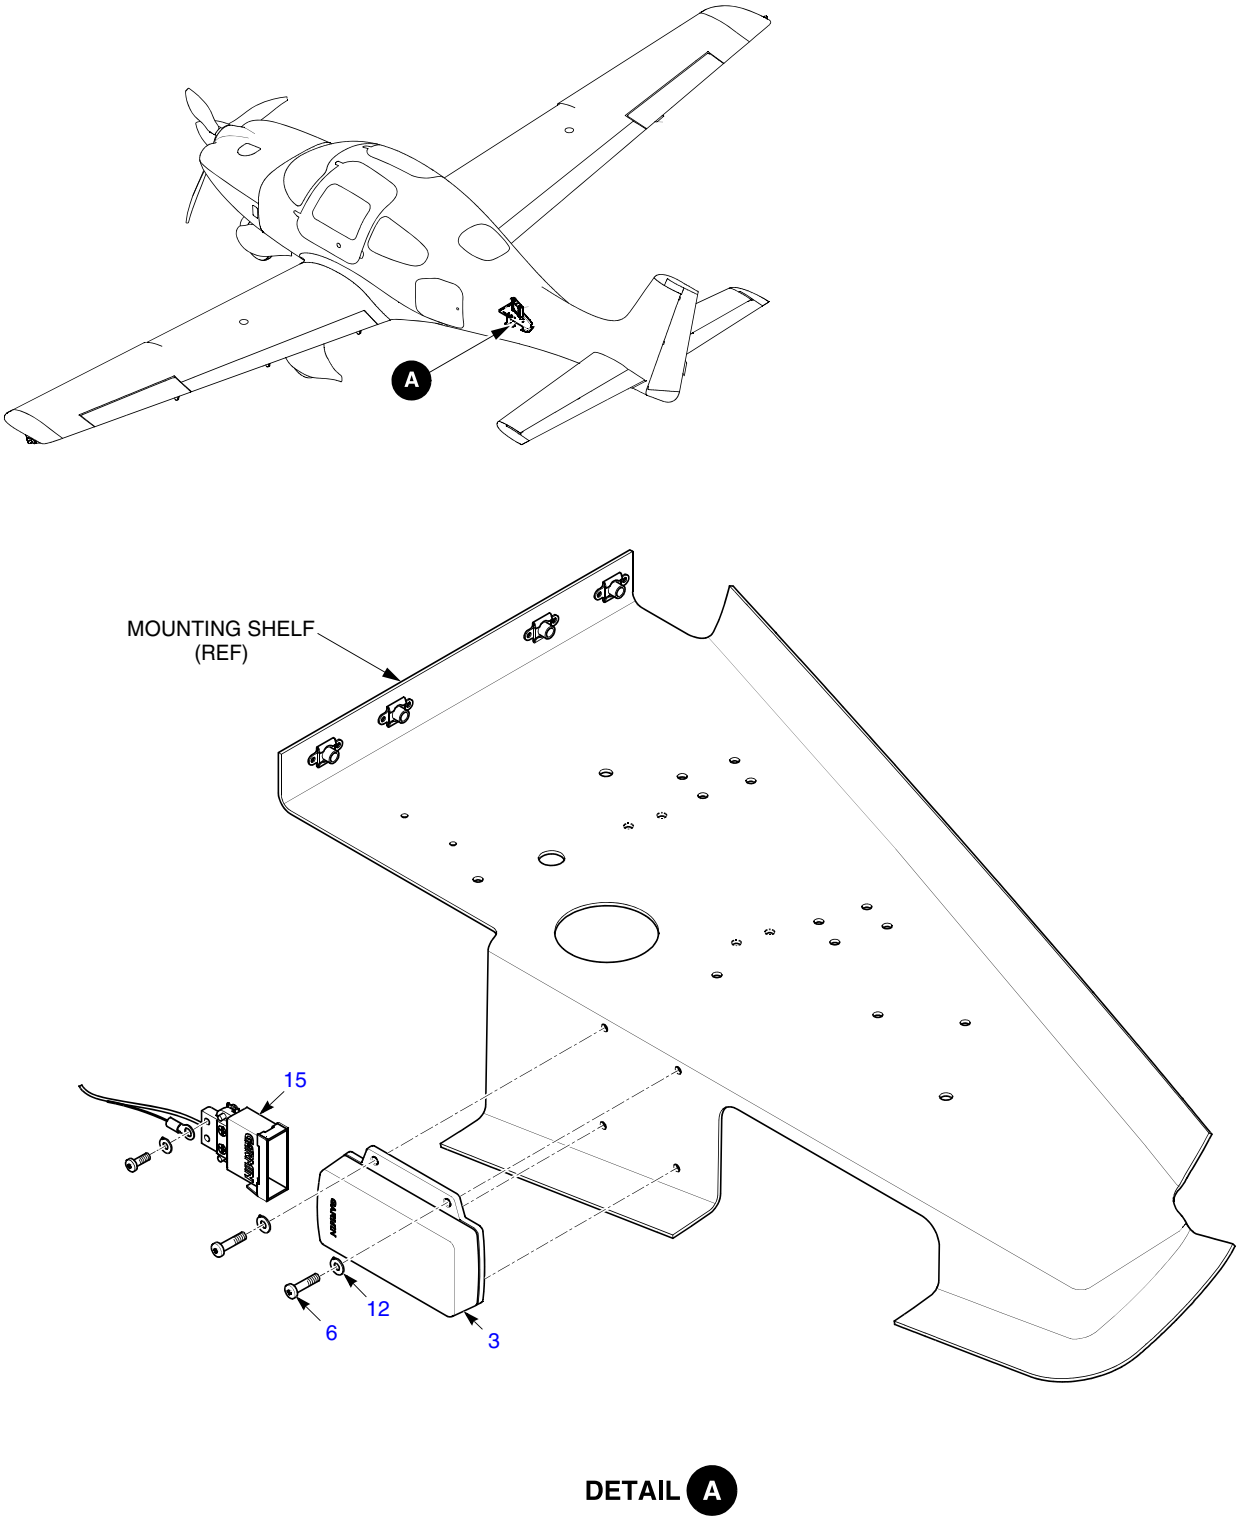

Figure-01
XM Radio Transceiver - Serials w/ Perspective

EFFECTIVITY:
Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			XM RADIO TRANSCEIVER INSTALLATION	3026 / 0001	4299 / 1232	NP
	3	24640-001			·TRANSCEIVER	3026 / 0001	4299 / 1232	1
	6	MS35206-231		A	·SCREW	3026 / 0001	4299 / 1232	4
					ALTERNATE FOR P/N NAS1801-06-10			
-	9	NAS1801-06-10		A	·SCREW	3026 / 0001	4299 / 1232	4
					ALTERNATE FOR P/N MS35206-231			
	12	NAS1149FN632P		A	·WASHER	3026 / 0001	4299 / 1232	4
	15	51991-009			·CONNECTOR	3026 / 0001	4299 / 1232	1

EFFECTIVITY:
All

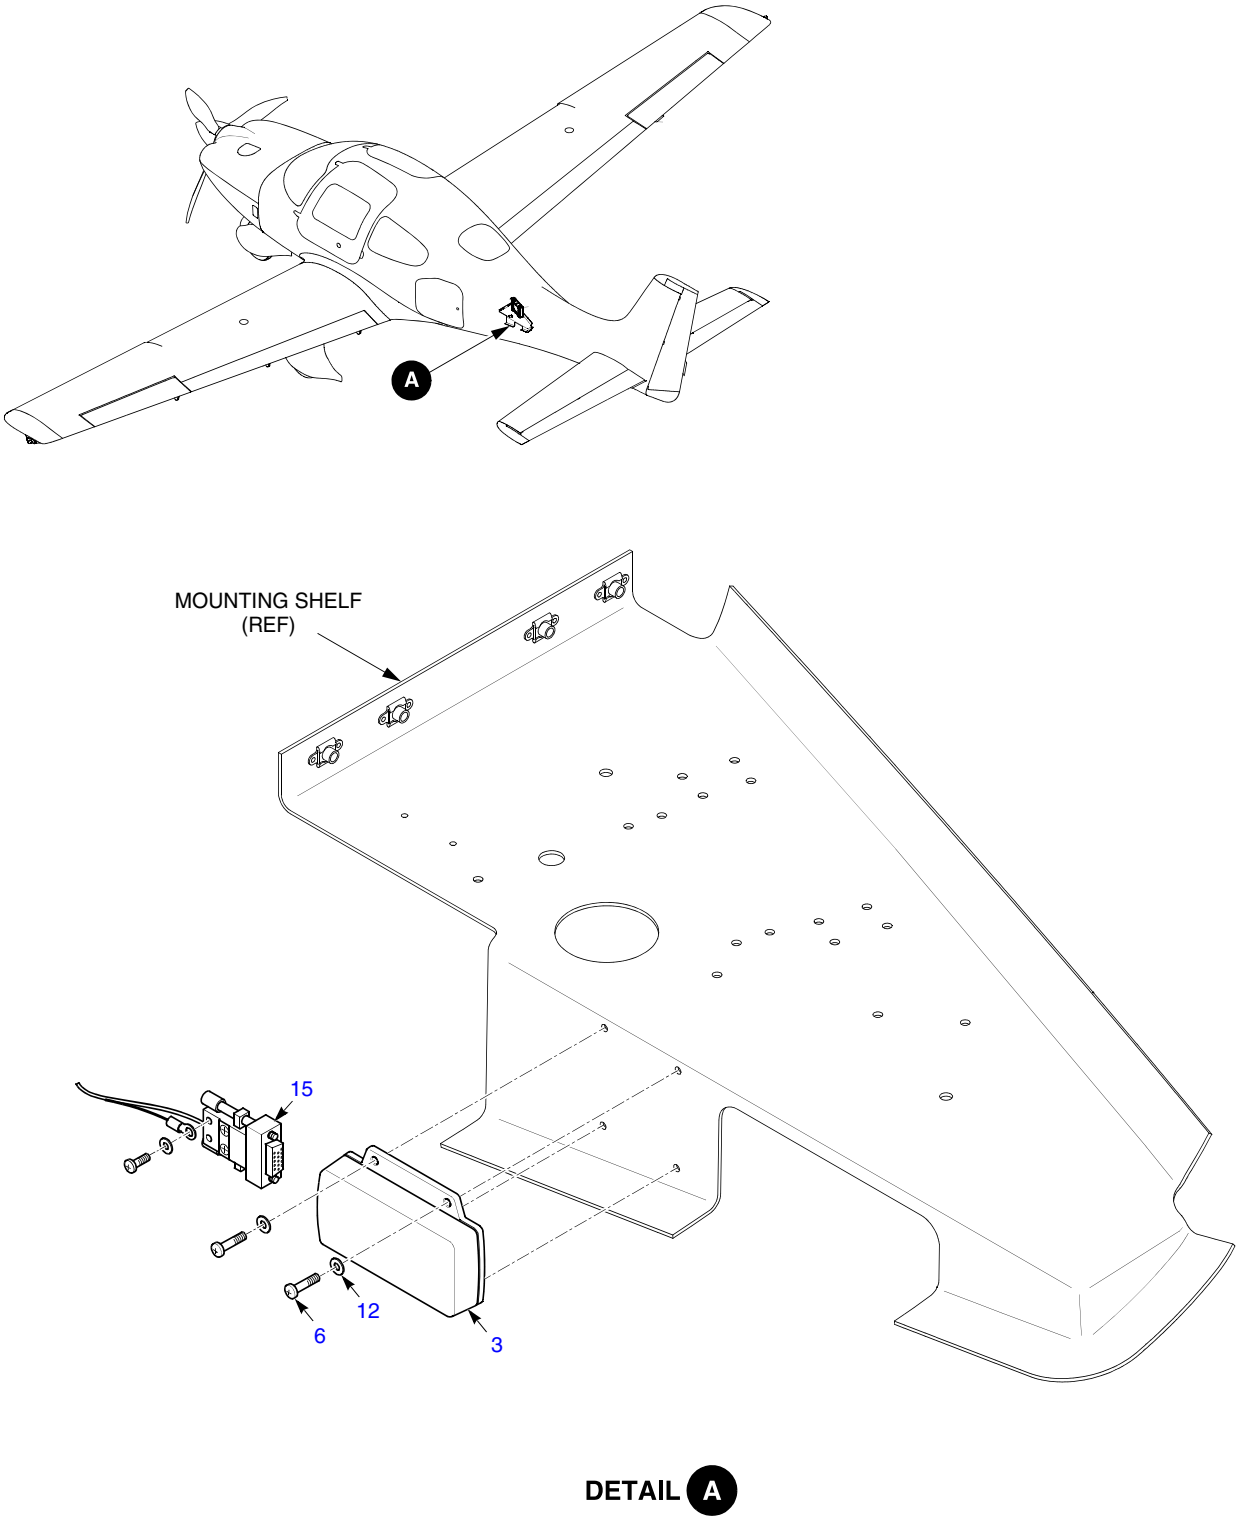

Figure-02
Flight Stream 210

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	NO PRT NUMBER			FLIGHT STREAM 210 INSTALLATION	4300 / 1232	/	NP
	3	35591-001			·FLIGHT STREAM 210 BLUETOOTH TRANSCEIVER	4300 / 1232		1
	6	MS35206-231		A	·SCREW	4300 / 1232		4
					ALTERNATE FOR P/N NAS1801-06-10			
-	9	NAS1801-06-10		A	·SCREW	4300 / 1232		4
					ALTERNATE FOR P/N MS35206-231			
	12	NAS1149FN632P		A	·WASHER	4300 / 1232		4
	15	53805-015			·CONNECTOR	4300 / 1232		1

EFFECTIVITY:
All

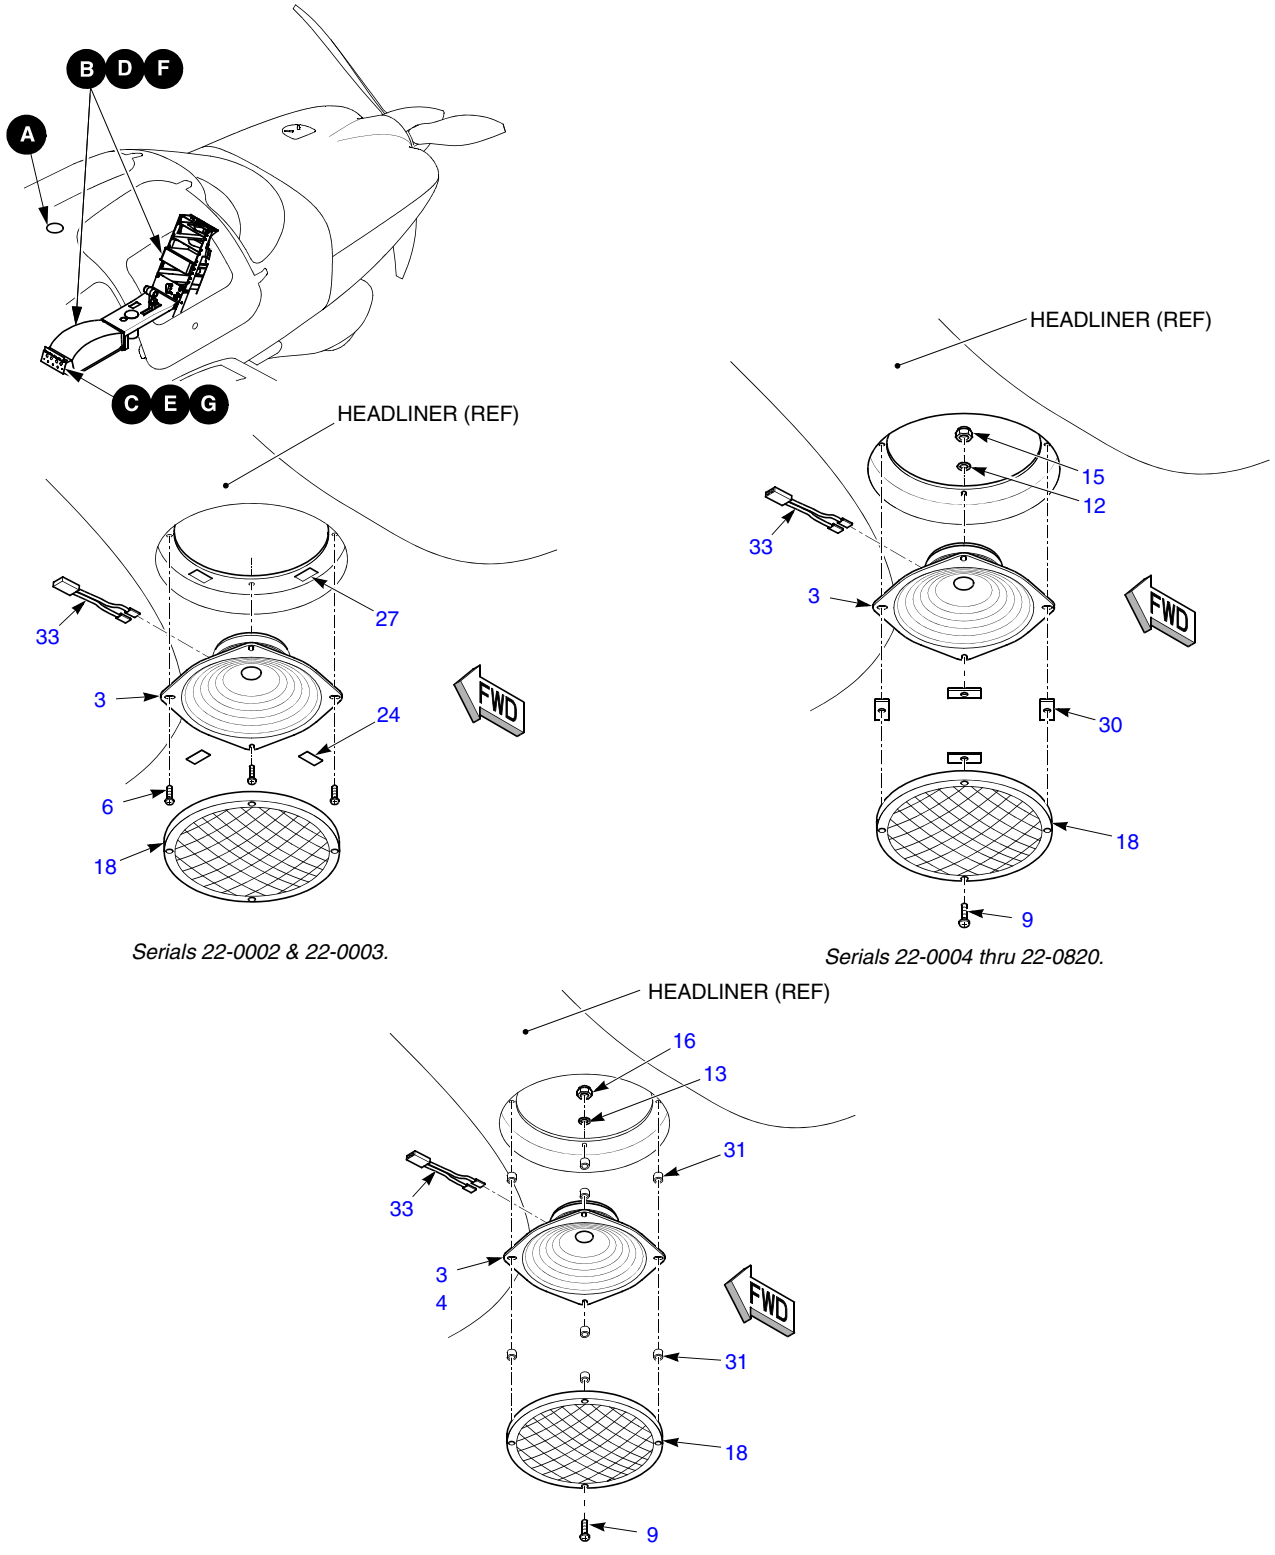

Figure-01
Audio Integration (1 of 4)

EFFECTIVITY:
All

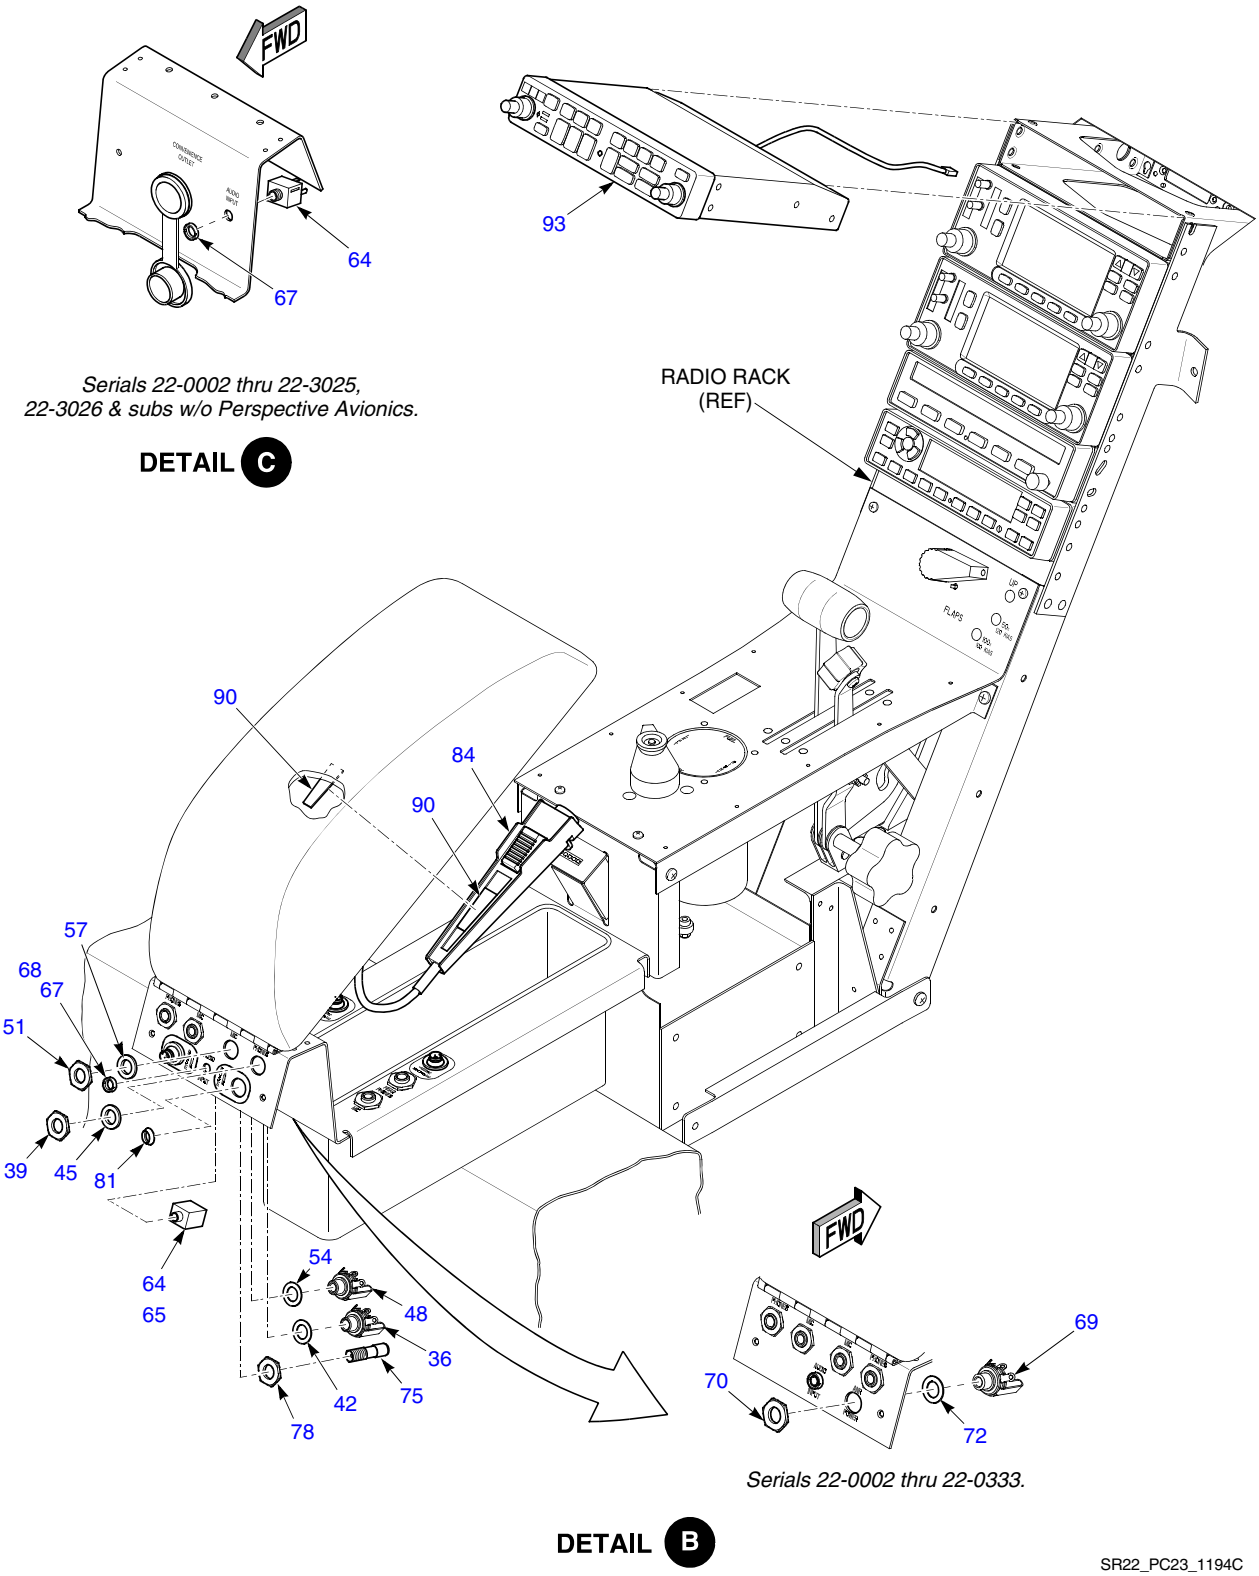

Figure-01

Audio Integration - Serials 22-0002 & subs w/o Perspective Avionics (2 of 4)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective Avionics

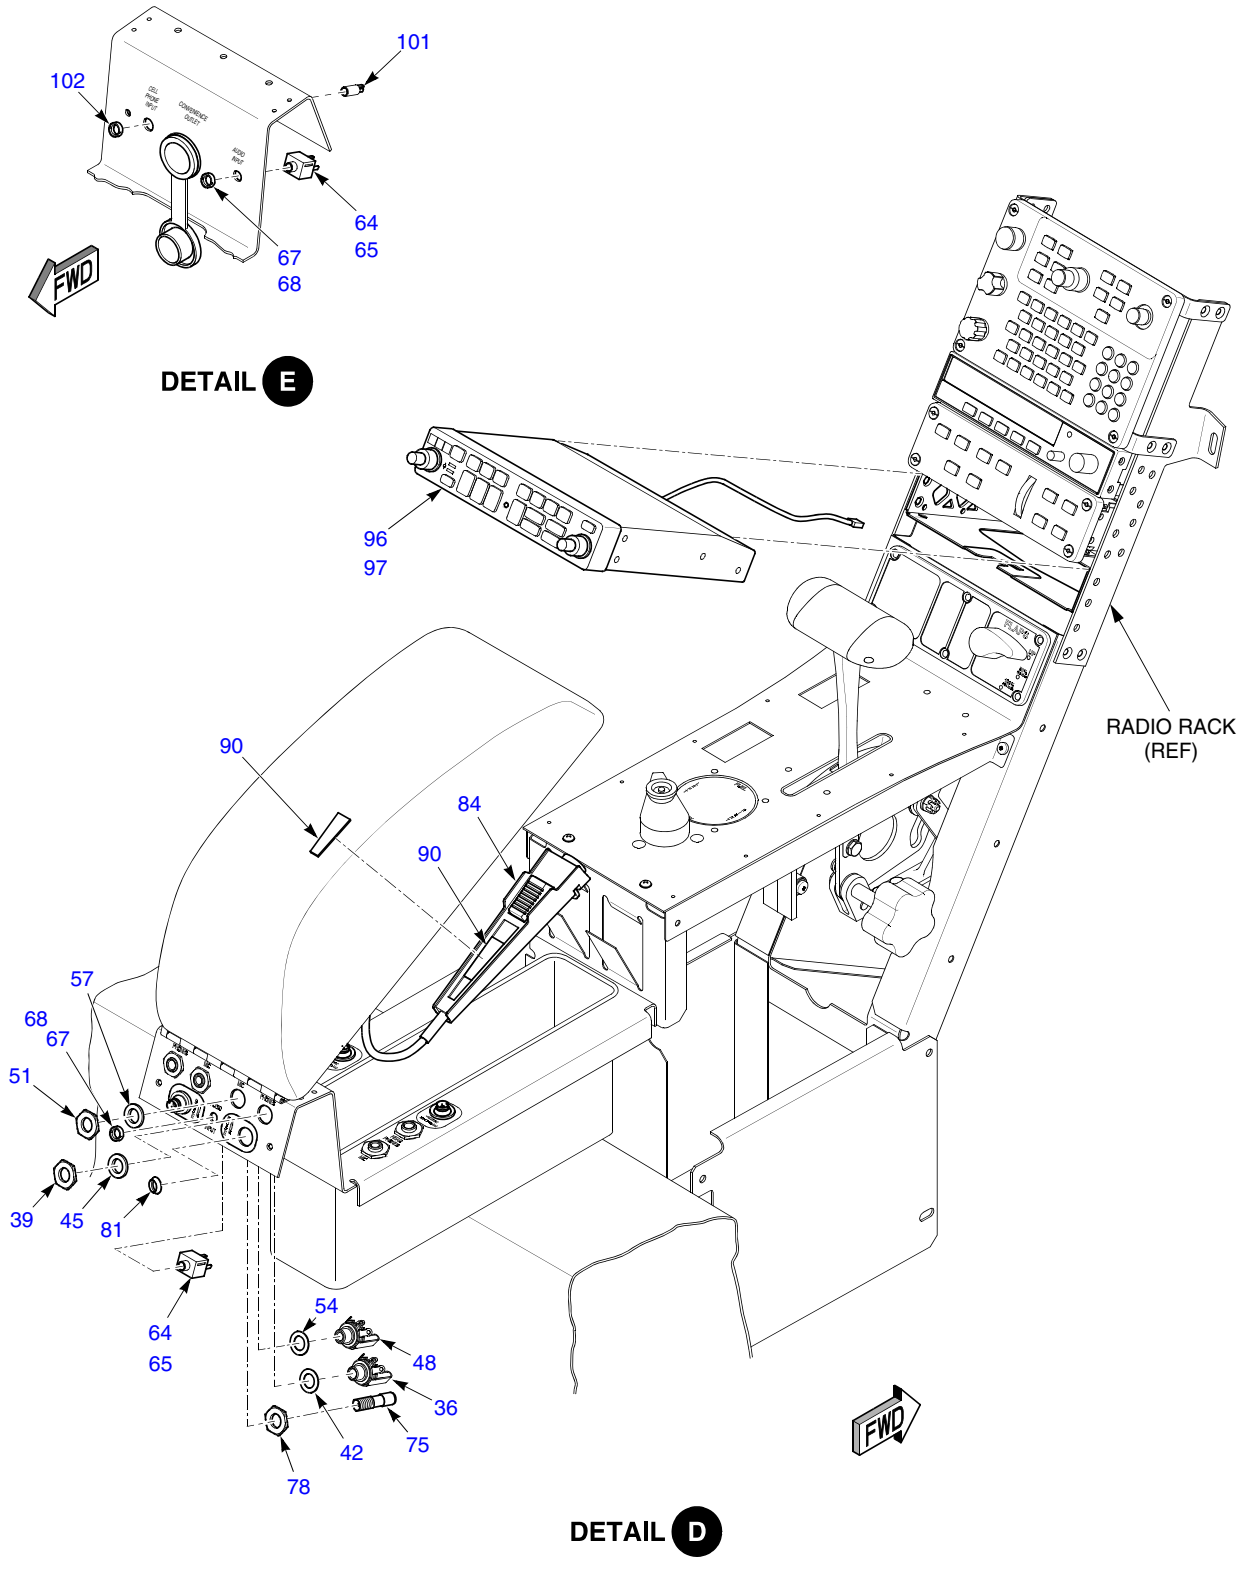

Serials 22-3026 thru 22-3827 w/ Perspective, 22T-0001 thru 22T-0267.

SR22_PC23_2038

Figure-01

Audio Integration - Serials 22-3026 thru 22-3827 w/ Perspective, 22T-0001 thru 22T-0267 (3 of 4)

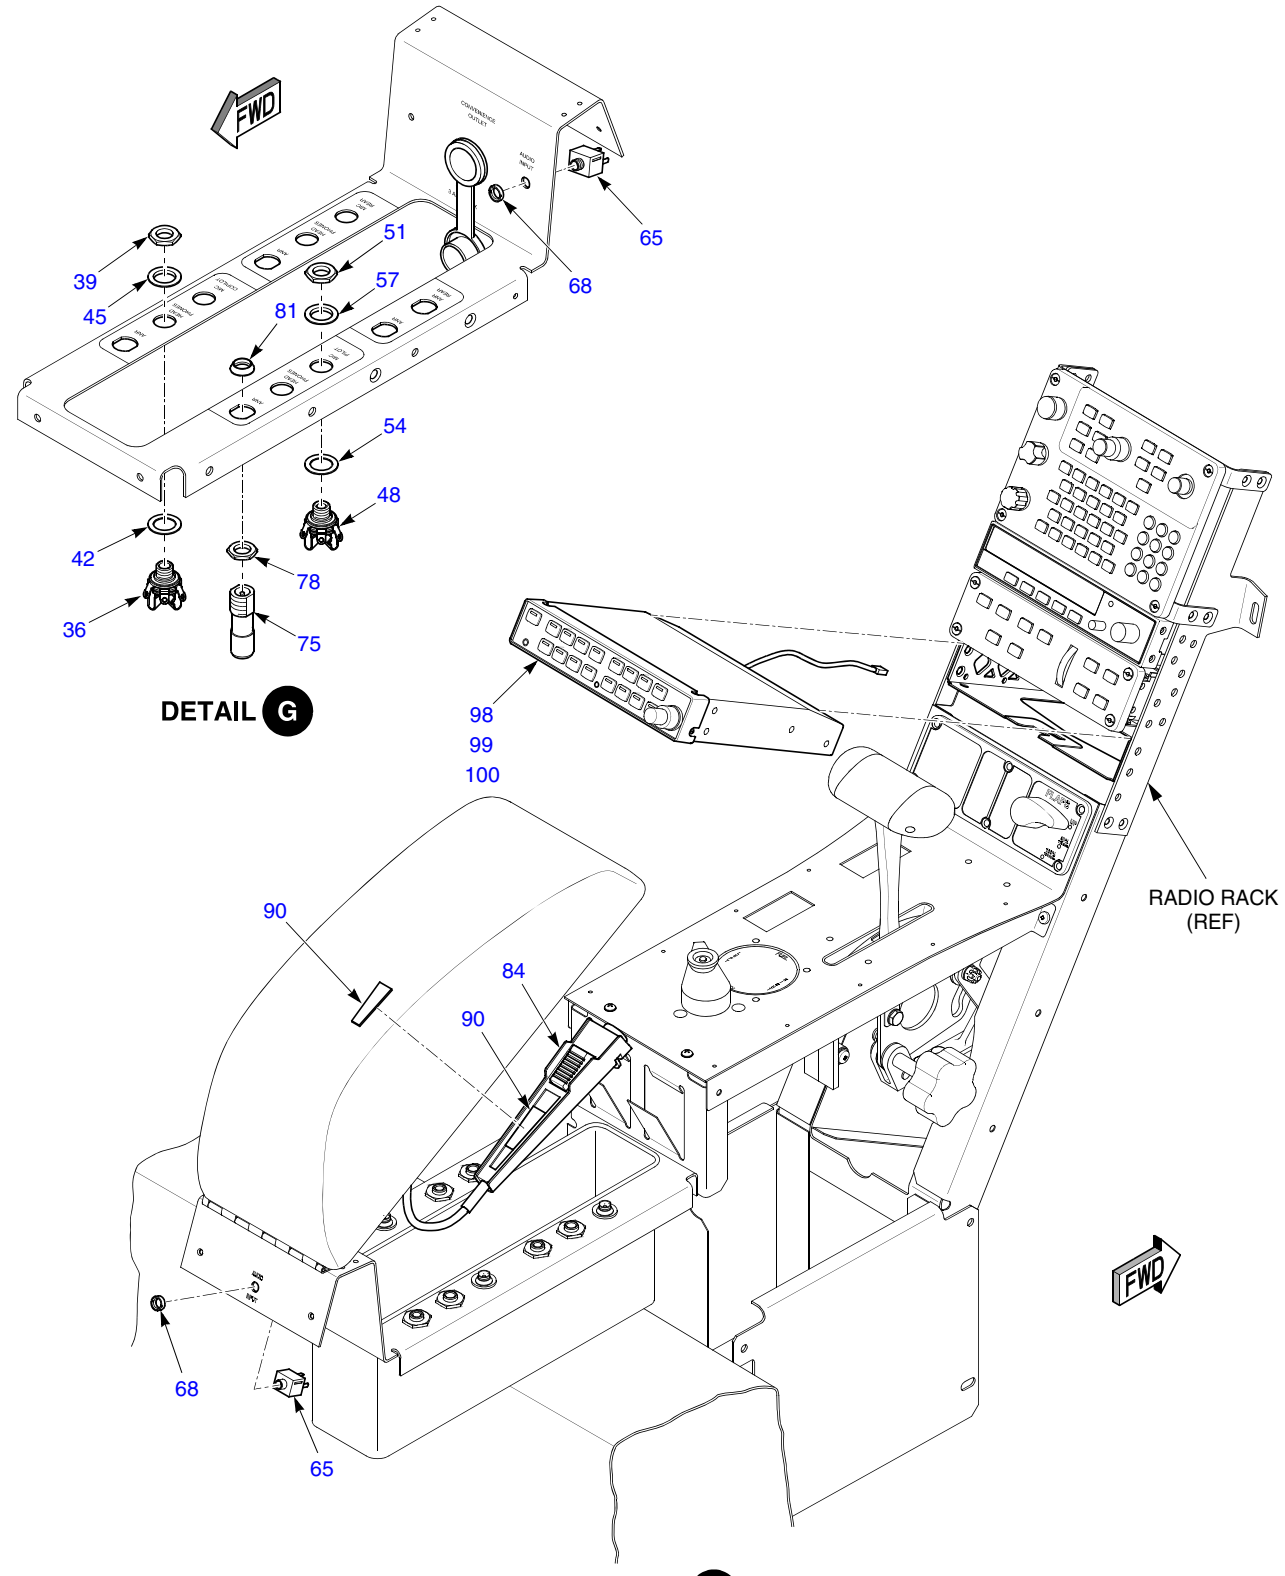

Serials 22-3828 & subs, 22T-0268 & subs.

SR22_PC23_2040

Figure-01

Audio Integration - Serials 22-3828 & subs w/ Perspective, 22T-0268 & subs (4 of 4)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		AUDIO INTEGRATION	0002 / 0001	/	NP
	3	12463-001			·SPEAKER	0002 / 0001	3852 / 0318	1
					FOR SPARES USE P/N 29569-001			
	4	29569-001			·SPEAKER	3853 / 0319	/	1
	6	MS51861-37		A	·SCREW	0002	0003	4
	9	50835-020		A	·SCREW	0004 / 0001	/	4
	12	AN970-3		A	·WASHER	0004	0820	4
	13	NAS1149FN832P		A	·WASHER	0821 / 0001	/	4
	15	MS21044N08		A	·NUT	0004	0820	4
	16	MS21083N08		A	·NUT	0821 / 0001	/	4
	18	12570-001			··SPEAKER GRILL	0002 / 0001	/	1
	24	50457-001		A	··LOOP TAPE	0002	0003	AR
	27	50458-002		A	··HOOK TAPE	0002	0003	AR
	30	50759-001			··FOAM PAD	0004	0820	4
	31	20937-101			··SPACER	0821 / 0001	/	4
	33	60617-4			··SOCKET	0002 / 0001	/	1
	36	50297-001			·JACK, HEADPHONE	0002 / 0001	3827 / 0267	4
						3828 / 0268	/	3
	39	PRT OF ITM 36		A	·NUT	0002 / 0001	3827 / 0267	4
						3828 / 0268	/	3
	42	50327-001		A	·WASHER, FLAT, NYLON	0002 / 0001	3827 / 0267	4
						3828 / 0268	/	3
	45	50325-001		A	·WASHER, SHOULDER	0002 / 0001	3827 / 0267	4
						3828 / 0268	/	3
	48	50298-001			·JACK, MICROPHONE	0002 / 0001	3827 / 0267	4
						3828 / 0268	/	3
	51	PRT OF ITM 48		A	·NUT	0002 / 0001	3827 / 0267	4
						3828 / 0268	/	3
	54	50327-001		A	·WASHER, FLAT, NYLON	0002 / 0001	3827 / 0267	4
						3828 / 0268	/	3
	57	50325-001		A	·WASHER, SHOULDER	0002 / 0001	3827 / 0267	4
						3828 / 0268	/	3
-	60	50299-001			·JACK, STEREO	0002	1510	2
-	63	PRT OF ITM 60		A	·NUT	0002	1510	2
	64	50299-002			·JACK, STEREO	1511 / 0001	3744 / 0107	2
	65	53426-001			·JACK, STEREO	3745 / 0108	/	2
-	66	53422-001		A	·WASHER	3716 / 0075	3744 / 0107	2
	67	PRT OF ITM 64		A	·NUT	1511 / 0001	3744 / 0107	2
	68	PRT OF ITM 65		A	·NUT	3745 / 0108	/	2
	69	50296-002			·JACK, HEADSET, POWER	0002	0333	4
	70	PRT OF ITM 66			·NUT	0002	0333	4
	72	PRT OF ITM 66		A	·WASHER	0002	0333	4
	75	51208-002			·JACK, HEADSET, BOSE, W/O BASE INTERIOR SRV	0334 / 0001	3827 / 0267	4
						3828 / 0268	/	5
	78	PRT OF ITM 75		A	·NUT	0334 / 0001	3827 / 0267	4
						3828 / 0268	/	5
	81	PRT OF ITM 75		A	·FRONT NUT	0334 / 0001	3827 / 0267	4
						3828 / 0268	/	5
	84	50533-001			·MICROPHONE	0002 / 0001	/	1
					ALTERNATE FOR P/N 50533-002			
-	87	50533-002			·MICROPHONE	0002 / 0001	/	1
					ALTERNATE FOR P/N 50533-001			
	90	50494-001		A	·DUAL LOCK	0002 / 0001	/	AR
	93	12717-001			·GMA 340, AUDIO PANEL W/O PERSPECTIVE AVIONICS	0002		1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	96	24656-002			·GMA 347, AUDIO PANEL W/ PERSPECTIVE AVIONICS	3026	3344	1
	97	24656-003			·GMA 347, AUDIO PANEL W/ PERSPECTIVE AVIONICS	3345 / 0001	3827 / 0267	1
	98	29396-001			·GMA 350, AUDIO PANEL W/ PERSPECTIVE AVIONICS	3828 / 0268	/	1
	99	29396-003	@		·GMA 350, AUDIO PANEL W/ PERSPECTIVE AVIONICS			1
					ALTERNATE FOR P/N 29396-001			
	100	29396-002	#		·GMA 350C, AUDIO PANEL	4300 / 1233	/	1
	101	51842-002			·JACK, STEREO	3026 / 0001	3827 / 0267	1
	102	PRT OF ITM 101			·NUT	3026 / 0001	3827 / 0267	1

SYMBOL NOTES:

**	SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:
	1) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.
	2) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 FOR PART IDENTIFICATION.
	3) SERIAL NUMBER 22-3848; REFER TO 22-3853 FOR PART IDENTIFICATION.
	4) SERIAL NUMBER 22T-0312, 22T-0317; REFER TO 22T-0319 FOR PART IDENTIFICATION.
@	REQUIRES PERSPECTIVE AVIONICS SYSTEM SOFTWARE 0764.25 OR LATER
#	SERIALS W/ OPTIONAL INSTALLATION

EFFECTIVITY:
All

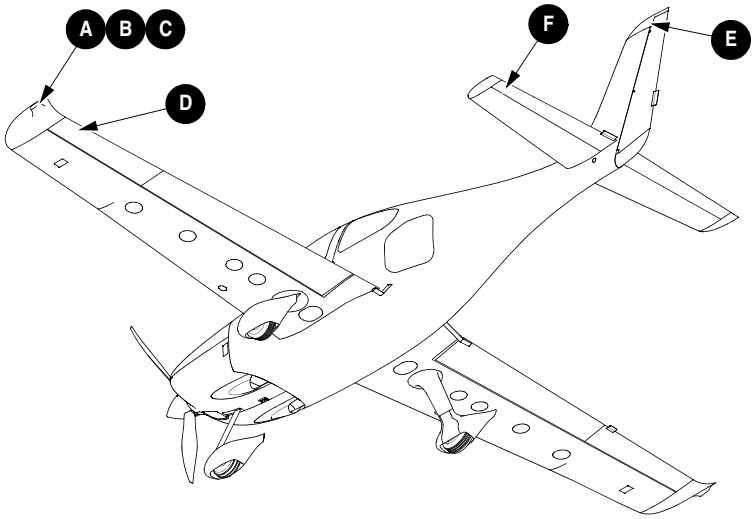

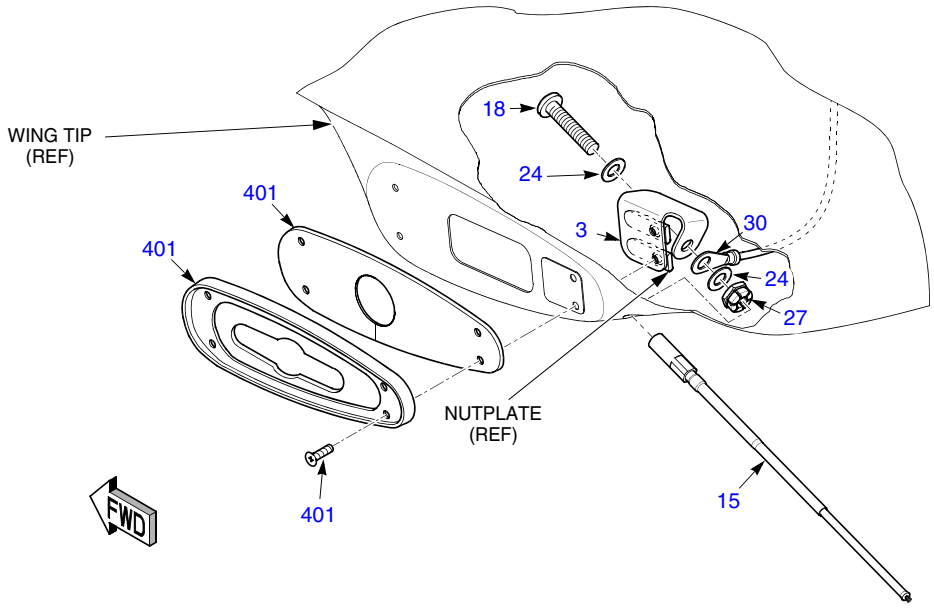

DETAIL A

SR22_PC23_2142A

Figure-01
Static Wick Installation (1 of 4)

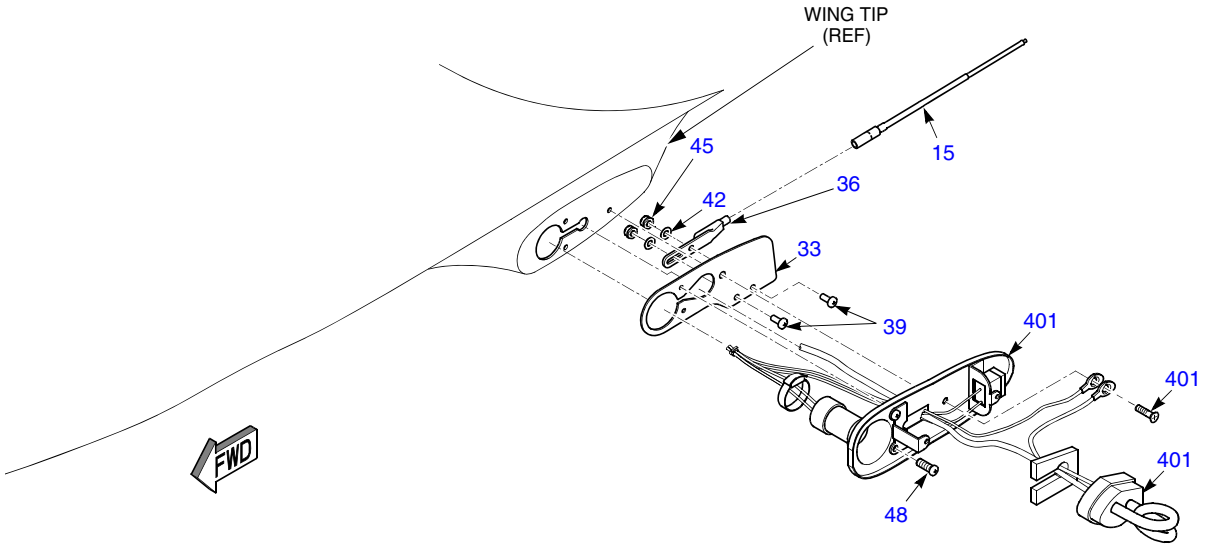

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419,
22-2421 thru 22-2437 before SB2X-33-03 and after SB2X-23-04.

DETAIL B

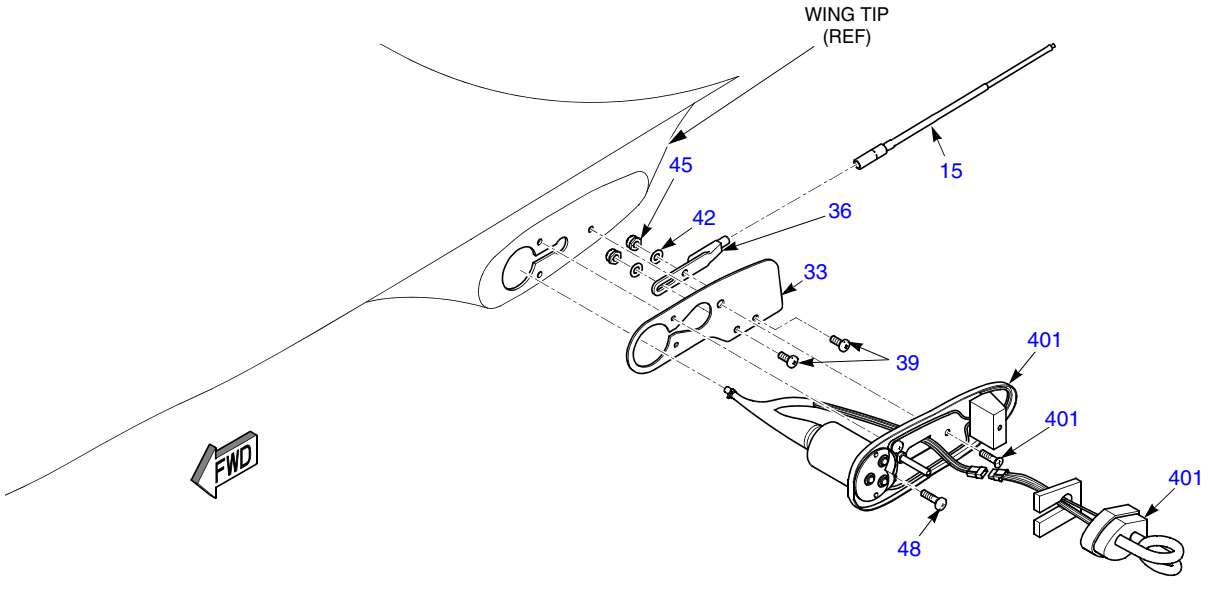

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419,
22-2421 thru 22-2437 after SB2X-33-03 and SB2X-23-04.

DETAIL C

SR22_PC23_2884

Figure-01
Static Wick Installation (2 of 4)

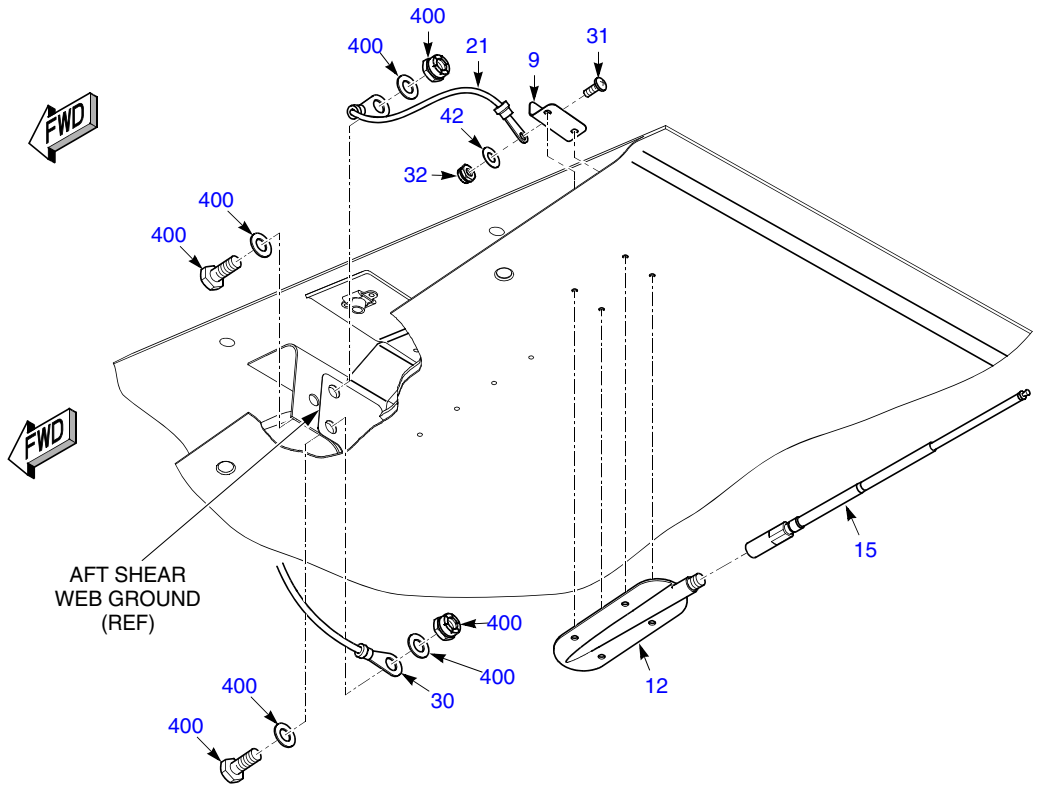

Serials 22-2334 thru 4100 after SB2X-23-03, 22-4101 & subs.

DETAIL D

SR22_PC23_2143

Figure-01
Static Wick Installation (3 of 4)

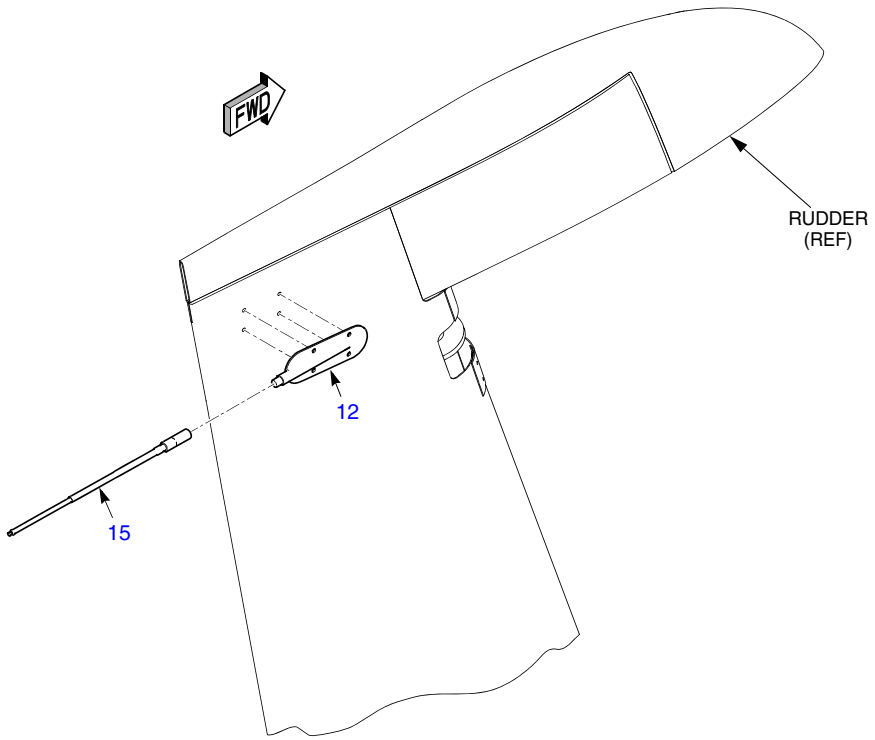

Serials 22-0002 thru 2437 after SB2X-23-04,
22-2334 thru 4100 after SB2X-23-03, 22-4101 & subs.

DETAIL E

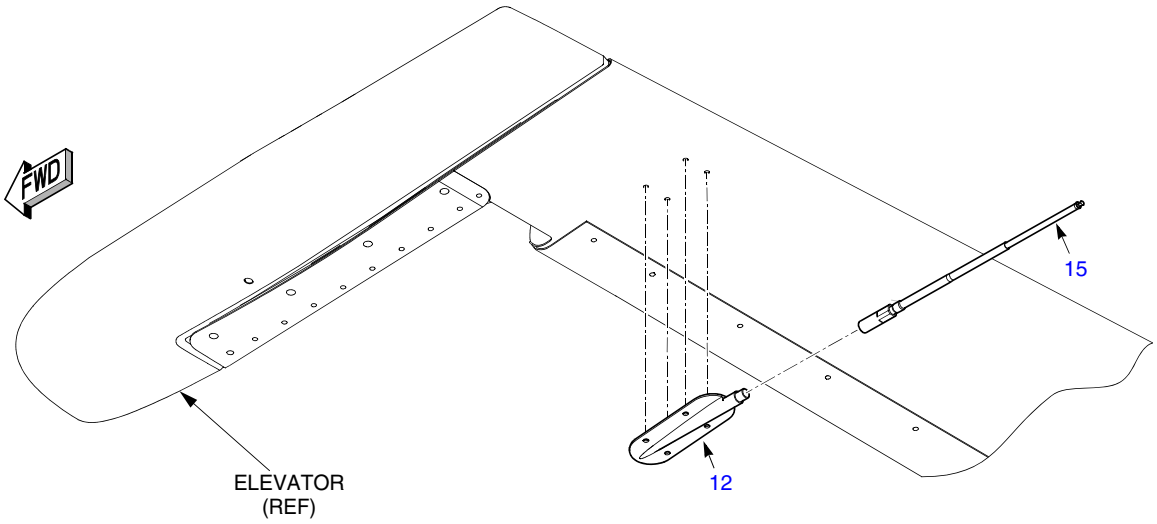

Serials 22-0002 thru 2437 after SB2X-23-04,
22-2334 thru 4100 after SB2X-23-03, 22-4101 & subs.

DETAIL F

SR22_PC23_2144

Figure-01
Static Wick Installation (4 of 4)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			P-STATIC WICKS	4097 / 0800	/	NP
	3	33361-001			·ASSEMBLY, BRACKET, WICK, LH	4097 / 0800	/	1
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
-	6	33361-002			·ASSEMBLY, BRACKET, WICK, RH	4097 / 0800	/	1
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	9	33351-001			·PLATE, BACKING, WICK	4097 / 0800	/	1
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	12	33265-001			·RETAINER, STATIC WICK	4097 / 0800	/	2
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	15	33266-001			·STATIC WICK, MICROPOINT	4097 / 0800	/	4
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	18	MS35207-284		A	·SCREW, MACHINE	4097 / 0800	/	2
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	21	33479-001			·WIRE, WIRE BONDING, ASSEMBLY	4097 / 0800	/	2
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	24	NAS1149F0432P		A	·WASHER	4097 / 0800	/	2
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	27	MS21044N4		A	·NUT, SELF LOCKING	4097 / 0800	/	1
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	30	33361-101			GROUND WIRE	4097 / 0800	/	1
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	31	MS35206-228		A	·SCREW, MACHINE	4097 / 0800	/	1
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	32	MS21044N06		A	·NUT, SELF LOCKING	4097 / 0800	/	1
					AFTER SB2X-23-03	2438 / 0001	4120 / 0860	
	33	34441-001			·PLATE, BACKING, STATIC WICK	0002	2437	1
					AFTER SB2X-23-04			
	36	34734-001			·RETAINER, STATIC WICK	0002	2437	1
					AFTER SB2X-23-04			
	39	MS27039-1-07		A	·SCREW, MACHINE, PAN-HEAD	0002	2437	2
					AFTER SB2X-23-04			
	42	NAS1149F0316P		A	·WASHER, FLAT	0002	2437	2
					AFTER SB2X-23-04			
	45	MS21044N3		A	·NUT, SELF LOCKING	0002	2437	2
					AFTER SB2X-23-04			
	48	MS35206-231		A	·SCREW, MACHINE, PAN-HEAD	0002	2437	2
					AFTER SB2X-23-04			
					REFERENCE ITEMS NOT PART OF ASSY/INSTL			
	400	RF 51-80-01			LIGHTNING PROTECTION			
	401	RF 33-40-02			ANTI-COLLISION LIGHT ASSEMBLY			

Intentionally Left Blank

CHAPTER 24

ELECTRICAL POWER

Intentionally Left Blank

CHAPTER 24 - ELECTRICAL POWER

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
24-LOEP	1	04 SEP 2018
24-LOEP	2	04 SEP 2018
24-TOC	1	04 SEP 2018
24-TOC	2	04 SEP 2018
24-30-01	1	15 DEC 2014
24-30-01	2	19 SEP 2017
24-30-01	3	19 SEP 2017
24-30-01	4	15 DEC 2014
24-30-02	1	15 DEC 2014
24-30-02	2	04 SEP 2018
24-30-02	3	19 SEP 2017
24-30-02	4	19 SEP 2017
24-30-03	1	15 DEC 2014
24-30-03	2	19 SEP 2017
24-30-03	3	19 SEP 2017
24-30-03	4	19 SEP 2017
24-30-03	5	19 SEP 2017
24-30-03	6	15 DEC 2014
24-30-04	1	15 DEC 2014
24-30-04	2	19 SEP 2017
24-30-04	3	19 SEP 2017
24-30-04	4	19 SEP 2017
24-30-04	5	19 SEP 2017
24-30-04	6	15 DEC 2014
24-30-05	1	15 DEC 2014
24-30-05	2	15 DEC 2014
24-30-05	3	19 SEP 2017
24-30-05	4	19 SEP 2017
24-30-05	5	19 SEP 2017
24-30-05	6	19 SEP 2017
24-30-05	7	19 SEP 2017
24-30-05	8	19 SEP 2017
24-30-05	9	19 SEP 2017
24-30-05	10	19 SEP 2017
24-30-06	1	04 SEP 2018
24-30-06	2	19 SEP 2017
24-30-06	3	04 SEP 2018
24-30-06	4	04 SEP 2018
24-30-07	1	15 DEC 2014
24-30-07	2	19 SEP 2017

CHAPTER 24 - ELECTRICAL POWER

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
24-30-07	3	19 SEP 2017
24-30-07	4	19 SEP 2017
24-30-07	5	19 SEP 2017
24-30-07	6	15 DEC 2014
24-30-08	1	15 DEC 2014
24-30-08	2	15 DEC 2014
24-30-09	1	15 DEC 2014
24-30-09	2	15 DEC 2014
24-30-10	1	19 SEP 2017
24-30-10	2	19 SEP 2017
24-30-10	3	19 SEP 2017
24-30-10	4	19 SEP 2017
24-30-10	5	19 SEP 2017
24-30-10	6	15 DEC 2014
24-50-01	1	15 DEC 2014
24-50-01	2	15 DEC 2014
24-50-01	3	15 DEC 2014
24-50-01	4	15 DEC 2014
24-50-02	1	15 DEC 2014
24-50-02	2	15 DEC 2014
24-50-02	3	15 DEC 2014
24-50-02	4	15 DEC 2014
24-50-03	1	15 DEC 2014
24-50-03	2	15 DEC 2014
24-50-04	1	15 DEC 2014
24-50-04	2	15 DEC 2014
24-50-04	3	15 DEC 2014
24-50-04	4	15 DEC 2014
24-50-05	1	01 JAN 2016
24-50-05	2	01 JAN 2016
24-50-06	1	19 SEP 2017
24-50-06	2	19 SEP 2017

EFFECTIVITY:
All

CHAPTER 24 - ELECTRICAL POWER

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Alternator 1 - Serials 22-0002 thru 22-2437 (1 of 2)	24-30-01
Alternator 1 - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	24-30-01
Alternator 2 - Serials 22-0002 & subs w/o Perspective (1 of 2)	24-30-02
Alternator 2 - Serials w/ Perspective (2 of 2)	24-30-02
MCU 100 - Serials 22-0098 thru 22-1469 (1 of 2)	24-30-03
MCU 100 - Serials 22-0098 thru 22-1469 (2 of 2)	24-30-03
MCU 120 - Serials 22-1470 thru 22-1662 (1 of 2)	24-30-04
MCU 120 - Serials 22-1470 thru 22-1662 (2 of 2)	24-30-04
MCU 130 - Serials 22-1663 & subs w/o Perspective (1 of 4)	24-30-05
MCU 130 - Serials 22-1663 & subs w/o Perspective (2 of 4)	24-30-05
MCU 130 - Serials 22-1663 thru 22-1927 (3 of 4)	24-30-05
MCU 130 - Serials 22-1928 & subs w/o Perspective (4 of 4)	24-30-05
MCU 140 - Serials w/ Perspective (1 of 2)	24-30-06
MCU 140 - Serials w/ Perspective (2 of 2)	24-30-06
Firewall Forward - Serials 22-0002 thru 22-1469 (1 of 3)	24-30-07
Firewall Forward - Serials 22-1470 & subs w/o Perspective (2 of 3)	24-30-07
Firewall Forward - Serials w/ Perspective (3 of 3)	24-30-07
Amp Meter and Select Switch - Serials 22-0002 thru 22-1662	24-30-08
Battery 1	24-30-09
Battery 2 - Serials 22-0002 thru 22-0820 (1 of 3)	24-30-10
Battery 2 - Serials 22-0821 & subs w/o Perspective (2 of 3)	24-30-10
Battery 2 - Serials w/ Perspective (3 of 3)	24-30-10
Convenience Power Circuit Card & Outlets (1 of 2)	24-50-01
Convenience Power Circuit Card & Outlets (2 of 2)	24-50-01
Circuit Breaker Panel - Serials w/o Perspective (1 of 2)	24-50-02
Circuit Breaker Panel - Serials w/ Perspective (2 of 2)	24-50-02
Bolster Panel - Switch - Serials 22-0002 thru 22-0138	24-50-03
Transient Voltage Suppressors - Serials w/o Perspective (1 of 2)	24-50-04
Transient Voltage Suppressors - Serials w/ Perspective (2 of 2)	24-50-04
Level Sensor Power Circuit Card - Serials 22-3849 thru 22-4214, 22T-0319 thru 22T-1058	24-50-05
Convenience System Controller - Serials 22-4300 & subs, 22T-1233 & subs	24-50-06

Intentionally Left Blank

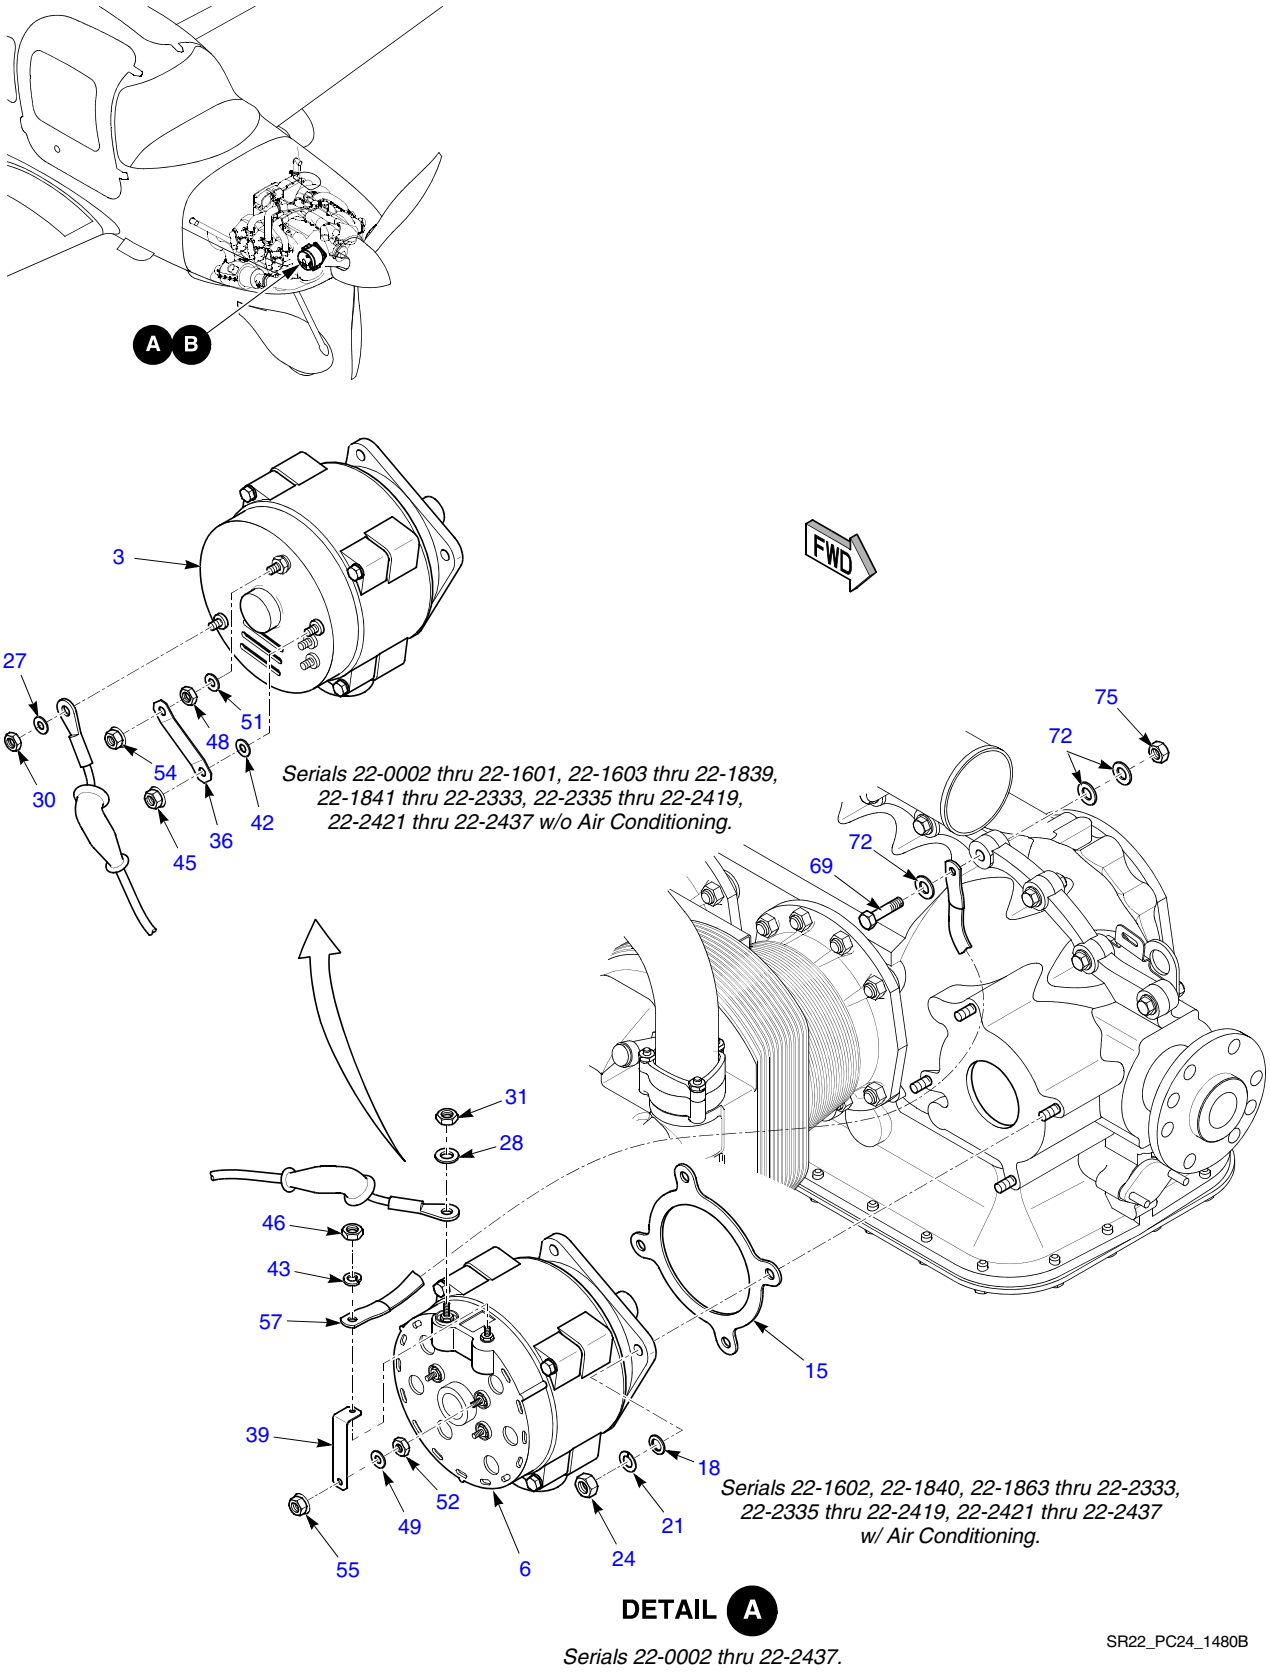

Figure-01

Alternator 1 - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

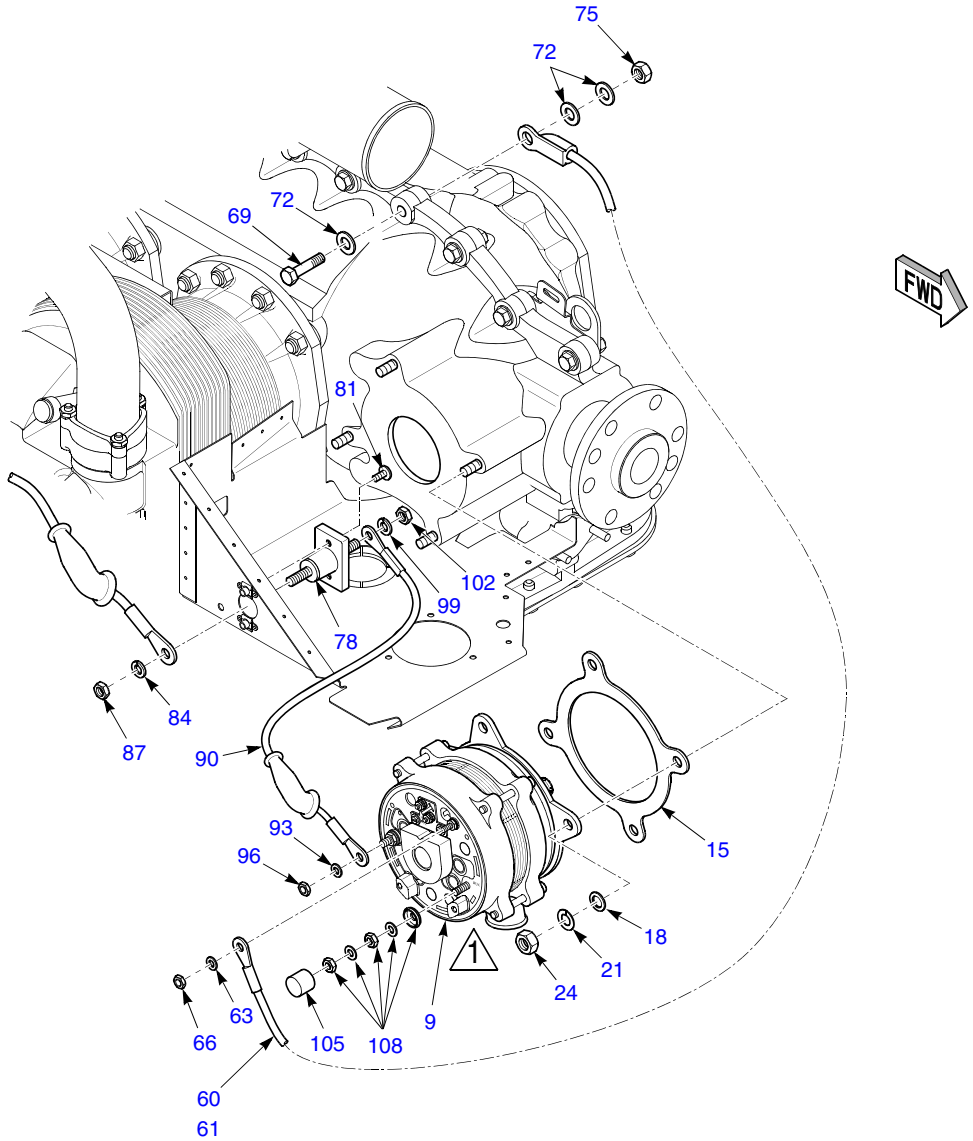

NOTE

1 Do not install cable shielding wire(s) to AUX power terminal.

DETAIL B

Serials 22-2438 & subs, 22T-0001 & subs.

SR22_PC24_1674B

Figure-01

Alternator 1 - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ALTERNATOR 1 INSTALLATION	0002 / 0001	/	NP
	3	PRT OF ENGINE	#		·ALTERNATOR 1 W/O AIR CONDITIONING	0002	2437	1
	6	PRT OF ENGINE	#		·ALTERNATOR 1 W/ AIR CONDITIONING	1863	2437	1
	9	PRT OF ENGINE	#?		·ALTERNATOR 1	2438 / 0001	/	1
	15	PRT OF ENGINE	#		·GASKET	0002 / 0001	/	1
	18	PRT OF ENGINE	#	A	·WASHER	0002 / 0001	/	4
	21	PRT OF ENGINE	#	A	·WASHER	0002 / 0001	/	4
	24	PRT OF ENGINE	#	A	·NUT	0002 / 0001	/	4
	27	PRT OF ITM 3			··WASHER	0002	2437	1
	28	PRT OF ITM 6			··WASHER	1863	2437	1
	30	PRT OF ITM 3			··NUT	0002	2437	1
	31	PRT OF ITM 6			··NUT	1863	2437	1
-	33	13464-101			··JUMPER WIRE	0002	0152	1
	36	14728-001			··BUS BAR W/O AIR CONDITIONING	0153	2437	1
	39	21312-014			··BUS BAR W/ AIR CONDITIONING	1863	2437	1
	42	PRT OF ITM 3		A	··WASHER	0002	2437	1
	43	PRT OF ITM 6		A	··WASHER	1863	2437	1
	45	PRT OF ITM 3		A	··NUT	0002	2437	1
	46	PRT OF ITM 6		A	··NUT	1863	2437	1
	48	PRT OF ITM 3		A	··WASHER	0002	2437	1
	49	PRT OF ITM 6		A	··WASHER	1863	2437	1
	51	PRT OF ITM 3		A	··NUT	0002	2437	1
	52	PRT OF ITM 6		A	··NUT	1863	2437	1
	54	PRT OF ITM 3		A	··NUT	0002	2437	1
	55	PRT OF ITM 6		A	··NUT	1863	2437	1
	57	17144-001			·GROUNDING STRAP	1863	2437	1
	60	17667-002			·GROUNDING STRAP	2438	2577	1
	61	17667-003			·GROUNDING STRAP	2578 / 0001	/	1
	63	PRT OF ITM 9		A	·WASHER	1863 / 0001	/	1
	66	PRT OF ITM 9		A	·NUT	1863 / 0001	/	1
	69	PRT OF ENGINE	#	A	·BOLT	1863 / 0001	/	1
	72	PRT OF ENGINE	#	A	·WASHER	1863 / 0001	/	3
	75	PRT OF ENGINE	#	A	·NUT	1863 / 0001	/	1
	78	51780-001			·POWER TERMINAL	2438 / 0001	/	1
	81	MS27039-1-07		A	·SCREW	2438 / 0001	/	2
	84	PRT OF ITM 78			··WASHER	2438 / 0001	/	1
	87	PRT OF ITM 78			··NUT	2438 / 0001	/	1
	90	16990-101			·POWER CABLE	2438 / 0001	/	1
	93	PRT OF ITM 9		A	·WASHER	2438 / 0001	/	1
	96	PRT OF ITM 9		A	·NUT	2438 / 0001	/	1
	99	PRT OF ITM 78		A	·WASHER	2438 / 0001	/	1
	102	PRT OF ITM 78		A	·NUT	2438 / 0001	/	1
	105	53878-001	?		·AUX TERMINAL CAP	2438 / 0001	/	1
	108	53879-001	?		·AUX TERMINAL CAP RETAINER	2438 / 0001	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-1602, 22-1840; REFER TO 22-1863 WITH AIR CONDITIONING FOR PART IDENTIFICATION.

2) SERIAL NUMBER 22-2334, 22-2420; REFER TO SERIAL 22-2438 FOR PART IDENTIFICATION.

\# REFER TO CONTINENTAL MOTORS IPC

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			?		IF REPLACING ALTERNATOR 1, ORDER REPLACEMENT AUX TERMINAL CAP.			

EFFECTIVITY:
All

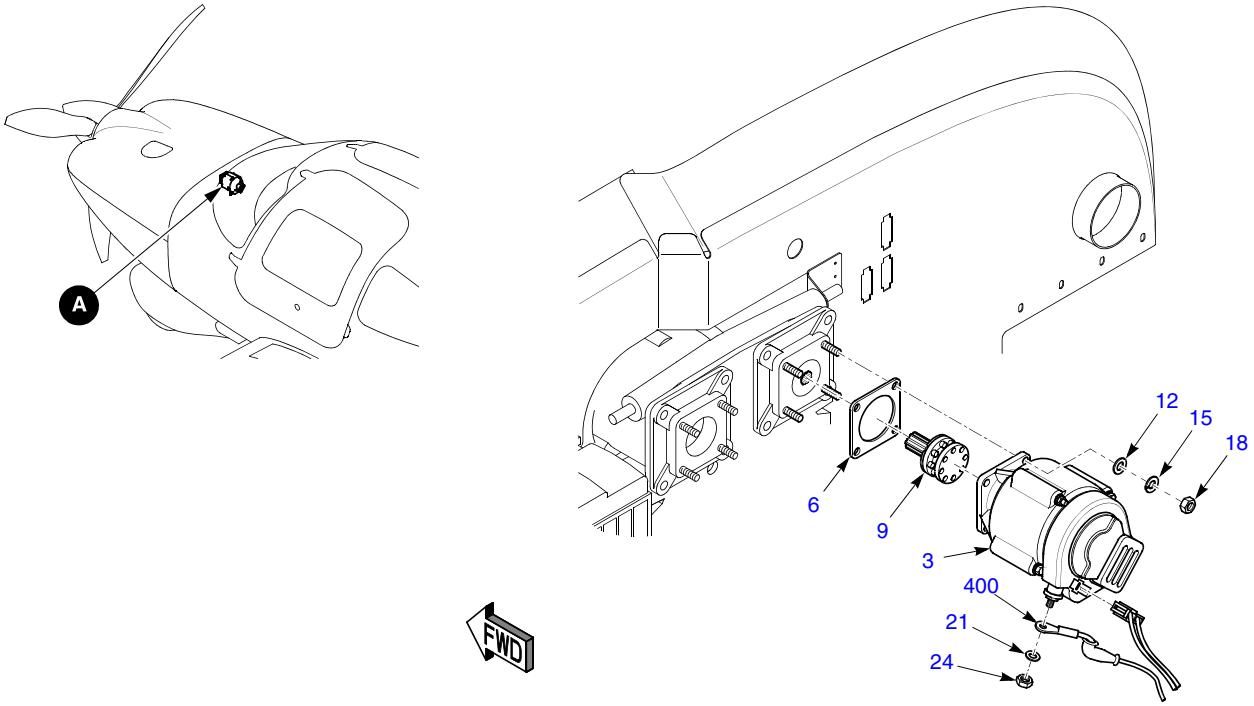

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

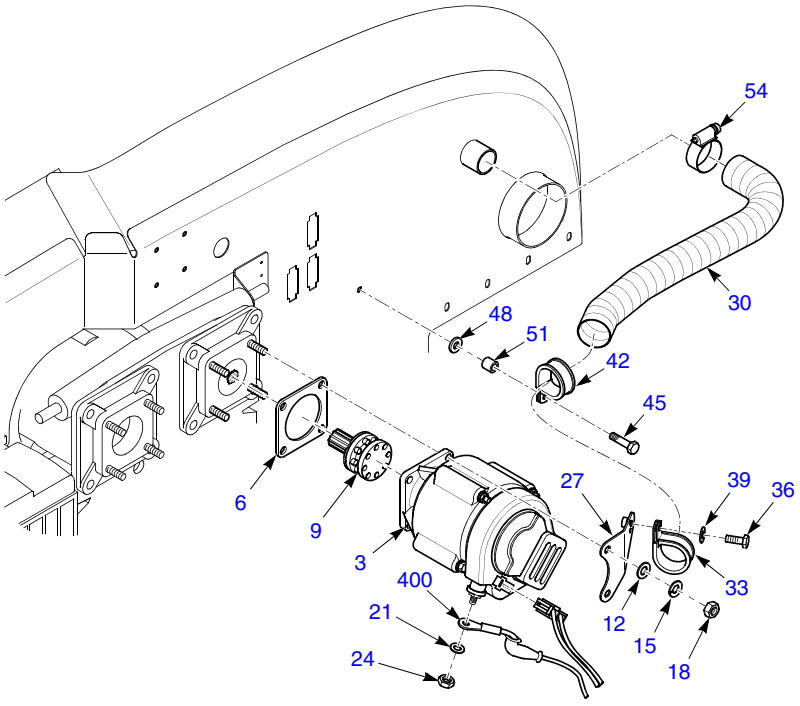

Serials 22-1602, 22-1821, 22-1840, 22-1863 & subs w/o Perspective Avionics.

DETAIL A

Serials 22-0002 & subs w/o Perspective Avionics.

SR22_PC24_1481B

Figure-02

Alternator 2 - Serials 22-0002 & subs w/o Perspective (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

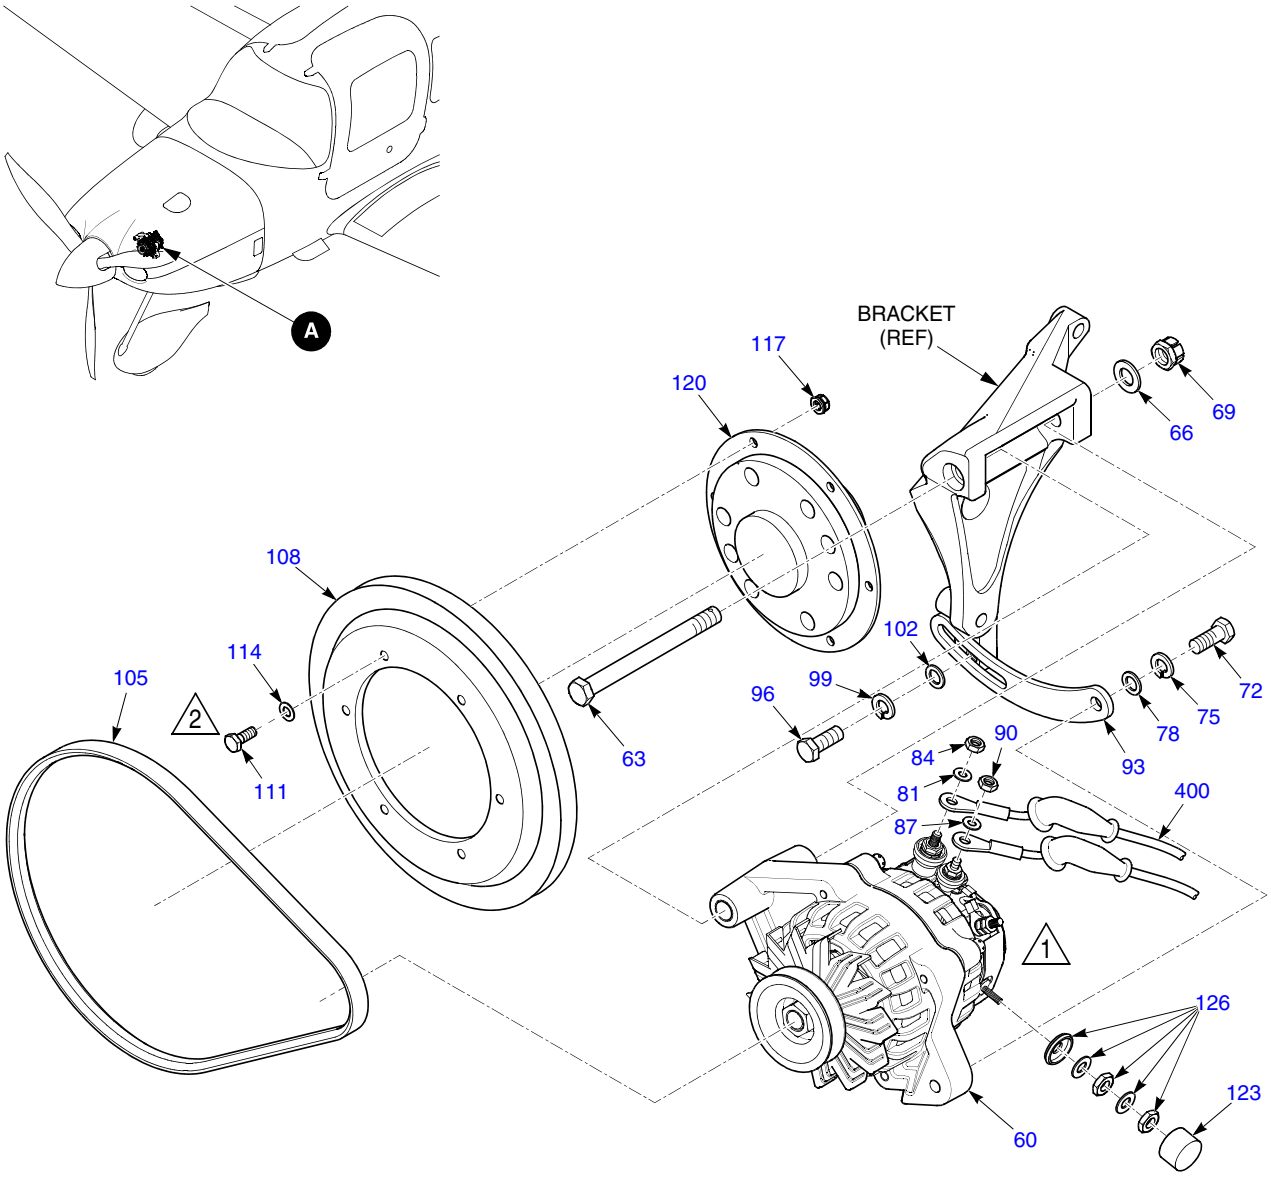

NOTE

1 Do not install cable shielding wire(s) to AUX power terminal.

2 Optionally, hardware may be installed such that bolt head is assembled to aft surface of sheave adapter.

DETAIL A

Serials 22-3026 & subs w/ Perspective Avionics, 22T-0001 & subs.

SR22_PC24_1827B

Figure-02

Alternator 2 - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		ALTERNATOR 2 INSTALL W/O PERSPECTIVE AVIONICS	0002 / 0001	/	NP
-	2	NO PRT NUMBER			·ALTERNATOR 2 ASSY W/O PERSPECTIVE AVIONICS	0002		NP
	3	13565-001			··ALTERNATOR 2	0002		AR
	6	51052-001			··GASKET	0070		1
	9	13565-020			··SPLINE DRIVE ASSEMBLY	0002		1
	12	PRT OF ENGINE	#	A	··WASHER	1268		4
	15	PRT OF ENGINE	#	A	··WASHER	1268		4
	18	PRT OF ENGINE	#	A	··NUT	1268		4
	21	PRT OF ITM 3		A	···WASHER	0002		1
	24	PRT OF ITM 3		A	···NUT	0002		1
	27	21579-001			··BRACKET, BLAST TUBE, ALTERNATOR	1863		1
	30	15460-101			··TUBE, BLAST	1863		1
	33	MS21919WDG17			··CLAMP, ADEL	1863		1
	36	AN3-4A		A	··BOLT	1863		1
	39	NAS1149F0332P		A	··WASHER	1863		1
	42	MS21919WDG17			··CLAMP, ADEL	1863		1
	45	AN3-6A		A	··BOLT	1863		1
	48	NAS1149F0332P		A	··WASHER	1863		1
	51	NAS43DD3-20FC		A	··SPACER	1863		1
	54	50743-101			··CLAMP, HOSE	1863		1
-	57	NO PRT NUMBER			·ALTERNATOR 2 ASSY W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	60	PRT OF ENGINE	#?		··ALTERNATOR 2	3026 / 0001	/	1
					ALTERNATE FOR P/N ES-7024-14			
-	61	PRT OF ENGINE	#?		··ALTERNATOR 2	3026 / 0001	/	1
					ALTERNATE FOR P/N 657199			
	63	AN7C45A		A	··BOLT	3026 / 0001	/	1
	66	AN960C716		A	··WASHER	3026 / 0001	/	1
	69	MS21045C7		A	··NUT	3026 / 0001	/	1
	72	MS35307-361		A	··BOLT	3026 / 0001	/	1
	75	MS35338-141		A	··WASHER	3026 / 0001	/	1
	78	AN960C616L		A	··WASHER	3026 / 0001	/	1
	81	PRT OF ITM 60		A	···WASHER	3026 / 0001	/	1
	84	PRT OF ITM 60		A	···NUT	3026 / 0001	/	1
	87	PRT OF ITM 60		A	···WASHER	3026 / 0001	/	1
	90	PRT OF ITM 60		A	···NUT	3026 / 0001	/	1
	93	PRT OF ENGINE	#		··BRACE	3026 / 0001	/	1
	96	AN6C7		A	··BOLT	3026 / 0001	/	1
	99	MS35338-141		A	··WASHER	3026 / 0001	/	1
	102	AN960C616L		A	··WASHER	3026 / 0001	/	1
	105	PRT OF ENGINE	#		··BELT	3026 / 0001	/	1
	108	PRT OF ENGINE	#		··DRIVE SHEATH	3026 / 0001	/	1
	111	AN4-5A		A	··SCREW	3026 / 0001	/	6
	114	AN960-416L		A	··WASHER	3026 / 0001	/	6
	117	MS21083N4		A	··NUT	3026 / 0001	/	6
	120	PRT OF ENGINE	#		··SHEAVE ADAPTER	3026 / 0001	/	2
	123	53878-001	?		·AUX TERMINAL CAP	3026 / 0001	/	1
	126	53879-001	?		·AUX TERMINAL CAP RETAINER	3026 / 0001	/	1
					REFERENCE ITEMS NOT PART OF ASSY/INSTL			
	400	RF 24-30-03			ALTERNATOR CABLE			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
			#		REFER TO CONTINENTAL MOTORS IPC			
			?		IF REPLACING ALTERNATOR 1, ORDER REPLACEMENT AUX TERMINAL CAP.			

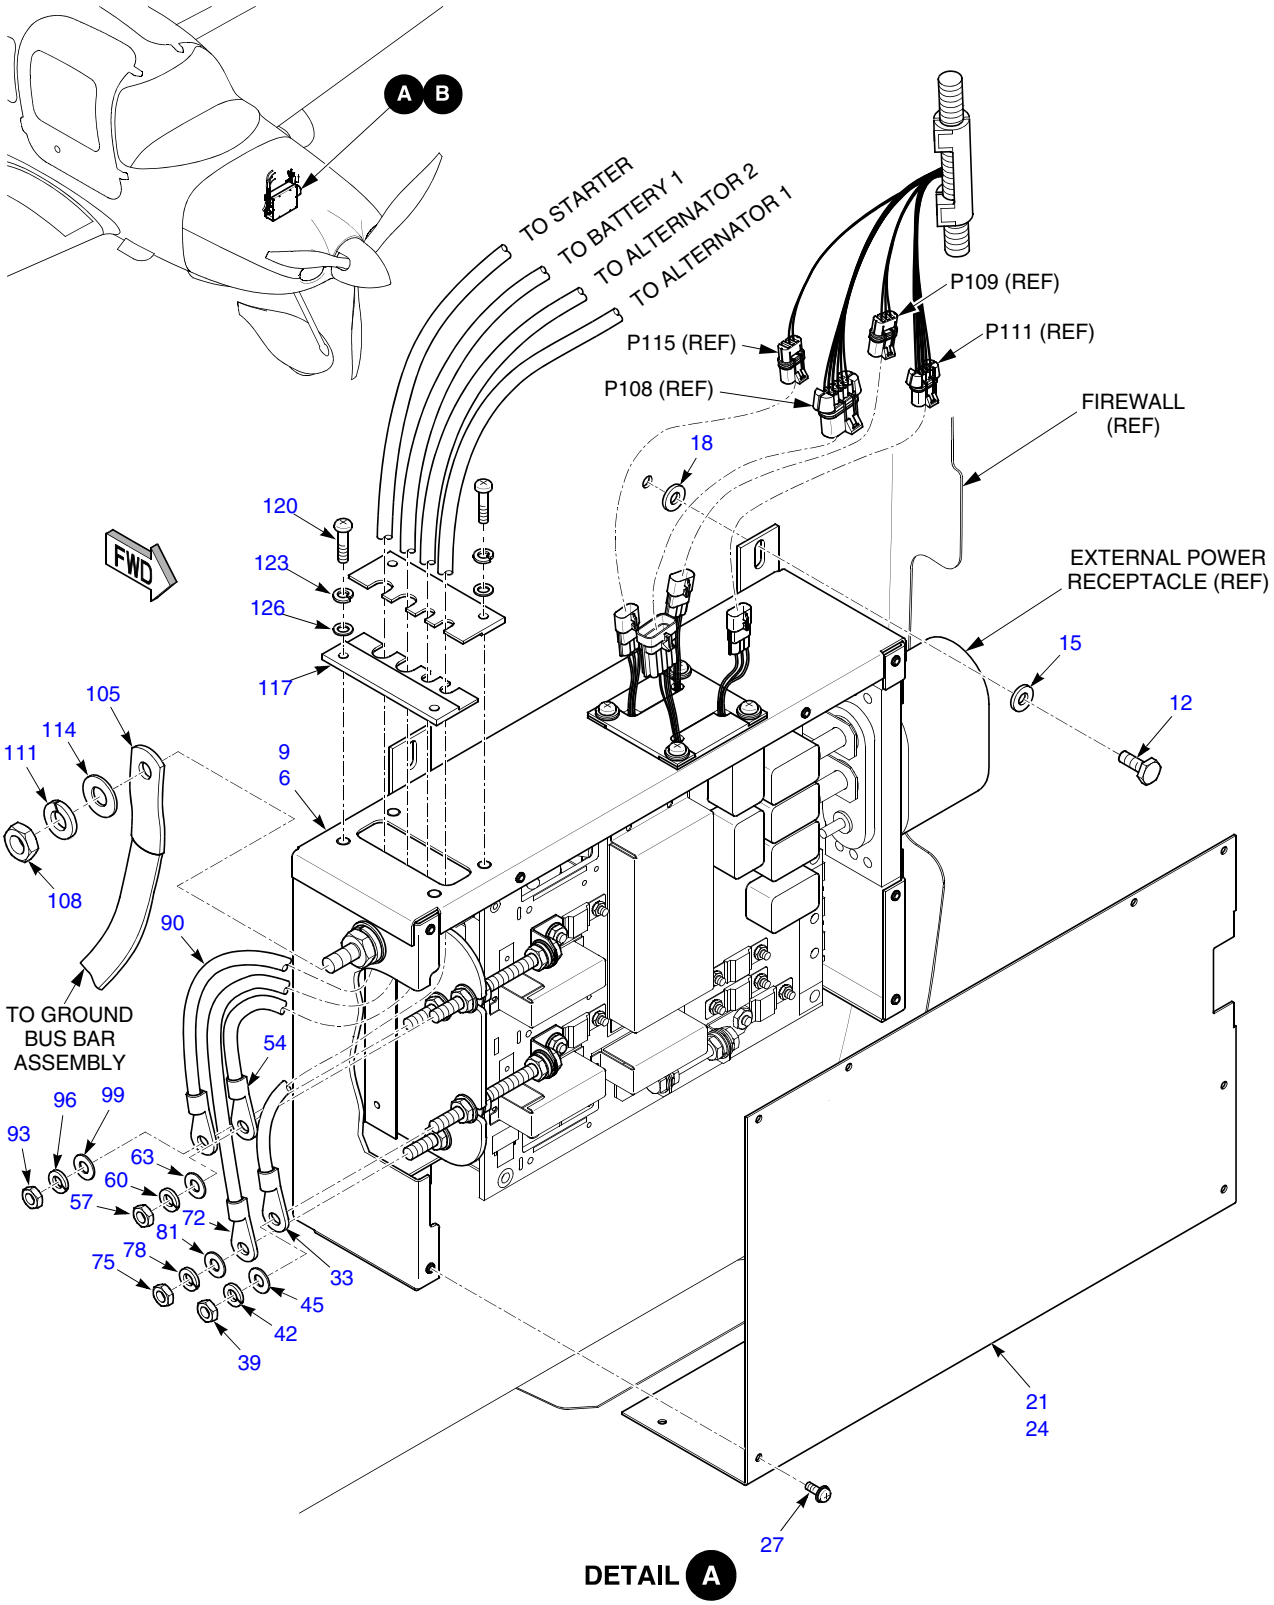

Serials 22-0098 thru 22-1469.

SR22_PC24_1474E

Figure-03

MCU 100 - Serials 22-0098 thru 22-1469 (1 of 2)

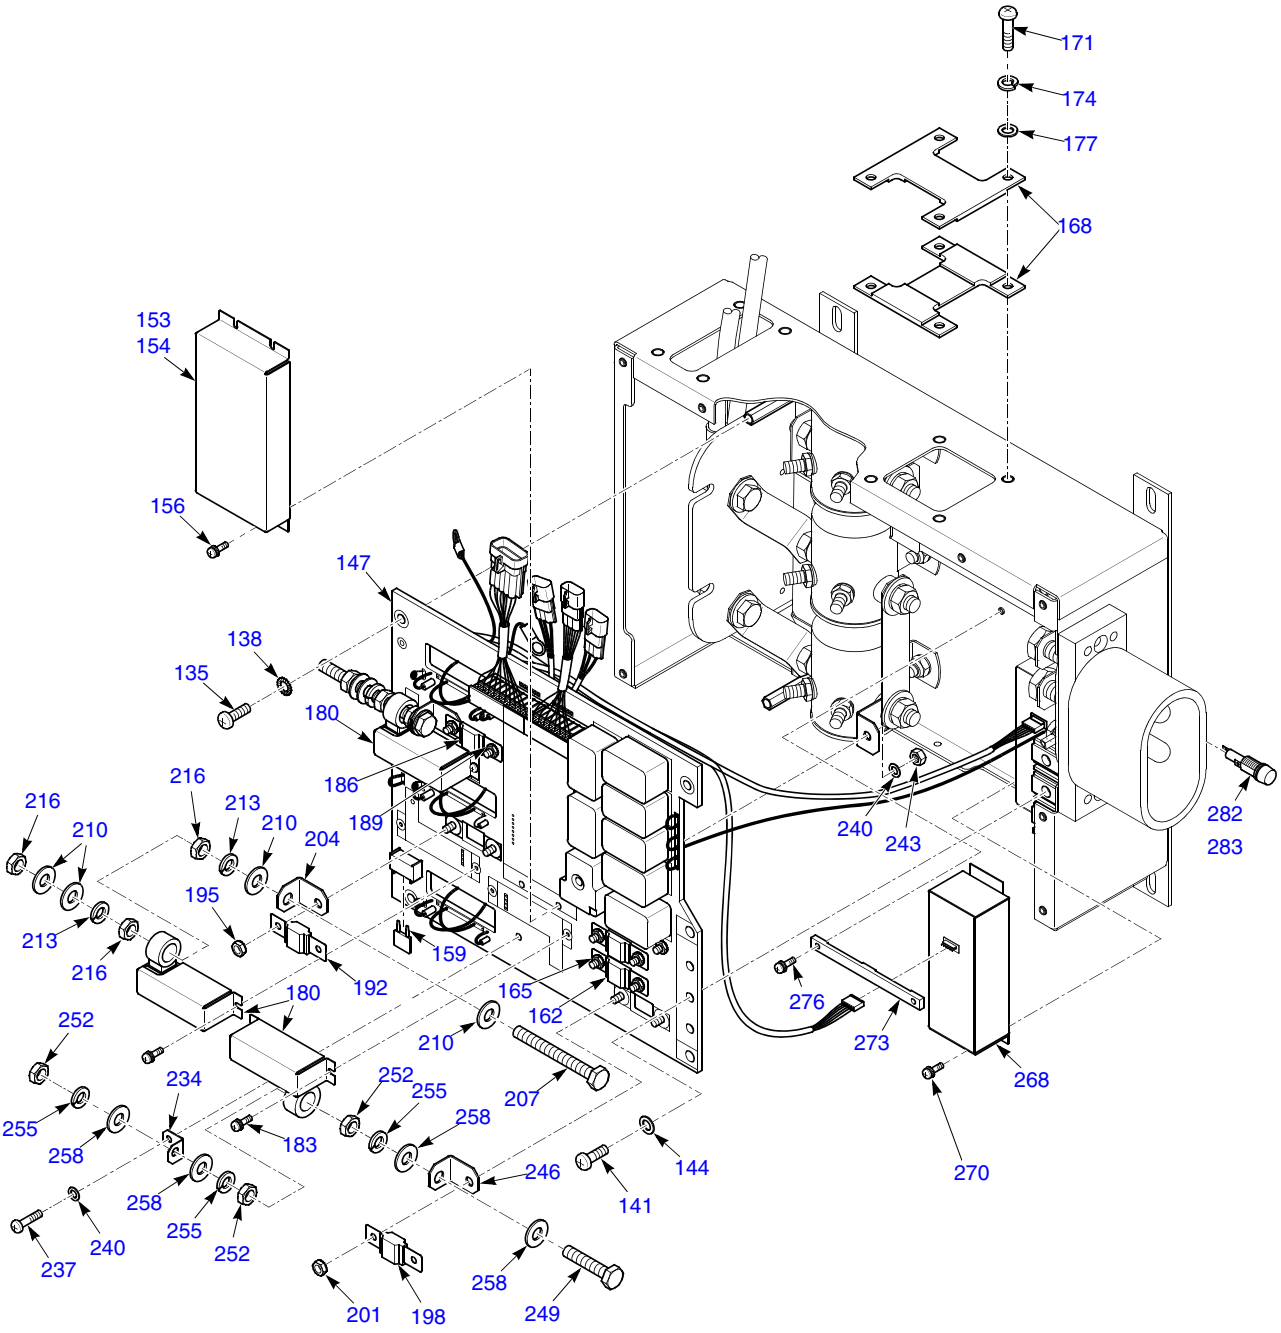

DETAIL B

Serials 22-0098 thru 22-1469.

SR22_PC24_1493D

Figure-03

MCU 100 - Serials 22-0098 thru 22-1469 (2 of 2)

EFFECTIVITY:
Serials 22-0098 thru 22-1469

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			MCU 100 INSTALLATION	0002	1469	NP
-	3	13470-001			·MCU 100	0002	0097	1
					FOR SPARES USE P/N 14600-002 OR 16600-001			
-	4	13470-011			·MCU 100			1
					AFTER SB2X-95-17	0002	0097	
					FOR SPARES USE P/N 14600-012 OR 16600-011			
	6	14600-001			·MCU 100	0098	0447	1
					FOR SPARES USE P/N 14600-002 OR 16600-001			
-	7	14600-011			·MCU 100			1
					AFTER SB2X-95-17	0098	0447	
					FOR SPARES USE P/N 14600-012 OR 16600-011			
	9	14600-002			·MCU 100	0448	1469	1
					FOR SPARES USE P/N 16600-001			
-	10	14600-012			·MCU 100			1
					AFTER SB2X-95-17	0002	0820	
					AFTER SB2X-95-18	0821	1469	
					ALTERNATE FOR P/N 16600-011			
-	11	16600-011			·MCU 120			1
					AFTER SB2X-95-17	0002	0820	
					AFTER SB2X-95-18	0821	1469	
					ALTERNATE FOR P/N 14600-012			
	12	AN3-4A		A	·BOLT	0002	1469	4
	15	NAS1149F0363P		A	·WASHER	0002	1469	4
	18	AN970-3		A	·WASHER	0002	1469	4
	21	14607-001			··COVER	0098	0447	1
	24	14607-002			··COVER	0448	1469	1
	27	51146-440		A	··PHIL-PAN SCREW	0098	1662	10
-	30	PRT OF ITM 3			·ALT 1 CABLE	0002	0097	1
	33	14606-001			·ALT 1 CABLE	0098	1469	1
	39	51125-020		A	·NUT	0098	1469	1
	42	51127-025		A	·LOCKWASHER	0098	1469	1
	45	51126-025		A	·WASHER	0098	1469	1
-	48	MS25171-2S			··COVER, ELECTRICAL	0002	1469	1
-	51	PRT OF ITM 3			·ALT 2 CABLE	0002	0097	1
	54	14606-010			·ALT 2 CABLE	0098	1469	1
	57	51125-020		A	·NUT	0098	1469	1
	60	51127-025		A	·LOCKWASHER	0098	1469	1
	63	51126-025		A	·WASHER	0098	1469	1
-	66	MS25171-2S			··COVER, ELECTRICAL	0002	1469	1
-	69	PRT OF ITM 3			·BAT CABLE	0002	0097	1
	72	14619-001			·BAT CABLE	0098	1469	1
	75	51124-018		A	·NUT	0098	1469	1
	78	51127-031		A	·LOCKWASHER	0098	1469	1
	81	51126-031		A	·WASHER	0098	1469	1
-	84	MS25171-4S			··COVER, ELECTRICAL	0002	1469	1
-	87	PRT OF ITM 3			·STARTER CABLE	0002	0097	1
	90	14619-010			·STARTER CABLE	0098	1469	1
	93	51124-018		A	·NUT	0098	1469	1
	96	51127-031		A	·LOCKWASHER	0098	1469	1
	99	51126-031		A	·WASHER	0098	1469	1
-	102	MS25171-4S			··COVER, ELECTRICAL	0002	1469	1
	105	13929-001			·GROUNDING STRAP	0002	1469	1
	108	51124-018		A	·NUT	0002	1469	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	111	51127-031		A	·LOCKWASHER	0002	1469	1
	114	51126-031		A	·WASHER	0002	1469	1
	117	14646-001			··CABLE GUIDE	0098	1469	2
	120	MS35207-263		A	··SCREW	0098	1469	4
	123	MS35338-43		A	··LOCKWASHER	0098	1469	4
	126	NAS1149F0332P		A	··WASHER	0098	1469	4
-	129	14602-001			··POWER BOARD ASSEMBLY	0098	0447	1
-	132	14602-002			··POWER BOARD ASSEMBLY	0448	1469	1
	135	MS35207-263		A	··MACHINE SCREW	0098	1469	3
	138	MS35335-32		A	··LOCKWASHER	0098	1469	3
	141	PRT OF DIODE		A	··SCREW	0098	1469	3
	144	PRT OF DIODE		A	··WASHER	0098	1469	3
	147	14609-001			···POWER BOARD	0098	1469	1
-	150	14610-001			···LOGIC MODULE	0098	0447	1
	153	14610-002			···LOGIC MODULE	0448	1469	1
					FOR SPARES USE P/N 14610-003			
	154	14610-003			···LOGIC MODULE	0448	1469	1
					FOR SPARES USE P/N 14610-004			
	156	51146-441		A	···PHIL-PAN SCREW	0098	1469	4
	159	51118-002			···FUSE, 2A, 32V, MINI ATO GRAY	0098	1469	1
	162	51136-050			···FUSE, 50A, 32V, MIDI-FUSE SERIES	0098	1469	2
	165	51147-032		A	···KEP-NUT	0098	1469	4
	168	14647-001			··CABLE GUIDE	0098	1469	2
	171	MS35207-263		A	··MACHINE SCREW	0098	1469	4
	174	MS35338-43		A	··LOCKWASHER	0098	1469	4
	177	NAS1149F0332P		A	··WASHER	0098	1469	4
	180	14604-001			··CURRENT SENSOR MODULE	0098	1469	3
	183	51146-441		A	··PHIL-PAN SCREW	0098	1469	6
	186	51136-040			··FUSE, 40A, 32V, MIDI FUSE SERIES	0098	1469	1
	189	51147-032		A	··KEP-NUT	0098	1469	2
	192	51136-080			··FUSE, 80A, 32V, MIDI FUSE SERIES	0098	1469	1
	195	51147-032		A	··KEP-NUT	0098	1469	2
	198	51136-100			··FUSE, 100A, 32V, MIDI FUSE SERIES	0098	1469	1
	201	51147-032		A	··KEP-NUT	0098	1469	2
	204	14659-001			··BUS BAR, IX A	0098	1469	1
	207	51123-300		A	··BOLT	0098	1469	1
	210	51126-025		A	··WASHER	0098	1469	4
	213	51127-025		A	··LOCKWASHER	0098	1469	2
	216	51125-020		A	··NUT	0098	1469	3
-	219	14659-001			··BUS BAR, IX B	0098	1469	1
-	222	51123-300		A	··BOLT	0098	1469	1
-	225	51126-025		A	··WASHER	0098	1469	4
-	228	51127-025		A	··LOCKWASHER	0098	1469	2
-	231	51125-020		A	··NUT	0098	1469	3
	234	14659-001			··BUS BAR, IX C	0098	1469	1
	237	51150-063		A	··MACHINE SCREW	0098	1469	1
	240	51126-019		A	··WASHER	0098	1469	2
	243	MS21083-B3		A	··NUT	0098	1469	1
	246	14660-001			··BUS BAR, X	0098	1469	1
	249	51123-200		A	··BOLT	0098	1469	1
	252	51125-020		A	··NUT	0098	1469	3
	255	51127-025		A	··LOCKWASHER	0098	1469	3
	258	51126-025		A	··WASHER	0098	1469	4
-	259	14605-001			··ALT 1 FIELD CONTROL MODULE	0098	1469	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 29435-002			
-	260	29435-001			··ALT 1 FIELD CONTROL MODULE	0098	1469	1
					FOR SPARES USE P/N 29435-002			
-	262	29435-002			··ALT 1 FIELD CONTROL MODULE	0098	1469	1
					ALTERNATE FOR P/N 14605-001, 29435-001			
-	264	51146-440		A	··PHIL-PAN SCREW	0098	1469	1
-	265	14605-010			··ALT 2 FIELD CONTROL MODULE	0098	1469	1
					FOR SPARES USE P/N 29434-003			
-	266	29434-001			··ALT 2 FIELD CONTROL MODULE	0098	1469	1
					FOR SPARES USE P/N 29434-003			
-	267	29434-002			··ALT 2 FIELD CONTROL MODULE	0098	1469	1
					FOR SPARES USE P/N 29434-003			
	268	29434-003			··ALT 2 FIELD CONTROL MODULE	0098	1469	1
					ALTERNATE FOR P/N 14605-010, 29434-001, 29434-002			
	270	51146-440		A	··PHIL-PAN SCREW	0098	1469	1
	273	14617-001		A	··FIELD CONTROL MODULE RETAINER	0098	1469	1
	276	51146-441		A	··PHIL-PAN SCREW	0098	1469	2
-	279	14603-104			···EXTERNAL FUSE HOLDER ASSEMBLY	0098	0447	1
	282	14708-104			···EXTERNAL FUSE HOLDER ASSEMBLY	0448	1469	1
	283	53668-002			···EXTERNAL FUSE HOLDER ASSEMBLY			1
					AFTER SB2X-95-17	0002	0820	
					AFTER SB2X-95-18	0821	1469	
-	285	51119-001			····FUSE, 5A, 250V, 3AG	0098	1469	1
-	286	53669-001			····FUSE, 5A, SLOW BLOW			1
					AFTER SB2X-95-17	0002	0820	
					AFTER SB2X-95-18	0821	1469	
-	288	PRT OF ITM 282		A	···NUT	0098	1469	1

Intentionally Left Blank

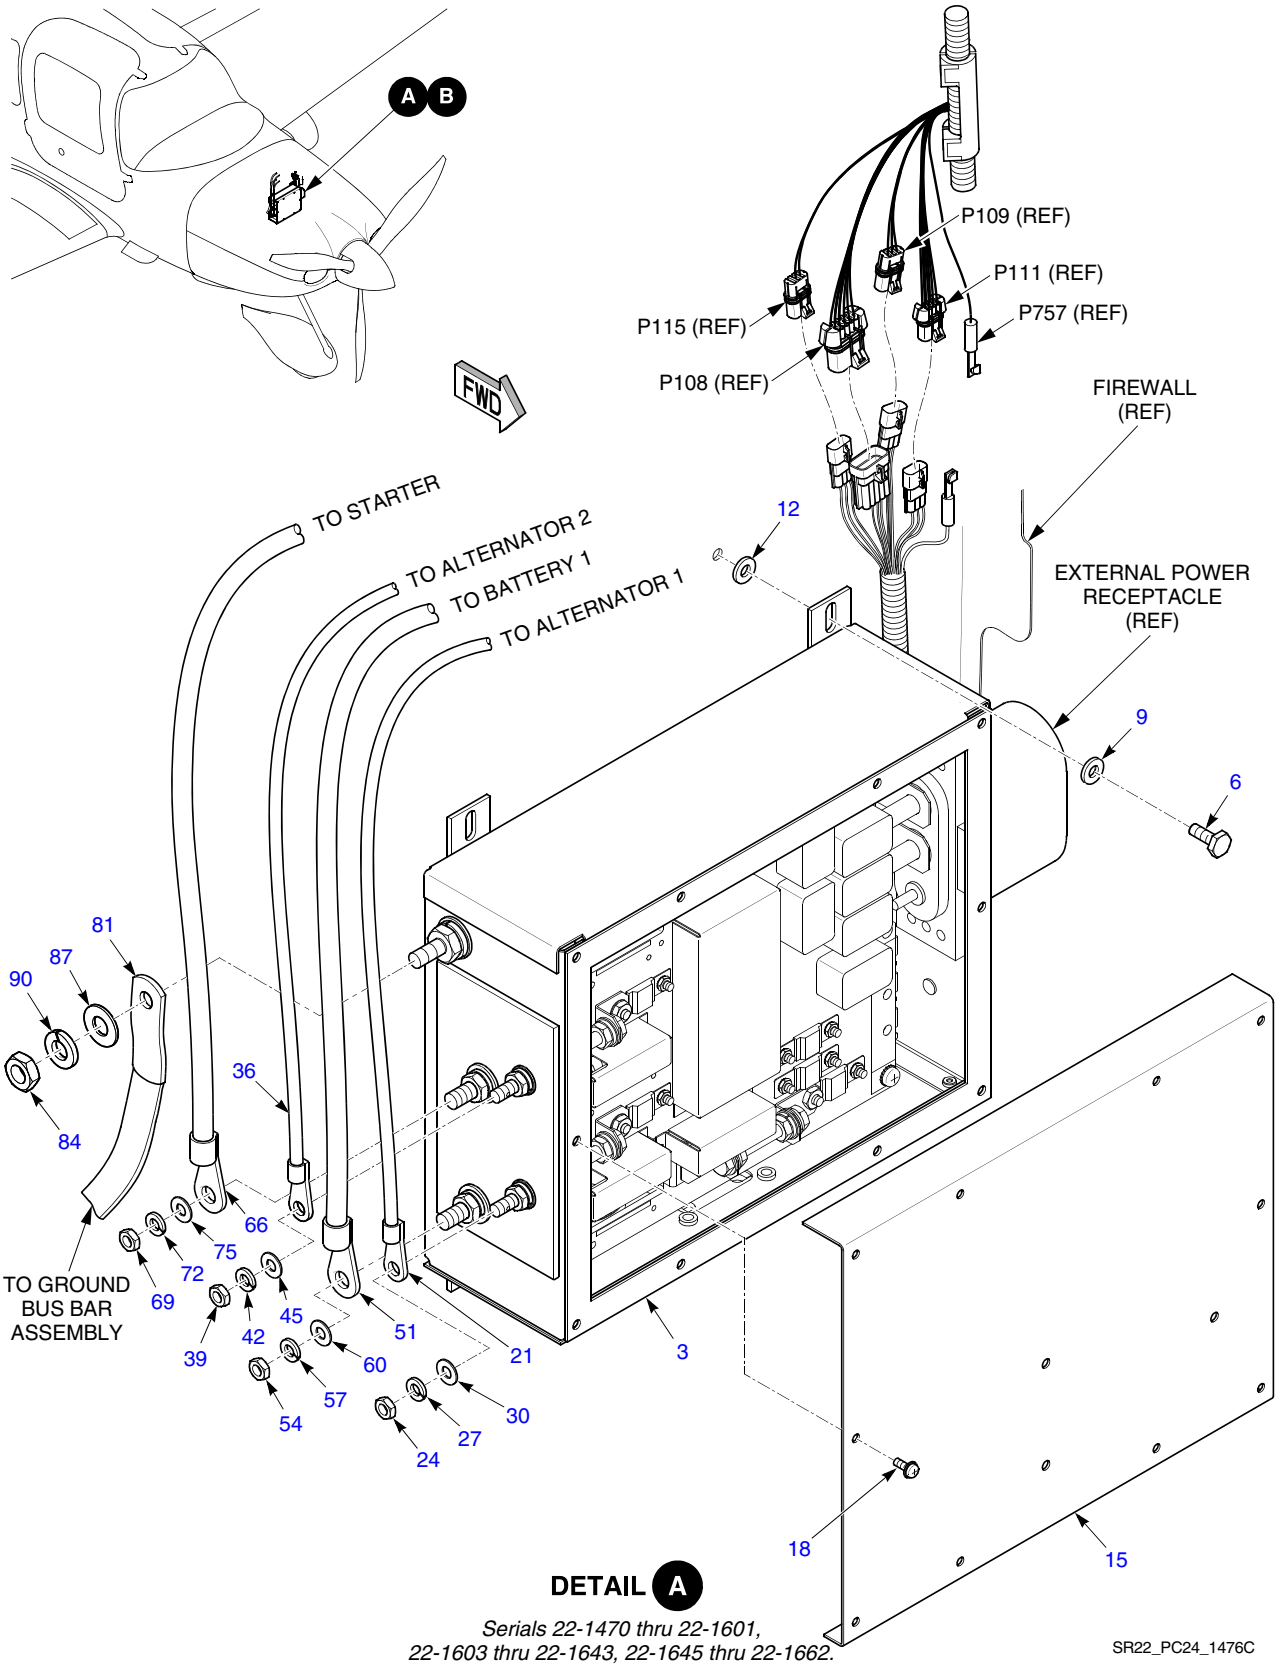

Figure-04

MCU 120 - Serials 22-1470 thru 22-1662 (1 of 2)

EFFECTIVITY:
Serials 22-1470 thru 22-1662

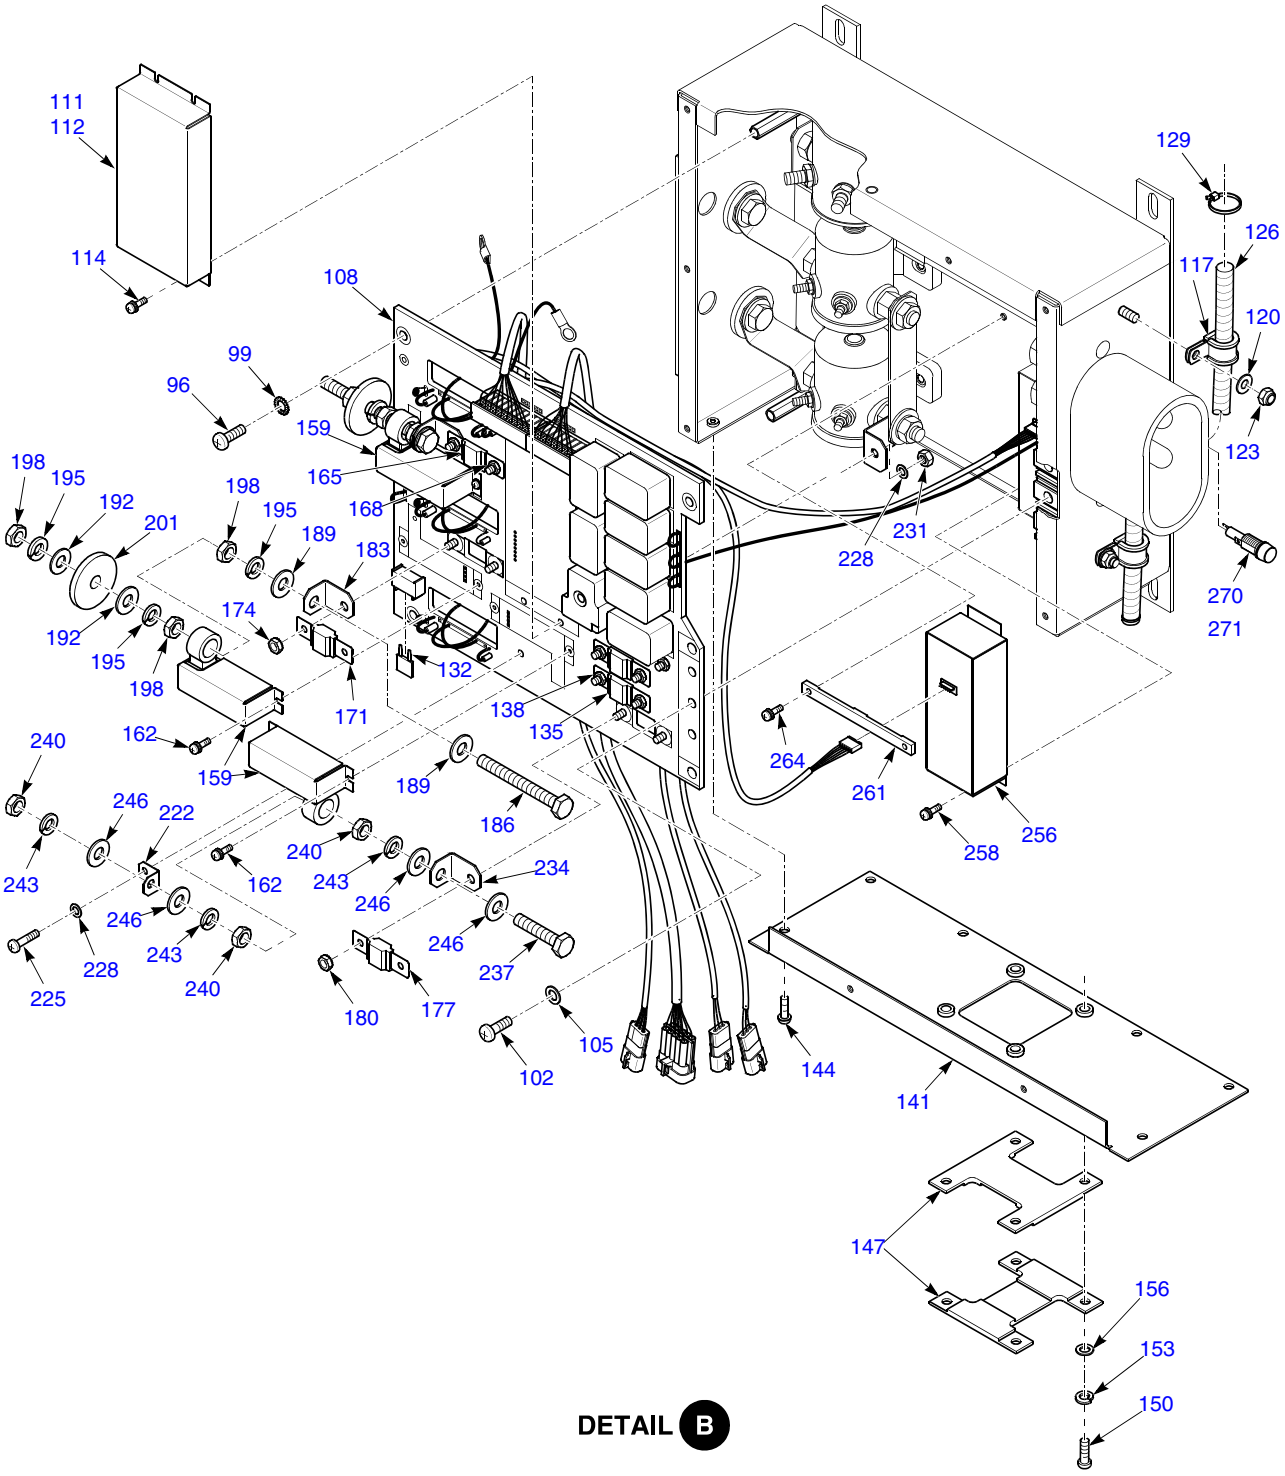

Serials 22-1470 thru 22-1601, 22-1603 thru 22-1643, 22-1645 thru 22-1662.

SR22_PC24_1495D

Figure-04

MCU 120 - Serials 22-1470 thru 22-1662 (2 of 2)

EFFECTIVITY:
Serials 22-1470 thru 22-1662

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04	**		MCU 120 INSTALLATION	1470	1662	NP
	3	16600-001			·MCU 120	1470	1662	1
-	4	16600-011			·MCU 120	1470	1662	1
					AFTER SB2X-95-18			
	6	AN3-4A		A	·BOLT	1470	1662	4
	9	NAS1149F0363P		A	·WASHER	1470	1662	4
	12	AN970-3		A	·WASHER	1470	1662	4
	15	16604-001			··COVER	1470	1662	1
	18	51146-440		A	··PHIL-PAN SCREW	1470	1662	10
	21	16615-001			·ALT 1 CABLE	1470	1662	1
	24	51125-020		A	·NUT	1470	1662	1
	27	51127-025		A	·LOCKWASHER	1470	1662	1
	30	51126-025		A	·WASHER	1470	1662	1
-	33	MS25171-2S			··COVER, ELECTRICAL	1470	1662	1
	36	16615-010			·ALT 2 CABLE	1470	1662	1
	39	51125-020		A	·NUT	1470	1662	1
	42	51127-025		A	·LOCKWASHER	1470	1662	1
	45	51126-025		A	·WASHER	1470	1662	1
-	48	MS25171-2S			··COVER, ELECTRICAL	1470	1662	1
	51	16615-020			·BAT CABLE	1470	1662	1
	54	51124-018		A	·NUT	1470	1662	1
	57	51127-031		A	·LOCKWASHER	1470	1662	1
	60	51126-031		A	·WASHER	1470	1662	1
-	63	MS25171-4S			··COVER, ELECTRICAL	1470	1662	1
	66	16615-030			·STARTER CABLE	1470	1662	1
	69	51124-018		A	·NUT	1470	1662	1
	72	51127-031		A	·LOCKWASHER	1470	1662	1
	75	51126-031		A	·WASHER	1470	1662	1
-	78	MS25171-4S			··COVER, ELECTRICAL	1470	1662	1
	81	13929-001			·GROUNDING STRAP	1470	1662	1
	84	51124-018		A	·NUT	1470	1662	1
	87	51127-031		A	·LOCKWASHER	1470	1662	1
	90	51126-031		A	·WASHER	1470	1662	1
-	93	16607-001			··POWER BOARD ASSEMBLY	1470	1662	1
	96	MS35207-263		A	··MACHINE SCREW	1470	1662	3
	99	MS35335-32		A	··LOCKWASHER	1470	1662	3
	102	PRT OF DIODE		A	··SCREW	1470	1662	3
	105	PRT OF DIODE		A	··WASHER	1470	1662	3
	108	14609-001			···POWER BOARD	1470	1662	1
	111	14610-002			···LOGIC MODULE	1470	1662	1
					FOR SPARES USE P/N 14610-003			
	112	14610-003			···LOGIC MODULE	1470	1662	1
					FOR SPARES USE P/N 14610-004			
	114	51146-441		A	···PHIL-PAN SCREW	1470	1662	4
	117	MS21919WDG10		A	···CLAMP	1470	1662	2
	120	NAS1149F0332P		A	···WASHER	1470	1662	2
	123	MS21042-3		A	···NUT	1470	1662	2
	126	50943-050		A	···LOOM	1470	1662	AR
	129	50964-015		A	···CABLE TIE	1470	1662	AR
	132	51118-002			···FUSE, 2A, 32V, MINI ATO GRAY	1470	1662	1
	135	51136-050			···FUSE, 50A, 32V, MIDI-FUSE SERIES	1470	1662	2
	138	51147-032		A	···KEP-NUT	1470	1662	4
	141	16609-001			··COVER, BOTTOM	1470	1662	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	144	51146-440		A	··PHIL-PAN SCREW	1470	1662	6
	147	14647-001			··CABLE GUIDE	1470	1662	2
	150	MS35207-263		A	··MACHINE SCREW	1470	1662	4
	153	MS35338-43		A	··LOCKWASHER	1470	1662	4
	156	NAS1149F0332P		A	··WASHER	1470	1662	4
	159	14604-001			··CURRENT SENSOR MODULE	1470	1662	3
	162	51146-441		A	··PHIL-PAN SCREW	1470	1662	6
	165	51136-040			··FUSE, 40A, 32V, MIDI FUSE SERIES	1470	1662	1
	168	51147-032		A	··KEP-NUT	1470	1662	2
	171	51136-100			··FUSE, 100A, 32V, MIDI FUSE SERIES	1470	1662	1
	174	51147-032		A	··KEP-NUT	1470	1662	2
	177	51136-125			··FUSE, 125A, 32V, MIDI FUSE SERIES	1470	1662	1
	180	51147-032		A	··KEP-NUT	1470	1662	2
	183	14659-001			··BUS BAR, IX A	1470	1662	1
	186	51123-300		A	··BOLT	1470	1662	1
	189	51126-025		A	··WASHER	1470	1662	2
	192	51592-001		A	··WASHER	1470	1662	2
	195	51127-025		A	··LOCKWASHER	1470	1662	3
	198	51125-020		A	··NUT	1470	1662	3
	201	21307-002		A	··SPACER	1470	1662	1
-	204	14659-001			··BUS BAR, IX B	1470	1662	1
-	207	51123-300		A	··BOLT	1470	1662	1
-	210	51126-025		A	··WASHER	1470	1662	4
-	213	51127-025		A	··LOCKWASHER	1470	1662	3
-	216	51125-020		A	··NUT	1470	1662	3
-	219	21307-002		A	··SPACER	1470	1662	1
	222	14659-001			··BUS BAR, IX C	1470	1662	1
	225	51150-063		A	··MACHINE SCREW	1470	1662	1
	228	51126-019		A	··WASHER	1470	1662	2
	231	MS21083-B3		A	··NUT	1470	1662	1
	234	14660-001			··BUS BAR, X	1470	1662	1
	237	51123-200		A	··BOLT	1470	1662	1
	240	51125-020		A	··NUT	1470	1662	3
	243	51127-025		A	··LOCKWASHER	1470	1662	3
	246	51126-025		A	··WASHER	1470	1662	4
-	248	14605-001			··ALT 1 FIELD CONTROL MODULE	1470	1662	1
					FOR SPARES USE P/N 29435-002			
-	249	29435-001			··ALT 1 FIELD CONTROL MODULE	1470	1662	1
					FOR SPARES USE P/N 29435-002			
-	250	29435-002			··ALT 1 FIELD CONTROL MODULE	1470	1662	1
					ALTERNATE FOR P/N 14605-001, 29435-001			
-	251	51146-440		A	··PHIL-PAN SCREW	1470	1662	1
-	252	14605-010			··ALT 2 FIELD CONTROL MODULE	1470	1662	1
					FOR SPARES USE P/N 29434-003			
-	253	29434-001			··ALT 2 FIELD CONTROL MODULE	1470	1662	1
					FOR SPARES USE P/N 29434-003			
-	254	29434-002			··ALT 2 FIELD CONTROL MODULE	1470	1662	1
					FOR SPARES USE P/N 29434-003			
	256	29434-003			··ALT 2 FIELD CONTROL MODULE	1470	1662	1
					ALTERNATE FOR P/N 14605-010, 29434-001, 29434-002			
	258	51146-440		A	··PHIL-PAN SCREW	1470	1662	1
	261	21313-001		A	··FIELD CONTROL MODULE RETAINER	1470	1662	1
	264	51146-441		A	··PHIL-PAN SCREW	1470	1662	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	267	14708-104			···EXTERNAL FUSE HOLDER ASSEMBLY	1470	1469	1
	270	16470-004			···EXTERNAL FUSE HOLDER ASSEMBLY	1470	1662	1
	271	53668-002			···EXTERNAL FUSE HOLDER ASSEMBLY	1470	1662	1
					AFTER SB2X-95-18			
-	273	51119-001			····FUSE, 5A, 250V, 3AG	1470	1662	1
-	274	53669-001			····FUSE, 5A, SLOW BLOW	1470	1662	1
					AFTER SB2X-95-18			
-	276	PRT OF ITM 270		A	···NUT	1470	1662	1
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING: SERIAL NUMBER 22-1602, 22-1644; REFER TO 24-30-05 (MCU 130 INSTALLATION) FOR PART IDENTIFICATION.			

Intentionally Left Blank

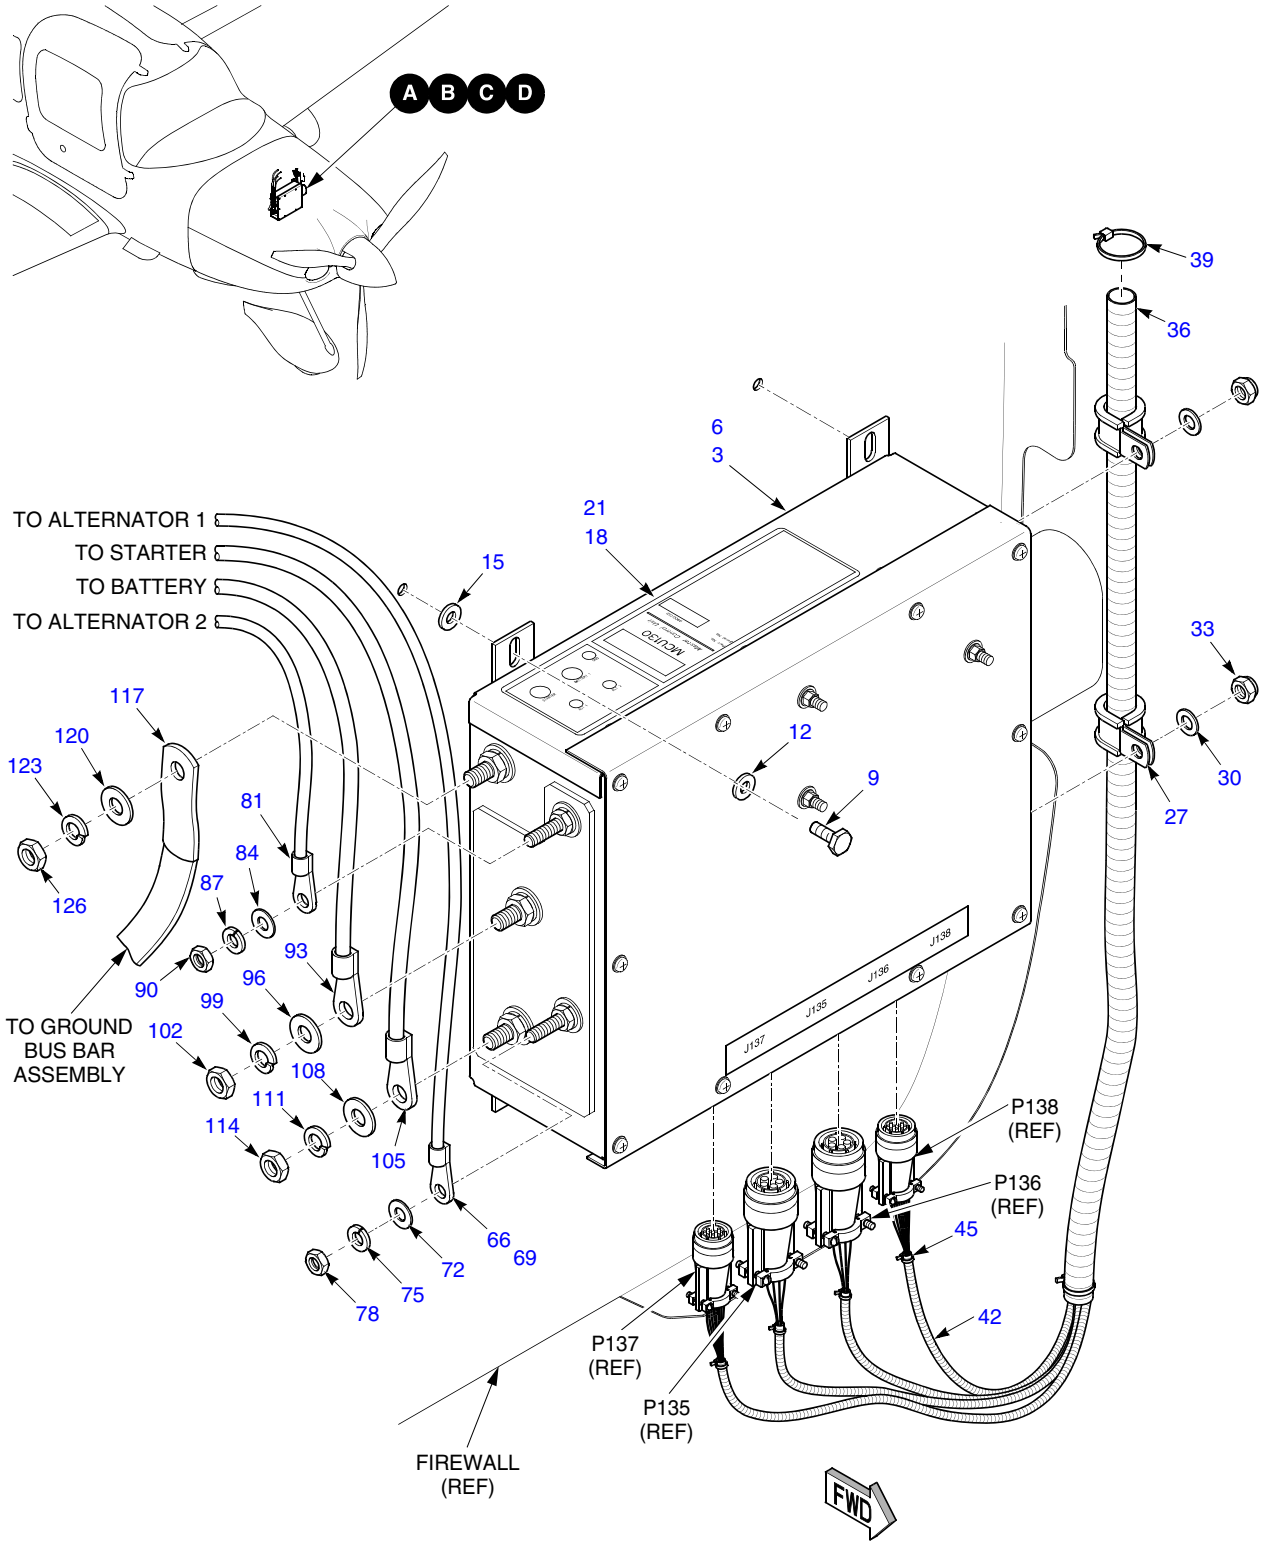

DETAIL A

Serials 22-1663 & subs w/o Perspective Avionics.

SR22_PC24_1508C

Figure-05

MCU 130 - Serials 22-1663 & subs w/o Perspective (1 of 4)

EFFECTIVITY:
Serials 22-1663 & subs w/o Perspective

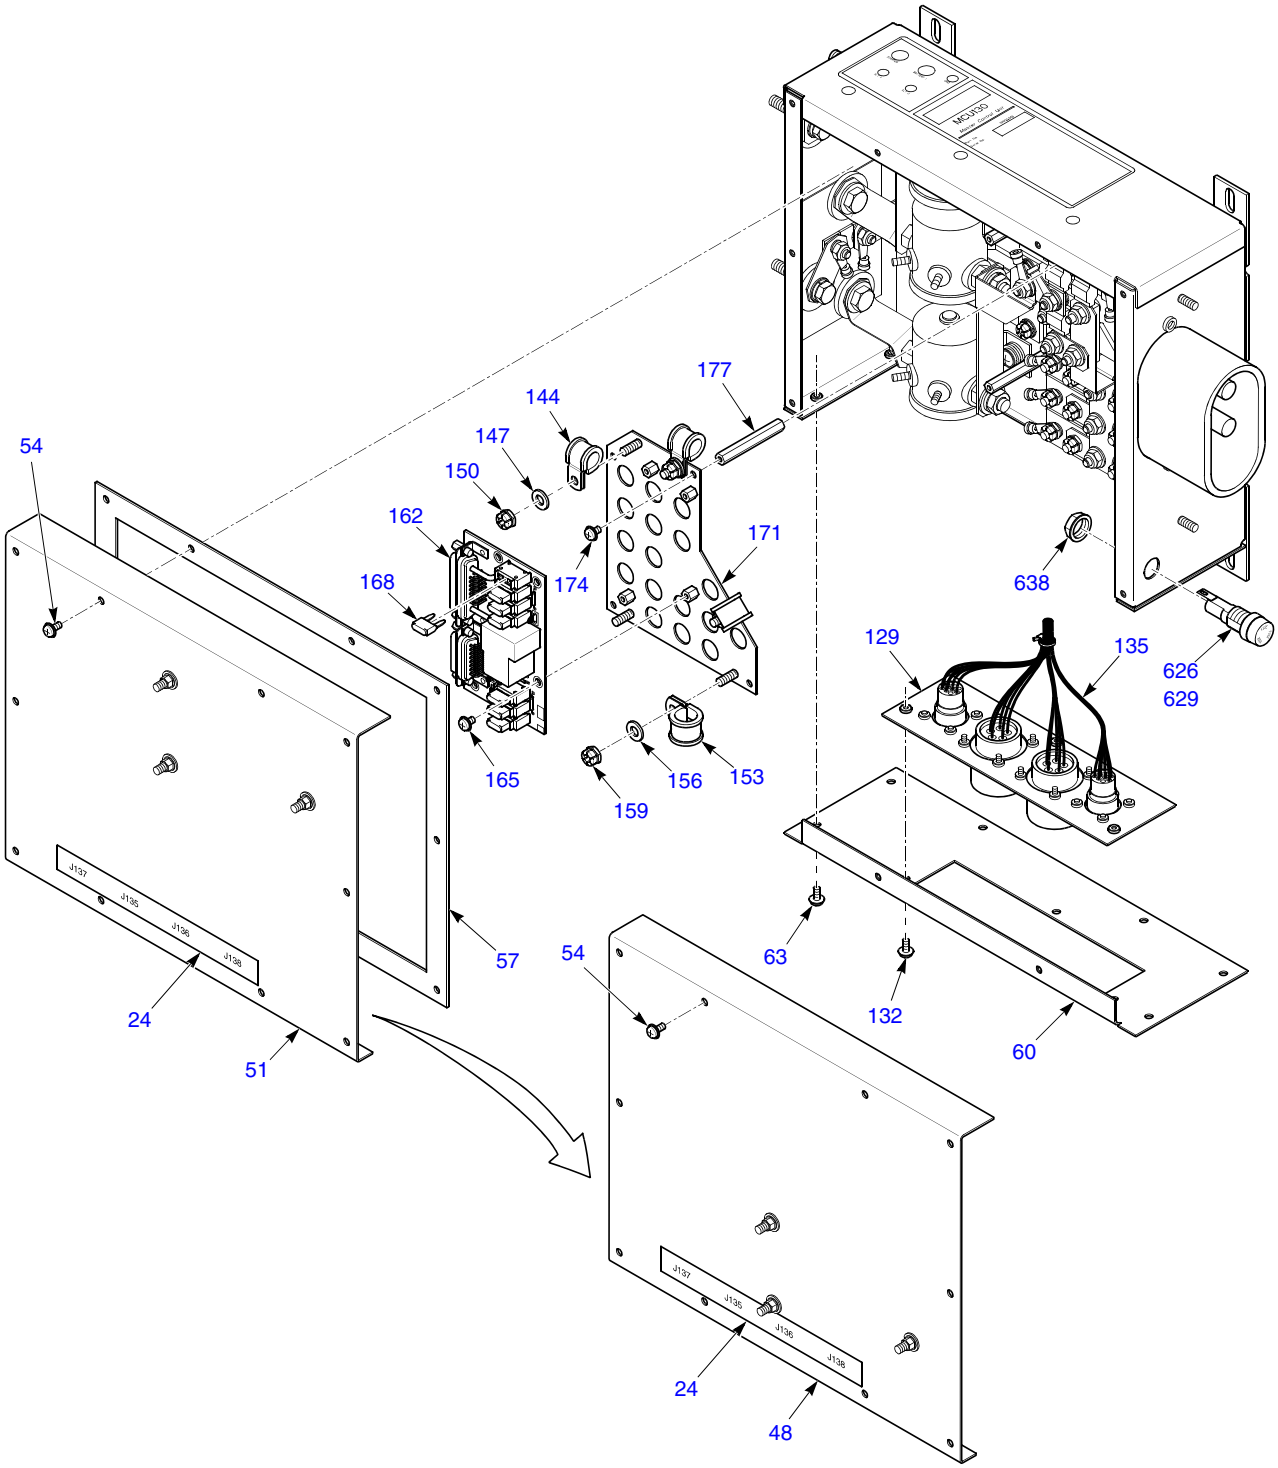

Serials 22-1663 thru 22-2588.

DETAIL B

Serials 22-1663 & subs w/o Perspective Avionics.

SR22_PC24_1510D

Figure-05

MCU 130 - Serials 22-1663 & subs w/o Perspective (2 of 4)

EFFECTIVITY:
Serials 22-1663 & subs w/o Perspective

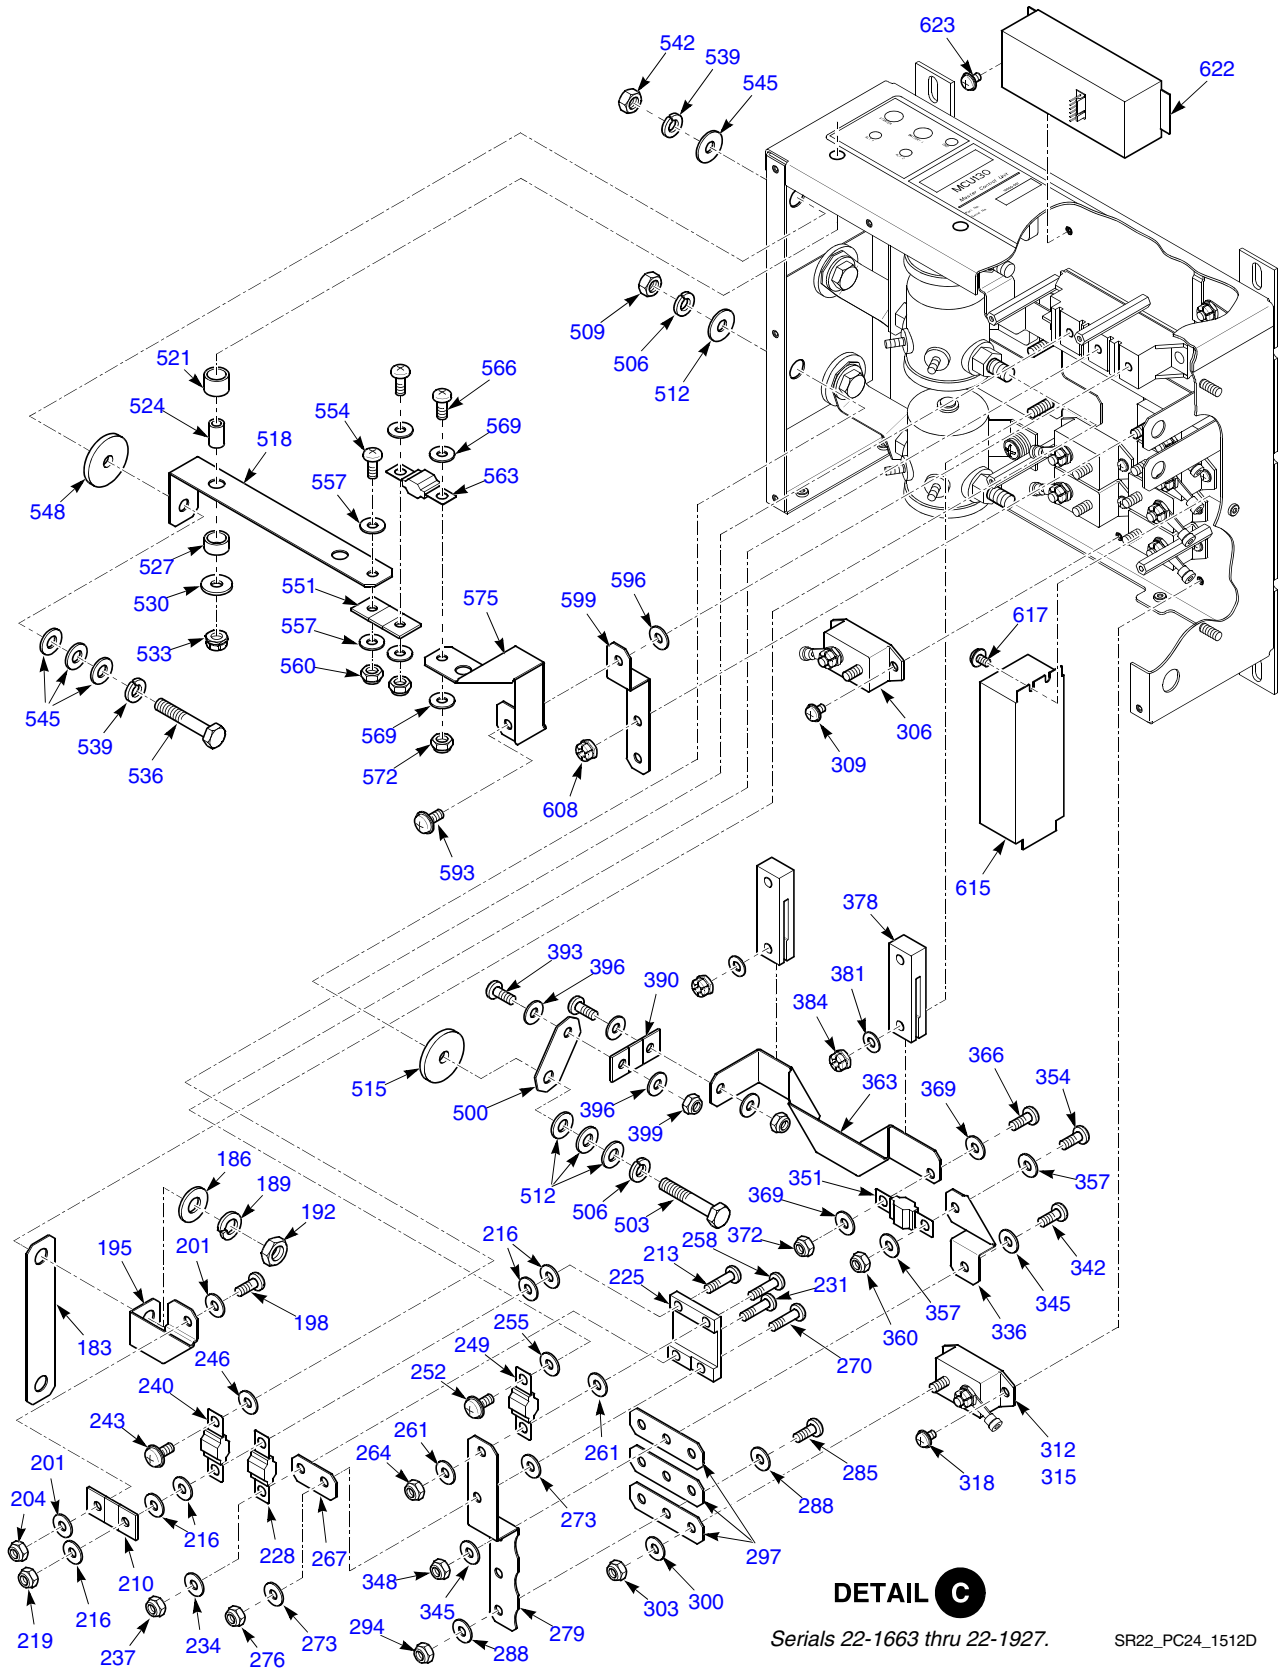

Figure-05

MCU 130 - Serials 22-1663 thru 22-1927 (3 of 4)

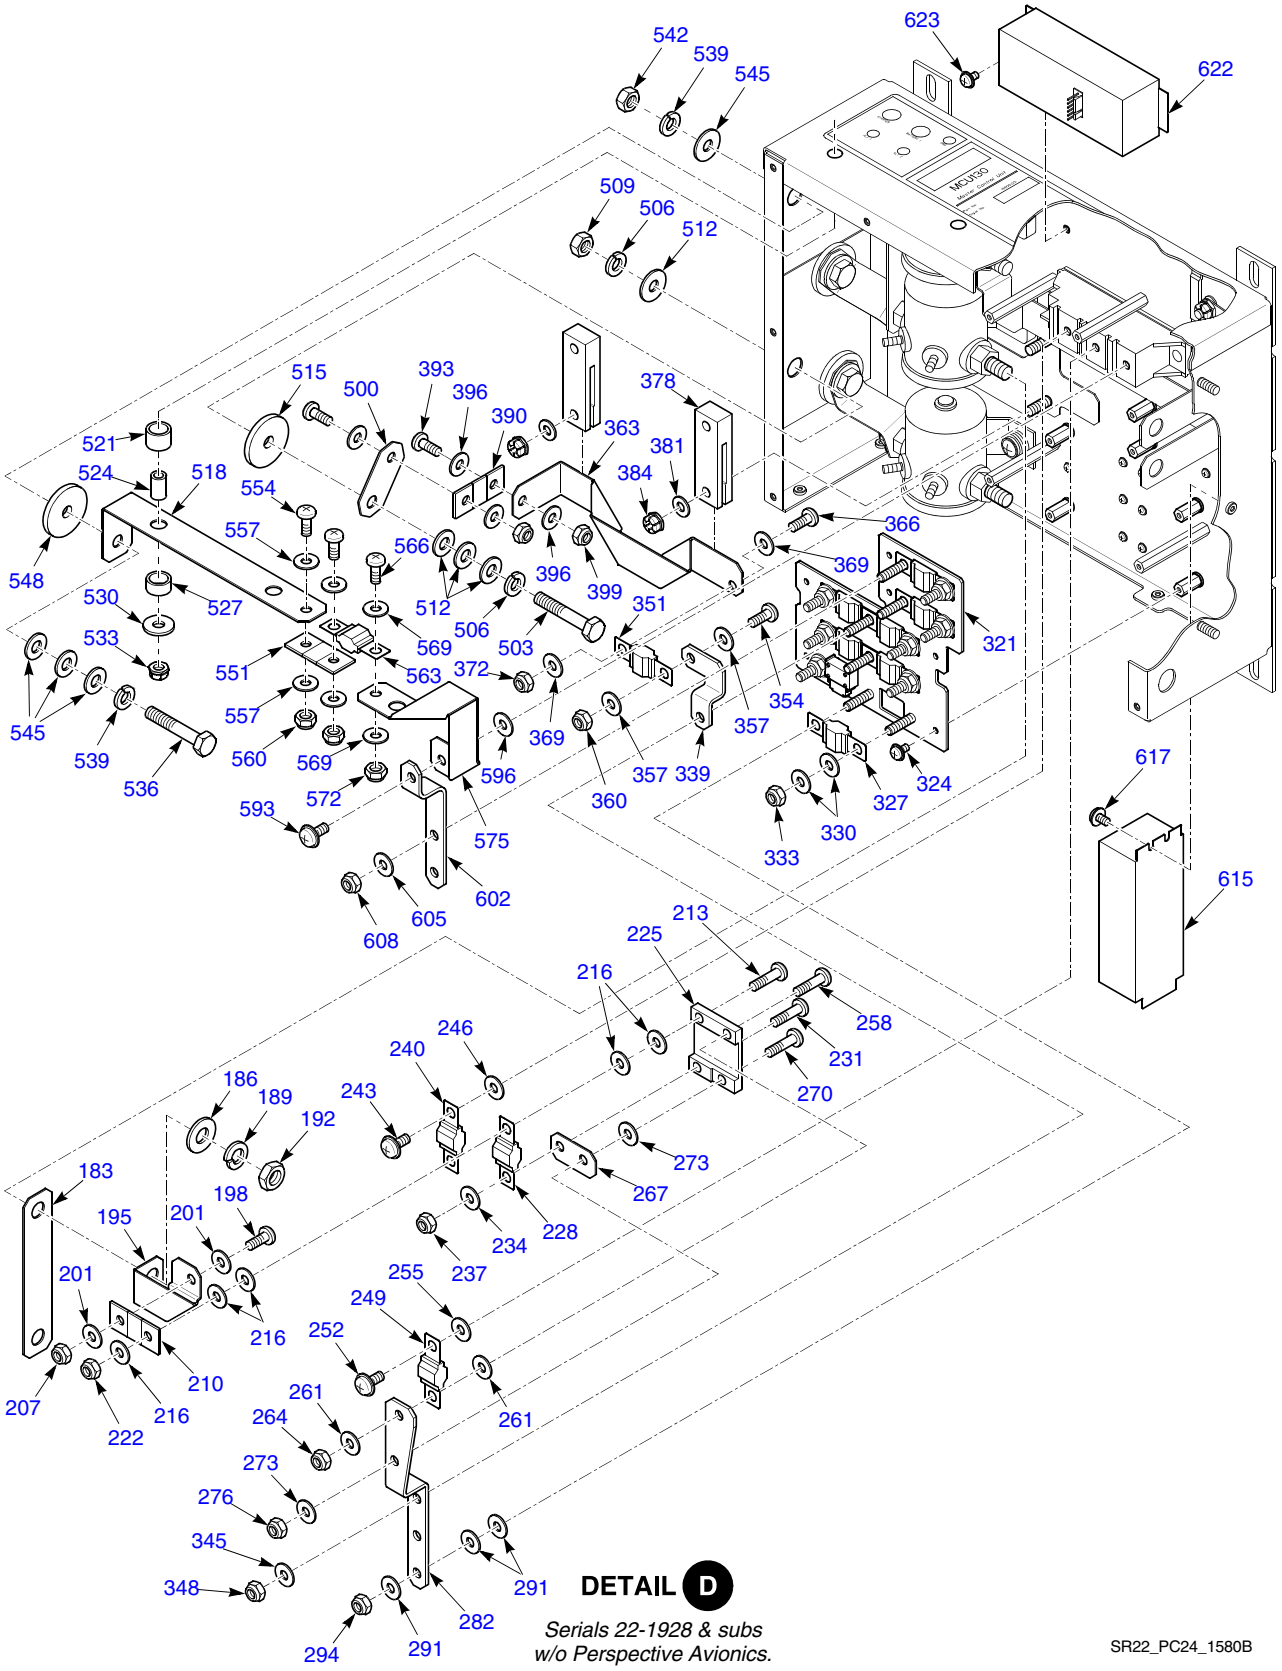

Figure-05

MCU 130 - Serials 22-1928 & subs w/o Perspective (4 of 4)

EFFECTIVITY:
Serials 22-1928 & subs w/o Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05	**		MCU 130 INSTALLATION (AC W/O PERSPECTIVE)	1663		NP
	3	19900-001			·MCU 130	1663	1927	1
					FOR SPARES USE P/N 19900-002			
					FOR SPARES USE P/N 19900-012			
-	4	19900-011			·MCU 130	1663	1927	1
					AFTER SB2X-95-18			
					FOR SPARES USE P/N 19900-012			
	6	19900-002			·MCU 130	1928		1
					FOR SPARES USE P/N 19900-012			
-	7	19900-012			·MCU 130	1928		1
					AFTER SB2X-95-18			
	9	AN3-4A		A	·BOLT	1663		4
	12	NAS1149F0332P		A	·WASHER	1663		4
	15	AN970-3		A	·WASHER	1663		4
	18	19903-002			··LABEL	1663	1927	1
	21	19903-003			··LABEL	1928		1
	24	19909-001			··LABEL, CONNECTORS	1663		1
	27	MS21919WDG10			·ADEL CLAMP	1663		2
	30	NAS1149F0332P		A	·WASHER	1663		2
	33	MS21042-3		A	·NUT	1663		2
	36	50943-050			·LOOM	1663		AR
	39	50964-015		A	·CABLE TIE	1663		AR
	42	50943-025			·LOOM	1663		AR
	45	50964-015		A	·CABLE TIE	1663		AR
	48	16604-001			··COVER	1663	2587	1
					FOR SPARES USE P/N 16604-003			
	51	16604-003			··COVER	2588		1
	54	51146-440		A	··PHIL-PAN SCREW	1663		10
	57	16613-001			···GASKET, COVER	1663		1
	60	19906-002			··BOTTOM PLATE, CHASSIS	1663		1
	63	51146-440		A	··PHIL-PAN SCREW	1663		6
	66	16615-001			·ALT 1 CABLE	1663	2830	1
	69	16615-004			·ALT 1 CABLE	2831		1
	72	51592-001		A	·WASHER	1663		1
	75	51127-025		A	·LOCKWASHER	1663		1
	78	51125-028		A	·NUT	1663		1
	81	16615-010			·ALT 2 CABLE	1663		1
	84	51592-001		A	·WASHER	1663		1
	87	51127-025		A	·LOCKWASHER	1663		1
	90	51125-028		A	·NUT	1663		1
	93	16615-020			·BAT CABLE	1663		1
	96	51126-031		A	·WASHER	1663		1
	99	51127-031		A	·LOCKWASHER	1663		1
	102	51124-018		A	·NUT	1663		1
	105	16615-031			·STARTER CABLE	1663		1
	108	51126-031		A	·WASHER	1663		1
	111	51127-031		A	·LOCKWASHER	1663		1
	114	51124-018		A	·NUT	1663		1
	117	13929-002			·GROUNDING STRAP	1663		1
	120	51126-031		A	·WASHER	1663		1
	123	51127-031		A	·LOCKWASHER	1663		1
	126	51124-018		A	·NUT	1663		1
	129	21472-001			··BOTTOM CABLE PLATE	1663		1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	132	51146-440		A	··PHIL-PAN SCREW	1663		3
	135	16771-002			··W120 WIRE HARNESS	1663		1
-	138	51146-440		A	··PHIL-PAN SCREW	1663		8
-	141	51146-448		A	··PHIL-PAN SCREW	1663		8
	144	MS21919WDG6		A	··ADEL CLAMP	1663		2
	147	NAS1149F0332P		A	··WASHER	1663		2
	150	MS21083N3		A	··LOCKNUT	1663		2
	153	MS21919WDG8		A	··ADEL CLAMP	1663		2
	156	NAS1149F0332P		A	··WASHER	1663		2
	159	MS21083N3		A	··LOCKNUT	1663		2
	162	16688-001			··CIRCUIT CARD ASSEMBLY	1663		1
	165	51146-443		A	··PHIL-PAN SCREW	1663		4
	168	51118-002			···FUSE, 2A, 32V, MINIATO GRAY	1663		7
	171	21404-003			··MOUNT, PCB	1663		1
	174	51146-443		A	··PHIL-PAN SCREW	1663		4
	177	51113-218		A	··STANDOFF	1663		4
-	180	50216-001			··FIBERGLASS SLEEVE	1663		4
	183	21311-016			··BUS BAR 16	1663		1
	186	51126-031		A	··WASHER	1663		2
	189	51127-031		A	··LOCKWASHER	1663		2
	192	51124-024		A	··NUT	1663		2
	195	21311-023			··BUS BAR 19	1663		1
	198	51445-008		A	··SCREW	1663		1
	201	51446-001		A	··WASHER	1663		2
	204	51648-001		A	··LOCKNUT	1663	1927	1
	207	MS21083N3		A	··LOCKNUT	1928		1
	210	51442-001			··CURRENT SHUNT, .5 MOHM, 5W RATING	1663		1
	213	51445-008		A	··SCREW	1663		1
	216	51446-001		A	··WASHER	1663		5
	219	51648-001		A	··LOCKNUT	1663	1927	1
	222	MS21083N3		A	··LOCKNUT	1928		1
	225	21463-001		A	··INSULATOR, SPACER	1663		1
	228	51136-125			··FUSE, 125A, 32V, MIDI FUSE SERIES	1663		1
	231	51445-012		A	··SCREW	1663		1
	234	51446-001		A	··WASHER	1663		1
	237	51648-001		A	··LOCKNUT	1663		1
	240	51136-050			··FUSE, 50A, 32V, MIDI FUSE SERIES	1663		1
	243	PRT OF DIODE		A	··SCREW	1663		1
	246	51446-001		A	··WASHER	1663		1
	249	51136-050			··FUSE, 50A, 32V, MIDI FUSE SERIES	1663		1
	252	PRT OF DIODE		A	··SCREW	1663		1
	255	51446-001		A	··WASHER	1663		1
	258	51445-012		A	··SCREW	1663		1
	261	51446-001		A	··WASHER	1663		2
	264	51648-001		A	··LOCKNUT	1663		1
	267	21312-010			··BUS BAR 10	1663		1
	270	51445-012		A	··SCREW	1663		1
	273	51446-001		A	··WASHER	1663		2
	276	51648-001		A	··LOCKNUT	1663		1
	279	21311-018			··BUS BAR 18	1663	1927	1
	282	21752-001			··BUS BAR, MAIN BUS TO FUSES	1928		1
	285	51445-008		A	··SCREW	1663	1927	2
	288	51446-001		A	··WASHER	1663	1927	4
	291	51446-001		A	··WASHER	1928		6

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	294	51648-001		A		··LOCKNUT	1663		2
	297	21312-011				··BUS BAR 11	1663	1927	3
	300	51446-001		A		··WASHER	1663	1927	6
	303	MS21044N3		A		··NUT	1663	1927	6
	306	51437-001				··BREAKER, 15A, 28V MAX, SHORT-STOP SERIES	1663	1927	1
	309	51146-440		A		··PHIL-PAN SCREW	1663	1927	2
	312	51436-001				··BREAKER, 25A, 28V MAX, SHORT-STOP SERIES	1663	1927	7
						ALTERNATE FOR P/N 51436-002			
	315	51436-002				··BREAKER, 25A, 28V MAX, SHORT-STOP SERIES	1663	1927	7
						ALTERNATE FOR P/N 51436-001			
	318	51146-440		A		··PHIL-PAN SCREW	1663	1927	12
	321	17992-001				··FUSE BOARD	1928		1
	324	51146-440		A		··PHIL-PAN SCREW	1928		6
	327	51136-030				··FUSE, 30A, 32V, MIDI FUSE SERIES	1928		7
	330	51446-001		A		··WASHER	1928		8
	333	MS21044N3		A		··NUT	1928		8
	336	21311-026				··BUS BAR 17	1663	1927	1
	339	21751-001				··BUS BAR, ALT 1 TO MAIN BUS	1928		1
	342	51445-008		A		··SCREW	1663	1927	1
	345	51446-001		A		··WASHER	1663		2
	348	51648-001		A		··LOCKNUT	1663		1
	351	51136-100				··FUSE, 100A, 32V, MIDI FUSE SERIES	1663		1
	354	51445-008		A		··SCREW	1663		1
	357	51446-001		A		··WASHER	1663		2
	360	51648-001		A		··LOCKNUT	1663		1
	363	21311-025				··BUS BAR 14	1663		1
	366	51445-008		A		··SCREW	1663		1
	369	51446-001		A		··WASHER	1663		2
	372	51648-001		A		··LOCKNUT	1663		1
-	375	19901-101				··FIRE SLEEVE	1663		1
	378	21405-001				··CLAMP, BUS BAR	1663		2
	381	NAS1149F0332P		A		··WASHER	1663		4
	384	MS21083N3		A		··LOCKNUT	1663		4
-	387	21416-003				··INSULATOR, FIREWALL INSIDE	1663		1
	390	51442-001				··CURRENT SHUNT, .5 MOHM, 5W RATING	1663		1
	393	51445-008		A		··SCREW	1663		1
	396	51446-001		A		··WASHER	1663		2
	399	51648-001		A		··LOCKNUT	1663		1
	500	21311-024				··BUS BAR 13	1663		1
	503	51630-001		A		··SCREW	1663		1
	506	51127-025				··LOCKWASHER	1663		2
	509	51125-028		A		··NUT	1663		1
	512	51592-001		A		··WASHER	1663		4
	515	21307-002				··INSULATOR	1663		1
	518	21311-028				··BUS BAR 27	1663		1
	521	21492-002		A		··SPACER, INSULATING	1663		2
	524	51656-001		A		··PLASTIC SPACER	1663		2
	527	21492-001		A		··SPACER, INSULATING	1663		2
	530	51126-025		A		··WASHER	1663		2
	533	MS21083N3		A		··LOCKNUT	1663		2
	536	51630-001		A		··SCREW	1663		1
	539	51127-025				··LOCKWASHER	1663		2
	542	51125-028		A		··NUT	1663		1
	545	51592-001		A		··WASHER	1663		4

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	548	21307-002			··INSULATOR	1663		1
	551	51442-001			··CURRENT SHUNT, .5 MOHM, 5W RATING	1663		1
	554	51445-008		A	··SCREW	1663		1
	557	51446-001		A	··WASHER	1663		2
	560	51648-001		A	··LOCKNUT	1663		1
	563	51136-050			··FUSE, 50A, 32V, MIDI FUSE SERIES	1663		1
	566	51445-008		A	··SCREW	1663		2
	569	51446-001		A	··WASHER	1663		4
	572	51648-001		A	··LOCKNUT	1663		2
	575	21311-027			··BUS BAR 28	1663		1
-	578	21492-002		A	··SPACER, INSULATING	1663		1
-	581	51656-001		A	··PLASTIC SPACER	1663		1
-	584	21492-001		A	··SPACER, INSULATING	1663		1
-	587	51126-025		A	··WASHER	1663		1
-	590	MS21083N3		A	··LOCKNUT	1663		1
	593	PRT OF DIODE		A	··SCREW	1663		1
	596	51446-001		A	··WASHER	1663		1
	599	21312-007			··BUS BAR 7	1663	1927	1
	602	21753-001			··BUS BAR, MAIN BUS TO ESSENTIAL BUS	1928		1
	605	51446-001		A	··WASHER	1928		2
	608	MS21044N3		A	··NUT	1663		2
-	611	14605-001			··ALT 1 FIELD CONTROL MODULE	1663	2587	1
					FOR SPARES USE P/N 29435-002			
-	612	14605-002			··ALT 1 FIELD CONTROL MODULE	2588		1
					FOR SPARES USE P/N 29435-002			
-	613	29435-001			··ALT 1 FIELD CONTROL MODULE	1663		1
					FOR SPARES USE P/N 29435-002			
	615	29435-002			··ALT 1 FIELD CONTROL MODULE	1663		1
					ALTERNATE FOR P/N 14605-001, 14605-002, 29435-001			
	617	51146-440		A	··PHIL-PAN SCREW	1663		1
-	618	14605-010			··ALT 2 FIELD CONTROL MODULE	1663	2818	1
					FOR SPARES USE P/N 29434-003			
-	619	14605-030			··ALT 2 FIELD CONTROL MODULE	2819		1
					FOR SPARES USE P/N 29434-003			
-	620	29434-001			··ALT 2 FIELD CONTROL MODULE	1663		1
					FOR SPARES USE P/N 29434-003			
-	621	29434-002			··ALT 2 FIELD CONTROL MODULE	1663		1
					FOR SPARES USE P/N 29434-003			
	622	29434-003			··ALT 2 FIELD CONTROL MODULE	1663		1
					ALTERNATE FOR P/N 14605-010, 14605-030, 29434-001, 29434-002			
	623	51146-440		A	··PHIL-PAN SCREW	1663		1
	626	51134-001			···FUSE HOLDER	1663		1
	629	53668-002			···FUSE HOLDER	1663		1
					AFTER SB2X-95-18			
-	632	51119-001			····FUSE, 5A, 250V, 3AG	1663		1
-	635	53669-001			····FUSE, 5A, SLOW BLOW	1663		1
					AFTER SB2X-95-18			
	638	PRT OF ITM 626		A	···NUT	1663		1

SYMBOL NOTES:

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			**		1) SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING: SERIAL NUMBERS 2979, 2992, AND 3002, REFER TO 24-30-06 (MCU 140 INSTALLATION) FOR PART IDENTIFICATION.			
					2) INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			

Intentionally Left Blank

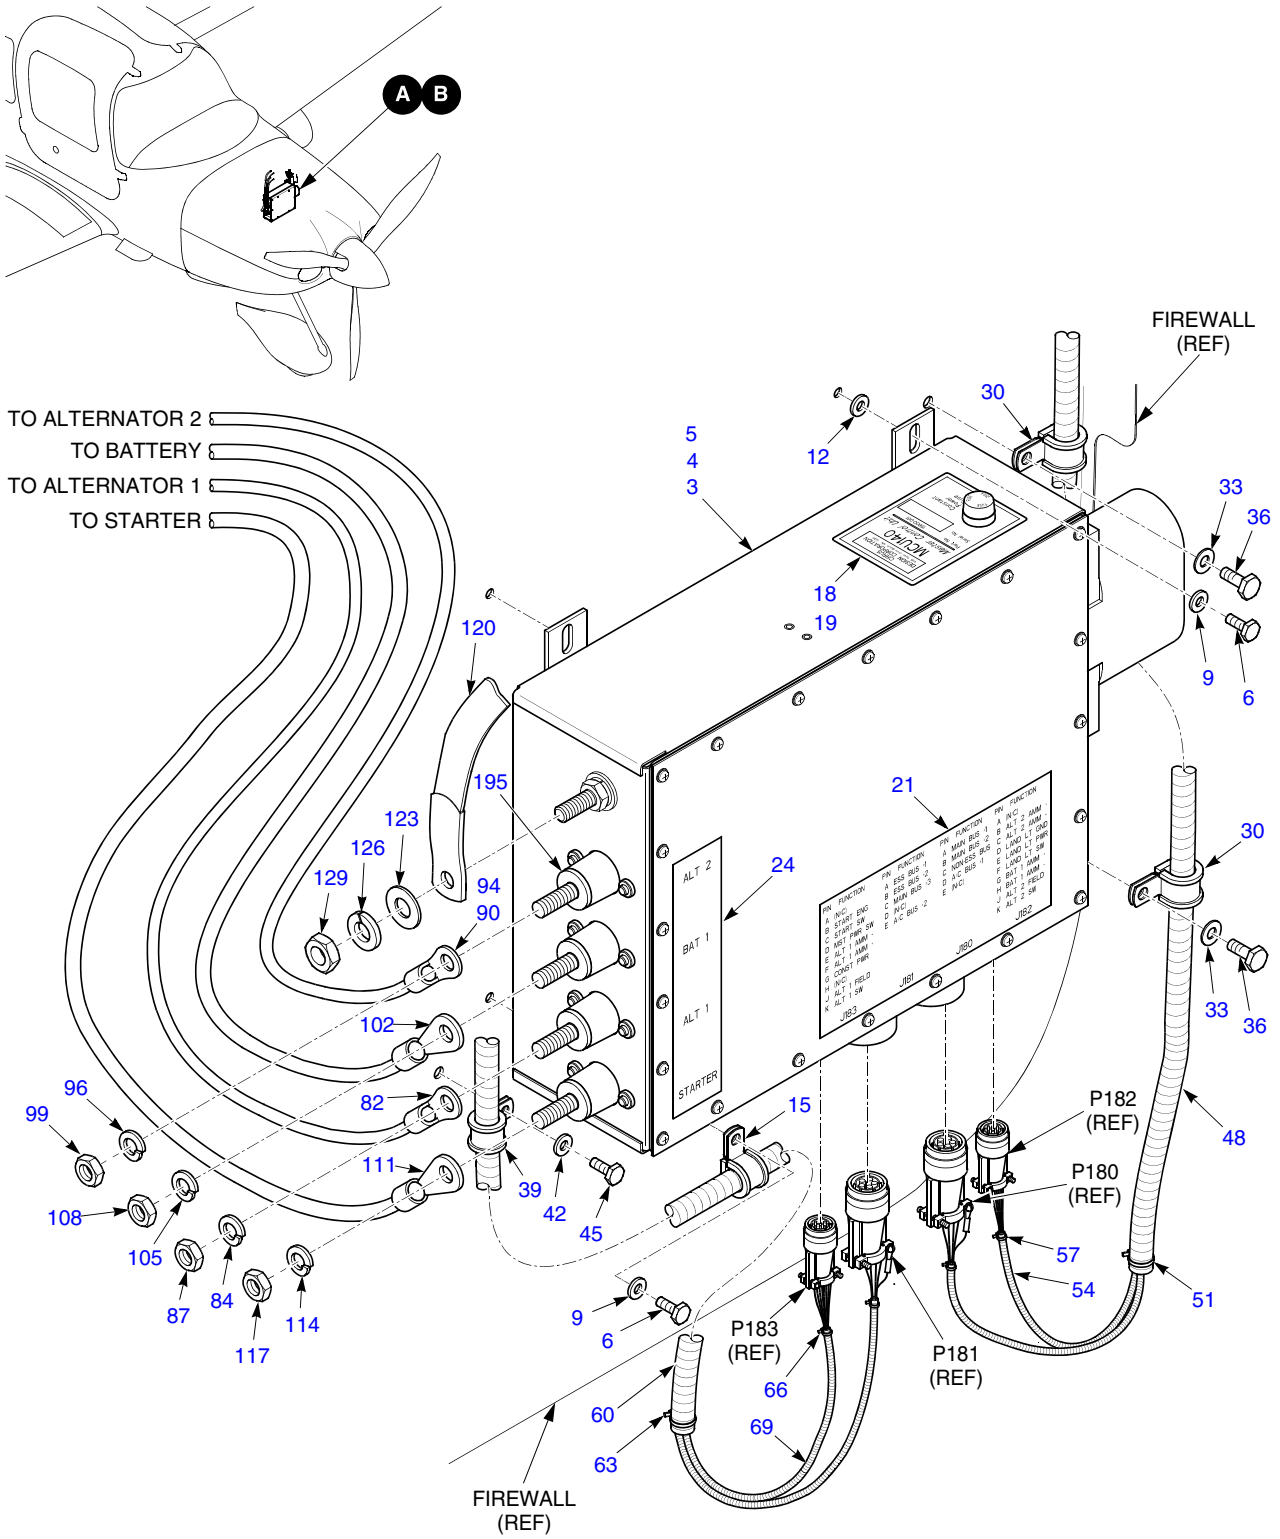

DETAIL A

Serials 22-3026 & subs w/ Perspective Avionics, 22T-0001 & subs.

SR22_PC24_1858A

Figure-06

MCU 140 - Serials w/ Perspective (1 of 2)

EFFECTIVITY:
All

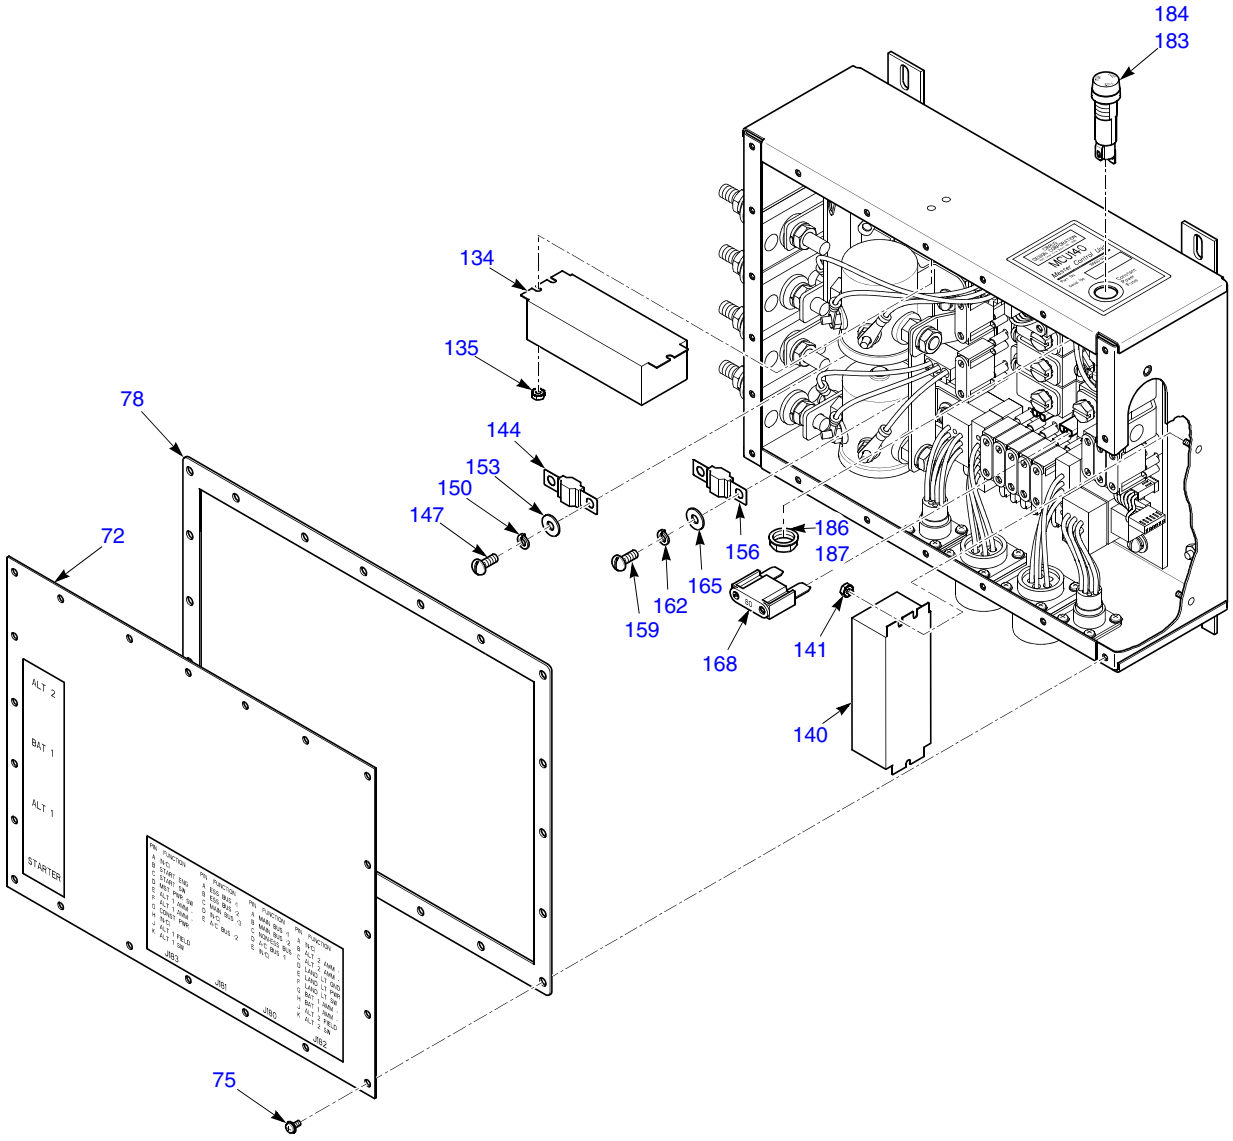

DETAIL B

Serials 22-3026 & subs w/ Perspective Avionics, 22T-0001 & subs.

SR22_PC24_1860A

Figure-06

MCU 140 - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 06	**		MCU 140 INSTALLATION (A/C W/ PERSPECTIVE)	3026 / 0001	/	NP
	3	19800-001			·MCU 140	3026 / 0001	3914 / 0441	1
					FOR SPARES USE P/N 19800-002			
	4	19800-002			·MCU 140	3915 / 0442	/	1
					AFTER SB2X-95-19			
	5	19800-003			·MCU 140	4030 / 0690	/	
					ALTERNATE FOR P/N 19800-002			
	6	AN3-4A		A	·BOLT	3026 / 0001	/	4
	9	NAS1149F0332P		A	·WASHER	3026 / 0001	/	4
	12	AN970-3		A	·WASHER	3026 / 0001	/	4
	15	MS21919WDG10		A	·CLAMP	3026 / 0001	/	1
	18	19831-001			··LABEL, ID	3026 / 0001	3914 / 0441	1
	19	19831-002			··LABEL, ID	3915 / 0442	/	1
	21	19832-001			··LABEL, CONNECTOR	3026 / 0001	/	1
	24	19833-001			··LABEL, POWER STUD	3026 / 0001	/	1
-	27	19834-001			··LABEL, FUSE	3026 / 0001	/	1
	30	MS21919WDG10		A	·CLAMP	3026 / 0001	/	2
	33	NAS1149F0316P		A	·WASHER	3026 / 0001	/	2
	36	AN3-4A		A	·BOLT	3026 / 0001	/	2
	39	MS21919WDG10		A	·CLAMP	3026 / 0001	/	1
	42	NAS1149F0316P		A	·WASHER	3026 / 0001	/	1
	45	AN3-4A		A	·BOLT	3026 / 0001	/	1
	48	50943-063			·LOOM	3026 / 0001	/	AR
	51	50964-015		A	·CABLE TIE	3026 / 0001	/	AR
	54	50943-035			·LOOM	3026 / 0001	/	AR
	57	50964-015		A	·CABLE TIE	3026 / 0001	/	AR
	60	50943-063			·LOOM	3026 / 0001	/	AR
	63	50964-015		A	·CABLE TIE	3026 / 0001	/	AR
	66	50943-035			·LOOM	3026 / 0001	/	AR
	69	50964-015		A	·CABLE TIE	3026 / 0001	/	AR
	72	19805-001			··COVER	3026 / 0001	/	1
	75	51146-441		A	··PHIL-PAN SCREW	3026 / 0001	/	21
	78	19811-004			··GASKET, COVER	3026 / 0001	/	1
-	81	19815-003			·ALT 1 CABLE, UNSHIELDED	3026 / 0001	/	1
					FOR SPARES USE P/N 19815-004			
	82	19815-004			·ALT 1 CABLE, SHIELDED	3026 / 0001	/	1
	84	51127-031		A	·LOCKWASHER	3026 / 0001	/	1
	87	51124-018		A	·NUT	3026 / 0001	/	1
	90	19815-011			·ALT 2 CABLE, UNSHIELDED	3026 / 0001	/	1
-	93	19815-012	@		·ALT 2 CABLE, SHIELDED	3026 / 0001	4387 / 1436	1
					FOR SPARES USE P/N 19815-016			
	94	19815-016			·ALT 2 CABLE, SHIELDED	4388 / 1437	/	1
	96	51127-031		A	·LOCKWASHER	3026 / 0001	/	1
	99	51124-018		A	·NUT	3026 / 0001	/	1
	102	19815-020			·BAT CABLE	3026 / 0001	/	1
	105	51127-031		A	·LOCKWASHER	3026 / 0001	/	1
	108	51124-018		A	·NUT	3026 / 0001	/	1
	111	19815-030			·STARTER CABLE	3026 / 0001	/	1
	114	51127-031		A	·LOCKWASHER	3026 / 0001	/	1
	117	51124-018		A	·NUT	3026 / 0001	/	1
	120	13929-001			·GROUNDING STRAP	3026 / 0001	/	1
	123	51126-031		A	·WASHER	3026 / 0001	/	1
	126	51127-031		A	·FUSE, 2A, 32V MINI ATO	3026 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	129	51124-018		A	·NUT	3026 / 0001	/	1
-	132	18267-003			·ALT 1 FIELD CONTROL MODULE	3026 / 0001	3818 / 0245	1
					FOR SPARES USE P/N 29435-002			
-	133	29435-001			·ALT 1 FIELD CONTROL MODULE	3819 / 0246	/	1
					FOR SPARES USE P/N 29435-002			
	134	29435-002			·ALT 1 FIELD CONTROL MODULE	3026 / 0001	/	1
					ALTERNATE FOR P/N 29435-001, P/N 18267-003			
	135	51147-440		A	·KEP NUT	3026 / 0001	/	3
-	136	18268-003			·ALT 2 FIELD CONTROL MODULE	3026 / 0001	3818 / 0245	1
					FOR SPARES USE P/N 29434-003			
-	137	29434-001			·ALT 2 FIELD CONTROL MODULE	3819 / 0246	/	1
					FOR SPARES USE P/N 29434-003			
-	138	29434-002			·ALT 2 FIELD CONTROL MODULE	3026 / 0001	/	1
					FOR SPARES USE P/N 29434-003			
	140	29434-003			·ALT 2 FIELD CONTROL MODULE	3026 / 0001	/	1
					ALTERNATE FOR P/N 29434-001, 29434-002, 18268-003			
	141	51147-440		A	·KEP NUT	3026 / 0001	/	3
	144	51136-100			·FUSE 100A 32V MIDI-FUSE SERIES	3026 / 0001	/	1
	147	51445-008		A	·SCREW	3026 / 0001	/	2
	150	MS35338-43		A	·LOCKWASHER	3026 / 0001	/	2
	153	51446-001		A	·WASHER	3026 / 0001	/	2
	156	51136-125			·FUSE, 125A, 32V MIDI SERIES	3026 / 0001	/	1
	159	51445-008		A	·SCREW	3026 / 0001	/	2
	162	MS35338-43		A	·LOCKWASHER	3026 / 0001	/	2
	165	51446-001		A	·WASHER	3026 / 0001	/	2
	168	51118-002			·FUSE, 2A, 32V MINI ATO	3026 / 0001	/	7
-	171	51118-007			·FUSE, 7.5A, 32V MINI ATO	3026 / 0001	/	1
-	174	51790-030			·FUSE, 30A, MAXI	3026 / 0001	/	8
-	177	51790-050			·FUSE, 50A, MAXI	3026 / 0001	/	3
-	180	51790-080			·FUSE, 80A, MAXI	3026 / 0001	/	2
	183	51134-002			···FUSE HOLDER	3026 / 0001	3914 / 0441	1
	184	53668-002			···FUSE HOLDER	3915 / 0442	/	1
					AFTER SB2X-95-19			
	186	PRT OF ITM 183		A	···NUT	3026 / 0001	3914 / 0441	1
	187	PRT OF ITM 184		A	···NUT	3915 / 0442	/	1
-	189	51119-001			····FUSE, 5A, 250V, 3AG	3026 / 0001	3914 / 0441	1
-	192	53669-001			····FUSE, 5A, SLOW BLOW	3915 / 0442	/	1
					AFTER SB2X-95-19			
	195	51780-001			·POWER STUD	3026 / 0001	/	1
-	198	19837-001			·GASKET	3026 / 0001	/	1
-	201	51445-006		A	·SCREW	3026 / 0001	/	2

SYMBOL NOTES:

** 1) SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING: SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

2) INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.

@ 19815-012 MAY BE INSTALLED ON STORMSCOPE EQUIPPED AIRCRAFT AS NECESSARY TO PREVENT FALSE STRIKES.

EFFECTIVITY:
All

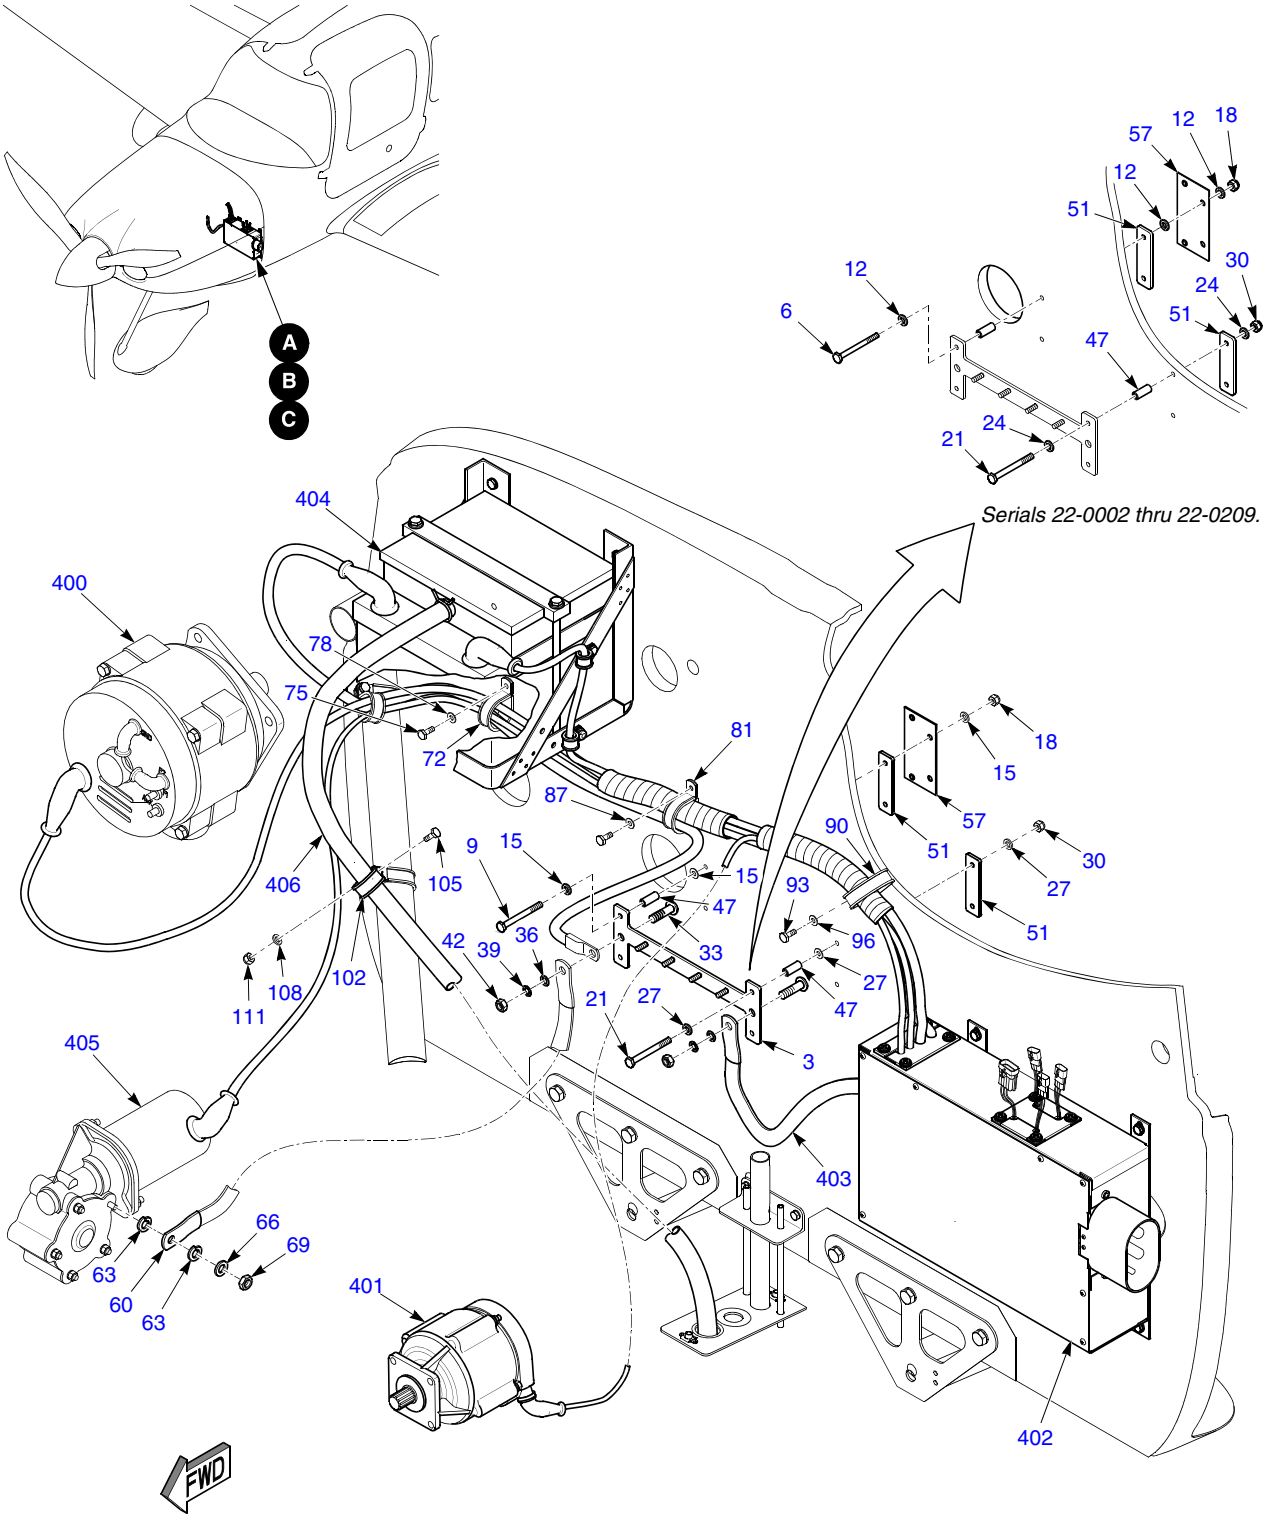

DETAIL A

Serials 22-0002 thru 22-1469.

SR22_PC24_1151F

Figure-07
Firewall Forward - Serials 22-0002 thru 22-1469 (1 of 3)

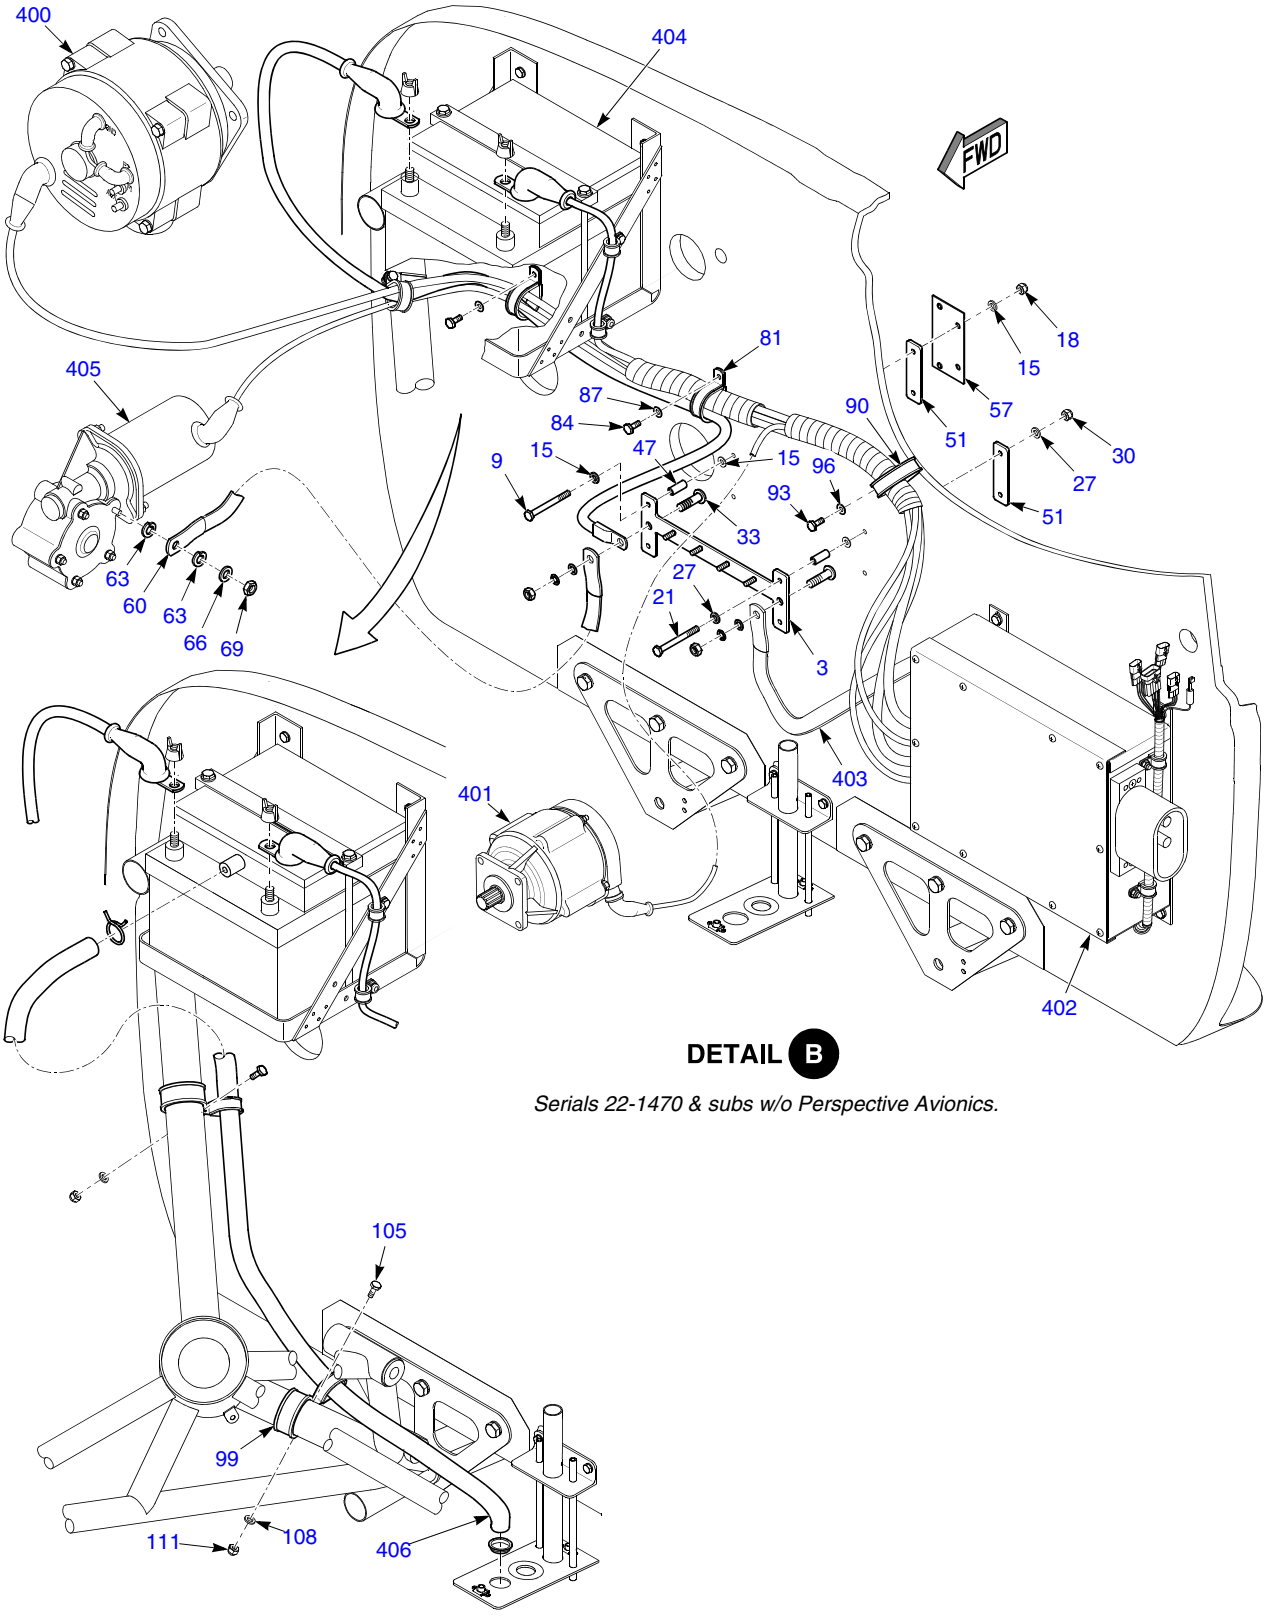

Serials 22-1470 & subs w/o Perspective Avionics.

Serials 22-1470 thru 22-3315.

SR22_PC24_1488C

Figure-07

Firewall Forward - Serials 22-1470 & subs w/o Perspective (2 of 3)

EFFECTIVITY:
All

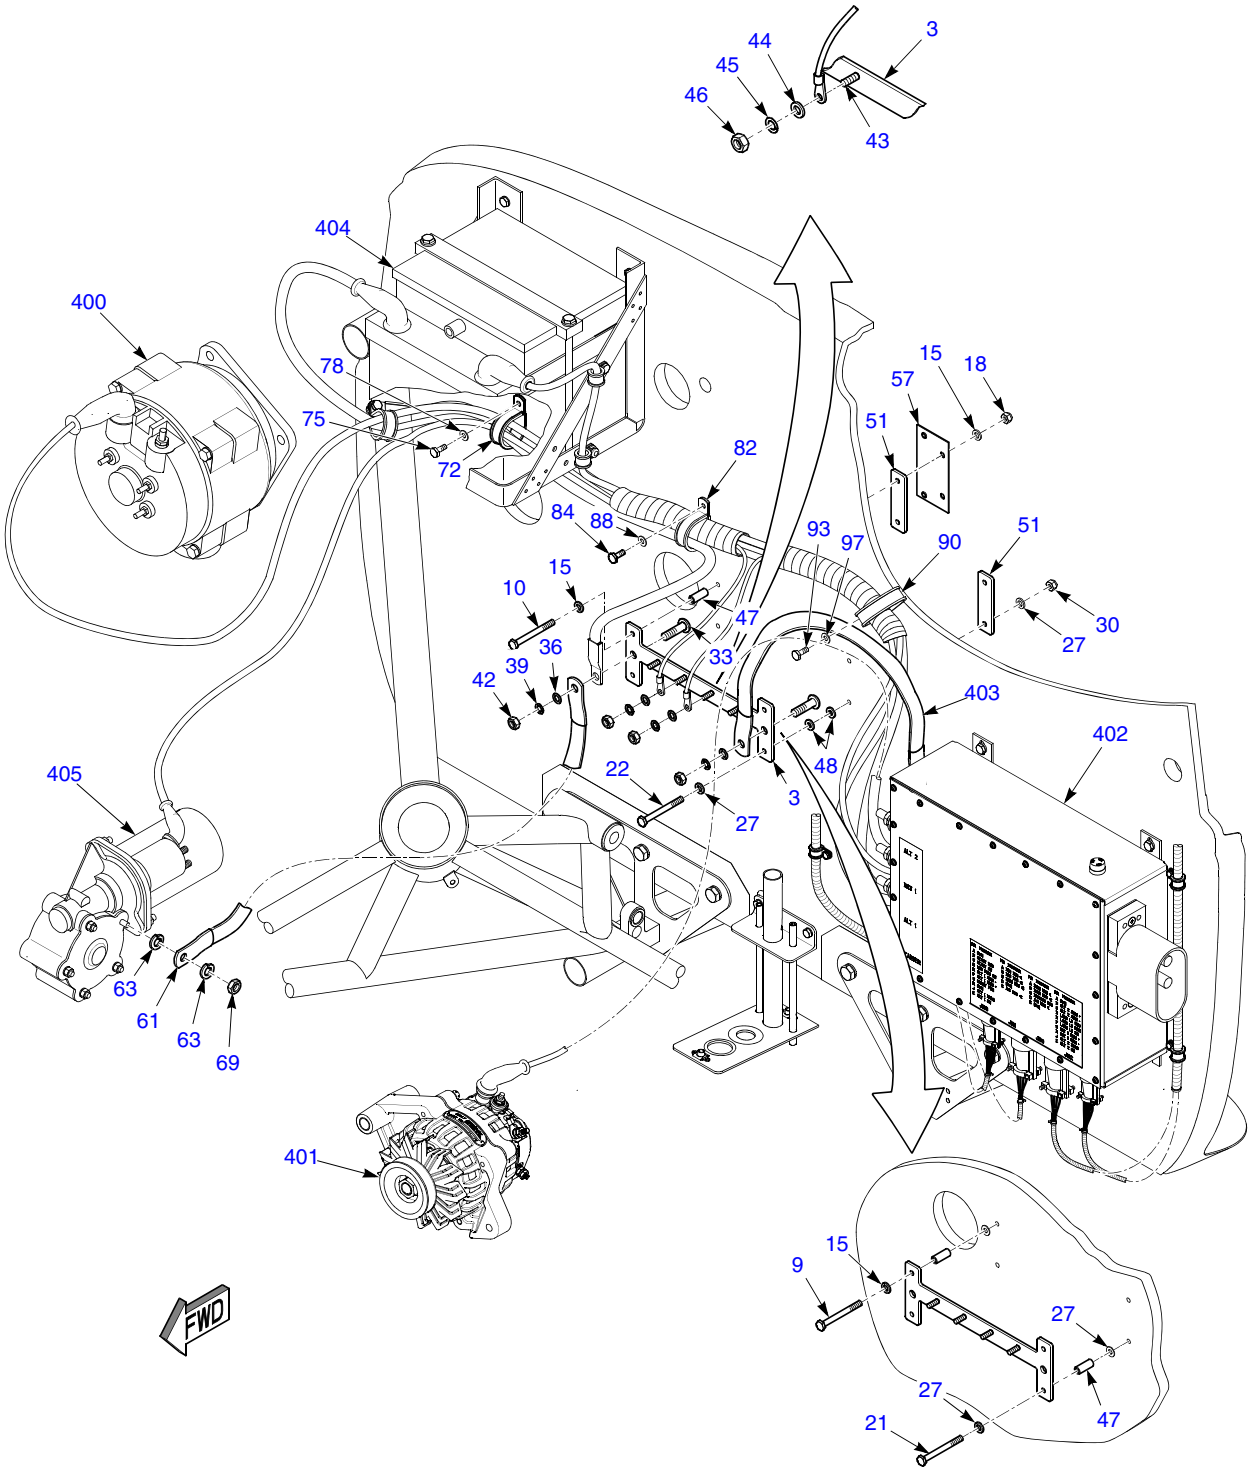

Serials 22-3026 thru 22-3675, 22-3679, 22-3680, 22-3696 thru 22-3700, 22T-0001 thru 22T-0026.

DETAIL C

Serials 22-3026 & subs w/ Perspective Avionics, 22T-0001 & subs.

SR22_PC24_1856

Figure-07
Firewall Forward - Serials w/ Perspective (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 07	**		FIRSTWALL FORWARD INSTALLATION	0002 / 0001	/	NP
	3	11676-002			·GROUND BUS BAR ASSEMBLY	0002 / 0001	/	1
	6	AN3-25A		A	·BOLT	0002	0209	1
	9	AN3-22A		A	·BOLT	0210	0429	1
						0430 / 0001	3700 / 0026	2
	10	AN3-14A		A	·BOLT	3701 / 0027	/	2
	12	NAS1149F0363P		A	·WASHER	0002	0209	3
						0498 / 0001	/	2
	15	NAS1149F0332P		A	·WASHER	0210	0429	3
						0430	0497	6
						0498 / 0001	/	4
	18	MS21044N3		A	·NUT	0002	0429	1
						0430 / 0001	/	2
	21	AN3-21A		A	·BOLT	0002	0429	3
						0430 / 0001	3700 / 0026	2
	22	AN3-15A		A	·BOLT	3701 / 0027	/	2
	24	NAS1149F0363P		A	·WASHER	0002	0209	6
						0498 / 0001	/	2
	27	NAS1149F0332P		A	·WASHER	0210	0429	9
						0430	0497	6
						0498 / 0001	/	4
	30	MS21044N3		A	·NUT	0002	0429	3
						0430 / 0001	/	2
	33	50048-002	#	A	··STUD	0002		2
	36	NAS1149F0583P	#	A	··WASHER	0002		2
	39	MS35338-45	#	A	··WASHER, SPLIT LOCK	0002		2
	42	MS35649-2312	#	A	··NUT	0002		2
	43	50048-001	@	A	··STUD	3026 / 0001	/	2
	44	NAS1149F0363P	@	A	··WASHER	3026 / 0001	/	2
	45	MS35338-43	@	A	··WASHER, SPLIT LOCK	3026 / 0001	/	2
	46	AN315-3R	@	A	··NUT	3026 / 0001	/	2
	47	NAS43HT3-48		A	·SPACER	0002 / 0001	/	4
	48	NAS1149F0363P		A	·WASHER	3701 / 0027	/	8
-	49	11453-001			·RADIUS BLOCK	0002	0209	2
					BEFORE SB22-24-01			
	51	14754-001			·RADIUS BLOCK	0210 / 0001	/	2
					AFTER SB22-24-01			
-	54	50042-001			·GROUND PLATE	0002	0209	1
					BEFORE SB22-24-01			
	57	50042-002			·GROUND PLATE	0210 / 0001	/	1
					AFTER SB22-24-01			
	60	13929-001	#		·ENGINE GROUND STRAP	0002		1
	61	17668-001	@		·ENGINE GROUND STRAP	3026 / 0001	/	1
	63	MS35335-34		A	·LOCKWASHER	0002 / 0001	/	2
	66	NAS1149F0532P		A	·WASHER	0002 / 0001	/	1
	69	PRT OF ENGINE		A	·NUT	0002 / 0001	/	1
	72	MS21919WDG19		A	·CLAMP	0002 / 0001	/	1
	75	AN3-4A		A	·BOLT	0002 / 0001	/	1
	78	NAS1149F0332P		A	·WASHER	0002 / 0001	/	1
	81	MS21919WDG24	#	A	·CLAMP	0002		1
	82	MS21919WDG29	@	A	·CLAMP	3026 / 0001	/	1
	84	AN3-4A		A	·BOLT	0002 / 0001	/	1
	87	NAS1149F0332P	#	A	·WASHER	0002		1
	88	NAS1149F0316P	@	A	·WASHER	3026 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	90	MS21919WDG29		A	·CLAMP	0002 / 0001	/	1
	93	AN3-4A		A	·BOLT	0002 / 0001	/	1
	96	NAS1149F0332P	#	A	·WASHER	0002		1
	97	NAS1149F0316P	@	A	·WASHER	3026 / 0001	/	1
	99	MS21919WDG18		A	·CLAMP	0002	1750	1
					FOR SPARES USE P/N MS21919WG18			
					FOR SPARES USE P/N MS21919WF18			
						1751	3025	2
	102	MS21919WDG12		A	·CLAMP	0002	1750	1
					FOR SPARES USE P/N MS21919WG12			
					FOR SPARES USE P/N MS21919WF12			
						1751	3025	2
	105	AN3-4A		A	·BOLT	0002	1750	1
						1751	3025	2
	108	NAS1149F0332P		A	·WASHER	0002	1750	1
						1751	3025	2
	111	MS21045-3		A	·NUT	0002	1750	1
						1751	3025	2
					REFERENCE ITEMS NOT PART OF ASSY/INSTL			
	400	RF 24-30-01 DET			PRIMARY ALTERNATOR			
	401	RF 24-30-02 DET			SECONDARY ALTERNATOR			
	402	RF 24-30-03 DET			MASTER CONTROL UNIT			
	403	RF 24-30-03 DET			MCU GROUND STRAP			
	404	RF 24-30-09 DET			BATTERY 1			
	405	RF 71-00-01 DET			STARTER			
	406	RF 71-70-01 DET			ENGINE DRAIN SYSTEM			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					SERIAL NUMBER 22-3676 THRU 22-3678, 22-3681 THRU 22-3695; REFER TO 22-3701 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
			#		INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			
			@		INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.			

Intentionally Left Blank

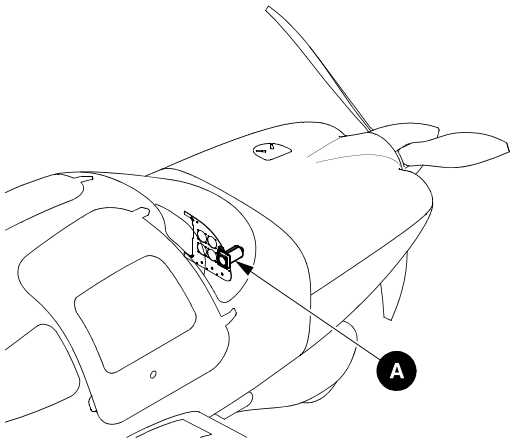

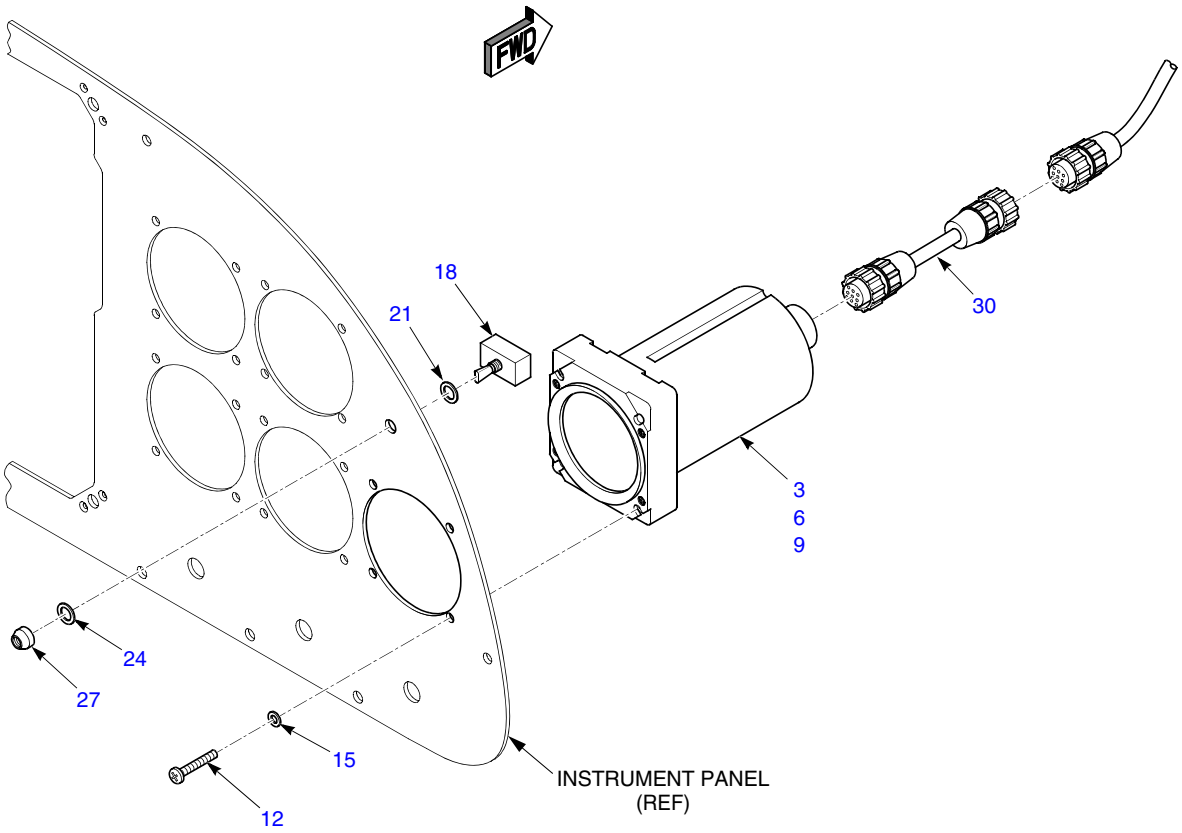

DETAIL A

SR22_PC24_1365A

Figure-08

Amp Meter and Select Switch - Serials 22-0002 thru 22-1662

EFFECTIVITY:
Serials 22-0002 thru 22-1662

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 08	**		AMP METER AND SELECT SWITCH	0002	1662	NP
	3	12618-001			·AMP METER	0002	0782	1
					FOR SPARES USE P/N 11240-001			
	6	11240-001			·AMP METER	0783	1409	1
					FOR SPARES USE P/N 16472-001			
	9	16472-001			·AMP METER	1410	1662	1
	12	50834-014		A	·SCREW	0002	1662	4
	15	50813-001		A	·WASHER	0002	1662	4
	18	50829-001			·SWITCH	0002	1662	1
	21	PRT OF ITM 18			·WASHER	0002	1662	1
	24	50334-001			·WASHER	0002	1662	1
	27	50333-001			·NUT	0002	1662	1
	30	16381-001			·ADAPTOR	0783	1396	1
					AFTER SB2X-24-04			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1602 AND 22-1644; REFER TO 22-1663 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

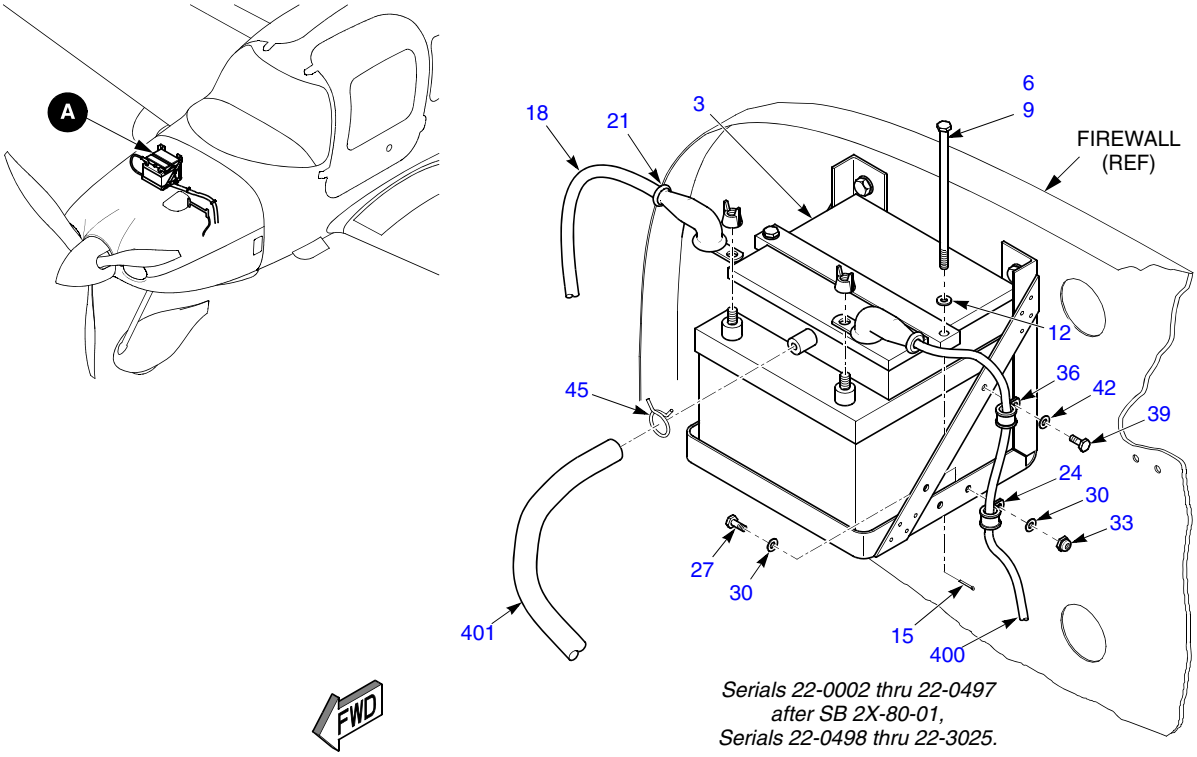

DETAIL A

SR22_PC24_1472B

Figure-09
Battery 1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 09	**		BATTERY 1 INSTALLATION	0002 / 0001	/	NP
	3	50366-001			·BATTERY 1	0002	3025	1
					FOR SPARES USE P/N 53030-001			
	4	53030-001			·BATTERY 1	3026 / 0001	/	1
	6	AN4-72		A	·BOLT	0002	0497	2
	9	AN4-72A		A	·BOLT	0498 / 0001	/	2
	12	NAS1149F0463P		A	·WASHER	0002	3025	2
	13	NAS1149F0432P		A	·WASHER	3026 / 0001	/	2
	15	MS24665-130		A	·COTTER PIN	0002	0497	2
	18	13928-001			·CABLE, BATTERY, GROUND	0002 / 0001	/	1
	21	MS25171-4S			·COVER, ELECTRICAL	0002 / 0001	/	1
	24	MS21919WDG7		A	·CLAMP	0002 / 0001	/	1
	27	AN3-5A		A	·BOLT	0002 / 0001	/	1
	30	NAS1149F0332P		A	·WASHER	0002	3025	1
	31	NAS1149F0316P		A	·WASHER	3026 / 0001	/	1
	33	MS21045-3		A	·NUT	0002 / 0001	/	1
	36	MS21919WDG7		A	·CLAMP	0002 / 0001	/	1
	39	AN3-5A		A	·BOLT	0002 / 0001	/	1
	42	NAS1149F0332P		A	·WASHER	0002	3025	1
	43	NAS1149F0316P		A	·WASHER	3026 / 0001	/	1
	45	50152-001		A	·CLAMP	0002	3025	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 24-30-03 DET			BATTERY CABLE			
	401	RF 71-70-01 DET			ENGINE DRAIN SYSTEM			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

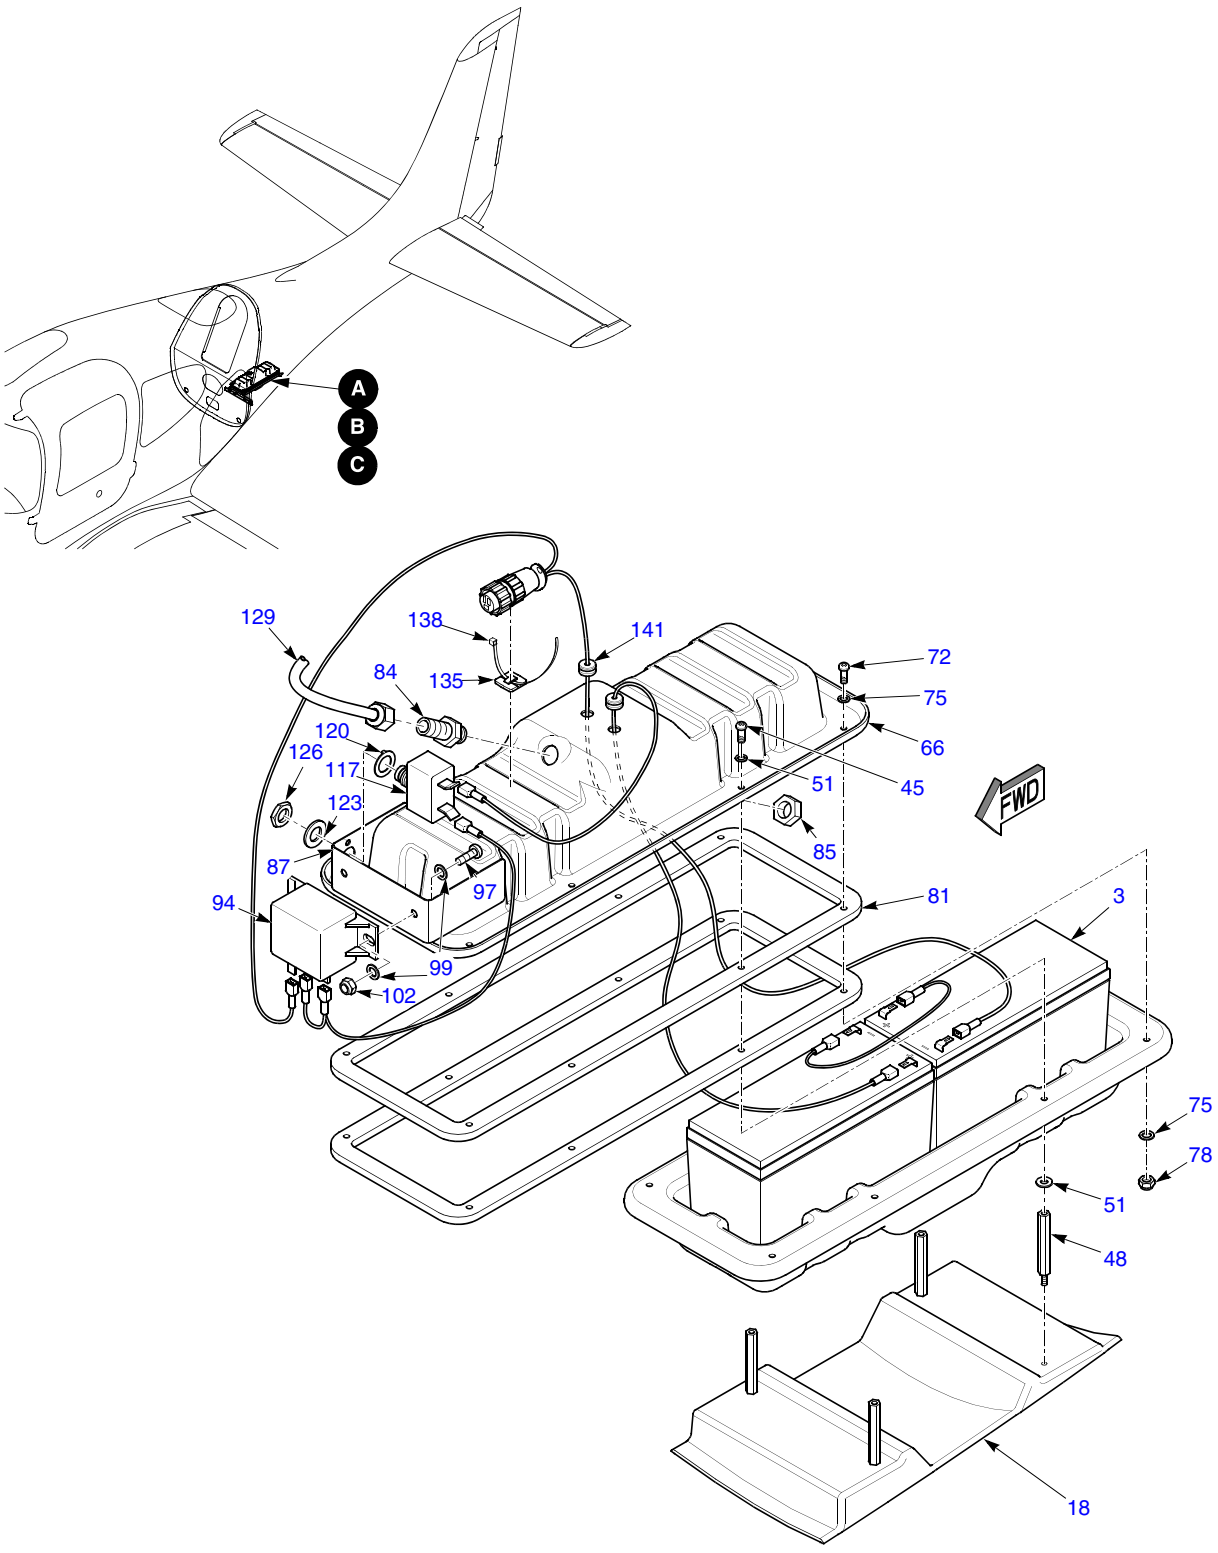

DETAIL A

Serials 22-0002 thru 22-0820.

SR22_PC24_1152C

Figure-10

Battery 2 - Serials 22-0002 thru 22-0820 (1 of 3)

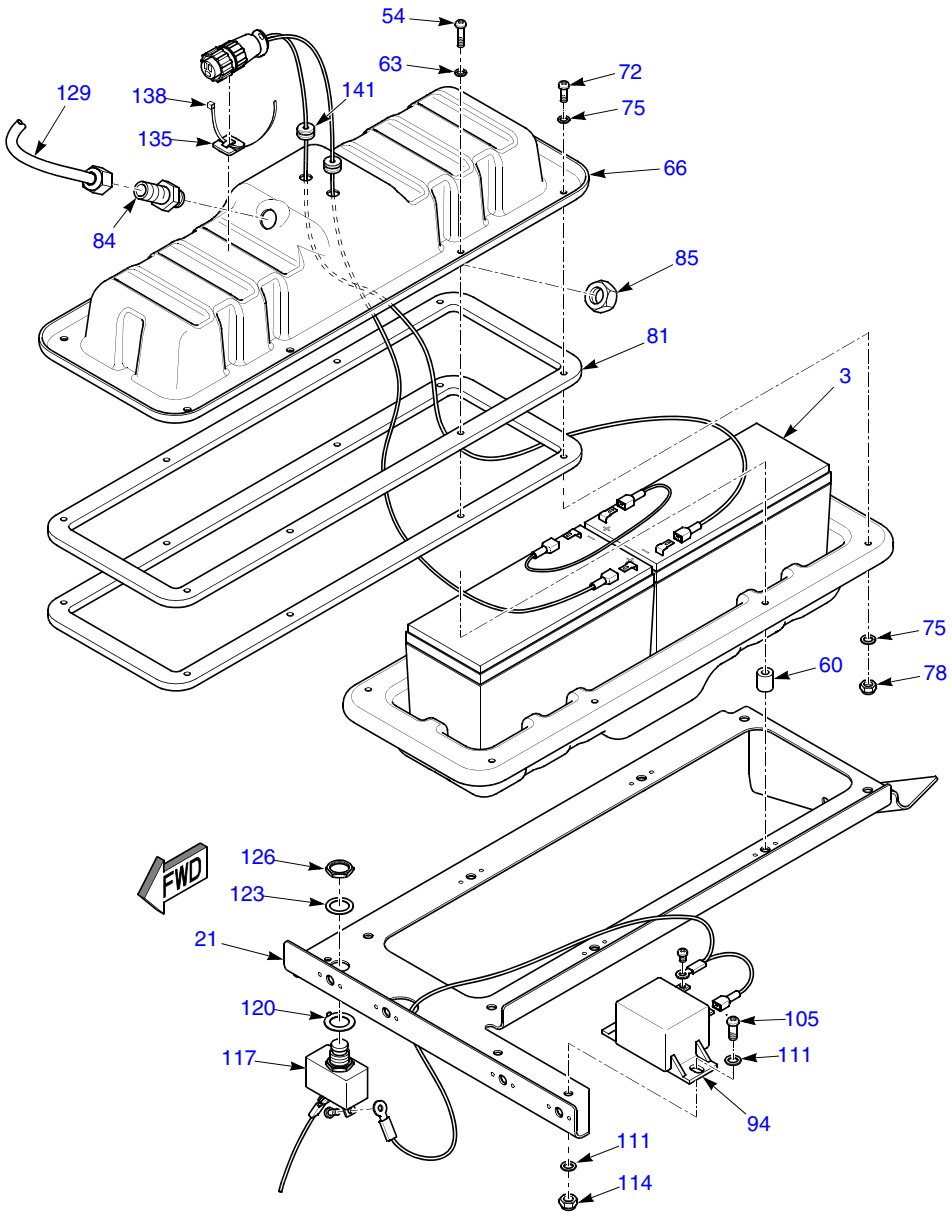

DETAIL B

Serials 22-0821 & subs w/o Perspective Avionics.

SR22_PC24_1361A

Figure-10

Battery 2 - Serials 22-0821 & subs w/o Perspective (2 of 3)

EFFECTIVITY:
Serials 22-0821 & subs w/o Perspective

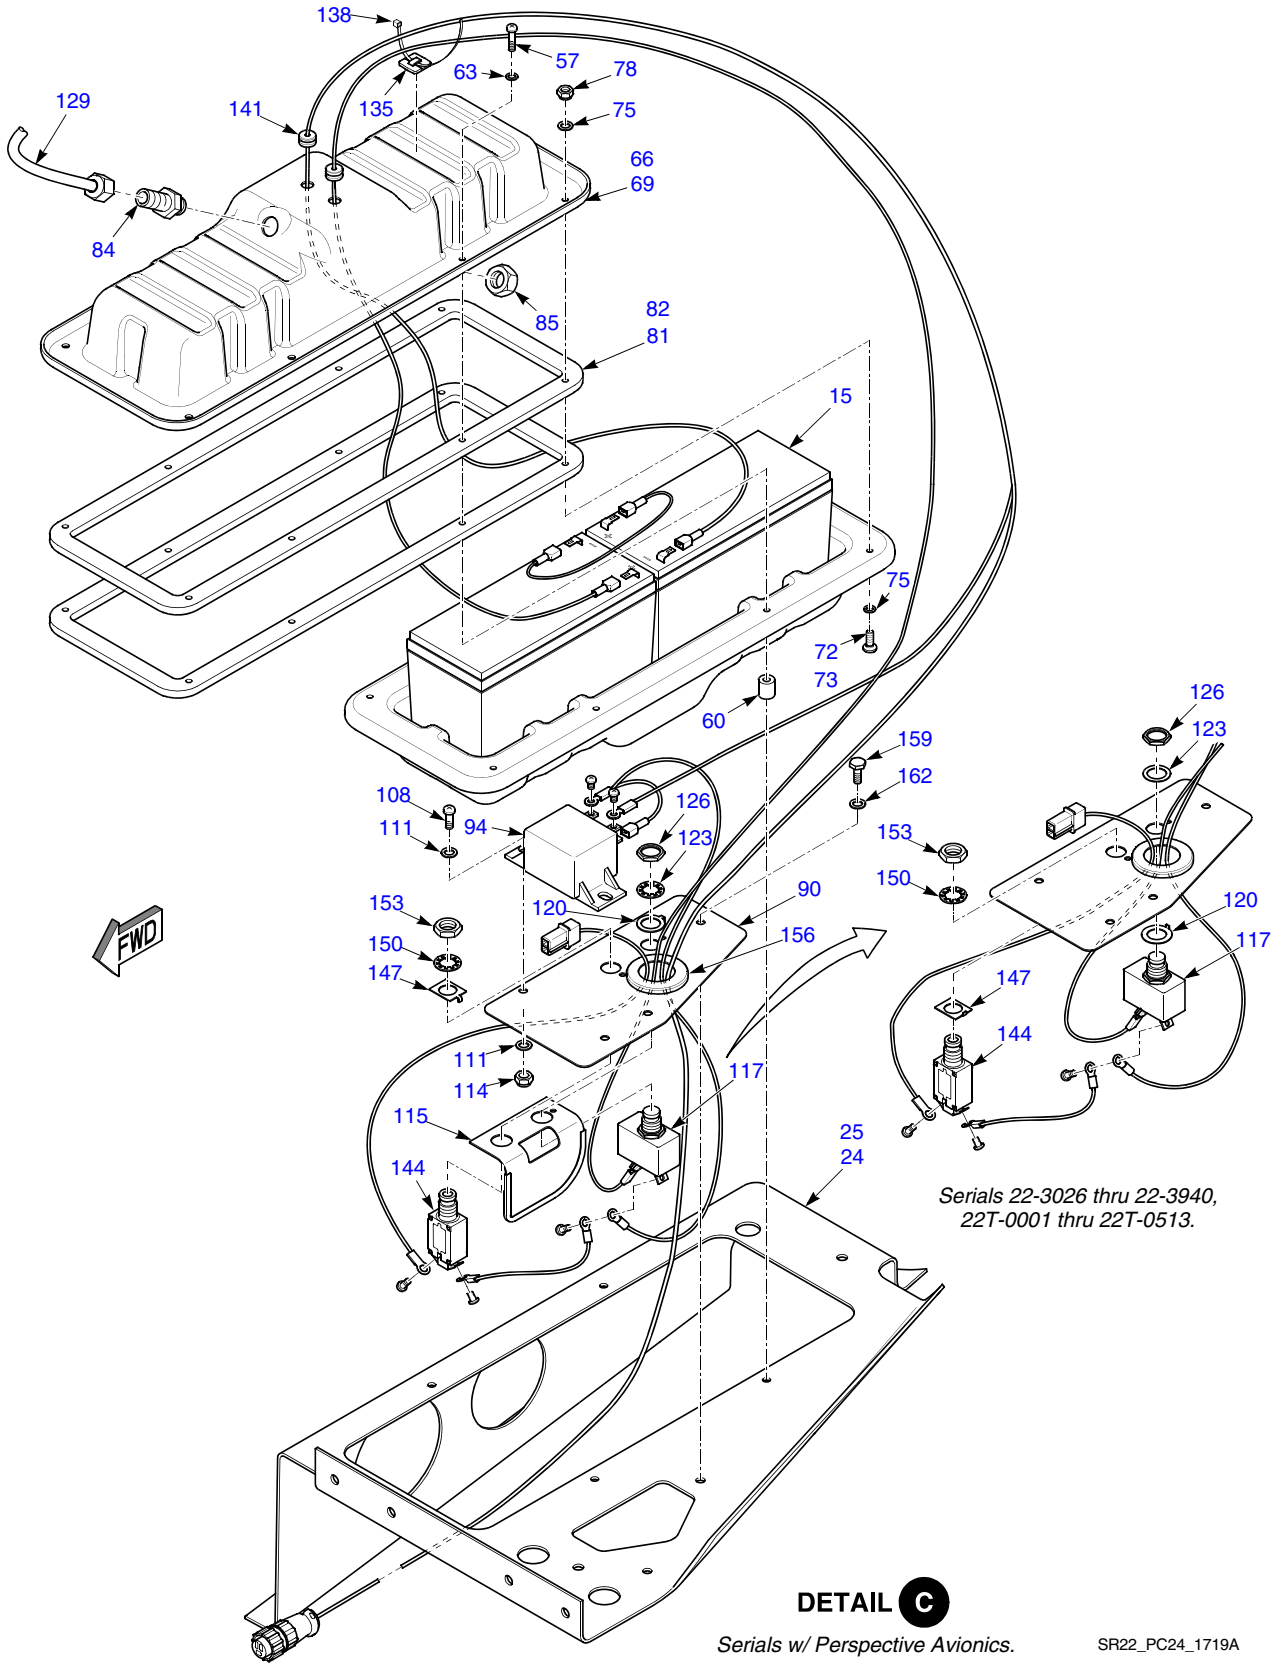

Figure-10

Battery 2 - Serials w/ Perspective (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 10	**		BATTERY 2 INSTALLATION	0002 / 0001	/	NP
	3	50979-001	#		·BATTERY 2	0002		2
					ALTERNATE FOR P/N 18615-001			
-	6	18615-001	#		·BATTERY 2	0002		2
					ALTERNATE FOR P/N 50979-001			
-	9	21063-001	@		·BATTERY 2	3026	3402	2
-	12	50979-001	@		·BATTERY 2	3403 / 0001	/	2
					ALTERNATE FOR P/N 24947-001			
	15	24947-001	@		·BATTERY 2	3403 / 0001	/	2
					ALTERNATE FOR P/N 50979-001			
	18	14222-001			·MOUNTING TRAY	0002	0820	1
	21	20098-001	#		·MOUNTING TRAY	0821		1
	24	19040-001	@		·BATTERY 2 SHELF	3026 / 0001	3914 / 0441	1
	25	29588-002			·BATTERY 2 SHELF	3915 / 0442	/	1
-	27	14217-001			·BATTERY 2 ENCLOSURE ASSEMBLY	0002	0820	1
-	30	15914-001	#		·BATTERY 2 ENCLOSURE ASSEMBLY	0821		1
-	33	24557-002	@		·BATTERY 2 ENCLOSURE ASSEMBLY	3026	3402	1
					ALTERNATE FOR P/N 24557-003			
-	36	24557-003	@		·BATTERY 2 ENCLOSURE ASSEMBLY	3026	3402	1
					ALTERNATE FOR P/N 24557-002			
-	39	24685-001	@		·BATTERY 2 ENCLOSURE ASSEMBLY	3403	3494	1
-	42	24685-002	@		·BATTERY 2 ENCLOSURE ASSEMBLY	3495 / 0001	3914 / 0441	1
-	43	24763-001			·BATTERY 2 ENCLOSURE ASSEMBLY	3915 / 0442	/	1
	45	MS35206-234		A	·SCREW	0002	0820	4
	48	51034-001		A	·STAND-OFF	0002	0820	4
	51	NAS1149FN816P		A	·WASHER	0002	0820	8
	54	MS35206-249	#	A	·SCREW	0821		4
	57	NAS1801-08-24	@	A	·SCREW	3026 / 0001	/	4
	60	NAS43DD3-24FC		A	·STAND-OFF	0821 / 0001	/	4
	63	NAS1149DN832J		A	·WASHER	0821 / 0001	/	4
	66	14218-001	#		··BATTERY 2 ENCLOSURE	0002		2
			@			3403 / 0001	/	
	69	21062-001	@		··BATTERY 2 ENCLOSURE	3026	3402	2
	72	MS35206-234	#	A	··SCREW	0002		4
			@			3026	3402	4
	73	MS35206-232	@	A	··SCREW	3403 / 0001	/	4
	75	NAS1149FN632P		A	··WASHER	0002 / 0001	/	8
	78	MS21044N06		A	··NUT	0002 / 0001	/	4
	81	50996-001			···SEAL	0002 / 0001	3914 / 0441	2
	82	24763-101			···SEAL	3915 / 0442	/	2
	84	50133-001			···BULKHEAD UNION	0002 / 0001	/	1
	85	PRT OF ITM 84			···NUT	0002 / 0001	/	1
	87	14270-001			···BATTERY 2 RELAY SUPPORT	0002	0820	1
	90	18984-001	@		···BATTERY 2 RELAY SUPPORT PLATE	3026 / 0001	/	1
-	93	50962-001			···RELAY	0002 / 0001	4227 / 1091	1
	94	50962-002			···RELAY	4228 / 1092	/	1
					ALTERNATE FOR P/N 50962-003			
-	95	50962-003			···RELAY	4228 / 1092	/	1
					ALTERNATE FOR P/N 50962-002			
-	96	35774-001			···RELAY SUPPRESSION ASSEMBLY	4228		
	97	MS35206-260		A	···SCREW	0002	0820	2
	99	NAS1149F0363PL		A	···WASHER	0002	0820	4
	102	MS21044N5		A	···NUT	0002	0820	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	105	MS27039-1-07	#	A	···SCREW	0821		2
	108	MS27039-1-08	@	A	···SCREW	3026 / 0001	/	2
	111	NAS1149F0316P		A	···WASHER	0821 / 0001	/	4
	114	MS21083N3		A	···NUT	0821 / 0001	/	2
	115	29585-002			···ISOLATING BRACKET	3941 / 0514	/	1
	117	51033-030			···CIRCUIT BREAKER, 30A	0002 / 0001	/	1
	120	PRT OF ITM 117		A	···TABBED WASHER	0002 / 0001	/	1
	123	PRT OF ITM 117		A	···WASHER	0002 / 0001	/	1
	126	PRT OF ITM 117		A	···NUT	0002 / 0001	/	1
	129	50929-025			···DRAIN TUBE	0002 / 0001	/	1
-	132	50388-001		A	···TUBE CONNECTOR	0002 / 0001	/	1
	135	50132-001		A	···CABLE TIE ANCHOR	0002 / 0001	/	1
	138	50239-020		A	···CABLE TIE	0002 / 0001	/	1
	141	MS35489-2		A	···GROMMET	0002 / 0001	/	2
	144	50350-010	@		···CIRCUIT BREAKER, 10A	3026 / 0001	/	1
	147	PRT OF ITM 144	@	A	···TABBED WASHER	3026 / 0001	/	1
	150	PRT OF ITM 144	@	A	···WASHER	3026 / 0001	/	1
	153	PRT OF ITM 144	@	A	···NUT	3026 / 0001	/	1
	156	MS21266-2N	@	A	···GROMMET	3026 / 0001	/	1
	159	AN3-4A	@		···BOLT	3026 / 0001	/	2
	162	NAS1149D0316K	@	A	···WASHER	3026 / 0001	/	2

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

SERIAL NUMBER 22-3453; REFER TO 22-3495 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

\# INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.

@ INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.

Intentionally Left Blank

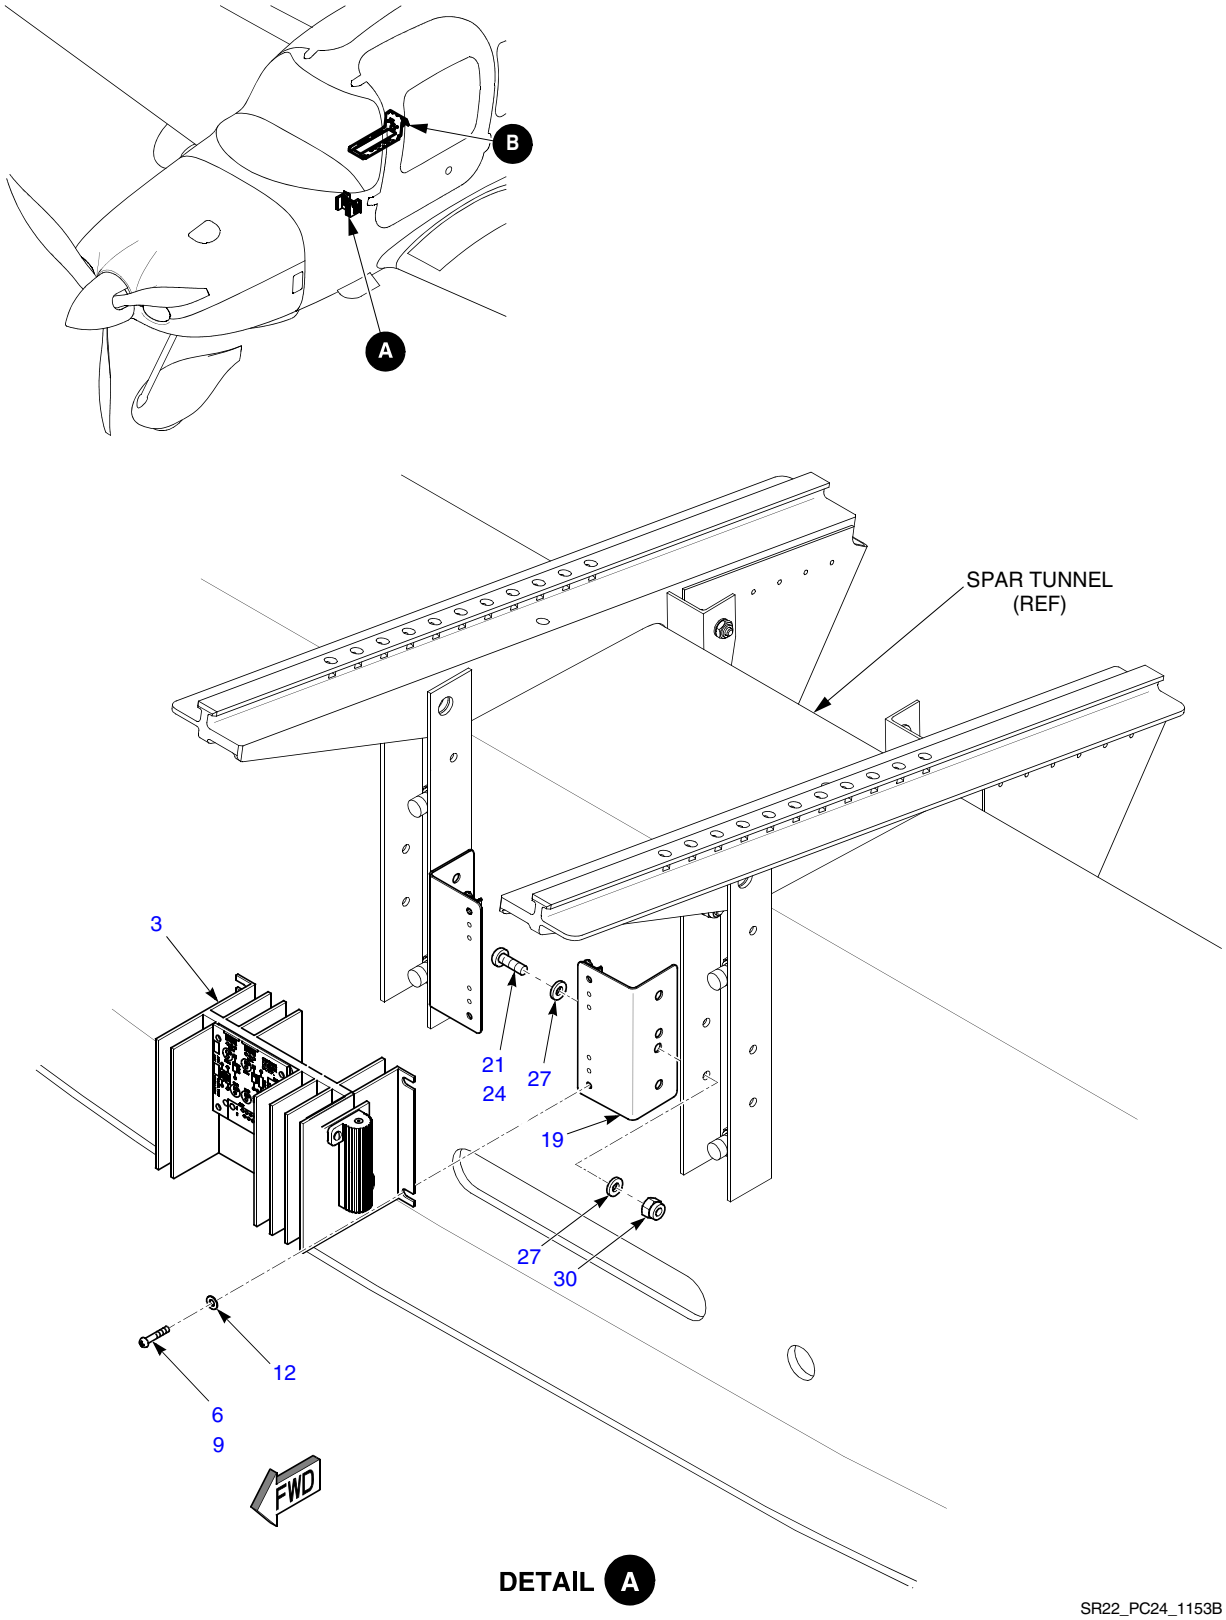

Figure-01
Convenience Power Circuit Card & Outlets (1 of 2)

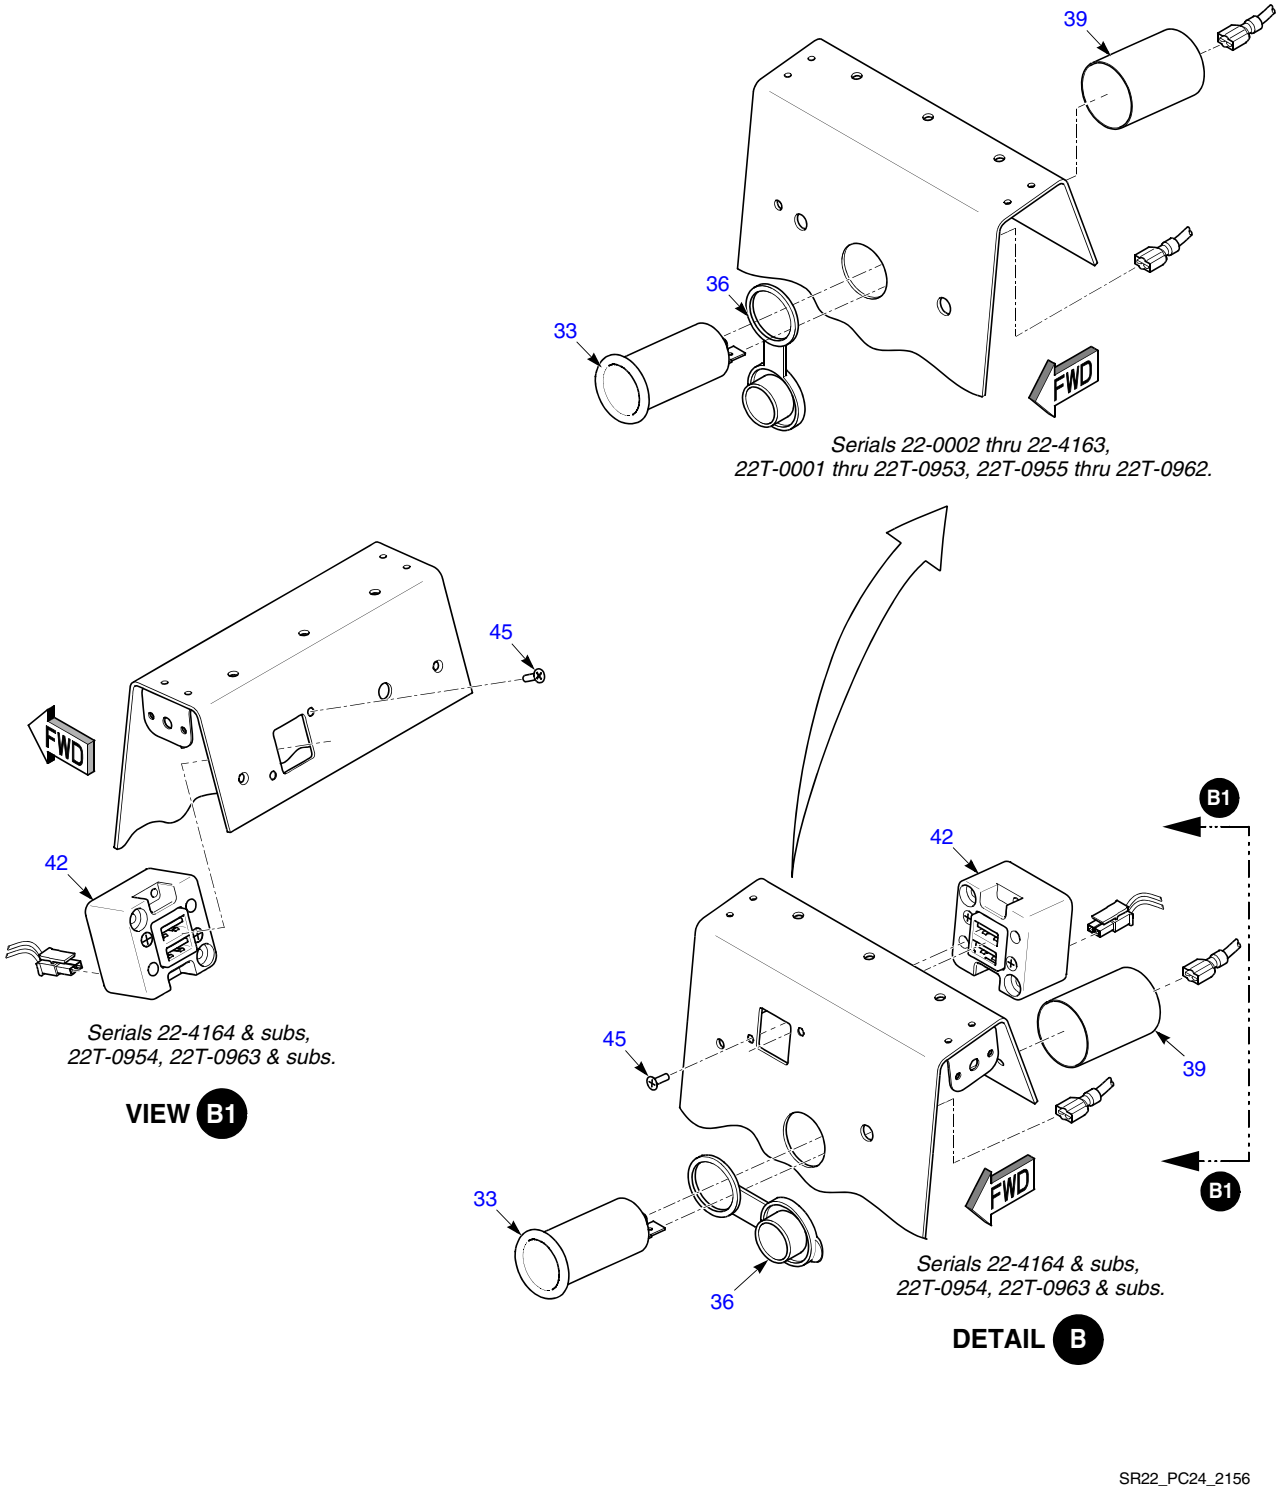

Figure-01
Convenience Power Circuit Card & Outlets (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			CONVENIENCE POWER CIRCUIT CARD INSTALLATION	0002 / 0001	/	NP
	3	12016-002			·CONVENIENCE POWER CIRCUIT CARD	0002 / 0001	/	1
	6	MS35206-214		A	·SCREW	0002 / 0001	/	4
					ALTERNATE FOR P/N MS35206-215			
	9	MS35206-215		A	·SCREW	0002 / 0001	/	4
					ALTERNATE FOR P/N MS35206-214			
	12	NAS1149FN432P		A	·WASHER	0002 / 0001	/	4
-	15	12424-001			·BRACKET, CONVENIENCE POWER MOUNTING	0002	0617	2
-	18	12424-002			·BRACKET, CONVENIENCE POWER MOUNTING	0618 / 0001	3870 / 0371	2
					FOR SPARES USE P/N 12424-003			
	19	12424-003			·BRACKET, CONVENIENCE POWER MOUNTING	3871 / 0372	/	2
	21	MS35206-243		A	·SCREW	0002 / 0001	/	4
					ALTERNATE FOR P/N MS35206-244			
	24	MS35206-244		A	·SCREW	0002 / 0001	/	4
					ALTERNATE FOR P/N MS35206-243			
	27	NAS1149FN832P		A	·WASHER	0002 / 0001	/	8
	30	MS21083N08		A	·NUT	0002 / 0001	/	4
	33	50300-001			·CONVENIENCE OUTLET	0002 / 0001	/	1
	36	50301-001			·COVER	0002 / 0001	/	1
	39	PRT OF ITM 33			·CONVENIENCE OUTLET HOUSING	0002 / 0001	/	1
	42	34841-001			·DUAL USB CHARGING PORT	4164 / 0963	/	2
	45	34841-112		A	·SCREW	4164 / 0963		4

Intentionally Left Blank

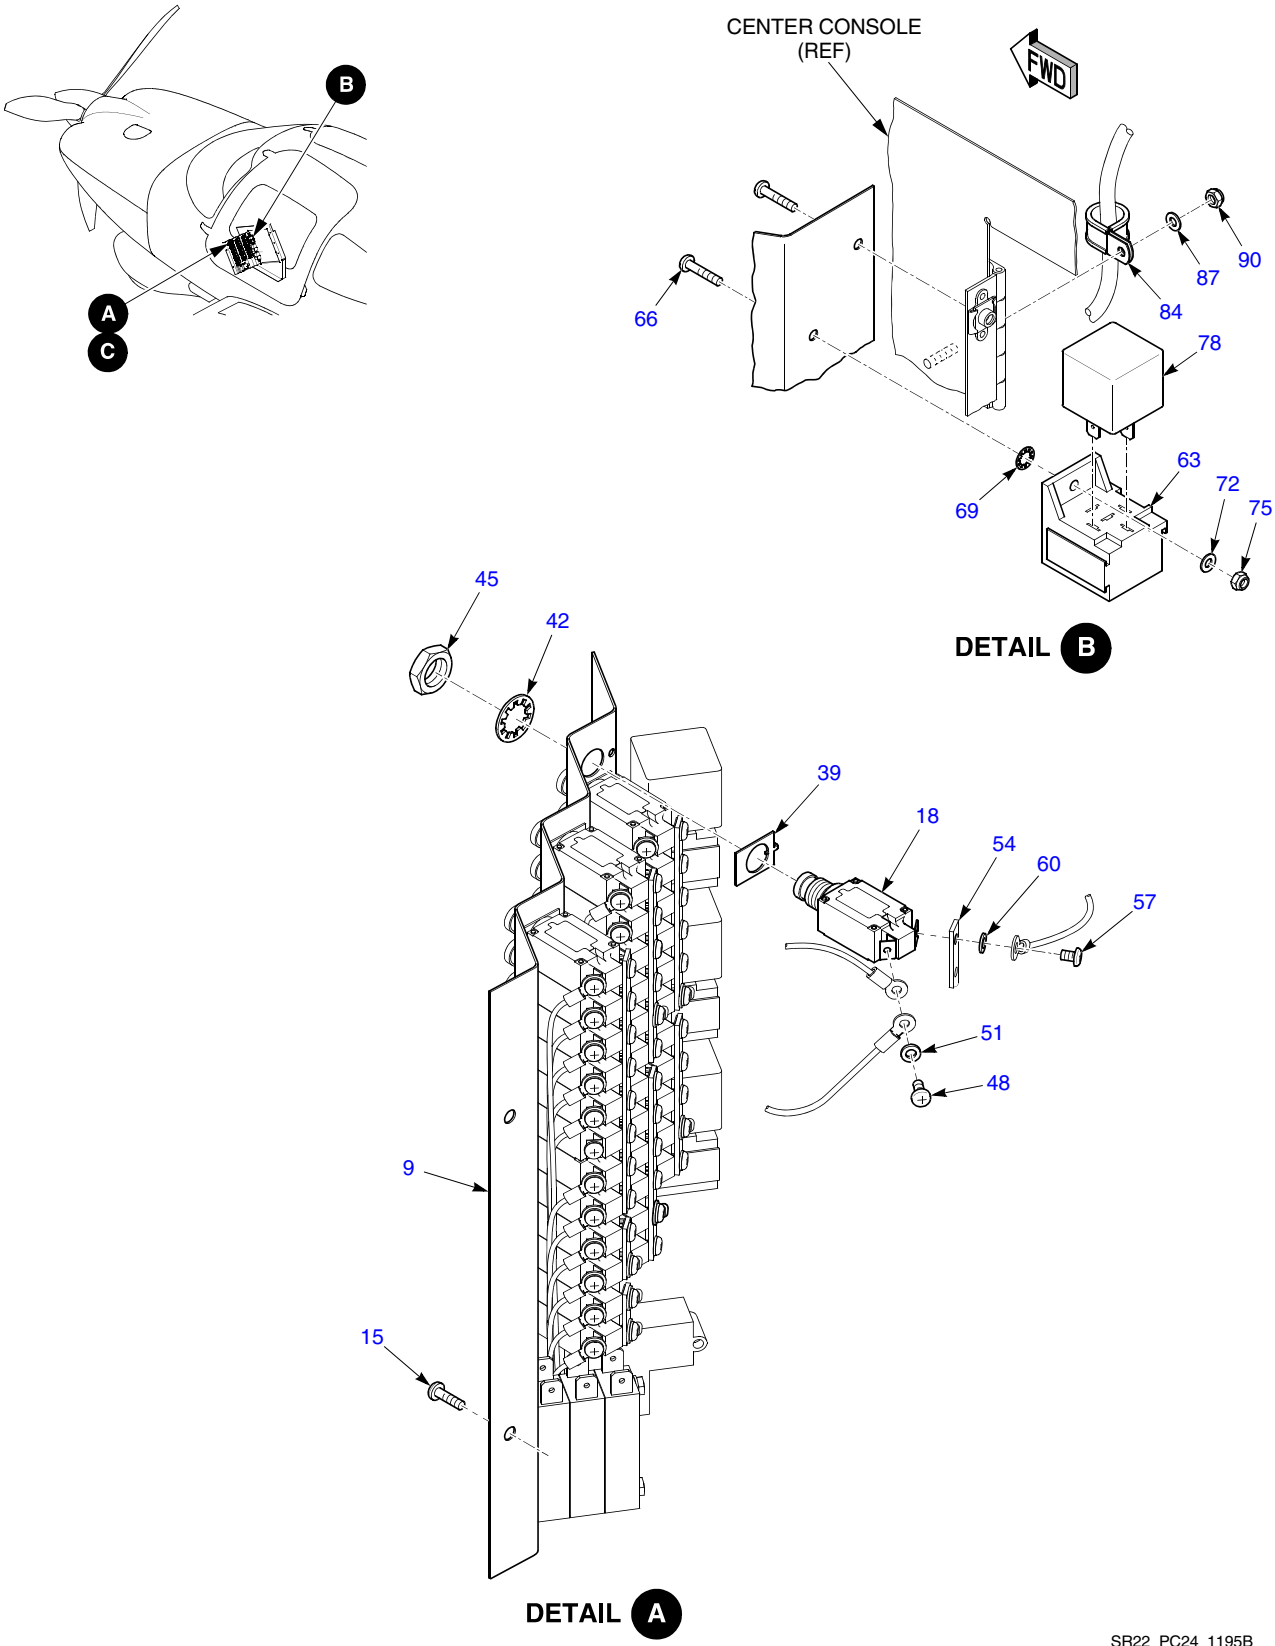

Serials 22-0002 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

Figure-02

Circuit Breaker Panel - Serials w/o Perspective (1 of 2)

EFFECTIVITY:
Serials w/o Perspective

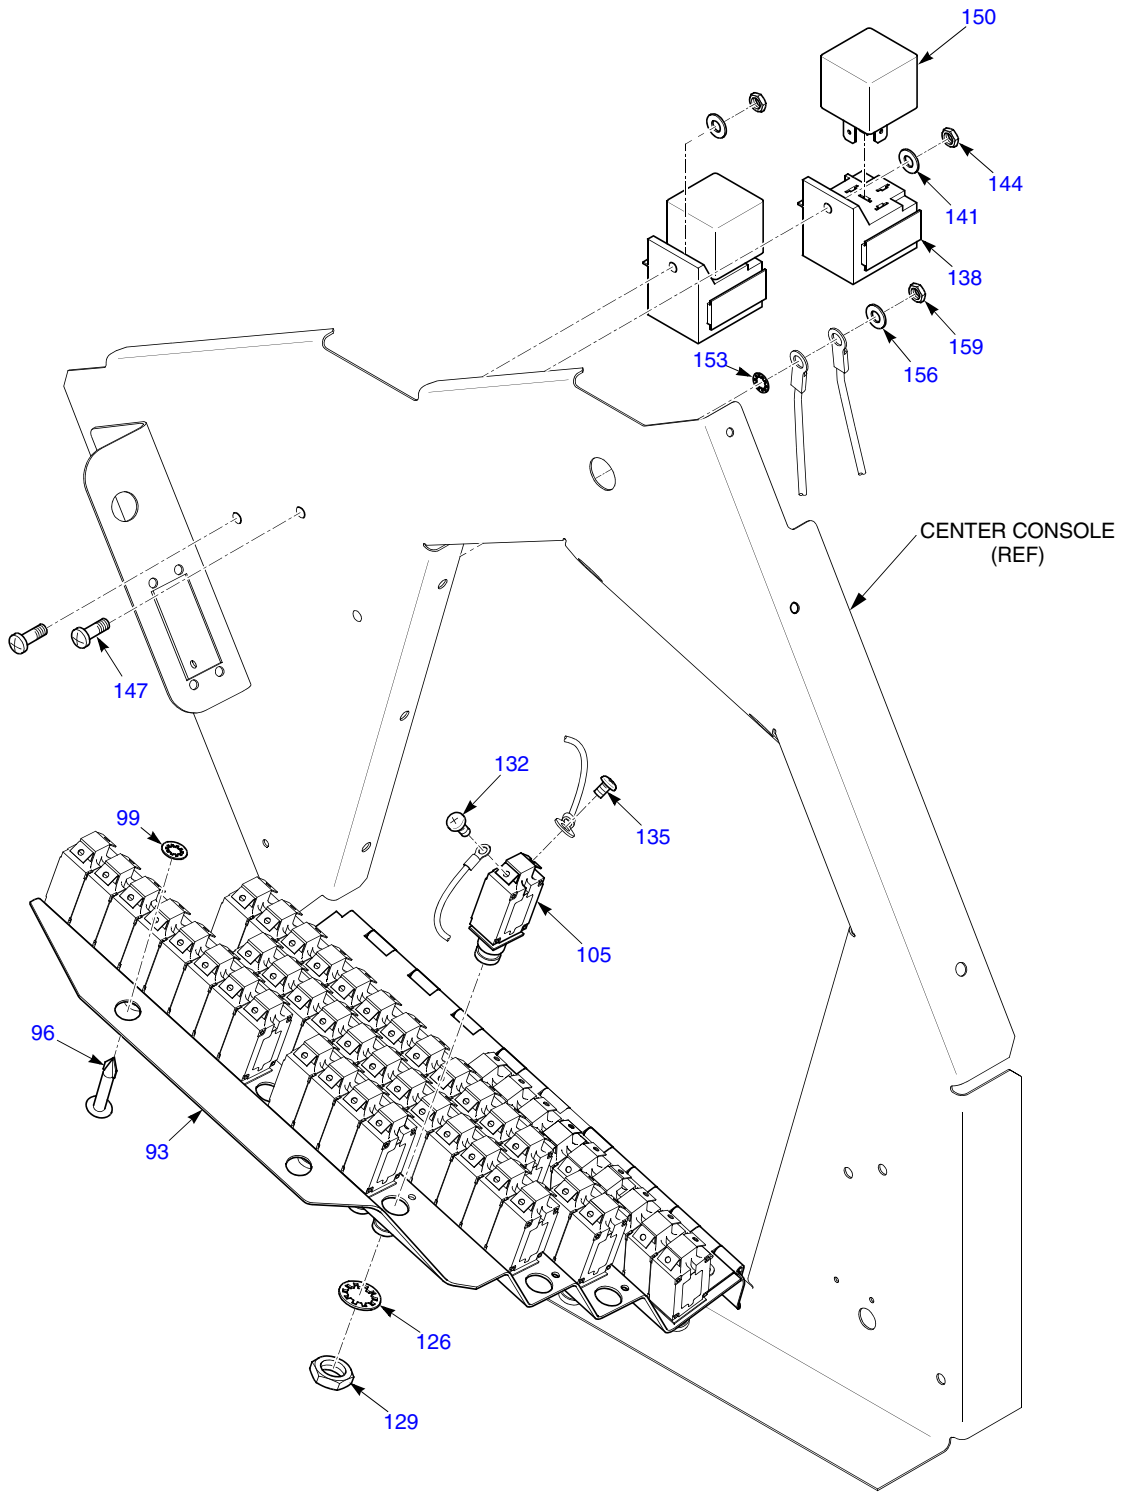

DETAIL C

Serials 22-3026 & subs w/ Perspective Avionics, 22T-0001 & subs.

SR22_PC24_1823A

Figure-02

Circuit Breaker Panel - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		CIRCUIT BREAKER PANEL	0002 / 0001	/	NP
-	2	NO PRT NUMBER			·CIRCUIT BREAKER PANEL ASSY W/O PERSPECTIVE	0002		NP
-	3	13720-001			··CIRCUIT BREAKER PANEL	0002	0333	1
-	6	13720-002			··CIRCUIT BREAKER PANEL	0334	1862	1
	9	21466-001			··CIRCUIT BREAKER PANEL	1863		1
-	12	MS35214-44		A	··SCREW	0002	0118	2
	15	50835-012		A	··SCREW	0119		2
	18	50350-002			···CIRCUIT BREAKER, 2A	0002		8
-	21	50350-003	@		···CIRCUIT BREAKER, 3A	0002		4
-	24	50350-005	@		···CIRCUIT BREAKER, 5A	0002		12
-	27	50350-007	@		···CIRCUIT BREAKER, 7.5A	0002		3
-	30	50350-010			···CIRCUIT BREAKER, 10A	0002		3
-	33	50350-015	@		···CIRCUIT BREAKER, 15A	0002		2
-	36	50350-020			···CIRCUIT BREAKER, 20A	0002		2
	39	PRT OF BREAKER		A	···WASHER	0002		1
	42	PRT OF BREAKER		A	···WASHER	0002		1
	45	PRT OF BREAKER		A	···NUT	0002		1
	48	MS35206-226	#		····SCREW	0002		2
	51	PRT OF BREAKER			····WASHER	0002		2
	54	11890-001			···BUS BAR, CIRCUIT BREAKER	0002		AR
	57	MS35206-226		A	···SCREW	0002		1
	60	PRT OF BREAKER		A	···WASHER	0002		1
	63	50289-001			···RELAY SOCKET	0002		3
	66	MS35214-40		A	···SCREW	0002		3
	69	MS35335-31		A	···WASHER	0002		3
	72	NAS1149FN832P		A	···WASHER	0002		3
	75	MS21083N08		A	···NUT	0002		3
	78	50288-001			···RELAY	0002		3
-	81	50095-001			···HOLE PLUG	0002		AR
	84	MS21919WDG14			···ADEL CLAMP	1644		1
	87	NAS1149F0332P		A	···WASHER	1644		1
	90	MS21083N3		A	···NUT	1644		1
-	91	NO PRT NUMBER			·CIRCUIT BREAKER PANEL ASSY W/ PERSPECTIVE	3026 / 0001	/	NP
	93	19321-001			··CIRCUIT BREAKER PANEL	3026 / 0001	/	1
	96	53057-001		A	··TURN STUD	3026 / 0001	/	2
	99	53055-001		A	··RETAINER	3026 / 0001	/	2
-	102	53117-001		A	··SNAP-IN RETAINER	3026 / 0001	/	2
	105	50350-002			···CIRCUIT BREAKER, 2A	3026 / 0001	/	5
-	108	50350-003	@		···CIRCUIT BREAKER, 3A	3026 / 0001	/	8
-	111	50350-005	@		···CIRCUIT BREAKER, 5A	3026 / 0001	/	24
-	114	50350-007	@		···CIRCUIT BREAKER, 7.5A	3026 / 0001	/	3
-	117	50350-010			···CIRCUIT BREAKER, 10A	3026 / 0001	/	2
-	120	50350-015	@		···CIRCUIT BREAKER, 15A	3026 / 0001	/	2
-	123	50350-020			···CIRCUIT BREAKER, 20A	3026 / 0001	/	2
	126	PRT OF BREAKER		A	···WASHER	3026 / 0001	/	1
	129	PRT OF BREAKER		A	···NUT	3026 / 0001	/	1
	132	MS35206-226			····SCREW	3026 / 0001	/	2
	135	MS35206-226			····SCREW	3026 / 0001	/	2
	138	50289-001			···RELAY SOCKET	3026 / 0001	/	2
	141	NAS1149FN832P		A	···WASHER	3026 / 0001	/	2
	144	MS21083N03		A	···NUT	3026 / 0001	/	2
	147	MS35207-263		A	···SCREW	3026 / 0001	/	2
	150	50288-001			···RELAY	3026 / 0001	/	2
	153	MS35335-32		A	···WASHER	3026 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	156	NAS1149FN832P		A	···WASHER	3026 / 0001	/	1
	159	MS21083N3		A	···NUT	3026 / 0001	/	1
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PRT IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE FOR PRT IDENTIFICATION.			
			@		QUANTITY WILL VARY WITH OPTIONAL EQUIPMENT INSTALLED.			
			#		USE SCREW SUPPLIED WITH CIRCUIT BREAKER IF SECURING ONE TERMINAL RING PER LOCATION. USE MS35206-226 IF ATTACHING TWO TERMINAL RINGS PER LOCATION.			

EFFECTIVITY:
All

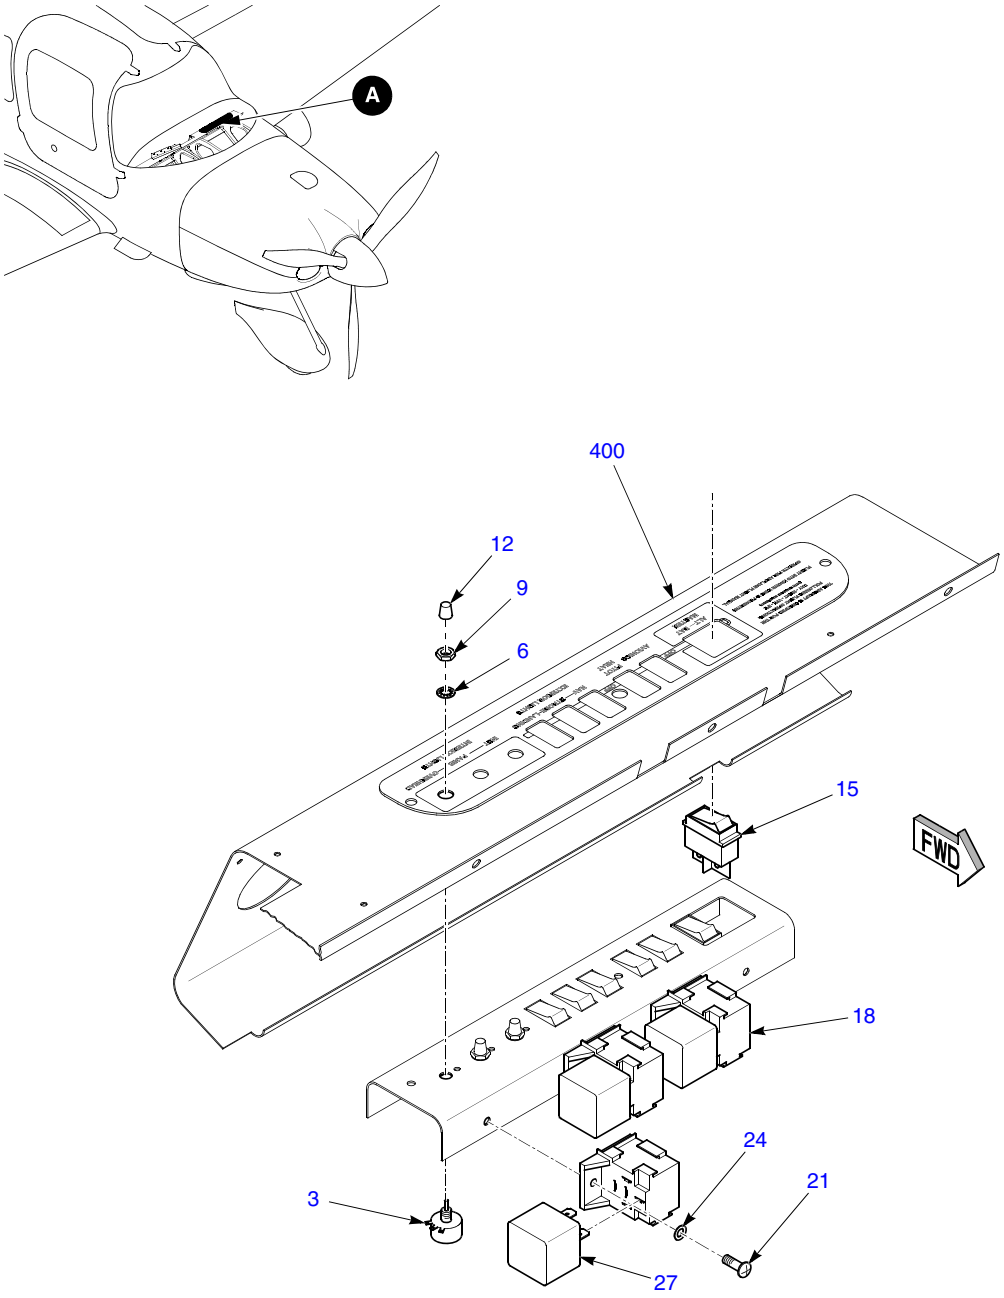

DETAIL A

Serials 22-0002 thru 22-0138.

SR22_PC24_1139B

Figure-03
Bolster Panel - Switch - Serials 22-0002 thru 22-0138

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			BOLSTER PANEL - SWITCH	0002	0138	NP
	3	50328-001			·POTENTIOMETER	0002	0138	3
	6	PRT OF ITM 3		A	·NUT	0002	0138	3
	9	PRT OF ITM 3		A	·STAR WASHER	0002	0138	3
	12	50181-001			·KNOB, SINGLE	0002	0138	3
	15	50321-001			·SWITCH	0002	0138	9
	18	50289-001			·RELAY SOCKET	0002	0138	4
	21	MS35206-245		A	·SCREW	0002	0138	4
	24	NAS1149FN832P		A	·WASHER	0002	0138	4
	27	50288-001			·RELAY	0002	0138	4
-	30	12392-001			·SWITCH DECAL	0002	0138	9
					REFERENCE ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 31-10-02 DET			BOLSTER SWITCH PANEL			

EFFECTIVITY:
All

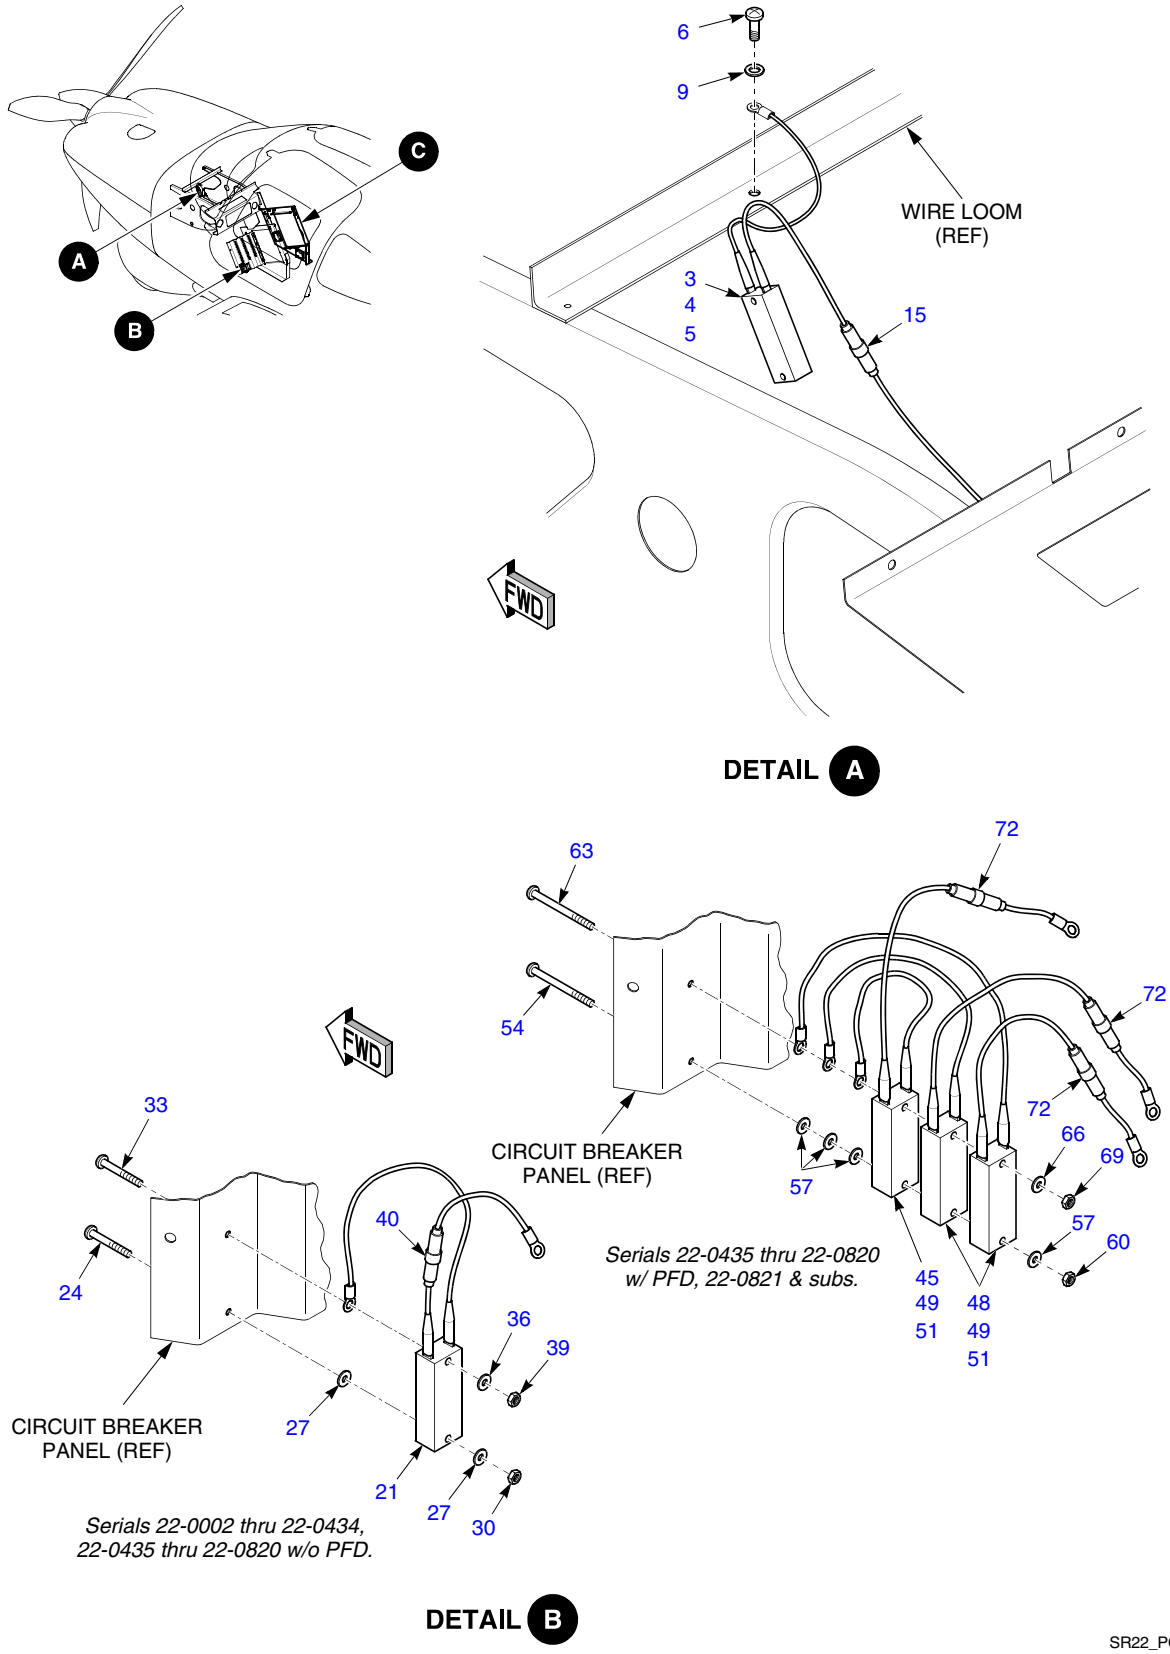

Figure-04

Transient Voltage Suppressors - Serials w/o Perspective (1 of 2)

EFFECTIVITY:
Serials w/o Perspective

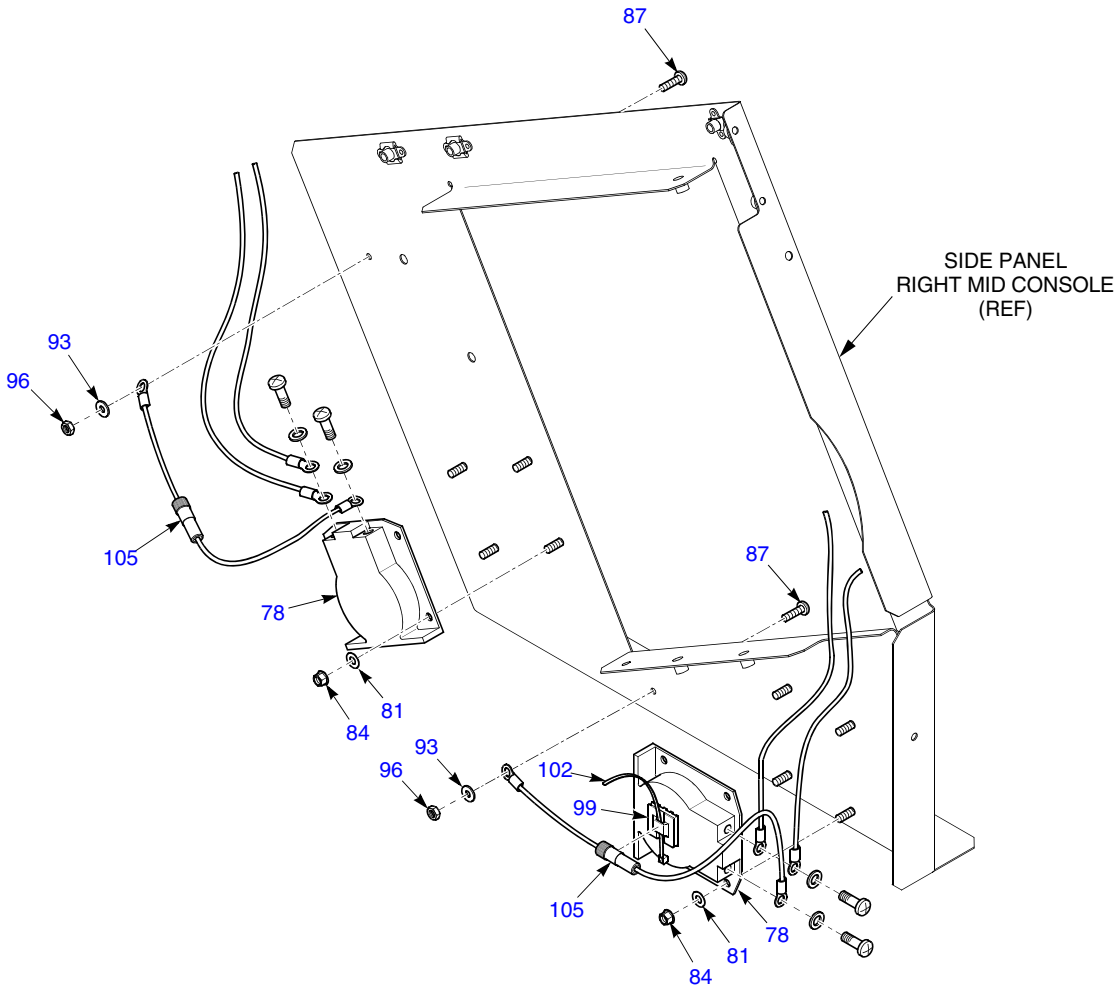

Figure-04

Transient Voltage Suppressors - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04	**		TRANSIENT VOLTAGE SUPPRESSOR INSTALLATION	0002 / 0001	/	NP
	3	50789-001			·TVS	0002	3025	1
					FOR SPARES USE P/N 18968-001			
	4	12980-003			·TVS	3026		1
					FOR SPARES USE P/N 18968-001			
	5	18968-001			·TVS	3026		1
	6	MS35206-245		A	·SCREW	0002		1
	9	NAS1149FN832P		A	·WASHER	0002		1
-	12	50239-020		A	·CABLE TIE	0002		2
	15	50961-001			·FUSE, 2A	0002		1
-	18	NO PRT NUMBER			·TVS INSTALLATION W/O PFD	0002	0820	NP
	21	12980-001			··TVS	0002	0820	1
					FOR SPARES USE P/N 12980-004			
	24	MS35214-20		A	··SCREW	0002	0820	1
	27	NAS1149FN432P		A	··WASHER	0002	0820	2
	30	MS21044N04		A	··NUT	0002	0820	1
	33	MS35214-20		A	··SCREW	0002	0820	1
	36	NAS1149FN432P		A	··WASHER	0002	0820	1
	39	MS21044N04		A	··NUT	0002	0820	1
	40	50961-001			···FUSE, 2A	0002	0820	1
-	42	NO PRT NUMBER			·TVS INSTALLATION W/ AVIDYNE PFD	0435		NP
	45	12980-001			··TVS	0435	3025	1
					FOR SPARES USE P/N 12980-004			
	48	12980-002			··TVS	0435	3025	2
					FOR SPARES USE P/N 12980-004			
	49	12980-003			··TVS	3026		3
					FOR SPARES USE P/N 12980-004			
	51	12980-004			··TVS	3026		3
	54	51274-001		A	··SCREW	0435		1
	57	NAS1149FN432P		A	··WASHER	0435		4
	60	MS21044N04		A	··NUT	0435		1
	63	51274-001		A	··SCREW	0435		1
	66	NAS1149FN432P		A	··WASHER	0435		1
	69	MS21044N04		A	··NUT	0435		1
	72	50961-001			···FUSE, 2A	0435		2
-	75	NO PRT NUMBER			·TVS INSTALLATION W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	78	53023-001			··TVS	3026 / 0001	/	2
	81	NAS1149FN832P		A	··WASHER	3026 / 0001	/	8
	84	MS21042-08		A	··NUT	3026 / 0001	/	8
	87	MS35207-262		A	··SCREW	3026 / 0001	/	2
					ALTERNATE FOR P/N MS27039-1-07			
-	90	MS27039-1-07		A	··SCREW	3026 / 0001	/	2
					ALTERNATE FOR P/N MS35207-262			
	93	NAS1149F0332P		A	··WASHER	3026 / 0001	/	2
	96	MS21083N3		A	··NUT	3026 / 0001	/	2
	99	50132-001		A	··CABLE TIE ANCHOR	3026 / 0001	/	1
	102	50239-020		A	··CABLE TIE	3026 / 0001	/	1
	105	53009-015			··FUSE, 15A, 32V	3026 / 0001	/	2
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

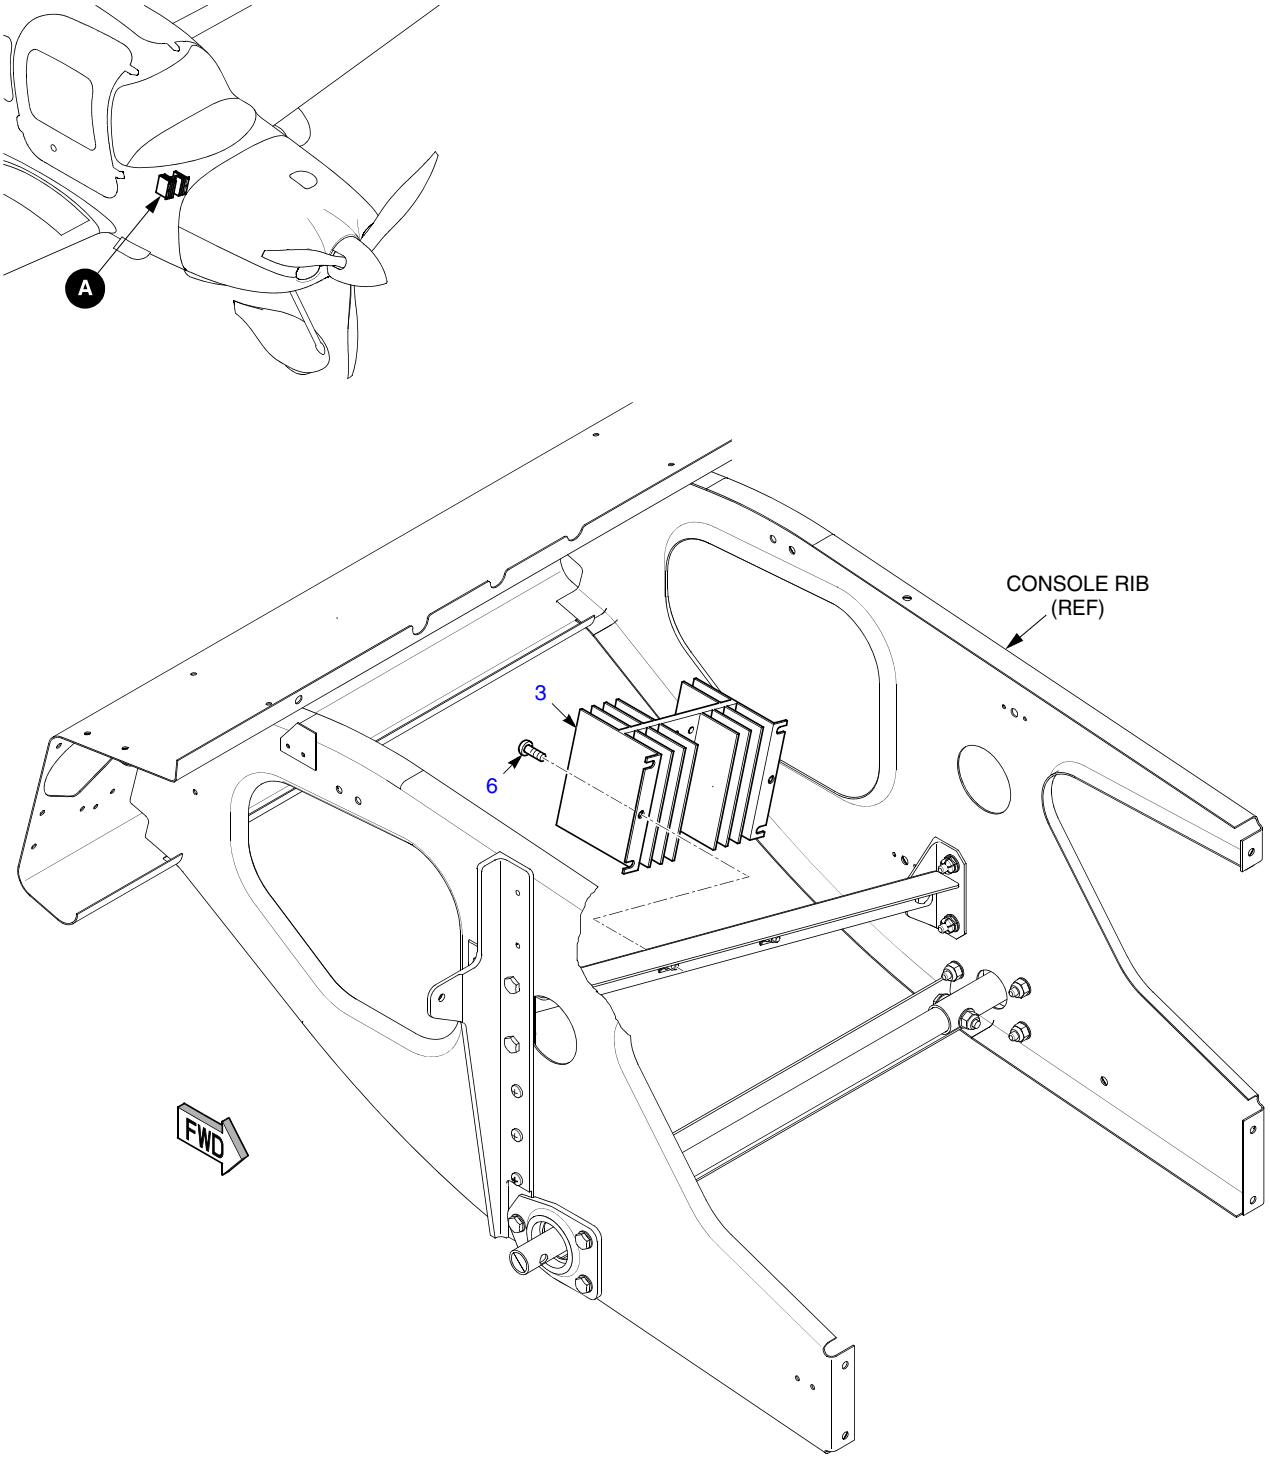

DETAIL A

Serials 22-3849 thru 22-4214, 22T-0311 thru 22T-0314, 22T-0316 thru 22T-0317, 22T-0319 22T-1058.

SR22_PC24_2063

Figure-05

Level Sensor Power Circuit Card - Serials 22-3849 thru 22-4214, 22T-0319 thru 22T-1058

EFFECTIVITY:
Serials 22-3849 thru 22-4214, 22T-0319 thru 22T-1058

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05	**		LEVEL SENSOR POWER CIRCUIT CARD INSTALLATION	3849 / 0319	4214 / 1058	NP
	3	12018-002			·LEVEL SENSOR POWER CIRCUIT CARD	3849 / 0319	4214 / 1058	1
	6	MS35206-246		A	·SCREW	3849 / 0319	4214 / 1058	2
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0311 THRU 22T-0314, 22T-0316 THRU 22T-0317; REFER TO 22T-0319 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

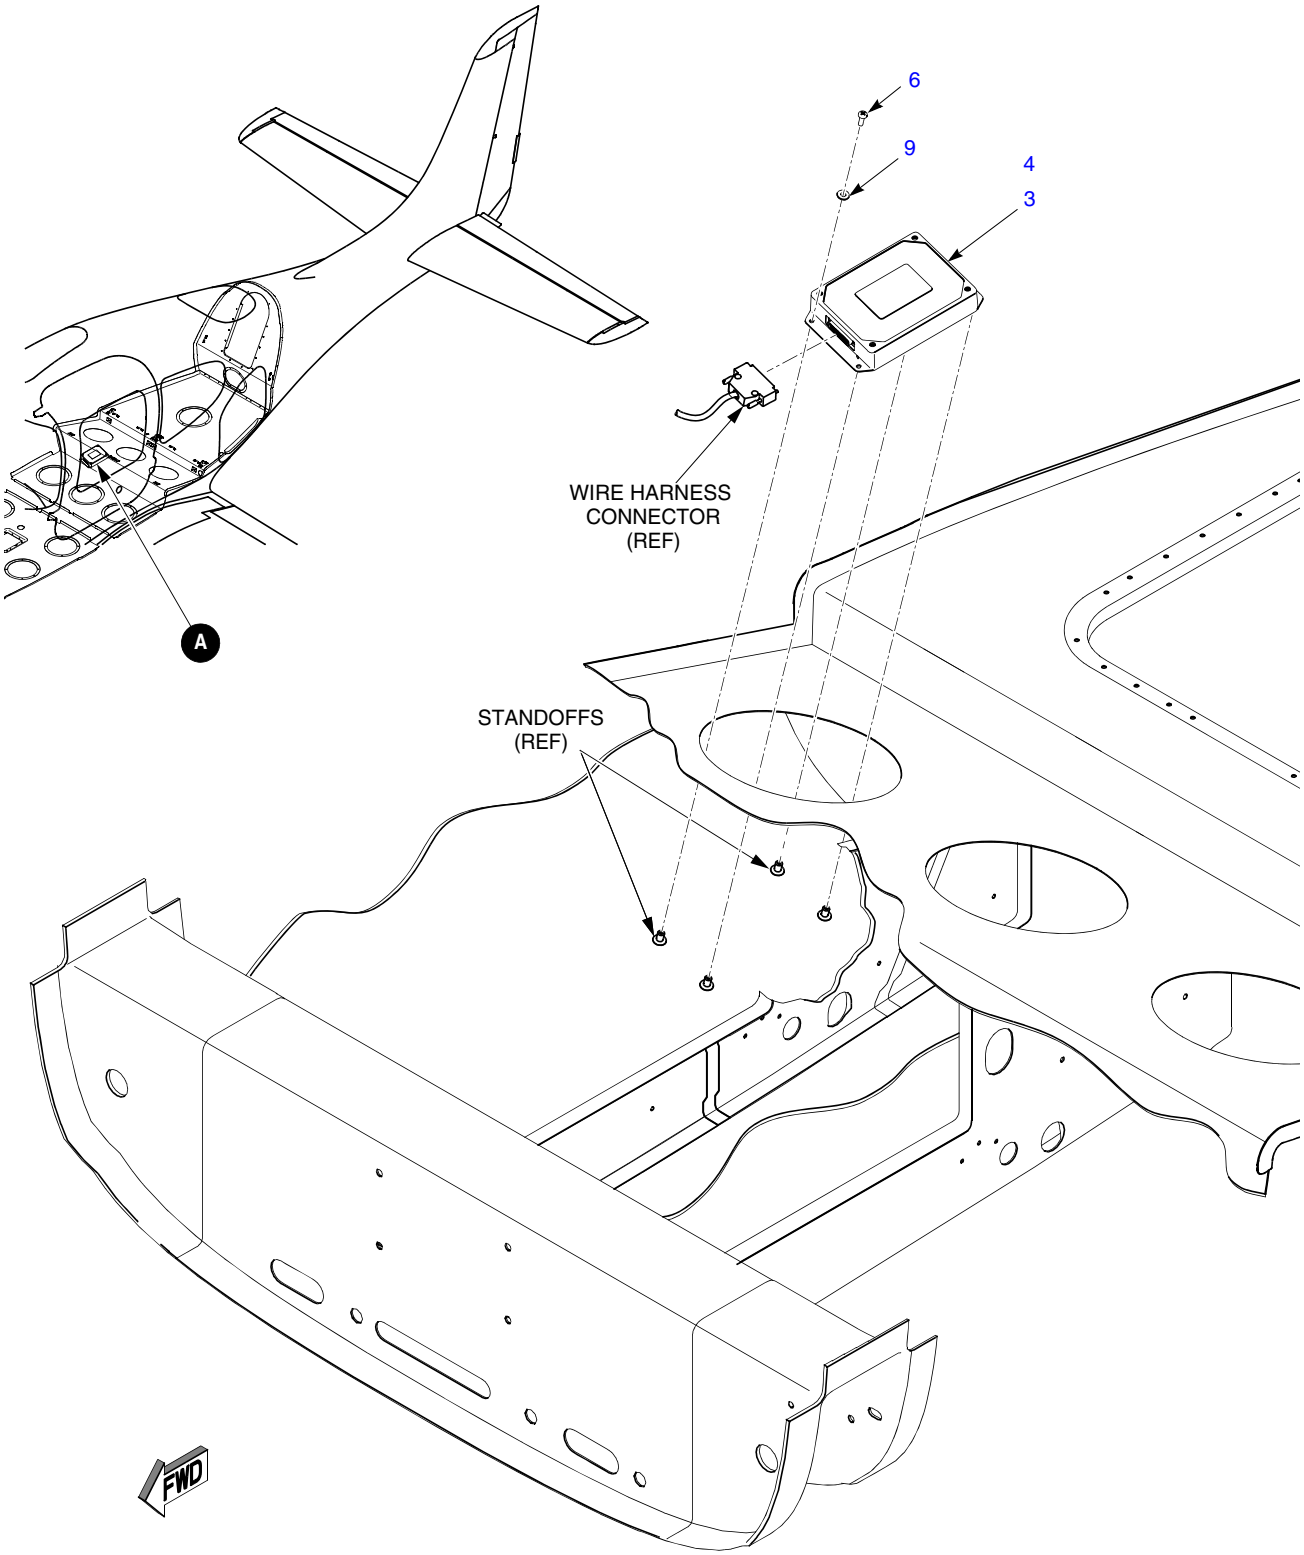

DETAIL A

Serials 22-4300 & subs, 22T-1233 & subs.

SR22_PC24_2197B

Figure-06

Convenience System Controller - Serials 22-4300 & subs, 22T-1233 & subs

EFFECTIVITY:
Serials 22-4300 & subs, 22T-1233 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	NO PRT NUMBER			CONVENIENCE SYSTEM CONTROLLER INSTALLATION	4300 / 1233		NP
	3	36517-002			·ASSEMBLY, CONVENIENCE SYSTEM CONTROLLER	4300 / 1233	4346 / 1341	1
	4	36517-003			·ASSEMBLY, CONVENIENCE SYSTEM CONTROLLER	4347 / 1342		1
	6	MS35206-229		A	·SCREW	4300 / 1233		4
	9	NAS1149FN632P		A	·WASHER	4300 / 1233		4

EFFECTIVITY:
All

CHAPTER 25

EQUIPMENT AND FURNISHINGS

Intentionally Left Blank

CHAPTER 25 - EQUIPMENT AND FURNISHINGS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
25-LOEP	1	04 SEP 2018
25-LOEP	2	04 SEP 2018
25-LOEP	3	04 SEP 2018
25-LOEP	4	04 SEP 2018
25-TOC	1	04 SEP 2018
25-TOC	2	04 SEP 2018
25-00-01	1	04 SEP 2018
25-00-01	2	04 SEP 2018
25-10-01	1	19 SEP 2017
25-10-01	2	19 SEP 2017
25-10-01	3	04 SEP 2018
25-10-01	4	04 SEP 2018
25-10-01	5	04 SEP 2018
25-10-01	6	04 SEP 2018
25-10-01	7	04 SEP 2018
25-10-01	8	04 SEP 2018
25-10-02	1	19 SEP 2017
25-10-02	2	19 SEP 2017
25-10-02	3	19 SEP 2017
25-10-02	4	19 SEP 2017
25-10-02	5	19 SEP 2017
25-10-02	6	19 SEP 2017
25-10-02	7	19 SEP 2017
25-10-02	8	19 SEP 2017
25-10-03	1	15 DEC 2014
25-10-03	2	15 DEC 2014
25-10-03	3	15 DEC 2014
25-10-03	4	15 DEC 2014
25-10-04	1	15 DEC 2014
25-10-04	2	15 DEC 2014
25-10-04	3	15 DEC 2014
25-10-04	4	01 JAN 2016
25-10-04	5	01 JAN 2016
25-10-04	6	01 JAN 2016
25-10-04	7	01 JAN 2016
25-10-04	8	01 JAN 2016
25-10-04	9	01 JAN 2016
25-10-04	10	01 JAN 2016
25-10-04	11	01 JAN 2016
25-10-04	12	01 JAN 2016

CHAPTER 25 - EQUIPMENT AND FURNISHINGS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
25-10-05	1	04 SEP 2018
25-10-05	2	04 SEP 2018
25-10-05	3	04 SEP 2018
25-10-05	4	04 SEP 2018
25-10-05	5	04 SEP 2018
25-10-05	6	04 SEP 2018
25-10-05	7	04 SEP 2018
25-10-05	8	04 SEP 2018
25-10-05	9	04 SEP 2018
25-10-05	10	04 SEP 2018
25-10-05	11	04 SEP 2018
25-10-05	12	04 SEP 2018
25-10-06	1	15 DEC 2014
25-10-06	2	04 SEP 2018
25-10-06	3	04 SEP 2018
25-10-06	4	04 SEP 2018
25-10-06	5	04 SEP 2018
25-10-06	6	04 SEP 2018
25-10-06	7	04 SEP 2018
25-10-06	8	15 DEC 2014
25-10-07	1	15 DEC 2014
25-10-07	2	01 JAN 2016
25-10-07	3	01 JAN 2016
25-10-07	4	01 JAN 2016
25-10-07	5	01 JAN 2016
25-10-07	6	15 DEC 2014
25-10-08	1	15 DEC 2014
25-10-08	2	19 SEP 2017
25-10-08	3	19 SEP 2017
25-10-08	4	19 SEP 2017
25-10-09	1	15 DEC 2014
25-10-09	2	15 DEC 2014
25-10-10	1	15 DEC 2014
25-10-10	2	15 DEC 2014
25-10-10	3	15 DEC 2014
25-10-10	4	15 DEC 2014
25-10-11	1	15 DEC 2014
25-10-11	2	15 DEC 2014
25-10-12	1	04 SEP 2018
25-10-12	2	04 SEP 2018

EFFECTIVITY:
All

CHAPTER 25 - EQUIPMENT AND FURNISHINGS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
25-60-01	1	19 SEP 2017
25-60-01	2	15 DEC 2014
25-60-01	3	15 DEC 2014
25-60-01	4	19 SEP 2017
25-60-01	5	19 SEP 2017
25-60-01	6	15 DEC 2014
25-60-02	1	19 SEP 2017
25-60-02	2	19 SEP 2017
25-60-02	3	19 SEP 2017
25-60-02	4	19 SEP 2017
25-60-02	5	19 SEP 2017
25-60-02	6	19 SEP 2017

Intentionally Left Blank

CHAPTER 25 - EQUIPMENT AND FURNISHINGS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Fly Away Kit	25-00-01
Forward Seat (1 of 2)	25-10-01
Forward Seat (2 of 2)	25-10-01
Passenger Seat Installation - Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (1 of 2)	25-10-02
Passenger Seat Installation - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (2 of 2)	25-10-02
Passenger Seat Harness - Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (1 of 2)	25-10-03
Passenger Seat Harness - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (2 of 2)	25-10-03
Console Trim - Serials 22-0002 thru 22-0820 (1 of 4)	25-10-04
Console Trim - Serials 22-0821 thru 22-2437 (2 of 4)	25-10-04
Console Trim - Serials 22-2438 & subs w/o Perspective (3 of 4)	25-10-04
Console Trim - Serials w/ Perspective (4 of 4)	25-10-04
Side Panel Trim - Serials 22-0002 thru 22-0820 (1 of 3)	25-10-05
Side Panel Trim - Serials 22-0821 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (2 of 3)	25-10-05
Side Panel Trim - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (3 of 3)	25-10-05
Headliner - Serials 22-0002 thru 22-0820 (1 of 2)	25-10-06
Headliner - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)	25-10-06
Floor Covering - Serials 22-0002 thru 22-3537 (1 of 2)	25-10-07
Floor Covering - Serials 22-3538 & subs, 22T-0001 & subs (2 of 2)	25-10-07
Sunvisor and Grab Handle - Serials 22-0002 thru 22-2437 (1 of 2)	25-10-08
Sunvisor and Grab Handle - Serials 22-1150 & subs, 22T-0001 & subs (2 of 2)	25-10-08
Glove Box - Serials 22-1663 & subs w/o Perspective	25-10-09
Avionics Center Console - Serials w/o Perspective (1 of 2)	25-10-10
Avionics Center Console - Serials w/ Perspective (2 of 2)	25-10-10
EMI Shielding - Serials w/ Perspective	25-10-11
Cargo Net - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat	25-10-12
ELT - Serials 22-0002 thru 22-0820 (1 of 3)	25-60-01
ELT - Serials 22-0821 thru 22-3827 w/ ACK E-01 ELT & w/o Perspective (2 of 3)	25-60-01
ELT - Serials 22-3026 - 22-3827 w/ ACK E-01 ELT & w/ Perspective, 22T-0001 - 22T-0267 (3 of 3)	25-60-01
Artex ME406 ELT Installation - Serials 22-1863 thru 3025 w/o Perspective Avionics (1 of 4)	25-60-02
Artex ME406 ELT Installation - Serials w/ Perspective Avionics (2 of 4)	25-60-02
Artex ME406 ELT Installation - Serials w/ Perspective Avionics (3 of 4)	25-60-02
ELT 1000 Installation - Serials 22-4164 & subs, 22T-0963 & subs (4 of 4)	25-60-02

Intentionally Left Blank

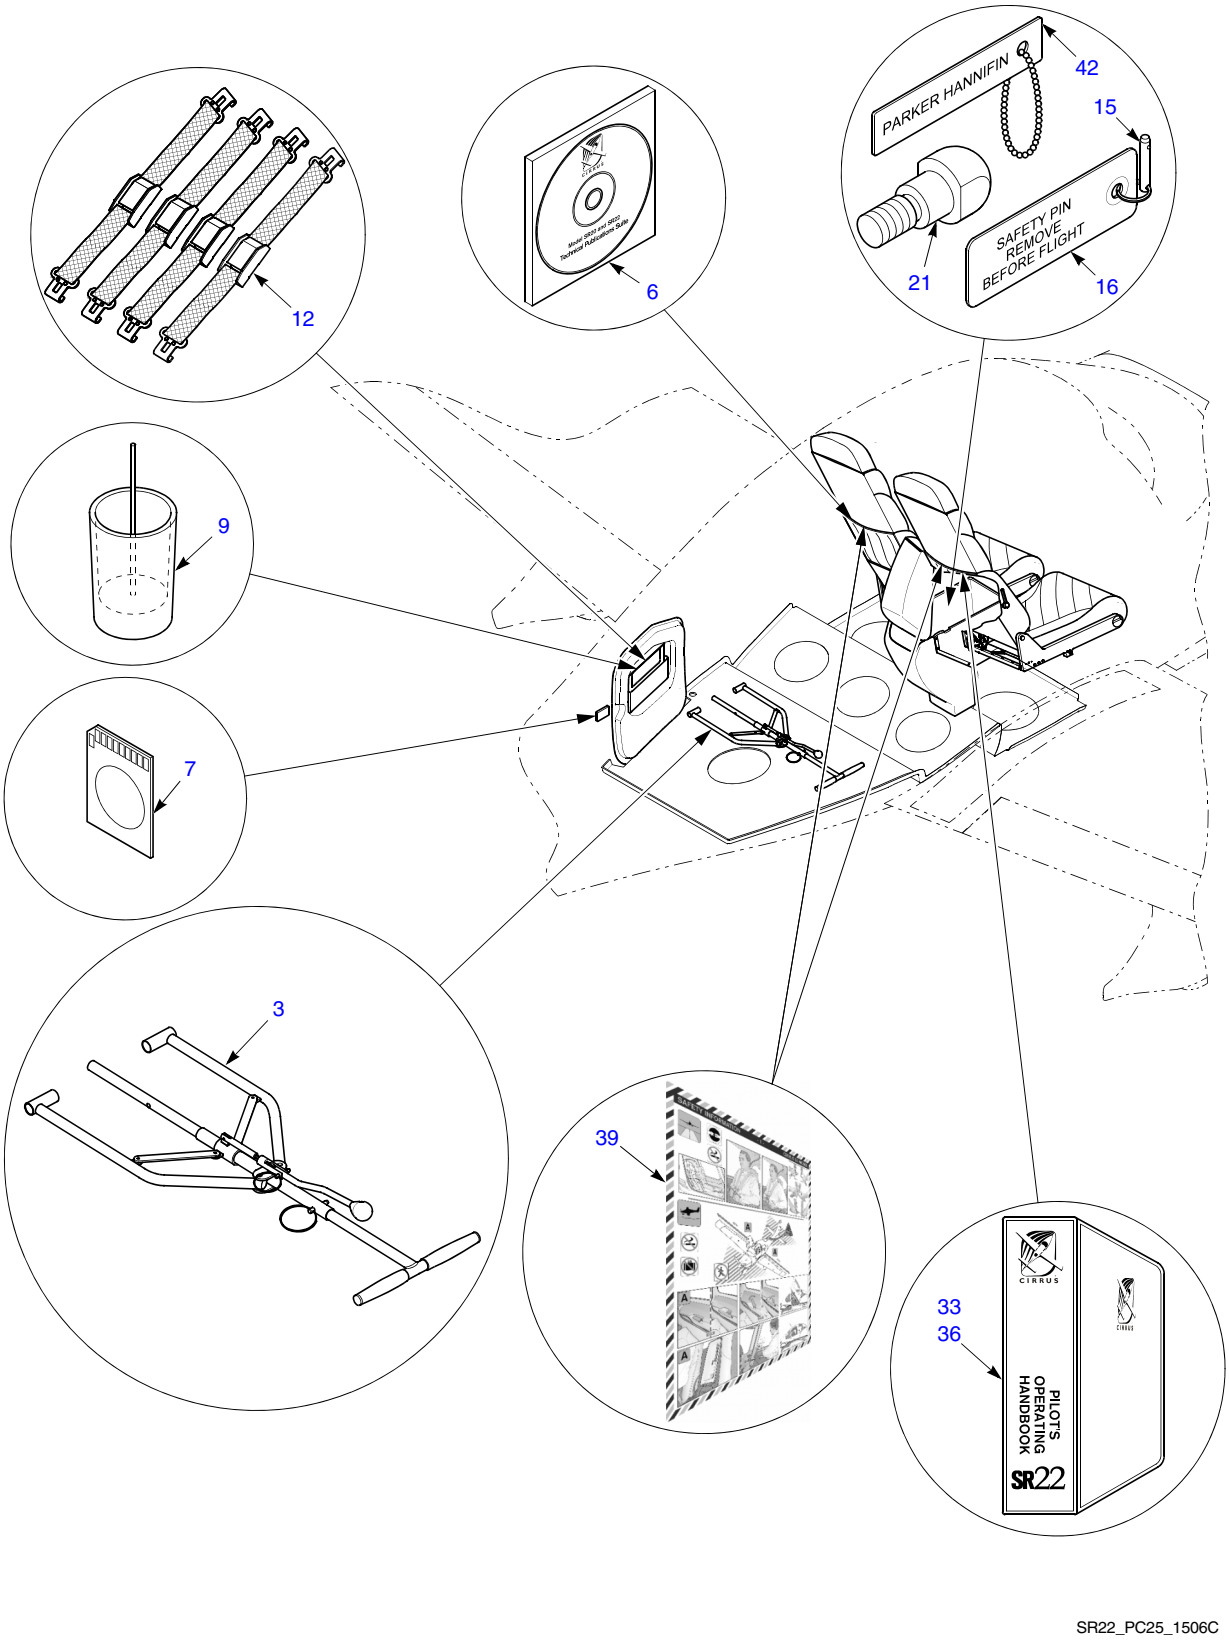

Figure-01
Fly Away Kit

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FLY AWAY KIT	0002 / 0001	/	NP
	3	50455-001	@		·TOW BAR	0002 / 0001	/	1
	6	16330-001			·DVD-ROM WITH AIRPLANE MAINTENANCE MANUAL	0002 / 0001	3914 / 0441	1
					FOR SPARES USE P/N 16330-002			
	7	16330-002			·SR2X MAINTENANCE SUITE	3915 / 0442	/	1
	9	50627-001	@		·FUEL SAMPLER	0002 / 0001	/	1
	12	12499-001			·BAGGAGE STRAPS	0002 / 0001	3827 / 0267	4
	15	25322-001			·CAPS SAFETY LOCKING PIN	0002 / 0001	/	1
	16	25321-001			·CAPS SAFETY FLAG	0002 / 0001	/	1
-	18	12595-001	@		·JACK POINTS	0002	1797	3
						1798	2639	2
					FOR SPARES USE P/N 18760-001			
	21	18760-001	@		·JACK POINTS	2640 / 0001	/	2
-	24	13772-001	#		·PILOTS OPERATING HANDBOOK AND FLIGHT MANUAL	0002		1
-	27	13772-002	%		·PILOTS OPERATING HANDBOOK AND FLIGHT MANUAL	3026	3914	1
-	30	13772-003	&		·PILOTS OPERATING HANDBOOK AND FLIGHT MANUAL	/ 0001	/ 0441	1
	33	13772-004	%		·PILOTS OPERATING HANDBOOK AND FLIGHT MANUAL	3915		1
	36	13772-005	&		·PILOTS OPERATING HANDBOOK AND FLIGHT MANUAL	/ 0442	/	1
	39	23999-001			·BRIEFING CARD	1520 / 0001	/	2
	42	51722-001			·LINING WEAR INDICATOR	1798 / 0001	3770 / 0169	1

SYMBOL NOTES:

**	SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING: SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.
@	OPTIONAL EQUIPMENT.
#	INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.
%	INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.
&	INSTALLED ON AIRCRAFT W/ TCM TURBO .

EFFECTIVITY:
All

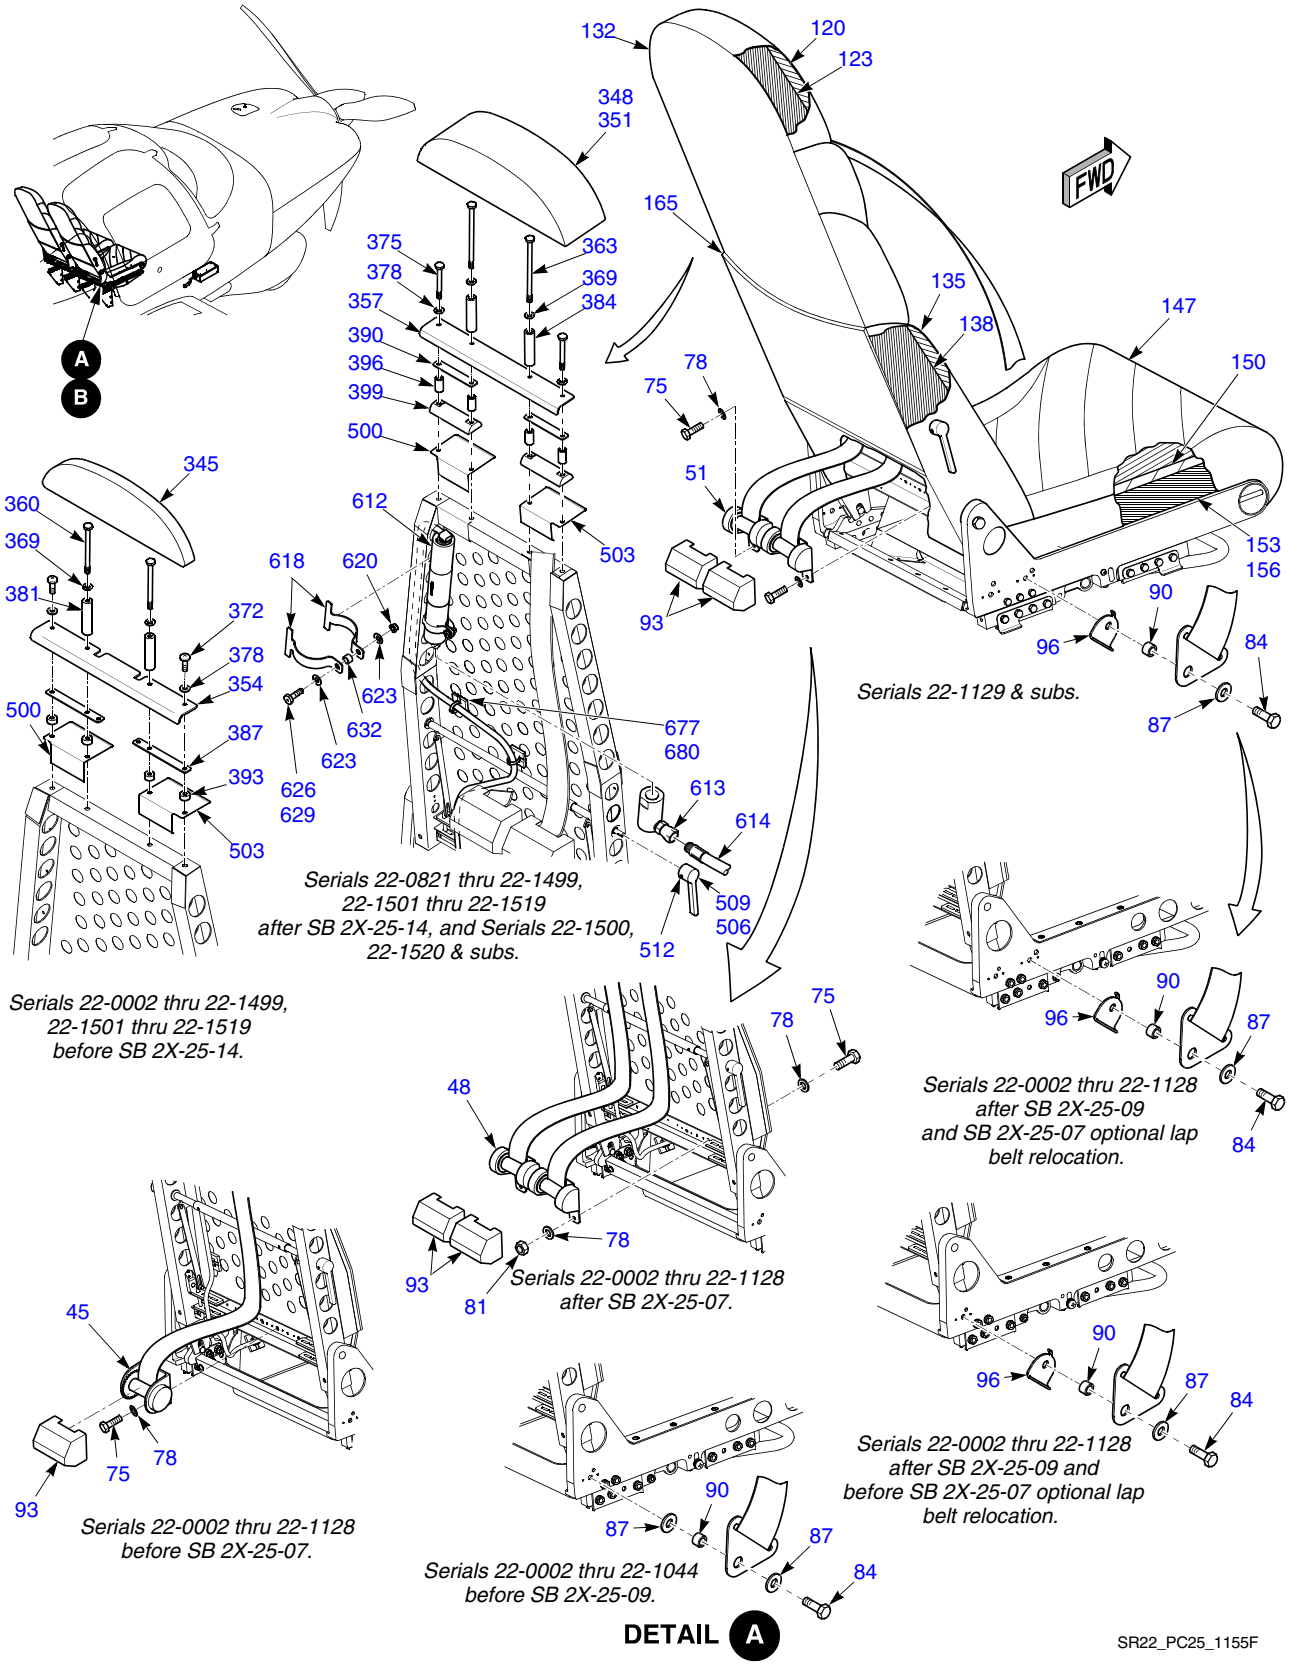

Figure-01
Forward Seat (1 of 2)

EFFECTIVITY:
All

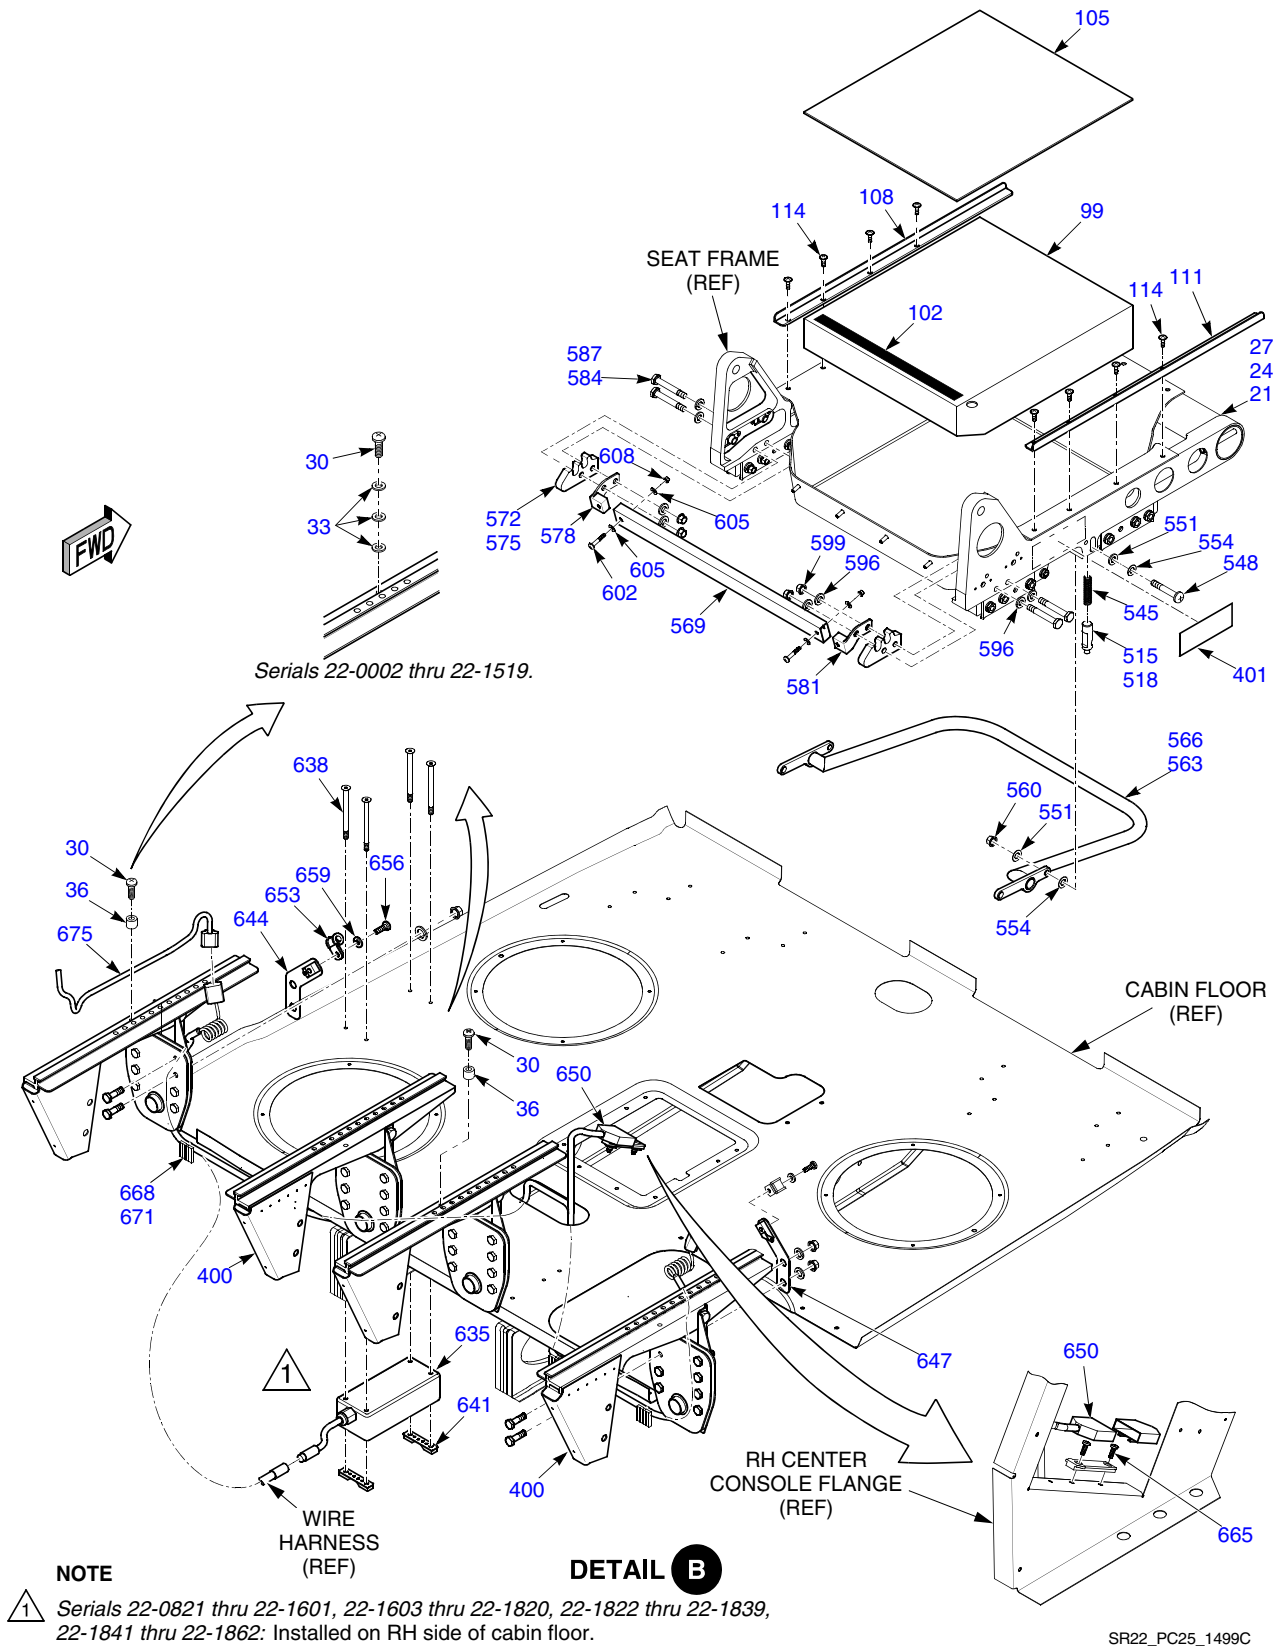

NOTE

1 *Serials 22-0821 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862:* Installed on RH side of cabin floor.

SR22_PC25_1499C

Figure-01
Forward Seat (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FORWARD SEAT INSTALLATION	0002 / 0001	/	NP
-	3	13231-002			·CREW SEAT FRAME	0002	0079	1
					ALTERNATE FOR P/N 14346-001			
-	6	14346-001			·CREW SEAT FRAME	0002	0079	1
					ALTERNATE FOR P/N 13231-002			
-	9	13231-004			·CREW SEAT FRAME	0080	0820	1
-	12	13231-007			·CREW SEAT FRAME	0821	1044	1
-	15	13231-009			·CREW SEAT FRAME	1045	1128	1
-	18	13231-011			·CREW SEAT FRAME	1129	1519	1
	21	19020-001			·CREW SEAT FRAME	1520	1727	1
	24	19020-002			·CREW SEAT FRAME W/O PERSPECTIVE AVIONICS	1728		1
	27	19020-003			·CREW SEAT FRAME W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	30	MS27039-1-13		A	·SCREW	0002 / 0001	/	1
	33	NAS1149F0363P		A	·WASHER	0002	1519	3
	36	NAS43HT3-18		A	·SPACER	1520 / 0001	/	1
-	39	12949-002			··SEAT BELT ASSY, SINGLE INERTIA REEL	0002	0138	1
					BEFORE SB2X-25-07			
					FOR SPARES USE P/N 20573-001			
-	42	12949-003			··SEAT BELT ASSY, SINGLE INERTIA REEL	0139	0679	1
					BEFORE SB2X-25-07			
					FOR SPARES USE P/N 20573-001			
	45	12949-004			··SEAT BELT ASSY, SINGLE INERTIA REEL	0680	1128	1
					BEFORE SB2X-25-07			
					FOR SPARES USE P/N 20573-001			
	48	20573-001			··SEAT BELT ASSY, DUAL INERTIA REEL	1129	1519	1
					AFTER SB2X-25-07	0002	1519	
	51	20901-001	@		··SEAT BELT ASSY, DUAL INERTIA REEL, LH, FROST	1520 / 0001	/	1
-	54	20901-002	@		··SEAT BELT ASSY, DUAL INERTIA REEL, RH, FROST	1520 / 0001	/	1
-	57	20901-003	@		··SEAT BELT ASSY, DUAL INERTIA REEL, LH, BLACK	1520 / 0001	/	1
-	60	20901-004	@		··SEAT BELT ASSY, DUAL INERTIA REEL, RH, BLACK	1520 / 0001	/	1
-	63	20901-005	@		··SEAT BELT ASSY, DUAL INERTIA REEL, LH, FAWN	1520 / 0001	/	1
-	66	20901-006	@		··SEAT BELT ASSY, DUAL INERTIA REEL, RH, FAWN	1520 / 0001	/	1
-	69	20901-007	@		··SEAT BELT ASSY, DUAL INERTIA REEL, LH, GRAY	1520 / 0001	/	1
-	72	20901-008	@		··SEAT BELT ASSY, DUAL INERTIA REEL, RH, GRAY	1520 / 0001	/	1
	75	AN4-5A		A	··BOLT	0002 / 0001	/	2
	78	NAS1149F0432P		A	··WASHER	0002 / 0001	/	2
					BEFORE SB2X-25-07			
				A	··WASHER	0002	1128	4
					AFTER SB2X-25-07			
	81	MS21044N4		A	··NUT	0002	1128	2
					AFTER SB2X-25-07			
	84	AN4-7A		A	··BOLT	0002 / 0001	/	2
	87	MS15795-810		A	··WASHER	0002	1044	4
					BEFORE SB2X-25-09			
				A	··WASHER	0002 / 0001	/	2
					AFTER SB2X-25-09			
	90	NAS43HT4-16		A	··SPACER	0002 / 0001	/	2
	93	50845-001			···INERTIA REEL COVER	0002	1128	1
					···INERTIA REEL COVER	1129 / 0001	/	2
	96	16048-001			··ANTI ROTATION TAB	0002 / 0001	/	2
					AFTER SB2X-25-09			
	99	14152-004			·ENERGY ABSORPTION MODULE	0002 / 0001	/	1
	102	50641-025		A	·TAPE, TWO-SIDED	0002 / 0001	/	1
	105	13138-001			·TRAY, SEAT BOTTOM CUSHION	0002 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	108	14335-003			·TRAY RETAINER, LH	0002 / 0001	/	1
	111	14335-004			·TRAY RETAINER, RH	0002 / 0001	/	1
	114	AN525-832R16			·SCREW	0002 / 0001	/	8
-	117	12833-103			·UPHOLSTERY, HEAD REST	0002 / 0001	/	1
	120	12833-106			·FOAM, HEAD REST	0002 / 0001	/	1
	123	12967-001			·CUSHION, HEADREST	0002 / 0001	4045 / 0689	1
-	126	31996-001			·CUSHION, HEADREST, STANDARD	4046 / 0690	/	1
-	129	31996-001			·CUSHION, HEADREST, BOLSTER	4046 / 0690	/	1
	132	12833-101			·UPHOLSTERY, SEATBACK	0002 / 0001	/	1
	135	12833-104			·FOAM, SEAT BACK	0002 / 0001	/	1
	138	12966-001			·CUSHION, SEAT BACK	0002 / 0001	4045 / 0689	1
-	141	31995-001			·CUSHION, SEAT BACK, STANDARD	4046 / 0690	/	1
-	144	31995-002			·CUSHION, SEAT BACK, BOLSTER	4046 / 0690	/	1
	147	12833-102			·UPHOLSTERY, SEAT CUSHION	0002 / 0001	/	1
	150	12833-105			·FOAM, SEAT CUSHION	0002 / 0001	/	1
	153	12965-001			·CUSHION, SEAT BASE	0002 / 0001	3689 / 0031	1
	156	13137-002			·CUSHION, SEAT BASE	3690 / 0032	4045 / 0689	1
-	159	31997-001			·CUSHION, SEAT BASE, STANDARD	4046 / 0690	/	1
-	162	31997-002			·CUSHION, SEAT BASE, BOLSTER	4046 / 0690	/	1
	165	29011-001			·SEAT COVER, FRONT, SLATE CLOTH	3690 / 0032	3827 / 0267	1
-	168	29011-002			·SEAT COVER, FRONT, SLATE LEATHER W/ RED STITCH	3690 / 0032	3827 / 0267	1
-	171	29011-003			·SEAT COVER, FRONT, SLATE LEATHER	3690 / 0032	3827 / 0267	1
-	174	29011-004			·SEAT COVER, FRONT, GRAY LEATHER	3690 / 0032	3827 / 0267	1
-	177	29011-005			·SEAT COVER, FRONT, IVORY	3690 / 0032	3827 / 0267	1
-	180	29011-006			·SEAT COVER, FRONT, X-SLATE	3690 / 0032	3827 / 0267	1
-	183	29011-007			·SEAT COVER, FRONT, X CURRY(TAN)	3690 / 0032	3827 / 0267	1
-	186	29011-008			·SEAT COVER, FRONT, X GRAY	3690 / 0032	3827 / 0267	1
-	189	29011-009			·SEAT COVER, FRONT, X IVORY	3690 / 0032	3827 / 0267	1
-	192	29011-010			·SEAT COVER, FRONT, EBONY/PEWTER CLOTH	3690 / 0032	3827 / 0267	1
-	195	29011-011			·SEAT COVER, FRONT, EBONY/MUSHROOM CLOTH	3690 / 0032	3827 / 0267	1
-	198	29011-012			·SEAT COVER, FRONT, SHADOW LEATHER	3690 / 0032	3827 / 0267	1
-	201	29011-013			·SEAT COVER, FRONT, X SHADOW	3690 / 0032	3827 / 0267	1
-	204	29011-014			·SEAT COVER, FRONT, X SADDLE	3690 / 0032	3827 / 0267	1
-	207	29011-015			·SEAT COVER, FRONT, X SLATE W/RED STITCH	3690 / 0032	3827 / 0267	1
-	210	29489-001			·SEAT COVER, FRONT, GRAPHITE SS1	3828 / 0268	4045 / 0689	1
-	213	29489-002			·SEAT COVER, FRONT, SLATE LEATHER SS1	3828 / 0268	4045 / 0689	1
-	216	29489-003			·SEAT COVER, FRONT, SHADOW LEATHER SS1	3828 / 0268	4045 / 0689	1
-	219	29489-004			·SEAT COVER, FRONT, IVORY LEATHER SS1	3828 / 0268	4045 / 0689	1
-	222	29489-005			·SEAT COVER, FRONT, SLATE SS2 PLATINUM	3828 / 0268	4045 / 0689	1
-	225	29489-006			·SEAT COVER, FRONT, IVORY SS2 PLATINUM	3828 / 0268	4045 / 0689	1
-	228	29489-007			·SEAT COVER, FRONT, SHADOW SS2 PLATINUM	3828 / 0268	4045 / 0689	1
-	231	29489-008			·SEAT COVER, FRONT, SADDLE SS2 PLATINUM	3828 / 0268	4045 / 0689	1
-	234	29489-009			·SEAT COVER, FRONT, IVORY SS2 CARBON	3828 / 0268	4045 / 0689	1
-	237	29489-010			·SEAT COVER, FRONT, SHADOW SS2 CARBON	3828 / 0268	4045 / 0689	1
-	240	29489-011			·SEAT COVER, FRONT, SADDLE SS2 CARBON	3828 / 0268	4045 / 0689	1
-	243	29489-012			·SEAT COVER, FRONT, RED SS2 CARBON	3828 / 0268	4045 / 0689	1
-	246	31982-001			·SEAT COVER, FRONT, GRAPHITE SS1, LH	4046 / 0690	/	1
-	249	31982-051			·SEAT COVER, FRONT, GRAPHITE SS1, RH	4046 / 0690	/	1
-	252	31982-002			·SEAT COVER, FRONT, SLATE LEATHER SS1, LH	4046 / 0690	/	1
-	255	31982-052			·SEAT COVER, FRONT, SLATE LEATHER SS1, RH	4046 / 0690	/	1
-	258	31982-003			·SEAT COVER, FRONT, SHADOW LEATHER SS1, LH	4046 / 0690	/	1
-	261	31982-053			·SEAT COVER, FRONT, SHADOW LEATHER SS1, RH	4046 / 0690	/	1
-	264	31982-004			·SEAT COVER, FRONT, IVORY LEATHER SS1, LH	4046 / 0690	/	1
-	267	31982-054			·SEAT COVER, FRONT, IVORY LEATHER SS1, RH	4046 / 0690	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	270	31982-005			·SEAT COVER, FRONT, SLATE BS PLATINUM, LH	4046 / 0690	/	1
-	273	31982-055			·SEAT COVER, FRONT, SLATE BS PLATINUM, RH	4046 / 0690	/	1
-	276	31982-006			·SEAT COVER, FRONT, SHADOW BS PLATINUM, LH	4046 / 0690	/	1
-	279	31982-056			·SEAT COVER, FRONT, SHADOW BS PLATINUM, RH	4046 / 0690	/	1
-	282	31982-007			·SEAT COVER, FRONT, SADDLE BS PLATINUM, LH	4046 / 0690	/	1
-	285	31982-057			·SEAT COVER, FRONT, SADDLE BS PLATINUM, RH	4046 / 0690	/	1
-	288	31982-008			·SEAT COVER, FRONT, IVORY BS PLATINUM, LH	4046 / 0690	/	1
-	291	31982-058			·SEAT COVER, FRONT, IVORY BS PLATINUM, RH	4046 / 0690	/	1
-	294	31982-009			·SEAT COVER, FRONT, RED BS PLATINUM, LH	4046 / 0690	/	1
-	297	31982-059			·SEAT COVER, FRONT, RED BS PLATINUM, RH	4046 / 0690	/	1
-	300	31982-010			·SEAT COVER, FRONT, SLATE BS PLATINUM W/ RED, LH	4046 / 0690	/	1
-	303	31982-060			·SEAT COVER, FRONT, SLATE BS PLATINUM W/ RED, RH	4046 / 0690	/	1
-	306	31982-011			·SEAT COVER, FRONT, SLATE BS CARBON, LH	4046 / 0690	/	1
-	309	31982-061			·SEAT COVER, FRONT, SLATE BS CARBON, RH	4046 / 0690	/	1
-	312	31982-012			·SEAT COVER, FRONT, SHADOW BS CARBON, LH	4046 / 0690	/	1
-	315	31982-062			·SEAT COVER, FRONT, SHADOW BS CARBON, RH	4046 / 0690	/	1
-	318	31982-013			·SEAT COVER, FRONT, SADDLE BS CARBON, LH	4046 / 0690	/	1
-	321	31982-063			·SEAT COVER, FRONT, SADDLE BS CARBON, RH	4046 / 0690	/	1
-	324	31982-014			·SEAT COVER, FRONT, IVORY BS CARBON, LH	4046 / 0690	/	1
-	327	31982-064			·SEAT COVER, FRONT, IVORY BS CARBON, RH	4046 / 0690	/	1
-	330	31982-015			·SEAT COVER, FRONT, RED BS CARBON, LH	4046 / 0690	/	1
-	333	31982-065			·SEAT COVER, FRONT, RED BS CARBON, RH	4046 / 0690	/	1
-	336	31982-016			·SEAT COVER, FRONT, SLATE BS CARBON W/ RED, LH	4046 / 0690	/	1
-	339	31982-066			·SEAT COVER, FRONT, SLATE BS CARBON W/ RED, RH	4046 / 0690	/	1
-	342	13232-002			·HEAD REST ASSEMBLY	0002	1044	1
	345	13232-003			·HEAD REST ASSEMBLY	1045	1519	1
	348	19026-001	@		·HEAD REST ASSEMBLY W/O PERSPECTIVE AVIONICS	1520		1
	351	19026-002			·HEAD REST ASSEMBLY W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	354	13180-001		A	·UPHOLSTERY ANGLE	0002	1519	1
	357	19023-001	@	A	·UPHOLSTERY ANGLE	1520 / 0001	/	1
	360	MS27039-1-45		A	··SCREW	0002	1519	2
	363	AN3-27A	@	A	··BOLT	1520 / 0001	/	2
					ALTERNATE FOR P/N MS27039-1-44			
-	366	MS27039-1-44	@	A	··SCREW	1520 / 0001	/	2
					ALTERNATE FOR P/N AN3-27A			
	369	NAS1149D0332K		A	··WASHER	0002 / 0001	/	2
	372	MS27039-1-14		A	··SCREW	0002	1519	2
	375	AN3-16A	@	A	··BOLT	1520 / 0001	/	2
	378	NAS1149D0332K		A	··WASHER	0002 / 0001	/	2
	381	13247-002		A	··SPACER	0002	1519	2
	384	19022-002	@	A	··SPACER	1520 / 0001	/	2
	387	13160-001		A	·FAIRLEAD, SHOULDER HARNESS	0002	1519	2
	390	19024-001	@	A	·FAIRLEAD, SHOULDER HARNESS	1520 / 0001	/	2
	393	13247-001		A	··SPACER	0002	1519	4
	396	19022-001	@	A	··SPACER	1520 / 0001	/	4
-	398	20904-002	@	A	··GUIDE, SHOULDER HARNESS	1520 / 0001	/	2
					FOR SPARES USE P/N 20904-003			
	399	20904-003	@	A	··GUIDE, SHOULDER HARNESS	1520 / 0001	/	2
	500	13159-003			··RUB STRIP, LH	0002 / 0001	/	1
	503	13159-004			··RUB STRIP, RH	0002 / 0001	/	1
	506	13177-001			··HANDLE, BREAKOVER	0002	1774	2
	509	21587-001			··HANDLE, BREAKOVER	1775 / 0001	/	2
	512	MS18063-13		A	··SET SCREW	0002 / 0001	/	4
	515	14327-001		A	·SEAT PIN	0002	0820	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 14327-003			
	518	14327-003		A	·SEAT PIN	0821 / 0001	/	2
-	521	17075-020	#	A	·SEAT PIN, OFFSET, RED (+0.020 INCH)	0002 / 0001	/	AR
-	524	17075-021	#	A	·SEAT PIN, OFFSET, BLACK (-0.020 INCH)	0002 / 0001	/	AR
-	527	17075-040	#	A	·SEAT PIN, OFFSET, ORANGE (+0.040 INCH)	0002 / 0001	/	AR
-	530	17075-041	#	A	·SEAT PIN, OFFSET, WHITE (-0.040 INCH)	0002 / 0001	/	AR
-	533	17075-060	#	A	·SEAT PIN, OFFSET, YELLOW (+0.060 INCH)	0002 / 0001	/	AR
-	536	17075-061	#	A	·SEAT PIN, OFFSET, PURPLE (-0.060 INCH)	0002 / 0001	/	AR
-	539	17075-080	#	A	·SEAT PIN, OFFSET, GREEN (+0.080 INCH)	0002 / 0001	/	AR
-	542	17075-081	#	A	·SEAT PIN, OFFSET, BLUE (-0.080 INCH)	0002 / 0001	/	AR
	545	50888-250			·SPRING	0002 / 0001	/	2
	548	MS27039-4-24		A	·SCREW	0002 / 0001	/	2
	551	NAS1149D0432K		A	·WASHER	0002 / 0001	/	4
	554	50327-007		A	·WASHER	0002 / 0001	/	4
					ALTERNATE FOR P/N 51038-337			
-	557	51038-337		A	·WASHER	0002 / 0001	/	4
					ALTERNATE FOR P/N 50327-007			
	560	MS1042-4		A	·NUT	0002 / 0001	/	2
	563	13188-001			·HANDLE, TRACKING CONTROL ADJUSTMENT	0002	0079	1
					FOR SPARES USE P/N 13188-002			
	566	13188-002			·HANDLE, TRACKING CONTROL ADJUSTMENT	0080 / 0001	/	1
	569	13170-001			·TUBE, AFT LATERAL	0002 / 0001	/	1
	572	13249-002			·RECLINE LOCK	0002	1044	2
					FOR SPARES USE P/N 13249-003			
	575	13249-003			·RECLINE LOCK	1045 / 0001	/	2
	578	13186-001			·BRACKET, AFT HORIZONTAL, LH	0002 / 0001	/	1
	581	13186-002			·BRACKET, AFT HORIZONTAL, RH	0002 / 0001	/	1
	584	AN4-16A			·BOLT	0002	1044	4
	587	NAS6604-22			·BOLT	1045 / 0001	/	4
					ALTERNATE FOR P/N NAS6204-22			
					ALTERNATE FOR P/N NAS1104-22			
-	590	NAS6204-22			·BOLT	1045 / 0001	/	4
					ALTERNATE FOR P/N NAS6604-22			
					ALTERNATE FOR P/N NAS1104-22			
-	593	NAS1104-22			·BOLT	1045 / 0001	/	4
					ALTERNATE FOR P/N NAS6604-22			
					ALTERNATE FOR P/N NAS6204-22			
	596	NAS1149D0432K			·WASHER	0002 / 0001	/	8
	599	MS21042-4			·NUT	0002 / 0001	/	4
	602	MS27039-0814		A	·SCREW	0002 / 0001	/	2
	605	NAS1149DN832K		A	·WASHER	0002 / 0001	/	4
	608	MS21042-08		A	·NUT	0002 / 0001	/	2
-	611	20902-002	@		·INFLATOR ASSEMBLY	1520 / 0001	4302 / 1239	1
						4305 / 1241	4305 / 1245	1
						4311 / 1248	4311 / 1248	1
						/ 1256	/ 1256	1
			!		FOR SPARES USE P/N 20902-005			
	612	20902-005	!		·INFLATOR ASSEMBLY	4303 / 1240	4304 / 1240	1
						4306 / 1246	4310 / 1247	1
						4312 / 1249	/ 1255	1
						/ 1257	/	1
	613	20902-007	!		·INFLATOR FITTING	4303 / 1240	4304 / 1240	1
						4306 / 1246	4310 / 1247	1
						4312 / 1249	/ 1255	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						/ 1257	/	1
	614	PRT OF ITM 293	@		·INFLATOR HOSE	1520 / 0001	/	1
-	617	20903-001	@		·BRACKET	1520 / 0001	4302 / 1239	4
						4305 / 1241	4305 / 1245	4
						4311 / 1248	4311 / 1248	4
						/ 1256	/ 1256	4
	618	20903-008	!		·BRACKET	4303 / 1240	4304 / 1240	4
						4306 / 1246	4310 / 1247	4
						4312 / 1249	/ 1255	4
						/ 1257	/	4
	620	MS21042-3	@	A	·NUT	1520 / 0001	/	2
	623	NAS1149F0316P	@	A	·WASHER	1520 / 0001	/	4
	626	AN3-5A	@	A	·BOLT W/O PERSPECTIVE AVIONICS	1520		2
	629	AN3-4A		A	·BOLT W/ PERSPECTIVE AVIONICS	3026 / 0001	/	2
	632	NAS43DD3-8FC	@		·SPACER	1520 / 0001	/	2
	635	20902-001	@		·ELECTRONIC MODULE ASSEMBLY	1520 / 0001	/	1
	638	MS24694-82	@	A	·SCREW	1520 / 0001	/	4
	641	20906-001	@	A	·PLATE ASSEMBLY	1520 / 0001	/	2
	644	20903-005	@		·BRACKET ASSEMBLY, WIRE HARNESS, LH	1520 / 0001	/	1
	647	20903-006	@		·BRACKET ASSEMBLY, WIRE HARNESS, RH	1520 / 0001	/	1
	650	20902-004	@		·WIRE HARNESS	1520 / 0001	/	1
	653	MS21919WDG-4	@	A	·ADEL CLAMP	1520 / 0001	/	2
	656	MS27039-1-09	@	A	·SCREW	1520 / 0001	/	2
	659	NAS1149D0363K	@	A	·WASHER	1520 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0363P			
-	662	NAS1149F0363P	@	A	·WASHER	1520 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0363K			
	665	MS27039-1-08	@	A	·SCREW	1520 / 0001	/	2
	668	50132-001	@	A	·CABLE TIE ANCHOR	1520 / 0001	/	5
	671	50239-020	@	A	·CABLE TIE	1520 / 0001	/	5
-	674	20902-003	@		·WIRE HARNESS	1520 / 0001	4302 / 1239	1
						4305 / 1241	4305 / 1245	1
						4311 / 1248	4311 / 1248	1
						/ 1256	/ 1256	1
	675	20902-006	!		·WIRE HARNESS	4303 / 1240	4304 / 1240	1
						4306 / 1246	4310 / 1247	1
						4312 / 1249	/ 1255	1
						/ 1257	/	1
	677	50132-001	@	A	·CABLE TIE ANCHOR	1520 / 0001	4302 / 1239	5
						4303 / 1240	4304 / 1240	6
						4305 / 1241	4305 / 1245	5
						4306 / 1246	4310 / 1247	6
						4311 / 1248	4311 / 1248	5
						4312 / 1249	/ 1255	6
						/ 1256	/ 1256	5
						/ 1257	/	6
	680	50239-020	@	A	·CABLE TIE	1520 / 0001	4302 / 1239	5
						4303 / 1240	4304 / 1240	6
						4305 / 1241	4305 / 1245	5
						4306 / 1246	4310 / 1247	6
						4311 / 1248	4311 / 1248	5
						4312 / 1249	/ 1255	6
						/ 1256	/ 1256	5
						/ 1257	/	6

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ·····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	683	50893-002	@		·GROMMET, FLEXIBLE	1520 / 0001	/	AR
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-01 DET			SEAT TRACK ASSEMBLY			
	401	RF 11-30-01 DET			INTERIOR PLACARDS AND OVERLAYS			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1500; REFER TO 22-1520 FOR PART IDENTIFICATION.			
			@		SERIAL NUMBER 22-0795, 22-0820 THRU 22-1519 AFTER SB2X-25-14.			
			#		USE IN PLACE OF SEAT PIN 14327-001 OR 14327-003 AS REQUIRED.			
			!		WHEN SPARING FROM 20902-002 TO 20902-005, 20903-001 MUST BE REPLACED WITH 20903-008, 20902-003 MUST BE REPLACED WITH 20902-006, AND 20902-007 MUST BE INSTALLED.			

EFFECTIVITY:
All

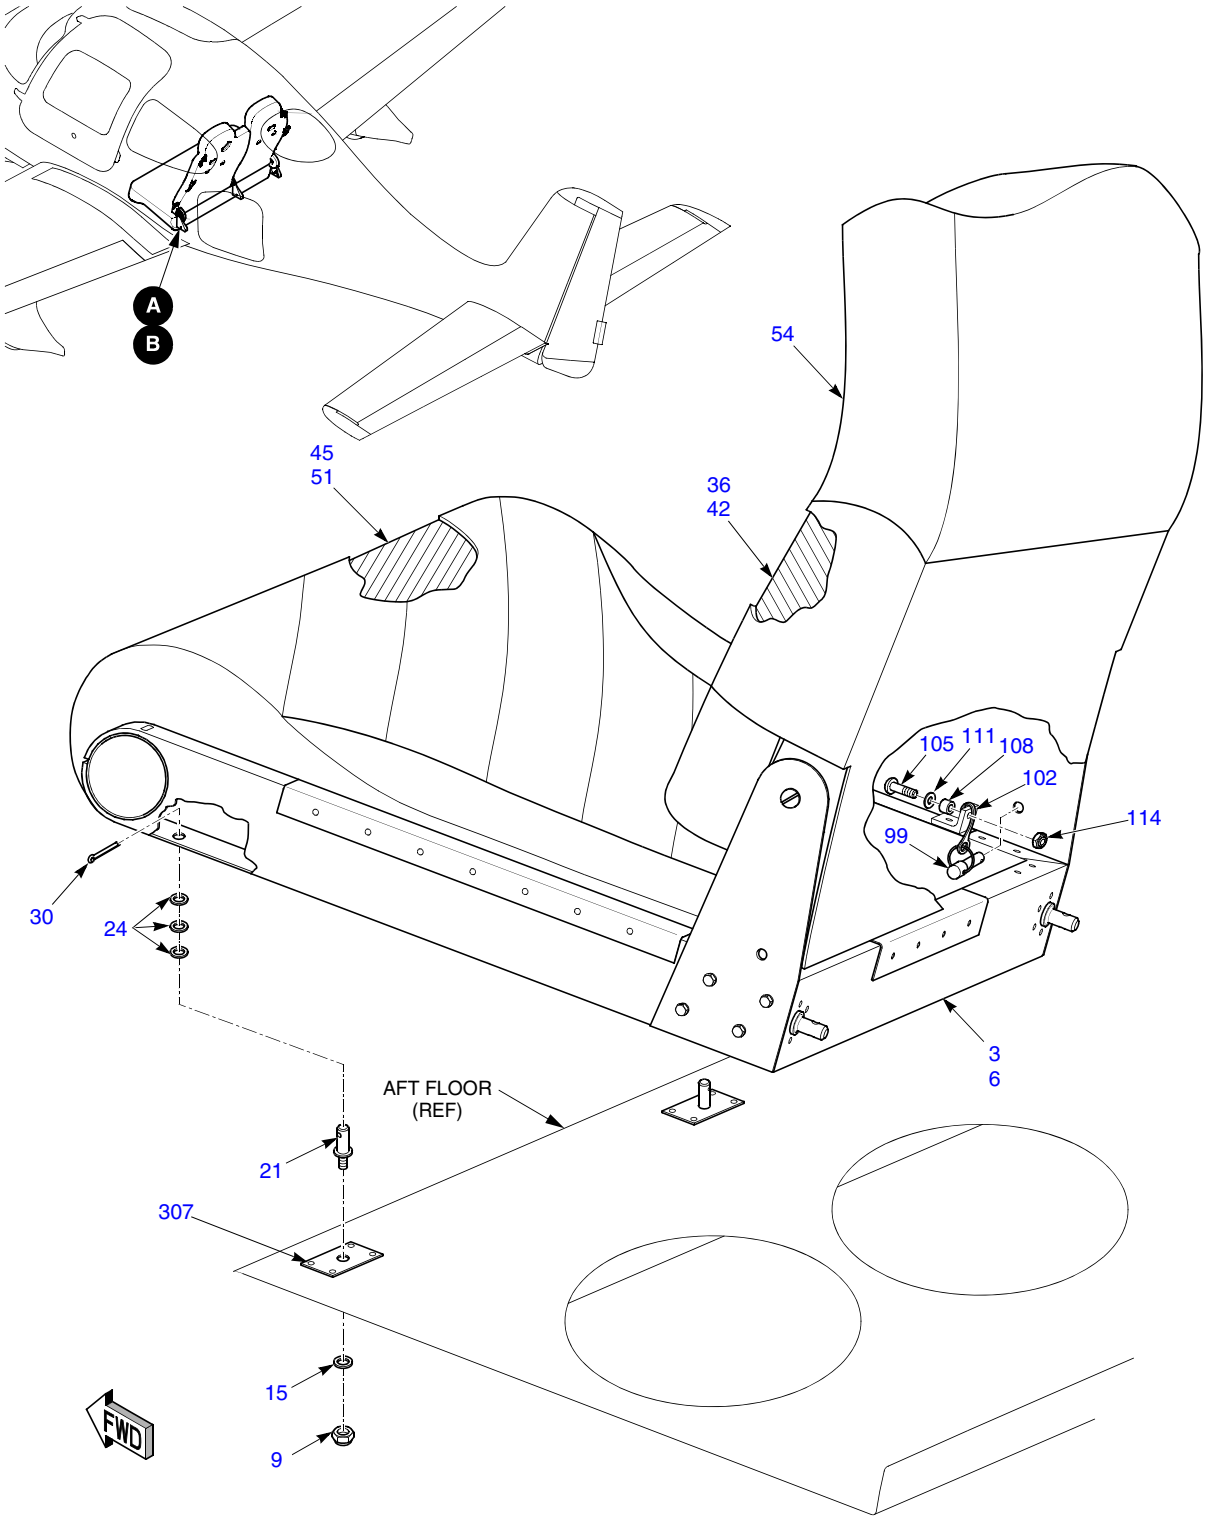

DETAIL A

Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat.

SR22_PC25_1104D

Figure-02

Passenger Seat Installation - Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat

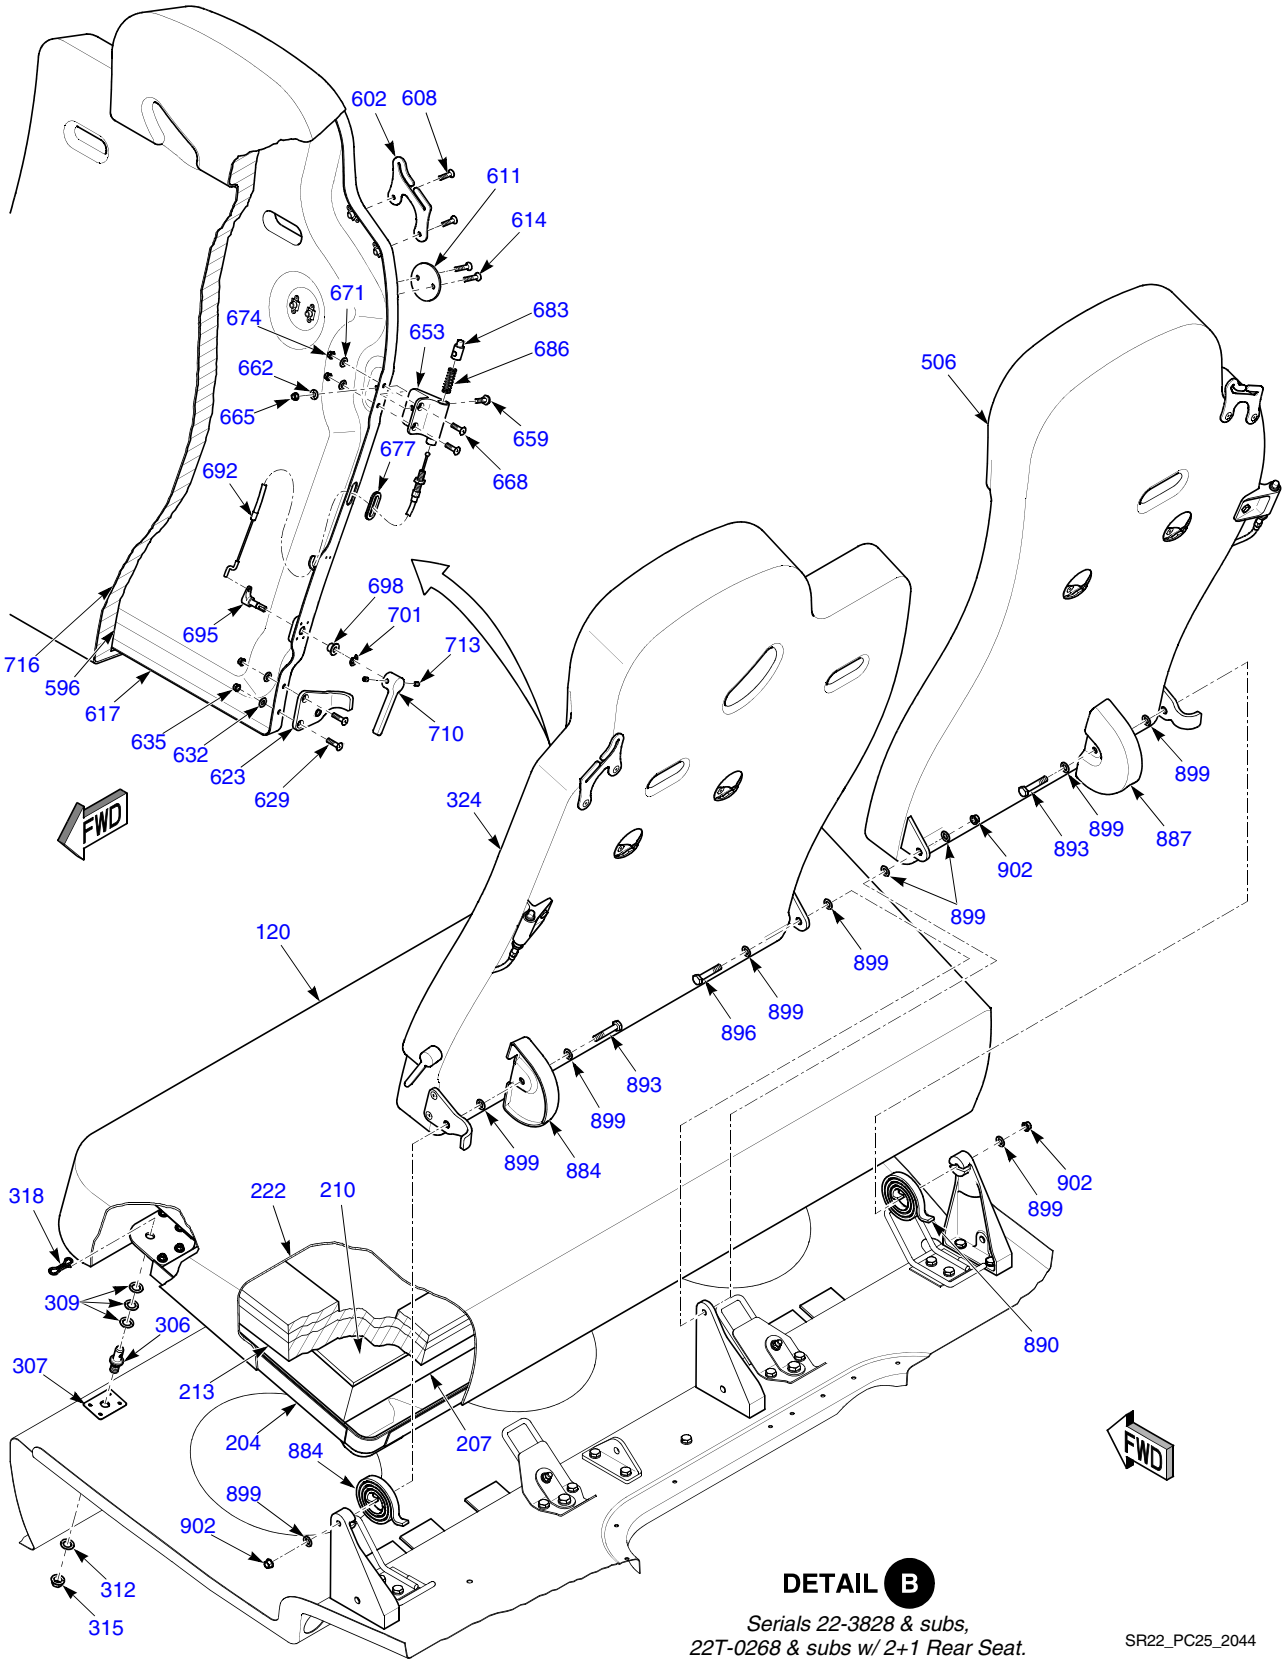

Figure-02

Passenger Seat Installation - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			AFT SEAT INSTALLATION	0002 / 0001	/	NP
-	3	11933-003			·PASSENGER SEAT FRAME ASSY	0002 / 0001	3689 / 0031	1
	6	11933-004			·PASSENGER SEAT FRAME ASSY	3690 / 0032	/	1
	9	MS21044N5		A	·LOCK NUT	0002 / 0001	/	4
					ALTERNATE FOR P/N MS21042-5			
-	12	MS21042-5		A	·LOCK NUT	0002 / 0001	/	4
					ALTERNATE FOR P/N MS21044N5			
	15	NAS1149F0532P		A	·WASHER	0002 / 0001	/	4
-	18	11899-107		A	·PIN	0002	0457	4
					WHEN EXHTD USE P/N 15519-001			
	21	15519-001		A	·PIN	0458 / 0001	/	4
	24	NAS1149F0663P	@	A	·WASHER	0458 / 0001	/	AR
					ALTERNATE FOR P/N NAS1149F0632P			
-	27	NAS1149F0632P		A	·WASHER	0458 / 0001	/	AR
					ALTERNATE FOR P/N NAS1149F0663P			
	30	MS24665-418		A	·COTTER PIN	0002 / 0001	/	4
					FOR SPARES USE P/N 51170-001			
-	33	51170-001		A	·BOW-TIE LOCKING COTTER PIN	0002 / 0001	/	4
	36	12535-001			·CUSHION, PASSENGER SEAT BACK, LH	0002 / 0001	/	1
-	39	12535-002			·CUSHION, PASSENGER SEAT BACK, RH	0002 / 0001	3689 / 0031	1
	42	12535-003			·CUSHION, PASSENGER SEAT BACK	3690 / 0032	/	1
	45	12536-001			·CUSHION, PASSENGER SEAT BASE, LH	0002 / 0001	/	1
-	48	12536-002			·CUSHION, PASSENGER SEAT BASE, RH	0002 / 0001	3689 / 0031	1
	51	12536-004			·CUSHION, PASSENGER SEAT BASE	3690 / 0032	/	1
	54	29012-001			·SEAT COVER, REAR, SLATE FABRIC	3690 / 0032	/	1
-	57	29012-002			·SEAT COVER, REAR, SLATE LEATHER W/ RED STITCH	3690 / 0032	/	1
-	60	29012-003			·SEAT COVER, REAR, SLATE LEATHER	3690 / 0032	/	1
-	63	29012-004			·SEAT COVER, REAR, GRAY LEATHER	3690 / 0032	/	1
-	66	29012-005			·SEAT COVER, REAR, IVORY	3690 / 0032	/	1
-	69	29012-006			·SEAT COVER, REAR, X-SLATE	3690 / 0032	/	1
-	72	29012-007			·SEAT COVER, REAR, X CURRY	3690 / 0032	/	1
-	75	29012-008			·SEAT COVER, REAR, X GRAY	3690 / 0032	/	1
-	78	29012-009			·SEAT COVER, REAR, X IVORY	3690 / 0032	/	1
-	81	29012-010			·SEAT COVER, REAR, EBONY/PEWTER	3690 / 0032	/	1
-	84	29012-011			·SEAT COVER, REAR, EBONY/MUSHROOM	3690 / 0032	/	1
-	87	29012-012			·SEAT COVER, REAR, SHADOW LEATHER	3690 / 0032	/	1
-	90	29012-013			·SEAT COVER, REAR, X SHADOW	3690 / 0032	/	1
-	93	29012-014			·SEAT COVER, REAR, X SADDLE	3690 / 0032	/	1
-	96	29012-015			·SEAT COVER, REAR, X-SLATE W/ RED STITCH	3690 / 0032	/	1
	99	50830-001			·DETENT PIN	0002 / 0001	/	4
	102	50804-006			·LANYARD	0002 / 0001	/	4
	105	MS35214-27		A	·SCREW	0002 / 0001	/	4
	108	NAS43DD1-12FC		A	·SPACER	0002 / 0001	/	4
	111	50813-001		A	·WASHER	0002 / 0001	/	4
	114	MS21044N06		A	·LOCKNUT	0002 / 0001	/	4
-	117	NO PRT NUMBER	**		PASSENGER SEAT INSTALLATION W/ 2+1 REAR SEAT	3828 / 0268	/	NP
	120	29427-001			·REAR SEAT BASE ASSEMBLY, GRAPHITE	3828 / 0268	4045 / 0689	1
-	123	29427-002			·REAR SEAT BASE ASSEMBLY, SLATE LEATHER	3828 / 0268	4045 / 0689	1
-	126	29427-003			·REAR SEAT BASE ASSEMBLY, SHADOW LEATHER	3828 / 0268	4045 / 0689	1
-	129	29427-004			·REAR SEAT BASE ASSEMBLY, IVORY LEATHER	3828 / 0268	4045 / 0689	1
-	132	29427-005			·REAR SEAT BASE ASSEMBLY, SLATE/PLATINUM	3828 / 0268	4045 / 0689	1
-	135	29427-006			·REAR SEAT BASE ASSEMBLY, IVORY/PLATINUM	3828 / 0268	4045 / 0689	1
-	138	29427-007			·REAR SEAT BASE ASSEMBLY, SHADOW/PLATINUM	3828 / 0268	4045 / 0689	1
-	141	29427-008			·REAR SEAT BASE ASSEMBLY, SADDLE/PLATINUM	3828 / 0268	4045 / 0689	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	144	29427-009			·REAR SEAT BASE ASSEMBLY, IVORY/CARBON	3828 / 0268	4045 / 0689	1
-	147	29427-010			·REAR SEAT BASE ASSEMBLY, SHADOW/CARBON	3828 / 0268	4045 / 0689	1
-	150	29427-011			·REAR SEAT BASE ASSEMBLY, SADDLE/CARBON	3828 / 0268	4045 / 0689	1
-	153	29427-012			·REAR SEAT BASE ASSEMBLY, RED/CARBON	3828 / 0268	4045 / 0689	1
-	156	31983-001			·REAR SEAT BASE ASSEMBLY, GRAPHITE SS1	4046 / 0690	/	1
-	159	31983-002			·REAR SEAT BASE ASSEMBLY, SLATE LEATHER SS1	4046 / 0690	/	1
-	162	31983-003			·REAR SEAT BASE ASSEMBLY, SHADOW LEATHER SS1	4046 / 0690	/	1
-	165	31983-004			·REAR SEAT BASE ASSEMBLY, IVORY LEATHER SS1	4046 / 0690	/	1
-	168	31983-005			·REAR SEAT BASE ASSEMBLY, SLATE BS PLATINUM	4046 / 0690	/	1
-	171	31983-006			·REAR SEAT BASE ASSEMBLY, SHADOW BS PLATINUM	4046 / 0690	/	1
-	174	31983-007			·REAR SEAT BASE ASSEMBLY, SADDLE BS PLATINUM	4046 / 0690	/	1
-	177	31983-008			·REAR SEAT BASE ASSEMBLY, IVORY BS PLATINUM	4046 / 0690	/	1
-	180	31983-009			·REAR SEAT BASE ASSEMBLY, RED BS PLATINUM	4046 / 0690	/	1
-	183	31983-010			·REAR SEAT BASE ASSY, SLATE BS PLATINUM W/ RED	4046 / 0690	/	1
-	186	31983-011			·REAR SEAT BASE ASSEMBLY, SLATE BS CARBON	4046 / 0690	/	1
-	189	31983-012			·REAR SEAT BASE ASSEMBLY, SHADOW BS CARBON	4046 / 0690	/	1
-	192	31983-013			·REAR SEAT BASE ASSEMBLY, SADDLE BS CARBON	4046 / 0690	/	1
-	195	31983-014			·REAR SEAT BASE ASSEMBLY, IVORY BS CARBON	4046 / 0690	/	1
-	198	31983-015			·REAR SEAT BASE ASSEMBLY, RED BS CARBON	4046 / 0690	/	1
-	201	31983-016			·REAR SEAT BASE ASSY, SLATE BS CARBON W/ RED	4046 / 0690	/	1
	204	29089-002			··SEAT FRAME, AFT SEAT	3828 / 0268	/	1
	207	29086-002			··ENERGY ABSORPTION MODULE	3828 / 0268	/	1
	210	29345-001			··PANEL, CORE, AFT SEAT	3828 / 0268	/	3
	213	29306-001			··BASE CUSHION, AFT SEAT	3828 / 0268	/	1
-	216	29253-001			··SEAT PAN FRONT, AFT SEAT	3828 / 0268	/	1
-	219	29376-001			··PANEL, COMPOSITE, AFT SEAT	3828 / 0268	/	1
	222	29389-001			··SEAT COVER, REAR SEAT BASE, GRAPHITE	3828 / 0268	4045 / 0689	1
-	225	29389-002			··SEAT COVER, REAR SEAT BASE, SLATE LEATHER	3828 / 0268	4045 / 0689	1
-	228	29389-003			··SEAT COVER, REAR SEAT BASE, SHADOW LEATHER	3828 / 0268	4045 / 0689	1
-	231	29389-004			··SEAT COVER, REAR SEAT BASE, IVORY LEATHER	3828 / 0268	4045 / 0689	1
-	234	29389-005			··SEAT COVER, REAR SEAT BASE, SLATE/PLATINUM	3828 / 0268	4045 / 0689	1
-	237	29389-006			··SEAT COVER, REAR SEAT BASE, IVORY/PLATINUM	3828 / 0268	4045 / 0689	1
-	240	29389-007			··SEAT COVER, REAR SEAT BASE, SHADOW/PLATINUM	3828 / 0268	4045 / 0689	1
-	243	29389-008			··SEAT COVER, REAR SEAT BASE, SADDLE/PLATINUM	3828 / 0268	4045 / 0689	1
-	246	29389-009			··SEAT COVER, REAR SEAT BASE, IVORY/CARBON	3828 / 0268	4045 / 0689	1
-	249	29389-010			··SEAT COVER, REAR SEAT BASE, SHADOW/CARBON	3828 / 0268	4045 / 0689	1
-	252	29389-011			··SEAT COVER, REAR SEAT BASE, SADDLE/CARBON	3828 / 0268	4045 / 0689	1
-	255	29389-012			··SEAT COVER, REAR SEAT BASE, RED/CARBON	3828 / 0268	4045 / 0689	1
-	258	31984-001			··SEAT COVER, BASE, REAR, GRAPHITE SS1	4046 / 0690	/	1
-	261	31984-002			··SEAT COVER, BASE, REAR, SLATE LEATHER SS1	4046 / 0690	/	1
-	264	31984-003			··SEAT COVER, BASE, REAR, SHADOW LEATHER SS1	4046 / 0690	/	1
-	267	31984-004			··SEAT COVER, BASE, REAR, IVORY LEATHER SS1	4046 / 0690	/	1
-	270	31984-005			··SEAT COVER, BASE, REAR, SLATE BS PLATINUM	4046 / 0690	/	1
-	273	31984-006			··SEAT COVER, BASE, REAR, SHADOW BS PLATINUM	4046 / 0690	/	1
-	276	31984-007			··SEAT COVER, BASE, REAR, SADDLE BS PLATINUM	4046 / 0690	/	1
-	279	31984-008			··SEAT COVER, BASE, REAR, IVORY BS PLATINUM	4046 / 0690	/	1
-	282	31984-009			··SEAT COVER, BASE, REAR, RED BS PLATINUM	4046 / 0690	/	1
-	285	31984-010			··SEAT COVER, BASE, REAR, SLATE BS PLAT. W/ RED	4046 / 0690	/	1
-	288	31984-011			··SEAT COVER, BASE, REAR, SLATE BS CARBON	4046 / 0690	/	1
-	291	31984-012			··SEAT COVER, BASE, REAR, SHADOW BS CARBON	4046 / 0690	/	1
-	294	31984-013			··SEAT COVER, BASE, REAR, SADDLE BS CARBON	4046 / 0690	/	1
-	297	31984-014			··SEAT COVER, BASE, REAR, IVORY BS CARBON	4046 / 0690	/	1
-	300	31984-015			··SEAT COVER, BASE, REAR, RED BS CARBON	4046 / 0690	/	1
-	303	31984-016			··SEAT COVER, BASE, REAR, SLATE BS CARBON W/ RED	4046 / 0690	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	306	25022-001		A	·PIN, AFT SEAT ATTACH	3828 / 0268	/	2
	307	10550-001		A	·ATTACH FITTING, AFT SEAT	3828 / 0268	/	AR
	309	NAS1149D0632K	@	A	·WASHER	3828 / 0268	/	AR
	312	NAS1149D0632K		A	·WASHER	3828 / 0268	/	2
	315	MS21042L6		A	·NUT	3828 / 0268	/	2
	318	51170-001		A	·BOW-TIE LOCKING COTTER PIN	3828 / 0268	/	2
-	321	50494-001			·DUAL LOCK	3828 / 0268	/	AR
	324	29428-001			·REAR SEAT BACK, LH, GRAPHITE	3828 / 0268	4045 / 0689	1
-	327	29428-002			·REAR SEAT BACK, LH, SLATE LEATHER	3828 / 0268	4045 / 0689	1
-	330	29428-003			·REAR SEAT BACK, LH, SHADOW LEATHER	3828 / 0268	4045 / 0689	1
-	333	29428-004			·REAR SEAT BACK, LH, IVORY LEATHER	3828 / 0268	4045 / 0689	1
-	336	29428-005			·REAR SEAT BACK, LH, SLATE/PLATINUM	3828 / 0268	4045 / 0689	1
-	339	29428-006			·REAR SEAT BACK, LH, IVORY/PLATINUM	3828 / 0268	4045 / 0689	1
-	342	29428-007			·REAR SEAT BACK, LH, SHADOW/PLATINUM	3828 / 0268	4045 / 0689	1
-	345	29428-008			·REAR SEAT BACK, LH, SADDLE/PLATINUM	3828 / 0268	4045 / 0689	1
-	348	29428-009			·REAR SEAT BACK, LH, IVORY/CARBON	3828 / 0268	4045 / 0689	1
-	351	29428-010			·REAR SEAT BACK, LH, SHADOW/CARBON	3828 / 0268	4045 / 0689	1
-	354	29428-011			·REAR SEAT BACK, LH, SADDLE/CARBON	3828 / 0268	4045 / 0689	1
-	357	29428-012			·REAR SEAT BACK, LH, RED/CARBON	3828 / 0268	4045 / 0689	1
-	360	31985-001			·REAR SEAT BACK, LH, GRAPHITE SS1	4046 / 0690	/	1
-	363	31985-002			·REAR SEAT BACK, LH, SLATE LEATHER SS1	4046 / 0690	/	1
-	366	31985-003			·REAR SEAT BACK, LH, SHADOW LEATHER SS1	4046 / 0690	/	1
-	369	31985-004			·REAR SEAT BACK, LH, IVORY LEATHER SS1	4046 / 0690	/	1
-	372	31985-005			·REAR SEAT BACK, LH, SLATE BS PLATINUM	4046 / 0690	/	1
-	375	31985-006			·REAR SEAT BACK, LH, SHADOW BS PLATINUM	4046 / 0690	/	1
-	378	31985-007			·REAR SEAT BACK, LH, SADDLE BS PLATINUM	4046 / 0690	/	1
-	381	31985-008			·REAR SEAT BACK, LH, IVORY BS PLATINUM	4046 / 0690	/	1
-	384	31985-009			·REAR SEAT BACK, LH, RED BS PLATINUM	4046 / 0690	/	1
-	387	31985-010			·REAR SEAT BACK, LH, SLATE BS PLATINUM W/ RED	4046 / 0690	/	1
-	390	31985-011			·REAR SEAT BACK, LH, SLATE BS CARBON	4046 / 0690	/	1
-	393	31985-012			·REAR SEAT BACK, LH, SHADOW BS CARBON	4046 / 0690	/	1
-	396	31985-013			·REAR SEAT BACK, LH, SADDLE BS CARBON	4046 / 0690	/	1
-	399	31985-014			·REAR SEAT BACK, LH, IVORY BS CARBON	4046 / 0690	/	1
-	500	31985-015			·REAR SEAT BACK, LH, RED BS CARBON	4046 / 0690	/	1
-	503	31985-016			·REAR SEAT BACK, LH, SLATE BS CARBON W/ RED	4046 / 0690	/	1
	506	29429-001			·REAR SEAT BACK, RH, GRAPHITE	3828 / 0268	4045 / 0689	1
-	509	29429-002			·REAR SEAT BACK, RH, SLATE LEATHER	3828 / 0268	4045 / 0689	1
-	512	29429-003			·REAR SEAT BACK, RH, SHADOW LEATHER	3828 / 0268	4045 / 0689	1
-	515	29429-004			·REAR SEAT BACK, RH, IVORY LEATHER	3828 / 0268	4045 / 0689	1
-	518	29429-005			·REAR SEAT BACK, RH, SLATE/PLATINUM	3828 / 0268	4045 / 0689	1
-	521	29429-006			·REAR SEAT BACK, RH, IVORY/PLATINUM	3828 / 0268	4045 / 0689	1
-	524	29429-007			·REAR SEAT BACK, RH, SHADOW/PLATINUM	3828 / 0268	4045 / 0689	1
-	527	29429-008			·REAR SEAT BACK, RH, SADDLE/PLATINUM	3828 / 0268	4045 / 0689	1
-	530	29429-009			·REAR SEAT BACK, RH, IVORY/CARBON	3828 / 0268	4045 / 0689	1
-	533	29429-010			·REAR SEAT BACK, RH, SHADOW/CARBON	3828 / 0268	4045 / 0689	1
-	536	29429-011			·REAR SEAT BACK, RH, SADDLE/CARBON	3828 / 0268	4045 / 0689	1
-	539	29429-012			·REAR SEAT BACK, RH, RED/CARBON	3828 / 0268	4045 / 0689	1
-	542	31986-001			·REAR SEAT BACK, RH, GRAPHITE SS1	4046 / 0690	/	1
-	545	31986-002			·REAR SEAT BACK, RH, SLATE LEATHER SS1	4046 / 0690	/	1
-	548	31986-003			·REAR SEAT BACK, RH, SHADOW LEATHER SS1	4046 / 0690	/	1
-	551	31986-004			·REAR SEAT BACK, RH, IVORY LEATHER SS1	4046 / 0690	/	1
-	554	31986-005			·REAR SEAT BACK, RH, SLATE BS PLATINUM	4046 / 0690	/	1
-	557	31986-006			·REAR SEAT BACK, RH, SHADOW BS PLATINUM	4046 / 0690	/	1
-	560	31986-007			·REAR SEAT BACK, RH, SADDLE BS PLATINUM	4046 / 0690	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	563	31986-008			·REAR SEAT BACK, RH, IVORY BS PLATINUM	4046 / 0690	/	1
-	566	31986-009			·REAR SEAT BACK, RH, RED BS PLATINUM	4046 / 0690	/	1
-	569	31986-010			·REAR SEAT BACK, RH, SLATE BS PLATINUM W/ RED	4046 / 0690	/	1
-	572	31986-011			·REAR SEAT BACK, RH, SLATE BS CARBON	4046 / 0690	/	1
-	575	31986-012			·REAR SEAT BACK, RH, SHADOW BS CARBON	4046 / 0690	/	1
-	578	31986-013			·REAR SEAT BACK, RH, SADDLE BS CARBON	4046 / 0690	/	1
-	581	31986-014			·REAR SEAT BACK, RH, IVORY BS CARBON	4046 / 0690	/	1
-	584	31986-015			·REAR SEAT BACK, RH, RED BS CARBON	4046 / 0690	/	1
-	587	31986-016			·REAR SEAT BACK, RH, SLATE BS CARBON W/ RED	4046 / 0690	/	1
-	590	29085-003			··REAR SEAT BACK ASSEMBLY, LH	3828 / 0268	/	1
-	593	29085-004			··REAR SEAT BACK ASSEMBLY, RH	3828 / 0268	/	1
	596	26782-001			··KIT, REAR SEAT BACK FOAM, LH	3828 / 0268	/	1
-	599	26783-001			··KIT, REAR SEAT BACK FOAM, RH	3828 / 0268	/	1
	602	29395-001			··GUIDE, SEAT BELT, REAR SEAT, LH	3828 / 0268	/	1
-	605	29395-002			··GUIDE, SEAT BELT, REAR SEAT, RH	3828 / 0268	/	1
	608	MS24694-C54		A	··SCREW	3828 / 0268	/	2
	611	53440-002			··ANCHOR PLATE	3828 / 0268	/	2
	614	MS24694-C57		A	··SCREW	3828 / 0268	/	4
	617	29087-003			···REAR SEAT BACK FRAME, LH	3828 / 0268	/	1
-	620	29087-004			···REAR SEAT BACK FRAME, RH	3828 / 0268	/	1
	623	29498-003			···HINGE, SEAT BACK, OUTBD, LH	3828 / 0268	/	1
-	626	29498-004			···HINGE, SEAT BACK, OUTBD, RH	3828 / 0268	/	1
	629	MS24694-C54		A	··SCREW	3828 / 0268	/	2
	632	NAS1149F0332P		A	··WASHER	3828 / 0268	/	2
	635	MS21042-3		A	··NUT	3828 / 0268	/	2
-	638	29498-001			···HINGE, SEAT BACK, INBD, LH	3828 / 0268	/	1
-	641	29498-002			···HINGE, SEAT BACK, INBD, RH	3828 / 0268	/	1
-	644	MS24694-C54		A	··SCREW	3828 / 0268	/	2
-	647	NAS1149F0332P		A	··WASHER	3828 / 0268	/	2
-	650	MS21042-3		A	··NUT	3828 / 0268	/	2
	653	29335-001			···HOUSING, SEAT RECLINE, LH	3828 / 0268	/	1
-	656	29335-002			···HOUSING, SEAT RECLINE, RH	3828 / 0268	/	1
	659	AN3C5A		A	··BOLT	3828 / 0268	/	1
	662	NAS1149F0332P		A	··WASHER	3828 / 0268	/	1
	665	MS21042-3		A	··NUT	3828 / 0268	/	1
	668	MS24694-C53		A	··SCREW	3828 / 0268	/	2
	671	NAS1149F0332P		A	··WASHER	3828 / 0268	/	2
	674	MS21042-3		A	··NUT	3828 / 0268	/	2
	677	50893-001			···GROMMET, FLEXIBLE	3828 / 0268	/	AR
					ALTERNATE FOR P/N MS21266-1			
-	680	MS21266-1			···GROMMET, FLEXIBLE	3828 / 0268	/	AR
					ALTERNATE FOR P/N 50893-001			
	683	29336-001			···PIN, SEAT RECLINE	3828 / 0268	/	1
	686	53435-001			···SPRING	3828 / 0268	/	1
					ALTERNATE FOR P/N 53436-001			
-	689	53436-001			···SPRING	3828 / 0268	/	1
					ALTERNATE FOR P/N53435-001			
	692	29337-002			···CABLE, SEAT RECLINE	3828 / 0268	/	1
	695	29339-001			···ACTUATOR PIN, SEAT RECLINE	3828 / 0268	/	1
	698	50145-005		A	···BUSHING	3828 / 0268	/	1
	701	MS3215-1025		A	··RETAINING RING	3828 / 0268	/	1
-	704	29338-001			···ACTUATOR PLATE, SEAT RECLINE	3828 / 0268	/	1
-	707	29494-001			···CABLE STOP	3828 / 0268	/	1
	710	21587-001			···HANDLE, BREAKOVER	3828 / 0268	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	713	MS18063-13		A	··SET SCREW	3828 / 0268	/	2
	716	29431-001			··SEAT COVER, UPPER AFT, LH, GRAPHITE	3828 / 0268	4045 / 0689	1
-	719	29431-002			··SEAT COVER, UPPER AFT, LH, SLATE LEATHER	3828 / 0268	4045 / 0689	1
-	722	29431-003			··SEAT COVER, UPPER AFT, LH, SHADOW LEATHER	3828 / 0268	4045 / 0689	1
-	725	29431-004			··SEAT COVER, UPPER AFT, LH, IVORY LEATHER	3828 / 0268	4045 / 0689	1
-	728	29431-005			··SEAT COVER, UPPER AFT, LH, SLATE/PLATINUM	3828 / 0268	4045 / 0689	1
-	731	29431-006			··SEAT COVER, UPPER AFT, LH, IVORY/PLATINUM	3828 / 0268	4045 / 0689	1
-	734	29431-007			··SEAT COVER, UPPER AFT, LH, SHADOW/PLATINUM	3828 / 0268	4045 / 0689	1
-	737	29431-008			··SEAT COVER, UPPER AFT, LH, SADDLE/PLATINUM	3828 / 0268	4045 / 0689	1
-	740	29431-009			··SEAT COVER, UPPER AFT, LH, IVORY/CARBON	3828 / 0268	4045 / 0689	1
-	743	29431-010			··SEAT COVER, UPPER AFT, LH, SHADOW/CARBON	3828 / 0268	4045 / 0689	1
-	746	29431-011			··SEAT COVER, UPPER AFT, LH, SADDLE/CARBON	3828 / 0268	4045 / 0689	1
-	749	29431-012			··SEAT COVER, UPPER AFT, LH, RED/CARBON	3828 / 0268	4045 / 0689	1
-	752	31987-001			··SEAT COVER, UPPER AFT, LH, GRAPHITE SS1	4046 / 0690	/	1
-	755	31987-002			··SEAT COVER, UPPER AFT, LH, SLATE LEATHER SS1	4046 / 0690	/	1
-	758	31987-003			··SEAT COVER, UPPER AFT, LH, SHADOW LEATHER SS1	4046 / 0690	/	1
-	761	31987-004			··SEAT COVER, UPPER AFT, LH, IVORY LEATHER SS1	4046 / 0690	/	1
-	764	31987-005			··SEAT COVER, UPPER AFT, LH, SLATE BS PLATINUM	4046 / 0690	/	1
-	767	31987-006			··SEAT COVER, UPPER AFT, LH, SHADOW BS PLATINUM	4046 / 0690	/	1
-	770	31987-007			··SEAT COVER, UPPER AFT, LH, SADDLE BS PLATINUM	4046 / 0690	/	1
-	773	31987-008			··SEAT COVER, UPPER AFT, LH, IVORY BS PLATINUM	4046 / 0690	/	1
-	776	31987-009			··SEAT COVER, UPPER AFT, LH, RED BS PLATINUM	4046 / 0690	/	1
-	779	31987-010			··SEAT COVER, UPPER AFT, LH, SLATE BS PLAT W/ RED	4046 / 0690	/	1
-	782	31987-011			··SEAT COVER, UPPER AFT, LH, SLATE BS CARBON	4046 / 0690	/	1
-	785	31987-012			··SEAT COVER, UPPER AFT, LH, SHADOW BS CARBON	4046 / 0690	/	1
-	788	31987-013			··SEAT COVER, UPPER AFT, LH, SADDLE BS CARBON	4046 / 0690	/	1
-	791	31987-014			··SEAT COVER, UPPER AFT, LH, IVORY BS CARBON	4046 / 0690	/	1
-	794	31987-015			··SEAT COVER, UPPER AFT, LH, RED BS CARBON	4046 / 0690	/	1
-	797	31987-016			··SEAT COVER, UPPER AFT, LH, SLATE BS CARB W/ RED	4046 / 0690	/	1
-	800	29430-001			··SEAT COVER, UPPER AFT, RH, GRAPHITE	3828 / 0268	4045 / 0689	1
-	803	29430-002			··SEAT COVER, UPPER AFT, RH, SLATE LEATHER	3828 / 0268	4045 / 0689	1
-	806	29430-003			··SEAT COVER, UPPER AFT, RH, SHADOW LEATHER	3828 / 0268	4045 / 0689	1
-	809	29430-004			··SEAT COVER, UPPER AFT, RH, IVORY LEATHER	3828 / 0268	4045 / 0689	1
-	812	29430-005			··SEAT COVER, UPPER AFT, RH, SLATE/PLATINUM	3828 / 0268	4045 / 0689	1
-	815	29430-006			··SEAT COVER, UPPER AFT, RH, IVORY/PLATINUM	3828 / 0268	4045 / 0689	1
-	818	29430-007			··SEAT COVER, UPPER AFT, RH, SHADOW/PLATINUM	3828 / 0268	4045 / 0689	1
-	821	29430-008			··SEAT COVER, UPPER AFT, RH, SADDLE/PLATINUM	3828 / 0268	4045 / 0689	1
-	824	29430-009			··SEAT COVER, UPPER AFT, RH, IVORY/CARBON	3828 / 0268	4045 / 0689	1
-	827	29430-010			··SEAT COVER, UPPER AFT, RH, SHADOW/CARBON	3828 / 0268	4045 / 0689	1
-	830	29430-011			··SEAT COVER, UPPER AFT, RH, SADDLE/CARBON	3828 / 0268	4045 / 0689	1
-	833	29430-012			··SEAT COVER, UPPER AFT, RH, RED/CARBON	3828 / 0268	4045 / 0689	1
-	836	31988-001			··SEAT COVER, UPPER AFT, RH, GRAPHITE SS1	4046 / 0690	/	1
-	839	31988-002			··SEAT COVER, UPPER AFT, RH, SLATE LEATHER SS1	4046 / 0690	/	1
-	842	31988-003			··SEAT COVER, UPPER AFT, RH, SHADOW LEATHER SS1	4046 / 0690	/	1
-	845	31988-004			··SEAT COVER, UPPER AFT, RH, IVORY LEATHER SS1	4046 / 0690	/	1
-	848	31988-005			··SEAT COVER, UPPER AFT, RH, SLATE BS PLATINUM	4046 / 0690	/	1
-	851	31988-006			··SEAT COVER, UPPER AFT, RH, SHADOW BS PLATINUM	4046 / 0690	/	1
-	854	31988-007			··SEAT COVER, UPPER AFT, RH, SADDLE BS PLATINUM	4046 / 0690	/	1
-	857	31988-008			··SEAT COVER, UPPER AFT, RH, IVORY BS PLATINUM	4046 / 0690	/	1
-	860	31988-009			··SEAT COVER, UPPER AFT, RH, RED BS PLATINUM	4046 / 0690	/	1
-	863	31988-010			··SEAT COVER, UPPR AFT, RH, SLATE BS PLAT. W/ RED	4046 / 0690	/	1
-	866	31988-011			··SEAT COVER, UPPER AFT, RH, SLATE BS CARBON	4046 / 0690	/	1
-	869	31988-012			··SEAT COVER, UPPER AFT, RH, SHADOW BS CARBON	4046 / 0690	/	1
-	872	31988-013			··SEAT COVER, UPPER AFT, RH, SADDLE BS CARBON	4046 / 0690	/	1

NO IPIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	875	31988-014			··SEAT COVER, UPPER AFT, RH, IVORY BS CARBON	4046 / 0690	/	1
-	878	31988-015			··SEAT COVER, UPPER AFT, RH, RED BS CARBON	4046 / 0690	/	1
-	881	31988-016			··SEAT COVER, UPPR AFT, RH, SLATE BS CARB. W/ RED	4046 / 0690	/	1
	884	29375-001			·COVER, SPRING, RECLINE, REAR SEAT, LH	3828 / 0268	/	1
	887	29375-002			·COVER, SPRING, RECLINE, REAR SEAT, RH	3828 / 0268	/	1
	890	29404-001			·CLOCK SPRING, SEAT RECLINE	3828 / 0268	/	2
	893	AN4-13A		A	·BOLT	3828 / 0268	/	2
	896	AN4-11A		A	·BOLT	3828 / 0268	/	1
	899	NAS1149F0432P		A	·WASHER	3828 / 0268	/	10
	902	MS21042-4		A	·NUT	3828 / 0268	/	3
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0251; REFER TO 22T-0268 W/ 2+1 REAR SEAT FOR PART IDENTIFICATION.			
			@		INSTALL AS REQUIRED (3 MAXIMUM PER PIN).			

EFFECTIVITY:
All

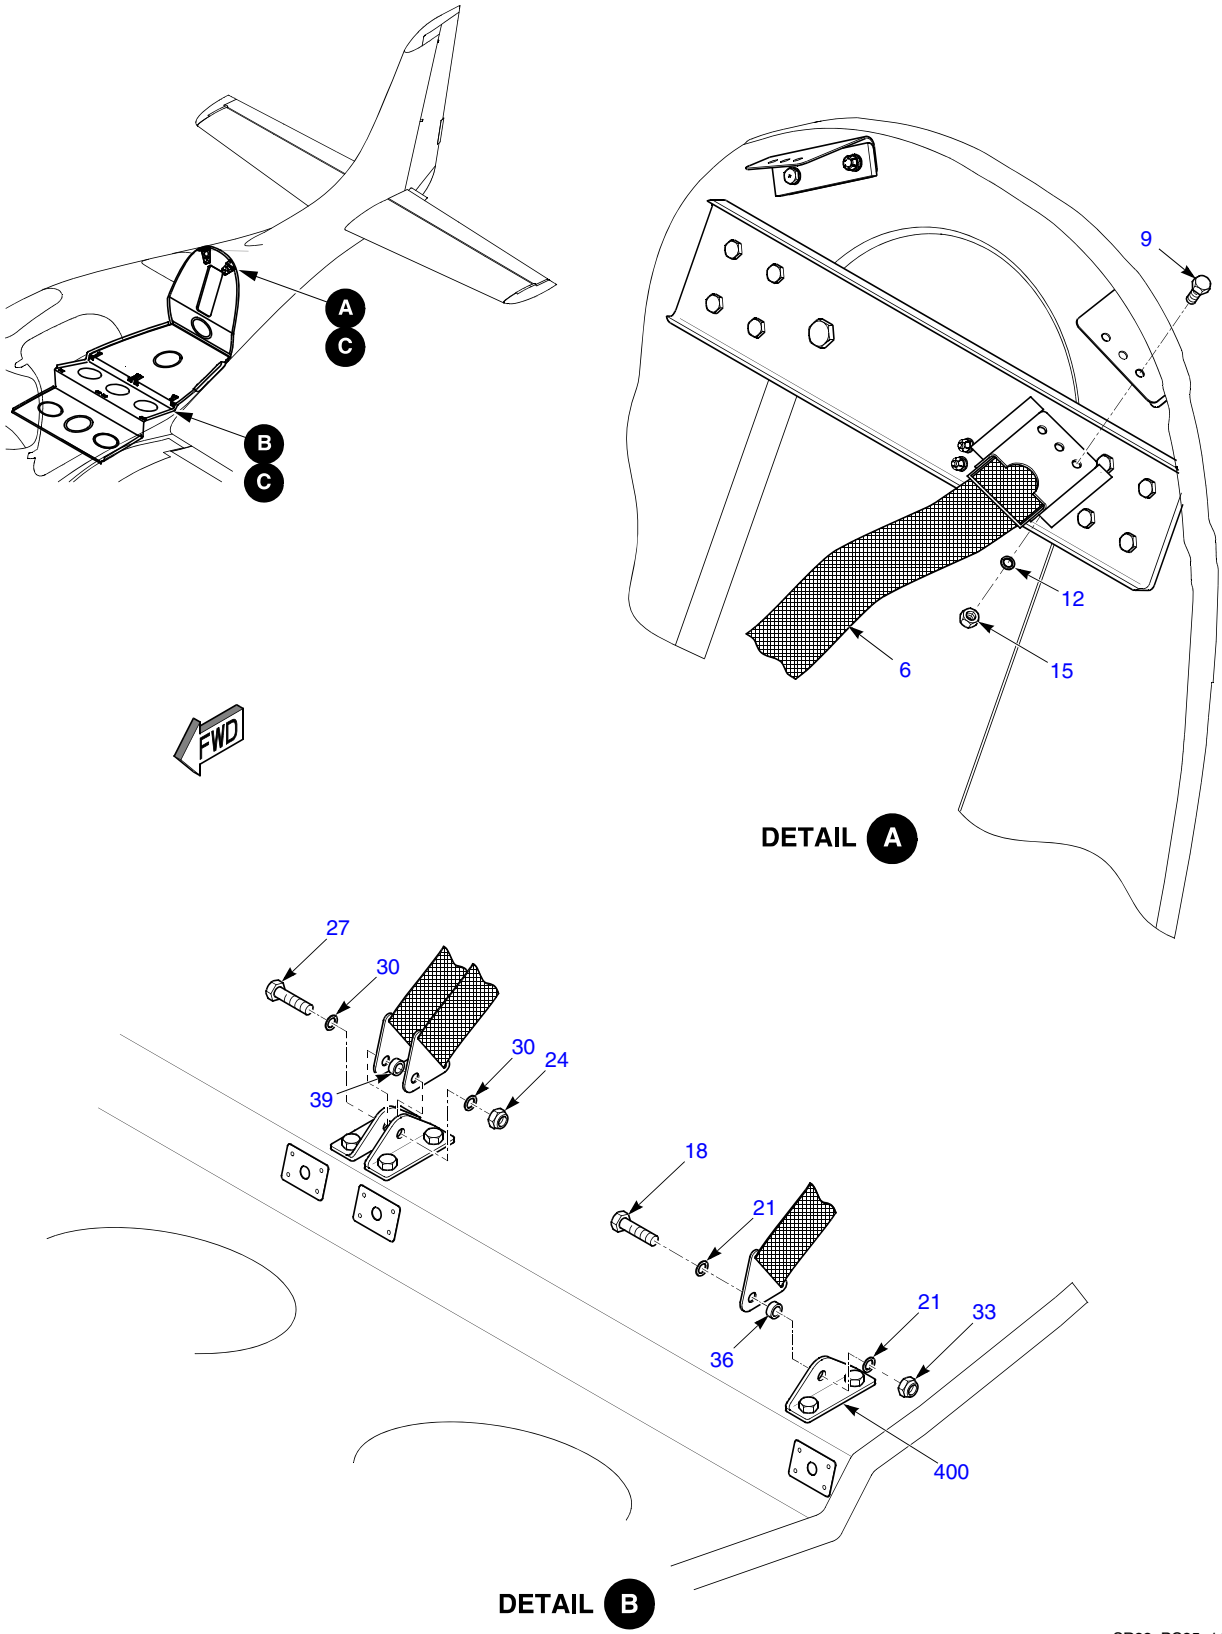

Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat

Figure-03

Passenger Seat Harness - Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat

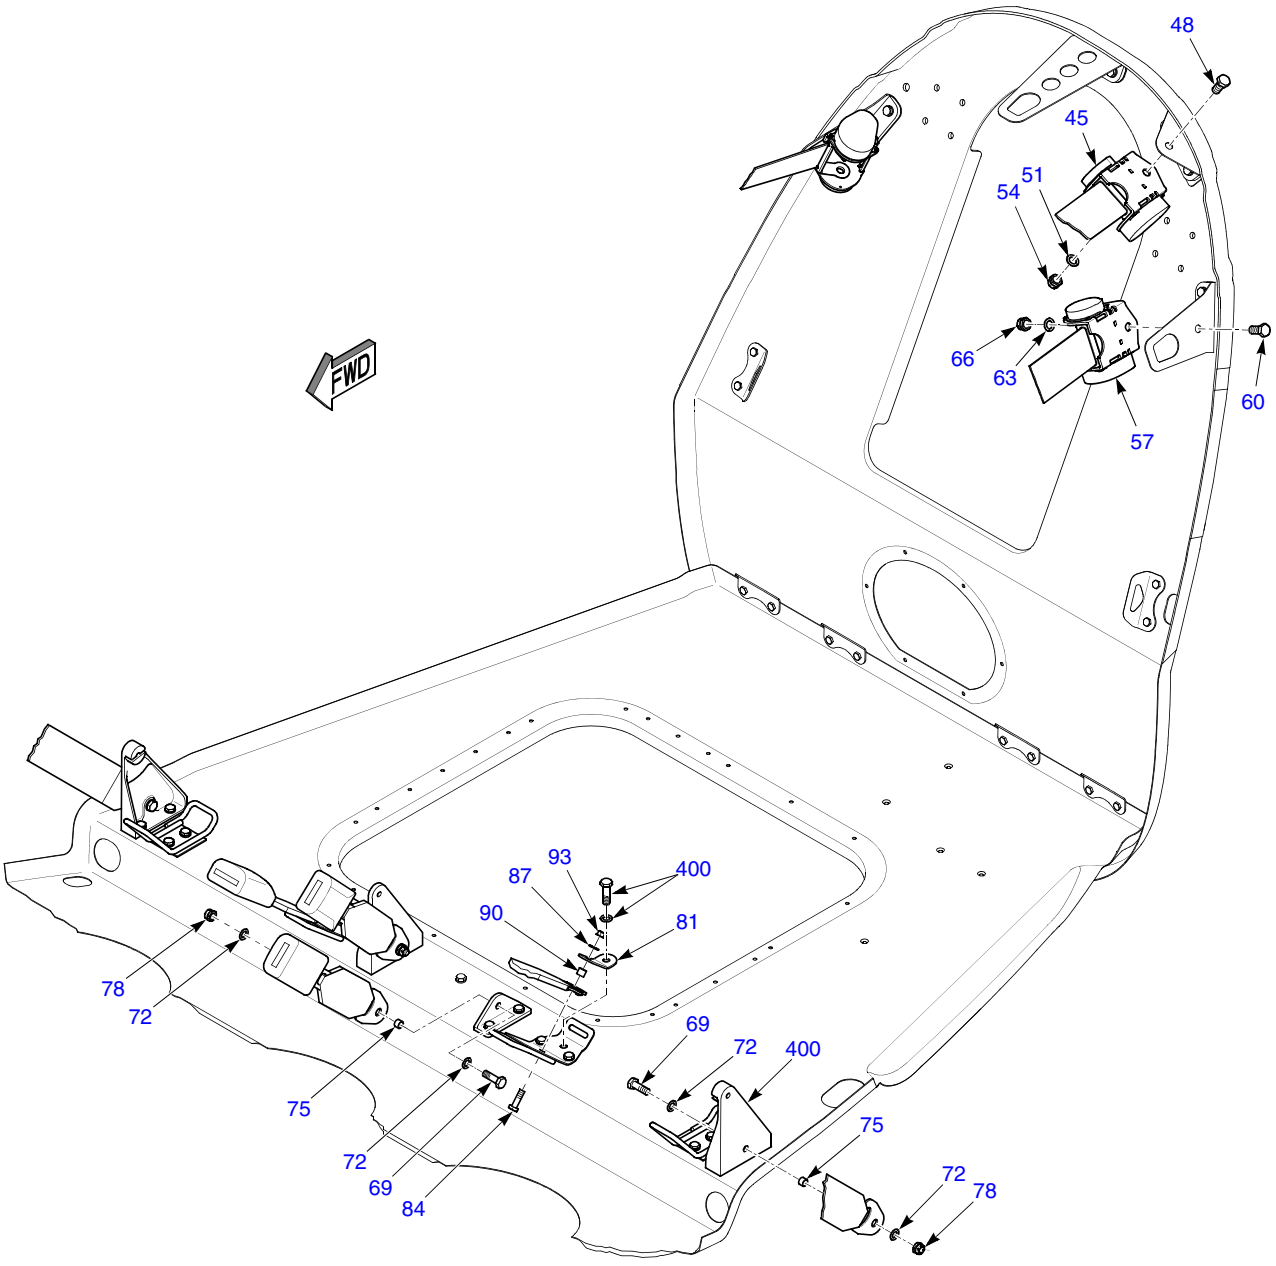

DETAIL C

Serials 22-3828 & subs,
Serials 22T-0268 & subs w/ 2+1 Rear Seat.

SR22_PC25_2042

Figure-03

Passenger Seat Harness - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		SEAT BELT AND SHOULDER HARNESS INSTALLATION W/O 2+1 REAR SEAT	0002 / 0001	/	NP
-	3	12553-003			·SEAT BELT ASSEMBLY, PASSENGER	0002	0679	2
					FOR SPARES USE P/N 12491-001			
	6	12491-001			·SEAT BELT ASSEMBLY, PASSENGER	0680 / 0001	/	2
	9	AN4-5A		A	·BOLT	0002 / 0001	/	6
	12	NAS1149F0463P		A	·WASHER	0002 / 0001	/	6
	15	MS21044N4		A	·NUT	0002 / 0001	/	6
	18	AN5-7A		A	·BOLT	0002 / 0001	/	2
	21	NAS1149F0532P		A	·WASHER	0002 / 0001	/	4
	24	MS21044N5		A	·NUT	0002 / 0001	/	1
	27	AN5-11A		A	·BOLT	0002 / 0001	/	1
	30	NAS1149F0532P		A	·WASHER	0002 / 0001	/	2
	33	MS21044N5		A	·NUT	0002 / 0001	/	2
	36	12055-101		A	·BUSHING	0002 / 0001	/	2
	39	12055-102		A	·BUSHING	0002 / 0001	/	1
-	42	NO PRT NUMBER			SEAT BELT AND SHOULDER HARNESS INSTALLATION W/ 2+1 REAR SEAT	3828 / 0268	/	NP
	45	29103-001			·SEAT BELT ASSEMBLY, PASSENGER	3828 / 0268	/	2
	48	AN6-6A		A	·BOLT	3828 / 0268	/	2
	51	NAS1149D0532K		A	·WASHER	3828 / 0268	/	2
	54	MS21044N6		A	·NUT	3828 / 0268	/	2
	57	29103-002	!		·SEAT BELT ASSEMBLY, PASSENGER	3828 / 0268	/	1
	60	AN6-6A	!	A	·BOLT	3828 / 0268	/	1
	63	NAS1149D0532K	!	A	·WASHER	3828 / 0268	/	1
	66	MS21044N6	!	A	·NUT	3828 / 0268	/	1
	69	AN5-7A		A	·BOLT	3828 / 0268	/	4
	72	NAS1149D0532K		A	·WASHER	3828 / 0268	/	8
	75	29504-001		A	·BUSHING	3828 / 0268	/	4
	78	MS21044N5		A	·NUT	3828 / 0268	/	4
	81	26723-001			·BRACKET	3828 / 0268	/	2
	84	AN4-7A		A	·BOLT	3828 / 0268	/	2
	87	NAS1149D0432K		A	·WASHER	3828 / 0268	/	2
	90	NAS43HT-20		A	·SPACER	3828 / 0268	/	2
	93	MS21042L4		A	·NUT	3828 / 0268	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-06 DET			SEAT BELT AND SHOULDER HARNESS ATTACH FITTINGS			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0251; REFER TO 22T-0268 W/ 2+1 REAR SEAT FOR PART IDENTIFICATION.			
			!		INSTALLED AS OPTIONAL EQUIPMENT.			

Intentionally Left Blank

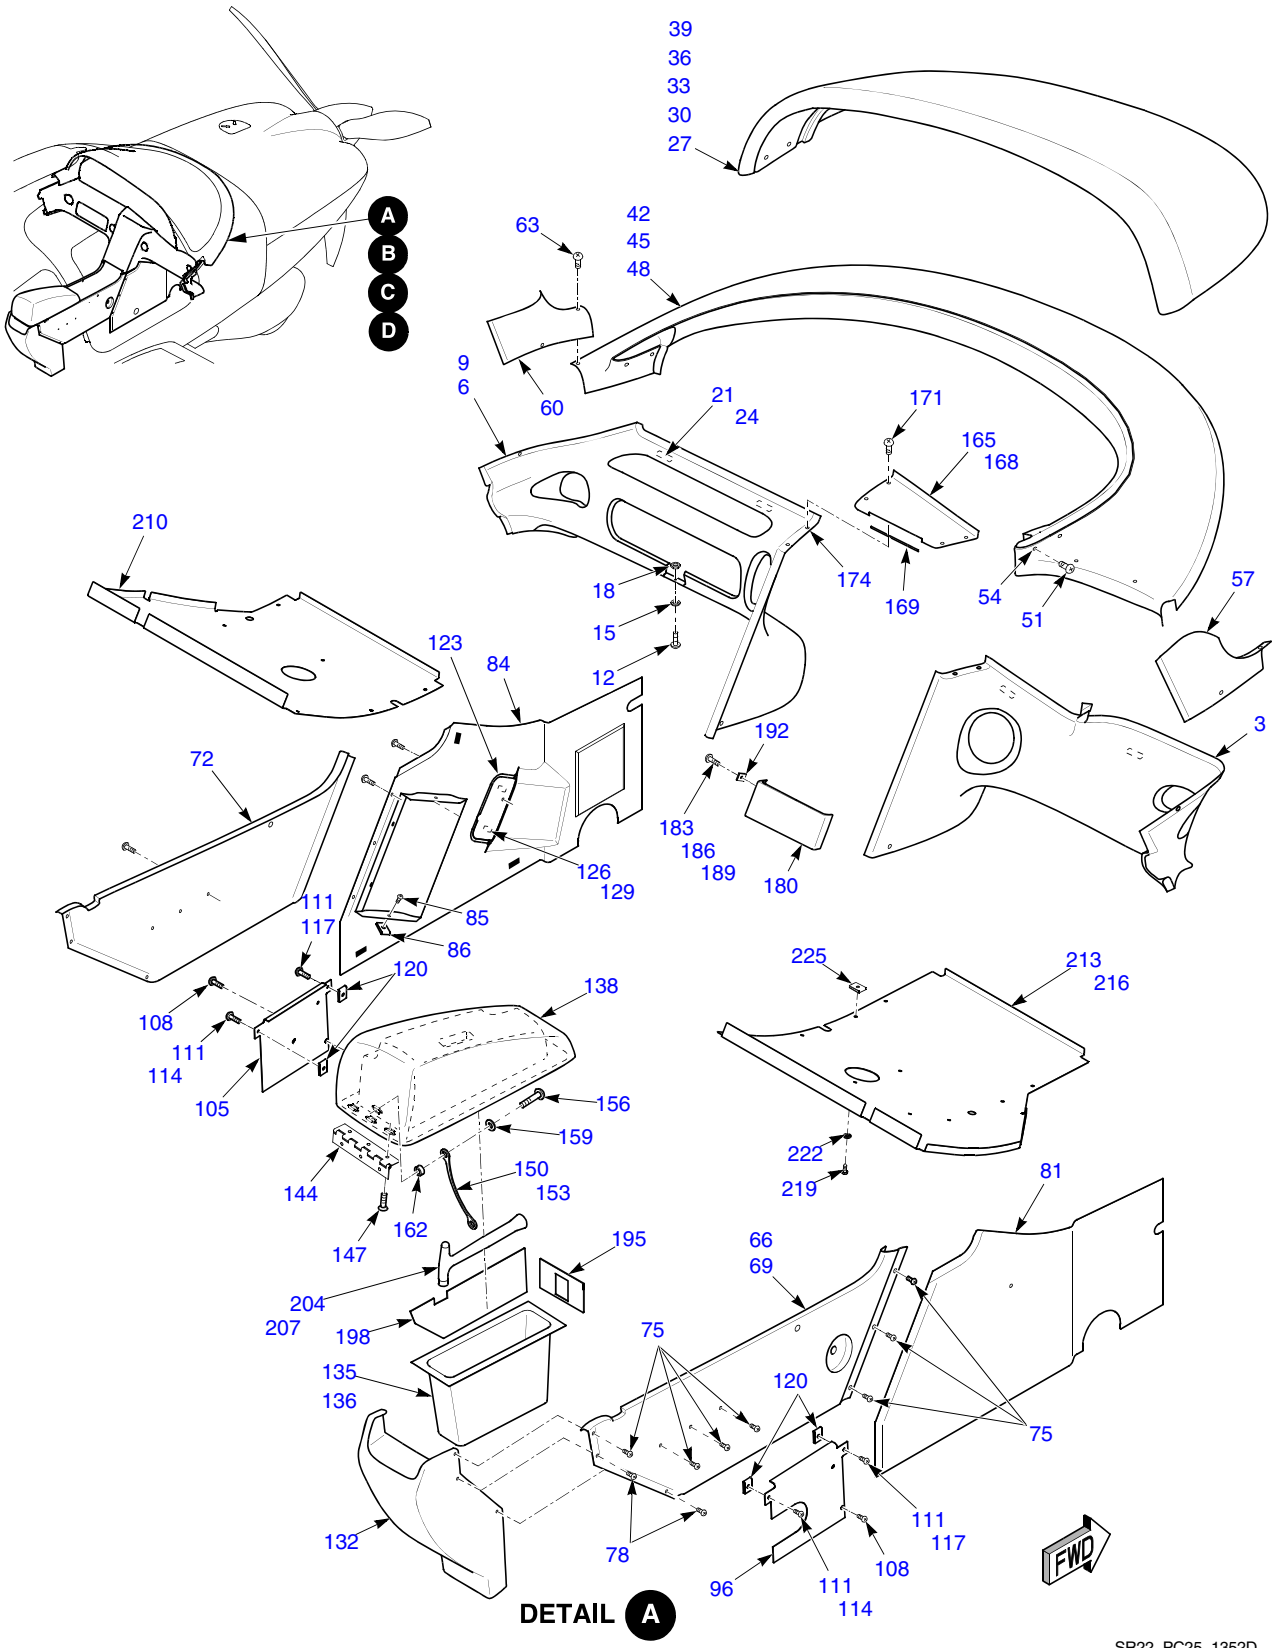

SR22_PC25_1352D

Serials 22-0002 thru 22-0820.

Figure-04

Console Trim - Serials 22-0002 thru 22-0820 (1 of 4)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

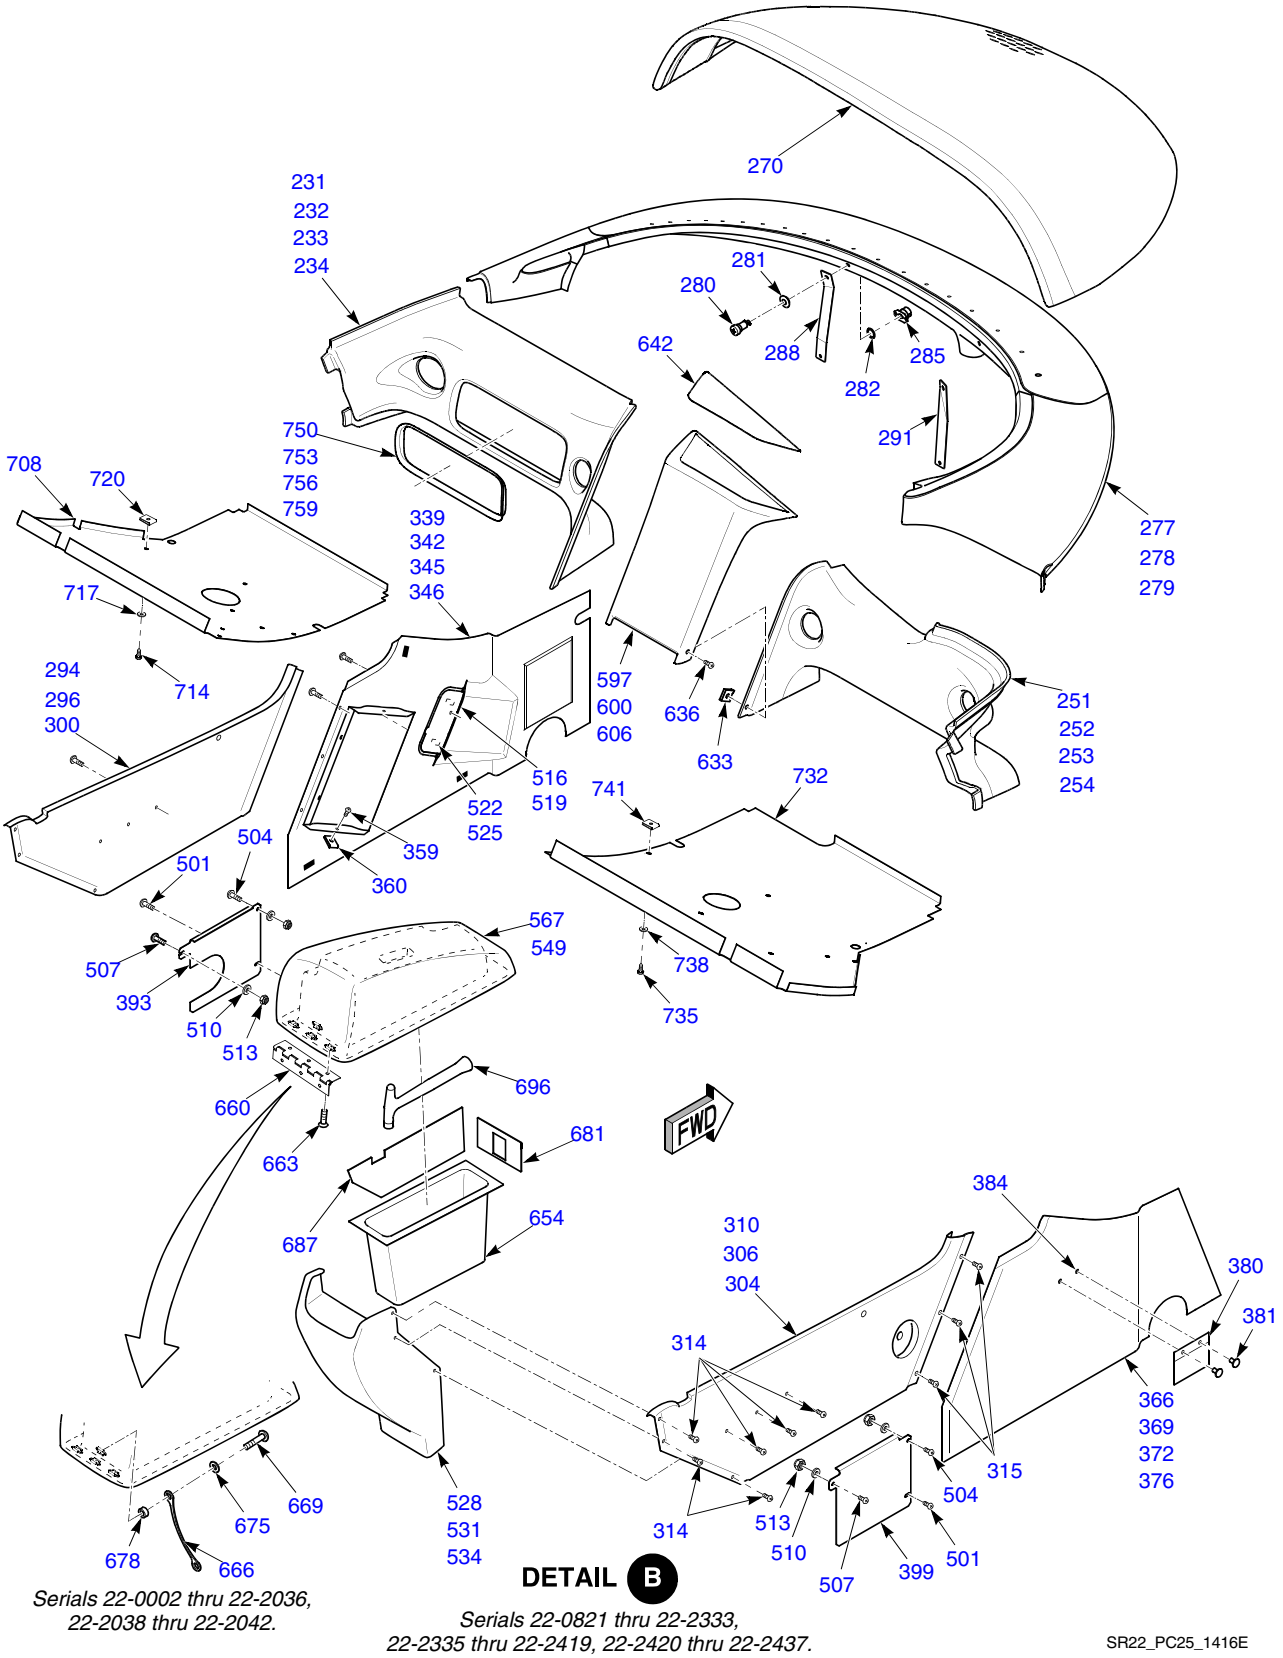

Figure-04

Console Trim - Serials 22-0821 thru 22-2437 (2 of 4)

EFFECTIVITY:
Serials 22-0821 thru 22-2437

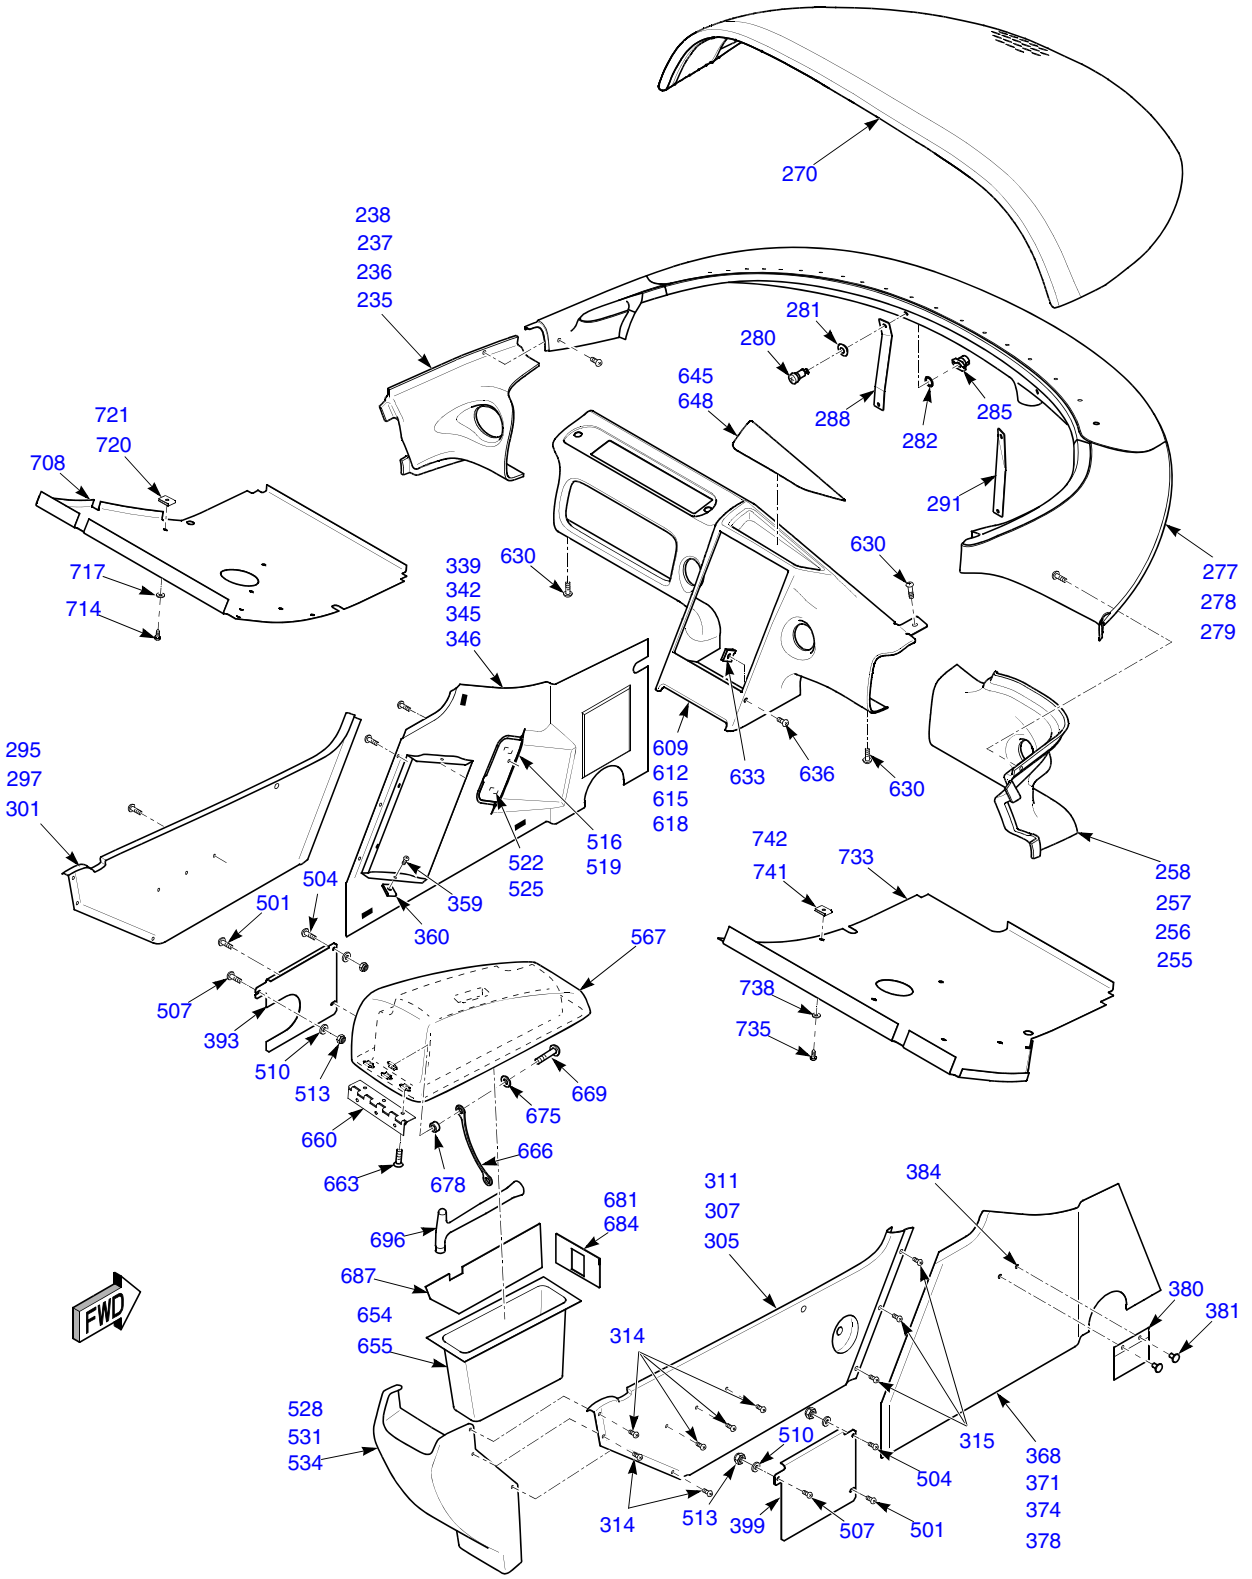

Serials 22-2438 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

DETAIL C

SR22_PC25_1669A

Figure-04

Console Trim - Serials 22-2438 & subs w/o Perspective (3 of 4)

EFFECTIVITY:
Serials 22-2438 & subs w/o Perspective

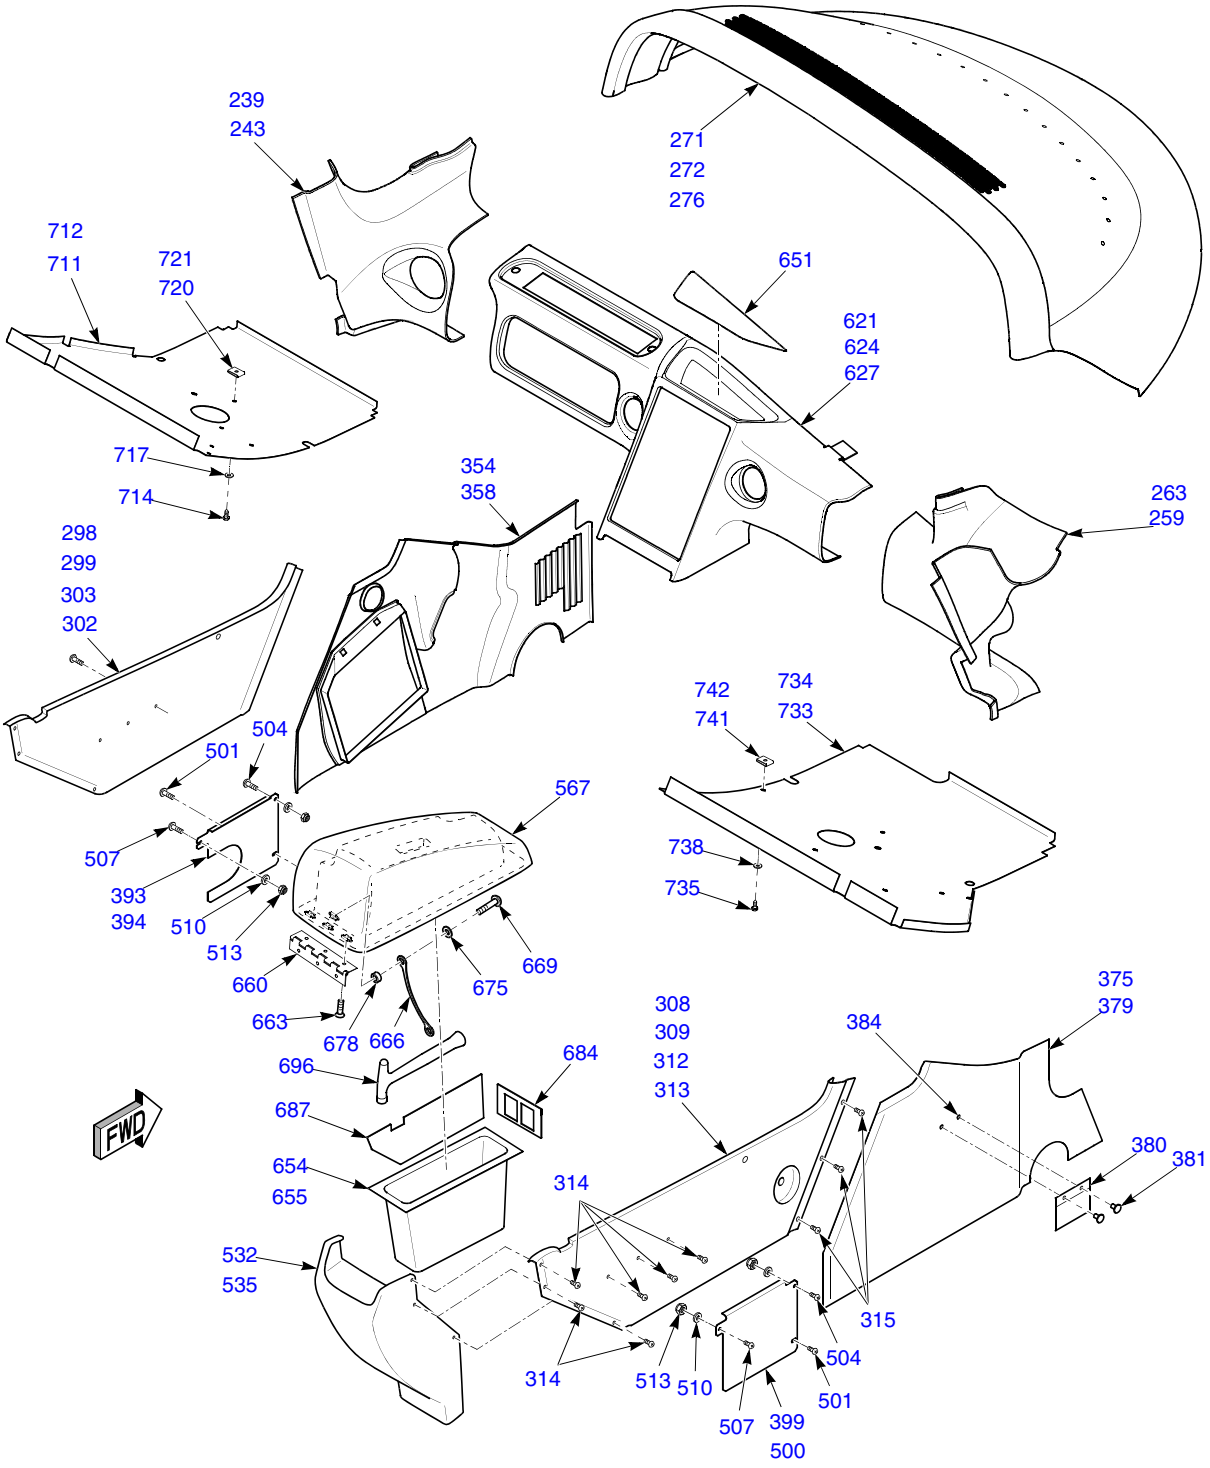

Serials w/ Perspective Avionics.

DETAIL D

SR22_PC25_1778B

Figure-04
Console Trim - Serials w/ Perspective (4 of 4)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04	**		INTERIOR TRIM, CONSOLE INSTALLATION	0002	0820	NP
	3	13106-001			·RH BOLSTER	0002	0820	1
	6	13105-001			·LH BOLSTER, W/O PFD	0002	0429	1
					BEFORE SB2X-25-04			
	9	13105-002			·LH BOLSTER, W/ PFD	0430	0820	1
					AFTER SB2X-25-04			
	12	50834-014		A	·SCREW	0002	0820	4
	15	50813-001		A	·WASHER	0002	0820	4
	18	MS21044N06		A	·NUT	0002	0820	4
	21	50494-002	@	A	·DUAL LOCK, TYPE 170	0002	0820	AR
	24	50494-001	@	A	·DUAL LOCK, TYPE 400	0002	0820	AR
	27	12234-003			·GLARE SHIELD ASSEMBLY	0002	0032	1
					FOR SPARES USE P/N 14653-001			
	30	12234-004			·GLARE SHIELD ASSEMBLY	0033	0138	1
	33	14653-001			·GLARE SHIELD ASSEMBLY, W/O PFD	0139	0429	1
	36	14653-002			·GLARE SHIELD ASSEMBLY, W/ PFD	0139	0429	1
	39	14653-003			·GLARE SHIELD ASSEMBLY	0430	0820	1
	42	12468-002			·LOWER WINDSHIELD ASSY	0002	0138	1
	45	14652-001			·LOWER WINDSHIELD ASSY W/O PFD	0139	0820	1
	48	14652-002			·LOWER WINDSHIELD ASSY W/ PFD	0430	0820	1
	51	50832-004		A	·SCREW	0002	0820	4
	54	50527-001		A	·SPEED NUT	0002	0820	4
	57	13099-002			·A-PILLAR BOTTOM, RH	0002	0820	1
	60	13099-001			·A-PILLAR BOTTOM, LH	0002	0820	1
	63	50834-014		A	·SCREW	0002	0820	1
	66	12221-004			·AFT CONSOLE, SIDE PANEL, RH	0002	0209	1
	69	12221-006			·AFT CONSOLE, SIDE PANEL, RH	0210	0820	1
	72	12221-003			·AFT CONSOLE, SIDE PANEL, LH	0002	0820	1
	75	MS35206-245		A	·SCREW	0002	0820	14
	78	MS35206-263		A	·SCREW	0002	0820	4
	81	12217-002			·MID CONSOLE, INTERIOR TRIM , RH	0002	0820	1
	84	12216-002			·MID CONSOLE, INTERIOR TRIM , LH	0002	0820	1
	85	50832-006		A	·SCREW	0002	0820	4
	86	C8090-632-3B		A	·SPEED NUT	0002	0820	4
-	87	12227-002			·LOWER PANEL, AFT CONSOLE, RH	0002	0074	1
-	90	12227-004			·LOWER PANEL, AFT CONSOLE, RH	0075	0227	1
-	93	12227-006			·LOWER PANEL, AFT CONSOLE, RH	0228	0809	1
	96	15364-002			·LOWER PANEL, AFT CONSOLE, RH	0810	0820	1
-	99	12227-001			·LOWER PANEL, AFT CONSOLE, LH	0002	0227	1
-	102	12227-005			·LOWER PANEL, AFT CONSOLE, LH	0228	0809	1
	105	15364-001			·LOWER PANEL, AFT CONSOLE, LH	0810	0820	1
	108	MS35206-245		A	·SCREW	0002	0820	2
	111	MS51861-45		A	·SCREW	0002	0227	4
	114	MS51861-45		A	·SCREW	0228	0820	3
	117	MS51861-49		A	·SCREW	0228	0820	1
	120	50486-101		A	·SCREW CLIP	0002	0820	4
	123	12655-001			·COVERPLATE	0002	0820	1
	126	50458-001	@	A	·HOOK TAPE	0002	0820	AR
	129	50457-001	@	A	·LOOP TAPE	0002	0820	AR
	132	12258-002			·AFT CONSOLE REAR COVER	0002	0820	1
	135	12219-002			·GLOVEBOX	0002	0820	1
					FOR SPARES USE P/N 12219-003			
	136	12219-003			·GLOVEBOX	0002	0820	1
	138	12260-002			·CENTER ARM REST ASSEMBLY	0002	0820	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	139	12223-104			·CENTER ARM REST LINER	0002	0820	1
-	141	12121-002			·HINGE	0002	0629	1
					FOR SPARES USE P/N 12121-003			
	144	12121-003			·HINGE	0630	0820	1
	147	MS24693-S28		A	·SCREW	0002	0820	3
	150	50804-006			·LANYARD	0002	0277	1
	153	15062-001			·LANYARD	0278	0820	1
	156	MS35206-230		A	·SCREW	0002	0820	2
	159	50813-001		A	·WASHER	0002	0820	2
	162	NAS43DD1-12FC		A	·SPACER	0002	0820	2
	165	13104-001			·CENTER BOLSTER COVER	0002	0304	1
					FOR SPARES USE P/N 13104-002			
	168	13104-002			·CENTER BOLSTER COVER	0305	0820	1
	169	50673-001			··EDGE TRIM	0002	0820	1
	171	50832-006		A	·SCREW	0002	0820	4
	174	50527-001		A	·SPEED NUT	0002	0820	4
-	177	13119-003			·BLANK PANEL	0002	0820	1
	180	13119-004			·BLANK PANEL, W/ PFD, W/ 55SR AUTOPILOT	0744	0820	1
	183	MS51861-45		A	·SCREW	0002	0227	2
	186	MS51861-49		A	·SCREW	0228	0820	2
					ALTERNATE FOR P/N 51207-247			
	189	51207-247		A	·SCREW	0228	0820	2
					ALTERNATE FOR P/N MS51861-49			
	192	50486-101		A	·SCREW CLIP	0002	0820	2
	195	12816-001			·FRONT LINER, CENTER ARM	0002	0820	1
	198	12272-001			·LINER, ARM REST, LH	0002	0820	1
-	201	12272-002			·LINER, ARM REST, RH	0002	0820	1
	204	12422-001			·EGRESS HAMMER	0002	0189	1
	207	12422-002			·EGRESS HAMMER	0190	0820	1
	210	12968-003			·KICK PLATE, LH	0002	0820	1
	213	12968-004			·KICK PLATE, RH	0002	0251	1
					FOR SPARES USE P/N 12968-006			
	216	12968-006			·KICK PLATE, RH	0252	0820	1
	219	MS51861-45		A	·SCREW	0002	0820	7
	222	NAS1149FN832P		A	·WASHER	0002	0820	7
	225	50486-102		A	·NUT	0002	0820	7
-	226	11767-002			·KICK PLATE SUPPORT	0002	0820	2
-	227	NO PRT NUMBER			INTERIOR TRIM, CONSOLE INSTALLATION	0821 / 0001	/	NP
-	228	19980-001			·EDGE TRIM	2190 / 0001	/	1
-	229	20342-001			·LH BOLSTER, TAWNY	0821	1364	1
-	230	20342-002			·LH BOLSTER, SLATE	0821	1364	1
	231	20342-003			·LH BOLSTER, DRIFTWOOD	1365	2437	1
	232	20342-004			·LH BOLSTER, SLATE	1365	2437	1
	233	20342-005			·LH BOLSTER, IMPALA	1520	2437	1
	234	21701-001			·LH BOLSTER, BLACK	2044	2437	1
	235	21719-001	#		·LH BOLSTER, BLACK	2438		1
	236	21719-002	#		·LH BOLSTER, DRIFTWOOD	2438		1
	237	21719-003	#		·LH BOLSTER, SLATE	2438		1
	238	21719-004	#		·LH BOLSTER, IMPALA	2438		1
	239	19293-001	%		·LH BOLSTER, TAWNY	3026 / 0001	4299 / 1232	1
-	240	19293-002	%		·LH BOLSTER, SLATE	3026 / 0001	3843 / 0308	1
-	241	19293-003	%		·LH BOLSTER, BLACK	3026 / 0001	3843 / 0308	1
-	242	19293-004	%		·LH BOLSTER, IMPALA	3026 / 0001	3843 / 0308	1
	243	19293-005	%		·LH BOLSTER, SLATE	3844 / 0309	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	244	19293-006	%		·LH BOLSTER, BLACK	3844 / 0309	/	1
-	245	19293-007	%		·LH BOLSTER, IMPALA	3844 / 0309	/	1
-	246	51397-001			·EDGE TRIM	0821	2437	AR
					ALTERNATE FOR P/N 51392-001			
					ALTERNATE FOR P/N 51762-001			
-	247	51392-001			·EDGE TRIM	0821	2437	AR
					ALTERNATE FOR P/N 51397-001			
					ALTERNATE FOR P/N 51762-001			
-	248	51762-001			·EDGE TRIM	0821	2437	AR
					ALTERNATE FOR P/N 51397-001			
					ALTERNATE FOR P/N 51392-001			
-	249	20343-001			·RH BOLSTER, TAWNY	0821	1364	1
-	250	20343-002			·RH BOLSTER, SLATE	0821	1364	1
	251	20343-003			·RH BOLSTER, DRIFTWOOD	1365	2437	1
	252	20343-004			·RH BOLSTER, SLATE	1365	2437	1
	253	20343-005			·RH BOLSTER, IMPALA	1520	2437	1
	254	21702-001			·RH BOLSTER, BLACK	2044	2437	1
	255	21829-001	#		·RH BOLSTER, BLACK	2438		1
	256	21829-002	#		·RH BOLSTER, DRIFTWOOD	2438		1
	257	21829-003	#		·RH BOLSTER, SLATE	2438		1
	258	21829-004	#		·RH BOLSTER, IMPALA	2438		1
	259	19294-001	%		·RH BOLSTER, TAWNY	3026 / 0001	4299 / 1232	1
-	260	19294-002	%		·RH BOLSTER, SLATE	3026 / 0001	3843 / 0308	1
-	261	19294-003	%		·RH BOLSTER, BLACK	3026 / 0001	3843 / 0308	1
-	262	19294-004	%		·RH BOLSTER, IMPALA	3026 / 0001	3843 / 0308	1
	263	19294-005	%		·RH BOLSTER, SLATE	3844 / 0309	/	1
-	264	19294-006	%		·RH BOLSTER, BLACK	3844 / 0309	/	1
-	265	19294-007	%		·RH BOLSTER, IMPALA	3844 / 0309	/	1
-	267	51397-001			·EDGE TRIM	0821	2437	AR
					ALTERNATE FOR P/N 51392-001			
					ALTERNATE FOR P/N 51762-001			
-	268	51392-001			·EDGE TRIM	0821	2437	AR
					ALTERNATE FOR P/N 51397-001			
					ALTERNATE FOR P/N 51762-001			
-	269	51762-001			·EDGE TRIM	0821	2437	AR
					ALTERNATE FOR P/N 51397-001			
					ALTERNATE FOR P/N 51392-001			
	270	14653-004	#		·GLARE SHIELD ASSEMBLY	0821		1
	271	19299-001	%		·GLARE SHIELD ASSEMBLY	3026	3413	1
					FOR SPARES USE P/N 25901-008			
	272	25901-001	%		·GLARE SHIELD ASSEMBLY, BLACK	3414	3749	1
					FOR SPARES USE P/N 25901-008			
-	273	25901-002	%		·GLARE SHIELD ASSEMBLY, GRAY	3414	3749	1
-	274	25901-003	%		·GLARE SHIELD ASSEMBLY, CURRY	3414	3749	1
-	275	25901-004	%		·GLARE SHIELD ASSEMBLY	3750 / 0001	3834 / 0294	1
					FOR SPARES USE P/N 25901-008			
	276	25901-008	%		·GLARE SHIELD ASSEMBLY	3835 / 0295	/	1
	277	14652-003	#		·LOWER WINDSHIELD ASSY, TAWNY	0821		1
	278	14652-004	#		·LOWER WINDSHIELD ASSY, SLATE	0821		1
	279	14652-005	#		·LOWER WINDSHIELD ASSY, BLACK	1520		1
	280	51382-001		A	·QUARTER TURN FASTENER	0821		2
	281	PRT OF ITM 279		A	·GROMMET	0821		2
	282	PRT OF ITM 279		A	·RETAINING CLIP	0821		2
	285	PRT OF ITM 279		A	·RECEPTACLE	0821		2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	288	20424-001			·LOWER WINDSHIELD SUPPORT, LH	0821		1
	291	20425-001			·LOWER WINDSHIELD SUPPORT, RH	0821		1
	294	12221-007			·AFT CONSOLE, SIDE PANEL, LH, TAN	0821	3389	1
					FOR SPARES USE P/N 12221-107			
	295	12221-107			·AFT CONSOLE, SIDE PANEL, LH, TAN	3390 / 0001	/	1
	296	12221-009			·AFT CONSOLE, SIDE PANEL, LH, BLACK	0821	3389	1
					FOR SPARES USE P/N 12221-109			
	297	12221-109			·AFT CONSOLE, SIDE PANEL, LH, BLACK	3390 / 0001	3689 / 0031	1
	298	28963-001			·AFT CONSOLE, SIDE PANEL, LH, BLACK	3690 / 0032	3843 / 0308	1
	299	28963-003			·AFT CONSOLE, SIDE PANEL, LH, BLACK	3844 / 0309	/	1
	300	12221-011			·AFT CONSOLE, SIDE PANEL, LH, MONTEREY	1520	3389	1
					FOR SPARES USE P/N 12221-111			
	301	12221-111			·AFT CONSOLE, SIDE PANEL, LH, MONTEREY	3390 / 0001	3689 / 0031	1
	302	28963-002			·AFT CONSOLE, SIDE PANEL, LH, MONTEREY	3690 / 0032	3843 / 0308	1
	303	28963-004			·AFT CONSOLE, SIDE PANEL, LH, MONTEREY	3844 / 0309	/	1
	304	12221-008			·AFT CONSOLE, SIDE PANEL, RH, TAN	0821	3389	1
					FOR SPARES USE P/N 12221-108			
	305	12221-108			·AFT CONSOLE, SIDE PANEL, RH, TAN	3390 / 0001	/	1
	306	12221-010			·AFT CONSOLE, SIDE PANEL, RH, BLACK	0821	3389	1
					FOR SPARES USE P/N 12221-110			
	307	12221-110			·AFT CONSOLE, SIDE PANEL, RH, BLACK	3390 / 0001	3689 / 0031	1
	308	28962-001			·AFT CONSOLE, SIDE PANEL, RH, BLACK	3690 / 0032	3843 / 0308	1
	309	28962-003			·AFT CONSOLE, SIDE PANEL, RH, BLACK	3844 / 0309	/	1
	310	12221-012			·AFT CONSOLE, SIDE PANEL, RH, MONTEREY	1520	3389	1
					FOR SPARES USE P/N 12221-112			
	311	12221-112			·AFT CONSOLE, SIDE PANEL, RH, MONTEREY	3390 / 0001	3689 / 0031	1
	312	28962-002			·AFT CONSOLE, SIDE PANEL, RH, MONTEREY	3690 / 0032	3843 / 0308	1
	313	28962-004			·AFT CONSOLE, SIDE PANEL, RH, MONTEREY	3844 / 0309	/	1
	314	50809-010		A	·SCREW	0821 / 0001	/	14
	315	50809-007		A	·SCREW	0821 / 0001	/	6
-	318	12216-003			·MID CONSOLE, INTERIOR TRIM, LH, TAN	0821	2042	1
-	321	12216-005			·MID CONSOLE, INTERIOR TRIM, LH, SLATE	0821	2042	1
-	324	12216-006			·MID CONSOLE, INTERIOR TRIM, LH, MONTEREY	1520	2042	1
-	327	12216-007			·MID CONSOLE, INTERIOR TRIM, LH, TAN	2043	2380	1
-	330	12216-009			·MID CONSOLE, INTERIOR TRIM, LH, SLATE	2043	2380	1
-	333	12216-010			·MID CONSOLE, INTERIOR TRIM, LH, MONTEREY	2043	2380	1
-	336	12216-008			·MID CONSOLE, INTERIOR TRIM, LH, BLACK	2043	2380	1
	339	16529-001	#		·MID CONSOLE, INTERIOR TRIM, LH, TAN	2381		1
	342	16529-002	#		·MID CONSOLE, INTERIOR TRIM, LH, SLATE	2381		1
	345	16529-003	#		·MID CONSOLE, INTERIOR TRIM, LH, MONTEREY	2381		1
	346	16529-004	#		·MID CONSOLE, INTERIOR TRIM, LH, BLACK	2381		1
-	347	19298-001	%		·MID CONSOLE, INTERIOR TRIM, LH, TAN	3026	3373	1
					FOR SPARES USE P/N 19298-005			
-	348	19298-005	%		·MID CONSOLE, INTERIOR TRIM, LH, TAN	3374 / 0001	3689 / 0031	1
-	349	19298-002	%		·MID CONSOLE, INTERIOR TRIM, LH, SLATE	3026	3373	1
					FOR SPARES USE P/N 19298-006			
-	350	19298-006	%		·MID CONSOLE, INTERIOR TRIM, LH, SLATE	3374 / 0001	3689 / 0031	1
-	351	19298-003	%		·MID CONSOLE, INTERIOR TRIM, LH, MONTEREY	3026	3373	1
					FOR SPARES USE P/N 19298-007			
-	352	19298-007	%		·MID CONSOLE, INTERIOR TRIM, LH, MONTEREY	3374 / 0001	3689 / 0031	1
	354	28967-002			·MID CONSOLE, INTERIOR TRIM, LH, MONTEREY	3690 / 0032	/	1
-	356	19298-004	%		·MID CONSOLE, INTERIOR TRIM, LH, BLACK	3026	3373	1
					FOR SPARES USE P/N 19298-008			
-	357	19298-008	%		·MID CONSOLE, INTERIOR TRIM, LH, BLACK	3374 / 0001	3689 / 0031	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	358	28967-001			·MID CONSOLE, INTERIOR TRIM, LH, BLACK	3690 / 0032	/	1
	359	50832-006		A	·SCREW	0821		4
	360	C8090-632-3B		A	·SPEED NUT	0821		4
-	361	12217-003			·MID CONSOLE, INTERIOR TRIM, RH, TAN	0821	1862	1
-	362	12217-005			·MID CONSOLE, INTERIOR TRIM, RH, SLATE	0821	1862	1
-	363	12217-006			·MID CONSOLE, INTERIOR TRIM, RH, MONTEREY	1520	1862	1
	366	12217-007			·MID CONSOLE, INTERIOR TRIM, RH, TAN	1863	3189	1
					FOR SPARES USE P/N 12217-109			
-	367	12217-011			·MID CONSOLE, INTERIOR TRIM, RH, TAN	3190	3389	1
					FOR SPARES USE P/N 12217-109			
-	368	12217-109			·MID CONSOLE, INTERIOR TRIM, RH, TAN	3390 / 0001	/	1
	369	12217-008			·MID CONSOLE, INTERIOR TRIM, RH, SLATE	1863	3189	1
					FOR SPARES USE P/N 12217-110			
-	370	12217-012			·MID CONSOLE, INTERIOR TRIM, RH, SLATE	3190	3389	1
					FOR SPARES USE P/N 12217-110			
	371	12217-110			·MID CONSOLE, INTERIOR TRIM, RH, SLATE	3390 / 0001	/	1
	372	12217-009			·MID CONSOLE, INTERIOR TRIM, RH, MONTEREY	1863	3189	1
					FOR SPARES USE P/N 12217-111			
-	373	12217-013			·MID CONSOLE, INTERIOR TRIM, RH, MONTEREY	3190	3389	1
					FOR SPARES USE P/N 12217-111			
	374	12217-111			·MID CONSOLE, INTERIOR TRIM, RH, MONTEREY	3390 / 0001	3689 / 0031	1
	375	28830-002			·MID CONSOLE, INTERIOR TRIM, RH, MONTEREY	3690 / 0032	/	1
	376	12217-010			·MID CONSOLE, INTERIOR TRIM, RH, BLACK	2043	3189	1
					FOR SPARES USE P/N 12217-113			
-	377	12217-014			·MID CONSOLE, INTERIOR TRIM, RH, BLACK	3190	3389	1
					FOR SPARES USE P/N 12217-113			
	378	12217-113			·MID CONSOLE, INTERIOR TRIM, RH, BLACK	3390 / 0001	3689 / 0031	1
	379	28830-001			·MID CONSOLE, INTERIOR TRIM, RH, BLACK	3690 / 0032	/	1
	380	20396-003			·STORAGE POCKET, CLEAR VINYL, FWD FUSELAGE	0821 / 0001	/	1
	381	51385-001		A	·SNAP RIVET, MALE	0821 / 0001	/	2
	384	51386-001		A	·SNAP RIVET, FEMALE	0821 / 0001	/	2
-	387	15364-003			·LOWER PANEL, AFT CONSOLE, LH	0821	1190	1
-	390	16168-001			·LOWER PANEL, AFT CONSOLE, LH	1191	1862	1
	393	21467-001			·LOWER PANEL, AFT CONSOLE, LH	1863	3595	1
	394	27667-001			·LOWER PANEL, AFT CONSOLE, LH	3596 / 0001	/	1
-	396	15364-004			·LOWER PANEL, AFT CONSOLE, RH	0821	1862	1
	399	21583-001			·LOWER PANEL, AFT CONSOLE, RH	1863	3569	1
	500	27668-001			·LOWER PANEL, AFT CONSOLE, RH	3570 / 0001	/	1
	501	MS27039-0806		A	·SCREW	0821 / 0001	/	2
	504	MS27039-1-06		A	·SCREW	0821 / 0001	/	2
	507	MS27039-1-08		A	·SCREW	0821 / 0001	/	2
	510	NAS1149D0332J		A	·WASHER	0821 / 0001	/	6
	513	MS21083N3		A	·NUT	0821 / 0001	/	4
-	516	12655-001			·COVERPLATE	0821	2042	1
	519	12655-002			·COVERPLATE	2043		1
	522	50458-001	@	A	·HOOK TAPE	0821		AR
	525	50457-001	@	A	·LOOP TAPE	0821		AR
	528	12258-003			·AFT CONSOLE REAR COVER, TAN	0821 / 0001	/	1
	531	12258-004			·AFT CONSOLE REAR COVER, BLACK	0821 / 0001	/	1
	532	28966-001			·AFT CONSOLE REAR COVER, BLACK	3690 / 0032	/	1
	534	12258-005			·AFT CONSOLE REAR COVER, MONTEREY	1520 / 0001	/	1
	535	28966-002			·AFT CONSOLE REAR COVER, MONTEREY	3690 / 0032	/	1
-	537	20423-001			·CENTER ARM REST ASSEMBLY, TAN	0821	2042	1
-	540	20423-002			·CENTER ARM REST ASSEMBLY, BLACK	0821	2042	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	543	20423-004			·CENTER ARM REST ASSEMBLY, BLACK/IVORY	1520	2042	1
					ALTERNATE FOR P/N 20423-003			
-	546	20423-003			·CENTER ARM REST ASSEMBLY, IVORY	1520	2042	1
					ALTERNATE FOR P/N 20423-004			
	549	18505-001			·CENTER ARM REST ASSEMBLY, TAN	2043	2380	1
-	552	18505-002			·CENTER ARM REST ASSEMBLY, BLACK	2043	2380	1
-	555	18505-004			·CENTER ARM REST ASSEMBLY, BLACK/IVORY	2043	2380	1
					ALTERNATE FOR P/N 18505-003			
-	558	18505-003			·CENTER ARM REST ASSEMBLY, IVORY	2043	2380	1
					ALTERNATE FOR P/N 18505-004			
-	561	18505-005			·CENTER ARM REST ASSEMBLY, BLACK/RED	2043	2380	
-	564	18505-006			·CENTER ARM REST ASSEMBLY, BLACK/GRAY	2043	2380	
	567	16528-001			·CENTER ARM REST ASSEMBLY, TAN	2381 / 0001	/	1
-	570	16528-002			·CENTER ARM REST ASSEMBLY, BLACK	2381 / 0001	/	1
-	573	16528-004			·CENTER ARM REST ASSEMBLY, BLACK/IVORY	2381 / 0001	/	1
					ALTERNATE FOR P/N 16528-003			
-	576	16528-003			·CENTER ARM REST ASSEMBLY, IVORY	2381 / 0001	/	1
					ALTERNATE FOR P/N 16528-004			
-	579	16528-005			·CENTER ARM REST ASSEMBLY, BLACK/RED	2381 / 0001	/	1
-	582	16528-006			·CENTER ARM REST ASSEMBLY, BLACK/GRAY	2381 / 0001	/	1
-	585	16528-007			·CENTER ARM REST ASSEMBLY, IVORY/BLACK	2420 / 0001	/	1
-	588	16528-008			·CENTER ARM REST ASSEMBLY, BLACK/BLUE	2610 / 0001	/	1
-	589	16528-009			·CENTER ARM REST ASSEMBLY, IVORY/BLUE	2610 / 0001	/	1
-	590	16528-010			·CENTER ARM REST ASSEMBLY, IVORY/RED	2610 / 0001	/	1
-	591	16528-011			·CENTER ARM REST ASSEMBLY, BLACK/GOLD	2610 / 0001	/	1
-	592	16528-012			·CENTER ARM REST ASSEMBLY, IVORY/BROWN	2610 / 0001	/	1
-	593	16528-013			·CENTER ARM REST ASSEMBLY, BLACK/GRAY1	2610 / 0001	/	1
-	594	16528-014			·CENTER ARM REST ASSEMBLY, BLACK/GRAY2	2610 / 0001	/	1
-	595	16528-015			·CENTER ARM REST ASSEMBLY, BLACK/CURRY	2610 / 0001	/	1
-	596	16528-016			·CENTER ARM REST ASSEMBLY, BLACK/CHINESE RUST	2610 / 0001	/	1
	597	20387-001			·CENTER BOLSTER COVER, TAN	0821	2437	1
	600	20387-002			·CENTER BOLSTER COVER, BLACK	0821	2437	1
-	603	20387-003			·CENTER BOLSTER COVER, MONTEREY	1520	2437	1
					ALTERNATE FOR P/N 20387-004			
	606	20387-004			·CENTER BOLSTER COVER, MONTEREY	1520	2437	1
	609	18512-001	#		·CENTER BOLSTER COVER, TAWNY	2438		1
	612	18512-002	#		·CENTER BOLSTER COVER, SLATE	2438		1
	615	18512-003	#		·CENTER BOLSTER COVER, BLACK	2438		1
	618	18512-004	#		·CENTER BOLSTER COVER, IMPALA	2438		1
	621	21906-001	%		·CENTER BOLSTER COVER, TAWNY	3026 / 0001	4299 / 1232	1
	624	21906-003	%		·CENTER BOLSTER COVER, BLACK	3026 / 0001	/	1
	627	21906-004	%		·CENTER BOLSTER COVER, IMPALA	3026 / 0001	/	1
-	628	34506-003	!		·CENTER BOLSTER COVER, BLACK	4164 / 0963	/	1
-	629	34506-004	!		·CENTER BOLSTER COVER, IMPALA	4164 / 0963	/	1
	630	50834-010		A	·SCREW	2438		3
	633	50527-001		A	·SPEED NUT	0821		2
	636	50834-007		A	·SCREW	0821		2
-	637	19845-002	&		·CONSOLE BADGE ASSEMBLY	3414		1
-	639	20527-001			·CONSOLE BEZEL MAT	0821	1519	1
	642	20527-002			·CONSOLE BEZEL MAT	1520	2437	1
	645	21722-001			·CONSOLE BEZEL MAT	2438	2619	1
	648	21722-002	#		·CONSOLE BEZEL MAT	2620		1
	651	19987-001	%		·CONSOLE BEZEL MAT	3026 / 0001	/	1
	654	12219-002			·GLOVEBOX	0821	3389	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 12219-003			
	655	12219-003			·GLOVEBOX	3390 / 0001	/	1
-	657	12121-003			·HINGE	0821	2042	1
	660	19153-001			·HINGE	2043 / 0001	/	1
	663	MS24693-S28		A	·SCREW	0821 / 0001	/	3
	666	15062-001			·LANYARD	0002 / 0001	/	1
	669	MS35214-27		A	·SCREW	0002	0820	2
					ALTERNATE FOR P/N MS35206-230			
-	672	MS35206-230		A	·SCREW	0821 / 0001	/	2
					ALTERNATE FOR P/N MS35214-27			
	675	50813-001		A	·WASHER	0002 / 0001	/	2
	678	NAS43DD1-12FC		A	·SPACER	0002 / 0001	/	2
	681	12816-001			·FRONT LINER, CENTER ARM	0821	2619	1
	684	12816-002			·FRONT LINER, CENTER ARM	2620 / 0001	/	1
	687	12272-001			·LINER, ARM REST, LH	0821 / 0001	/	1
-	690	12272-002			·LINER, ARM REST, RH	0821 / 0001	/	1
-	693	12422-002			·EGRESS HAMMER	0821 / 0001	/	1
					ALTERNATE FOR P/N 12592-001			
	696	12592-001			·EGRESS HAMMER	0821 / 0001	/	1
-	699	12968-003			·KICK PLATE, LH	0821	1275	1
					ALTERNATE FOR P/N 20688-001			
-	702	20688-001			·KICK PLATE, LH, W/ XM WEATHER	1276	1862	1
					ALTERNATE FOR P/N 12968-003			
-	705	20688-003			·KICK PLATE, LH	1863	2030	1
	708	17996-001	#		·KICK PLATE, LH	2031		1
	711	19118-001	%		·KICK PLATE, LH	3026 / 0001	4299 / 1232	1
	712	19118-002	%		·KICK PLATE, LH	4300 / 1233	/	1
	714	MS51861-45		A	·SCREW	0821	2030	7
						2031 / 0001	/	3
	717	NAS1149FN832P		A	·WASHER	0821	2030	7
						2031 / 0001	/	3
	720	A1348-8Z-1		A	·NUT	0821	2030	7
	721	50486-102				2031 / 0001	/	3
-	723	12968-006			·KICK PLATE, RH	0821	1643	1
					ALTERNATE FOR P/N 21525-001			
-	726	21525-001			·KICK PLATE, RH	1644	1862	1
					ALTERNATE FOR P/N 12968-006			
-	729	20688-004			·KICK PLATE, RH	1863	2030	1
	732	17996-002			·KICK PLATE, RH	2031	3364	1
					FOR SPARES USE P/N 17996-003			
	733	17996-003			·KICK PLATE, RH	3365 / 0001	4299 / 1232	1
	734	17996-004			·KICK PLATE, RH	4300 / 1233	/	1
	735	MS51861-45		A	·SCREW	0821	2030	7
						2031 / 0001	/	3
	738	NAS1149FN832P		A	·WASHER	0821	2030	7
						2031 / 0001	/	3
	741	A1348-8Z-1		A	·NUT	0821	2030	7
	742	50486-102				2031 / 0001	/	3
-	743	11767-002			·KICK PLATE SUPPORT	0821	1862	2
-	747	11767-003			·KICK PLATE SUPPORT	1863 / 0001	/	2
	750	18508-001			·TRIM RING, TAWNY	2044	2437	1
	753	18508-002			·TRIM RING, SLATE	2044	2437	1
	756	18508-003			·TRIM RING, BLACK	2044	2437	1
	759	18508-004			·TRIM RING, IVORY	2044	2437	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2037; REFER TO 22-2043 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					4) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
			#		SERIAL NUMBERS W/O PERSPECTIVE AVIONICS.			
			%		SERIAL NUMBERS W/ PERSPECTIVE AVIONICS.			
			@		BULK ITEM CUT TO LENGTH.			
			$		INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 & SUBS AS OPTIONAL EQUIPMENT.			
			&		INSTALLED ON X-EDITION AIRCRAFT WITHOUT ADF.			
			!		SERIAL NUMBERS W/ MD302			

EFFECTIVITY:
All

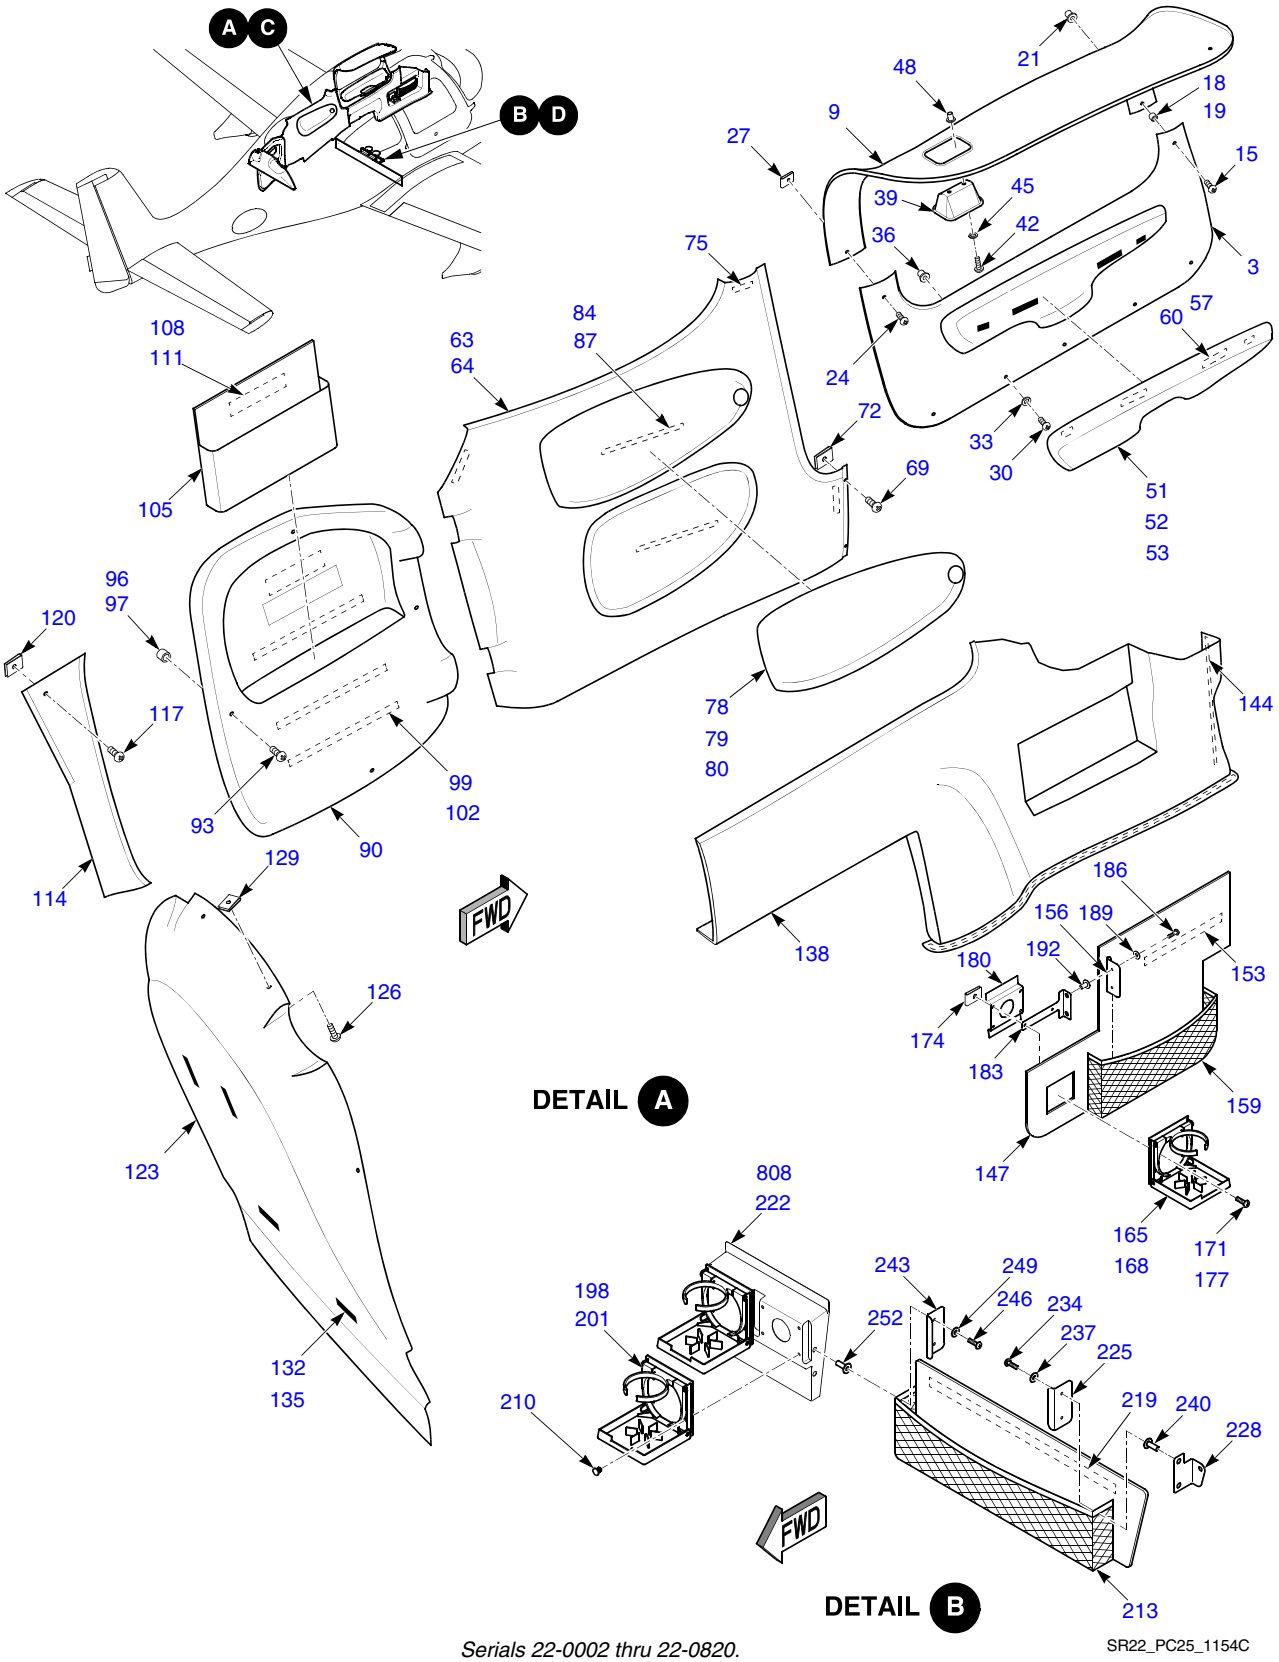

Serials 22-0002 thru 22-0820.

SR22_PC25_1154C

Figure-05

Side Panel Trim - Serials 22-0002 thru 22-0820 (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

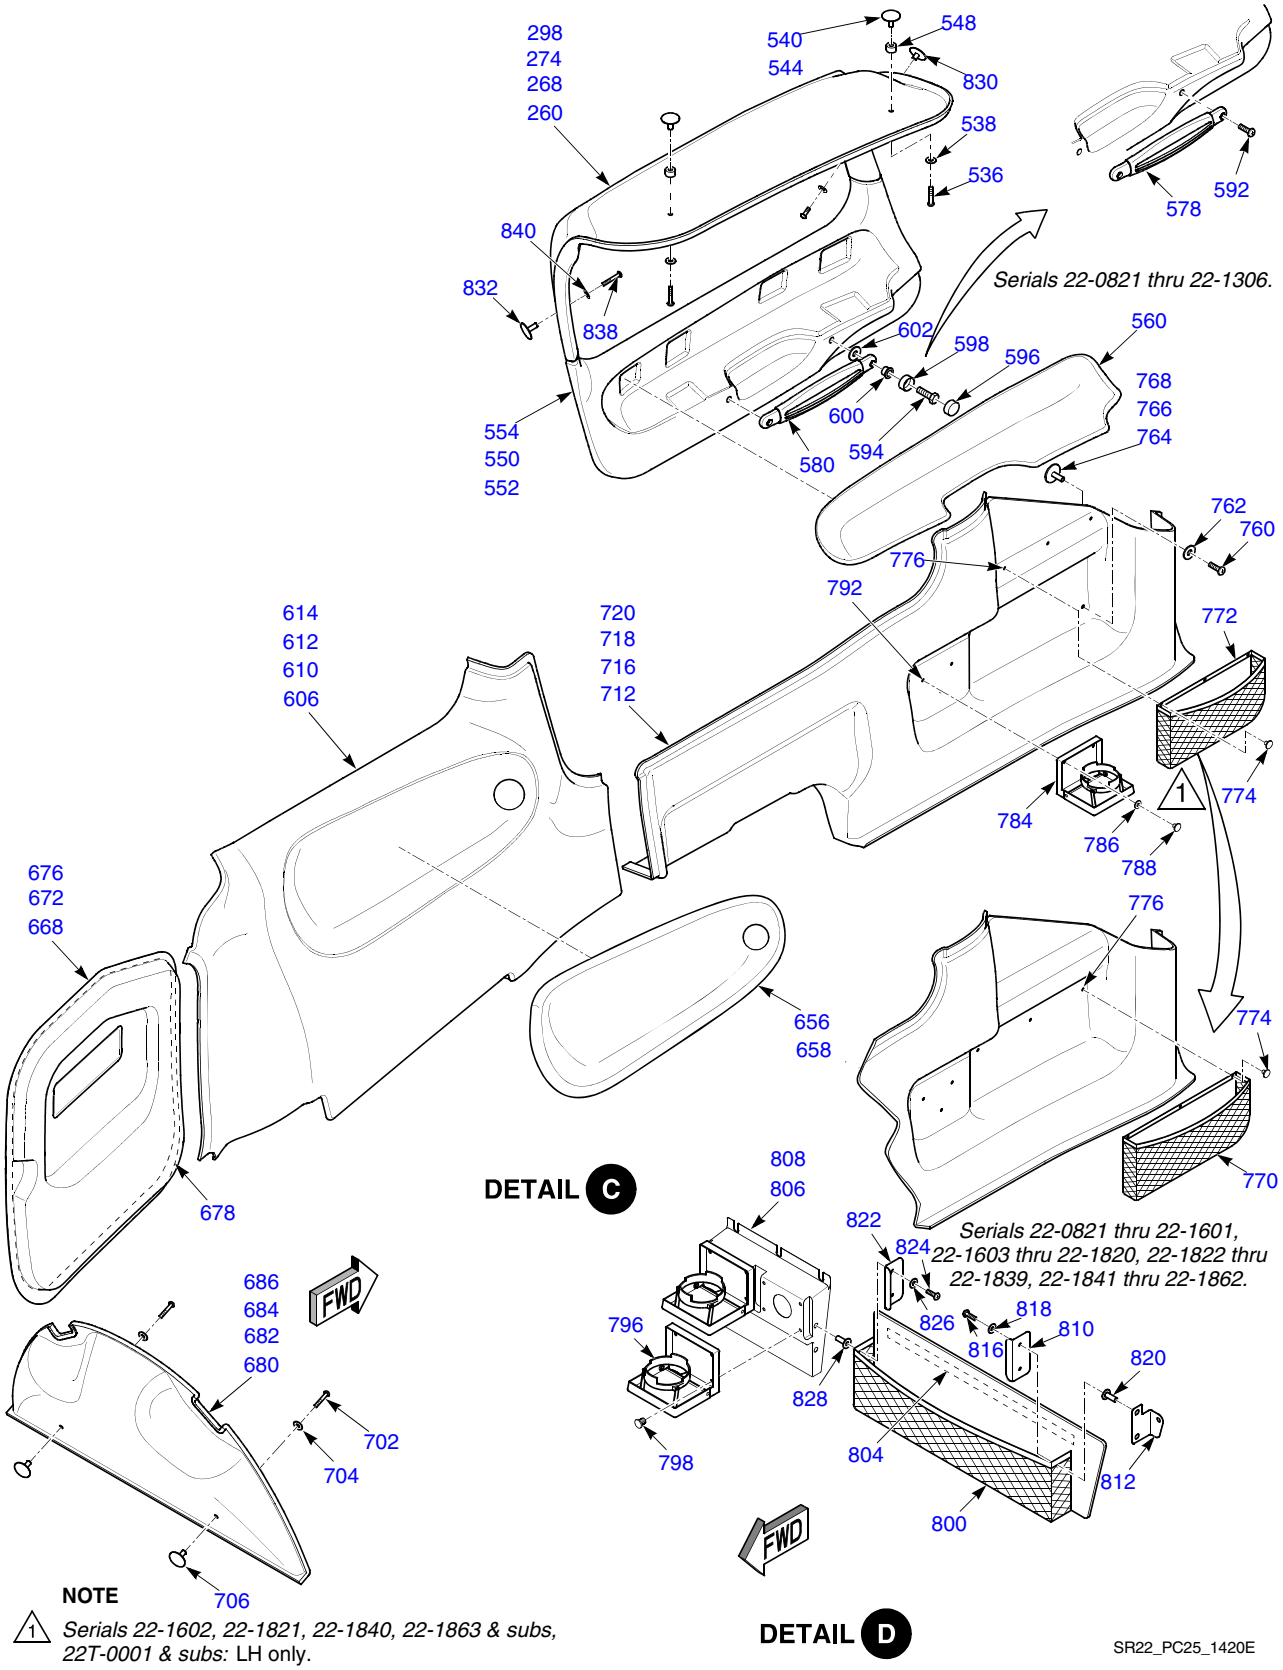

Figure-05

Side Panel Trim - Serials 22-0821 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (2 of 3)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs w/o 2+1 Rear Seat

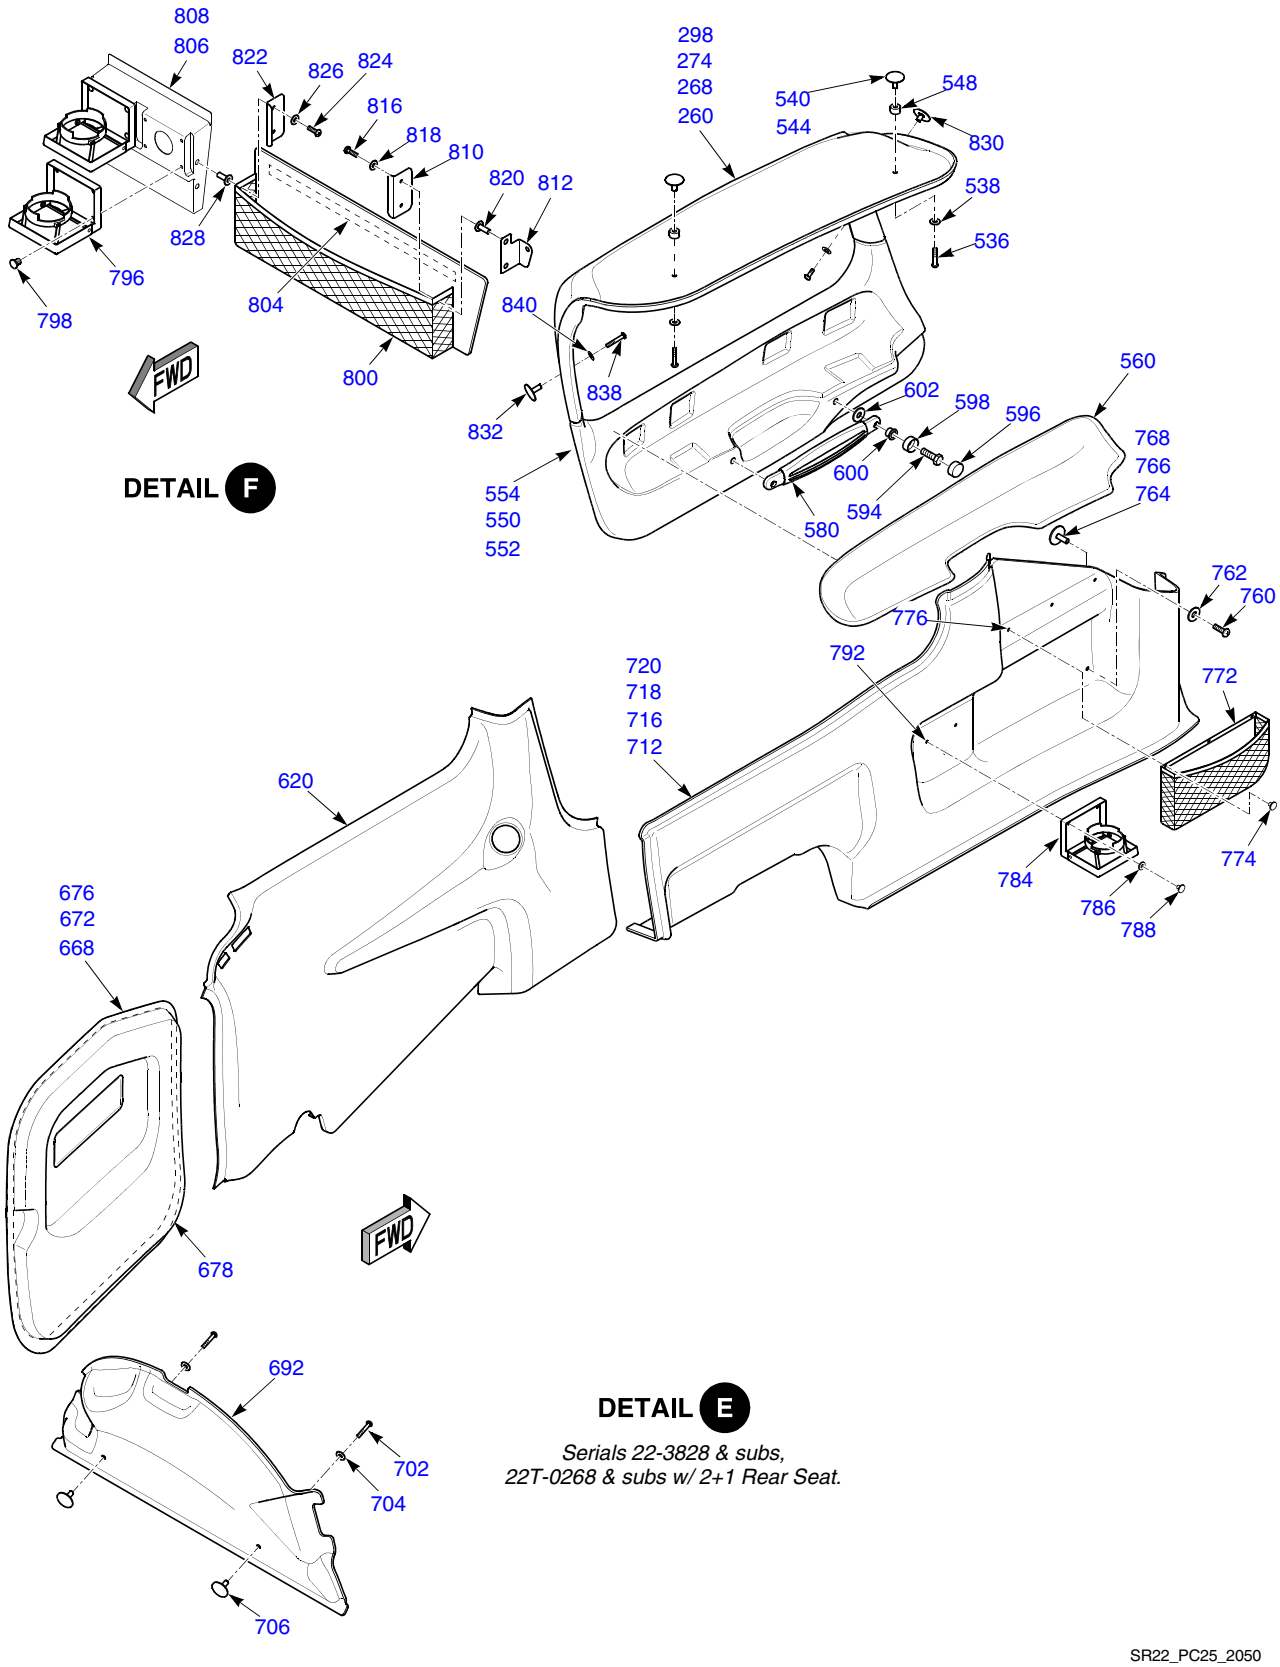

SR22_PC25_2050

Figure-05

Side Panel Trim - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05	**		SIDE PANEL TRIM INSTALLATION	0002	0820	NP
	3	13108-001			·INTERIOR TRIM, LOWER CABIN DOOR, LH	0002	0820	1
-	6	13108-002			·INTERIOR TRIM, LOWER CABIN DOOR, RH	0002	0820	1
	9	13107-001			·INTERIOR TRIM, UPPER CABIN DOOR, LH	0002	0820	1
-	12	13107-002			·INTERIOR TRIM, UPPER CABIN DOOR, RH	0002	0820	1
	15	50835-012		A	·SCREW	0002	0820	2
	18	50759-001		A	·FOAM PAD	0002	0820	2
					ALTERNATE FOR P/N 51308-001			
	19	51308-001		A	·NEOPRENE SPACER	0002	0820	2
					ALTERNATE FOR P/N 50759-001			
	21	50947-001		A	·NUT	0002	0820	2
	24	50833-004		A	·SCREW	0002	0820	3
	27	50527-001		A	·NUT	0002	0820	3
	30	50813-001		A	·SCREW	0002	0820	4
	33	50813-001		A	·WASHER	0002	0820	4
	36	50763-002		A	·WELLNUT	0002	0820	4
	39	12911-001			·INTERIOR TRIM, UPPER DOOR PULL HANDLE	0002	0820	2
					ALTERNATE FOR P/N 12911-002			
	42	MS35214-28		A	·SCREW	0002	0820	2
	45	50813-001		A	·WASHER	0002	0820	2
	48	50763-002		A	·WELL-NUT	0002	0820	2
	51	12255-003			·INTERIOR TRIM, ARM REST, CABIN DOOR, LH	0002	0037	1
	52	13109-001			·INTERIOR TRIM, ARM REST, CABIN DOOR, LH	0038	0820	1
					ALTERNATE FOR P/N 13109-003			
	53	13109-003			·INTERIOR TRIM, ARM REST, CABIN DOOR, LH	0038	0820	1
					ALTERNATE FOR P/N 13109-001			
-	54	12255-004			·INTERIOR TRIM, ARM REST, CABIN DOOR, RH	0002	0037	1
-	55	13109-002			·INTERIOR TRIM, ARM REST, CABIN DOOR, RH	0038	0820	1
					ALTERNATE FOR P/N 13109-004			
-	56	13109-004			·INTERIOR TRIM, ARM REST, CABIN DOOR, RH	0038	0820	1
					ALTERNATE FOR P/N 13109-002			
	57	50494-002		A	·DUAL LOCK, TYPE 170	0002	0820	AR
	60	50494-001		A	·DUAL LOCK, TYPE 400	0002	0820	AR
	63	12238-004			·INTERIOR TRIM, LH REAR CABIN SIDE	0002	0820	1
	64	12238-005			·INTERIOR TRIM, LH REAR CABIN SIDE W/ICE PROT.	0334	0820	1
-	66	12239-003			·INTERIOR TRIM, RH REAR CABIN SIDE	0002	0820	1
	69	50832-006		A	·SCREW	0002	0820	2
	72	50527-001		A	·NUT	0002	0820	2
	75	50494-001		A	·DUAL LOCK, TYPE 400	0002	0820	AR
	78	12257-003			·INTERIOR TRIM, ARM REST, REAR, LH	0002	0037	1
	79	13110-001			·INTERIOR TRIM, ARM REST, REAR, LH	0038	0820	1
					ALTERNATE FOR P/N 13110-003			
	80	13110-003			·INTERIOR TRIM, ARM REST, REAR, LH	0038	0820	1
					ALTERNATE FOR P/N 13110-001			
-	81	12257-004			·INTERIOR TRIM, ARM REST, REAR, RH	0002	0037	1
-	82	13110-002			·INTERIOR TRIM, ARM REST, REAR, RH	0038	0820	1
					ALTERNATE FOR P/N 13110-004			
-	83	13110-004			·INTERIOR TRIM, ARM REST, REAR, RH	0038	0820	1
					ALTERNATE FOR P/N 13110-002			
	84	50494-002		A	·DUAL LOCK, TYPE 170	0002	0820	AR
	87	50494-001		A	·DUAL LOCK, TYPE 400	0002	0820	AR
	90	12240-003			·INTERIOR TRIM, BAGGAGE DOOR	0002	0820	1
	93	50835-012		A	·SCREW	0002	0820	4
	96	50759-001		A	·FOAM PAD	0002	0820	AR

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						ALTERNATE FOR P/N 51308-001			
	97	51308-001		A		·NEOPRENE SPACER	0002	0820	AR
						ALTERNATE FOR P/N 50759-001			
	99	50457-001		A		·LOOP TAPE	0002	0820	AR
	102	50458-001		A		·HOOK TAPE	0002	0820	AR
	105	12855-001				·INTERIOR TRIM, POCKET LINER, BAGGAGE DOOR	0002	0820	1
	108	50457-001		A		·LOOP TAPE	0002	0820	AR
	111	50458-001		A		·HOOK TAPE	0002	0820	AR
	114	12236-101				·INTERIOR TRIM, BAGGAGE LH SIDE	0002	0820	1
	117	50832-006		A		·SCREW	0002	0820	1
	120	50527-001		A		·NUT	0002	0820	1
	123	13103-001				·INTERIOR TRIM, BULKHEAD 222	0002	0820	1
	126	50833-006		A		·SCREW	0002	0820	4
	129	50527-001		A		·NUT	0002	0820	4
	132	50494-001		A		·DUAL LOCK, TYPE 400	0002	0820	AR
	135	50494-002		A		·DUAL LOCK, TYPE 170	0002	0820	AR
	138	13098-001				·INTERIOR TRIM, CABIN AIR DUCT COVER, LH	0002	0820	1
-	141	13098-002				·INTERIOR TRIM, CABIN AIR DUCT COVER, RH	0002	0820	1
	144	50550-001		A		·FOAM TAPE	0002	0820	AR
	147	12819-003				·STORAGE POCKET, FWD FUSELAGE, LH	0002	0820	1
-	150	12819-004				·STORAGE POCKET, FWD FUSELAGE, RH	0002	0820	1
	153	50458-001		A		·HOOK TAPE	0002	0820	AR
	156	12951-001				·INTERIOR TRIM POCKET SUPPORT	0002	0820	1
	159	12819-103				·MESH, LH	0002	0820	1
-	162	12819-104				·MESH, RH	0002	0820	1
	165	50683-001				·DRINK HOLDER	0002	0209	2
	168	51179-001				·DRINK HOLDER	0210	0820	1
	171	MS21207-8-6		A		·SCREW	0002	0209	8
						ALTERNATE FOR P/N 51157-001			
	174	50801-001		A		·SPEED NUT	0002	0209	8
						ALTERNATE FOR P/N 51157-001			
	177	51157-001		A		·RETAINER	0002	0820	8
						ALTERNATE FOR P/N MS21207-8-6			
						ALTERNATE FOR P/N 50801-001			
	180	12767-002				·BRACKET, DRINK HOLDER	0002	0209	1
	183	12963-001				·POCKET SUPPORT	0002	0820	2
	186	MS35214-28		A		·SCREW	0002	0820	2
	189	50813-001		A		·WASHER	0002	0820	2
	192	50763-002		A		·WELL NUT	0002	0820	2
-	195	NO PRT NUMBER				REAR DRINK HOLDERS AND STORAGE POCKETS			NP
	198	50683-001				·DRINK HOLDER	0002	0209	2
	201	51179-001				·DRINK HOLDER	0210	0820	2
-	204	MS21207-8-6		A		·SCREW	0002	0209	8
						ALTERNATE FOR P/N 51157-001			
-	207	50801-001		A		·SPEED NUT	0002	0209	8
						ALTERNATE FOR P/N 51157-001			
	210	51157-001		A		·RETAINER	0002	0820	8
						ALTERNATE FOR P/N MS21207-8-6			
						ALTERNATE FOR P/N 50801-001			
	213	12945-001				·STORAGE POCKET, LH	0002	0820	1
-	216	12945-002				·STORAGE POCKET, RH	0002	0820	1
	219	50458-001	@	A		·HOOK TAPE	0002	0820	AR
	222	12789-002				·BRACKET, REAR DRINK HOLDER	0002	0820	1
						FOR SPARES USE P/N 12789-003			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	225	12951-001			·POCKET SUPPORT, END PLATE	0002	0820	2
	228	12956-001			·POCKET SUPPORT, LH	0002	0820	1
-	231	12956-002			·POCKET SUPPORT, RH	0002	0820	1
	234	MS35214-28		A	·SCREW	0002	0820	4
	237	50813-001		A	·WASHER	0002	0820	4
	240	50763-002		A	·WELL NUT	0002	0820	4
	243	12951-001			·POCKET SUPPORT, END PLATE	0002	0820	2
	246	MS35214-28		A	·SCREW	0002	0820	4
	249	50813-001		A	·WASHER	0002	0820	4
	252	50763-002		A	·WELL NUT	0002	0820	4
-	255	NO PRT NUMBER			SIDE PANEL TRIM INSTALLATION	0821 / 0001	/	NP
-	258	20348-001			·INTERIOR TRIM, CABIN DOOR, LH, TAWNY	0821	1375	1
					FOR SPARES USE P/N 20348-005			
	260	20348-005			·INTERIOR TRIM, CABIN DOOR, LH, DRIFTWOOD/IMPALA	1376 / 0001	/	1
-	262	20348-114			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, IMPALA	1376 / 0001	/	1
-	264	20348-113			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, DRIFT-WOOD	1376 / 0001	/	1
-	266	20348-002			·INTERIOR TRIM, CABIN DOOR, LH, SLATE/FROST	0821	1375	1
					FOR SPARES USE P/N 20348-006			
	268	20348-006			·INTERIOR TRIM, CABIN DOOR, LH, SLATE/FROST	1376 / 0001	4299 / 1232	1
-	270	28941-002			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, FROST	1376 / 0001	4299 / 1232	1
-	272	28943-002			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, SLATE	1376 / 0001	4299 / 1232	1
	274	20348-007			·INTERIOR TRIM, CABIN DOOR, LH, IMPALA	1520 / 0001	4299 / 1232	1
-	276	20348-114			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, IMPALA	1520 / 0001	4299 / 1232	1
-	278	20348-117			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, IMPALA	1520 / 0001	4299 / 1232	1
-	280	21703-001			·INTERIOR TRIM, CABIN DOOR, LH, BLACK	2044 / 0001	3689 / 0031	1
-	282	21703-102			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, BLACK	2044 / 0001	3689 / 0031	1
-	284	21703-101			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, BLACK	2044 / 0001	3689 / 0031	1
-	286	20348-008			·INTERIOR TRIM, CABIN DOOR, LH, BLACK/ASH	3026 / 0001	4299 / 1232	1
-	288	20348-118			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, ASH	3026 / 0001	4299 / 1232	1
-	290	21703-101			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, BLACK	3026 / 0001	4299 / 1232	1
-	292	20348-010			·INTERIOR TRIM, CABIN DOOR, LH, BLACK/VANILLA	3026 / 0001	4299 / 1232	1
-	294	28941-005			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, VANILLA	3026 / 0001	4299 / 1232	1
-	296	28943-001			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, BLACK	3026 / 0001	4299 / 1232	1
	298	20348-011			·INTERIOR TRIM, CABIN DOOR, LH, BLACK	3690 / 0032	4299 / 1232	1
-	300	28941-006			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, BLACK	3690 / 0032	4299 / 1232	1
-	302	28943-001			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, BLACK	3690 / 0032	4299 / 1232	1
-	304	20348-012			·INTERIOR TRIM, CABIN DOOR, LH, ALCANTARA BLK/BLK	3690 / 0032	/	1
-	306	28941-007			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, BLACK	3690 / 0032	/	1
-	308	28943-001			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, BLACK	3690 / 0032	/	1
-	310	20348-013			·INTERIOR TRIM, CABIN DOOR, LH, ALCANTARA BLK/GRY	3690 / 0032	/	1
-	312	28941-007			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, BLACK	3690 / 0032	/	1
-	314	28943-002			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, SLATE	3690 / 0032	/	1
-	316	37638-006			·INTERIOR TRIM, CABIN DOOR, LH, SLATE/FROST	4300 / 1233	/	1
-	318	28941-002			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, FROST	4300 / 1233	/	1
-	320	28943-002			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, SLATE	4300 / 1233	/	1
-	322	37638-007			·INTERIOR TRIM, CABIN DOOR, LH, IMPALA	4300 / 1233	/	1
-	324	28941-003			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, IMPALA	4300 / 1233	/	1
-	326	28943-003			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, IMPALA	4300 / 1233	/	1
-	328	37638-008			·INTERIOR TRIM, CABIN DOOR, LH, BLACK/ASH	4300 / 1233	/	1
-	330	28941-004			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, ASH	4300 / 1233	/	1
-	332	28943-001			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, BLACK	4300 / 1233	/	1
-	334	37638-010			·INTERIOR TRIM, CABIN DOOR, LH, BLACK/VANILLA	4300 / 1233	/	1
-	336	28941-005			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, VANILLA	4300 / 1233	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	338	28943-001			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, BLACK	4300 / 1233	/	1
-	340	37638-011			·INTERIOR TRIM, CABIN DOOR, LH, BLACK/BLACK	4300 / 1233	/	1
-	342	28941-006			·· INTERIOR TRIM, CABIN DOOR, LH, UPPER, BLACK	4300 / 1233	/	1
-	344	28943-001			·· INTERIOR TRIM, CABIN DOOR, LH, LOWER, BLACK	4300 / 1233	/	1
-	346	20349-001			·INTERIOR TRIM, CABIN DOOR, RH, TAWNY	0821	1375	1
					FOR SPARES USE P/N 20349-005			
-	348	20349-005			·INTERIOR TRIM, CABIN DOOR, RH, DRIFTWOOD/IMPALA	1376 / 0001	/	1
-	350	20349-114			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, IMPALA	1376 / 0001	/	1
-	352	20349-113			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, DRIFT-WOOD	1376 / 0001	/	1
-	354	20349-002			·INTERIOR TRIM, CABIN DOOR, RH, SLATE/FROST	0821	1375	1
					FOR SPARES USE P/N 20349-006			
-	356	20349-006			·INTERIOR TRIM, CABIN DOOR, RH, SLATE/FROST	1376 / 0001	4299 / 1232	1
-	358	20349-116			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, FROST	1376 / 0001	4299 / 1232	1
-	360	20349-115			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, SLATE	1376 / 0001	4299 / 1232	1
-	362	20349-007			·INTERIOR TRIM, CABIN DOOR, RH, IMPALA	1520 / 0001	4299 / 1232	1
-	364	20349-114			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, IMPALA	1520 / 0001	4299 / 1232	1
-	366	20349-117			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, IMPALA	1520 / 0001	4299 / 1232	1
-	368	21704-001			·INTERIOR TRIM, CABIN DOOR, RH, BLACK	2044 / 0001	3689 / 0031	1
-	370	21704-102			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, BLACK	2044 / 0001	3689 / 0031	1
-	372	21704-101			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, BLACK	2044 / 0001	3689 / 0031	1
-	374	20349-008			·INTERIOR TRIM, CABIN DOOR, RH, BLACK/ASH	3026 / 0001	4299 / 1232	1
-	376	20349-118			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, ASH	3026 / 0001	4299 / 1232	1
-	378	21704-101			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, BLACK	3026 / 0001	4299 / 1232	1
-	380	20349-010			·INTERIOR TRIM, CABIN DOOR, RH, BLACK/VANILLA	3026 / 0001	4299 / 1232	1
-	382	28942-005			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, VANILLA	3026 / 0001	4299 / 1232	1
-	384	28944-001			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, BLACK	3026 / 0001	4299 / 1232	1
-	386	20349-011			·INTERIOR TRIM, CABIN DOOR, RH, BLACK	3690 / 0032	4299 / 1232	1
-	388	28942-006			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, BLACK	3690 / 0032	4299 / 1232	1
-	390	28944-001			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, BLACK	3690 / 0032	4299 / 1232	1
-	392	20349-012			·INTERIOR TRIM, CABIN DOOR, RH, ALCANTARA BLK/BLK	3690 / 0032	/	1
-	394	28942-007			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, BLACK	3690 / 0032	/	1
-	396	28944-001			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, BLACK	3690 / 0032	/	1
-	398	20349-013			·INTERIOR TRIM, CABIN DOOR, RH, ALCANTARA BLK/GRY	3690 / 0032	/	1
-	500	28942-007			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, BLACK	3690 / 0032	/	1
-	502	28944-002			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, SLATE	3690 / 0032	/	1
-	504	37639-006			·INTERIOR TRIM, CABIN DOOR, RH, SLATE/FROST	4300 / 1233	/	1
-	506	28942-002			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, FROST	4300 / 1233	/	1
-	508	28944-002			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, SLATE	4300 / 1233	/	1
-	510	37639-007			·INTERIOR TRIM, CABIN DOOR, RH, IMPALA	4300 / 1233	/	1
-	512	28942-003			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, IMPALA	4300 / 1233	/	1
-	514	28944-003			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, IMPALA	4300 / 1233	/	1
-	516	37639-008			·INTERIOR TRIM, CABIN DOOR, RH, BLACK/ASH	4300 / 1233	/	1
-	518	28942-004			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, ASH	4300 / 1233	/	1
-	520	28944-001			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, BLACK	4300 / 1233	/	1
-	522	37639-010			·INTERIOR TRIM, CABIN DOOR, RH, BLACK/VANILLA	4300 / 1233	/	1
-	524	28942-005			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, VANILLA	4300 / 1233	/	1
-	526	28944-001			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, BLACK	4300 / 1233	/	1
-	528	37639-011			·INTERIOR TRIM, CABIN DOOR, RH, BLACK/BLACK	4300 / 1233	/	1
-	530	28942-006			·· INTERIOR TRIM, CABIN DOOR, RH, UPPER, BLACK	4300 / 1233	/	1
-	532	28944-001			·· INTERIOR TRIM, CABIN DOOR, RH, LOWER, BLACK	4300 / 1233	/	1
-	534	70091-001			·INTERIOR REPAIR, KIT	0821	1044	1
					AFTER SB2X-25-12			
	536	50834-014		A	·SCREW	0821 / 0001	/	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						AFTER SB2X-25-12			
	538	50813-002		A		·WASHER	0821 / 0001	/	2
						AFTER SB2X-25-12			
	540	CB3001AA06-11		A		·STAND OFF, #6 X 32 X 11/16 INCH	0821 / 0001	/	2
-	542	50757-011				AFTER SB2X-25-12			
						ALTERNATE FOR P/N CB3001AA06-6			
						ALTERNATE FOR P/N NAS43DD3-24C			
	544	CB3001AA06-6	#	A		·STAND OFF, #6 X 32 X 6/16 INCH	0821 / 0001	/	2
-	546	50757-006				AFTER SB2X-25-12			
						ALTERNATE FOR P/N CB3001AA06-11			
	548	NAS43DD3-24C	#	A		·SPACER	0821 / 0001	/	2
						AFTER SB2X-25-12			
						ALTERNATE FOR P/N CB3001AA06-11			
	550	51397-001				·EDGE TRIM	0821 / 0001	/	AR
						ALTERNATE FOR P/N 51392-001			
						ALTERNATE FOR P/N 51762-001			
	552	51392-001				·EDGE TRIM	0821 / 0001	/	AR
						ALTERNATE FOR P/N 51397-001			
						ALTERNATE FOR P/N 51762-001			
	554	51762-001				·EDGE TRIM	0821 / 0001	/	AR
						ALTERNATE FOR P/N 51397-001			
						ALTERNATE FOR P/N 51392-001			
-	556	20421-001				·INTERIOR TRIM, ARM REST, CABIN DOOR, LH, STONE	0821 / 0001	3827 / 0267	1
-	558	20421-003				·INTERIOR TRIM, ARM REST, CABIN DOOR, LH, BLACK	0821 / 0001	3827 / 0267	1
	560	29273-002				·INTERIOR TRIM, ARM REST, CABIN DOOR, LH, BLACK	3828 / 0268	/	1
-	562	29273-003				·INTERIOR TRIM, ARM REST, CABIN DOOR, LH, SADDLE	3828 / 0268	/	1
-	564	29273-004				·INTERIOR TRIM, ARM REST, CABIN DOOR, LH, BLK/RED	3828 / 0268	/	1
-	566	20421-002				·INTERIOR TRIM, ARM REST, CABIN DOOR, RH, STONE	0821 / 0001	3827 / 0267	1
-	568	20421-004				·INTERIOR TRIM, ARM REST, CABIN DOOR, RH, BLACK	0821 / 0001	3827 / 0267	1
-	570	29275-002				·INTERIOR TRIM, ARM REST, CABIN DOOR, RH, BLACK	3828 / 0268	/	1
-	572	29275-003				·INTERIOR TRIM, ARM REST, CABIN DOOR, RH, SADDLE	3828 / 0268	/	1
-	574	29275-004				·INTERIOR TRIM, ARM REST, CABIN DOOR, RH, BLK/RED	3828 / 0268	/	1
-	576	20254-001				·HANDLE, CABIN DOOR	0821	1164	1
	578	20254-002				·HANDLE, CABIN DOOR	1165	1306	1
						FOR SPARES USE P/N 15173-001			
	580	15173-001				·HANDLE, CABIN DOOR, BLACK, NO VISIBLE STITCH	1307 / 0001	/	1
-	582	15173-002				·HANDLE, CABIN DOOR, BLACK, GRAY STITCH	1307 / 0001	/	1
-	584	15173-003				·HANDLE, CABIN DOOR, BLACK, CURRY STITCH	1307 / 0001	/	1
-	586	15173-004				·HANDLE, CABIN DOOR, BLACK, IVORY STITCH	1307 / 0001	/	1
-	588	15173-005				·HANDLE, CABIN DOOR, BLACK, RED STITCH	1307 / 0001	/	1
-	590	15173-006				·HANDLE, CABIN DOOR, BLACK, CHINESE RUST STITCH	1307 / 0001	/	1
	592	51377-001		A		·SCREW	0821	1306	2
	594	NAS1801-4-16		A		·BOLT	1307 / 0001	/	2
	596	51456-180		A		·SNAP CAP, BLACK	1307 / 0001	/	2
	598	51456-001		A		·SNAP CAP WASHER	1307 / 0001	/	2
	600	50692-004		A		·BUSHING	1307 / 0001	/	2
	602	51054-025		A		·RUBBER WASHER	1307 / 0001	/	2
-	604	20334-002				·INTERIOR TRIM, LH REAR CABIN SIDE, SLATE	0821	1391	1
						FOR SPARES USE P/N 20334-004			
	606	20334-004				·INTERIOR TRIM, LH REAR CABIN SIDE, SLATE	1392 / 0001	/	1
-	608	20334-001				·INTERIOR TRIM, LH REAR CABIN SIDE, TAWNY	0821	1391	
						FOR SPARES USE P/N 20334-003			
	610	20334-003				·INTERIOR TRIM, LH REAR CABIN SIDE, DRIFTWOOD	1392 / 0001	/	1
	612	20334-005				·INTERIOR TRIM, LH REAR CABIN SIDE, IMPALA	1520 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	614	21715-001			·INTERIOR TRIM, LH REAR CABIN SIDE, BLACK	2044 / 0001	/	1
-	616	29077-002	!		·INTERIOR TRIM, LH REAR CABIN SIDE, SLATE	3828 / 0268	/	1
-	618	29077-003	!		·INTERIOR TRIM, LH REAR CABIN SIDE, IMPALA	3828 / 0268	/	1
	620	29077-004	!		·INTERIOR TRIM, LH REAR CABIN SIDE, BLACK	3828 / 0268	/	1
-	622	29077-005	!		·INTERIOR TRIM, LH REAR CABIN SIDE, DRIFTWOOD	3828 / 0268	/	1
-	624	29077-006			·INTERIOR TRIM, LH, FUSE SIDE, BUCKETSEAT, SLATE	3828 / 0268	/	1
-	626	29077-007			·INTERIOR TRIM, LH, FUSE SIDE, BUCKETSEAT, IMPALA	3828 / 0268	/	1
-	628	29077-008			·INTERIOR TRIM, LH, FUSE SIDE, BUCKETSEAT, BLACK	3828 / 0268	/	1
-	630	20335-002			·INTERIOR TRIM, RH REAR CABIN SIDE, SLATE	0821	1391	1
					FOR SPARES USE P/N 20335-004			
-	632	20335-004			·INTERIOR TRIM, RH REAR CABIN SIDE, SLATE	1392 / 0001	/	1
-	634	20335-001			·INTERIOR TRIM, RH REAR CABIN SIDE, TAWNY	0821	1391	
					FOR SPARES USE P/N 20334-003			
-	636	20335-003			·INTERIOR TRIM, RH REAR CABIN SIDE, DRIFTWOOD	1392 / 0001	/	1
-	638	20335-005			·INTERIOR TRIM, RH REAR CABIN SIDE, IMPALA	1520 / 0001	/	1
-	640	21716-001			·INTERIOR TRIM, RH REAR CABIN SIDE, BLACK	2044 / 0001	/	1
-	642	29078-002	!		·INTERIOR TRIM, RH REAR CABIN SIDE, SLATE	3828 / 0268	/	1
-	644	29078-003	!		·INTERIOR TRIM, RH REAR CABIN SIDE, IMPALA	3828 / 0268	/	1
-	646	29078-004	!		·INTERIOR TRIM, RH REAR CABIN SIDE, BLACK	3828 / 0268	/	1
-	648	29078-005			·INTERIOR TRIM, RH REAR CABIN SIDE, DRIFTWOOD	3828 / 0268	/	1
-	650	29078-006			·INTERIOR TRIM, RH, FUSE. SIDE BUCKETSEAT, SLATE	3828 / 0268	/	1
-	652	29078-007			·INTERIOR TRIM, RH, FUSE. SIDE BUCKETSEAT, IMPALA	3828 / 0268	/	1
-	654	29078-008			·INTERIOR TRIM, RH, FUSE. SIDE BUCKETSEAT, BLACK	3828 / 0268	/	1
	656	20422-001			·INTERIOR TRIM, ARM REST, REAR, LH, STONE	0821 / 0001	/	1
					FOR SPARES USE P/N 29269-002 (BLACK)			
	658	20422-003			·INTERIOR TRIM, ARM REST, REAR, LH, BLACK	0821 / 0001	/	1
					FOR SPARES USE P/N 29269-002 (BLACK)			
-	660	20422-002			·INTERIOR TRIM, ARM REST, REAR, RH, STONE	0821 / 0001	/	1
					FOR SPARES USE P/N 29271-002 (BLACK)			
-	662	20422-004			·INTERIOR TRIM, ARM REST, REAR, RH, BLACK	0821 / 0001	/	1
					FOR SPARES USE P/N 29271-002 (BLACK)			
-	664	20429-001			·INTERIOR TRIM, BAGGAGE DOOR, TAWNY	0821	1391	1
-	666	20429-002			·INTERIOR TRIM, BAGGAGE DOOR, SLATE	0821 / 0001	/	1
					ALTERNATE FOR P/N 28831-002			
	668	28831-002			·INTERIOR TRIM, BAGGAGE DOOR, SLATE	3690 / 0033	/	1
					ALTERNATE FOR P/N 20429-002			
-	670	20429-003			·INTERIOR TRIM, BAGGAGE DOOR, MONTEREY	1520 / 0001	/	1
					ALTERNATE FOR P/N 28831-004			
	672	28831-004			·INTERIOR TRIM, BAGGAGE DOOR, IVORY	3690 / 0033	/	1
					ALTERNATE FOR P/N 20429-003			
-	674	21721-001			·INTERIOR TRIM, BAGGAGE DOOR, BLACK	2044 / 0001	/	1
					ALTERNATE FOR P/N 28831-001			
	676	28831-001			·INTERIOR TRIM, BAGGAGE DOOR, BLACK	3690 / 0033	/	1
					ALTERNATE FOR P/N 21721-001			
	678	50640-045		A	·TAPE, TWO-SIDED	0821 / 0001	/	AR
	680	20344-001			·INTERIOR TRIM, BULKHEAD 222 COVER, STONE	0821 / 0001	/	1
	682	20344-002			·INTERIOR TRIM, BULKHEAD 222 COVER, MOONBEAM	0821 / 0001	/	1
	684	20344-003	$		·INTERIOR TRIM, BULKHEAD 222 COVER, BLACK	3414 / 0001	/	1
	686	21709-001			·INTERIOR TRIM, BULKHEAD 222 COVER, BLACK	2044 / 0001	/	1
-	688	29191-001	!		·INTERIOR TRIM, BULKHEAD 222, RAFFIA, 3 BELT	3828 / 0268	/	1
-	690	29191-002	!		·INTERIOR TRIM, BULKHEAD 222, MOONBEAM, 3 BELT	3828 / 0268	/	1
	692	29191-003	!		·INTERIOR TRIM, BULKHEAD 222, BLACK, 3 BELT	3828 / 0268	/	1
-	694	29191-004	!		·INTERIOR TRIM, BULKHEAD 222, RAFFIA, 2 BELT	3828 / 0268	/	1
-	696	29191-005	!		·INTERIOR TRIM, BULKHEAD 222, MOONBEAM, 2 BELT	3828 / 0268	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	698	29191-006	!		·INTERIOR TRIM, BULKHEAD 222, BLACK, 2 BELT	3828 / 0268	/	1
-	700	70091-001			·INTERIOR REPAIR, KIT	0821	1044	1
					AFTER SB2X-25-12			
	702	50834-007		A	··SCREW	0821 / 0001	/	2
					AFTER SB2X-25-12			
	704	50813-002		A	··WASHER	0821 / 0001	/	2
					AFTER SB2X-25-12			
	706	50757-006		A	·STAND OFF	0821 / 0001	/	2
					AFTER SB2X-25-12			
-	708	29553-001	!		·FILLER, SEAT BELT ATTACH	3828 / 0268	/	1
-	710	20336-001			·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, TAWNY	0821	1391	1
					FOR SPARES USE P/N 20336-003			
	712	20336-003			·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, DRFTWD	1392 / 0001	/	1
-	714	20336-002			·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, SLATE	0821	1391	1
					FOR SPARES USE P/N 20336-004			
	716	20336-004			·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, SLATE	1392 / 0001	/	1
	718	20336-005			·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, IMPALA	1520 / 0001	/	1
	720	21717-001			·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, BLACK	2044 / 0001	/	1
-	722	25997-001	&		·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, SLATE	3026 / 0001	/	1
-	724	25997-002	&		·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, IMPALA	3026 / 0001	/	1
-	726	25997-003	&		·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, DRFTWD	3026 / 0001	4299 / 1232	1
-	728	25997-004	&		·INTERIOR TRIM, CABIN AIR DUCT COVER, LH, BLACK	3026 / 0001	/	
-	730	20337-001			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, TAWNY	0821	1391	1
					FOR SPARES USE P/N 20337-003			
-	732	20337-003			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, DRFTWD	1392	1642	1
-	734	20896-001			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, DRFTWD	1643	1862	1
-	736	20337-002			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, SLATE	0821	1391	1
					FOR SPARES USE P/N 20337-004			
-	738	20337-004			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, SLATE	1392	1642	1
-	740	20896-002			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, SLATE	1643	1862	1
-	742	20896-003			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, IMPALA	1520	1862	1
-	744	20896-004			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, DRFTWD	1863 / 0001	/	1
-	746	20896-005			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, SLATE	1863 / 0001	/	1
-	748	20896-006			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, IMPALA	1863 / 0001	/	1
-	750	21718-001			·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, BLACK	2044 / 0001	/	1
-	752	25996-001	&		·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, SLATE	3026 / 0001	/	1
-	754	25996-002	&		·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, IMPALA	3026 / 0001	/	1
-	756	25996-003	&		·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, DRFTWD	3026 / 0001	4299 / 1233	1
-	758	25996-004	&		·INTERIOR TRIM, CABIN AIR DUCT COVER, RH, BLACK	3026 / 0001	/	1
	760	50834-010		A	·SCREW	1454 / 0001	/	1
	762	AN970-3		A	·WASHER	1454 / 0001	/	1
	764	50757-014		A	·STAND OFF	1454 / 0001	/	1
					ALTERNATE FOR P/N 50757-008			
					ALTERNATE FOR P/N NAS43DD3-24FC			
	766	50757-008	%	A	·STAND OFF	1454 / 0001	/	1
					ALTERNATE FOR P/N 50757-014			
	768	NAS43DD3-24FC	%	A	·SPACER	1454 / 0001	/	1
					ALTERNATE FOR P/N 50757-014			
	770	20396-001			·STORAGE POCKET, FWD FUSELAGE	0821	1862	2
					·STORAGE POCKET, FWD FUSELAGE, RH	1863 / 0001	/	1
	772	20396-004			·STORAGE POCKET, FWD FUSELAGE, LH	1863 / 0001	/	1
	774	51385-001		A	·SNAP RIVET, MALE	0821 / 0001	/	6
	776	51386-001		A	·SNAP RIVET, FEMALE	0821 / 0001	/	6
-	778	20396-002			·CLEAR POCKET, FWD FUSELAGE, RH ONLY	0821 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	780	51385-002		A	·SNAP RIVET, MALE	0821 / 0001	/	4
-	782	51386-001		A	·SNAP RIVET, FEMALE	0821 / 0001	/	4
	784	51179-001			·DRINK HOLDER	0821 / 0001	/	2
	786	51385-002		A	·SNAP RIVET, MALE	0821 / 0001	/	6
	788	NAS1149F0563P		A	·WASHER	0821 / 0001	/	6
					ALTERNATE FOR P/N NAS1149F0532P			
-	790	NAS1149F0532P		A	·WASHER	0821 / 0001	/	6
					ALTERNATE FOR P/N NAS1149F0563P			
	792	51386-001		A	·SNAP RIVET, FEMALE	0821 / 0001	/	6
-	794	NO PRT NUMBER			REAR DRINK HOLDERS AND STORAGE POCKETS			NP
	796	51179-001			·DRINK HOLDER	0821 / 0001	/	2
	798	51157-001		A	·RETAINER	0821 / 0001	/	8
	800	20409-001			·STORAGE POCKET, LH	0821 / 0001	/	1
-	802	20409-002			·STORAGE POCKET, RH	0821 / 0001	/	1
	804	50458-001	@	A	·HOOK TAPE	0821 / 0001	/	AR
	806	12789-002			·BRACKET, REAR DRINK HOLDER	0821	2437	1
					FOR SPARES USE P/N 12789-003			
	808	12789-003			·BRACKET, REAR DRINK HOLDER	2438 / 0001	/	1
	810	12951-001			·POCKET SUPPORT, END PLATE	0821 / 0001	/	2
	812	12956-001			·POCKET SUPPORT, LH	0821 / 0001	/	1
-	814	12956-002			·POCKET SUPPORT, RH	0821 / 0001	/	1
	816	MS35214-28		A	·SCREW	0821 / 0001	/	4
	818	50813-001		A	·WASHER	0821 / 0001	/	4
	820	50763-002		A	·WELL NUT	0821 / 0001	/	4
	822	12951-001			·POCKET SUPPORT, END PLATE	0821 / 0001	/	2
	824	MS35214-28		A	·SCREW	0821 / 0001	/	4
	826	50813-001		A	·WASHER	0821 / 0001	/	4
	828	50763-002		A	·WELL NUT	0821 / 0001	/	4
	830	50757-008		A	·STAND OFF	1503	1523	1
					AFTER SB2X-25-15			
					·STAND OFF	1524 / 0001	/	1
	832	50757-014		A	·STAND OFF	1503	1523	1
					AFTER SB2X-25-15			
					·STAND OFF	1524 / 0001	/	1
					ALTERNATE FOR P/N 50757-008			
					ALTERNATE FOR P/N NAS43DD3-24FC			
-	834	50757-008	%	A	·STANDOFF	1524 / 0001	/	1
					ALTERNATE FOR P/N 50757-014			
-	836	NAS43DD3-24FC	%	A	·SPACER	1524 / 0001	/	1
					ALTERNATE FOR P/N 50757-014			
	838	50834-007		A	·SCREW	1503	1523	2
					AFTER SB2X-25-15			
					·SCREW	1524 / 0001	/	2
	840	50813-001		A	·WASHER	1503	1523	2
					AFTER SB2X-25-15			
					·WASHER	1524 / 0001	/	2
-	842	50757-014	^	A	·STAND OFF	1863 / 0001	/	1
					ALTERNATE FOR P/N 50757-008			
					ALTERNATE FOR P/N NAS43DD3-24FC			
-	844	50757-008	%	A	·STANDOFF	1863 / 0001	/	1
					ALTERNATE FOR P/N 50757-014			
-	846	NAS43DD3-24FC	%	A	·SPACER	1863 / 0001	/	1
					ALTERNATE FOR P/N 50757-014			
-	848	50834-010	^	A	·SCREW	1863 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	850	50813-002	^	A	·WASHER	1863	2043	1
					ALTERNATE FOR P/N AN970-3			
-	852	AN970-3	^	A	·WASHER	2044 / 0001	/	1
					ALTERNATE FOR P/N 50813-002			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 W/ 2+1 REAR SEAT FOR PART IDENTIFICATION.			
			@		BULK ITEM CUT TO LENGTH.			
			#		50757-006 STANDOFF & NAS43DD3-24C SPACER MAY BE SUBSTITUTED FOR 50757-011 STANDOFF.			
			%		50757-008 STANDOFF & NAS43DD3-24C SPACER MAY BE SUBSTITUTED FOR 50757-014 STANDOFF.			
			^		FOR RH CABIN AIR DUCT COVER ONLY.			
			&		SERIAL NUMBERS W/ PERSPECTIVE AVIONICS.			
			$		SERIAL NUMBERS W/ X EDITION INTERIOR.			
			!		SERIAL NUMBERS W/ 2+1 REAR SEAT.			

EFFECTIVITY:
All

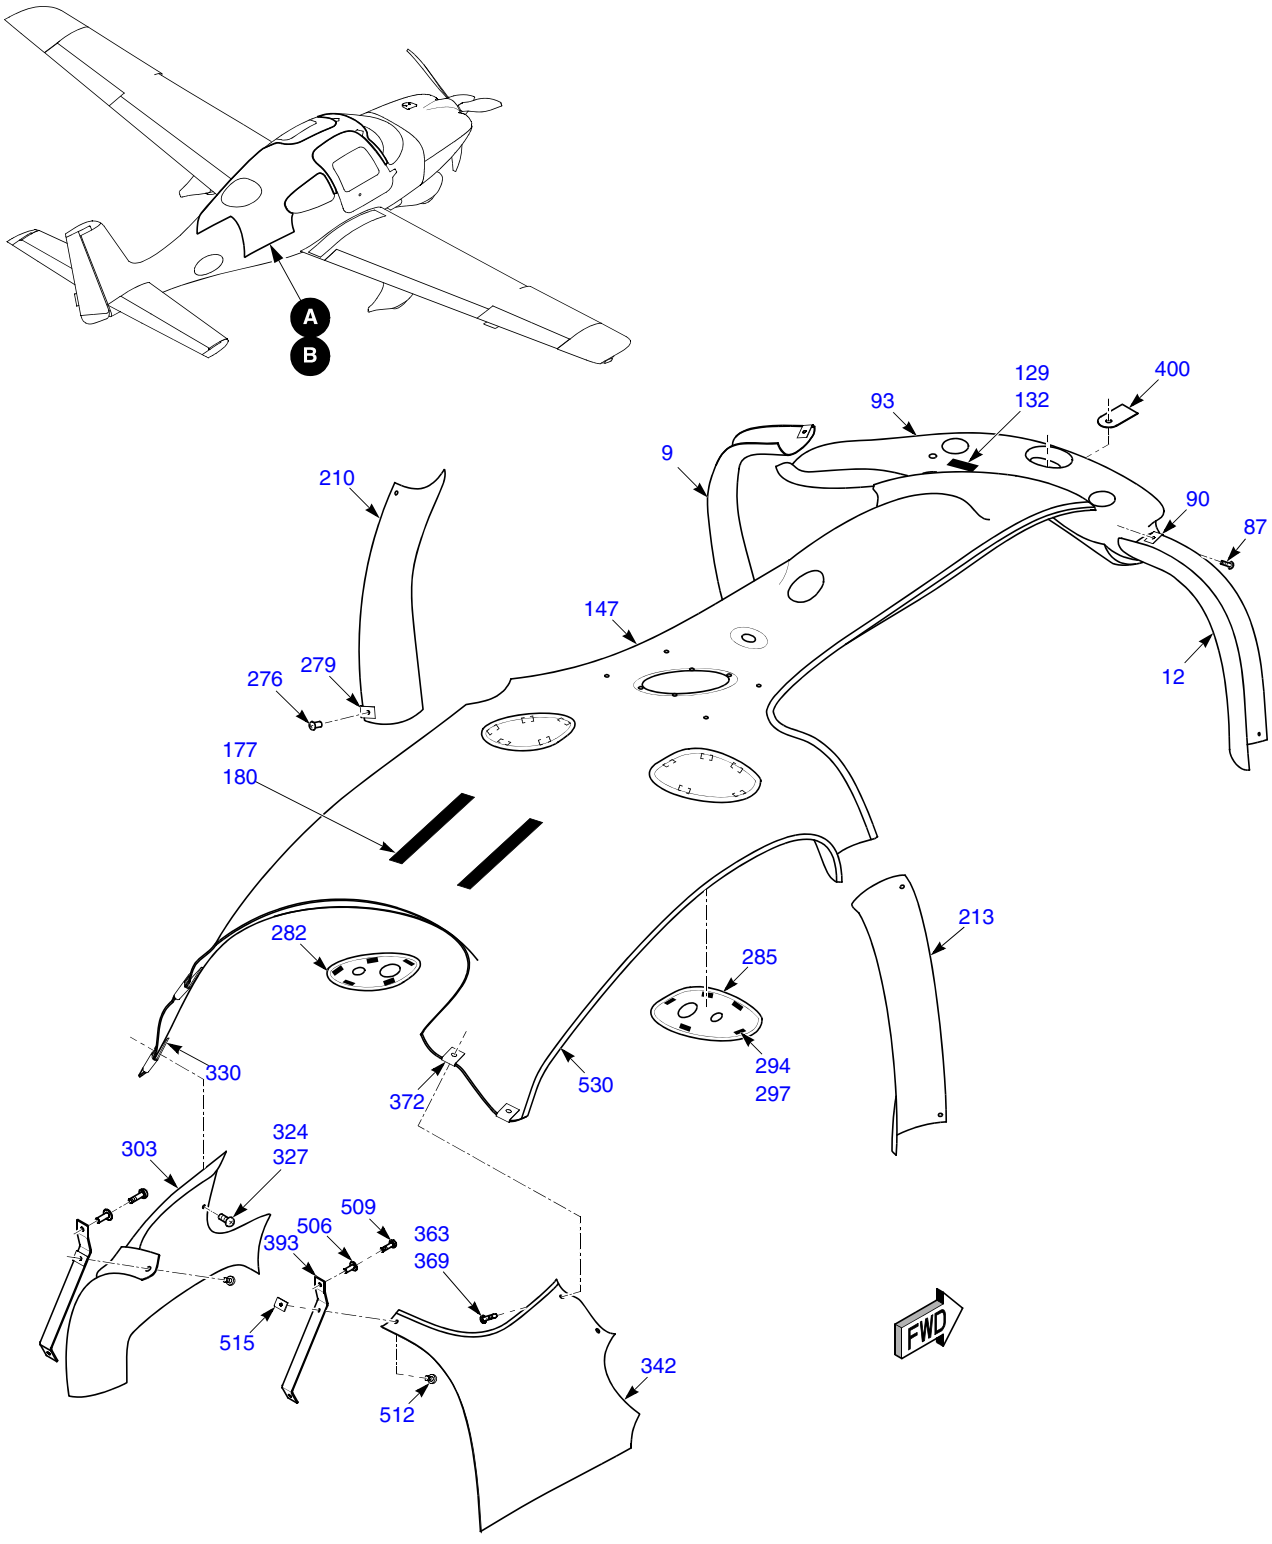

DETAIL A

Serials 22-0002 thru 22-0820.

SR22_PC25_1183C

Figure-06

Headliner - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

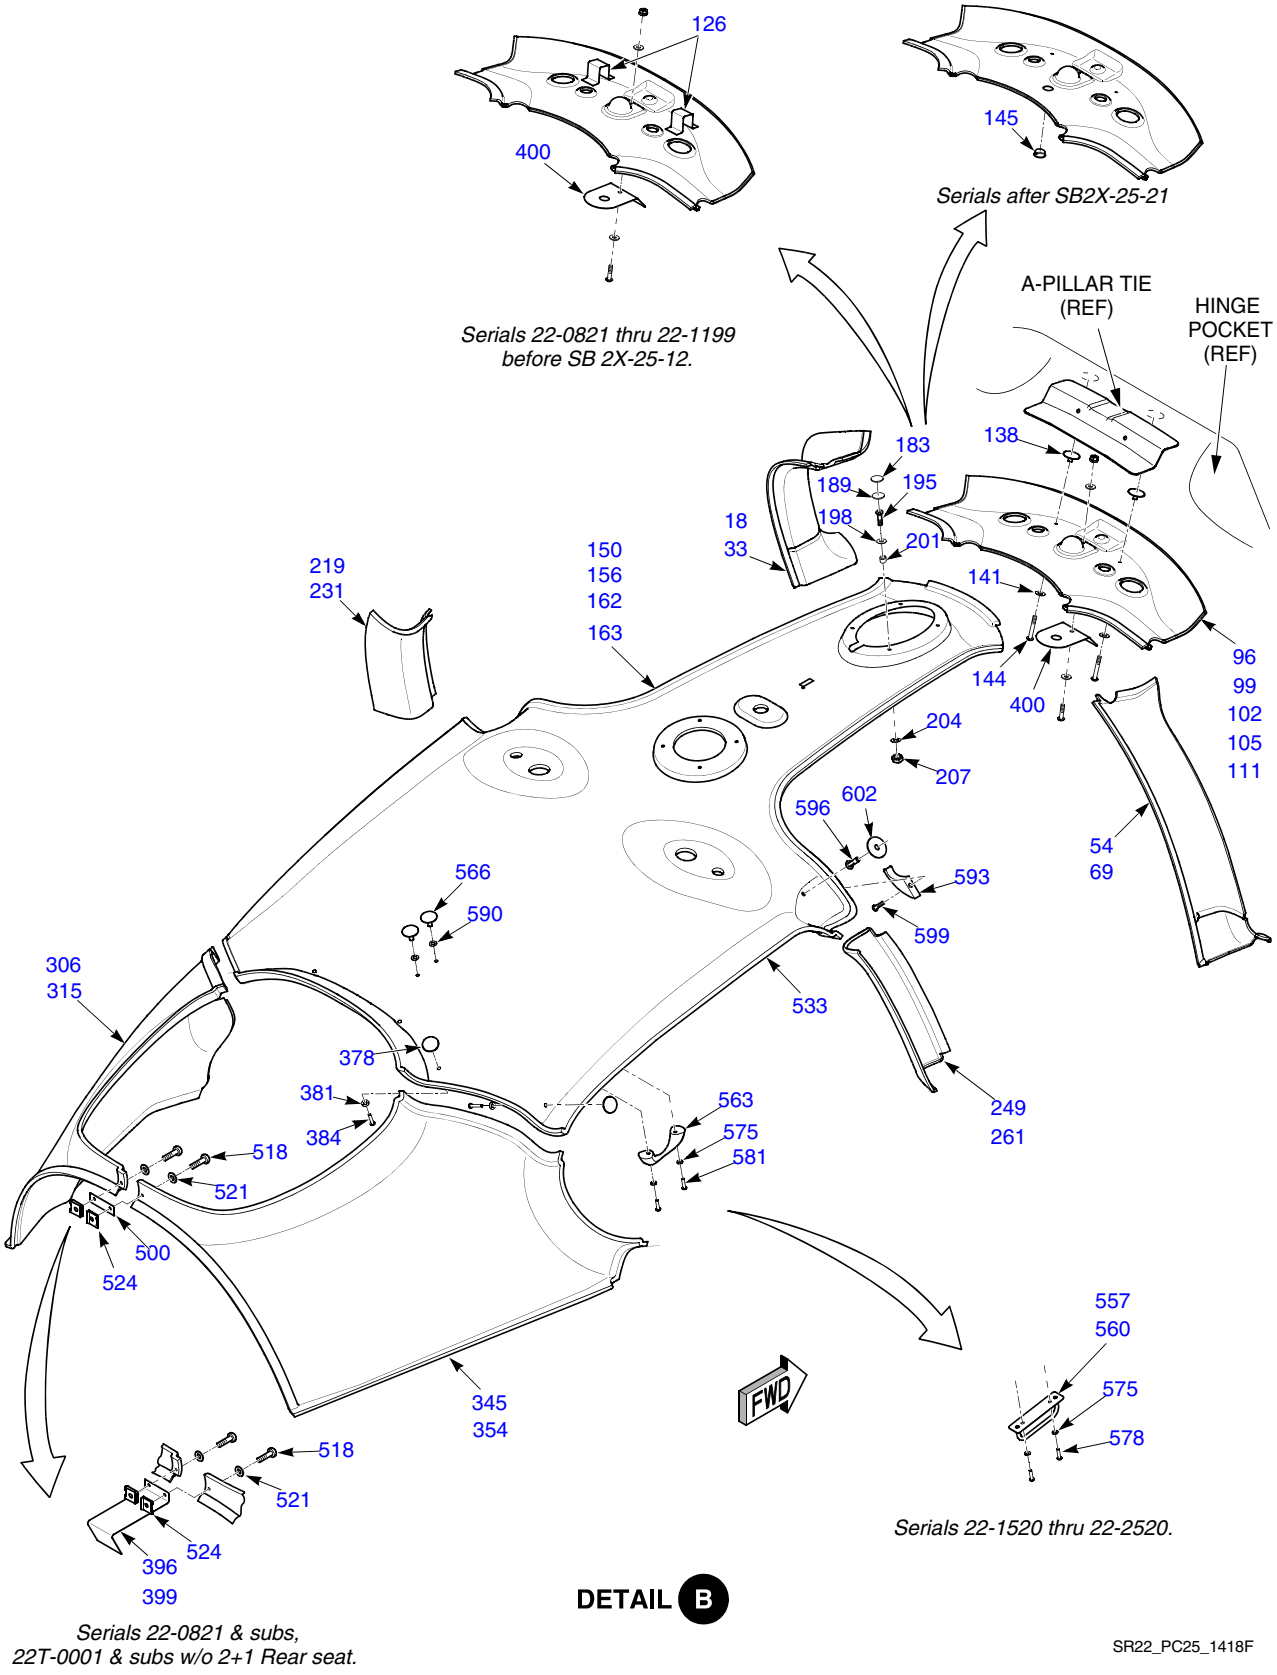

Figure-06

Headliner - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 06	**		HEADLINER INSTALLATION	0002 / 0001	/	NP
-	3	12229-005			·TRIM, A-PILLAR, LH	0002	0333	1
-	6	12229-006			·TRIM, A-PILLAR, RH	0002	0333	1
	9	12229-007			·TRIM, A-PILLAR, LH	0334	0820	1
	12	12229-008			·TRIM, A-PILLAR, RH	0334	0820	1
-	15	20338-001			·TRIM, A-PILLAR, LH, TAWNY	0821	1391	1
					FOR SPARES USE P/N 20338-003			
	18	20338-003	&		·TRIM, A-PILLAR, LH, DRIFTWOOD/IMPALA	1392 / 0001	/	1
-	21	20338-002			·TRIM, A-PILLAR, LH, SLATE	0821	1391	1
					FOR SPARES USE P/N 20338-004			
-	24	20338-004	&		·TRIM, A-PILLAR, LH, SLATE	1392 / 0001	/	1
-	27	20338-005	&		·TRIM, A-PILLAR, LH, IMPALA	1500 / 0001	/	1
-	30	21705-001	&		·TRIM, A-PILLAR, LH, BLACK	2044 / 0001	/	1
	33	19296-001	^		·TRIM, A-PILLAR, LH, RAFFIA	3026 / 0001	/	1
-	36	19296-002	^		·TRIM, A-PILLAR, LH, MOONBEAM	3026 / 0001	/	1
-	39	19296-003	!		·TRIM, A-PILLAR, LH, BLACK	3414 / 0001	3689 / 0031	1
-	42	19296-004	!		·TRIM, A-PILLAR, LH, ASH	3690 / 0032	/	1
-	45	19296-005	!		·TRIM, A-PILLAR, LH, VANILLA	3690 / 0032	/	1
-	48	19296-006	!		·TRIM, A-PILLAR, LH, BLACK	3690 / 0032	/	1
-	49	19296-007			·TRIM, A-PILLAR, LH, ALCANTARA BLACK	3690 / 0032	/	1
-	51	20339-001			·TRIM, A-PILLAR, RH, TAWNY	0821	1391	1
					FOR SPARES USE P/N 20339-003			
	54	20339-003	&		·TRIM, A-PILLAR, RH, DRIFTWOOD/IMPALA	1392 / 0001	/	1
-	57	20339-002			·TRIM, A-PILLAR, RH, SLATE	0821	1391	1
					FOR SPARES USE P/N 20339-004			
-	60	20339-004	&		·TRIM, A-PILLAR, RH, SLATE	1392 / 0001	/	1
-	63	20339-005	&		·TRIM, A-PILLAR, RH, IMPALA	1500 / 0001	/	1
-	66	21706-001	&		·TRIM, A-PILLAR, RH, BLACK	2044 / 0001	/	1
	69	19297-001	^		·TRIM, A-PILLAR, RH, RAFFIA	3026 / 0001	/	1
-	72	19297-002	^		·TRIM, A-PILLAR, RH, MOONBEAM	3026 / 0001	/	1
-	75	19297-003	!		·TRIM, A-PILLAR, RH, BLACK	3414 / 0001	3689 / 0031	1
-	78	19297-004	!		·TRIM, A-PILLAR, RH, ASH	3690 / 0032	/	1
-	81	19297-005	!		·TRIM, A-PILLAR, RH, VANILLA	3690 / 0032	/	1
-	84	19297-006	!		·TRIM, A-PILLAR, RH, BLACK	3690 / 0032	/	1
-	85	19297-007			·TRIM, A-PILLAR, RH, ALCANTARA BLACK	3690 / 0032	/	1
	87	50833-006		A	·SCREW	0002	0820	4
	90	50527-001		A	·SPEED NUT	0002	0820	4
	93	12212-003			·TRIM, UPPER WINDSHIELD	0002	0820	1
	96	20350-001			·TRIM, UPPER WINDSHIELD, STONE	0821	1391	1
					FOR SPARES USE P/N 20350-003			
	99	20350-003	&		·TRIM, UPPER WINDSHIELD, IMPALA	1392 / 0001	/	1
	102	20350-002			·TRIM, UPPER WINDSHIELD, FROST	0821	1391	1
					FOR SPARES USE P/N 20350-004			
	105	20350-004	&		·TRIM, UPPER WINDSHIELD, FROST	1392 / 0001	/	1
-	108	21714-001	&		·TRIM, UPPER WINDSHIELD, BLACK	2044 / 0001	/	1
	111	19516-001	^		·TRIM, UPPER WINDSHIELD, RAFFIA	3026 / 0001	/	1
-	114	19516-002	^		·TRIM, UPPER WINDSHIELD, MOONBEAM	3026 / 0001	/	1
-	117	19516-003	!		·TRIM, UPPER WINDSHIELD, ASH	3414 / 0001	/	1
-	120	19516-005	!		·TRIM, UPPER WINDSHIELD, VANILLA	3690 / 0032	/	1
-	123	19516-006	!		·TRIM, UPPER WINDSHIELD, BLACK	3690 / 0032	/	1
-	124	19516-007			·TRIM, UPPER WINDSHIELD, ALCANTARA BLACK	3690 / 0032	/	1
	126	20524-001			·BRACKET, UPPER WINDSHIELD SUPPORT	0821	1199	2
					BEFORE SB2X-25-12			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	129	50494-001		A		·DUAL LOCK, TYPE 400	0002	0820	AR
	132	50494-002		A		·DUAL LOCK, TYPE 170	0002	0820	AR
-	135	70091-001				·INTERIOR REPAIR, KIT	0821	1044	1
						AFTER SB2X-25-12			
	138	50757-008		A		··STANDOFF	0821 / 0001	/	2
						AFTER SB2X-25-12			
	141	50813-002		A		··WASHER	0821 / 0001	/	2
						AFTER SB2X-25-12			
	144	50834-024		A		··SCREW	0821 / 0001	/	2
						AFTER SB2X-25-12			
	145	50095-003		A		·CAP	4031 / 0657	4031 / 0657	1
							4033 / 0690	4044 / 0771	
							4046	4077	
						AFTER SB2X-25-21			
	147	13100-002				·TRIM, CABIN HEADLINER	0002	0820	1
	150	20345-001				·TRIM, CABIN HEADLINER, RAFFIA, NON-FIKI	0821 / 0001	/	1
-	153	20345-002				·TRIM, CABIN HEADLINER, MOONBEAM, NON-FIKI	0821 / 0001	/	1
	156	21710-001				·TRIM, CABIN HEADLINER, BLACK, NON-FIKI	2044 / 0001	/	1
-	159	20345-003	!			·TRIM, CABIN HEADLINER, ASH, NON-FIKI	3414 / 0001	/	1
	162	23598-001				·TRIM, CABIN HEADLINER, RAFFIA, FIKI	3403 / 0001	4299 / 1232	1
	163	37403-001				·TRIM, CABIN HEADLINER, RAFFIA	4300 / 1233	/	1
-	165	23598-002				·TRIM, CABIN HEADLINER, MOONBEAM, FIKI	3403 / 0001	4299 / 1232	1
-	166	37403-002				·TRIM, CABIN HEADLINER, MOONBEAM	4300 / 1233	/	1
-	168	23598-003	!			·TRIM, CABIN HEADLINER, ASH, FIKI	3414 / 0001	4299 / 1232	1
-	169	37403-003	!			·TRIM, CABIN HEADLINER, ASH	4300 / 1233	/	1
-	171	23598-005	!			·TRIM, CABIN HEADLINER, VANILLA	3690 / 0032	4299 / 1232	1
-	172	37403-005	!			·TRIM, CABIN HEADLINER, VANILLA	4300 / 1233	/	1
-	174	23598-006	!			·TRIM, CABIN HEADLINER, BLACK	3690 / 0032	4299 / 1232	1
-	175	37403-006	!			·TRIM, CABIN HEADLINER, BLACK	4300 / 1233	/	1
	177	50494-001		A		·DUAL LOCK, TYPE 400	0002	0820	AR
	180	50494-002		A		·DUAL LOCK, TYPE 170	0002	0820	AR
	183	20397-103				·PAD, LOOP	0821 / 0001	/	4
						ALTERNATE FOR P/N 51412-887			
-	186	51412-887				·PAD, LOOP	0821 / 0001	/	4
						ALTERNATE FOR P/N 20397-103			
	189	20397-102				·PAD, HOOK	0821 / 0001	/	4
						ALTERNATE FOR P/N 51413-862			
-	192	51413-862				·PAD, HOOK	0821 / 0001	/	4
						ALTERNATE FOR P/N 20397-102			
	195	MS24694-S59				·SCREW	0821 / 0001	/	4
	198	NAS1169-10L				·WASHER, DIMPLE	0821 / 0001	/	4
	201	NAS43DD3-40				·SPACER	0821 / 0001	/	4
	204	NAS1149F0332P				·WASHER	0821 / 0001	/	4
	207	MS21044N3				·NUT	0821 / 0001	/	4
	210	12228-005				·TRIM, B-PILLAR, LH	0002	0820	1
	213	12228-006				·TRIM, B-PILLAR, RH	0002	0820	1
-	216	20340-001				·TRIM, B-PILLAR, LH, TAWNY	0821	1391	1
						FOR SPARES USE P/N 20340-003			
	219	20340-003	&			·TRIM, B-PILLAR, LH, IMPALA	1392 / 0001	/	1
-	222	20340-002				·TRIM, B-PILLAR, LH, FROST	0821	1391	1
						FOR SPARES USE P/N 20340-004			
-	225	20340-004	&			·TRIM, B-PILLAR, LH, FROST	1392 / 0001	/	1
-	228	21707-001	&			·TRIM, B-PILLAR, LH, BLACK	2044 / 0001	3689 / 0031	1
	231	22133-001	^			·TRIM, B-PILLAR, LH, RAFFIA	3026 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	234	22133-002	^		·TRIM, B-PILLAR, LH, MOONBEAM	3026 / 0001	/	1
-	237	22133-003	!		·TRIM, B-PILLAR, LH, ASH	3690 / 0032	/	1
-	240	22133-005	!		·TRIM, B-PILLAR, LH, VANILLA	3690 / 0032	/	1
-	243	22133-006	!		·TRIM, B-PILLAR, LH, BLACK	3690 / 0032	/	1
-	244	22133-007			·TRIM, B-PILLAR, LH, ALCANTARA BLACK	3690 / 0032	/	1
-	246	20341-001			·TRIM, B-PILLAR, RH, TAWNY	0821	1391	1
					FOR SPARES USE P/N 20341-003			
	249	20341-003	&		·TRIM, B-PILLAR, RH, IMPALA	1392 / 0001	/	1
-	252	20341-002			·TRIM, B-PILLAR, RH, FROST	0821	1391	1
					FOR SPARES USE P/N 20341-004			
-	255	20341-004	&		·TRIM, B-PILLAR, RH, FROST	1392 / 0001	/	1
-	258	21708-001	&		·TRIM, B-PILLAR, RH, BLACK	2044 / 0001	3689 / 0031	1
	261	22134-001	^		·TRIM, B-PILLAR, RH, RAFFIA	3026 / 0001	/	1
-	264	22134-002	^		·TRIM, B-PILLAR, RH, MOONBEAM	3026 / 0001	/	1
-	267	22134-003	!		·TRIM, B-PILLAR, RH, ASH	3690 / 0032	/	1
-	270	22134-005	!		·TRIM, B-PILLAR, RH, VANILLA	3690 / 0032	/	1
-	273	22134-006	!		·TRIM, B-PILLAR, RH, BLACK	3690 / 0032	/	1
-	274	22134-007			·TRIM, B-PILLAR, RH, ALCANTARA BLACK	3690 / 0032	/	1
	276	50833-006		A	·SCREW	0002	0820	4
	279	50527-001		A	·SPEED NUT	0002	0820	4
	282	12235-005			·TRIM, PASSENGER LIGHT ACCESS PANEL, LH	0002	0820	1
	285	12235-006			·TRIM, PASSENGER LIGHT ACCESS PANEL, RH	0002	0820	1
-	288	50494-001		A	·DUAL LOCK, TYPE 400	0002	0006	AR
-	291	50494-002		A	·DUAL LOCK, TYPE 170	0002	0006	AR
	294	50458-002		A	·HOOK TAPE, 2" BLACK	0007	0820	AR
	297	50457-001		A	·LOOP TAPE, 1" BLACK	0007	0820	AR
-	300	12231-002			·TRIM, HEADLINER, LH REAR	0002	0006	1
	303	12231-003			·TRIM, HEADLINER, LH REAR	0007	0820	1
	306	20346-001			·TRIM, HEADLINER, LH REAR, STONE	0821 / 0001	/	1
-	309	20346-002			·TRIM, HEADLINER, LH REAR, MOONBEAM	0821 / 0001	/	1
-	312	21711-001			·TRIM, HEADLINER, LH REAR, BLACK	2044 / 0001	3689 / 0031	1
	315	20346-003	!		·TRIM, HEADLINER, LH REAR, ASH	3690 / 0032	/	1
-	318	20346-005	!		·TRIM, HEADLINER, LH REAR, VANILLA	3690 / 0032	/	1
-	321	20346-006	!		·TRIM, HEADLINER, LH REAR, BLACK	3690 / 0032	/	1
-	322	20346-007			·TRIM, HEADLINER, LH REAR, ALCANTARA BLACK	3690 / 0032	/	1
	324	51012-001		A	·SCREW	0002	0820	2
					BEFORE SB2X-25-12			
					ALTERNATE FOR P/N 50835-012			
	327	50835-012		A	·SCREW	0002	0820	2
					ALTERNATE FOR P/N 51012-001			
	330	50837-001		A	·SCREW CLIP	0002	0820	2
					BEFORE SB2X-25-12			
-	333	50832-006		A	·SCREW	0002	0820	2
-	336	50527-001		A	·SPEED NUT	0002	0820	2
-	339	12230-001			·TRIM, HEADLINER, RH REAR	0002	0006	1
	342	12230-002			·TRIM, HEADLINER, RH REAR	0007	0820	1
	345	20347-001			·TRIM, HEADLINER, RH REAR, STONE	0821 / 0001	/	1
-	348	20347-002			·TRIM, HEADLINER, RH REAR, MOONBEAM	0821 / 0001	/	1
-	351	21712-001			·TRIM, HEADLINER, RH REAR, BLACK	2044 / 0001	3689 / 0031	1
	354	20347-003	!		·TRIM, HEADLINER, RH REAR, ASH	3690 / 0032	/	1
-	357	20347-005	!		·TRIM, HEADLINER, RH REAR, VANILLA	3690 / 0032	/	1
-	360	20347-006	!		·TRIM, HEADLINER, RH REAR, BLACK	3690 / 0032	/	1
-	361	20347-007			·TRIM, HEADLINER, RH REAR, ALCANTARA BLACK	3690 / 0032	/	1
	363	51012-001		A	·SCREW	0002	0820	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					BEFORE SB2X-25-12			
					ALTERNATE FOR P/N 50835-012			
	369	50835-012		A	·SCREW	0002	0820	2
					ALTERNATE FOR P/N 51012-001			
	372	50837-001		A	·SCREW CLIP	0002	0820	2
					BEFORE SB2X-25-12			
-	375	70091-002			·INTERIOR REPAIR, KIT	0821	0899	1
					AFTER SB2X-25-12			
	378	50757-008		A	··STANDOFF	0821 / 0001	/	4
					AFTER SB2X-25-12			
	381	50813-002		A	··WASHER	0821 / 0001	/	4
					AFTER SB2X-25-12			
	384	50834-014		A	··SCREW	0821 / 0001	/	4
					AFTER SB2X-25-12			
-	387	50833-006		A	·SCREW	0002	0820	2
-	390	50527-001		A	·SPEED NUT	0002	0820	2
	393	12517-002			·BRACKET, BULKHEAD 222	0002	0820	2
	396	20538-001			·BRACKET, BULKHEAD 222	0821	0899	1
					BEFORE SB2X-25-12			
	399	20538-002			·BRACKET, BULKHEAD 222	0821 / 0001	/	1
					AFTER SB2X-25-12			
	500	29568-001	(		·MEND PLATE	3828 / 0268	/	1
-	503	29553-001	(		·FILLER, SEAT BELT ATTACH	3828 / 0268	/	1
	506	50748-101		A	·RIVNUT	0002	0820	2
	509	MS35206-247		A	·SCREW	0002	0820	2
	512	50833-006		A	·SCREW	0002	0820	2
	515	C8090-632-3B		A	·SPEED NUT	0002	0820	2
	518	50834-007		A	·SCREW	0821 / 0001	/	2
					AFTER SB2X-25-12			
	521	50813-002		A	·WASHER	0821 / 0001	/	2
					AFTER SB2X-25-12			
	524	50527-001		A	·SPEED NUT	0821 / 0001	/	2
					AFTER SB2X-25-12			
-	527	50996-001			·EDGE TRIM	0002	0820	AR
					ALTERNATE FOR P/N 51055-001			
					FOR SPARES USE P/N 51523-001			
	530	51055-001			·EDGE TRIM	0002	0820	AR
					ALTERNATE FOR P/N 50996-001			
					FOR SPARES USE P/N 51523-001			
	533	51523-001			·EDGE TRIM	0821 / 0001	/	AR
-	536	13120-001			·CAPS HANDLE RECESS	0002	0820	1
-	539	50494-001		A	·DUAL LOCK, TYPE 400	0002	0820	AR
-	542	50494-002		A	·DUAL LOCK, TYPE 170	0002	0820	AR
-	545	13121-001			·PAX LIGHT COVER SUPPORT	0002	0259	2
-	548	13121-003			·PAX LIGHT COVER SUPPORT	0260	0820	2
-	551	50494-001		A	·DUAL LOCK, TYPE 400	0002	0820	AR
-	554	50494-002		A	·DUAL LOCK, TYPE 170	0002	0820	AR
	557	17135-001			·GARMENT BRACKET, TAN	1520	2520	1
	560	17135-002			·GARMENT BRACKET, POLAR GRAY	1520	2520	1
	563	18510-001			·GARMENT BRACKET, BLACK	2521 / 0001	/	1
	566	50757-014		A	·STANDOFF	1520 / 0001	/	2
-	569	50757-008	@	A	·STANDOFF	1520 / 0001	/	2
					ALTERNATE FOR P/N 50757-014			
-	572	NAS43DD3-24FC	@	A	·SPACER	1520 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					ALTERNATE FOR P/N 50757-014			
	575	50813-001		A	·WASHER	1520 / 0001	/	2
	578	50834-010		A	·SCREW	1520	2520	2
	581	50834-012		A	·SCREW	2521 / 0001	/	2
-	584	50834-014	#	A	·SCREW	1520	2520	2
					ALTERNATE FOR P/N 50834-010			
-	587	50834-016	%	A	·SCREW	2521 / 0001	/	2
					ALTERNATE FOR P/N 50834-012			
	590	50813-002	$	A	·WASHER	1520 / 0001	/	AR
	593	51598-001			·COAT HOOK	1520 / 0001	/	2
	596	51629-001		A	·PLUSNUT	1520 / 0001	/	2
	599	50835-012		A	·SCREW	1520 / 0001	/	2
	602	AN970-4		A	·WASHER	1520 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 34-20-01 DET			MAGNETIC COMPASS INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 W/ FIKI FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 W/ 2+1 REAR SEAT FOR PART IDENTIFICATION.			
			@		50757-008 STANDOFF AND NAS43DD3-24FC SPACER MAY BE SUBSTITUTED FOR 50757-014 STANDOFF.			
			#		IF 50757-008 STANDOFF AND NAS43DD3-24FC SPACER ARE USED, REPLACE 50834-010 SCREW WITH 0834-014 SCREW.			
			$		MAXIMUM OF 2 WASHERS PER SCREW MAY BE PLACED BETWEEN HEADLINER AND STANDOFF TO ADJUST THE HEADLINER DOWN.			
			%		IF 50834-008 STANDOFF AND NAS43DD3-24FC SPACER ARE USED, REPLACE 50834-012 SCREW WITH 50834-016 SCREW.			
			^		SERIAL NUMBERS W/ PERSPECTIVE AVIONICS.			
			&		SERIAL NUMBERS W/O PERSPECTIVE AVIONICS.			
			!		SERIAL NUMBERS W/ X EDITION INTERIOR.			
			(		SERIAL NUMBERS W/ 2+1 REAR SEAT.			

Intentionally Left Blank

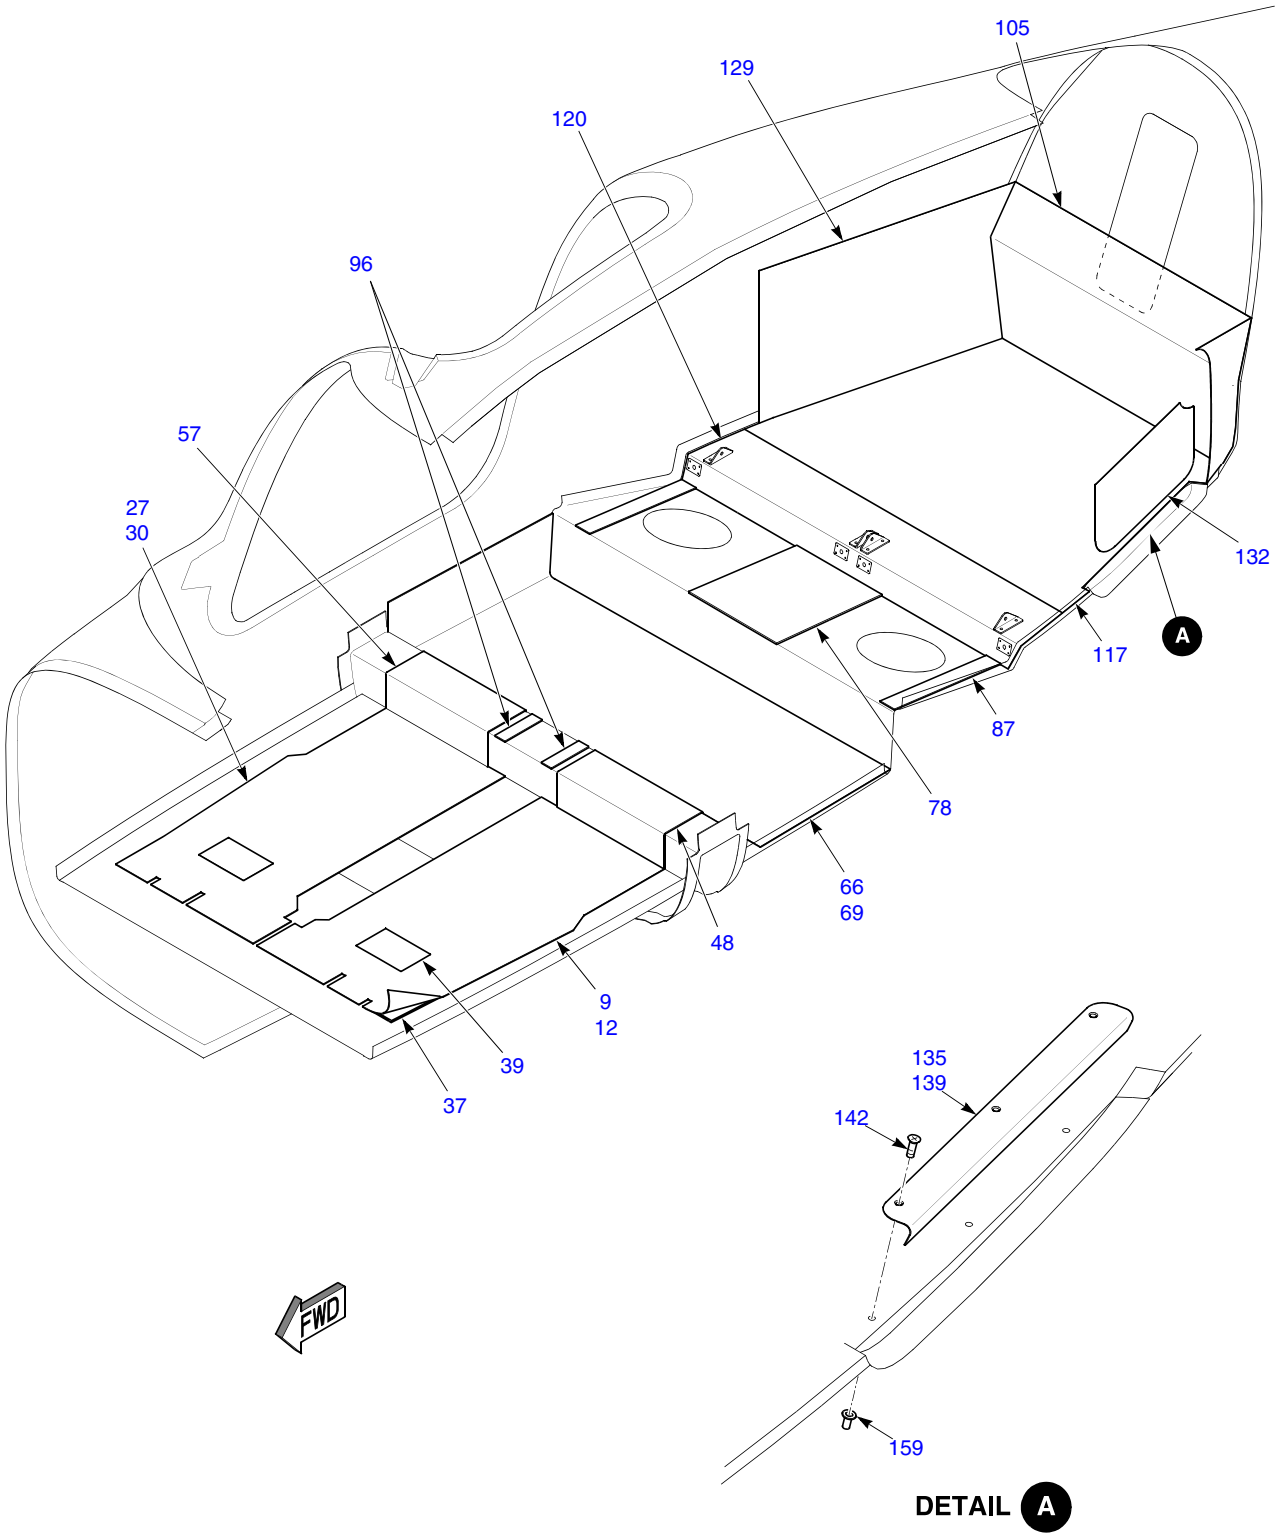

Serials 22-0002 thru 22-3537.

SR22_PC25_1214B

Figure-07

Floor Covering - Serials 22-0002 thru 22-3537 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-3537

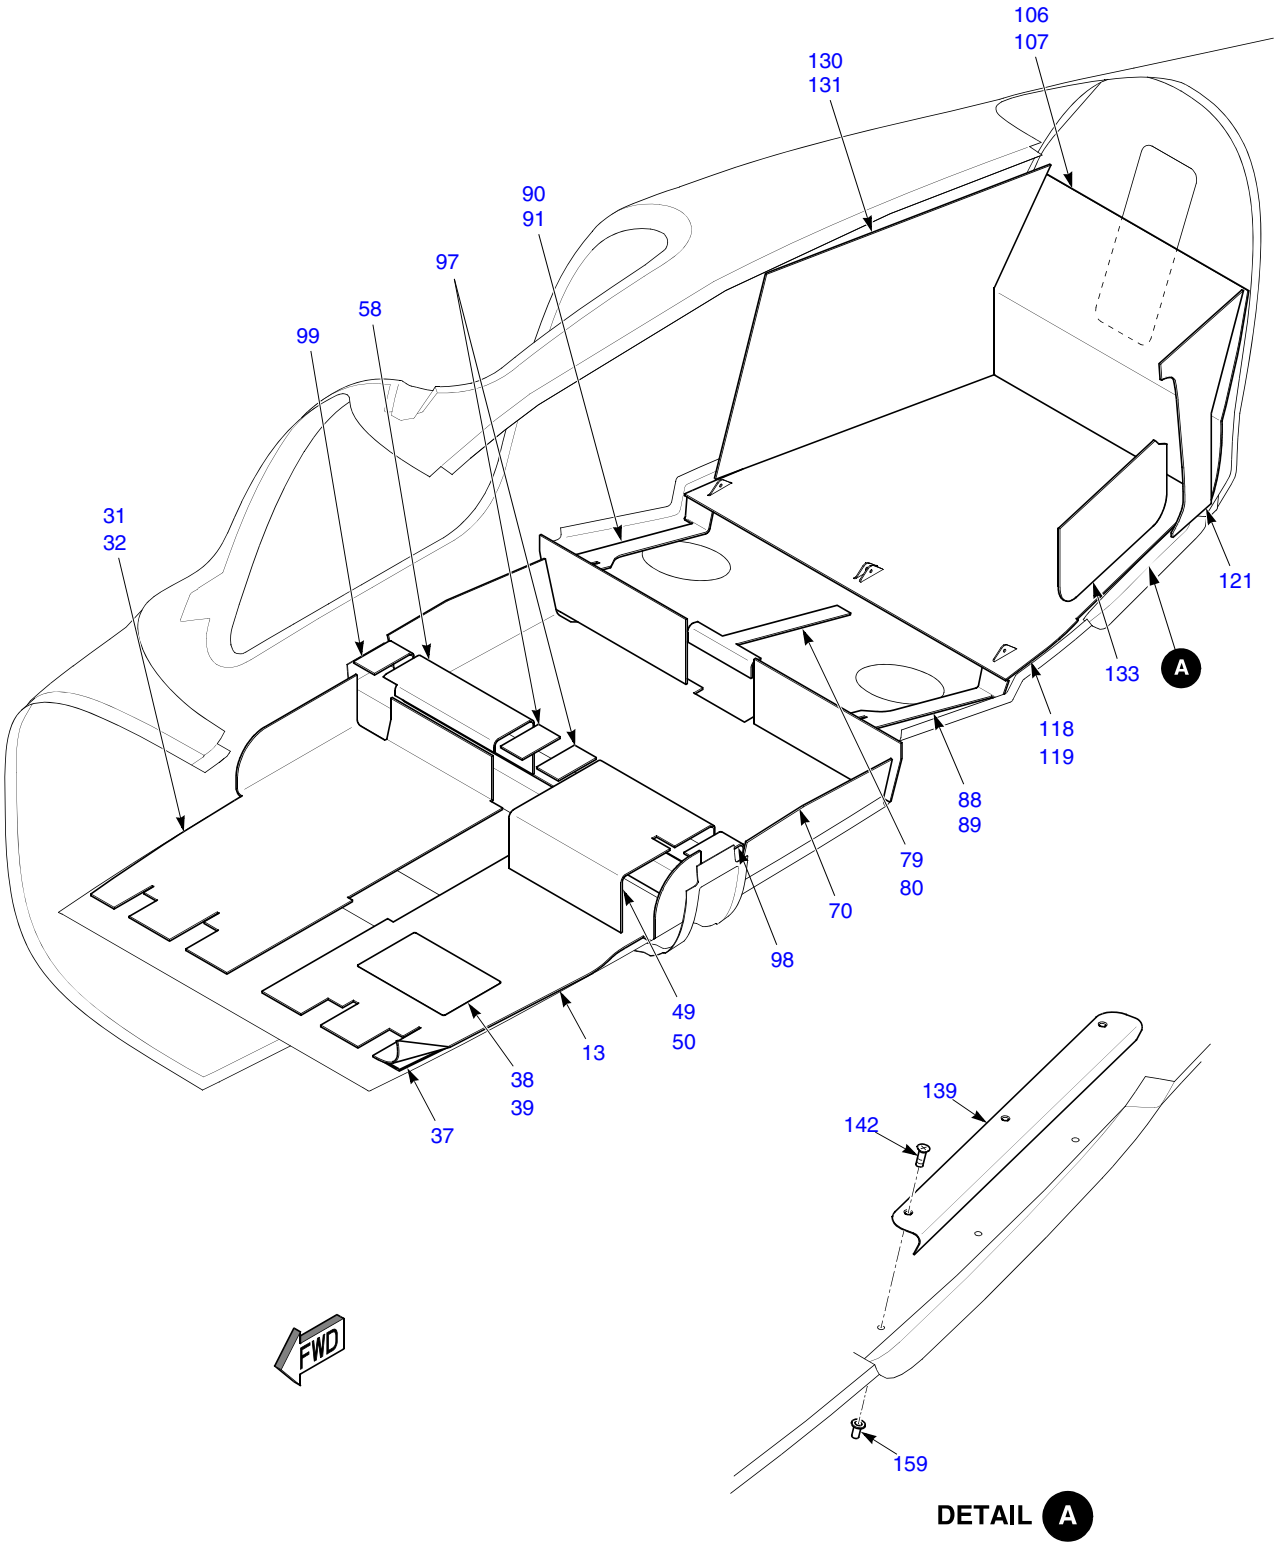

Serials 22-3538 & subs,
22T-0001 & subs.

SR22_PC25_2004

Figure-07

Floor Covering - Serials 22-3538 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-3538 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 07	**		FLOOR COVERING INSTALLATION	0002 / 0001	/	NP
-	3	12276-101			·INTERIOR TRIM, LH FORWARD CARPET	0002	0820	1
-	6	20530-101			·INTERIOR TRIM, LH FORWARD CARPET	0821	1658	1
	9	17127-101			·INTERIOR TRIM, LH FORWARD CARPET, (BLACK)	1659	3537	1
	12	17127-102			·INTERIOR TRIM, LH FORWARD CARPET, (BROWN)	1659	3537	1
	13	28851-110			·INTERIOR TRIM, LH FORWARD CARPET	3538 / 0001	/	1
-	15	12276-102			·INTERIOR TRIM, RH FORWARD CARPET	0002	0820	1
-	18	20530-102			·INTERIOR TRIM, RH FORWARD CARPET	0821	1658	1
-	21	17127-103			·INTERIOR TRIM, RH FORWARD CARPET, (BLACK)	1659	1862	1
-	24	17127-104			·INTERIOR TRIM, RH FORWARD CARPET, (BROWN)	1659	1862	1
	27	17127-105			·INTERIOR TRIM, RH FORWARD CARPET, (BLACK)	1863	3537	1
	30	17127-106			·INTERIOR TRIM, RH FORWARD CARPET, (BROWN)	1863	3537	1
	31	28851-111			·INTERIOR TRIM, RH FORWARD CARPET W/ A/C, FAN	3538 / 0001	/	1
	32	28851-122			·INTERIOR TRIM, RH FORWARD CARPET W/ VENT	3538 / 0001	/	1
-	33	17127-119			·INTERIOR TRIM, EVAPORATOR COVER	2158	3537	1
-	34	28886-101			·INTERIOR TRIM, EVAPORATOR COVER	3538 / 0001	/	1
-	35	17127-120			·INTERIOR TRIM, VENT COVER	2158	3537	1
-	36	28887-101			·INTERIOR TRIM, FAN COVER	3538 / 0001	/	1
	37	50458-001		A	·HOOK TAPE	0002	0820	AR
-	38	12252-002			·CHAFE PLATE, RUDDER PEDAL	0002 / 0001	/	2
					ALTERNATE FOR P/N 12252-004			
	39	12252-004			·CHAFE PLATE, RUDDER PEDAL	0686 / 0001	/	2
					ALTERNATE FOR P/N 12252-002			
-	42	12276-105			·INTERIOR TRIM, SPAR COVER CARPET, LH	0002	0820	1
-	45	20530-105			·INTERIOR TRIM, SPAR COVER CARPET, LH	0821	1658	1
	48	17127-111			·INTERIOR TRIM, SPAR COVER CARPET, LH	1659	3537	1
	49	28851-109			·INTERIOR TRIM, SPAR COVER CARPET, LH	3538 / 0001	4299 / 1232	1
	50	28851-132			·INTERIOR TRIM, SPAR COVER CARPET, LH	4300 / 1233	/	1
-	51	12276-106			·INTERIOR TRIM, SPAR COVER CARPET, RH	0002	0820	1
-	54	20530-106			·INTERIOR TRIM, SPAR COVER CARPET, RH	0821	1658	1
	57	17127-112			·INTERIOR TRIM, SPAR COVER CARPET, RH	1659	3537	1
	58	28851-107			·INTERIOR TRIM, SPAR COVER CARPET, RH	3538 / 0001	/	1
-	60	12276-103			·INTERIOR TRIM, REAR FLOOR CARPET	0002	0820	1
-	63	20530-103			·INTERIOR TRIM, REAR FLOOR CARPET	0821	1658	1
	66	17127-107			·INTERIOR TRIM, REAR FLOOR CARPET, (BLACK)	1659	3537	1
	69	17127-108			·INTERIOR TRIM, REAR FLOOR CARPET, (BROWN)	1659	3537	1
	70	28851-118			·INTERIOR TRIM, REAR FLOOR CARPET	3538 / 0001	/	1
-	72	12276-108			·INTERIOR TRIM, REAR SEAT CENTER CARPET	0002	0820	1
-	75	20530-110			·INTERIOR TRIM, REAR SEAT CENTER CARPET	0821	1658	1
	78	17127-115			·INTERIOR TRIM, REAR SEAT CENTER CARPET	1659	3537	1
	79	28851-106			·INTERIOR TRIM, REAR SEAT CENTER CARPET	3538 / 0001	/	1
	80	28851-125	!		·INTERIOR TRIM, REAR SEAT CENTER CARPET	3828 / 0268	/	1
-	81	12276-109			·INTERIOR TRIM, REAR SEAT SIDE CARPET	0002	0820	2
-	84	20530-109			·INTERIOR TRIM, REAR SEAT SIDE CARPET	0821	1658	2
	87	17127-114			·INTERIOR TRIM, REAR SEAT SIDE CARPET	1659	3537	2
	88	28851-101			·INTERIOR TRIM, REAR SEAT SIDE CARPET, LH	3538 / 0001	/	1
	89	28851-124	!		·INTERIOR TRIM, REAR SEAT SIDE CARPET, LH	3828 / 0268	/	1
	90	28851-102			·INTERIOR TRIM, REAR SEAT SIDE CARPET, RH	3538 / 0001	/	1
	91	28851-123	!		·INTERIOR TRIM, REAR SEAT SIDE CARPET, RH	3828 / 0268	/	1
-	92	12276-110			·INTERIOR TRIM, INNER SPAR FILLER STRIP	0002	0820	4
-	93	20530-114			·INTERIOR TRIM, INNER SPAR FILLER STRIP	0821	1658	4
	96	17127-117			·INTERIOR TRIM, INNER SPAR FILLER STRIP	1659	3537	4
	97	28851-104			·INTERIOR TRIM, INNER SPAR FILLER STRIP	3538 / 0001	/	2
	98	28851-112			·INTERIOR TRIM, OUTER SPAR FILLER STRIP, LH	3538 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	99	28851-113			·INTERIOR TRIM, OUTER SPAR FILLER STRIP, RH	3538 / 0001	/	1
-	100	12276-117			·INTERIOR TRIM, BULKHEAD 222 CARPET	0002	0820	1
-	102	20530-113			·INTERIOR TRIM, BULKHEAD 222 CARPET	0821	1658	1
	105	17127-116			·INTERIOR TRIM, BULKHEAD 222 CARPET	1659	3537	1
	106	28851-114			·INTERIOR TRIM, BULKHEAD 222 CARPET	3538 / 0001	/	1
	107	28851-127	!		·INTERIOR TRIM, BULKHEAD 222 CARPET	3828 / 0268	/	1
-	108	12276-116			·INTERIOR TRIM, BAGGAGE FLOOR CARPET	0002	0820	1
-	111	20530-104			·INTERIOR TRIM, BAGGAGE FLOOR CARPET	0821	1658	1
-	114	17127-109			·INTERIOR TRIM, BAGGAGE FLOOR CARPET	1659	1862	1
	117	17127-110			·INTERIOR TRIM, BAGGAGE FLOOR CARPET	1863	3537	1
	118	28851-115			·INTERIOR TRIM, BAGGAGE FLOOR CARPET	3538 / 0001	/	1
	119	28851-126	!		·INTERIOR TRIM, BAGGAGE FLOOR CARPET	3828 / 0268	/	1
	120	20530-108			·INTERIOR TRIM, BAGGAGE FORWARD CARPET	0821	3537	1
	121	28851-116			·INTERIOR TRIM, BAGGAGE LH SIDE CARPET	3538 / 0001	/	1
-	123	12276-107			·INTERIOR TRIM, BAGGAGE RH SIDE CARPET	0002	0820	1
-	126	20530-107			·INTERIOR TRIM, BAGGAGE RH SIDE CARPET	0821	1658	1
	129	17127-113			·INTERIOR TRIM, BAGGAGE RH SIDE CARPET	1659	3537	1
	130	28851-117			·INTERIOR TRIM, BAGGAGE RH SIDE CARPET	3538 / 0001	/	1
	131	28851-128	!		·INTERIOR TRIM, BAGGAGE RH SIDE CARPET	3828 / 0268	/	1
	132	17127-118			·INTERIOR TRIM, BAGGAGE DOOR CARPET	1659	3537	1
	133	28851-105			·INTERIOR TRIM, BAGGAGE DOOR CARPET	3538 / 0001	/	1
	135	12241-001			·BAGGAGE DOOR CHAFE PLATE W/O LOGO	0002	0768	1
-	138	12241-002			·BAGGAGE DOOR CHAFE PLATE W/ LOGO	0769	2512	1
					FOR SPARES USE P/N 12241-003			
	139	12241-003			·BAGGAGE DOOR CHAFE PLATE W/ LOGO	2513 / 0001	/	1
-	140	12241-004			·BAGGAGE DOOR CHAFE PLATE W/O LOGO	3538 / 0001	/	1
-	141	12241-005	#		·BAGGAGE DOOR CHAFE PLATE W/ LOGO	/ 0079	/	1
	142	MS24693C28		A	·SCREW	0002		3
-	144	50842-075		A	·RIVNUT	0002	0820	3
					ALTERNATE FOR P/N 50842-120			
					ALTERNATE FOR P/N 50842-160			
					ALTERNATE FOR P/N 50842-200			
					ALTERNATE FOR P/N 50842-240			
-	147	50842-120		A	·RIVNUT	0002	0820	3
					WHEN EXHTD USE P/N 50842-075			
-	150	50842-160		A	·RIVNUT	0002	0820	3
					WHEN EXHTD USE P/N 50842-075			
-	153	50842-200		A	·RIVNUT	0002	0820	3
					WHEN EXHTD USE P/N 50842-075			
-	156	50842-240		A	·RIVNUT	0002	0820	3
					WHEN EXHTD USE P/N 50842-075			
	159	50763-002		A	·WELLNUT	0002		3
					ALTERNATE FOR P/N 50763-001			
-	162	50763-001		A	·WELLNUT	0002		3
					WHEN EXHTD USE P/N 50763-002			

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBERS 1602, 1821, AND 1840, REFER TO 22-1863 FOR PART IDENTIFICATION.

2) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 W/ 2+1 REAR SEAT FOR PART IDENTIFICATION.

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			@		SERIAL NUMBER 22-0002 THRU 22-0820: ALT INSTALLATION USES 0.302 DIAMETER HOLE.			
			#		INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 & SUBS AS OPTIONAL EQUIPMENT.			
			!		INSTALLED ON AIRCRAFT W/ 2+1 REAR SEAT			

Intentionally Left Blank

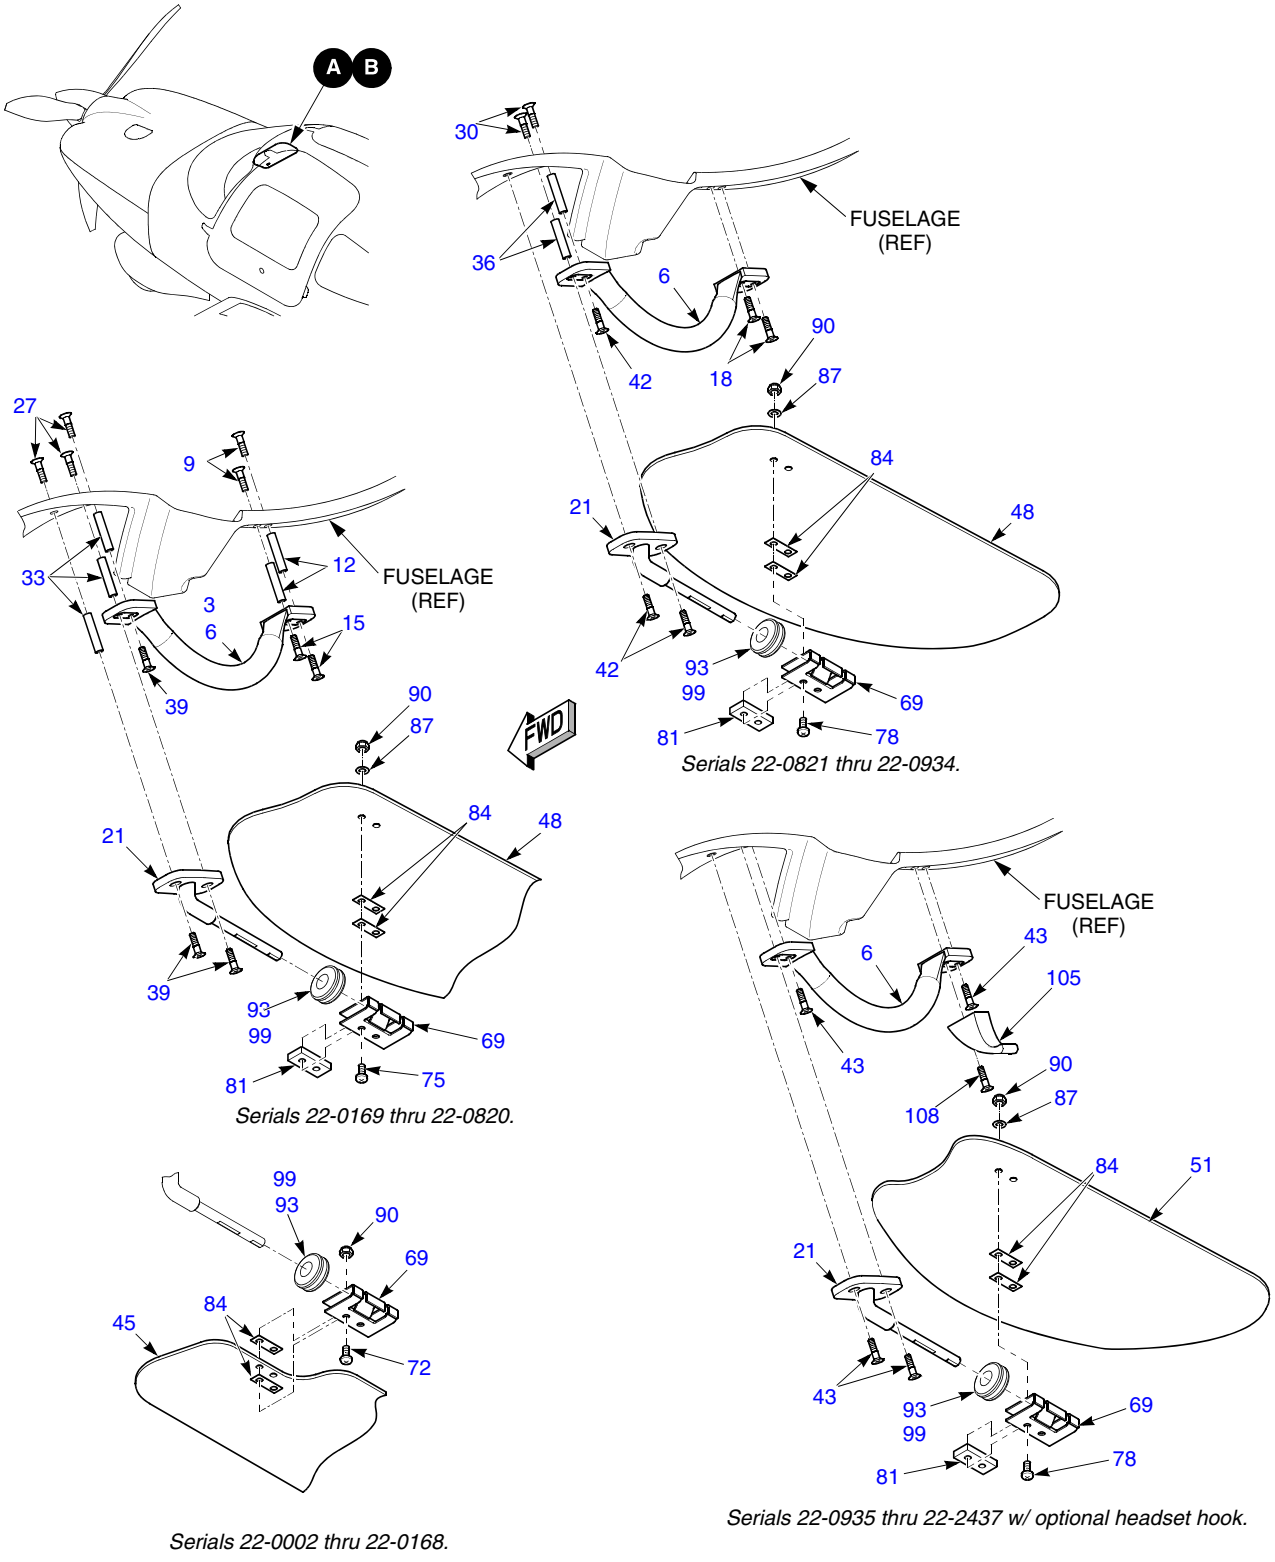

DETAIL A

SR22_PC25_1215G

Figure-08

Sunvisor and Grab Handle - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

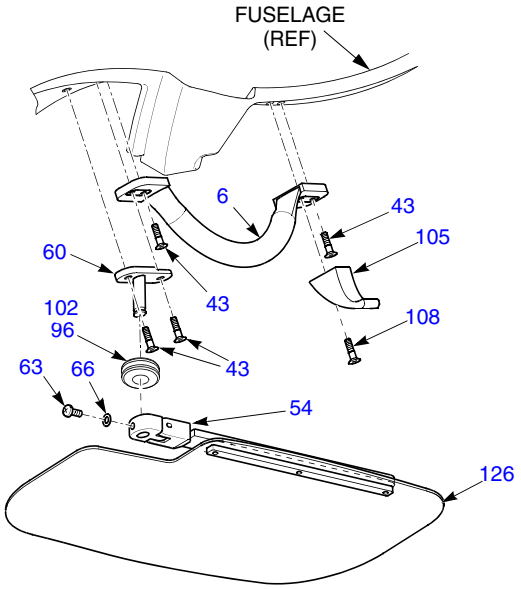

Serials 22-1150 thru 22-2437 w/ optional Rosen Visor & headset hook.

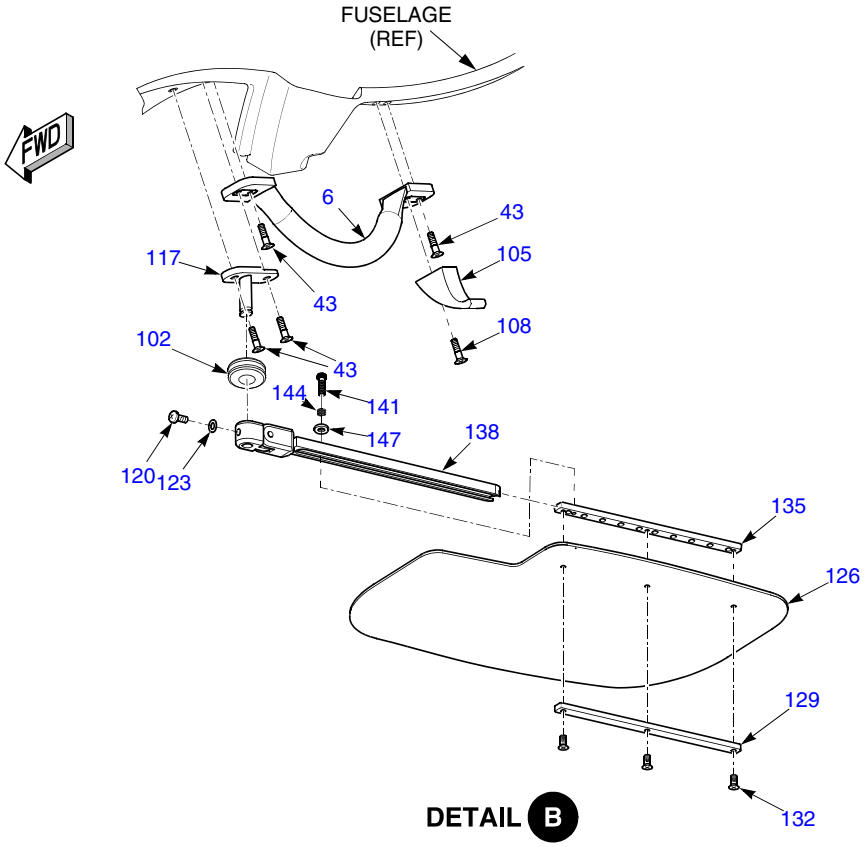

Serials 22-2438 & subs w/ optional headset hook, 22T-0001 & subs.

SR22_PC25_1728

Figure-08

Sunvisor and Grab Handle - Serials 22-1150 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 08			SUNVISOR AND GRAB HANDLE INSTALLATION	0002 / 0001	/	NP
	3	50532-001			·GRAB HANDLE	0002	0820	1
	6	15786-001	@		·GRAB HANDLE	0656 / 0001	/	1
	9	MS24693-S271		A	·SCREW	0002	0820	2
	12	50657-002		A	·SPACER	0002	0820	2
	15	MS24694S52		A	·SCREW	0002	0820	2
	18	MS24693S275		A	·SCREW	0821	0989	2
	21	50791-001			·ARM, SUNVISOR, LH	0002	2437	1
-	24	50791-002			·ARM, SUNVISOR, RH	0002	2437	1
	27	MS24693-S271		A	·SCREW	0002	0820	3
	30	MS24693-S271		A	·SCREW	0821	0989	2
	33	50657-002		A	·SPACER	0002	0820	3
	36	50657-002		A	·SPACER	0821	0989	2
	39	MS24694S52		A	·SCREW	0002	0820	3
	42	MS24693S275		A	·SCREW	0821	0989	3
	43	MS24693S275		A	·SCREW	0002	1519	5
						1520 /		4
	45	12698-001			·BLADE, SUNVISOR, COLOR GRAY	0002	0168	1
	48	12698-002			·BLADE, SUNVISOR, COLOR GRAY	0169	0934	1
					FOR SPARES USE P/N 12698-003			
	51	12698-003			·BLADE, SUNVISOR, COLOR GRAY	0935	2437	1
	54	15050-101	#		·BLADE ASSEMBLY, SUNVISOR, LH, W/O SLIDE FUNCTION	1150	2437	1
-	57	15050-102	#		·BLADE ASSEMBLY, SUNVISOR, RH, W/O SLIDE FUNCTION	1150	2437	1
	60	15050-103	#		·MOUNT	1150	2437	1
	63	MS16995-27B	#	A	·SCREW	1150	2437	1
	66	8HCLW	#	A	·WASHER	1150	2437	1
	69	12696-001		A	·CLAMP, SUNVISOR	0002	2437	1
	72	MS35215-53		A	·SCREW	0002	0168	2
	75	MS24693-S271		A	·SCREW	0169	0820	2
	78	50840-012		A	·SCREW	0821	2437	2
	81	14753-001		A	·SPACER	0169	2437	1
	84	50792-001		A	·ISOLATOR FELT, SUNVISOR	0002	2437	2
	87	50813-003		A	·WASHER	0169	2437	2
	90	50739-001		A	·NUT	0002	2437	2
	93	MS35489-46			·GROMMET	0002	1285	1
					FOR SPARES USE P/N 16198-001			
	96	MS35489-46			·GROMMET	0002	1285	1
					FOR SPARES USE P/N 16198-002			
	99	16198-001			·GROMMET	1286	2437	1
	102	16198-002			·GROMMET	1286 / 0001	/	1
	105	51598-001			·HEADSET HOOK	1520	3025	1
	108	MS27039-1-16			·SCREW	1520	3025	1
-	111	15050-101			·BLADE ASSEMBLY, SUNVISOR, LH, W/ SLIDE FUNCTION	2438 / 0001	/	1
-	114	15050-102			·BLADE ASSEMBLY, SUNVISOR, RH, W/ SLIDE FUNCTION	2438 / 0001	/	1
	117	15050-103			·MOUNT	2438 / 0001	/	1
	120	MS16995-27B		A	·SCREW	2438 / 0001	/	1
	123	8HCLW		A	·WASHER	2438 / 0001	/	1
	126	15050-104			·LENS, SUNVISOR	2438 / 0001	/	1
	129	R1010003		A	LENS STRIP	2438 / 0001	/	1
	132	MS24693-C488P		A	·SCREW	2438 / 0001	/	3
	135	1010002-3			·MALE SLIDE	2438 / 0001	/	1
	138	1010001-5			·FEMALE SLIDE	2438 / 0001	/	1
	141	99-701			·KNOB	2438 / 0001	/	1
	144	B-19679			·SPRING	2438 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	147	90295A110			·WASHER	2438 / 0001	/	1
					SYMBOL NOTES:			
			@		INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT AND 0821 & SUBS.			
			#		INSTALLED AS OPTIONAL EQUIPMENT.			

EFFECTIVITY:
All

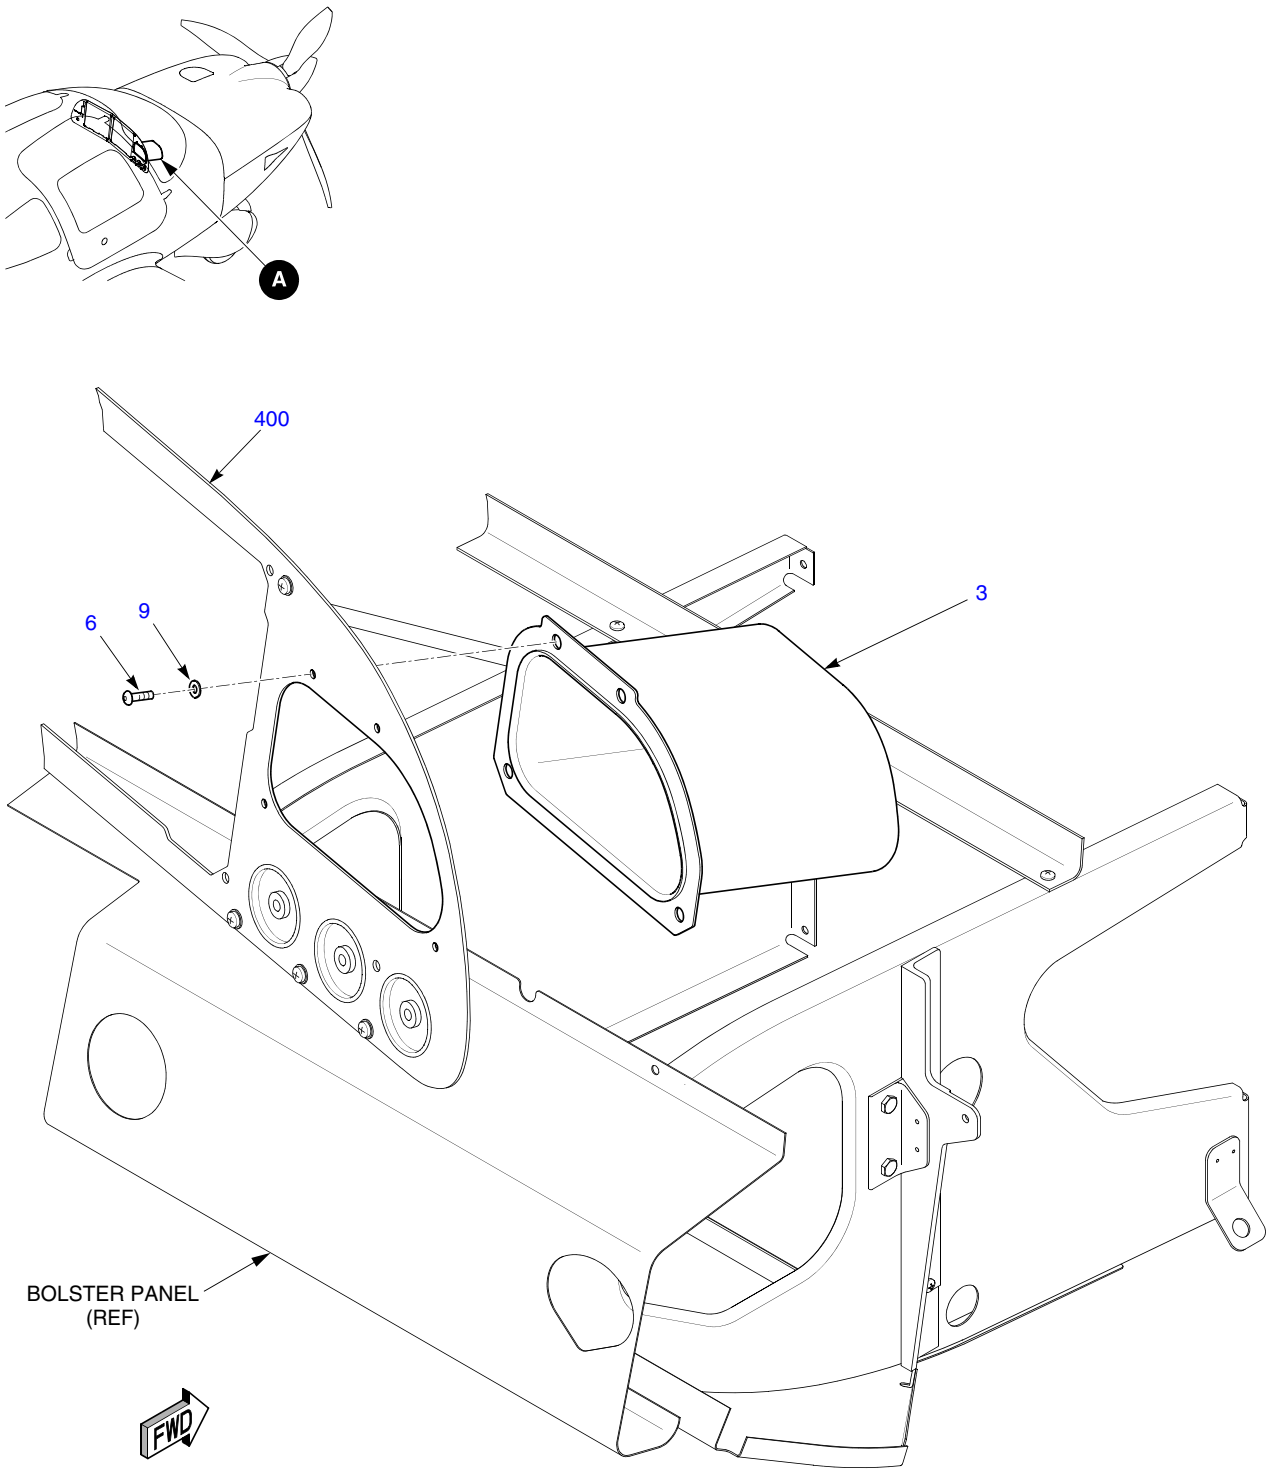

DETAIL A

Serials 22-1663 & subs w/o Perspective Avionics.

SR22_PC25_1676A

Figure-09

Glove Box - Serials 22-1663 & subs w/o Perspective

EFFECTIVITY:
Serials 22-1663 & subs w/o Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 09	**		GLOVE BOX INSTALL W/O PERSPECTIVE	1663		NP
	3	17580-001			·GLOVE BOX	1663		1
	6	50835-010		A	·SCREW	1663		4
	9	50813-002		A	·WASHER	1663		4
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 31-10-01 DET			INSTRUMENT PANEL			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1602 AND 22-1644; REFER TO 22-1663 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

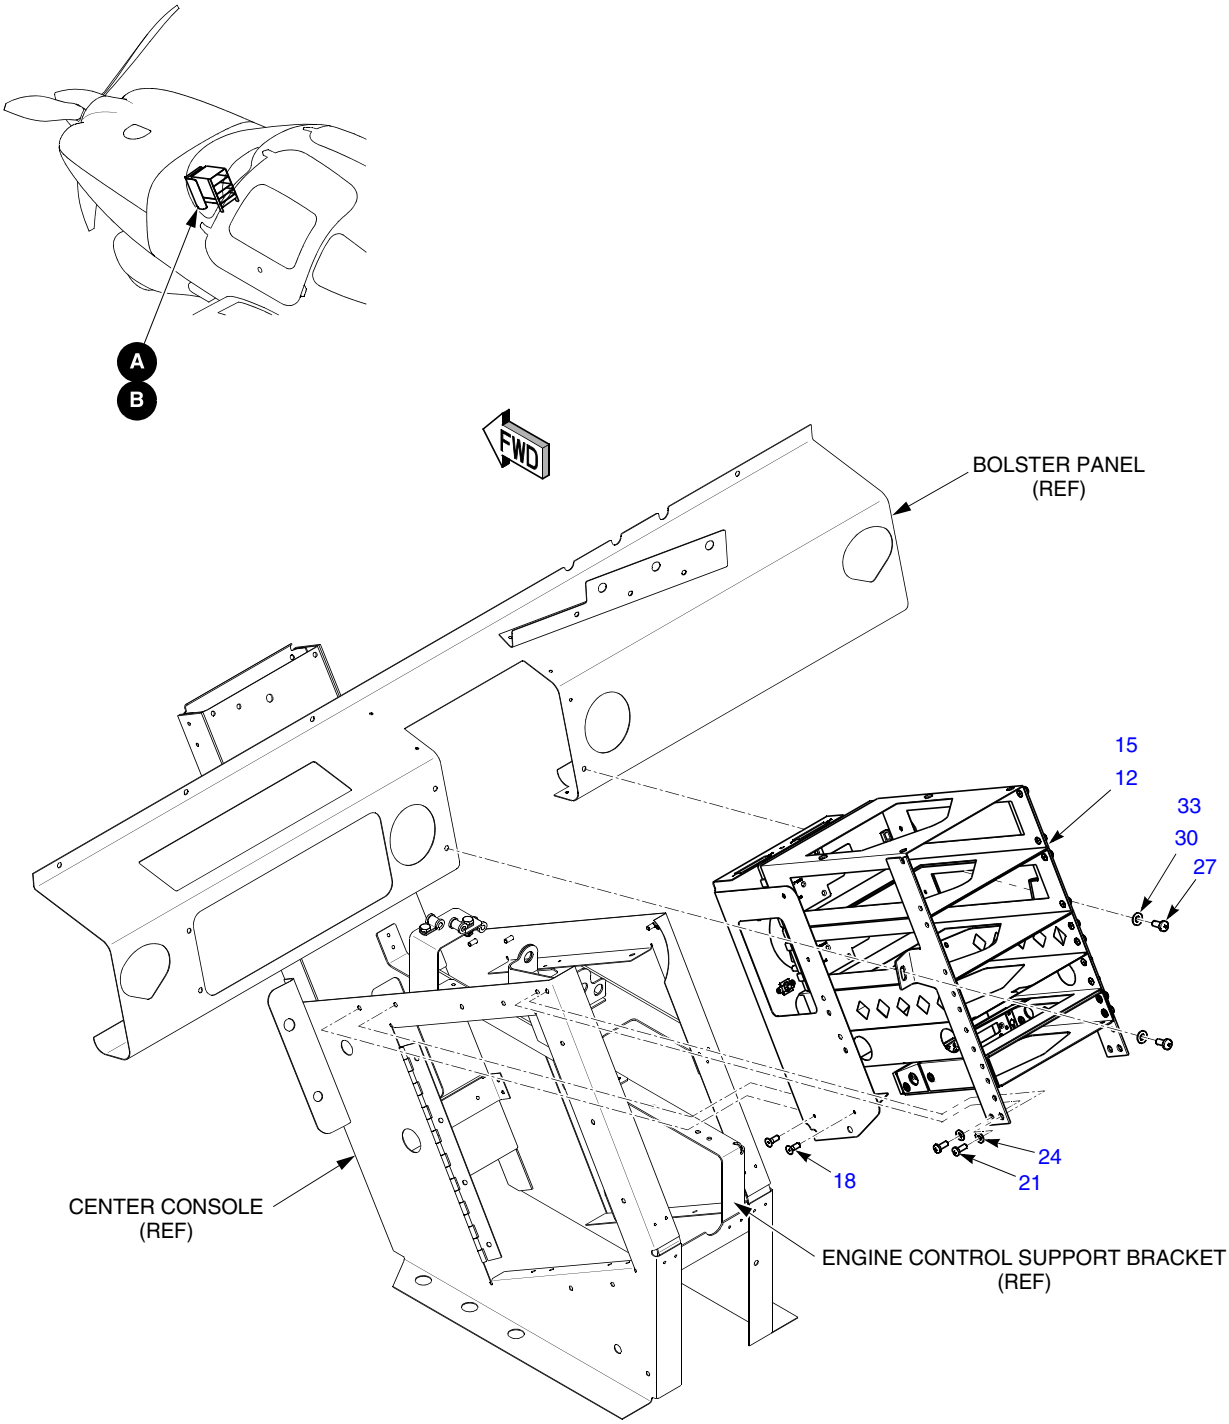

DETAIL A

Serials 22-0002 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

SR22_PC25_1440A

Figure-10

Avionics Center Console - Serials w/o Perspective (1 of 2)

EFFECTIVITY:
Serials w/o Perspective

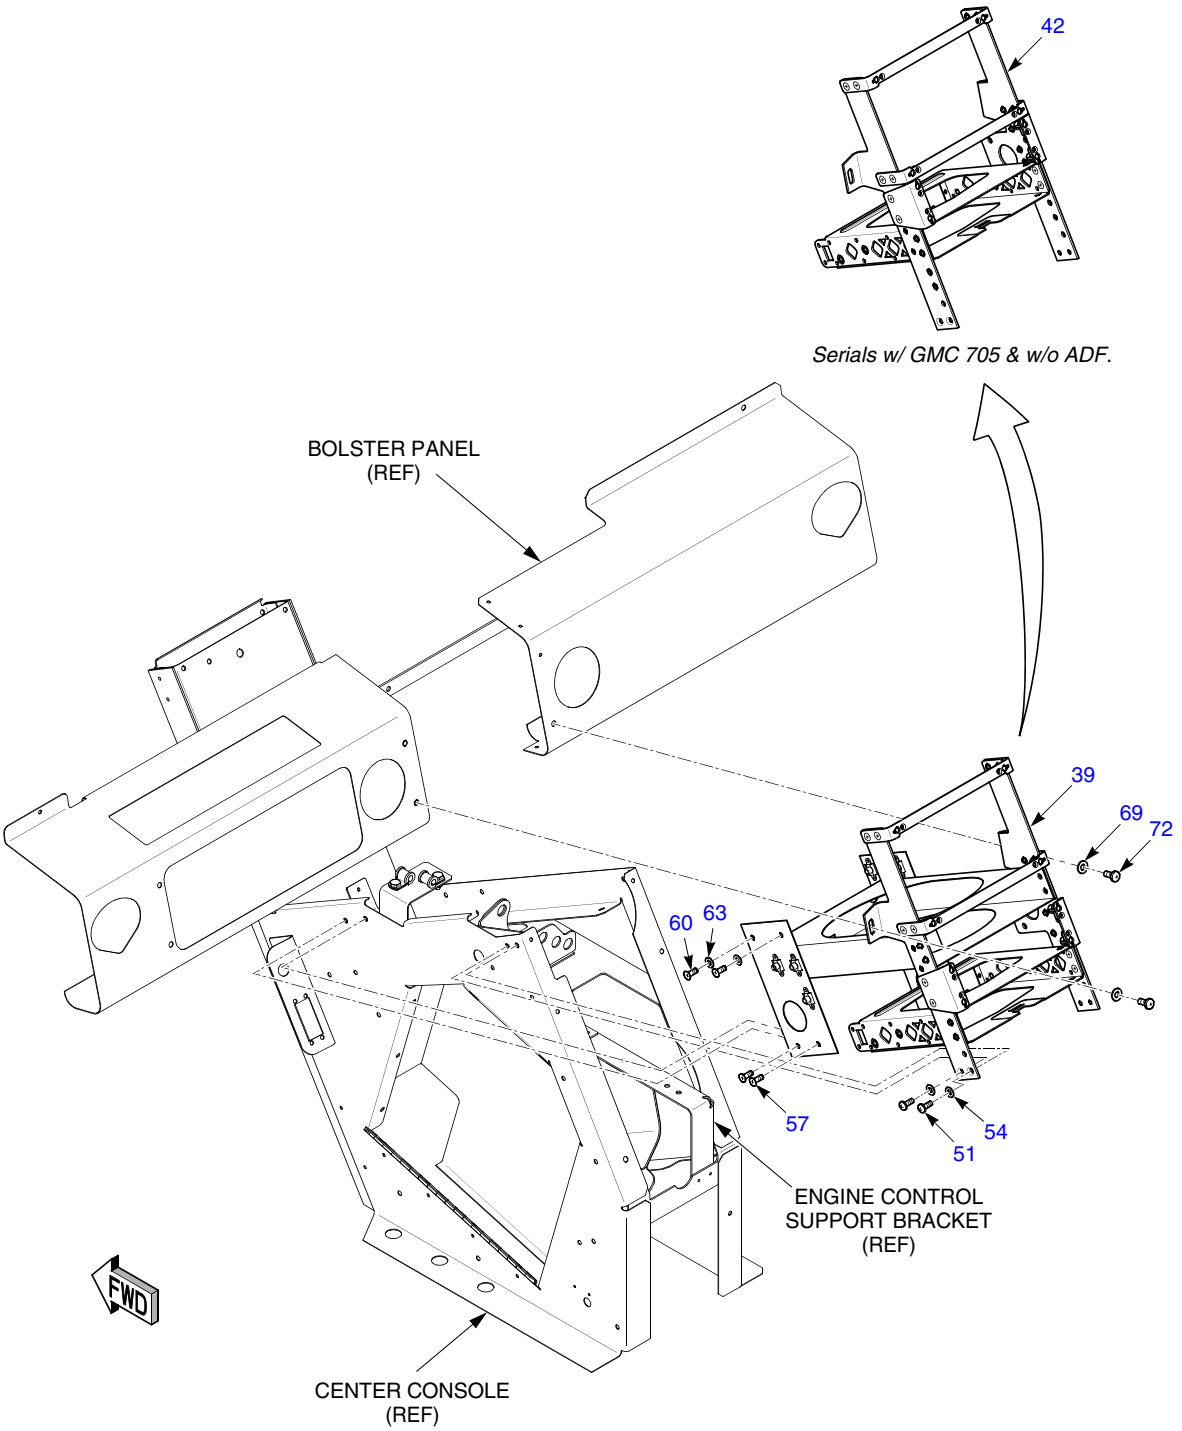

DETAIL B

Serials 22-3026 & subs w/ Perspective Avionics, 22T-0001 & subs.

SR22_PC25_1786

Figure-10

Avionics Center Console - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 10	**		AVIONICS CENTER CONSOLE	0002 / 0001	/	NP
-	2	NO PRT NUMBER			·AVIONICS CENTER CONSOLE ASSY W/O PERSPECTIVE	0002		NP
-	3	12707-002			··RADIO MODULE ASSEMBLY (430,420)	0002	0429	1
-	6	12707-003			··RADIO MODULE ASSEMBLY (430,430,SYS55)	0002	0429	1
-	9	12707-005			··RADIO MODULE ASSEMBLY (430,420)	0430		1
	12	12707-006			··RADIO MODULE ASSEMBLY (430,430)	0430		1
	15	20587-001			··RADIO MODULE ASSY (430,430,PFD,55SR,MODE S)	0821		1
	18	50809-007		A	··SCREW, WASHER HEAD	0002		4
	21	MS24694-S4		A	··SCREW	0002		4
	24	NAS1169-8L		A	··WASHER, DIMPLED	0002		4
	27	MS27039-1-07		A	··SCREW	0002		2
	30	NAS1149F0363P		A	··WASHER	0002	0820	2
	33	NAS1149F0332P		A	··WASHER	0821		2
-	36	NO PRT NUMBER			·AVIONICS CENTER CONSOLE ASSY W/ PERSPECTIVE	3026 / 0001	/	NP
	39	19287-001			··RADIO MODULE ASSEMBLY (ADF, GMC705)	3026 / 0001	/	1
	42	19287-002			··RADIO MODULE ASSEMBLY (GMC705)	3026 / 0001	/	1
-	45	19287-003			··RADIO MODULE ASSEMBLY (ADF, SYS55)	3026 / 0001	/	1
-	48	19287-004			··RADIO MODULE ASSEMBLY (SYS55)	3026 / 0001	/	1
	51	MS24694-S4		A	··SCREW	3026 / 0001	/	4
	54	NAS1169-8L		A	··WASHER	3026 / 0001	/	4
	57	50809-007	@	A	··SCREW	3026 / 0001	/	3
	60	MS35206-244	@	A	··SCREW	3026 / 0001	/	4
	63	NAS1149DN832K	@	A	··WASHER	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1149FN832P			
-	66	NAS1149FN832P	@	A	··WASHER	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1149DN832K			
	69	MS27039-1-09		A	··SCREW	3026 / 0001	/	1
	72	NAS1149F0332P		A	··WASHER	3026 / 0001	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE FOR PRT IDENTIFICATION.

@ SERIAL NUMBER 22-3026 & SUBS W/ RADIO MODULE ASSEMBLY 19287-001, 19287-003, OR 219287-004 ONLY.

Intentionally Left Blank

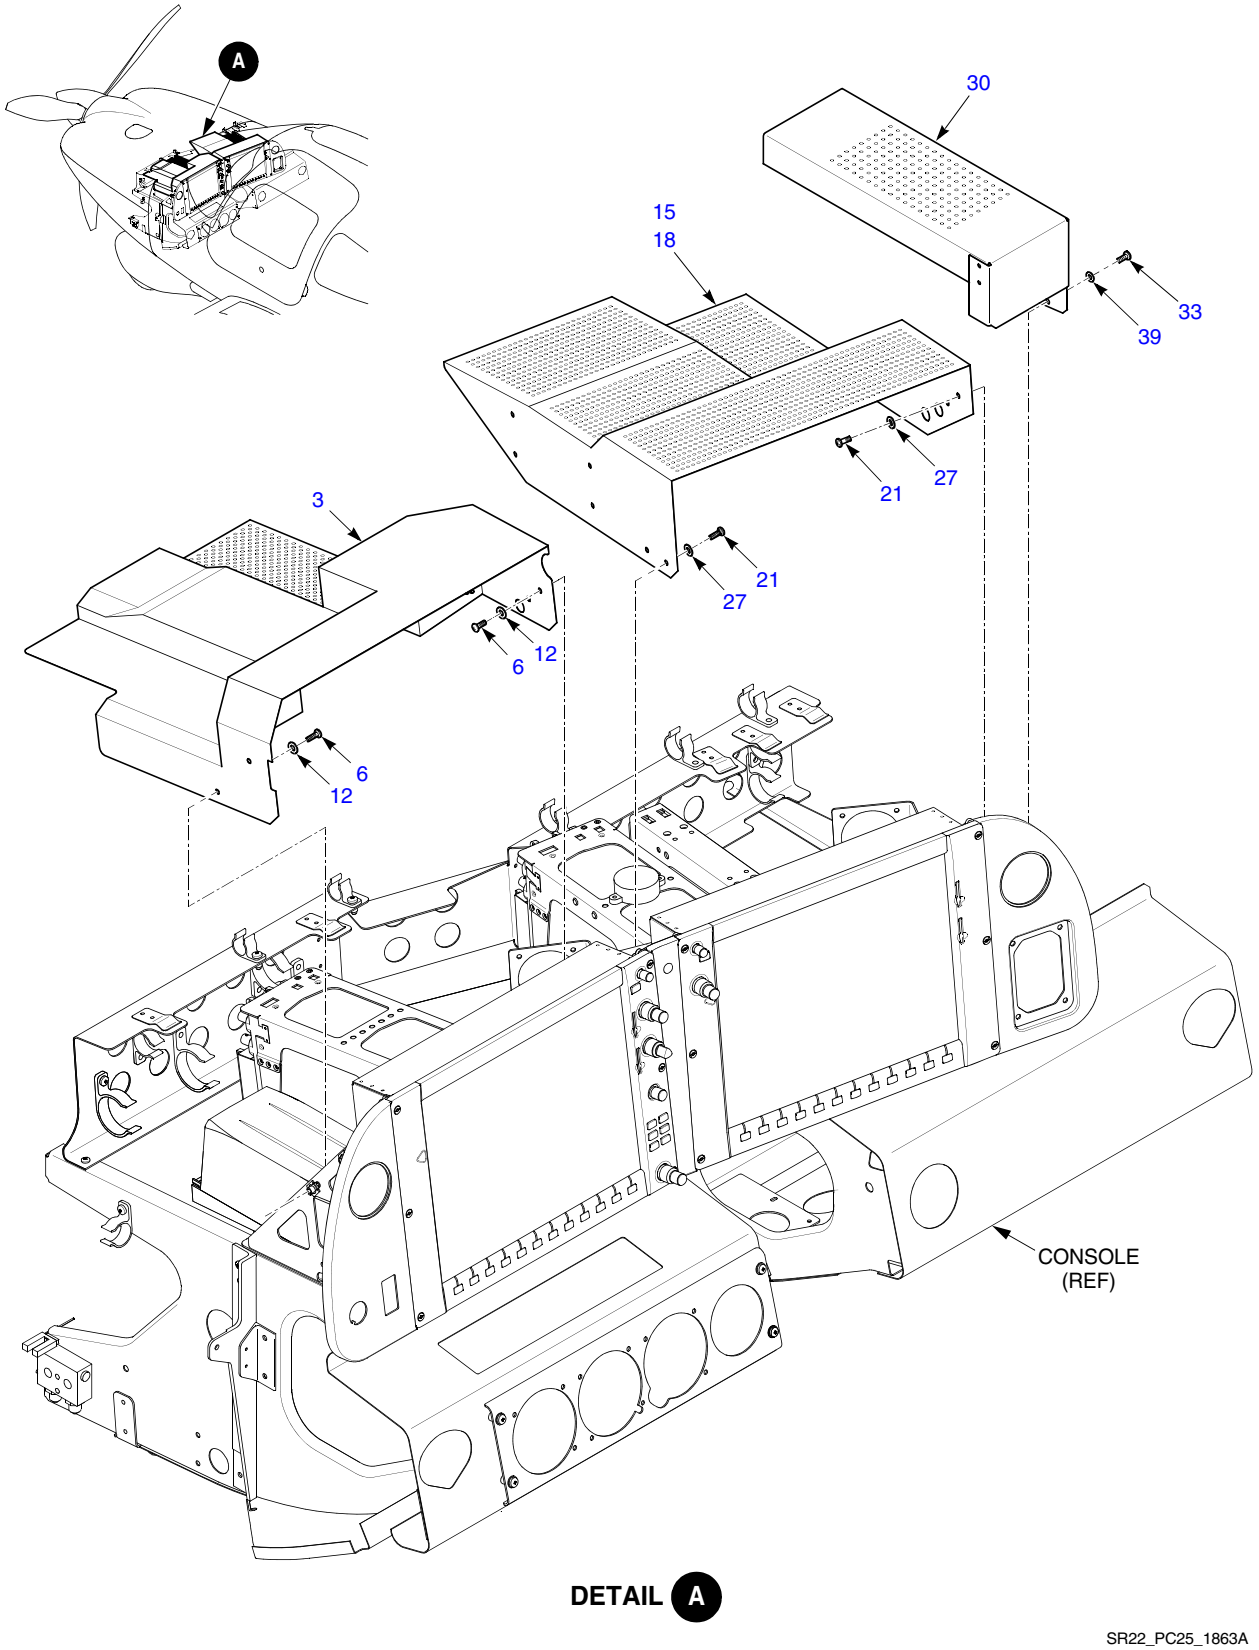

Figure-11
EMI Shielding - Serials w/ Perspective

EFFECTIVITY:
Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 11	**		EMI SHIELDING INSTALLATION	3026 / 0001	/	NP
	3	19280-001			·EMI SHIELD, PFD	3026 / 0001	/	1
	6	MS35206-244		A	·SCREW	3026 / 0001	/	3
					ALTERNATE FOR P/N NAS1801-08-7			
-	9	NAS1801-08-7		A	·SCREW	3026 / 0001	/	3
					ALTERNATE FOR P/N MS35206-244			
	12	NAS1149FN832P		A	·WASHER	3026 / 0001	/	3
	15	19269-001			·EMI SHIELD, MFD	3026 / 0001	4045 / 0689	1
					FOR SPARES USE P/N 19269-002			
	18	19269-002			·EMI SHIELD, MFD	4046 / 0690	/	1
	21	MS35206-244		A	·SCREW	3026 / 0001	/	4
					ALTERNATE FOR P/N NAS1801-08-7			
-	24	NAS1801-08-7		A	·SCREW	3026 / 0001	/	4
					ALTERNATE FOR P/N MS35206-244			
	27	NAS1149FN832P		A	·WASHER	3026 / 0001	/	4
	30	19268-001			·EMI SHIELD, ADC	3026 / 0001	/	1
	33	MS35206-244		A	·SCREW	3026 / 0001	/	3
					ALTERNATE FOR P/N NAS1801-08-7			
-	36	NAS1801-08-7		A	·SCREW	3026 / 0001	/	3
					ALTERNATE FOR P/N MS35206-244			
	39	NAS1149FN832P		A	·WASHER	3026 / 0001	/	3
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

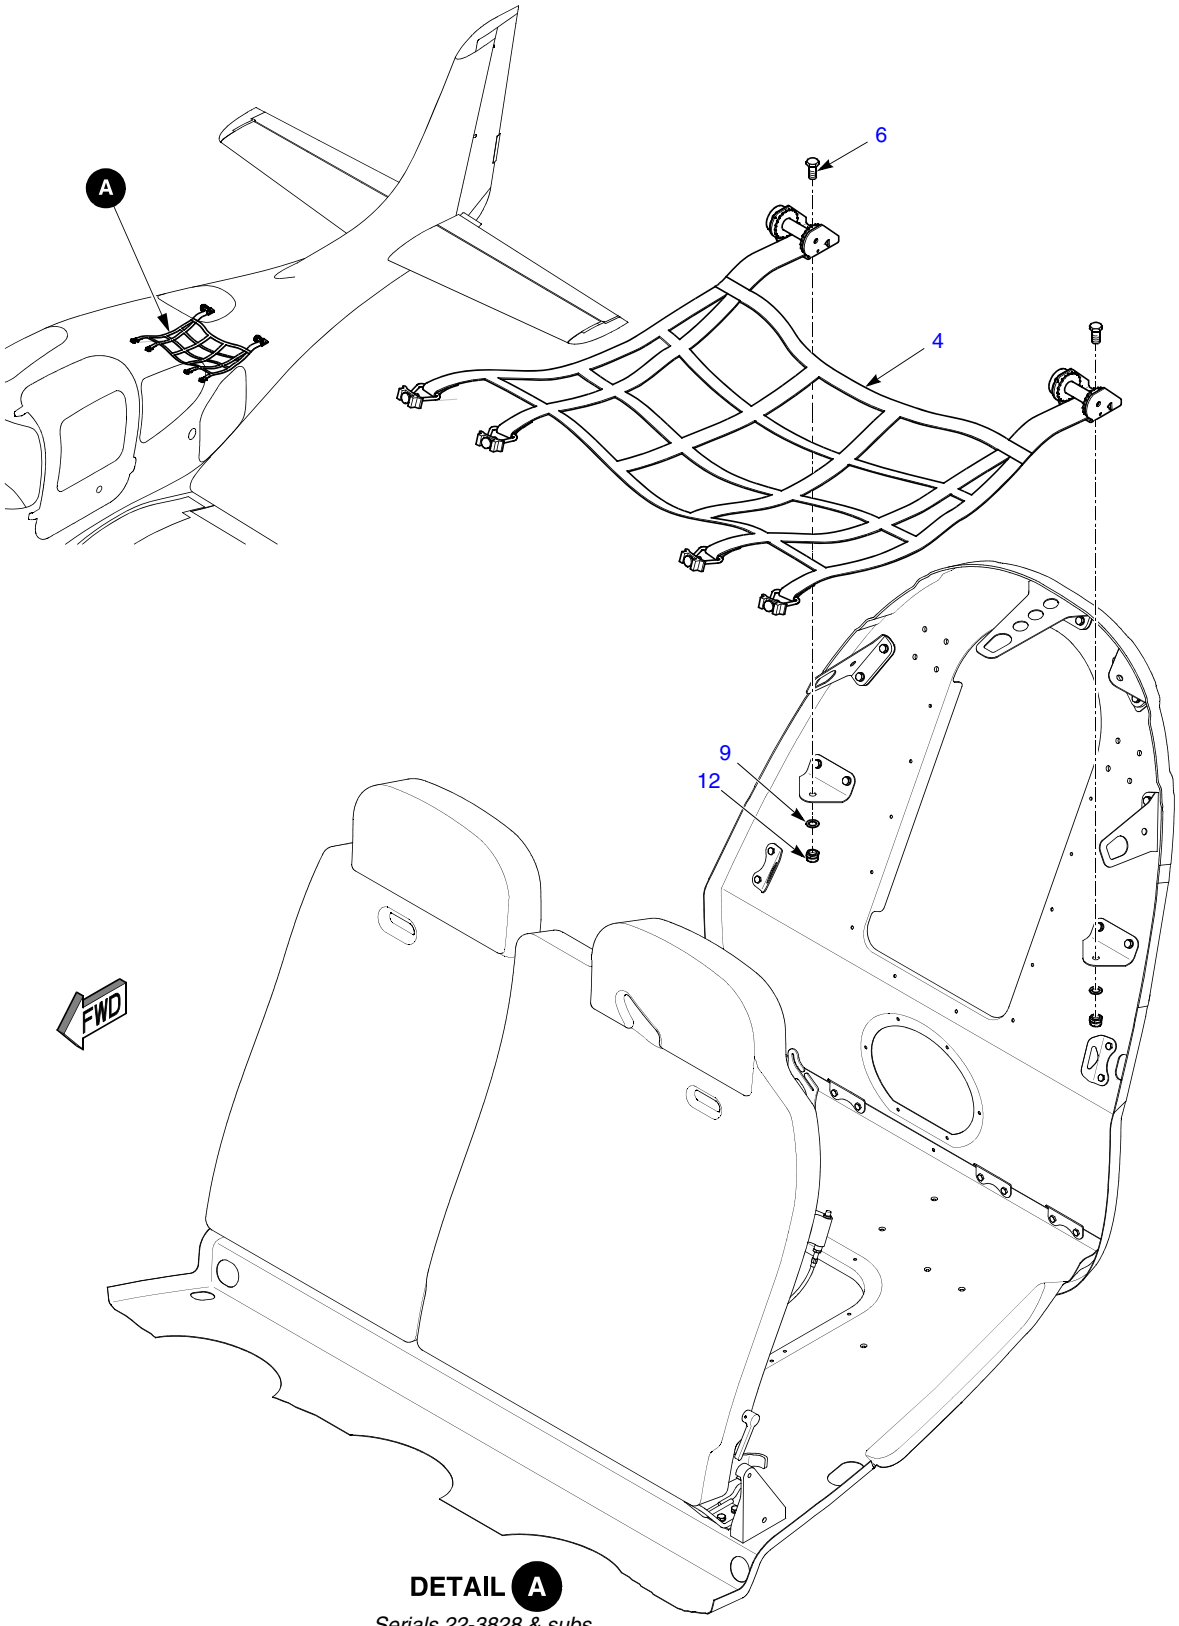

Figure-12

Cargo Net - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat

EFFECTIVITY:
Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 12	**		CARGO NET INSTALLATION	3828 / 0268	/	NP
-	3	29305-001			·CARGO NET	3828 / 0268	/	1
					FOR SPARES USE P/N 29305-002			
	4	29305-002			·CARGO NET	3828 / 0268	/	1
	6	AN6-6A			·BOLT	3828 / 0268	/	2
	9	NAS1149D0632K			·WASHER	3828 / 0268	/	2
	12	MS21044N6			·NUT	3828 / 0268	/	2
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0251; REFER TO 22T-0268 W/ 2+1 REAR SEAT FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

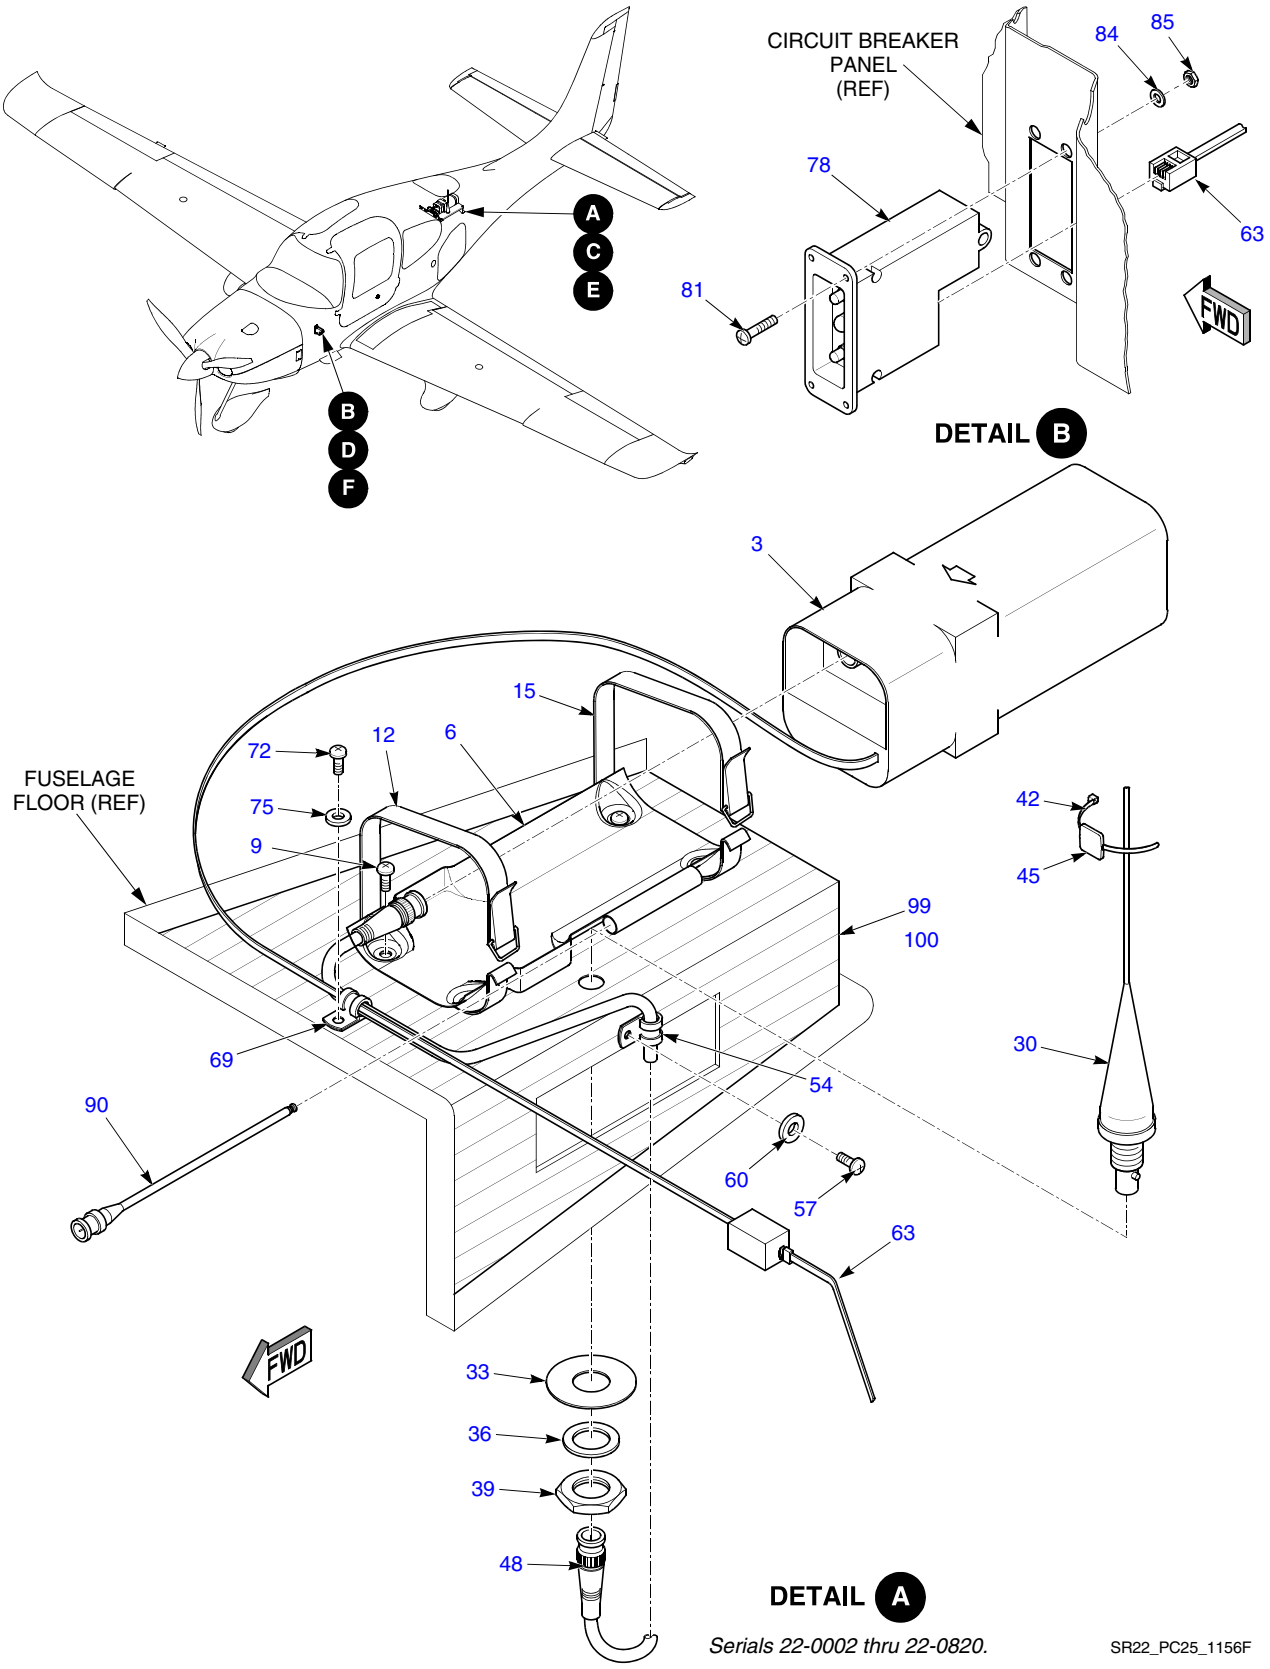

Figure-01

ELT - Serials 22-0002 thru 22-0820 (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

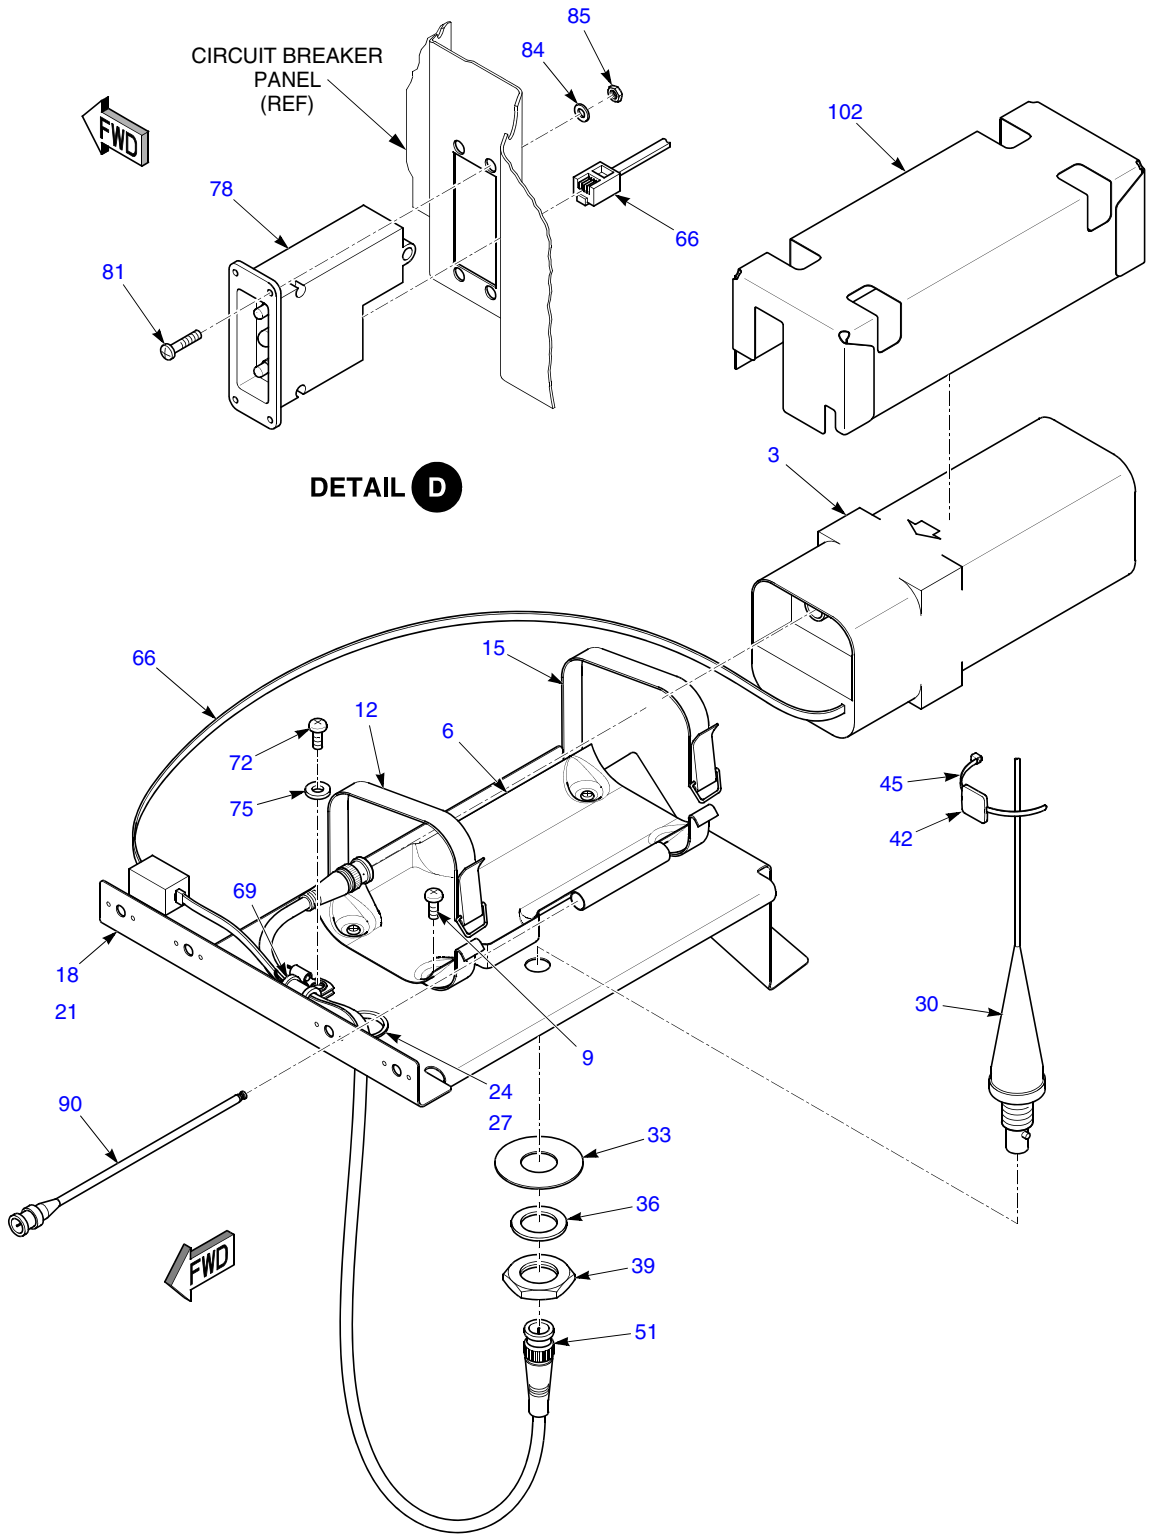

Serials 22-0821 thru 22-3827 w/ ACK E-01 ELT & w/o Perspective Avionics.

SR22_PC25_1424E

Figure-01

ELT - Serials 22-0821 thru 22-3827 w/ ACK E-01 ELT & w/o Perspective (2 of 3)

EFFECTIVITY:
Serials 22-0821 thru 22-3827 w/ ACK E-01 ELT & w/o Perspective

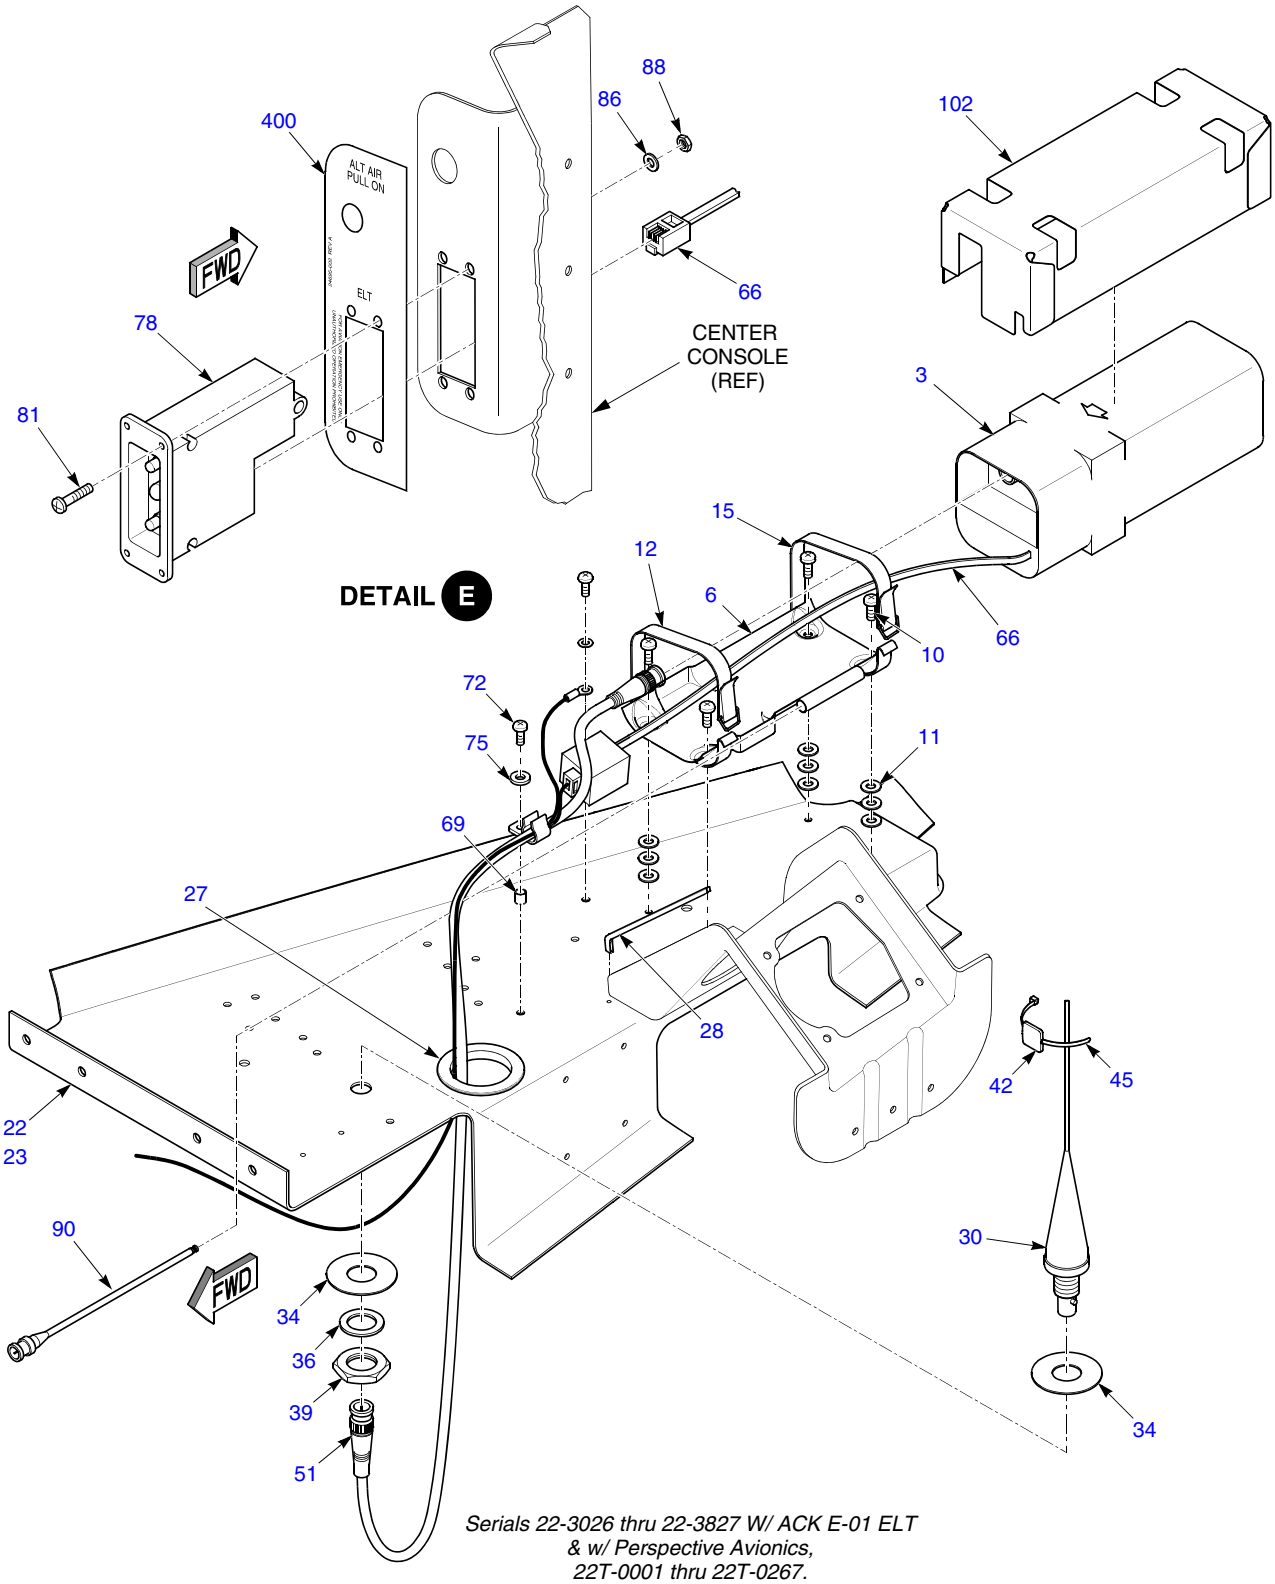

Figure-01

ELT - Serials 22-3026 - 22-3827 w/ ACK E-01 ELT & w/ Perspective, 22T-0001 - 22T-0267 (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ELT INSTALLATION W/ 121.5 MHZ ELT	0002 / 0001	3827 / 0267	NP
	3	12756-050			·ELT	0002 / 0001	3827 / 0267	1
	6	12756-101		A	·ELT MOUNTING TRAY	0002 / 0001	3827 / 0267	1
	9	MS35206-245	#	A	·SCREW	0002 / 0001	3827 / 0267	4
	10	MS35206-246	$	A	·SCREW	3026 / 0001	3827 / 0267	4
	11	NAS1149FN832P	$	A	·WASHER	3026 / 0001	3827 / 0267	9
	12	12756-102			··ELT MOUNTING STRAP, FRONT	0002 / 0001	3827 / 0267	1
	15	12756-103			··ELT MOUNTING STRAP, BATTERY	0002 / 0001	3827 / 0267	1
	18	20096-001			·ELT SHELF	0821	1862	1
	21	20096-002	#		·ELT SHELF	1863 / 0001	3827 / 0267	1
	22	19551-001	$		·ELT SHELF	3026	3358	1
	23	19696-001	$		·ELT SHELF	3359 / 0001	3827 / 0267	1
	24	MS35489-17			·GROMMET	0821	1862	1
	27	MS35489-27			·GROMMET	1863 / 0001	3827 / 0267	1
	28	MS21266-2N	$		·GROMMET	3026 / 0001	3827 / 0267	AR
	30	12756-104			·ELT ANTENNA	0002 / 0001	3827 / 0267	1
	33	NAS1149F0863P	#	A	·WASHER	0002 / 0001	3827 / 0267	1
			$			3026	3358	
	34	NAS1149F0832P	$	A	·WASHER	3359 / 0001	3827 / 0267	2
	36	PRT OF ITM 30		A	·WASHER	0002 / 0001	3827 / 0267	1
	39	PRT OF ITM 30		A	·NUT	0002 / 0001	3827 / 0267	1
	42	50132-001		A	·CABLE TIE ANCHOR	0002 / 0001	3827 / 0267	1
	45	50239-020		A	·CABLE TIE	0002 / 0001	3827 / 0267	1
	48	11828-102			·ELT ANTENNA CABLE	0002	0820	1
	51	20220-101			·ELT ANTENNA CABLE	0821 / 0001	3827 / 0267	1
	54	MS21919WDG4		A	·CLAMP	0002	0820	1
	57	MS35206-245		A	·SCREW	0002	0820	1
	60	NAS1149FN832P		A	·WASHER	0002	0820	1
	63	11828-103			·ELT RCPI CONNECTING CABLE	0002	0820	1
	66	20220-102			·ELT RCPI CONNECTING CABLE	0821 / 0001	3827 / 0267	1
	69	MS21919WDG4		A	·CLAMP	0002 / 0001	3827 / 0267	1
	72	MS35206-245		A	·SCREW	0002 / 0001	3827 / 0267	1
	75	NAS1149FN832P		A	·WASHER	0002 / 0001	3827 / 0267	1
	78	12756-106			·ELT REMOTE CONTROL PANEL/INDICATOR (RCPI)	0002 / 0001	3827 / 0267	1
	81	MS35214-14		A	·SCREW	0002 / 0001	3827 / 0267	4
	84	NAS1149FN432P	#	A	·WASHER	0002 / 0001	3827 / 0267	4
	85	MS21044N04	#	A	·NUT	0002 / 0001	3827 / 0267	4
	86	NAS620-4	$	A	·WASHER	3026 / 0001	3827 / 0267	4
	88	MS21042-04	$	A	·NUT	3026 / 0001	3827 / 0267	4
	90	12756-105			·ELT PORTABLE ANTENNA	0002 / 0001	3827 / 0267	1
-	93	50478-001			·BATTERY, ELT, "D" CELL	0002 / 0001	3827 / 0267	8
-	96	50479-001			·BATTERY, RCPI, LITHIUM CELL	0002 / 0001	3827 / 0267	1
	99	50379-002			·TAPE, TIN PLATED COPPER, (4")	0002	0820	AR
					ALTERNATE FOR P/N 54506-001			
	100	54506-001			·TAPE, ALUMINUM, CONDUCTIVE ADHESIVE	0002	0820	AR
					ALTERNATE FOR P/N 50379-002			
	102	18389-001			·ELT SHIELD	2578 / 0001	3827 / 0267	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 11-30-01 DET			INTERIOR PLACARDS AND OVERLAYS			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
			$		SERIAL NUMBERS W/ PERSPECTIVE AVIONICS.			
			#		SERIAL NUMBERS W/O PERSPECTIVE AVIONICS.			

Intentionally Left Blank

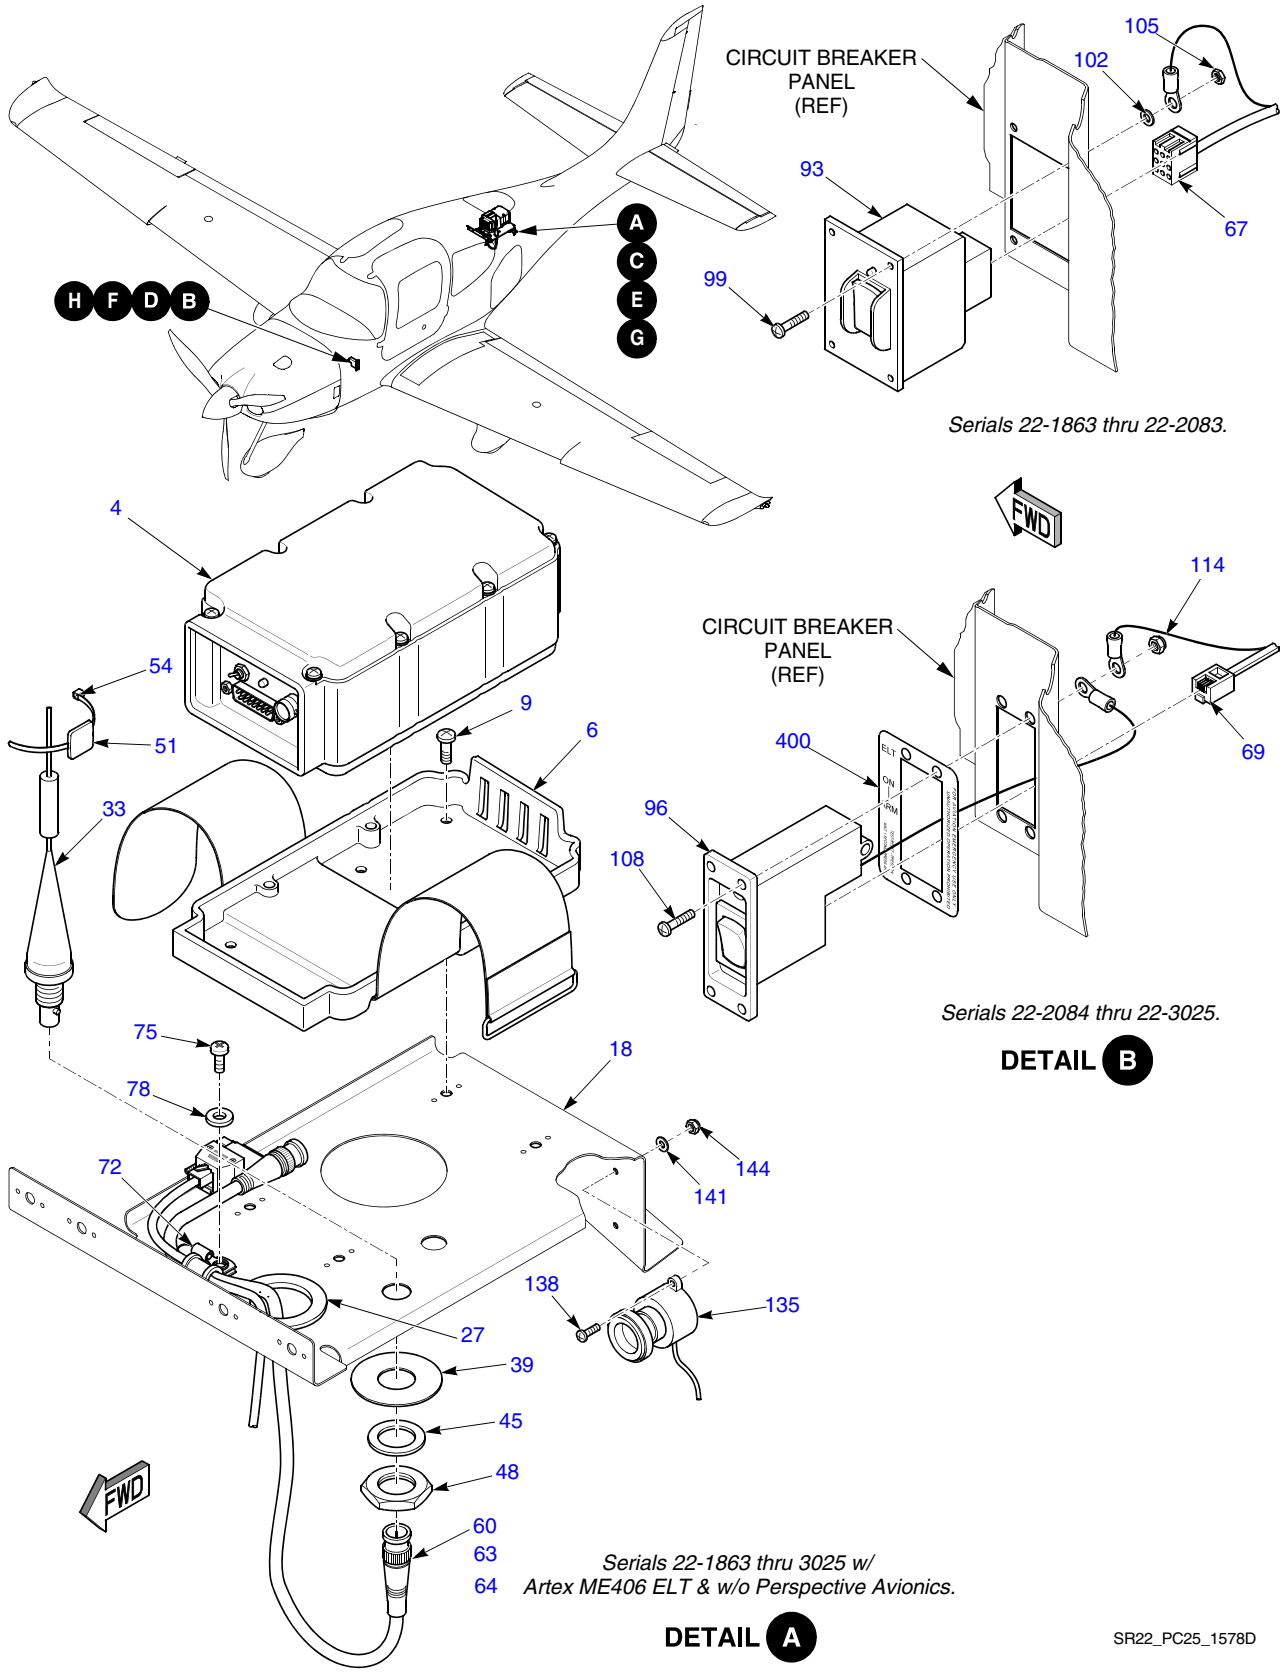

Figure-02

Artex ME406 ELT Installation - Serials 22-1863 thru 3025 w/o Perspective Avionics (1 of 4)

EFFECTIVITY:
Serials 22-1863 thru 3025 w/o Perspective Avionics

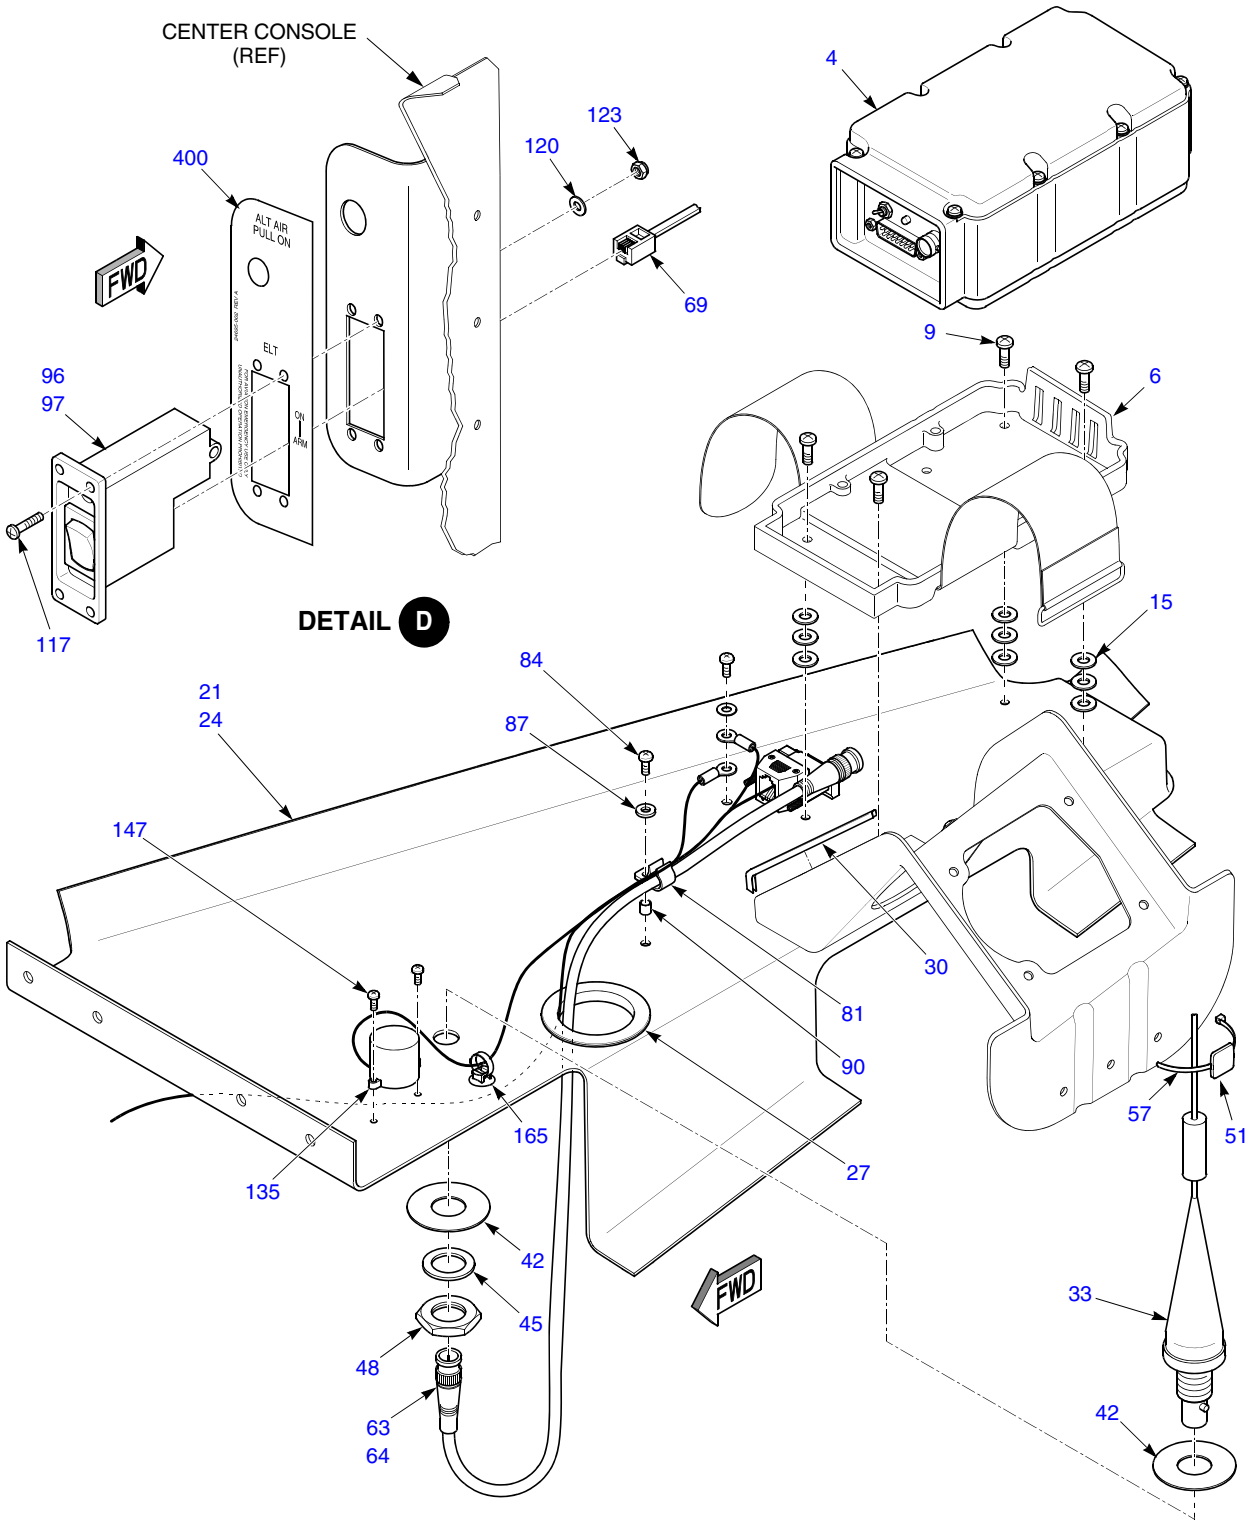

Serials 22-3026 thru 22-4030, 22-4032, 22-4045, 22T-0001 thru 0689 w/ Artex ME406 ELT.

SR22_PC25_2149B

Figure-02

Artex ME406 ELT Installation - Serials w/ Perspective Avionics (2 of 4)

EFFECTIVITY:
All

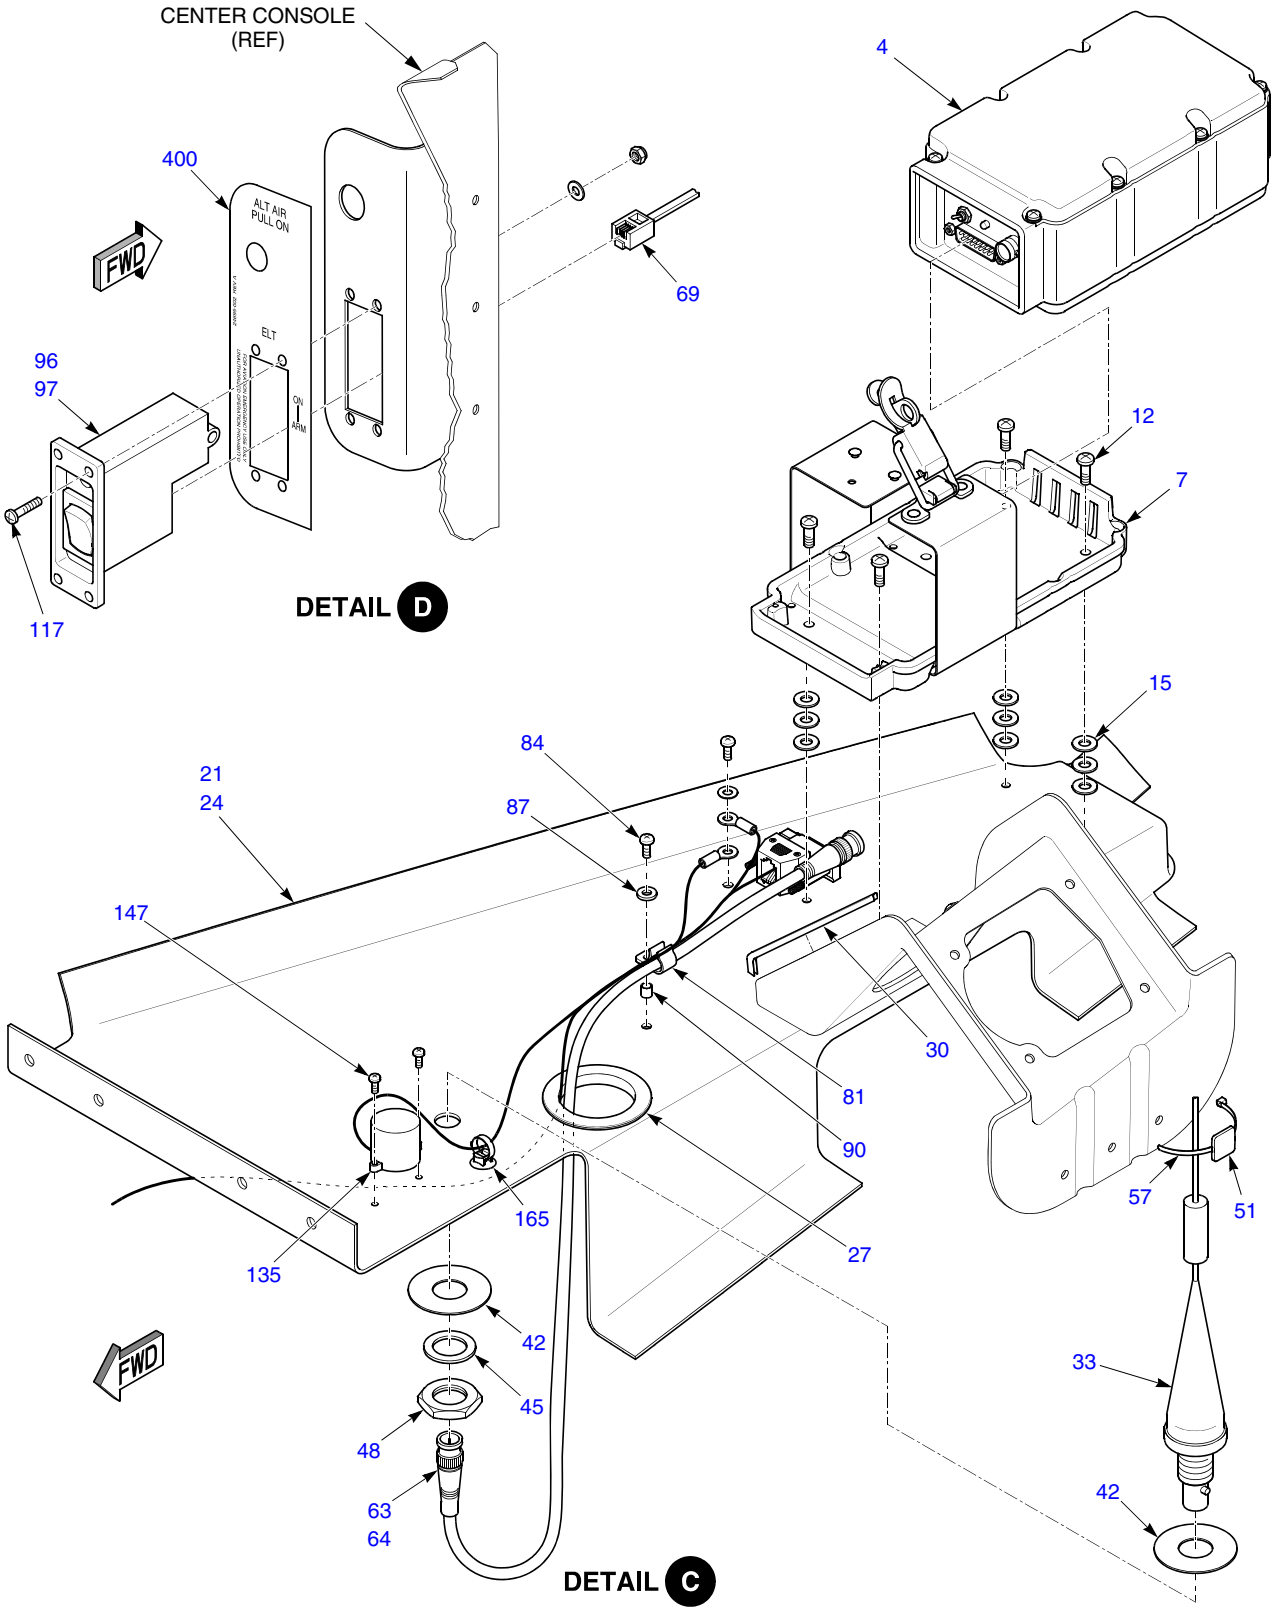

Serials 22-3026 thru 22-4163 w/ Artex ME406 ELT & w/ Perspective Avionics, 22T-0001 thru 22T-0962.

SR22_PC25_1772E

Figure-02

Artex ME406 ELT Installation - Serials w/ Perspective Avionics (3 of 4)

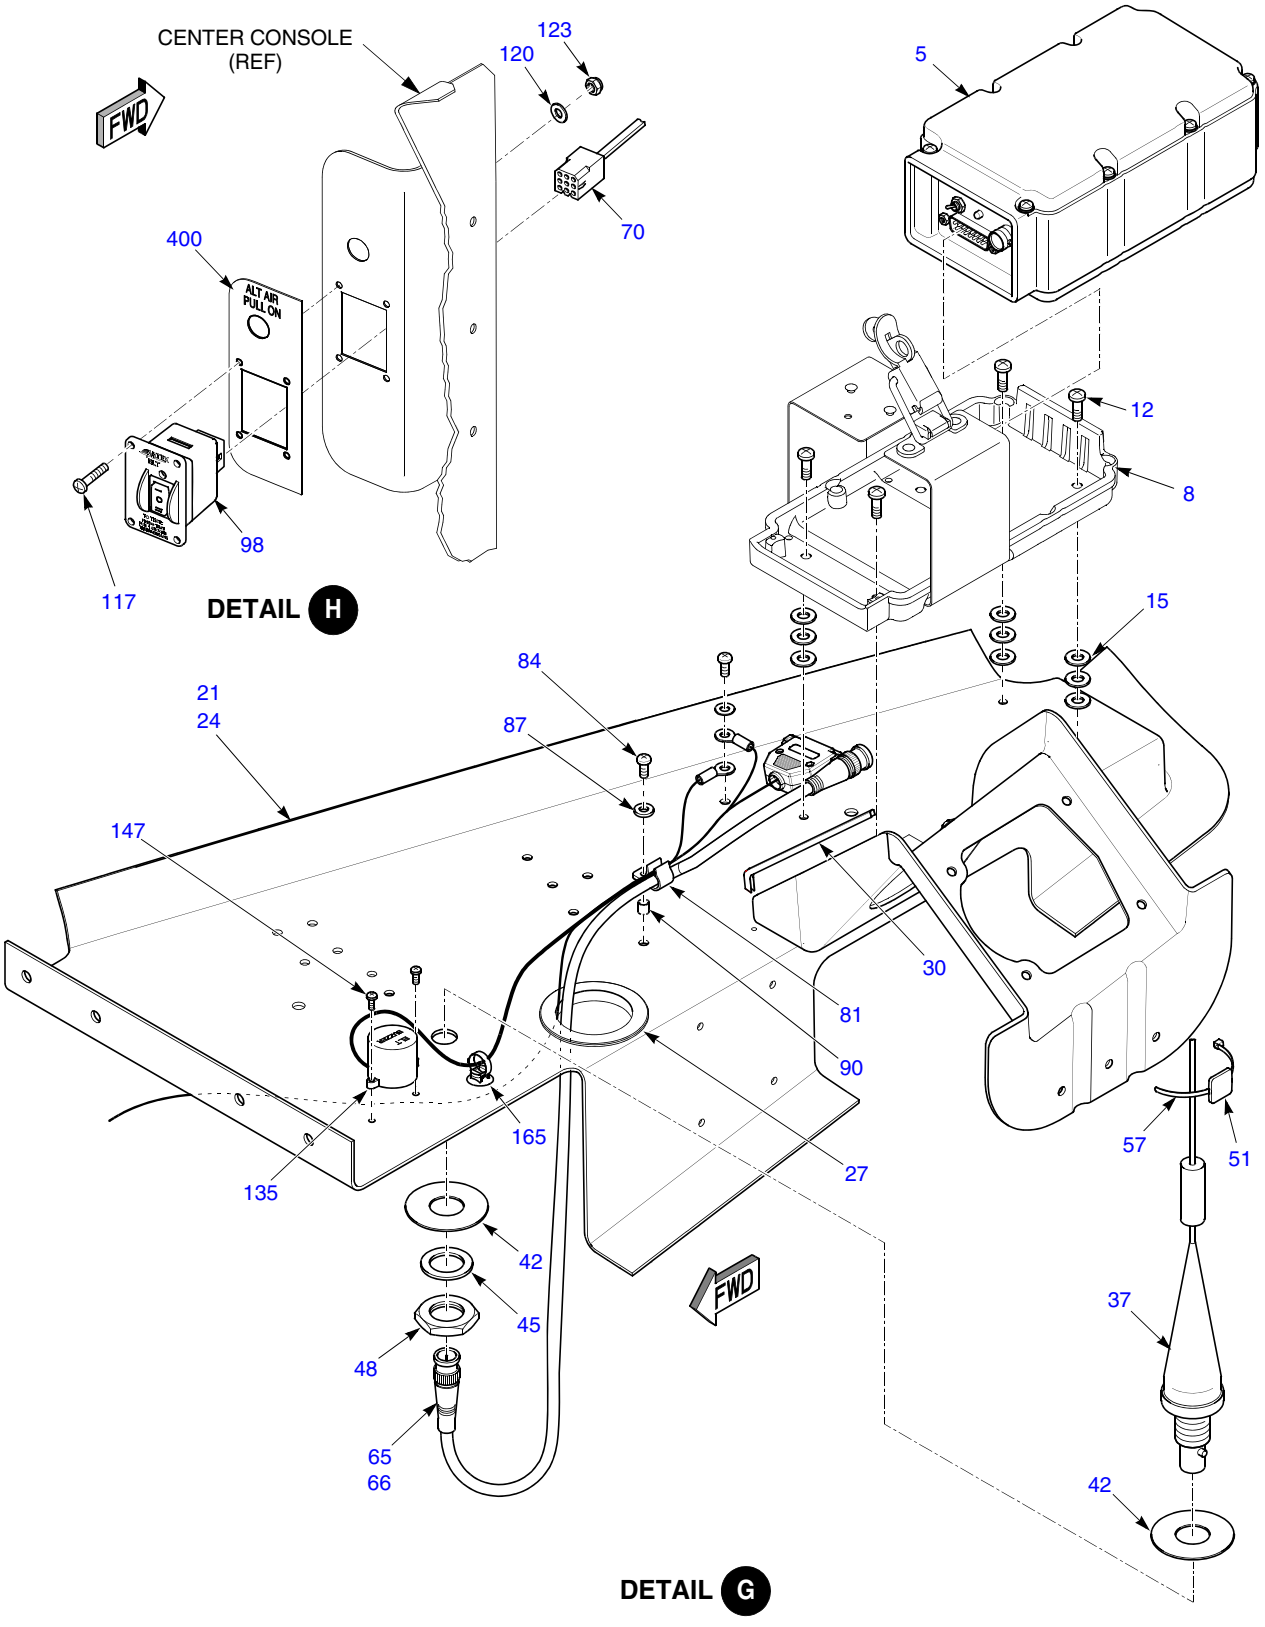

Serials 22-4164 & subs, 22T-0963 & subs.

Figure-02

ELT 1000 Installation - Serials 22-4164 & subs, 22T-0963 & subs (4 of 4)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		ELT INSTALLATION W/ 406 MHZ ELT	1863 / 0001	/	NP
-	3	17190-100			·ELT	1863 / 0001	3700 / 0028	1
					FOR SPARES USE P/N 17190-101			
	4	17190-101			·ELT	3701 / 0029	4163 0962	1
	5	33940-001			·ELT1000	4164 / 0963		1
-	6	17190-220			·ELT MOUNTING TRAY	1863 / 0001	4045 / 0689	1
					FOR SPARES USE P/N 17190-221			
	7	17190-221			·ELT MOUNTING TRAY	4046 / 0690	4163 / 0962	1
	8	33940-010			·ELT MOUNTING TRAY	4164 / 0963		
	9	MS35206-245	#	A	·SCREW	1863		4
	12	MS35206-246	$	A	·SCREW	3026 / 0001	/	4
	15	NAS1149FN832P	$	A	·WASHER	3026 / 0001	/	9
	18	20096-002	#		·ELT SHELF	1863		1
	21	19551-001	$		·ELT SHELF	3026	3358	1
	24	19696-001	$		·ELT SHELF	3359 / 0001	/	1
	27	MS35489-27			·GROMMET	1863 / 0001	/	1
	30	MS21266-2N	$		·GROMMET	3026 / 0001	/	AR
	33	17190-120			·ELT ANTENNA	1863 / 0001	4163 / 0962	1
					ALTERNATE FOR P/N 17190-121			
-	36	17190-121			·ELT ANTENNA	1863 / 0001	4163 / 0962	1
					ALTERNATE FOR P/N 17190-120			
	37	33940-012			·ELT ANTENNA	4164 / 0963		1
	39	NAS1149F0863P	#	A	·WASHER	1863		1
			$			3026	3358	
	42	NAS1149F0832P	$	A	·WASHER	3359 / 0001	/	2
	45	PRT OF ITM 33		A	·WASHER	1863 / 0001	/	1
	48	PRT OF ITM 33		A	·NUT	1863 / 0001	/	1
	51	50132-001		A	·CABLE TIE ANCHOR	1863 / 0001	/	1
	54	50239-020	#	A	·CABLE TIE	1863		1
	57	50239-010	$	A	·CABLE TIE	3026 / 0001	/	1
	60	17190-200			·ELT ANTENNA CABLE	1863	2083	1
	63	17190-202			·ELT ANTENNA CABLE	2084 / 0001	4136 / 0932	1
					ALTERNATE FOR P/N 24698-001			
	64	24698-001			·ELT ANTENNA CABLE	2084 / 0001	4163 / 0962	1
					ALTERNATE FOR P/N 17190-202			
	65	33938-010			·ELT ANTENNA CABLE	4164 / 0963	4326 / 1297	1
	66	33938-011			·ELT ANTENNA CABLE	4327 / 1298		1
	67	17191-101			·ELT RCPI CONNECTING CABLE	1863	2083	1
	69	17191-102			·ELT RCPI CONNECTING CABLE	2084 / 0001	4163 / 0962	1
	70	33938-001			·ELT RCPI CONNECTING CABLE	4164 / 0963		
	72	MS21919WDG4	#	A	·CLAMP	1863		1
	75	MS35206-245	#	A	·SCREW	1863		1
	78	NAS1149FN832P	#	A	·WASHER	1863		1
	81	51734-002	$	A	·CLAMP	3026 / 0001	/	1
	84	MS35206-248	$	A	·SCREW	3026 / 0001	/	1
	87	NAS1149FN832P	$	A	·WASHER	3026 / 0001	/	1
	90	NAS43DD3-20FC	$	A	·SPACER	3026 / 0001	/	1
	93	17190-180			·ELT REMOTE CONTROL PANEL/INDICATOR (RCPI)	1863	2083	1
	96	17190-312			·ELT REMOTE CONTROL PANEL/INDICATOR (RCPI)	2084 / 0001	3612 / 0001	1
	97	17190-313			·ELT REMOTE CONTROL PANEL/INDICATOR (RCPI)	3613 / 0002	4163 / 0932	1
	98	33940-011			·ELT REMOTE CONTROL PANEL/INDICATOR (RCPI)	4164 / 0963	/	1
	99	PRT OF ITM 93		A	·SCREW	1863	2083	4
	102	PRT OF ITM 93		A	·WASHER	1863	2083	4

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	105	PRT OF ITM 93		A	·NUT	1863	2083	4
	108	17190-342	#	A	·SCREW	2084		4
					ALTERNATE FOR P/N 17190-343			
-	111	17190-343	#	A	·SCREW	2084		4
					ALTERNATE FOR P/N 17190-342			
	114	17190-352	#	A	·NUT	2084		4
	117	MS35214-14	$	A	·SCREW	3026 / 0001	/	4
	120	NAS620-4	$	A	·WASHER	3026 / 0001	/	4
	123	MS21042-04	$	A	·NUT	3026 / 0001	/	4
	135	17190-140			·BUZZER	1863 / 0001	/	1
	138	MS51957-16	#	A	·SCREW	1863		2
	141	NAS1149FN432P	#	A	·WASHER	1863		2
	144	MS21083-N04	#	A	·NUT	1863		2
	147	MS35206-218	$	A	·SCREW	3026 / 0001	/	2
-	150	455-0012			·BATTERY PACK, ELT, LITHIUM-MANGANESE DIOXIDE	1863	2083	1
					FOR SPARES USE P/N 452-6499			
-	153	452-6499			·BATTERY PACK, ELT, LITHIUM CELL	1863 / 0001	4163 / 0962	1
-	154	8302			·BATTERY PACK, ELT, LITHIUM CELL	4164 / 0963		1
-	156	131-0001			·BATTERY, RCPI, LITHIUM CELL	2084 / 0001	/	1
-	162	51900-002	$		·EDGE CLIP ANCHOR	3026 / 0001	/	1
	165	53019-001	$		·CABLE TIE MOUNT	3026 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 11-30-01 DET			INTERIOR PLACARDS AND OVERLAYS			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-4031, 22-4033; REFER TO 22-4046 FOR PART IDENTIFICATION.			
			$		SERIAL NUMBERS W/ PERSPECTIVE AVIONICS.			
			#		SERIAL NUMBERS W/O PERSPECTIVE AVIONICS.			

EFFECTIVITY:
All

CHAPTER

26

FIRE PROTECTION

Intentionally Left Blank

CHAPTER 26 - FIRE PROTECTION

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
26-LOEP	1	01 JAN 2016
26-LOEP	2	01 JAN 2016
26-TOC	1	01 JAN 2016
26-TOC	2	01 JAN 2016
26-20-01	1	15 DEC 2014
26-20-01	2	01 JAN 2016
26-20-01	3	01 JAN 2016
26-20-01	4	15 DEC 2014

Intentionally Left Blank

EFFECTIVITY:
All

CHAPTER 26 - FIRE PROTECTION

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Fire Extinguisher - Serials 22-0002 thru 22-1862 (1 of 2)	26-20-01
Fire Extinguisher - Serials 22-1863 & subs, 22T-0001 & subs (2 of 2)	26-20-01

Intentionally Left Blank

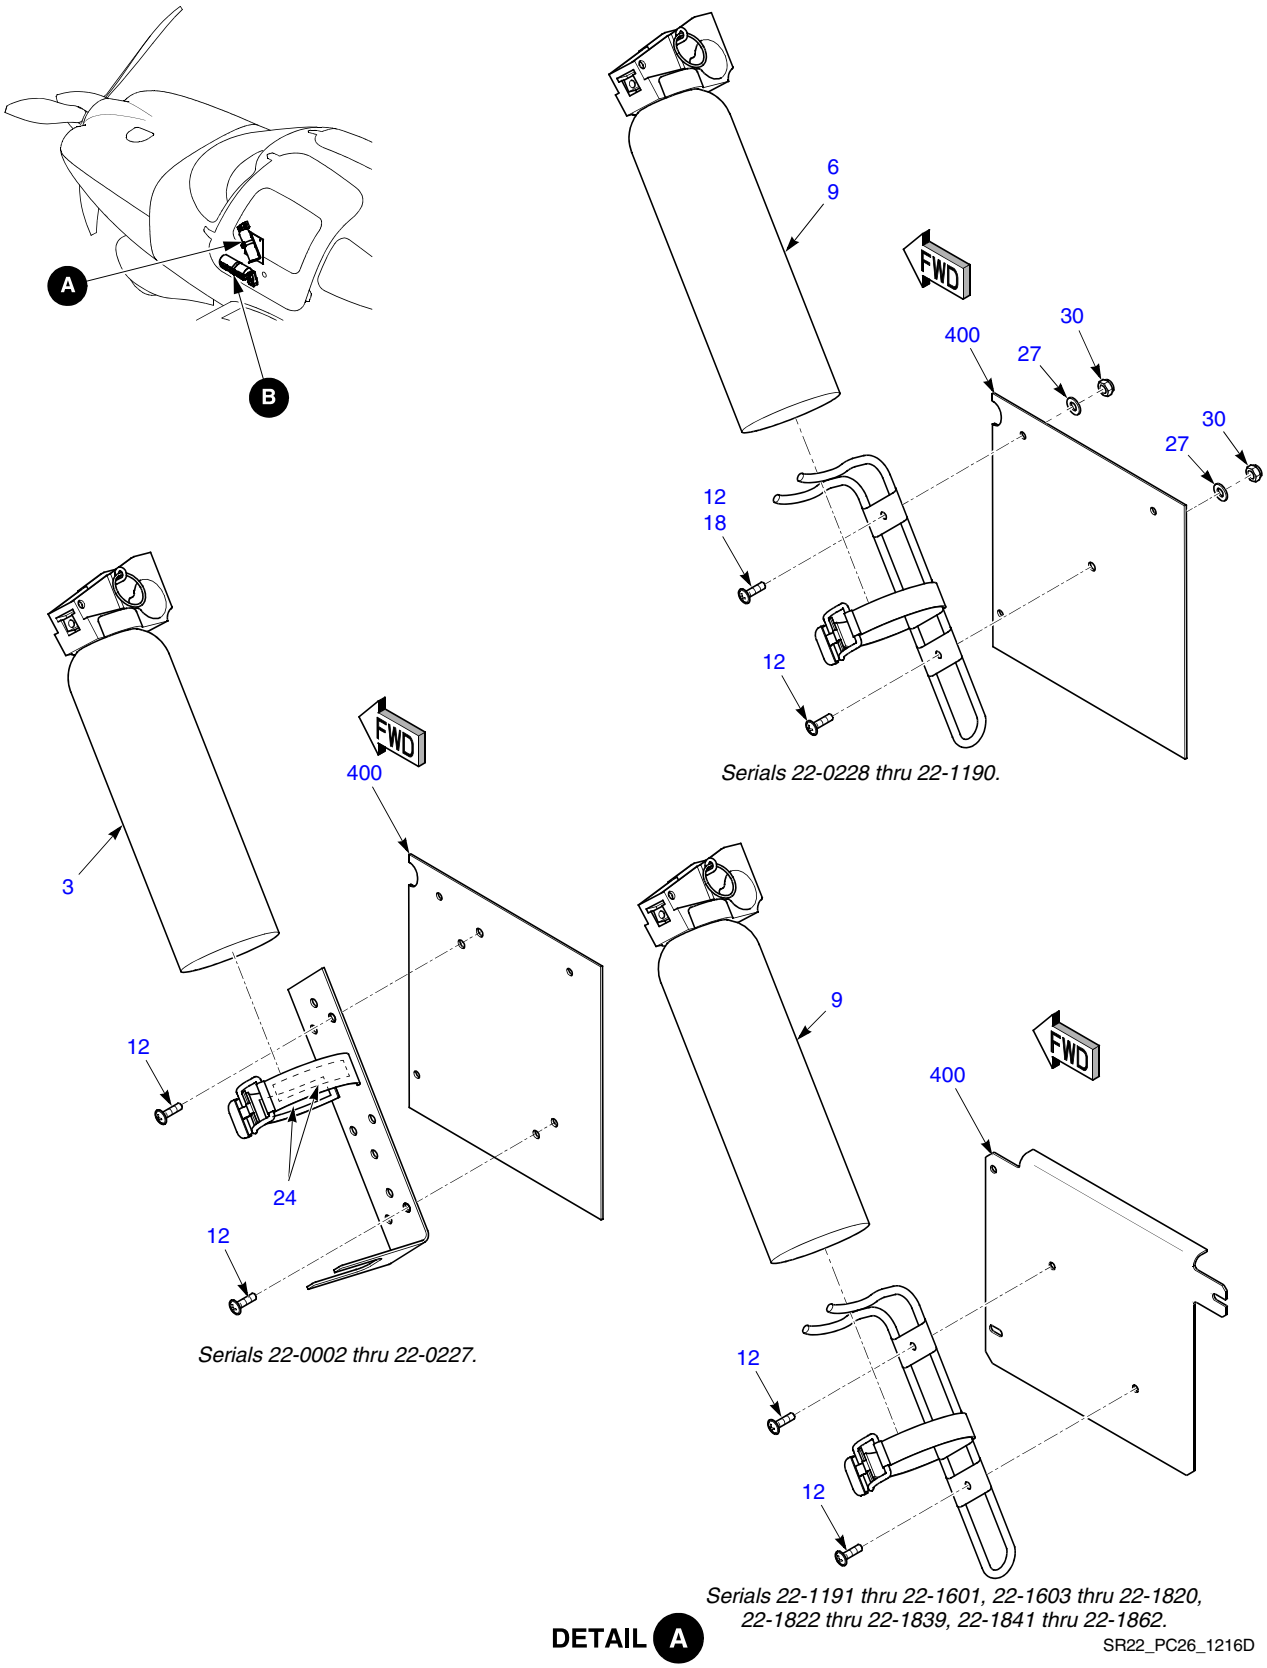

Figure-01

Fire Extinguisher - Serials 22-0002 thru 22-1862 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-1862

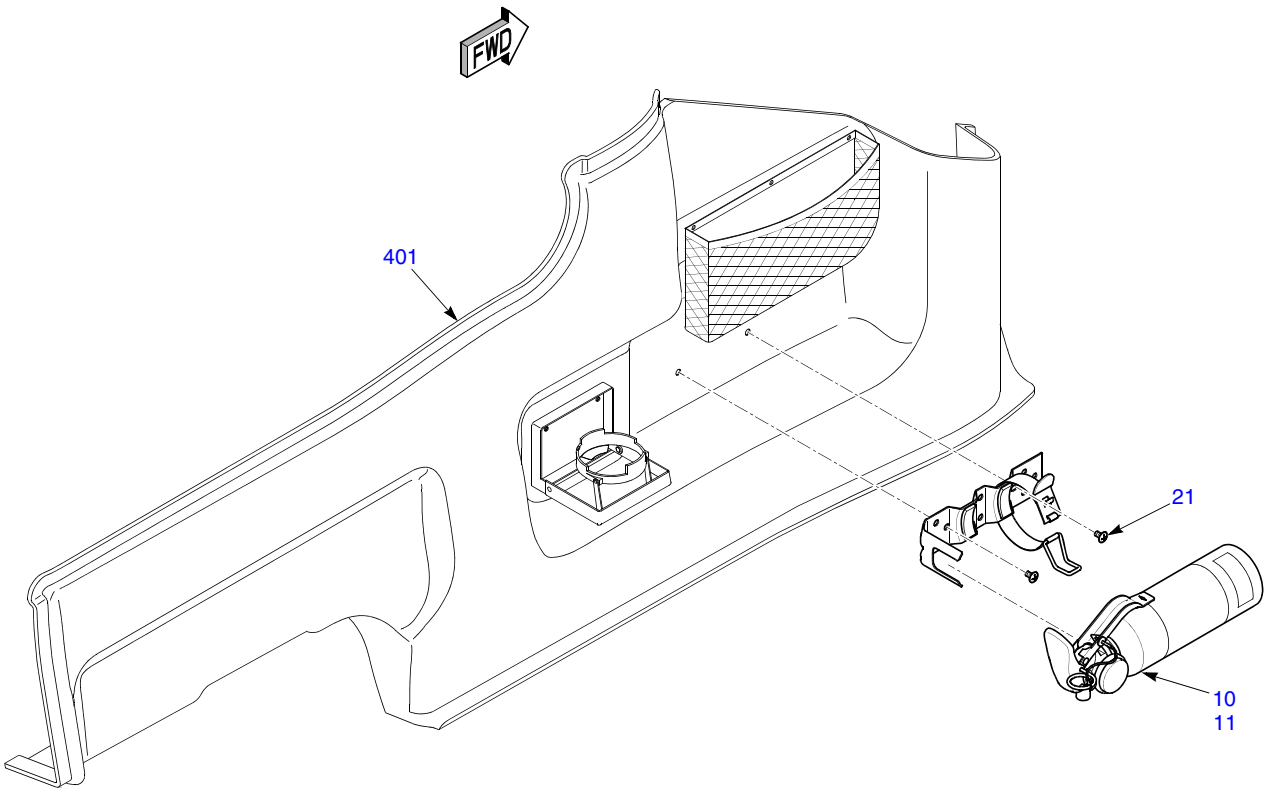

Serials 1633, 1639 & subs.

DETAIL B

SR22_PC26_1555B

Figure-01

Fire Extinguisher - Serials 22-1863 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-1863 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FIRE EXTINGUISHER INSTALLATION	0002 / 0001	/	NP
	3	12533-001			·FIRE EXTINGUISHER	0002	0227	1
					FOR SPARES USE P/N 12533-004			
	6	12533-002			·FIRE EXTINGUISHER	0228	0809	1
					FOR SPARES USE P/N 12533-004			
-	9	12533-003			·FIRE EXTINGUISHER	0810 / 0001	4195 / 1032	1
					FOR SPARES USE P/N 12533-004			
	10	12533-004			·FIRE EXTINGUISHER	4196 / 1033	/	1
					ALTERNATE FOR 12533-005			
	11	12533-005			·FIRE EXTINGUISHER	4196 / 1033	/	1
					ALTERNATE FOR 12533-004			
	12	AN525-10R10		A	·SCREW	0002	0227	4
						0228	0809	1
						0810	1862	2
					ALTERNATE FOR P/N MS24693-S273			
-	15	MS24693-S273		A	·SCREW	0810	1862	2
					ALTERNATE FOR P/N AN525-10R10			
	18	MS51861-49		A	·SCREW	0228	0809	1
	21	AN525-10R6		A	·SCREW	1863 / 0001	/	2
	24	50457-001		A	·FOAM TAPE	0002	0227	AR
	27	NAS1149F0332P		A	·WASHER	0810	1190	2
	30	MS21044N3		A	·NUT	0810	1190	2
					REFERENCE ITEMS NOT PART OF ASSY/INSTL			
	400	RF 25-10-04 DET			INTERIOR TRIM, LOWER PANEL, AFT CONSOLE, LH			
	401	RF 25-10-05 DET			SIDE PANEL TRIM INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBERS 1602, 1821, AND 1840, REFER TO 22-1863 FOR PART IDENTIFICATION.			

Intentionally Left Blank

CHAPTER

27

FLIGHT CONTROLS

Intentionally Left Blank

CHAPTER 27 - FLIGHT CONTROLS
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
27-LOEP	1	04 SEP 2018
27-LOEP	2	04 SEP 2018
27-LOEP	3	04 SEP 2018
27-LOEP	4	04 SEP 2018
27-TOC	1	04 SEP 2018
27-TOC	2	04 SEP 2018
27-00-01	1	15 DEC 2014
27-00-01	2	15 DEC 2014
27-00-02	1	15 DEC 2014
27-00-02	2	15 DEC 2014
27-00-02	3	15 DEC 2014
27-00-02	4	15 DEC 2014
27-00-02	5	15 DEC 2014
27-00-02	6	15 DEC 2014
27-00-02	7	15 DEC 2014
27-00-02	8	15 DEC 2014
27-00-02	9	15 DEC 2014
27-00-02	10	15 DEC 2014
27-00-03	1	15 DEC 2014
27-00-03	2	15 DEC 2014
27-00-03	3	15 DEC 2014
27-00-03	4	15 DEC 2014
27-00-04	1	15 DEC 2014
27-00-04	2	15 DEC 2014
27-00-04	3	15 DEC 2014
27-00-04	4	15 DEC 2014
27-00-04	5	15 DEC 2014
27-00-04	6	15 DEC 2014
27-00-05	1	15 DEC 2014
27-00-05	2	15 DEC 2014
27-00-05	3	15 DEC 2014
27-00-05	4	15 DEC 2014
27-00-05	5	15 DEC 2014
27-00-05	6	15 DEC 2014
27-10-01	1	15 DEC 2014
27-10-01	2	15 DEC 2014
27-10-02	1	15 DEC 2014
27-10-02	2	15 DEC 2014
27-10-02	3	15 DEC 2014
27-10-02	4	15 DEC 2014

CHAPTER 27 - FLIGHT CONTROLS
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
27-10-03	1	15 DEC 2014
27-10-03	2	15 DEC 2014
27-10-03	3	15 DEC 2014
27-10-03	4	15 DEC 2014
27-10-04	1	15 DEC 2014
27-10-04	2	15 DEC 2014
27-10-04	3	15 DEC 2014
27-10-04	4	15 DEC 2014
27-10-04	5	15 DEC 2014
27-10-04	6	15 DEC 2014
27-20-01	1	15 DEC 2014
27-20-01	2	15 DEC 2014
27-20-01	3	15 DEC 2014
27-20-01	4	15 DEC 2014
27-20-02	1	15 DEC 2014
27-20-02	2	15 DEC 2014
27-20-02	3	15 DEC 2014
27-20-02	4	15 DEC 2014
27-20-03	1	15 DEC 2014
27-20-03	2	15 DEC 2014
27-20-04	1	15 DEC 2014
27-20-04	2	15 DEC 2014
27-20-05	1	15 DEC 2014
27-20-05	2	15 DEC 2014
27-30-01	1	15 DEC 2014
27-30-01	2	15 DEC 2014
27-30-01	3	15 DEC 2014
27-30-01	4	15 DEC 2014
27-30-02	1	15 DEC 2014
27-30-02	2	04 SEP 2018
27-30-02	3	15 DEC 2014
27-30-02	4	15 DEC 2014
27-30-03	1	15 DEC 2014
27-30-03	2	15 DEC 2014
27-30-03	3	15 DEC 2014
27-30-03	4	15 DEC 2014
27-31-01	1	15 DEC 2014
27-31-01	2	15 DEC 2014
27-31-01	3	04 SEP 2018
27-31-01	4	04 SEP 2018

EFFECTIVITY:
All

CHAPTER 27 - FLIGHT CONTROLS
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
27-31-01	5	04 SEP 2018
27-31-01	6	15 DEC 2014
27-50-01	1	04 SEP 2018
27-50-01	2	15 DEC 2014
27-50-01	3	15 DEC 2014
27-50-01	4	15 DEC 2014
27-50-01	5	15 DEC 2014
27-50-01	6	15 DEC 2014
27-50-01	7	15 DEC 2014
27-50-01	8	19 SEP 2017
27-50-01	9	19 SEP 2017
27-50-01	10	19 SEP 2017
27-50-01	11	19 SEP 2017
27-50-01	12	19 SEP 2017

Intentionally Left Blank

CHAPTER 27 - FLIGHT CONTROLS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Flight Controls	27-00-01
Flight Controls: Console - Serials 22-0002 thru 22-0497 (1 of 6)	27-00-02
Flight Controls: Console - Serials 22-0002 thru 22-0497 (2 of 6)	27-00-02
Flight Controls: Console - Serials 22-0002 thru 22-0497 (3 of 6)	27-00-02
Flight Controls: Console - Serials 22-0498 & subs, 22T-0001 & subs (4 of 6)	27-00-02
Flight Controls: Console - Serials 22-0498 & subs, 22T-0001 & subs (5 of 6)	27-00-02
Flight Controls: Console - Serials 22-0498 & subs, 22T-0001 & subs (6 of 6)	27-00-02
Yoke Grip Assembly	27-00-03
Yoke Assembly - Serials 22-0002 thru 22-0497 (1 of 2)	27-00-04
Yoke Assembly - Serials 22-0498 & subs, 22T-0001 & subs (2 of 2)	27-00-04
Flight Controls: Empennage - Serials 22-0002 thru 22-0497 (1 of 3)	27-00-05
Flight Controls: Empennage - Serials 22-0002 thru 22-0497 (2 of 3)	27-00-05
Flight Controls: Empennage - Serials 22-0498 & subs, 22T-0001 & subs (3 of 3)	27-00-05
Aileron System Cables	27-10-01
Aileron System Pulleys	27-10-02
Roll Trim System	27-10-03
Roll Relay Assembly - Serials 22-0002 thru 22-0820 (1 of 4)	27-10-04
Roll Relay Assembly - Serials 22-0821 & subs w/o Perspective Avionics (2 of 4)	27-10-04
Roll Relay Assembly - Serials 22-3026 & subs, 22T-0001 & subs w/ Perspective (3 of 4)	27-10-04
Roll Relay Assembly - Serials 22-3446 & subs, 22T-0001 & subs w/ System 55X & Persp (4 of 4)	27-10-04
Rudder System Cables - Serials 22-0002 thru 22-0497 (1 of 2)	27-20-01
Rudder System Cables - Serials 22-0498 & subs, 22T-0001 & subs (2 of 2)	27-20-01
Rudder Pedal	27-20-02
Rudder/Elevator Pulley Gang	27-20-03
Rudder-Aileron Interconnect - Serials 22-0002 thru 22-2437	27-20-04
Electric Rudder Trim - Serials 22-0004 thru 22-0168	27-20-05
Elevator System Cables - Serials 22-0002 thru 22-0497 (1 of 2)	27-30-01
Elevator System Cables - Serials 22-0498 & subs, 22T-0001 & subs (2 of 2)	27-30-01
Pitch Trim System - Serials 22-0002 thru 22-0497 (1 of 2)	27-30-02
Pitch Trim System - Serials 22-0498 & subs, 22T-0001 & subs (2 of 2)	27-30-02
Pitch Relay Assembly - Serials 22-0002 thru 22-0820 (Sheet 1 of 3)	27-30-03
Pitch Relay Assembly - Serials 22-0821 & subs w/o Perspective Avionics (Sheet 2 of 3)	27-30-03
Pitch Relay Assembly - 22-3446 & subs, 22T-0001 & subs w/ Sys 55X & Persp (Sheet 3 of 3)	27-30-03

CHAPTER 27 - FLIGHT CONTROLS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Stall Warning System - Serials 22-0002 & subs, 22T-0001 & subs w/o FIKI (1 of 3)	27-31-01
Stall Warning System - Serials 22-0002 & subs, 22T-0001 & subs w/o FIKI (2 of 3)	27-31-01
Stall Warning System - Serials w/ FIKI (3 of 3)	27-31-01
Flap System (1 of 7)	27-50-01
Flap System (2 of 7)	27-50-01
Flap System (3 of 7)	27-50-01
Flap System - Serials 22-0002 thru 22-0820 (4 of 7)	27-50-01
Flap System - Serials 22-0821 & subs w/o Perspective (5 of 7)	27-50-01
Flap System - 22-3026 - 22-3881, 22T-0001 - 22T-0388 w/ System 55X and/or Persp (6 of 7)	27-50-01
Flap System - Serials 22-3882 & subs, 22T-0389 & subs w/ System 55X and/or Persp (7 of 7)	27-50-01

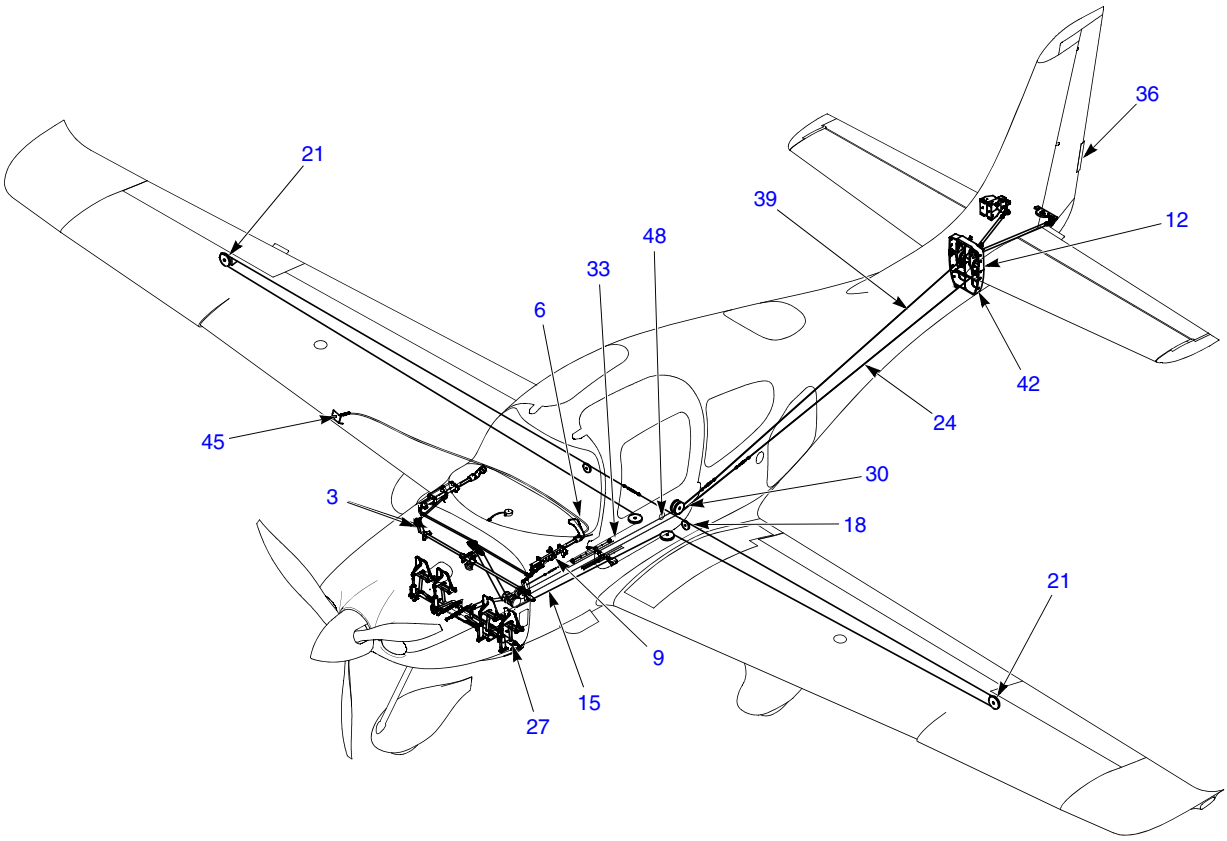

SR22_PC27_1217B

Figure-01
Flight Controls

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			FLIGHT CONTROLS	0002 / 0001	/	NP
	3	RF 27-00-02 DET			·FLIGHT CONTROLS - CONSOLE	0002 / 0001	/	AR
	6	RF 27-00-03 DET			··YOKE GRIP ASSEMBLY	0002 / 0001	/	AR
	9	RF 27-00-04 DET			··YOKE ASSEMBLY	0002 / 0001	/	AR
	12	RF 27-00-05 DET			·FLIGHT CONTROLS - EMPENNAGE	0002 / 0001	/	AR
	15	RF 27-10-01 DET			·AILERON SYSTEM CABLES	0002 / 0001	/	AR
	18	RF 27-10-02 DET			·AILERON SYSTEM PULLEYS	0002 / 0001	/	AR
	21	RF 27-10-03 DET			·ROLL TRIM SYSTEM	0002 / 0001	/	AR
	24	RF 27-20-01 DET			·RUDDER SYSTEM CABLES	0002 / 0001	/	AR
	27	RF 27-20-02 DET			·RUDDER PEDAL	0002 / 0001	/	AR
	30	RF 27-20-03 DET			·RUDDER/ELEVATOR PULLEY GANG	0002 / 0001	/	AR
	33	RF 27-20-04 DET			·RUDDER/AILERON INTERCONNECT	0002	2437	AR
	36	RF 27-20-05 DET			·ELECTRIC RUDDER TRIM	0004	0168	AR
	39	RF 27-30-01 DET			·ELEVATOR SYSTEM CABLES	0002 / 0001	/	AR
	42	RF 27-30-02 DET			·PITCH TRIM SYSTEM	0002 / 0001	/	AR
	45	RF 27-31-01 DET			·STALL WARNING SYSTEM	0002 / 0001	/	AR
	48	RF 27-50-01 DET			·FLAP SYSTEM	0002 / 0001	/	AR

EFFECTIVITY:
All

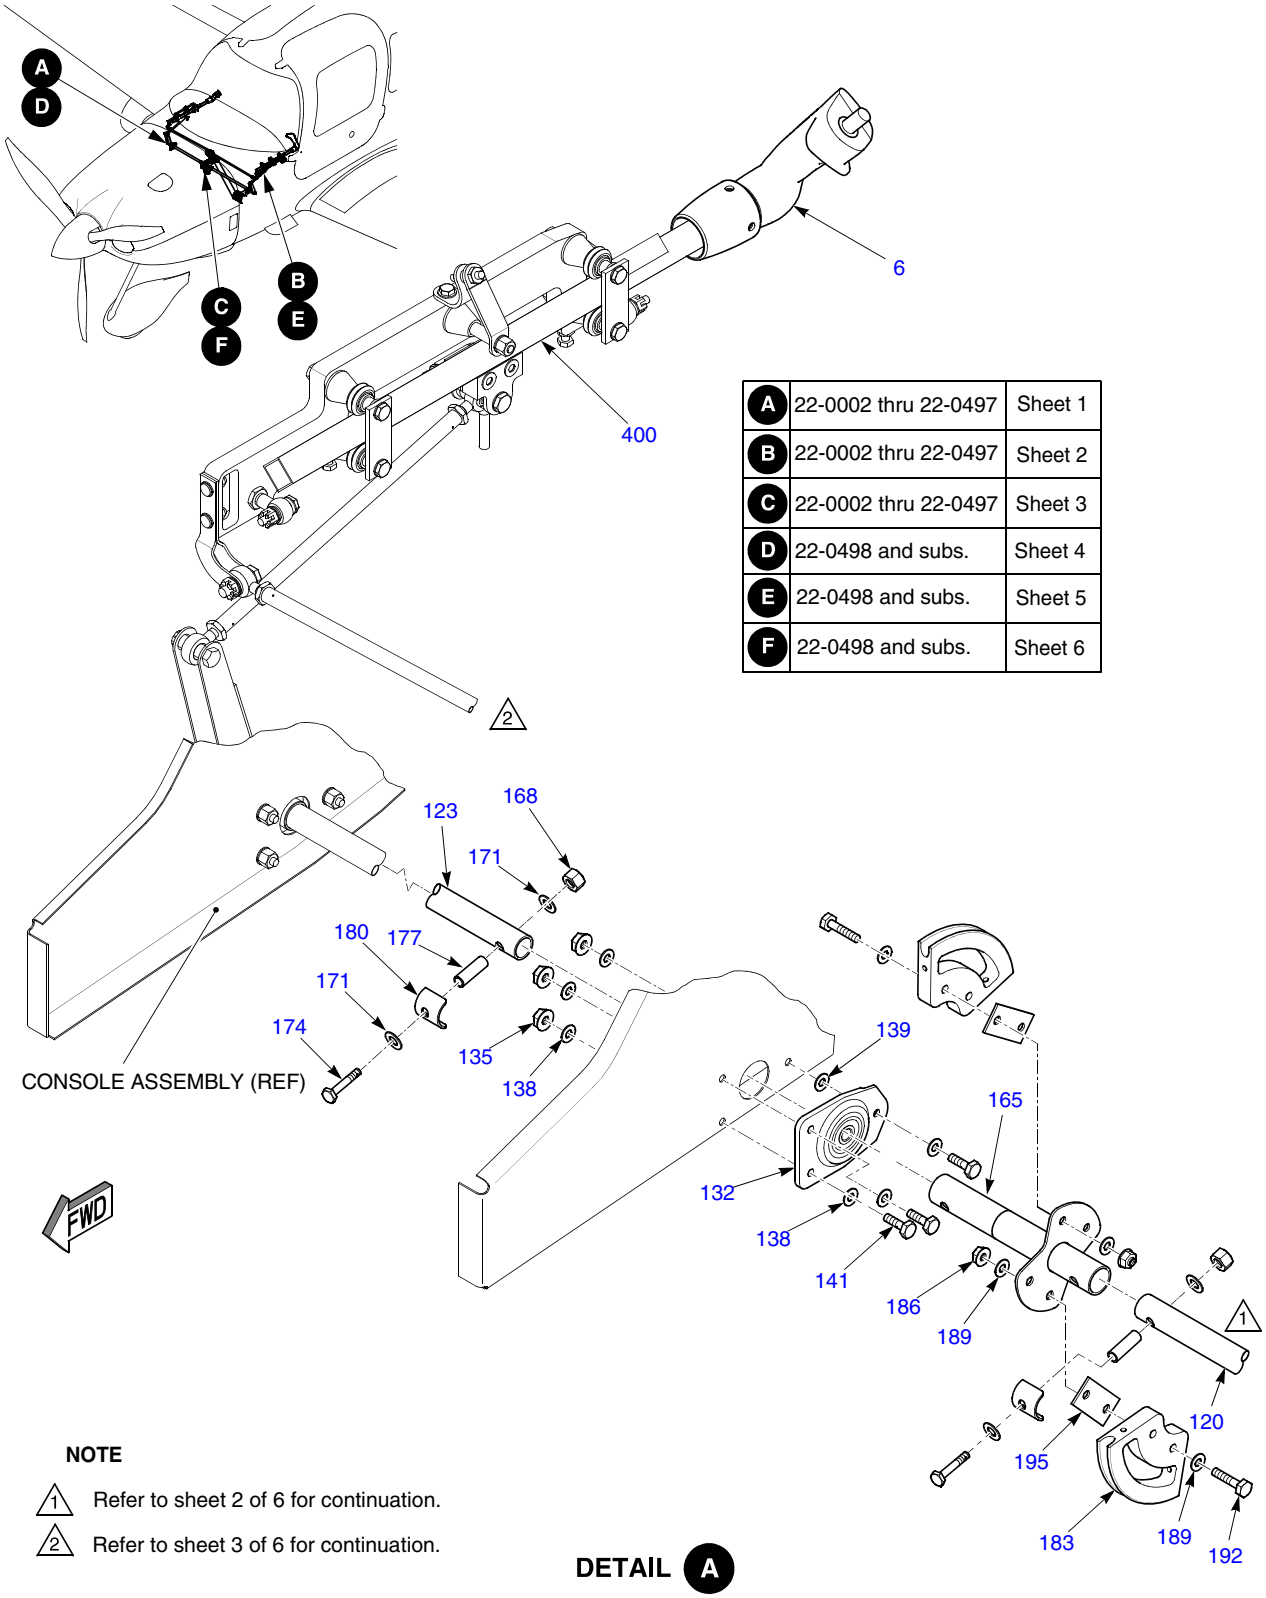

A	22-0002 thru 22-0497	Sheet 1
B	22-0002 thru 22-0497	Sheet 2
C	22-0002 thru 22-0497	Sheet 3
D	22-0498 and subs.	Sheet 4
E	22-0498 and subs.	Sheet 5
F	22-0498 and subs.	Sheet 6

NOTE

1 Refer to sheet 2 of 6 for continuation.

2 Refer to sheet 3 of 6 for continuation.

DETAIL A

Serials 22-0002 thru 22-0497.

SR22_PC27_1218B

Figure-02
Flight Controls: Console - Serials 22-0002 thru 22-0497 (1 of 6)

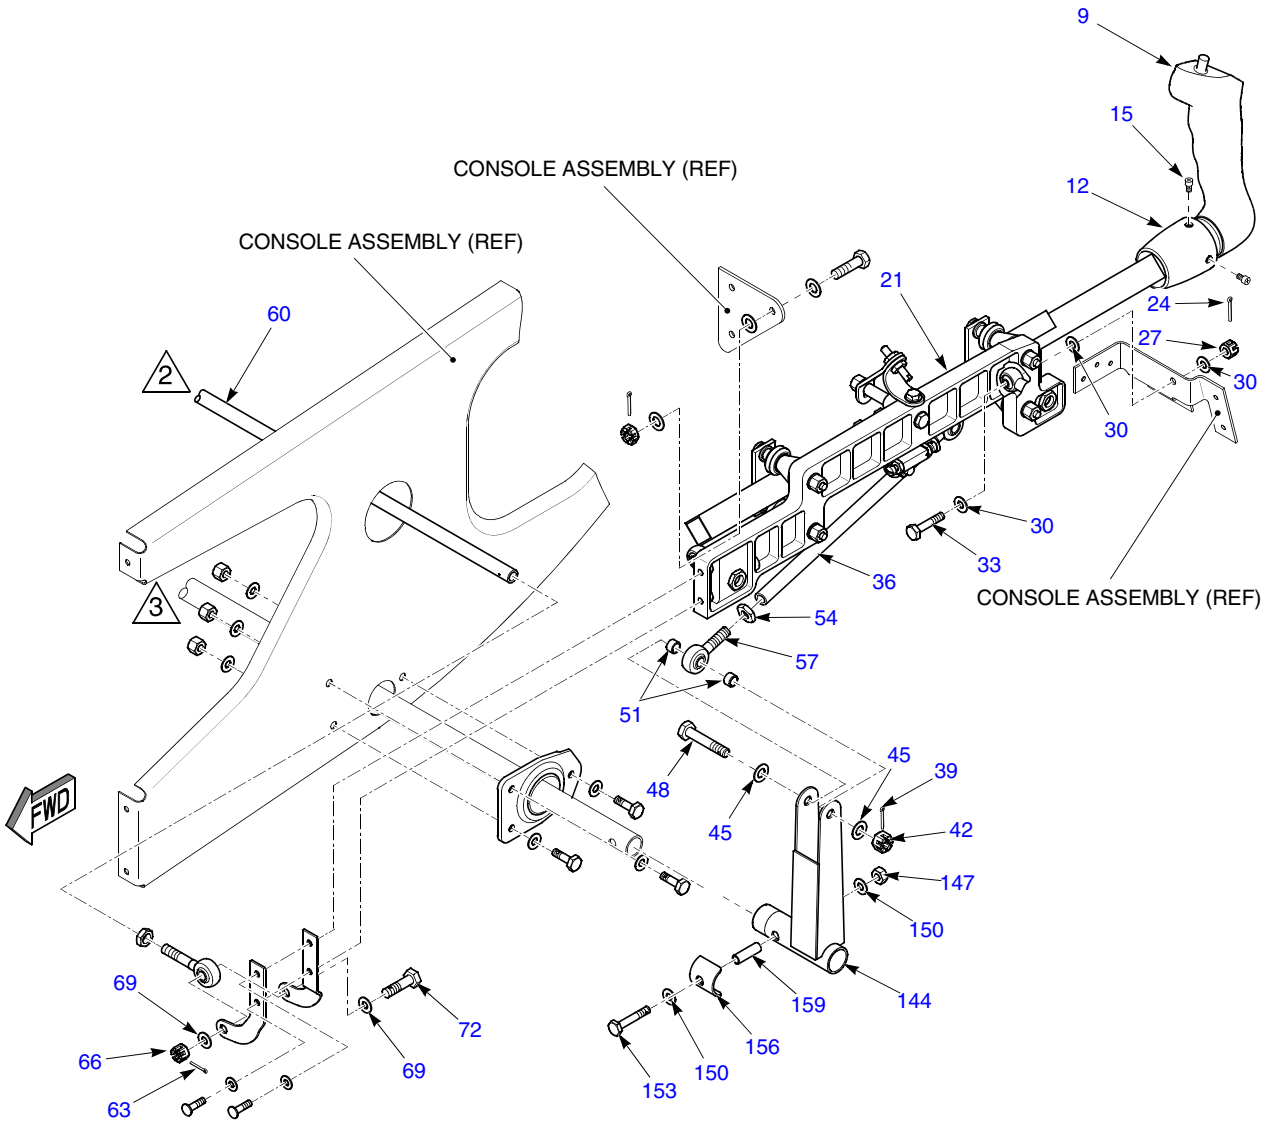

NOTE

2 Refer to sheet 3 of 6 for continuation.

3 Refer to sheet 1 of 6 for continuation.

DETAIL B

Serials 22-0002 thru 22-0497.

SR22_PC27_1219A

Figure-02

Flight Controls: Console - Serials 22-0002 thru 22-0497 (2 of 6)

EFFECTIVITY:
Serials 22-0002 thru 22-0497

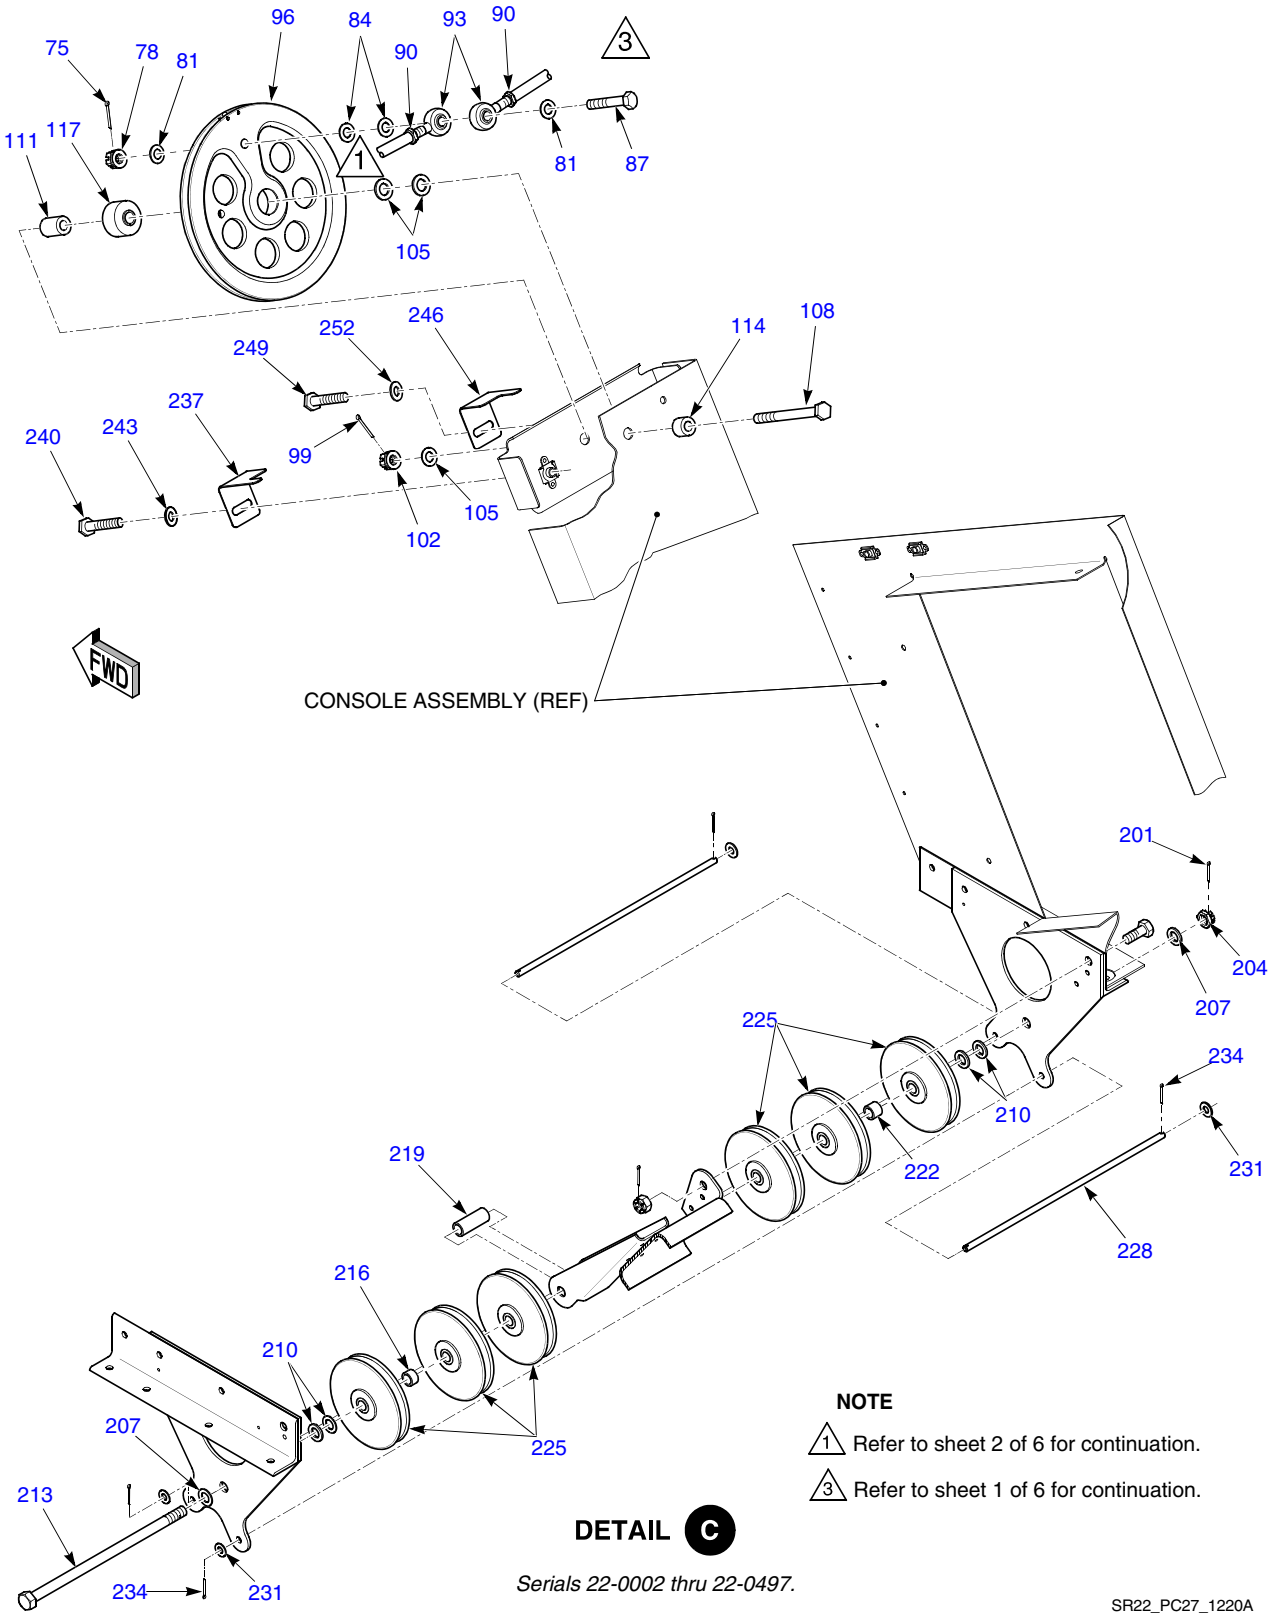

Figure-02

Flight Controls: Console - Serials 22-0002 thru 22-0497 (3 of 6)

EFFECTIVITY:
Serials 22-0002 thru 22-0497

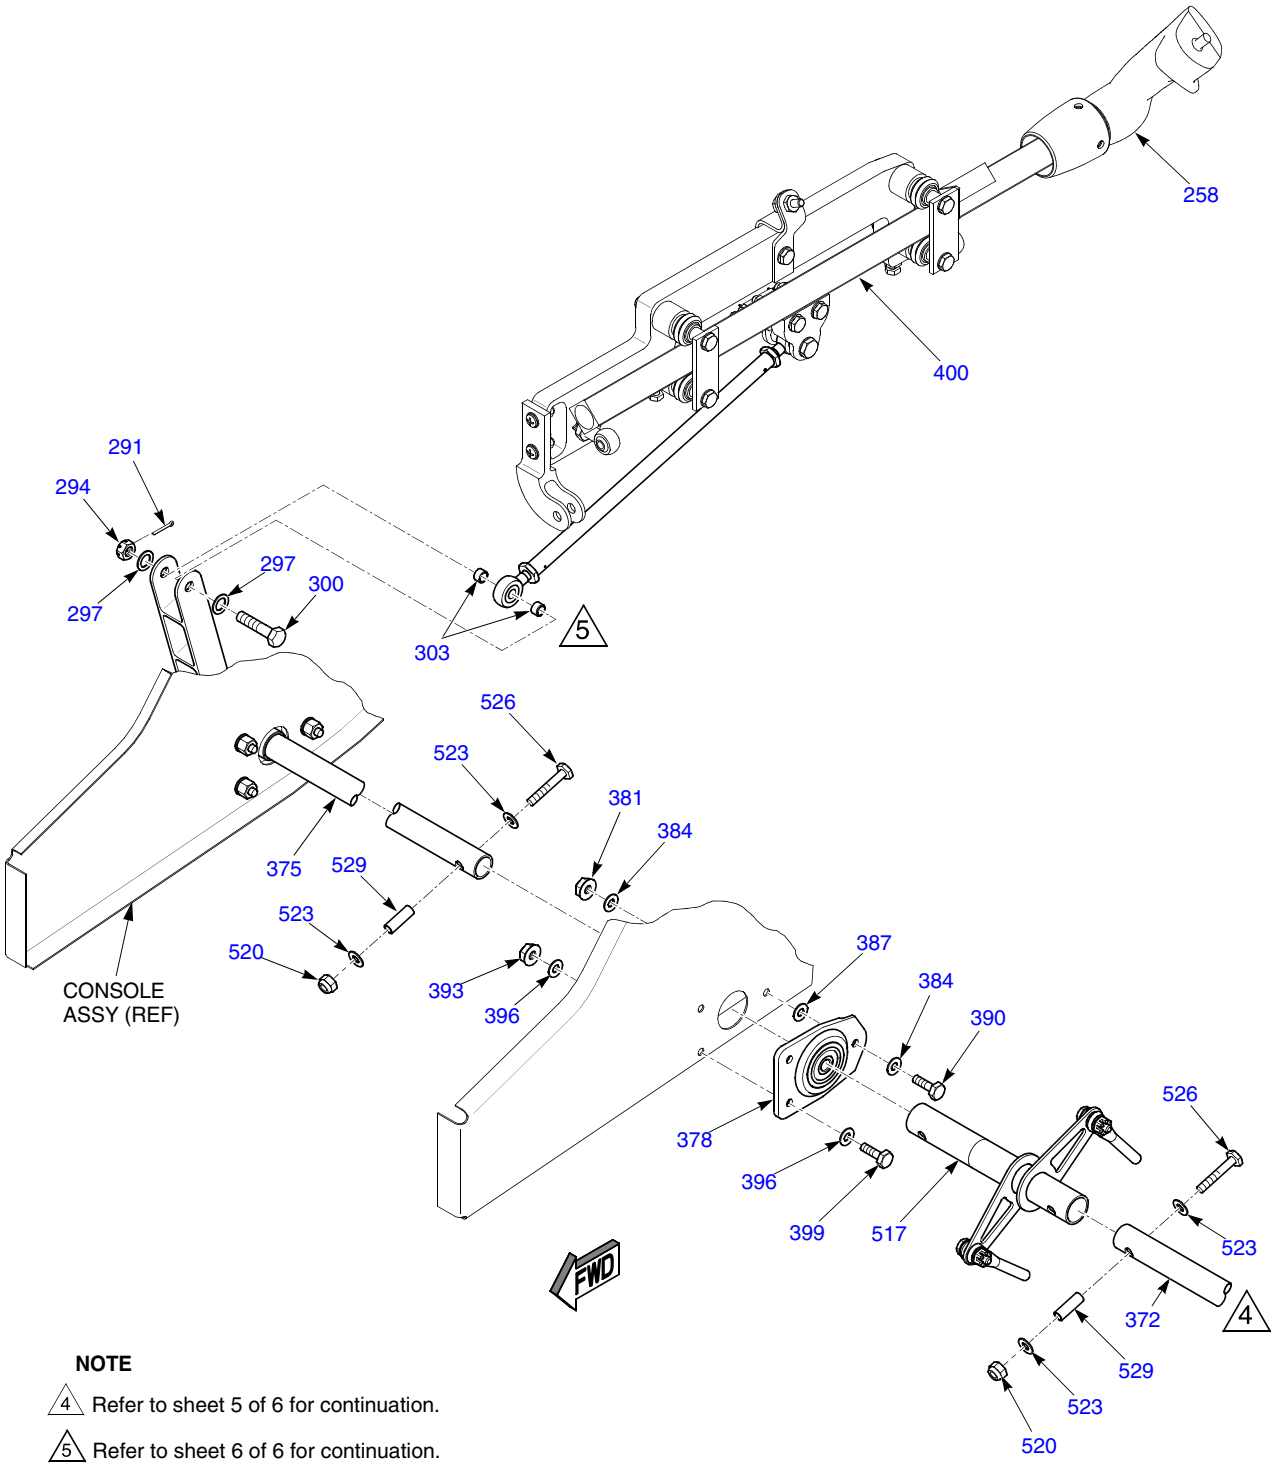

Figure-02

Flight Controls: Console - Serials 22-0498 & subs, 22T-0001 & subs (4 of 6)

EFFECTIVITY:
Serials 22-0498 & subs, 22T-0001 & subs

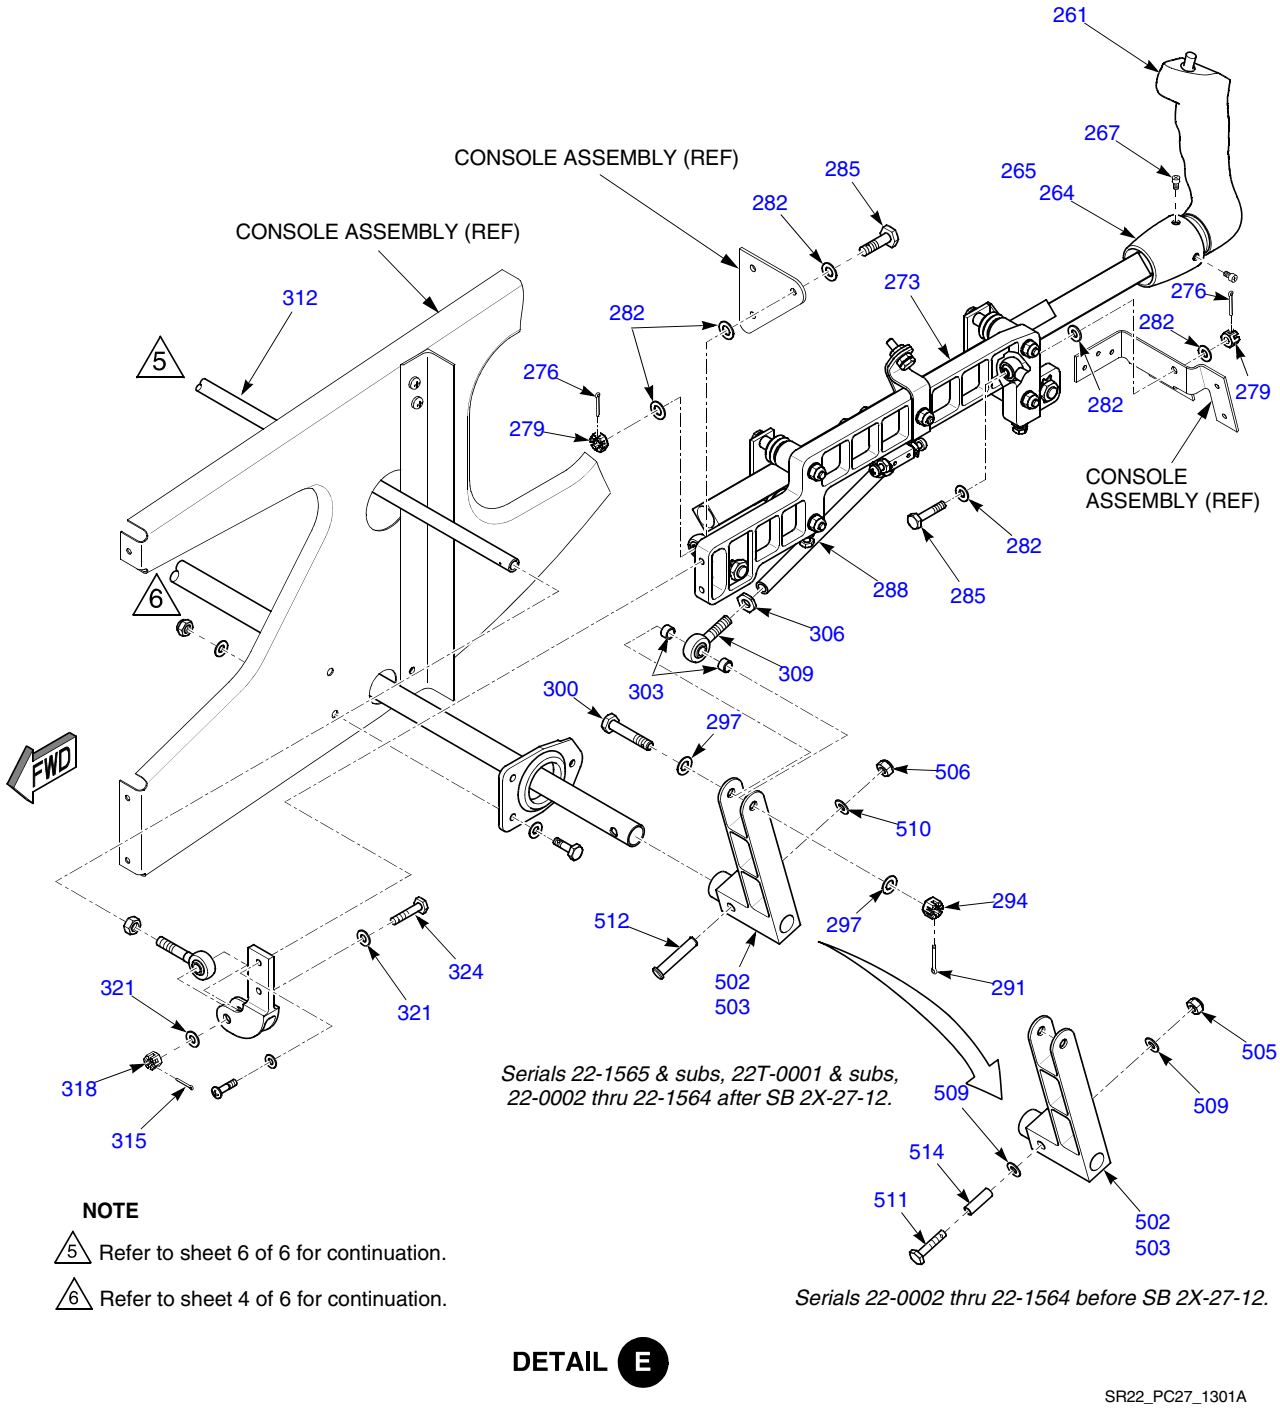

Figure-02

Flight Controls: Console - Serials 22-0498 & subs, 22T-0001 & subs (5 of 6)

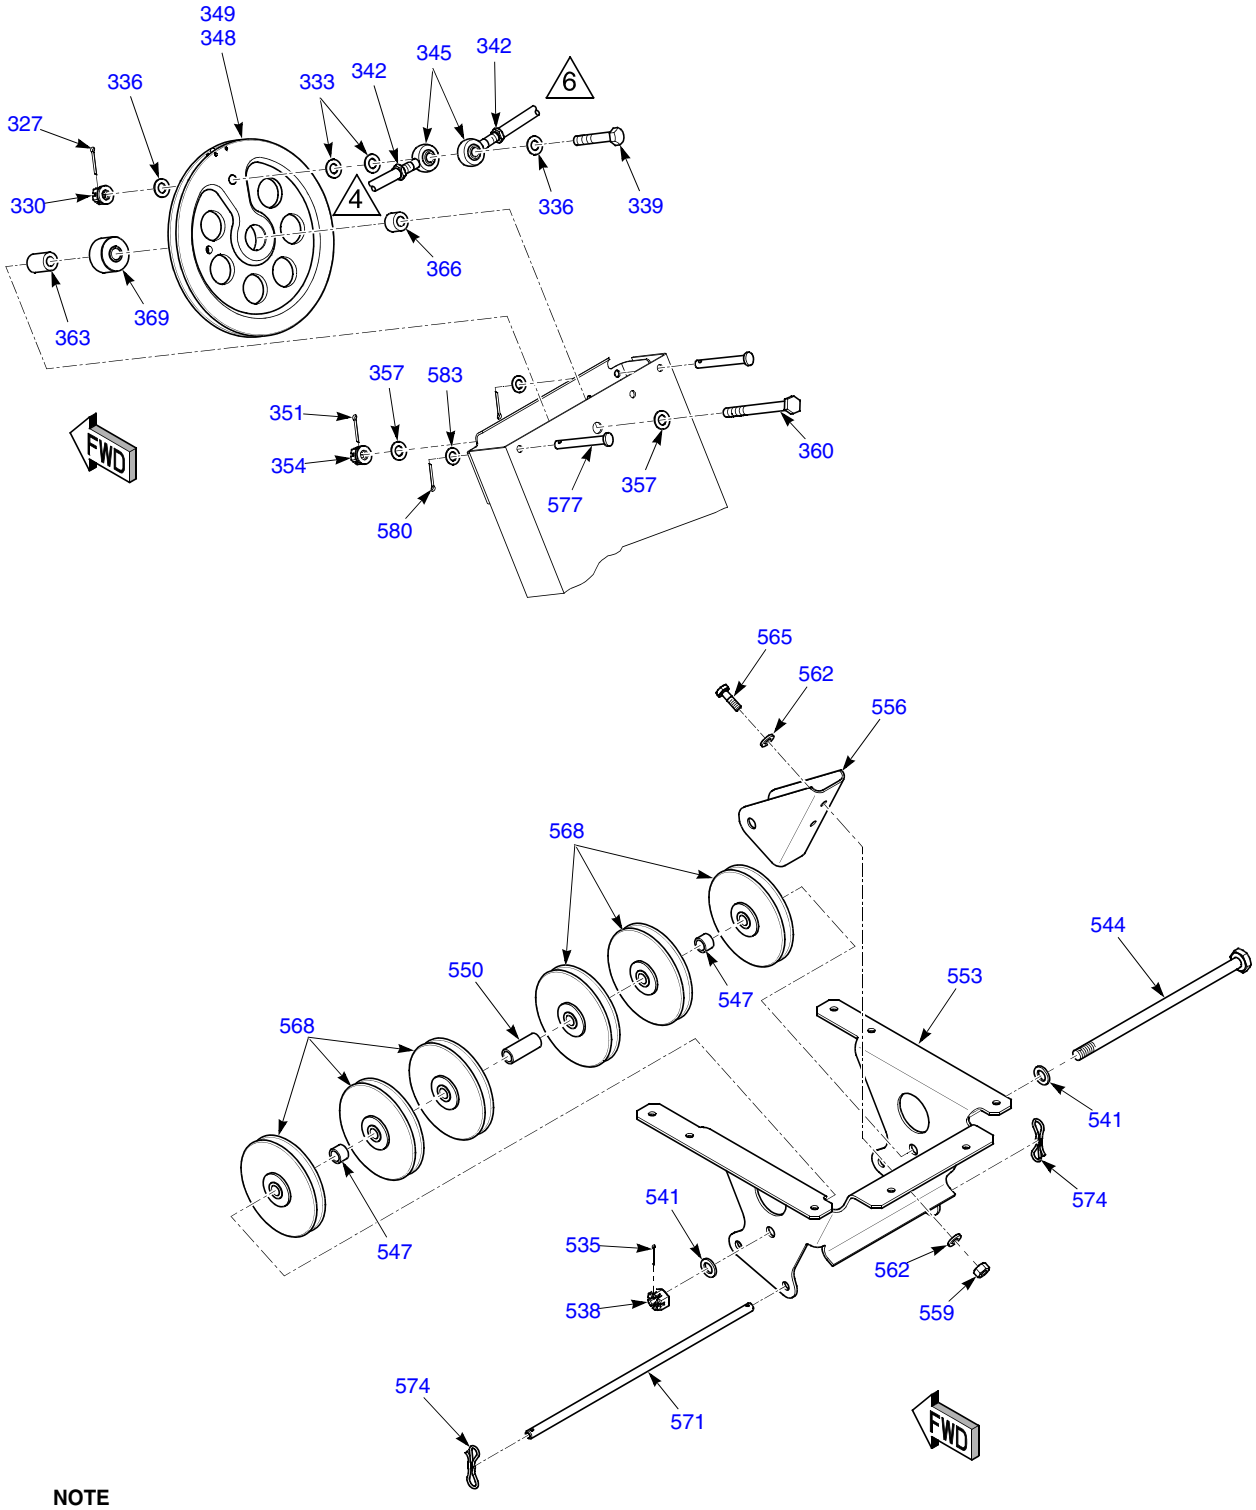

NOTE

4 Refer to sheet 5 of 6 for continuation.

6 Refer to sheet 4 of 6 for continuation.

DETAIL F

SR22_PC27_1302A

Figure-02

Flight Controls: Console - Serials 22-0498 & subs, 22T-0001 & subs (6 of 6)

EFFECTIVITY:
Serials 22-0498 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	TO 22 / 22T	UNITS
-	1	FIGURE NO 02			FLIGHT CONTROLS (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·FLIGHT CONTROLS - CONSOLE	0002 / 0001	/	NP
	6	RF 27-00-03 DET			··YOKE GRIP ASSEMBLY (RH)	0002	0497	1
	9	RF 27-00-03 DET			··YOKE GRIP ASSEMBLY (LH)	0002	0497	1
	12	12333-001			···YOKE TUBE COVER	0002	0497	1
	15	NAS1191E04P8B		A	···SCREW	0002	0497	4
-	18	RF 27-00-04 DET			··YOKE ASSEMBLY (RH)	0002	0497	1
	21	RF 27-00-04 DET			··YOKE ASSEMBLY (LH)	0002	0497	1
	24	MS24665-132		A	··COTTER PIN	0002	0497	2
	27	MS17825-3		A	··NUT, CASTELLATED	0002	0497	2
	30	NAS1149F0332P		A	··WASHER	0002	0497	6
	33	NAS6603D10		A	··BOLT	0002	0497	2
	36	10632-003			··PUSH-PULL ROD, ELEVATOR ACTUATION	0002	0497	2
	39	MS24665-132		A	··COTTER PIN	0002	0497	2
	42	MS17825-4		A	··NUT, CASTELLATED	0002	0497	2
	45	NAS1149F0432P		A	··WASHER	0002	0497	4
	48	AN4-13		A	··BOLT	0002	0497	2
	51	11648-002			··ROD END SPACER	0002	0497	4
	54	AN316-4R			···NUT, JAM	0002	0497	2
	57	11315-004			···ROD END	0002	0497	2
	60	10631-002			··PUSH-PULL ROD, AILERON ACTUATION	0002	0497	2
	63	MS24665-132		A	··COTTER PIN	0002	0497	2
	66	MS17826-4		A	··NUT, CASTELLATED	0002	0497	2
	69	NAS1149F0432P		A	··WASHER	0002	0497	4
	72	AN4-7		A	··BOLT	0002	0497	2
	75	MS24665-132		A	··COTTER PIN	0002	0497	1
	78	MS17826-4		A	··NUT, CASTELLATED	0002	0497	1
	81	NAS1149F0432P		A	··WASHER	0002	0497	2
	84	NAS1149F0463P		A	··WASHER	0002	0497	2
	87	NAS6604D20		A	··BOLT	0002	0497	1
	90	AN316-4R			···NUT, JAM	0002	0497	4
	93	11315-004			···ROD END	0002	0497	4
	96	10628-003			··PULLEY, AILERON ACTUATION	0002	0497	1
	99	MS24665-134		A	··COTTER PIN	0002	0497	1
	102	MS17825-5		A	··NUT	0002	0497	1
	105	NAS1149F0563P		A	··WASHER	0002	0497	3
	108	AN5-22		A	··BOLT	0002	0497	1
	111	10325-054			··SPACER	0002	0497	1
	114	10325-008			··SPACER	0002	0497	1
	117	MS21443-5B			···BEARING, BALL	0002	0497	1
	120	11168-002			··ELEVATOR TORQUE TUBE, LH	0002	0497	1
	123	11169-002			··ELEVATOR TORQUE TUBE, RH	0002	0497	1
-	126	11501-003		A	··BEARING PLATE	0002	0074	3
					FOR SPARES USE P/N 11501-005			
-	129	11501-004		A	··BEARING PLATE	0075	0333	3
					FOR SPARES USE P/N 11501-005			
	132	11501-005		A	··BEARING PLATE	0334	0497	3
	135	MS21044N3		A	··NUT	0002	0497	9
	138	NAS1149F0332P		A	··WASHER	0002	0497	18
	139	NAS1149F0332P		A	··WASHER	0002	0497	1
	141	AN3-5A		A	··BOLT	0002	0497	9
	144	10625-002			··END FITTING WELDMENT, TORQUE TUBE	0002	0497	2
	147	MS21083N3		A	··NUT	0002	0497	2
	150	NAS1149F0332P		A	··WASHER	0002	0497	4

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	153	AN3-11A		A	··BOLT	0002	0497	2
	156	10661-002			··THRUST COLLAR	0002	0497	2
	159	12959-001			··SPACER	0002	0497	2
-	162	11460-004			··TORQUE TUBE COUPLER	0002	0479	1
					FOR SPARES USE P/N 11460-005			
	165	11460-005			··TORQUE TUBE COUPLER	0480	0497	1
	168	MS21083N3		A	··NUT	0002	0497	2
	171	NAS1149F0332P		A	··WASHER	0002	0497	4
	174	AN3-11A		A	··BOLT	0002	0497	2
	177	12959-001			··SPACER	0002	0497	2
	180	10661-002			··THRUST COLLAR	0002	0497	2
	183	11461-001			··PULLEY SECTOR	0002	0497	2
	186	MS21044-N3		A	··NUT	0002	0497	4
	189	NAS1149F0332P		A	··WASHER	0002	0497	8
	192	AN3-7A		A	··BOLT	0002	0497	4
	195	11570-001			··SHIM, PULLEY SECTOR	0002	0497	2
-	198	NO PRT NUMBER			··PULLEY GANG, CONSOLE ASSEMBLY	0002	0497	NP
	201	MS24665-134		A	··COTTER PIN	0002	0497	1
	204	MS17825-5		A	··NUT	0002	0497	1
	207	NAS1149F0532P		A	··WASHER	0002	0497	2
	210	NAS1149F0563P		A	··WASHER	0002	0497	4
	213	AN5-64		A	··BOLT	0002	0497	1
	216	10325-016			··SPACER	0002	0497	1
	219	10325-072			··SPACER	0002	0497	1
	222	10325-022			··SPACER	0002	0497	1
	225	MS20220-2			···PULLEY	0002	0497	6
	228	11996-137			···PIN, PULLEY GUARD	0002	0497	2
	231	NAS1149F0332P		A	···WASHER	0002	0497	4
	234	MS24665-132		A	···COTTER PIN	0002	0497	4
	237	11133-002			··PULLEY KEEPER (LH)	0002	0497	1
	240	AN3-3A		A	··BOLT	0002	0497	1
	243	NAS1149F0332P		A	··WASHER	0002	0497	1
	246	11133-001			··PULLEY KEEPER (RH)	0002	0497	1
	249	AN3-3A		A	··BOLT	0002	0497	1
	252	NAS1149F0332P		A	··WASHER	0002	0497	1
	258	RF 27-00-03 DET			··YOKE GRIP ASSEMBLY (RH)	0498 / 0001	/	1
	261	RF 27-00-03 DET			··YOKE GRIP ASSEMBLY (LH)	0498 / 0001	/	1
	264	12333-001			···YOKE TUBE COVER	0498	1562	1
					FOR SPARES USE P/N 12333-002			
	265	12333-002			···YOKE TUBE COVER	1563 / 0001	/	1
	267	NAS1191E04P8B		A	···SCREW	0498 / 0001	/	4
-	270	RF 27-00-04 DET			··YOKE ASSEMBLY (RH)	0498 / 0001	/	1
	273	RF 27-00-04 DET			··YOKE ASSEMBLY (LH)	0498 / 0001	/	1
	276	MS24665-132		A	··COTTER PIN	0498 / 0001	/	2
	279	MS17825-3		A	··NUT, CASTELLATED	0498 / 0001	/	2
	282	NAS1149F0332P		A	··WASHER	0498 / 0001	/	6
	285	NAS6603D10		A	··BOLT	0498 / 0001	/	2
	288	10632-003			··PUSH-PULL ROD, ELEVATOR ACTUATION	0498 / 0001	/	2
	291	MS24665-132		A	··COTTER PIN	0498 / 0001	/	2
	294	MS17825-4		A	··NUT, CASTELLATED	0498 / 0001	/	2
	297	NAS1149F0432P		A	··WASHER	0498 / 0001	/	4
	300	AN4-13		A	··BOLT	0498 / 0001	/	2
	303	11648-003			··ROD END SPACER	0498 / 0001	/	4
	306	AN316-4R			···NUT, JAM	0498 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	309	11315-004		····	···ROD END	0498 / 0001	/	2
	312	10631-002		····	··PUSH-PULL ROD, AILERON ACTUATION	0498 / 0001	/	2
	315	MS24665-132		A ···	··COTTER PIN	0498 / 0001	/	2
	318	MS17826-4		A ···	··NUT, CASTELLATED	0498 / 0001	/	2
	321	NAS1149F0432P		A ···	··WASHER	0498 / 0001	/	4
	324	AN4-7		A ···	··BOLT	0498 / 0001	/	2
	327	MS24665-132		A ···	··COTTER PIN	0498 / 0001	/	1
	330	MS17826-4		A ···	··NUT, CASTELLATED	0498 / 0001	/	1
	333	NAS1149F0432P		A ···	··WASHER	0498 / 0001	/	2
	336	NAS1149F0463P		A ···	··WASHER	0498 / 0001	/	2
	339	NAS6604D20		A ···	··BOLT	0498 / 0001	/	1
	342	AN316-4R		····	···NUT, JAM	0498 / 0001	/	4
	345	11315-004		····	···ROD END	0498 / 0001	/	4
	348	10628-003		····	··PULLEY, AILERON ACTUATION	0498	2012	1
					FOR SPARES USE P/N 10628-004			
	349	10628-004		····	··PULLEY, AILERON ACTUATION	2013 / 0001	/	1
	351	MS24665-134		A ···	··COTTER PIN	0498 / 0001	/	1
	354	MS17825-5		A ···	··NUT	0498 / 0001	/	1
	357	NAS1149F0532P		A ···	··WASHER	0498 / 0001	/	2
	360	AN5-17		A ···	··BOLT	0498 / 0001	/	1
	363	10325-040		····	··SPACER	0498 / 0001	/	1
	366	10325-008		····	··SPACER	0498 / 0001	/	1
	369	MS21443-5B		····	···BEARING, BALL	0498 / 0001	/	1
	372	11168-002		····	··ELEVATOR TORQUE TUBE, LH	0498 / 0001	/	1
	375	11169-002		····	··ELEVATOR TORQUE TUBE, RH	0498 / 0001	/	1
	378	11501-005		A ···	··BEARING PLATE	0498 / 0001	/	3
	381	MS21044N3		A ···	··NUT	0498 / 0001	/	3
	384	NAS1149F0332P		A ···	··WASHER	0498 / 0001	/	6
	387	NAS1149F0363P		A ···	··WASHER	0498 / 0001	/	3
	390	AN3-5A		A ···	··BOLT	0498 / 0001	/	3
	393	MS21044N3		A ···	··NUT	0498 / 0001	/	6
	396	NAS1149F0332P		A ···	··WASHER	0498 / 0001	/	12
	399	AN3-5A		A ···	··BOLT	0498 / 0001	/	6
	502	14940-002		····	··END FITTING, TORQUE TUBE	0498	0820	2
					FOR SPARES USE P/N 14940-003			
	503	14940-003		····	··END FITTING, TORQUE TUBE	0821 / 0001	/	2
	505	MS21044N3		A ···	··NUT	0498	1564	2
					BEFORE SB2X-27-12			
	506	MS21044N4		A ···	··NUT	1565 / 0001	/	2
					ALTERNATE FOR P/N MS21083N4			
					ALTERNATE FOR P/N MS21042-4			
					AFTER SB2X-27-12			
-	507	MS21083N4		A ···	··NUT	1565 / 0001	/	2
					ALTERNATE FOR P/N MS21044N4			
					AFTER SB2X-27-12			
-	508	MS21042-4		A ···	··NUT	1565 / 0001	/	2
					ALTERNATE FOR P/N MS21044N4			
					AFTER SB2X-27-12			
	509	NAS1149F0332P		A ···	··WASHER	0498	1564	4
					BEFORE SB2X-27-12			
	510	NAS1149F0463P		A ···	··WASHER	1565 / 0001	/	2
					AFTER SB2X-27-12			
	511	AN3-12A		A ···	··BOLT	0498	1564	2
					BEFORE SB2X-27-12			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	512	HL64PB8-13			··PIN, HI-LOK	1565 / 0001	/	2
					AFTER SB2X-27-12			
	514	12959-001			··SPACER	0498	1564	2
	517	15428-001			··TORQUE TUBE WELDMENT, FWD COUPLER	0498 / 0001	/	1
	520	MS21044N3		A	··NUT	0498 / 0001	/	2
	523	NAS1149F0332P		A	··WASHER	0498 / 0001	/	4
	526	AN3-11A		A	··BOLT	0498 / 0001	/	2
	529	12959-002			··SPACER	0498 / 0001	/	2
-	532	NO PRT NUMBER			··PULLEY GANG, CONSOLE ASSEMBLY	0498 / 0001	/	NP
	535	MS24665-134		A	··COTTER PIN	0498 / 0001	/	1
	538	MS17825-5		A	··NUT	0498 / 0001	/	1
	541	NAS1149F0532P		A	··WASHER	0498 / 0001	/	2
	544	AN5-62		A	··BOLT	0498 / 0001	/	1
	547	10325-020			··SPACER	0498 / 0001	/	2
	550	10325-072			··SPACER	0498 / 0001	/	1
	553	14981-001			···FRAME, PULLEY GANG, CONSOLE ASSEMBLY	0498 / 0001	/	1
	556	14982-001			···SUPPORT, PULLEY GANG, CONSOLE ASSEMBLY	0498 / 0001	/	1
	559	MS21044N-3		A	···NUT	0498 / 0001	/	1
	562	NAS1149F0363P		A	···WASHER	0498 / 0001	/	2
	565	AN3-5A		A	···BOLT	0498 / 0001	/	1
	568	MS20220-2			···PULLEY	0498 / 0001	/	6
	571	14983-138			···PIN, PULLEY GUARD	0498 / 0001	/	2
	574	51170-001		A	···BOW-TIE LOCKING COTTER	0498 / 0001	/	4
	577	MS20392-2C49			···CLEVIS PIN	0498 / 0001	/	2
	580	MS24665-132		A	···COTTER PIN	0498 / 0001	/	2
	583	NAS1149F0332P		A	···WASHER	0498 / 0001	/	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 27-00-04 DET			YOKE ASSEMBLY			

EFFECTIVITY:
All

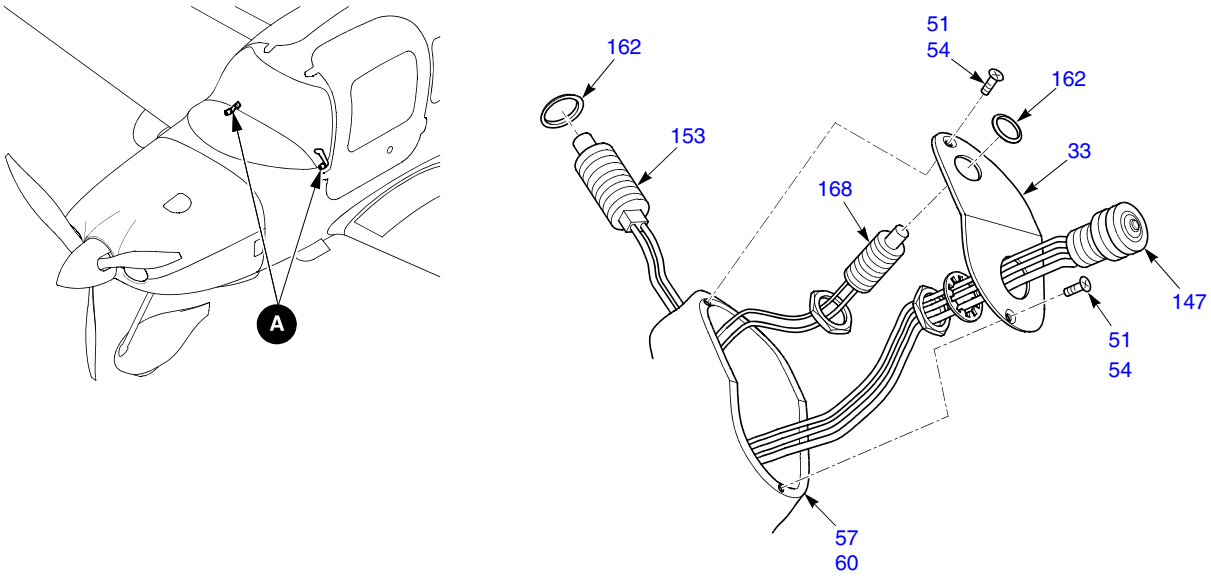

Serials 22-0002 thru 22-2036, 22-2038 thru 22-2043.

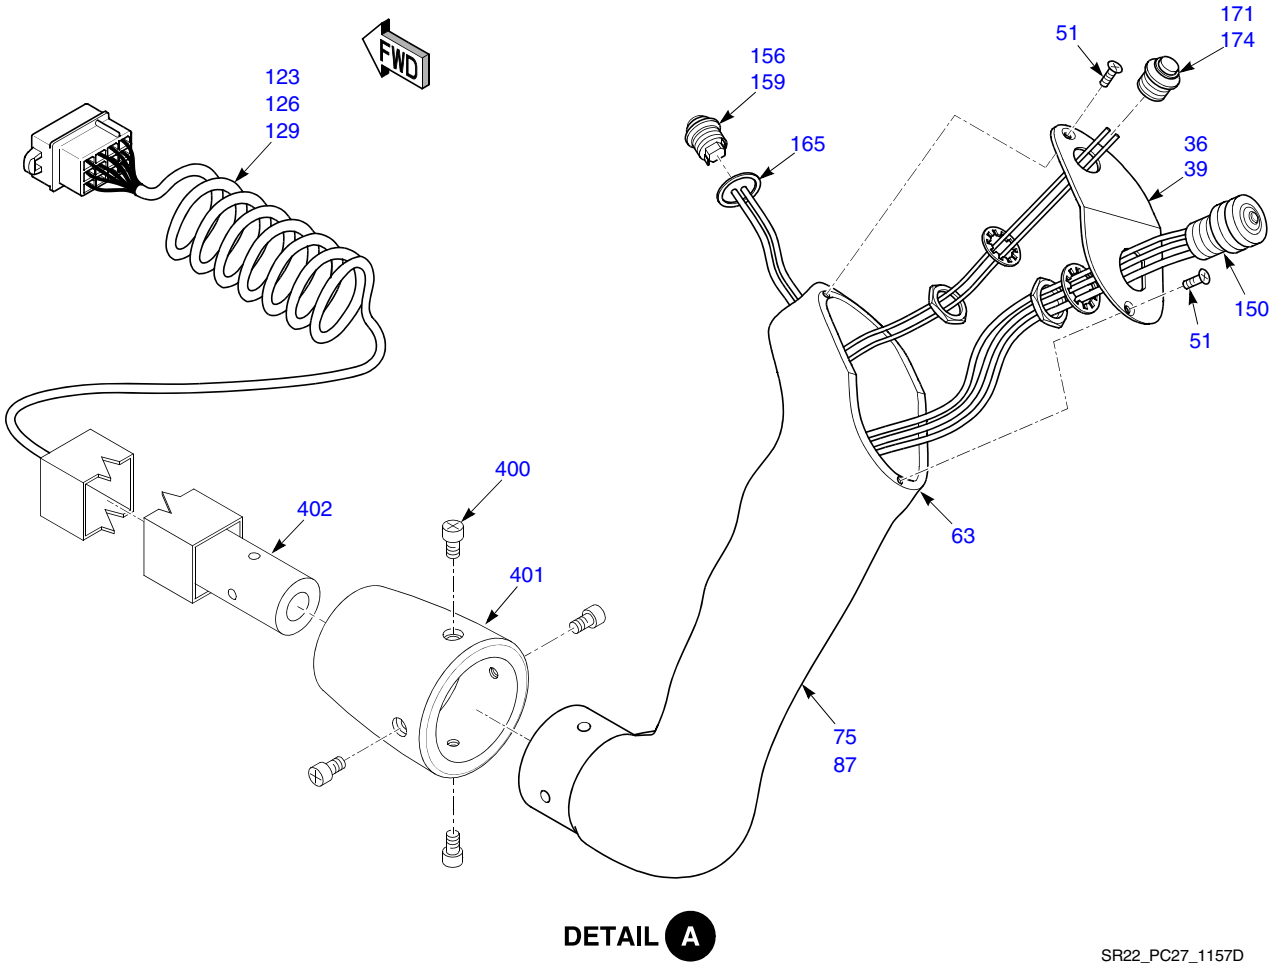

Figure-03
Yoke Grip Assembly

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		FLIGHT CONTROLS INSTALLATION (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	11995-003			·YOKE GRIP ASSEMBLY, (SYS 30), LH	0002 / 0001	/	AR
-	6	11995-004			·YOKE GRIP ASSEMBLY, (SYS 30), RH	0002 / 0001	/	AR
-	9	11995-005			·YOKE GRIP ASSEMBLY, (SYS 55), LH	0002	2043	AR
-	12	17672-001			·YOKE GRIP ASSEMBLY, (SYS 55), LH	2044	2164	AR
-	15	17672-005			·YOKE GRIP ASSEMBLY, (SYS 55), LH	2165 / 0001	/	AR
-	18	11995-006			·YOKE GRIP ASSEMBLY, (SYS 55), RH	0002	2043	AR
-	21	17672-002			·YOKE GRIP ASSEMBLY, (SYS 55), RH	2044	2164	AR
-	24	17672-006			·YOKE GRIP ASSEMBLY, (SYS 55), RH	2165 / 0001	/	AR
-	27	11994-005			··SWITCH PLATE, (SYS 30), LH	0002 / 0001	/	1
-	30	11994-006			··SWITCH PLATE, (SYS 30), RH	0002 / 0001	/	1
	33	11994-003			··SWITCH PLATE, (SYS 55), LH	0002	2043	1
	36	17674-001			··SWITCH PLATE, (SYS 55), LH	2044	2203	1
	39	17674-005			··SWITCH PLATE, (SYS 55), LH	2204 / 0001	/	1
-	40	17674-009	#		··SWITCH PLATE, (SYS 55), LH	3519 / 0001	/	1
-	42	11994-004			··SWITCH PLATE, (SYS 55), RH	0002	2043	1
-	45	17674-002			··SWITCH PLATE, (SYS 55), RH	2044	2203	1
-	48	17674-006			··SWITCH PLATE, (SYS 55), RH	2204 / 0001	/	1
-	49	17674-010	#		··SWITCH PLATE, (SYS 55), RH	3519 / 0001	/	1
	51	MS24693-4B		A	··SCREW	0002	0999	2
						2044 / 0001	/	
	54	MS24693-7B		A	··SCREW	1000	2043	2
	57	10655-003			··YOKE GRIP LH	0002	1466	1
					FOR SPARES USE P/N 10655-005			
	60	10655-005			··YOKE GRIP LH	1467	2043	1
	63	17676-001			··YOKE GRIP LH	2044 / 0001	/	1
-	66	10655-004			··YOKE GRIP RH	0002	1466	1
					FOR SPARES USE P/N 10655-006			
-	69	10655-006			··YOKE GRIP RH	1467	2043	1
-	72	17676-002			··YOKE GRIP RH	2044 / 0001	/	1
	75	10654-001			··FOAM COVER LH	0002 / 0001	/	1
-	78	10654-002			··FOAM COVER RH	0002 / 0001	/	1
-	81	15788-001	@		··LEATHER COVER LH	0656 / 0001	3689 / 0032	1
-	84	15788-002	@		··LEATHER COVER RH	0656 / 0001	3689 / 0032	1
	87	28995-001			··LEATHER COVER LH (BLACK W/ BLACK STITCH)	3690 / 0033	/	1
-	90	28995-003			··LEATHER COVER LH (BLACK W/ GRAY STITCH)	3690 / 0033	/	1
-	93	28995-005			··LEATHER COVER LH (BLACK W/ CURRY STITCH)	3690 / 0033	/	1
-	96	28995-007			··LEATHER COVER LH (BLACK W/ IVORY STITCH)	3690 / 0033	/	1
-	99	28995-009			··LEATHER COVER LH (BLACK W/ RED STITCH)	3690 / 0033	/	1
-	102	28995-0079L	#		··LEATHER COVER LH (GRAY W/ BLACK STITCH)	/ 0079	/	1
-	103	28995-011			··LEATHER COVER LH (BLACK W/ CHINESE RUST STITCH)	3690 / 0033	/	1
-	105	28995-002			··LEATHER COVER RH (BLACK W/ BLACK STITCH)	3690 / 0033	/	1
-	108	28995-004			··LEATHER COVER RH (BLACK W/ GRAY STITCH)	3690 / 0033	/	1
-	111	28995-006			··LEATHER COVER RH (BLACK W/ CURRY STITCH)	3690 / 0033	/	1
-	114	28995-008			··LEATHER COVER RH (BLACK W/ IVORY STITCH)	3690 / 0033	/	1
-	117	28995-010			··LEATHER COVER RH (BLACK W/ RED STITCH)	3690 / 0033	/	1
-	118	28995-012			··LEATHER COVER RH (BLACK W/ CHINESE RUST STITCH)	3690 / 0033	/	1
-	120	28995-0079R	#		··LEATHER COVER RH (GRAY W/ BLACK STITCH)	/ 0079	/	1
	123	11784-002			··WIRE HARNESS, LH	0002	2043	1
	126	17677-001			··WIRE HARNESS, LH	2044 / 0001	/	1
	129	24577-001			··WIRE HARNESS, LH W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
-	132	11783-002			··WIRE HARNESS, RH	0002	2043	1
-	135	17678-001			··WIRE HARNESS, RH	2044 / 0001	/	1
-	138	24576-001			··WIRE HARNESS, RH W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	141	50158-012			···CONNECTOR, PILOT YOKE, 12 PIN	0002 / 0001	/	1
-	144	50157-001			···PIN, CRIMP 18-24AWG	0002 / 0001	/	AR
	147	50340-001			···SWITCH, 4 WAY TRIM W/PUSHBUTTON	0002	2043	1
	150	50340-003			···SWITCH, 4 WAY TRIM	2044 / 0001	/	1
	153	50339-001			···SWITCH, PUSH TO TALK	0002	2043	1
	156	51761-002			···SWITCH, PUSH TO TALK	2044	2359	1
	159	51761-005			···SWITCH, PUSH TO TALK	2360 / 0001	/	1
	162	50337-001		A	···BEZEL	0002	2043	2
	165	21744-001		A	···WASHER	2165 / 0001	/	1
	168	50339-001			···SWITCH, AUTOPILOT	0002	2043	1
	171	51761-001			···SWITCH, AUTOPILOT W/O PERSPECTIVE AVIONICS	2044		1
	174	53059-001			···SWITCH, AUTOPILOT W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 27-00-02 DET			SCREW			
	401	RF 27-00-02 DET			YOKE TUBE COVER			
	402	RF 27-00-02 DET			YOKE TUBE			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2037; REFER TO 22-2044 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
			@		INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT AND 0821 & SUBS.			
			#		1) INSTALLED ON XI CONFIGURED AIRCRAFT 22-3519 & SUBS, 22T-0001 & SUBS AS OPTIONAL EQUIPMENT.			
					2) INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 & SUBS AS OPTIONAL EQUIPMENT.			

Intentionally Left Blank

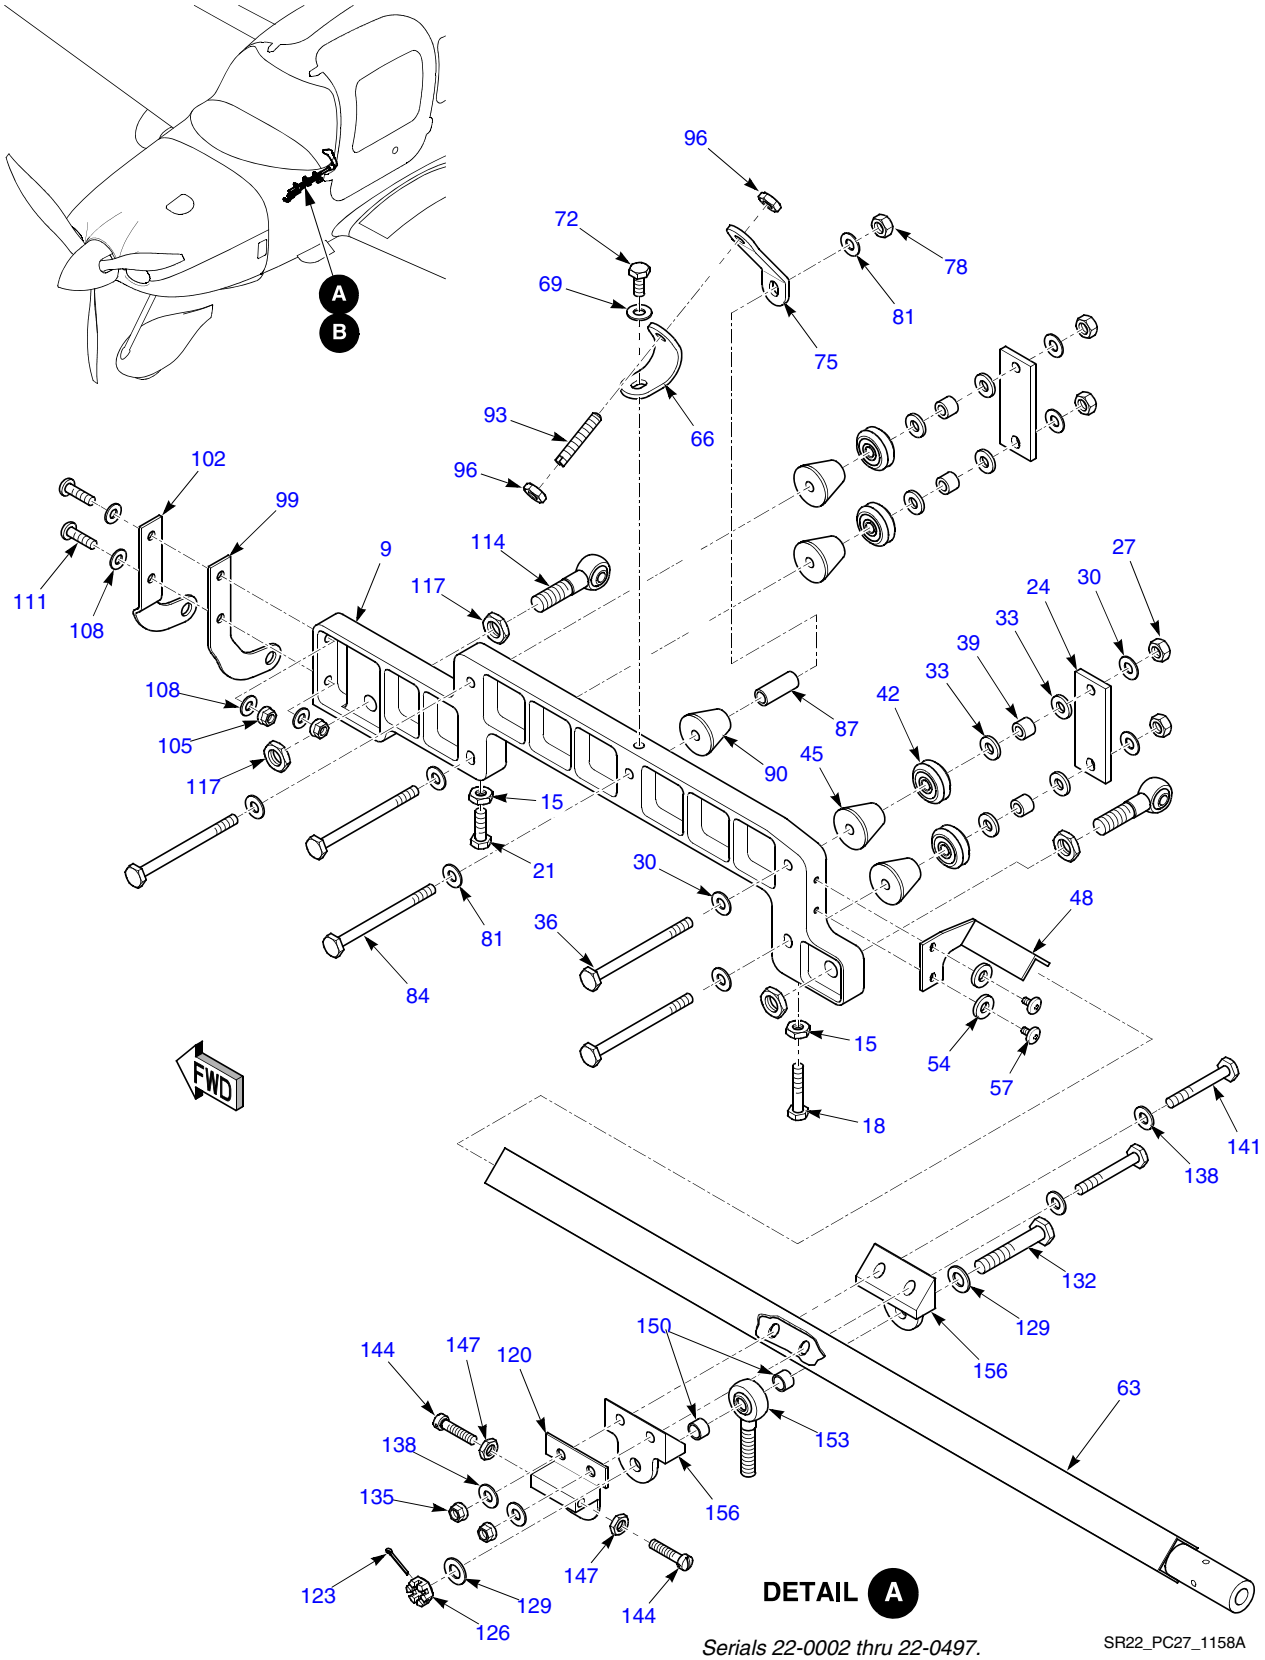

Figure-04

Yoke Assembly - Serials 22-0002 thru 22-0497 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0497

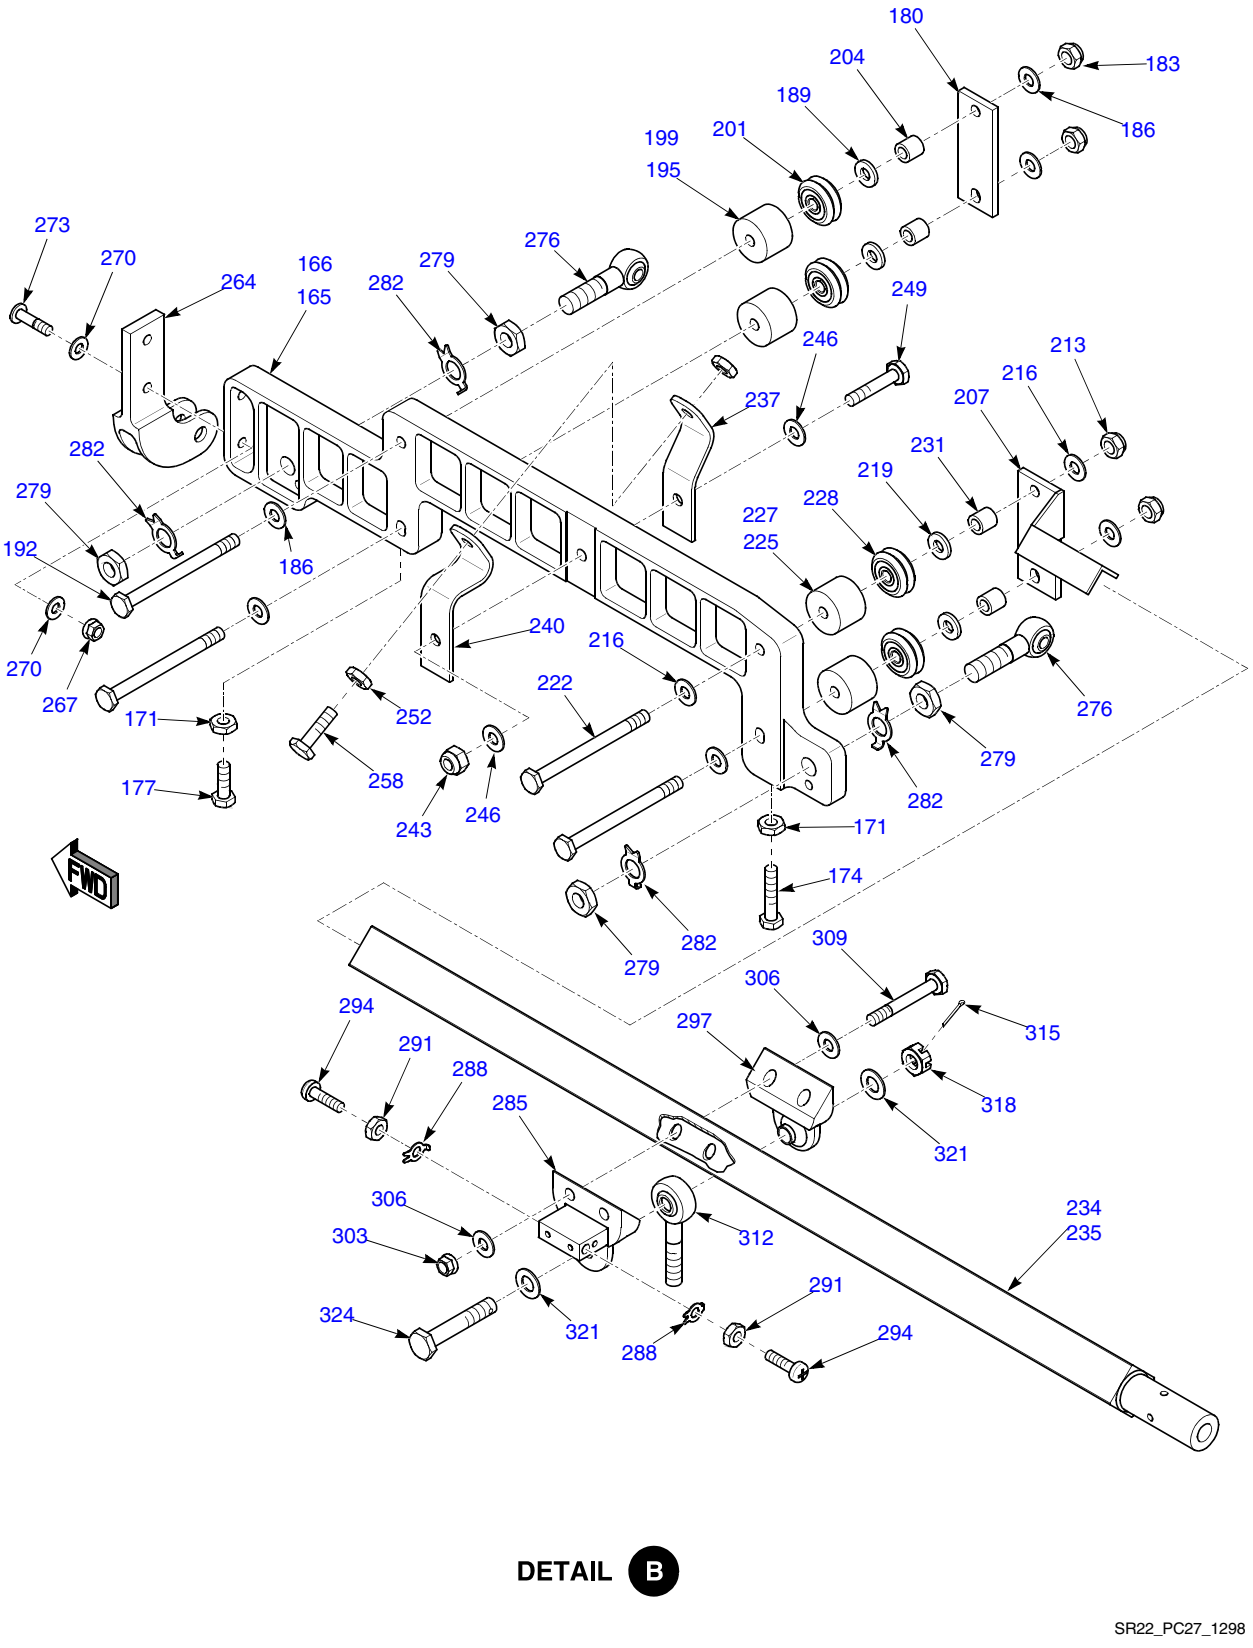

DETAIL B

SR22_PC27_1298

Figure-04

Yoke Assembly - Serials 22-0498 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0498 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04			FLIGHT CONTROLS (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	10653-005			·YOKE ASSEMBLY LH	0002	0497	NP
-	6	10653-006			·YOKE ASSEMBLY RH	0002	0497	NP
	9	12332-001			··BEARING MOUNT, YOKE LH	0002	0497	1
-	12	12332-002			··BEARING MOUNT, YOKE RH	0002	0497	1
	15	AN315-3R			···JAM NUT	0002	0497	2
	18	NAS1801-3-15			···SCREW	0002	0497	1
	21	NAS1801-3-9			···SCREW	0002	0497	1
	24	11771-001			··BEARING TIE PLATE	0002	0497	2
	27	MS21044N3		A	··NUT	0002	0497	4
	30	NAS1149F0332P		A	··WASHER	0002	0497	8
	33	NAS1149F0363P		A	··WASHER	0002	0497	8
	36	11582-003		A	··BOLT	0002	0497	4
	39	11639-016			··SPACER	0002	0497	4
	42	15569-001			··SEALED V-GROOVE GUIDE WHEEL	0002	0497	4
	45	10517-002			··SPACER, YOKE V-BEARING	0002	0497	4
	48	12334-001			··TRIM INDICATOR LH	0002	0497	1
-	51	12334-002			··TRIM INDICATOR RH	0002	0497	1
	54	NAS1149FN432P		A	··WASHER	0002	0497	2
	57	NAS1191-04P4B		A	··BOLT	0002	0497	2
-	60	13975-001			··YOKE TUBE	0002	0308	1
	63	13975-002			··YOKE TUBE	0309	0497	1
					FOR SPARES USE P/N 13975-003			
	66	11144-001			··AILERON STOP, YOKE, TOP	0002	0497	1
	69	NAS1149F0332P		A	··WASHER	0002	0497	1
	72	NAS1801-3-7		A	··BOLT	0002	0497	1
	75	11144-003			··AILERON STOP, YOKE, SIDE	0002	0497	1
	78	MS21044N3		A	··NUT	0002	0497	1
	81	NAS1149F0332P		A	··WASHER	0002	0497	2
	84	AN3-23A		A	··BOLT	0002	0497	1
	87	11639-050			··SPACER	0002	0497	1
	90	10517-002			··SPACER, YOKE V-BEARING	0002	0497	1
	93	11171-001			··THREADED ROD	0002	0497	1
	96	NAS509-3		A	··NUT, JAM	0002	0497	2
	99	10520-003			··BRACKET, AILERON ACTUATION	0002	0497	1
	102	10520-004			··BRACKET, AILERON ACTUATION	0002	0497	1
	105	MS21042-08		A	··NUT	0002	0497	2
	108	NAS1149FN832P		A	··WASHER	0002	0497	4
	111	NAS623-2-5		A	··SCREW	0002	0497	2
	114	50856-001			··ROD END	0002	0497	2
	117	NAS1423-5		A	··NUT	0002	0497	4
	120	11330-003			··ELEVATOR STOP YOKE	0002	0497	1
	123	MS24665-132		A	··COTTER PIN	0002	0497	1
	126	MS17826-4		A	··NUT, CASTELLATED	0002	0497	1
	129	NAS1149F0432P		A	··WASHER	0002	0497	2
	132	NAS6204-18D		A	··BOLT	0002	0497	1
	135	MS21042-3		A	··NUT	0002	0497	2
	138	NAS1149F0332P		A	··WASHER	0002	0497	4
	141	AN3-13A		A	··BOLT	0002	0497	2
	144	MS35206-245			··SCREW	0002	0497	2
	147	NAS509-08			···JAM NUT	0002	0497	2
	150	11648-001			·ROD END SPACER	0002	0497	2
	153	11315-004			·ROD END	0002	0497	1
	156	10521-003			··FITTING, ELEVATOR ACTUATION	0002	0497	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ·····	EFFECTIVE FROM 22 / 22T	TO 22 / 22T	UNITS
-	159	14934-001			·YOKE ASSEMBLY LH	0498	2042	NP
-	160	14934-003			·YOKE ASSEMBLY LH	2043 / 0001	/	NP
-	162	14934-002			·YOKE ASSEMBLY RH	0498	2042	NP
-	163	14934-004			·YOKE ASSEMBLY RH	2043 / 0001	/	NP
	165	14938-001			··BEARING MOUNT, YOKE, LH	0498	2042	1
	166	14938-003			··BEARING MOUNT, YOKE, LH	2043 / 0001	/	1
-	168	14938-002			··BEARING MOUNT, YOKE, RH	0498	2042	1
-	169	14938-004			··BEARING MOUNT, YOKE, RH	2043 / 0001	/	1
	171	AN315-3R		A	···JAM NUT	0498 / 0001	/	1
	174	NAS1801-3-15		A	···SCREW	0498 / 0001	/	1
	177	NAS1801-3-9		A	···SCREW	0498 / 0001	/	1
	180	11771-001			··BEARING TIE PLATE	0498 / 0001	/	1
	183	MS21044N3		A	··NUT	0498 / 0001	/	2
	186	NAS1149F0332P		A	··WASHER	0498 / 0001	/	4
	189	NAS1149F0363P		A	··WASHER	0498 / 0001	/	2
	192	11582-003		A	··BOLT	0498 / 0001	/	2
	195	14935-001			··SPACER, YOKE V-BEARING	0498	2042	2
					ALTERNATE FOR P/N 10517-001			
-	198	10517-001			··SPACER, YOKE V-BEARING	0498	2042	2
					ALTERNATE FOR P/N 14935-001			
	199	14935-002			··SPACER, YOKE V-BEARING	2043 / 0001	/	2
	201	15569-001			··SEALED V-GROOVE GUIDE WHEEL	0498 / 0001	/	2
	204	11639-020			··SPACER	0498 / 0001	/	2
	207	14993-001			··TRIM INDICATOR, LH	0498 / 0001	/	1
-	210	14993-002			··TRIM INDICATOR, RH	0498 / 0001	/	1
	213	MS21044N3		A	··NUT	0498 / 0001	/	2
	216	NAS1149F0332P		A	··WASHER	0498 / 0001	/	4
	219	NAS1149F0363P		A	··WASHER	0498 / 0001	/	2
	222	11582-003		A	··BOLT	0498 / 0001	/	2
	225	14935-001			··SPACER, YOKE V-BEARING	0498 / 0001	/	2
					ALTERNATE FOR P/N 10517-001			
-	226	10517-001			··SPACER, YOKE V-BEARING	0498	2042	2
					ALTERNATE FOR P/N 14935-001			
	227	14935-002			··SPACER, YOKE V-BEARING	2043 / 0001	/	2
	228	15569-001			··SEALED V-GROOVE GUIDE WHEEL	0498 / 0001	/	2
	231	11639-020			··SPACER	0498 / 0001	/	2
	234	13975-002			··YOKE TUBE	0498	1601	1
					FOR SPARES USE P/N 13975-003			
	235	13975-003			··YOKE TUBE	1602 / 0001	/	1
	237	15456-001			··AILERON STOP, YOKE	0498 / 0001	/	1
	240	15457-001			··AILERON STOP, YOKE	0498 / 0001	/	1
	243	MS21044N3		A	··NUT	0498 / 0001	/	1
	246	NAS1149F0332P		A	··WASHER	0498 / 0001	/	2
	249	AN3-10A		A	··BOLT	0498 / 0001	/	1
	252	AN315-3R			··JAM NUT	0498 / 0001	/	2
					ALTERNATE FOR P/N NAS509-3			
-	255	NAS509-3			··JAM NUT	0498 / 0001	/	2
					ALTERNATE FOR P/N AN315-3R			
	258	NAS428-3-7			··BOLT	0498 / 0001	/	1
					ALTERNATE FOR P/N 11171-001			
-	261	11171-001			··BOLT	0498 / 0001	/	1
					ALTERNATE FOR P/N NAS428-3-6			
	264	14931-001			··BRACKET, AILERON ACTUATION	0498 / 0001	/	1
	267	MS21042-08		A	··NUT	0498 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····· NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	270	NAS1149FN832P		A	··WASHER	0498 / 0001	/	4
	273	NAS623-2-6		A	··SCREW	0498 / 0001	/	2
	276	50856-001			··ROD END	0498 / 0001	/	2
	279	AN316-5R		A	··JAM NUT	0498 / 0001	/	4
	282	MS9276-11		A	··WASHER	0498 / 0001	/	4
	285	14932-001			··FITTING, ELEVATOR ACTUATION, YOKE	0498 / 0001	/	1
	288	MS9276-08			···WASHER	0498 / 0001	/	2
	291	MS35649-282			···NUT	0498 / 0001	/	2
	294	MS35206-246			···SCREW	0498 / 0001	/	2
	297	15359-001			··FITTING, ELEVATOR ACTUATION, YOKE	0498 / 0001	/	1
					ALTERNATE FOR P/N 11648-002			
-	300	11648-002			··FITTING, ELEVATOR ACTUATION, YOKE	0498 / 0001	/	1
					ALTERNATE FOR P/N 15359-001			
	303	MS21042-3		A	··NUT	0498 / 0001	/	2
	306	NAS1149F0332P		A	··WASHER	0498 / 0001	/	4
	309	AN3-13A		A	··BOLT	0498 / 0001	/	2
	312	11315-004			··ROD END	0498 / 0001	/	1
	315	MS24665-132		A	··COTTER PIN	0498 / 0001	/	1
	318	MS17826-4		A	··NUT	0498 / 0001	/	1
	321	NAS1149F0432P		A	··WASHER	0498 / 0001	/	2
	324	NAS6204-17D		A	··BOLT	0498 / 0001	/	1

Intentionally Left Blank

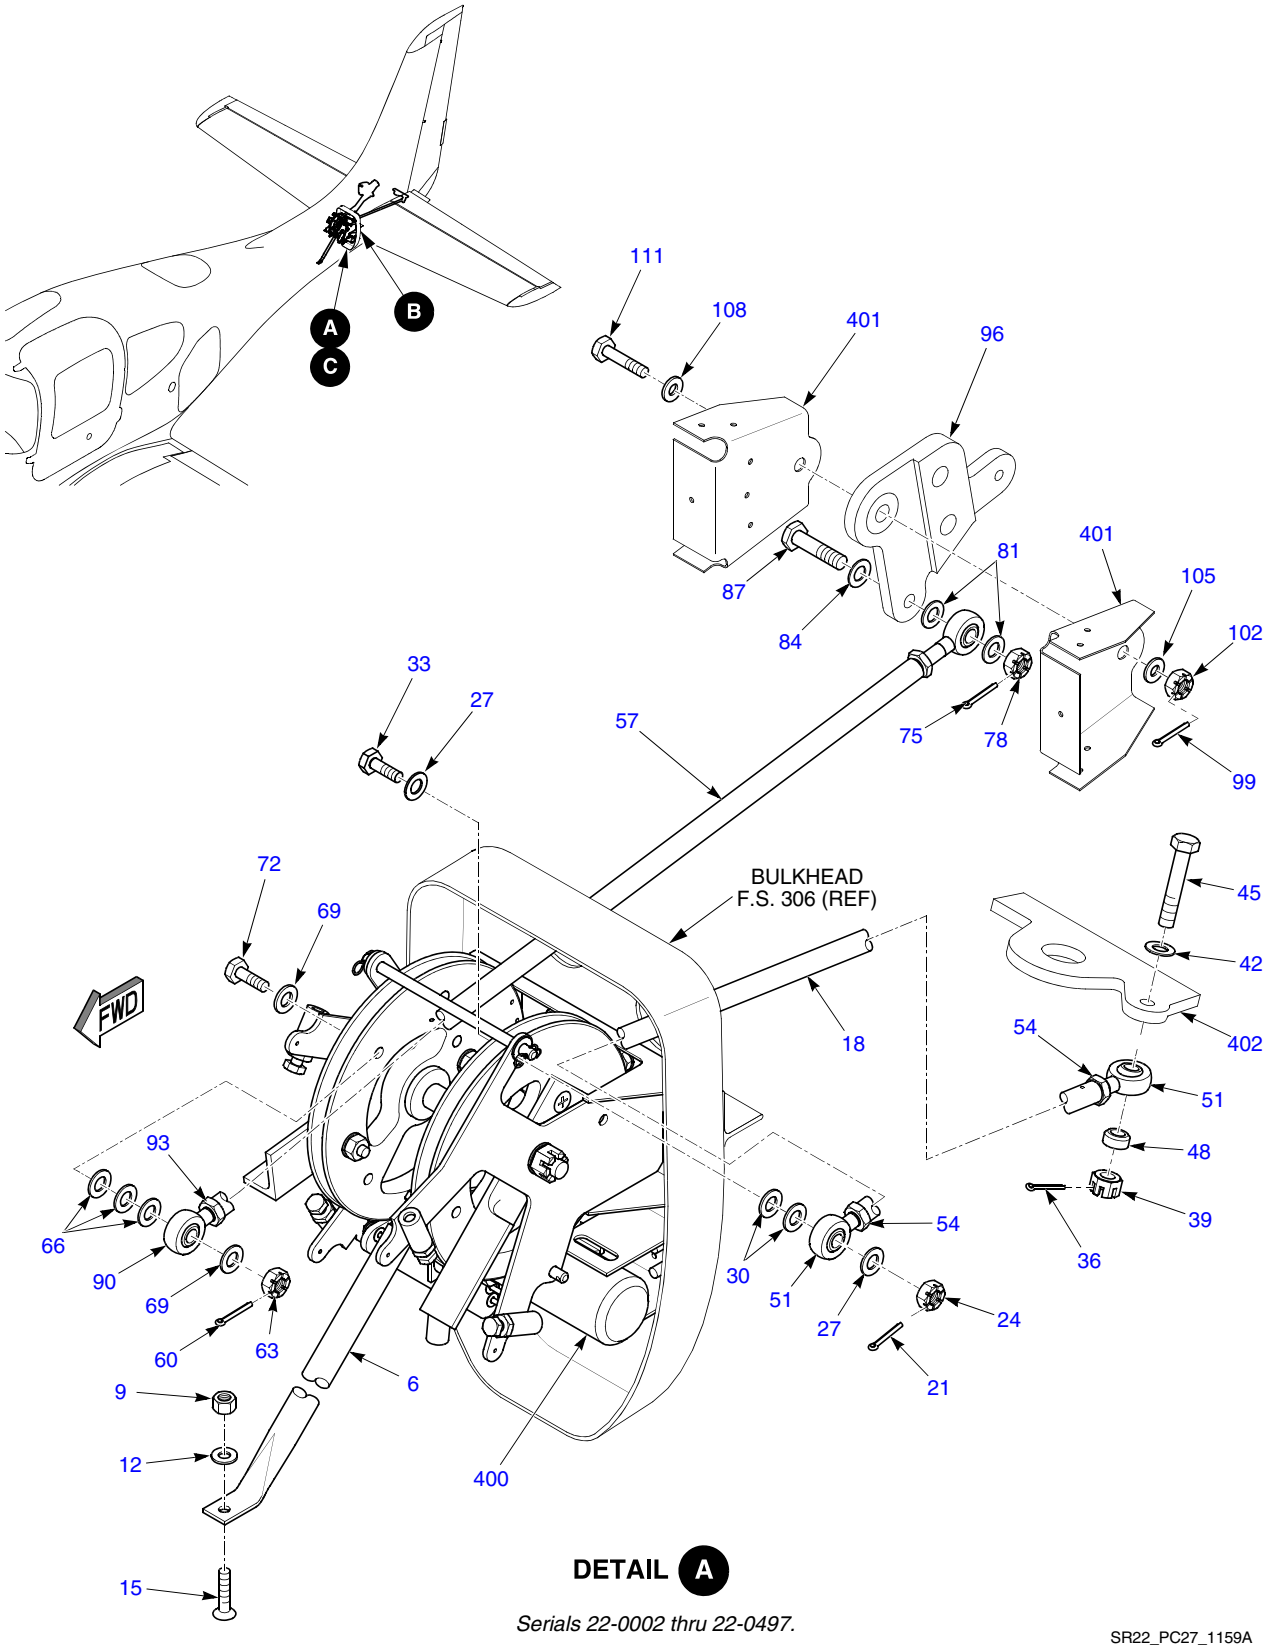

Figure-05

Flight Controls: Empennage - Serials 22-0002 thru 22-0497 (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0497

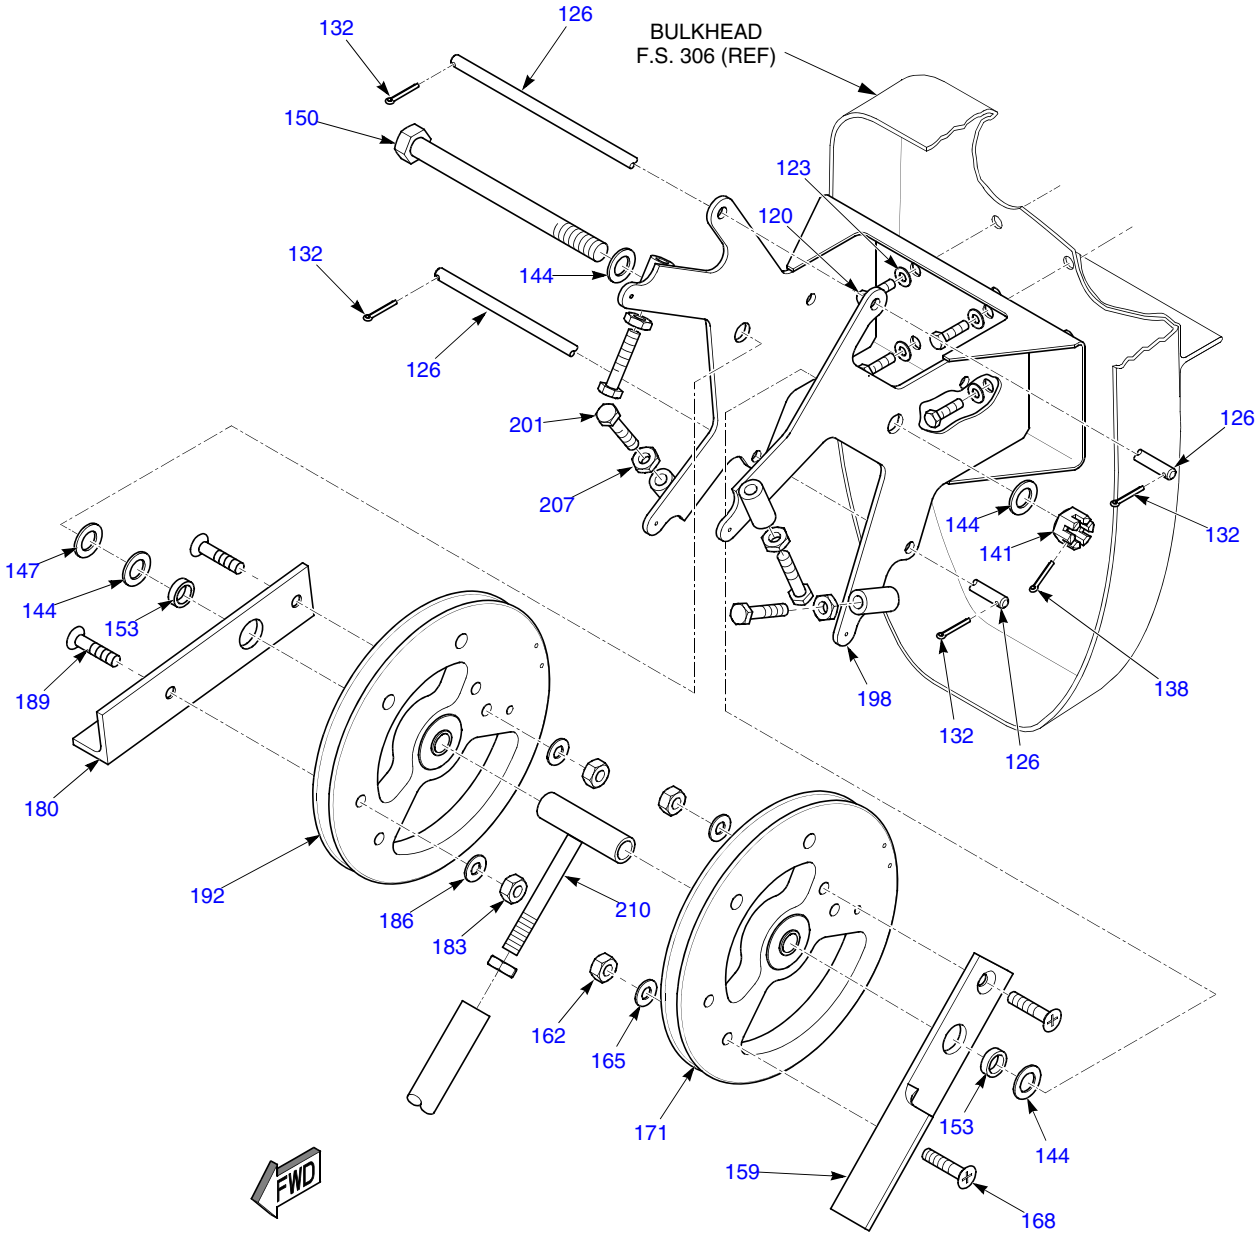

DETAIL B

Serials 22-0002 thru 22-0497.

SR22_PC27_1160A

Figure-05

Flight Controls: Empennage - Serials 22-0002 thru 22-0497 (2 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0497

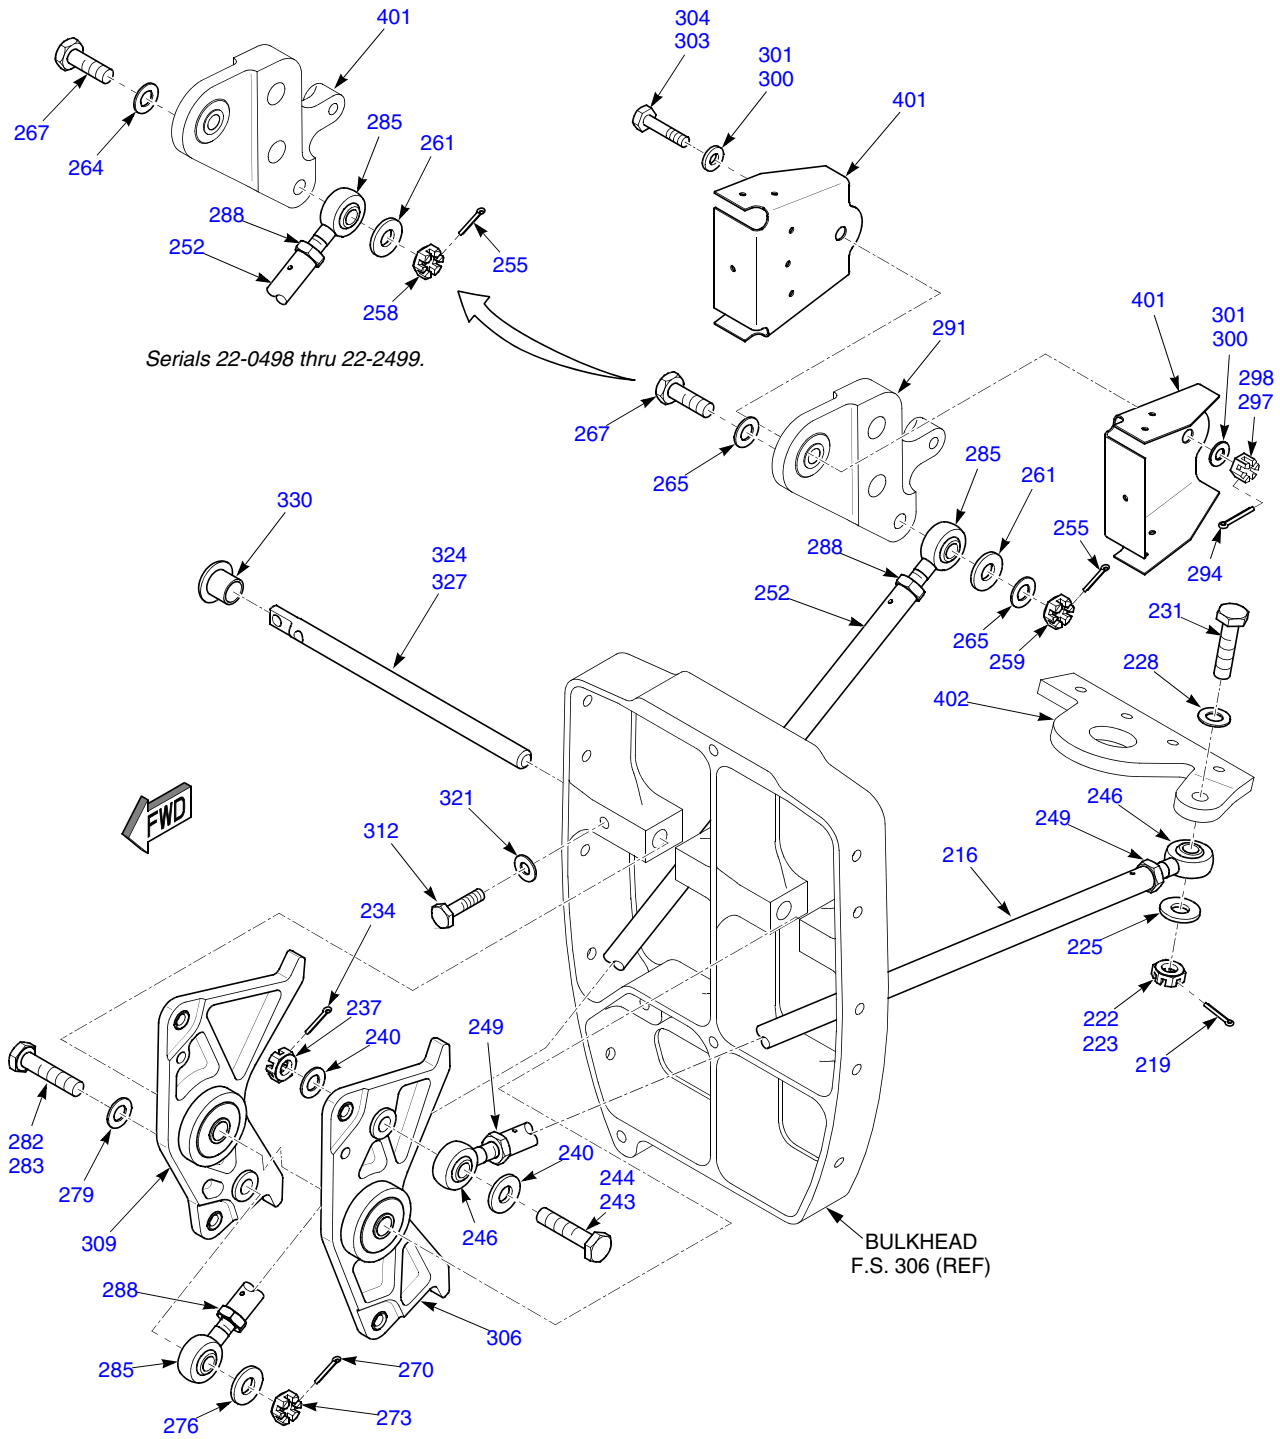

DETAIL C

Serials 22-0498 & subs, 22T-0001 & subs.

SR22_PC27_1304A

Figure-05

Flight Controls: Empennage - Serials 22-0498 & subs, 22T-0001 & subs (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	TO 22 / 22T	UNITS
-	1	FIGURE NO 05			FLIGHT CONTROLS (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·FLIGHT CONTROLS - EMPENNAGE	0002 / 0001	/	NP
	6	11887-001			··SUPPORT ROD	0002	0497	1
	9	MS21044N3		A	··NUT	0002	0497	1
	12	NAS1149F0332P		A	··WASHER	0002	0497	1
	15	NAS514P1032-14		A	··SCREW	0002	0497	1
	18	10678-002			··PUSH/PULL TUBE - RUDDER	0002	0497	1
	21	MS24665-132		A	··COTTER PIN	0002	0497	1
	24	MS17826-4		A	··NUT	0002	0497	1
	27	NAS1149F0432P		A	··WASHER	0002	0497	2
	30	NAS1149F0463P		A	··WASHER	0002	0497	2
	33	AN4-12		A	··BOLT	0002	0497	1
	36	MS24665-132		A	··COTTER PIN	0002	0497	1
	39	MS17825-4		A	··NUT	0002	0497	1
	42	NAS1149F0432P		A	··WASHER	0002	0497	1
	45	AN4-13		A	··BOLT	0002	0497	1
	48	10522-001			··ROD END SPACER	0002	0497	1
	51	11315-004			···ROD END	0002	0497	2
	54	AN316-4R		A	···JAM NUT	0002	0497	2
	57	10676-002			··PUSH/PULL TUBE - ELEVATOR	0002	0497	1
	60	MS24665-132		A	··COTTER PIN	0002	0497	1
	63	MS17826-4		A	··NUT	0002	0497	1
	66	NAS1149F0463P		A	··WASHER	0002	0497	3
	69	NAS1149F0432P		A	··WASHER	0002	0497	2
	72	AN4-12		A	··BOLT	0002	0497	1
	75	MS24665-132		A	··COTTER PIN	0002	0497	1
	78	MS17826-4		A	··NUT	0002	0497	1
	81	NAS1149F0463P		A	··WASHER	0002	0497	2
	84	NAS1149F0416P		A	··WASHER	0002	0497	1
	87	NAS6204-11D		A	··BOLT	0002	0497	1
	90	11315-004			···ROD END	0002	0497	2
	93	AN316-4R		A	···JAM NUT	0002	0497	2
	96	10679-004			··ELEVATOR BELLCRANK	0002	0497	1
	99	MS24665-132		A	··COTTER PIN	0002	0497	1
	102	MS17826-4		A	··NUT	0002	0497	1
	105	NAS1149F0463P		A	··WASHER	0002	0497	1
	108	NAS1149F0432P		A	··WASHER	0002	0497	1
	111	AN4-6		A	··BOLT	0002	0497	1
-	114	MS27641-4			··BALL BEARING	0002	0497	1
-	117	11873-002			··PULLEY GANG ASSEMBLY	0002	0497	1
	120	AN3-5A		A	··BOLT	0002	0497	4
	123	NAS1149F0332P		A	··WASHER	0002	0497	4
	126	NAS427W60			···PIN	0002	0497	2
					ALTERNATE FOR P/N 11996-060			
-	129	11996-060			···PIN	0002	0497	2
					ALTERNATE FOR P/N NAS427W60			
	132	MS24665-132		A	···COTTER PIN	0002	0497	4
-	135	NO PRT NUMBER			···EMPENNAGE PULLEY ASSEMBLY	0002	0497	NP
	138	MS24665-210		A	···COTTER PIN	0002	0497	1
	141	MS17825-5		A	···NUT	0002	0497	1
	144	NAS1149F0532P		A	···WASHER	0002	0497	4
	147	NAS1149F0563P		A	···WASHER	0002	0497	1
	150	AN175-37		A	···BOLT	0002	0497	1
	153	10325-008			···SPACER	0002	0497	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ···· NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	156	11874-001			····EMPENNAGE PULLEY SUBASSEMBLY, RUDDER	0002	0497	1
	159	11313-003			·····EMPENNAGE CONTROL STOP	0002	0497	1
	162	MS21083N3		A	·····NUT	0002	0497	2
	165	NAS1149F0332P		A	·····WASHER	0002	0497	2
	168	NAS514P1032-14		A	·····SCREW	0002	0497	2
	171	10326-004			·····PULLEY ASSY	0002	0497	1
-	174	MS21443-5B			·····BEARING	0002	0497	1
-	177	11875-001			····EMPENNAGE PULLEY SUBASSEMBLY, ELEVATOR	0002	0497	1
	180	11313-003			·····EMPENNAGE CONTROL STOP	0002	0497	1
	183	MS21083N3		A	·····NUT	0002	0497	2
	186	NAS1149F0332P		A	·····WASHER	0002	0497	2
	189	NAS514P1032-14		A	·····SCREW	0002	0497	2
	192	10326-004			·····PULLEY ASSY	0002	0497	1
-	195	MS21443-5B			·····BEARING	0002	0497	1
	198	11872-003			····BRACKET, PULLEY GANG	0002	0497	1
	201	NAS1801-4-17			·····SCREW	0002	0497	4
					ALTERNATE FOR P/N NAS1801-4-15			
-	204	NAS1801-4-15			·····SCREW	0002	0497	4
					ALTERNATE FOR P/N NAS1801-4-17			
	207	NAS1423-4		A	·····JAM NUT	0002	0497	4
	210	11876-001			····SUPPORT ROD WELDMENT	0002	0497	1
	216	14899-001			··PUSH/PULL TUBE - RUDDER	0498 / 0001	/	1
	219	MS24665-132		A	··COTTER PIN	0498 / 0001	/	1
	222	MS17826-4		A	··NUT	0498	1908	1
	223	MS17825-4		A	··NUT	1909 / 0001	/	1
	225	MS27183-52		A	··WASHER	0498 / 0001	/	1
	228	NAS1149D0432J		A	··WASHER	0498 / 0001	/	1
	231	AN4-11		A	··BOLT	0498 / 0001	/	1
	234	MS24665-132		A	··COTTER PIN	0498 / 0001	/	1
	237	MS17826-4		A	··NUT	0498 / 0001	/	1
	240	NAS1149D0432J		A	··WASHER	0498 / 0001	/	2
	243	AN4-11		A	··BOLT	0498	1961	1
	244	NAS6204-14D		A	··BOLT	1962 / 0001	/	1
	246	11315-004			···ROD END	0498 / 0001	/	2
	249	AN316-4R		A	···JAM NUT	0498 / 0001	/	2
	252	14899-002			··PUSH/PULL TUBE - ELEVATOR	0498 / 0001	/	1
	255	MS24665-132		A	··COTTER PIN	0498 / 0001	/	1
	258	MS17826-4		A	··NUT	0498	2499	1
	259	MS17825-4		A	··NUT	2500 / 0001	/	1
	261	MS27183-52		A	··WASHER	0498 / 0001	/	1
	264	NAS1149D0432J		A	··WASHER	0498	2499	1
	265	NAS1149D0463J		A	··WASHER	2500 / 0001	/	2
	267	AN4-12		A	··BOLT	0498 / 0001	/	1
	270	MS24665-132		A	··COTTER PIN	0498 / 0001	/	1
	273	MS17826-4		A	··NUT	0498 / 0001	/	1
	276	MS27183-52		A	··WASHER	0498 / 0001	/	1
	279	NAS1149D0432J		A	··WASHER	0498 / 0001	/	1
	282	AN4-11		A	··BOLT	0498	1961	1
	283	NAS6204-13D		A	··BOLT	1962 / 0001	/	1
	285	11315-004			···ROD END	0498 / 0001	/	2
	288	AN316-4R		A	···JAM NUT	0498 / 0001	/	2
	291	14908-001			··AFT ELEVATOR BELLCRANK	0498 / 0001	/	1
	294	MS24665-132		A	··COTTER PIN	0498 / 0001	/	1
	297	MS17826-4		A	··NUT	0498	2009	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ···· NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	298	MS17825-4		A	··NUT	2010 / 0001	/	1
	300	NAS1149D0432J		A	··WASHER	0498	2009	2
	301	NAS1149D0463J		A	··WASHER	2010 / 0001	/	2
	303	AN4-6		A	··BOLT	0498	2009	1
	304	NAS6204-8D		A	··BOLT	2010 / 0001	/	1
	306	14912-002			··RUDDER BELLCRANK	0498 / 0001	/	1
	309	14914-001			··ELEVATOR BELLCRANK	0498 / 0001	/	1
	312	NAS1351-3-14		A	··BOLT	0498 / 0001	/	1
					ALTERNATE FOR P/N AN3-6A			
-	318	AN3-6A		A	··BOLT	0498 / 0001	/	1
					ALTERNATE FOR P/N NAS1351-3-14			
	321	NAS1149D0332J		A	··WASHER	0498 / 0001	/	1
	324	14930-001		A	··SHAFT	0498	0820	1
	327	20433-001		A	··SHAFT	0821 / 0001	/	1
	330	51259-001			··PLUG	0498 / 0001	/	1
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 27-30-02 DET			PITCH TRIM MOTOR ASSEMBLY			
	401	RF 55-10-01 DET			HINGE BRACKET, ELEVATOR			
	402	RF 55-40-01 DET			RUDDER ASSEMBLY			

EFFECTIVITY:
All

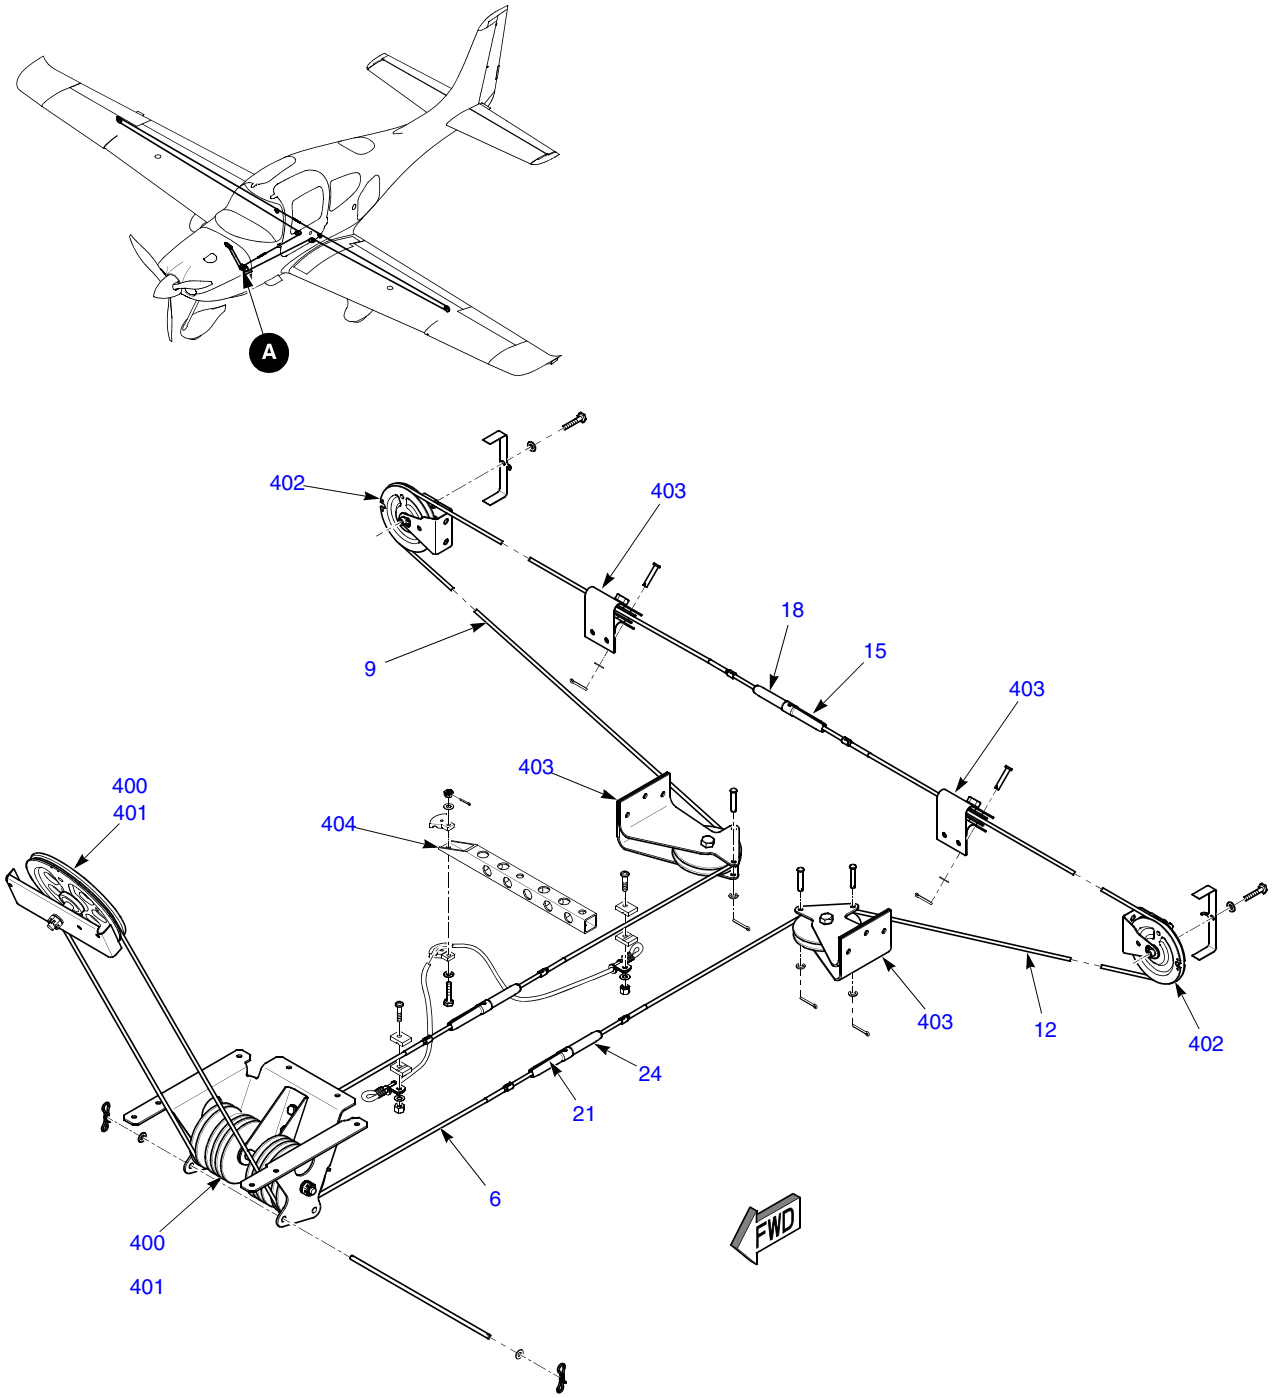

Figure-01
Aileron System Cables

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ·····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			FLIGHT CONTROLS (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·AILERON SYSTEM CABLES	0002 / 0001	/	NP
	6	13038-001			··CABLE ASSEMBLY, FUSELAGE	0002 / 0001	/	1
	9	13038-002			··CABLE ASSEMBLY, RIGHT WING	0002 / 0001	/	1
	12	13038-003			··CABLE ASSEMBLY, LEFT WING	0002 / 0001	/	1
	15	MS21256-1		A	··CLIP, TURNBUCKLE	0002 / 0001	/	2
	18	MS21251B5S		A	··TURNBUCKLE BODY	0002 / 0001	/	1
	21	MS21256-2		A	··CLIP, TURNBUCKLE	0002 / 0001	/	4
	24	MS21251B5L		A	··TURNBUCKLE BODY	0002 / 0001	/	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 27-00-02 DET			FLIGHT CONTROL - CONSOLE			
	401	RF 27-10-03 DET			ROLL TRIM SYSTEM			
	402	RF 27-10-02 DET			AILERON SYSTEM PULLEYS			
	403	RF 27-20-04 DET			AILERON/RUDDER INTERCONNECT			

EFFECTIVITY:
All

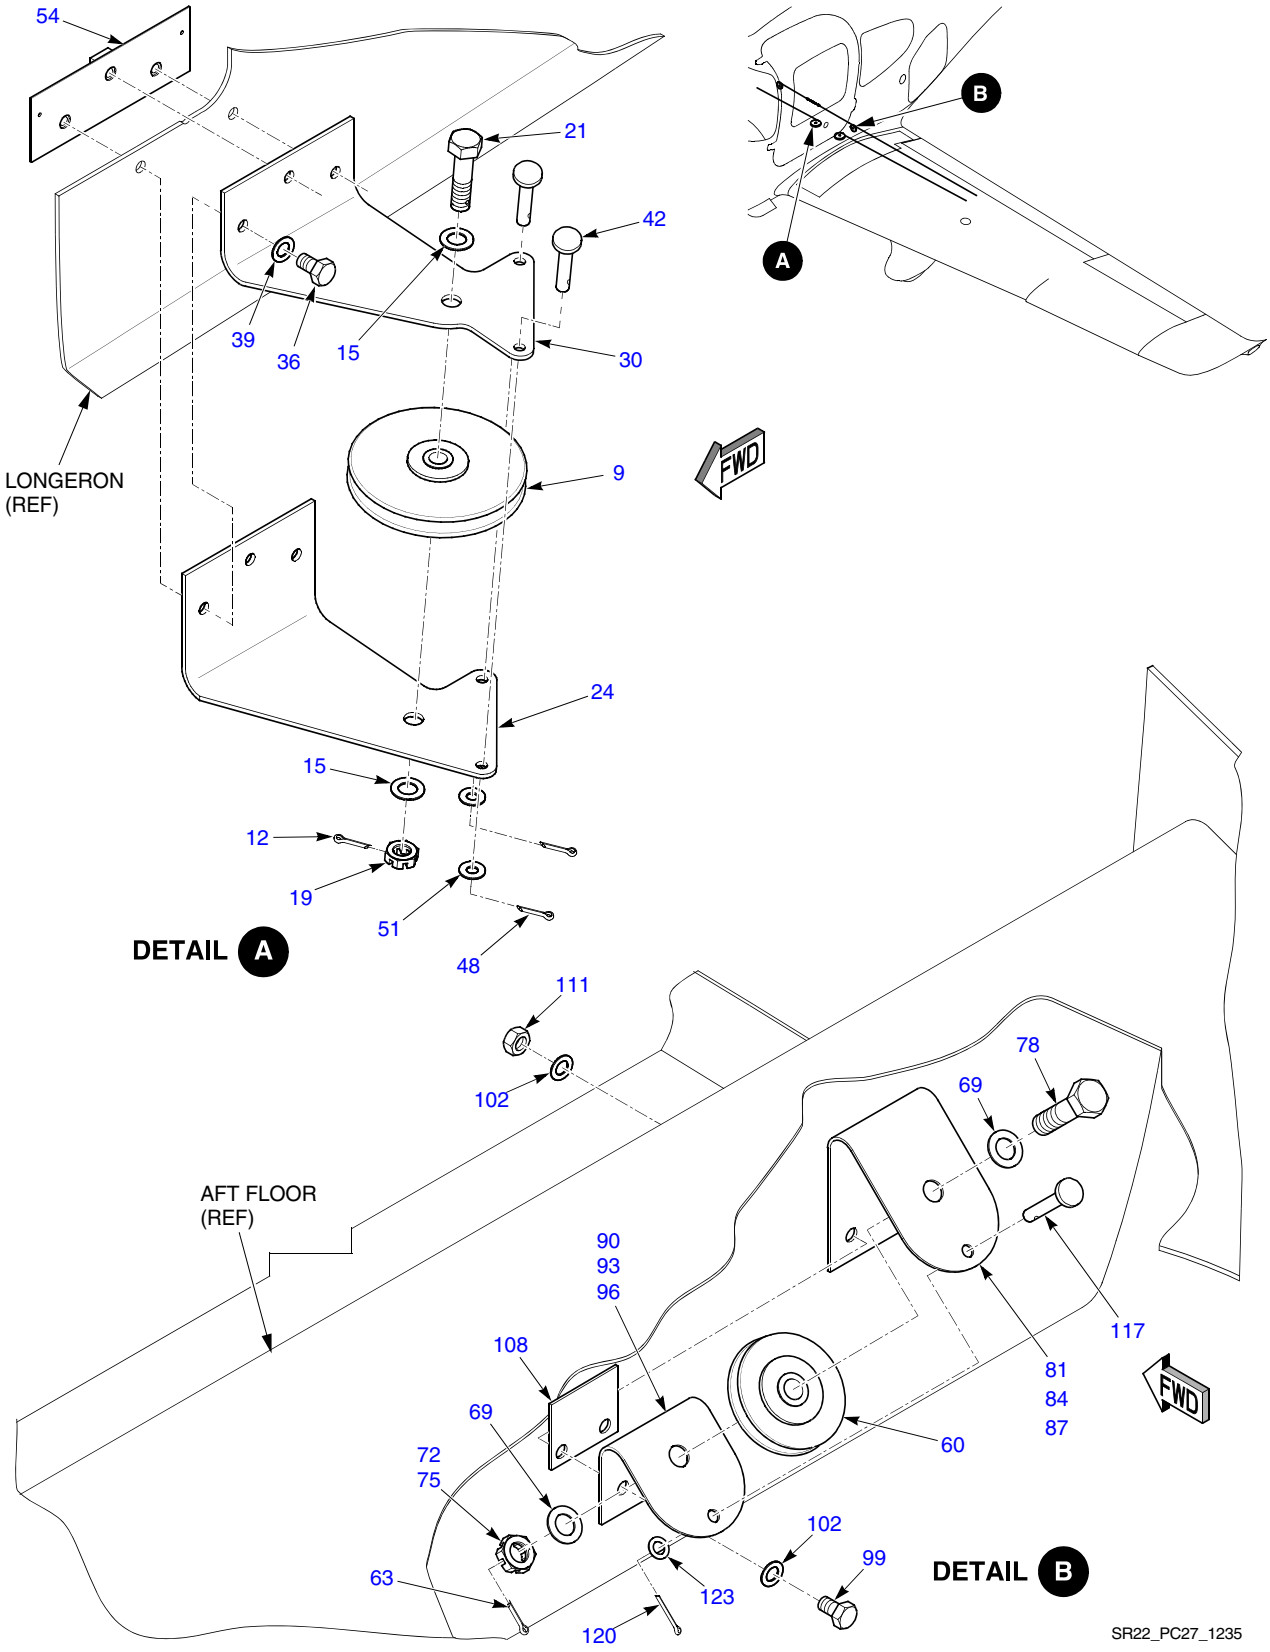

Figure-02
Aileron System Pulleys

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		FLIGHT CONTROLS (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·AILERON SYSTEM PULLEYS	0002 / 0001	/	NP
-	6	NO PRT NUMBER			··KICKOUT PULLEY ASSEMBLY	0002 / 0001	/	2
	9	MS20220-2			···PULLEY	0002 / 0001	/	2
	12	MS24665-134		A	···COTTER PIN	0002 / 0001	/	2
	15	NAS1149F0532P		A	···WASHER	0002 / 0001	/	4
-	18	MS17826-5		A	···NUT	0002	1834	2
	19	MS17825-5		A	···NUT	1835 / 0001	/	2
	21	AN5-12		A	···BOLT	0002 / 0001	/	2
	24	10341-005			···BRACKET, BOTTOM LH	0002 / 0001	/	2
-	27	10341-006			···BRACKET, BOTTOM RH	0002 / 0001	/	2
	30	10341-007			···BRACKET, TOP LH	0002 / 0001	/	2
-	33	10341-008			···BRACKET, TOP RH	0002 / 0001	/	2
	36	AN3-6A		A	···BOLT	0002 / 0001	/	6
	39	NAS1149F0332P		A	···WASHER	0002 / 0001	/	6
	42	MS20392-2C29			···CLEVIS PIN	0002 / 0001	/	4
					ALTERNATE FOR P/N NAS427W015			
-	45	NAS427W015			···CLEVIS PIN	0002 / 0001	/	4
					ALTERNATE FOR P/N MS20392-2C29			
	48	MS24665-132		A	···COTTER PIN	0002 / 0001	/	4
	51	NAS1149F0332P		A	···WASHER	0002 / 0001	/	4
	54	11303-001			···BACKING PLATE	0002 / 0001	/	2
-	57	NO PRT NUMBER			··CROSS-OVER PULLEY ASSEMBLY	0002 / 0001	/	2
	60	MS20220-1			···PULLEY	0002 / 0001	/	2
	63	MS24665-134		A	···COTTER PIN	0002 / 0001	/	2
-	66	NAS1149F0532P		A	···WASHER	0002 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0532J			
	69	NAS1149F0532J		A	···WASHER	0002 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0532P			
	72	MS17826-5		A	···NUT	0002	0820	2
	75	MS17825-5		A	···NUT	0821 / 0001	/	2
	78	AN5-11		A	···BOLT	0002 / 0001	/	2
	81	10342-003			···BRACKET	0002	0820	2
	84	20224-001			···BRACKET	0821	2437	2
	87	16876-001			···BRACKET	2438 / 0001	/	2
	90	10342-004			···BRACKET	0002	0820	2
	93	20223-001			···BRACKET	0821	2437	2
	96	16870-001			···BRACKET	2438 / 0001	/	2
	99	AN3-6A		A	···BOLT	0002 / 0001	/	4
	102	NAS1149F0332P		A	···WASHER	0002 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0532P			
-	105	NAS1149D0532P		A	···WASHER	0002 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0332P			
	108	11490-101		A	···SHIM	0002	0820	AR
	111	MS21044N3		A	···NUT	0002 / 0001	/	4
-	114	MS20392-2C25			··CLEVIS PIN	0002 / 0001	/	4
					ALTERNATE FOR P/N NAS427W015			
	117	NAS427W015			···CLEVIS PIN	0002 / 0001	/	4
					ALTERNATE FOR P/N MS20392-2C29			
	120	MS24665-132		A	···COTTER PIN	0002 / 0001	/	2
	123	NAS1149F0332P		A	···WASHER	0002 / 0001	/	2

SYMBOL NOTES:

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	 TO 22 / 22T	UNITS
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334 AND 22-2420; REFER TO 22-2438 FOR PRT IDENTIFICATION.			

Intentionally Left Blank

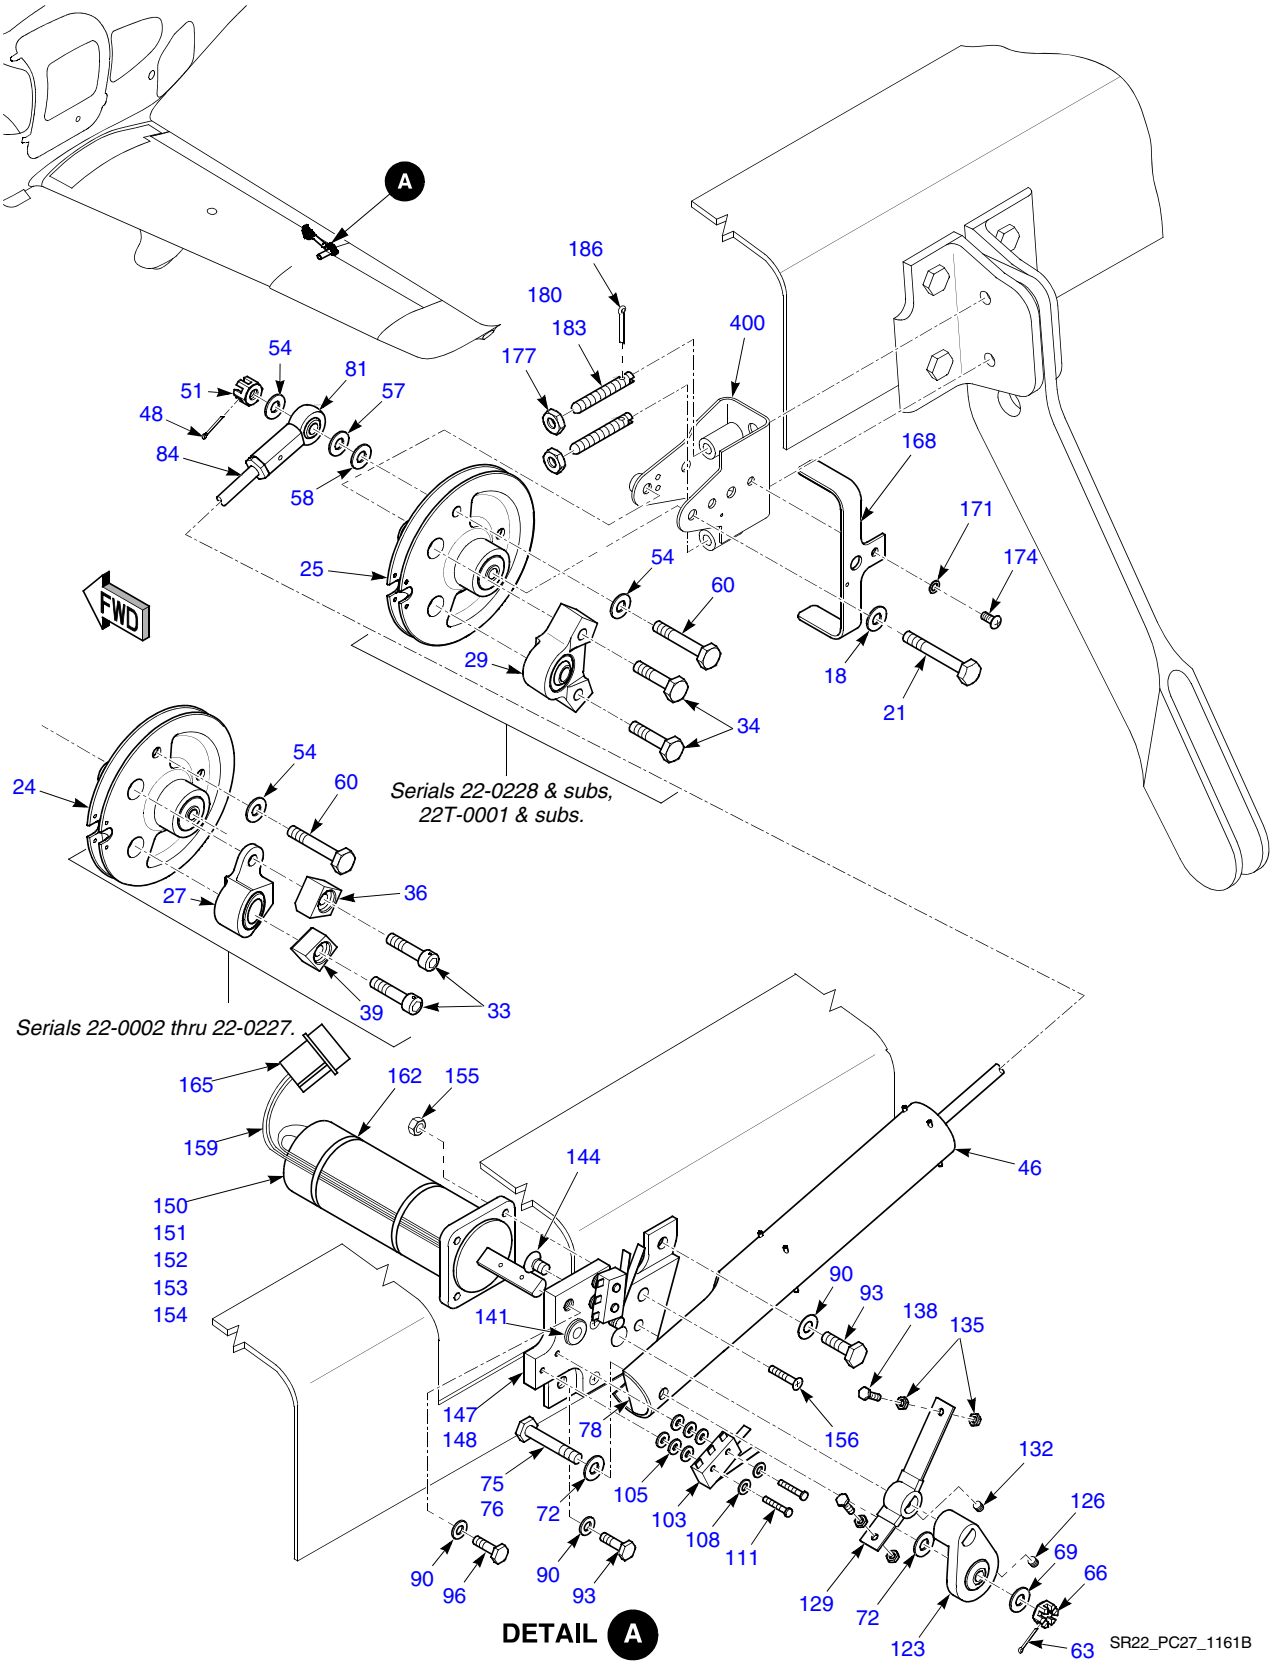

Figure-03
Roll Trim System

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		FLIGHT CONTROLS INSTALLATION (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·ROLL TRIM SYSTEM	0002 / 0001	/	NP
-	6	NO PRT NUMBER			··FLIGHT CONTROLS INSTALLATION, WING, LH	0002 / 0001	/	NP
-	9	NO PRT NUMBER			··FLIGHT CONTROLS INSTALLATION, WING, RH	0002 / 0001	/	NP
-	12	12538-002			···AILERON ACTUATION PULLEY ASSY	0002	0227	1
-	15	14815-001			···AILERON ACTUATION PULLEY ASSY	0228 / 0001	4001 / 0616	1
					FOR SPARES USE P/N 14815-002			
-	16	14815-002			···AILERON ACTUATION PULLEY ASSY	4002 / 0617	/	1
	18	NAS1149F0332P		A	···WASHER	0002 / 0001	/	1
	21	AN3H14A		A	···BOLT	0002 / 0001	/	1
	24	12538-101			····AILERON ACTUATION PULLEY SUBASSY	0002	0227	1
	25	14815-101			····AILERON ACTUATION PULLEY SUBASSY	0228 / 0001	/	1
	27	12538-103			····BEARING BLOCK SUBASSY	0002	0227	1
-	28	14815-102			····BEARING BLOCK SUBASSY	0228 / 0001	4001 / 0616	1
	29	14815-103			····BEARING BLOCK SUBASSY	4002 / 0617	/	1
-	30	NAS1351-3H13		A	····CAP SCREW	0002	0009	2
					FOR SPARES USE P/N NAS1351-3H13P			
	33	NAS1351-3H13P		A	····CAP SCREW	0010	0227	2
	34	AN3H7A			····BOLT, AN3 DRILLED HEAD	0228 / 0001	/	
	36	13050-001			···SPACER, BLOCK	0002	0227	1
	39	13050-002			···SPACER, BLOCK	0002	0227	1
-	42	10780-004			···ROLL TRIM CARTRIDGE ASSEMBLY LH ONLY	0002	0359	1
					BEFORE SB2X-27-08			
					FOR SPARES USE P/N 15660-001			
-	45	10780-005			···ROLL TRIM CARTRIDGE ASSEMBLY LH ONLY	0360	0753	1
					BEFORE SB2X-27-08			
					FOR SPARES USE P/N 15660-001			
	46	15660-001			···ROLL TRIM CARTRIDGE ASSEMBLY LH ONLY	0754 / 0001	/	1
					AFTER SB2X-27-08			
	48	MS24665-132		A	···COTTER PIN	0002 / 0001	/	1
	51	MS17826-3		A	···NUT	0002 / 0001	/	1
	54	NAS1149F0316P		A	···WASHER	0002 / 0001	/	2
	57	NAS1149F0332P		A	···WASHER	0002 / 0001	/	1
	58	NAS1149F0363P		A	···WASHER	0002 / 0001	/	
	60	NAS6603D12		A	···BOLT	0002 / 0001	/	1
	63	MS24665-132		A	···COTTER PIN	0002 / 0001	/	1
	66	MS17826-3		A	···NUT	0002 / 0001	/	1
	69	AN970-3		A	···WASHER	0002 / 0001	/	1
	72	NAS1149F0316P		A	···WASHER	0002 / 0001	/	2
	75	AN3-11		A	···BOLT	0002	2172	1
	76	NAS6203-13D		A	···BOLT	2173 / 0001	/	1
	78	11216-001			···SPACER	0002 / 0001	/	1
	81	11314-003			····ROD END	0002 / 0001	/	1
	84	AN315-3R		A	····JAM NUT	0002 / 0001	/	1
-	86	12546-001			···ROLL TRIM MOTOR ASSEMBLY LH ONLY	0002	2043	1
					FOR SPARES USE P/N 12546-001S			
-	87	12546-002			···ROLL TRIM MOTOR ASSEMBLY LH ONLY	2044	2544	1
					FOR SPARES USE P/N 12546-003S			
-	88	12546-003	@		···ROLL TRIM MOTOR ASSEMBLY LH ONLY	2545 / 0001	/	1
					FOR SPARES USE P/N 12546-003S			
-	89	19946-001	#		···ROLL TRIM MOTOR ASSEMBLY LH ONLY	3026 / 0001	/	1
					FOR SPARES USE P/N 19946-001S			
	90	NAS1149F0316P		A	···WASHER	0002 / 0001	/	3
	93	NAS6603-3		A	···BOLT	0002 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ···· NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	96	AN3-6A		A	···BOLT	0002 / 0001	/	1
-	99	12537-001			····ROLL TRIM MOTOR SUBASSEMBLY	0002	2043	1
-	100	12537-002			····ROLL TRIM MOTOR SUBASSEMBLY	2044	2544	1
-	101	12537-003	@		····ROLL TRIM MOTOR SUBASSEMBLY	2545 / 0001	/	1
-	102	12537-005	#		····ROLL TRIM MOTOR SUBASSEMBLY	3026 / 0001	/	1
	103	50610-001			·····LIMIT SWITCH	0002 / 0001	/	2
	105	NAS1149FN232P		A	·····WASHER	0002 / 0001	/	12
	108	NAS1149FN216P		A	·····WASHER	0002 / 0001	/	4
	111	NAS1191-02T8B		A	·····SCREW	0002 / 0001	/	4
-	114	11155-003			·····OFFSET ARM	0002	0233	1
					FOR SPARES USE P/N 11155-004			
					FOR SPARES USE P/N 15871-001			
-	117	11155-004			·····OFFSET ARM	0234	1435	1
					FOR SPARES USE P/N 15871-001			
-	120	15871-001			·····OFFSET ARM	1436 / 0001	/	1
	123	12537-101			·····OFFSET ARM ASSY	0002 / 0001	/	1
	126	50577-131		A	·····SET SCREW	0002 / 0001	/	1
	129	11220-004			·····LIMIT SWITCH ADJUSTMENT ARM	0002 / 0001	/	1
	132	50577-131		A	·····SET SCREW	0002 / 0001	/	1
	135	MS35649-242		A	·····JAM NUT	0002 / 0001	/	4
	138	NAS1801-04-7			·····SCREW	0002 / 0001	/	2
	141	MS35489-33			·····GROMMET	0002 / 0001	/	1
	144	NAS514P1032-5			·····SCREW	0002 / 0001	/	2
	147	10781-003			·····BRACKET	0002	2043	1
	148	18349-001			·····BRACKET	2044 / 0001	/	1
	150	11796-002			·····ROLL TRIM MOTOR	0002	2544	1
					FOR SPARES USE P/N 11796-006			
	151	11796-004			·····ROLL TRIM MOTOR	2545	2872	1
					FOR SPARES USE P/N 11796-006			
	152	11796-005			·····ROLL TRIM MOTOR	2873	3492	1
					FOR SPARES USE P/N 11796-006			
	153	11796-006	@		·····ROLL TRIM MOTOR	3493 / 0001	/	1
	154	11796-007	#		·····ROLL TRIM MOTOR	3026 / 0001	/	1
	155	MS21044N04		A	·····LOCKNUT	0002 / 0001	/	4
	156	NAS514P440-10		A	·····SCREW	0002 / 0001	/	4
	159	50239-020			···WIRE HARNESS	0002 / 0001	/	1
	162	PLT2S-C		A	···CABLE TIE	0002 / 0001	/	2
	165	50158-003			····CONNECTOR	0002 / 0001	/	1
	168	11154-004			··CABLE RETAINER	0002 / 0001	/	1
	171	NAS1149FN616P		A	··WASHER	0002 / 0001	/	1
	174	MS35206-228		A	··SCREW	0002 / 0001	/	1
	177	AN315-3R			··JAM NUT	0002 / 0001	/	2
	180	11171-002			··THREADED ROD	0002	0004	
	183	11171-003			··THREADED ROD	0005 / 0001	/	2
	186	MS24665-132		A	··COTTER PIN	0002 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 57-40-01 DET			BRACKET, AILERON ACTUATION PULLEY, WING			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					1) SERIAL NUMBER 22-3713, 22-3721; REFER TO 22-3723 FOR PART IDENTIFICATION.			
			@		INSTALLED ON AIRCRAFT W/ OPTIONAL SYSTEM 55X/55R AUTOPILOT.			
			#		INSTALLED ON AIRCRAFT W/ OPTIONAL GFC 700 AUTOPILOT.			

EFFECTIVITY:
All

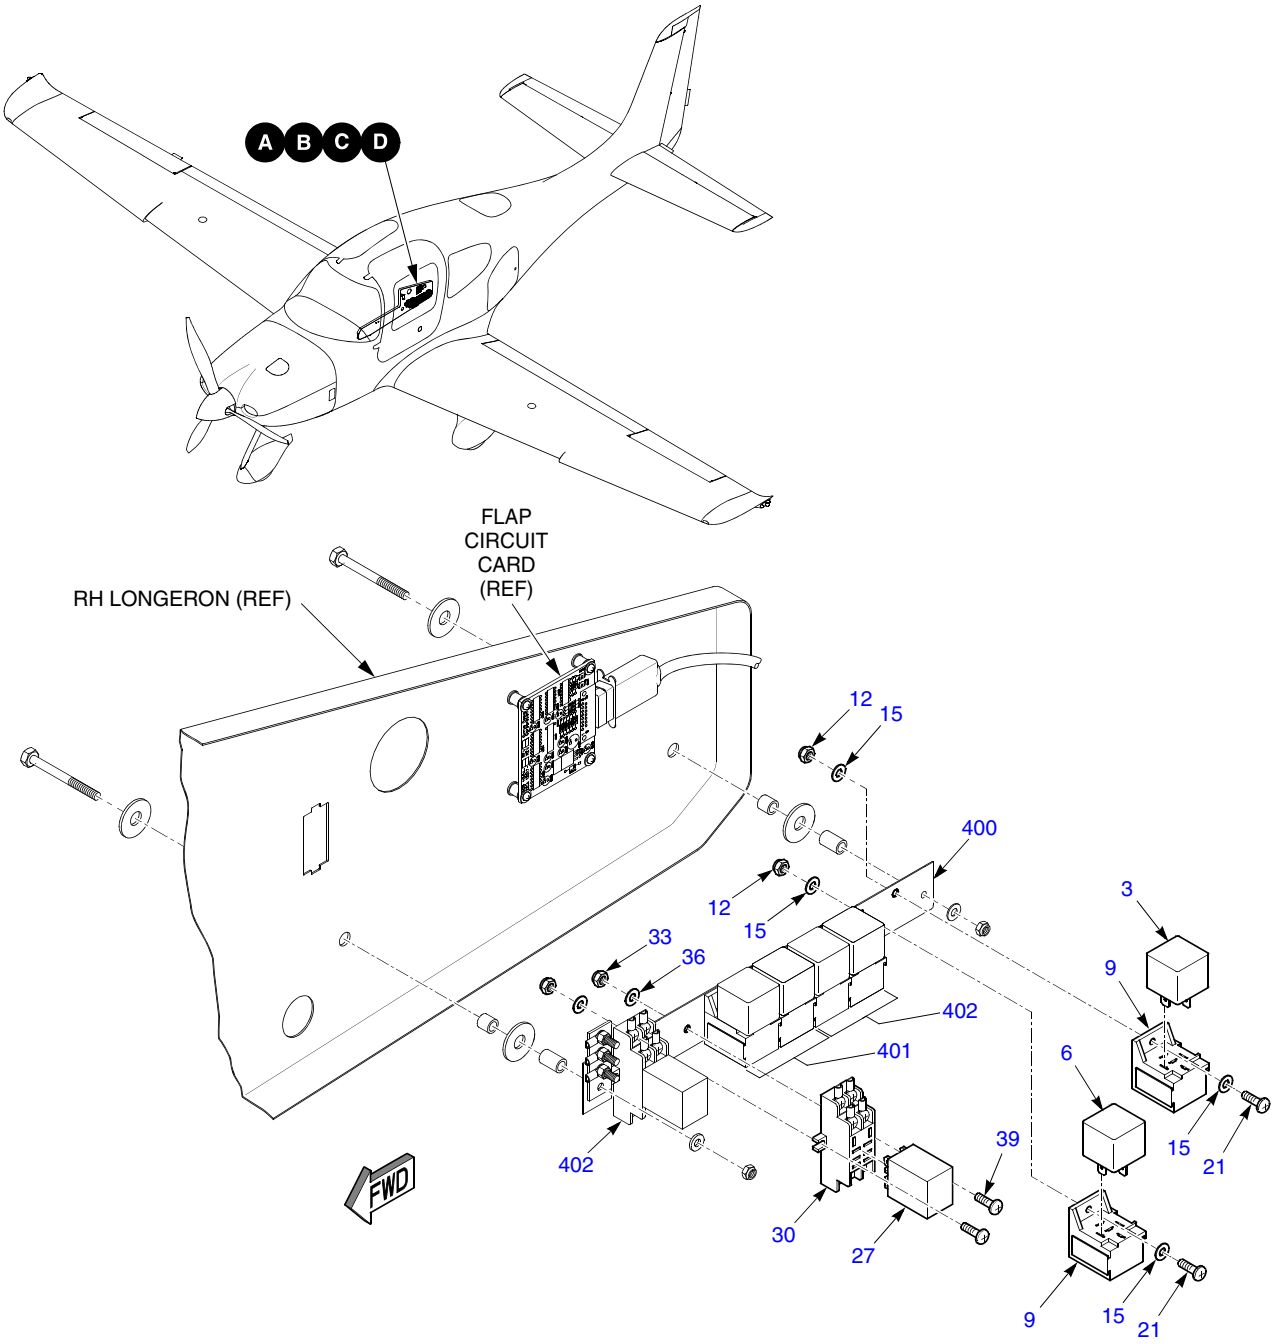

Serials 22-0002 thru 22-0820.

DETAIL A

SR22_PC27_2020

Figure-04
Roll Relay Assembly - Serials 22-0002 thru 22-0820 (1 of 4)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

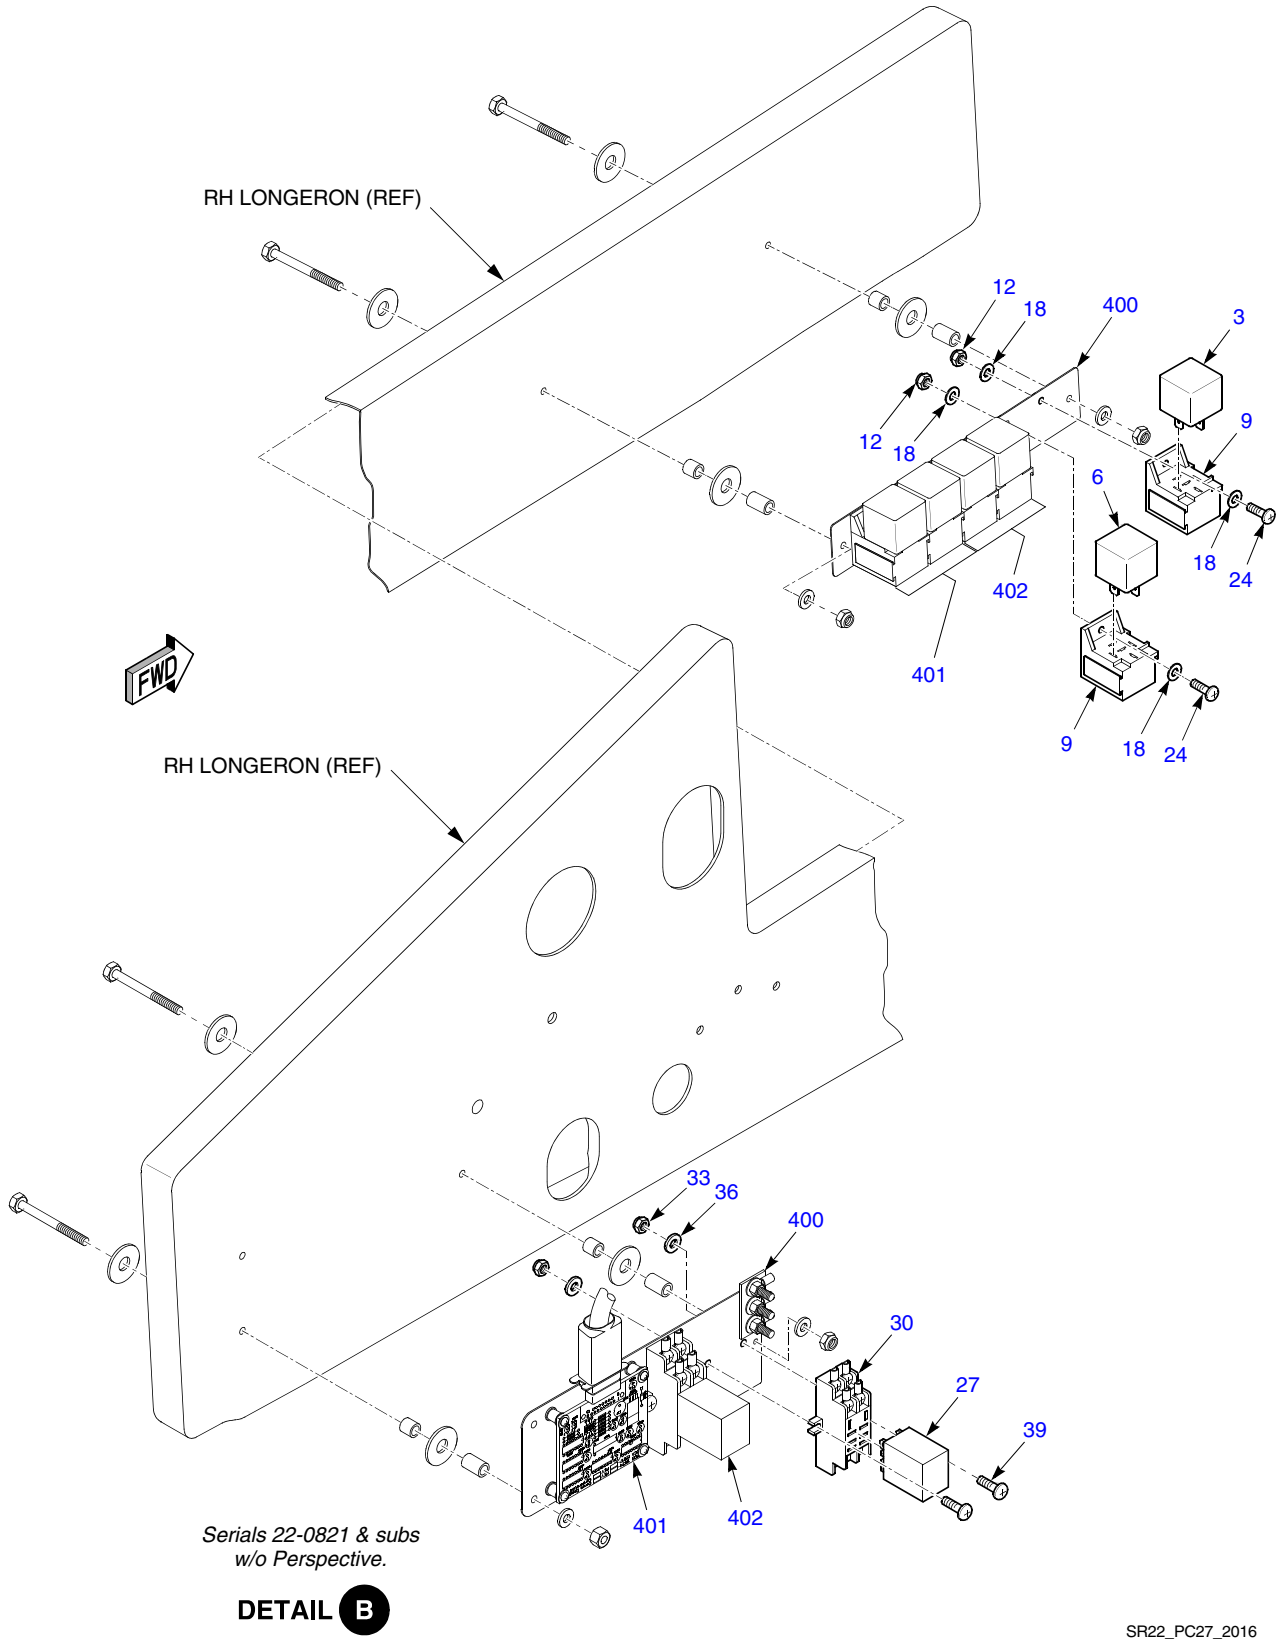

Figure-04

Roll Relay Assembly - Serials 22-0821 & subs w/o Perspective Avionics (2 of 4)

EFFECTIVITY:
Serials 22-0821 & subs w/o Perspective Avionics

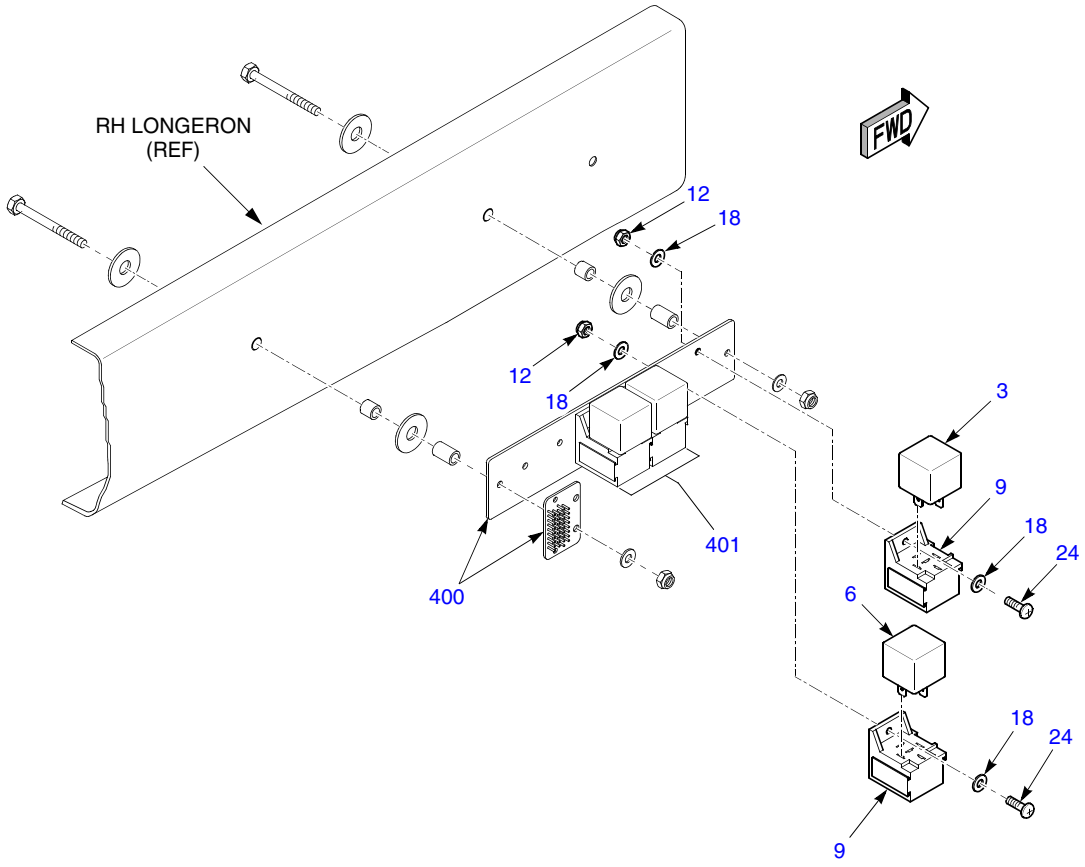

Serials 22-3026 & subs,
22T-0001 & subs w/ Perspective.

DETAIL C

SR22_PC27_2024

Figure-04

Roll Relay Assembly - Serials 22-3026 & subs, 22T-0001 & subs w/ Perspective (3 of 4)

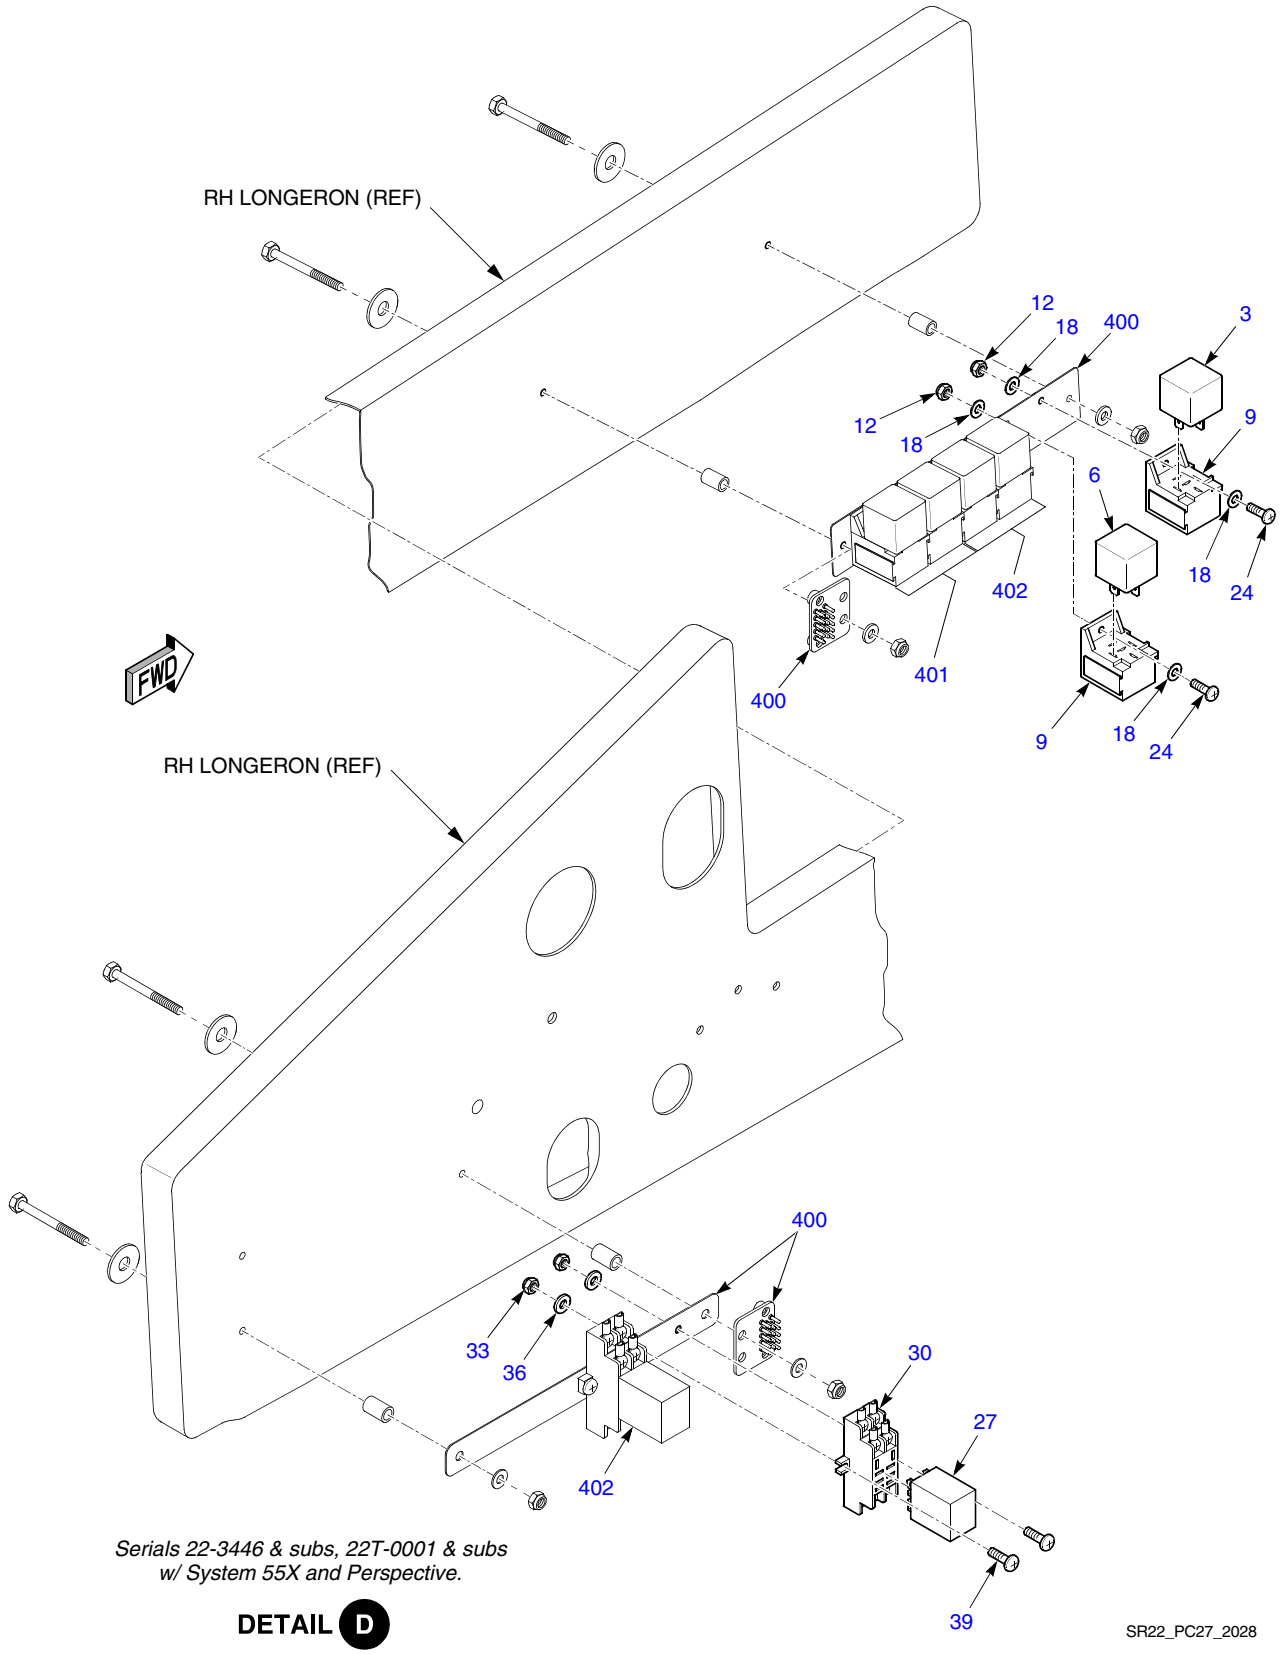

Figure-04

Roll Relay Assembly - Serials 22-3446 & subs, 22T-0001 & subs w/ System 55X and Persp (4 of 4)

EFFECTIVITY:
Serials 22-3446 & subs, 22T-0001 & subs w/ System 55X and Persp

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	NO PRT NUMBER			ROLL TRIM RELAY INSTALLATION	0002		NP
	3	50288-001			·RELAY, ROLL RIGHT	0002		1
	6	50288-001			·RELAY, ROLL LEFT	0002		1
	9	50289-001			·RELAY SOCKET	0002		2
	12	MS21044N3		A	·NUT	0002		2
	15	NAS1149F0332P		A	·WASHER	0002	0820	4
	18	NAS1149F0316P		A	·WASHER	0821		4
	21	MS35207-264		A	·SCREW	0002	0820	2
	24	MS35207-263		A	·SCREW	0821		2
	27	50293-001			·RELAY, ROLL AUTOPILOT	0002		1
	30	12724-002			·RELAY SOCKET	0002		1
	33	MS21044N08		A	·NUT	0002		2
	36	NAS1149FN832P		A	·WASHER	0002		2
	39	MS35206-246		A	·SCREW	0002		2
-	42	50295-001			·RELAY HOLD DOWN SPRING	0002	3740	1
					FOR SPARES USE P/N 53176-001			
-	45	53176-001			·RELAY HOLD DOWN SPRING	3741		1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-10 DET			RELAY MOUNTING PLATE INSTALLATION			
	401	RF 27-50-01 DET			FLAP RELAY ASSEMBLY			
	402	RF 27-30-03 DET			PITCH RELAY ASSEMBLY			

Intentionally Left Blank

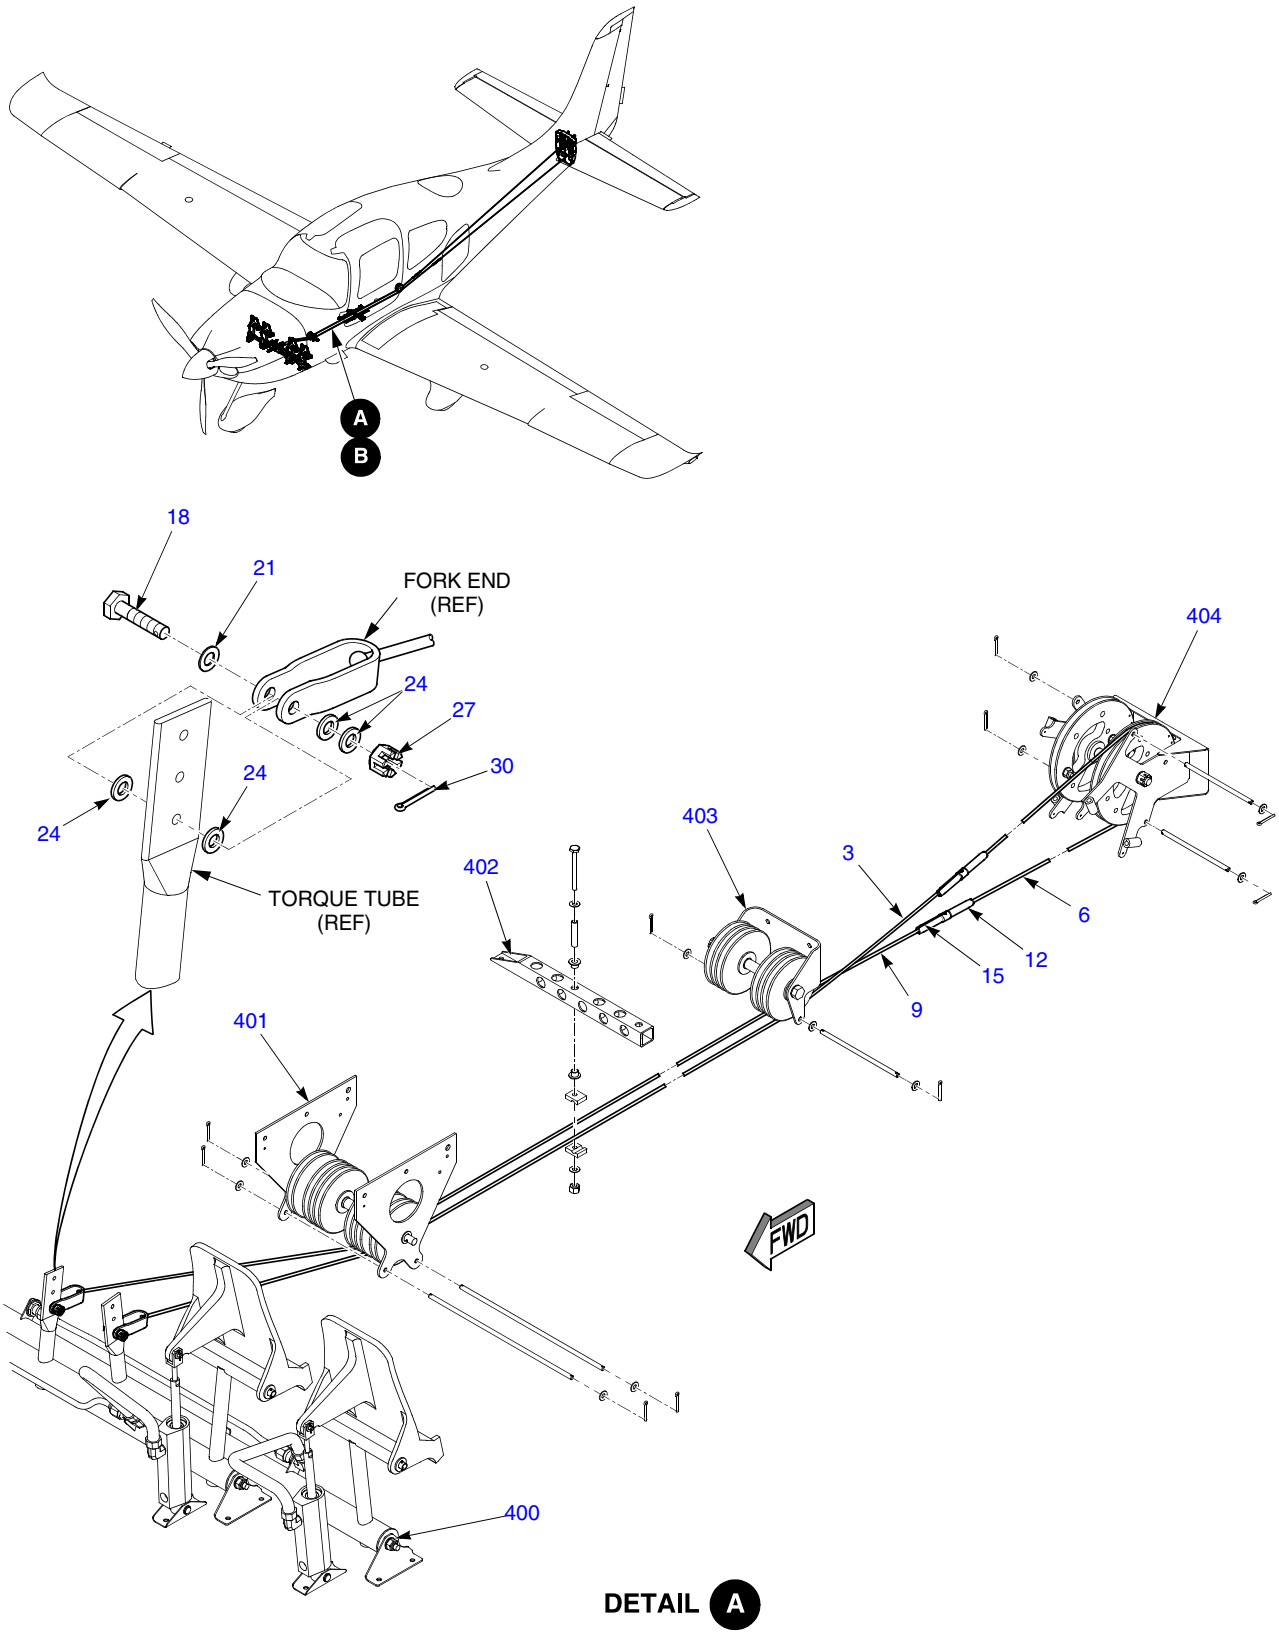

DETAIL A

Serials 22-0002 thru 22-0497.

SR22_PC27_1237B

Figure-01

Rudder System Cables - Serials 22-0002 thru 22-0497 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0497

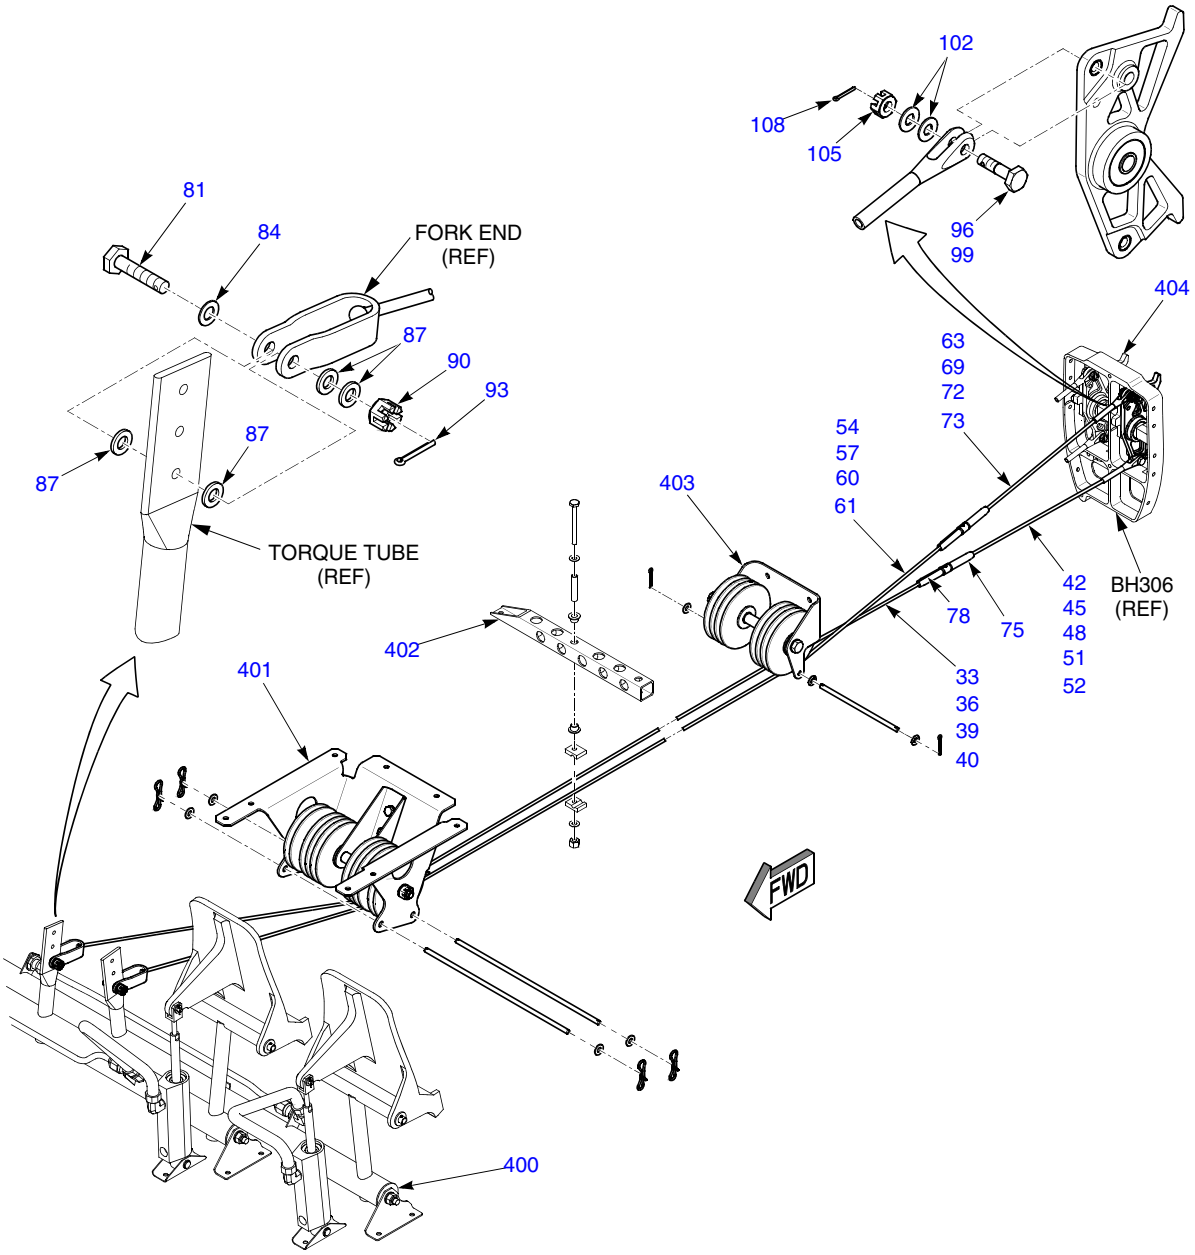

DETAIL B

Serials 22-0498 & subs,
22T-0001 & subs.

SR22_PC27_1303

Figure-01
Rudder System Cables - Serials 22-0498 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0498 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FLIGHT CONTROLS INSTALLATION (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	2	NO PRT NUMBER			·RUDDER SYSTEM CABLES	0002 / 0001	/	NP
	3	13037-002			··CABLE ASSEMBLY, RUDDER, RIGHT	0002	0497	1
	6	13037-001			··CABLE ASSEMBLY, RUDDER, AFT	0002	0497	1
	9	13037-003			··CABLE ASSEMBLY, RUDDER, LEFT	0002	0497	1
	12	MS21251B5L		A	··TURNBUCKLE BODY, CLIP LOCKING	0002	0497	2
	15	MS21256-2		A	··CLIP, LOCKING, TURNBUCKLE	0002	0497	4
	18	AN3-7		A	··BOLT	0002	0497	2
	21	NAS1149F0332P		A	··WASHER	0002	0497	2
	24	NAS1149F0363P		A	··WASHER	0002	0497	8
	27	MS17825-3		A	··NUT	0002	0497	2
	30	MS24665-134		A	··COTTER PIN	0002	0497	2
	33	13037-002			··CABLE ASSEMBLY, RUDDER, RIGHT	0498	1826	1
	36	17035-002	$		··CABLE ASSEMBLY, RUDDER, RIGHT	1827 / 0001	/	1
	39	19884-002	#		··CABLE ASSEMBLY, RUDDER, RIGHT	3026 / 0001	3914 / 0441	1
	40	19884-004			··CABLE ASSEMBLY, RUDDER, RIGHT	3915 / 0442	/	1
	42	14922-001			··CABLE ASSEMBLY, RUDDER, RIGHT, AFT	0498	1826	1
	45	17034-002	$		··CABLE ASSEMBLY, RUDDER, RIGHT, AFT	1827 / 0001	/	1
	48	19885-002	#		··CABLE ASSEMBLY, RUDDER, RIGHT, AFT	3026 / 0001	3786 / 0187	1
					FOR SPARES USE P/N 19885-004			
	51	19885-004	#		··CABLE ASSEMBLY, RUDDER, RIGHT, AFT	3787 / 0188	3914 / 0441	1
	52	19885-006			··CABLE ASSEMBLY, RUDDER, RIGHT, AFT	3915 / 0442	/	1
	54	13037-003			··CABLE ASSEMBLY, RUDDER, LEFT	0498	1826	1
	57	17035-001	$		··CABLE ASSEMBLY, RUDDER, LEFT	1827 / 0001	/	1
	60	19884-001	#		··CABLE ASSEMBLY, RUDDER, LEFT	3026 / 0001	3914 / 0441	1
	61	19884-003			··CABLE ASSEMBLY, RUDDER, LEFT	3915 / 0442	/	1
	63	14923-002			··CABLE ASSEMBLY, RUDDER, LEFT, AFT	0498	1826	1
					ALTERNATE FOR P/N 14923-001			
-	66	14923-001			··CABLE ASSEMBLY, RUDDER, LEFT, AFT	0498	1826	1
					ALTERNATE FOR P/N 14923-002			
	69	17034-001	$		··CABLE ASSEMBLY, RUDDER, LEFT, AFT	1827 / 0001	/	1
	72	19885-001	#		··CABLE ASSEMBLY, RUDDER, LEFT, AFT	3026 / 0001	3914 / 0441	1
	73	19885-003			··CABLE ASSEMBLY, RUDDER, LEFT, AFT	3915 / 0442	/	1
	75	MS21251B5L		A	··TURNBUCKLE BODY, CLIP LOCKING	0498 / 0001	/	2
	78	MS21256-2		A	··CLIP, LOCKING, TURNBUCKLE	0498 / 0001	/	4
	81	AN3-7		A	··BOLT	0498 / 0001	/	2
	84	NAS1149F0332P		A	··WASHER	0498 / 0001	/	2
	87	NAS1149F0363P		A	··WASHER	0498 / 0001	/	8
	90	MS17825-3		A	··NUT	0498 / 0001	/	2
	93	MS24665-134		A	··COTTER PIN	0498 / 0001	/	2
	96	AN3-6		A	··BOLT	0498	1961	2
	99	NAS6203-7D		A	··BOLT	1962 / 0001	/	2
	102	NAS1149D0332J		A	··WASHER	0498 / 0001	/	2
	105	MS17826-3		A	··NUT	0498 / 0001	/	2
	108	MS24665-132		A	··COTTER PIN	0498 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 27-20-02 DET			RUDDER PEDAL INSTALLATION			
	401	RF 27-00-02 DET			FLIGHT CONTROL INSTALLATION - CONSOLE			
	402	RF 27-20-04 DET			AILERON/RUDDER INTERCONNECT INSTALLATION			
	403	RF 27-20-03 DET			RUDDER/ELEVATOR PULLEY GANG INSTALLATION			
	404	RF 27-00-05 DET			FLIGHT CONTROLS INSTALLATION - EMPENNAGE			
					SYMBOL NOTES:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2043; REFER TO 22-0498 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
			$		SERIAL NUMBERS W/O PERSPECTIVE AVIONICS.			
			#		SERIAL NUMBERS W/ PERSPECTIVE AVIONICS.			

EFFECTIVITY:
All

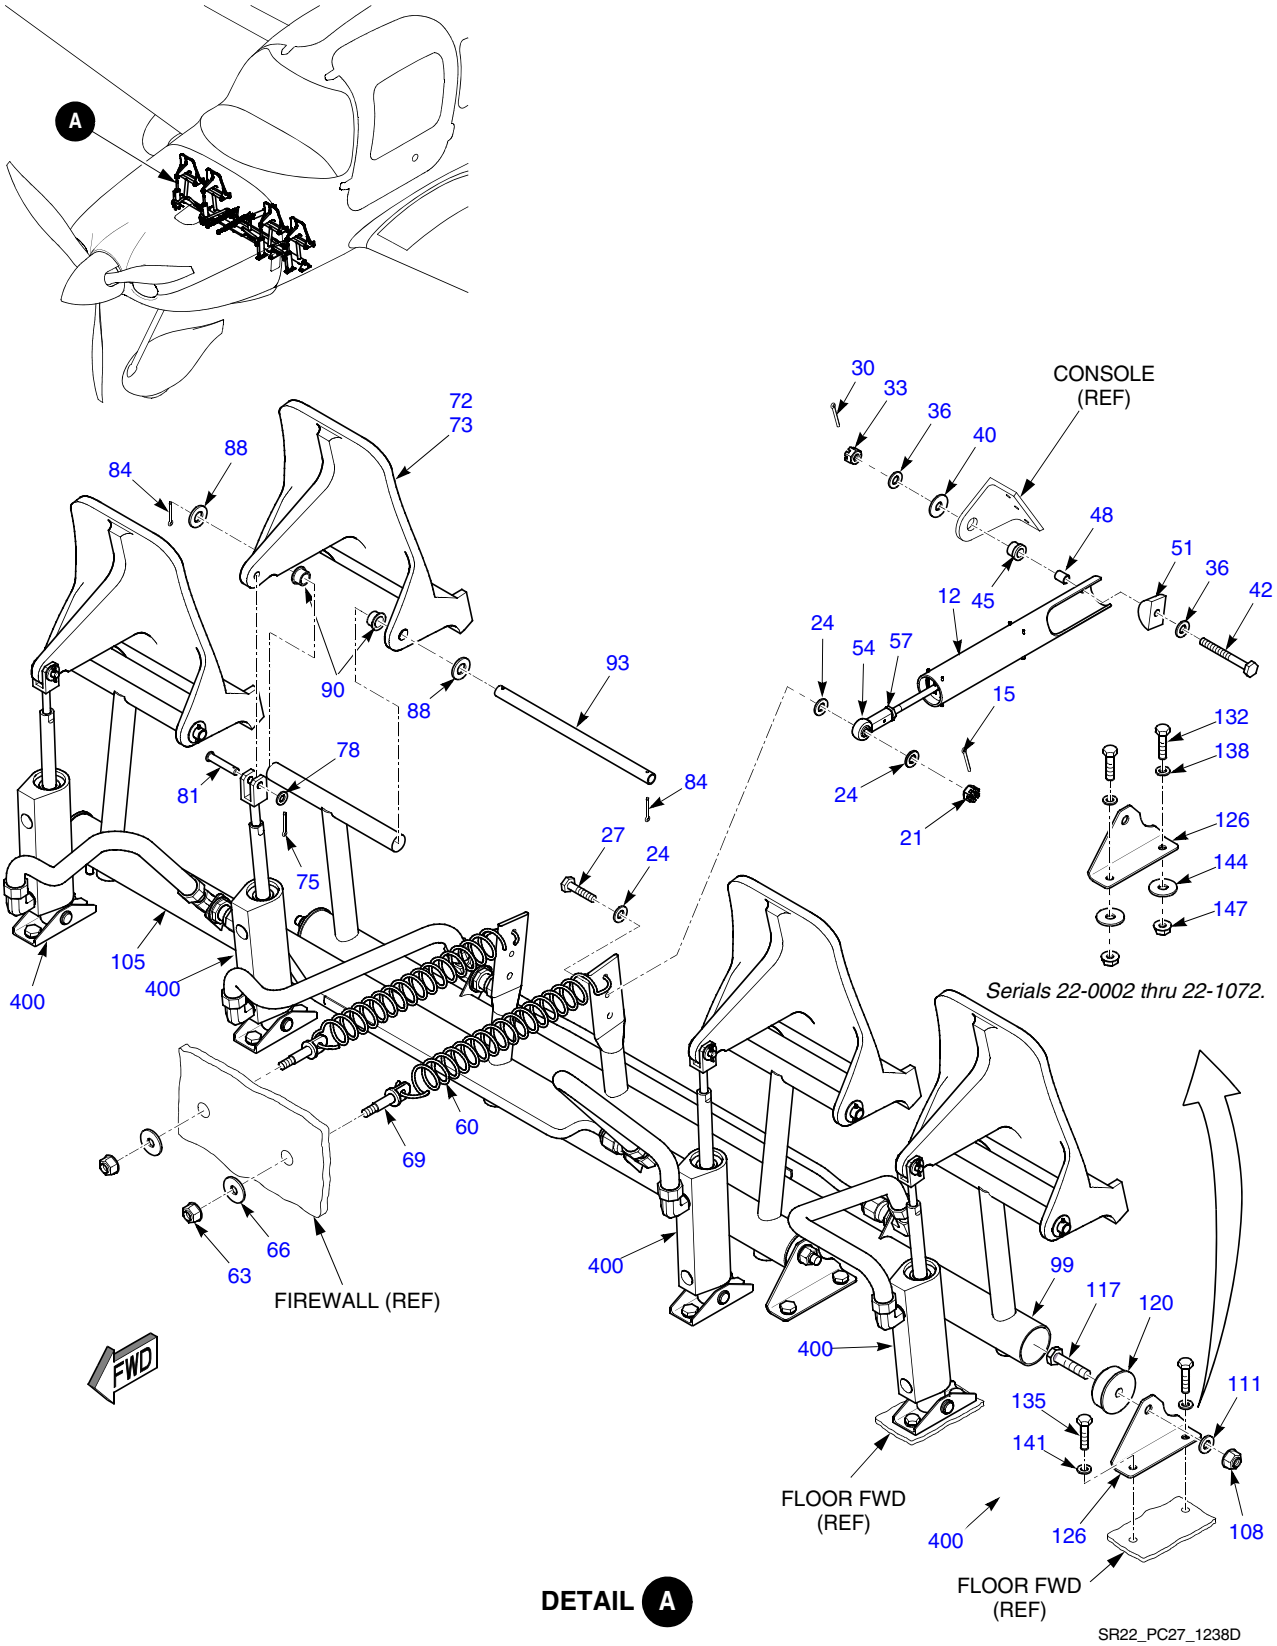

Figure-02
Rudder Pedal

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			FLIGHT CONTROLS (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	14183-001			·RUDDER PEDAL	0002	0227	NP
-	6	14183-002			·RUDDER PEDAL	0228	1072	NP
					FOR SPARES USE P/N 16070-001			
-	7	16070-002			·RUDDER PEDAL	1073 / 0001	/	NP
-	9	11898-001			··YAW TRIM CARTRIDGE ASSEMBLY	0002	0359	1
					FOR SPARES USE P/N 11898-002			
	12	11898-002			··YAW TRIM CARTRIDGE ASSEMBLY	0360 / 0001	/	1
	15	MS24665-130		A	··COTTER PIN	0002 / 0001	/	1
-	18	AN310-3		A	··NUT	0002	1072	1
					FOR SPARES USE P/N MS17825-3			
	21	MS17825-3		A	··NUT	1073 / 0001	/	1
	24	NAS1149F0363P		A	··WASHER	0002 / 0001	/	3
	27	AN3-7		A	··BOLT	0002 / 0001	/	1
	30	MS24665-130		A	··COTTER PIN	0002 / 0001	/	1
	33	AN310-3		A	··NUT	0002 / 0001	/	1
					ALTERNATE FOR P/N MS17825-3			
-	34	MS17825-3			··NUT	0002 / 0001	/	1
					ALTERNATE FOR P/N AN310-3			
	36	NAS1149F0363P		A	··WASHER	0002 / 0001	/	2
-	39	NAS1149F0583P		A	··WASHER	0002	1072	1
					FOR SPARES USE P/N NAS1149F0563P			
	40	NAS1149F0563P			··WASHER	1073 / 0001	/	1
	42	AN3-12		A	··BOLT	0002 / 0001	/	1
	45	50200-201			··BUSHING	0002 / 0001	/	1
	48	NAS43DD3-20FC			··SPACER	0002 / 0001	/	1
	51	11216-001			··SPACER	0002 / 0001	/	1
	54	11314-003			···ROD END	0002 / 0001	/	1
	57	AN315-3R			···JAM NUT	0002 / 0001	/	1
	60	50246-001			··SPRING	0002 / 0001	/	2
	63	MS21045-4		A	··LOCK NUT	0002 / 0001	/	2
	66	AN970-4		A	··WASHER	0002 / 0001	/	2
	69	AN43B-10A		A	··EYEBOLT	0002 / 0001	/	2
	72	12321-002			··RUDDER PEDAL	0002	3575	4
	73	24849-001			··RUDDER PEDAL	3576 / 0001	/	4
	75	MS24665-130		A	··COTTER PIN	0002 / 0001	/	1
	78	NAS1149F0363P		A	··WASHER	0002 / 0001	/	1
	81	MS20392-2C17		A	··CLEVIS PIN	0002 / 0001	/	1
	84	MS24665-132		A	··COTTER PIN	0002 / 0001	/	2
-	87	NAS1149F0583P		A	··WASHER	0002	1072	2
					FOR SPARES USE P/N NAS1149F0563P			
	88	NAS1149F0563P			··WASHER	1073 / 0001	/	2
	90	50145-101			···BEARING	0002 / 0001	/	2
	93	11480-001			···TUBE	0002 / 0001	/	1
-	96	10619-001			··TORQUE TUBE WELDMENT, LH	0002	0227	1
					FOR SPARES USE P/N 14857-001			
	99	14857-001			··TORQUE TUBE WELDMENT, LH	0228 / 0001	/	1
-	102	10619-002			··TORQUE TUBE WELDMENT, RH	0002	0227	1
					FOR SPARES USE P/N 14857-002			
	105	14857-002			··TORQUE TUBE WELDMENT, RH	0228 / 0001	/	1
	108	MS21045-4		A	··LOCK NUT	0002 / 0001	/	2
	111	NAS1149F0432P		A	··WASHER	0002 / 0001	/	2
-	114	AN4-11A		A	··BOLT	0002	0227	2
	117	AN4-12A		A	··BOLT	0228 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	120	11504-001			··BUSHING	0002 / 0001	/	2
-	123	11478-001			··BRACKET, TORQUE TUBE WELDMENT	0002	0227	4
					BEFORE SB22-27-01			
	126	11478-002			··BRACKET, TORQUE TUBE WELDMENT	0228 / 0001	/	4
					AFTER SB22-27-01			
-	129	AN3-7A		A	··BOLT	0002	0227	2
	132	AN3-10A		A	··BOLT	0228	1072	2
	135	AN3-10A		A	··BOLT	1073 / 0001	/	2
	138	NAS1149F0363P		A	··WASHER	0002	1072	2
	141	NAS1149F0363P		A	··WASHER	1073 / 0001	/	2
	144	AN970-3		A	··WASHER	0002	1072	2
	147	MS21044N3		A	··LOCK NUT	0002	1072	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 32-42-01 DET			MASTER CYLINDER			

Intentionally Left Blank

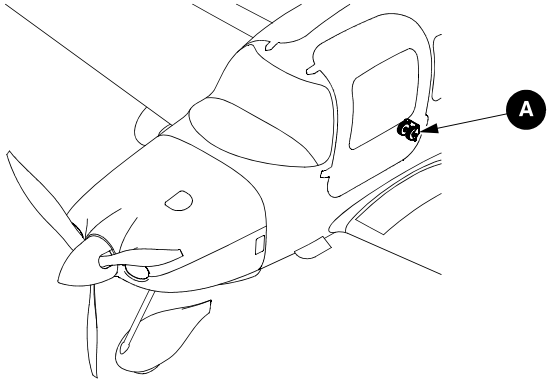

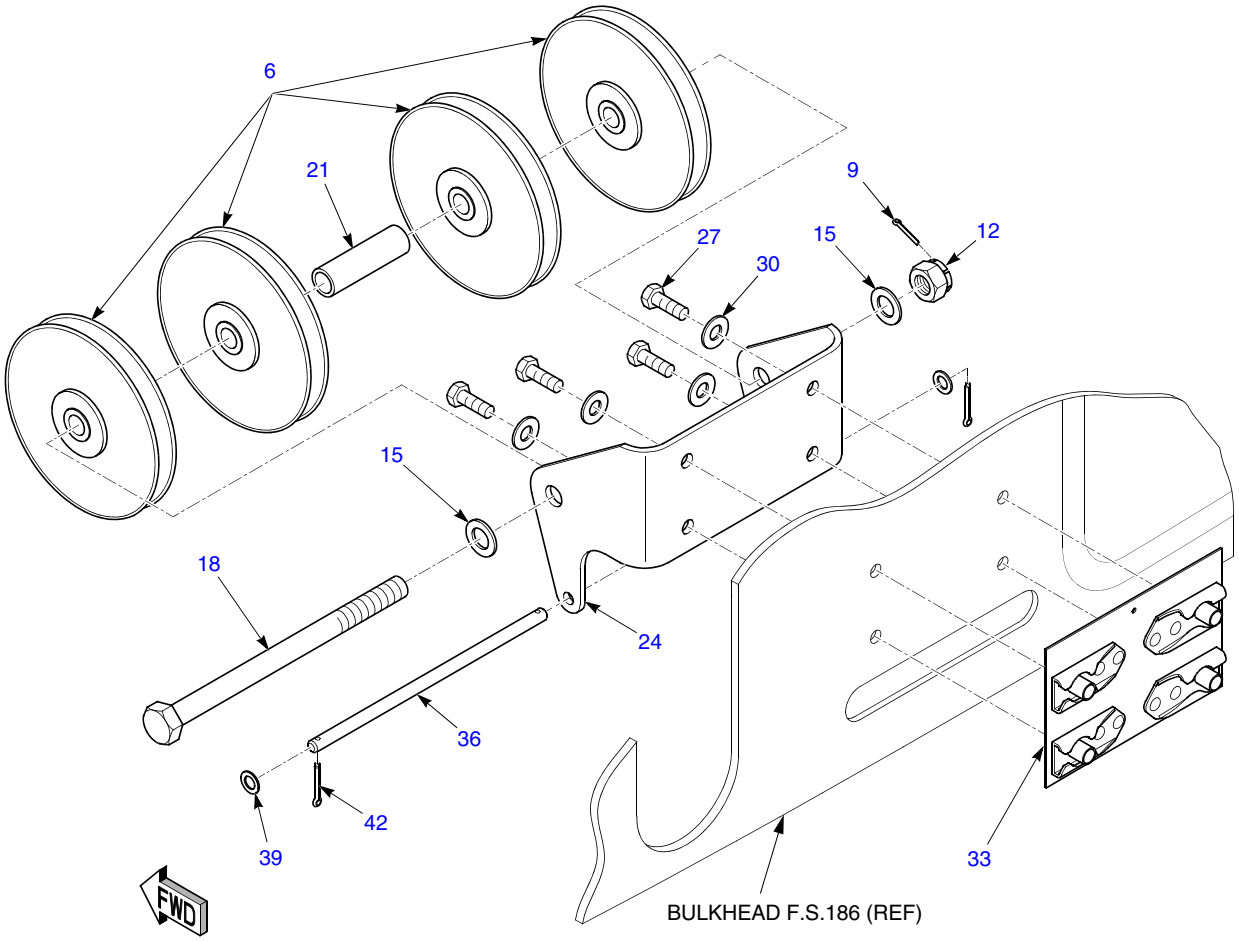

DETAIL A

SR22_PC27_1162

Figure-03
Rudder/Elevator Pulley Gang

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			FLIGHT CONTROLS (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·RUDDER/ELEVATOR PULLEY GANG	0002 / 0001	/	NP
	6	MS20220-2			··PULLEY	0002 / 0001	/	4
	9	MS24665-134		A	··COTTER PIN	0002 / 0001	/	1
	12	MS17825-5		A	··NUT	0002 / 0001	/	1
	15	NAS1149F0532P		A	··WASHER	0002 / 0001	/	2
	18	AN5-45		A	··BOLT	0002 / 0001	/	1
	21	NAS43DD5-96FC			··SPACER	0002 / 0001	/	1
	24	10523-002			··BRACKET	0002 / 0001	/	1
	27	AN3-4A		A	··BOLT	0002 / 0001	/	4
	30	NAS1149F0332P		A	··WASHER	0002 / 0001	/	4
	33	11305-002		A	··BACKING PLATE	0002 / 0001	/	1
	36	11996-070			··PIN-PULLEY GUARD	0002 / 0001	/	1
	39	NAS1149F0332P		A	··WASHER	0002 / 0001	/	2
	42	MS24665-132		A	··COTTER PIN	0002 / 0001	/	2

EFFECTIVITY:
All

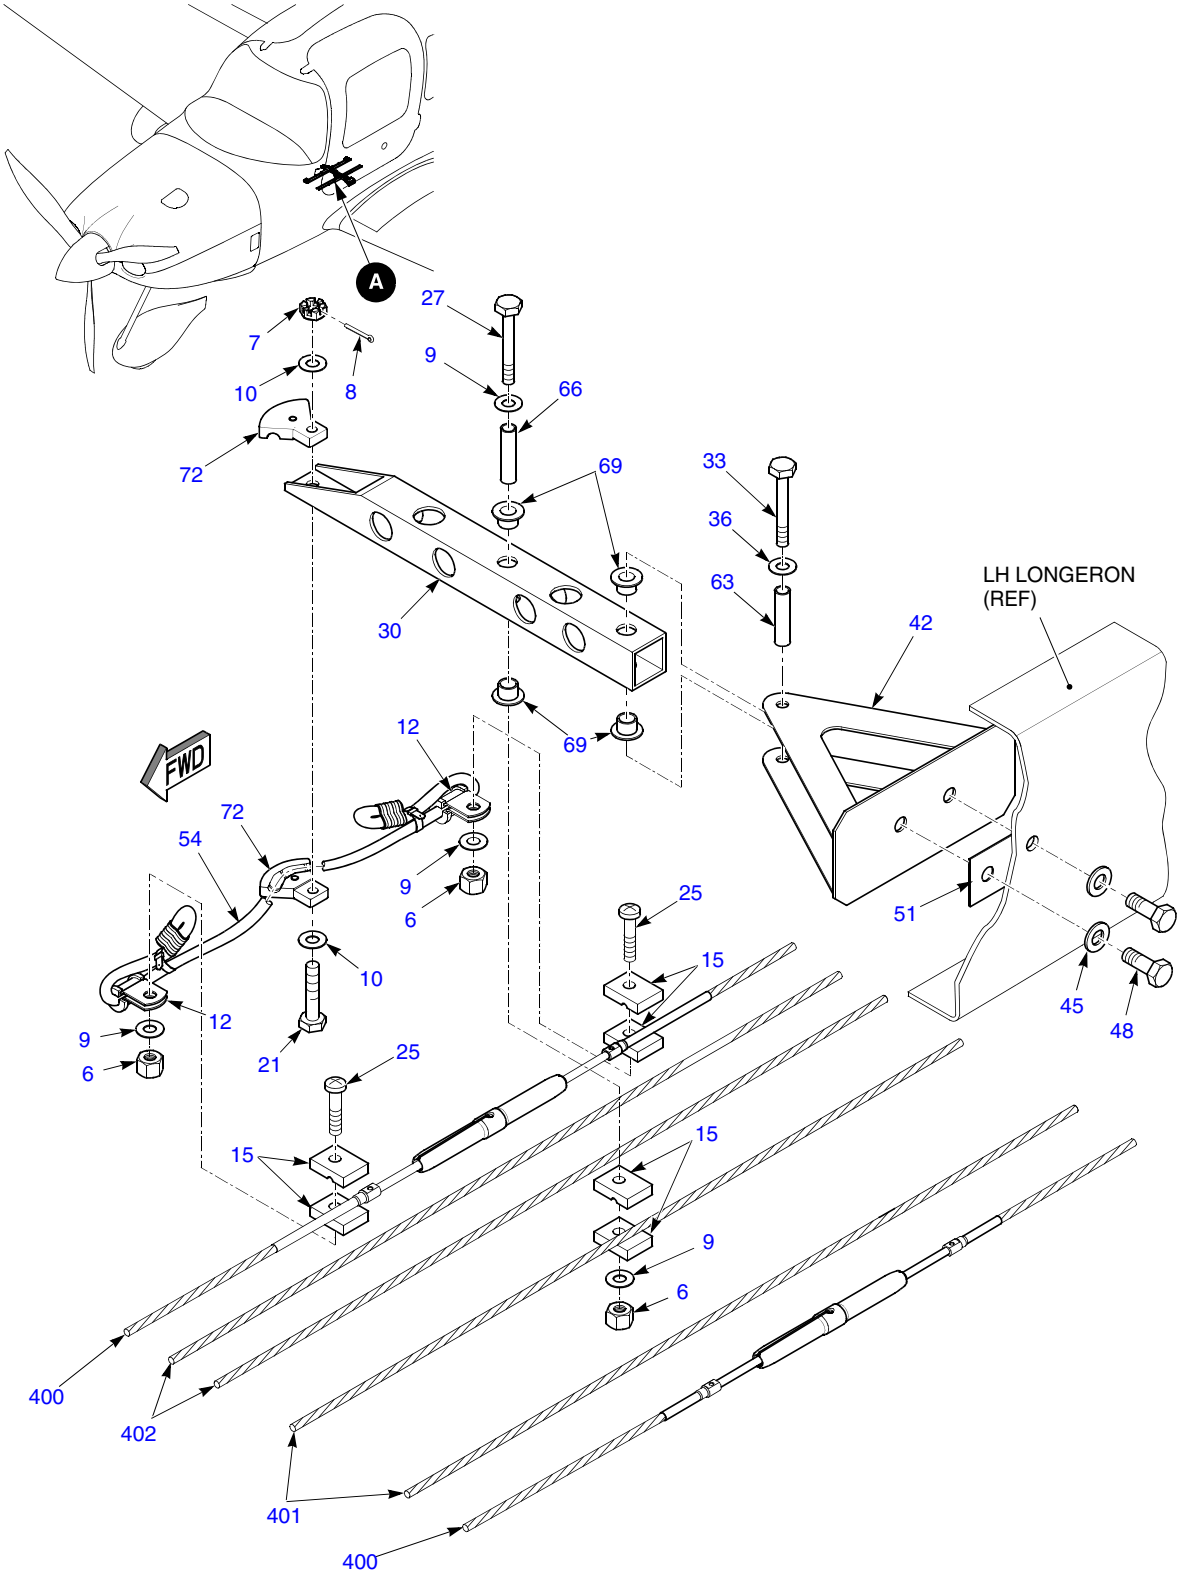

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

DETAIL A

SR22_PC27_1163E

Figure-04

Rudder-Aileron Interconnect - Serials 22-0002 thru 22-2437

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04	**		FLIGHT CONTROLS (RF 27-00-01 NHA)	0002		NP
-	3	NO PRT NUMBER			·RUDDER-AILERON INTERCONNECT	0002	2437	NP
	6	MS21044N3		A	··NUT	0002	2437	3
	7	MS17825-3		A	··NUT	0002	2437	1
	8	MS24665-132		A	··COTTER PIN	0002	2437	1
	9	NAS1149F0316P		A	··WASHER	0002	2437	6
	10	NAS1149F0363P		A	··WASHER	0002	2437	2
	12	MS21919DWG3		A	··CLAMP	0002	2437	3
					BEFORE SB2X-27-14R3			
	13	MS21919DWG3		A	··CLAMP	0002	2437	2
					AFTER SB2X-27-14R3			
	15	12471-001	@	A	··CLAMP	0002	2437	AR
-	18	13090-001	#	A	··CLAMP	0002	2437	AR
	21	AN3-7A		A	··BOLT	0002	2437	1
-	24	AN3-7A		A	··BOLT	0002	2437	2
					FOR SPARES USE P/N AN525-10R12			
	25	AN525-10R12		A	··SCREW	0002	2437	2
	27	AN3-20A		A	··BOLT	0002	2437	1
	30	13219-001			··INTERCONNECT ARM	0002	2437	1
	33	AN3-13A		A	··BOLT	0002	2437	1
	36	NAS1149F0316		A	··WASHER	0002	2437	1
-	39	13220-001			··BRACKET	0002	0527	1
					FOR SPARES USE P/N 13220-002			
	42	13220-002			··BRACKET	0528	2437	1
	45	AN970-4		A	··WASHER	0002	2437	2
	48	AN4-6		A	··BOLT	0002	2437	2
	51	13221-101			··SHIM	0002	2437	1
	54	12983-001			··SHOCK CORD	0002	2437	1
	63	12472-001			··SPACER	0002	2437	1
	66	12472-002			··SPACER	0002	2437	1
	69	50200-301			··BUSHING	0002	2437	4
	72	18937-001		A	··CLAMP	0002	2437	2
					AFTER SB2X-27-14R3			
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 27-10-01 DET			AILERON SYSTEM CABLES			
	401	RF 27-20-01 DET			RUDDER SYSTEM CABLES			
	402	RF 27-30-01 DET			ELEVATOR SYSTEM CABLES			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334 AND 22-2420; REFER TO 22-2438 FOR PRT IDENTIFICATION.			
			@		USE WHEN CLAMP IS LOCATED ON CABLE.			
			#		USE WHEN CLAMP IS LOCATED ON CABLE END.			

EFFECTIVITY:
All

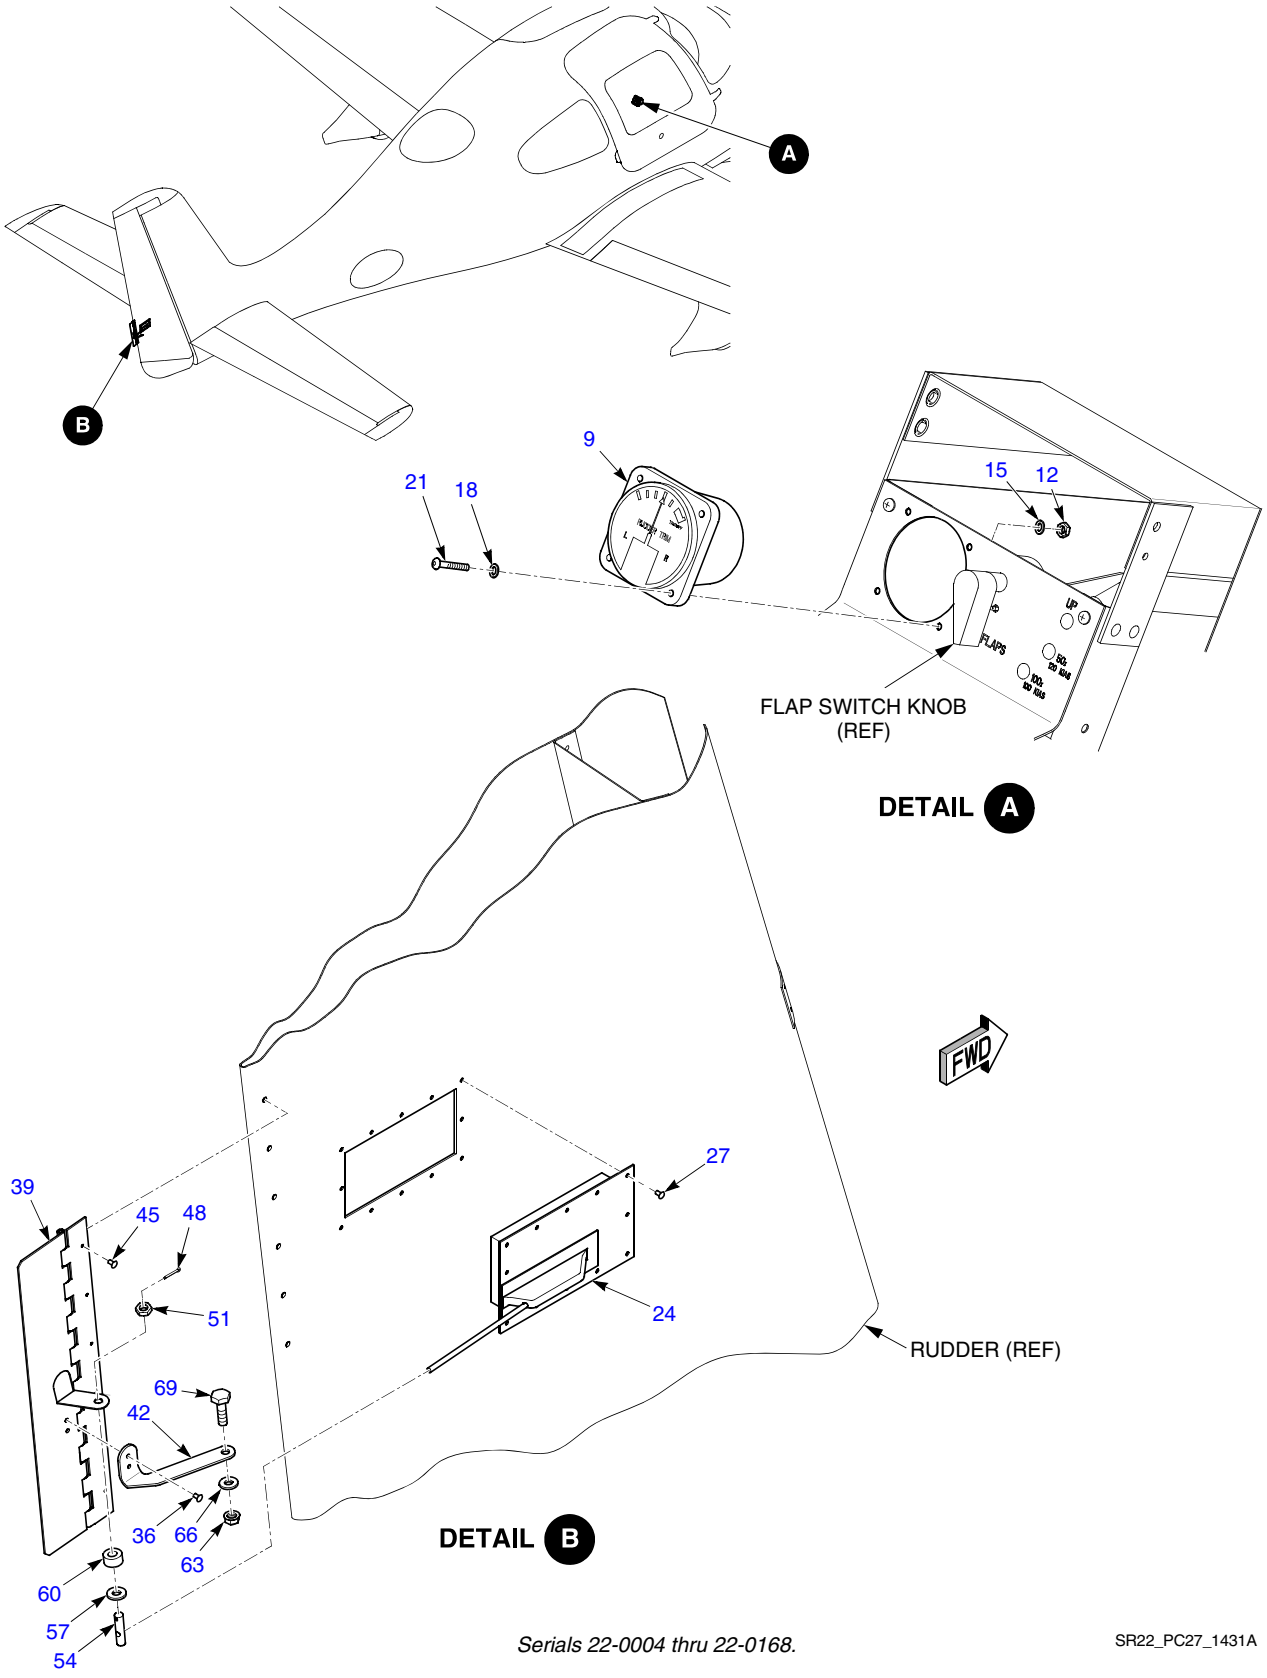

Serials 22-0004 thru 22-0168.

SR22_PC27_1431A

Figure-05
Electric Rudder Trim - Serials 22-0004 thru 22-0168

EFFECTIVITY:
Serials 22-0004 thru 22-0168

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05			FLIGHT CONTROLS (RF 27-00-01 NHA)	0002		NP
-	3	NO PRT NUMBER			·ELECTRIC RUDDER TRIM	0004	0168	NP
-	6	14178-001			··ELECTRIC RUDDER SERVO TRIM KIT	0004	0168	1
	9	14232-001			···GAGE, RUDDER TRIM SERVO	0004	0168	1
	12	MS21083N06		A	···LOCKNUT	0004	0168	4
	15	NAS1149FN616P		A	···WASHER	0004	0168	4
	18	50813-001		A	···WASHER	0004	0168	4
	21	50834-014		A	···BUTTONHEAD CAP SCREW	0004	0168	4
	24	14430-101			···TRIM SERVO	0004	0168	1
	27	PRT OF ITM 6		A	···RIVET	0004	0168	12
-	30	14398-001			···RUDDER TRIM TAB	0004	0023	1
-	33	14404-001			···BALANCE TAB	0004	0023	1
	36	MS20615-4M		A	···RIVET	0004	0168	2
	39	14398-002			···RUDDER TRIM TAB	0024	0168	1
	42	14404-002			···BALANCE TAB	0024	0168	1
	45	PRT OF ITM 6		A	···RIVET	0004	0168	6
	48	MS24665-149	@	A	···COTTER PIN	0004	0168	1
	51	14178-105		A	···NUT	0004	0168	1
	54	14178-108		A	···PIN	0004	0168	1
	57	14178-106		A	···WASHER	0004	0168	1
	60	14178-107		A	···WASHER	0004	0168	1
	63	MS21044N3			··NUT	0004	0168	1
	66	NAS1149F0363P			··WASHER	0004	0168	1
	69	AN3-4A			··BOLT	0004	0168	1

SYMBOL NOTES:

@ COTTER PIN OPTIONAL. IF OMITTED, INSTALL NUT WITH LOCTITE 242.

EFFECTIVITY:
All

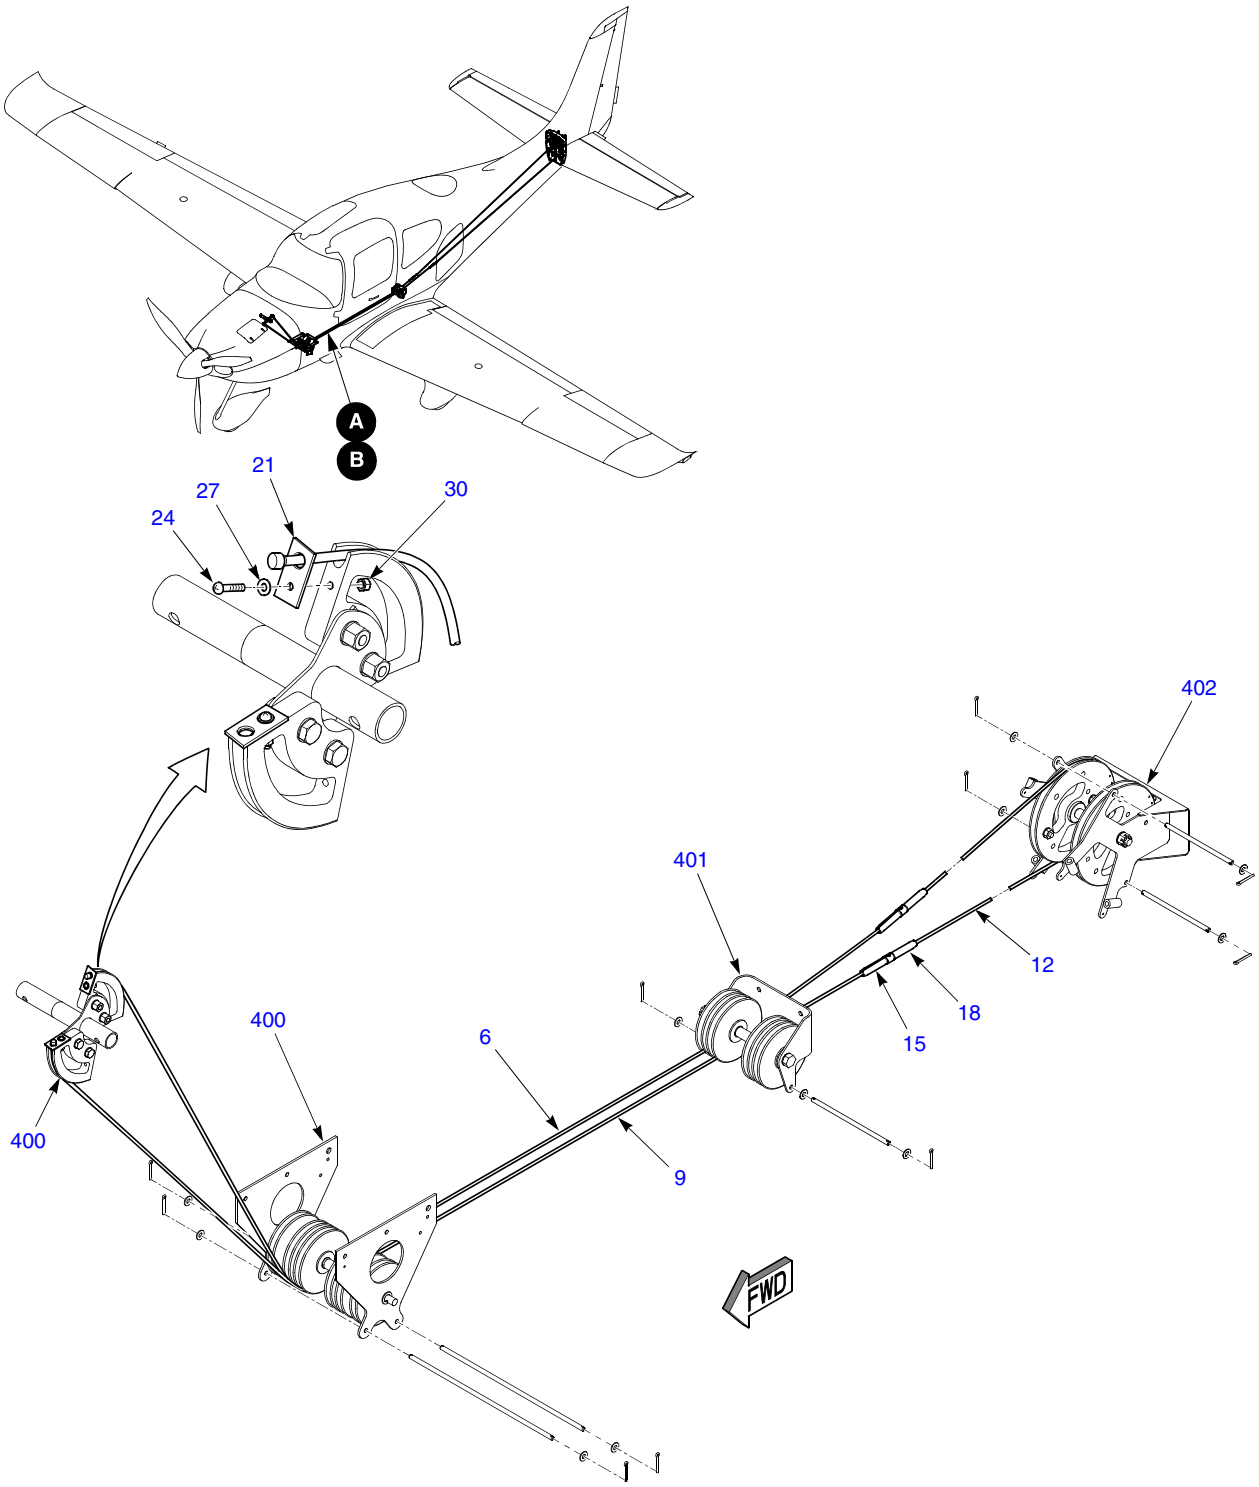

DETAIL A

Serials 22-0002 thru 22-0497.

SR22_PC27_1239A

Figure-01

Elevator System Cables - Serials 22-0002 thru 22-0497 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0497

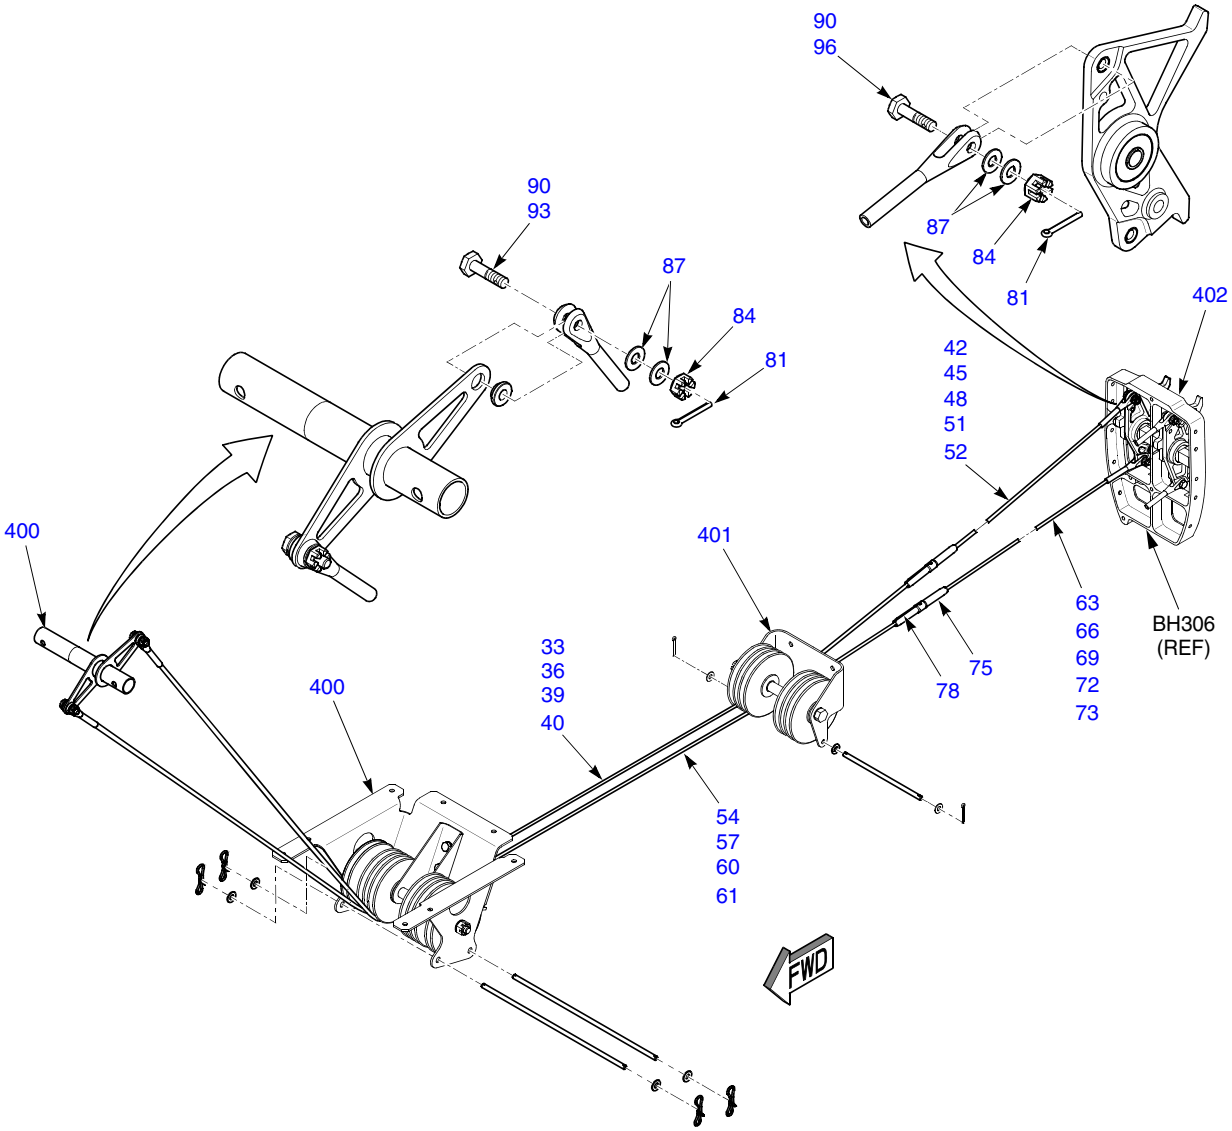

DETAIL B

Serials 22-0498 & subs,
22T-0001 & subs.

SR22_PC27_1305

Figure-01
Elevator System Cables - Serials 22-0498 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0498 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FLIGHT CONTROLS INSTALLATION (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·ELEVATOR SYSTEM CABLES	0002 / 0001	/	NP
	6	13036-002			··CABLE ASSEMBLY, ELEVATOR, RIGHT	0002	0497	1
	9	13036-003			··CABLE ASSEMBLY, ELEVATOR, LEFT	0002	0497	1
	12	13036-001			··CABLE ASSEMBLY, ELEVATOR, AFT	0002	0497	1
	15	MS21251B5L		A	··TURNBUCKLE BODY, CLIP LOCKING	0002	0497	2
	18	MS21256-2		A	··CLIP, LOCKING, TURNBUCKLE	0002	0497	4
	21	11167-002		A	··CABLE STOP	0002	0497	2
	24	MS35206-218		A	··SCREW	0002	0497	2
	27	NAS1149FN432P		A	··WASHER	0002	0497	2
	30	MS21044N04		A	··NUT	0002	0497	2
	33	14920-001			··CABLE ASSEMBLY, ELEVATOR, RIGHT, FWD	0498	1205	1
	36	16125-001	$		··CABLE ASSEMBLY, ELEVATOR, RIGHT, FWD	1206 / 0001	/	1
	39	19880-001	#		··CABLE ASSEMBLY, ELEVATOR, RIGHT, FWD	3026 / 0001	3914 / 0441	1
	40	19880-002			··CABLE ASSEMBLY, ELEVATOR, RIGHT, FWD	3915 / 0442		1
	42	14918-001			··CABLE ASSEMBLY, ELEVATOR, RIGHT, AFT	0498	1205	1
	45	16123-001	$		··CABLE ASSEMBLY, ELEVATOR, RIGHT, AFT	1206 / 0001	/	1
	48	19881-001	#		··CABLE ASSEMBLY, ELEVATOR, RIGHT, AFT	3026 / 0001	3795 / 0201	1
					FOR SPARES USE P/N 19881-002			
	51	19881-002	#		··CABLE ASSEMBLY, ELEVATOR, RIGHT, AFT	3796 / 0202	3914 / 0441	1
	52	19881-003			··CABLE ASSEMBLY, ELEVATOR, RIGHT, AFT	3915 / 0442		1
	54	14921-001			··CABLE ASSEMBLY, ELEVATOR, LEFT, FWD	0498	1205	1
	57	16126-001	$		··CABLE ASSEMBLY, ELEVATOR, LEFT, FWD	1206 / 0001	/	1
	60	19882-001	#		··CABLE ASSEMBLY, ELEVATOR, LEFT, FWD	3026 / 0001	3914 / 0441	1
	61	19882-002			··CABLE ASSEMBLY, ELEVATOR, LEFT, FWD	3915 / 0442		1
	63	14919-001			··CABLE ASSEMBLY, ELEVATOR, LEFT, AFT	0498	1205	1
	66	16124-001	$		··CABLE ASSEMBLY, ELEVATOR, LEFT, AFT	1206 / 0001	/	1
	69	19883-001	#		··CABLE ASSEMBLY, ELEVATOR, LEFT, AFT	3026 / 0001	3795 / 0201	1
					FOR SPARES USE P/N 19883-002			
	72	19883-002	#		··CABLE ASSEMBLY, ELEVATOR, LEFT, AFT	3796 / 0202	3914 / 0441	1
	73	19883-003			··CABLE ASSEMBLY, ELEVATOR, LEFT, AFT	3915 / 0442		1
	75	MS21251B5L		A	··TURNBUCKLE BODY, CLIP LOCKING	0498 / 0001	/	2
	78	MS21256-2		A	··CLIP, LOCKING, TURNBUCKLE	0498 / 0001	/	4
	81	MS24665-132		A	··COTTER PIN	0498 / 0001	/	4
	84	MS17825-3		A	··NUT	0498 / 0001	/	4
	87	NAS1149D0332J		A	··WASHER	0498 / 0001	/	8
	90	AN3-6		A	··BOLT	0498	1961	4
	93	AN3-6		A	··BOLT	1962 / 0001	/	2
	96	NAS6203-7D		A	··BOLT	1962 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 27-00-02			FLIGHT CONTROL INSTALLATION - CONSOLE			
	401	RF 27-20-03			RUDDER/ELEVATOR PULLEY GANG INSTALLATION			
	402	RF 27-00-05			FLIGHT CONTROLS INSTALLATION - EMPENNAGE			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2043; REFER TO 22-0498 FOR PART IDENTIFICATION..			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDEN-TIFICATION.			
			$		SERIAL NUMBERS W/O PERSPECTIVE AVIONICS.			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
				12345678				
			#		SERIAL NUMBERS W/ PERSPECTIVE AVIONICS.			

EFFECTIVITY:
All

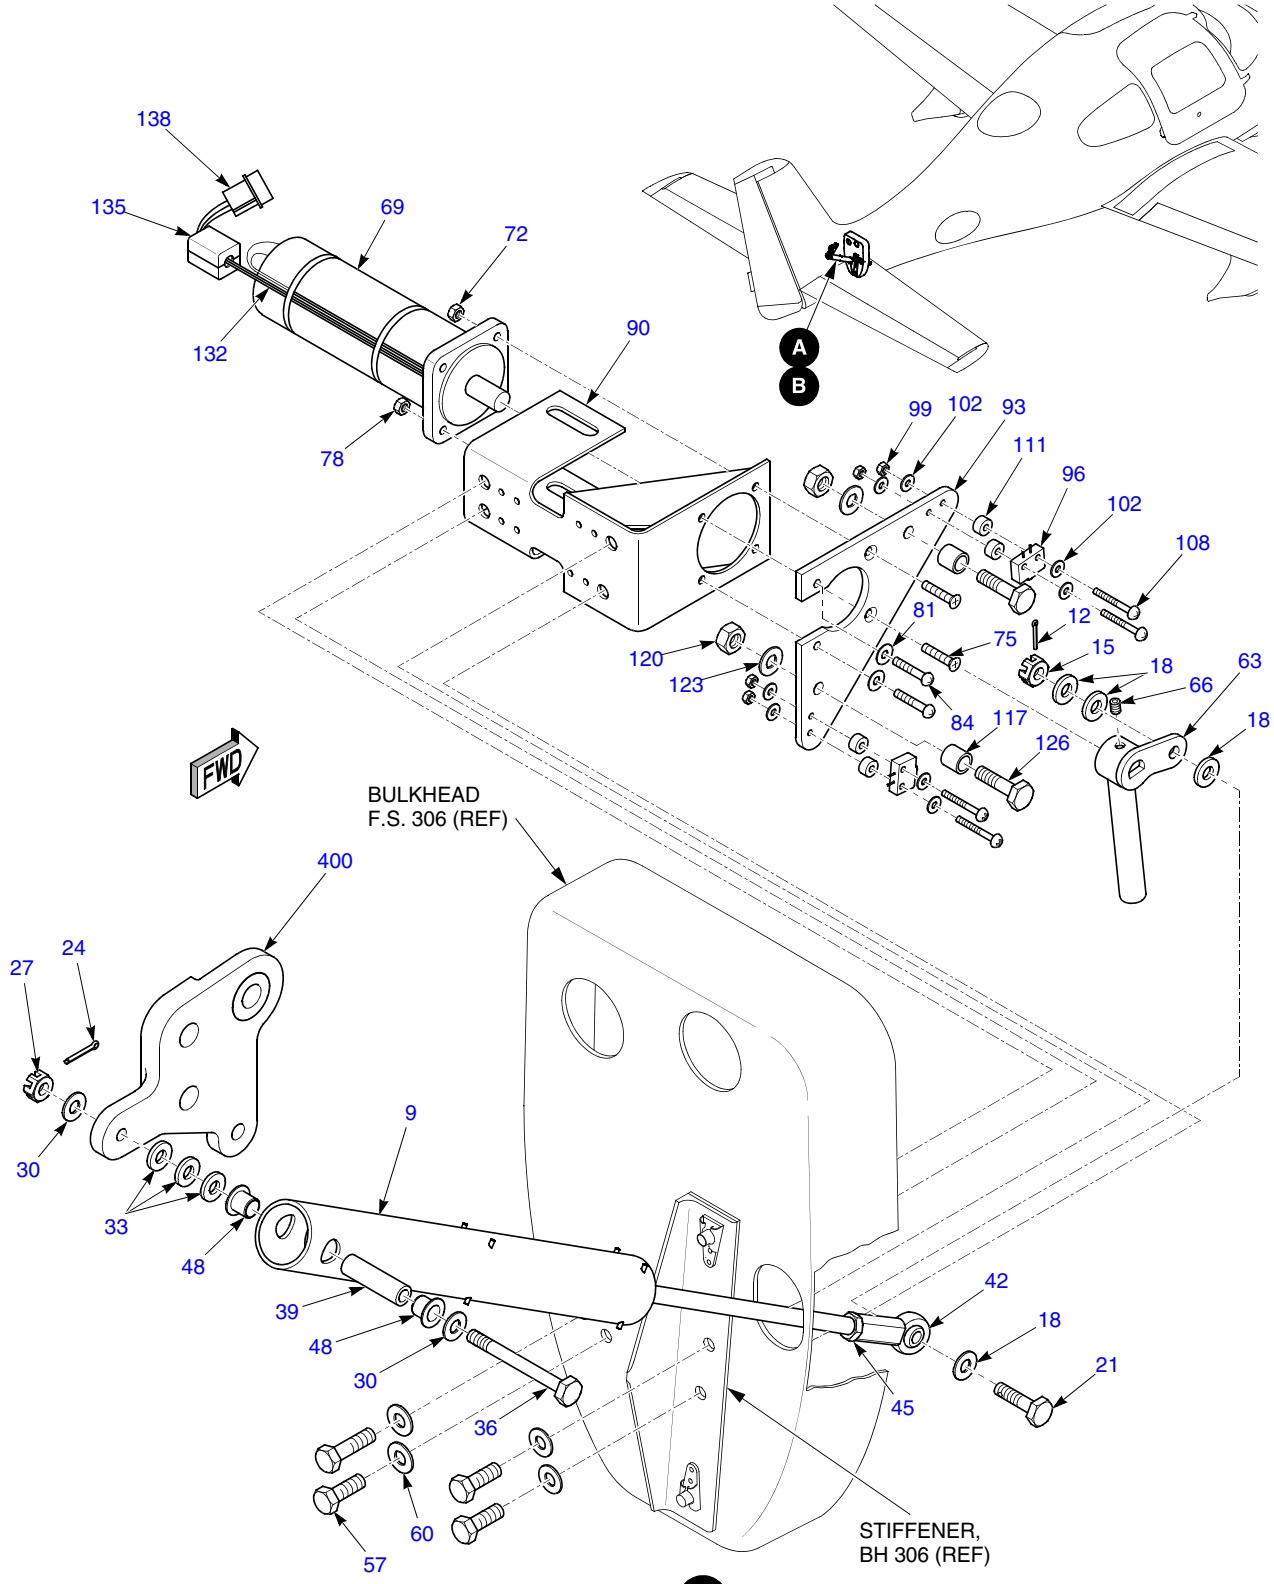

DETAIL A

Serials 22-0002 thru 22-0497.

SR22_PC27_1164B

Figure-02

Pitch Trim System - Serials 22-0002 thru 22-0497 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0497

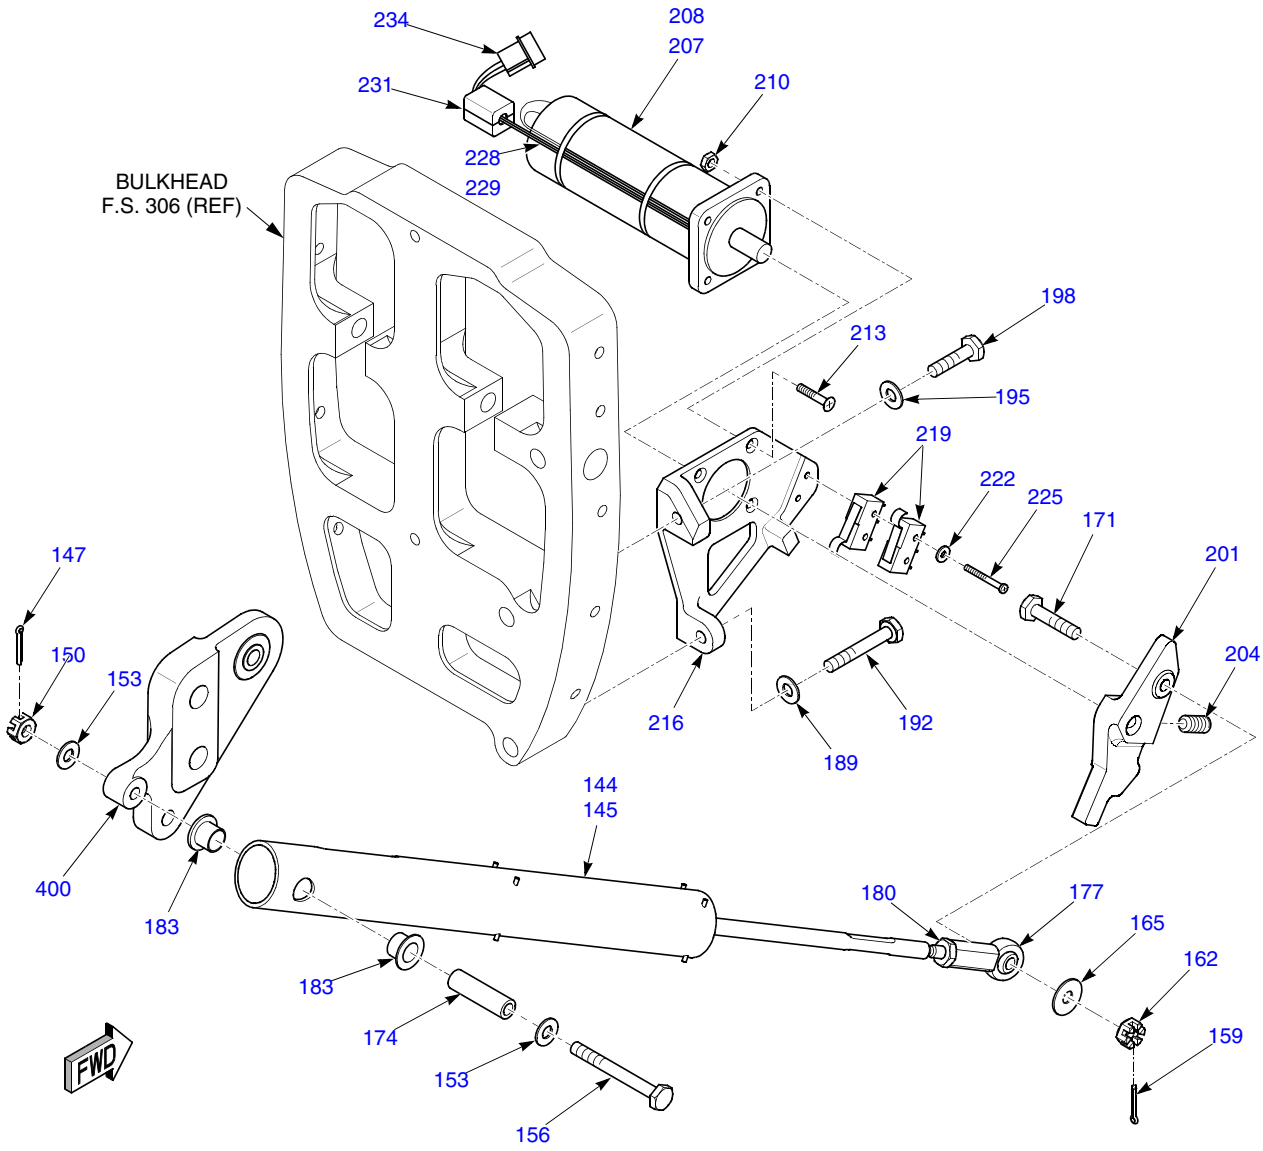

Figure-02

Pitch Trim System - Serials 22-0498 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0498 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			FLIGHT CONTROLS INSTALLATION (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·PITCH TRIM SYSTEM	0002 / 0001	/	NP
-	6	10680-004			··PITCH TRIM CARTRIDGE ASSEMBLY	0002	0379	1
					FOR SPARES USE P/N 10680-006			
	9	10680-006			··PITCH TRIM CARTRIDGE ASSEMBLY	0380	0497	1
					FOR SPARES USE P/N 15650-002			
	12	MS24665-132		A	··COTTER PIN	0002	0497	1
	15	MS17826-3		A	··NUT	0002	0497	1
	18	NAS1149F0332P		A	··WASHER	0002	0497	3
	21	13025-001		A	··BOLT	0002	0497	1
	24	MS24665-132		A	··COTTER PIN	0002	0497	1
	27	MS17826-3		A	··NUT	0002	0497	1
	30	NAS1149F0332P		A	··WASHER	0002	0497	2
	33	NAS1149F0363P		A	··WASHER	0002	0497	3
	36	AN3-17		A	··BOLT	0002	0497	1
	39	11268-001			··BUSHING	0002	0497	1
	42	11314-003			···ROD END	0002	0497	1
	45	AN315-3R			···JAM NUT	0002	0497	1
	48	50200-001			···BUSHING	0002	0497	2
-	51	11794-003			··PITCH TRIM MOTOR ASSEMBLY	0002	0049	1
-	54	11794-004			··PITCH TRIM MOTOR ASSEMBLY	0050	0497	1
	57	AN3-4A		A	··BOLT	0002	0497	4
	60	NAS1149F0332P		A	··WASHER	0002	0497	4
	63	11766-003			···ACTUATION ARM	0002	0497	1
	66	50577-132		A	···SET SCREW	0002	0497	1
	69	11797-004			···PITCH TRIM MOTOR	0002	0497	1
	72	MS21044N04		A	···NUT	0002	0497	2
	75	NAS514P440-10		A	···SCREW	0002	0497	2
	78	MS21044N04		A	···NUT	0002	0497	2
	81	NAS1149FN416P		A	···WASHER	0002	0497	2
	84	MS35206-218		A	···SCREW	0002	0497	2
-	87	50743-201		A	···HOSE CLAMP	0002	0497	1
	90	11793-002			···BRACKET, PITCH TRIM MOTOR ASSEMBLY	0002	0497	1
	93	10684-003			···BRACKET, TRIM LIMIT SWITCH	0002	0497	1
					FOR SPARES USE P/N 10684-004			
	96	50127-001			···LIMIT SWITCH	0002	0497	2
	99	MS21042-02		A	···NUT	0002	0497	4
	102	NAS1149FN216P		A	···WASHER	0002	0497	8
-	105	NAS1149FN232P		A	···WASHER	0002	0049	16
	108	MS35206-209		A	···SCREW	0002	0497	4
	111	NAS43DD0-10 FC			···SPACER	0050	0497	4
-	114	NAS43DD3-20 FC			···SPACER	0002	0049	2
	117	NAS43DD3-22 FC			···SPACER	0050	0497	2
	120	MS21083N3		A	···NUT	0002	0497	2
	123	NAS1149F0332P		A	···WASHER	0002	0497	2
	126	NAS6203-7		A	···BOLT	0002	0497	2
-	129	11792-002			··WIRE HARNESS	0002	0119	1
					FOR SPARES USE P/N 11792-003			
	132	11792-003			··WIRE HARNESS	0120	0497	1
	135	51161-001			···EMI SUPPRESSOR	0120	0497	1
	138	50158-003			··CONNECTOR	0002	0497	1
	144	14902-003			··PITCH TRIM CARTRIDGE ASSEMBLY	0498	0753	1
					FOR SPARES USE P/N 15650-001			
	145	15650-002			··PITCH TRIM CARTRIDGE ASSEMBLY	0754 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	147	MS24665-132		A	··COTTER PIN	0498 / 0001	/	1
	150	MS17826-3		A	··NUT	0498 / 0001	/	1
	153	NAS1149D0332J		A	··WASHER	0498 / 0001	/	2
	156	AN3-17		A	··BOLT	0498 / 0001	/	1
	159	MS24665-132		A	··COTTER PIN	0498 / 0001	/	1
	162	MS17826-3		A	··NUT	0498 / 0001	/	1
	165	NAS1149F0363P		A	··WASHER	0498 / 0001	/	1
	171	AN4-7		A	··BOLT	0498 / 0001	/	1
	174	11268-001			··BUSHING	0498 / 0001	/	1
	177	11314-003			···ROD END	0498 / 0001	/	1
	180	AN315-3R			···JAM NUT	0498 / 0001	/	1
	183	50200-001			···BUSHING	0498 / 0001	/	2
-	186	14832-001			··PITCH TRIM MOTOR ASSEMBLY	0498 / 0001	3700 / 0035	1
					FOR SPARES USE P/N 14832-003			
-	187	14832-003			··PITCH TRIM MOTOR ASSEMBLY	3701 / 0036	/	1
	189	NAS1149F0332J		A	··WASHER	0498 / 0001	/	1
	192	NAS1351-3-20		A	··BOLT	0498 / 0001	/	1
					ALTERNATE FOR P/N AN3-12A			
	195	NAS1149F0332J		A	··WASHER	0498 / 0001	/	1
	198	NAS1351-3-16		A	··BOLT	0498 / 0001	/	1
					ALTERNATE FOR P/N AN3-7A			
	201	14910-001			···ACTUATION ARM	0498 / 0001	/	1
	204	51190-245		A	···SET SCREW	0498 / 0001	/	1
	207	11797-006			···PITCH TRIM MOTOR	0498	3507	1
					FOR SPARES USE P/N 11797-008			
	208	11797-008			···PITCH TRIM MOTOR	3508 / 0001	/	1
	210	MS21044N04		A	···NUT	0498 / 0001	/	4
	213	NAS514P440-7		A	···SCREW	0498 / 0001	/	4
	216	14909-001			···BRACKET, PITCH TRIM MOTOR ASSEMBLY	0498 / 0001	/	1
	219	51186-002			···LIMIT SWITCH	0498 / 0001	/	2
	222	NAS1149FN216P		A	···WASHER	0498 / 0001	/	2
	225	NAS1191-02T12		A	···SCREW	0498 / 0001	/	2
	228	11792-003			··WIRE HARNESS	0498 / 0001	3700 / 0035	1
	229	11792-004			··WIRE HARNESS	3701 / 0036	/	1
	231	51161-001			···EMI SUPPRESSOR	0498 / 0001	/	1
	234	50158-003			··CONNECTOR	0498 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 27-00-05			AFT ELEVATOR BELLCRANK			

EFFECTIVITY:
All

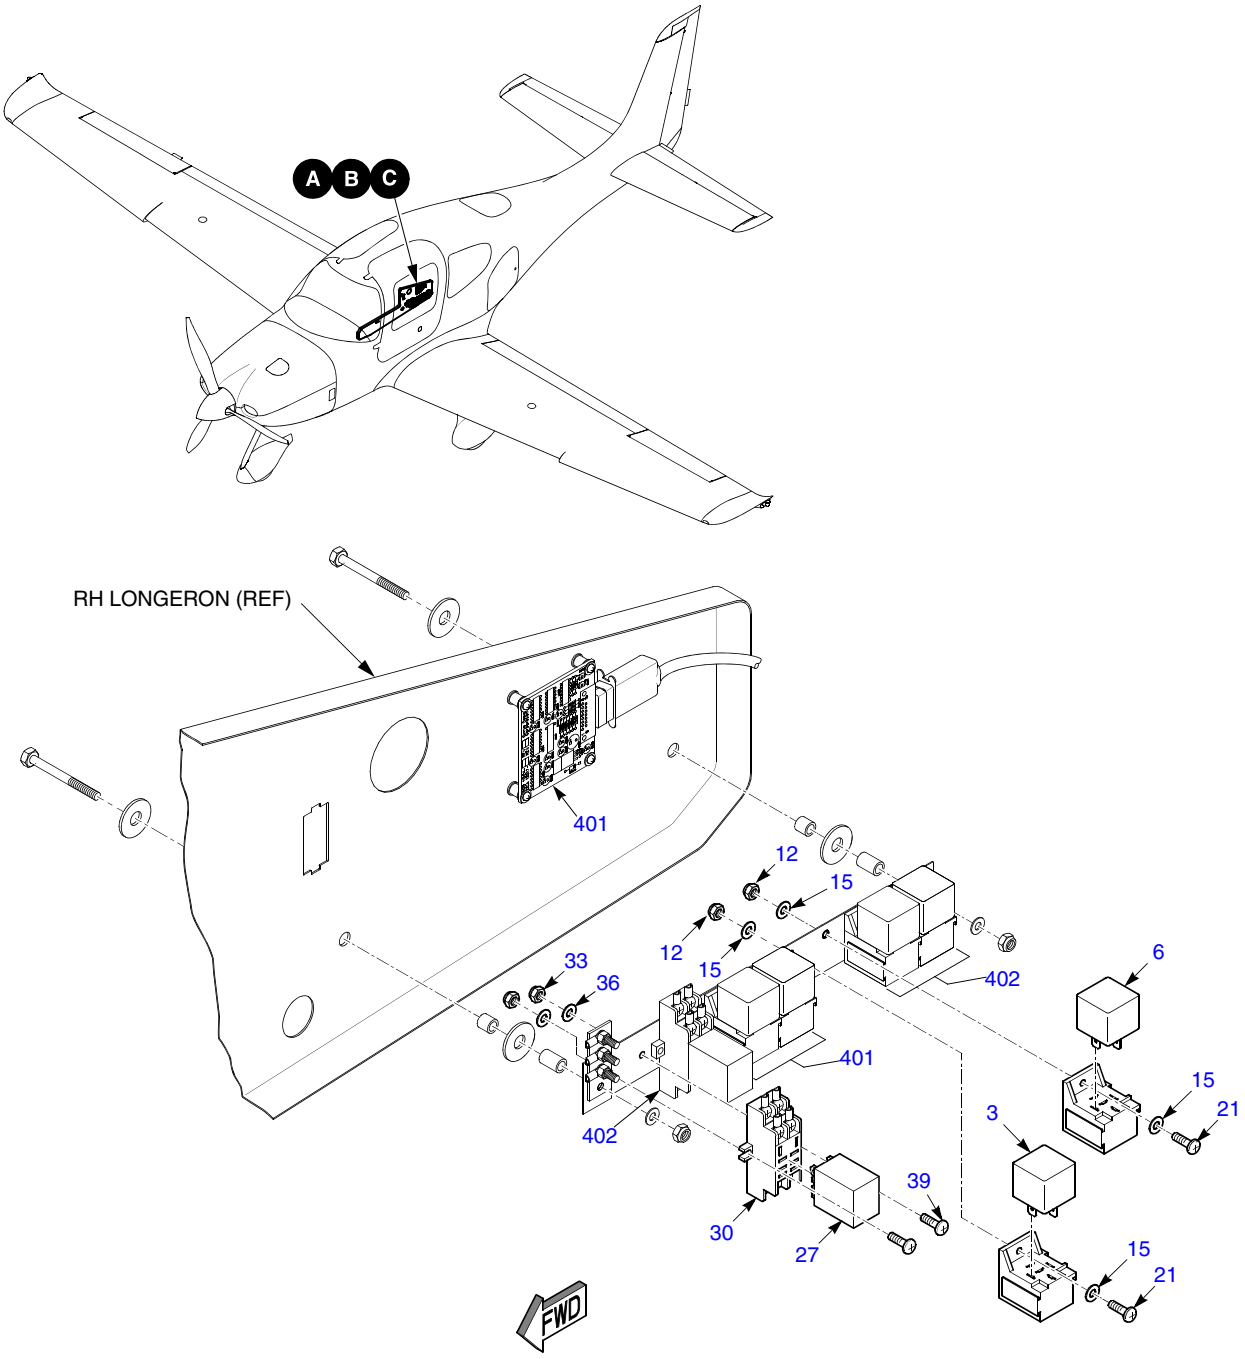

DETAIL A

Serials 22-0002 thru 22-0820.

SR22_PC27_2022

Figure-03
Pitch Relay Assembly - Serials 22-0002 thru 22-0820 (Sheet 1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

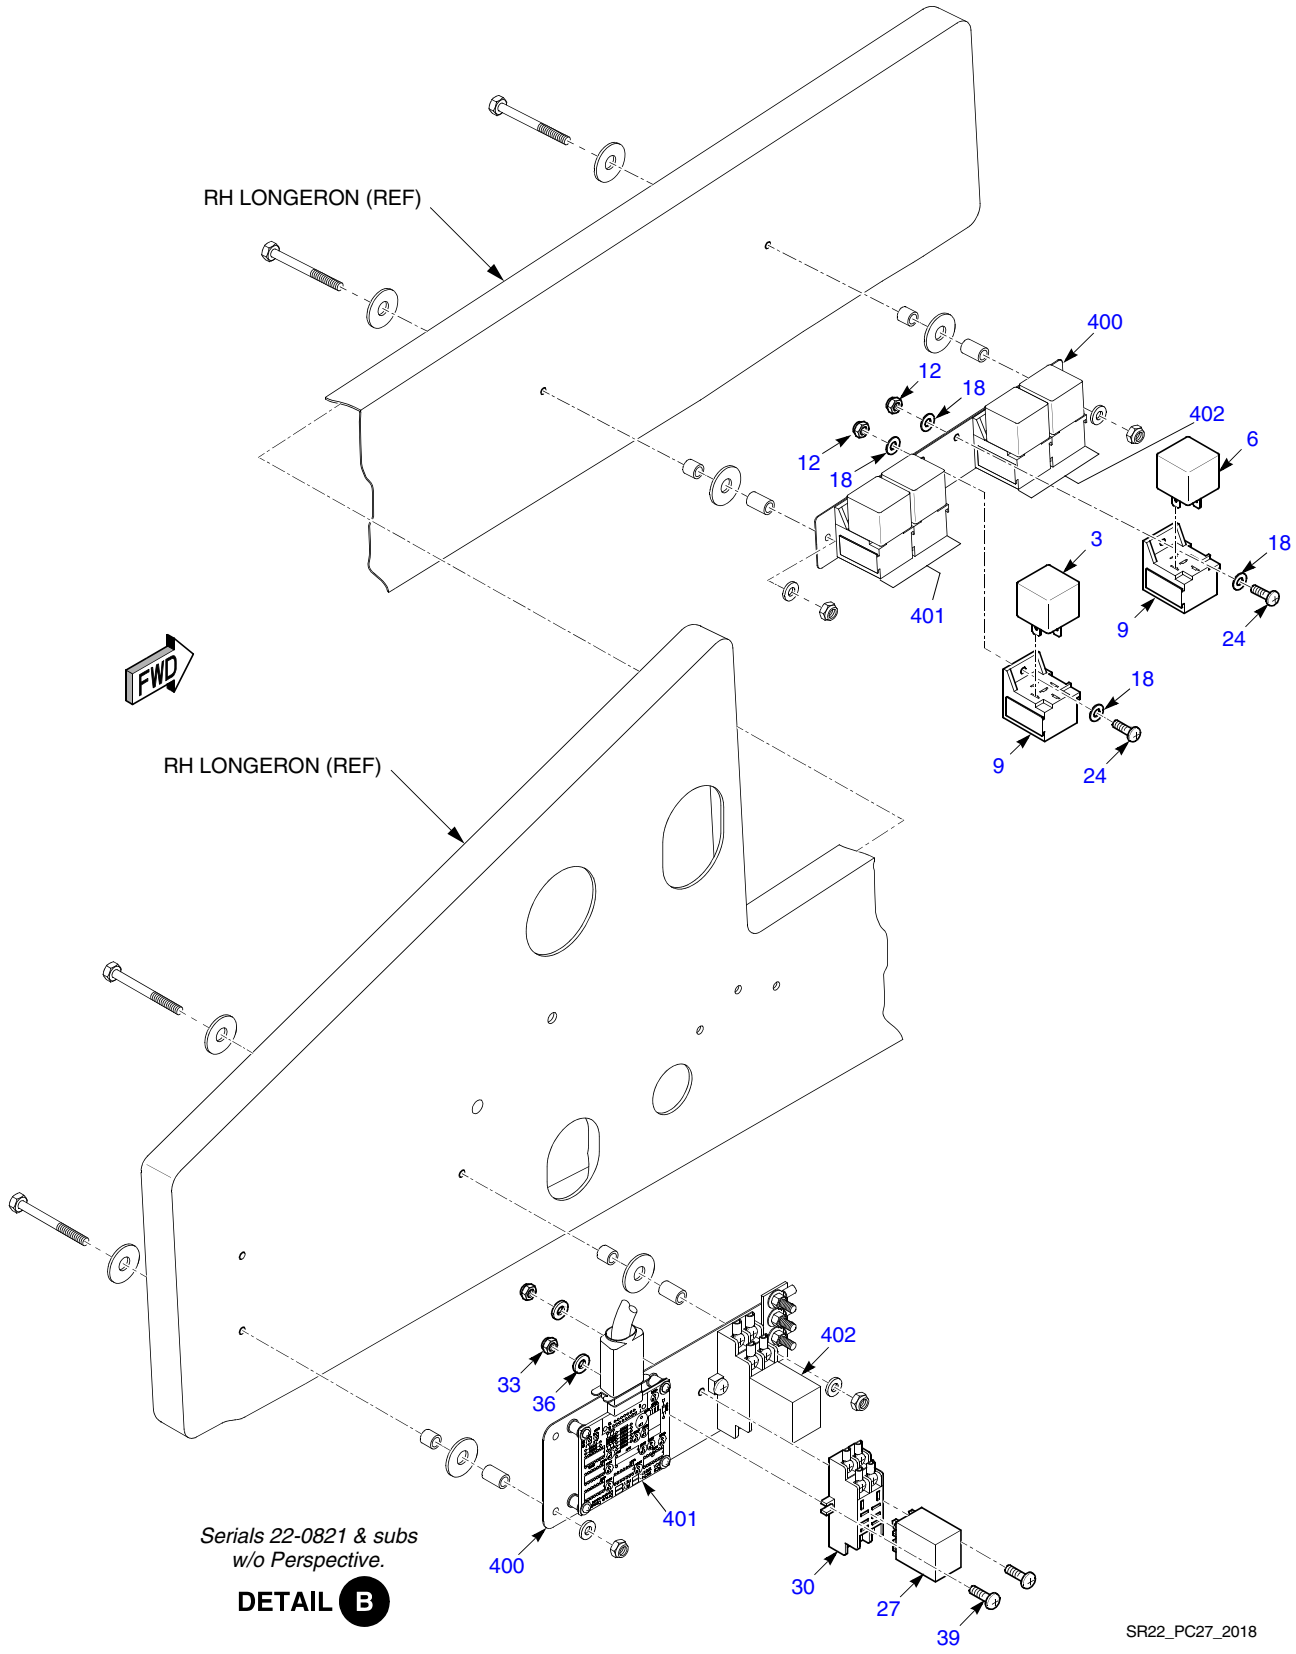

Figure-03

Pitch Relay Assembly - Serials 22-0821 & subs w/o Perspective Avionics (Sheet 2 of 3)

EFFECTIVITY:
Serials 22-0821 & subs w/o Perspective Avionics

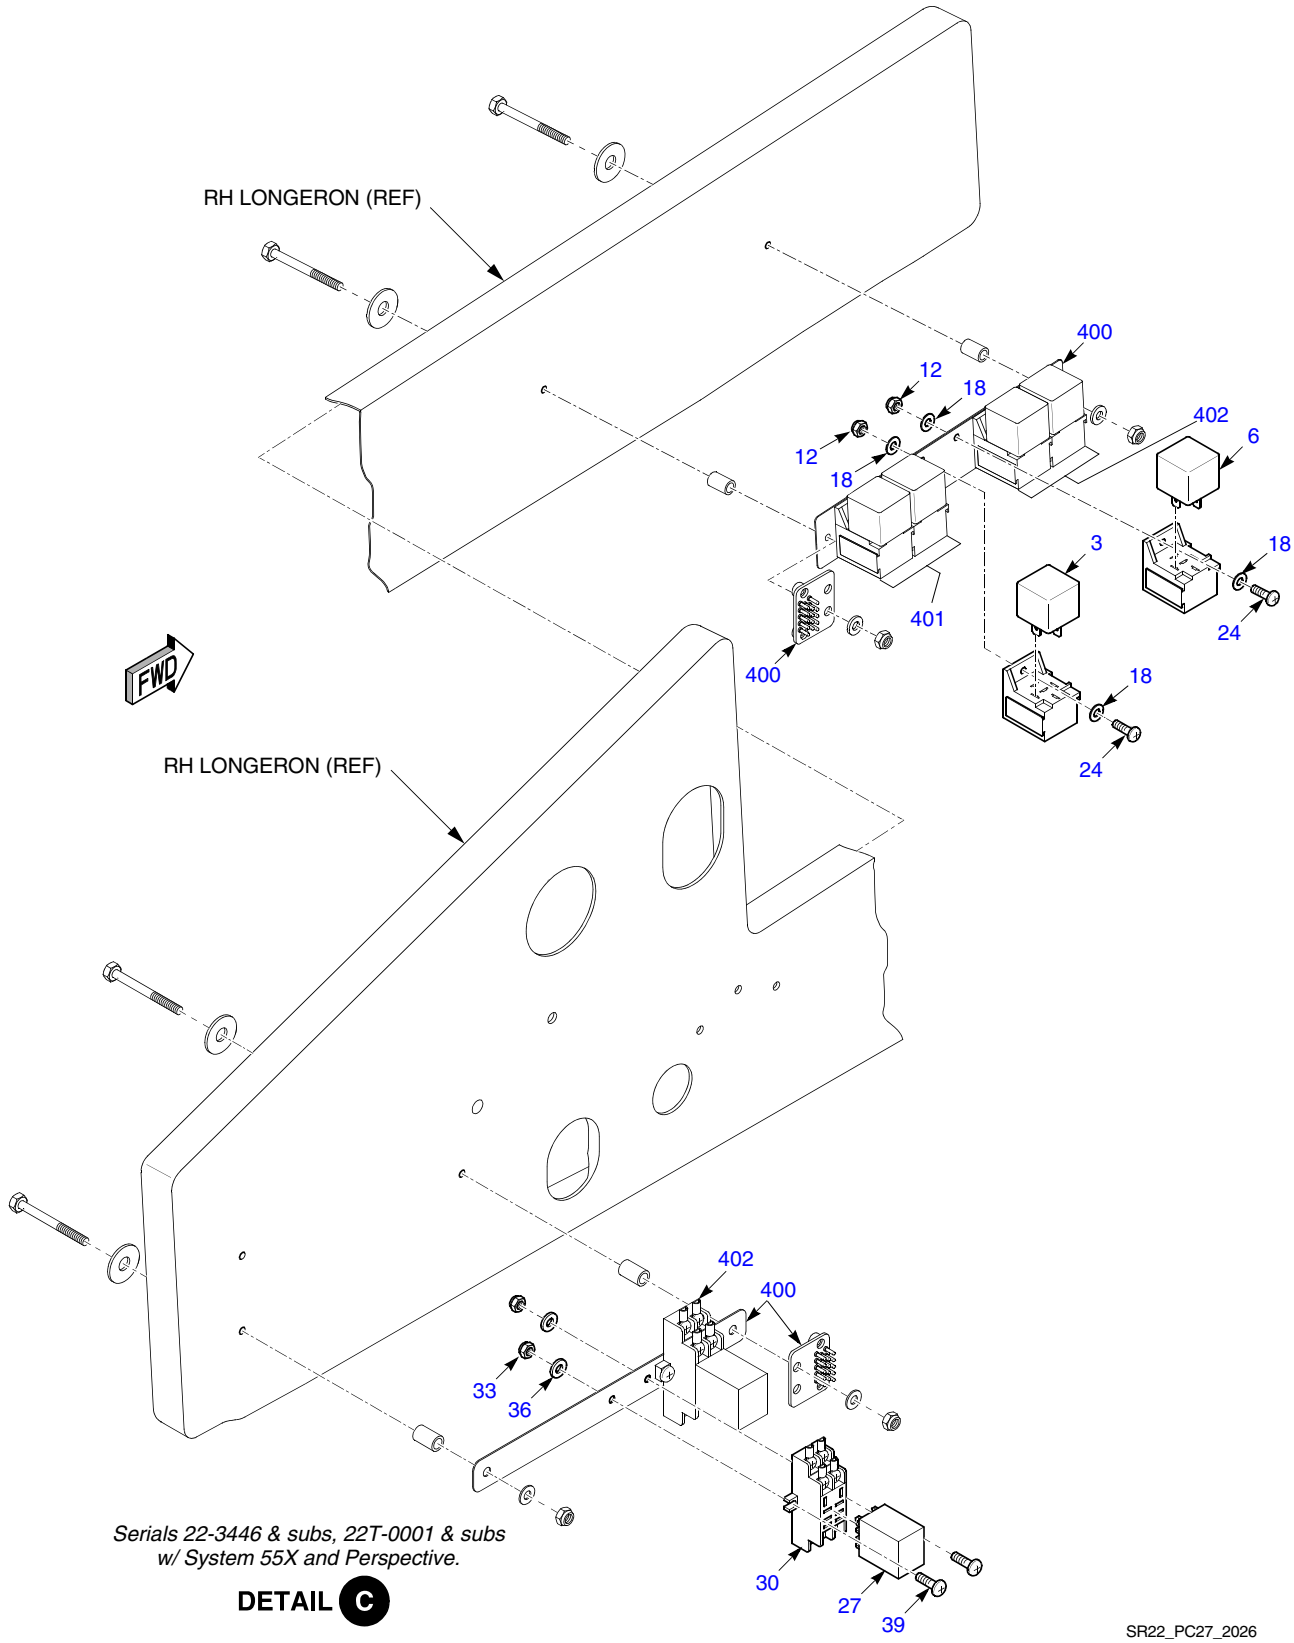

Figure-03

Pitch Relay Assembly - Serials 22-3446 & subs, 22T-0001 & subs w/ Sys 55X and Persp (Sheet 3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			PITCH RELAY ASSEMBLY	0002 / 0001	/	NP
	3	50288-001			·RELAY, PITCH UP	0002 / 0001	/	1
	6	50288-001			·RELAY, PITCH DOWN	0002 / 0001	/	1
	9	50289-001			·RELAY SOCKET	0002 / 0001	/	2
	12	MS21044N3		A	·NUT	0002 / 0001	/	2
	15	NAS1149F0332P		A	·WASHER	0002	0820	4
	18	NAS1149F0316P		A	·WASHER	0821 / 0001	/	4
	21	MS35207-264		A	·SCREW	0002	0820	2
	24	MS35207-263		A	·SCREW	0821 / 0001	/	2
	27	50293-001			·RELAY, PITCH AUTOPILOT	0002 / 0001	/	1
	30	12724-002			·RELAY SOCKET	0002 / 0001	/	1
	33	MS21044N08		A	·NUT	0002 / 0001	/	2
	36	NAS1149FN832P		A	·WASHER	0002 / 0001	/	2
	39	MS35206-246		A	·SCREW	0002 / 0001	/	2
-	42	50295-001			·RELAY HOLD DOWN SPRING	0002 / 0001	3740 / 0100	1
					FOR SPARES USE P/N 53176-001			
-	45	53176-001			·RELAY HOLD DOWN SPRING	3741 / 0101	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-11 DET			RELAY MOUNTING PLATE INSTALLATION			
	401	RF 27-50-01 DET			FLAP RELAY ASSEMBLY			
	402	RF 27-10-04 DET			ROLL RELAY ASSEMBLY			

EFFECTIVITY:
All

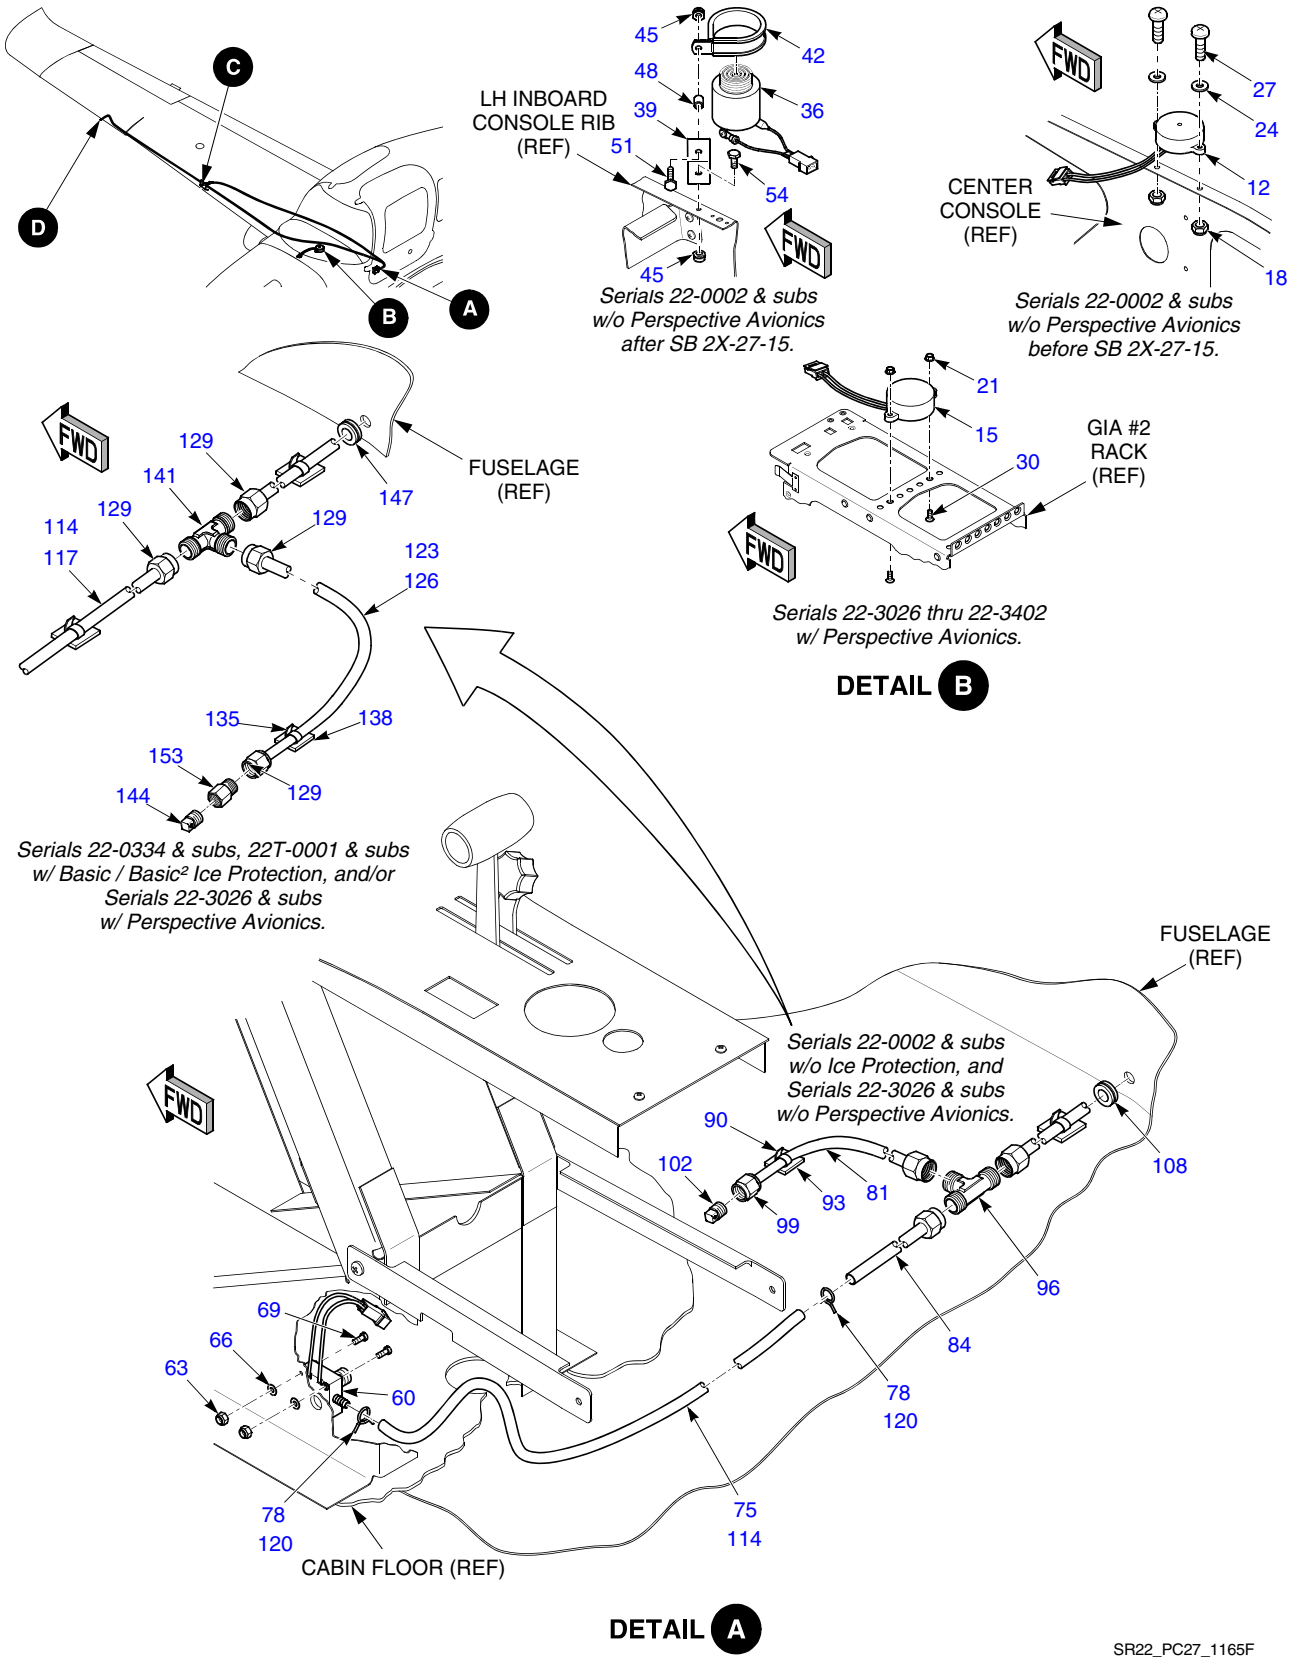

Figure-01

Stall Warning System - Serials 22-0002 & subs, 22T-0001 & subs w/o FIKI (1 of 3)

EFFECTIVITY:
Serials 22-0002 & subs, 22T-0001 & subs w/o FIKI

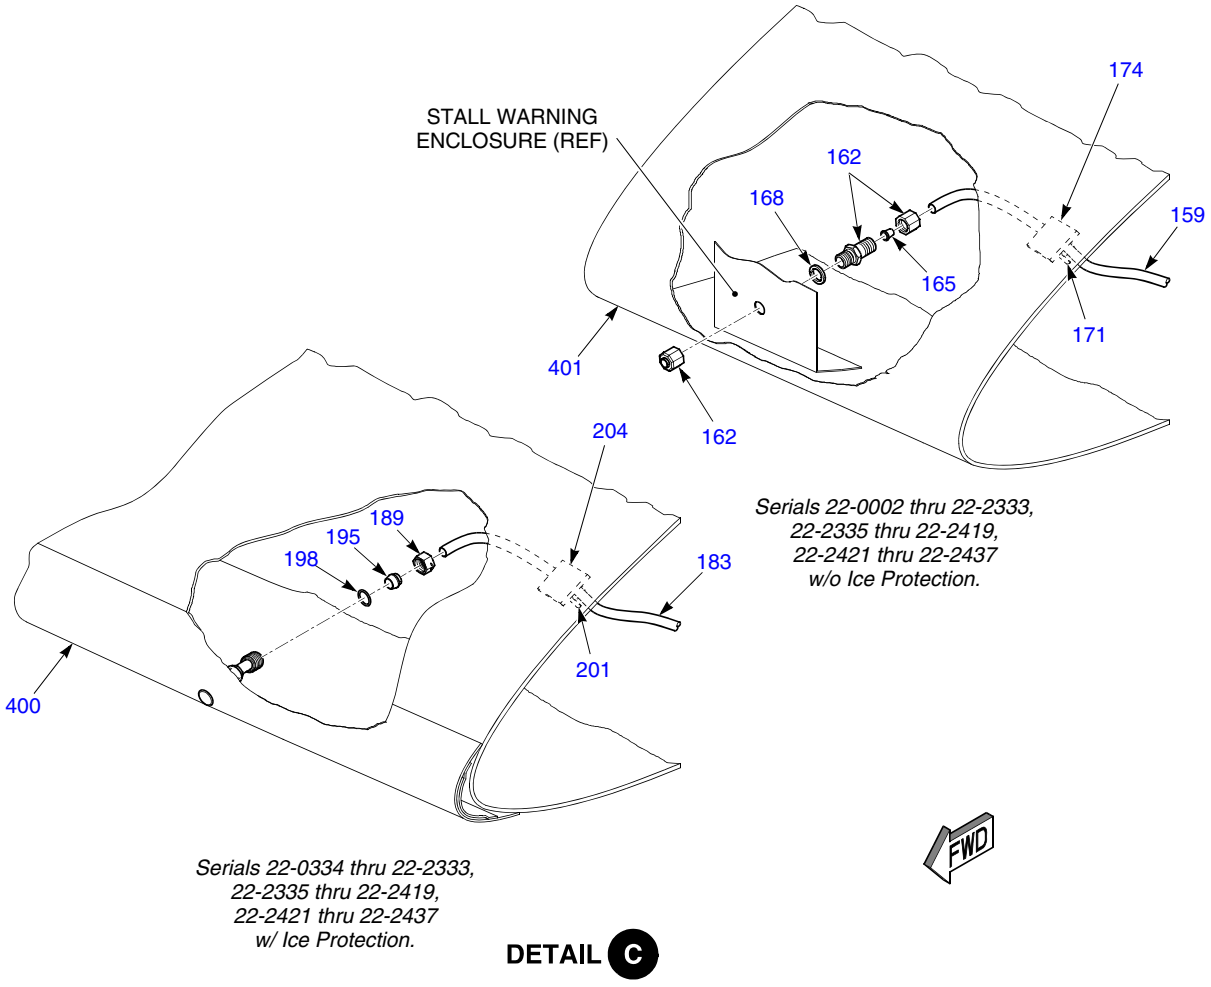

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437 w/o Ice Protection.

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437 w/ Ice Protection.

DETAIL C

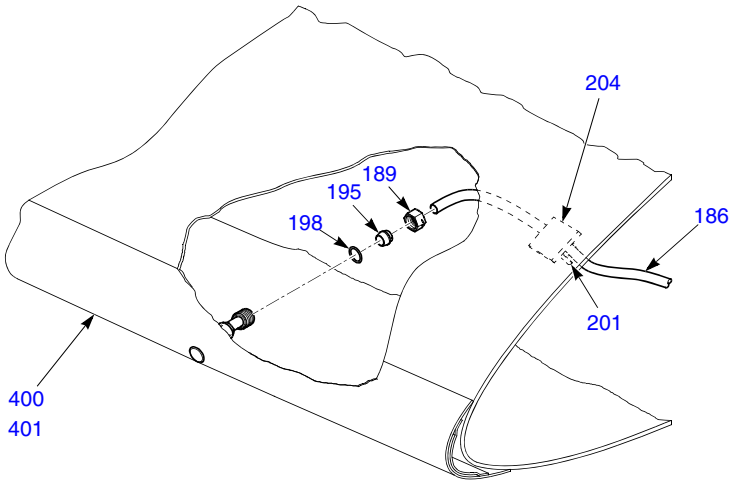

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs.

DETAIL D

SR22_PC27_1678

Figure-01

Stall Warning System - Serials 22-0002 & subs, 22T-0001 & subs w/o FIKI (2 of 3)

EFFECTIVITY:
Serials 22-0002 & subs, 22T-0001 & subs w/o FIKI

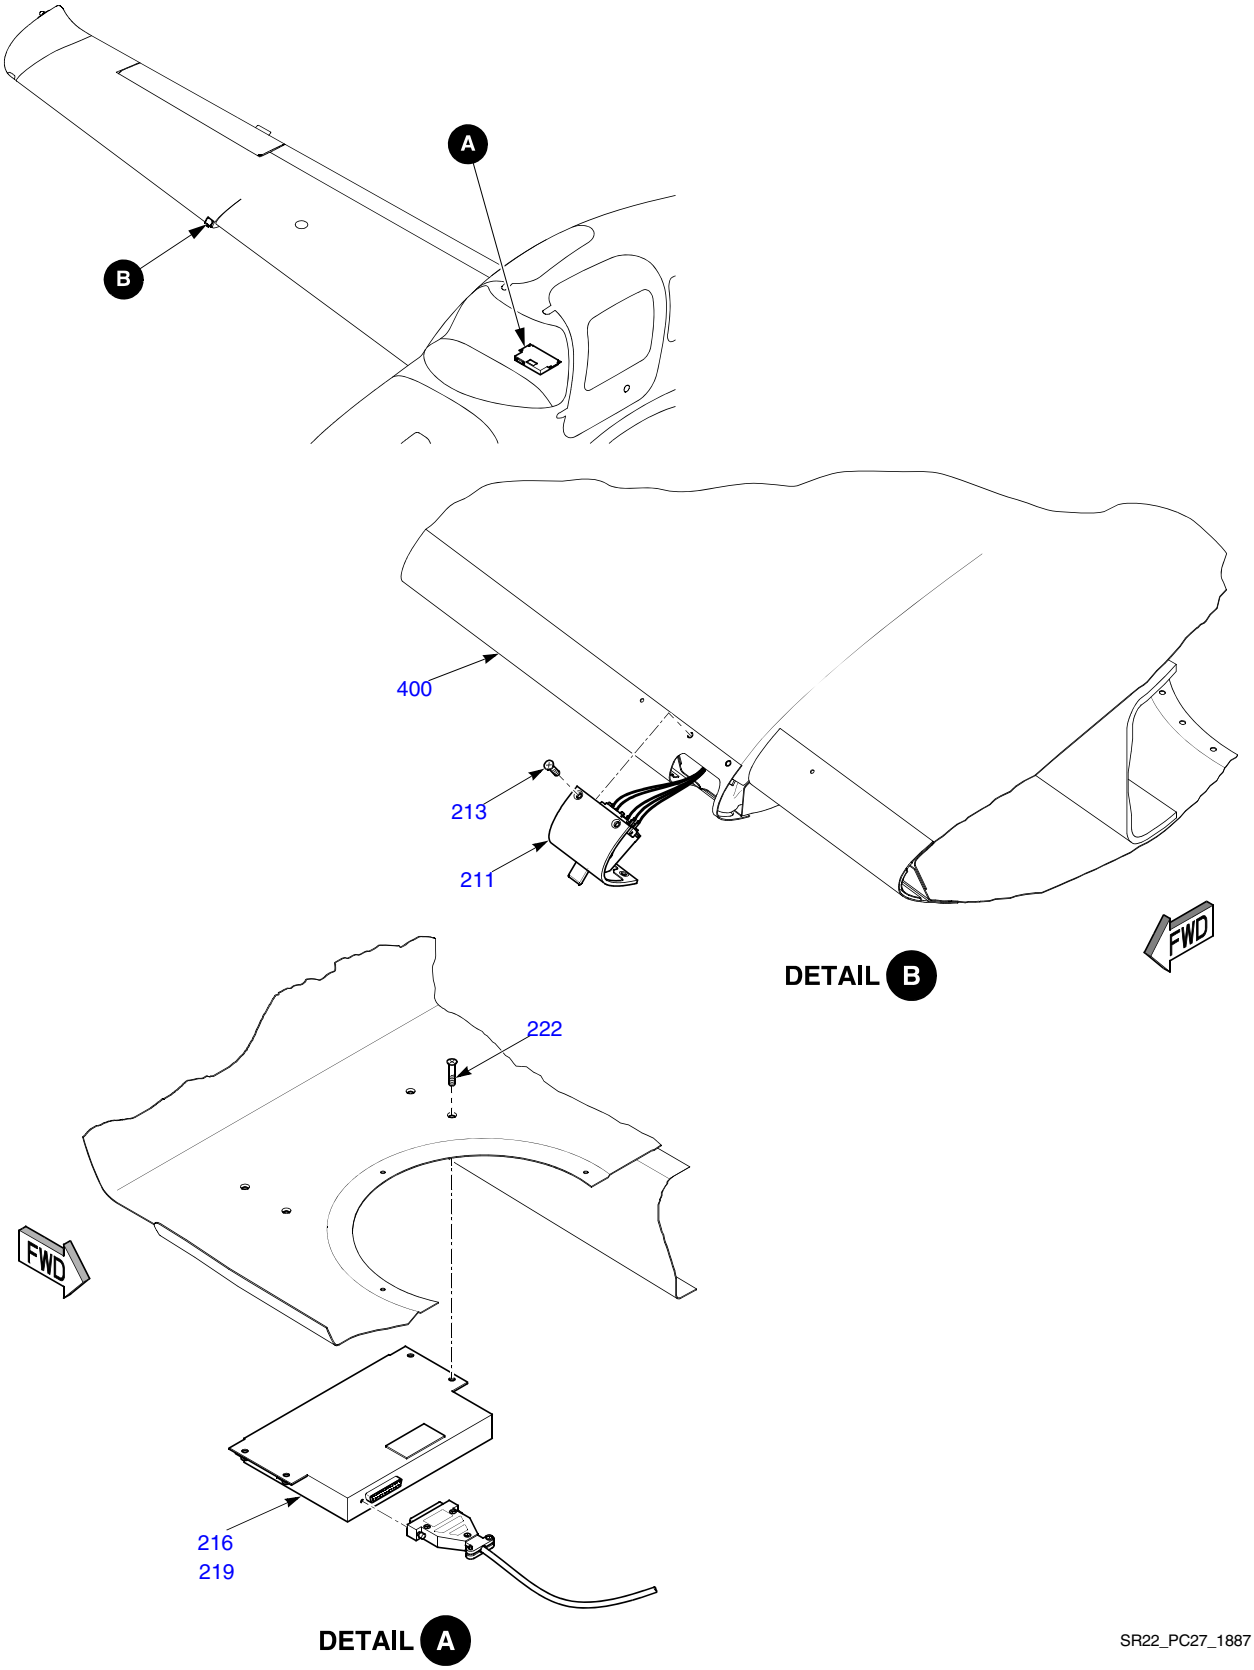

Figure-01
Stall Warning System - Serials w/ FIKI (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FLIGHT CONTROLS INSTALLATION (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·STALL WARNING SYSTEM	0002 / 0001	/	NP
-	6	NO PRT NUMBER	^		··STALL WARNING HORN ASSEMBLY	0002		NP
-	9	12854-001			···HORN	0002	1442	1
					FOR SPARES USE P/N 12854-002			
	12	12854-002	$		···HORN	1443		1
	15	24523-001	%		···HORN	3026	3402	1
	18	MS21044N04	$	A	···NUT	0002		2
	21	MS21042-06	%	A	···NUT	3026	3402	2
	24	NAS1149FN432P		A	···WASHER	0002		2
	27	MS35206-218	$	A	···SCREW	0002		2
	30	MS24693-S27	%	A	···SCREW	3026	3402	2
-	33	NO PRT NUMBER			··STALL WARNING HORN ASSEMBLY AFTER SB2X-27-15	0002		NP
	36	53331-001			···HORN	0002		1
	39	17663-001			···BRACKET	0002		1
	42	MS21919WDG27		A	···CLAMP	0002		1
	45	MS21044N3		A	···NUT	0002		2
	48	NAS43DD3-24		A	···SPACER	0002		1
	51	AN3-7A		A	···BOLT	0002		1
	54	AN3-4A		A	···BOLT	0002		1
-	57	NO PRT NUMBER	^		··ELECTRO-PNEUMATIC SWITCH ASSEMBLY	0002 / 0001	/	NP
	60	12801-001			···SWITCH	0002 / 0001	/	1
	63	MS21042-02		A	···NUT	0002 / 0001	/	2
	66	NAS1149FN232P		A	···WASHER	0002 / 0001	/	2
	69	MS35206-209		A	···SCREW	0002 / 0001	/	2
-	72	NO PRT NUMBER			··STALL WARNING, CABIN FLOOR W/O ICE AND PERSP	0002		NP
	75	50787-063			···TYGON TUBE	0002		AR
	78	50566-002		A	···SPRING CLAMP	0002		2
	81	12402-103			···TUBING	0002		1
	84	12402-104			···TUBING	0002		1
-	87	50928-025		A	···INSERT	0002		4
	90	50239-020		A	···CABLE TIE	0002		AR
	93	50132-001		A	···TIE DOWN	0002		AR
	96	50385-001			···UNION TEE	0002		1
	99	50386-001			···CONNECTOR	0002		1
	102	MS20913-1D			···PLUG	0002		1
-	105	50145-201			···GROMMET	0002	0386	1
	108	50145-701			···GROMMET	0387		1
-	111	NO PRT NUMBER	^		··STALL WARNING, CABIN FLOOR W/ ICE AND/OR PERSP	0334 / 0001	/	NP
	114	15133-102	$		···TYGON TUBE	0334		AR
	117	24524-102	%		···TYGON TUBE	3026 / 0001	/	AR
	120	50566-002		A	···SPRING CLAMP	0334 / 0001	/	1
	123	15133-101	$		···TUBING	0334		1
	126	24524-101	%		···TUBING	3026 / 0001	/	1
	129	51246-001		A	···NUT	0334 / 0001	/	4
-	132	51240-001		A	···INSERT	0334 / 0001	/	1
	135	50239-020		A	···CABLE TIE	0334 / 0001	/	AR
	138	50132-001		A	···TIE DOWN	0334 / 0001	/	AR
	141	51239-001			···UNION TEE	0334 / 0001	/	1
	144	51241-001			···PLUG	0334 / 0001	/	1
	147	50145-701	$		···GROMMET	0334		1
-	150	MS21266-4N	%		···GROMMET	3026 / 0001	/	AR
	153	51242-001			···CONNECTOR	0334 / 0001	/	1
-	156	NO PRT NUMBER	^		··STALL WARNING, LEADING EDGE W/O ICE	0002	2437	NP

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	159	10687-106			···TUBING	0002	2437	1
	162	10687-101	@	A	···BULKHEAD UNION	0002	2437	1
	165	50928-025		A	···INSERT	0002	2437	1
	168	MS28778-4		A	···O-RING	0002	2437	1
	171	MS3367-1-9		A	···CABLE TIE	0002	2437	AR
	174	50132-001		A	···TIE DOWN	0002	2437	AR
-	177	MS35489-149	#		···GROMMET	0002	2437	1
-	180	NO PRT NUMBER	^		··STALL WARNING, LEADING EDGE W/ ICE	0334	2437	NP
					W/ AND W/O ICE	2438 / 0001	/	
	183	15133-101			···TUBING	0334	2437	1
	186	17430-101			···TUBING	2438 / 0001	/	1
	189	15163-018		A	···NUT	0334 / 0001	/	1
					ALTERNATE FOR P/N 15164-012			
-	192	15164-012		A	···NUT	0334 / 0001	/	1
					ALTERNATE FOR P/N 15163-018			
	195	15164-032		A	···OLIVE	0334 / 0001	/	1
	198	15164-092		A	···O-RING	0334 / 0001	/	1
	201	MS3367-1-9		A	···CABLE TIE	0334 / 0001	/	AR
	204	50132-001		A	···TIE DOWN	0334 / 0001	/	AR
-	207	MS35489-22	#		···GROMMET	0334 / 0001	/	1
-	210	25759-001	&		··LIFT TRANSDUCER	3403 / 0001	/	1
					FOR SPARES USE P/N 25759-002			
	211	25759-002	&		··LIFT TRANSDUCER	3403 / 0001	/	1
	213	MS24693-S29	&	A	··SCREW	3403 / 0001	/	4
	216	25758-001	&		··STALL WARNING COMPUTER	3403 / 0001	3705 / 0053	1
					FOR SPARES USE P/N 25758-002			
	219	25758-002	&		··STALL WARNING COMPUTER	3706 / 0054	/	1
	222	MS24694S56	&	A	··SCREW	3403 / 0001	/	4
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 30-10-01 DET			POROUS PANEL, W/ ICE PROTECTION			
	401	NO PRT NUMBER			LEADING EDGE PANEL, W/O ICE PROTECTION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 W/ FIKI FOR PART IDENTIFICATION.			
					4) SERIAL NUMBER 22T-0043, 22T-0046 THRU 22T-0052; REFER TO 22T-0054 W/ FIKI FOR PART IDENTIFICATION.			
			#		LOCATED IN WING STRUCTURAL ASSEMBLY.			
			@		IF THREAD RELIEF IS PRESENT ON FORWARD THREADED END OF BULKHEAD UNION, TRIM AT THREAD RELIEF TO SECURE FITTING FLUSH TO STALL WARNING ENCLOSURE.			
			$		SERIAL NUMBERS W/O PERSPECTIVE AVIONICS.			
			%		SERIAL NUMBERS W/ PERSPECTIVE AVIONICS.			
			&		SERIAL NUMBERS W/ FIKI.			
			^		SERIAL NUMBERS W/O FIKI.			

EFFECTIVITY:
All

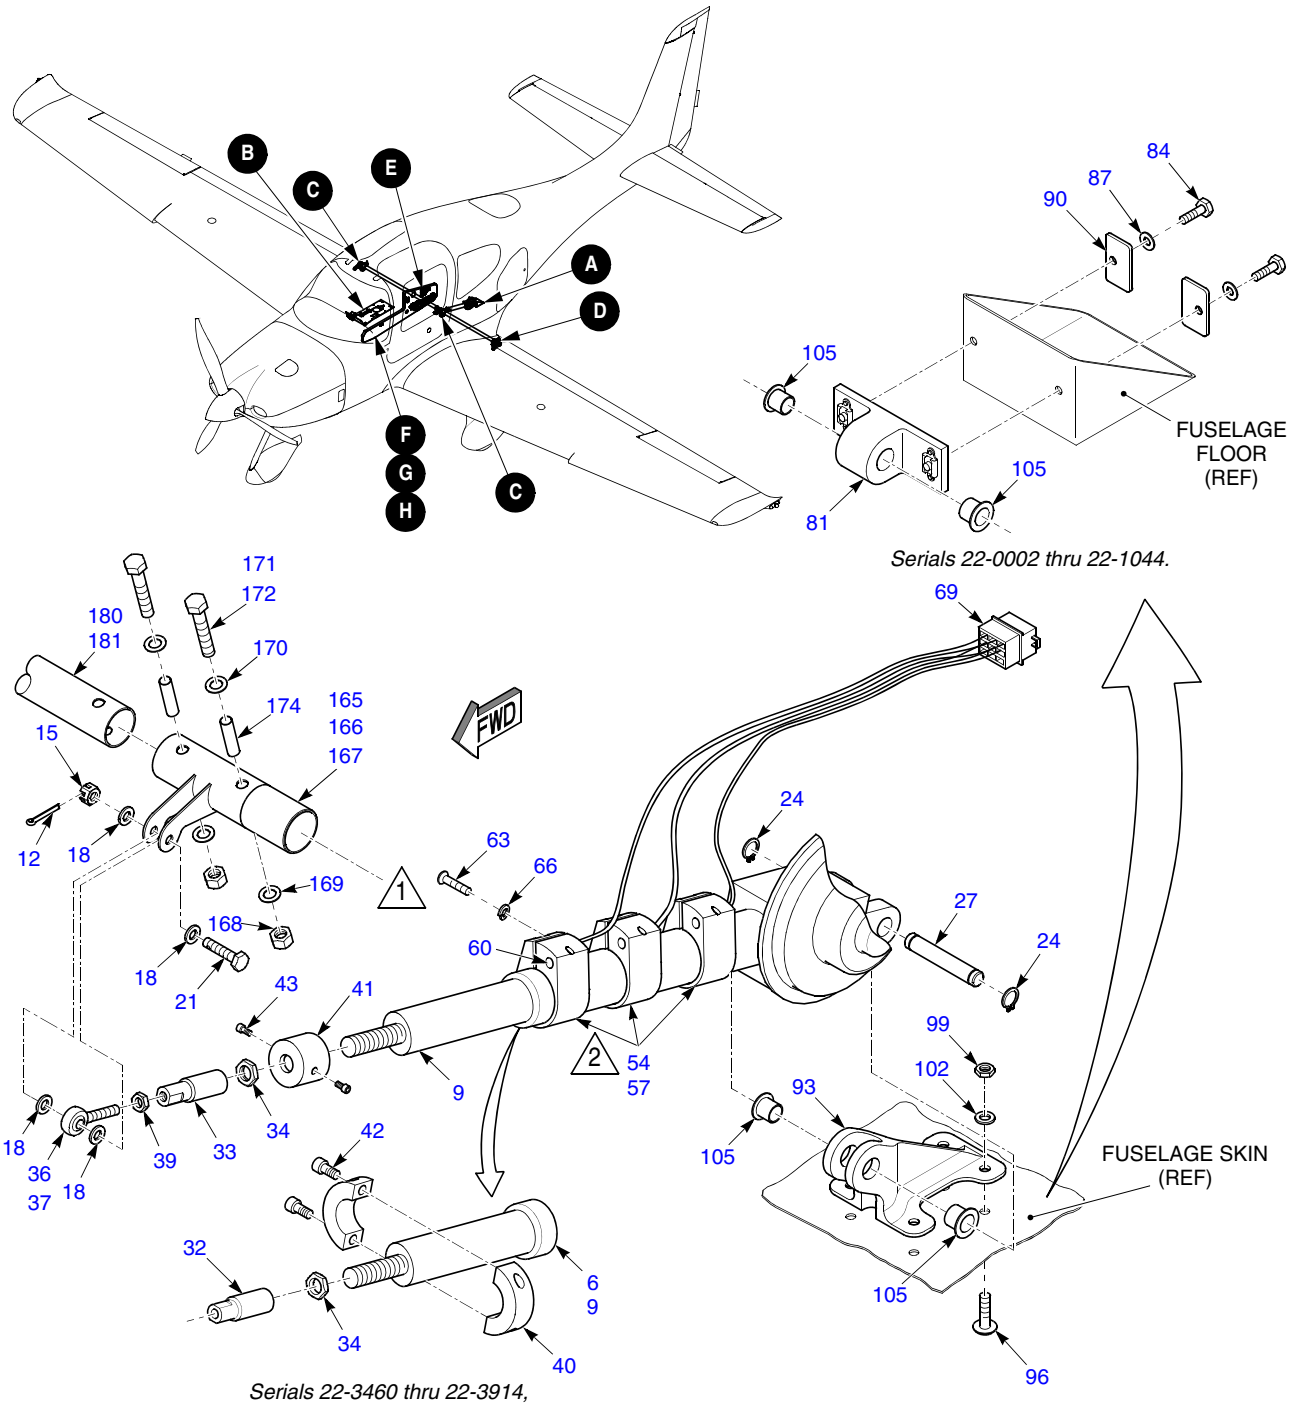

NOTE

1 Refer to sheet 3 for continuation.

2 *Serials 22-3915 & subs, Serials 22T-0442 & subs:*
Collar Installation.

DETAIL A

SR22_PC27_1166H

Figure-01
Flap System (1 of 7)

EFFECTIVITY:
All

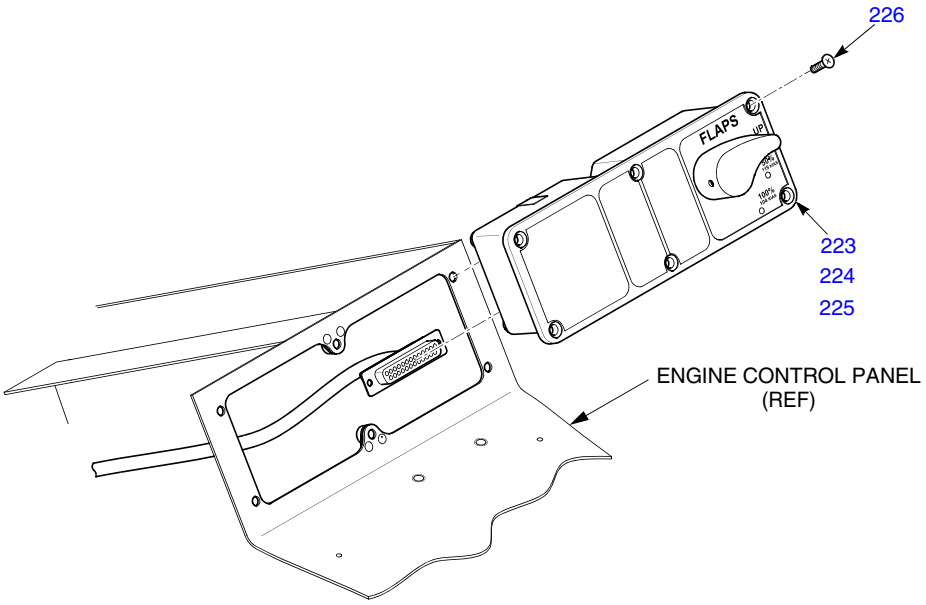

Serials w/ Perspective Avionics.

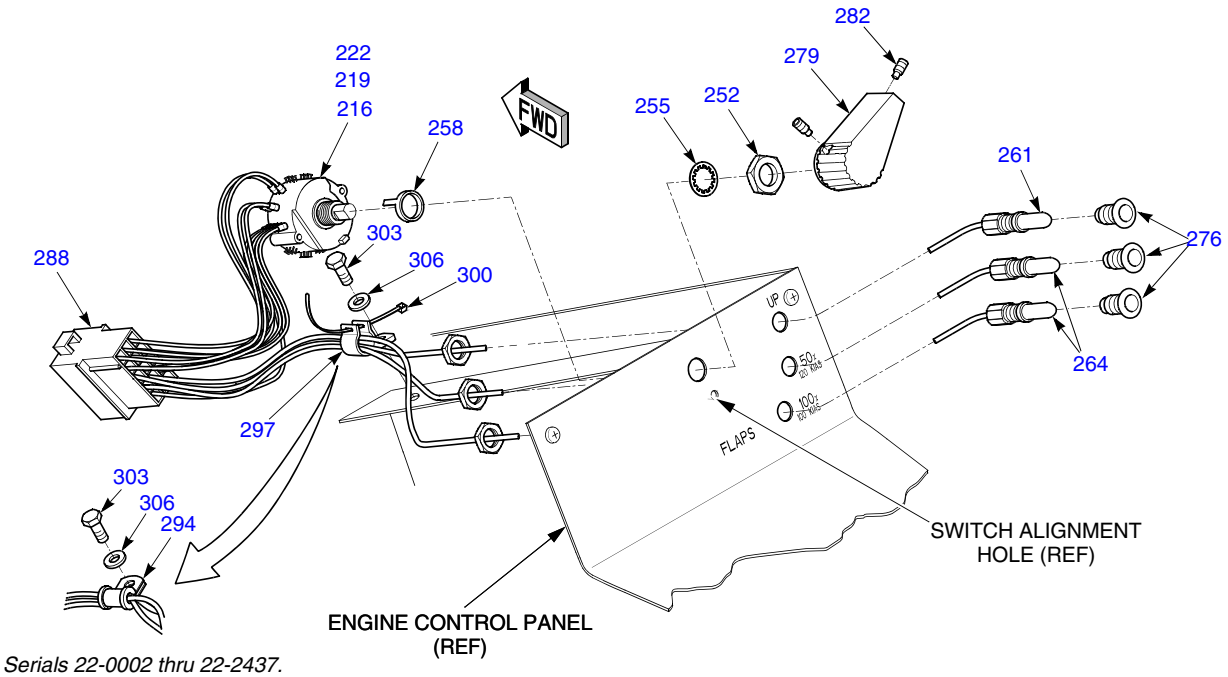

Serials 22-0002 thru 22-2437.

Serials 22-0002 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

DETAIL B

SR22_PC27_1167F

Figure-01
Flap System (2 of 7)

EFFECTIVITY:
All

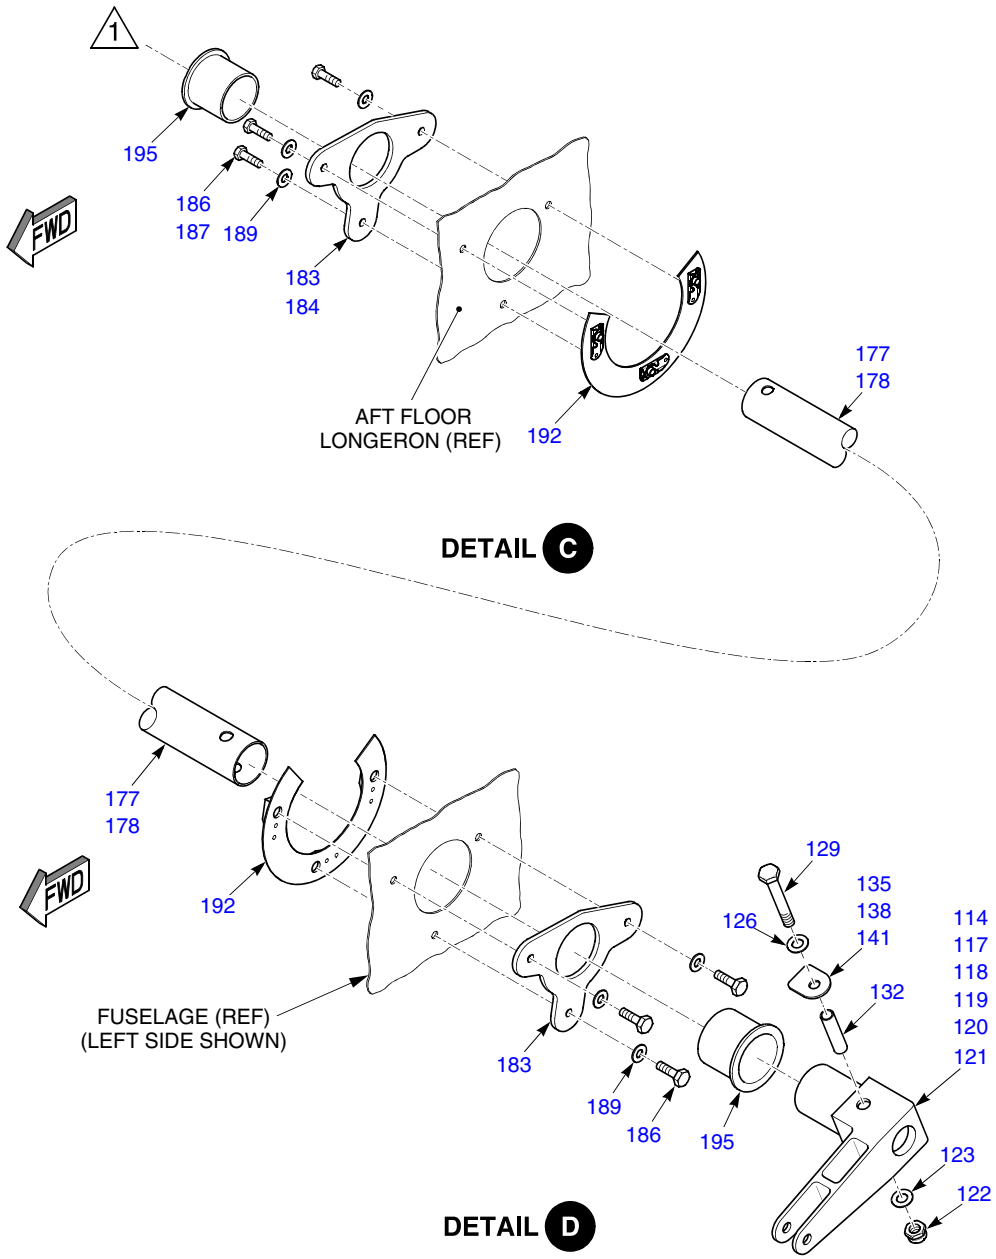

NOTE

1 Refer to sheet 1 for continuation.

SR22_PC27_1769B

Figure-01
Flap System (3 of 7)

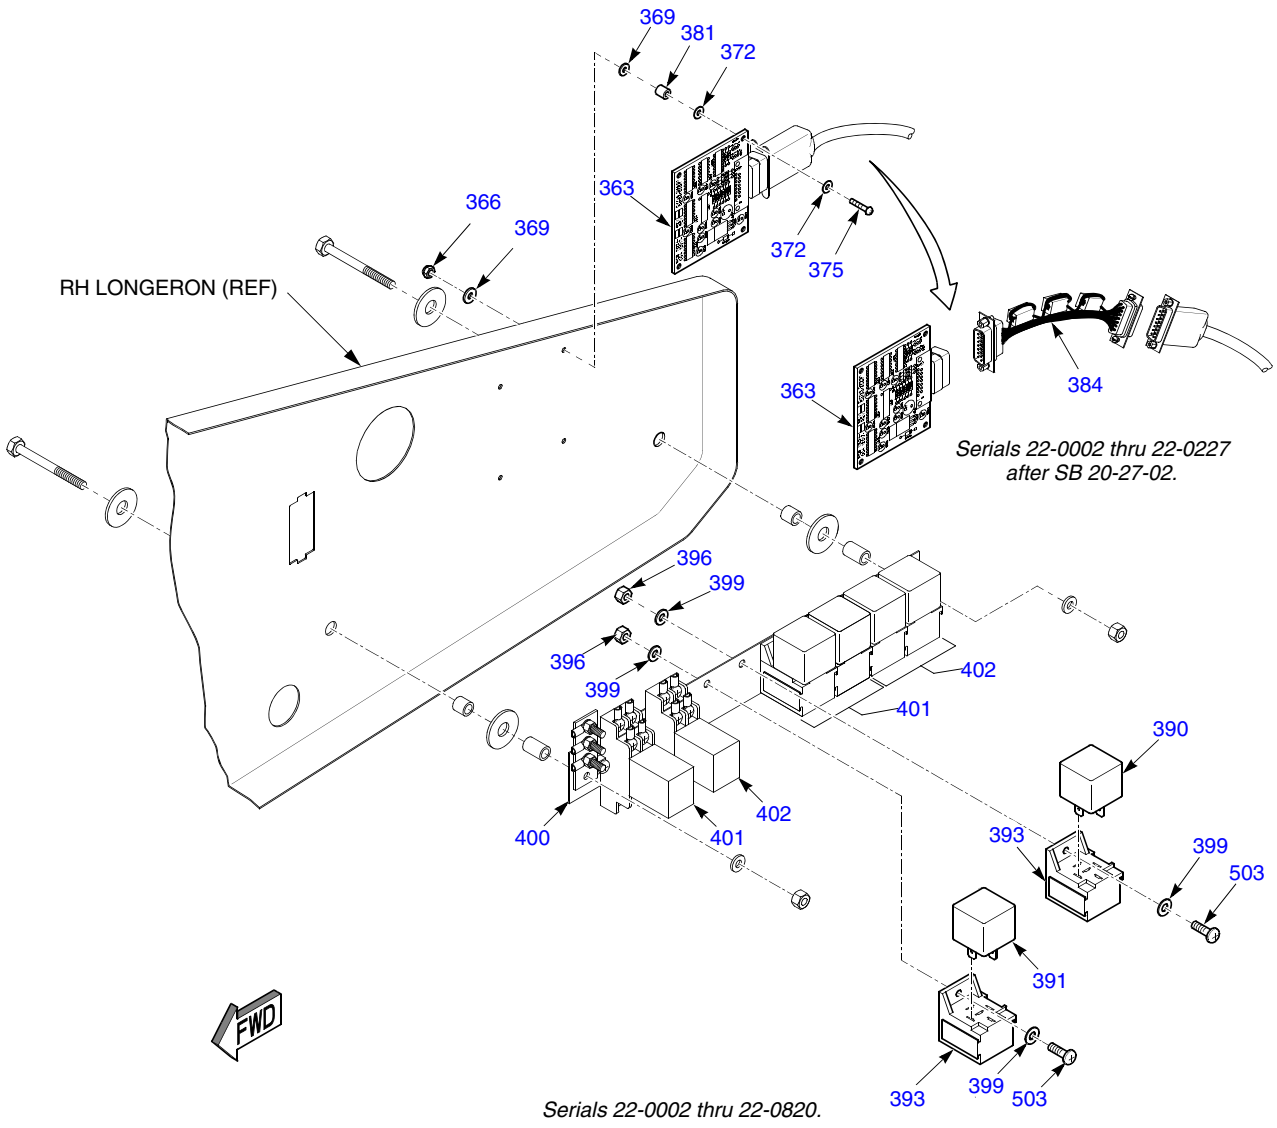

DETAIL E

SR22_PC27_1168C

Figure-01
Flap System - Serials 22-0002 thru 22-0820 (4 of 7)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

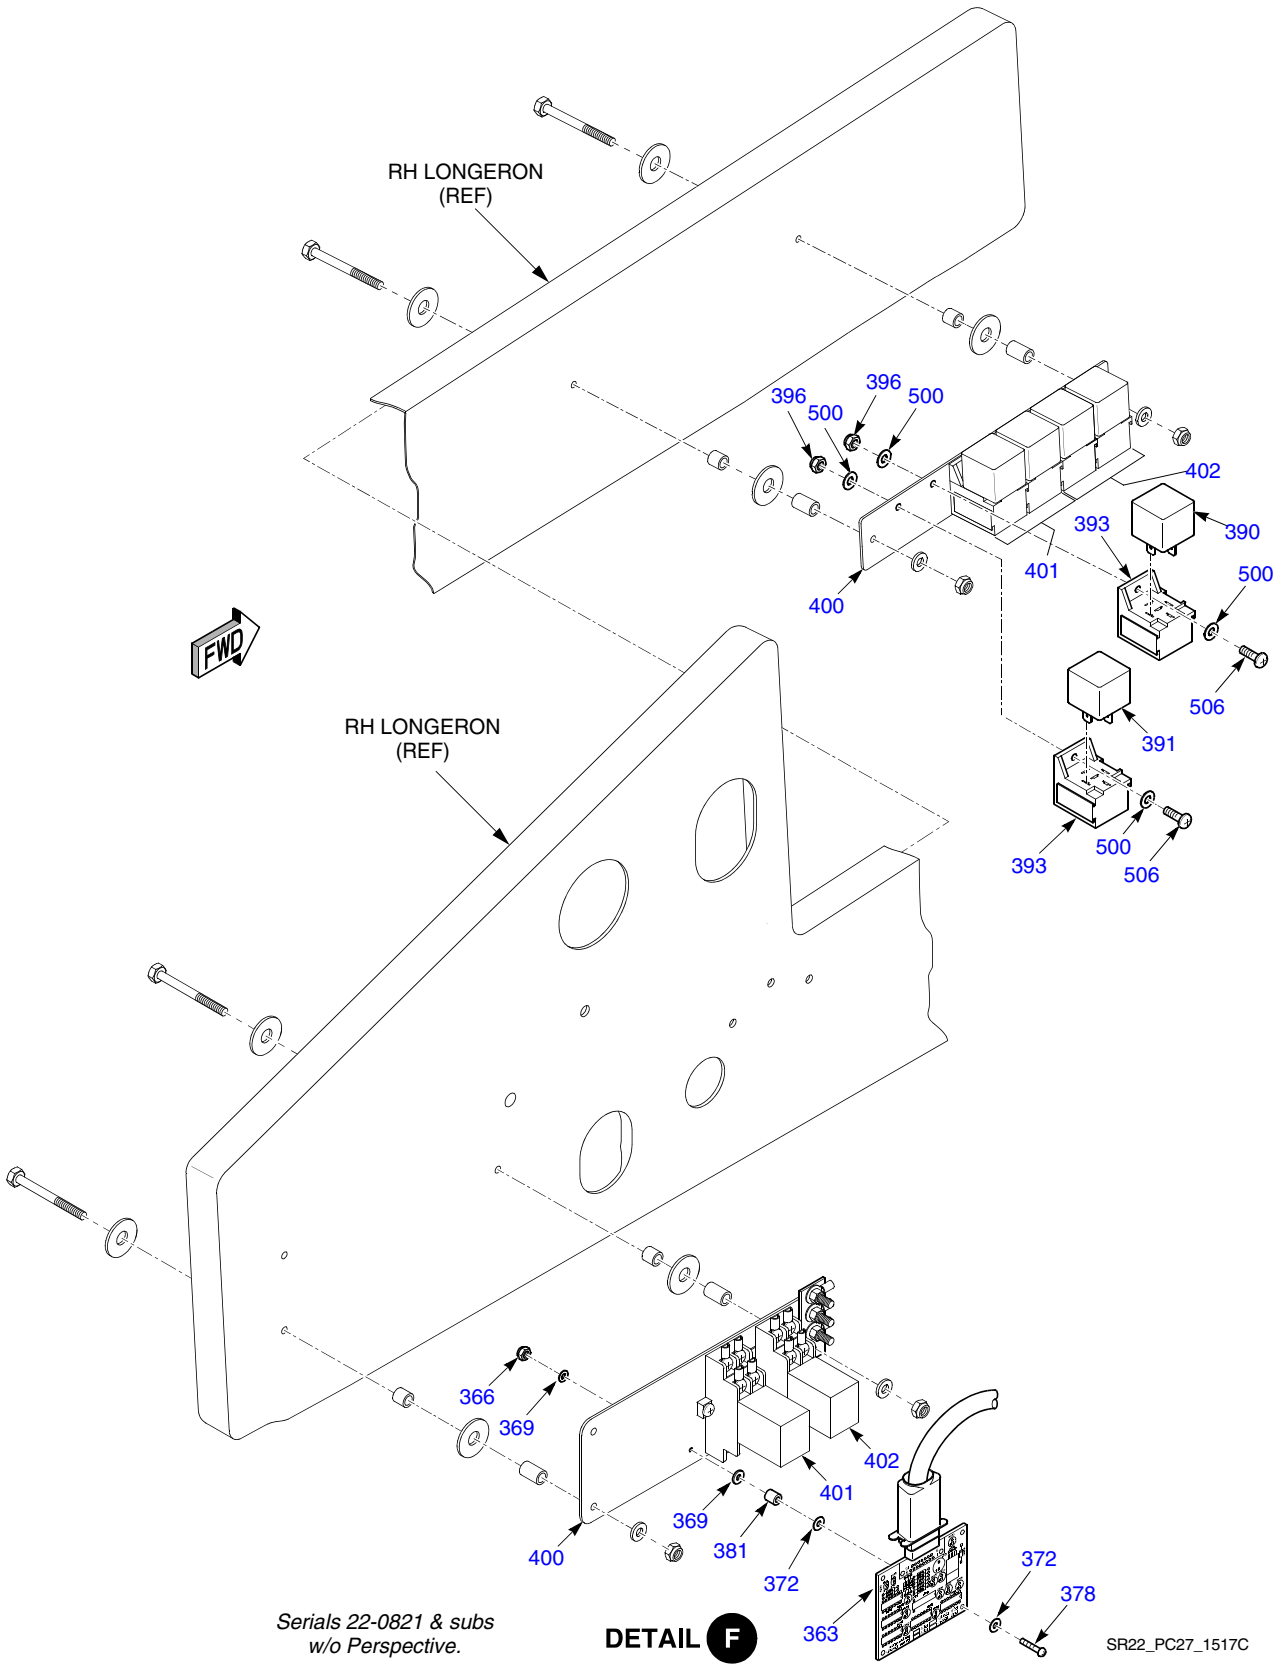

Figure-01

Flap System - Serials 22-0821 & subs w/o Perspective (5 of 7)

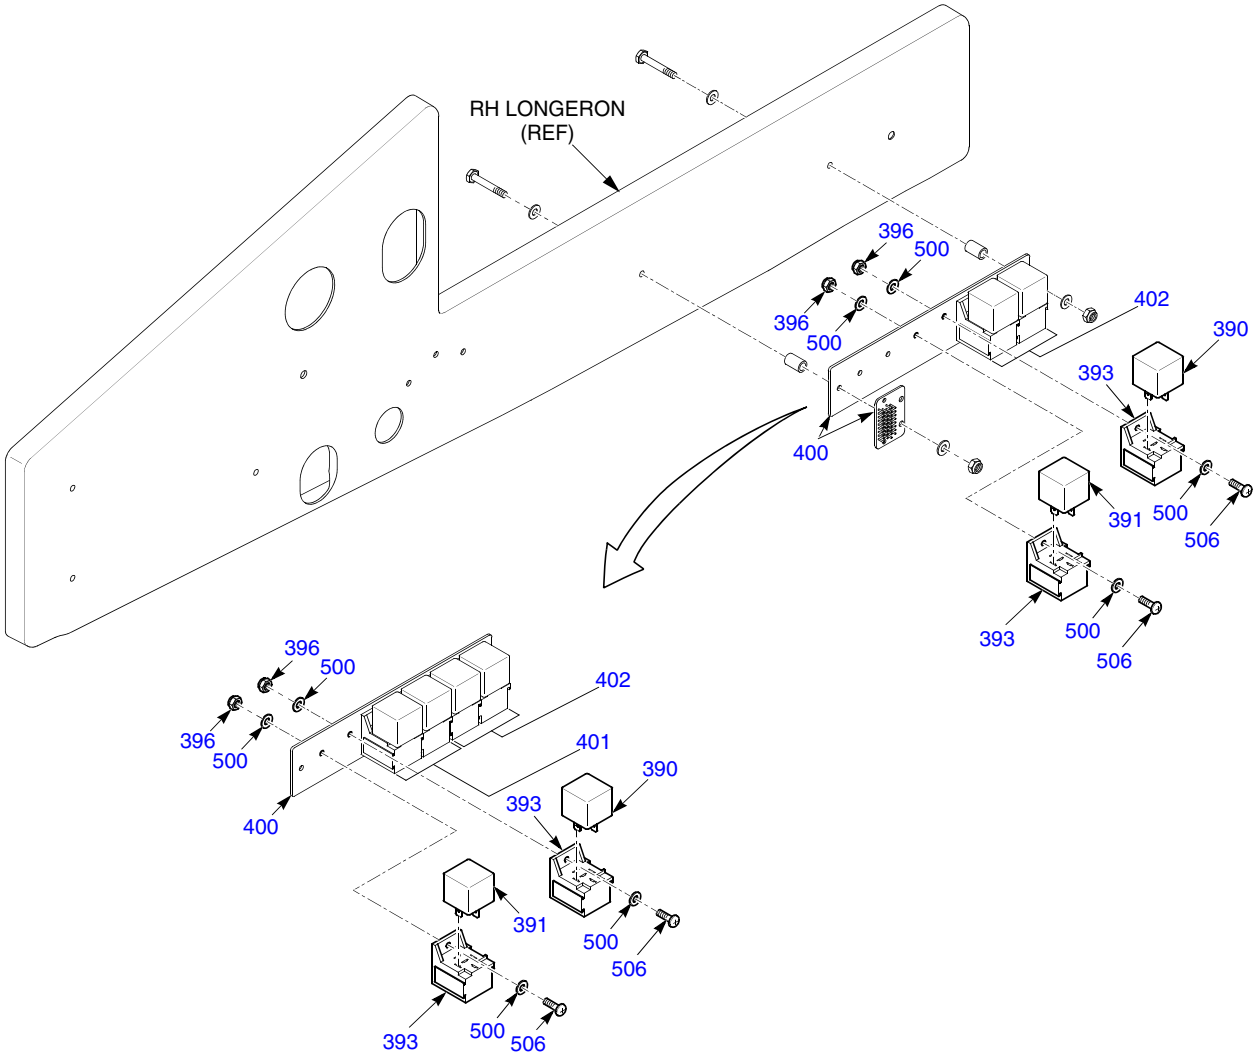

Serials 22-3446 thru 22-3881, 22T-0001 thru 22T-0388 w/ System 55X.

FWD

DETAIL G

Serials 22-3026 thru 22-3881, 22T-0001 thru 22T-0388.

SR22_PC27_2012A

Figure-01

Flap System - 22-3026 thru 22-3881, 22T-0001 thru 22T-0388 w/ System 55X and/or Perspective (6 of 7)

EFFECTIVITY:
All

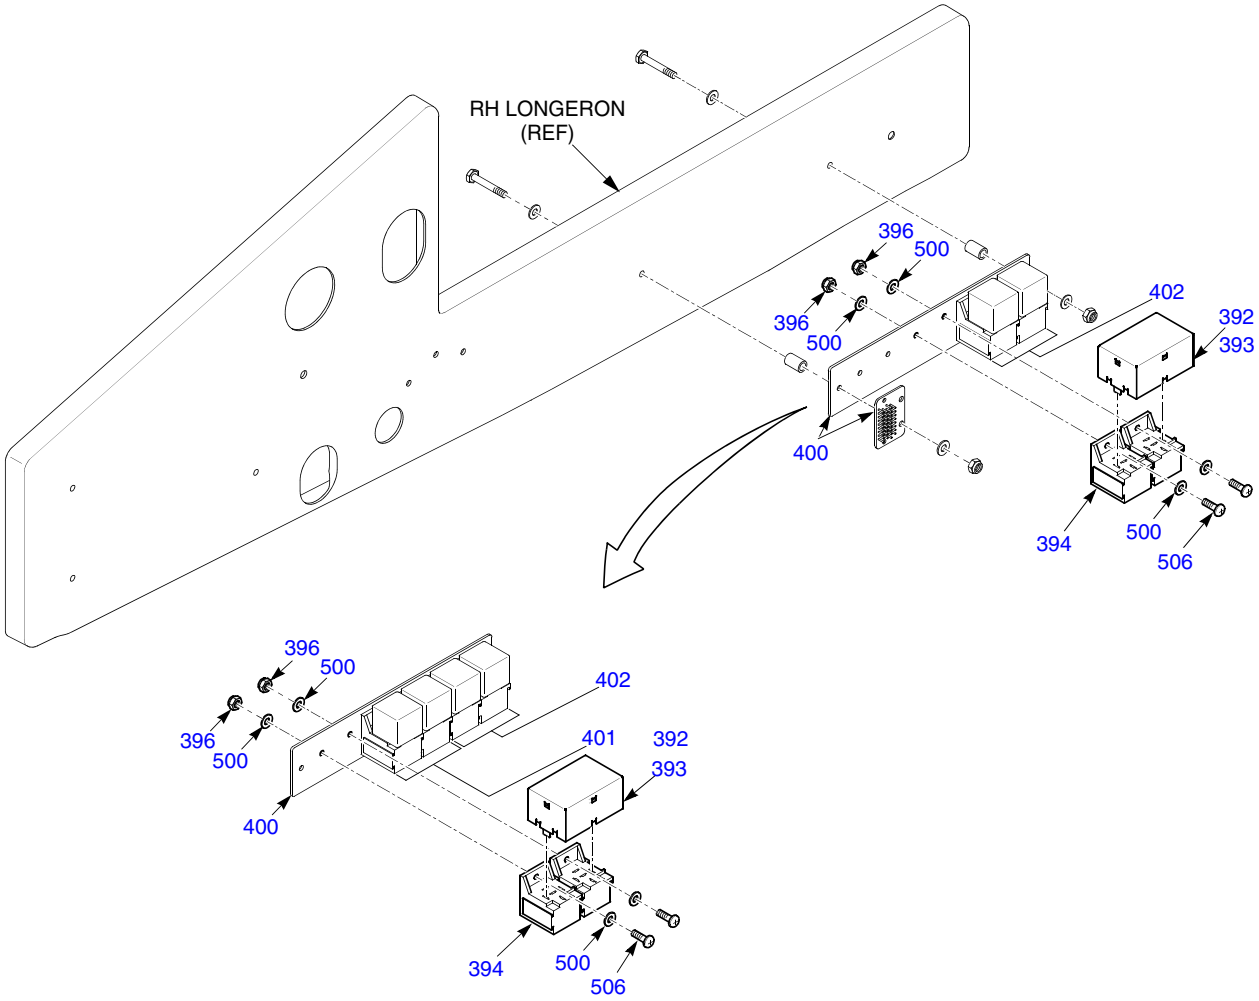

Serials 22-3882 & subs, 22T-0389 & subs w/ System 55X.

FWD

DETAIL H

SR22_PC27_2096

Figure-01

Flap System - Serials 22-3882 & subs, 22T-0389 & subs w/ System 55X and/or Perspective (7 of 7)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FLIGHT CONTROLS INSTALLATION (RF 27-00-01 NHA)	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·FLAP SYSTEM INSTALLATION	0002 / 0001	/	NP
	6	11787-002			··FLAP ACTUATOR	0002	1519	1
					FOR SPARES USE P/N 11787-003			
	9	11787-003			··FLAP ACTUATOR	1520 / 0001	/	1
	12	MS24665-132		A	··COTTER PIN	0002 / 0001	/	1
	15	MS17825-4		A	··NUT	0002 / 0001	/	1
	18	NAS1149F0463P		A	··WASHER	0002 / 0001	/	4
	21	AN4-11		A	··BOLT	0002 / 0001	/	1
	24	5903995		A	··RETAINER RING	0002 / 0001	/	2
	27	5903923		A	··PIN	0002 / 0001	/	1
-	30	11185-003			···END FITTING	0002	3459	1
					FOR SPARES USE P/N 11185-005			
-	31	11185-004			···END FITTING	3460 / 0001	3766 / 0156	1
					FOR SPARES USE P/N 11185-005			
	32	11185-005			···END FITTING	3767 / 0157	3914 / 0441	1
					AFTER SB2X-27-16	0002 / 0001	3766 / 0156	
	33	11185-006			···END FITTING	3915 / 0442		1
	34	5904442		A	···JAM NUT	0002 / 0001	/	1
	36	11315-004			···ROD END	0002	3459	1
	37	11315-005			···ROD END	3460 / 0001	/	1
					AFTER SB2X-27-16	0002	3459	
	39	AN316-4R		A	···JAM NUT	0002 / 0001	/	1
	40	27425-001			···COLLAR, SHAFT	3460 / 0001	3914 / 0441	1
					AFTER SB2X-27-16	0002	3459	
	41	23508-001			···COLLAR, SHAFT	3915 / 0442		1
	42	MS21262-37		A	···SCREW	3460 / 0001	3914 / 0441	2
					AFTER SB2X-27-16	0002	3459	
	43	MS51964-050		A	···SCREW	3915 / 0442	/	2
-	44	50408-001			···PROXIMITY SWITCH	0002	1519	3
					FOR SPARES USE P/N 16675-001			
-	45	16675-001			···PROXIMITY SWITCH ASSEMBLY	1520	1763	3
					FOR SPARES USE P/N 16675-003			
-	48	16675-002			···PROXIMITY SWITCH ASSEMBLY	1764	2180	3
					FOR SPARES USE P/N 16675-003			
-	51	16675-003			···PROXIMITY SWITCH ASSEMBLY	2181 / 0001	/	3
	54	16544-001			····SENSOR CLAMP	1321	2180	1
	57	16544-002			····SENSOR CLAMP	2181 / 0001	/	1
	60	16494-002			····SENSOR	1321 / 0001	/	1
	63	NAS1352-06-12		A	····SCREW	1321 / 0001	/	1
					ALTERNATE FOR P/N MS35206-232			
-	64	MS35206-232		A	····SCREW	1321 / 0001	/	1
					ALTERNATE FOR P/N NAS1352-06-12			
	66	MS35338-41		A	····WASHER	1321 / 0001	/	1
	69	NO PRT NUMBER			···CONNECTOR ASSEMBLY	0002 / 0001	/	NP
-	72	50158-009			····CONNECTOR BODY	0002 / 0001	/	1
-	75	50157-001			····PIN	0002 / 0001	/	5
-	78	50157-002			····PIN	0002 / 0001	/	2
	81	10660-003			··BRACKET	0002	1044	1
	84	AN3-6A		A	··BOLT	0002	1044	2
	87	NAS1149F0316P		A	··WASHER	0002	1044	2
	90	11397-001			··RADIUS BLOCK	0002	1044	2
	93	20146-001			··BRACKET	1045 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	96	AN525-416R10		A	··SCREW	1045 / 0001	/	4
	99	MS21042-4		A	··NUT	1045 / 0001	/	4
	102	NAS1149F0463P		A	··WASHER	1045 / 0001	/	4
	105	50649-001			··BUSHING	0002 / 0001	/	2
-	108	10318-005			··END FITTING	0002	1218	2
					FOR SPARES USE P/N 10318-007			
-	111	10318-006			··END FITTING	1219	1588	2
					FOR SPARES USE P/N 10318-007			
	114	10318-007			··END FITTING	1589	2437	2
	117	17573-001			··END FITTING	2438	2577	2
	118	16985-001			··END FITTING	2578	3567	2
					FOR SPARES USE P/N 16985-002			
	119	16985-002			··END FITTING	3568 / 0001	3722 / 0066	2
	120	15231-001	%		··END FITTING	3723 / 0067	3914 / 0441	2
	121	29567-001			··END FITTING	3915 / 0442	/	2
	122	MS21044N4		A	··NUT	0002 / 0001		1
	123	NAS1149F0463P		A	··WASHER	0002 / 0001	/	1
	126	NAS1149F0432P		A	··WASHER	0002 / 0001		1
	129	AN4-16A		A	··BOLT	0002 / 0001	/	1
	132	12925-001			··SPACER	0002 / 0001	/	1
	135	11394-002			··THRUST COLLAR	0002	1588	2
					FOR SPARES USE P/N 11394-003			
	138	11394-003			··THRUST COLLAR	1589	2437	2
	141	18044-004	@		··THRUST COLLAR	2438 / 0001	3722 / 0066	2
					FOR SPARES USE P/N 26725-004			
-	142	18044-001	@		··THRUST COLLAR	2438 / 0001	3722 / 0066	2
					FOR SPARES USE P/N 26725-001			
-	143	18044-002	@		··THRUST COLLAR	2438 / 0001	3722 / 0066	2
					FOR SPARES USE P/N 26725-002			
-	144	18044-003	@		··THRUST COLLAR	2438 / 0001	3722 / 0066	2
					FOR SPARES USE P/N 26725-003			
-	145	18044-005	@		··THRUST COLLAR	2438 / 0001	3722 / 0066	2
					FOR SPARES USE P/N 26725-005			
-	146	18044-006	@		··THRUST COLLAR	2438 / 0001	3722 / 0066	2
					FOR SPARES USE P/N 26725-006			
-	147	18044-007	@		··THRUST COLLAR	2438 / 0001	3722 / 0066	2
					FOR SPARES USE P/N 26725-007			
-	148	18044-008	@		··THRUST COLLAR	2438 / 0001	3722 / 0066	2
					FOR SPARES USE P/N 26725-008			
-	149	29251-004	@		··THRUST COLLAR	3723 / 0067	3764 / 0148	2
					FOR SPARES USE P/N 26725-004			
-	150	29251-001	@		··THRUST COLLAR	3723 / 0067	3764 / 0148	2
					FOR SPARES USE P/N 26725-001			
-	151	29251-002	@		··THRUST COLLAR	3723 / 0067	3764 / 0148	2
					FOR SPARES USE P/N 26725-002			
-	152	29251-003	@		··THRUST COLLAR	3723 / 0067	3764 / 0148	2
					FOR SPARES USE P/N 26725-003			
-	153	29251-005	@		··THRUST COLLAR	3723 / 0067	3764 / 0148	2
					FOR SPARES USE P/N 26725-005			
-	154	29251-006	@		··THRUST COLLAR	3723 / 0067	3764 / 0148	2
					FOR SPARES USE P/N 26725-006			
-	155	29251-007	@		··THRUST COLLAR	3723 / 0067	3764 / 0148	2
					FOR SPARES USE P/N 26725-007			
-	156	29251-008	@		··THRUST COLLAR	3723 / 0067	3764 / 0148	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 26725-008			
-	157	26725-004	@		··THRUST COLLAR	3765 / 0149	/	2
-	158	26725-001	@		··THRUST COLLAR	3765 / 0149	/	2
-	159	26725-002	@		··THRUST COLLAR	3765 / 0149	/	2
-	160	26725-003	@		··THRUST COLLAR	3765 / 0149	/	2
-	161	26725-005	@		··THRUST COLLAR	3765 / 0149	/	2
-	162	26725-006	@		··THRUST COLLAR	3765 / 0149	/	2
-	163	26725-007	@		··THRUST COLLAR	3765 / 0149	/	2
-	164	26725-008	@		··THRUST COLLAR	3765 / 0149	/	2
	165	12061-001			··WELDMENT	0002 / 0001	3722 / 0066	1
	166	28986-001			··WELDMENT	3723 / 0067	3914 / 0441	1
	167	29394-001			··WELDMENT	3915 / 0442	/	1
	168	MS21044N4		A	··NUT	0002 / 0001	/	2
	169	NAS1149F0463P		A	··WASHER	0002 / 0001	/	2
	170	NAS1149F0432P		A	··WASHER	0002 / 0001	/	2
	171	AN4-16A		A	··BOLT	0002 / 0001	3722 / 0066	2
	172	AN4-17A		A	··BOLT	3723 / 0067	/	2
	174	12925-002			··SPACER	0002 / 0001	/	2
	177	10320-003			··TORQUE TUBE LH	0002	3567	1
					FOR SPARES USE P/N 10320-004			
	178	10320-004			··TORQUE TUBE LH	3568 / 0001	/	1
	180	10322-003			··TORQUE TUBE RH	0002	3567	1
					FOR SPARES USE P/N 10322-004			
	181	10322-004			··TORQUE TUBE RH	3568 / 0001	/	1
	183	10323-003			··BUSHING MOUNT	0002 / 0001	3722 / 0066	3
						3723 / 0067	/	2
	184	29035-001	$		··BUSHING MOUNT	3723 / 0067	/	1
	186	AN3-4A		A	··BOLT	0002 / 0001	3722 / 0066	9
	187	AN3-5A		A	··BOLT	3723 / 0067	/	9
	189	NAS1149F0332P		A	··WASHER	0002 / 0001	/	9
	192	11557-004		A	··BACKING PLATE	0002 / 0001	/	3
	195	50200-501			··BUSHING	0002 / 0001	/	3
-	198	NO PRT NUMBER			··FLAP INDICATOR AND SWITCH INSTALLATION	0002 / 0001	/	NP
-	201	11729-001			···FLAP INDICATOR AND SWITCH ASSEMBLY	0002	1662	1
-	204	16978-001			···FLAP INDICATOR AND SWITCH ASSEMBLY	1663	2437	1
					AFTER SB2X-34-18	0002	1662	
-	207	17714-001			···FLAP INDICATOR AND SWITCH ASSEMBLY	2438	2551	1
-	210	17714-002			···FLAP INDICATOR AND SWITCH ASSEMBLY	2552		1
-	213	50336-001			···SWITCH	0002	1662	1
	216	50336-002			···SWITCH	1663	2437	1
	219	50336-003			···SWITCH	2438	2551	1
	222	50336-005			···SWITCH W/O PERSPECTIVE AVIONICS	2552		1
	223	24642-001	&		···SWITCH W/ PERSPECTIVE AVIONICS	3026 / 0001	3747 / 0110	1
					FOR SPARES USE P/N 24642-003			
	224	24642-003	&		···SWITCH W/ PERSPECTIVE AVIONICS	3748 / 0111	3914 / 0441	1
	225	24642-004			···SWITCH W/ PERSPECTIVE AVIONICS	3915 / 0442	/	1
	226	MS24693-28B			···SCREW W/ PERSPECTIVE AVIONICS	3026 / 0001	/	6
-	227	PRT OF ITM 213		A	···NUT	0002	1662	1
-	228	PRT OF ITM 213		A	···WASHER	0002	1662	1
-	231	PRT OF ITM 213		A	···STOP WASHER	0002	1662	1
-	234	PRT OF ITM 216		A	···NUT	1663	2437	1
-	237	PRT OF ITM 216		A	···WASHER	1663	2437	1
-	240	PRT OF ITM 216		A	···STOP WASHER	1663	2437	1
-	243	PRT OF ITM 219			···NUT	2438	2551	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	246	PRT OF ITM 219			···WASHER	2438	2551	1
-	249	PRT OF ITM 219			···STOP WASHER	2438	2551	1
	252	PRT OF ITM 222			···NUT	2552		1
	255	PRT OF ITM 222			···WASHER	2552		1
	258	PRT OF ITM 222			···STOP WASHER	2552		1
	261	50323-001			···LED, GREEN	0002		1
	264	50322-001			···LED, YELLOW	0002		2
-	267	PRT OF ITM 201		A	···FINISH NUT	0002	1662	3
-	270	PRT OF ITM 204		A	···FINISH NUT	1663	2437	3
-	273	PRT OF ITM 207			···FINISH NUT	2438	2551	3
	276	PRT OF ITM 210			···FINISH NUT	2552		3
	279	50029-001			··FLAP SWITCH HANDLE	0002		1
	282	PRT OF ITM 279		A	··SET SCREW	0002		2
-	285	50158-009			··CONNECTOR ASSEMBLY	0002	1662	1
	288	50158-012			··CONNECTOR ASSEMBLY	1663		1
					AFTER SB2X-34-18	0002	1662	
	294	MS21919WDG4		A	··CLAMP	0002	2437	1
	297	51734-002		A	··CLAMP	2438		AR
	300	50239-010		A	··CABLE TIE	2438		AR
	303	AN3-4A		A	··BOLT	0002		1
	306	NAS1149F0332P		A	··WASHER	0002		1
-	309	50158-009			··CONNECTOR BODY	0002	1662	1
-	312	50158-012			··CONNECTOR BODY	1663	2437	1
-	315	50158-015			··CONNECTOR BODY	2438		1
-	318	50157-001			··PIN	0002	1662	8
-	321	51771-001			··PIN	2438		14
	363	12017-002			··FLAPS CIRCUIT CARD ASSEMBLY	0002 / 0001	/	1
	366	MS21044N04		A	··NUT	0002 / 0001	/	4
	369	NAS1149FN432P		A	··WASHER	0002 / 0001	/	8
	372	NAS1515H04L		A	··WASHER	0002 / 0001	/	8
	375	MS35206-221		A	··SCREW	0002	0820	4
	378	MS35206-219		A	··SCREW	0821 / 0001	/	4
	381	12051-016		A	··SPACER	0002 / 0001	/	4
	384	70041-101			··WIRE HARNESS, EMI SUPPRESSION	0002	0227	1
					AFTER SB22-27-02			
-	387	50288-006	!		··RELAY, FLAP UP	0002	0359	1
					FOR SPARES USE P/N 50288-001			
-	388	50288-006	!		··RELAY, FLAP DOWN	0002	0359	1
					FOR SPARES USE P/N 50288-001			
	390	50288-001	!		··RELAY, FLAP UP	0360 / 0001	3881 / 0388	1
	391	50288-001	!		··RELAY, FLAP DOWN	0360 / 0001	3881 / 0388	1
	392	29409-001			··RELAY, FLAPS	3882 / 0389	4299 / 1233	1
					FOR SPARES USE P/N 29409-002			
	393	29409-002			··RELAY, FLAPS	4300 / 1233	/	1
	394	50289-001			··RELAY SOCKET	0002 / 0001	/	2
	396	MS21044N3		A	··NUT	0002 / 0001	/	2
	399	NAS1149F0332P		A	··WASHER	0002	0820	4
	500	NAS1149F0316P		A	··WASHER	0821 / 0001	/	4
	503	MS35207-264		A	··SCREW	0002	0820	2
	506	MS35207-263		A	··SCREW	0821 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-11 DET			RELAY MOUNTING PLATE INSTALLATION			
	401	RF 27-30-03 DET			PITCH RELAY ASSEMBLY			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
402	RF 27-10-04 DET					ROLL RELAY ASSEMBLY			
						SYMBOL NOTES:			
			**			SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
						1) SERIAL NUMBER 22-1602, 22-1644; REFER TO 22-1663 FOR PART IDENTIFICATION.			
						2) SERIAL NUMBER 22-2334, 22-2420; REFER TO SERIAL 22-2438 FOR PART IDENTIFICATION.			
						3) SERIAL NUMBER 22-2610, 22-2618; REFER TO 22-2620 FOR PART IDENTIFICATION.			
						4) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 FOR PART IDENTIFICATION.			
						5) SERIAL NUMBER 22-3712 THRU 22-3720; REFER TO 22-3723 FOR PART IDENTIFICATION.			
						6) SERIAL NUMBER 22T-0060, 22T-0063; REFER TO 22T-0067 FOR PART IDENTIFICATION.			
			@			MAY USE ANY COMBINATION TO MEET TORQUE TUBE CLEARANCE REQUIREMENTS.			
			$			INSTALLED AT INBOARD LOCATION ONLY.			
			&			INSTALLED ON AIRCRAFT W/O OXYGEN SYSTEM.			
			%			OMIT SPACER NAS43HT4-6 (IF INSTALLED AT ACTUATION FITTING) WHEN REPLACING END FITTING (REFER TO 57-50-01)			
			!			FAILURE OF EITHER RELAY IS CAUSE FOR REPLACING BOTH RELAYS.			

EFFECTIVITY:
All

CHAPTER 28

FUEL

CHAPTER 28 - FUEL SYSTEM
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
28-LOEP	1	04 SEP 2018
28-LOEP	2	04 SEP 2018
28-TOC	1	04 SEP 2018
28-TOC	2	04 SEP 2018
28-10-01	1	04 SEP 2018
28-10-01	2	04 SEP 2018
28-10-01	3	15 DEC 2014
28-10-01	4	15 DEC 2014
28-10-01	5	04 SEP 2018
28-10-01	6	04 SEP 2018
28-10-01	7	04 SEP 2018
28-10-01	8	04 SEP 2018
28-20-01	1	15 DEC 2014
28-20-01	2	15 DEC 2014
28-20-01	3	15 DEC 2014
28-20-01	4	15 DEC 2014
28-20-01	5	15 DEC 2014
28-20-01	6	15 DEC 2014
28-20-02	1	15 DEC 2014
28-20-02	2	15 DEC 2014
28-20-02	3	15 DEC 2014
28-20-02	4	15 DEC 2014
28-20-02	5	15 DEC 2014
28-20-02	6	15 DEC 2014
28-20-03	1	15 DEC 2014
28-20-03	2	15 DEC 2014
28-20-03	3	15 DEC 2014
28-20-03	4	15 DEC 2014
28-20-03	5	15 DEC 2014
28-20-03	6	15 DEC 2014
28-20-03	7	04 SEP 2018
28-20-03	8	04 SEP 2018
28-20-03	9	04 SEP 2018
28-20-03	10	04 SEP 2018
28-20-03	11	04 SEP 2018
28-20-03	12	04 SEP 2018
28-40-01	1	15 DEC 2014
28-40-01	2	15 DEC 2014
28-40-01	3	01 JAN 2016
28-40-01	4	01 JAN 2016

CHAPTER 28 - FUEL SYSTEM

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
28-40-01	5	01 JAN 2016
28-40-01	6	01 JAN 2016

CHAPTER 28 - FUEL SYSTEM

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Fuel System: Storage - Serials 22-0002 thru 22-2437 (1 of 4)	28-10-01
Fuel System: Storage - Serials 22-2438 & subs, 22T-0001 & subs (2 of 4)	28-10-01
Fuel System: Storage - Serials 22-0002 thru 22-2437 (3 of 4)	28-10-01
Fuel System: Storage - Serials 22-2438 & subs, 22T-0001 & subs (4 of 4)	28-10-01
Fuel System: Distribution, Wing - Serials 22-0002 thru 22-2437 (1 of 2)	28-20-01
Fuel System: Distribution, Wing - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	28-20-01
Fuel System: Distribution, Cabin - Serials 22-0002 thru 22-0599 (1 of 2)	28-20-02
Fuel System: Distribution, Cabin - Serials 22-0600 & subs, 22T-0001 & subs (2 of 2)	28-20-02
Fuel System: Distribution, Firewall - Serials 22-0002 - 22-2709, 22-3421 & subs w/o Persp (1 of 6)	28-20-03
Fuel System: Distribution, Firewall - Serials 22-2710 thru 22-3420 w/o Perspective (2 of 6)	28-20-03
Fuel System: Distribution, Firewall - Serials 22-3026 thru 22-3420 w/ Perspective (3 of 6)	28-20-03
Fuel System: Distribution, Firewall - Serials 22-3421 & subs w/ Persp, 22T-0001 & subs (4 of 6)	28-20-03
Fuel System: Distribution, Firewall - Serials w/o Perspective (5 of 6)	28-20-03
Fuel System: Distribution, Firewall - Serials w/ Perspective (6 of 6)	28-20-03
Fuel System: Indicating - Serials 22-0002 thru 22-2437 (1 of 3)	28-40-01
Fuel System: Indicating - Serials 22-2438 thru 22-3848, 22T-0001 thru 22T-0318 (2 of 3)	28-40-01
Fuel System: Indicating - Serials 22-3849 & subs, 22T-0319 & subs (3 of 3)	28-40-01

Intentionally Left Blank

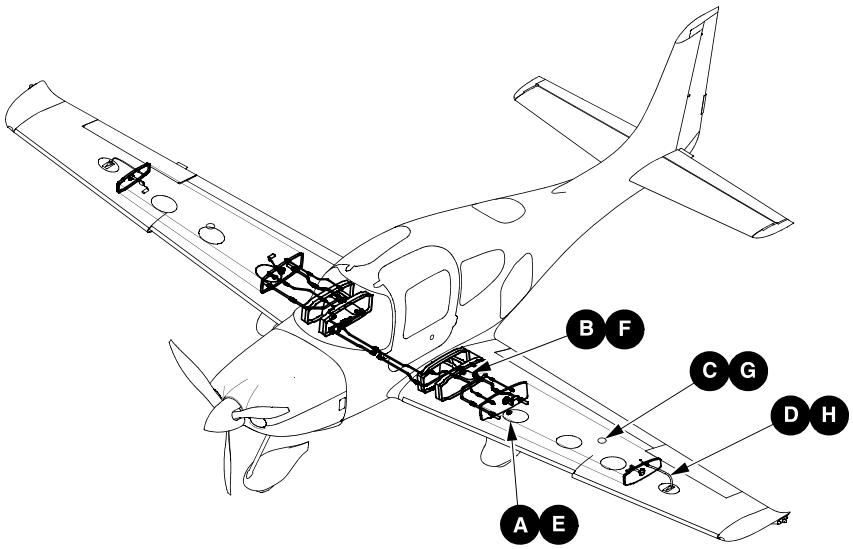

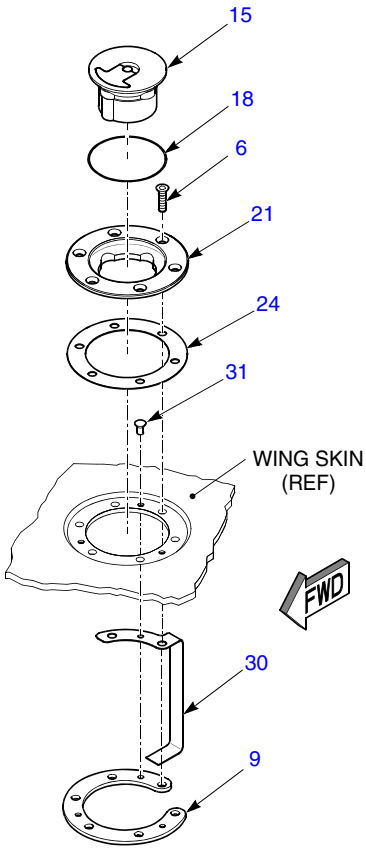

DETAIL C

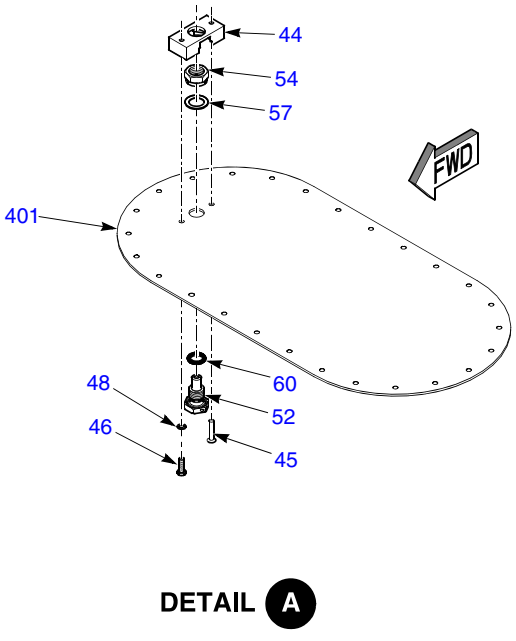

DETAIL A

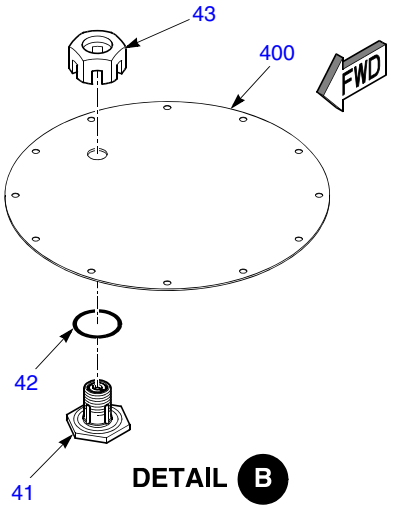

DETAIL B

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC28_1169E

Figure-01
Fuel System: Storage - Serials 22-0002 thru 22-2437 (1 of 4)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

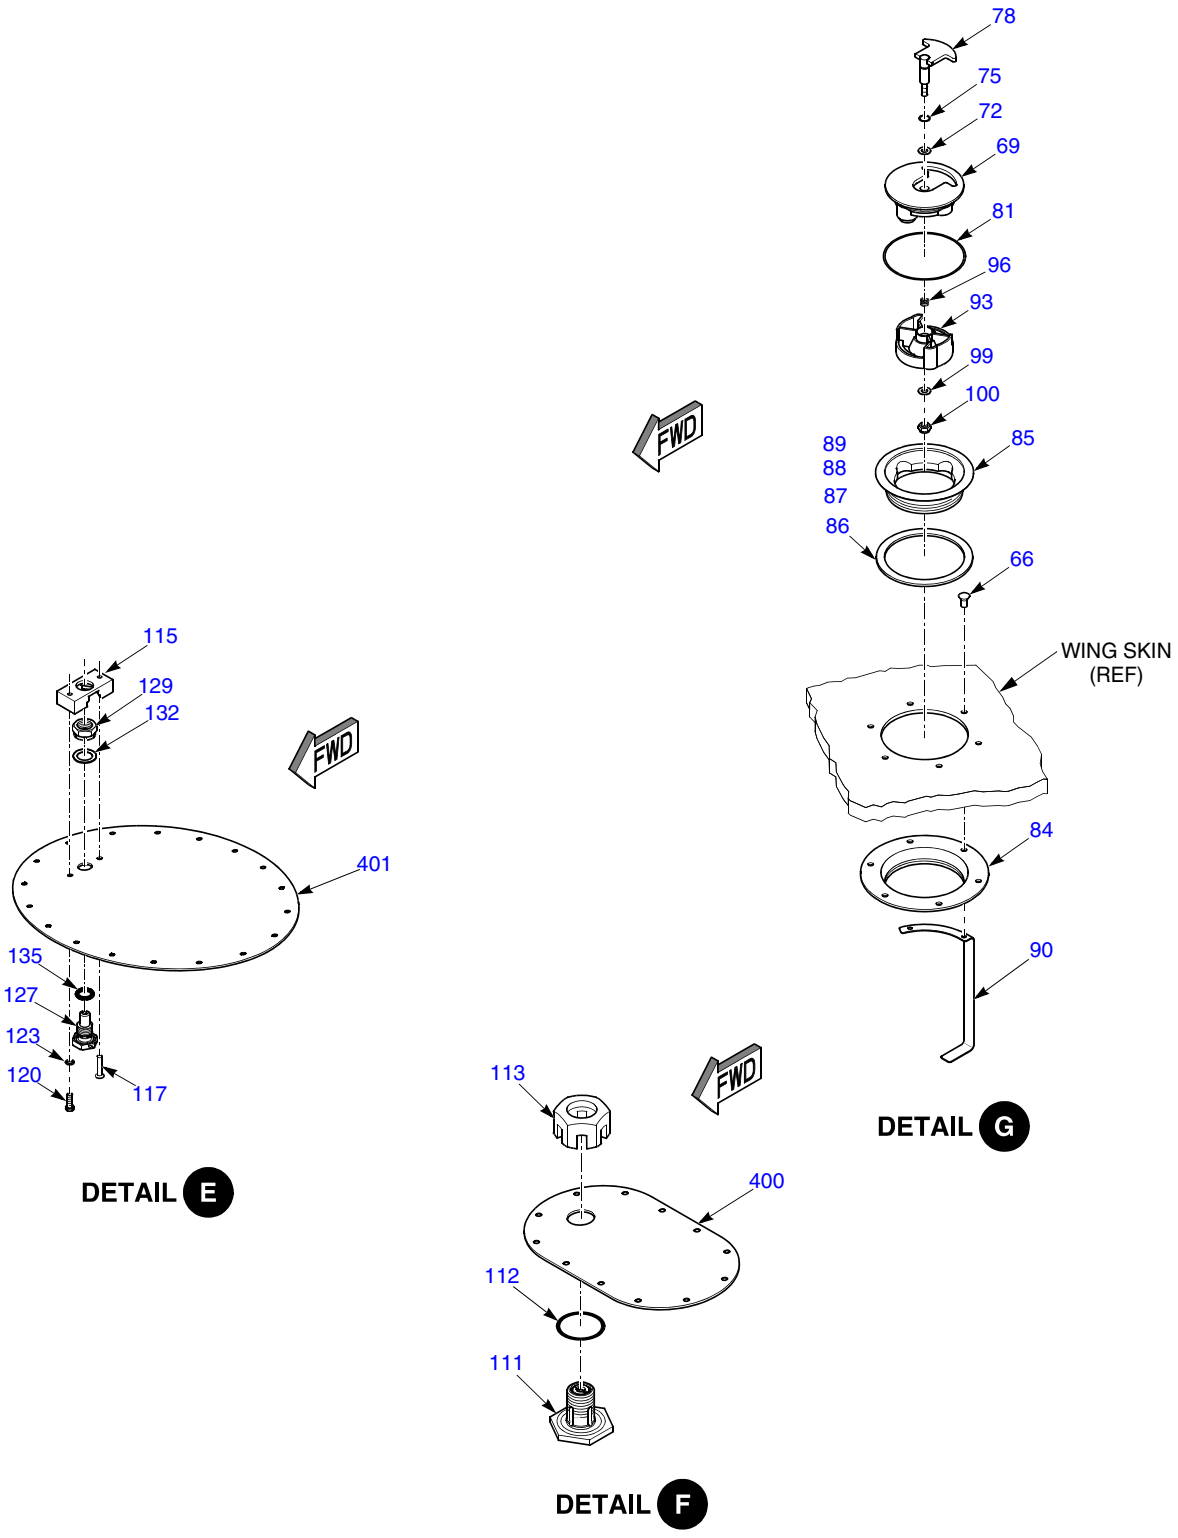

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs.

SR22_PC28_1614A

Figure-01

Fuel System: Storage - Serials 22-2438 & subs, 22T-0001 & subs (2 of 4)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

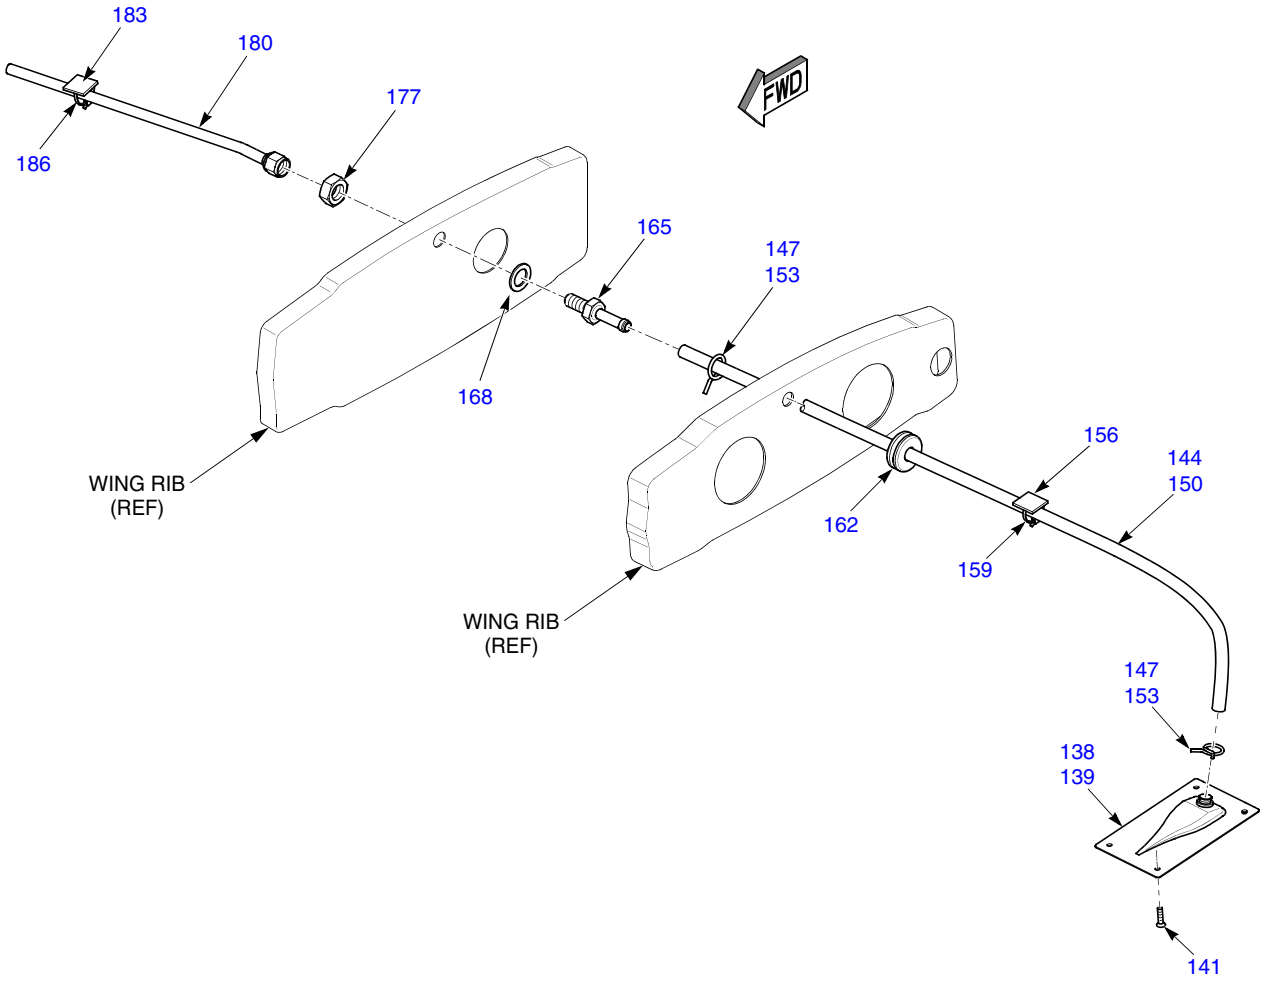

DETAIL D

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC28_1170

Figure-01

Fuel System: Storage - Serials 22-0002 thru 22-2437 (3 of 4)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

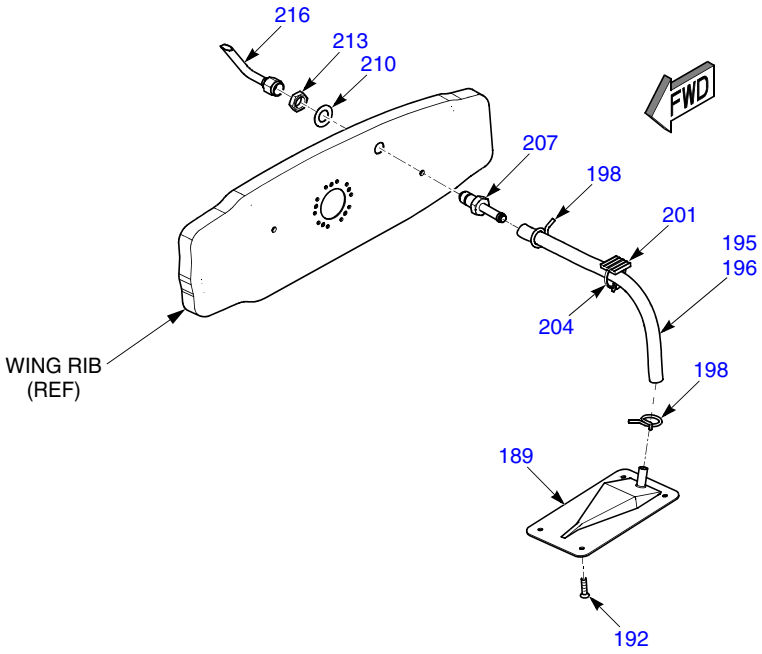

DETAIL H

Serials 22-2334, 22-2420, 22-2438 & subs,
22T-0001 & subs.

SR22_PC28_1615

Figure-01

Fuel System: Storage - Serials 22-2438 & subs, 22T-0001 & subs (4 of 4)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FUEL SYSTEM - STORAGE	0002 / 0001	/	NP
-	3	10052-001			·FUEL CAP ASSY	0002	2437	1
	6	2102		A	·SCREWS	0002	2437	1
	9	50526-001		A	·NUT RING	0002	2437	1
-	12	50525-105			··KEY	0002	2437	1
	15	50525-101			··CAP	0002	2437	1
	18	00-225-FPM75			··O-RING, VITON 45MM X 3.5MM	0002	2437	1
	21	50525-103			··CAP HOUSING	0002	2437	1
	24	50525-104			··RING GASKET	0002	2437	1
-	27	10055-001			·TAB, FUEL LEVEL FILLER CAP	0002	0425	1
	30	10055-002			·TAB, FUEL LEVEL FILLER CAP	0426	2437	1
	31	NAS9303B4		A	·RIVET	0002	2437	6
-	32	NO PRT NUMBER			·DRAIN VALVE ASSEMBLY	0002	2437	NP
					FOR SPARES USE P/N 26756-001			
-	33	14354-001	^		··DRAIN VALVE	0002	2437	1
-	34	M25988-1-021	^	A	···O-RING	0002	2437	1
-	35	14354-101	^	A	··NUT	0002	2437	1
-	36	NO PRT NUMBER			·DRAIN VALVE ASSEMBLY	0002	2437	1
					FOR SPARES USE P/N 26756-001			
-	37	26721-001	^		··DRAIN VALVE	0002	2437	1
-	38	MS29513-021	^		···O-RING	0002	2437	1
-	39	26722-001	^		··NUT	0002	2437	1
-	40	26756-001			·DRAIN VALVE ASSEMBLY	0002	2437	1
	41	26756-103			··DRAIN VALVE	0002	2437	1
	42	26756-102		A	··O-RING	0002	2437	1
	43	26756-101		A	··NUT	0002	2437	1
	44	12566-001			·DRAIN VALVE RETAINER	0002	2437	1
	45	MS20426AD5		A	·RIVET	0002	2437	1
	46	AN503-8-8		A	·SCREW	0002	2437	1
	48	NAS1149FN832P		A	·WASHER	0002	2437	1
-	51	50141-001			·DRAIN VALVE	0002	2437	1
					FOR SPARES USE P/N 25038-001			
	52	25038-001			·DRAIN VALVE	0002	2437	1
	54	AN320-8		A	·NUT	0002	2437	1
	57	NAS1149F0863P		A	·WASHER	0002	2437	1
	60	MS29513-015		A	·O-RING	0002	2437	1
-	63	18051-002			·FUEL CAP ASSY	2438 / 0001	/	NP
	66	MS20426AD4		A	·RIVET	2438 / 0001	/	6
					ALTERNATE FOR P/N NAS9302B4			
-	67	NAS9302B4		A	·RIVET	2438 / 0001	/	6
					ALTERNATE FOR P/N MS20426AD4			
	69	PRT OF ITM 63			··CAP	2438 / 0001	/	1
	72	PRT OF ITM 63		A	·WASHER	2438 / 0001	/	1
	75	PRT OF ITM 63			··O-RING	2438 / 0001	/	1
	78	PRT OF ITM 63			·FUEL CAP STEM	2438 / 0001	/	1
	81	PRT OF ITM 63			··O-RING	2438 / 0001	/	1
	84	18051-203		A	·NUT RING	2438 / 0001	/	1
	85	18051-201			·THREADED NECK	2438 / 0001	/	1
	86	18588-002	#		·GASKET (0.045 THICK)	2438 / 0001	/	1
	87	18588-003	#		·GASKET (0.062 THICK)	2438 0001	/	1
	88	18588-004	#		·GASKET (0.093 THICK)	2438 0001	/	1
	89	18588-005	#		·GASKET (0.125 THICK)	2438 0001	/	1
	90	18346-002			·TAB, FUEL LEVEL FILLER CAP	2438 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	93	PRT OF ITM 63			·LOCKING CENTER	2438 / 0001	/	1
	96	PRT OF ITM 63			·SPRING	2438 / 0001	/	1
	99	PRT OF ITM 63		A	·WASHER	2438 / 0001	/	1
	100	PRT OF ITM 63		A	·NUT	2438 / 0001	/	1
-	101	PRT OF ITM 63			··KEY	2438 / 0001	/	1
-	102	NO PRT NUMBER			·DRAIN VALVE ASSEMBLY	2438 / 0001	3772 / 0191	NP
					FOR SPARES USE P/N 26756-001			
-	103	14354-001	^		··DRAIN VALVE	2438 / 0001	3772 / 0191	1
-	104	M25988-1-021	^	A	··O-RING	2438 / 0001	3772 / 0191	1
-	105	14354-101	^	A	··NUT	2438 / 0001	3772 / 0191	1
-	106	NO PRT NUMBER			·DRAIN VALVE ASSEMBLY	3773 / 0192	3914 / 0447	NP
					FOR SPARES USE P/N 26756-001			
-	107	26721-001	^		··DRAIN VALVE	3773 / 0192	3914 / 0447	1
-	108	MS29513-021	^	A	···O-RING	3773 / 0192	3914 / 0447	1
-	109	26722-001	^	A	··NUT	3773 / 0192	3914 / 0447	1
-	110	26756-001			·DRAIN VALVE ASSEMBLY	3915 / 0448	/	1
	111	26756-103			··DRAIN VALVE	3915 / 0448	/	1
	112	26756-102		A	··O-RING	3915 / 0448	/	1
	113	26756-101		A	··NUT	3915 / 0448	/	1
	115	12566-001			·DRAIN VALVE RETAINER	2438 / 0001	/	1
	117	MS20426AD5		A	·RIVET	2438 / 0001	/	1
	120	AN503-8-8		A	·SCREW	2438 / 0001	/	1
	123	NAS1149DN832J		A	·WASHER	2438 / 0001	/	1
-	126	50141-001			·DRAIN VALVE	2438 / 0001	3770 / 0172	1
					FOR SPARES USE P/N 25038-001			
	127	25038-001			·DRAIN VALVE	3771 / 0173	/	1
	129	AN320-8		A	·NUT	2438 / 0001	/	1
	132	NAS1149D0816K		A	·WASHER	2438 / 0001	/	1
	135	MS29513-015N		A	·O-RING	2438 / 0001	/	1
	138	13398-001			·NACA VENT ASSEMBLY	0002	0447	1
	139	15306-001			·NACA VENT ASSEMBLY	0448	2437	1
	141	NAS1097AD4		A	·RIVET	0002	2437	4
	144	13407-101			·FUEL VENT LINE	0002	1818	1
					FOR SPARES USE P/N 13407-104			
	147	50566-050		A	·CLAMP	0002	1818	2
					FOR SPARES USE P/N 50566-050			
	150	13407-104	@		·FUEL VENT LINE	1819	2437	1
	153	50566-063	@	A	·CLAMP	1819	2437	2
	156	50132-001		A	·TIE DOWN	0002	2437	5
	159	MS3367-1-9		A	·STRAP	0002	2437	5
	162	MS35489-150			·GROMMET	0002	2437	1
	165	AN807-6D			·ADAPTER	0002	2437	1
	168	NAS1149D0932K		A	·WASHER	0002	2437	1
-	171	MS29512-06		A	·O-RING	0002	0059	1
-	174	AN6289D6		A	·BULKHEAD NUT	0002	0059	1
	177	AN924-3D		A	·BULKHEAD NUT	0060	2437	1
	180	11509-001			·VENT TUBE	0002	2437	1
	183	50132-001		A	·TIE DOWN	0002	2437	1
	186	MS3367-1-9		A	·STRAP	0002	2437	1
	189	15306-001			·NACA VENT ASSEMBLY	2438 / 0001	/	1
	192	NAS1097AD4		A	·RIVET	2438 / 0001	/	4
	195	18170-101			·FUEL VENT LINE	2438	3668	1
	196	26612-101			·FUEL VENT LINE	3669 / 0001	/	1
	198	50152-002		A	·CLAMP	2438 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	201	50132-001		A	·TIE DOWN	2438 / 0001	/	1
	204	MS3367-1-9		A	·STRAP	2438 / 0001	/	1
	207	AN807-6D			·ADAPTER	2438 / 0001	/	1
	210	NAS1149D0932K		A	·WASHER	2438 / 0001	/	1
	213	AN924-6D		A	·BULKHEAD NUT	2438 / 0001	/	1
	216	17319-001			·FUEL VENT LINE	2438 / 0001	/	1
-	219	70208-003	!		5 YEAR KIT, FUEL SYSTEM DRAIN O-RINGS SR22	0002	2437	1
-	222	70208-004	%		5 YEAR KIT, FUEL SYSTEM DRAIN O-RINGS SR22	2438 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 57-30-01 DET			ACCESS PANEL, LW3			
	401	RF 57-30-01 DET			ACCESS PANEL, LW10			
					SYMBOL NOTES:			
			#		SELECT GASKET THICKNESS TO FILL GAP BETWEEN THREADED NECK AND WING SKIN.			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
			@		WHEN REPLACING FUEL VENT LINE OR FUEL VENT LINE CLAMP, BOTH P/N 13407-104 AND 50566-050 MUST BE REPLACED.			
			!		CONSUMES ITEMS 18, 34, 60.			
			%		CONSUMES ITEMS 109, 135.			
			^		WHEN SPARING FROM 14354-001 / 26721-001 TO 26756-001, ENTIRE DRAIN VALVE ASSEMBLY MUST BE REPLACED.			

Intentionally Left Blank

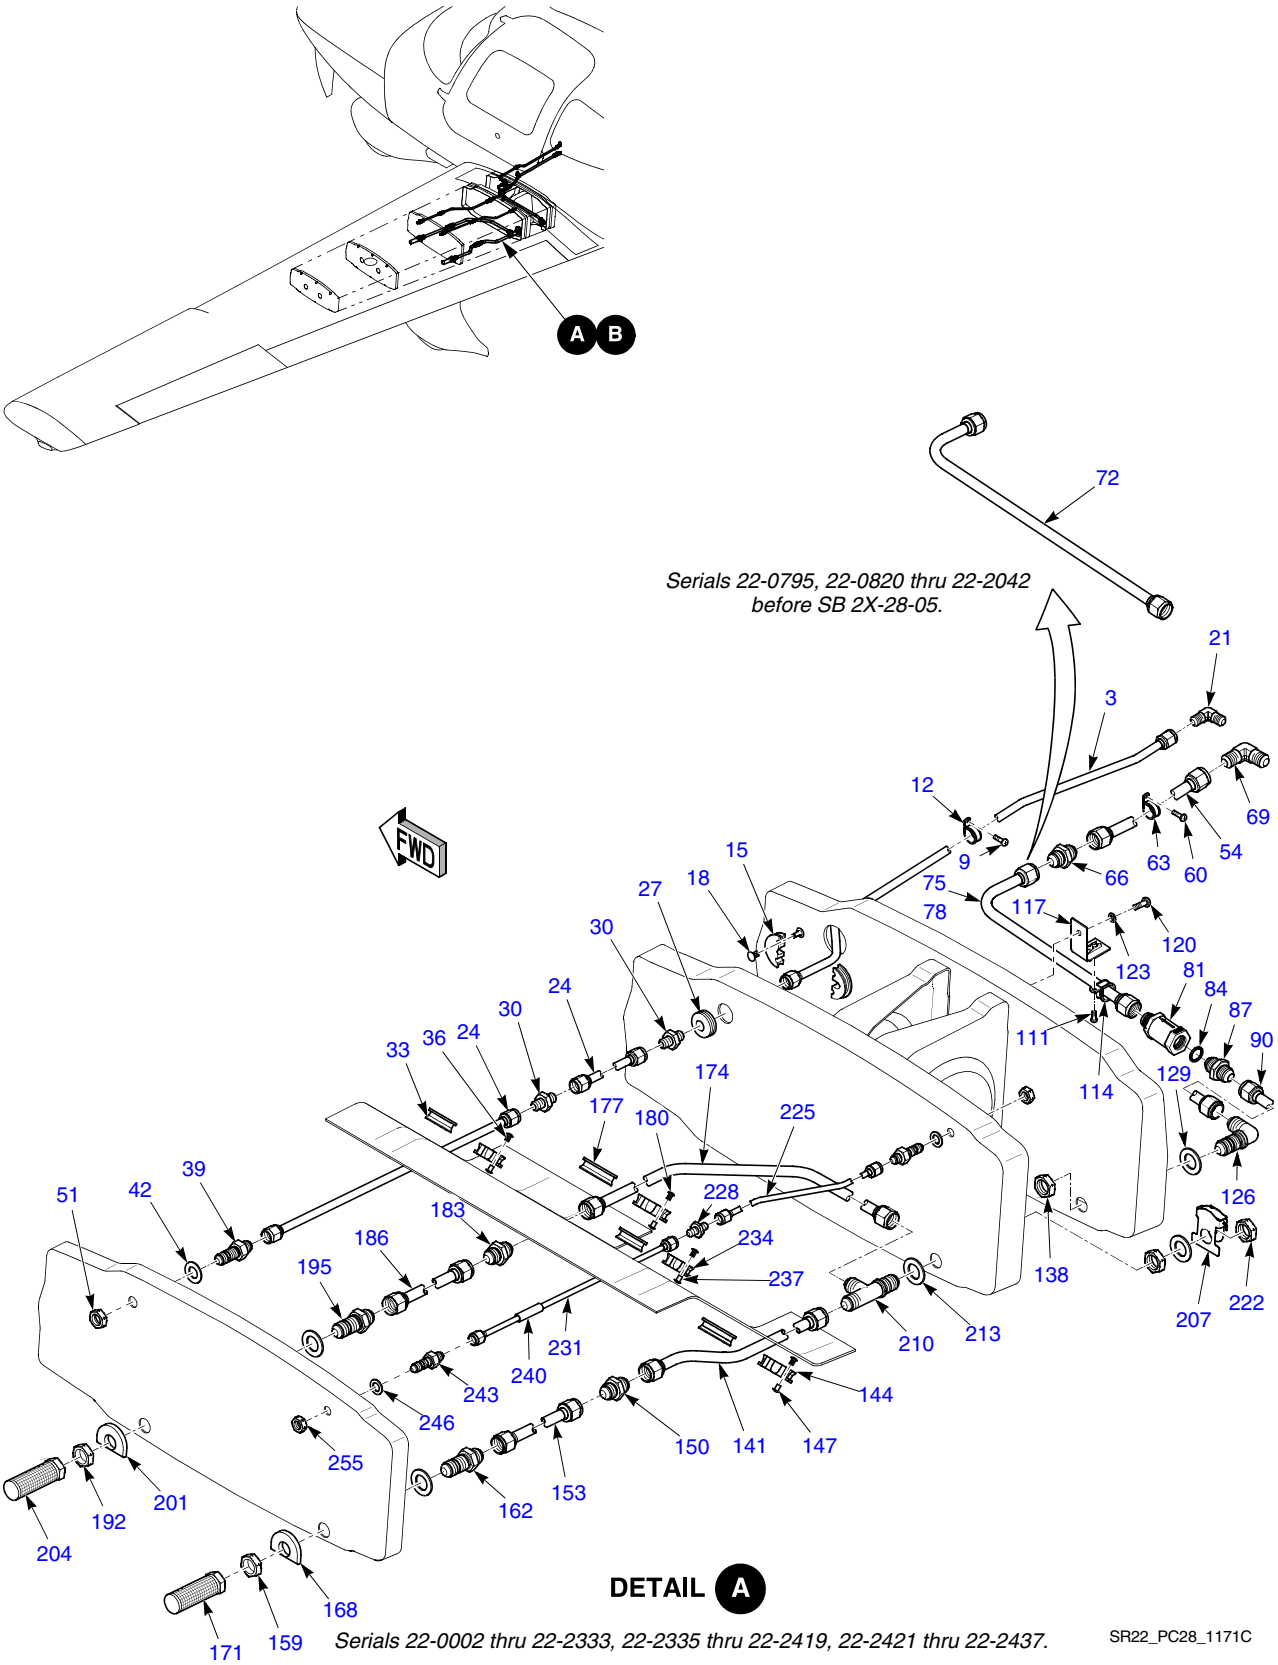

Figure-01

Fuel System: Distribution, Wing - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

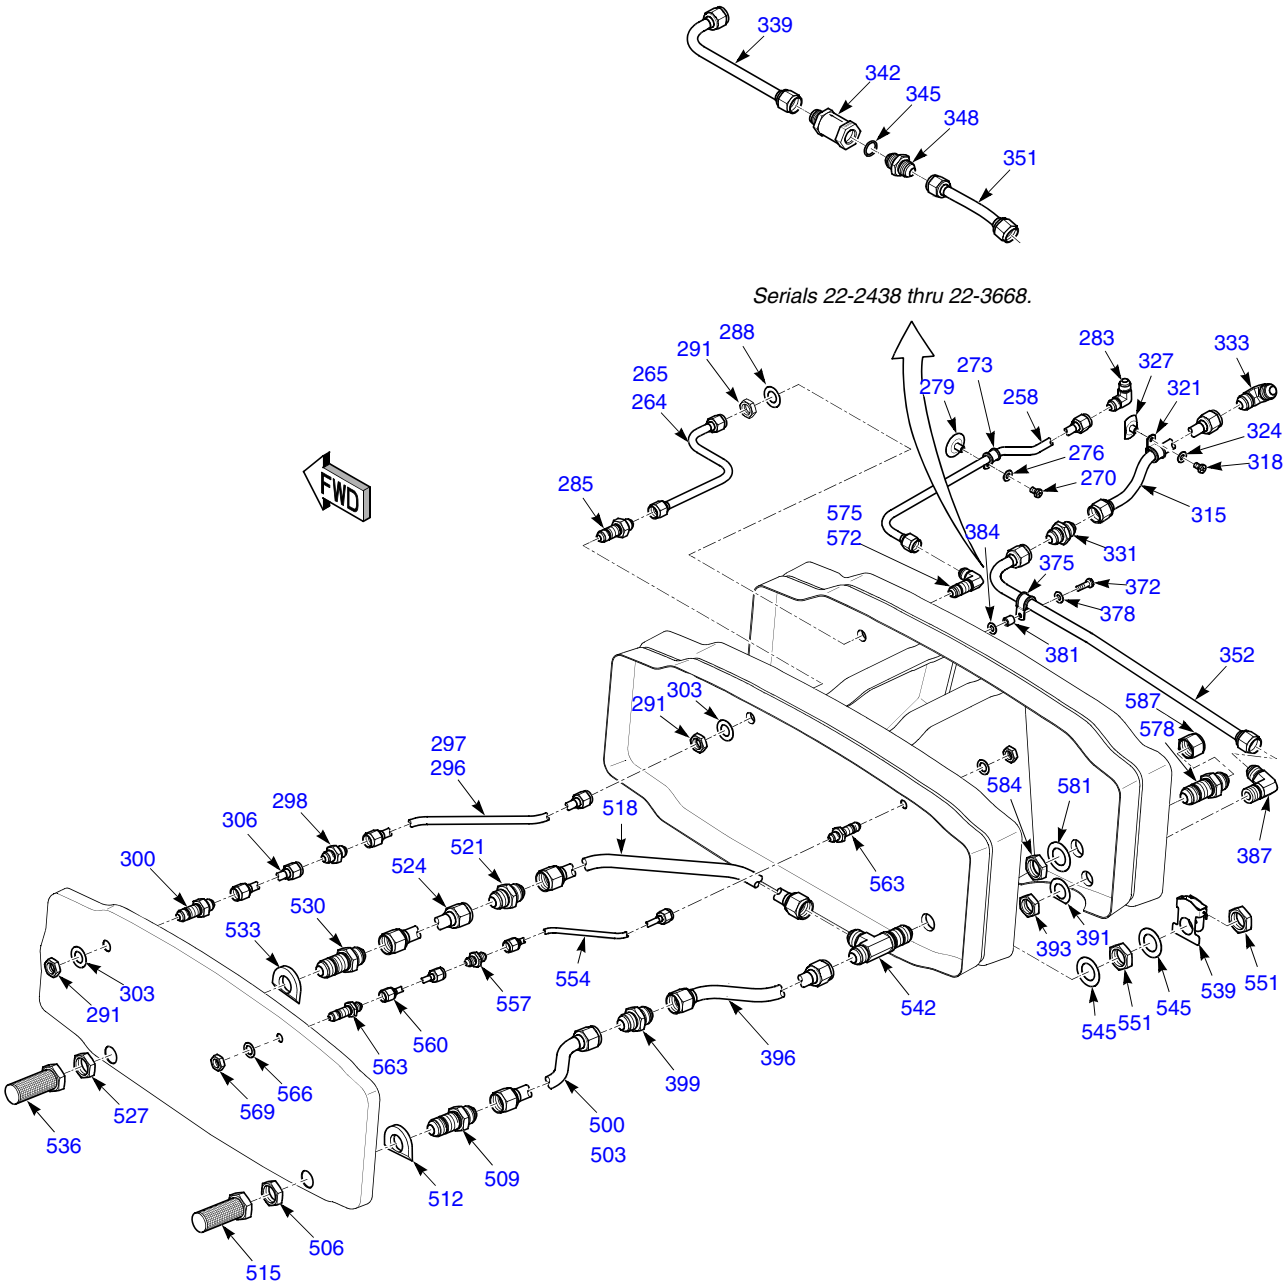

Figure-01

Fuel System: Distribution, Wing - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FUEL SYSTEM - DISTRIBUTION, WING	0002 / 0001	/	NP
	3	11611-001			·FUEL RETURN LINE, LH	0002	2437	1
-	6	11611-002			·FUEL RETURN LINE, RH	0002	2437	1
	9	MS27039-1-09		A	·SCREW	0002	2437	1
	12	MS21919WDG6		A	·CLAMP	0002	2437	1
	15	14462-001		A	·GROMMET, INBD,	0002	2437	2
	18	14457-001		A	·RIVET, RATCHET, NYLON	0002	2437	4
	21	AN821-6D			·90° ELBOW FITTING	0002	2437	1
	24	13414-001			·TUBE ASSEMBLY, VAPOR RETURN, WING	0002	2437	2
	27	MS35489-70		A	·GROMMET	0002	2437	1
	30	AN815-6D		A	·UNION	0002	2437	2
	33	14461-001		A	·GROMMET,	0002	2437	2
	36	14457-001		A	·RIVET, RATCHET, NYLON	0002	2437	4
	39	AN832-6D		A	·BULKHEAD FITTING	0002	2437	1
	42	NAS1149D0932K		A	·WASHER	0002	2437	1
-	45	MS29512-06		A	·O-RING	0002	0059	1
-	48	AN6289D6		A	·BULKHEAD NUT	0002	0059	1
	51	AN924-3D		A	·BULKHEAD NUT	0060	2437	1
	54	13417-001			·TUBE ASSEMBLY, SUPPLY, WS 0-27, LH	0002	2437	1
-	57	13417-002			·TUBE ASSEMBLY, SUPPLY, WS 0-27, RH	0002	2437	1
	60	MS27039-1-09		A	·SCREW	0002	2437	1
	63	MS21919WDG6		A	·CLAMP	0002	2437	1
	66	AN815-8D		A	·UNION	0002	2437	1
	69	AN821-8D		A	·90° ELBOW FITTING	0002	2437	1
	72	13411-001			·TUBE ASSEMBLY, SUPPLY, WS 27	0002	2042	2
					BEFORE SB2X-28-05			
	75	17981-001			·TUBE ASSEMBLY, LH, SUPPLY, WS 27	2043	2437	1
					·TUBE ASSEMBLY, LH, SUPPLY, WS 27	0002	2042	1
					AFTER SB2X-28-05			
	78	17986-001			··TUBE ASSEMBLY	2043	2437	1
	81	17987-001			··VALVE	2043	2437	1
	84	MS29512-08			··O-RING	2043	2437	1
	87	AN815-8D			··FITTING	2043	2437	1
	90	17985-001			··TUBE ASSEMBLY	2043	2437	1
-	93	17980-001			·TUBE ASSEMBLY, RH, SUPPLY, WS 27	2043	2437	1
					·TUBE ASSEMBLY, RH, SUPPLY, WS 27	0002	2042	1
					AFTER SB2X-28-05			
-	96	17986-001			··TUBE ASSEMBLY	2043	2437	1
-	99	17987-001			··VALVE	2043	2437	1
-	102	MS29512-08			··O-RING	2043	2437	1
-	105	AN815-8D			··FITTING	2043	2437	1
-	108	17985-001			··TUBE ASSEMBLY	2043	2437	1
	111	MS27039-1-09			·SCREW	0002	2437	1
	114	MS21919WDG8		A	·CLAMP	0002	2437	1
	117	13993-009		A	·CLIP, SYSTEMS, RESTRAINT, STANDARD	0002	2437	1
	120	MS27039-1-09		A	·SCREW	0002	2437	1
	123	NAS1149D0332J		A	·WASHER	0002	2437	1
	126	13601-001		A	·BULKHEAD FITTING, MODIFIED	0002	2437	1
	129	NAS1149D1232K		A	·WASHER	0002	2437	1
-	132	MS29512-08		A	·O-RING	0002	0059	1
-	135	AN6289D8		A	·BULKHEAD NUT	0002	0059	1
	138	AN924-8D		A	·BULKHEAD NUT	0060	2437	1
	141	13419-001			·TUBE ASSEMBLY, SUPPLY, AFT, WS 35-49	0002	2437	1
	144	14460-001		A	·GROMMET	0002	2437	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	147	14457-001		A	·RIVET, RATCHET, NYLON	0002	2437	4
	150	AN815-8D		A	·UNION	0002	2437	1
	153	13413-001			·TUBE ASSEMBLY, SUPPLY, WS 49-62	0002	2437	1
-	156	AN6289D8		A	·BULKHEAD NUT	0002	0059	1
	159	AN924-8D		A	·BULKHEAD NUT	0060	2437	1
	162	AN832-8D		A	·BULKHEAD FITTING	0002	2437	1
-	165	MS29512-08		A	·O-RING	0002	0059	1
	168	14513-001		A	·RADIUS FILLER, BULKHEAD FITTING	0060	2437	1
	171	50169-001			·FUEL STRAINER	0002	2437	1
	174	13418-001			·TUBE ASSEMBLY, SUPPLY, FWD, WS 35-49	0002	2437	1
	177	14460-001		A	·GROMMET,	0002	2437	2
	180	14457-001		A	·RIVET, RATCHET, NYLON	0002	2437	4
	183	AN815-8D		A	·UNION	0002	2437	1
	186	13413-001			·TUBE ASSEMBLY, SUPPLY, WS 49-62	0002	2437	1
-	189	AN6289D8		A	·BULKHEAD NUT	0002	0059	1
	192	AN924-8D		A	·BULKHEAD NUT	0060	2437	1
	195	AN832-8D		A	·BULKHEAD FITTING	0002	2437	1
-	198	MS29512-08		A	·O-RING	0002	0059	1
	201	14513-001		A	·RADIUS FILLER, BULKHEAD FITTING	0060	2437	1
	204	50169-001			·FUEL STRAINER	0002	2437	1
	207	13408-001			·FLAPPER ASSEMBLY	0002	2437	1
	210	MS24390D8		A	·BULKHEAD FITTING	0002	2437	1
	213	NAS1149D1232K		A	·WASHER	0002	2437	1
-	216	MS29512-08		A	·O-RING	0002	0059	1
-	219	AN6289D8		A	·BULKHEAD NUT	0002	0059	1
	222	AN924-8D		A	·BULKHEAD NUT	0060	2437	1
	225	13415-001			·TUBE ASSEMBLY, COLLECTOR VENT, WS 36-48	0002	2437	1
	228	AN815-4D		A	·UNION	0002	2437	1
	231	13416-001			·TUBE ASSEMBLY, COLLECTOR VENT, WS 48-62	0002	2437	1
	234	14461-001		A	·GROMMET,	0002	2437	2
	237	14457-001		A	·RIVET, RATCHET, NYLON	0002	2437	4
	240	13407-103		A	·SLEEVE, TUBE	0002	2437	1
	243	AN832-4D		A	·BULKHEAD FITTING	0002	2437	1
	246	NAS1149D0732K		A	·WASHER	0002	2437	1
-	249	MS29512-06		A	·O-RING	0002	0059	1
-	252	AN6289D6		A	·BULKHEAD NUT	0002	0059	1
	255	AN924-3D		A	·BULKHEAD NUT	0060	2437	1
	258	17309-001			·TUBE ASSEMBLY, FUEL RETURN, SPAR, LH	2438 / 0001	/	1
-	261	17310-001			·TUBE ASSEMBLY, FUEL RETURN, SPAR, RH	2438 / 0001	/	1
	264	17313-001			·TUBE ASSEMBLY, LH, FUEL RETURN, WS 27.25-37	2438 / 0001	3913 / 0447	1
					FOR SPARES USE P/N 17313-002			
	265	17313-002	@		·TUBE ASSEMBLY, LH, FUEL RETURN, WS 27.25-37	3914 / 0448	/	1
					AFTER SB2X-28-11	2438 / 0001	3913 / 0447	
-	267	17313-001			·TUBE ASSEMBLY, RH, FUEL RETURN, WS 27.25-37	2438 / 0001	3913 / 0447	1
					FOR SPARES USE P/N 17313-002			
-	268	17313-002	@		·TUBE ASSEMBLY, RH, FUEL RETURN, WS 27.25-37	3914 / 0448	/	1
					AFTER SB2X-28-11	2438 / 0001	3913 / 0447	
	270	NAS1801-3-4		A	·SCREW	2438 / 0001	/	1
	273	MS21919WDG6		A	·CLAMP	2438 / 0001	/	1
	276	NAS1149D0332K		A	·WASHER	2438 / 0001	/	1
	279	51916-001		A	·CLICK BOND	2438 / 0001	/	1
					ALTERNATE FOR P/N 51828-001, 51540-008, 51828-002			
-	280	51828-001		A	·CLICK BOND	2438 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					ALTERNATE FOR P/N 51916-001, 51540-008, 51828-002			
-	281	51540-008		A	·CLICK BOND	2438 / 0001	/	1
					ALTERNATE FOR P/N 51916-001, 51828-001, 51828-002			
-	282	51828-002		A	·CLICK BOND	2438 / 0001	/	1
					ALTERNATE FOR P/N 51916-001, 51828-001, 51540-008			
	283	AN821-6D			·90° ELBOW FITTING	2438 / 0001	/	1
	285	AN832-6D		A	·BULKHEAD FITTING	2438 / 0001	/	1
	288	NAS1149D0916K		A	·WASHER	2438 / 0001	/	1
	291	AN924-6D		A	·BULKHEAD NUT	2438 / 0001	/	3
-	294	17314-001			·TUBE ASSEMBLY, FUEL RETURN, WS 37, LH	2438	2884	1
-	295	17315-001			·TUBE ASSEMBLY, FUEL RETURN, WS 37, RH	2438	2884	1
	296	17315-001			·TUBE ASSEMBLY, FUEL RETURN, WS 37	2885	3025	2
	297	17315-002			·TUBE ASSEMBLY, FUEL RETURN, WS 37	3026 / 0001	/	2
	298	AN815-6D		A	·UNION	2438 / 0001	/	2
	300	AN832-6D		A	·BULKHEAD FITTING	2438 / 0001	/	1
	303	NAS1149D0932K		A	·WASHER	2438 / 0001	/	2
	306	17316-001			·TUBE ASSEMBLY, FUEL RETURN, WS 61	2438 / 0001	/	1
-	309	17302-001			·TUBE ASSEMBLY, FUEL SUPPLY, SPAR, LH	2334	2334	1
-	312	18192-001			·TUBE ASSEMBLY, FUEL SUPPLY, SPAR, RH	2334	2334	1
	315	18192-001			·TUBE ASSEMBLY, FUEL SUPPLY, SPAR	2438 / 0001	/	2
	318	NAS1801-3-4		A	·SCREW	2438 / 0001	/	1
	321	MS21919WDG8		A	·CLAMP	2438 / 0001	/	1
	324	NAS1149D0332K		A	·WASHER	2438 / 0001	/	1
	327	51917-001		A	·CLICK BOND	2438 / 0001	/	1
					ALTERNATE FOR P/N 51827-001, 51540+006, 51827-002			
-	328	51827-001		A	·CLICK BOND	2438 / 0001	/	1
					ALTERNATE FOR P/N 51917-001, 51540+006, 51827-002			
-	329	51540+006		A	·CLICK BOND	2438 / 0001	/	1
					ALTERNATE FOR P/N 51917-001, 51827-001, 51827-002			
-	330	51827-002		A	·CLICK BOND	2438 / 0001	/	1
					ALTERNATE FOR P/N 51917-001, 51827-001, 51540+006			
	331	AN815-8D		A	·UNION	2438 / 0001	/	1
	333	AN821-8D		A	·90° ELBOW FITTING	2438 / 0001	/	1
-	336	18491-001			·TUBE ASSEMBLY, SUPPLY, WS 27, LH	2438	3668	1
	339	18172-001			··TUBE ASSEMBLY	2438	3668	1
	342	17987-001			··VALVE	2438	3668	1
	345	MS29512-08			··O-RING	2438	3668	1
	348	AN815-8D			··FITTING	2438	3668	1
	351	18488-001			··TUBE ASSEMBLY	2438	3668	1
	352	17304-002			·TUBE ASSEMBLY, SUPPLY, WS 27, LH	3669 / 0001	/	1
-	354	18494-001			·TUBE ASSEMBLY, SUPPLY, WS 27, RH	2438	3668	1
-	357	18172-001			··TUBE ASSEMBLY	2438	3668	1
-	360	17987-001			··VALVE	2438	3668	1
-	363	MS29512-08			··O-RING	2438	3668	1
-	366	AN815-8D			··FITTING	2438	3668	1
-	369	18488-001			··TUBE ASSEMBLY	2438	3668	1
-	370	18350-002			·TUBE ASSEMBLY, SUPPLY, WS 27, RH	3669 / 0001	/	1
	372	NAS1801-3-10			·SCREW	2555 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	375	MS21919WDG8		A	·CLAMP	2438 / 0001	/	1
	378	NAS1149D0332K		A	·WASHER	2438 / 0001	/	1
	381	NAS43DD3-20FC			·SPACER	2555 / 0001	/	1
	384	NAS1149D0363K			·WASHER	2555 / 0001	/	1
	387	13601-001		A	·BULKHEAD FITTING, MODIFIED	2438 / 0001	/	1
-	390	NAS1149D1232K		A	·WASHER	2438	2745	1
					FOR SPARES USE P/N 18914-001			
	391	18914-001		A	·WASHER	2746 / 0001	/	1
	393	AN924-8D		A	·BULKHEAD NUT	2438 / 0001	/	1
	396	17306-001			·TUBE ASSEMBLY, FUEL SUPPLY, WS 37, AFT	2438 / 0001	/	1
	399	AN815-10D		A	·UNION	2438 / 0001	/	1
	500	17320-001			·TUBE ASSEMBLY, FUEL SUPPLY, WS 61, AFT	2438	2465	1
	503	17320-002			·TUBE ASSEMBLY, FUEL SUPPLY, WS 61, AFT	2466 / 0001	/	1
	506	AN924-10D		A	·BULKHEAD NUT	2438 / 0001	/	1
	509	AN832-10D		A	·BULKHEAD FITTING	2438 / 0001	/	1
	512	17323-001		A	·RADIUS FILLER, BULKHEAD FITTING	2438 / 0001	/	1
	515	17332-001			·FUEL STRAINER	2438 / 0001	/	1
	518	17307-001			·TUBE ASSEMBLY, FUEL SUPPLY, WS 37, FWD	2438 / 0001	/	1
	521	AN815-10D		A	·UNION	2438 / 0001	/	1
	524	17308-001			·TUBE ASSEMBLY, FUEL SUPPLY, WS 61, FWD	2438 / 0001	/	1
	527	AN924-10D		A	·BULKHEAD NUT	2438 / 0001	/	1
	530	AN832-10D		A	·BULKHEAD FITTING	2438 / 0001	/	1
	533	17323-001		A	·RADIUS FILLER, BULKHEAD FITTING	2438 / 0001	/	1
	536	17332-001			·FUEL STRAINER	2438 / 0001	/	1
	539	17324-001			·FLAPPER ASSEMBLY	2438 / 0001	/	1
	542	AN804-10D		A	·BULKHEAD FITTING	2438 / 0001	/	1
	545	NAS1149D1432K		A	·WASHER	2438 / 0001	/	2
-	548	NAS1149D1416K	%	A	·WASHER	2438 / 0001	/	1
	551	AN924-10D		A	·BULKHEAD NUT	2438 / 0001	/	2
	554	17317-001			·TUBE ASSEMBLY, FUEL VENT, WS 37	2438 / 0001	/	1
	557	AN815-4D		A	·UNION	2438 / 0001	/	1
	560	17318-001			·TUBE ASSEMBLY, FUEL VENT, WS 61	2438 / 0001	/	1
	563	AN832-4D		A	·BULKHEAD FITTING	2438 / 0001	/	2
	566	NAS1149D0732K		A	·WASHER	2438 / 0001	/	2
	569	AN924-4D		A	·BULKHEAD NUT	2438 / 0001	/	2
	572	AN833-6D		A	·90° BULKHEAD FITTING	2438	2623	1
					FOR SPARES USE P/N 18733-001			
	575	18733-001		A	·90° BULKHEAD FITTING	2624 / 0001	/	1
	578	AN832-10D			·BULKHEAD FITTING	2555 / 0001	/	1
	581	NAS1149D1432K		A	·WASHER	2555 / 0001	/	1
	584	AN924-10D		A	·BULKHEAD NUT	2555 / 0001	/	1
	587	AN929-10		A	·CAP	2555 / 0001	/	1

SYMBOL NOTES:

**	SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:
	SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.
	SERIAL NUMBER 22T-0442; REFER TO 22T-0448 FOR PART IDENTIFICATION.
%	USE WASHER AS SHIM FOR FLAPPER VALVE TO MAINTAIN MAXIMUM GAP OF 0.020 INCH.
@	AFTER INSTALLATION, COMPLETELY COAT 17313-002 WITH SEALANT IN EACH ICE PROTECTION FLUID TANK.

EFFECTIVITY:
All

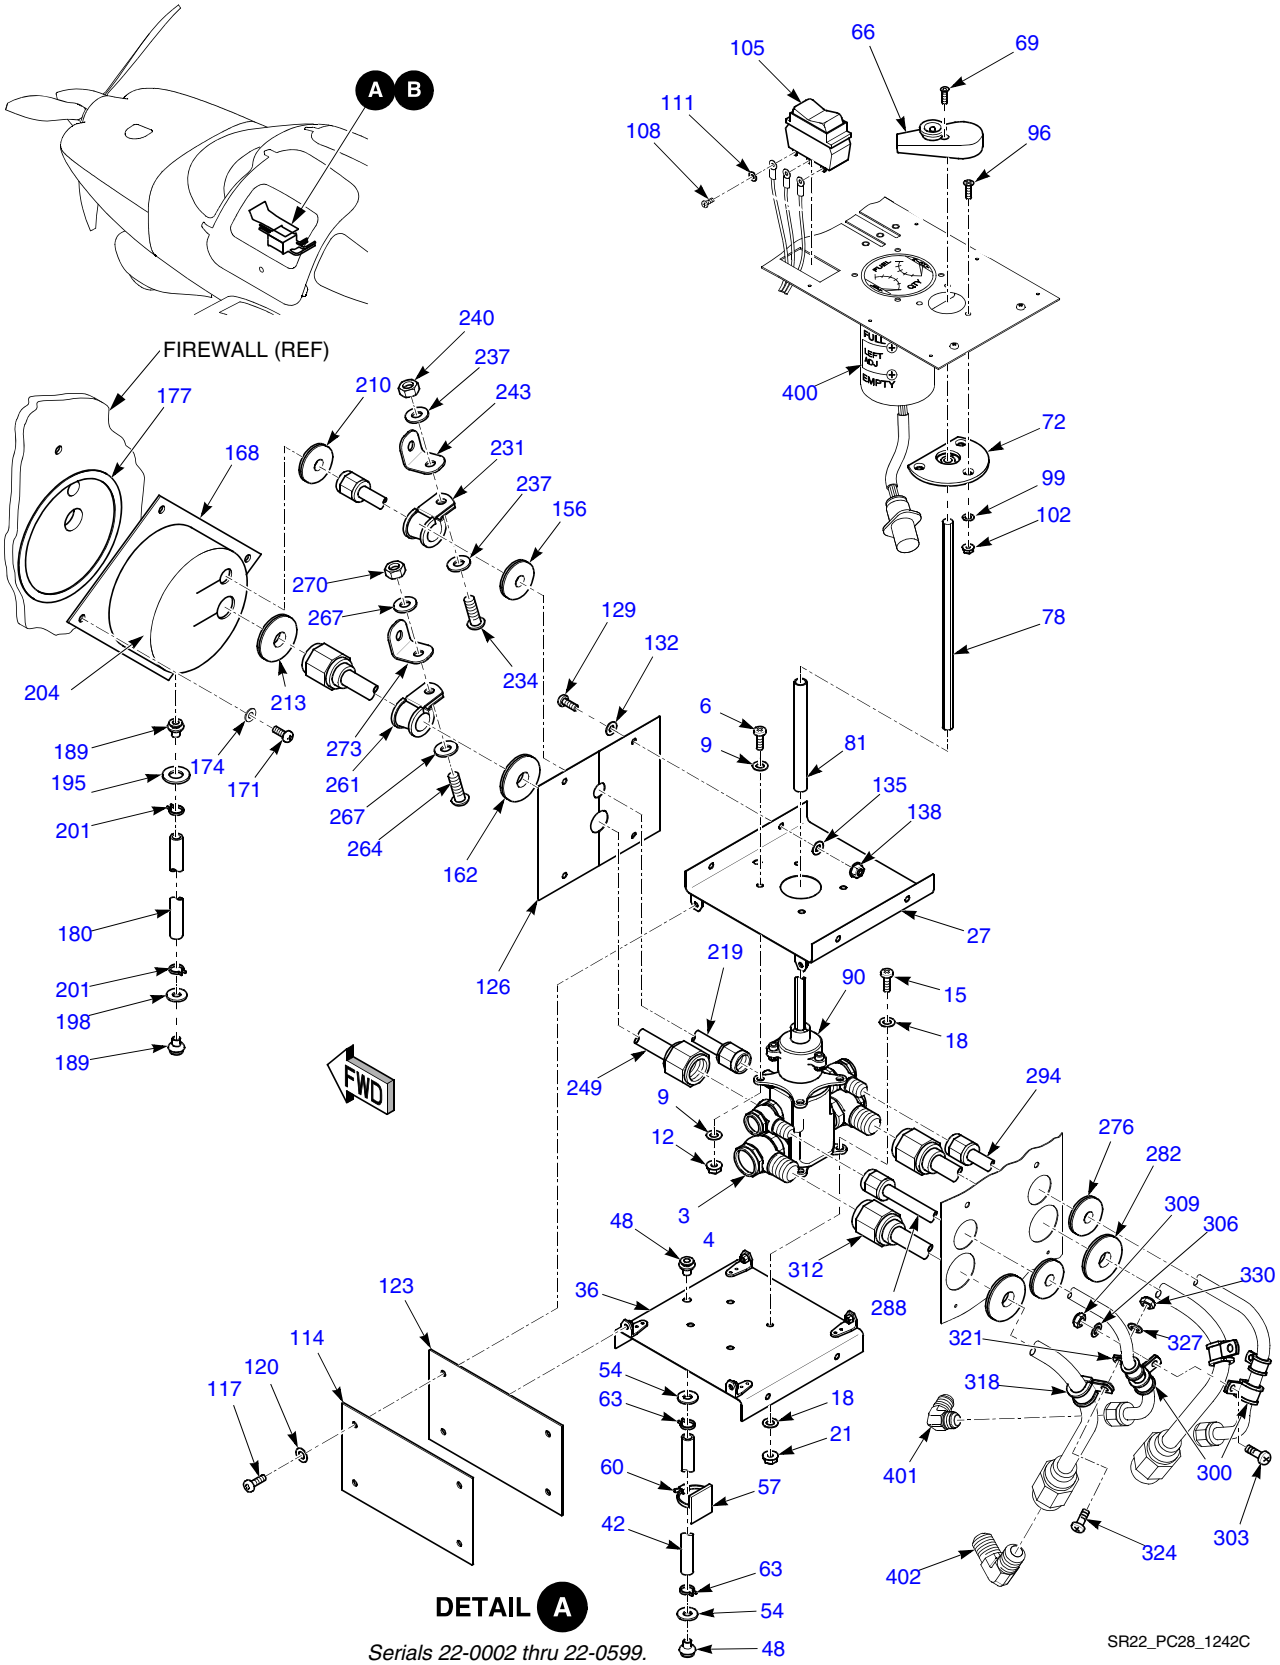

Serials 22-0002 thru 22-0599.

Figure-02

Fuel System: Distribution, Cabin - Serials 22-0002 thru 22-0599 (1 of 2)

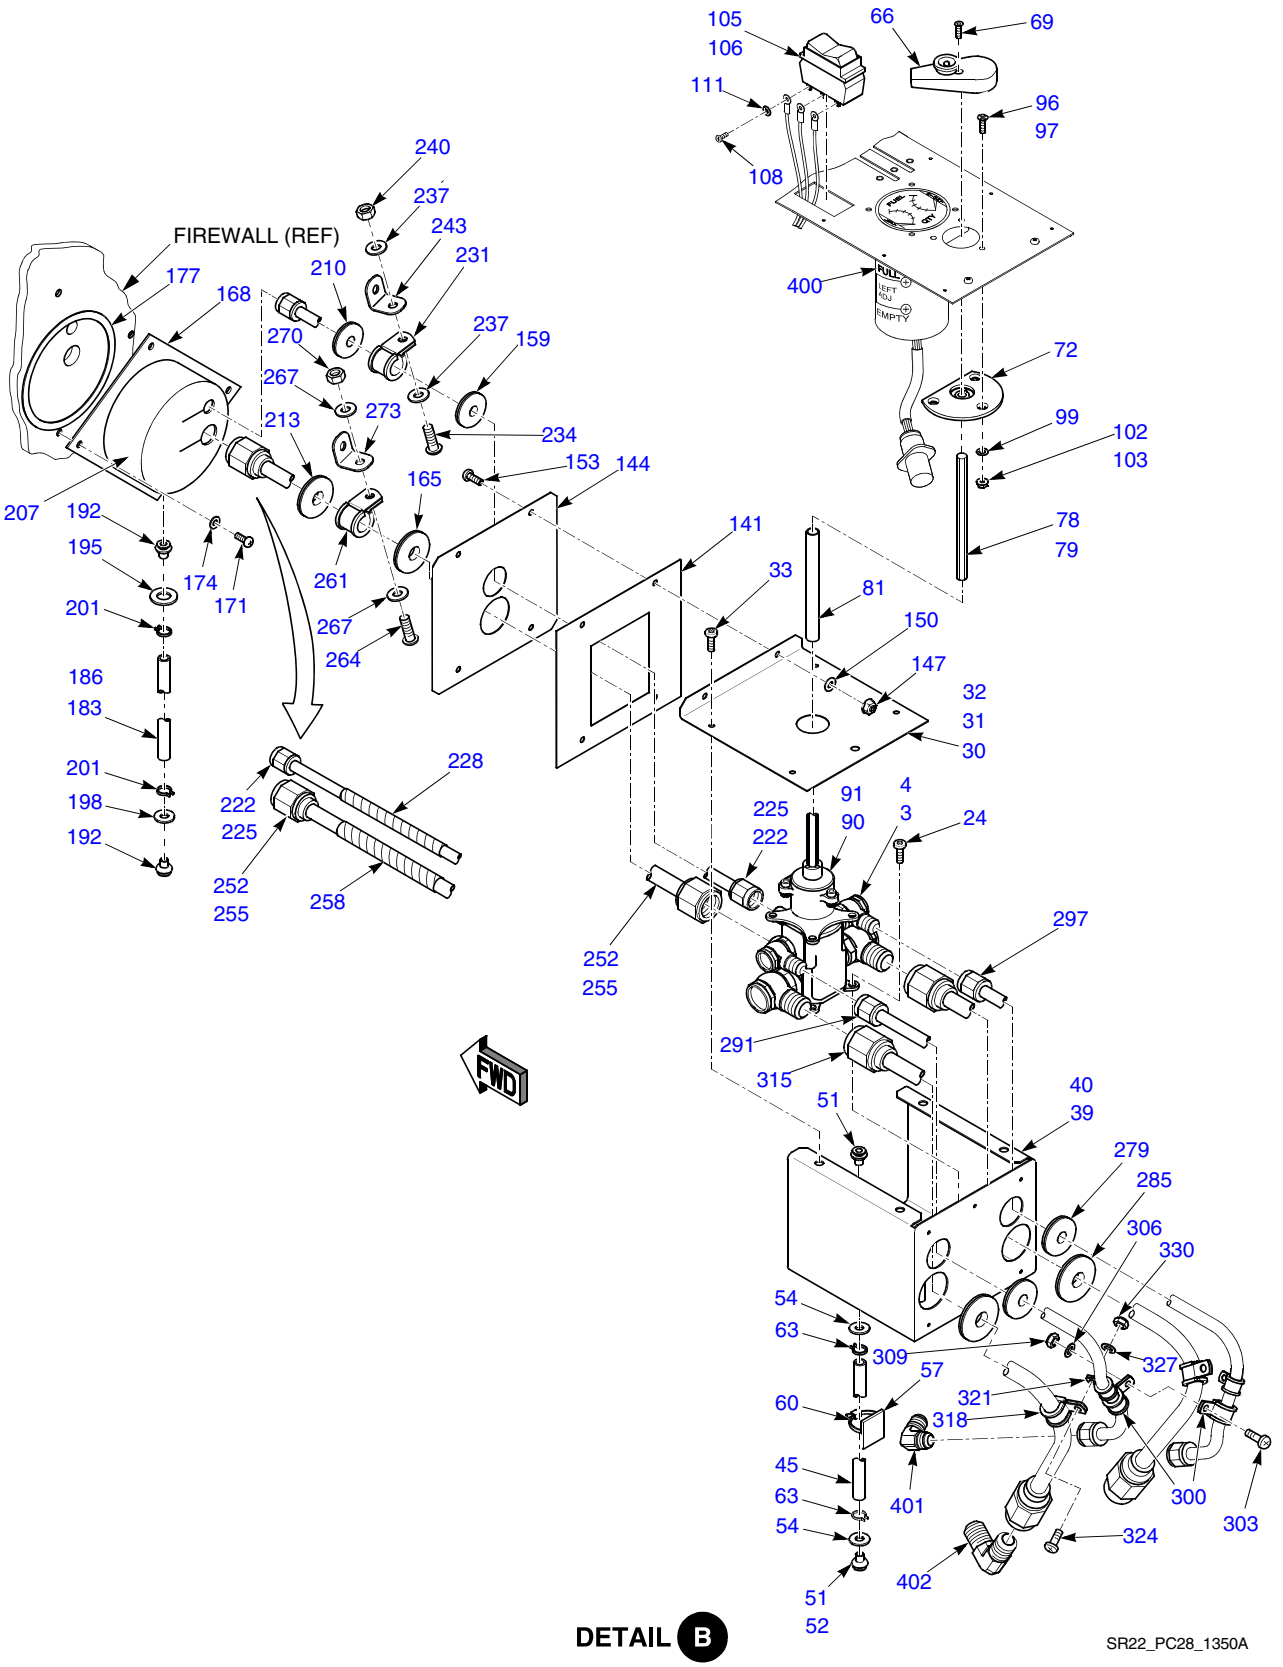

Figure-02

Fuel System: Distribution, Cabin - Serials 22-0600 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0600 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			FUEL SYSTEM INSTALLATION, CABIN	0002 / 0001	/	NP
-	3	11627-001			·SELECTOR VALVE	0002	2097	1
					FOR SPARES USE P/N 17921-001			
	4	17921-001			·SELECTOR VALVE	2098 / 0001	/	1
	6	MS27039-109		A	·SCREW	0002	0599	4
	9	NAS1149F0363P		A	·WASHER	0002	0599	8
	12	MS21044N3		A	·NUT	0002	0599	4
	15	MS27039-109		A	·SCREW	0002	0599	4
	18	NAS1149F0363P		A	·WASHER	0002	0599	8
	21	MS21044N3		A	·NUT	0002	0599	4
	24	MS27039-106		A	·SCREW	0600 / 0001	/	4
	27	11904-003			·SELECTOR VALVE ENCLOSURE, TOP, AFT CONSOLE	0002	0599	1
	30	15246-001			·SELECTOR VALVE ENCLOSURE, TOP, AFT CONSOLE	0600	0765	1
	31	15246-002			·SELECTOR VALVE ENCLOSURE, TOP, AFT CONSOLE	0766	3519	1
	32	15246-003			·SELECTOR VALVE ENCLOSURE, TOP, AFT CONSOLE	3520 / 0001	/	1
	33	MS35206-243		A	·SCREW	0600 / 0001	/	4
	36	11903-003			·SELECTOR VALVE SUPPORT, LOWER, AFT CONSOLE	0002	0599	1
	39	15245-001			·SELECTOR VALVE SUPPORT, LOWER, AFT CONSOLE	0600	0765	1
	40	15245-002			·SELECTOR VALVE SUPPORT, LOWER, AFT CONSOLE	0766 / 0001	/	1
	42	11563-102			·DRAIN TUBE, AFT	0002	0599	1
	45	15496-102			·DRAIN TUBE, AFT	0600 / 0001	/	1
	48	50748-001		A	·RIVNUT	0002	0599	2
	51	NAS1329A3E-130		A	·RIVNUT	0600 / 0001	/	1
	52	MS27130-A29K		A	·RIVNUT	0600 / 0001	/	1
					ALTERNATE FOR P/N NAS1329A3E-130			
-	53	NAS1329A3E-130		A	·RIVNUT	0600 / 0001	/	1
					ALTERNATE FOR P/N MS27130-A29K			
	54	NAS1149F0463P		A	·WASHER	0002 / 0001	/	2
	57	50132-001		A	·CABLE TIE ANCHOR	0002 / 0001	/	1
	60	50239-020		A	·CABLE TIE	0002 / 0001	/	1
	63	50566-003		A	·SPRING CLAMP	0002 / 0001	/	2
	66	PRT OF ITM 3&4			·SELECTOR	0002 / 0001	/	1
	69	PRT OF ITM 3&4		A	·SCREW	0002 / 0001	/	1
	72	PRT OF ITM 3&4			·UPPER DETENT	0002 / 0001	/	1
-	75	PRT OF ITM 3			·SHAFT	0002	0380	1
					BEFORE SB2X-28-02			
					FOR SPARES USE P/N 70066-101			
	78	70066-101			·SHAFT	0381	2097	1
					AFTER SB2X-28-02	0002	2097	
	79	PRT OF ITM 4			·SHAFT	2098 / 0001	/	1
	81	70097-101			·SLEEVE	0002 / 0001	/	1
					AFTER SB2X-28-03			
					ALTERNATE FOR P/N R7483-101			
-	84	R7483-101			·SLEEVE	0002 / 0001	/	1
					ALTERNATE FOR P/N 70097-101			
-	87	PRT OF ITM 3			·UPPER CAP ASSEMBLY	0002	0380	1
					BEFORE SB2X-28-02			
					FOR SPARES USE P/N 70066-102			
	90	70066-102			·UPPER CAP ASSEMBLY	0381	2097	1
					AFTER SB2X-28-02	0002	2097	
	91	PRT OF ITM 4			·UPPER CAP ASSEMBLY	2098 / 0001	/	1
-	93	MS2469351B		A	·SCREW	0002	0599	3
					ALTERNATE FOR P/N MS24693BB51			
	96	MS24693BB51		A	·SCREW	0002	0599	3

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						ALTERNATE FOR P/N MS2469351B			
	97	MS24693-49B		A		·SCREW	0600 / 0001	/	3
	99	NAS1149FN832P		A		·WASHER	0002 / 0001	/	3
	102	MS21044N08		A		·NUT	0002 / 0001	/	3
	105	50331-001				·SWITCH, ROCKER	0002		1
	106	53074-001				·SWITCH, ROCKER	0001		1
	108	MS35206-226				·SCREW	0002 / 0001	/	3
	111	MS35338-41				·WASHER	0002 / 0001	/	3
	114	11905-003				·SELECTOR VALVE ENCLOSURE, SIDE, AFT CONSOLE	0002	0599	2
	117	MS27039-109		A		·SCREW	0002	0599	8
	120	NAS1149F0363P		A		·WASHER	0002	0599	8
	123	11777-004				·SELECTOR VALVE ENCLOSURE GASKET, AFT CONSOLE	0002	0599	2
	126	11776-002				·SELECTOR VALVE ENCLOSURE, FWD, AFT CONSOLE	0002	0599	2
	129	MS27039-0808		A		·SCREW	0002	0599	6
	132	NAS1149FN832P		A		·WASHER	0002	0599	6
	135	NAS1149FN832P	#	A		·WASHER	0002	0599	6
	138	MS21044N08	#	A		·NUT	0002	0599	6
	141	15494-001				·SELECTOR VALVE ENCLOSURE RUBBER SEAL	0600 / 0001	/	1
	144	15247-001				·SELECTOR VALVE ENCLOSURE, FRT, AFT CONSOLE	0600 / 0001	/	1
	147	MS21083N08		A		·NUT	0600 / 0001	/	2
	150	NAS1149FN832P		A		·WASHER	0600 / 0001	/	2
	153	MS35206-244		A		·SCREW	0600 / 0001	/	4
	156	MS35489-141				·GROMMET	0002	0599	1
	159	MS35489-12				·GROMMET	0600 / 0001	/	1
	162	MS35489-149				·GROMMET	0002	0599	1
	165	MS35489-15				·GROMMET	0600 / 0001	/	1
	168	11982-001				·BRACKET, FWD ENCLOSURE, CABIN FUEL SYSTEM	0002 / 0001	/	1
	171	MS27039-109		A		·SCREW	0002 / 0001	/	4
	174	NAS1149F0363P		A		·WASHER	0002 / 0001	/	4
	177	11989-002				·GASKET, FWD ENCLOSURE, CABIN FUEL SYSTEM	0002 / 0001	/	1
	180	11563-101				·DRAIN TUBE, FWD	0002	0599	1
	183	15496-101				·DRAIN TUBE, FWD	0600	0820	1
	186	15496-104				·DRAIN TUBE, FWD	0821 / 0001	/	1
	189	50748-001				·RIVNUT	0002	0599	2
	192	NAS1329A3E-130				·RIVNUT	0600 / 0001	/	2
	195	NAS1149F0432P		A		·WASHER	0002 / 0001	/	2
	198	NAS1149F0463P		A		·WASHER	0002 / 0001	/	1
	201	50566-003		A		·SPRING CLAMP	0002 / 0001	/	2
	204	11563-103				·ENCLOSURE, FIREWALL	0002	0599	1
	207	15496-103				·ENCLOSURE, FIREWALL	0600 / 0001	/	1
	210	MS35489-141				·GROMMET	0002 / 0001	/	1
	213	MS35489-149				·GROMMET	0002 / 0001	/	1
-	216	11444-003				·FUEL RETURN LINE, FIREWALL TO SELECT VALVE	0002	0097	1
						FOR SPARES USE P/N 11444-004			
	219	11444-004				·FUEL RETURN LINE, FIREWALL TO SELECT VALVE	0098	0599	1
	222	11444-005				·FUEL RETURN LINE, FIREWALL TO SELECT VALVE	0600	0820	1
	225	20138-001				·FUEL RETURN LINE, FIREWALL TO SELECT VALVE	0821 / 0001	/	1
	228	15428-001	@	A		·SPIRAL WRAP, CLEAR	0821 / 0001	/	1
	231	MS21919WDG6		A		·LOOP CLAMP	0002 / 0001	/	1
	234	MS27039-108		A		·SCREW	0002 / 0001	/	1
	237	NAS1149F0363P		A		·WASHER	0002 / 0001	/	2
	240	MS21044N3		A		·NUT	0002 / 0001	/	1
	243	AN743-12		A		·BRACKET	0002 / 0001	/	1
-	246	11443-003				·FUEL SUPPLY LINE, FIREWALL TO SELECT VALVE	0002	0097	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 11443-004			
	249	11443-004			·FUEL SUPPLY LINE, FIREWALL TO SELECT VALVE	0098	0599	1
	252	11443-005			·FUEL SUPPLY LINE, FIREWALL TO SELECT VALVE	0600	0820	1
	255	20139-001			·FUEL SUPPLY LINE, FIREWALL TO SELECT VALVE	0821 / 0001	/	1
	258	15428-001	@	A	·SPIRAL WRAP, CLEAR	0821 / 0001	/	1
	261	MS21919WDG8		A	·LOOP CLAMP	0002 / 0001	/	1
	264	MS27039-108		A	·SCREW	0002 / 0001	/	1
	267	NAS1149F0363P		A	·WASHER	0002 / 0001	/	2
	270	MS21044N3		A	·NUT	0002 / 0001	/	1
	273	AN743-12		A	·BRACKET	0002 / 0001	/	1
	276	MS35489-12			·GROMMET	0002	0599	2
	279	MS35489-41			·GROMMET	0600 / 0001	/	2
	282	MS35489-15			·GROMMET	0002	0599	2
	285	MS35489-44			·GROMMET	0600 / 0001	/	2
	288	11631-001			·FUEL RETURN LINE, SELECT VALVE TO WING, LH	0002	0599	1
	291	11631-003			·FUEL RETURN LINE, SELECT VALVE TO WING, LH	0600 / 0001	/	1
	294	11631-002			·FUEL RETURN LINE, SELECT VALVE TO WING, RH	0002	0599	1
	297	11631-004			·FUEL RETURN LINE, SELECT VALVE TO WING, RH	0600 / 0001	/	1
	300	MS21919WDG6		A	·LOOP CLAMP	0002 / 0001	/	2
	303	MS27039-108		A	·SCREW	0002 / 0001	/	1
	306	NAS1149F0363P		A	·WASHER	0002 / 0001	/	1
	309	MS21044N3		A	·NUT	0002 / 0001	/	1
	312	11630-001			·FUEL SUPPLY LINE, SELECT VALVE TO WING	0002	0599	2
	315	11630-002			·FUEL SUPPLY LINE, SELECT VALVE TO WING	0600 / 0001	/	2
	318	MS21919WDG6		A	·LOOP CLAMP	0002 / 0001	/	2
	321	MS21919WDG8		A	·LOOP CLAMP	0002 / 0001	/	2
	324	MS27039-108		A	·SCREW	0002 / 0001	/	2
	327	NAS1149F0363P		A	·WASHER	0002 / 0001	/	2
	330	MS21044N3		A	·NUT	0002 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 28-40-01 DET			DUAL FUEL QUANTITY INDICATOR			
	401	RF 28-20-04 DET			90° ELBOW			
	402	RF 28-20-04 DET			90° ELBOW			
					SYMBOL NOTES:			
			#		USED IN INSTALLATION WHEN NUTPLATE IS NOT PROVIDED WITH ENCLOSURE PANEL.			
			@		MAY BE INSTALLED OVER FUEL LINES AS SHOWN TO PROVIDE CHAFE PROTECTION FROM WIRE HARNESS.			

Intentionally Left Blank

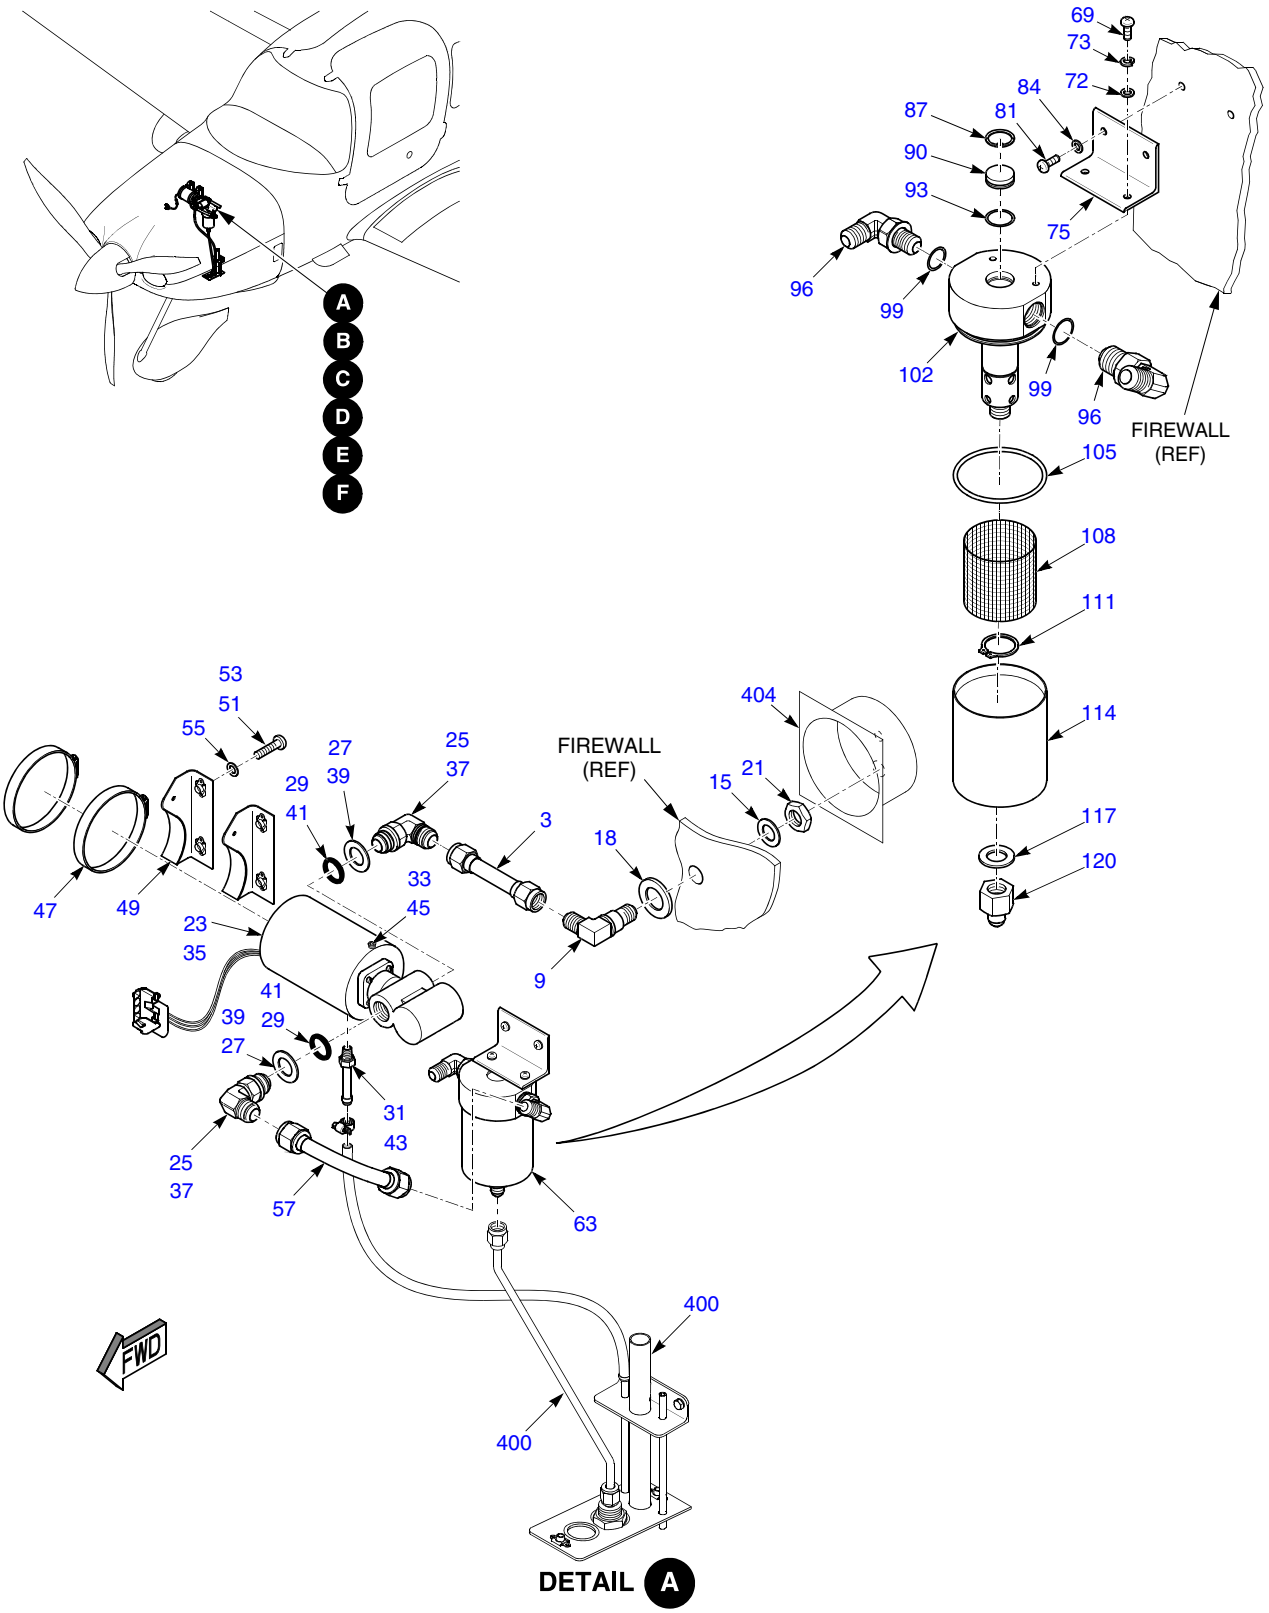

Serials 22-0002 thru 22-2709, 22-3421 & subs w/o Perspective Avionics,
Serials 22-2710 thru 22-3420 w/o Perspective Avionics after SB 2X-28-08 R1 or higher.

SR22_PC28_1174G

Figure-03

Fuel System: Distribution, Firewall - Serials 22-0002 thru 22-2709, 22-3421 & subs w/o Perspective (1 of 6)

EFFECTIVITY:
Serials 22-0002 thru 22-2709, 22-3421 & subs w/o Perspective

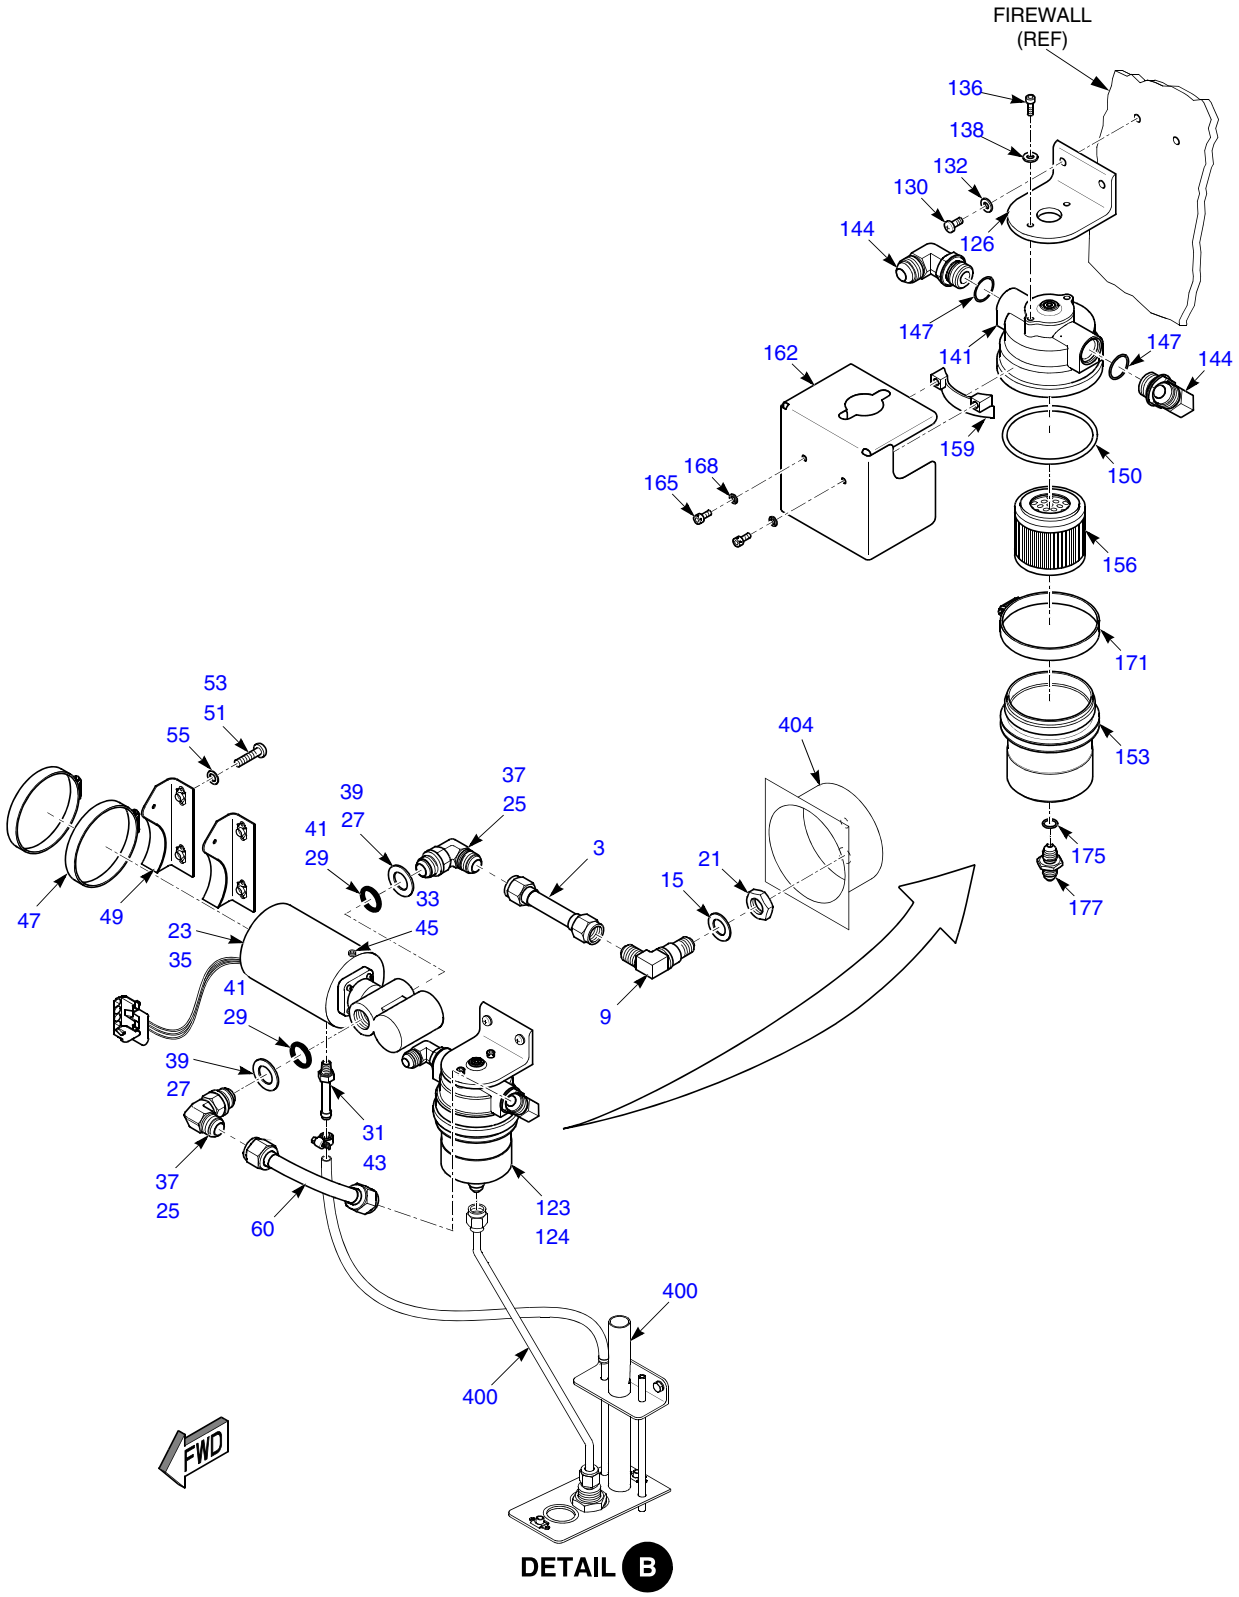

Serials 22-2710 thru 22-3025, 22-3026 thru 22-3420 w/o Perspective Avionics before SB 2X-28-08 R1 or higher.

SR22_PC28_1660D

Figure-03

Fuel System: Distribution, Firewall - Serials 22-2710 thru 22-3420 w/o Perspective (2 of 6)

EFFECTIVITY:
All

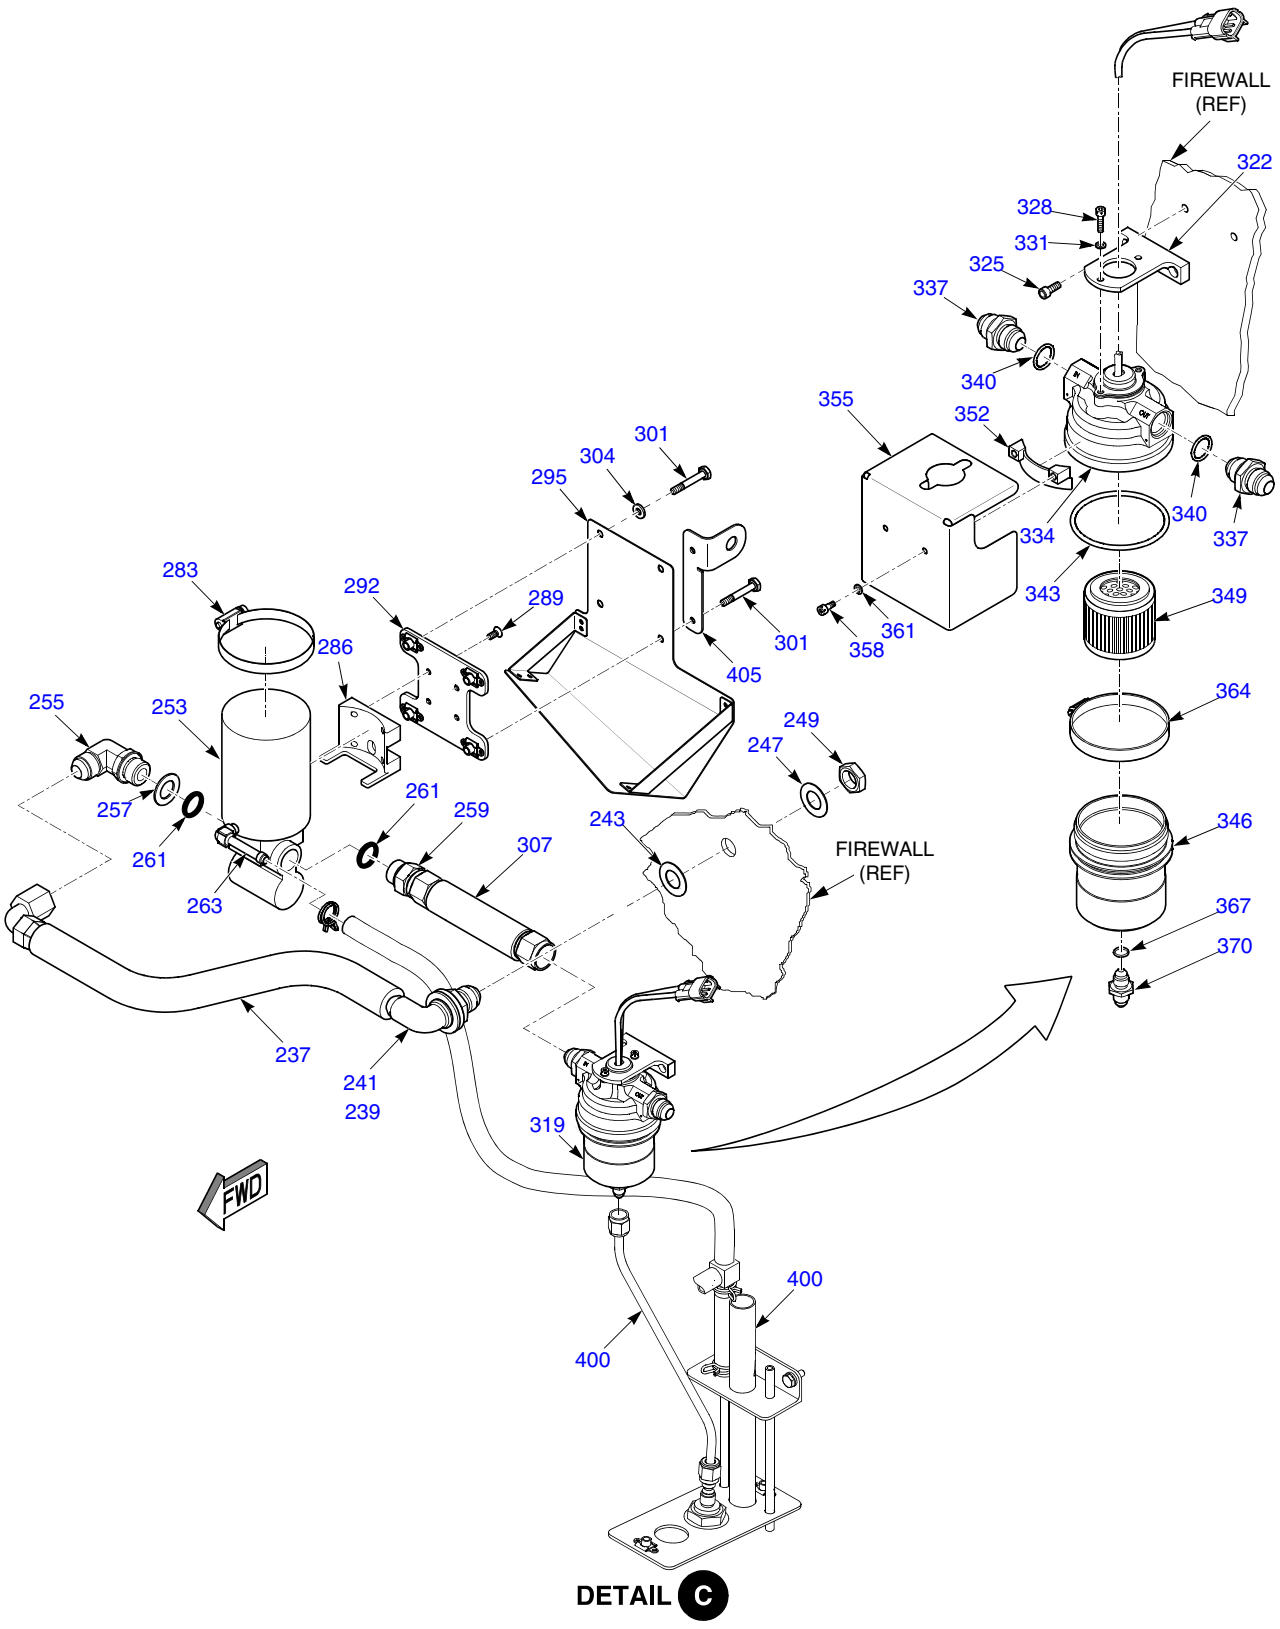

Serials 22-3026 thru 22-3420 w/ Perspective Avionics before SB 2X-28-08 R1 or higher.

SR22_PC28_1798A

Figure-03

Fuel System: Distribution, Firewall - Serials 22-3026 thru 22-3420 w/ Perspective (3 of 6)

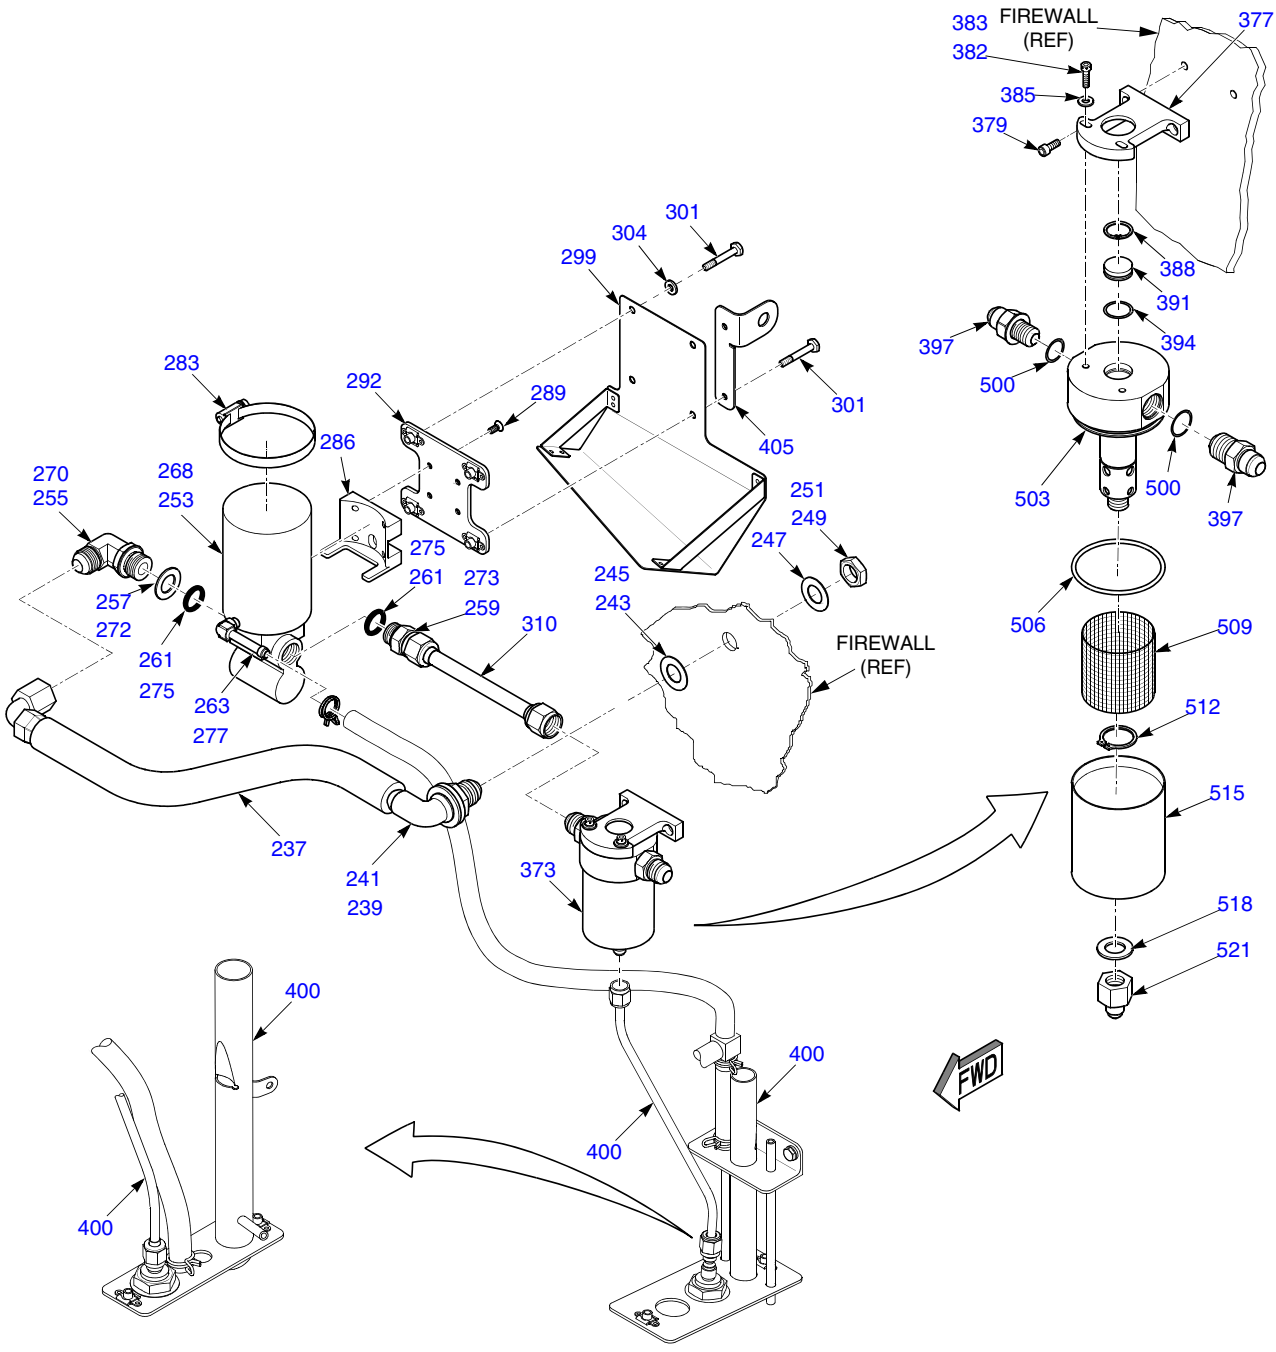

Serials 22T-0001 & subs.

DETAIL D

Serials 22-3026 thru 22-3420 w/ Perspective Avionics after SB 2X-28-08 R1 or higher,
Serials 22-3421 & subs w/ Perspective Avionics, Serials 22T-0001 & subs.

SR22_PC28_1914A

Figure-03

Fuel System: Distribution, Firewall - Serials 22-3421 & subs w/ Perspective, 22T-0001 & subs (4 of 6)

EFFECTIVITY:
All

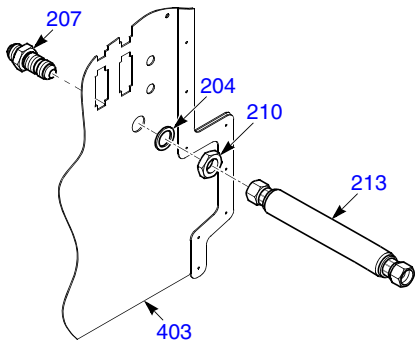

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

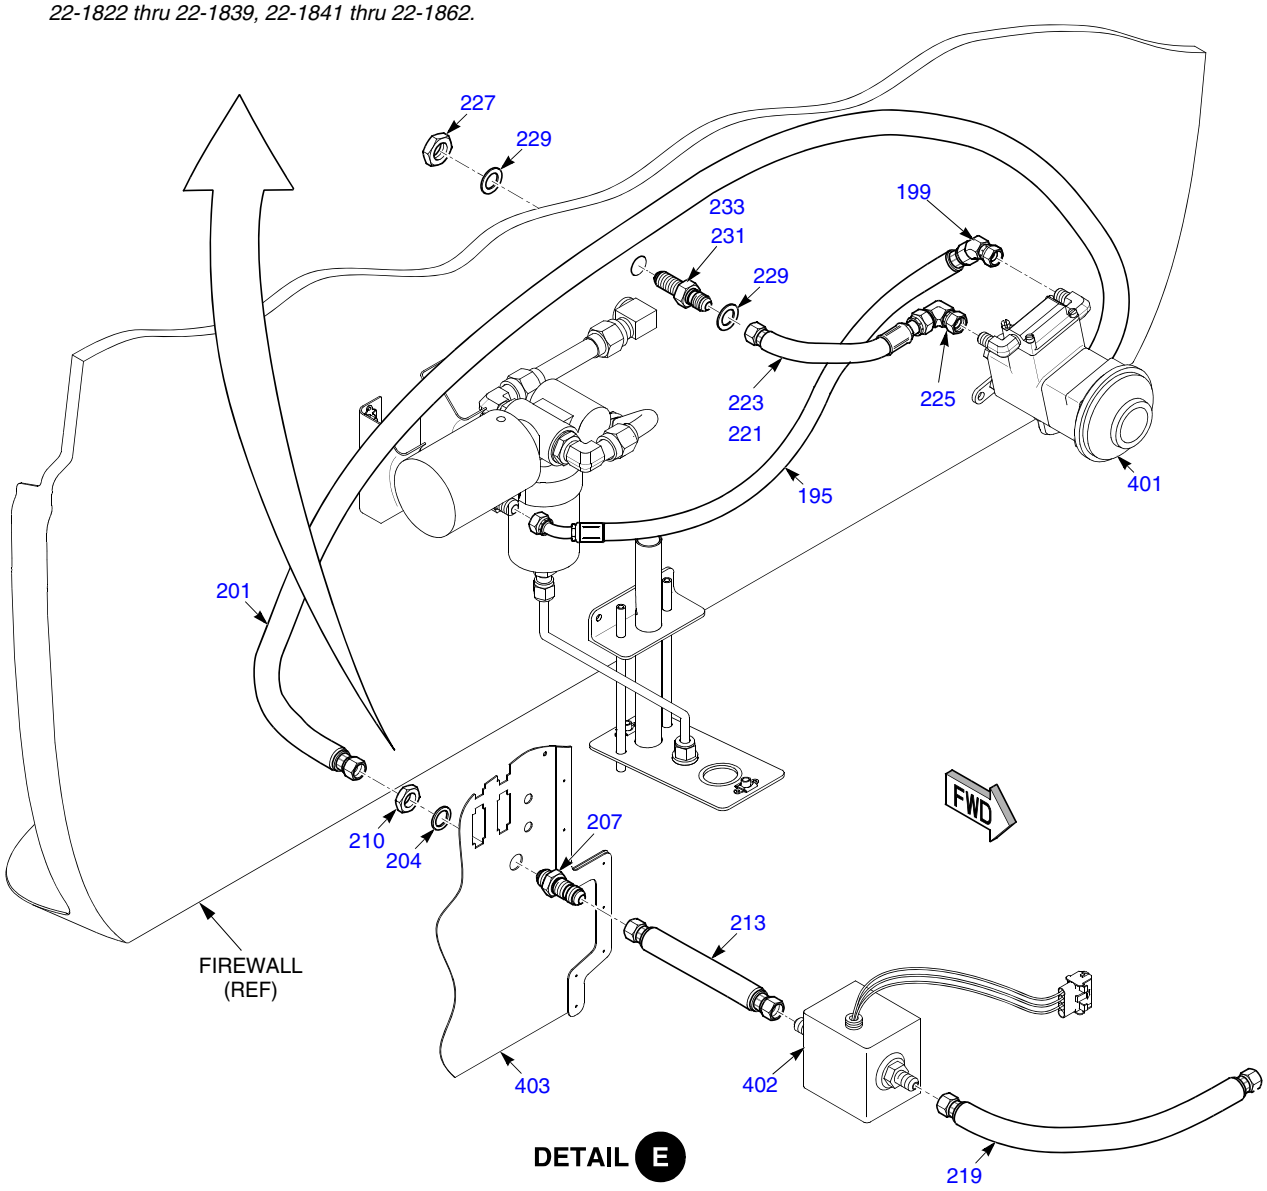

Serials 22-0002 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

SR22_PC28_1175E

Figure-03

Fuel System: Distribution, Firewall - Serials w/o Perspective (5 of 6)

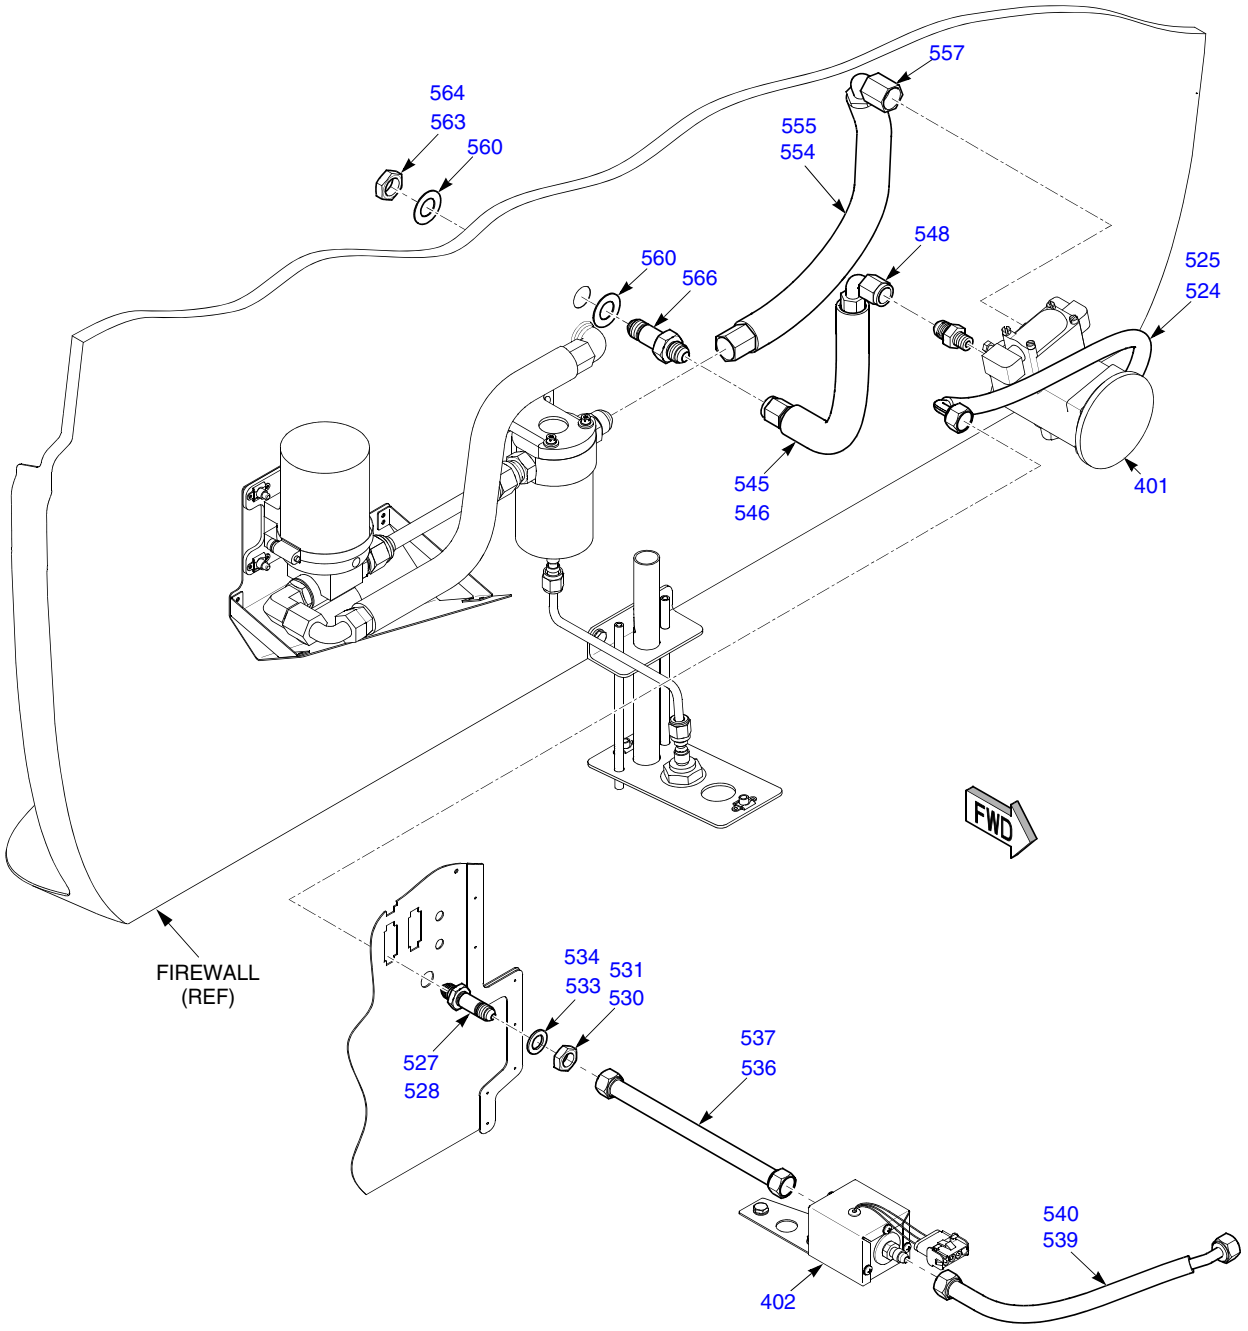

DETAIL F

Serials w/ Perspective Avionics.

SR22_PC28_1800A

Figure-03

Fuel System: Distribution, Firewall - Serials w/ Perspective (6 of 6)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		FUEL SYS, DIST, FIREWALL FWD W/O PERSPECTIVE	0002		NP
	3	11628-002			·FUEL SUPPLY LINE, FIREWALL TO AUX. PUMP	0002		1
-	6	12398-001		A	·BULKHEAD FITTING	0002	0820	1
	9	AN833-8J		A	·BULKHEAD FITTING	0821		1
					ALTERNATE FOR P/N AN833-8			
-	12	AN833-8		A	·BULKHEAD FITTING	0821		1
					ALTERNATE FOR P/N AN833-8J			
	15	NAS1149D1290K		A	·WASHER	0002		1
	18	NAS1149F1216P		A	·WASHER	0821		1
	21	AN924-8		A	·NUT	0002		1
	23	11839-001			·ELECTRIC FUEL PUMP ASSEMBLY	0002	3562	1
					FOR SPARES USE P/N 19094-002			
	25	MS51527A8		A	·ELBOW	0002	3562	2
	27	PRT OF ITM 25		A	·WASHER	0002	3562	2
	29	MS29512-08		A	·O-RING	0002	3562	2
	31	50370-001		A	·FITTING, NIPPLE	0002	3562	1
	33	50329-101			·PLUG	0002	3562	1
	35	19094-002			·ELECTRIC FUEL PUMP ASSEMBLY	3563		1
	37	MS51527B8			··ELBOW	3563		2
	39	PRT OF ITM 37		A	··WASHER	3563		2
	41	MS29512-08		A	··O-RING	3563		2
	43	50370-001		A	··FITTING, NIPPLE	3563		1
	45	50329-101			··PLUG	3563		1
	47	50743-801		A	·CLAMP	0002		2
	49	11741-002			·BRACKET FUEL PUMP, FIREWALL	0002		2
	51	MS27039-1-17		A	·SCREW	0002	0549	4
					ALTERNATE FOR P/N AN3-10A			
	53	AN3-10A		A	·SCREW	0550		4
					ALTERNATE FOR P/N MS27039-1-17			
	55	NAS1149F0363P		A	·WASHER	0002		4
	57	13982-001			·TUBE ASSEMBLY, PUMP TO GASCOLATOR	0002	2709	1
	60	18591-001			·TUBE ASSEMBLY, PUMP TO GASCOLATOR	2710		1
	63	14069-001			·GASCOLATOR	0002	2709	1
					AFTER SB2X-28-08	2710	3420	
						3421		
-	66	MS27039-1-09	*	A	·SCREW	0002	0549	2
					ALTERNATE FOR P/N AN3-5A			
	69	AN3-5A	*	A	·SCREW	0550	2709	2
					AFTER SB2X-28-08	2710	3420	
						3421		
					ALTERNATE FOR P/N MS27039-109			
	72	NAS1149F0363P		A	·WASHER	0002	2709	2
					AFTER SB2X-28-08	2710	3420	
						3421		
	73	MS35338-43	*	A	·LOCK WASHER, AFTER SB2X-28-08	2710	3420	2
	75	12147-001			·BRACKET	0002	2709	1
					AFTER SB2X-28-08	2710	3420	
						3421		
-	78	MS27039-1-07		A	·SCREW	0002	0549	2
					ALTERNATE FOR P/N AN3-3A			
	81	AN3-3A		A	·SCREW	0550	2709	2
					AFTER SB2X-28-08	2710	3420	
						3421		
					ALTERNATE FOR P/N MS27039-1-07			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	84	NAS1149F0363P		A	·WASHER	0002	2709	2
					AFTER SB2X-28-08	2710	3420	
						3421		
	87	MS16625-3068			··RING, RETAINING	0002		1
	90	B100512			··PLUG	0002		1
	93	MS29513-015			··O-RING	0002		1
	96	8-6C50X-S			··ELBOW, STRAIGHT THREAD	0002		2
	99	3-6N552-90			··O-RING	0002		2
	102	B100509			··BASE	0002		1
	105	MS29513-137			··O-RING	0002		1
	108	50908-001			··SCREEN, FILTER	0002		1
	111	MS16624-4081			··RING, RETAINING	0002		1
	114	B100511			··HOUSING	0002		1
	117	NAS1523-8B			··STAT-O-SEAL	0002		1
	120	B100513			··FITTING	0002		1
	123	18810-002			·GASCOLATOR ASSY	2710	3025	1
					FOR SPARES USE P/N 18810-006			
	124	18810-006			·GASCOLATOR ASSY	3026	3420	1
	126	18801-002			·BRACKET, GASCOLATOR	2710	3420	1
-	129	MS27039-1-07		A	·SCREW	2710	3420	2
					ALTERNATE FOR P/N AN3-3A			
	130	AN3-3A		A	·SCREW	2710	3420	2
					ALTERNATE FOR P/N MS27039-1-07			
	132	NAS1149F0363P		A	·WASHER	2710	3420	2
-	135	MS27039-1-09		A	·SCREW	2710	3420	2
					ALTERNATE FOR P/N AN3-5A			
	136	AN3-5A		A	·SCREW	2710	3420	2
					ALTERNATE FOR P/N MS27039-1-09			
	138	NAS1149F0363P		A	·WASHER	2710	3420	2
	141	1742224-12			··BASE W/ INDICATOR	2710	3420	1
	144	1740235-08			··UNION	2710	3420	2
	147	033708			··O-RING	2710	3420	2
	150	1742439			··O-RING	2710	3420	1
	153	1742240-01			··BOWL	2710	3420	1
	156	1742243-04			··FILTER, ELEMENT	2710	3420	1
					FOR SPARES, REFER TO SB2X-28-08			
	159	18778-001			··ADAPTER	2710	3420	1
	162	18779-001			··HEAT SHIELD	2710	3420	1
	165	1739275-02		A	··SCREW	2710	3420	2
	168	1763759-01		A	··WASHER	2710	3420	2
	171	1763769		A	··CLAMP, HOSE	2710	3420	1
-	174	569564			··O-RING	2710	3420	1
					FOR SPARES USE P/N MS29512-04			
	175	MS29512-04			··O-RING	2710	3420	1
	177	569565			··PLUG, DRAIN	2710	3420	1
-	189	51019-001			·HOSE, FUEL, FIREWALL TO FUEL PUMP FEED ASSY	0002	0549	1
					FOR SPARES USE P/N 51276-001			
					FOR SPARES USE P/N MS51521B8			
-	192	51276-001	^		·HOSE, FUEL, FIREWALL TO FUEL PUMP FEED	0550	2709	1
					ALTERNATE FOR P/N 53031-001			
	195	53031-001	&		·HOSE ASSY, FIREWALL TO FUEL PUMP FEED	2710		1
					ALTERNATE FOR P/N 51276-001			
-	198	MS51521B8	^		·FITTING, ELBOW	0550	2709	2
					ALTERNATE FOR P/N MS51522B8S			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	199	MS51522B8S	&		·FITTING, ELBOW	2710		1
					ALTERNATE FOR P/N MS51521B8			
	201	51018-003			·HOSE, FUEL, FUEL PUMP TO BAFFLE	0002		1
	204	NAS1149F0763P		A	·WASHER	0002		1
	207	AN832-4		A	·BULKHEAD FITTING	0002		1
	210	AN924-4		A	·BULKHEAD NUT	0002		1
	213	51018-001			·HOSE, FUEL, BAFFLE TO TRANSDUCER	0002		1
	219	51018-002			·HOSE, FUEL, TRANSDUCER TO FUEL METERING	0002		1
	221	51020-001			·HOSE, FUEL, FIREWALL TO FUEL PUMP RETURN ASSY	0002	0549	1
					FOR SPARES USE P/N 51277-001			
					FOR SPARES USE P/N MS51521B6			
	223	51277-001			·HOSE, FUEL, FIREWALL TO FUEL PUMP RETURN	0550		1
	225	MS51521B6			·FITTING, ELBOW	0550		1
	227	AN924-6		A	·NUT	0002		1
	229	NAS1149F0932P		A	·WASHER	0002		2
	231	13762-001		A	·BULKHEAD FITTING	0002	0820	1
	233	AN832-6J		A	·BULKHEAD FITTING	0821		1
-	235	NO PRT NUMBER			FUEL SYS, DIST, FIREWALL FWD W/ PERSPECTIVE	3026 / 0001	/	NP
	237	51885-001			·FUEL SUPPLY LINE, FIREWALL TO AUX. PUMP	3026 / 0001	/	1
	239	AN833-8J		A	·BULKHEAD FITTING	3026 / 0001	/	1
					ALTERNATE FOR P/N AN833-8			
	241	AN833-8		A	·BULKHEAD FITTING	3026 / 0001	/	1
					ALTERNATE FOR P/N AN833-8J			
	243	NAS1149D1290P		A	·WASHER	3026		1
	245	NAS1149F1290K		A	·WASHER	/ 0001	/	1
	247	NAS1149F1216P		A	·WASHER	3026 / 0001	/	1
	249	AN924-8		A	·NUT	3026		1
	251	AN924-8D		A	·NUT	/ 0001	/	1
	253	11839-002			·ELECTRIC FUEL PUMP ASSEMBLY	3026	3562	1
					FOR SPARES USE P/N 11839-004			
	255	MS51527A8			·ELBOW	3026	3562	1
	257	PRT OF ITM 255		A	·WASHER	3026	3562	1
	259	AS5194D0806		A	·UNION	3026	3562	1
	261	MS29512-08		A	·O-RING	3026	3562	2
	263	18371-001			·FITTING, 90°	3026	3562	1
-	265	50329-101			·PLUG	3026	3562	1
-	266	19094-001			·ELECTRIC FUEL PUMP ASSEMBLY	3563 / 0001	3711 / 0064	1
					FOR SPARES USE P/N 11839-004			
-	267	11839-003			·ELECTRIC FUEL PUMP ASSEMBLY	3712 / 0065	/	1
					FOR SPARES USE P/N 11839-004			
	268	11839-004			·ELECTRIC FUEL PUMP ASSEMBLY	3026 / 0001	/	1
-	269	MS51527B8			··ELBOW	3563 / 0001	3711 / 0064	1
	270	MS51527A8			··ELBOW	3712 / 0065	/	1
-	271	PRT OF ITM 269		A	··WASHER	3563 / 0001	3711 / 0064	1
	272	PRT OF ITM 270		A	··WASHER	3712 / 0065	/	1
	273	MS51525B8		A	··UNION	3563 / 0001	/	1
	275	MS29512-08		A	··O-RING	3563 / 0001	/	2
	277	18371-001			··FITTING, 90°	3563 / 0001	/	1
-	279	50329-101			··PLUG	3563 / 0001	/	1
-	281	18331-001			·BRACKET ASSEMBLY, FUEL PUMP MOUNT	3026 / 0001	/	1
	283	50743-801		A	·CLAMP	3026 / 0001	/	1
	286	18336-002			·CLAMP BLOCK, PUMP MOUNT	3026 / 0001	/	1
	289	MS24693S48		A	·SCREW	3026 / 0001	/	4
	292	18337-001			·ANGLE, PUMP MOUNT	3026 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	295	18378-001			·ASSEMBLY, SHIELD, FUEL PUMP	3026	3402	1
-	298	18378-002			·ASSEMBLY, SHIELD, FUEL PUMP	3403 / 0001	3711 / 0042	1
					FOR SPARES USE P/N 18378-003			
	299	18378-003			·ASSEMBLY, SHIELD, FUEL PUMP	3712 0043	/	1
	301	AN3-12A		A	·BOLT	3026 / 0001	/	4
	304	NAS1149F0363P		A	·WASHER	3026 / 0001	/	2
	307	51874-001			·TUBE ASSEMBLY, PUMP TO GASCOLATOR	3026	3420	1
	310	19746-001			·TUBE ASSEMBLY, PUMP TO GASCOLATOR	3421 / 0001	/	1
					AFTER SB2X-28-08	3026	3420	
	319	18810-005			·GASCOLATOR ASSY	3026	3420	1
	322	18801-001			·BRACKET, GASCOLATOR	3026	3420	1
	325	NAS1351C-3-8		A	·SCREW	3026	3420	2
	328	1739275-09		A	·SCREW	3026	3420	2
	331	1763759-01		A	·WASHER	3026	3420	2
	334	1742226-04			··BASE W/ INDICATOR	3026	3420	1
	337	1740235-08			··UNION	3026	3420	2
	340	033708			··O-RING	3026	3420	2
	343	1742439			··O-RING	3026	3420	1
	346	1742241-02			··BOWL	3026	3420	1
	349	1742243-04			··FILTER, ELEMENT	3026	3420	1
					FOR SPARES, REFER TO SB2X-28-08	3026	3420	
	352	18778-001			··ADAPTER	3026	3420	1
	355	18779-001			··HEAT SHIELD	3026	3420	1
	358	NAS1096-2-6		A	··SCREW	3026	3420	2
	361	MS35338-137		A	··WASHER	3026	3420	2
	364	1763769		A	··CLAMP, HOSE	3026	3420	1
	367	1753014-01			··O-RING	3026	3420	1
	370	1740235-04			··PLUG, DRAIN	3026	3420	1
	373	14069-002			·GASCOLATOR ASSY	3421 / 0001	/	1
					AFTER SB2X-28-08	3026	3420	
-	376	19772-001			·BRACKET, GASCOLATOR	3421	3562	1
					AFTER SB2X-28-08	3026	3420	
	377	19772-002			·BRACKET, GASCOLATOR	3563 / 0001	/	1
	379	NAS1351C-3-8		A	·SCREW	3421 / 0001	/	2
	382	AN3H6A		A	·SCREW	3421		2
	383	AN3-6A		A	·SCREW	/ 0001	/	2
	385	NAS1149F0363P		A	·WASHER	3421 / 0001	/	2
	388	MS16625-3068			··RING, RETAINING	3421 / 0001	/	1
	391	B100512			··PLUG	3421 / 0001	/	1
	394	MS29513-015			··O-RING	3421 / 0001	/	1
	397	8-6-F50X-S			··UNION	3421 / 0001	/	2
	500	3-6N552-90			··O-RING	3421 / 0001	/	2
	503	B100509			··BASE	3421 / 0001	/	1
	506	MS29513-137			··O-RING	3421 / 0001	/	1
	509	50908-001			··SCREEN, FILTER	3421 / 0001	/	1
	512	MS16624-4081			··RING, RETAINING	3421 / 0001	/	1
	515	B100511			··HOUSING	3421 / 0001	/	1
	518	NAS1523-8B			··STAT-O-SEAL	3421 / 0001	/	1
	521	B100513			··FITTING	3421 / 0001	/	1
	524	51018-003			·HOSE, FUEL, FUEL PUMP TO BAFFLE	3026		1
	525	53298-001			·HOSE, FUEL, FUEL PUMP TO BAFFLE	/ 0001	/	1
	527	AN832-4J		A	·BULKHEAD FITTING	3026		1
	528	AN837-6D		A	·BULKHEAD FITTING	/ 0001	/	1
	530	AN924-4		A	·BULKHEAD NUT	3026		1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	531	AN924-6J		A	·BULKHEAD NUT	/ 0001	/	1
	533	NAS1149F0763P		A	·WASHER	3026		1
	534	NAS1149F0932P		A	·WASHER	/ 0001	/	1
	536	51018-001			·HOSE, FUEL, BAFFLE TO TRANSDUCER	3026		1
	537	53296-001			·HOSE, FUEL, BAFFLE TO TRANSDUCER	/ 0001	/	1
	539	51018-002			·HOSE, FUEL, TRANSDUCER TO FUEL METERING	3026		1
	540	53297-001			·HOSE, FUEL, TRANSDUCER TO FUEL METERING	/ 0001	/	1
-	542	51020-001			·HOSE, FUEL, FIREWALL TO FUEL PUMP RETURN ASSY	3026		1
					FOR SPARES USE P/N 51277-001			
					FOR SPARES USE P/N MS51521B6			
	545	51277-001			·HOSE, FUEL, FIREWALL TO FUEL PUMP RETURN	3026		1
	546	51020-003			·HOSE, FUEL, FIREWALL TO FUEL PUMP RETURN	/ 0001	/	1
	548	MS51521B6			·FITTING, ELBOW	3026 / 0001	/	1
-	551	51903-001			·HOSE, FUEL, FIREWALL TO FUEL PUMP FEED ASSY	3026		1
					FOR SPARES USE P/N 51276-001			
					FOR SPARES USE P/N MS51521B8			
	554	51276-001			·HOSE, FUEL, FIREWALL TO FUEL PUMP FEED	3026		1
	555	53031-002			·HOSE, FUEL, FIREWALL TO FUEL PUMP FEED	/ 0001	/	1
	557	MS51521B8			·FITTING, ELBOW	3026 / 0001	/	2
	560	NAS1149F0932P		A	·WASHER	3026 / 0001	/	2
	563	AN924-6		A	·NUT	3026		1
	564	AN924-6J		A	·NUT	/ 0001	/	1
	566	AN832-6J		A	·BULKHEAD FITTING	3026 / 0001	/	1
-	569	70211-001	@		5 YEAR KIT, FLEXIBLE FUEL LINES	0002	0549	1
-	572	70211-002	#		5 YEAR KIT, FLEXIBLE FUEL LINES	0550	2709	1
-	575	70211-003	$		5 YEAR KIT, FLEXIBLE FUEL LINES, AVIDYNE AVIONICS	2710		1
-	578	70211-004	%		5 YEAR KIT, FLEXIBLE FUEL LINES, GARMIN AVIONICS	3026 / 0001	/	1
-	581	70211-101			·DRAIN TUBE	0002 / 0001	/	1
-	584	70211-102			·DRAIN HOSE	0002 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 71-70-01 DET			ENGINE DRAINS			
	401	RF 71-00-01 DET			FUEL PUMP			
	402	RF 73-30-01 DET			FUEL FLOW SENSOR			
	403	RF 71-00-02 DET			ENGINE BAFFLING			
	404	RF 28-20-02 DET			FUEL SYSTEM, DISTRIBUTION, CABIN			
	405	RF 32-42-01 DET			BRAKE SYSTEM INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2334, 22-2420; REFER TO SERIAL 22-2438 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDEN-TIFICATION.			
			@		CONSUMES ITEMS 192, 201, 198, 213, 219, 223, 225, 581, 584			
			#		CONSUMES ITEMS 192, 201, 213, 219, 225, 581, 584			
			$		CONSUMES ITEMS 195, 201, 213, 219, 225, 581, 584			
			%		CONSUMES ITEMS 524, 536, 539, 545, 551, 554, 581, 584			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			^		WHEN 53031-001 USED AS ALT, MUST ALSO USE MS51521B8.			
			&		WHEN 51276-001 USED AS ALT, MUST ALSO USE MS51522B8S.			
			*		LOCK WASHER OPTIONAL. IF OMITTED, INSTALL SCREW WITH LOCTITE 242.			

Intentionally Left Blank

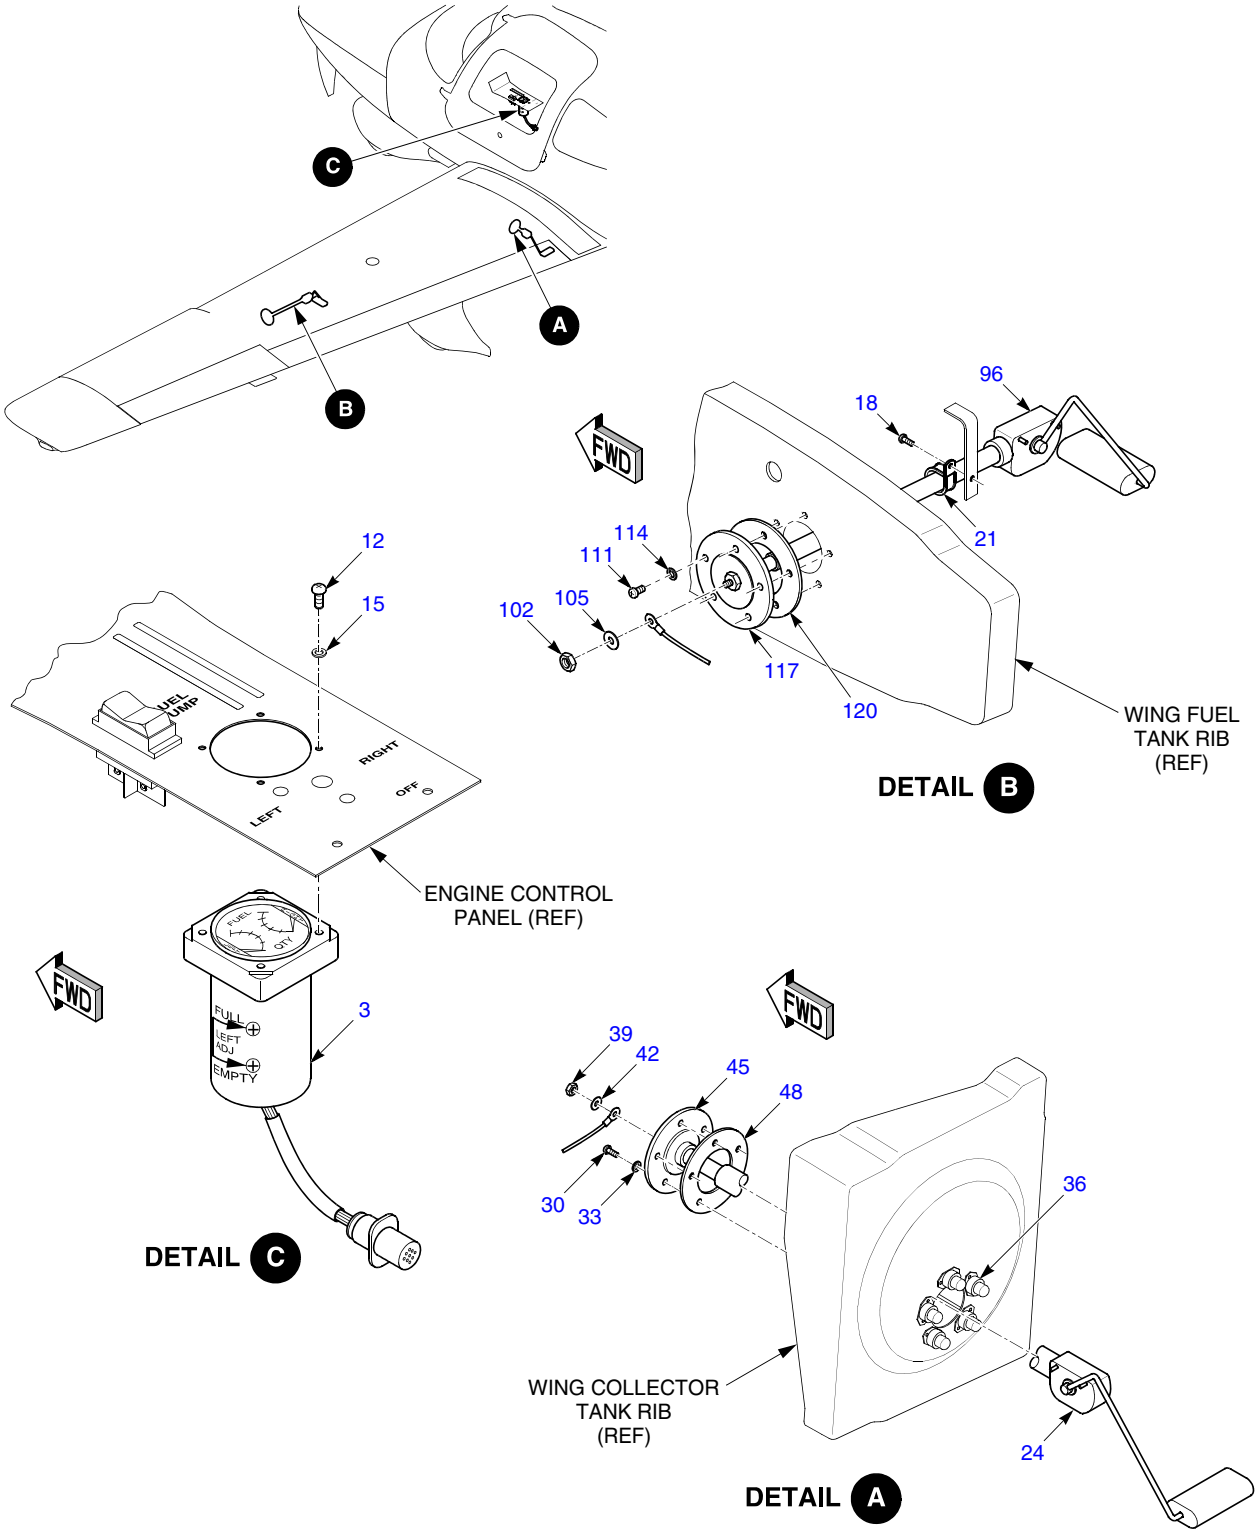

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC28_1176B

Figure-01

Fuel System: Indicating - Serials 22-0002 thru 22-2437 (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

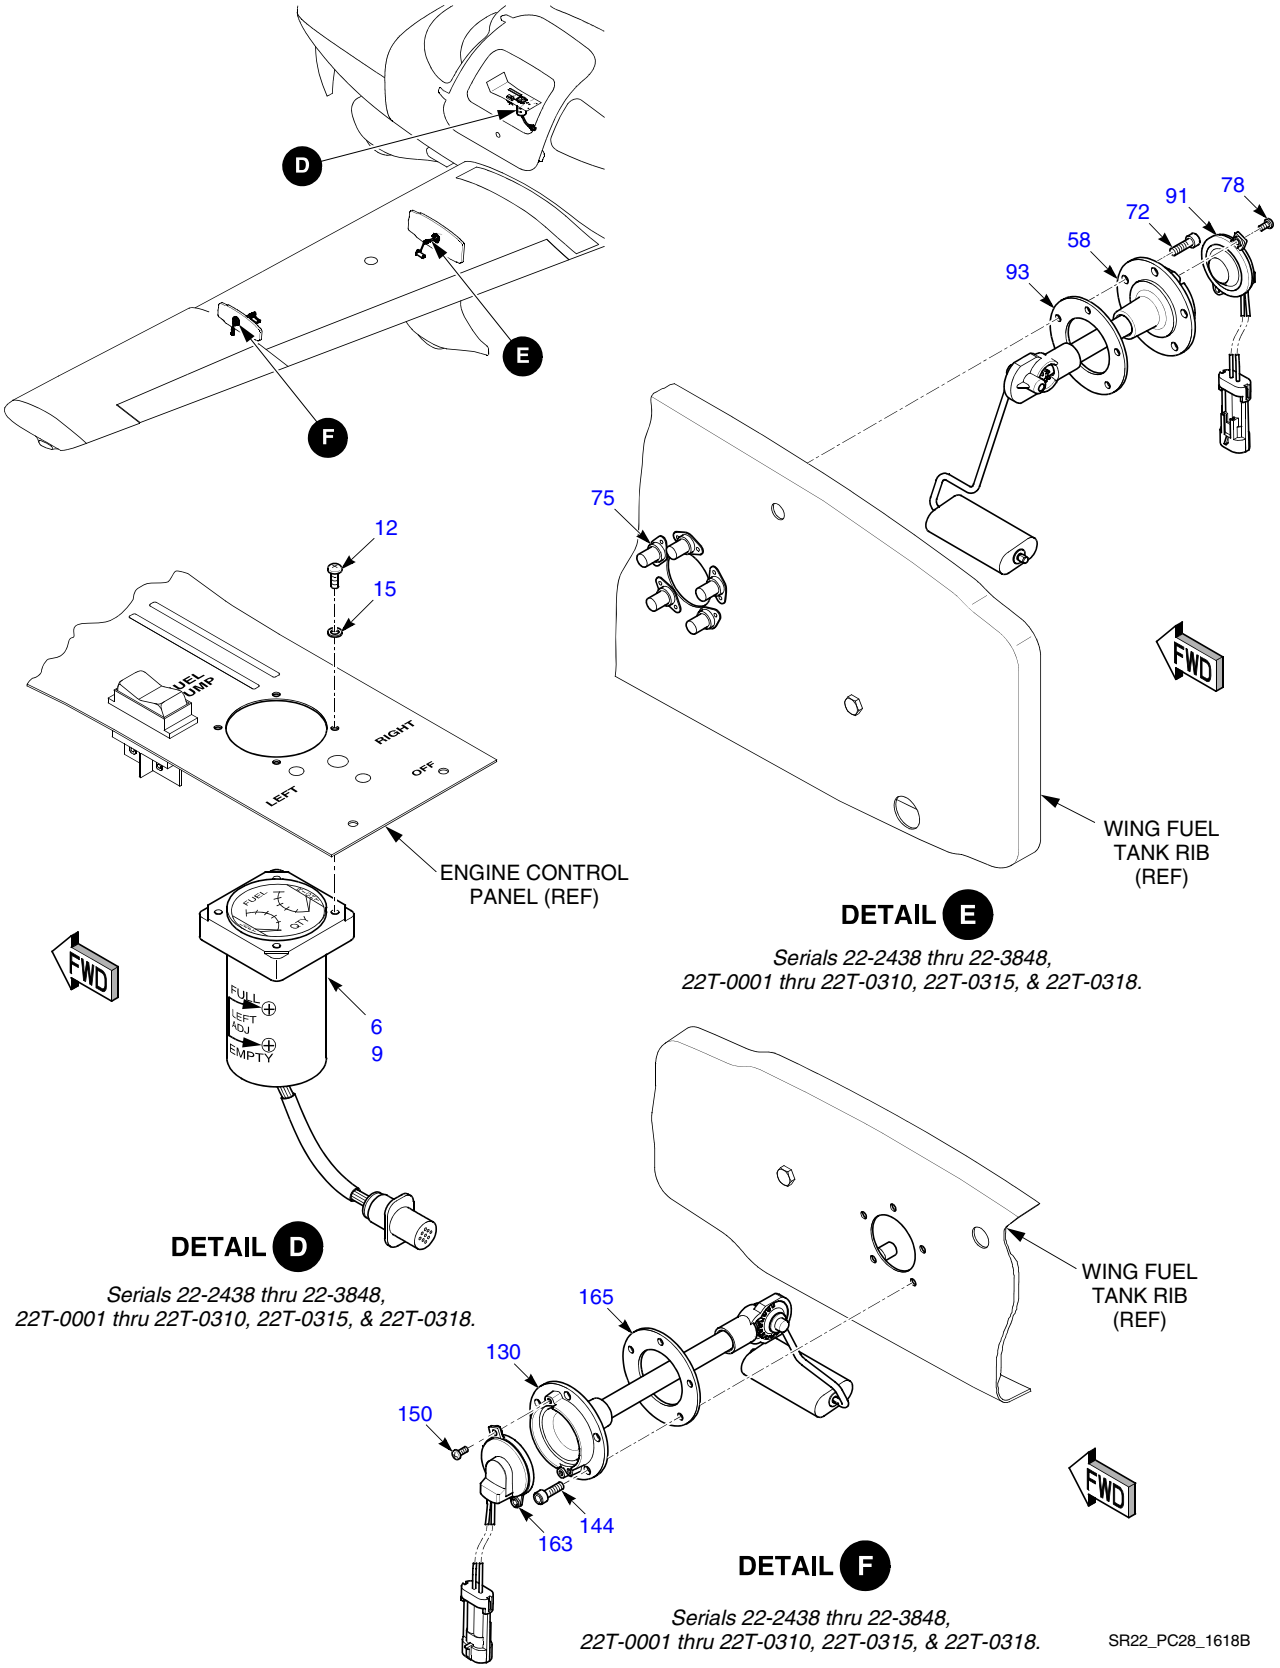

Figure-01

Fuel System: Indicating - Serials 22-2438 thru 22-3848, 22T-0001 thru 22T-0318 (2 of 3)

EFFECTIVITY:
Serials 22-2438 thru 22-3848, 22T-0001 thru 22T-0318

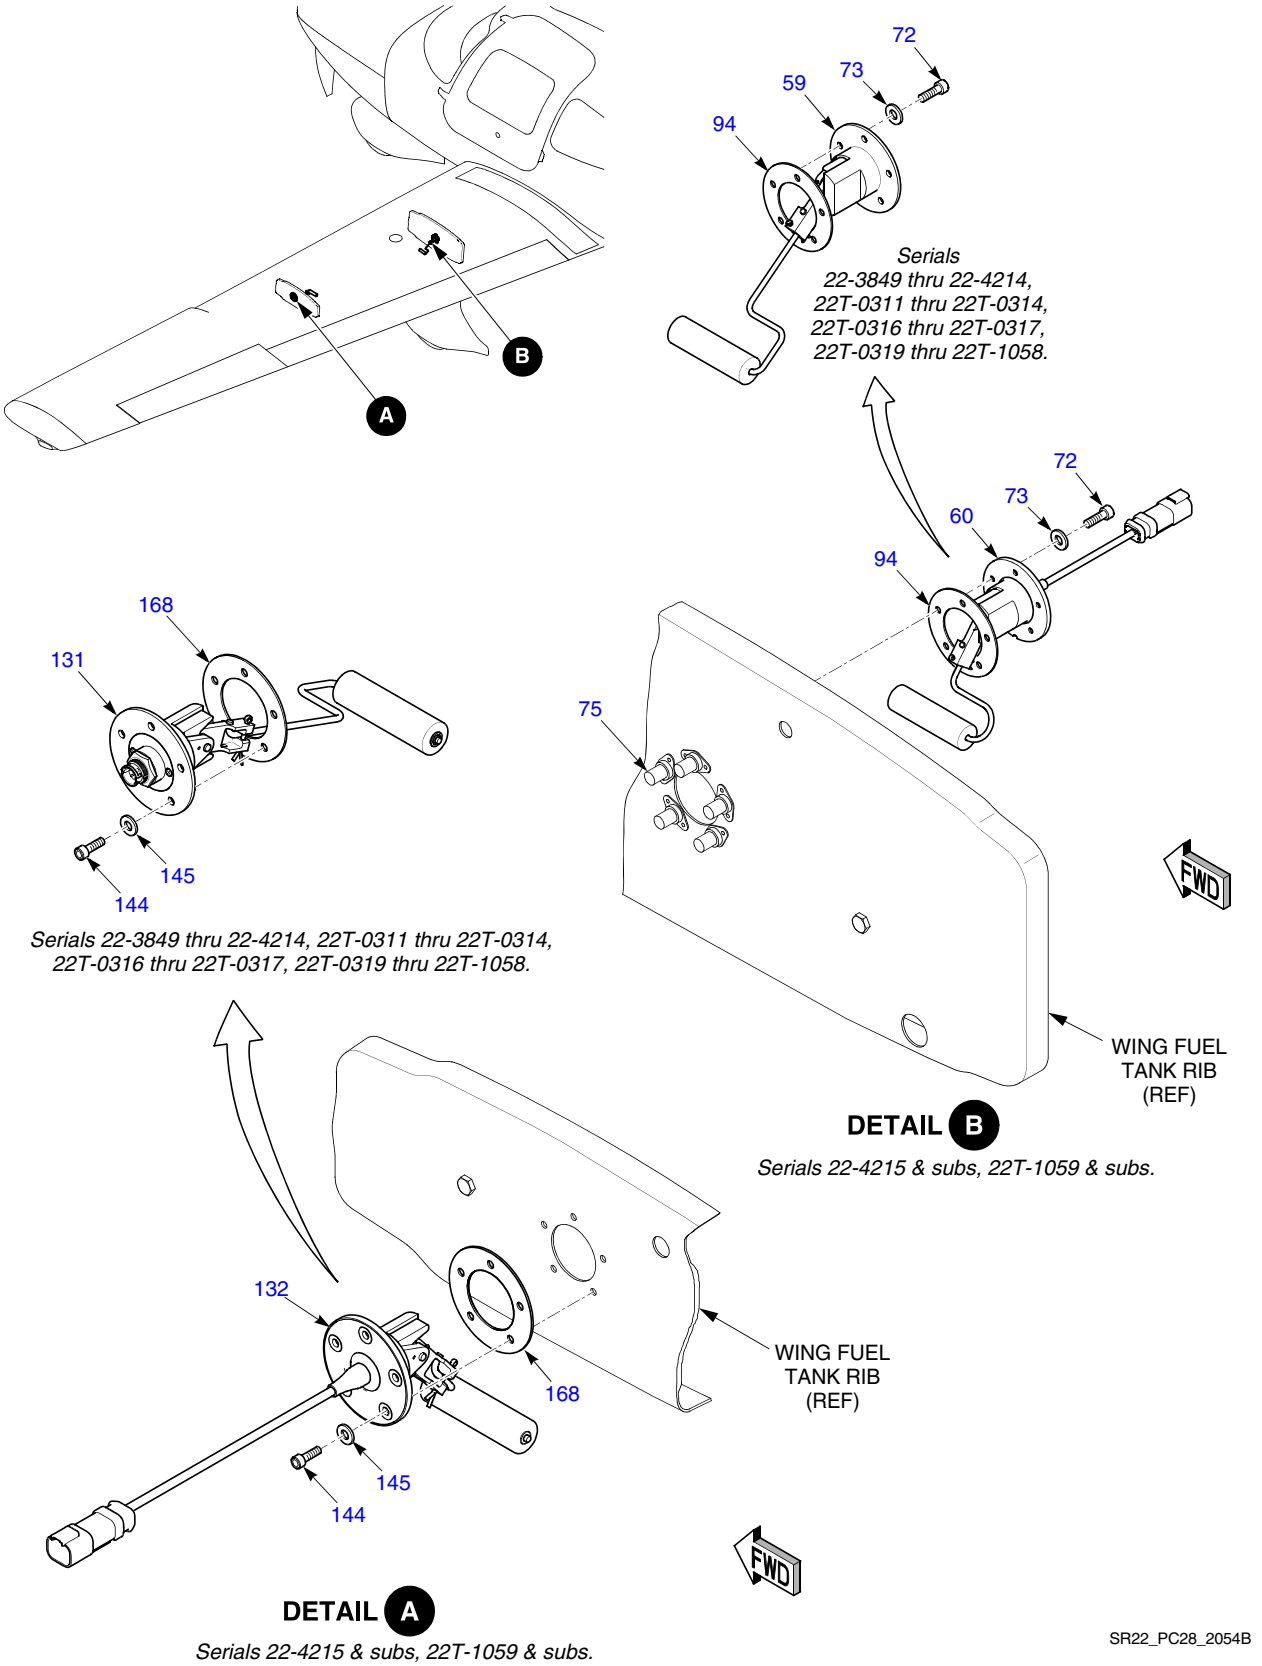

Figure-01

Fuel System: Indicating - Serials 22-3849 & subs, 22T-0319 & subs (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FUEL SYSTEM - INDICATING	0002 / 0001	/	NP
	3	13557-001			·DUAL FUEL QUANTITY INDICATOR	0002	2437	1
	6	13557-002			·DUAL FUEL QUANTITY INDICATOR	2438	3049	1
					FOR SPARES USE P/N 13557-003			
	9	13557-003			·DUAL FUEL QUANTITY INDICATOR	3050 / 0001	3848 / 0318	1
	12	50834-014		A	·CAP SCREW	0002 / 0001	3848 / 0318	4
	15	50813-001		A	·WASHER	0002 / 0001	3848 / 0318	4
	18	MS27039-1-09		A	·SCREW	0002	2437	1
	21	MS21919WDF8		A	·CLAMP	0002	2437	1
	24	13467-003			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, LH	0002	2437	1
-	27	13467-004			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, RH	0002	2437	1
	30	AN3-6A		A	·BOLT	0002	2437	5
	33	NAS1149D0332J		A	·WASHER	0002	2437	5
	36	NAS1473A3			··NUTPLATE	0002	2437	5
	39	PRT OF ITM 24			··NUT	0002	2437	1
	42	PRT OF ITM 24			··WASHER	0002	2437	1
	45	PRT OF ITM 24			··BASE, SENDER	0002	2437	1
	48	12638-102			··GASKET	0002	2437	1
-	51	18483-001			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, LH	2438	2630	1
					FOR SPARES USE P/N 18483-005			
-	54	18483-002			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, LH	2631	2645	1
					FOR SPARES USE P/N 18483-005			
-	57	18483-003			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, LH	2646 / 0001	3790 / 0206	1
					FOR SPARES USE P/N 18483-005			
	58	18483-005			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, LH	3791 / 0207	3848 / 0318	1
	59	23137-002			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, LH	3849 / 0319	4214 / 1058	1
	60	23137-012			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, LH	4215 / 1059	/	1
-	61	18483-001			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, RH	2438	2630	1
					FOR SPARES USE P/N 18483-005			
-	62	18483-002			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, RH	2631	2645	1
					FOR SPARES USE P/N 18483-005			
-	63	18483-003			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, RH	2646 / 0001	3790 / 0206	1
					FOR SPARES USE P/N 18483-005			
-	64	18483-005			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, RH	3791 / 0207	3848 / 0318	1
-	65	23137-002			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, RH	3849 / 0319	4214 / 1058	1
-	66	23137-012			·FUEL LEVEL SENDING UNIT ASSY, INBOARD, RH	4215 / 1059	/	1
-	67	NAS1351C-3-12		A	·SCREW	2438 / 0001	/	5
					ALTERNATE FOR P/N NAS1351-3-12P			
	72	NAS1351-3-12P		A	·SCREW	2438 / 0001	/	5
					ALTERNATE FOR P/N NAS1351C-3-12			
	73	NAS1149D0332K		A	·WASHER	3849 / 0319	/	5
	75	NAS1473A3			··NUTPLATE	2438 / 0001	/	5
	78	40-416			··SCREW	2438 / 0001	3848 / 0318	2
-	81	18484-101			··DIAL	2438	2630	1
					FOR SPARES USE P/N 18484-501			
-	84	18484-201			··DIAL	2631	2645	1
					FOR SPARES USE P/N 18484-501			
-	87	18484-301			··DIAL	2646	3354	1
					FOR SPARES USE P/N 18484-501			
-	90	18484-311			··DIAL	3355 / 0001	3790 / 0206	1
					AFTER SB2X-28-06	2438	3354	
					FOR SPARES USE P/N 18484-501			1
	91	18484-501			··DIAL	3791 / 0207	3848 / 0318	1
	93	18484-102			··GASKET	2438 / 0001	3848 / 0318	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	94	23137-009			··GASKET	3849 / 0319	/	1
	96	13467-001			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, LH	0002	2437	1
-	99	13467-002			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, RH	0002	2437	1
	102	AN3-6A		A	·BOLT	0002	2437	5
	105	NAS1149D0332J		A	·WASHER	0002	2437	5
-	108	NAS1473A3			··NUTPLATE	0002	2437	5
	111	PRT OF ITM 96			··NUT	0002	2437	1
	114	PRT OF ITM 96			··WASHER	0002	2437	1
	117	PRT OF ITM 96			··BASE, SENDER	0002	2437	1
	120	12638-102			··GASKET	0002	2437	1
-	123	18484-001			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, LH	2438	2630	1
					FOR SPARES USE P/N 18484-005			
-	126	18484-002			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, LH	2631	2645	1
					FOR SPARES USE P/N 18484-005			
-	129	18484-003			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, LH	2646 / 0001	3790 / 0206	1
					FOR SPARES USE P/N 18484-005			
	130	18484-005			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, LH	3791 / 0207	3848 / 0318	1
	131	23137-001			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, LH	3849 / 0319	4214 / 1058	1
	132	23137-011			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, LH	4215 / 1059	/	1
-	133	18484-001			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, RH	2438	2630	1
					FOR SPARES USE P/N 18484-005			
-	134	18484-002			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, RH	2631	2645	1
					FOR SPARES USE P/N 18484-005			
-	135	18484-003			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, RH	2646 / 0001	3790 / 0206	1
					FOR SPARES USE P/N 18484-005			
-	136	18484-005			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, RH	3791 / 0207	3848 / 0318	1
-	137	23137-001			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, RH	3849 / 0319	4214 / 1058	1
-	138	23137-011			·FUEL LEVEL SENDING UNIT ASSY, OUTBOARD, RH	4215 / 1059	/	1
-	141	NAS1351C-3-12		A	·SCREW	2438 / 0001	/	5
					ALTERNATE FOR P/N NAS1351-3-12P			
	144	NAS1351-3-12P		A	·SCREW	2438 / 0001	/	5
					ALTERNATE FOR P/N NAS1351C-3-12			
	145	NAS1149D0332K		A	·WASHER	3849 / 0319	/	5
-	147	NAS1473A3			··NUTPLATE	2438 / 0001	/	5
	150	40-416			··SCREW	2438 / 0001	3848 / 0318	2
-	153	18484-101			··DIAL	2438	2630	1
					FOR SPARES USE P/N 18484-501			
-	156	18484-201			··DIAL	2631	2645	1
					FOR SPARES USE P/N 18484-501			
-	159	18484-301			··DIAL	2646	3354	1
					FOR SPARES USE P/N 18484-501			
-	162	18484-311			··DIAL	3355 / 0001	3790 / 0206	1
					AFTER SB2X-28-06	2438	3354	
					FOR SPARES USE P/N 18484-501			
	163	18484-501			··DIAL	3791 / 0207	3848 / 0318	1
	165	18484-102			··GASKET	2438 / 0001	3848 / 0318	1
	168	23137-009			··GASKET	3849 / 0319	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					2) SERIAL NUMBER 22T-0311 THRU 22T-0314, 22T-0316 THRU 22T-0317; REFER TO 22T-0319 FOR PART IDENTIFICATION.			

Intentionally Left Blank

CHAPTER

30

ICE PROTECTION

Intentionally Left Blank

CHAPTER 30 - ICE PROTECTION
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
30-LOEP	1	19 SEP 2017
30-LOEP	2	19 SEP 2017
30-TOC	1	19 SEP 2017
30-TOC	2	19 SEP 2017
30-05-01	1	15 DEC 2014
30-05-01	2	15 DEC 2014
30-05-01	3	15 DEC 2014
30-05-01	4	15 DEC 2014
30-05-01	5	15 DEC 2014
30-05-01	6	15 DEC 2014
30-05-01	7	15 DEC 2014
30-05-01	8	15 DEC 2014
30-05-01	9	15 DEC 2014
30-05-01	10	15 DEC 2014
30-05-01	11	15 DEC 2014
30-05-01	12	15 DEC 2014
30-05-01	13	15 DEC 2014
30-05-01	14	15 DEC 2014
30-06-01	1	15 DEC 2014
30-06-01	2	15 DEC 2014
30-06-01	3	15 DEC 2014
30-06-01	4	15 DEC 2014
30-06-01	5	15 DEC 2014
30-06-01	6	15 DEC 2014
30-06-01	7	15 DEC 2014
30-06-01	8	15 DEC 2014
30-06-01	9	15 DEC 2014
30-06-01	10	15 DEC 2014
30-06-01	11	15 DEC 2014
30-06-01	12	15 DEC 2014
30-06-01	13	15 DEC 2014
30-06-01	14	15 DEC 2014
30-07-01	1	15 DEC 2014
30-07-01	2	15 DEC 2014
30-07-01	3	15 DEC 2014
30-07-01	4	15 DEC 2014
30-07-01	5	01 JAN 2016
30-07-01	6	15 DEC 2014
30-07-01	7	15 DEC 2014
30-07-01	8	15 DEC 2014

CHAPTER 30 - ICE PROTECTION

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
30-07-01	9	15 DEC 2014
30-07-01	10	01 JAN 2016
30-07-01	11	01 JAN 2016
30-07-01	12	01 JAN 2016
30-07-01	13	01 JAN 2016
30-07-01	14	01 JAN 2016
30-07-01	15	01 JAN 2016
30-07-01	16	01 JAN 2016
30-07-01	17	01 JAN 2016
30-07-01	18	15 DEC 2014
30-10-01	1	15 DEC 2014
30-10-01	2	15 DEC 2014
30-10-01	3	15 DEC 2014
30-10-01	4	15 DEC 2014
30-40-01	1	15 DEC 2014
30-40-01	2	15 DEC 2014
30-60-01	1	19 SEP 2017
30-60-01	2	15 DEC 2014
30-60-01	3	15 DEC 2014
30-60-01	4	15 DEC 2014
30-80-01	1	15 DEC 2014
30-80-01	2	15 DEC 2014

EFFECTIVITY:
All

CHAPTER 30 - ICE PROTECTION

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (1 of 8)	30-05-01
BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (2 of 8)	30-05-01
BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (3 of 8)	30-05-01
BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (4 of 8)	30-05-01
BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-0820 (5 of 8)	30-05-01
BASIC Ice Protect System: Distribution - Serials 22-0821 thru 22-1906 (6 of 8)	30-05-01
BASIC Ice Protect System: Distribution - Serials 22-1907 thru 22-2437 (7 of 8)	30-05-01
BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (8 of 8)	30-05-01
BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (1 of 7)	30-06-01
BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (2 of 7)	30-06-01
BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (3 of 7)	30-06-01
BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (4 of 7)	30-06-01
BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (5 of 7)	30-06-01
BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (6 of 7)	30-06-01
BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (7 of 7)	30-06-01
FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (1 of 9)	30-07-01
FIKI Ice Protect System: Distribution - Serials 22-3403-22-3850, 22T-0001-22T-0315 (2 of 9)	30-07-01
FIKI Ice Protect System: Distribution - Serials 22-3851 & subs, 22T-0316 & subs (3 of 9)	30-07-01
FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (4 of 9)	30-07-01
FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (5 of 9)	30-07-01
FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (6 of 9)	30-07-01
FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (7 of 9)	30-07-01
FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (8 of 9)	30-07-01
FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (9 of 9)	30-07-01
Ice Protection System: Airfoil	30-10-01
Ice Protection System: Windshield - Serials 22-3403 & subs, 22T-0001 & subs	30-40-01
Ice Protection System: Propeller - Serials w/ Hartzell Propeller (1 of 2)	30-60-01
Ice Protection System: Propeller - Serials w/ McCauley Propeller (2 of 2)	30-60-01
Ice Protection System: Detection - Serials 22-3403 & subs, 22T-0001 & subs	30-80-01

Intentionally Left Blank

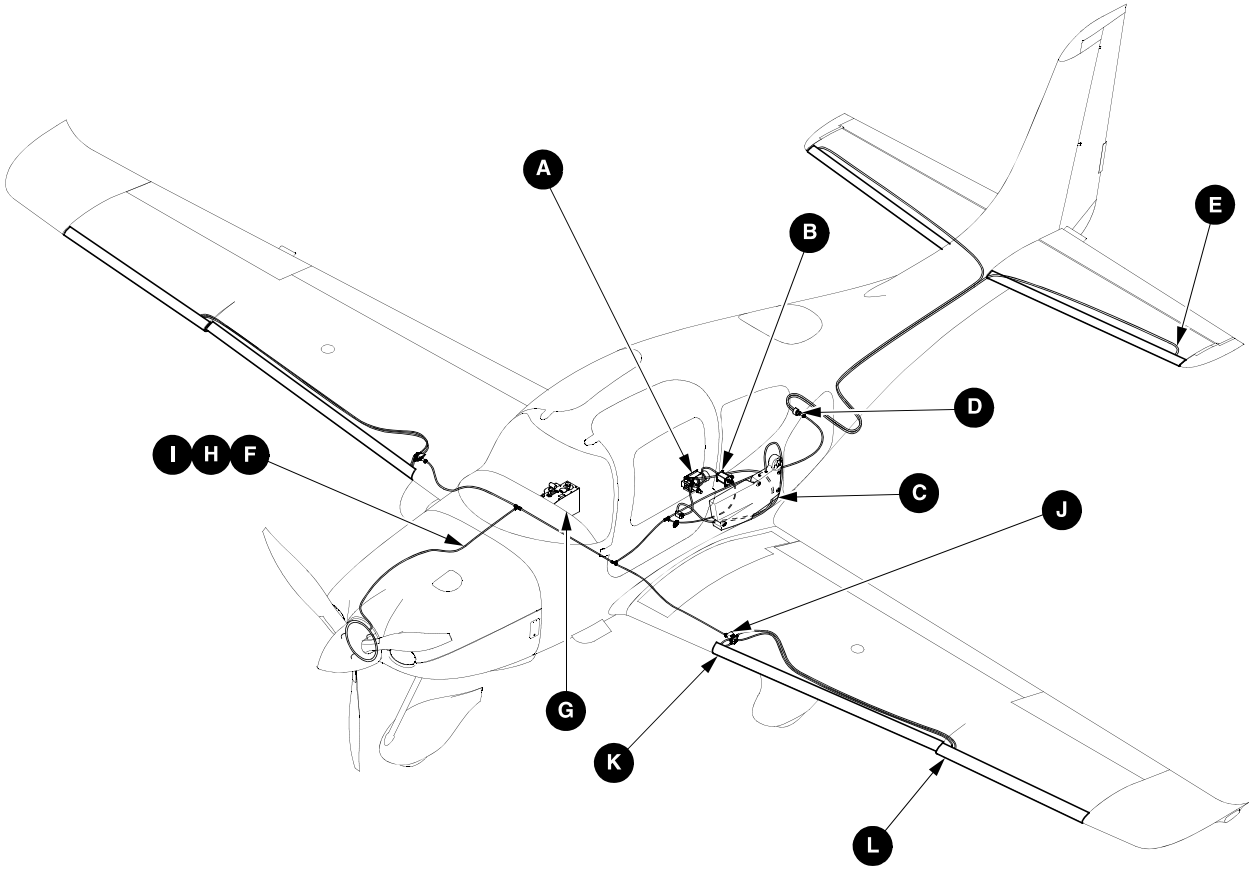

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC30_1363C

Figure-01

BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (1 of 8)

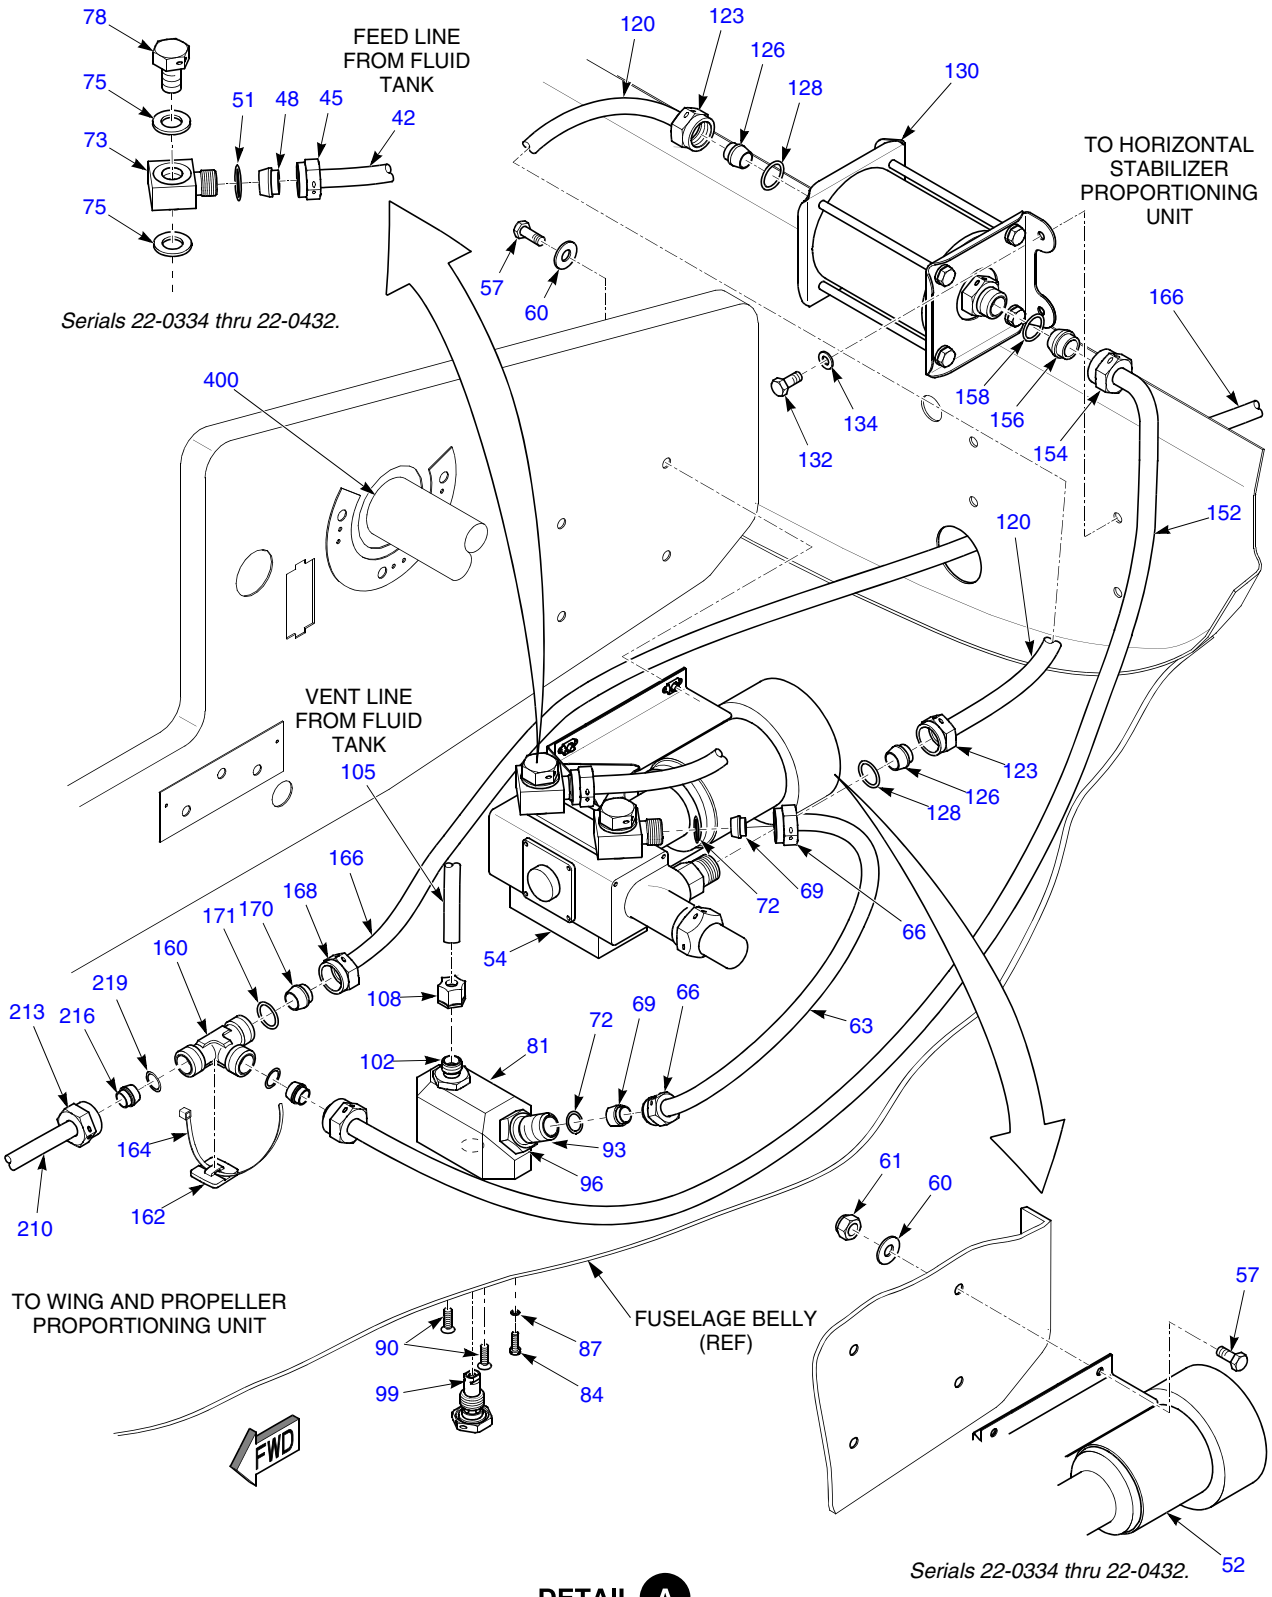

DETAIL A

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC30_1275B

Figure-01

BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (2 of 8)

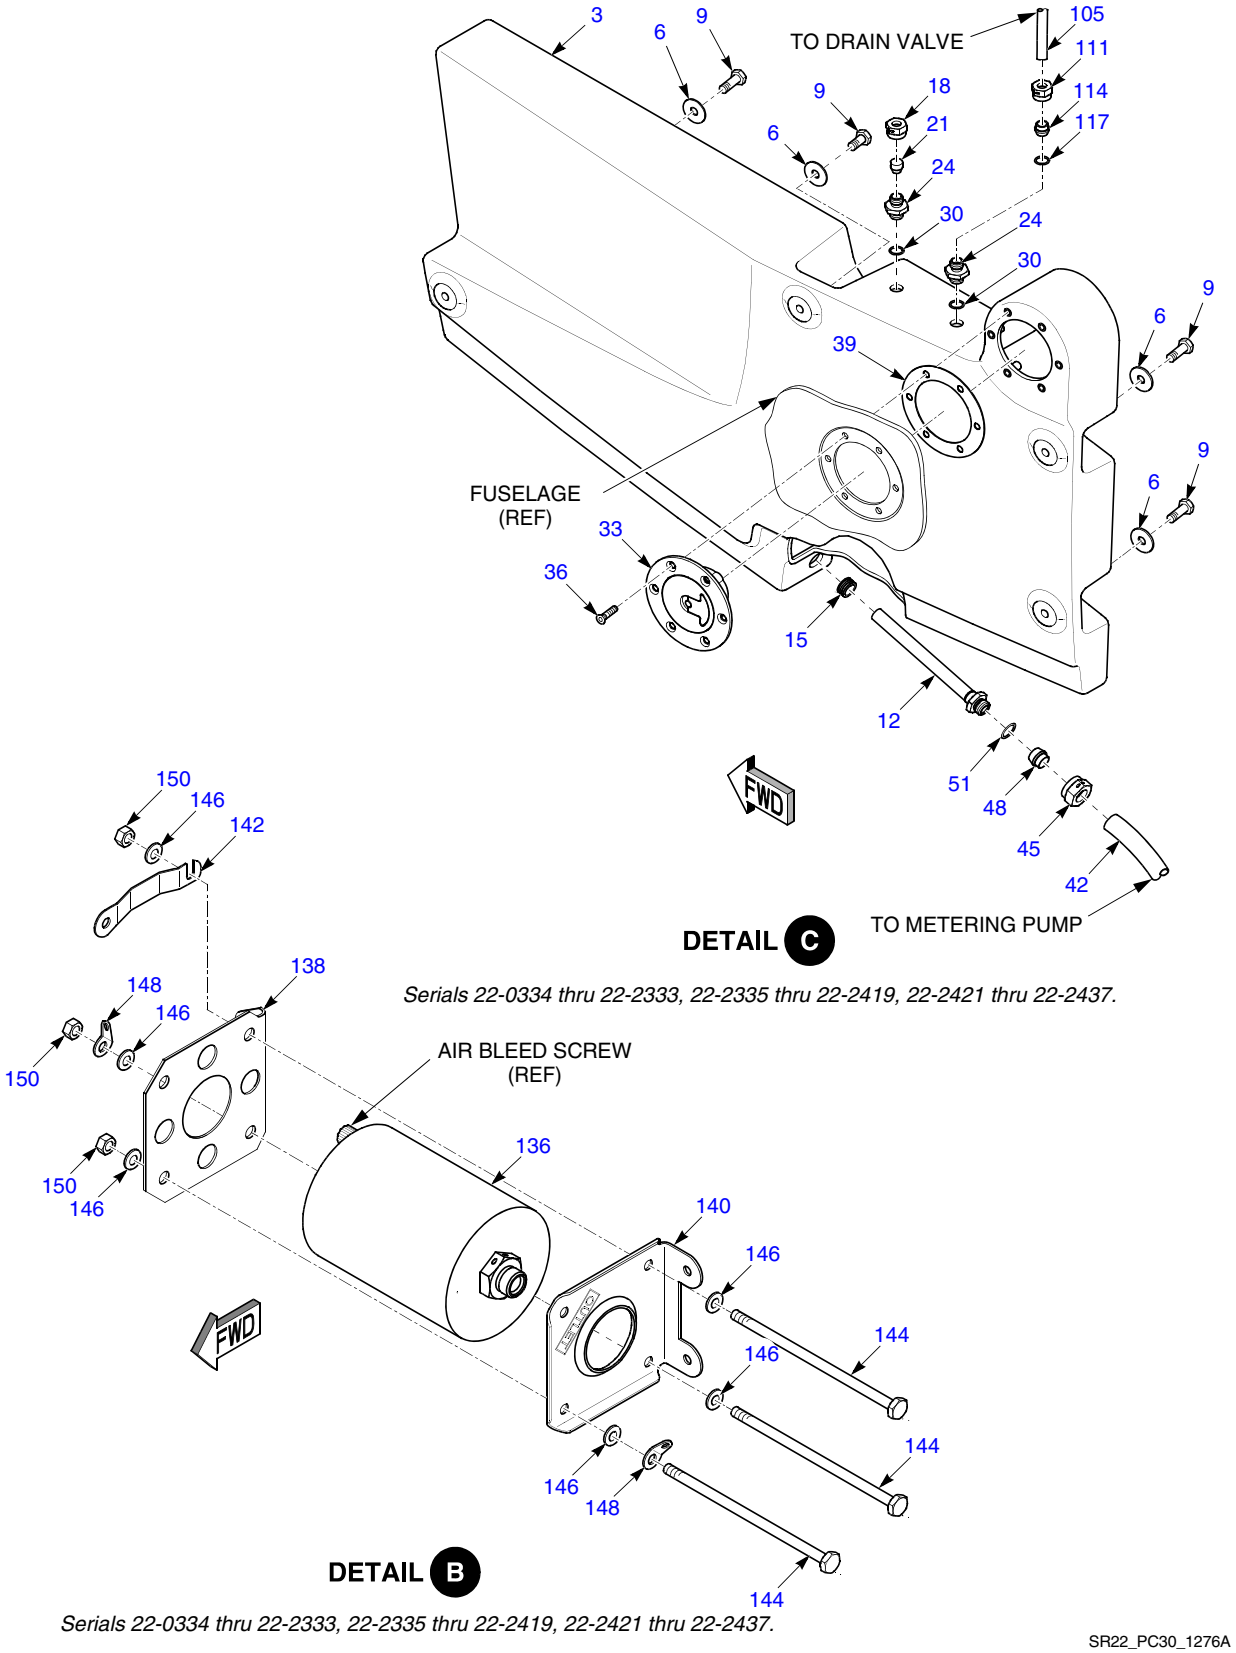

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC30_1276A

Figure-01

BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (3 of 8)

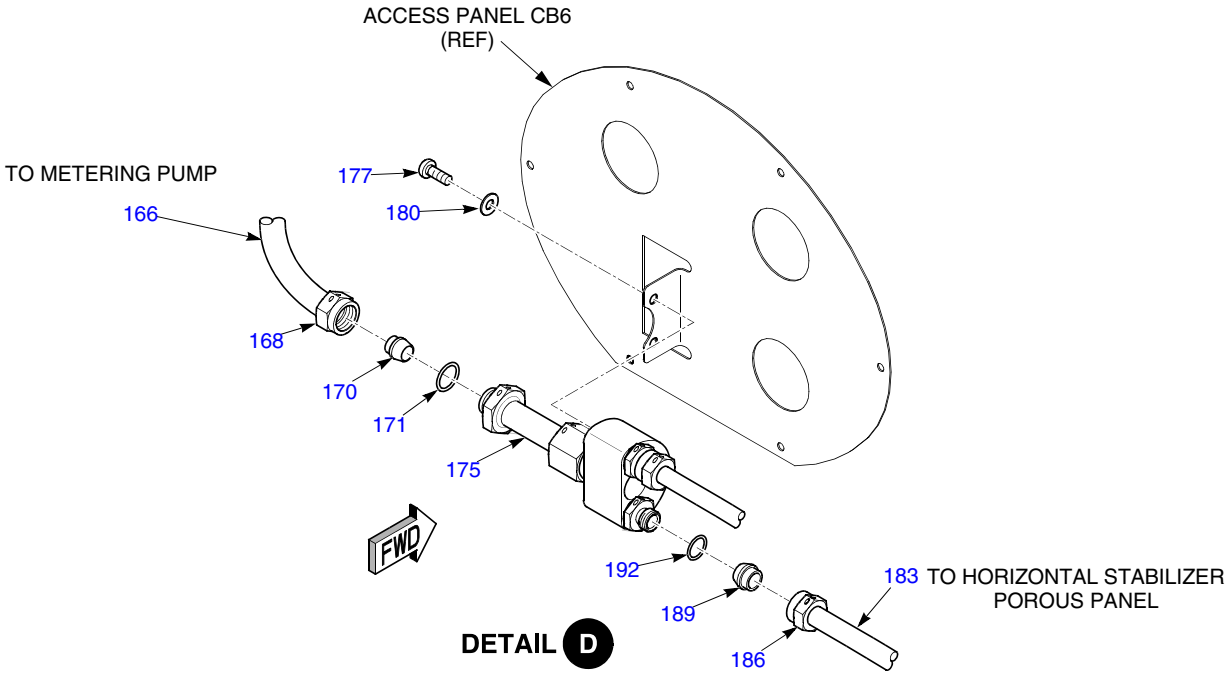

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

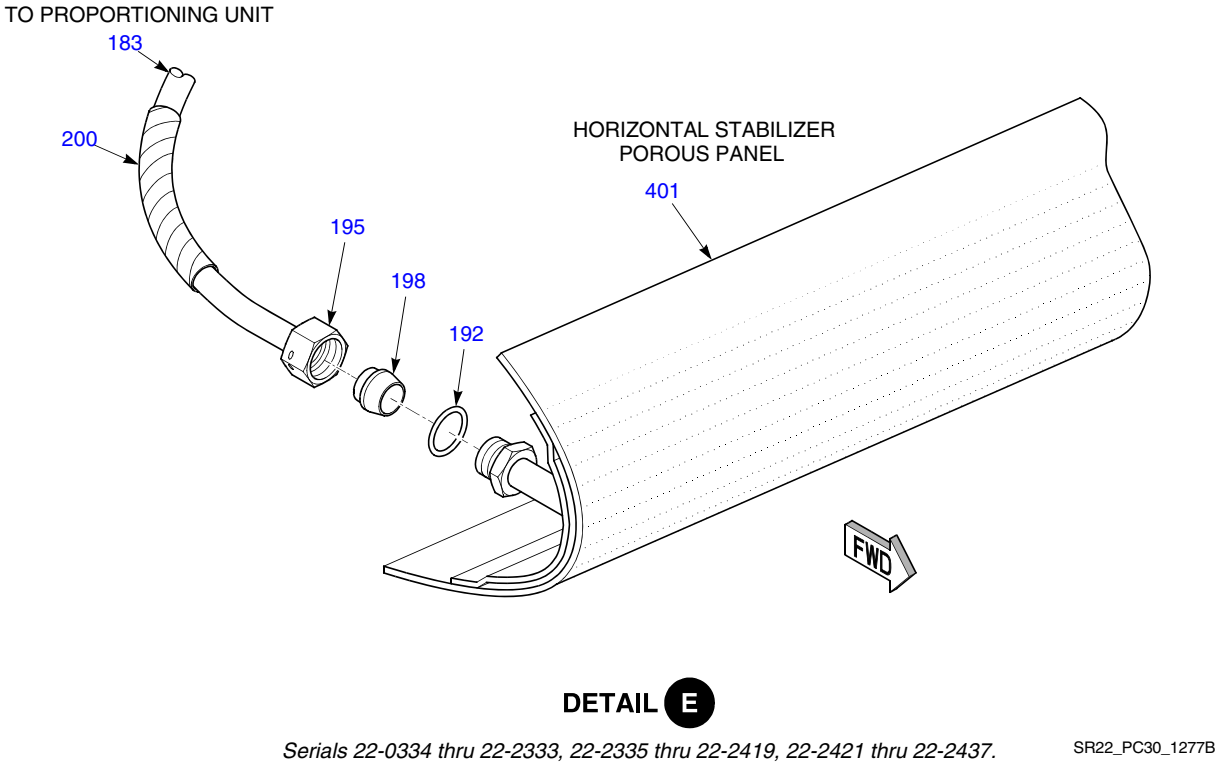

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC30_1277B

Figure-01

BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (4 of 8)

EFFECTIVITY:
Serials 22-0334 thru 22-2437

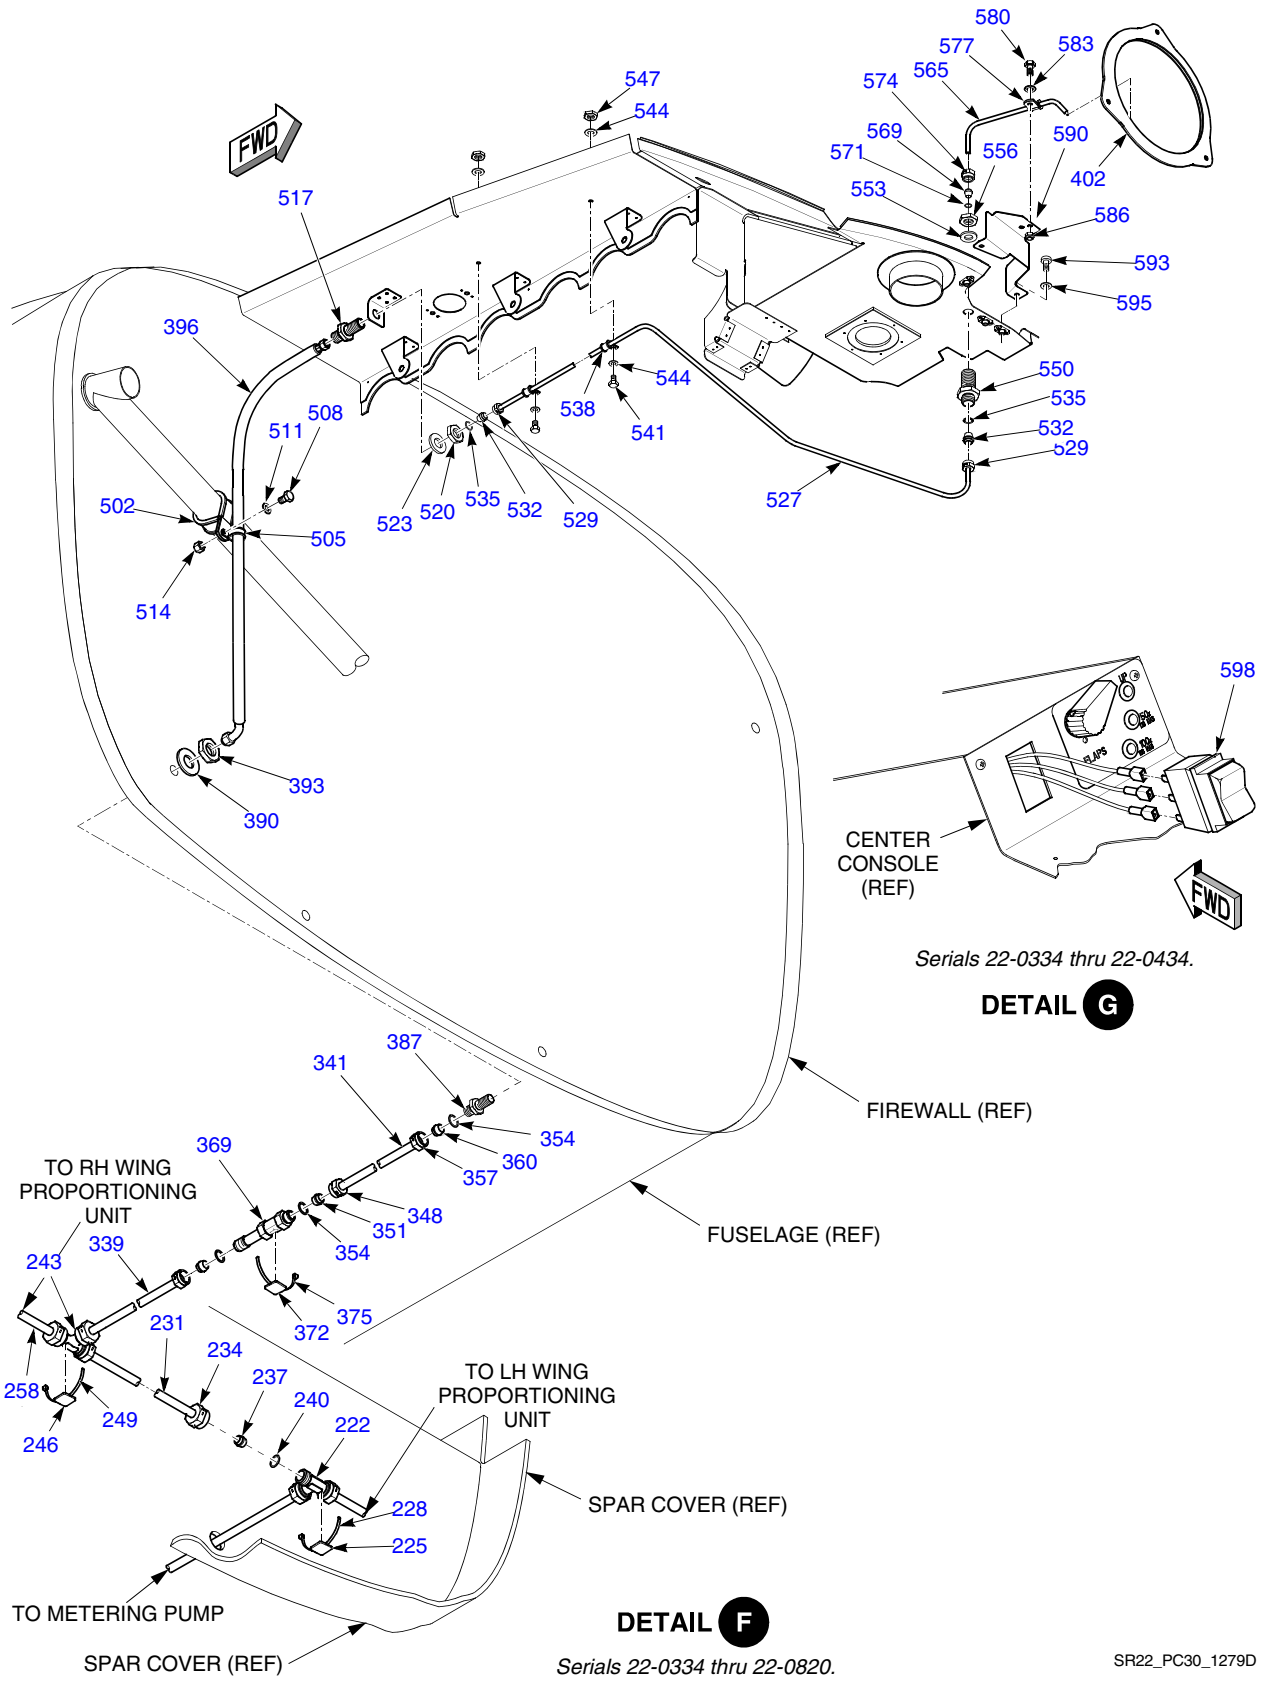

Figure-01

BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-0820 (5 of 8)

EFFECTIVITY:
Serials 22-0334 thru 22-0820

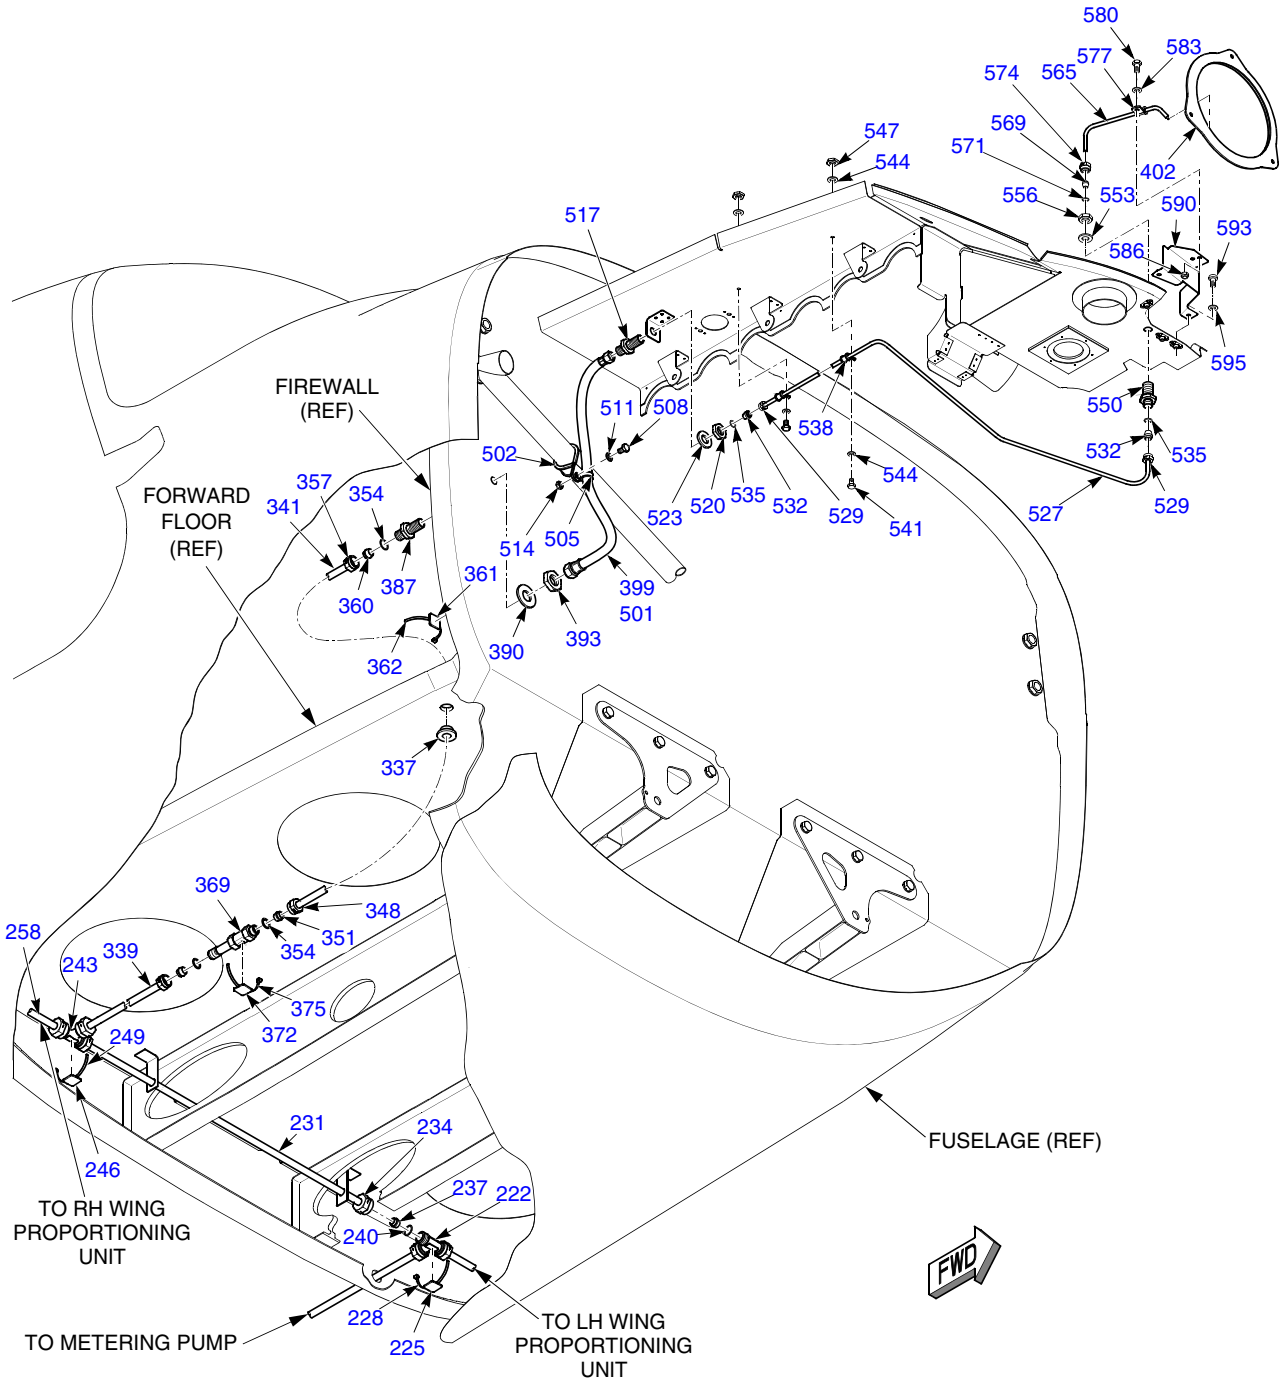

DETAIL H

Serials 22-0821 thru 22-1906.

SR22_PC30_1369A

Figure-01

BASIC Ice Protect System: Distribution - Serials 22-0821 thru 22-1906 (6 of 8)

EFFECTIVITY:
Serials 22-0821 thru 22-1906

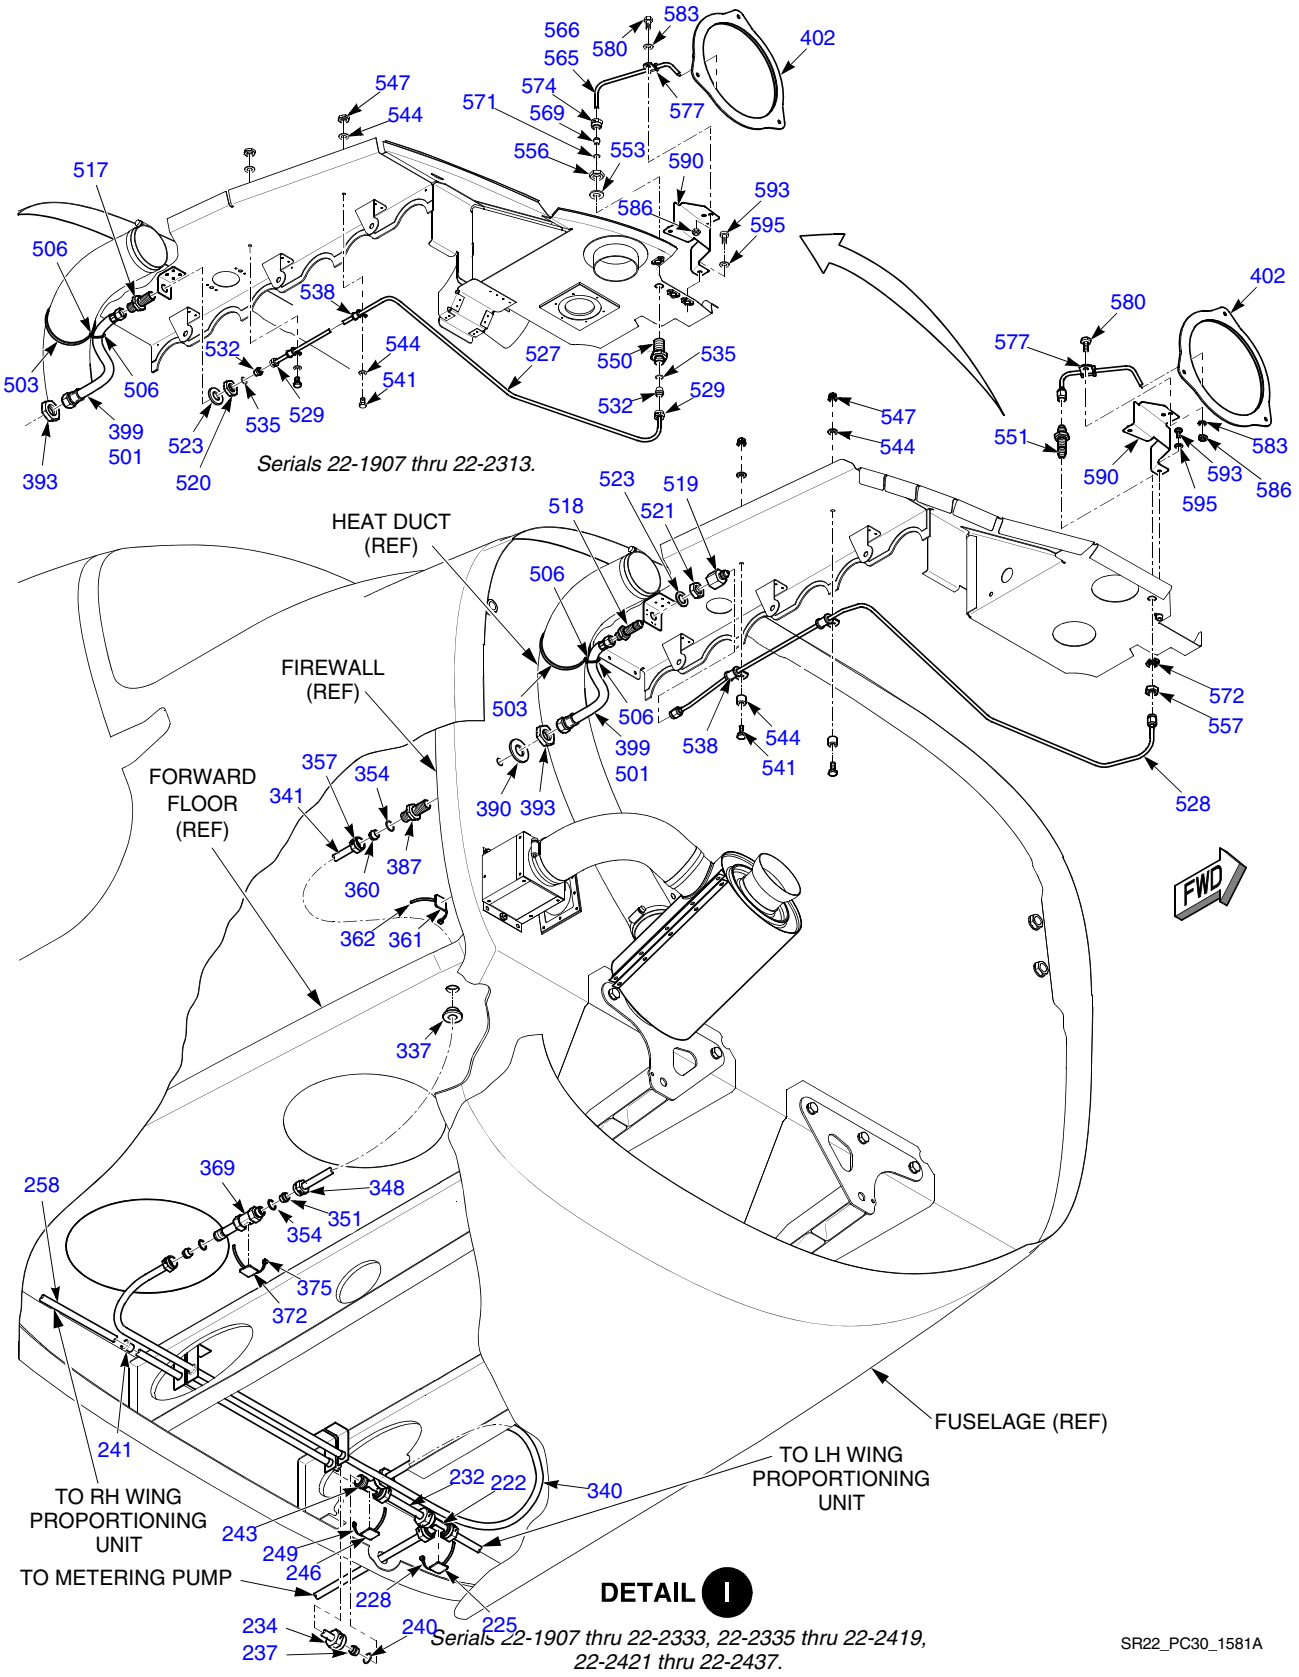

Figure-01

BASIC Ice Protect System: Distribution - Serials 22-1907 thru 22-2437 (7 of 8)

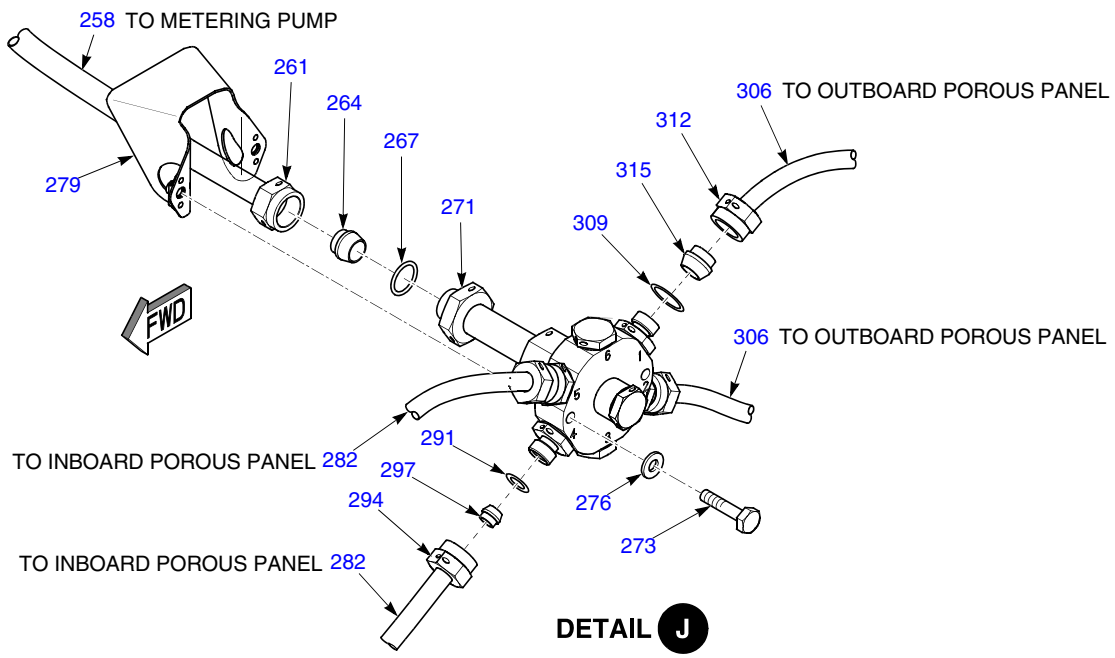

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

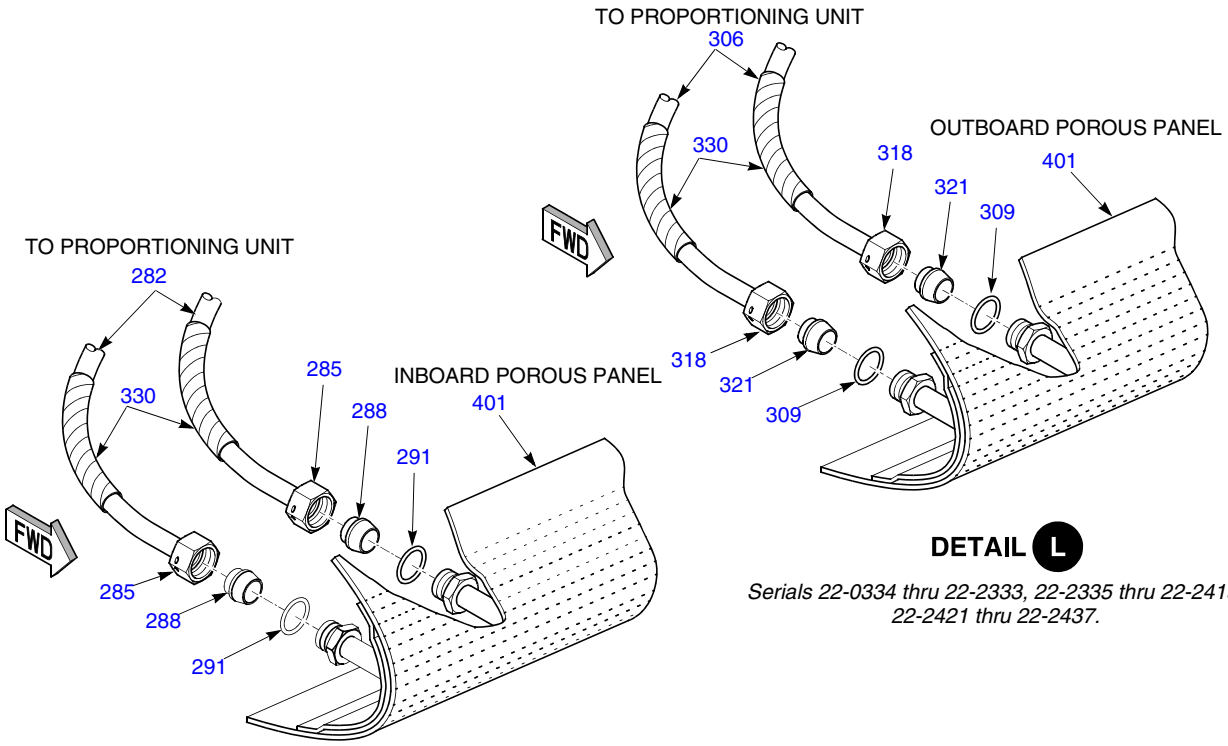

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

Serials 22-0334 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC30_1281B

Figure-01

BASIC Ice Protect System: Distribution - Serials 22-0334 thru 22-2437 (8 of 8)

EFFECTIVITY:
Serials 22-0334 thru 22-2437

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			BASIC ICE PROTECTION SYS INSTL - DISTRIBUTION	0334	2437	NP
-	2	15269-001			·TANK	0334	0395	1
	3	15269-002			·TANK	0396	2437	1
	6	AN3-10A		A	·BOLT	0334	2437	4
	9	AN970-3		A	·WASHER	0334	2437	4
	12	15163-015			·FINGER STRAINER	0334	2437	1
	15	15164-143			·BONDED SEAL	0334	2437	1
	18	15164-002			·NUT	0334	2437	1
	21	15163-021			·PLUG	0334	2437	1
	24	15164-122			·STUD COUPLER	0334	2437	2
-	27	15164-132			·O-RING	0334	2437	2
					ALTERNATE FOR P/N 15164-094			
	30	15164-094			·O-RING	0334	2437	2
					ALTERNATE FOR P/N 15164-132			
	33	15166-001			·FILLER CAP	0334	2437	1
	36	PRT OF ITM 33		A	·SCREW	0334	2437	6
	39	15166-004			··GASKET	0334	2437	1
	42	15135-110			·NYLON TUBE, TANK STRAINER TO PUMP	0334	2437	1
	45	15164-003		A	·NUT	0334	2437	2
	48	15164-023		A	·OLIVE	0334	2437	2
	51	15164-093		A	·O-RING	0334	2437	2
	52	15165-006			·METERING PUMP	0334	0432	1
	54	15165-013			·METERING PUMP	0433	2437	1
	57	AN3-5A		A	·BOLT	0334	2437	4
	60	AN970-3		A	·WASHER	0334	2437	4
	61	MS21044N3		A	·NUT	0334	0432	4
	63	15135-112			·NYLON TUBE, PUMP TO DRAIN BLOCK	0334	2437	1
	66	15164-002		A	·NUT	0334	2437	2
	69	15164-022		A	·OLIVE	0334	2437	2
	72	15164-092		A	·O-RING	0334	2437	2
	73	15164-152			·BANJO FITTING	0334	0432	1
	75	15164-142			·BONDED SEAL	0334	0432	2
	78	15165-012			·BANJO BOLT	0334	0432	1
	81	15401-001			·DRAIN BLOCK	0334	2437	1
	84	AN503-8-8		A	·SCREW	0334	2437	1
	87	AN960-8		A	·WASHER	0334	2437	1
	90	MS2469455		A	·CSK, SCREW	0334	2437	2
	93	15163-013			··STUD COUPLING	0334	2437	1
	96	15164-143			··BONDED SEAL	0334	2437	1
	99	50141-001			··DRAIN VALVE	0334	2437	1
	102	51250-001			··UNION	0334	2437	1
	105	15135-108			·NYLON TUBE, TANK VENT TO DRAIN	0334	2437	1
	108	51246-001		A	·FERRULE NUT, PLASTIC GRIPPER	0334	2437	1
	111	15164-002		A	·NUT	0334	2437	1
	114	15164-022		A	·OLIVE	0334	2437	1
	117	15164-092		A	·O-RING	0334	2437	1
	120	15135-107			·NYLON TUBE, PUMP TO FILTER	0334	2437	1
	123	15164-002		A	·NUT	0334	2437	2
	126	15164-022		A	·OLIVE	0334	2437	2
	128	15164-092		A	·O-RING	0334	2437	2
	130	15165-009			·FILTER	0334	2437	1
	132	AN3-3A		A	·BOLT	0334	2437	4
	134	NAS1149F0332P		A	·WASHER	0334	2437	4
	136	908-1			··FILTER	0334	2437	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	138	908-02			··INLET PLATE	0334	2437	1
	140	908-03			··OUTLET PLATE	0334	2437	1
	142	908-04			··AIR BLEED RETAINER CLIP	0334	2437	1
	144	AN3-41A		A	··BOLT	0334	2437	4
	146	AN960-10		A	··WASHER	0334	2437	8
	148	AS4561-2		A	··SAFETY WIRE TAB	0334	2437	2
	150	AN364-1032		A	··NUT	0334	2437	4
	152	15135-105			·NYLON TUBE, FILTER TO EQUAL TEE	0334	2437	1
	154	15164-002		A	·NUT	0334	2437	2
	156	15164-022		A	·OLIVE	0334	2437	2
	158	15164-092		A	·O-RING	0334	2437	2
	160	15163-009			·EQUAL TEE	0334	2437	1
	162	50132-001		A	·TIE DOWN	0334	2437	1
	164	MS3367-1-9		A	·STRAP, TIE DOWN	0334	2437	1
	166	15135-106			·NYLON TUBE, TEE TO HORIZONTAL PROP UNIT	0334	2437	1
	168	15164-002		A	·NUT	0334	2437	2
	170	15164-022		A	·OLIVE	0334	2437	2
	171	15164-092		A	·O-RING	0334	2437	2
-	174	15165-002			·PROPORTIONING UNIT, HORIZONTAL	0334	2437	1
					FOR SPARES USE P/N 15165-015			
	175	15165-015			·PROPORTIONING UNIT, HORIZONTAL	0334	2437	1
	177	MS27039-1-07		A	·SCREW	0334	2437	2
	180	NAS1149F0332P		A	·WASHER	0334	2437	2
	183	15177-101			·NYLON TUBE, HORIZ PROP UNIT TO HORIZ PANELS	0334	2437	2
	186	15164-001		A	·NUT	0334	2437	2
	189	15164-021		A	·OLIVE	0334	2437	2
	192	15164-091		A	·O-RING	0334	2437	4
	195	15164-011		A	·NUT	0334	2437	2
	198	15164-031		A	·OLIVE	0334	2437	2
-	199	50428-001			·SPIRAL WRAP, CLEAR	0380	2437	AR
					ALTERNATE FOR P/N 50428-002			
	200	50428-002			·SPIRAL WRAP, CLEAR	0380	2437	AR
					ALTERNATE FOR P/N 50428-001			
-	201	MS21266-1N			·GROMMET	0380	2437	AR
-	202	50132-001		A	·TIE DOWN (TUBE RESTRAINT)	0334	2437	10
-	204	MS3367-1-9		A	·STRAP, TIE DOWN, ADJUSTABLE, SELF-CLINCHING	0334	2437	10
-	207	MS35489-22		A	·GROMMET	0334	2437	1
	210	15135-104			·NYLON TUBE, TEE TO TEE	0334	2437	1
	213	15164-002		A	·NUT	0334	2437	2
	216	15164-022		A	·OLIVE	0334	2437	2
	219	15164-092		A	·O-RING	0334	2437	2
	222	15163-009			·EQUAL TEE	0334	2437	1
	225	50132-001		A	·TIE DOWN	0334	2437	1
	228	MS3367-1-9		A	·STRAP, TIE DOWN	0334	2437	1
	231	15135-103			·NYLON TUBE, EQUAL TEE TO UNEQUAL TEE	0334	1906	1
	232	15135-115			·NYLON TUBE, EQUAL TEE TO UNEQUAL TEE	1907	2437	1
	234	15164-002		A	·NUT	0334	2437	2
	237	15164-022		A	·OLIVE	0334	2437	2
	240	15164-092		A	·O-RING	0334	1906	2
	241	51375-001			·BUSHING	1907	2437	4
	243	15163-010			·UNEQUAL TEE	0334	2437	1
	246	50132-001		A	·TIE DOWN	0334	2437	1
	249	MS3367-1-9		A	·STRAP, TIE DOWN	0334	2437	1
-	252	NO PRT NUMBER			·WING POROUS PANEL DISTRIBUTION, LH			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	TO 22 / 22T	UNITS
-	255	NO PRT NUMBER			·WING POROUS PANEL DISTRIBUTION, RH			
	258	15178-103			··NYLON TUBE, TEE TO WING PROP UNIT	0334	2437	1
	261	15164-002		A	··NUT	0334	2437	2
	264	15164-022		A	··OLIVE	0334	2437	2
	267	15164-092		A	··O-RING	0334	2437	2
-	270	15165-007			··PROPORTIONING UNIT, WING	0334	2437	1
					FOR SPARES USE P/N 15165-014			
	271	15165-014			··PROPORTIONING UNIT, WING	0334	2437	1
	273	AN3-7A		A	··BOLT	0334	2437	2
	276	NAS1149F0332P		A	··WASHER	0334	2437	2
	279	15180-001		A	··BRACKET, PROPORTIONING UNIT	0334	2437	1
	282	15178-102			··NYLON TUBE, WING PROP UNIT TO INBD PANEL	0334	2437	2
	285	15164-011		A	··NUT	0334	2437	2
	288	15164-031		A	··OLIVE	0334	2437	2
	291	15164-091		A	··O-RING	0334	2437	4
	294	15164-001		A	··NUT	0334	2437	2
	297	15164-021		A	··OLIVE	0334	2437	2
-	300	50132-001		A	··TIE DOWN (TUBE RESTRAINT)			AR
-	303	MS3367-1-9		A	··STRAP, TIE DOWN, ADJUSTABLE, SELF-CLINCHING			AR
	306	15178-101			··NYLON TUBE, WING PROP UNIT TO OUTBD PANEL	0334	2437	2
	309	15164-091		A	··O-RING	0334	2437	4
	312	15164-001		A	··NUT	0334	2437	2
	315	15164-021		A	··OLIVE	0334	2437	2
	318	15164-011		A	··NUT	0334	2437	2
	321	15164-031		A	··OLIVE	0334	2437	2
-	324	50132-001		A	··TIE DOWN (TUBE RESTRAINT)	0334	2437	AR
-	327	MS3367-1-9		A	··STRAP, TIE DOWN, ADJUSTABLE, SELF-CLINCHING	0334	2437	AR
	330	15178-104			··SPIRAL WRAP, CLEAR	0334	2437	2
-	333	MS21266-1			··GROMMET, PLASTIC, EDGING			AR
-	336	MS35489-150			··GROMMET			1
	337	51050-038			··BUSHING	0821	2437	1
	339	15135-101			·NYLON TUBE, UNEQUAL TEE TO PROP UNIT	0334	1906	2
	340	15135-114			·NYLON TUBE, UNEQUAL TEE TO PROP UNIT	1907	2437	1
	341	15135-113			·NYLON TUBE, PROP UNIT TO FIREWALL	0334	2437	1
-	342	15135-101			·NYLON TUBE, UNEQUAL TEE TO PROPELLER PROP UNIT	0334	0339	1
-	345	15135-102			·NYLON TUBE, PROPELLER PROP UNIT TO FIREWALL	0334	0339	1
	348	15164-001		A	·NUT	0334	2437	3
	351	15164-021		A	·OLIVE	0334	2437	3
	354	15164-091		A	·O-RING	0334	2437	4
	357	15164-011		A	·NUT	0334	2437	1
	360	15164-031		A	·OLIVE	0334	2437	1
	361	50132-001		A	·TIE DOWN	0821	2437	1
	362	MS3367-1-9		A	·STRAP, TIE DOWN	0821	2437	1
-	363	MS21266-1			·GROMMET	0334	2437	1
-	366	15165-010			·PROPORTIONING UNIT, PROPELLER	0334	0339	1
	369	15165-011			·PROPORTIONING UNIT, PROPELLER	0340	2437	1
	372	50132-001		A	·TIE DOWN	0334	2437	1
	375	MS3367-1-9		A	·STRAP, TIE DOWN	0334	2437	1
-	378	15163-014			·BULKHEAD FITTING	0334	0447	1
-	381	15164-111		A	·BULKHEAD NUT	0334	0447	1
-	384	NAS1149D0732K		A	·WASHER	0334	0447	1
	387	15163-024			·BULKHEAD CONNECTOR	0448	2437	
	390	NAS1149F0732K		A	·WASHER	0448	2437	1
	393	15163-025		A	·BACKING NUT	0448	2437	

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	396	15163-006			·HOSE ASSEMBLY	0334	0820	1
	399	15163-027			·HOSE ASSEMBLY	0821	0840	1
-	500	15163-028			·HOSE ASSEMBLY	0841	2437	1
					ALTERNATE FOR P/N 53289-001			
	501	53289-001			·HOSE ASSEMBLY	0841	2437	1
					ALTERNATE FOR P/N 15163-028			
	502	MS21919WDG24		A	·CLAMP	0334	1906	1
	503	MS53367-2-0			·STRAP	1907	2437	AR
	505	MS21919WDG14		A	·CLAMP	0334	1906	1
	506	50964-015			·CABLE TIE	1907	2437	AR
	508	AN3-3A		A	··BOLT	0334	2437	1
	511	NAS1149F0332P		A	··WASHER	0334	2437	1
	514	MS21044N3		A	··NUT	0334	2437	1
-	517	15163-012			·BULKHEAD CONNECTOR	0334	2313	1
	518	AN832-4J			·BULKHEAD CONNECTOR	2314	2437	1
	519	51817-001			·REDUCER	2314	2437	1
	520	15164-111		A	·BULKHEAD NUT	0334	2313	1
	521	AN924-4J		A	·BULKHEAD NUT	2314	2437	1
	523	NAS1149D0732K		A	·WASHER	0334	2437	1
					ALTERNATE FOR P/N AN970-6			
-	524	AN970-6		A	·WASHER	0334	2437	1
					ALTERNATE FOR P/N NAS1149D0732K			
-	526	15333-001			·FLUID LINE ASSEMBLY	0334	0692	1
	527	15333-002	$		·FLUID LINE ASSEMBLY	0693	2313	1
					FOR SPARES USE P/N 15333-003			
	528	15333-003			·FLUID LINE ASSEMBLY	2314	2437	1
	529	15164-011		A	·NUT	0334	2437	2
	532	15164-031		A	·OLIVE	0334	2437	2
	535	15164-091		A	·O-RING	0334	2437	2
	538	MS21919WDG3		A	·CLAMP	0334	2437	2
	541	AN3-4A		A	·BOLT	0650	2437	2
	544	NAS1149F0332P		A	·WASHER	0334	2437	4
	547	MS21045-3		A	·NUT	0650	2437	2
	550	15163-011			·BULKHEAD CONNECTOR	0334	2313	1
	551	AN832-3J			·BULKHEAD CONNECTOR	2314	2437	1
	553	NAS1149D0732K		A	·WASHER	0334	2437	1
					ALTERNATE FOR P/N AN970-6			
-	554	AN970-6		A	·WASHER	0334	2437	1
					ALTERNATE FOR P/N NAS1149D0732K			
	556	15164-111		A	·BULKHEAD NUT	0334	2313	1
	557	AN924-3J		A	·BULKHEAD NUT	2314	2437	1
-	562	15388-001			·FEED TUBE, SLINGER RING, HARTZELL	0334	0365	1
	565	15388-002	#		·FEED TUBE, SLINGER RING, HARTZELL	0366	2313	1
					FOR SPARES USE P/N 15388-003			
	566	15388-003			·FEED TUBE, SLINGER RING, HARTZELL	2314	2437	1
-	567	15798-003			·FEED TUBE, SLINGER RING, MCCAULEY	0656	0685	1
-	568	15798-004			·FEED TUBE, SLINGER RING, MCCAULEY	0686	2437	1
	569	15164-031		A	·OLIVE	0366	2437	1
	571	15164-091		A	·O-RING	0334	2313	1
	572	NAS1149D0632K		A	·WASHER	2314	2437	1
	574	15164-011		A	·NUT	0334	2437	1
	577	MS21919WDG3		A	·CLAMP	0334	2437	1
	580	AN3-3A		A	·BOLT	0334	2437	1
	583	NAS1149F0332P		A	·WASHER	0334	2437	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	586	MS21044N3		A	·NUT	0334	2437	1
-	589	15373-001			·BRACKET, SLINGER RING SPRAYER, HARTZELL	0340	0820	1
	590	15373-002			·BRACKET, SLINGER RING SPRAYER, MCCAULEY	0821	2437	1
-	591	15373-003			·BRACKET, SLINGER RING SPRAYER, HARTZELL	0821	2437	1
					FOR SPARES USE P/N 15373-002			
-	592	15373-004			·BRACKET, SLINGER RING SPRAYER, MCCAULEY	0821	2437	1
					FOR SPARES USE P/N 15373-002			
	593	MS27039-0806		A	·SCREW	0340	2437	2
	595	NAS1149FN832P		A	·WASHER	0340	2437	2
	598	51236-001	@		·SWITCH	0334	0434	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 27-50-01 DET			FLAP SYSTEM INSTALLATION			
	401	RF 30-10-01 DET			ICE PROTECTION SYSTEM INSTL - AIRFOIL			
	402	RF 30-60-01 DET			ICE PROTECTION SYSTEM INSTL - PROPELLER			
					SYMBOL NOTES:			
			@		LOCATED ON CENTER CONSOLE. REFERENCE 39-10-02 FOR SWITCH LOCATION IN BOLSTER PANEL.			
			#		WHEN 15388-003 USED AS SPARE, MUST ALSO USE 15333-003, AN832-3J, AN832-4J, 51817-001, AN924-3J, AN924-4J AND NAS1149D0632K.			
			$		WHEN 15333-003 USED AS SPARE, MUST ALSO USE 15388-003, AN832-3J, AN832-4J, 51817-001, AN924-3J, AN924-4J AND NAS1149D0632K.			

Intentionally Left Blank

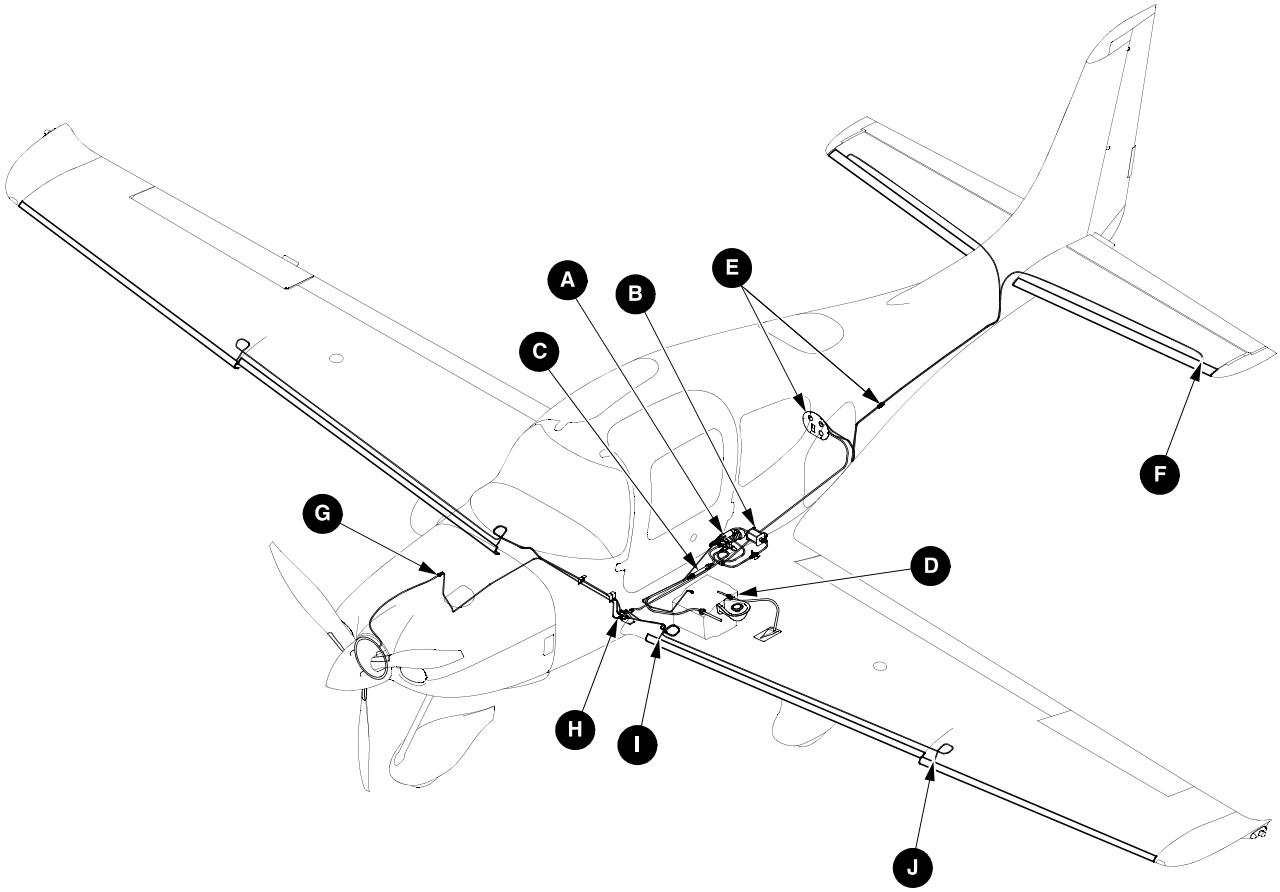

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs w/ TKS Ice Protection.

SR22_PC30_1626C

Figure-01

BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (1 of 7)

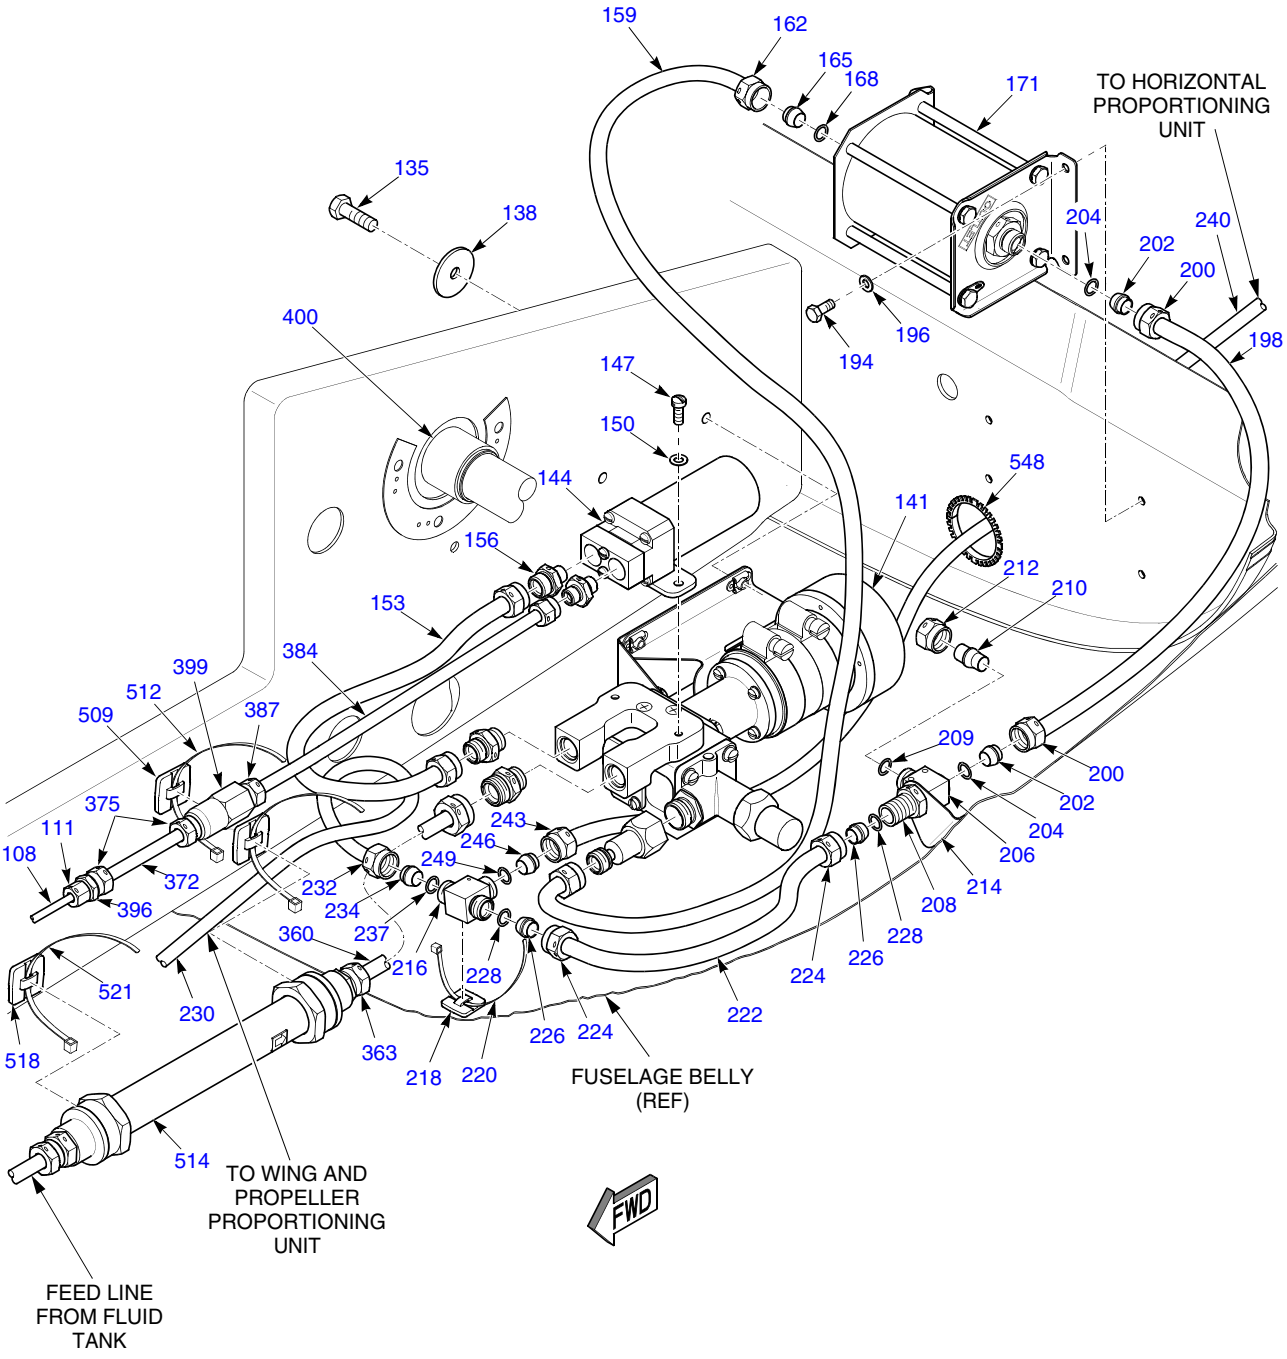

DETAIL A

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs w/ TKS Ice Protection. SR22_PC30_1628D

Figure-01

BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (2 of 7)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

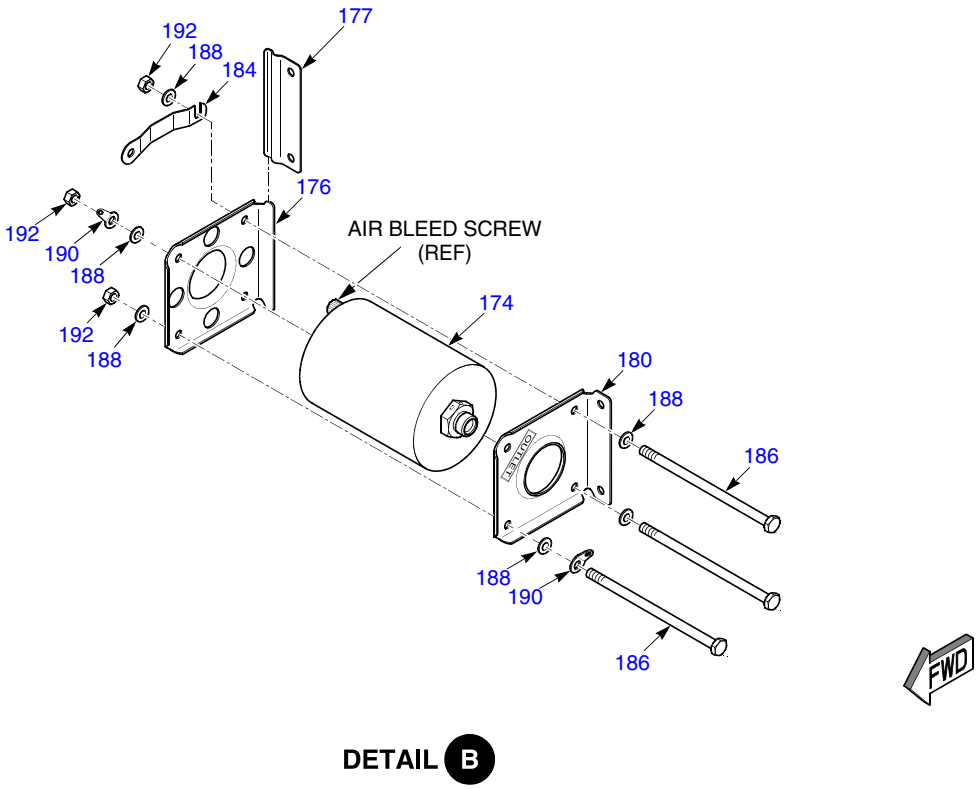

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs w/ TKS Ice Protection.

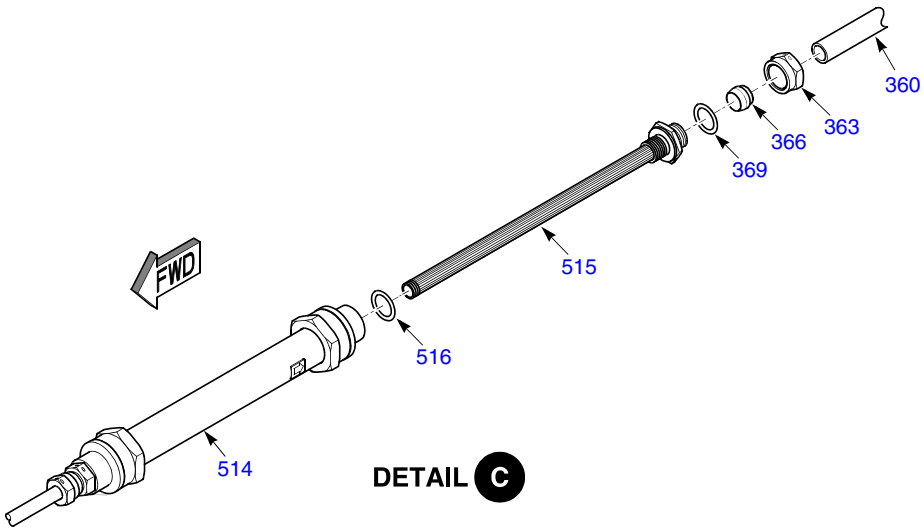

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs w/ TKS Ice Protection.

SR22_PC30_1910A

Figure-01

BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (3 of 7)

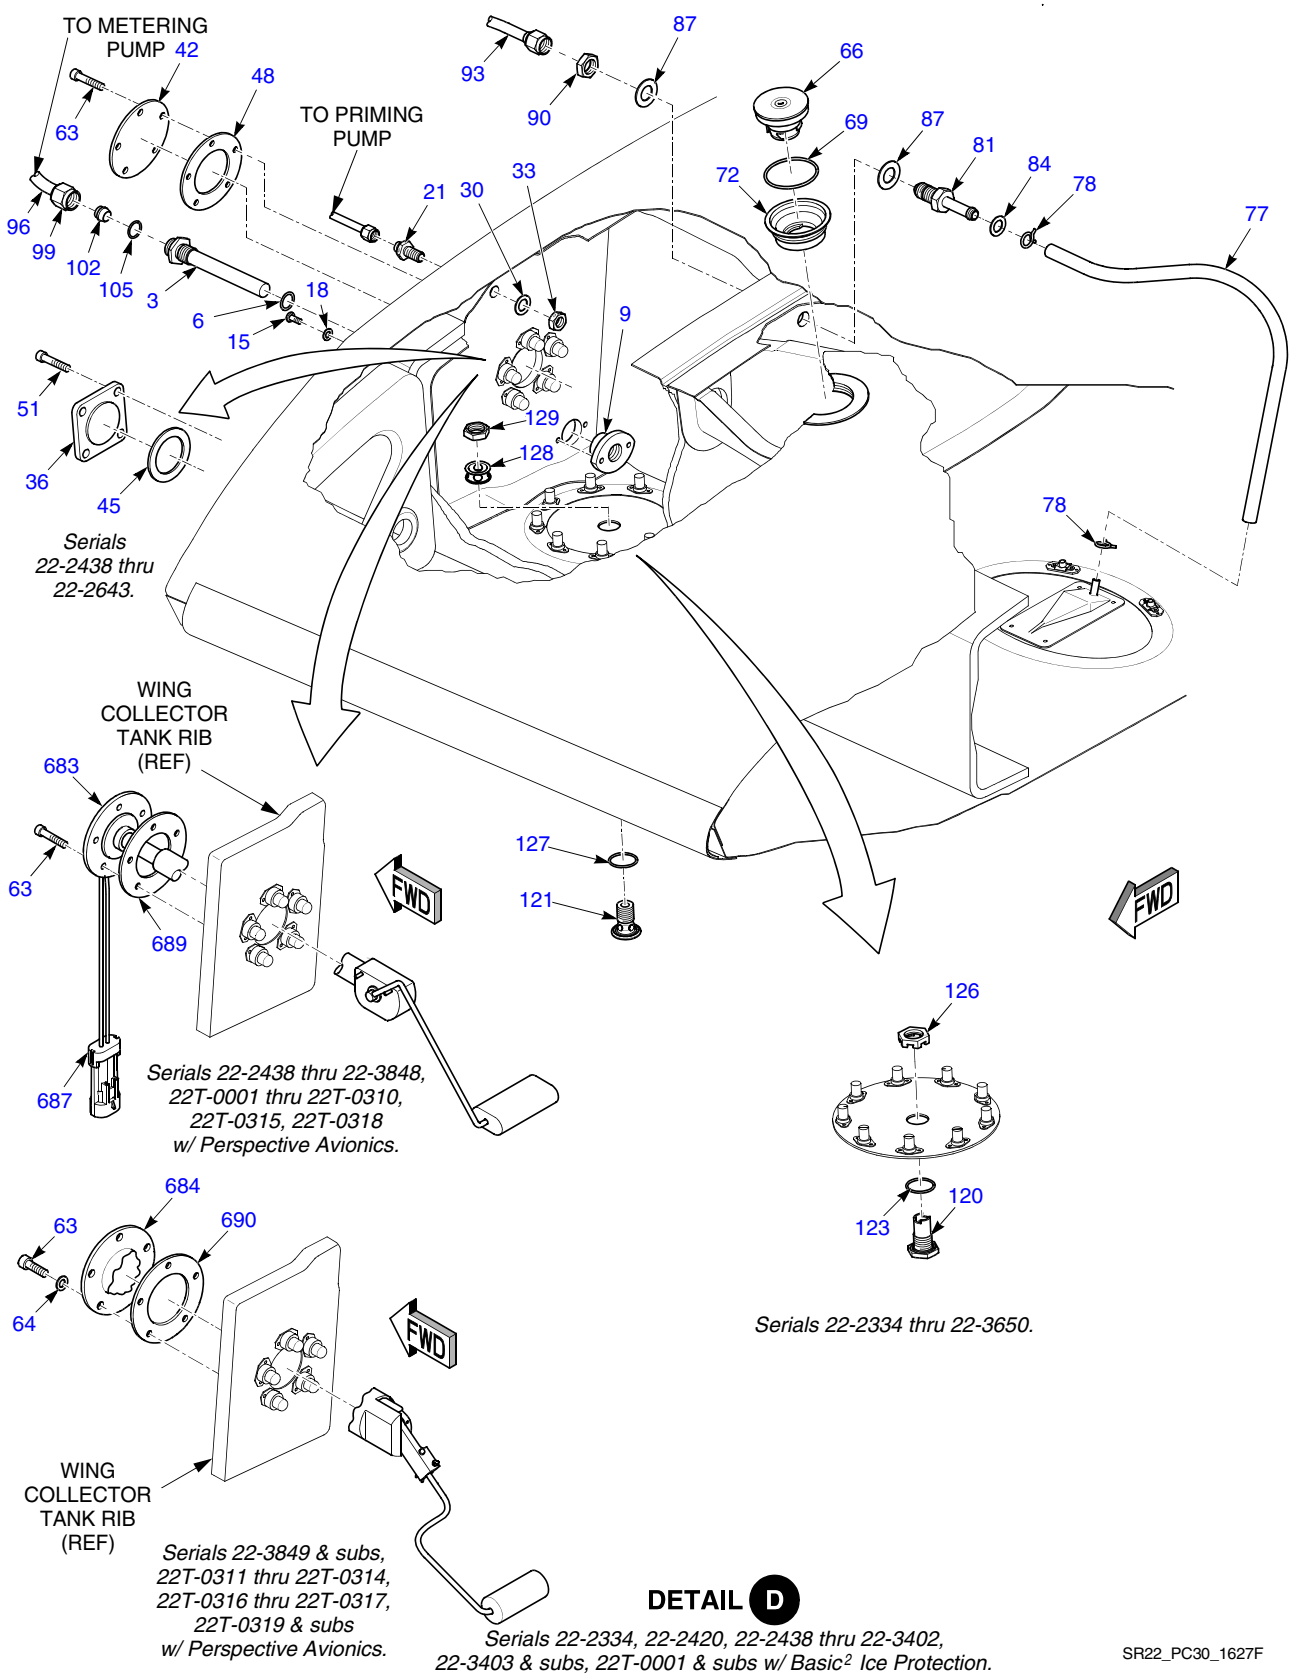

Figure-01

BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (4 of 7)

EFFECTIVITY:
All

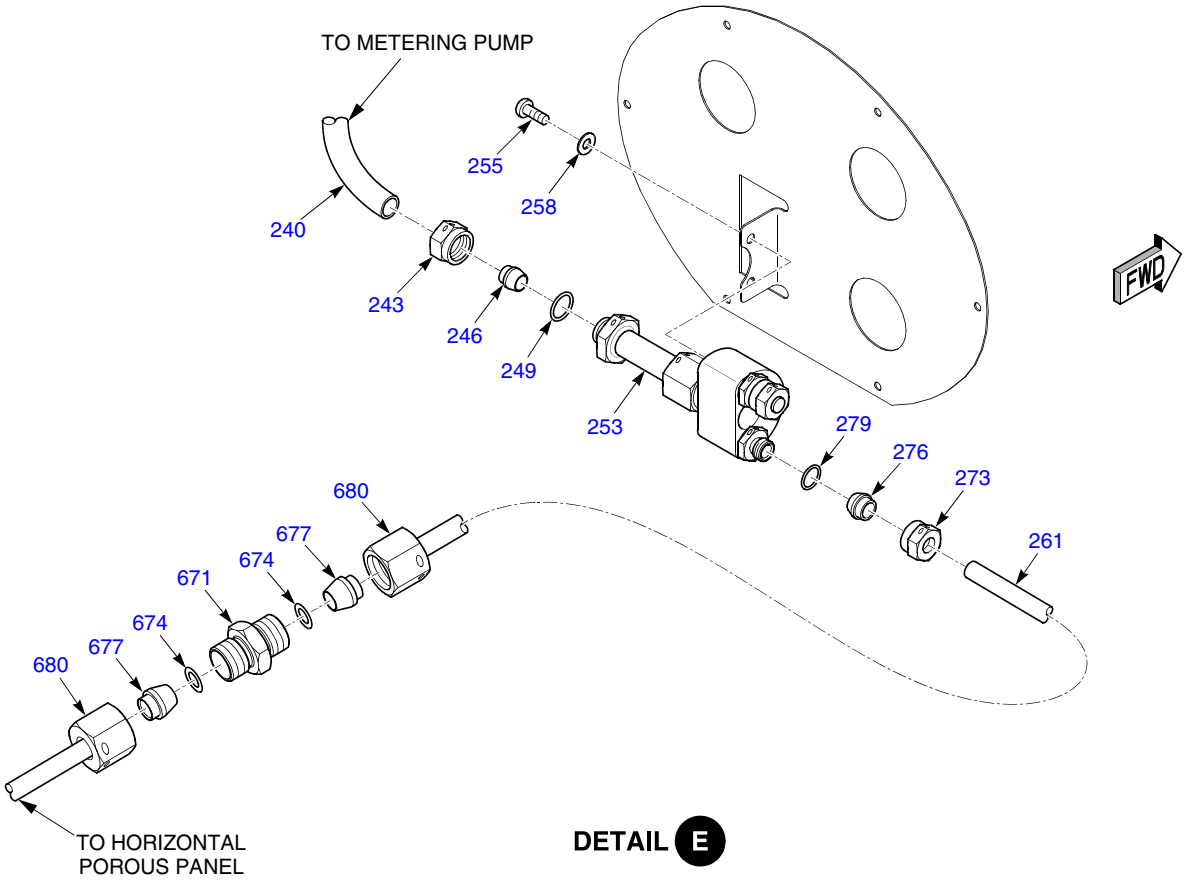

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs w/ TKS Ice Protection.

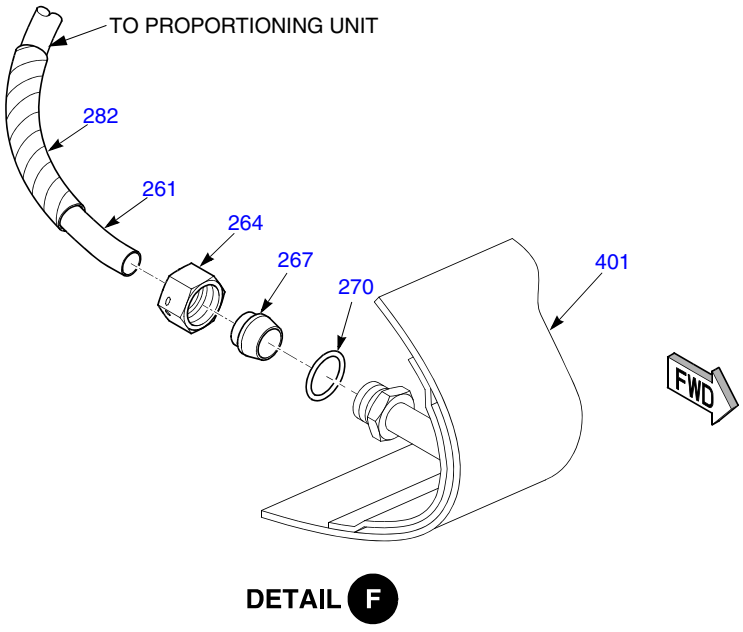

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs w/ TKS Ice Protection. SR22_PC30_1704B

Figure-01

BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (5 of 7)

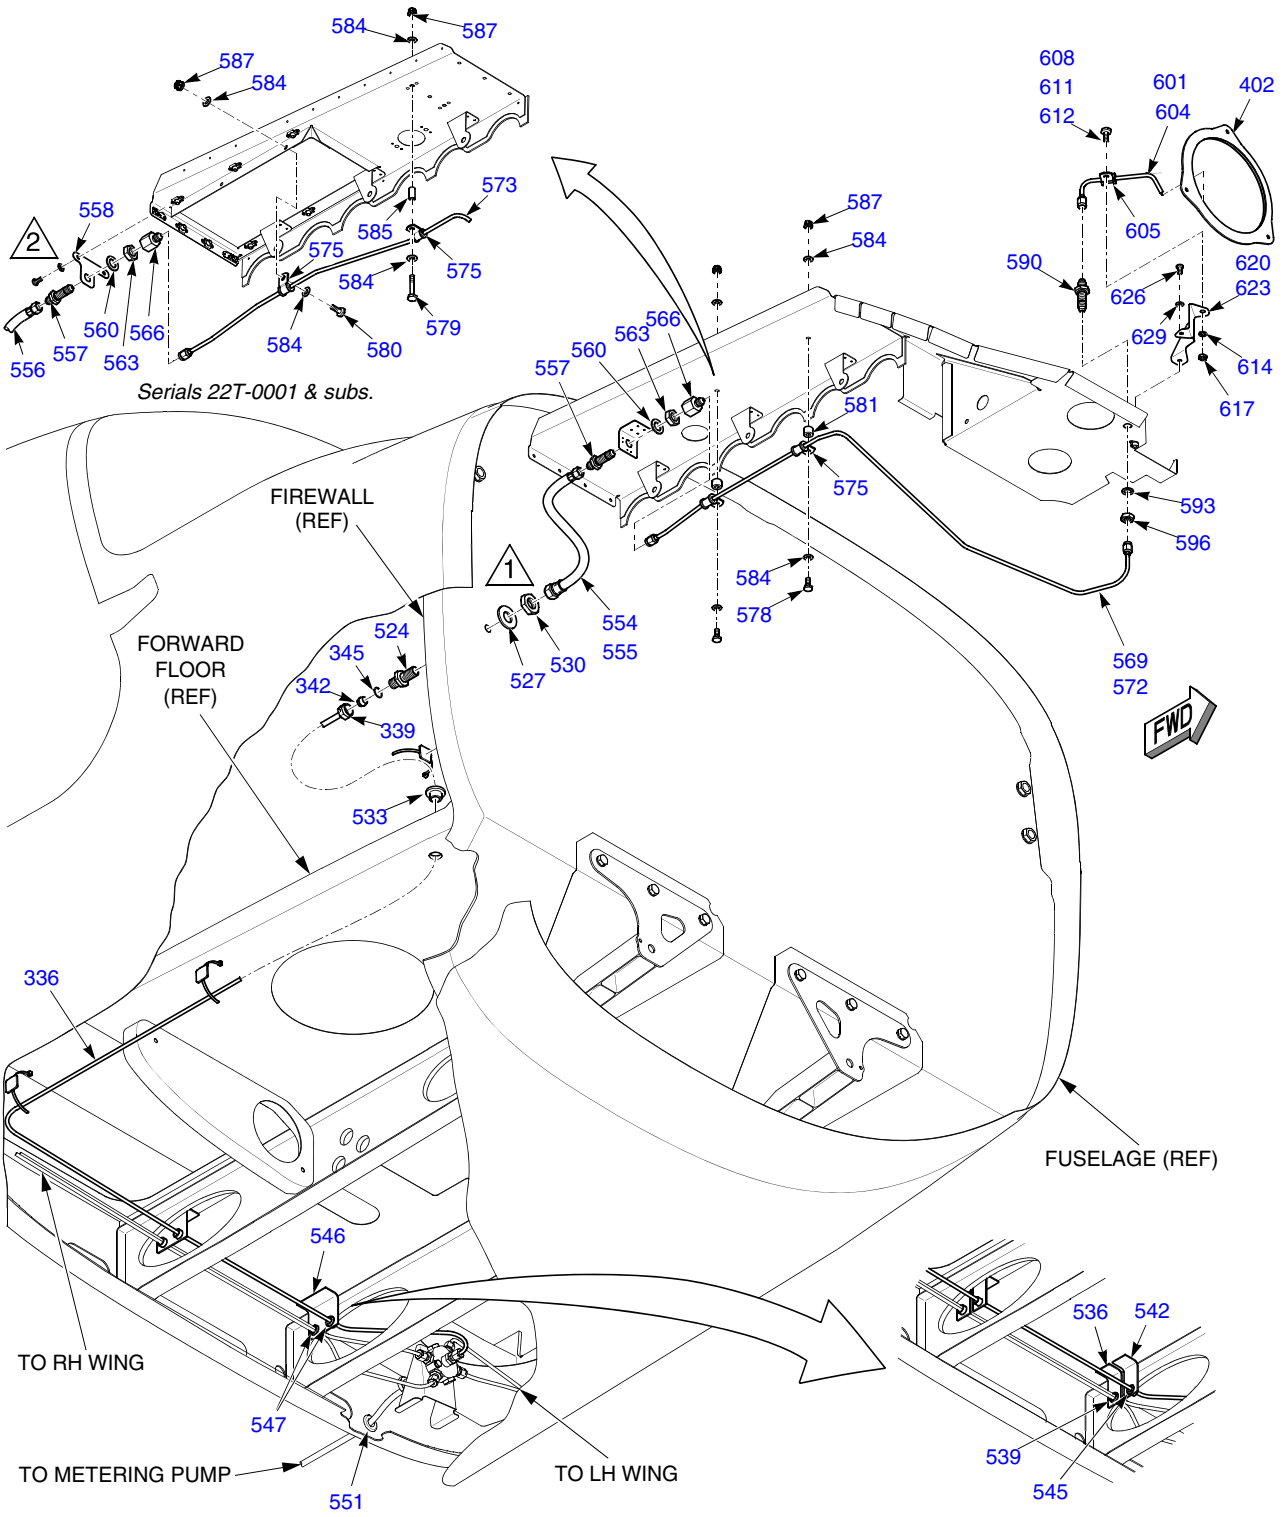

NOTE

1. Cover exposed metal of bulkhead fitting with RTV Sealant.
2. Existing hardware part of baffle assembly.

Serials 22-2334, 22-2420, 22-2438 thru 22-3843, 22T-0001 thru 22T-0314.

DETAIL G

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs w/ TKS Ice Protection.

SR22_PC30_1630E

Figure-01

BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (6 of 7)

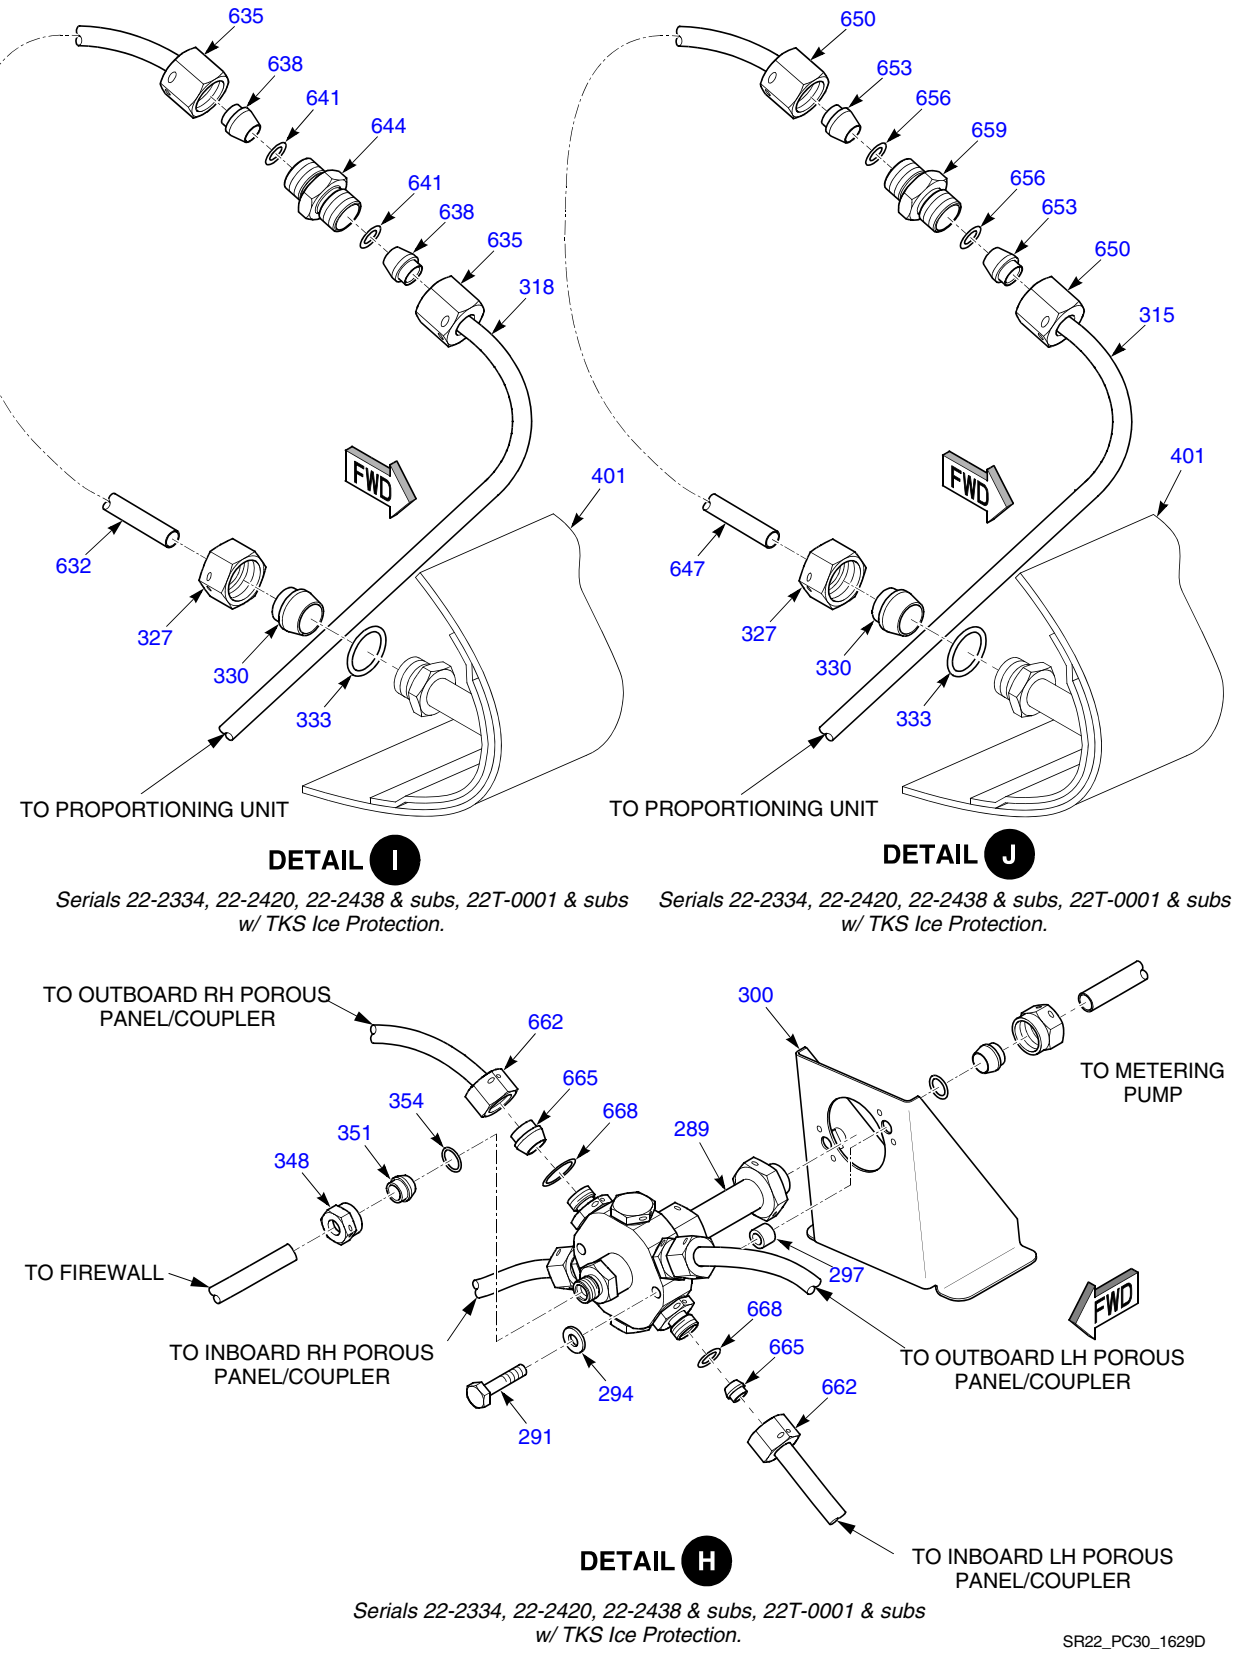

Figure-01

BASIC2 Ice Protect System: Distribution - Serials 22-2438 & subs, 22T-0001 & subs (7 of 7)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		BASIC2 ICE PROTECTION SYS INSTL - DISTRIBUTION	2438 / 0001	/	NP
	3	18354-001			·FINGER STRAINER	2438 / 0001	/	1
	6	AS3582-112			·O-RING	2438 / 0001	/	1
	9	17387-001			·BUSHING	2438 / 0001	/	1
-	12	18773-001	#		·PLUG	2544 / 0001	/	1
	15	MS35207-263		A	·SCREW	2438 / 0001	/	2
	18	NAS620C10L		A	·WASHER	2438 / 0001	/	2
	21	17386-001		A	·FITTING	2438 / 0001	/	1
-	24	15164-061	#		·BLANKING PLUG	2544 / 0001	/	1
-	27	15164-001	#	A	·NUT	2544 / 0001	/	1
	30	NAS1149D0732K		A	·WASHER	2438 / 0001	/	1
	33	15164-101		A	·NUT	2438 / 0001	/	1
	36	18183-001	@		·PLATE	2438	2643	1
					ALTERNATE FOR P/N 18183-002			
-	39	18183-002	@		·PLATE	2438	2643	1
					ALTERNATE FOR P/N 18183-001			
	42	19488-001			·PLATE	2644 / 0001	/	1
	45	18184-001			·GASKET	2438	2643	1
	48	19489-001			·GASKET	2644 / 0001	/	1
	51	NAS1351-4-20P		A	·SCREW	2438	2643	4
					ALTERNATE FOR P/N AN4-12A			
-	54	AN4-12A		A	·SCREW	2438	2643	4
					ALTERNATE FOR P/N NAS1351-4-20P			
-	57	NAS1351-4-16P		A	·SCREW	2438	2643	4
					ALTERNATE FOR P/N AN4-10A			
-	60	AN4-10A		A	·SCREW	2438	2643	4
					ALTERNATE FOR P/N NAS1351-4-16P			
	63	NAS1351-3-16P		A	·SCREW	2644 / 0001	/	5
	64	NAS1149D0332K		A	·WASHER	3849 / 0319	/	5
	66	18052-001			·FILLER CAP	2438 / 0001	/	1
	69	PRT OF ITM 66			··O-RING	2438 / 0001	/	1
	72	PRT OF ITM 66			··RING	2438 / 0001	/	1
-	75	17380-105			·NYLON TUBE, GLYCOL VENT	2420	2420	1
						2334	2334	1
-	76	18690-105			·NYLON TUBE, GLYCOL VENT	2438 / 0001	3682 / 0030	1
					FOR SPARES USE P/N 18690-115			
	77	18690-115			·NYLON TUBE, GLYCOL VENT	3683 / 0031	/	1
	78	50566-050		A	·CLAMP	2438 / 0001	/	2
	81	AN807-6D			·FITTING	2438 / 0001	/	1
	87	NAS1149D0932K		A	·WASHER	2438 / 0001	/	2
	90	AN924-6D		A	·NUT	2438 / 0001	/	1
	93	17383-001			·TUBE ASSEMBLY, GLYCOL VENT	2438 / 0001	/	1
	96	17350-101			·NYLON TUBE, TANK STRAINER TO METERING PUMP	2438 / 0001	/	1
	99	15164-003		A	·NUT	2438 / 0001	/	2
	102	15164-023		A	·OLIVE	2438 / 0001	/	2
	105	15164-093		A	·O-RING	2438 / 0001	/	2
	108	17350-106			·NYLON TUBE, PRIMING PUMP TO TANK RETURN	2438 / 0001	/	1
	111	15164-001		A	·NUT	2438 / 0001	/	2
-	114	15164-021		A	·OLIVE	2438 / 0001	/	2
-	117	15164-091		A	·O-RING	2438 / 0001	/	2
	120	17384-001			·DRAIN VALVE	2438	3650	1
					FOR SPARES USE P/N 26613-001			
	121	26613-001			·DRAIN VALVE	3651 / 0001	/	1
	123	PRT OF ITM 120		A	··O-RING	2438	3650	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	126	PRT OF ITM 120		A	··NUT	2438	3650	1
	127	PRT OF ITM 121		A	··O-RING	3651 / 0001	/	1
	128	PRT OF ITM 121		A	··SPACER	3651 / 0001	/	1
	129	PRT OF ITM 121		A	··NUT	3651 / 0001	/	1
-	130	17351-001			·PUMP ASSEMBLY	2438	3293	1
-	132	17351-002			·PUMP ASSEMBLY	3294 / 0001	/	1
	135	AN3-5A		A	·BOLT	2438 / 0001	/	4
	138	AN970-3		A	·WASHER	2438 / 0001	/	4
	141	17351-102			··METERING PUMP	2438 / 0001	/	1
	144	17351-103			··PRIMING PUMP	2438 / 0001	/	1
	147	PRT OF ITM 130		A	··SCREW	2438 / 0001	/	2
	150	PRT OF ITM 130		A	··WASHER	2438 / 0001	/	2
	153	17351-104			··TUBE	2438 / 0001	/	1
	156	PRT OF ITM 130		A	··FITTING	2438 / 0001	/	4
	159	17350-103			·NYLON TUBE, PUMP TO FILTER	2438 / 0001	/	1
	162	15164-002		A	·NUT	2438 / 0001	/	2
	165	15164-022		A	·OLIVE	2438 / 0001	/	2
	168	15164-092		A	·O-RING	2438 / 0001	/	2
-	170	15165-009			·FILTER ELEMENT ASSEMBLY	2438 / 0001	3843 / 0314	1
					FOR SPARES USE P/N 26115-001			
	171	26115-001			·FILTER ELEMENT ASSEMBLY	3844 / 0315	/	1
	174	908-1			··FILTER	2438 / 0001	/	1
	176	908-02			··INLET PLATE	2438 / 0001	/	1
	177	26115-002			··BASE CLIP	3844 / 0315	/	1
	180	908-03			··OUTLET PLATE	2438 / 0001	/	1
	184	908-04			··AIR BLEED RETAINER CLIP	2438 / 0001	/	1
	186	AN3-41A		A	··BOLT	2438 / 0001	/	4
	188	AN960-10		A	··WASHER	2438 / 0001	/	8
	190	AS4561-2		A	··TAB	2438 / 0001	/	2
	192	AN364-1032		A	··NUT	2438 / 0001	/	4
	194	AN3-3A		A	·BOLT	2438 / 0001	/	4
	196	NAS1149F0332P		A	·WASHER	2438 / 0001	/	4
	198	17350-104			·NYLON TUBE, FILTER TO TEST PORT	2438 / 0001	/	1
	200	15164-002		A	·NUT	2438 / 0001	/	2
	202	15164-022		A	·OLIVE	2438 / 0001	/	2
	204	15164-092		A	·O-RING	2438 / 0001	/	2
	206	17371-001			·TEST PORT TEE	2438 / 0001	/	1
	208	15164-102		A	·NUT	2438	2577	1
	209	15164-092		A	·O-RING	2438 / 0001	/	1
	210	15164-082			·PLUG	2438 / 0001	/	1
	212	15164-002		A	·NUT	2438 / 0001	/	1
	214	17372-001			·BRACKET	2438	2577	1
	216	15163-009			·EQUAL TEE	2438 / 0001	/	1
	218	50132-001		A	·TIE DOWN	2438 / 0001	/	AR
	220	MS3367-1-9		A	·STRAP, TIE DOWN	2438 / 0001	/	AR
	222	17350-102			·NYLON TUBE, TEST PORT TO EQUAL TEE	2438 / 0001	/	1
	224	15164-002		A	·NUT	2438 / 0001	/	2
	226	15164-022		A	·OLIVE	2438 / 0001	/	2
	228	15164-092		A	·O-RING	2438 / 0001	/	2
	230	17350-105			·NYLON TUBE, TEE TO PROP AND WING PROP UNIT	2438 / 0001	/	1
	232	15164-002		A	·NUT	2438 / 0001	/	2
	234	15164-022		A	·OLIVE	2438 / 0001	/	2
	237	15164-092		A	·O-RING	2438 / 0001	/	2
	240	17350-109			·NYLON TUBE, TEE TO HORIZONTAL PROP UNIT	2438 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	243	15164-002		A	·NUT	2438 / 0001	/	2
	246	15164-022		A	·OLIVE	2438 / 0001	/	2
	249	15164-092		A	·O-RING	2438 / 0001	/	2
-	252	15165-002			·PROPORTIONING UNIT, HORIZONTAL	2438 / 0001	3680 / 0027	1
					FOR SPARES USE P/N 15165-015			
	253	15165-015			·PROPORTIONING UNIT, HORIZONTAL	3681 / 0028	/	1
	255	MS27039-1-07		A	·SCREW	2438 / 0001	/	2
	258	NAS1149F0332P		A	·WASHER	2438 / 0001	/	2
	261	15177-101			·NYLON TUBE, HORIZ PROP UNIT TO HORIZ PANELS	2438 / 0001	/	2
	264	15164-011		A	·NUT	2438 / 0001	/	2
	267	15164-031		A	·OLIVE	2438 / 0001	/	2
	270	15164-091		A	·O-RING	2438 / 0001	/	2
	273	15164-001		A	·NUT	2438 / 0001	/	2
	276	15164-021		A	·OLIVE	2438 / 0001	/	2
	279	15164-091		A	·O-RING	2438 / 0001	/	2
	282	50428-002			·SPIRAL WRAP, CLEAR	2438 / 0001	/	AR
					ALTERNATE FOR P/N 50428-001			
-	285	50428-001			·SPIRAL WRAP, CLEAR	2438 / 0001	/	AR
					ALTERNATE FOR P/N 50428-002			
-	288	17354-001			·PROPORTIONING UNIT, WING	2438 / 0001	3680 / 0027	1
					FOR SPARES USE P/N 17354-002			
	289	17354-002			·PROPORTIONING UNIT, WING	3681 / 0028	/	1
	291	AN3-12A		A	·BOLT	2438 / 0001	/	2
	294	NAS1149F0332P		A	·WASHER	2438 / 0001	/	2
	297	NAS43HT3-16		A	·SPACER	2438 / 0001	/	2
	300	17355-002			·BRACKET	2438 / 0001	/	1
-	303	17380-101			·NYLON TUBE, WING PROP UNIT TO PANELS, OB, LH	2420	2420	1
						2334	2334	1
-	306	17380-102			·NYLON TUBE, WING PROP UNIT TO PANELS, IB, LH	2420	2420	1
						2334	2334	1
-	309	17380-103			·NYLON TUBE, WING PROP UNIT TO PANELS, OB, RH	2420	2420	1
						2334	2334	1
-	312	17380-104			·NYLON TUBE, WING PROP UNIT TO PANELS, IB, RH	2420	2420	1
						2334	2334	1
	315	18690-101			·NYLON TUBE, WING PROP UNIT TO COUPLER, OB, LH	2438 / 0001	/	1
	318	18690-102			·NYLON TUBE, WING PROP UNIT TO COUPLER, IB, LH	2438 / 0001	/	1
-	321	18690-103			·NYLON TUBE, WING PROP UNIT TO COUPLER, OB, RH	2438 / 0001	/	1
-	324	18690-104			·NYLON TUBE, WING PROP UNIT TO COUPLER, IB, RH	2438 / 0001	/	1
	327	15164-011		A	·NUT	2438 / 0001	/	4
	330	15164-031		A	·OLIVE	2438 / 0001	/	4
	333	15164-091		A	·O-RING	2438 / 0001	/	4
	336	17350-108			·NYLON TUBE, WING PROP UNIT TO FIREWALL	2438 / 0001	/	1
	339	15164-011		A	·NUT	2438 / 0001	/	1
	342	15164-031		A	·OLIVE	2438 / 0001	/	1
	345	15164-091		A	·O-RING	2438 / 0001	/	1
	348	15164-001		A	·NUT	2438 / 0001	/	1
	351	15164-021		A	·OLIVE	2438 / 0001	/	1
	354	15164-091		A	·O-RING	2438 / 0001	/	1
-	357	MS35489-149			·GROMMET	2438 / 0001	/	1
	360	17350-112			·NYLON TUBE, TANK STRAINER TO PUMP	2438 / 0001	/	1
	363	15164-003		A	·NUT	2438 / 0001	/	2
-	366	15164-023		A	·OLIVE	2438 / 0001	/	2
-	369	15164-093		A	·O-RING	2438 / 0001	/	2
	372	17350-110			·NYLON TUBE, TANK RETURN TO CHECK VALVE	2438 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	375	15164-002		A	·NUT	2438 / 0001	/	2
-	378	15164-022		A	·OLIVE	2438 / 0001	/	2
-	381	15164-092		A	·O-RING	2438 / 0001	/	2
	384	17350-111			·NYLON TUBE, CHECK VALVE TO PRIMING PUMP	2438 / 0001	/	1
	387	15164-002		A	·NUT	2438 / 0001	/	2
-	390	15164-022		A	·OLIVE	2438 / 0001	/	2
-	393	15164-092		A	·O-RING	2438 / 0001	/	2
	396	18178-001			·COUPLING	2438 / 0001	/	1
	399	18177-001			·CHECK VALVE	2438 / 0001	/	1
	509	50132-001		A	·TIE DOWN	2438 / 0001	/	1
	512	MS3367-1-9		A	·STRAP, TIE DOWN	2438 / 0001	/	1
	514	18603-001			·IN-LINE STRAINER	2438 / 0001	/	1
	515	08721-10			··STRAINER	2438 / 0001	/	1
	516	AS3582-112		A	··O-RING	2438 / 0001	/	1
	518	50132-001		A	·TIE DOWN	2438 / 0001	/	2
	521	MS3367-1-9		A	·STRAP, TIE DOWN	2438 / 0001	/	2
	524	15163-024			·BULKHEAD CONNECTOR	2438 / 0001	/	1
	527	NAS1149F0732P		A	·WASHER	2438 / 0001	/	1
	530	AN924-4		A	·NUT	2438 / 0001	/	1
	533	51050-038			·BUSHING	2438 / 0001	/	1
	536	17364-001			·BRACKET	2438 / 0001	3843 / 0314	2
	539	51851-001			·BUSHING	2438 / 0001	3843 / 0314	2
	542	20148-001			·BRACKET	2438 / 0001	3843 / 0314	2
	545	51375-001			·BUSHING	2438 / 0001	3843 / 0314	2
	546	21981-001			·BRACKET	3844 / 0315	/	2
	547	51050-088			·BUSHING	3844 / 0315	/	4
	548	MS21266-1N			·GROMMET	2438 / 0001	/	AR
	551	MS35489-150			·GROMMET	2438 / 0001	/	2
	554	15163-028			·SLEEVE ASSEMBLY	2438	3402	1
					ALTERNATE FOR P/N 53289-001			
	555	53289-001			·HOSE ASSEMBLY	3403		1
					ALTERNATE FOR P/N 15163-028			
	556	53283-001			·HOSE ASSEMBLY	/ 0001	/	
	557	AN832-4J			·BULKHEAD FITTING	2438 / 0001	/	1
	558	26929-001			·BRACKET	/ 0001	/	
	560	NAS1149D0732K		A	·WASHER	2438 / 0001	/	1
	563	AN924-4J		A	·BULKHEAD NUT	2438 / 0001	/	1
	566	51817-001			·REDUCER	2438 / 0001	/	1
	569	15333-003	$		·FLUID LINE	2438		1
	572	15333-004	%		·FLUID LINE	3026		1
	573	26930-001			·FLUID LINE	/ 0001	/	
	575	MS21919WDG3		A	·ADEL CLAMP	2438 / 0001	/	2
	578	AN3-5A		A	·BOLT	2438		2
	579	AN3-11A		A	·BOLT	/ 0001	/	1
	580	AN3-4A		A	·BOLT	/ 0001	/	1
	581	NAS43DD3-16FC	$	A	·SPACER	2438		2
	584	NAS1149F0332P		A	·WASHER	2438 / 0001	/	4
	585	NAS43DD3-45FC		A	·SPACER	/ 0001	/	1
	587	MS21045-3		A	·NUT	2438 / 0001	/	2
	590	AN832-3J			·BULKHEAD FITTING	2438 / 0001	/	1
	593	NAS1149D0632K		A	·WASHER	2438 / 0001	/	1
	596	AN924-3J		A	·BULKHEAD NUT	2438 / 0001	/	1
-	599	15388-004	$		·FEED TUBE, SLINGER RING	2438	3484	1
					FOR SPARES USE P/N 13857-003			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	600	15388-003	$		·FEED TUBE, SLINGER RING	3485	3659	1
					FOR SPARES USE P/N 13857-003			
	601	13857-003	$		·NOZZLE, SLINGER RING	3660		1
-	602	15388-006	%		·FEED TUBE, SLINGER RING	3026	3484	1
					FOR SPARES USE P/N 13857-001			
-	603	15388-005	%		·FEED TUBE, SLINGER RING	3485 / 0001	3659 / 0003	1
					FOR SPARES USE P/N 13857-001			
	604	13857-001	%		·FEED TUBE, SLINGER RING	3660 / 0004	/	1
	605	MS21919WDG3			·ADEL CLAMP	2438 / 0001	/	1
	608	AN3-3A	$	A	·BOLT	2438		1
	611	AN525-832R8	%	A	·SCREW	3026		1
	612	AN3-3A		A	·BOLT	/ 0001	/	1
	614	NAS1149F0332P		A	·WASHER	2438 / 0001	/	1
	617	MS21044N3	$	A	·NUT	2438		1
	620	15373-002	$		·BRACKET, SLINGER RING SPRAYER	2438		1
	623	15373-005	%		·BRACKET, SLINGER RING SPRAYER	3026 / 0001	/	1
	626	MS27039-806	%	A	·SCREW	3026 / 0001	/	1
	629	NAS1149FN816P	%	A	·WASHER	3026 / 0001	/	1
	632	18690-107			·NYLON TUBE, COUPLER TO PANEL IB.	2438 / 0001	/	1
	635	15164-001		A	·NUT	2438 / 0001	/	2
	638	15164-021		A	·OLIVE	2438 / 0001	/	2
	641	15164-091		A	·O-RING	2438 / 0001	/	2
	644	15164-041		A	·COUPLER	2438 / 0001	/	1
	647	18690-106			·NYLON TUBE, COUPLER TO PANEL OB.	2438 / 0001	/	1
	650	15164-001		A	·NUT	2438 / 0001	/	2
	653	15164-021		A	·OLIVE	2438 / 0001	/	2
	656	15164-091		A	·O-RING	2438 / 0001	/	2
	659	15164-041		A	·COUPLER	2438 / 0001	/	1
	662	15164-001		A	·NUT	2438 / 0001	/	4
	665	15164-021		A	·OLIVE	2438 / 0001	/	4
	668	15164-091		A	·O-RING	2438 / 0001	/	4
	671	15164-041		A	·COUPLER	2438 / 0001	/	2
	674	15164-091		A	·O-RING	2334 / 0001	/	4
	677	15164-021		A	·OLIVE	2334 / 0001	/	4
	680	15164-001		A	·NUT	2334 / 0001	/	4
	683	17382-005	%		·GLYCOL LEVEL SENDING UNIT	3026 / 0001	3848 / 0318	1
	684	23137-003	%		·GLYCOL LEVEL SENDING UNIT	3849 0319		1
-	686	17382-501	%		··DIAL	3026	3338	1
					FOR SPARES USE P/N 17382-511			
	687	17382-511	%		··DIAL	3339 / 0001	3848 / 0318	1
	689	18484-102	%		··GASKET	3026 / 0001	3848 / 0318	1
	690	23137-009	%		··GASKET	3849 0319		1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 27-50-01 DET			FLAP SYSTEM INSTALLATION			
	401	RF 30-10-01 DET			ICE PROTECTION SYSTEM INSTL - AIRFOIL			
	402	RF 30-60-01 DET			ICE PROTECTION SYSTEM INSTL - PROPELLER			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0311 THRU 22T-0314, 22T-0316 THRU 22T-0317; REFER TO 22T-0319 FOR PART IDENTIFICATION.			
			@		WHEN 18183-001 USED, MUST ALSO USE NAS1351-4-20P. WHEN 18183-002 USED, MUST ALSO USE NAS1351-4-16P.			
			#		USE ON NON-ICE AIRPLANES TO CLOSE PRIMING & METERING PUMP LINE PORTS.			
			$		INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			
			%		INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.			

Intentionally Left Blank

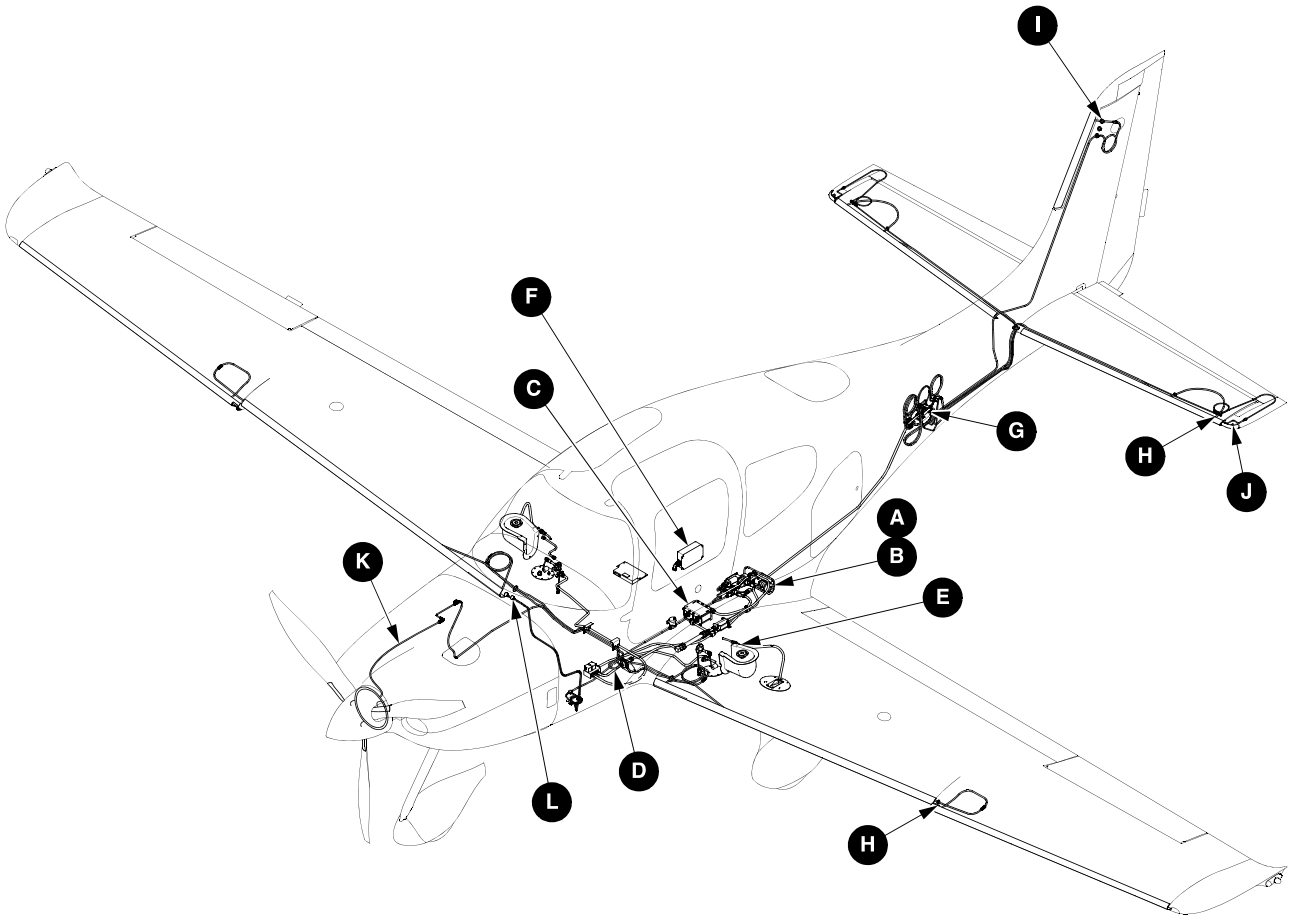

Serials 22-3403 & subs, 22T-0001 & subs w/ FIKI.

SR22_PC30_1880B

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (1 of 9)

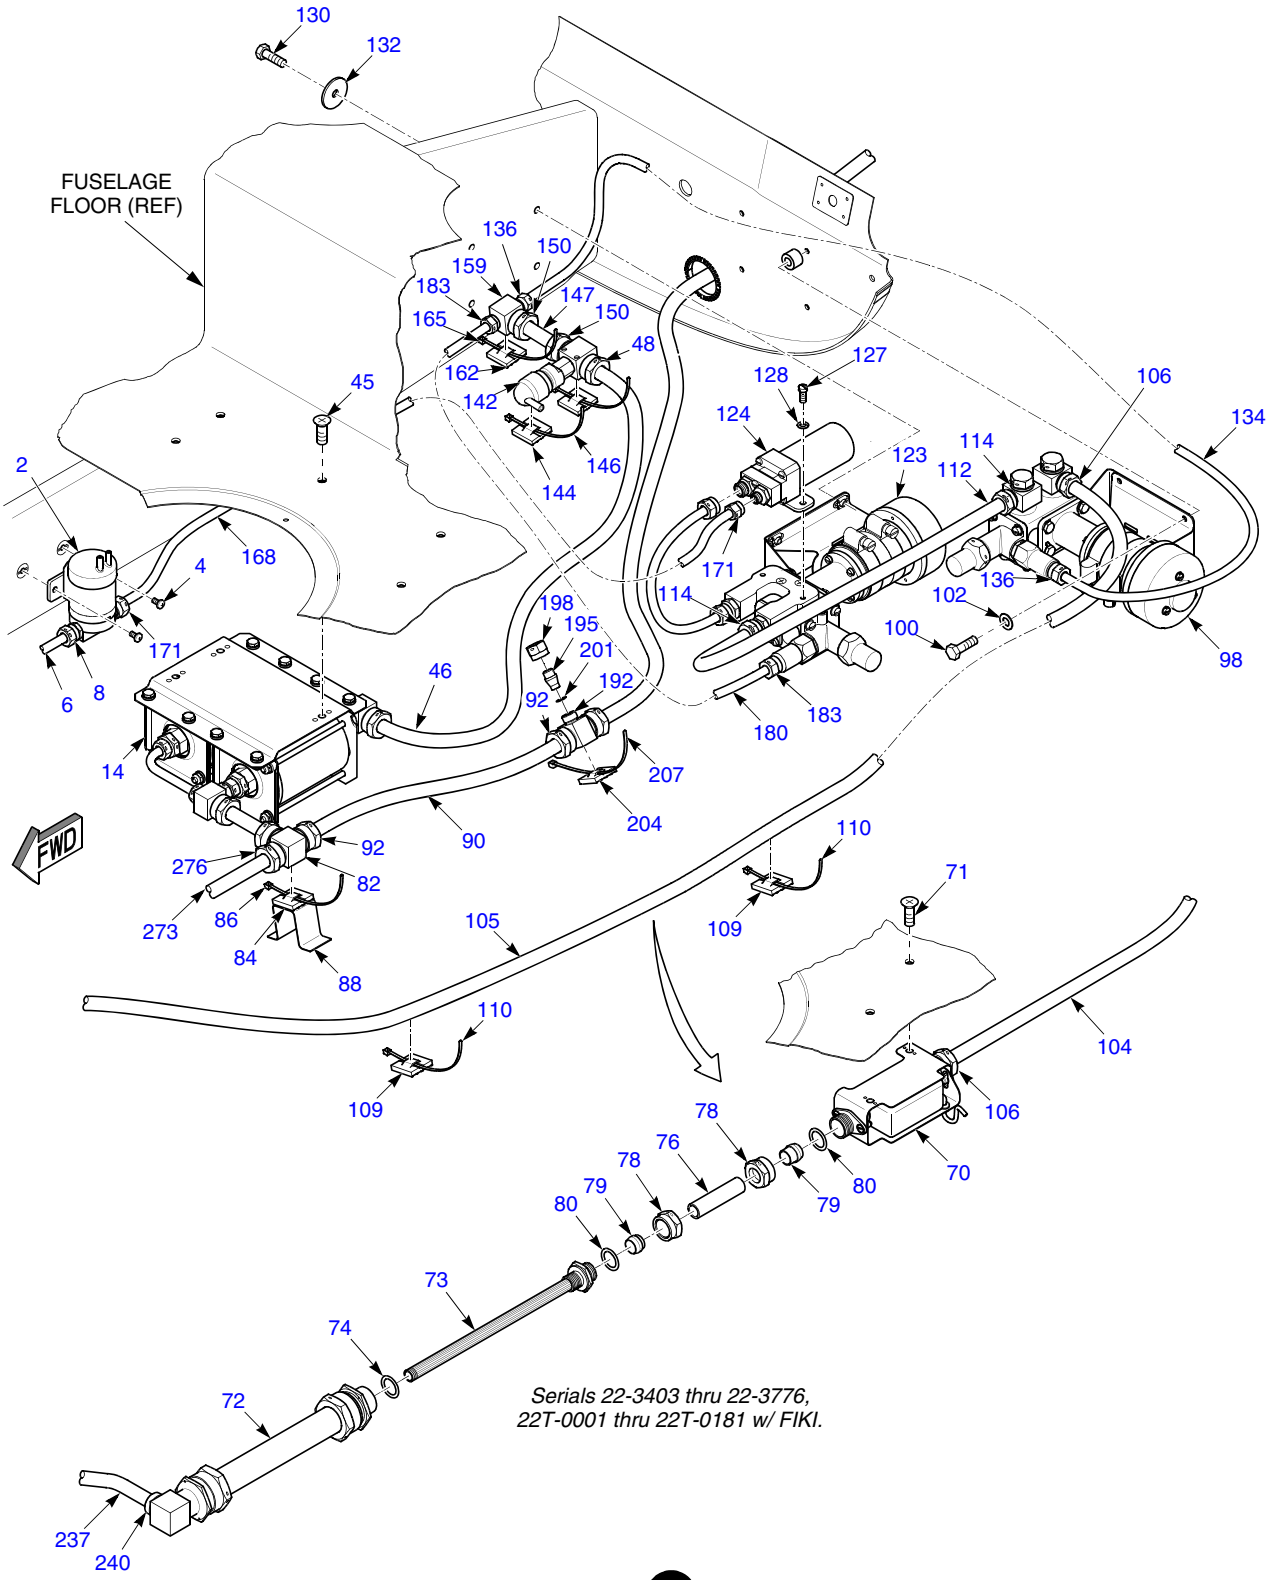

DETAIL A

Serials 22-3403 thru 22-3850,
22T-0001 thru 22T-0315 w/ FIKI.

SR22_PC30_1881C

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3403 thru 22-3850, 22T-0001 thru 22T-0315 (2 of 9)

EFFECTIVITY:
All

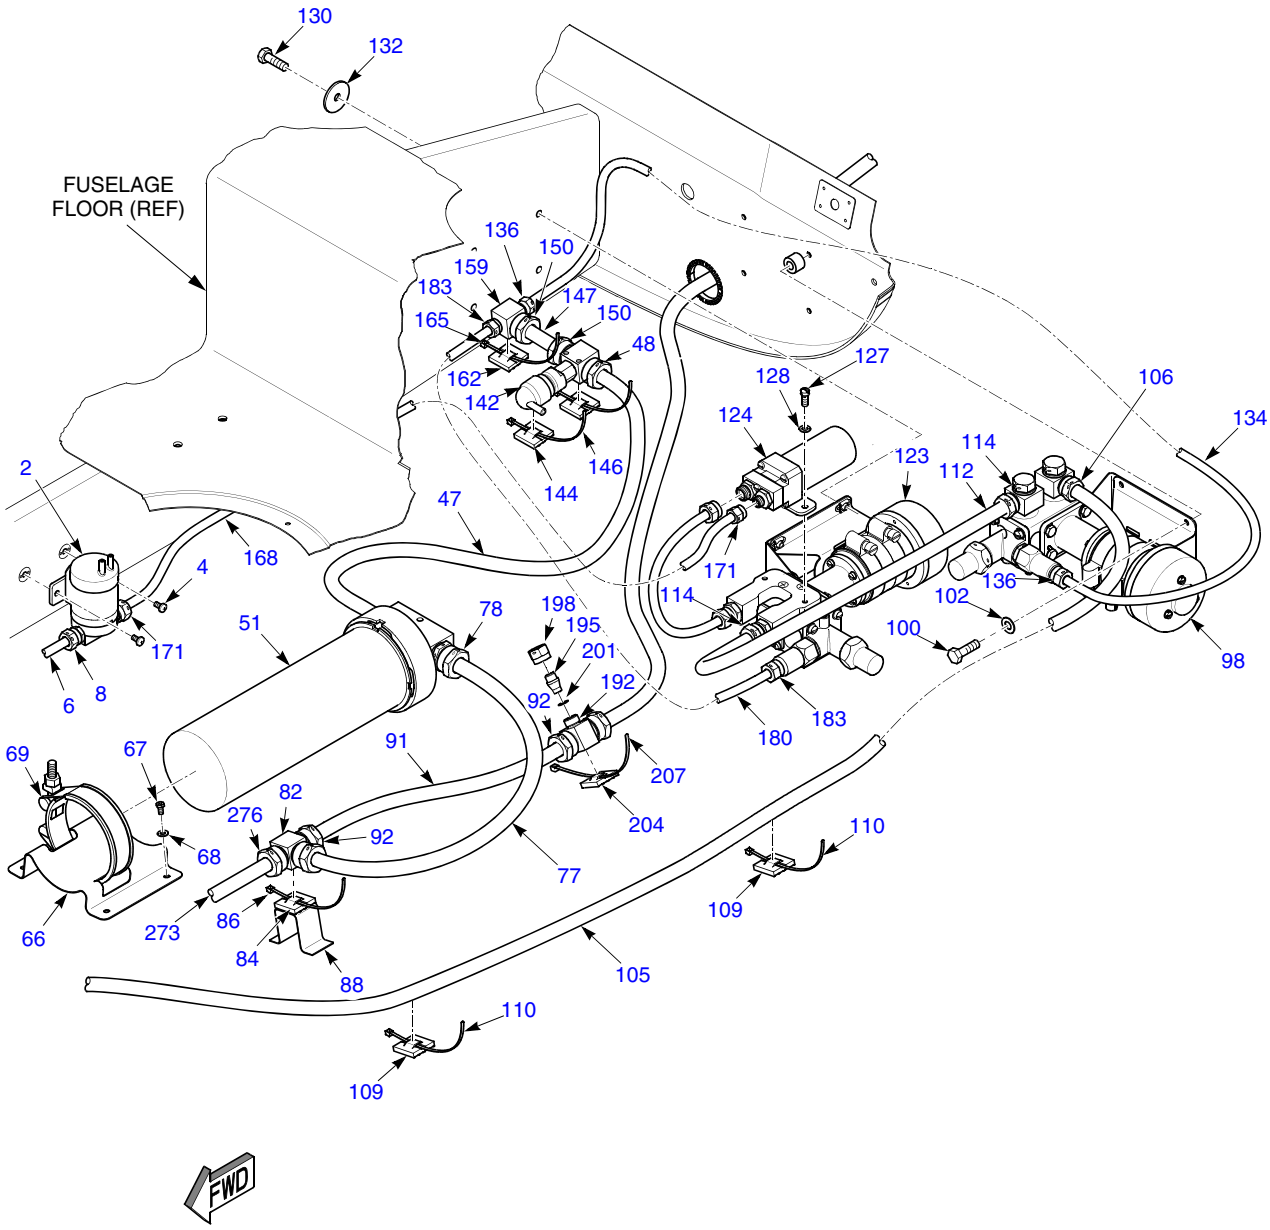

DETAIL B

Serials 22-3851 & subs,
22T-0316 & subs w/ FIKI.

SR22_PC30_2095

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3851 & subs, 22T-0316 & subs (3 of 9)

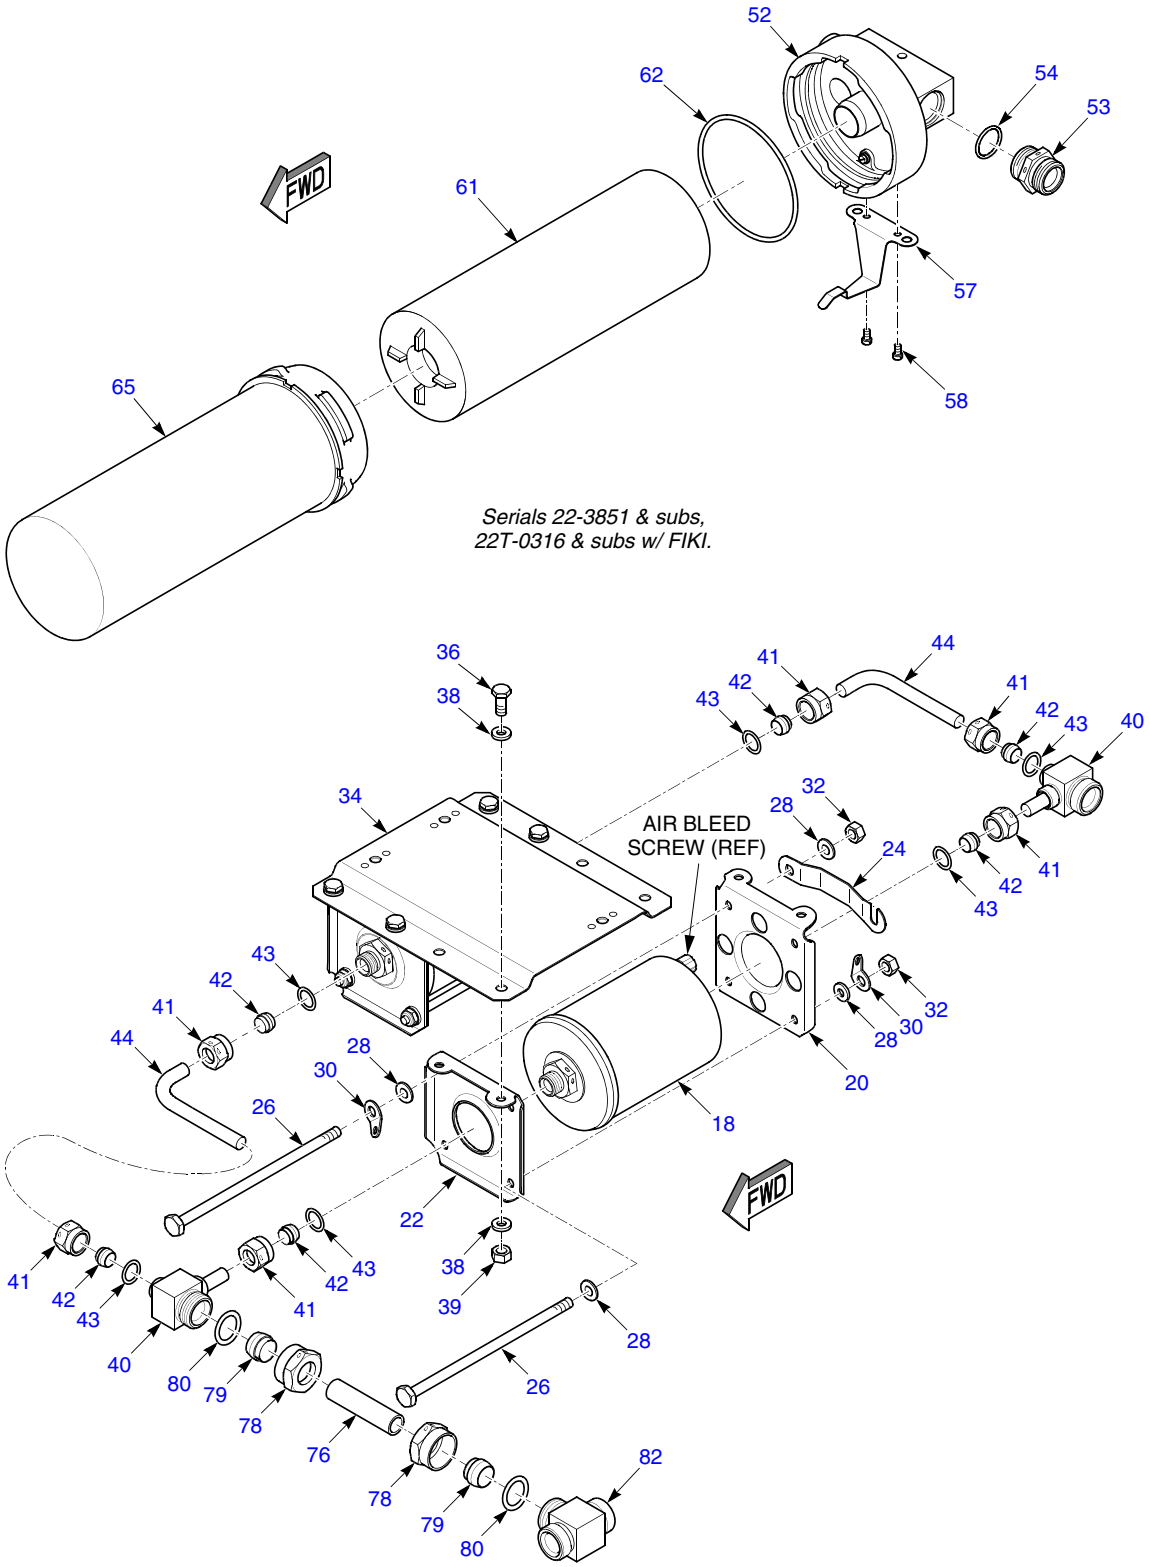

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (4 of 9)

EFFECTIVITY:
All

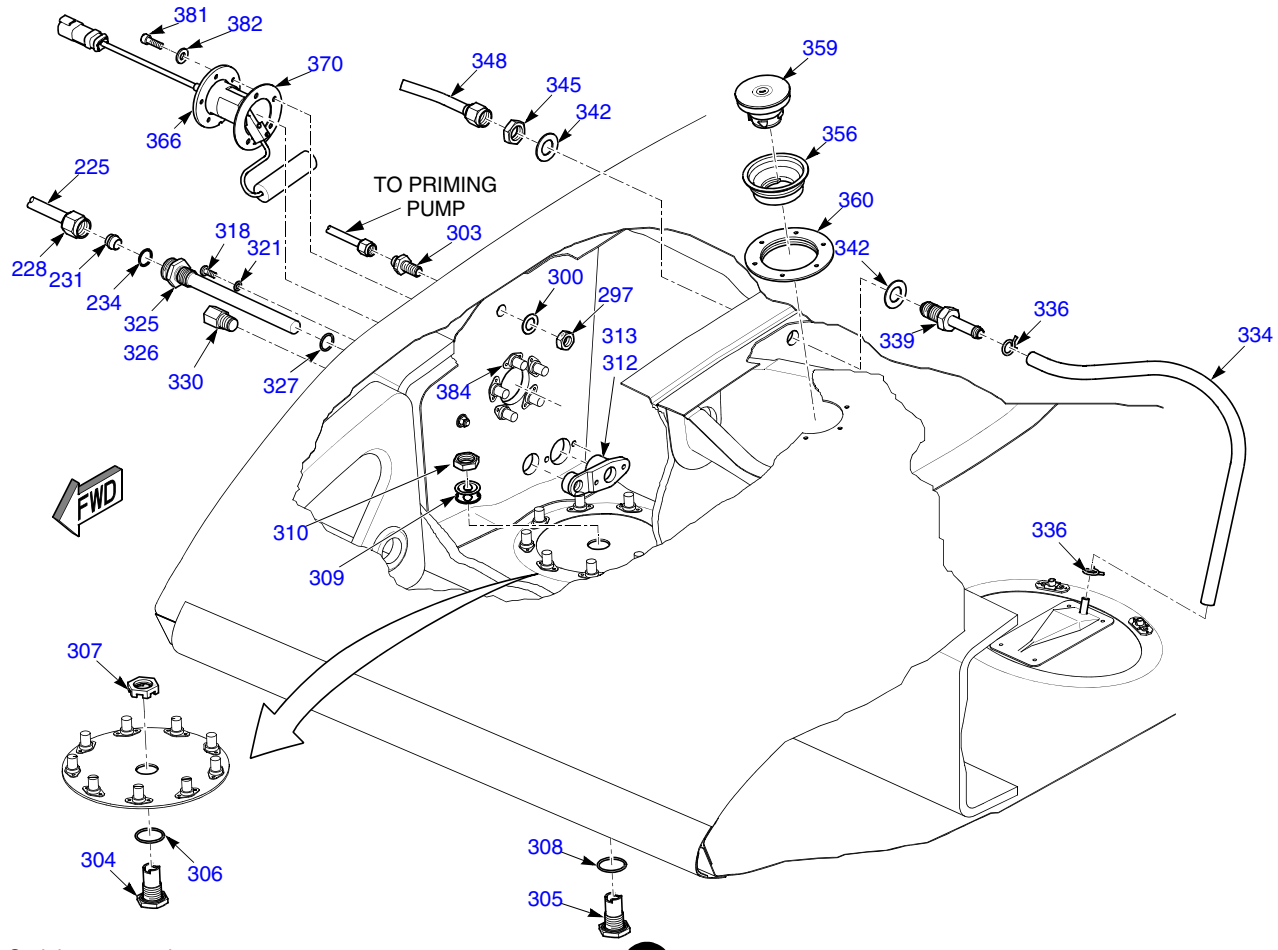

Serials 22-3403 thru 22-3650.

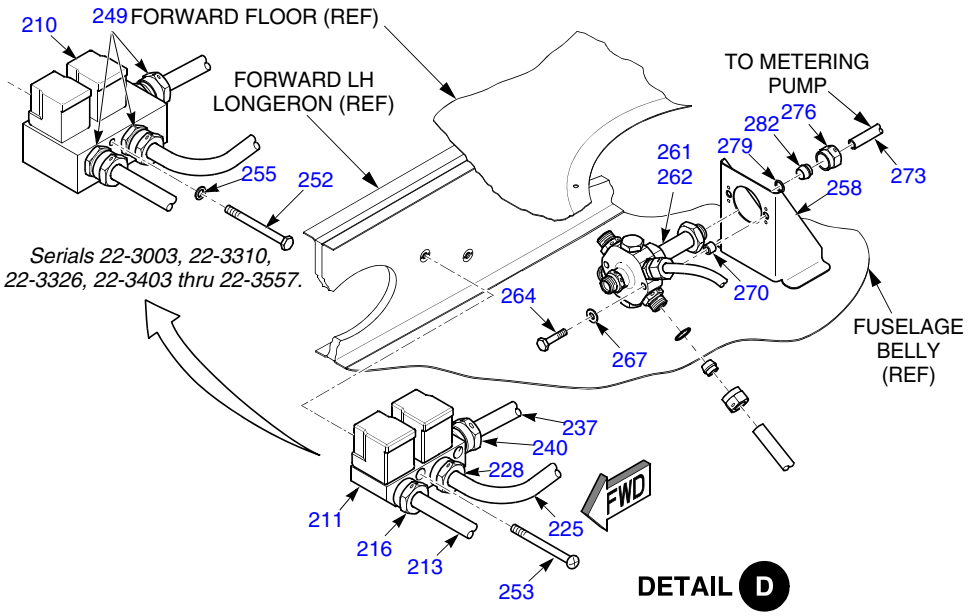

Serials 22-3003, 22-3310, 22-3326, 22-3403 thru 22-3557.

Serials 22-3403 & subs, 22T-0001 & subs w/ FIKI.

SR22_PC30_1882F

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (5 of 9)

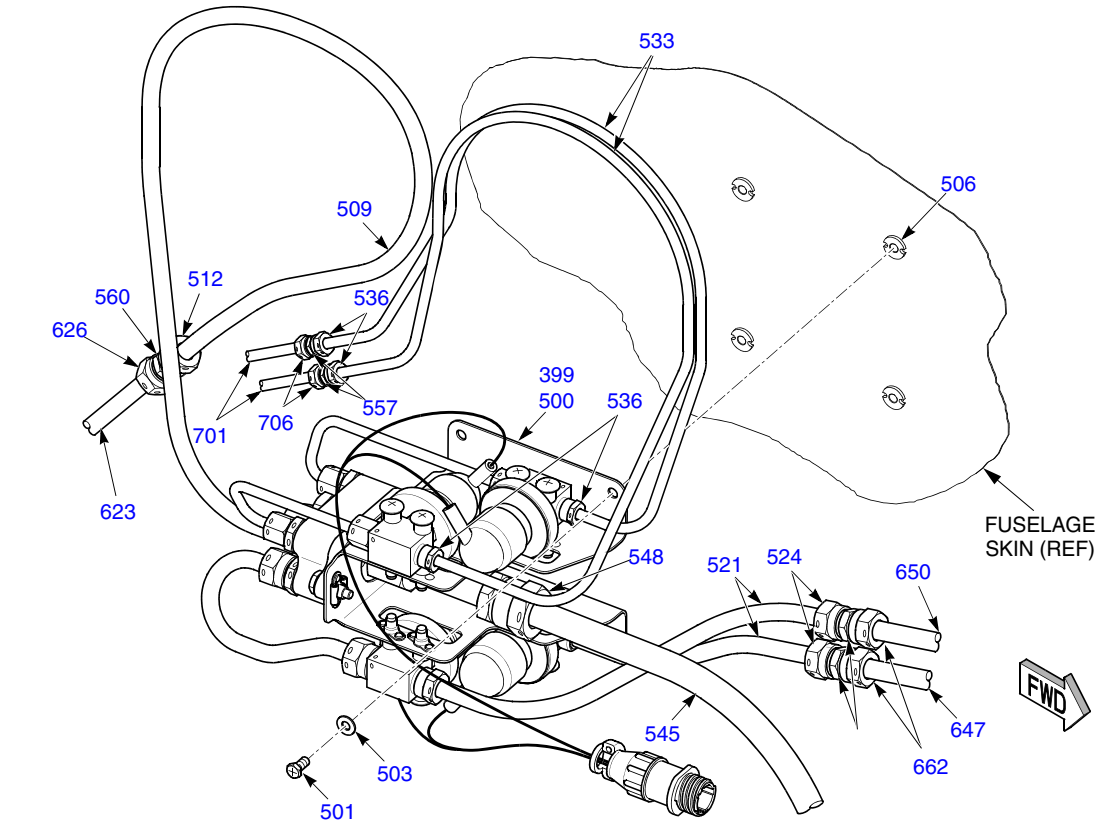

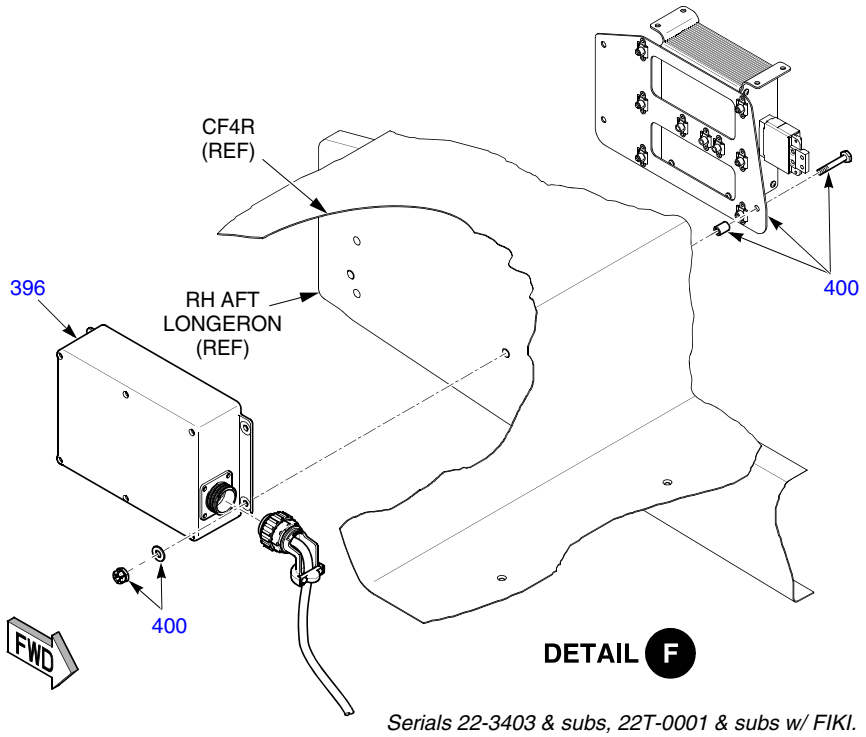

Serials 22-3403 & subs, 22T-0001 & subs w/ FIKI.

SR22_PC30_1883B

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (6 of 9)

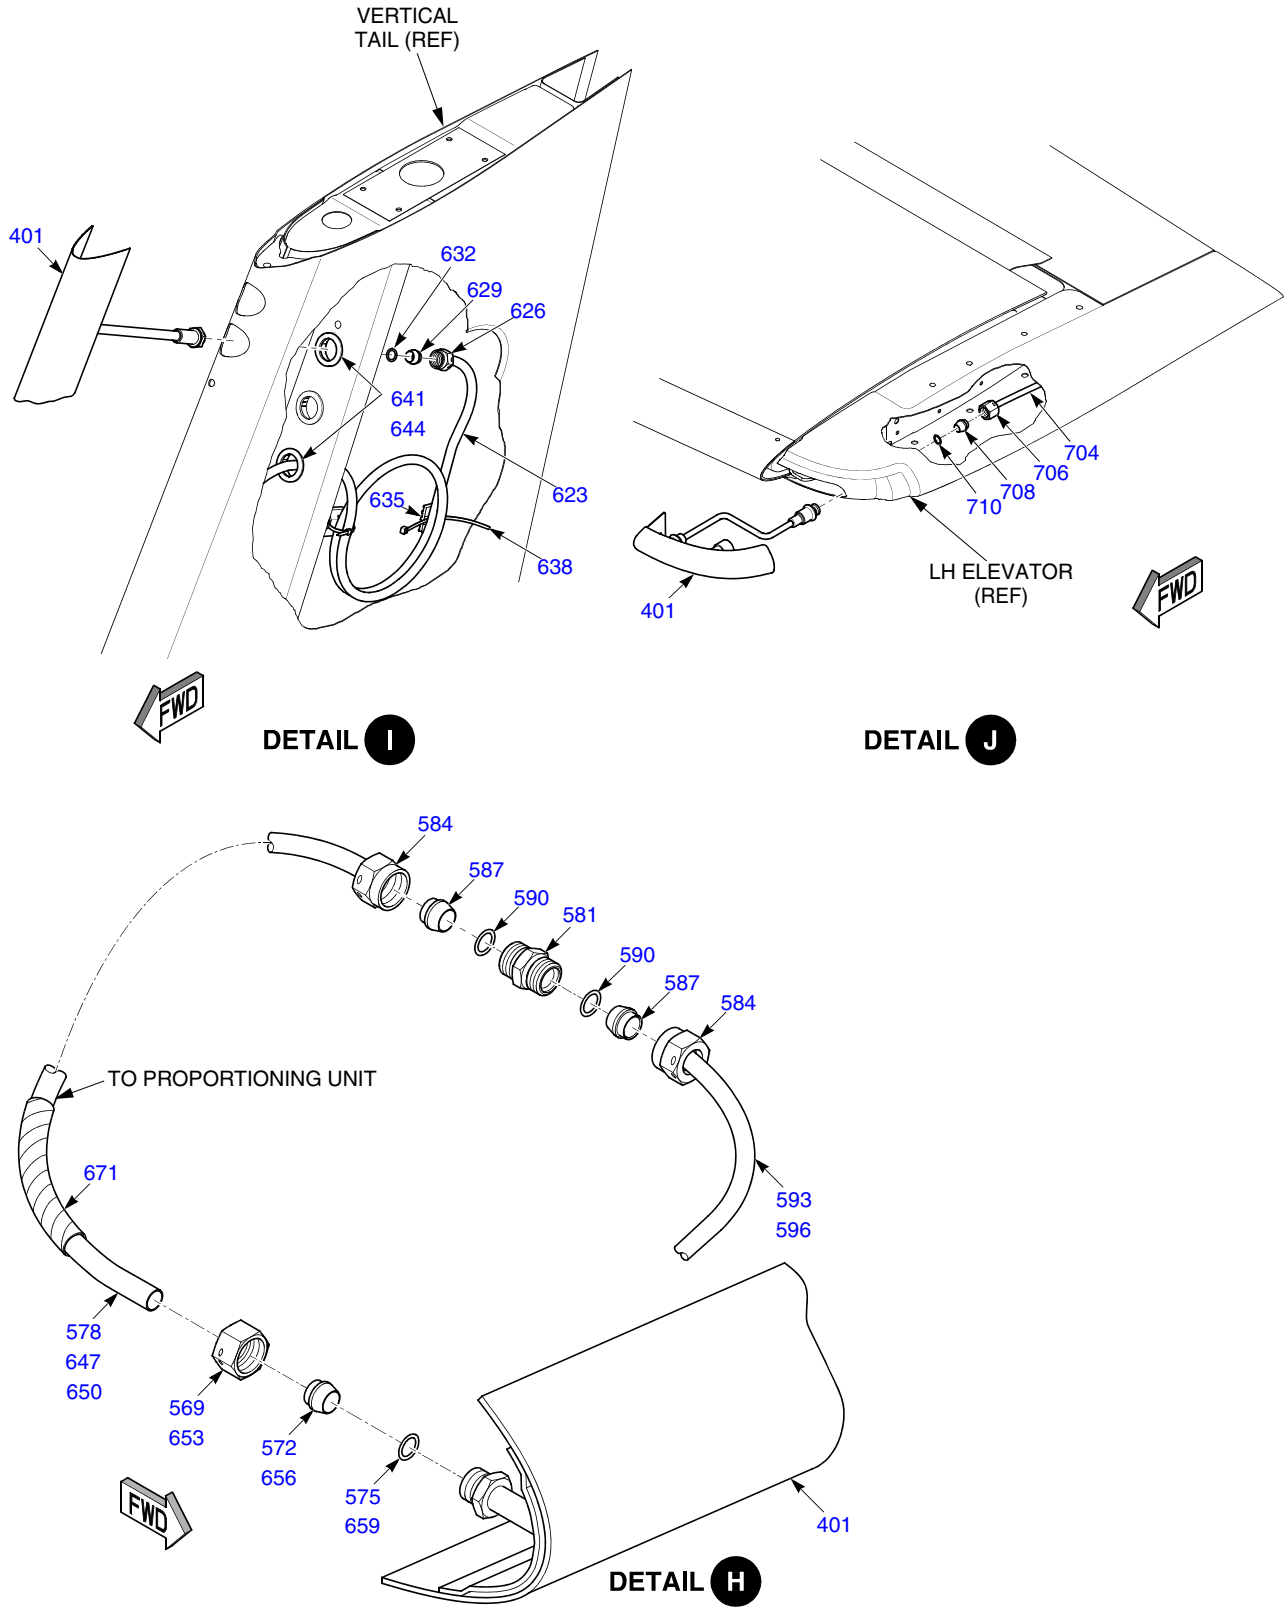

Serials 22-3403 & subs, 22T-0001 & subs w/ FIKI.

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (7 of 9)

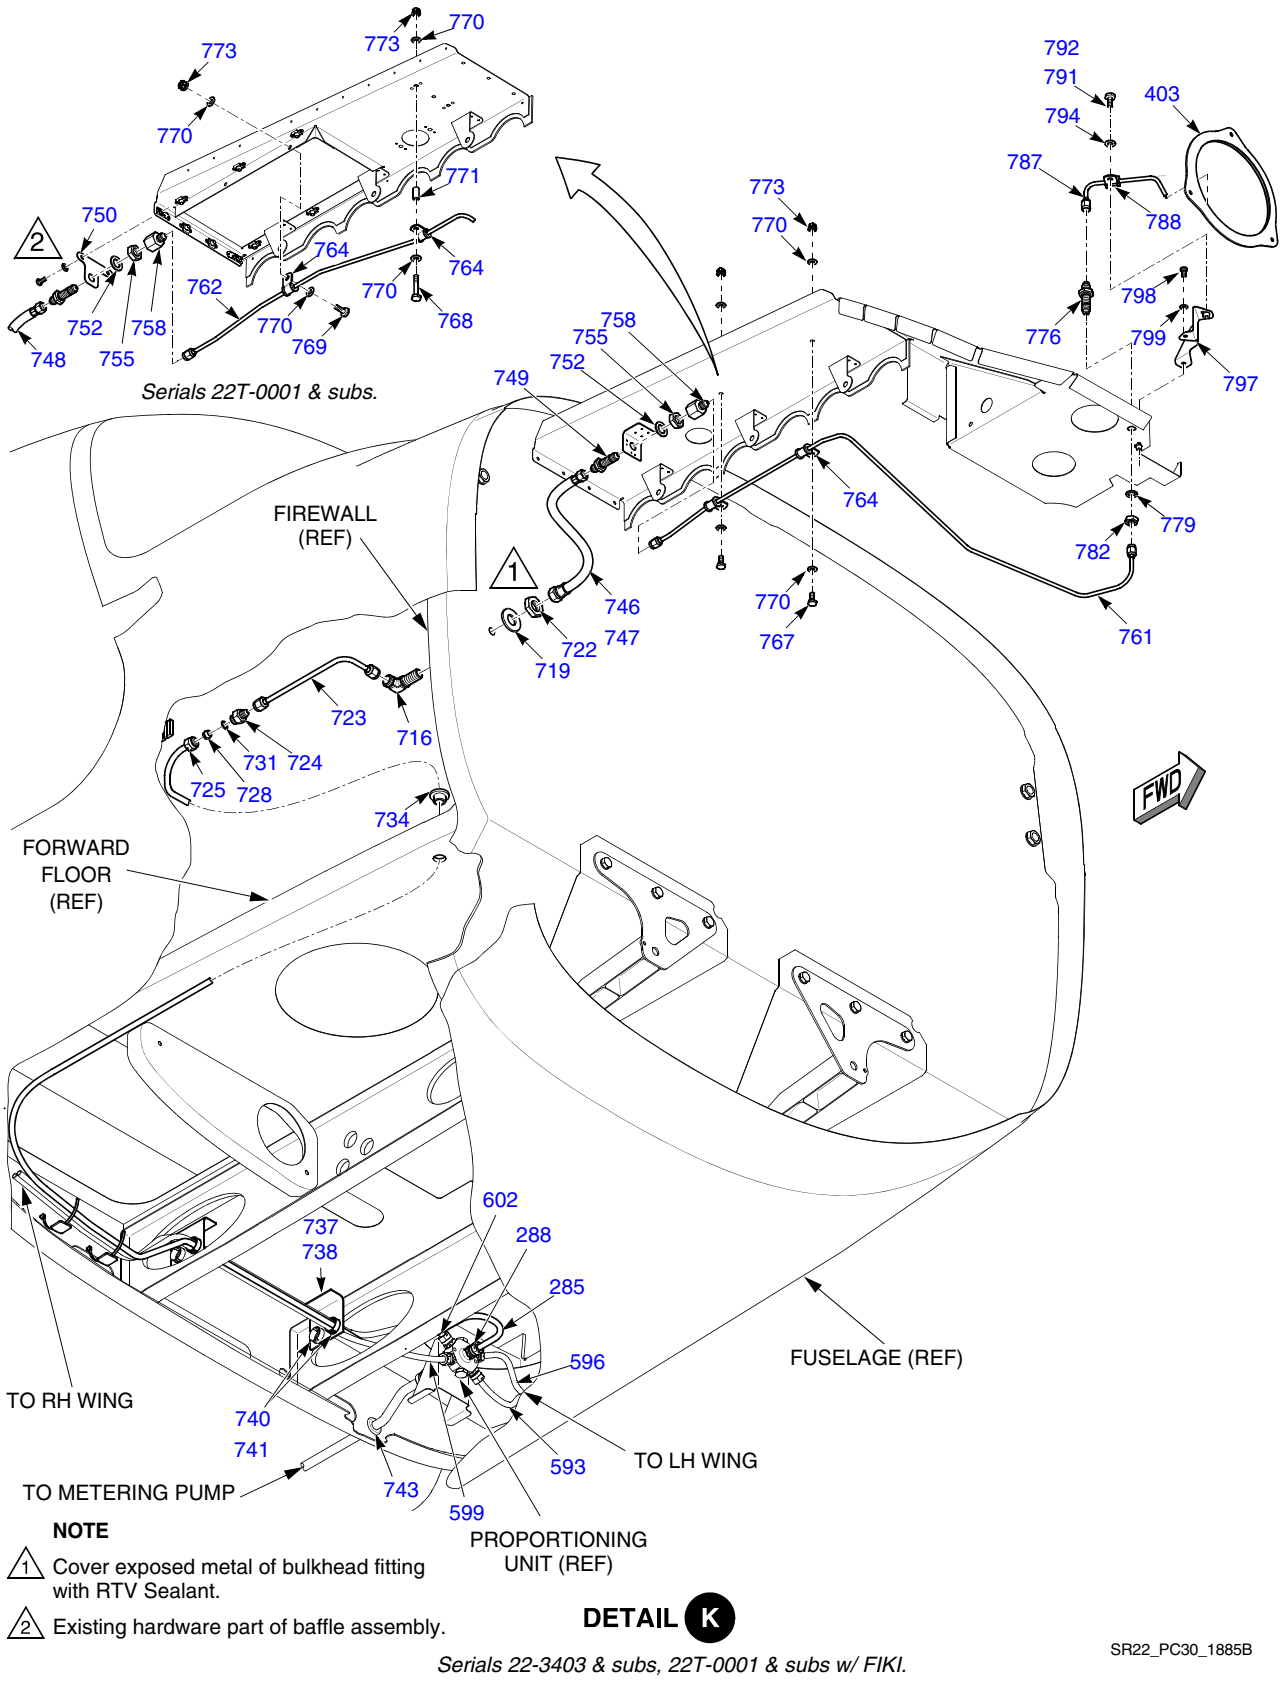

Serials 22-3403 & subs, 22T-0001 & subs w/ FIKI.

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (8 of 9)

EFFECTIVITY:
All

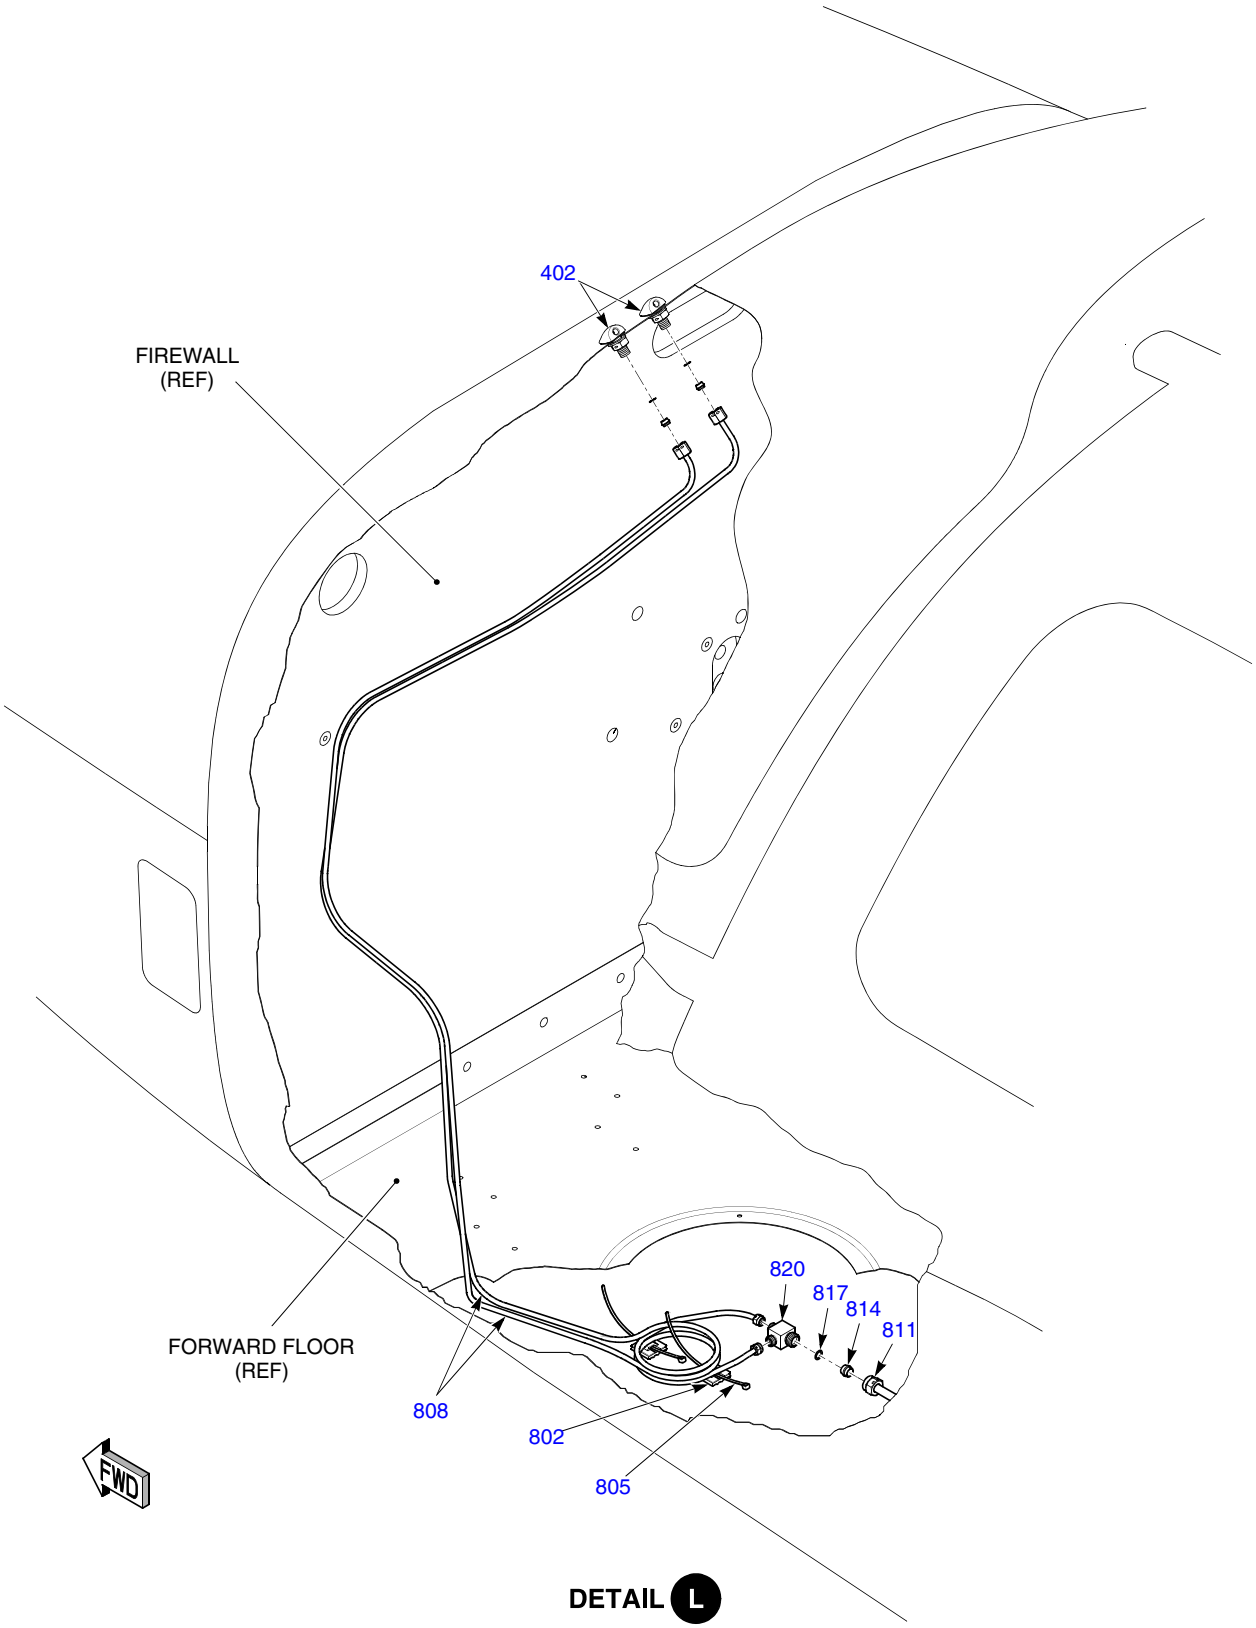

Figure-01

FIKI Ice Protect System: Distribution - Serials 22-3403 & subs, 22T-0001 & subs (9 of 9)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FIKI ICE PROTECTION SYS INSTL - DISTRIBUTION	3403 / 0001	/	NP
	2	21955-001			·SOLENOID, WINDSHIELD	3403 / 0001	/	1
	4	MS27039-805		A	·SCREW	3403 / 0001	/	2
	6	21942-133			·NYLON TUBE, UNEQUAL TEE TO SOLENOID	3403 / 0001	/	1
	8	15164-002		A	·NUT	3403 / 0001	/	2
-	10	15164-022		A	·OLIVE	3403 / 0001	/	2
-	12	15164-092		A	·O-RING	3403 / 0001	/	2
	14	21986-001			·DUAL FILTER ASSEMBLY	3403 / 0001	3850 / 0315	1
-	16	26115-101			··FILTER ELEMENT ASSEMBLY	3403 / 0001	3850 / 0315	2
	18	908-01			···FILTER	3403 / 0001	3850 / 0315	1
	20	908-02			···INLET PLATE	3403 / 0001	3850 / 0315	1
	22	908-03			···OUTLET PLATE	3403 / 0001	3850 / 0315	1
	24	908-04			···AIR BLEED RETAINER CLIP	3403 / 0001	3850 / 0315	1
	26	AN3-41A		A	···BOLT	3403 / 0001	3850 / 0315	4
	28	AN960-10		A	···WASHER	3403 / 0001	3850 / 0315	8
	30	AS4561-2		A	···TAB	3403 / 0001	3850 / 0315	2
	32	AN364-1032		A	···NUT	3403 / 0001	3850 / 0315	4
	34	13233-02			··FILTER BRACKET	3403 / 0001	3850 / 0315	1
	36	AN3-3		A	··BOLT	3403 / 0001	3850 / 0315	8
	38	AN960-10		A	··WASHER	3403 / 0001	3850 / 0315	16
	39	AN364-1032		A	··NUT	3403 / 0001	3850 / 0315	8
	40	MN6847			··ADAPTOR	3403 / 0001	3850 / 0315	2
	41	15164-002		A	··NUT	3403 / 0001	3850 / 0315	6
	42	15164-022		A	··OLIVE	3403 / 0001	3850 / 0315	6
	43	15164-092		A	··O-RING	3403 / 0001	3850 / 0315	6
	44	13233-04			··NYLON TUBE	3403 / 0001	3850 / 0315	2
	45	MS24694S54		A	·SCREW	3403 / 0001	3850 / 0315	3
	46	26034-011			·NYLON TUBE, FILTER TO PRESSURE SWITCH	3403 / 0001	3850 / 0315	1
	47	21942-136			·NYLON TUBE, FILTER TO PRESSURE SWITCH	3851 / 0316	/	1
	48	15164-004		A	·NUT	3403 / 0001	/	2
-	49	15164-024		A	·OLIVE	3403 / 0001	/	2
-	50	15164-094		A	·O-RING	3403 / 0001	/	2
	51	21986-002			·FILTER ASSEMBLY	3851 / 0316	/	1
	52	21986-201			··FILTER HEAD	3851 / 0316	/	1
	53	21986-202		A	··STUD COUPLING	3851 / 0316	/	2
	54	21986-205		A	··O-RING	3851 / 0316	/	2
					ALTERNATE FOR P/N AS3582-017			
					ALTERNATE FOR P/N MS9068-017			
-	55	AS3582-017		A	··O-RING	3851 / 0316	/	2
					ALTERNATE FOR P/N 21986-205			
					ALTERNATE FOR P/N MS9068-017			
-	56	MS9068-017		A	··O-RING	3851 / 0316	/	2
					ALTERNATE FOR P/N 21986-205			
					ALTERNATE FOR P/N AS3582-017			
	57	21986-207			··CLIP	3851 / 0316	/	1
	58	MS35265-26			··SCREW	3851 / 0316	/	2
-	59	21986-209			··SCREW	3851 / 0316	/	1
-	60	21986-210			··SEAL	3851 / 0316	/	1
	61	21986-203			··FILTER	3851 / 0316	/	1
	62	21986-206		A	··O-RING	3851 / 0316	/	1
					ALTERNATE FOR P/N AS3582-235			
					ALTERNATE FOR P/N MS9068-235			
-	63	AS3582-235		A	··O-RING	3851 / 0316	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					ALTERNATE FOR P/N 21986-206			
					ALTERNATE FOR P/N MS9068-235			
-	64	MS 9068-235		A	··O-RING	3851 / 0316	/	1
					ALTERNATE FOR P/N 21986-206			
					ALTERNATE FOR P/N AS3582-235			
	65	21986-204			··SUMP	3851 / 0316	/	1
	66	26755-001			·BRACKET	3851 / 0316	/	1
	67	NAS1801-08-5		A	·SCREW	3851 / 0316	/	4
	68	NAS1149FN832P		A	·WASHER	3851 / 0316	/	4
	69	29507-001		A	·CLAMP	3851 / 0316	/	1
	70	21978-001			·FLOW TRANSDUCER	3403 / 0001	3776 / 0181	1
	71	MS24694S54		A	·SCREW	3403 / 0001	3776 / 0181	2
	72	21965-001			·IN-LINE STRAINER	3403 / 0001	3776 / 0181	1
	73	2550-25			··STRAINER	3403 / 0001	3776 / 0181	1
	74	AS3582-112		A	··O-RING	3403 / 0001	3776 / 0181	1
-	75	26034-010			·TUBE ASSY, TRANSDUCER TO STRAINER	3403 / 0001	3776 / 0181	2
						3777 / 0182	/	1
	76	21942-140			··NYLON TUBE	3403 / 0001	3850 / 0315	1
	77	21942-139			··NYLON TUBE	3851 / 0316	/	1
	78	15164-004			··NUT	3403 / 0001	3850 / 0315	2
						3851 / 0316	/	1
	79	15164-024			··OLIVE	3403 / 0001	3850 / 0315	2
						3851 / 0316	/	1
	80	15164-094		A	·O-RING	3403 / 0001	3850 / 0315	4
						3851 / 0316	/	2
	82	21946-003			·EQUAL TEE	3403 / 0001	/	1
	84	50132-001			·TIE DOWN	3403 / 0001	/	1
	86	MS3367-1-9			·STRAP, TIE DOWN	3403 / 0001	/	1
	88	26164-001			·STANDOFF	3403 / 0001	/	1
	90	21942-122			·NYLON TUBE, TEST PORT TO EQUAL TEE	3403 / 0001	3850 / 0315	1
	91	21942-123			·NYLON TUBE, TEST PORT TO EQUAL TEE	3851 / 0316	/	1
	92	15164-004		A	·NUT	3403 / 0001	/	2
-	94	15164-024		A	·OLIVE	3403 / 0001	/	2
-	96	15164-094		A	·O-RING	3403 / 0001	/	2
	98	21950-003			·METERING PUMP ASSEMBLY, #1	3403 / 0001	/	1
	100	AN3-5A		A	·BOLT	3403 / 0001	/	4
	102	AN970-3		A	·WASHER	3403 / 0001	/	4
	104	21942-117			·NYLON TUBE, PUMP #1 TO TRANSDUCER	3403 / 0001	3776 / 0181	1
	105	21942-119			·NYLON TUBE, PUMP #1 TO PROPORTIONING UNIT	3777 / 0182	/	1
	106	15164-004		A	·NUT	3403 / 0001	/	2
-	107	15164-024		A	·OLIVE	3403 / 0001	/	2
-	108	15164-094		A	·O-RING	3403 / 0001	/	2
	109	50132-001			·TIE DOWN	3777 / 0182	/	2
	110	MS3367-1-9			·STRAP, TIE DOWN	3777 / 0182	/	2
	112	26034-012			·NYLON TUBE, PUMP #2 TO PUMP #1	3403 / 0001	/	1
	114	15164-004		A	·NUT	3403 / 0001	/	2
-	116	15164-024		A	·OLIVE	3403 / 0001	/	2
-	118	15164-094		A	·O-RING	3403 / 0001	/	2
-	119	21951-002			·METERING PUMP ASSEMBLY, #2	3403 / 0001	3762 / 0144	1
					FOR SPARES USE P/N 21951-003			
-	120	21951-201			··METERING PUMP, #2	3403 / 0001	3762 / 0144	1
-	121	21951-102			··WINDSHIELD PUMP	3403 / 0001	3762 / 0144	1
-	122	21951-003			·METERING PUMP ASSEMBLY, #2	3763 / 0145	/	1
	123	21951-301			··METERING PUMP, #2	3763 / 0145	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	124	21951-302			··WINDSHIELD PUMP	3763 / 0145	/	1
-	125	PRT OF ITM 121		A	··BOLT	3403 / 0001	3762 / 0144	2
-	126	PRT OF ITM 121		A	··WASHER	3403 / 0001	3762 / 0144	2
	127	PRT OF ITM 124		A	··BOLT	3763 / 0145	/	2
	128	PRT OF ITM 124		A	··WASHER	3763 / 0145	/	2
	130	AN3-5A		A	·BOLT	3403 / 0001	/	4
	132	AN970-3		A	·WASHER	3403 / 0001	/	4
	134	21942-101			·NYLON TUBE, UNEQUAL TEE TO PUMP #1	3403 / 0001	/	1
	136	15164-002		A	·NUT	3403 / 0001	/	2
-	138	15164-022		A	·OLIVE	3403 / 0001	/	2
-	140	15164-092		A	·O-RING	3403 / 0001	/	2
	142	21953-002			·SWITCH, HIGH PRESSURE	3403 / 0001	/	1
	144	50132-001			·TIE DOWN	3403 / 0001	/	2
	146	MS3367-1-9			·STRAP, TIE DOWN	3403 / 0001	/	2
	147	21942-118			·NYLON TUBE, PRESSURE SWITCH TO UNEQUAL TEE	3403 / 0001	/	1
	150	15164-004		A	·NUT	3403 / 0001	/	2
-	153	15164-024		A	·OLIVE	3403 / 0001	/	2
-	156	15164-094		A	·O-RING	3403 / 0001	/	2
	159	21946-004			·UNEQUAL TEE	3403 / 0001	/	1
	162	50132-001			·TIE DOWN	3403 / 0001	/	1
	165	MS3367-1-9			·STRAP, TIE DOWN	3403 / 0001	/	1
	168	26034-008			·NYLON TUBE, SOLENOID TO PUMP #2	3403 / 0001	/	1
	171	15164-002		A	·NUT	3403 / 0001	/	2
-	174	15164-022		A	·OLIVE	3403 / 0001	/	2
-	177	15164-092		A	·O-RING	3403 / 0001	/	2
	180	21942-102			·NYLON TUBE, UNEQUAL TEE TO PUMP #2	3403 / 0001	/	1
	183	15164-002		A	·NUT	3403 / 0001	/	2
-	186	15164-022		A	·OLIVE	3403 / 0001	/	2
-	189	15164-092		A	·O-RING	3403 / 0001	/	2
	192	21946-002			·UNEQUAL TEE	3403 / 0001	/	1
	195	15164-082			·BLANKING PLUG	3403 / 0001	/	1
	198	15164-002		A	·NUT	3403 / 0001	/	1
	201	15164-092		A	·O-RING	3403 / 0001	/	1
	204	50132-001			·TIE DOWN	3403 / 0001	/	1
	207	MS3367-1-9			·STRAP, TIE DOWN	3403 / 0001	/	1
	210	22070-002			·VALVE, CONTROL, 3-WAY	3403	3557	1
			@		FOR SPARES USE P/N 22070-003			
	211	22070-003			·VALVE, CONTROL, 3-WAY	3558 / 0001	/	1
	213	26034-001			·NYLON TUBE, 3-WAY TO RH WING	3403 / 0001	/	1
	216	15164-004		A	·NUT	3403 / 0001	/	2
-	219	15164-024		A	·OLIVE	3403 / 0001	/	2
-	222	15164-094		A	·O-RING	3403 / 0001	/	2
	225	26034-002			·NYLON TUBE, 3-WAY TO LH WING	3403 / 0001	/	1
	228	15164-004		A	·NUT	3403 / 0001	/	2
	231	15164-024		A	·OLIVE	3403 / 0001	/	2
	234	15164-094		A	·O-RING	3403 / 0001	/	2
	237	26034-003			·NYLON TUBE, 3-WAY TO STRAINER	3403 / 0001	3776 / 0181	1
	240	15164-004		A	·NUT	3403 / 0001	3776 / 0181	2
-	243	15164-024		A	·OLIVE	3403 / 0001	3776 / 0181	2
-	246	15164-094		A	·O-RING	3403 / 0001	3776 / 0181	2
	249	21946-006			·ADAPTER	3403	3557	3
	252	AN3-24A		A	·BOLT	3403	3557	2
	253	NAS1351C-3-24		A	·SCREW	3558 / 0001	/	2
	255	NAS1149F0332P		A	·WASHER	3403	3557	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	258	17355-002			·BRACKET ASSEMBLY, PROP UNIT, FUSELAGE	3403 / 0001	/	1
	261	21947-004			·PROPORTIONING UNIT, MAIN	3403	3484	1
					FOR SPARES USE P/N 21947-005			
	262	21947-005			·PROPORTIONING UNIT, MAIN	3485 / 0001	/	1
	264	AN3-12A		A	·BOLT	3403 / 0001	/	2
	267	NAS1149F0332P		A	·WASHER	3403 / 0001	/	2
	270	NAS43HT3-16		A	·SPACER	3403 / 0001	/	2
	273	26034-013			·NYLON TUBE, MAIN PU TO TEE	3403 / 0001	/	1
	276	15164-004		A	·NUT	3403 / 0001	/	2
	279	15164-024		A	·OLIVE	3403 / 0001	/	2
	282	15164-094		A	·O-RING	3403 / 0001	/	2
	285	21942-127			·NYLON TUBE, FIREWALL TO MAIN PU	3403 / 0001	/	1
	288	15164-002		A	·NUT	3403 / 0001	/	1
-	291	15164-022		A	·OLIVE	3403 / 0001	/	1
-	294	15164-092		A	·O-RING	3403 / 0001	/	1
	297	15164-101		A	·NUT	3403 / 0001	/	1
	300	NAS1149D0732K		A	·WASHER	3403 / 0001	/	1
	303	17386-001			·FITTING	3403 / 0001	/	1
	304	17384-001			·DRAIN VALVE	3403	3650	1
					FOR SPARES USE P/N 26613-001			
	305	26613-001			·DRAIN VALVE	3651 / 0001	/	1
	306	PRT OF ITM 304		A	·O-RING	3403	3650	1
	307	PRT OF ITM 304		A	·NUT	3403	3650	1
	308	PRT OF ITM 305		A	·O-RING	3651 / 0001	/	1
	309	PRT OF ITM 305		A	·SPACER	3651 / 0001	/	1
	310	PRT OF ITM 305		A	·NUT	3651 / 0001	/	1
	312	25498-001			·MOUNT PLATE, GLYCOL SWITCH, LH	3003	3003	1
						3310	3310	
						3326	3326	
					WHEN EXHTD USE P/N 25498-003			
	313	25498-003			·MOUNT PLATE, GLYCOL SWITCH, LH	3403 / 0001	/	1
					ALTERNATE FOR P/N 25498-001			
-	315	25498-002			·MOUNT PLATE, GLYCOL SWITCH, RH	3003	3003	1
						3310	3310	
						3326	3326	
					WHEN EXHTD USE P/N 25498-004			
-	316	25498-004			·MOUNT PLATE, GLYCOL SWITCH, RH	3403 / 0001	/	1
					ALTERNATE FOR P/N 25498-002			
	318	MS35207-263		A	·SCREW	3403 / 0001	/	2
	321	NAS620C10L		A	·WASHER	3403 / 0001	/	2
-	324	22072-001			·STRAINER, GLYCOL TANK	3403 / 0001	3776 / 0181	1
	325	22072-002			·STRAINER, GLYCOL TANK	3777 / 0182	3848 / 0318	1
					FOR SPARES USE P/N 22070-003			
	326	22072-003			·STRAINER, GLYCOL TANK	3849 / 0319	/	1
	327	AS3582-112		A	·O-RING	3403 / 0001	/	1
	330	24881-002			·SWITCH, LOW LEVEL, GLYCOL TANK	3403 / 0001	/	1
-	333	21943-106			·TYGON TUBE, VENT, GLYCOL	3403 / 0001	3682 / 0030	1
					FOR SPARES USE P/N 21943-116			
	334	21943-116			·TYGON TUBE, VENT, GLYCOL	3683 0031	/	1
	336	50566-050		A	·SPRING CLAMP	3403 / 0001	/	2
	339	AN807-6D			·FITTING	3403 / 0001	/	1
	342	NAS1149D0932K		A	·WASHER	3403 / 0001	/	2
	345	AN924-6D		A	·NUT	3403 / 0001	/	1
	348	17383-001			TUBE ASSEMBLY, VENT, GLYCOL	3403 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	351	18052-001			·FILLER CAP, ICE PROTECTION	3403 / 0001	4173 / 0984	1
					FOR SPARES USE P/N 18052-003			
-	352	18052-002			·FILLER CAP, ICE PROTECTION	4174 / 0985	4260 / 1170	1
					FOR SPARES USE P/N 18052-003			
-	353	18052-003			·FILLER CAP, ICE PROTECTION	4261 / 1171	/	1
-	354	18052-101			··NECK, FILLER CAP	3403 / 0001	4173 / 0984	1
-	355	18052-201			··NECK, FILLER CAP	4174 / 0985	4260 / 1170	1
	356	18052-301			··NECK, FILLER CAP	4261 / 1171	/	
-	357	18052-102			··LOCKING CENTER, FILLER CAP	3403 / 0001	4173 / 0984	1
-	358	18052-202			··LOCKING CENTER, FILLER CAP	4174 / 0985	4260 / 1170	1
	359	18052-302			··LOCKING CENTER, FILLER CAP	4261 / 1171	/	1
	360	18052-103			··NUT, RIVETED, FILLER CAP	3403 / 0001	/	1
-	363	17382-005			·GLYCOL LEVEL SENDING UNIT, LH	3403 / 0001	3710 / 0060	1
					FOR SPARES USE P/N 17382-006			
-	364	17382-006			·GLYCOL LEVEL SENDING UNIT, LH	3711 / 0061	3848 / 0318	1
-	365	23137-003			·GLYCOL LEVEL SENDING UNIT, LH	3849 / 0319	4214 / 1058	1
	366	23137-013			·GLYCOL LEVEL SENDING UNIT, LH	4215 / 1059	/	
-	367	17382-511			··DIAL, LH	3403 / 0001	3710 / 0060	1
					FOR SPARES USE P/N 17382-601			
-	368	17382-601			··DIAL, LH	3711 / 0061		1
-	369	18484-102			··GASKET	3403 / 0001	3848 / 0318	1
	370	23137-009			··GASKET	3849 0319		1
-	371	21992-001			·GLYCOL LEVEL SENDING UNIT, RH	3403 / 0001	3710 / 0060	1
					FOR SPARES USE P/N 21992-002			
-	372	21992-002			·GLYCOL LEVEL SENDING UNIT, RH	3711 / 0061	3848 / 0318	1
-	373	23137-004			·GLYCOL LEVEL SENDING UNIT, RH	3849 / 0319	4214 / 1058	1
-	374	23137-014			·GLYCOL LEVEL SENDING UNIT, RH	4215 / 1059	/	1
-	375	21992-111			··DIAL, RH	3403 / 0001	3710 / 0060	1
-	376	21992-201			··DIAL, RH	3711 / 0061	/	1
-	378	18484-102			··GASKET	3403 / 0001	3848 / 0318	1
-	379	23137-009			··GASKET	3849 0319		1
	381	NAS1351-3-16P		A	·SCREW	3403 / 0001	/	5
	382	NAS1149D0332K		A	·WASHER	3849 0319	/	5
	384	NAS1473A3		A	·NUTPLATE	3403 / 0001	/	5
	396	21956-001			·TIMER BOX	3403 / 0001	/	1
	399	26355-002			·PROPORTIONING UNIT, TAIL	3403	3484	1
					FOR SPARES USE P/N 26355-003			
	500	26355-003			·PROPORTIONING UNIT, TAIL	3485 / 0001	/	1
	501	NAS1801-08-5		A	·SCREW	3403 / 0001	/	4
	503	NAS1149FN832P		A	·WASHER	3403 / 0001	/	4
	506	NAS1836-08-08		A	·POTTED INSERT	3403 / 0001	/	4
					ALTERNATE FOR P/N NAS1836-08-10			
-	507	NAS1836-08-10		A	·POTTED INSERT	3403 / 0001	/	4
					ALTERNATE FOR P/N NAS1836-08-08			
	509	21942-110			·NYLON TUBE, TAIL PU TO COUPLER	3403 / 0001	/	1
	512	15164-002		A	·NUT	3403 / 0001	/	2
-	515	15164-022		A	·OLIVE	3403 / 0001	/	2
-	518	15164-092		A	·O-RING	3403 / 0001	/	2
	521	21942-106			·NYLON TUBE, TAIL PU TO COUPLER	3403 / 0001	/	2
	524	15164-002		A	·NUT	3403 / 0001	/	4
-	527	15164-022		A	·OLIVE	3403 / 0001	/	4
-	530	15164-092		A	·O-RING	3403 / 0001	/	4
	533	21942-111			·NYLON TUBE, COUPLER TO TAIL PU	3403 / 0001	/	2
	536	15164-001		A	·NUT	3403 / 0001	/	4

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	539	15164-021		A		·OLIVE	3403 / 0001	/	4
-	542	15164-091		A		·O-RING	3403 / 0001	/	4
	545	21942-121				·NYLON TUBE, TAIL PU TO TEST PORT	3403 / 0001	/	1
	548	15164-004		A		·NUT	3403 / 0001	/	2
-	551	15164-024		A		·OLIVE	3403 / 0001	/	2
-	554	15164-094		A		·O-RING	3403 / 0001	/	2
	557	15164-041				·COUPLER	3403 / 0001	/	2
	560	15164-042				·COUPLER	3403 / 0001	/	3
-	563	50132-001				·TIE DOWN	3403 / 0001	/	AR
-	566	MS3367-1-9				·STRAP, TIE DOWN	3403 / 0001	/	AR
	569	15164-012		A		·NUT	3403 / 0001	/	4
	572	15164-032		A		·OLIVE	3403 / 0001	/	4
	575	15164-092		A		·O-RING	3403 / 0001	/	4
	578	21943-101				·NYLON TUBE, COUPLER TO ICE PANEL	3403 / 0001	/	4
	581	15164-042				·COUPLER	3403 / 0001	/	4
	584	15164-002		A		·NUT	3403 / 0001	/	8
	587	15164-022		A		·OLIVE	3403 / 0001	/	8
	590	15164-092		A		·O-RING	3403 / 0001	/	8
	593	21943-102				·NYLON TUBE, PU TO COUPLER, INBD, LH	3403 / 0001	/	1
	596	21943-103				·NYLON TUBE, PU TO COUPLER, OUTBD, LH	3403 / 0001	/	1
	599	21943-104				·NYLON TUBE, PU TO COUPLER, INBD, RH	3403 / 0001	/	1
	602	21943-105				·NYLON TUBE, PU TO COUPLER, OUTBD, RH	3403 / 0001	/	1
-	605	50132-001				·TIE DOWN	3403 / 0001	/	AR
-	608	MS3367-1-9				·STRAP, TIE DOWN	3403 / 0001	/	AR
-	611	MS35489-149				·GROMMET	3403 / 0001	/	2
	623	19869-101				·NYLON TUBE, PROP UNIT/ICE PANEL, OUTBD, LH	3403 / 0001	/	1
	626	15164-002		A		·NUT	3403 / 0001	/	2
	629	15164-022		A		·OLIVE	3403 / 0001	/	2
	632	15164-092		A		·O-RING	3403 / 0001	/	2
	635	50132-001				·TIE DOWN	3403 / 0001	/	AR
	638	MS3367-1-9				·STRAP, TIE DOWN	3403 / 0001	/	AR
	641	50145-601				·BUSHING	3403 / 0001	/	2
						ALTERNATE FOR P/N 51050-100			
	644	51050-100				·BUSHING	3403 / 0001	/	2
						ALTERNATE FOR P/N 50145-601			
	647	19868-106				·NYLON TUBE, PROP UNIT TO HORIZ PANELS , LH	3403 / 0001	/	1
	650	19868-107				·NYLON TUBE, PROP UNIT TO HORIZ PANELS , RH	3403 / 0001	/	1
	653	15164-012		A		·NUT	3403 / 0001	/	1
	656	15164-032		A		·OLIVE	3403 / 0001	/	1
	659	15164-092		A		·O-RING	3403 / 0001	/	1
	662	15164-002		A		·NUT	3403 / 0001	/	1
-	665	15164-022		A		·OLIVE	3403 / 0001	/	1
-	668	15164-092		A		·O-RING	3403 / 0001	/	1
	671	50428-001				·SPIRAL WRAP, CLEAR	3403 / 0001	/	AR
						ALTERNATE FOR P/N 50428-002			
-	674	50428-002				·SPIRAL WRAP, CLEAR	3403 / 0001	/	AR
						ALTERNATE FOR P/N 50428-001			
-	677	MS21266-1N				·GROMMET	3403 / 0001	/	AR
-	680	50132-001		A		·TIE DOWN	3403 / 0001	/	AR
-	683	MS3367-1-9		A		·STRAP, TIE DOWN	3403 / 0001	/	AR
-	686	MS35489-22				·GROMMET	3403 / 0001	/	2
	701	25921-102				·NYLON TUBE, COUPLER TO COUPLER	3403 / 0001	/	2
	704	25921-103				·NYLON TUBE, COUPLER TO ICE PANEL	3403 / 0001	/	2
	706	15164-001		A		·NUT	3403 / 0001	/	8

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	708	15164-021		A		·OLIVE	3403 / 0001	/	8
	710	15164-091		A		·O-RING	3403 / 0001	/	8
-	711	15164-041				·COUPLER	3403 / 0001	/	2
-	712	MS35489-5				·GROMMET	3403 / 0001	/	2
-	713	MS35489-6				·GROMMET	3403 / 0001	/	2
-	714	50132-001		A		·TIE DOWN	3403 / 0001	/	AR
-	715	MS3367-1-9		A		·STRAP, TIE DOWN	3403 / 0001	/	AR
	716	21946-009				·FITTING	3403 / 0001	/	1
	719	NAS1149F0732P		A		·WASHER	3403 / 0001	/	1
	722	15163-025		A		·BACKING NUT	3403 / 0001	/	1
	723	26401-001				·TUBE ASSEMBLY	3403 / 0001	/	1
	724	21946-010				·COUPLER	3403 / 0001	/	1
	725	15164-012		A		·NUT	3403 / 0001	/	1
	728	15164-032		A		·OLIVE	3403 / 0001	/	1
	731	15164-092		A		·O-RING	3403 / 0001	/	1
	734	51050-038				·BUSHING	3403 / 0001	/	1
	737	21981-001				·BRACKET	3403	3545	2
	738	28310-001				·BRACKET, LH	3546 / 0001	/	1
-	739	28310-002				·BRACKET, RH	3546 / 0001	/	1
	740	51050-088				·BUSHING	3403	3545	4
	741	51050-150				·BUSHING	3546 / 0001	/	4
	743	MS35489-150				·GROMMET	3403 / 0001	/	2
	746	15163-028				·SLEEVE ASSEMBLY	3403		1
						ALTERNATE FOR P/N 53289-001			
	747	53289-001				·HOSE ASSEMBLY	3403		1
						ALTERNATE FOR P/N 15163-028			
	748	53283-001				·HOSE ASSEMBLY	/ 0001	/	1
	749	AN832-4J				·BULKHEAD FITTING	3403 / 0001	/	1
	750	26929-001				·BRACKET	/ 0001	/	1
	752	NAS1149D0732K		A		·WASHER	3403 / 0001	/	1
	755	AN924-4J		A		·BULKHEAD NUT	3403 / 0001	/	1
	758	51817-001				·REDUCER	3403 / 0001	/	1
	761	15333-004				·FLUID LINE	3403		1
	762	26930-001				·FLUID LINE	/ 0001	/	1
	764	MS21919WDG3		A		·ADEL CLAMP	3403 / 0001	/	2
	767	AN3-5A		A		·BOLT	3403		2
	768	AN3-11A		A		·BOLT	/ 0001	/	1
	769	AN3-4A		A		·BOLT	/ 0001	/	1
	770	NAS1149F0332P		A		·WASHER	3403 / 0001	/	4
	771	NAS43DD3-45FC		A		·SPACER	/ 0001	/	1
	773	MS21045-3		A		·NUT	3403 / 0001	/	2
	776	AN832-3J				·BULKHEAD FITTING	3403 / 0001	/	1
	779	NAS1149D0632K		A		·WASHER	3403 / 0001	/	1
	782	AN924-3J		A		·BULKHEAD NUT	3403 / 0001	/	1
-	785	15388-006				·FEED TUBE, SLINGER RING	3403	3484	1
						FOR SPARES USE P/N 13857-001			
-	786	15388-005				·FEED TUBE, SLINGER RING	3485 / 0001	3659 / 0003	1
						FOR SPARES USE P/N 13857-001			
	787	13857-001				·FEED TUBE, SLINGER RING	3660 / 0004	/	1
	788	MS21919WDG3				·ADEL CLAMP	3403 / 0001	/	1
	791	AN525-832R8		A		·SCREW	3403		1
	792	AN3-3A		A		·BOLT	/ 0001	/	1
	794	NAS1149F0332P		A		·WASHER	3403 / 0001	/	1
	797	15373-005				·BRACKET, SLINGER RING SPRAYER	3403 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	798	MS27039-806		A	·SCREW	3403 / 0001	/	1
	799	NAS1149FN816P		A	·WASHER	3403 / 0001	/	1
	802	50132-001			·TIE DOWN	3403 / 0001	/	AR
	805	MS3367-1-9			·STRAP, TIE DOWN	3403 / 0001	/	AR
	808	21942-135			·NYLON TUBE, SPRAY NOZZLE TO UNEQUAL TEE	3403 / 0001	/	2
	811	15164-001		A	·NUT	3403 / 0001	/	4
	814	15164-021		A	·OLIVE	3403 / 0001	/	4
	817	15164-091		A	·O-RING	3403 / 0001	/	4
	820	21946-007			·UNEQUAL TEE	3403 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 22-12-05 DET			GTA 82 PITCH TRIM ADAPTER INSTALLATION			
	401	RF 30-10-01 DET			ICE PROTECTION SYSTEM INSTL - AIRFOIL			
	402	RF 30-40-01 DET			ICE PROTECTION SYSTEM INSTALLATION - SPRAY NOZZLE			
	403	RF 30-60-01 DET			ICE PROTECTION SYSTEM INSTL - PROPELLER			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-3406, 22-3420, 22-3465; REFER TO 22-3485 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0137, 22T-0140, 22T-0142, 22T-0143; REFER TO 22T-0145 FOR PART IDENTIFICA-TION.			
					4) SERIAL NUMBER 22T-0311 THRU 22T-0314, 22T-0316 THRU 22T-0317; REFER TO 22T-0319 FOR PART IDENTI-FICATION.			
			@		SERIAL NUMBER 22-3003, 22-3310, 22-3326 MAY NOT SPARE TO P/N 22070-003.			

Intentionally Left Blank

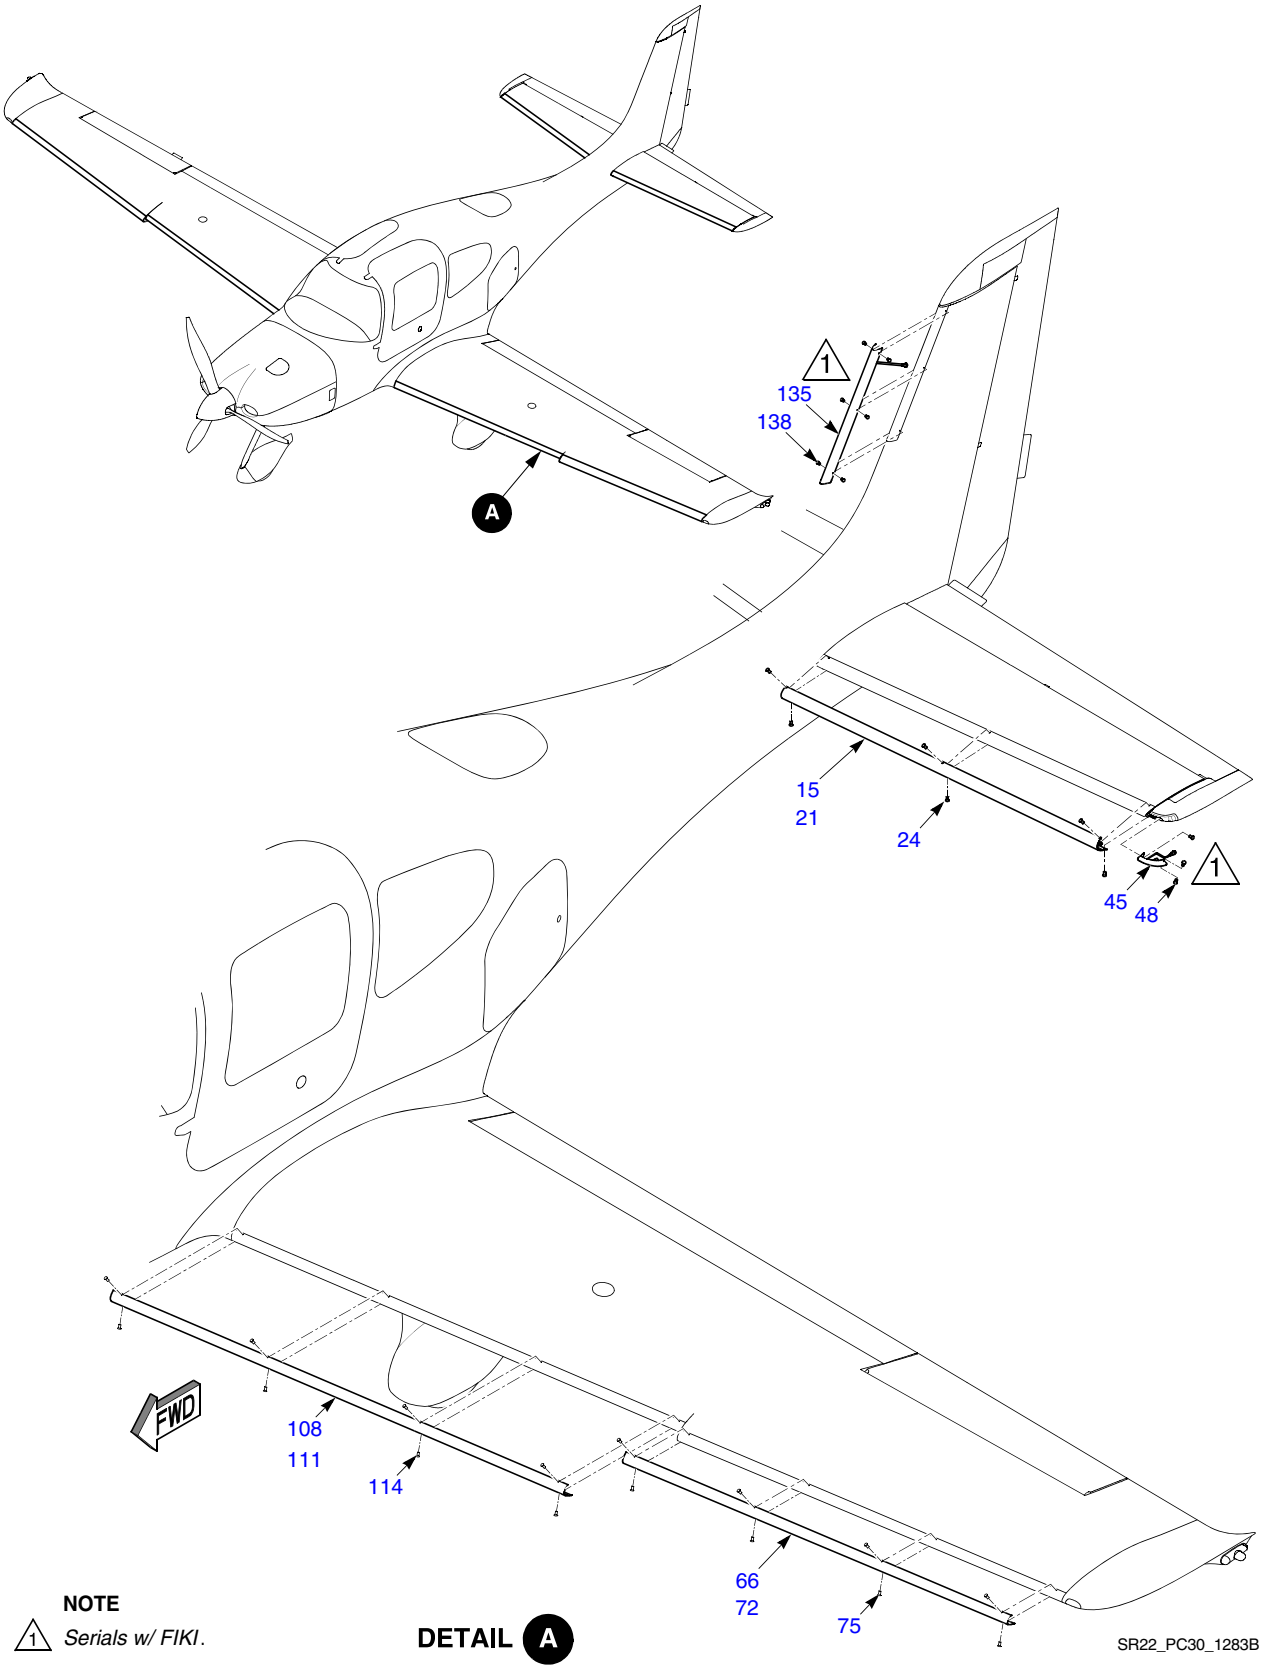

NOTE

1 *Serials w/ FIKI.*

DETAIL A

Figure-01
Ice Protection System: Airfoil

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ICE PROTECTION SYSTEM INSTALLATION - AIRFOIL	0334 / 0001	/	NP
-	3	NO PRT NUMBER			SYSTEM INSTALLATION, ICE PROTECTION LH	0334 / 0001	/	NP
-	6	NO PRT NUMBER			SYSTEM INSTALLATION, ICE PROTECTION RH	0334 / 0001	/	NP
-	9	15124-001			·HORIZONTAL STABILIZER POROUS PANEL, LH	0334	2938	1
					FOR SPARES USE P/N 18355-007			
-	12	18355-001			·HORIZONTAL STABILIZER POROUS PANEL, LH	2939	3068	1
					FOR SPARES USE P/N 18355-007			
	15	18355-007			·HORIZONTAL STABILIZER POROUS PANEL, LH, BASIC2	3069 / 0001	/	1
	21	19703-001			·HORIZONTAL STABILIZER POROUS PANEL, LH, FIKI	3403 / 0001	/	1
	24	CR3524-4		A	·RIVET	0334 / 0001	/	6
-	27	15124-002			·HORIZONTAL STABILIZER POROUS PANEL, RH	0334	2938	1
					FOR SPARES USE P/N 18355-008			
-	30	18355-002			·HORIZONTAL STABILIZER POROUS PANEL, RH	2939	3068	1
					FOR SPARES USE P/N 18355-008			
-	33	18355-008			·HORIZONTAL STABILIZER POROUS PANEL, RH, BASIC2	3069 / 0001	/	1
-	39	19703-002			·HORIZONTAL STABILIZER POROUS PANEL, RH, FIKI	3403 / 0001	/	1
-	42	CR3524-4		A	·RIVET	0334 / 0001	/	6
	45	19702-003			·ELEVATOR TIP POROUS PANEL, LH, FIKI	3403 / 0001	/	1
	48	CR3524-4		A	·RIVET	3403 / 0001	/	3
-	51	19702-004			·ELEVATOR TIP POROUS PANEL, RH, FIKI	3403 / 0001	/	1
-	54	CR3524-4		A	·RIVET	3403 / 0001	/	3
-	57	15124-003			·WING OUTBOARD POROUS PANEL, LH	0334	1238	1
					FOR SPARES USE P/N 15124-009			
-	60	15124-009			·WING OUTBOARD POROUS PANEL, LH	1239	2437	1
-	63	18689-003			·WING OUTBOARD POROUS PANEL, LH	2438	3021	1
					FOR SPARES USE P/N 18689-005			
	66	18689-005			·WING OUTBOARD POROUS PANEL, LH, BASIC2	3022 / 0001	/	1
	72	19700-003			·WING OUTBOARD POROUS PANEL, LH, FIKI	3403 / 0001	/	1
	75	CR3524-4		A	·RIVET	0334	2437	6
						2438 / 0001	/	8
-	78	15124-004			·WING OUTBOARD POROUS PANEL, RH	0334	1238	1
					FOR SPARES USE P/N 15124-010			
-	81	15124-010			·WING OUTBOARD POROUS PANEL, RH	1239	2437	1
-	84	18689-004			·WING OUTBOARD POROUS PANEL, RH	2438	3021	1
					FOR SPARES USE P/N 18689-006			
-	87	18689-006			·WING OUTBOARD POROUS PANEL, RH, BASIC2	3022 / 0001	/	1
-	93	19700-004			·WING OUTBOARD POROUS PANEL, RH, FIKI	3403	3404	1
					FOR SPARES USE P/N 19700-006			
-	94	19700-006			·WING OUTBOARD POROUS PANEL, RH, FIKI	3405 / 0001	/	1
-	96	CR3524-4		A	·RIVET	0334	2437	6
						2438 / 0001	/	8
-	99	15124-005			·WING INBOARD POROUS PANEL, LH	0334	0527	1
-	102	15124-007			·WING INBOARD POROUS PANEL, LH	0528	2437	1
	108	18689-001			·WING INBOARD POROUS PANEL, LH, BASIC2	2438 / 0001	/	1
	111	19700-001			·WING INBOARD POROUS PANEL, LH, FIKI	3403 / 0001	/	1
	114	CR3524-4		A	·RIVET	0334	2437	6
						2438 / 0001	/	8
-	117	15124-006			·WING INBOARD POROUS PANEL, RH	0334	0527	1
-	120	15124-008			·WING INBOARD POROUS PANEL, RH	0528	2437	1
-	123	18689-002			·WING INBOARD POROUS PANEL, RH, BASIC2	2438 / 0001	/	1
-	129	19700-002			·WING INBOARD POROUS PANEL, RH, FIKI	3403 / 0001	/	1
-	132	CR3524-4		A	·RIVET	0334	2437	6
						2438 / 0001	/	8
	135	19701-001			·VERTICAL POROUS PANEL, FIKI	3403 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ·····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	138	CR3524-4		A	·RIVET	3403 / 0001	/	6
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22- 2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PART IDENTIFICATION.			

Intentionally Left Blank

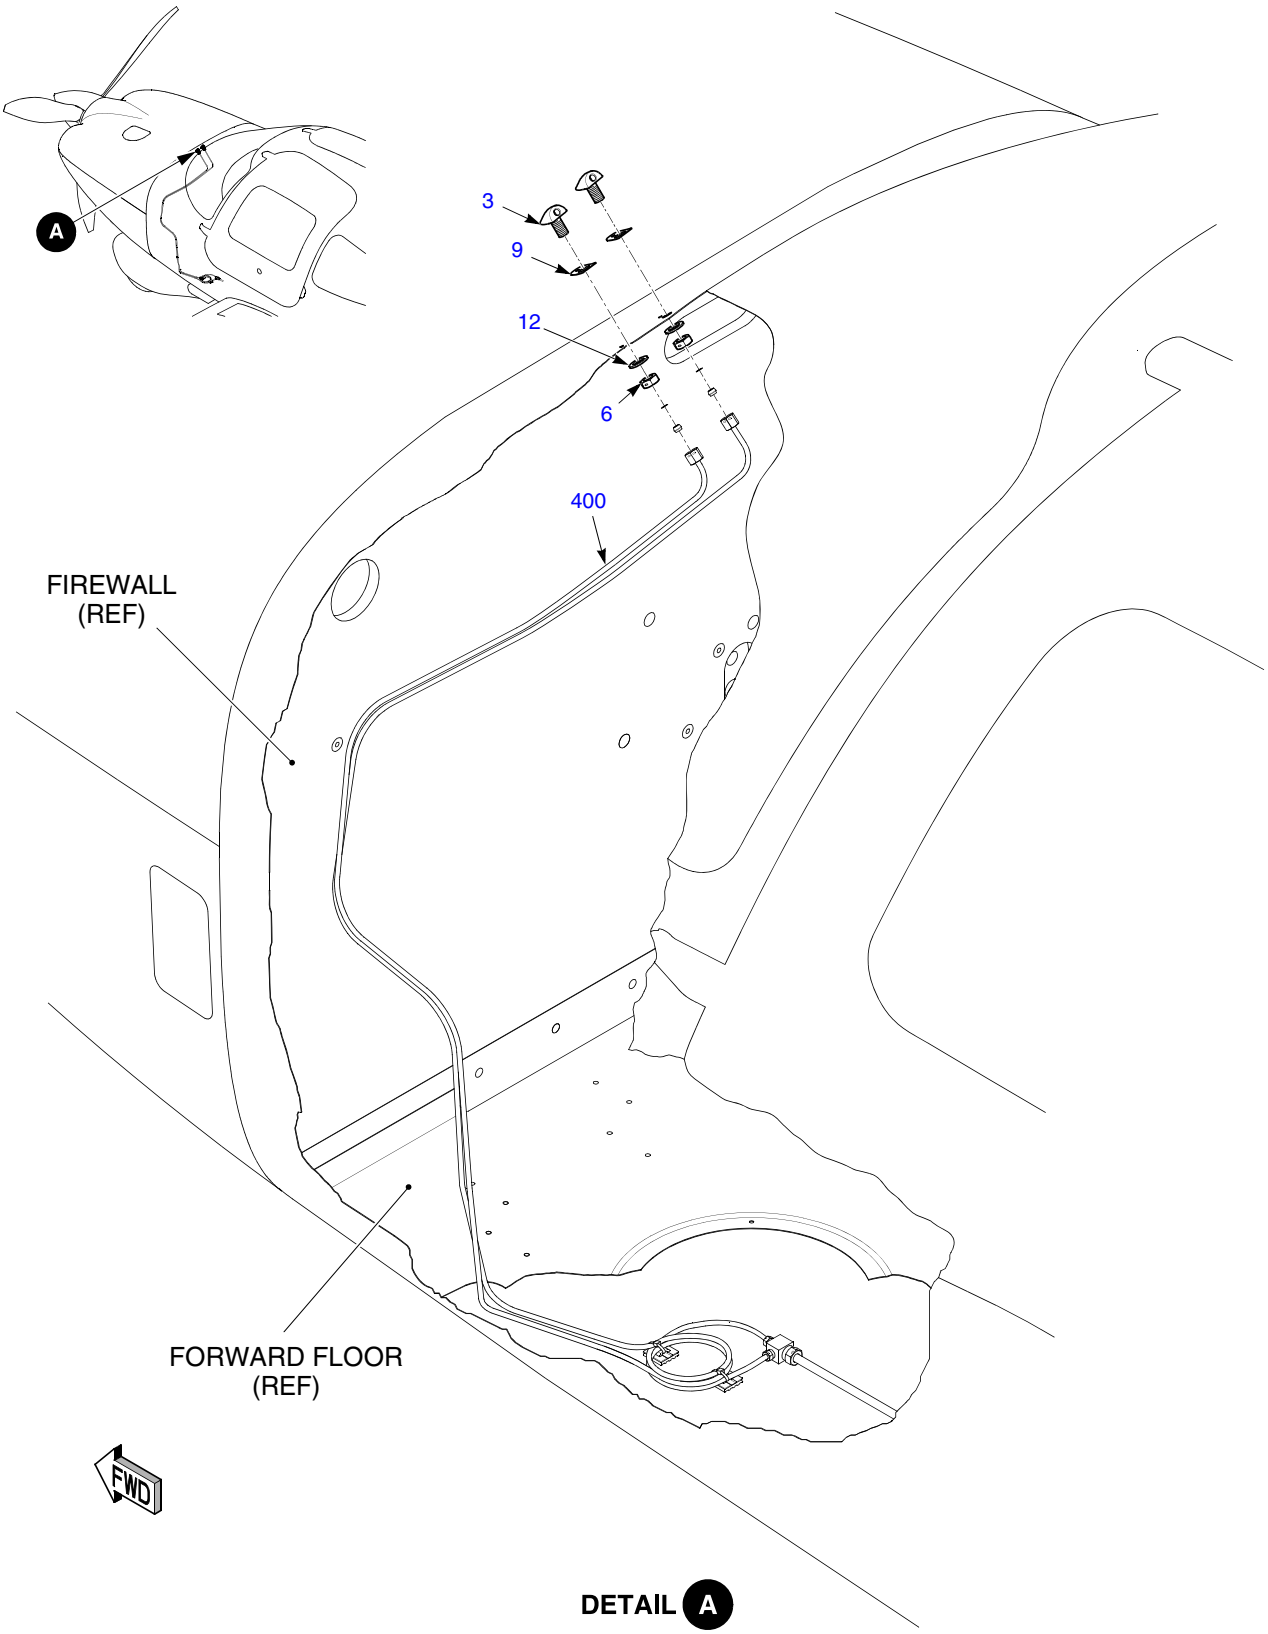

DETAIL A

Serials 22-3403 & subs, 22T-0001 & subs w/ FIKI.

SR22_PC30_1971

Figure-01

Ice Protection System: Windshield - Serials 22-3403 & subs, 22T-0001 & subs

EFFECTIVITY:
Serials 22-3403 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ICE PROTECTION SYSTEM - SPRAY NOZZLE	3403 / 0001	/	NP
	3	19610-001			·SPRAY NOZZLE	3403 / 0001	/	2
	6	15164-101		A	·NUT	3403 / 0001	/	2
	9	19623-001		A	·GASKET	3403 / 0001	/	2
	12	50327-006		A	·WASHER	3403 / 0001	/	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 30-07-01 DET			ICE PROTECTION SYS INSTL - DISTRIBUTION, FIKI			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

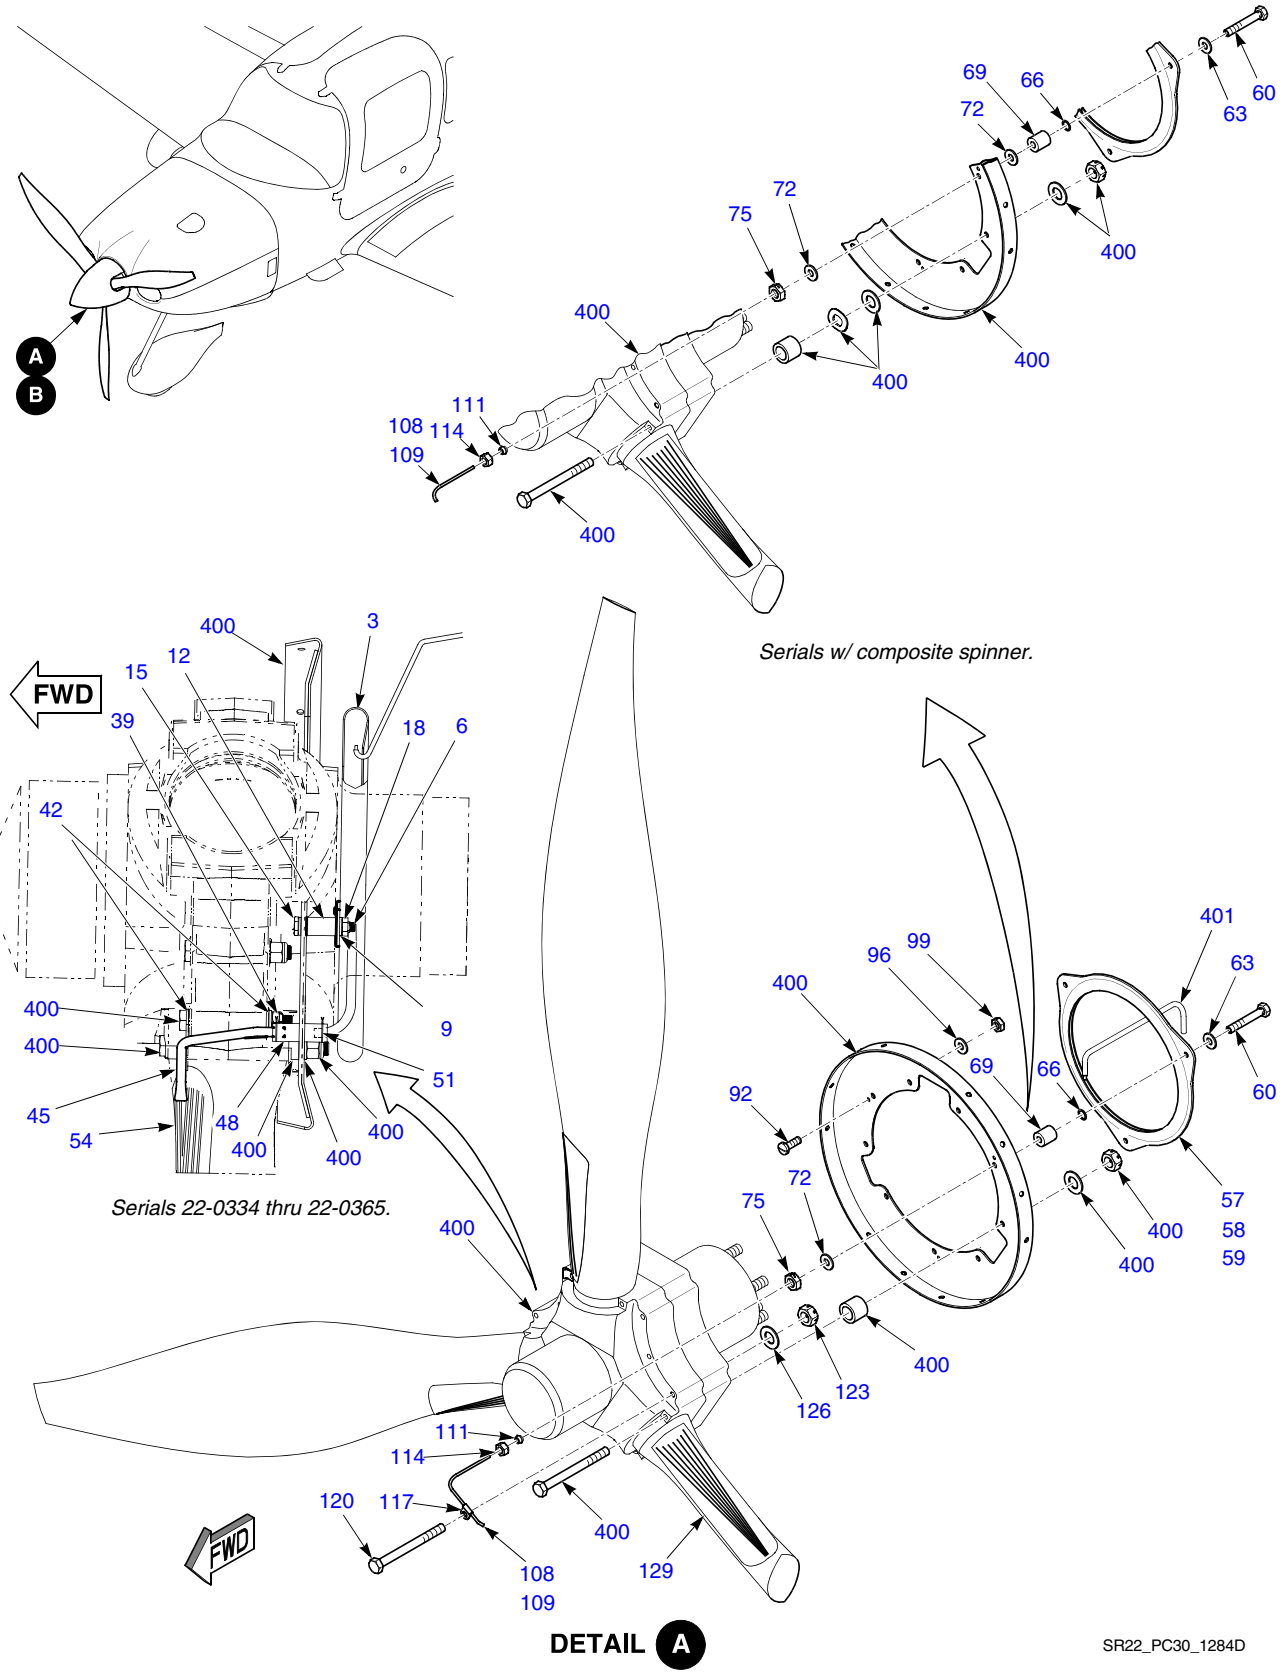

Figure-01

Ice Protection System: Propeller - Serials w/ Hartzell Propeller (1 of 2)

EFFECTIVITY:
Serials w/ Hartzell Propeller

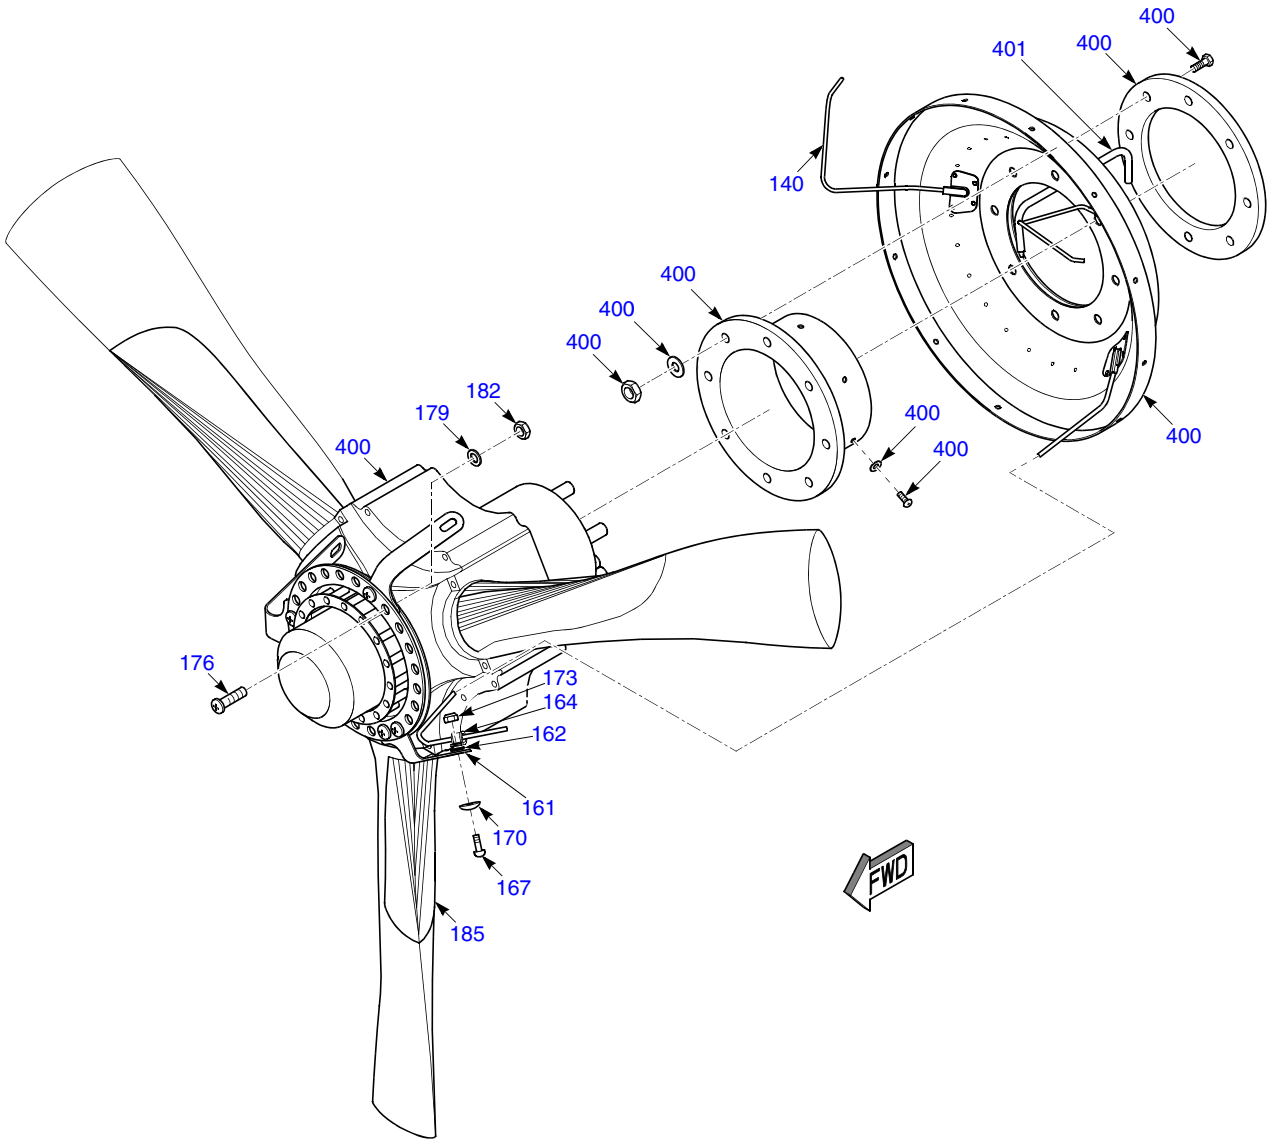

DETAIL B

SR22_PC30_1368

Figure-01

Ice Protection System: Propeller - Serials w/ McCauley Propeller (2 of 2)

EFFECTIVITY:
Serials w/ McCauley Propeller

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ICE PROTECTION SYSTEM INSTALLATION - PROPELLER	0334	0365	NP
-	2	NO PRT NUMBER			·HARTZELL INSTALLATION	0334	0365	
	3	D-4688			··SLINGER RING	0334	0365	1
	6	B-3384-17H		A	··BOLT	0334	0365	3
	9	B-3834-0463		A	··WASHER	0334	0365	3
	12	A-4692		A	··STANDOFF, SLINGER RING	0334	0365	3
	15	B-3834-0463		A	··WASHER	0334	0365	3
	18	B-3808-4		A	··NUT, HEX, SELF-LOCKING	0334	0365	3
	39	B-3599		A	··NUT, HEX, SELF-LOCKING	0334	0365	3
	42	B-3834-0663		A	··WASHER	0334	0365	6
	45	B-4689			··FEED TUBE, PROPELLER	0334	0365	3
	48	A-1866-3		A	··HOSE, FEED TUBE MOUNTING	0334	0365	3
	51	NO PRT NUMBER		A	··SAFETY WIRE	0334	0365	6
	54	C-2131-8			··ANTI-ICE BOOTS	0334	0365	3
-	55	NO PRT NUMBER			·CIRRUS DESIGN INSTALLATION	0366 / 0001	/	NP
	57	15321-001			··SLINGER RING	0366	3520	1
	58	15321-002			··SLINGER RING, HEAVY WEIGHT	3521		1
	59	15321-003			··SLINGER RING, LIGHT WEIGHT	3521 / 0001	/	1
	60	15322-001		A	··BOLT	0366 / 0001	/	3
	63	15163-022		A	··BONDED SEAL	0366 / 0001	/	3
	66	15163-023		A	··O-RING	0366 / 0001	/	3
	69	15323-001		A	··STANDOFF	0366 / 0001	/	3
	72	NAS1149F0632P		A	··WASHER (METAL SPINNER)	0366 / 0001	/	3
				A	··WASHER (COMPOSITE SPINNER)	2022 / 0001	/	6
	75	15164-111		A	··NUT	0366 / 0001	/	3
	92	MS35266-63		A	··SCREW	0366 / 0001	/	3
					ALTERNATE FOR P/N AN501A10-8			
					ALTERNATE FOR P/N AN502-10-8			
					ALTERNATE FOR P/N AN3H-3A			
-	93	AN501A10- 8		A	··SCREW	2044 / 0001	/	3
					ALTERNATE FOR P/N MS35266-63			
					ALTERNATE FOR P/N AN502-10-8			
					ALTERNATE FOR P/N AN3H-3A			
-	94	AN502-10-8		A	··SCREW	2044 / 0001	/	3
					ALTERNATE FOR P/N MS35266-63			
					ALTERNATE FOR P/N AN501A10-8			
					ALTERNATE FOR P/N AN3H-3A			
-	95	AN3H-3A		A	··SCREW	2044 / 0001	/	3
					ALTERNATE FOR P/N MS35266-63			
					ALTERNATE FOR P/N AN501A10-8			
					ALTERNATE FOR P/N AN502-10-8			
	96	NAS1149F0332P		A	··WASHER	0366 / 0001	/	3
	99	AN364-1032		A	··LOCKNUT	0366 / 0001	/	3
					ALTERNATE FOR P/N MS21083-N3			
-	102	MS21083-N3		A	··LOCKNUT	0366 / 0001	/	3
					ALTERNATE FOR P/N AN364-1032			
-	105	15407-001			··FEED TUBE, PROPELLER	0366	0412	3
					FOR SPARES USE P/N 15407-003			
	108	15407-002			··FEED TUBE, PROPELLER	0413	2201	3
					FOR SPARES USE P/N 15407-003			
	109	15407-003			··FEED TUBE, PROPELLER	2202 / 0001	/	3
	111	15164-091		A	··O-RING	0366 / 0001	/	3
	114	15164-011		A	··NUT	0366 / 0001	/	3

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	117	15325-001		A	··P-CLIP	0366 / 0001	/	3
	120	PRT OF ITM 400		A	··BOLT	0366 / 0001	/	3
	123	PRT OF ITM 400		A	··NUT	0366 / 0001	/	3
	126	PRT OF ITM 400		A	··WASHER	0366 / 0001	/	3
	129	15320-101			··BOOT, DE-ICE, PROPELLER	0366 / 0001	/	3
-	131	NO PRT NUMBER			·MCCAULEY INSTALLATION	0687		NP
	140	15798-102			··FEED TUBE	0687		3
	161	15798-104			··FEED TUBE BRACKET	0687		3
	162	MS35335-32		A	··WASHER	0687		3
	164	PRT OF ITM 161		A	··P-CLIP	0687		3
	167	PRT OF ITM 161		A	··SCREW	0687		3
	170	PRT OF ITM 161		A	··WASHER	0687		3
	173	PRT OF ITM 161		A	··NUT	0687		3
	176	MS27039-0806		A	··SCREW	0687		6
	179	NAS1149FN816P		A	··WASHER	0687		6
	182	MS21083N08		A	··NUT	0687		6
	185	15326-003			··BOOT, DE-ICE, PROPELLER	0687		3
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 61-10-01 DET			PROPELLER INSTALLATION			
	401	RF 30-05-01 DET			ICE PROTECTION SYS INSTL - DISTRIBUTION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2037; REFER TO 22-2202 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

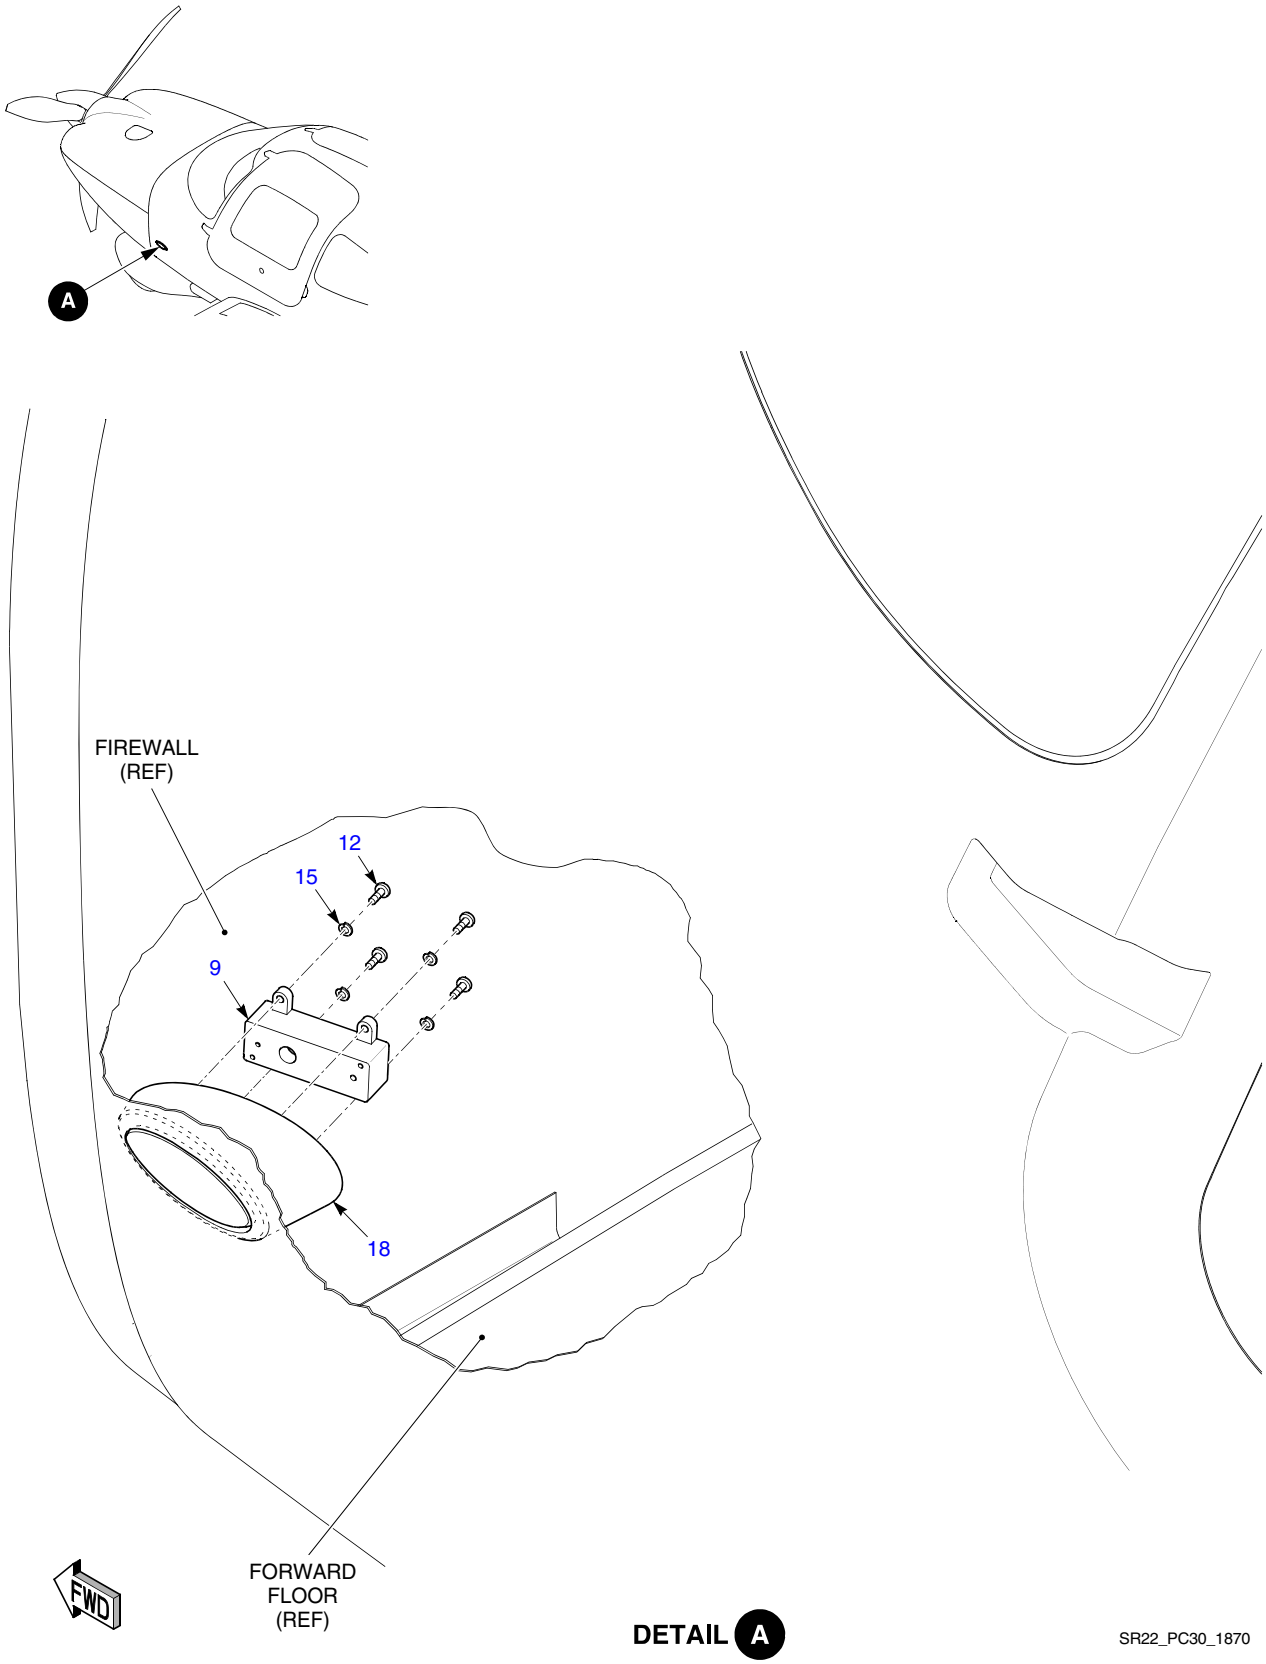

Figure-01

Ice Protection System: Detection - Serials 22-3403 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ICE LIGHT	3403 / 0001	/	NP
-	3	19984-001			·ICE LIGHT ASSEMBLY, LH	3403 / 0001	/	1
-	6	19984-002			·ICE LIGHT ASSEMBLY, RH	3403 / 0001	/	1
	9	18278-002			··ICE LIGHT	3403 / 0001	/	1
	12	MS51957-30		A	··SCREW	3403 / 0001	/	4
	15	MS35338-136		A	··WASHER	3403 / 0001	/	4
	18	PRT OF ITM 3			··LENS/HOUSING	3403 / 0001	/	1
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

CHAPTER 31

INDICATING AND RECORDING

Intentionally Left Blank

CHAPTER 31 - INDICATING AND RECORDING

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
31-LOEP	1	04 SEP 2018
31-LOEP	2	04 SEP 2018
31-TOC	1	04 SEP 2018
31-TOC	2	04 SEP 2018
31-10-01	1	15 DEC 2014
31-10-01	2	15 DEC 2014
31-10-01	3	15 DEC 2014
31-10-01	4	15 DEC 2014
31-10-01	5	15 DEC 2014
31-10-01	6	04 SEP 2018
31-10-01	7	04 SEP 2018
31-10-01	8	04 SEP 2018
31-10-01	9	04 SEP 2018
31-10-01	10	15 DEC 2014
31-10-02	1	15 DEC 2014
31-10-02	2	15 DEC 2014
31-10-02	3	15 DEC 2014
31-10-02	4	15 DEC 2014
31-10-03	1	19 SEP 2017
31-10-03	2	19 SEP 2017
31-20-01	1	15 DEC 2014
31-20-01	2	04 SEP 2018
31-30-01	1	15 DEC 2014
31-30-01	2	15 DEC 2014
31-30-02	1	15 DEC 2014
31-30-02	2	15 DEC 2014
31-30-03	1	19 SEP 2017
31-30-03	2	19 SEP 2017
31-40-01	1	19 SEP 2017
31-40-01	2	15 DEC 2014
31-50-01	1	19 SEP 2017
31-50-01	2	19 SEP 2017
31-50-01	3	19 SEP 2017
31-50-01	4	19 SEP 2017
31-60-01	1	15 DEC 2014
31-60-01	2	15 DEC 2014
31-60-01	3	15 DEC 2014
31-60-01	4	15 DEC 2014
31-60-01	5	15 DEC 2014
31-60-01	6	15 DEC 2014

CHAPTER 31 - INDICATING AND RECORDING

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
31-60-02	1	15 DEC 2014
31-60-02	2	15 DEC 2014
31-60-02	3	15 DEC 2014
31-60-02	4	15 DEC 2014
31-60-03	1	15 DEC 2014
31-60-03	2	15 DEC 2014
31-60-03	3	15 DEC 2014
31-60-03	4	15 DEC 2014

EFFECTIVITY:
All

CHAPTER 31 - INDICATING AND RECORDING

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Instrument Panel - Serials 22-0002 thru 22-0820 w/o PFD (1 of 5)	31-10-01
Instrument Panel - Serials 22-0435 thru 22-1662 w/ PFD (2 of 5)	31-10-01
Instrument Panel - Serials 22-1663 & subs w/o Perspective (3 of 5)	31-10-01
Instrument Panel - Serials w/ Perspective and 12-inch Displays (4 of 5)	31-10-01
Instrument Panel - Serials w/ Perspective and 10-inch Displays (5 of 5)	31-10-01
Bolster Switch Panel - Serials 22-0002 thru 22-2437 (1 of 2)	31-10-02
Bolster Switch Panel - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	31-10-02
Aft Circuit Breaker Panel - Serials w/ Perception	31-10-03
Carbon Monoxide Detector - Serials w/ Perspective	31-20-01
Hour Meter	31-30-01
Data Transfer Unit - Serials 22-2750 & subs w/o Perspective	31-30-02
Recoverable Data Module - Serials 22-2750 & subs, 22T-0001 & subs	31-30-03
Integrated Avionics Unit - Serials w/ Perspective Avionics	31-40-01
Annunciator Panel - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)	31-50-01
Annunciator Panel - Serials 22-0435 & subs w/ PFD and w/o Perspective (2 of 2)	31-50-01
Multi Function Display - Serials w/ ARNAV MFD (1 of 4)	31-60-01
Multi Function Display - Serials w/ Avidyne MFD (2 of 4)	31-60-01
Multi Function Display - Serials w/ Garmin 12-Inch MFD (3 of 4)	31-60-01
Multi Function Display - Serials w/ Garmin 10-Inch MFD (4 of 4)	31-60-01
Primary Flight Display - Serials w/ Avidyne PFD (1 of 3)	31-60-02
Primary Flight Display - Serials w/ Garmin 12-Inch PFD (2 of 3)	31-60-02
Primary Flight Display - Serials w/ Garmin 10-Inch PFD (3 of 3)	31-60-02
Reversionary Switch - Serials w/ Perspective 12-Inch Displays (1 of 2)	31-60-03
Reversionary Switch - Serials w/ Perspective 10-Inch Displays (2 of 2)	31-60-03

Intentionally Left Blank

EFFECTIVITY:
All

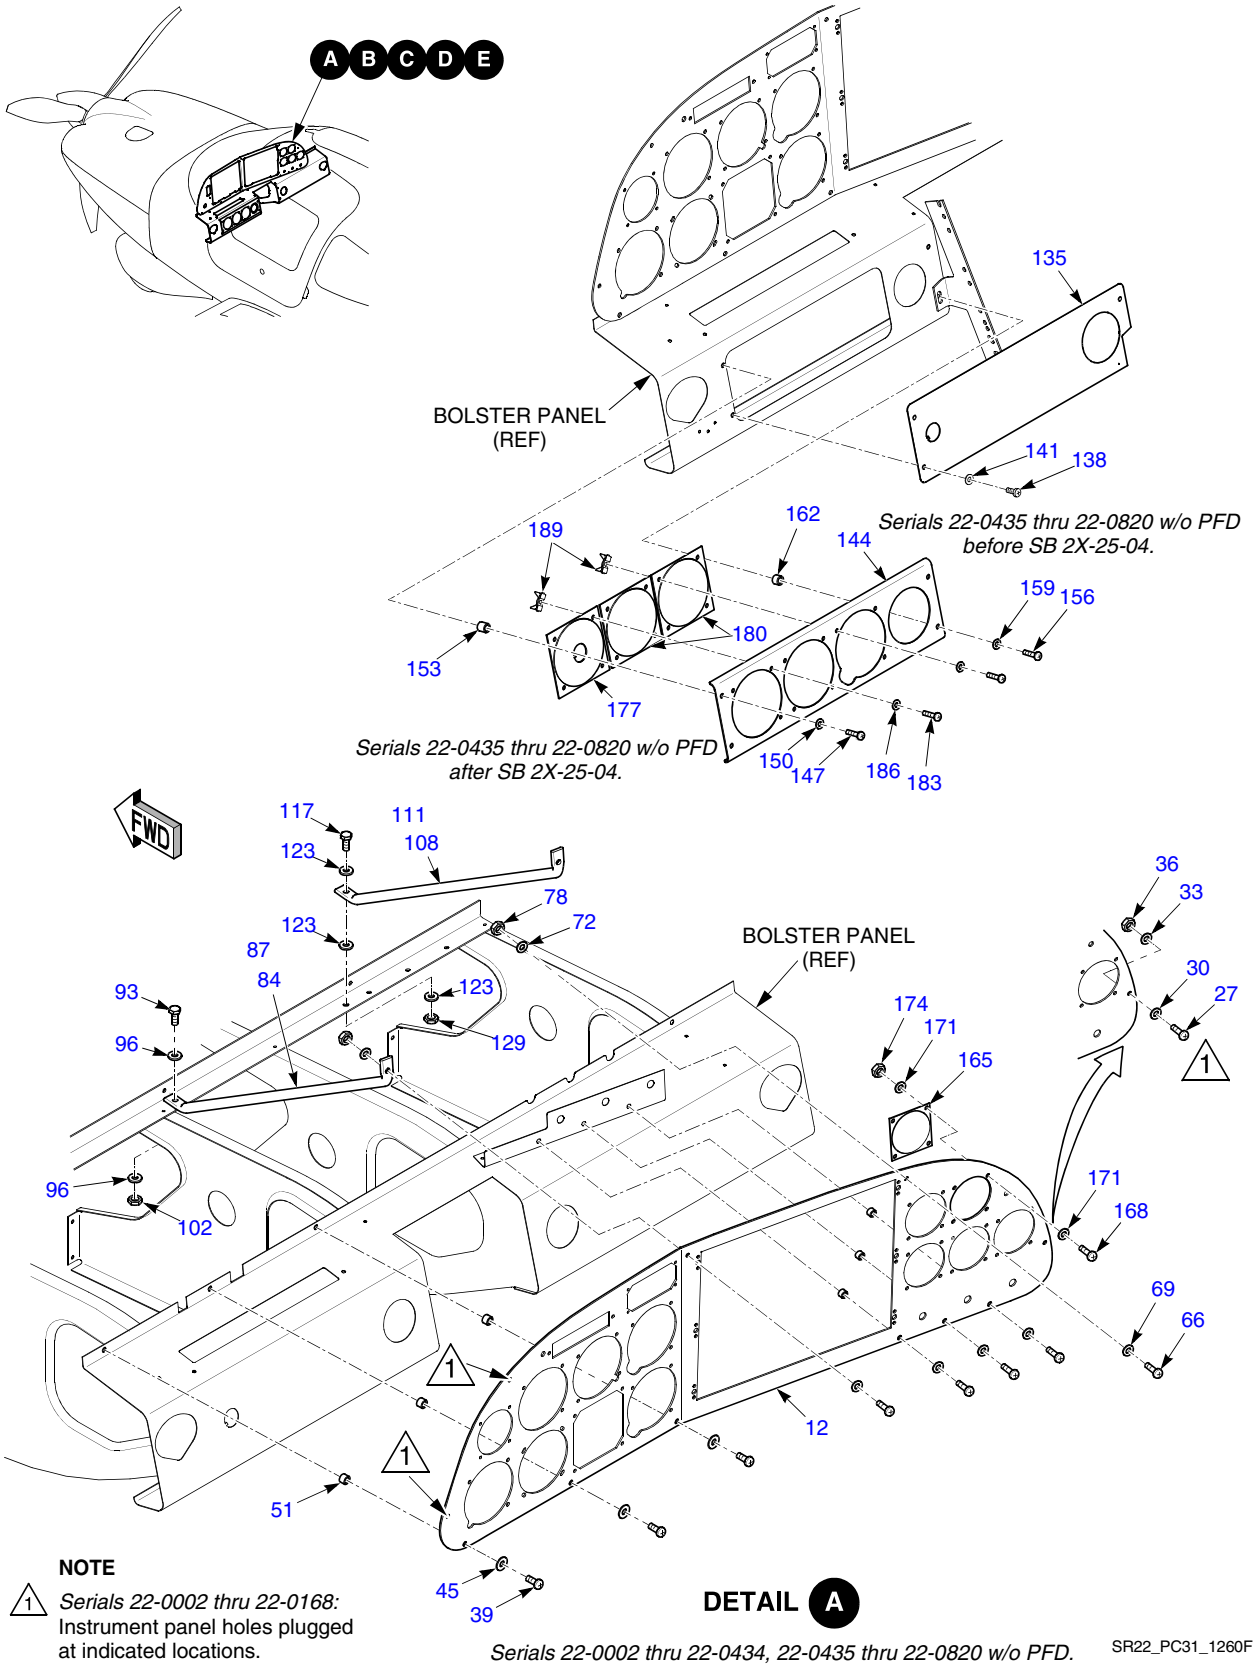

NOTE

1 *Serials 22-0002 thru 22-0168:* Instrument panel holes plugged at indicated locations.

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

Figure-01

Instrument Panel - Serials 22-0002 thru 22-0820 w/o PFD (1 of 5)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

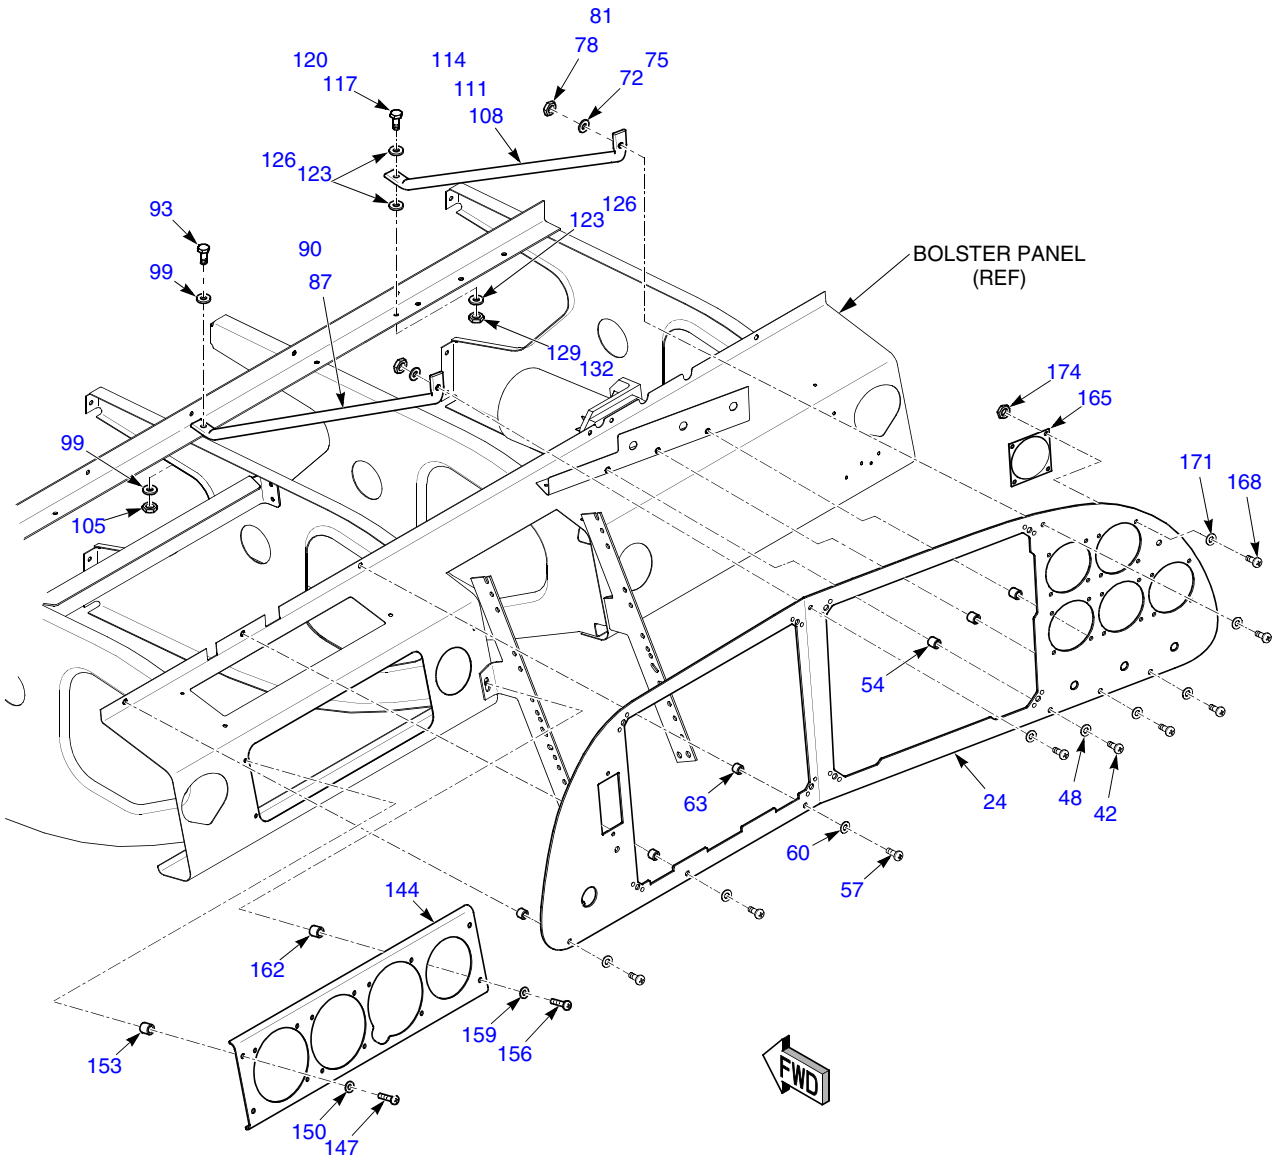

DETAIL B

Serials 22-0435 thru 22-0820, w/ PFD, 22-0821 thru 22-1662.

SR22_PC31_1285D

Figure-01

Instrument Panel - Serials 22-0435 thru 22-1662 w/ PFD (2 of 5)

EFFECTIVITY:
Serials 22-0435 thru 22-1662 w/ PFD

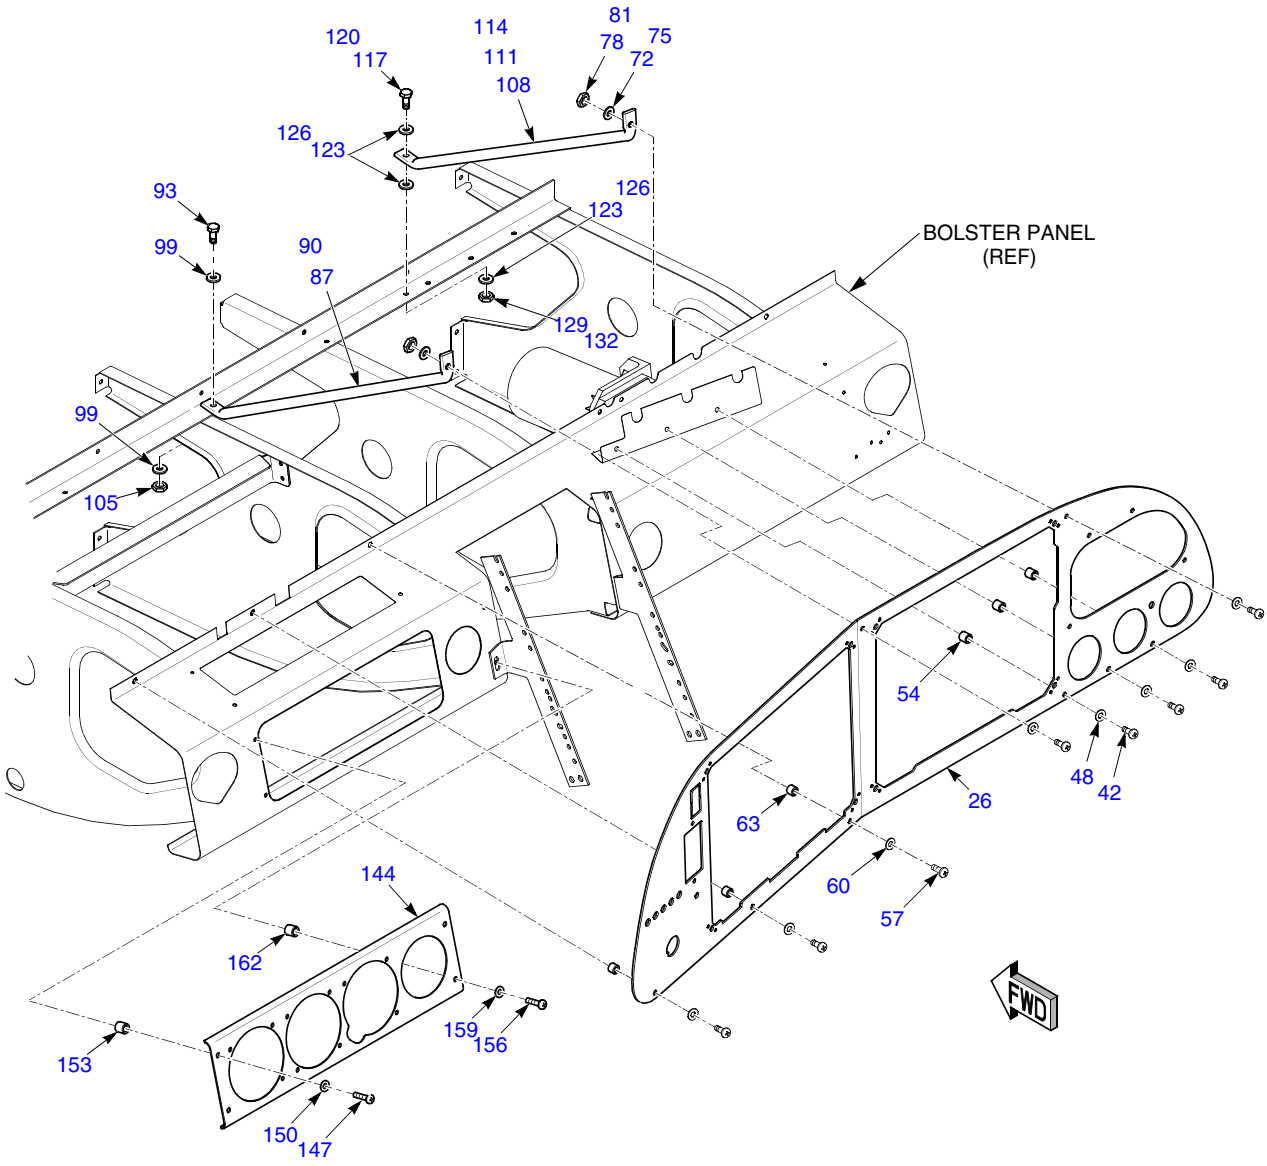

DETAIL C

Serials 22-1663 & subs w/o Perspective Avionics.

SR22_PC31_1514B

Figure-01

Instrument Panel - Serials 22-1663 & subs w/o Perspective (3 of 5)

EFFECTIVITY:
Serials 22-1663 & subs w/o Perspective

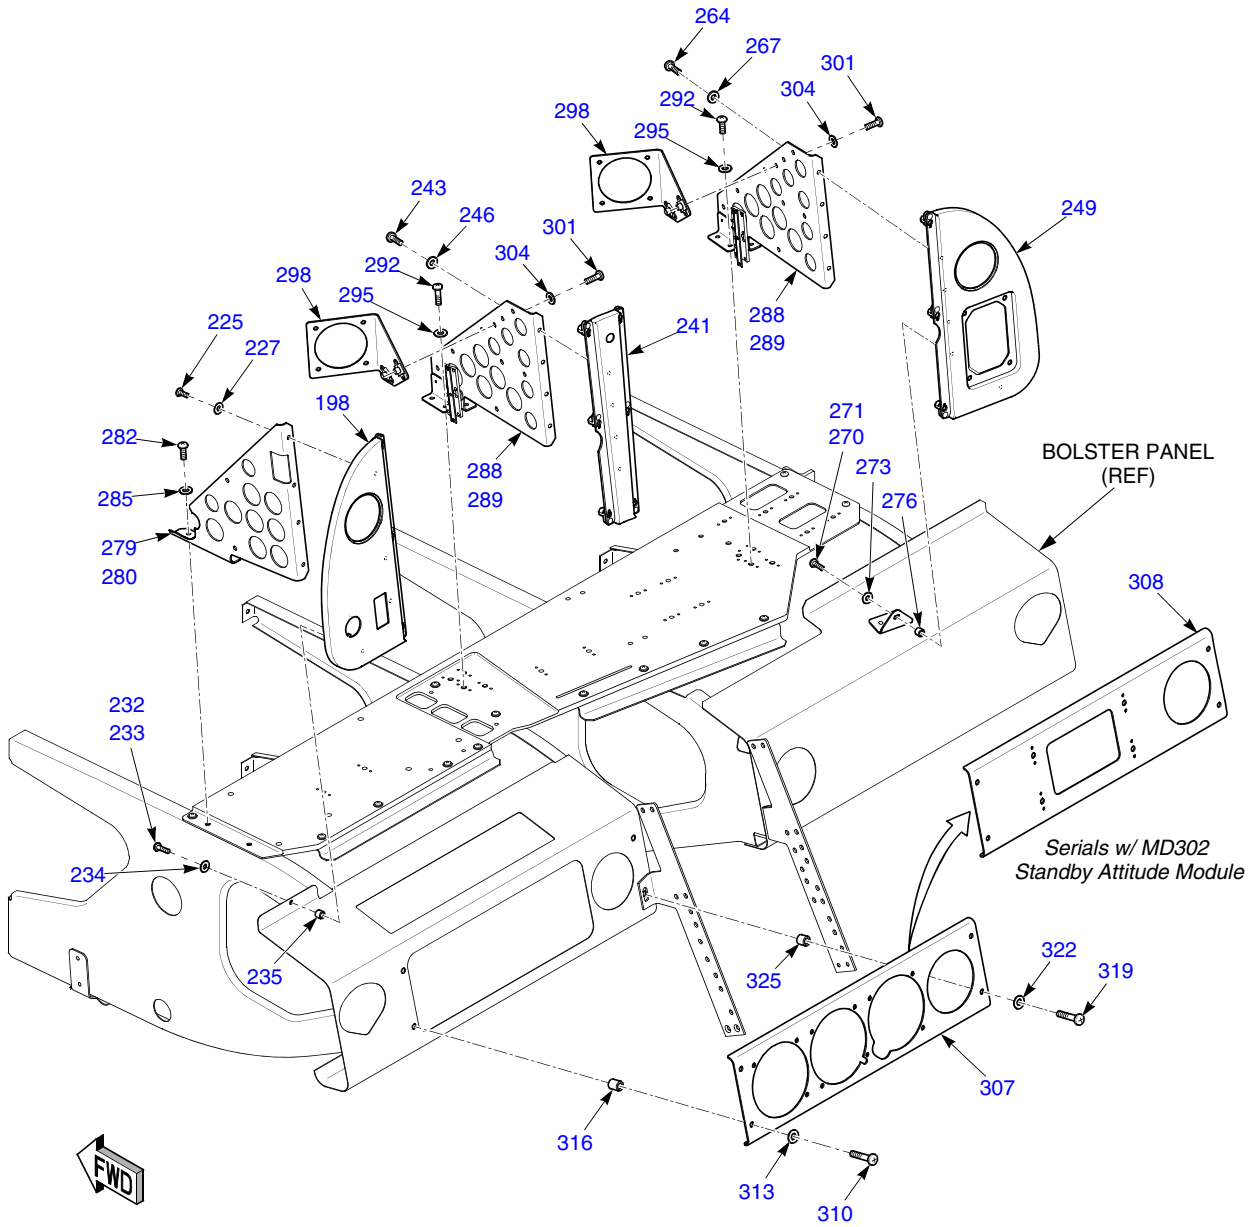

DETAIL D

Serials w/ Perspective Avionics and 12-inch Displays.

SR22_PC31_1832B

Figure-01

Instrument Panel - Serials w/ Perspective and 12-inch Displays (4 of 5)

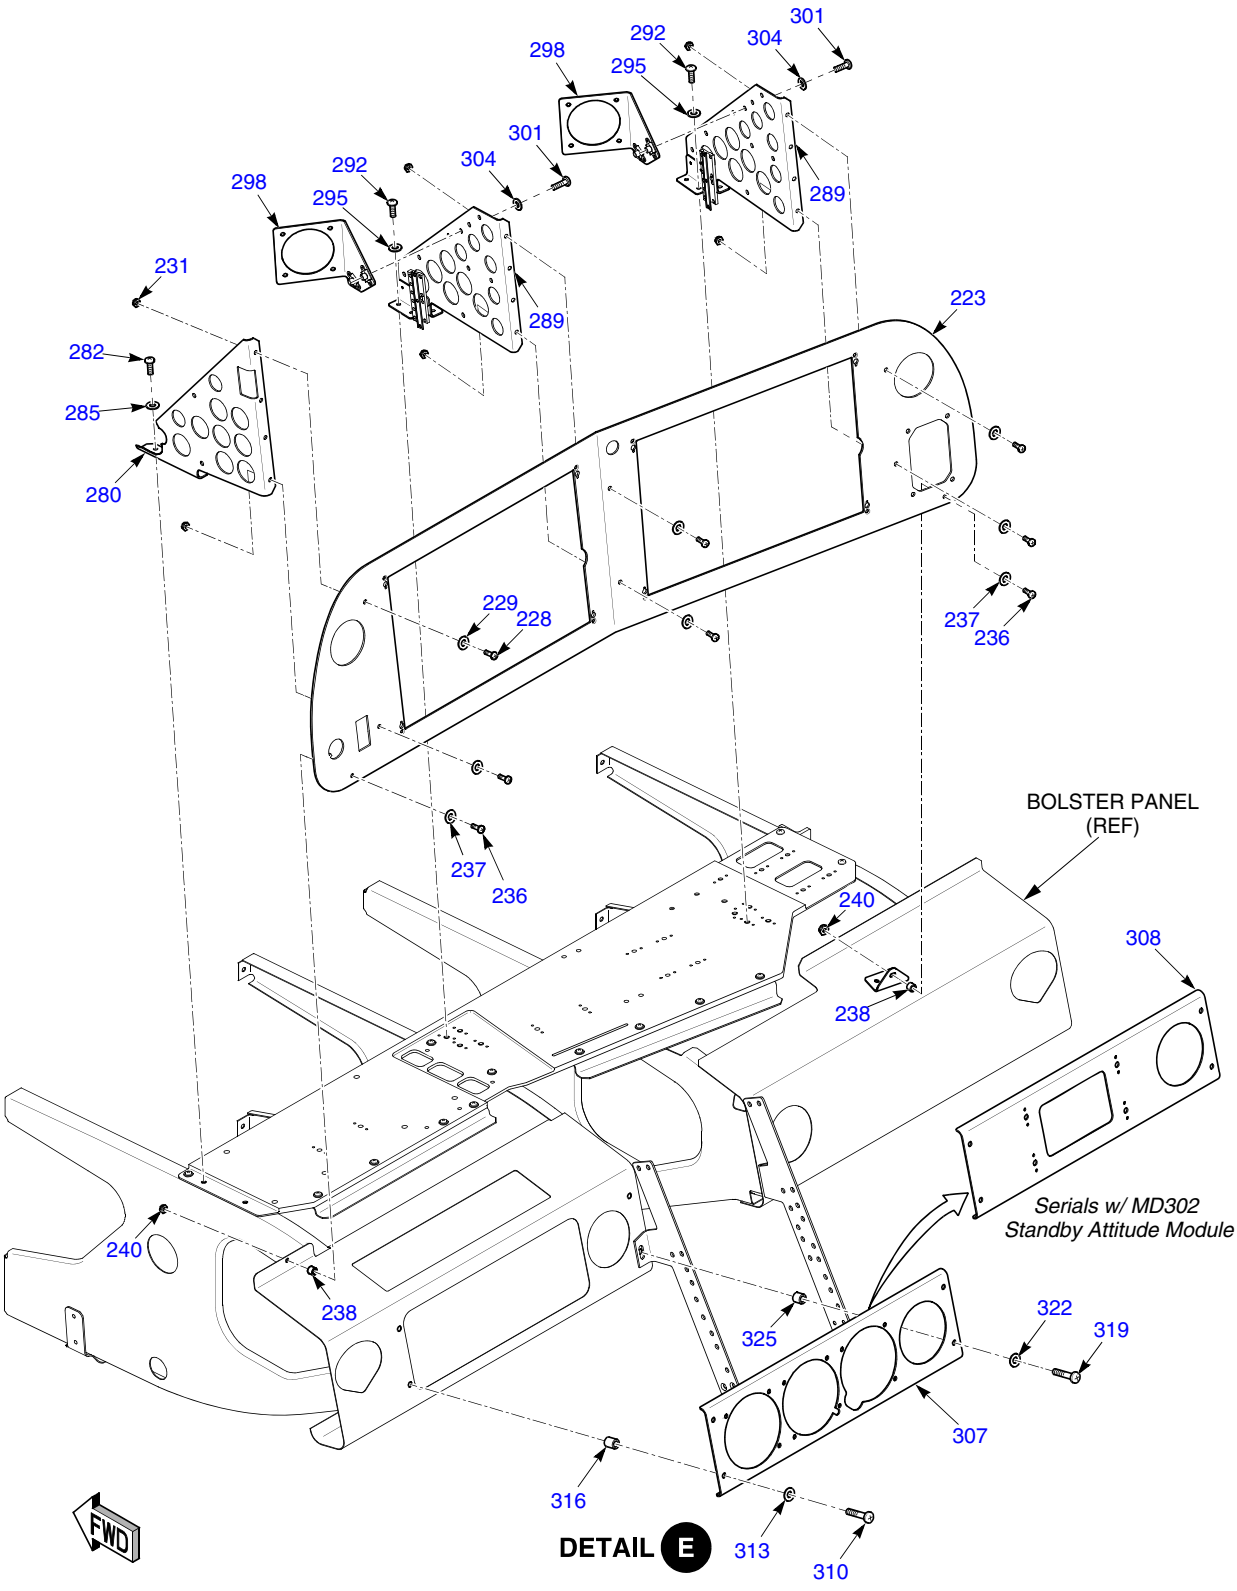

Serials w/ Perspective Avionics and 10-inch Displays.

SR22_PC31_1903C

Figure-01

Instrument Panel - Serials w/ Perspective and 10-inch Displays (5 of 5)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		INSTRUMENT PANEL INSTL, W/O PERSPECTIVE	0002		NP
-	3	13563-002			·INSTRUMENT PANEL (CENTURY, ARNAV)	0002	0820	1
-	6	13563-001			·INSTRUMENT PANEL (SANDEL, ARNAV)	0002	0820	1
-	9	14579-002			·INSTRUMENT PANEL (CENTURY, AVIDYNE)	0002	0820	1
	12	14579-001			·INSTRUMENT PANEL (SANDEL, AVIDYNE)	0002	0820	1
-	15	15330-001			·INSTRUMENT PANEL (PFD)	0435	0994	1
-	18	15330-002			·INSTRUMENT PANEL (PFD)	0995	1035	1
-	21	15330-003			·INSTRUMENT PANEL (PFD)	1036	1306	1
	24	15330-004			·INSTRUMENT PANEL (PFD)	1307	1662	1
-	25	15330-007			·INSTRUMENT PANEL (PFD/MFD-FLTDIR)	1663	1862	1
	26	15330-008			·INSTRUMENT PANEL (PFD/MFD-FLTDIR, A/C)	1863		1
	27	50840-010	@	A	·SCREW	0002	0168	3
	30	50813-003	@	A	·WASHER	0002	0168	3
	33	NAS1149F0332P	@	A	·WASHER	0002	0168	3
	36	MS21083N3	@	A	·NUT	0002	0168	3
	39	50840-010		A	·SCREW, W/O PFD	0002	0820	6
	42	50840-010		A	·SCREW, W/ PFD	0435		3
	45	50813-003		A	·WASHER, W/O PFD	0002	0820	6
	48	50813-003		A	·WASHER, W/ PFD	0435		3
	51	NAS43DD3-12FC		A	·SPACER, W/O PFD	0002	0820	6
	54	NAS43DD3-12FC		A	·SPACER, W/ PFD	0435		3
	57	50840-010		A	·SCREW, W/ PFD	0435		3
	60	50813-003		A	·WASHER, W/ PFD	0435		3
	63	NAS43DD3-16FC		A	·SPACER, W/ PFD	0435		3
	66	50840-010		A	·SCREW	0002		2
	69	50813-003		A	·WASHER	0002		2
	72	NAS1149C0363R		A	·WASHER	0002	0820	2
	75	NAS1149F0332P		A	·WASHER	0821		2
	78	MS21044N3		A	·NUT	0002	0820	2
	81	MS21083N3		A	·NUT	0821		2
	84	11991-002			·SUPPORT, INSTRUMENT PANEL, LH	0002	0434	1
	87	11991-003			·SUPPORT, INSTRUMENT PANEL, LH	0435	0820	1
	90	20228-001			·SUPPORT, INSTRUMENT PANEL, LH	0821		1
	93	AN3-5A		A	·BOLT	0002		1
	96	NAS1149C0363R		A	·WASHER	0002	0820	2
	99	NAS1149F0332P		A	·WASHER	0821		2
	102	MS21044N3		A	·NUT	0002	0820	1
	105	MS21083N3		A	·NUT	0821		1
	108	11868-002			·SUPPORT, INSTRUMENT PANEL, RH	0002	0655	1
	111	11868-003			·SUPPORT, INSTRUMENT PANEL, RH	0656	0820	1
	114	20229-001			·SUPPORT, INSTRUMENT PANEL, RH	0821		1
	117	AN3-6A		A	·BOLT	0002	0820	1
	120	AN3-5A		A	·BOLT	0821		1
	123	NAS1149C0363R	#	A	·WASHER	0002	0820	3
	126	NAS1149F0332P	#	A	·WASHER	0821		3
	129	MS21044N3		A	·NUT	0002	0820	1
	132	MS21083N3		A	·NUT	0821		1
	135	15293-001			·BOLSTER PLATE, W/O PFD	0435	0820	1
					BEFORE SB2X-25-04			
	138	MS27039-107		A	·SCREW, W/O PFD	0435	0820	3
					BEFORE SB2X-25-04			
	141	NAS1149F0332P		A	·WASHER, W/O PFD	0435	0820	3
					BEFORE SB2X-25-04			
	144	15292-001			·BOLSTER PLATE, W/ PFD	0435	0820	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					AFTER SB2X-25-04			
	147	MS27039-1-13		A	·SCREW, W/ PFD	0435	0820	3
					AFTER SB2X-25-04			
	150	NAS1149F0332P		A	·WASHER, W/ PFD	0435	0820	3
					AFTER SB2X-25-04			
	153	NAS43DD3-24FC		A	·SPACER, W/ PFD	0435	0820	3
					AFTER SB2X-25-04			
	156	MS27039-1-13		A	·SCREW, W/ PFD	0435	0820	1
					AFTER SB2X-25-04			
	159	NAS1149F0332P		A	·WASHER, W/ PFD	0435	0820	1
					AFTER SB2X-25-04			
	162	NAS43DD3-19FC		A	·SPACER, W/ PFD	0435	0820	1
					AFTER SB2X-25-04			
	165	15108-001			·INSTRUMENT HOLE PLUG, W/ ENGINE MONITORING	0300	1662	1
	168	50834-010		A	·SCREW, W/ ENGINE MONITORING	0300	1662	4
	171	50813-001		A	·WASHER, W/ ENGINE MONITORING	0300	1662	4
	174	MS21083N06		A	·NUT, W/ ENGINE MONITORING	0300	1662	4
	177	15669-001			·IGNITION INSTRUMENT COVER, W/O PFD	0435	0820	1
					AFTER SB2X-25-04			
	180	15669-002			·BLANK INSTRUMENT COVER, W/O PFD	0435	0820	2
					AFTER SB2X-25-04			
	183	50834-016		A	·SCREW	0435	0820	12
					AFTER SB2X-25-04			
	186	50813-001		A	·WASHER	0435	0820	12
					AFTER SB2X-25-04			
	189	MS33737-16C		A	·NUTCLIP	0435	0820	12
					AFTER SB2X-25-04			
-	190	MS21059L3		A	·NUTPLATE, W/ PFD	0435		4
-	191	50154-001		A	·NUTPLATE, W/ MFD	0002		4
-	192	NO PRT NUMBER			INSTRUMENT PANEL INSTL, W/ PERSPECTIVE	3026 / 0001	/	NP
-	195	19262-001	$		·INSTRUMENT PANEL, LH, BLACK, 12-INCH	3026		1
	198	19261-001	$		·INSTRUMENT PANEL, LH, BLACK, FD, 12-INCH	3026		1
-	199	19262-002	$		·INSTRUMENT PANEL, LH, BRUSHED ALUM, 12-INCH	3026 / 0001	/	1
					ALTERNATE FOR P/N 19260-002			
-	200	19260-002	$		·INSTRUMENT PANEL, LH, BRUSHED ALUM, 12-INCH	3026 / 0001	/	1
					ALTERNATE FOR P/N 19262-002			
-	201	19261-002	$		·INSTRUMENT PANEL, LH, BRUSHED ALUM, FD, 12-INCH	3026		1
-	202	19262-003	$		·INSTRUMENT PANEL, LH, BURL-WOOD, 12-INCH	3026 / 0001	/	1
					ALTERNATE FOR P/N 19260-003			
-	203	19260-003	$		·INSTRUMENT PANEL, LH, BRUSHED ALUM, 12-INCH	3026 / 0001	/	1
					ALTERNATE FOR P/N 19262-003			
-	204	19261-003	$		·INSTRUMENT PANEL, LH, BURL-WOOD, FD, 12-INCH	3026		1
-	205	19262-004	$		·INSTRUMENT PANEL, LH, IVORY, 12-INCH	3026		1
-	206	19261-004	$		·INSTRUMENT PANEL, LH, IVORY, FD, 12-INCH	3026		1
-	207	19262-005	$		·INSTRUMENT PANEL, LH, PLAT GRAPHITE, 12-INCH	3026 / 0001	/	1
					ALTERNATE FOR P/N 19260-005			
-	208	19260-005	$		·INSTRUMENT PANEL, LH, BRUSHED ALUM, 12-INCH	3026 / 0001	/	1
					ALTERNATE FOR P/N 19262-005			
-	209	19261-005	$		·INSTRUMENT PANEL, LH, PLAT GRAPHITE, FD, 12-INCH	3026		1
-	210	19848-002	$		·INSTRUMENT PANEL, LH, CARBON, 12-INCH	3026		1
-	211	19849-002	$		·INSTRUMENT PANEL, LH, CARBON, FD, 12-INCH	3026		1
-	212	19848-003	$		·INSTRUMENT PANEL, LH, CARBON, 12-INCH	/ 0001	/	1
	223	19648-001	%		·INSTRUMENT PANEL, 10-INCH	3446		1
	225	MS35206-243	$	A	·SCREW	3026 / 0001	/	4

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						ALTERNATE FOR P/N NAS1801-08-6			
-	226	NAS1801-08-6	$	A		·SCREW	3026 / 0001	/	4
						ALTERNATE FOR P/N MS35206-243			
	227	NAS1149FN832P	$	A		·WASHER	3026 / 0001	/	4
	228	50835-010	%	A		·SCREW	3446		6
	229	50813-002	%	A		·WASHER	3446		6
-	230	51684-002	%	A		·NUT	3446		6
						FOR SPARES USE P/N 51684-001			
	231	51684-001	%	A		·NUT	3446		6
	232	MS35206-245	$	A		·SCREW	3026 / 0001	/	1
						ALTERNATE FOR P/N NAS1801-08-10			
	233	NAS1801-08-10	$	A		·SCREW	3026 / 0001	/	1
						ALTERNATE FOR P/N MS35206-245			
	234	NAS1149FN832P	$	A		·WASHER	3026 / 0001	/	1
	235	NAS43DD3-12FC	$	A		·SPACER	3026 / 0001	/	1
	236	50835-012	%	A		·SCREW	3446		2
	237	50813-002	%	A		·WASHER	3446		2
	238	NAS43DD3-12FC	%	A		·SPACER	3446 / 0001	/	2
-	239	51684-002	%	A		·NUT	3446 / 0001	/	2
						FOR SPARES USE P/N 51684-001			
	240	51684-001	%	A		·NUT	3446 / 0001	/	2
	241	19221-002	$			·INSTRUMENT PANEL, CENTER, BLACK TEXTURED	3026 / 0001	/	1
	243	MS35206-243	$	A		·SCREW	3026 / 0001	/	4
						ALTERNATE FOR P/N NAS1801-08-6			
-	244	NAS1801-08-6	$	A		·SCREW	3026 / 0001	/	4
						ALTERNATE FOR P/N MS35206-243			
	246	NAS1149FN832P	$	A		·WASHER	3026 / 0001	/	4
	249	19222-001	$			·INSTRUMENT PANEL, RH, BLACK, 12-INCH	3026		1
-	252	19222-002	$			·INSTRUMENT PANEL, RH, BRUSHED ALUM, 12-INCH	3026 / 0001	/	1
-	255	19222-003	$			·INSTRUMENT PANEL, RH, BURL-WOOD, 12-INCH	3026 / 0001	/	1
-	258	19222-004	$			·INSTRUMENT PANEL, RH, IVORY, 12-INCH	3026		1
-	261	19222-005	$			·INSTRUMENT PANEL, RH, PLAT GRAPHITE, 12-INCH	3026 / 0001	/	1
-	262	19850-001	$			·INSTRUMENT PANEL, RH, CARBON, 12-INCH	3026 / 0001	/	1
	264	MS35206-243	$	A		·SCREW	3026 / 0001	/	4
						ALTERNATE FOR P/N NAS1801-08-6			
-	265	NAS1801-08-6	$	A		·SCREW	3026 / 0001	/	4
						ALTERNATE FOR P/N MS35206-243			
	267	NAS1149FN832P	$	A		·WASHER	3026 / 0001	/	4
	270	MS35206-246	$	A		·SCREW	3026 / 0001	/	1
						ALTERNATE FOR P/N NAS1801-08-10			
	271	NAS1801-08-10	$	A		·SCREW	3026 / 0001	/	1
						ALTERNATE FOR P/N MS35206-246			
	273	NAS1149FN832P	$	A		·WASHER	3026 / 0001	/	1
	276	NAS43DD3-20FC	$	A		·SPACER	3026 / 0001	/	1
	279	19214-001				·SUPPORT, INSTRUMENT PANEL, LH	3026	3531	1
	280	19214-002				·SUPPORT, INSTRUMENT PANEL, LH	3532 / 0001	/	1
	282	MS27039-0808		A		·SCREW	3026 / 0001	/	2
	285	NAS1149FN832P		A		·WASHER	3026 / 0001	/	2
	288	19236-001				·SUPPORT, INSTRUMENT PANEL, CENTER, RH	3026	3531	2
	289	19236-002				·SUPPORT, INSTRUMENT PANEL, CENTER, RH	3532 / 0001	/	2
	292	MS27039-0808		A		·SCREW	3026 / 0001	/	8
	295	NAS1149FN832P		A		·WASHER	3026 / 0001	/	8
	298	19233-001				·BRACKET, FAN	3026 / 0001	/	2
	301	MS35206-245		A		·SCREW	3026 / 0001	/	4

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	304	NAS1149FN832P		A	·WASHER	3026 / 0001	/	4
	307	15292-001			·BOLSTER PLATE	3026 / 0001	/	1
	308	34727-001			·BOLSTER PLATE (MD302 STANDBY ATTITUDE)	4164 / 0963	/	1
	310	MS27039-1-15		A	·SCREW	3026 / 0001	/	3
	313	NAS1149F0332P		A	·WASHER	3026 / 0001	/	3
	316	NAS43DD3-24FC		A	·SPACER	3026 / 0001	/	3
	319	MS27039-1-15		A	·SCREW	3026 / 0001	/	1
	322	NAS1149F0332P		A	·WASHER	3026 / 0001	/	1
	325	NAS43DD3-19FC		A	·SPACER	3026 / 0001	/	1
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1644; REFER TO 22-1663 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-1602, 22-1821, 22-1840; REFER TO 22-1863 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
			#		ONE OPTIONAL WASHER MAY BE USED BETWEEN SUPPORT AND CONSOLE TO CLEAR WIRE LOOM.			
			@		OPTIONAL HARDWARE FOR PLUGGING UNUSED HOLES IN INSTRUMENT PANEL.			
			$		INSTALLED ON AIRCRAFT WITH 12-INCH DISPLAYS.			
			%		INSTALLED ON AIRCRAFT WITH 10-INCH DISPLAYS.			

Intentionally Left Blank

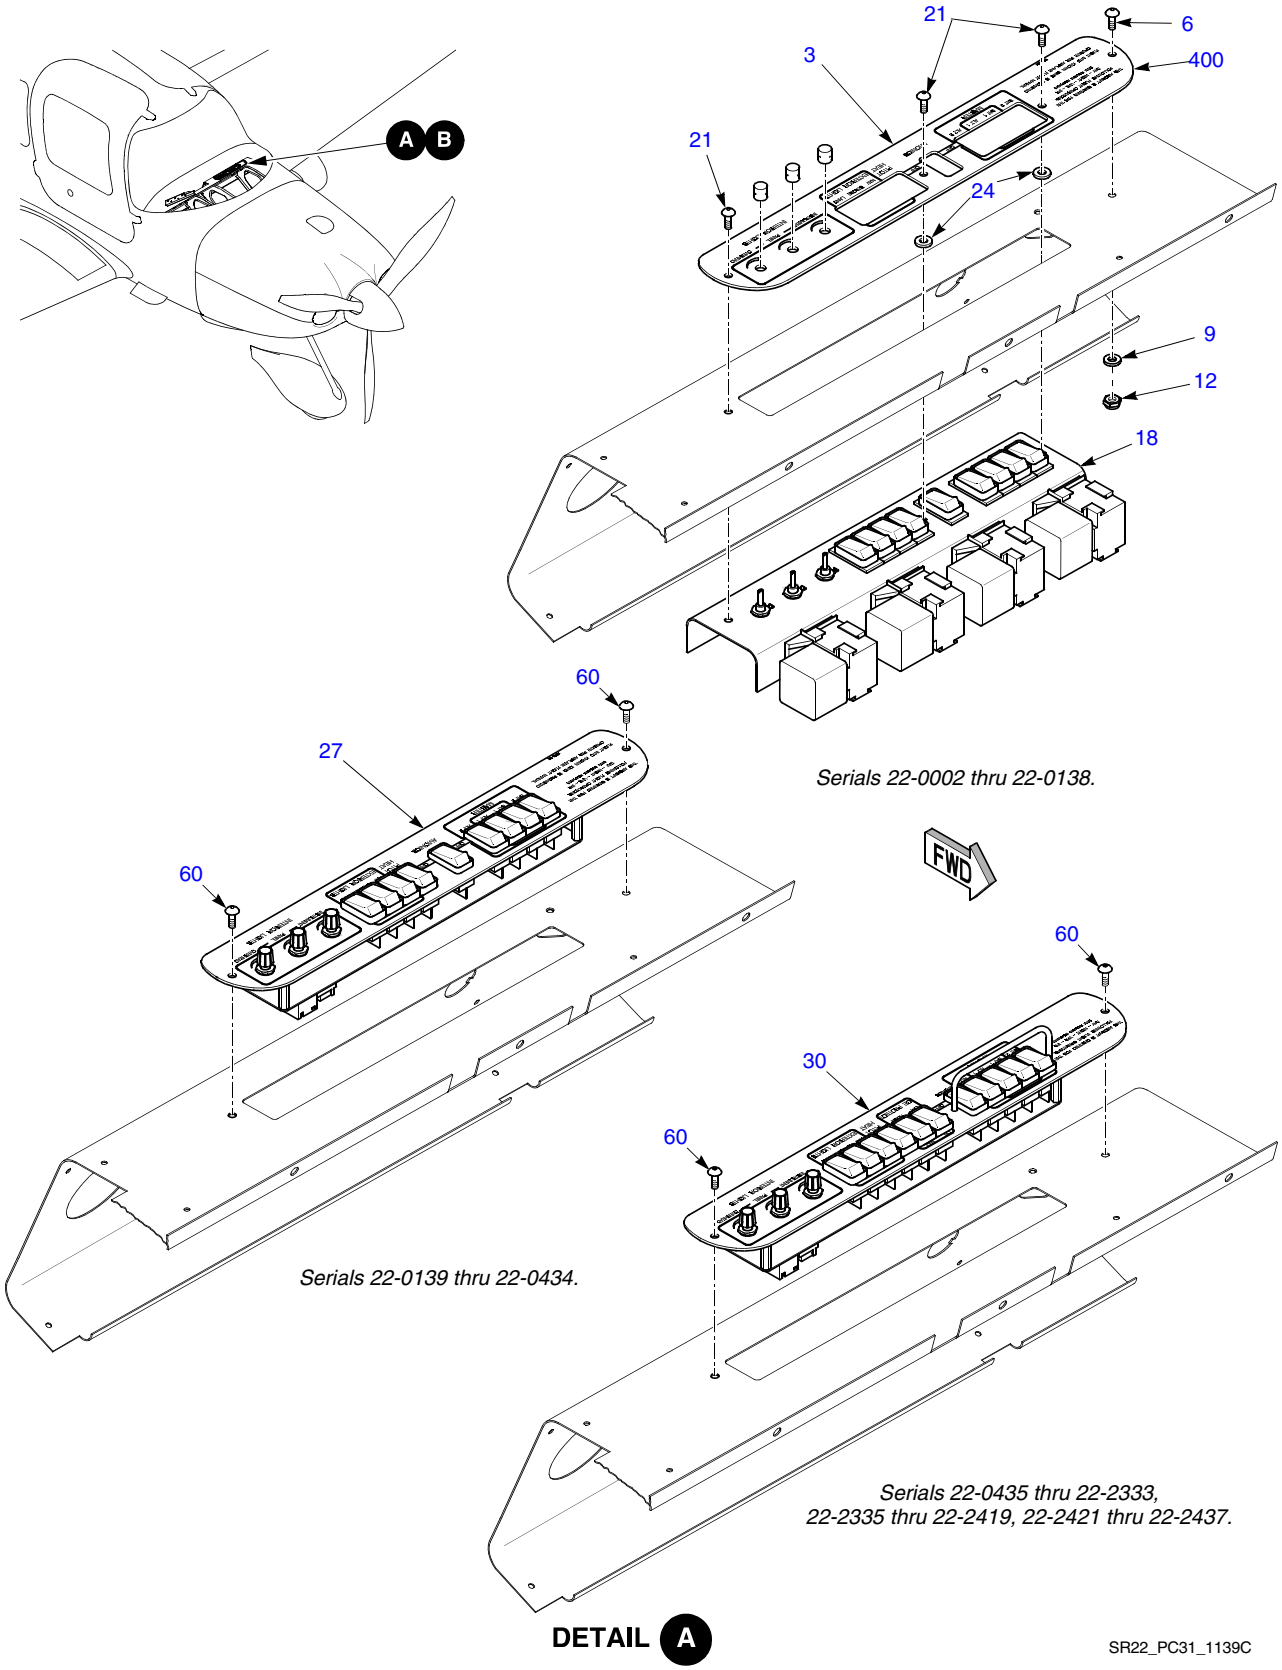

Figure-02

Bolster Switch Panel - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

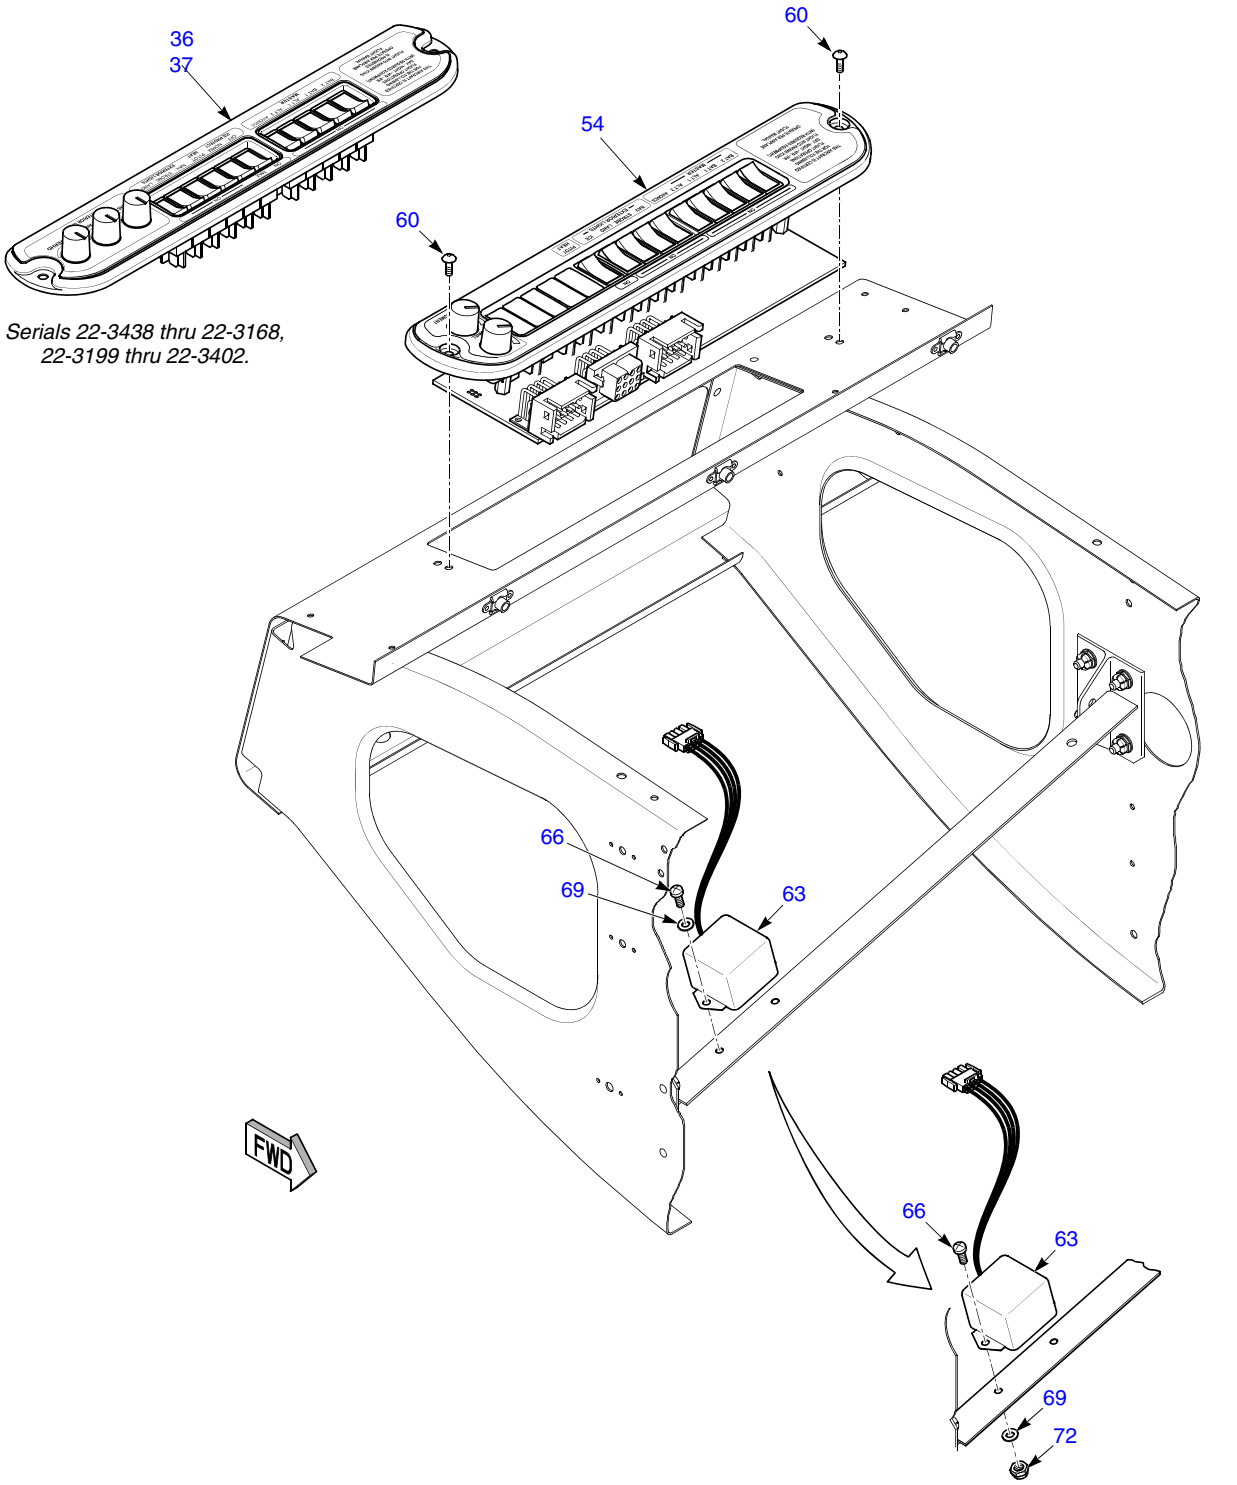

DETAIL B

Serials 22-2334, 22-2420, 22-2438 & subs,
22T-0001 & subs.

SR22_PC31_1701B

Figure-02

Bolster Switch Panel - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		BOLSTER SWITCH PANEL INSTALLATION	0002 / 0001	/	NP
	3	13611-001			·FINISH PANEL	0002	0138	1
	6	50835-010		A	·SCREW	0002	0138	1
	9	NAS1149FN832P		A	·WASHER	0002	0138	1
	12	MS21044N08		A	·NUT	0002	0138	1
	18	13610-001			·SWITCH PANEL, FWD CONSOLE	0002	0138	1
	21	50835-012		A	·SCREW	0002	0138	3
	24	NAS1149FN832P		A	·WASHER	0002	0138	2
	27	14637-001			·BOLSTER SWITCH PANEL	0139	0434	1
	30	14637-004			·BOLSTER SWITCH PANEL, W/ ICE, BASIC	0435	2437	1
-	33	14637-005			·BOLSTER SWITCH PANEL, W/O ICE	0435	2437	1
	36	18554-001			·BOLSTER SWITCH PANEL, W/ICE, BASIC	2438	3168	1
	37	18554-010			·BOLSTER SWITCH PANEL, W/ICE, BASIC	3199	3402	1
-	39	24900-001			·BOLSTER SWITCH PANEL, W/ICE, FIKI LIGHT	3403 / 0001	/	1
-	42	24900-002			·BOLSTER SWITCH PANEL, W/ICE, BASIC2, LIGHT	3403 / 0001	/	1
-	45	24900-003			·BOLSTER SWITCH PANEL, W/ICE, BASIC2, NO LIGHT	3403 / 0001	/	1
-	48	18554-002			·BOLSTER SWITCH PANEL, W/O ICE	2438	3168	1
-	51	18554-020			·BOLSTER SWITCH PANEL, W/O ICE	3169	3402	1
	54	24900-004			·BOLSTER SWITCH PANEL, W/O ICE, W/ LIGHT	3403 / 0001	/	1
-	57	24900-005			·BOLSTER SWITCH PANEL, W/O ICE	3403 / 0001	/	1
	60	50835-010		A	·SCREW	0139 / 0001	/	2
	63	18538-002			·EL INVERTER	2438 / 0001	/	1
	66	MS35206-229		A	·SCREW	2438 / 0001	/	2
	69	NAS1149FN632P		A	·WASHER	2438 / 0001	/	2
	72	MS21044-N06		A	·NUT	2438 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 11-30-01 DET			INTERIOR PLACARD			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PART IDENTIFICATION.			

Intentionally Left Blank

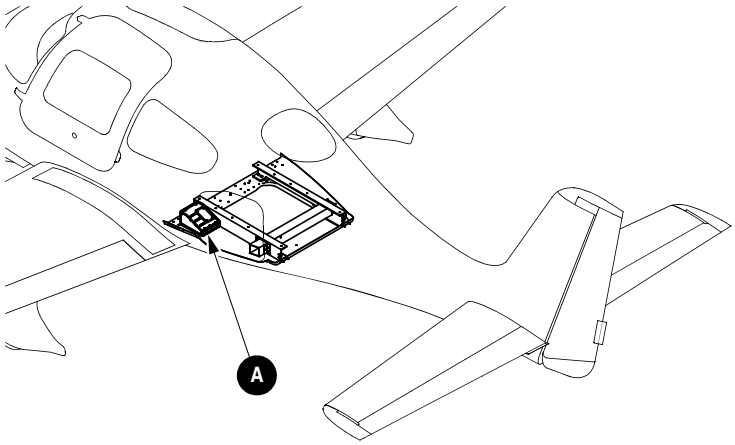

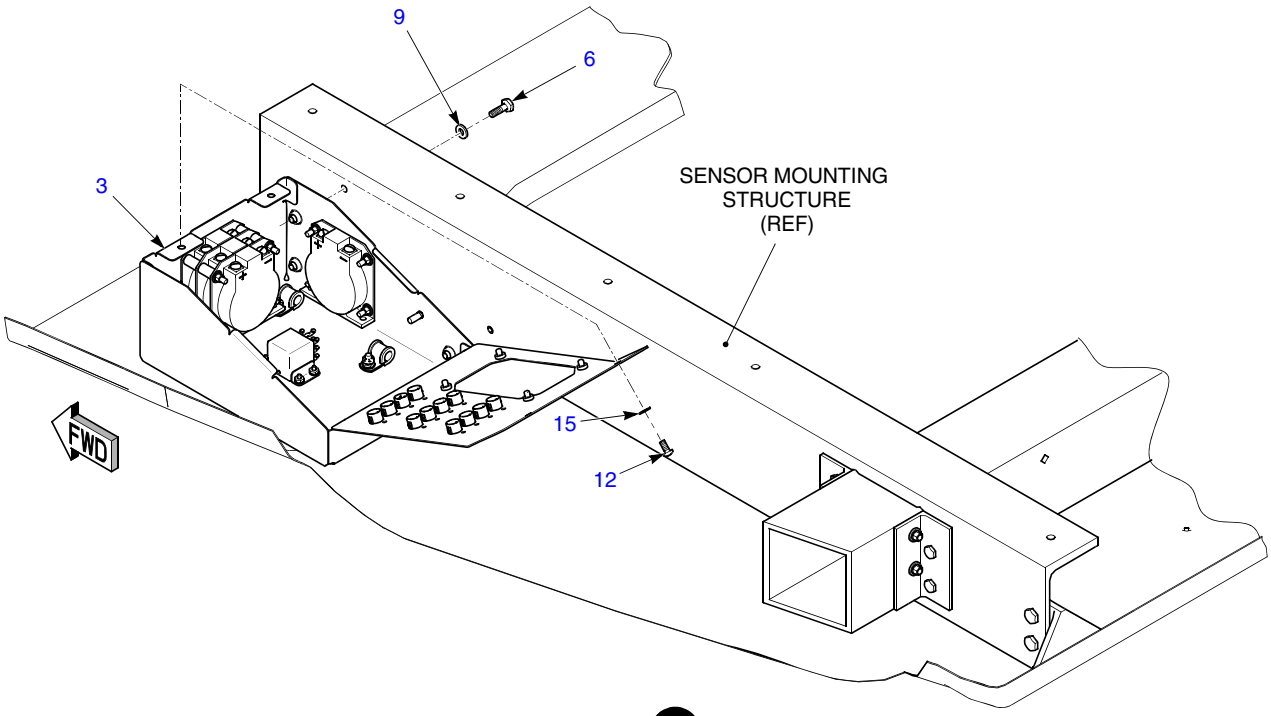

DETAIL A

SR22_PC31_2538

Figure-03
Aft Circuit Breaker Panel - Serials w/ Perception

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ·····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 07	**		PERCEPTION AFT CIRCUIT BREAKER PANEL INSTALLATION			
	3	37158-001			AFT CIRCUIT BREAKER PANEL	4369 / 1384	/	1
	6	AN3-5A		A	·BOLT	4369 / 1384	/	3
	9	NAS1149F0363P		A	·WASHER	4369 / 1384	/	3
	12	PRT OF 3		A	·SCREW	4369 / 1384	/	2
	15	PRT OF 3		A	·WASHER	4369 / 1384	/	2
					SYMBOL NOTES:			
			**		INSTALLED ON SERIALS W/ PERCEPTION.			

EFFECTIVITY:
All

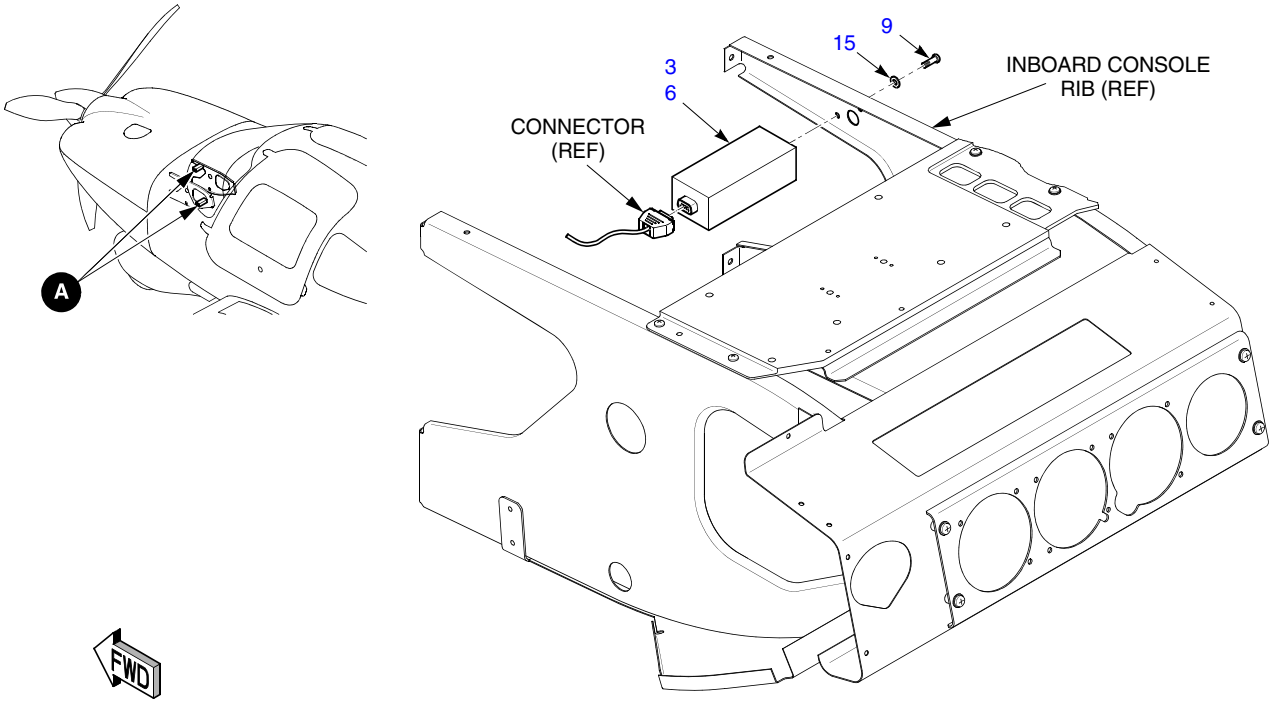

Serials 22-3026 thru 22-3465 w/ Perspective Avionics.

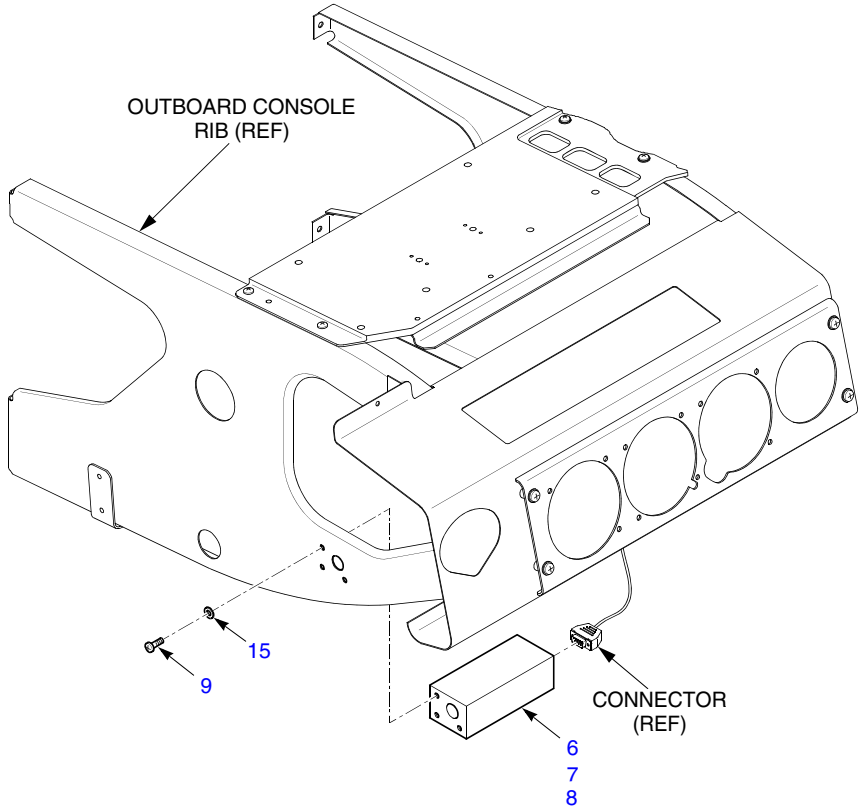

Serials 22-3466 & subs w/ Perspective Avionics, 22T-0001 & subs.

DETAIL A

SR22_PC31_1788A

Figure-01
Carbon Monoxide Detector - Serials w/ Perspective

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		CARBON MONOXIDE DETECTOR INSTALLATION	3026 / 0001	/	NP
	3	24660-001			·CO DETECTOR	3026	3066	1
					FOR SPARES USE P/N 24660-002			
	6	24660-002			·CO DETECTOR	3067 / 0001	3845 / 0310	1
						4268 / 1185	/	1
					ALTERNATE FOR P/N 24660-003 & 24660-004			
	7	24660-003			·CO DETECTOR	3846 / 0311	4267 / 1184	1
					ALTERNATE FOR P/N 24660-002 & 24660-004			
					WHEN EXHTD USE P/N 24660-002			
	8	24660-004			·CO DETECTOR	4090 / 0792	4267 / 1184	1
					ALTERNATE FOR P/N 24660-002 & 24660-003			
					WHEN EXHTD USE P/N 24660-002			
	9	MS27039-0806			·SCREW	3026 / 0001	/	3
					ALTERNATE FOR P/N NAS1801-08-6			
-	12	NAS1801-08-6			·SCREW	3026 / 0001	/	3
					ALTERNATE FOR P/N MS27039-0806			
	15	NAS1149FN832P			·WASHER	3026 / 0001	/	3
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
					SERIAL NUMBER 22T-0308; REFER TO 22T-0311 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

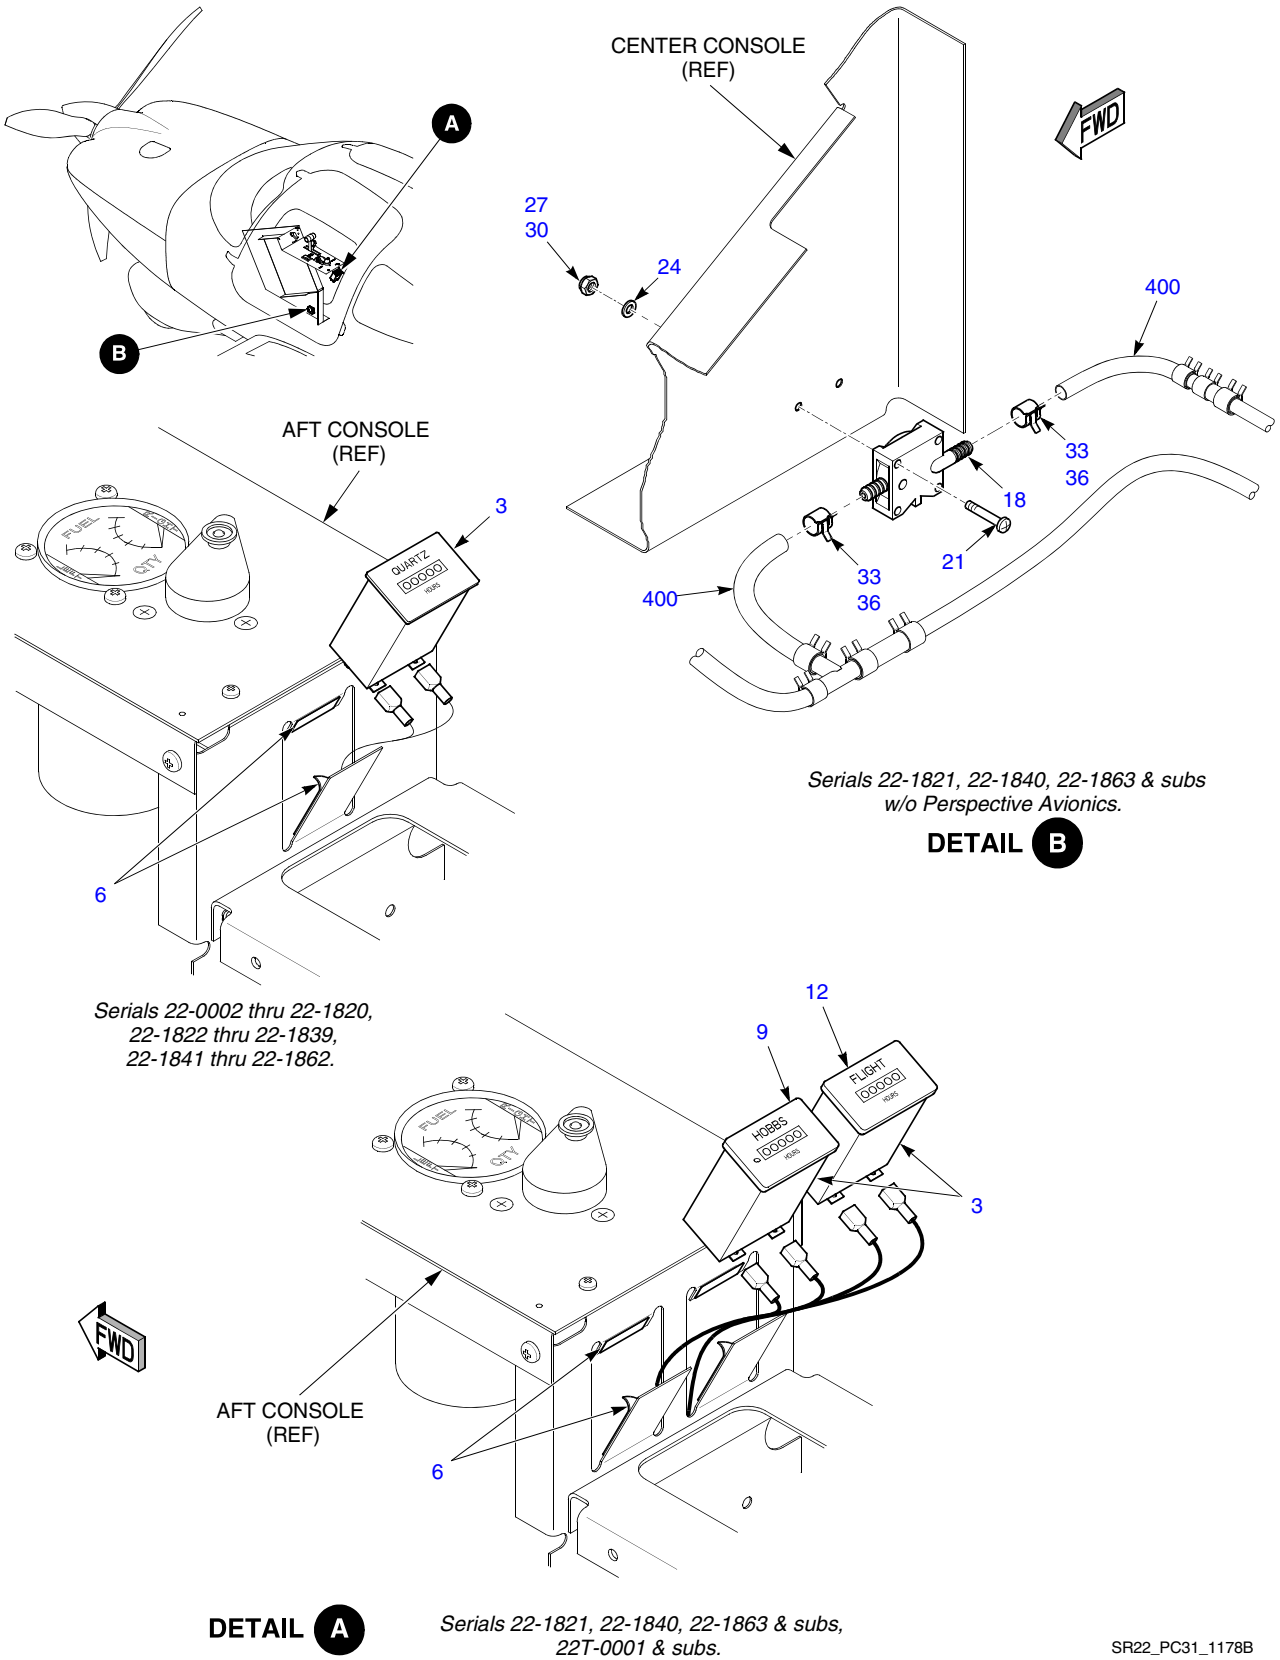

Figure-01
Hour Meter

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		HOUR METER	0002 / 0001	/	NP
	3	50485-001	#		·HOUR METER	0002	1862	1
			#		AFTER SB2X-30-01	0002	1862	2
					·HOUR METER	1863 / 0001	/	2
	6	50641-025			·TAPE	0002 / 0001	/	AR
	9	17174-002			·HOBBS OVERLAY	1863 / 0001	/	1
	12	17174-001			·FLIGHT OVERLAY	1863 / 0001	/	1
			#		AFTER SB2X-31-01	0002	1862	
	18	14128-001	#		·DIFFERENTIAL PRESSURE SWITCH	1863 / 0001	/	1
					AFTER SB2X-31-01	0002	1862	2
	21	MS35206-209	#	A	·SCREW	1863 / 0001	/	2
	24	NAS1149FN232P	#	A	·WASHER	1863 / 0001	/	2
	27	MS21042-02	#	A	·NUT	1863	2042	2
	30	MS21042-08	#	A	·NUT	2043 / 0001	/	2
	33	12738-115	#	A	·SPRING CLAMP	1863 / 0001	/	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 34-10-01 DET			PITOT-STATIC			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PRT IDENTIFICATION.			
					2) SERIAL NUMBER 22-2037; REFER TO 2043 FOR PRT IDENTIFICATION.			
			#		INSTALLED ON AIRCRAFT W/O PERSPECTIVE.			

EFFECTIVITY:
All

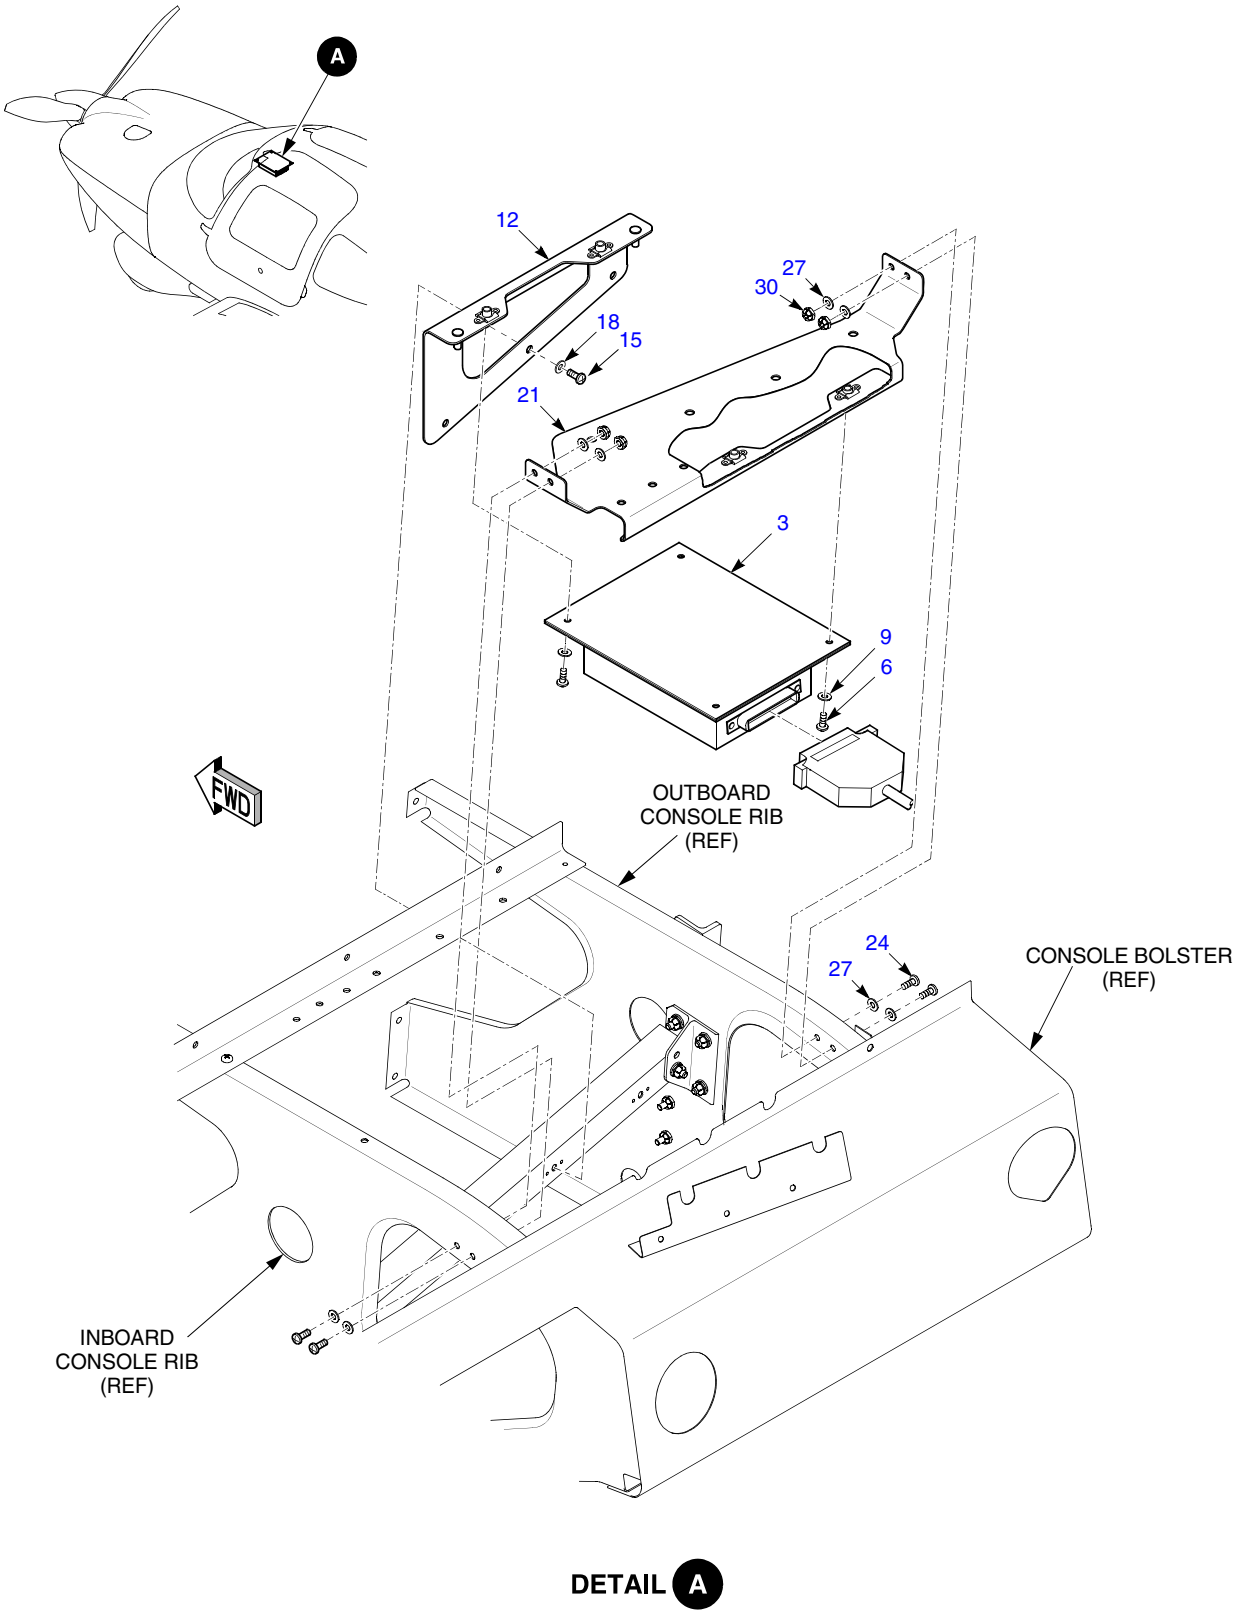

Figure-02
Data Transfer Unit - Serials 22-2750 & subs w/o Perspective

EFFECTIVITY:
Serials 22-2750 & subs w/o Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		DATA TRANSFER UNIT INSTL W/O PERSPECTIVE	2750		NP
	3	17517-001			·DTU-100	2750		1
	6	MS35207-263		A	·SCREW	2750		4
	9	NAS1149F0332P		A	·WASHER	2750		4
	12	19131-001			·BRACKET	2750		1
	15	MS35206-245		A	·SCREW	2750		3
	18	NAS1149FN832P		A	·WASHER	2750		3
	21	19130-001			·BRACKET, AFT	2750		1
	24	MS35206-245		A	·SCREW	2750		4
	27	NAS1149FN832P		A	·WASHER	2750		8
	30	MS21083N08		A	·NUT	2750		4
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2710; REFER TO 22-2750 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

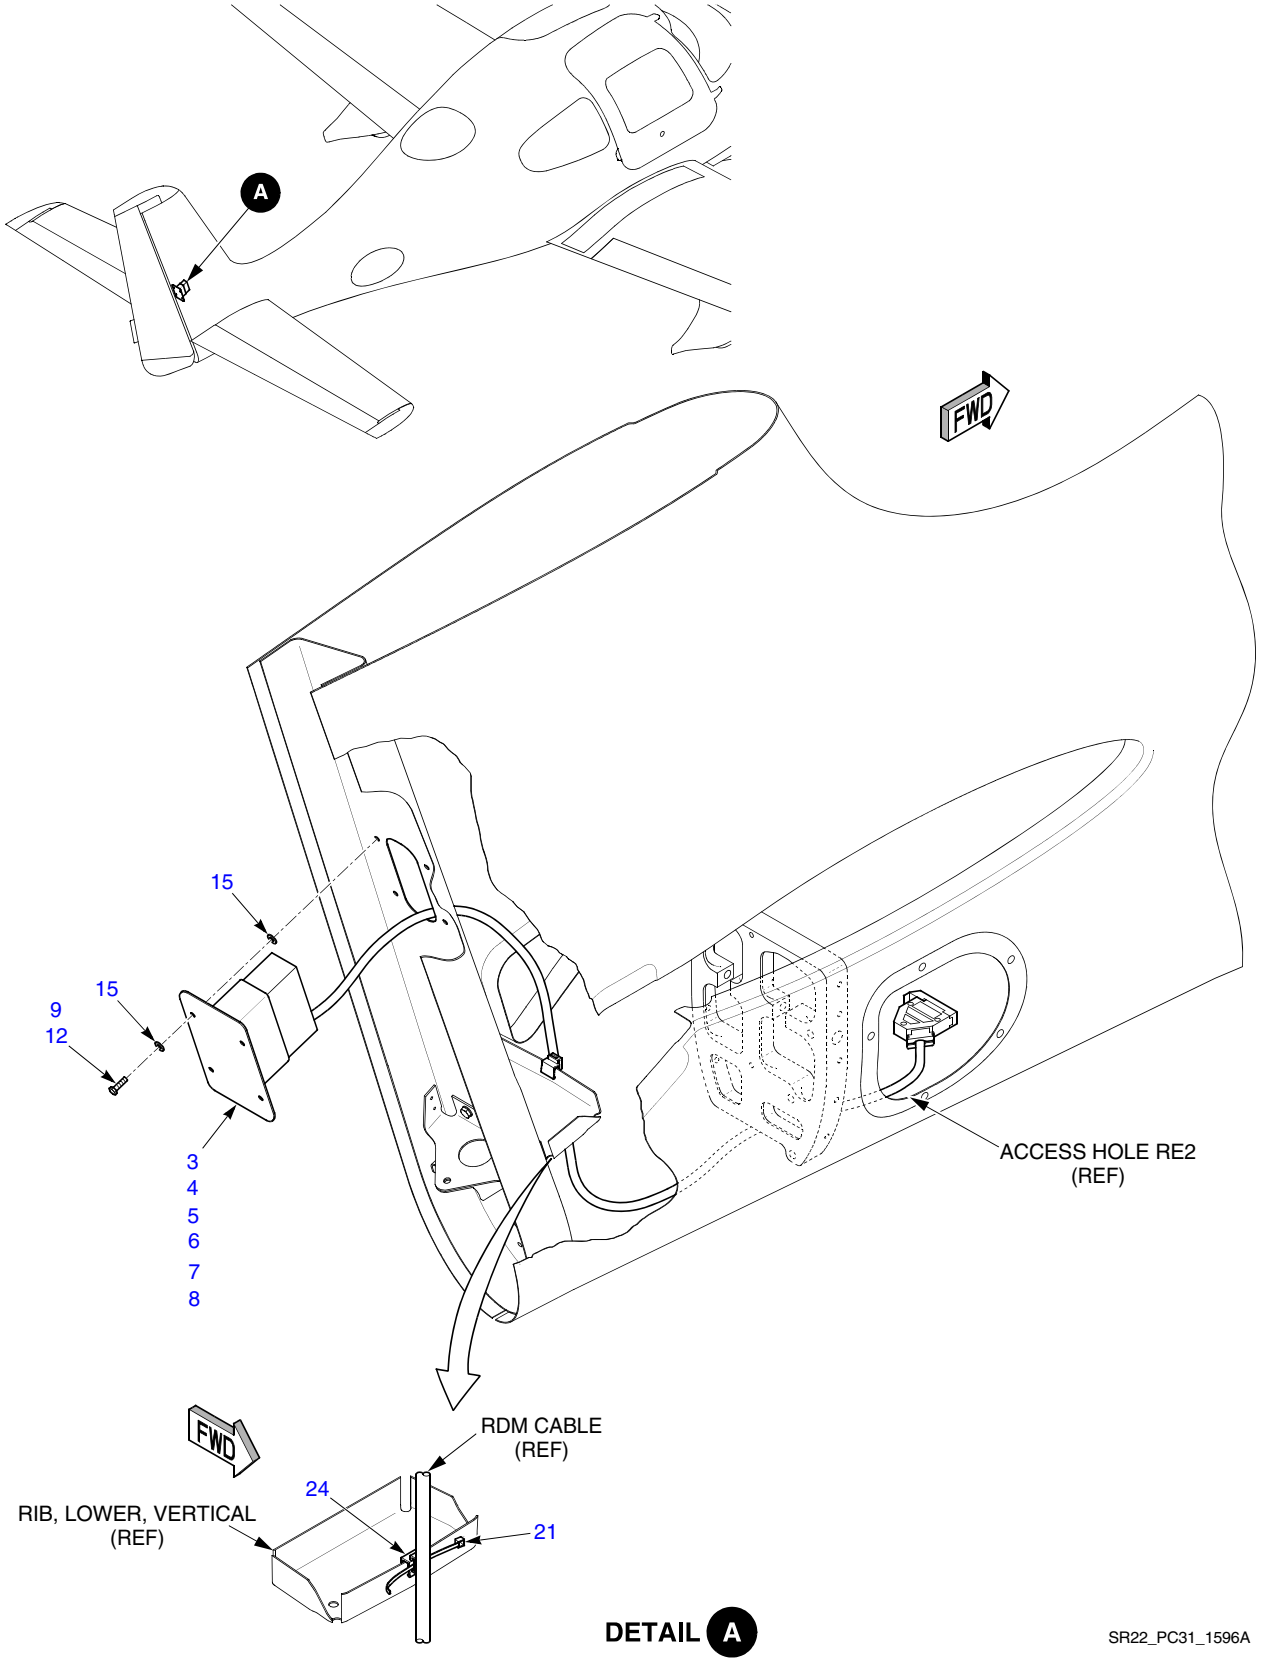

Figure-03

Recoverable Data Module - Serials 22-2750 & subs, 22T-0001 & subs

EFFECTIVITY:
Serials 22-2750 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		RECOVERABLE DATA MODULE (RDM) INSTALLATION	2750 / 0001	/	NP
	3	17518-002			·RDM-100, W/O PERSPECTIVE AVIONICS	2750	2849	1
	4	17518-005			·RDM-100, W/O PERSPECTIVE AVIONICS	2850		1
	5	24618-001			·RDM-100, W/ PERSPECTIVE AVIONICS	3026	3253	1
					FOR SPARES USE P/N 24618-005 OR 24618-006			
	6	24618-002			·RDM-100, W/ PERSPECTIVE AVIONICS	3254	3532	1
					FOR SPARES USE P/N 24618-005 OR 24618-006			
	7	24618-005			·RDM-100, W/ PERSPECTIVE AVIONICS	3533 / 0001	4144 / 0912	1
					FOR SPARES USE P/N 24618-006			
	8	24618-006			·RDM-100, W/ PERSPECTIVE AVIONICS	4145 0913		1
	9	AN3-5A		A	·BOLT, W/O PERSPECTIVE AVIONICS	2750		4
	12	AN3-6A		A	·BOLT, W/ PERSPECTIVE AVIONICS	3026 / 0001	/	4
	15	NAS1149F0363P		A	·WASHER	2750 / 0001	/	8
-	18	50132-001		A	·CABLE TIE ANCHOR	2750 / 0001	/	AR
	21	50239-020		A	·CABLE TIE	2750 / 0001	/	AR
	24	51900-001		A	·EDGE CLIP	2750 / 0001	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-2710; REFER TO 22-2750 FOR PART IDENTIFICATION.

2) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

EFFECTIVITY:
All

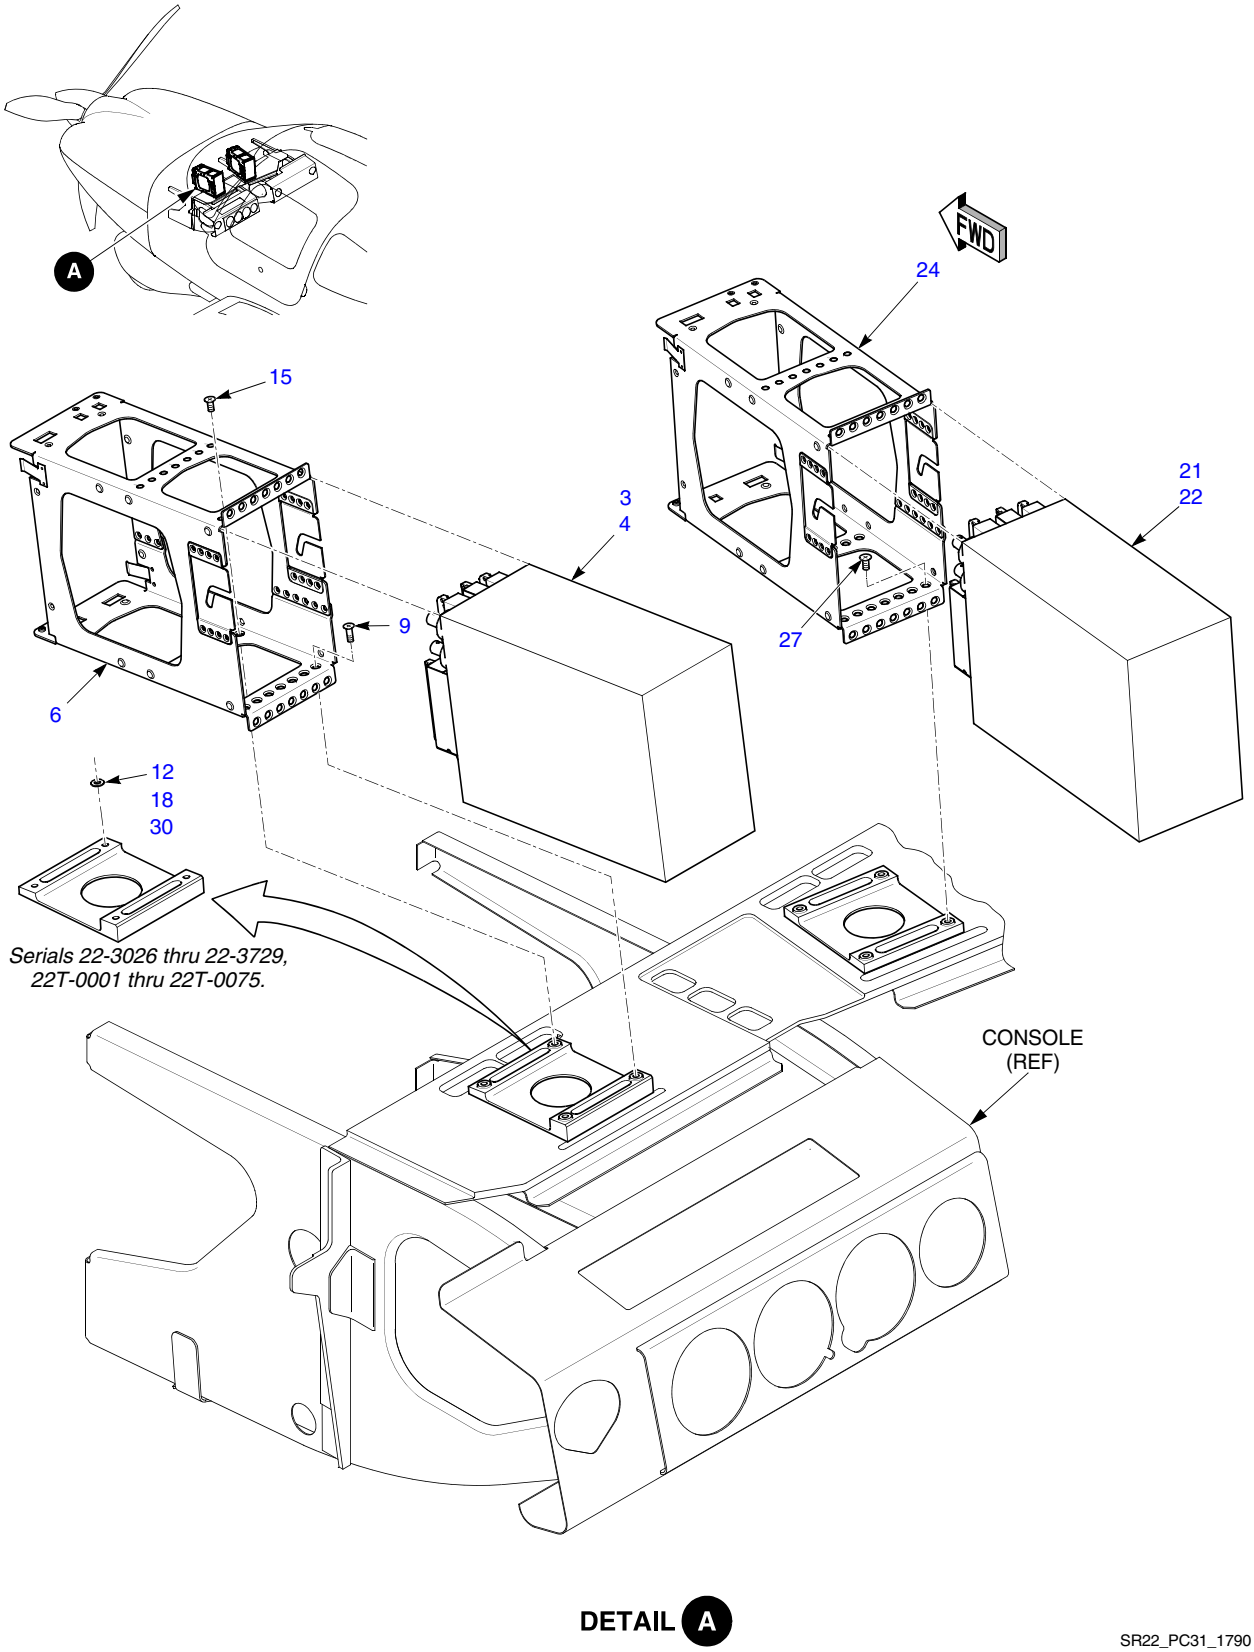

Figure-01
Integrated Avionics Unit - Serials w/ Perspective Avionics

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		INTEGRATED AVIONICS UNIT INSTALLATION	3026 / 0001	/	NP
	3	24662-001			·GIA 63W INTEGRATED AVIONICS UNIT 1	3026 / 0001	3866 / 0260	1
	4	24662-002			·GIA 63W INTEGRATED AVIONICS UNIT 1	3867 / 0261	/	1
	6	24662-101			·RACK	3026 / 0001	/	1
	9	MS24693-S50		A	·SCREW	3026 / 0001	/	2
	12	NAS1149FN832P		A	·WASHER	3026 / 0001	3729 / 0075	2
	15	MS24693-S48		A	·SCREW	3026 / 0001	/	2
	18	NAS1149FN832P		A	·WASHER	3026 / 0001	3729 / 0075	2
	21	24662-001			·GIA 63W INTEGRATED AVIONICS UNIT 2	3026 / 0001	3866 / 0260	1
	22	24662-002			·GIA 63W INTEGRATED AVIONICS UNIT 2	3867 / 0261	/	1
	24	24662-101			·RACK	3026 / 0001	/	1
	27	MS24693-S48		A	·SCREW	3026 / 0001	/	4
	30	NAS1149FN832P		A	·WASHER	3026 / 0001	3722 / 0075	4
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTI-FICATION.			

EFFECTIVITY:
All

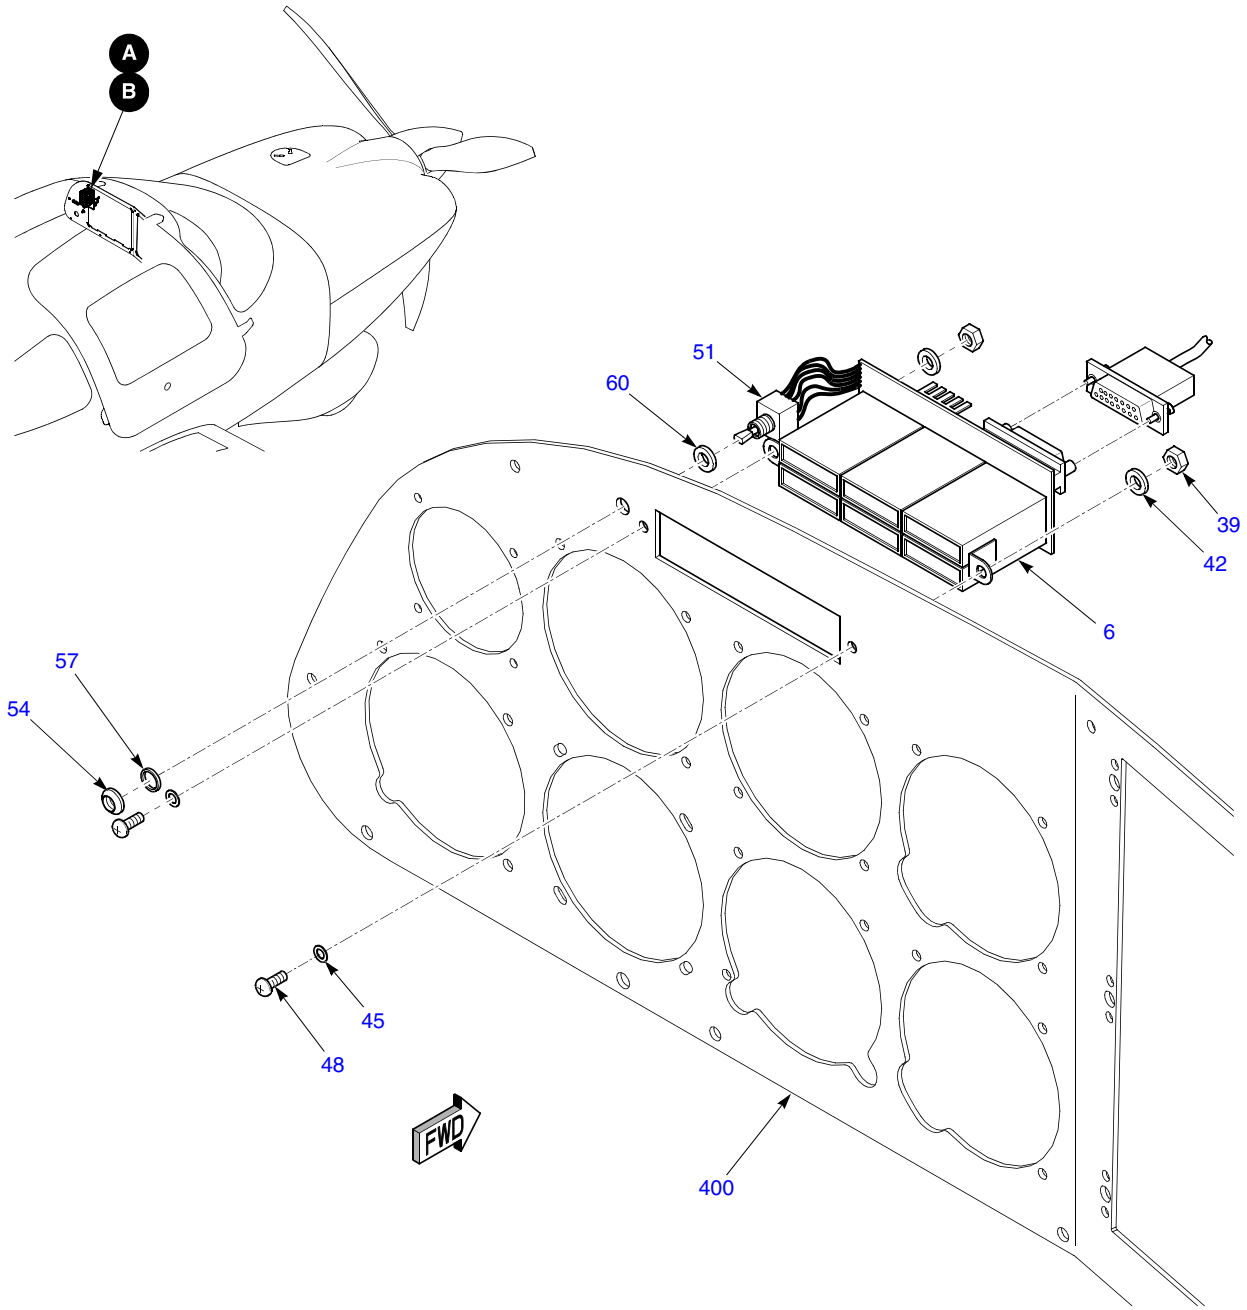

DETAIL A

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

SR22_PC31_1177B

Figure-01

Annunciator Panel - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

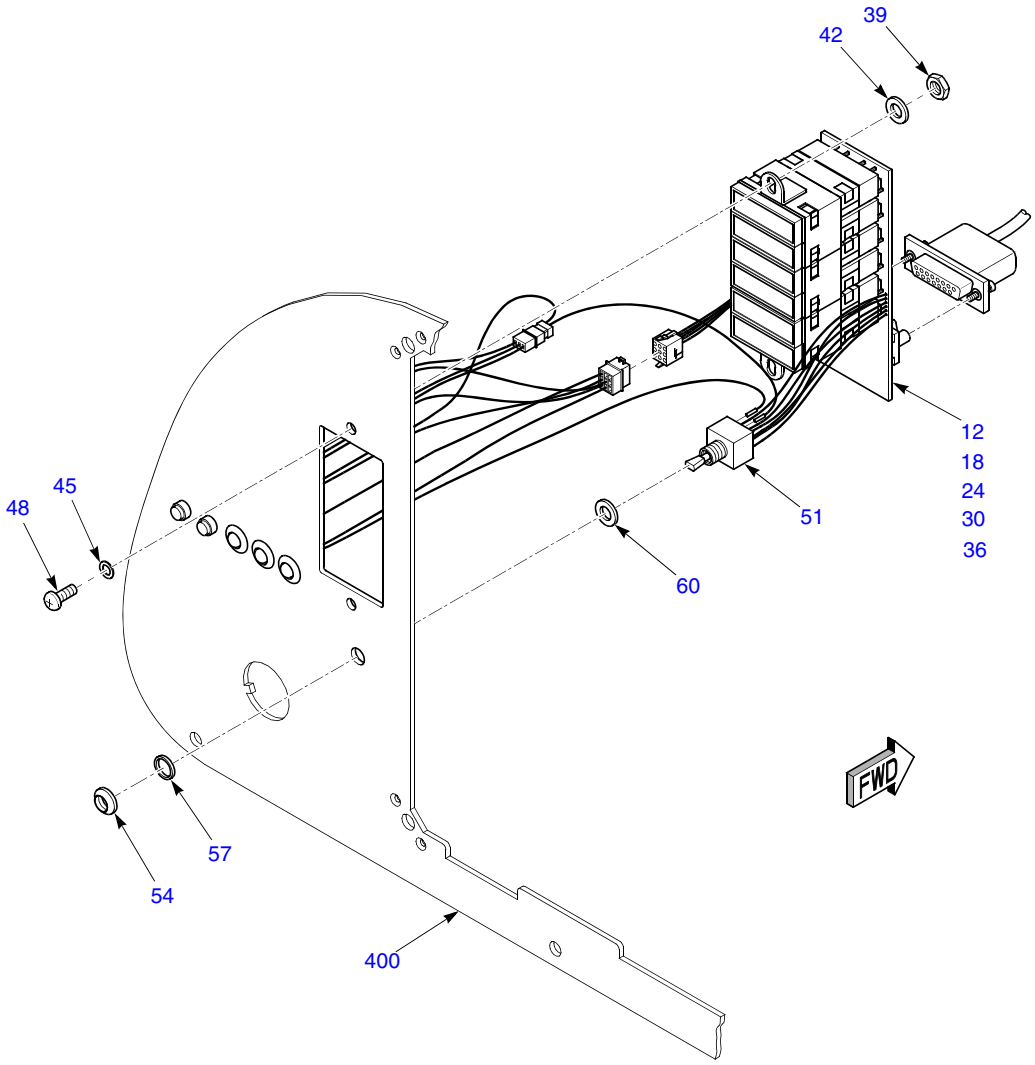

DETAIL B

SR22_PC31_1281B

Figure-01

Annunciator Panel - Serials 22-0435 & subs w/ PFD and w/o Perspective (2 of 2)

EFFECTIVITY:
Serials 22-0435 & subs w/ PFD and w/o Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ANNUNCIATOR PANEL INSTALLATION W/O PERSPECTIVE	0002		NP
-	3	11837-003			·ANNUNCIATOR PANEL, W/O PFD	0002	0820	1
					FOR SPARES USE P/N 11837-013			
	6	11837-013			·ANNUNCIATOR PANEL, W/O PFD	0002	0820	1
-	9	15260-001			·ANNUNCIATOR PANEL, W/ PFD, W/O TAWS	0435	1862	1
					FOR SPARES USE P/N 15260-011			
	12	15260-011			·ANNUNCIATOR PANEL, W/ PFD, W/O TAWS	0435	1862	1
-	15	15260-004			·ANNUNCIATOR PANEL, W/ PFD, W/O TAWS	1863		1
					FOR SPARES USE P/N 15260-014			
	18	15260-014			·ANNUNCIATOR PANEL, W/ PFD, W/O TAWS	1863		1
-	21	15260-002			·ANNUNCIATOR PANEL, W/ PFD, W/ TAWS	1036	1044	1
					FOR SPARES USE P/N 15260-012			
	24	15260-012			·ANNUNCIATOR PANEL, W/ PFD, W/ TAWS	1036	1044	1
-	27	15260-003			·ANNUNCIATOR PANEL, W/ PFD, W/ TAWS	1045	1862	1
					FOR SPARES USE P/N 15260-013			
	30	15260-013			·ANNUNCIATOR PANEL, W/ PFD, W/ TAWS	1045	1862	1
-	33	15260-005			·ANNUNCIATOR PANEL, W/ PFD, W/ TAWS	1863		1
					FOR SPARES USE P/N 15260-015			
	36	15260-015			·ANNUNCIATOR PANEL, W/ PFD, W/ TAWS	1863		1
	39	MS21044N06		A	·NUT	0002		2
	42	NAS1149FN632P		A	·WASHER	0002		2
	45	50813-001		A	·WASHER	0002		2
	48	50834-007		A	·CAP SCREW	0002		2
	51	50332-001			··SWITCH	0002		1
	54	50333-001		A	··DRESS NUT	0002		1
	57	50334-001		A	··WASHER	0002		1
	60	PRT OF ITM 51		A	··WASHER	0002		1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 31-10-01 DET			INSTRUMENT PANEL			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1840; REFER TO 22-1863 FOR PART IDENTIFICATION.			

Intentionally Left Blank

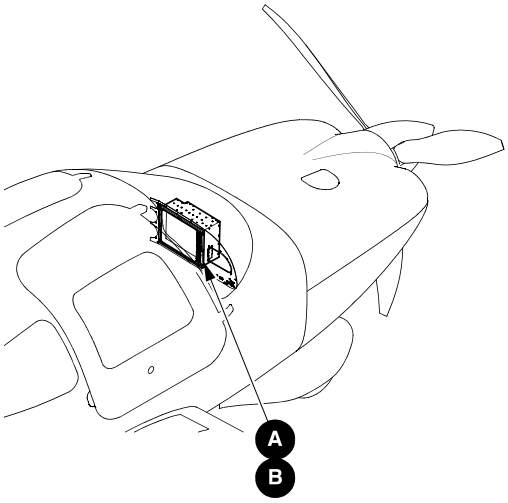

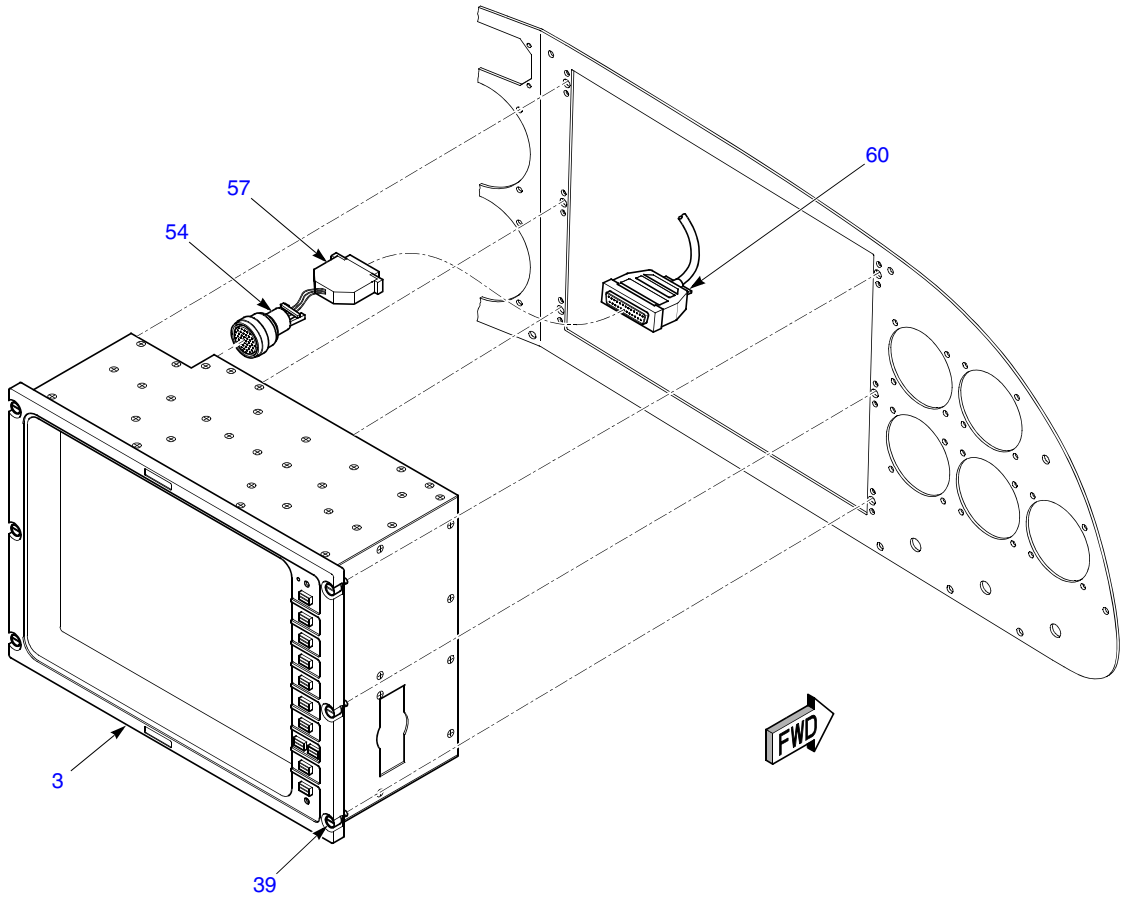

DETAIL A

Serials 22-0002 thru 22-0141.

SR22_PC31_1213C

Figure-01
Multi Function Display - Serials w/ ARNAV MFD (1 of 4)

EFFECTIVITY:
Serials w/ ARNAV MFD

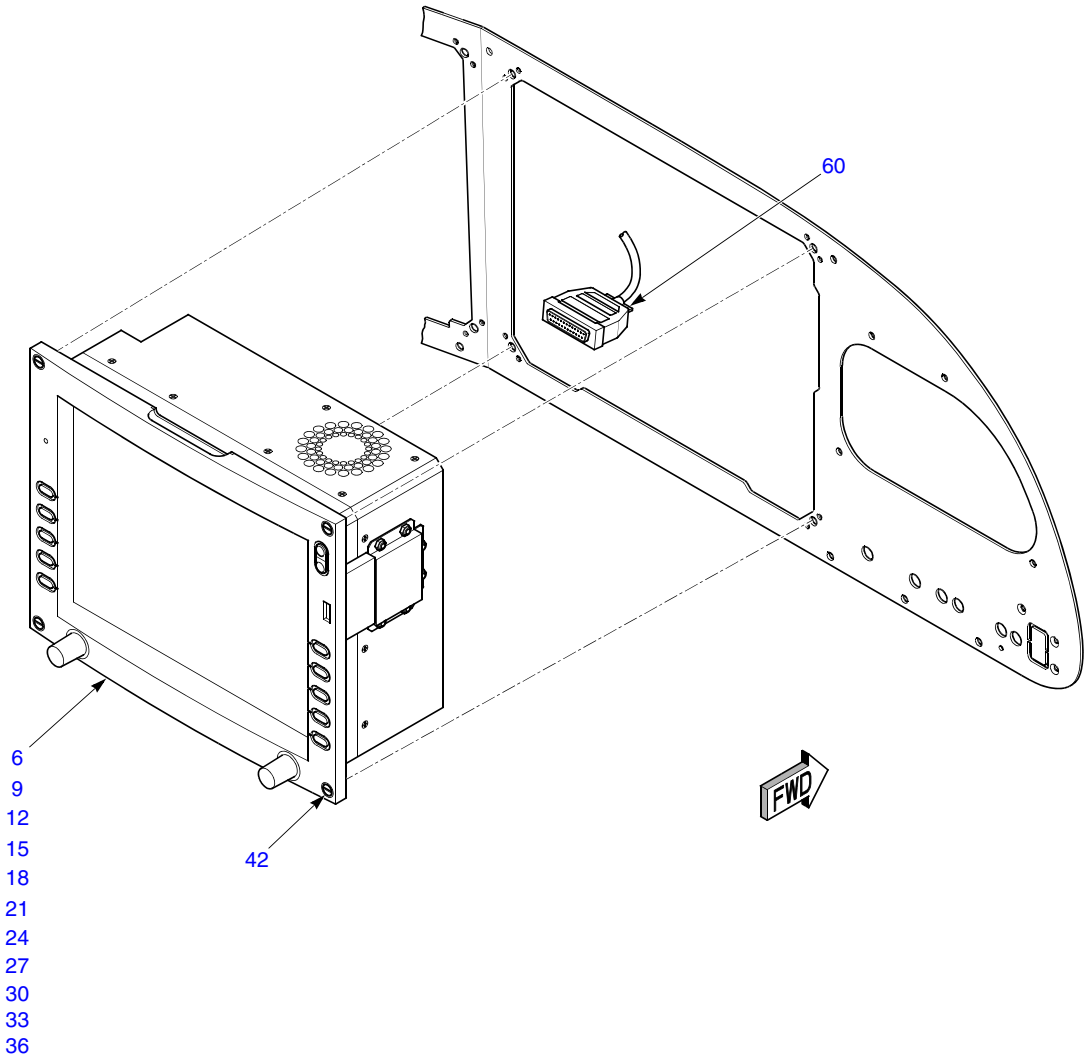

Figure-01
Multi Function Display - Serials w/ Avidyne MFD (2 of 4)

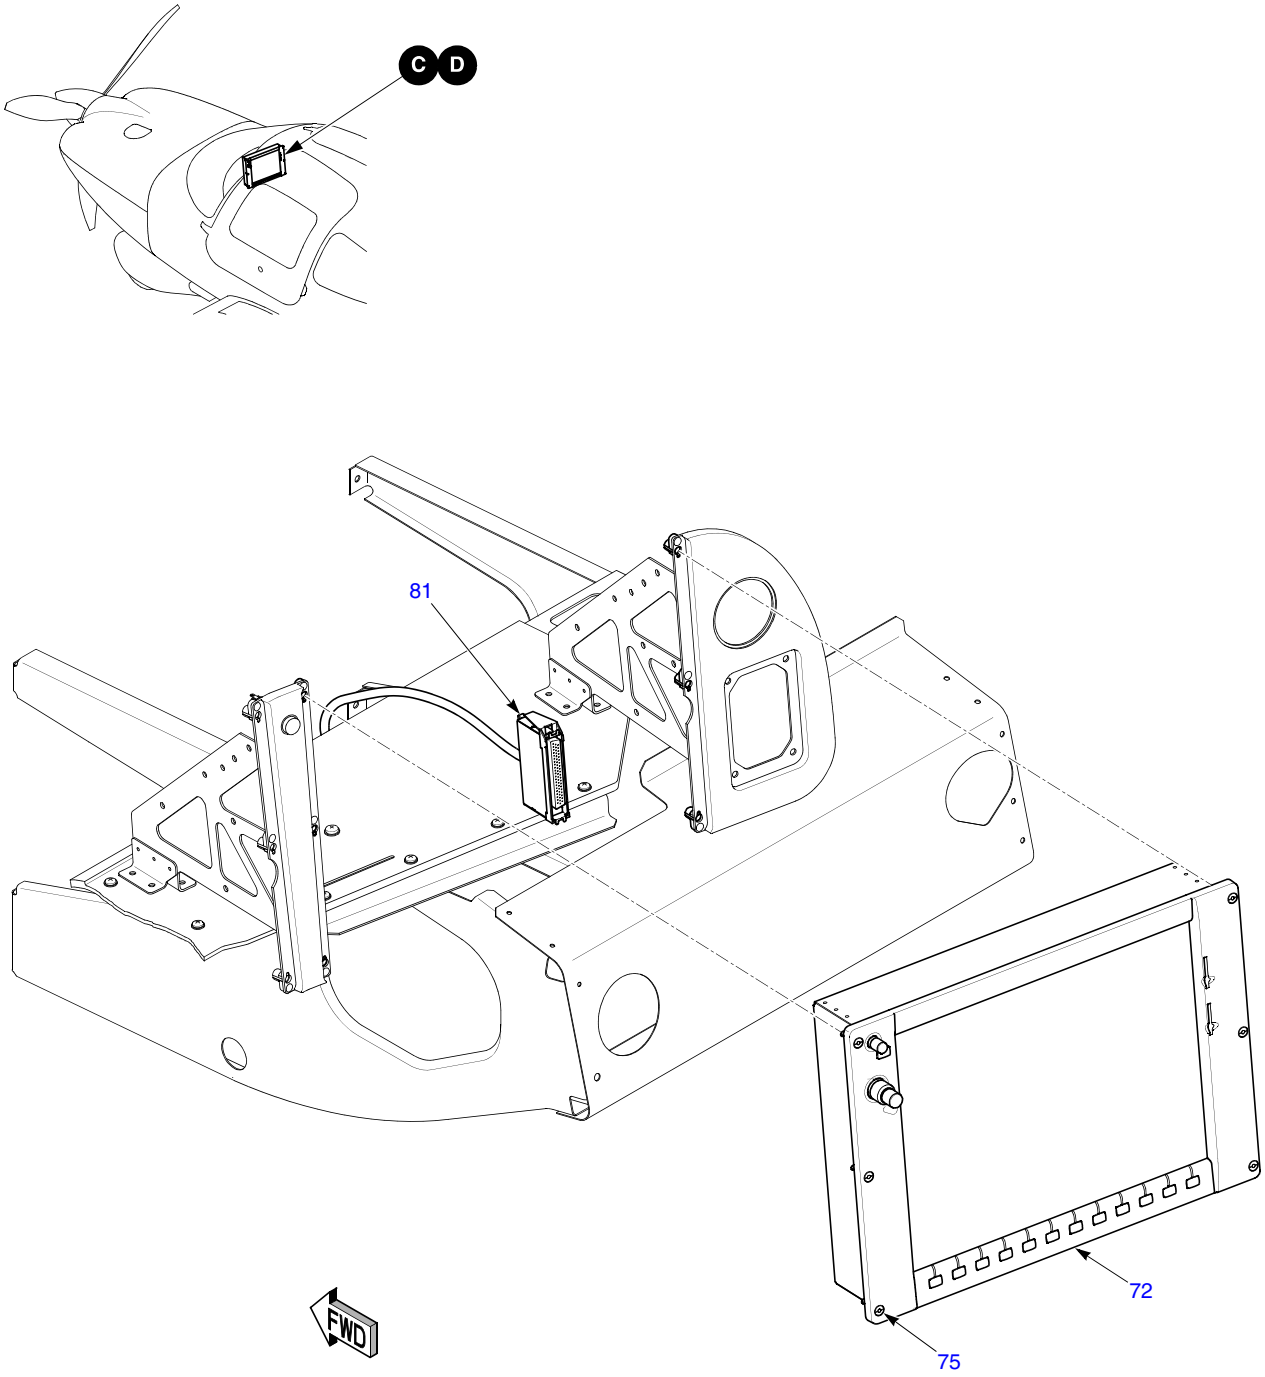

DETAIL C

SR22_PC31_1836A

Figure-01
Multi Function Display - Serials w/ Garmin 12-Inch MFD (3 of 4)

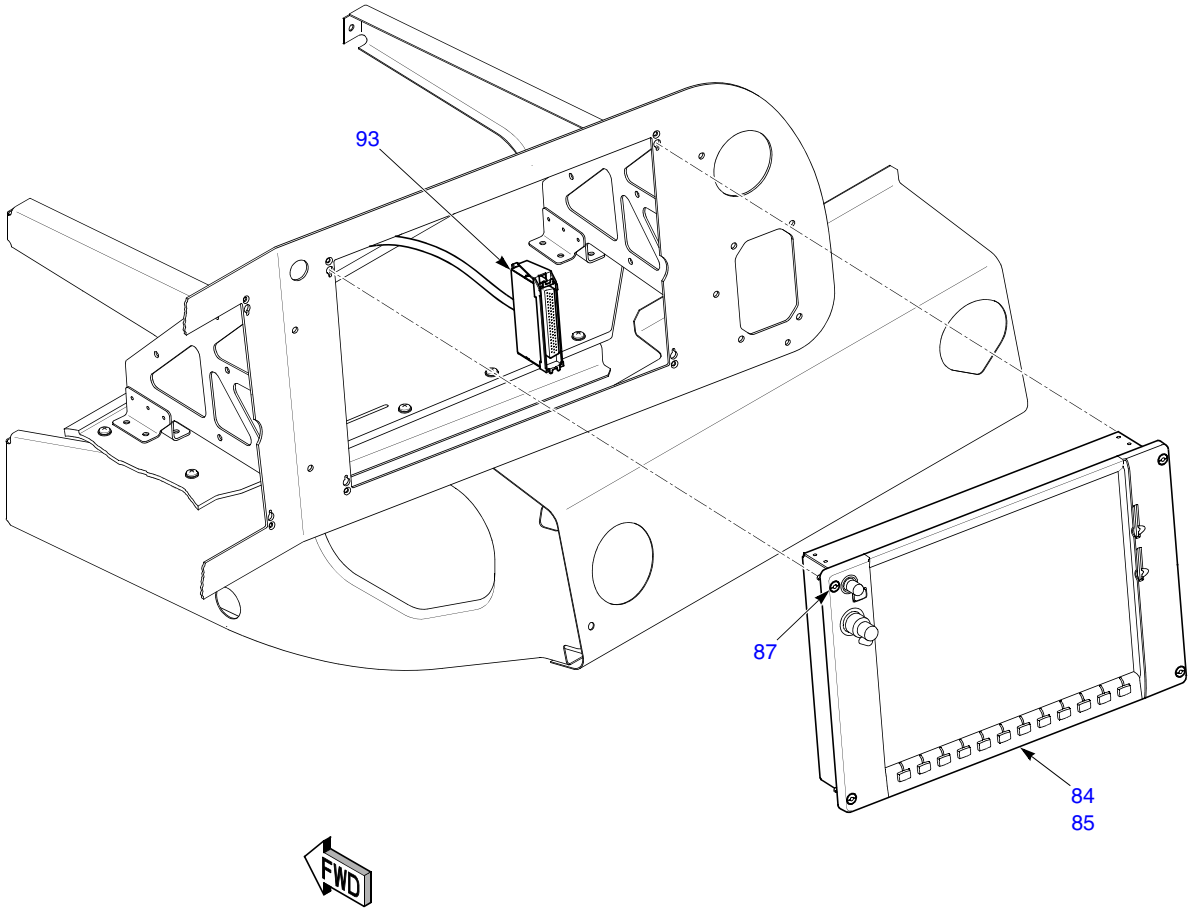

DETAIL D

SR22_PC31_1912

Figure-01

Multi Function Display - Serials w/ Garmin 10-Inch MFD (4 of 4)

EFFECTIVITY:
Serials w/ Garmin 10-Inch MFD

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		MFD W/O PERSPECTIVE	0002		NP
	3	12755-001			·MFD, ARNAV, ICDS2000	0002	0199	1
	6	14750-002			·MFD, AVIDYNE, EX5000C, W/DATALINK	0142	0468	1
					FOR SPARES USE P/N 14750-006			
	9	14750-004			·MFD, AVIDYNE, EX5000C, W/DATALINK	0469	1103	1
					ALTERNATE FOR P/N 14750-006			
	12	14750-006			·MFD, AVIDYNE, EX5000C, W/DATALINK, BRIGHT	0469	1103	1
					ALTERNATE FOR P/N 14750-004			
	15	14750-008			·MFD, AVIDYNE, EX5000C, W/XM WEATHER, BRIGHT	1104	1662	1
					ALTERNATE FOR P/N 14750-006			
	18	14750-009			·MFD, AVIDYNE, EX5000C, W/XM WEATHER, BRIGHT	1663	1980	1
					FOR SPARES USE P/N 14750-014			
	21	14750-010			·MFD, AVIDYNE, EX5000C, W/XM WEATHER, BRIGHT	1981	2215	1
					FOR SPARES USE P/N 14750-014			
	24	14750-011			·MFD, AVIDYNE, EX5000C, W/XM WEATHER, BRIGHT	2216	2437	1
					FOR SPARES USE P/N 14750-014			
	27	14750-012			·MFD, AVIDYNE, EX5000C, W/XM WEATHER, BRIGHT	2438	2749	1
					FOR SPARES USE P/N 14750-014			
	30	14750-013			·MFD, AVIDYNE, EX5000C, W/XM WEATHER, BRIGHT	2750	2802	1
					FOR SPARES USE P/N 14750-014			
	33	14750-014			·MFD, AVIDYNE, EX5000C, W/XM WEATHER, BRIGHT	2963	3368	1
					FOR SPARES USE P/N 14750-015			
	36	14750-015			·MFD, AVIDYNE, EX5000C, W/XM WEATHER, BRIGHT	3369		1
	39	PRT OF MFD		A	·CAPTIVE FASTENER, W/ ARNAV MFD	0002	0141	6
	42	PRT OF MFD		A	·CAPTIVE FASTENER, W/ AVIDYNE MFD	0142		4
-	45	50154-001		A	·RECEPTACLE, W/ ARNAV MFD	0002	0141	6
-	48	50154-001		A	·RECEPTACLE, W/ AVIDYNE MFD	0142		4
-	51	14783-001			·W875 WIRE HARNESS, W/ ARNAV MFD	0142	0199	1
	54	50405-001			··CONNECTOR, W/ ARNAV MFD	0002	0199	1
	57	51169-001			··CONNECTOR, W/ ARNAV MFD	0002	0199	1
	60	51164-001			·CONNECTOR, W/ ARNAV MFD OR AVIDYNE MFD	0002		1
-	63	RF 34-50-01 NHA			·DATA CARD, NORTH AMERICA	0002	0141	1
-	66	RF 34-50-01 NHA			·DATA CARD, INTERNATIONAL	0002	0141	1
-	69	NO PRT NUMBER			MFD W/ PERSPECTIVE	3026 / 0001	/	NP
	72	24655-004			·MFD, GARMIN, GDU 1240, 12 INCH	3026 / 0001	/	1
	75	PRT OF MFD		A	·CAPTIVE FASTENER, W/ GARMIN MFD	3026 / 0001	/	6
-	78	24655-251		A	·SOCKET, W/ GARMIN MFD	3026 / 0001	/	6
	81	24655-201			·CONNECTOR, W/ GARMIN MFD	3026 / 0001	/	1
	84	24655-002			·MFD, GARMIN, GDU 1040, 10 INCH	3446	3618	1
					FOR SPARES USE P/N 24655-012			
	85	24655-012			·MFD, GARMIN, GDU 1040, 10 INCH	3619 / 0001	/	1
	87	PRT OF MFD		A	·CAPTIVE FASTENER, W/ GARMIN MFD	3446 / 0001	/	6
-	90	24655-161		A	·SOCKET, W/ GARMIN MFD	3446 / 0001	/	6
	93	24655-201			·CONNECTOR, W/ GARMIN MFD	3446 / 0001	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-1602 AND 22-1644; REFER TO 22-1663 FOR PRT IDENTIFICATION.

2) SERIAL NUMBER 22-2334 AND 22-2420; REFER TO SERIAL 22-2438 FOR PRT IDENTIFICATION.

3) SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE FOR PRT IDENTIFICATION.

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					4) SERIAL NUMBER 22-3381, 22-3383; REFER TO 22-2963 FOR PRT IDENTIFICATION.			

Intentionally Left Blank

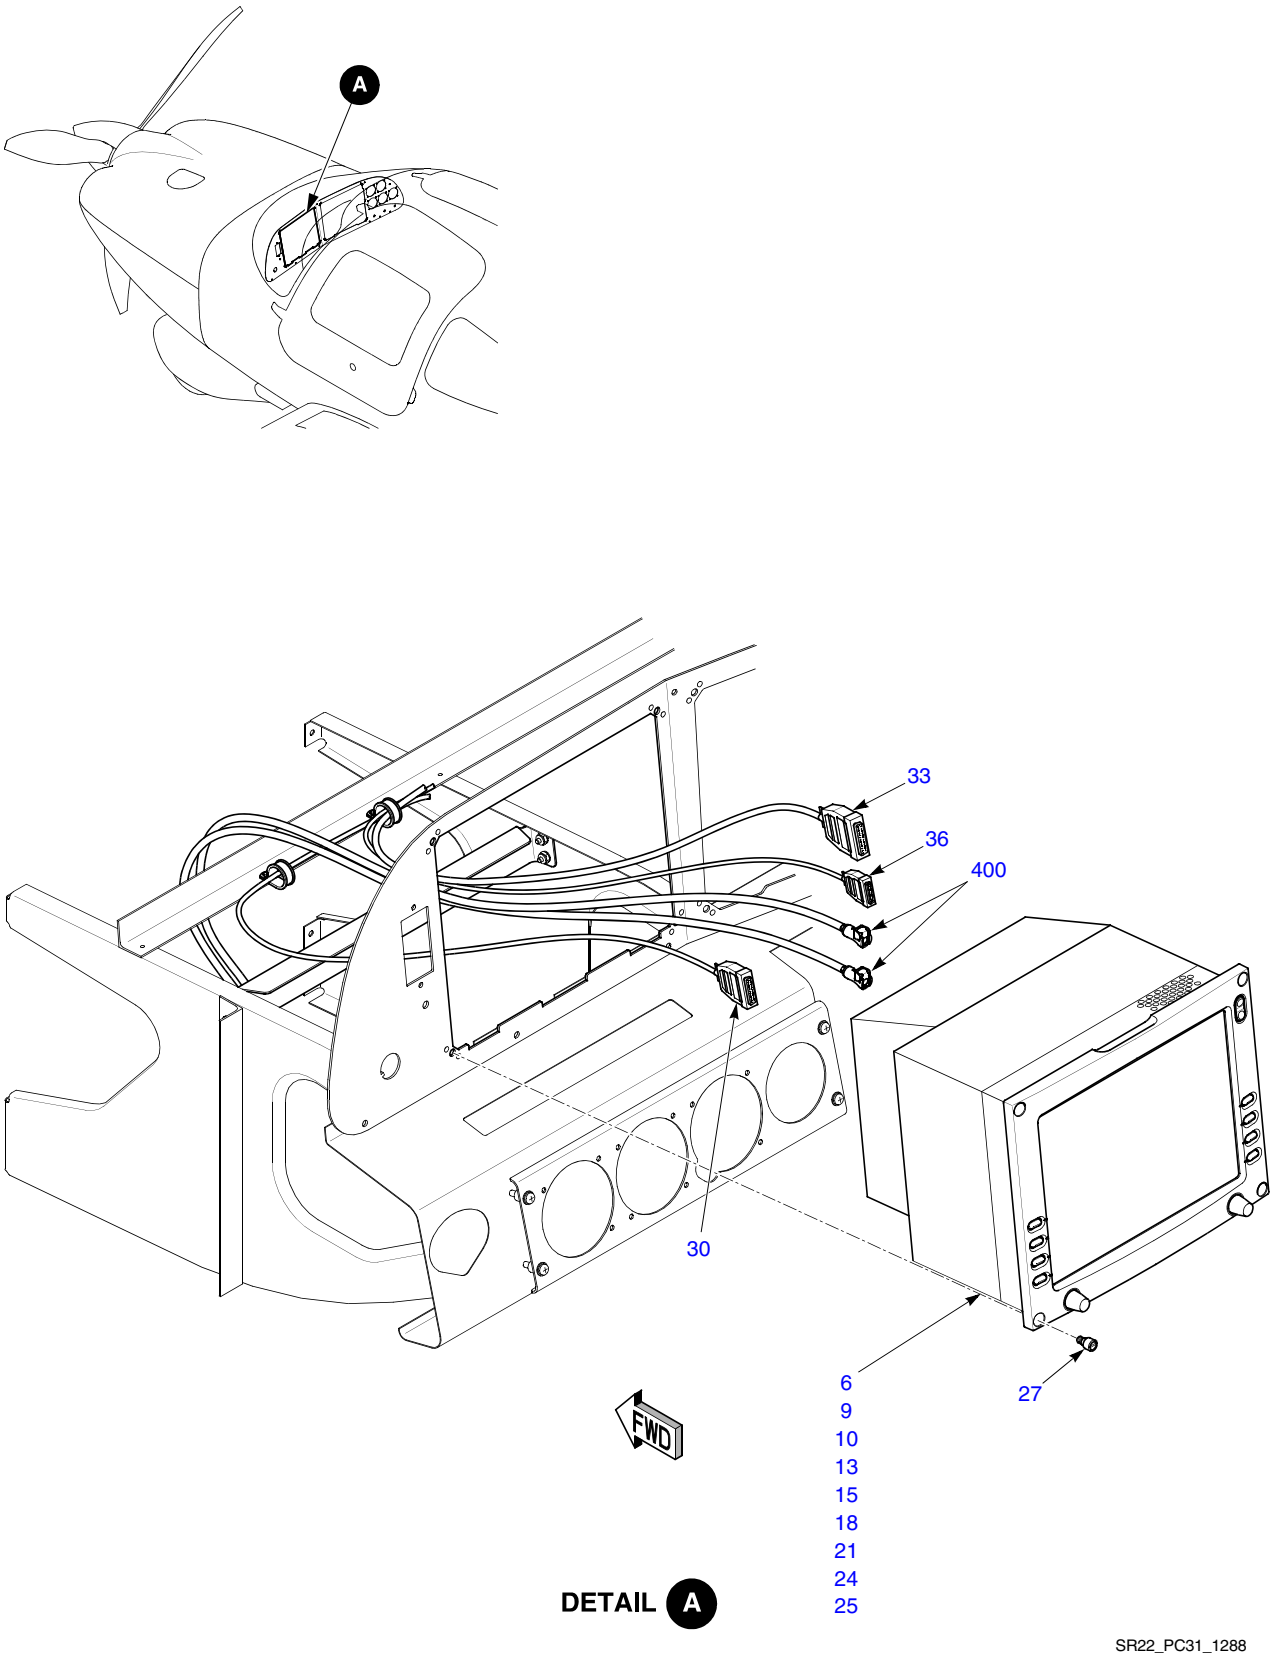

Figure-02
Primary Flight Display - Serials w/ Avidyne PFD (1 of 3)

EFFECTIVITY:
Serials w/ Avidyne PFD

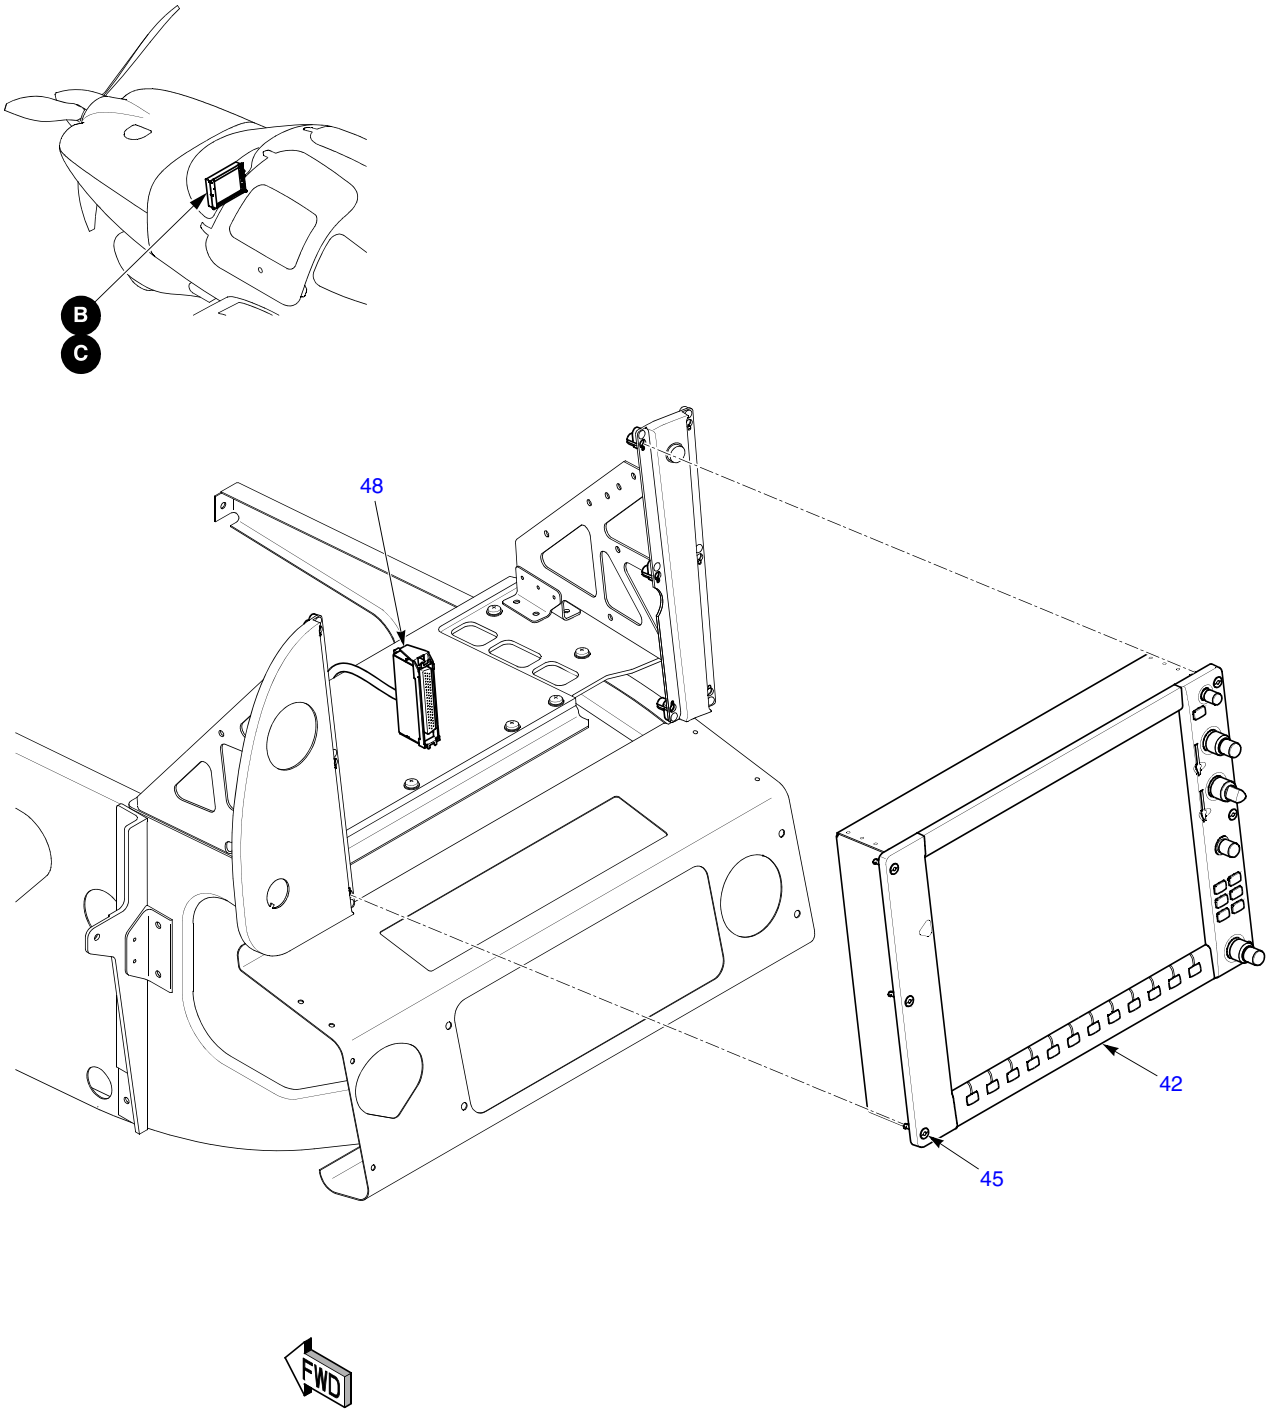

Figure-02
Primary Flight Display - Serials w/ Garmin 12-Inch PFD (2 of 3)

EFFECTIVITY:
All

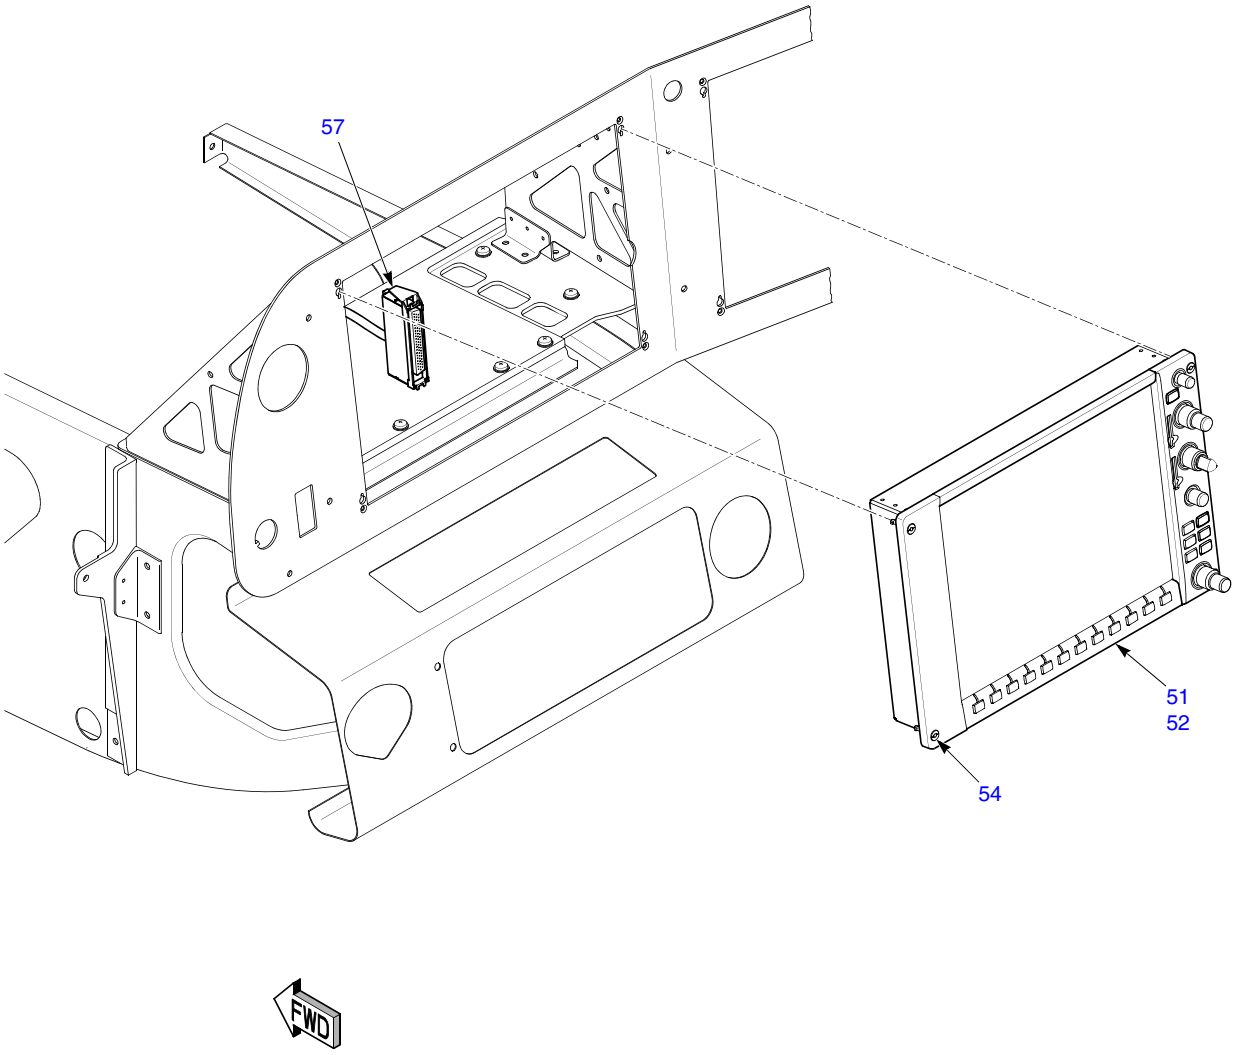

DETAIL C

SR22_PC31_1911

Figure-02
Primary Flight Display - Serials w/ Garmin 10-Inch PFD (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		PRIMARY FLIGHT DISPLAY (PFD)	0435 / 0001	/	NP
-	3	15222-001			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	0435	1306	1
					FOR SPARES USE P/N 15222-002			
	6	15222-002			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	1307	1662	1
	9	15222-003			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	1663	1691	1
					FOR SPARES USE P/N 15222-004			
	10	15222-004			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	1692	2215	1
					FOR SPARES USE P/N 15222-005			
	13	15222-005			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	2216	2437	1
	15	15222-006			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	2438	2577	1
					FOR SPARES USE P/N 15222-011			
	18	15222-007			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	2578	2749	1
					FOR SPARES USE P/N 15222-011			
	21	15222-008			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	2750	2963	1
					FOR SPARES USE P/N 15222-011			
	24	15222-009			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	2964	3368	1
					FOR SPARES USE P/N 15222-011			
	25	15222-011			·PFD AVIDYNE FLIGHTMAX ENTEGRA-SERIES	3369		1
	27	PRT OF PFD		A	·CAPTIVE FASTENER	0435		4
	30	51217-001			··CONNECTOR	0435		1
	33	51164-001			··CONNECTOR	0435		1
	36	51164-002			··CONNECTOR	0435		1
-	39	NO PRT NUMBER			PFD W/ PERSPECTIVE	3026 / 0001	/	NP
	42	24655-003			·PFD, GARMIN, GDU 1240, 12 INCH	3026 / 0001	/	1
	45	PRT OF PFD		A	·CAPTIVE FASTENER	3026 / 0001	/	4
	48	24655-201			·CONNECTOR, W/ GARMIN PFD	3026 / 0001	/	1
	51	24655-001			·PFD, GARMIN, GDU 1040, 10 INCH	3446	3618	1
					FOR SPARES USE P/N 24655-011			
	52	24655-011			·PFD, GARMIN, GDU 1040, 10 INCH	3619 / 0001	/	1
	54	PRT OF PFD		A	·CAPTIVE FASTENER	3446 / 0001	/	4
	57	24655-201			·CONNECTOR, W/ GARMIN PFD	3446 / 0001	/	1
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 34-10-01 DET			PITOT-STATIC SYSTEM			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602 AND 22-1644; REFER TO 22-1663 FOR PRT IDENTIFICATION.			
					2) SERIAL NUMBER 22-2334 AND 22-2420; REFER TO SERIAL 22-2438 FOR PRT IDENTIFICATION.			
					3) SERIAL NUMBER 22-2560; REFER TO 22-2578 FOR PRT IDENTIFICATION.			
					4) SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			
					5) SERIAL NUMBER 22-3381 AND 22-3183; REFER TO 22-2964 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

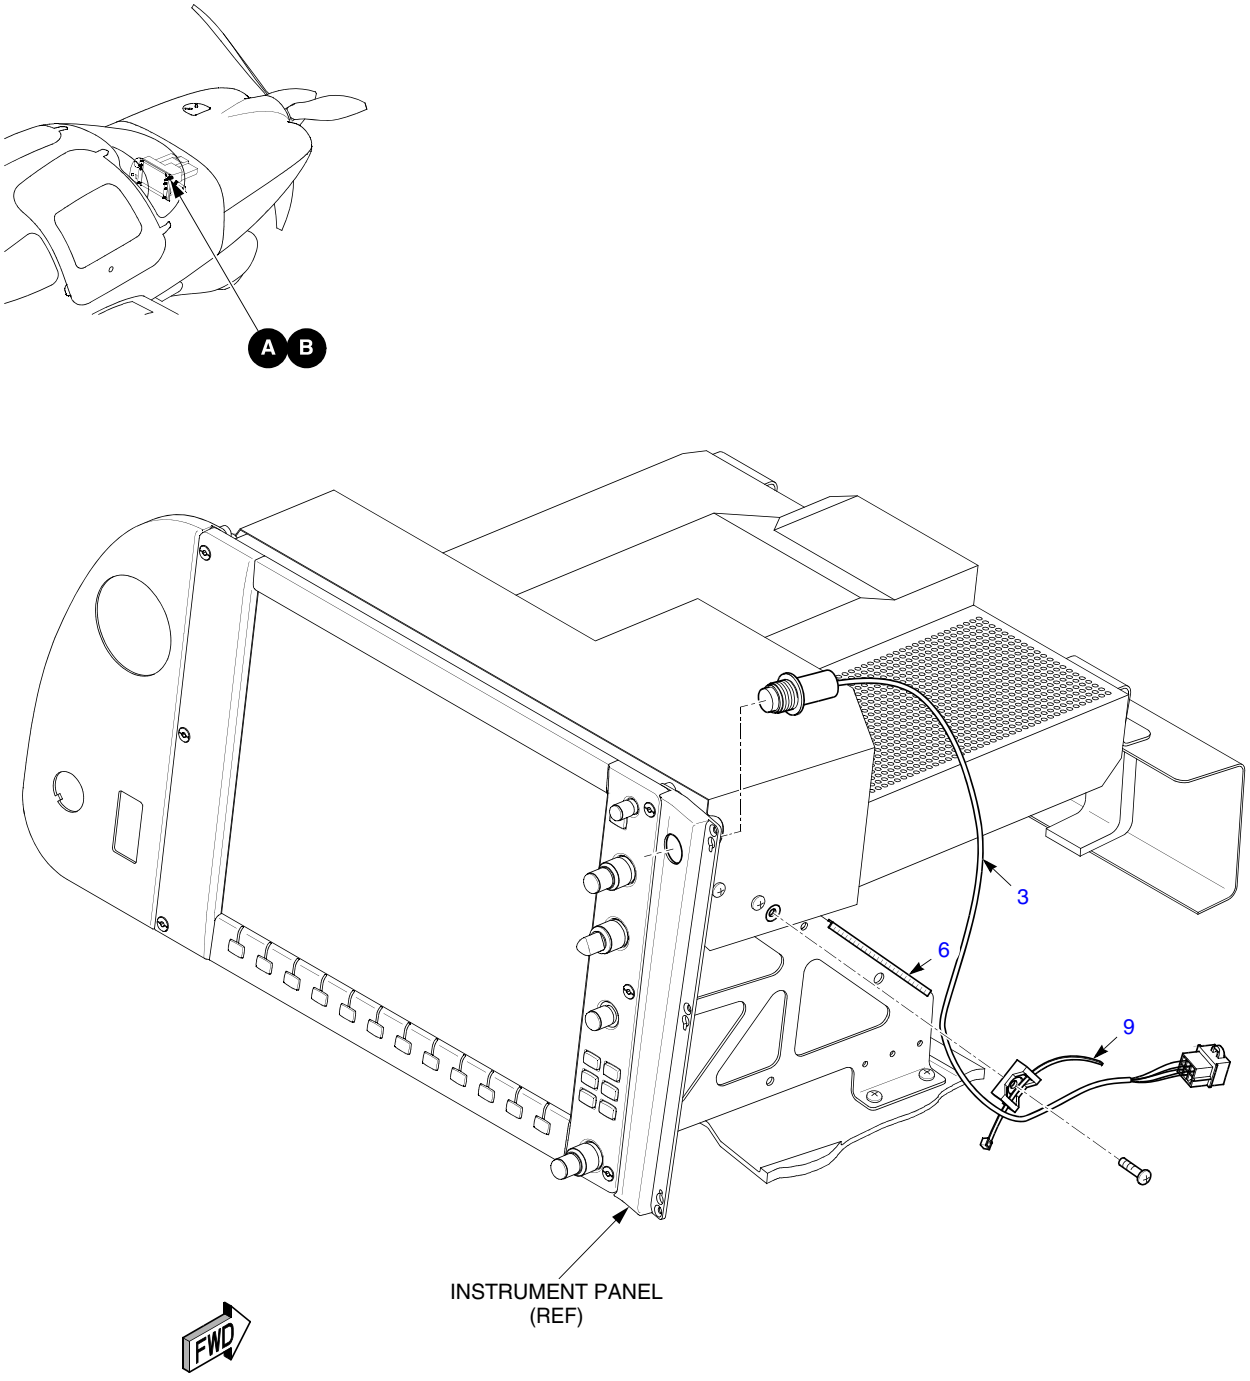

Figure-03
Reversionary Switch - Serials w/ Perspective 12-Inch Displays (1 of 2)

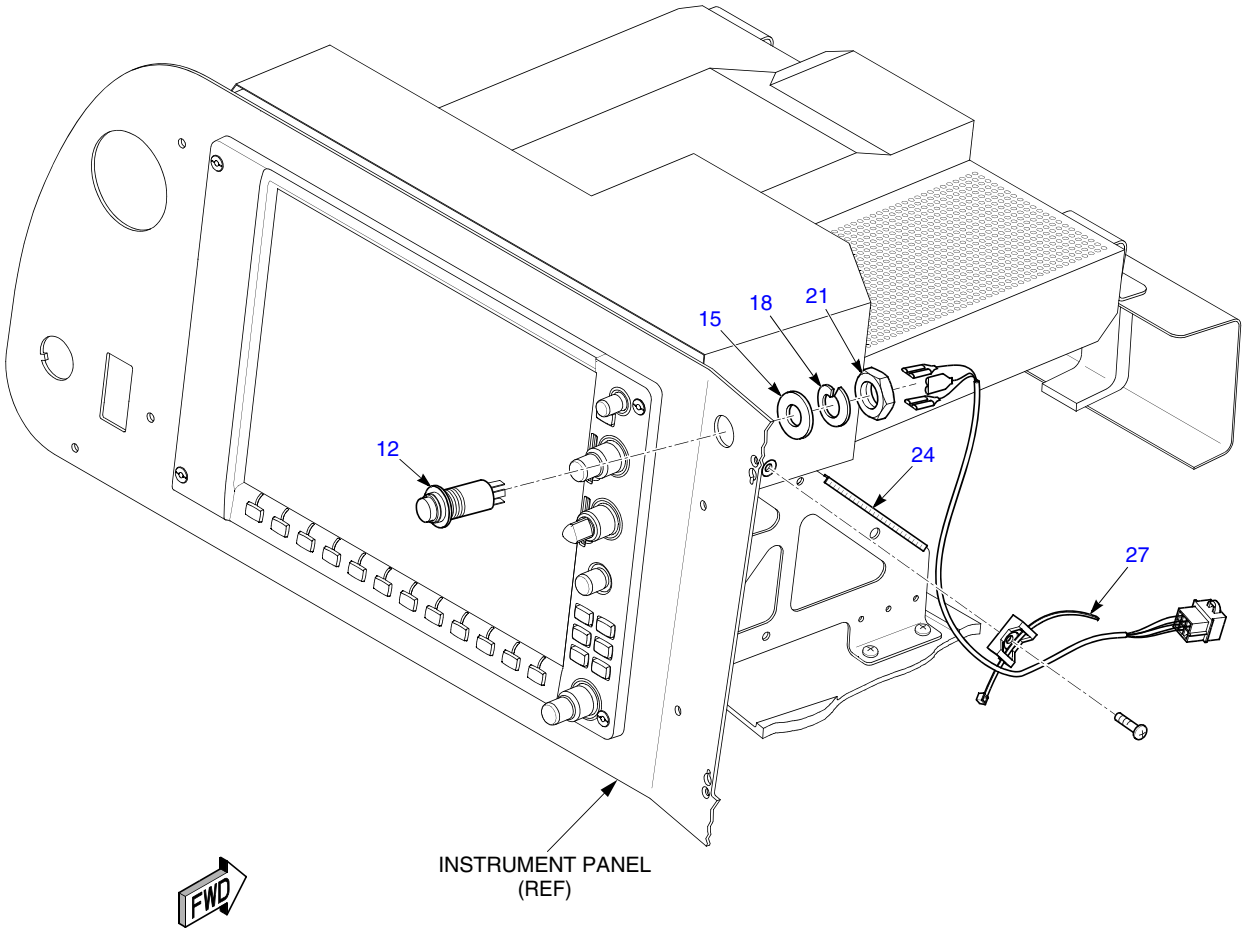

DETAIL B

SR22_PC31_1913

Figure-03

Reversionary Switch - Serials w/ Perspective 10-Inch Displays (2 of 2)

EFFECTIVITY:
Serials w/ Perspective 10-Inch Displays

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		REVERSIONARY SWITCH W/ PERSPECTIVE	3026 / 0001	/	NP
	3	24748-001	!		·REVERSIONARY PUSHBUTTON SWITCH ASSEMBLY	3026 / 0001	/	1
	6	50893-002			·GROMMET, FLEXIBLE	3026 / 0001	/	AR
	9	50239-010			·CABLE TIE	3026 / 0001	/	AR
	12	24748-002	@		·REVERSIONARY PUSHBUTTON SWITCH ASSEMBLY	3446 / 0001	/	1
	15	PRT OF ITM 12		A	·GASKET	3446 / 0001	/	1
	18	PRT OF ITM 12		A	·WASHER	3446 / 0001	/	1
	21	PRT OF ITM 12		A	·NUT	3446 / 0001	/	1
	24	50893-002			·GROMMET, FLEXIBLE	3446 / 0001	/	AR
	27	50239-010			·CABLE TIE	3446 / 0001	/	AR

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.

! INSTALLED ON AIRCRAFT WITH 12-INCH DISPLAYS.

@ INSTALLED ON AIRCRAFT WITH 10-INCH DISPLAYS.

Intentionally Left Blank

CHAPTER

32

LANDING GEAR

Intentionally Left Blank

CHAPTER 32 - LANDING GEAR
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
32-LOEP	1	04 SEP 2018
32-LOEP	2	04 SEP 2018
32-TOC	1	04 SEP 2018
32-TOC	2	04 SEP 2018
32-10-01	1	15 DEC 2014
32-10-01	2	15 DEC 2014
32-10-01	3	04 SEP 2018
32-10-01	4	04 SEP 2018
32-10-01	5	04 SEP 2018
32-10-01	6	15 DEC 2014
32-10-02	1	15 DEC 2014
32-10-02	2	15 DEC 2014
32-10-02	3	15 DEC 2014
32-10-02	4	15 DEC 2014
32-10-02	5	15 DEC 2014
32-10-02	6	15 DEC 2014
32-10-02	7	15 DEC 2014
32-10-02	8	15 DEC 2014
32-10-02	9	15 DEC 2014
32-10-02	10	15 DEC 2014
32-10-02	11	15 DEC 2014
32-10-02	12	15 DEC 2014
32-20-01	1	15 DEC 2014
32-20-01	2	15 DEC 2014
32-20-01	3	15 DEC 2014
32-20-01	4	04 SEP 2018
32-20-01	5	04 SEP 2018
32-20-01	6	04 SEP 2018
32-20-01	7	04 SEP 2018
32-20-01	8	15 DEC 2014
32-20-02	1	19 SEP 2017
32-20-02	2	19 SEP 2017
32-20-02	3	04 SEP 2018
32-20-02	4	04 SEP 2018
32-20-02	5	04 SEP 2018
32-20-02	6	04 SEP 2018
32-20-02	7	04 SEP 2018
32-20-02	8	04 SEP 2018
32-20-02	9	04 SEP 2018
32-20-02	10	15 DEC 2014

CHAPTER 32 - LANDING GEAR

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
32-42-01	1	15 DEC 2014
32-42-01	2	15 DEC 2014
32-42-01	3	15 DEC 2014
32-42-01	4	15 DEC 2014
32-42-01	5	15 DEC 2014
32-42-01	6	15 DEC 2014
32-42-01	7	15 DEC 2014
32-42-01	8	15 DEC 2014
32-42-01	9	19 SEP 2017
32-42-01	10	19 SEP 2017
32-42-01	11	19 SEP 2017
32-42-01	12	19 SEP 2017
32-42-01	13	19 SEP 2017
32-42-01	14	15 DEC 2014
32-42-02	1	15 DEC 2014
32-42-02	2	15 DEC 2014
32-42-02	3	15 DEC 2014
32-42-02	4	15 DEC 2014
32-42-02	5	15 DEC 2014
32-42-02	6	15 DEC 2014
32-42-02	7	15 DEC 2014
32-42-02	8	15 DEC 2014

EFFECTIVITY:
All

CHAPTER 32 - LANDING GEAR

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Main Landing Gear Fairings - Serials 22-0002 thru 22-2437 (1 of 2)	32-10-01
Main Landing Gear Fairings - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	32-10-01
Main Landing Gear - Serials 22-0002 thru 22-2437 before SB2X-32-21 (1 of 6)	32-10-02
Main Landing Gear - Serials 22-0002 thru 22-2437 after SB2X-32-21 (2 of 6)	32-10-02
Main Landing Gear - 22-2438-3711, 22T-0001-0064 before SB2X-32-21 (3 of 6)	32-10-02
Main Landing Gear - 22-2438-3711, 22T-0001-0064 after SB2X-32-21 (4 of 6)	32-10-02
Main Landing Gear - 22-3712-4045, 22T-0065-0689 before SB2X-32-21 (5 of 6)	32-10-02
Main Landing Gear - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (6 of 6)	32-10-02
Nose Gear Fairing - Serials 22-0002 thru 22-0527 (1 of 4)	32-20-01
Nose Gear Fairing - Serials 22-0528 thru 22-2437 (2 of 4)	32-20-01
Nose Gear Fairing - Serials 22-2438 thru 22-3711 (3 of 4)	32-20-01
Nose Gear Fairing - Serials 22-3712 & subs, 22T-0001 & subs (4 of 4)	32-20-01
Nose Landing Gear - Serials 22-0002 thru 22-2437 (1 of 3)	32-20-02
Nose Landing Gear - Serials 22-2438 thru 22-3711 (2 of 3)	32-20-02
Nose Landing Gear - Serials 22-3712 & subs, 22T-0001 & subs (3 of 3)	32-20-02
Brake System - Serials 22-0002 thru 22-2437 before SB2X-32-21 (1 of 8)	32-42-01
Brake System - Serials 22-0002 thru 22-2437 after SB2X-32-21 (2 of 8)	32-42-01
Brake System - Serials 22-2438 - 22-4045, 22T-0001 - 22T-0689 before SB2X-32-21 (3 of 8)	32-42-01
Brake System - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (4 of 8)	32-42-01
Brake System (5 of 8)	32-42-01
Brake System (6 of 8)	32-42-01
Brake System - Serials 22-0002 thru 22-2437 (7 of 8)	32-42-01
Brake System - Serials 22-2438 & subs, 22T-0001 & subs (8 of 8)	32-42-01
Brake Assembly - Serials 22-0002 - 22-1739 before SB2X-32-13 (1 of 5)	32-42-02
Brake Assembly - Serials 22-0002-1739 after SB2X-32-13, 22-1740-4045, 22T-0001-0689 (2 of 5)	32-42-02
Brake Assembly - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (3 of 5)	32-42-02
Brake Assembly - Serials 22-3026-4045, 22T-0001-0689 before SB2X-32-21 (4 of 5)	32-42-02
Brake Assembly - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (5 of 5)	32-42-02

Intentionally Left Blank

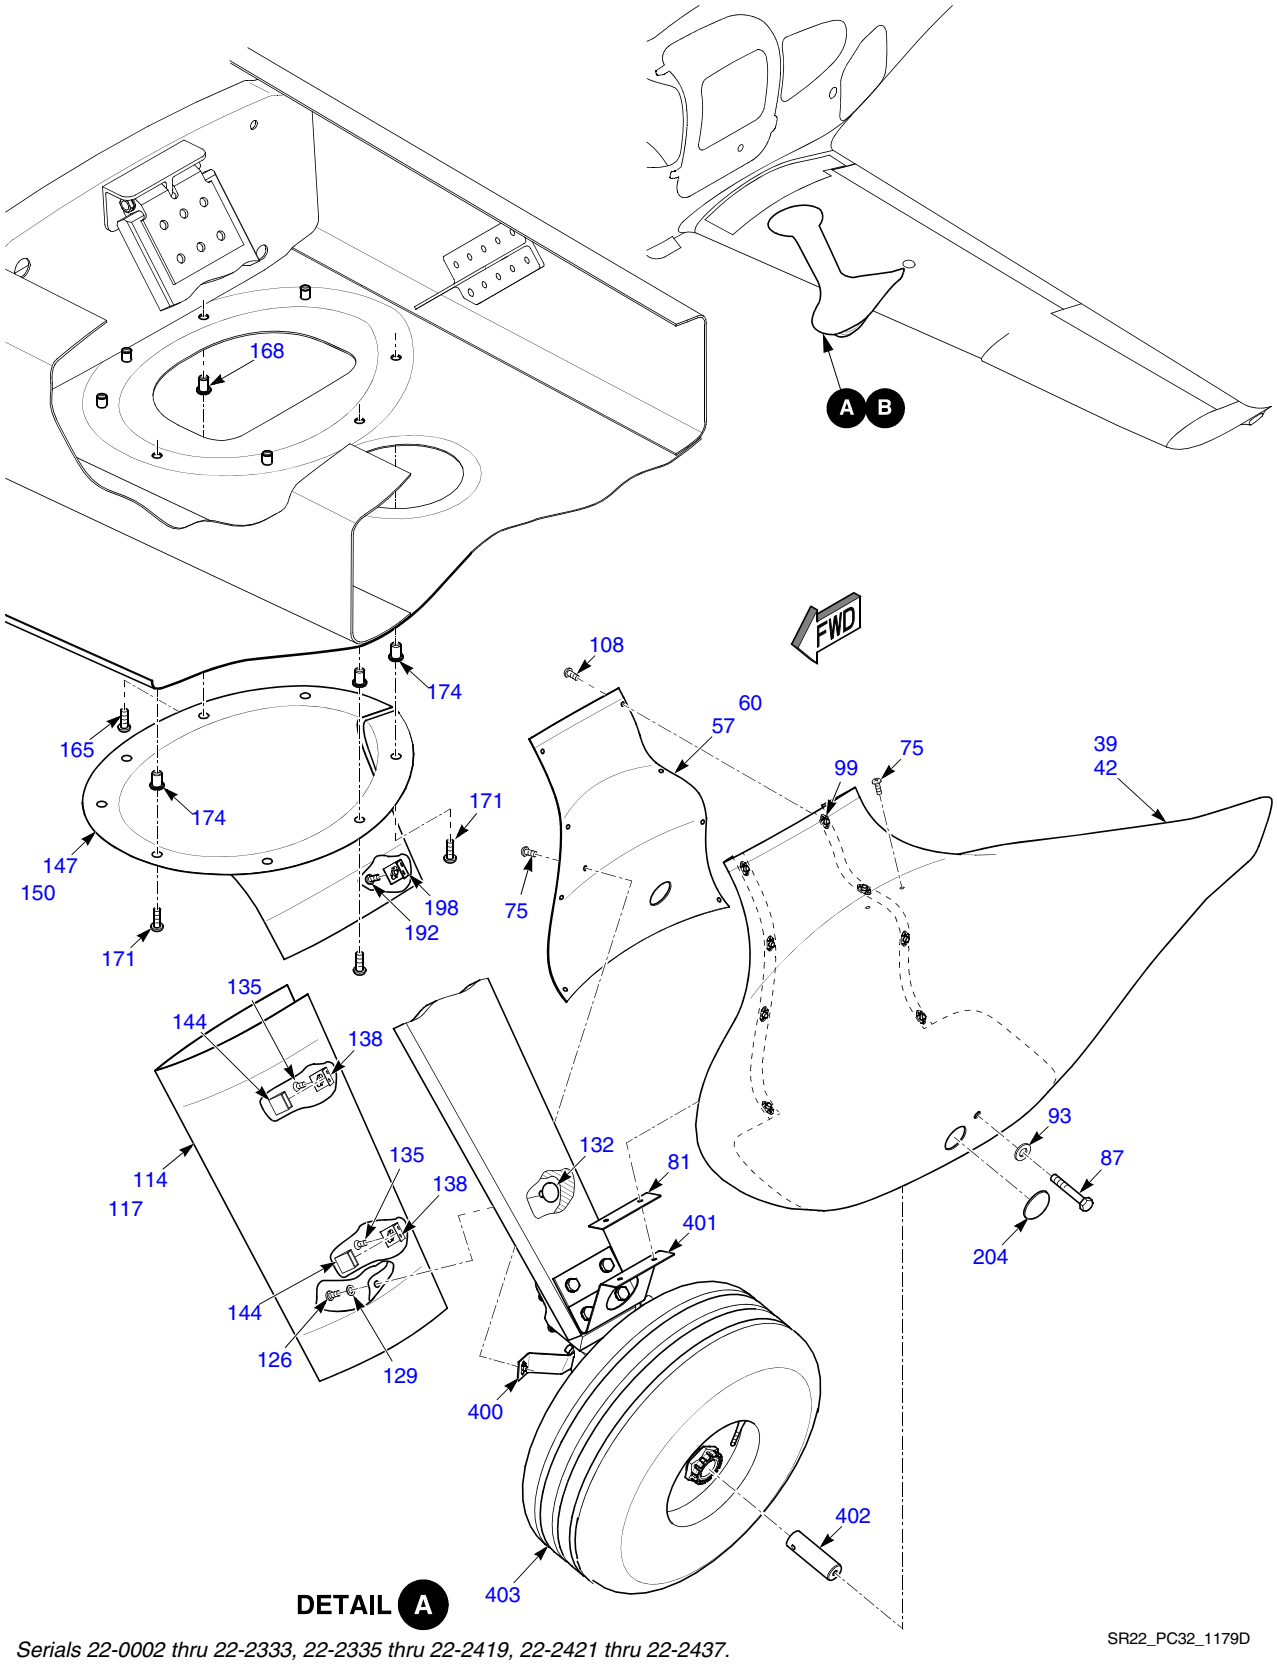

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

Figure-01

Main Landing Gear Fairings - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

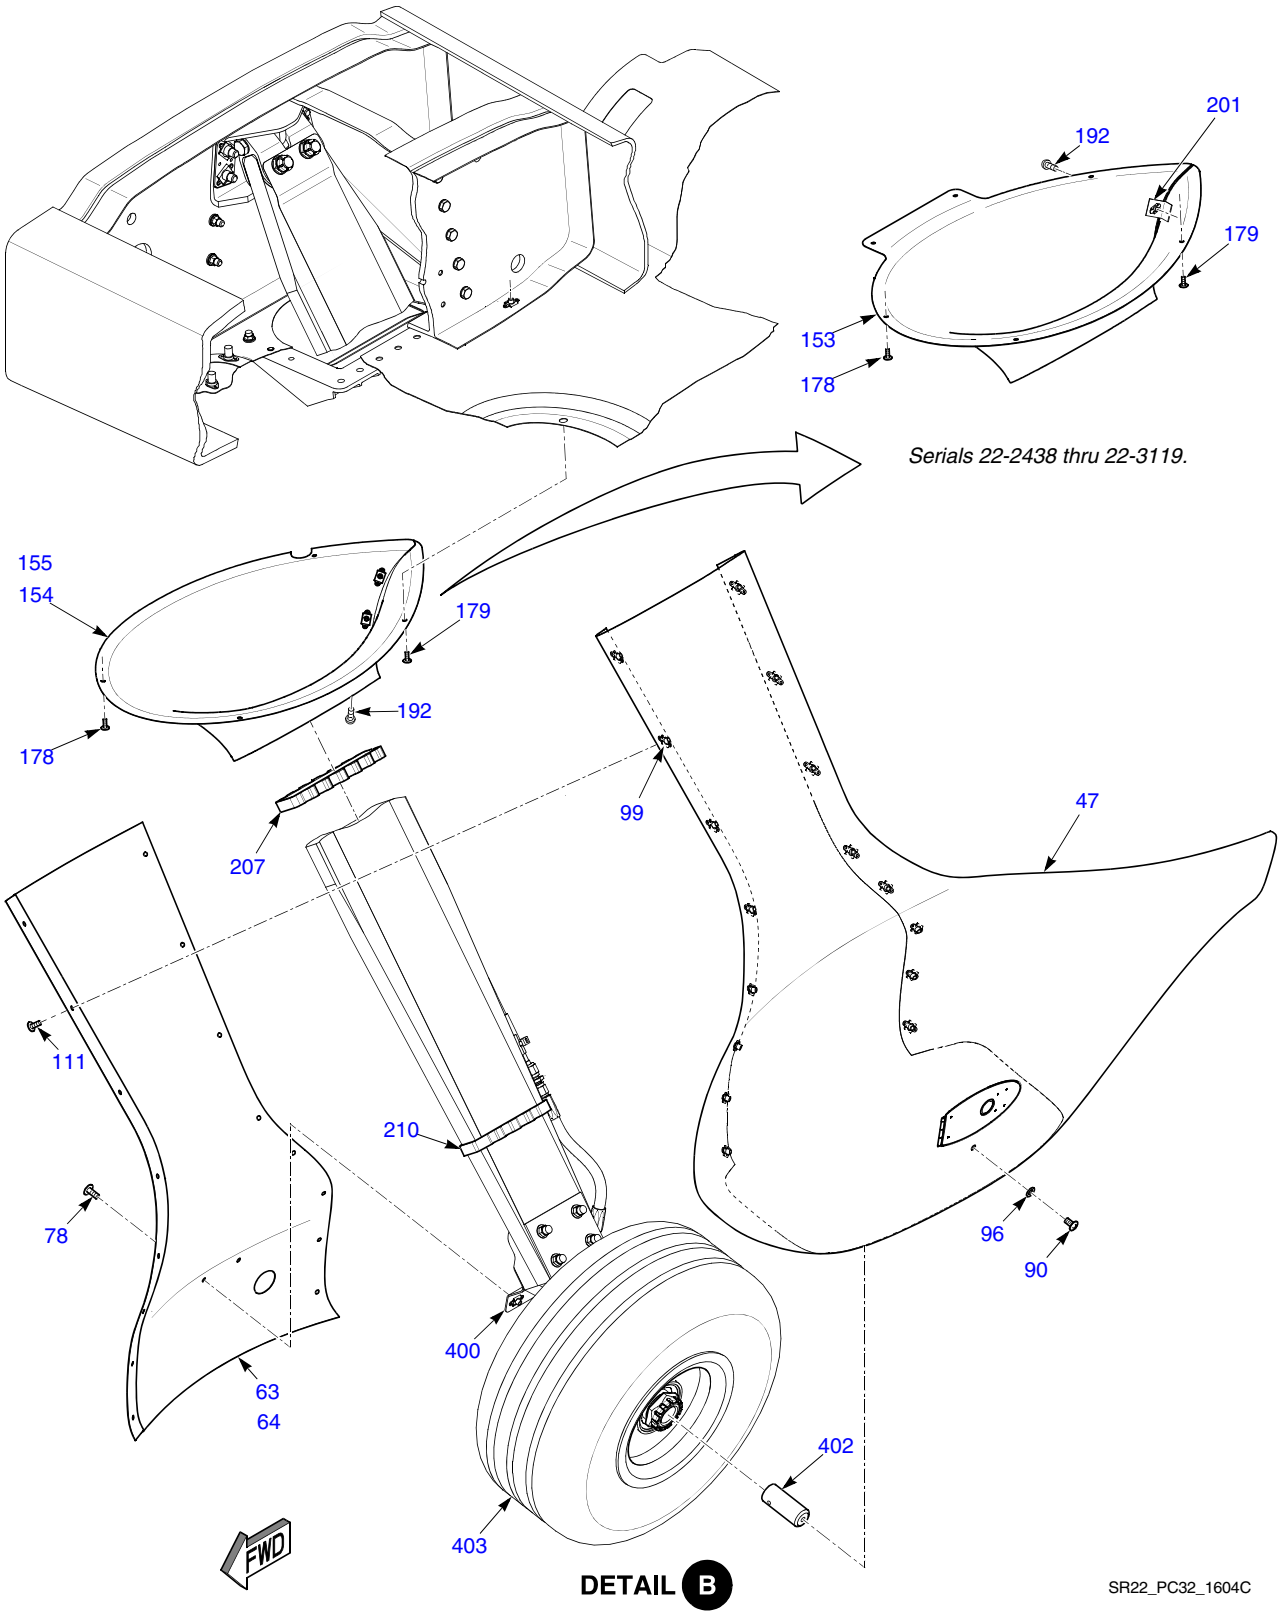

Figure-01

Main Landing Gear Fairings - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		MAIN LANDING GEAR FAIRINGS INSTALLATION	0002 / 0001	/	NP
-	3	14196-001			·WHEEL PANT ASSY, LH	0002	0138	1
					FOR SPARES USE P/N 15311-003 OR 15311-007			
-	6	14341-003			·WHEEL PANT ASSY, LH	0139	0509	1
					FOR SPARES USE P/N 15311-003 OR 15311-007			
-	9	15311-001			·WHEEL PANT ASSY, LH	0510	0671	1
					FOR SPARES USE P/N 15311-003 OR 15311-007			
-	12	15311-003			·WHEEL PANT ASSY, LH	0672	1739	1
					FOR SPARES USE P/N 15311-005 OR 15311-007			
-	15	15311-005			·WHEEL PANT ASSY, LH	1740	2437	1
					ALTERNATE FOR P/N 15311-007			
-	16	15311-007			·WHEEL PANT ASSY W/ ACCESS DOOR, LH	1740	2437	1
					ALTERNATE FOR P/N 15311-005			
-	18	18137-001			·WHEEL PANT ASSY, LH	2438	3381	1
					FOR SPARES USE P/N 18137-003			
-	19	18137-003			·WHEEL PANT ASSY, LH	3382 / 0001	3914 / 0441	1
-	20	26861-001			·WHEEL PANT ASSY, LH	3915 / 0442	/	1
-	21	14196-002			·WHEEL PANT ASSY, RH	0002	0138	1
					FOR SPARES USE P/N 14341-004			
					FOR SPARES USE P/N 15311-004 OR 15311-008			
-	24	14341-004			·WHEEL PANT ASSY, RH	0139	0509	1
					FOR SPARES USE P/N 15311-004 OR 15311-008			
-	27	15311-002			·WHEEL PANT ASSY, RH	0510	0671	1
					FOR SPARES USE P/N 15311-004 OR 15311-008			
-	30	15311-004			·WHEEL PANT ASSY, RH	0672	1739	1
					FOR SPARES USE P/N 15311-006 OR 15311-008			
-	33	15311-006			·WHEEL PANT ASSY, RH	1740	2437	1
					FOR SPARES USE P/N 15311-008			
-	34	15311-008			·WHEEL PANT ASSY W/ ACCESS DOOR, RH	1740	2437	1
					ALTERNATE FOR P/N 15311-006			
-	36	18137-002			·WHEEL PANT ASSY, RH	2438	3381	1
					FOR SPARES USE P/N 18137-004			
-	37	18137-004			·WHEEL PANT ASSY, RH	3382 / 0001	3914 / 0441	1
-	38	26861-002			·WHEEL PANT ASSY, RH	3915 / 0442	/	1
	39	15311-101			··WHEEL PANT, LH	0510	0671	1
	42	15311-107			··WHEEL PANT, LH	0672	2437	1
-	45	18137-101			··WHEEL PANT, LH	2438	3381	1
-	46	18137-105			··WHEEL PANT, LH	3382 / 0001	3914 / 0441	1
	47	26861-101			··WHEEL PANT, LH	3915 / 0442	/	1
-	48	15311-102			··WHEEL PANT, RH	0510	0671	1
-	51	15311-108			··WHEEL PANT, RH	0672	2437	1
-	54	18137-102			··WHEEL PANT, RH	2438	3381	1
-	55	18137-106			··WHEEL PANT, RH	3382 / 0001	3914 / 0441	1
-	56	26861-102			··WHEEL PANT, RH	3915 / 0442	/	1
	57	15311-103	!		··ACCESS PANEL, LH	0510	1739	1
					FOR SPARES USE P/N 15311-109			
	60	15311-109	!		··ACCESS PANEL, LH	1740	2437	1
	63	18138-001			··ACCESS PANEL, LH	2438	3381	1
					FOR SPARES USE P/N 18138-003			
	64	18138-003			··ACCESS PANEL, LH	3382 / 0001	/	1
-	66	15311-104	!		··ACCESS PANEL, RH	0510	1739	1
					FOR SPARES USE P/N 15311-110			
-	69	15311-110	!		··ACCESS PANEL, RH	1740	2437	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	72	18138-002			··ACCESS PANEL, RH	2438	3381	1
					FOR SPARES USE P/N 18138-004			
-	73	18138-004			··ACCESS PANEL, RH	3382 / 0001	/	1
	75	AN525-832R8		A	··SCREW	0002	2437	3
						3120 / 0001	/	2
	78	AN525-10R8		A	··SCREW	2438	3119	2
	81	13420-102		A	··SPACER	0002	2437	1
-	84	AN525-416R8		A	··SCREW	0002	2437	1
					ALTERNATE FOR P/N AN4-4A			
	87	AN4-4A		A	··BOLT	0002	2437	1
					ALTERNATE FOR P/N AN525-416R8			
	90	AN525-416R8		A	··SCREW	2438 / 0001	/	1
	93	NAS1149F0432P		A	··WASHER	0002 / 0001	/	1
	96	AN960-416L		A	··WASHER	2438	3119	1
	99	MS21059L08		A	··NUTPLATE	0002	2437	8
				A	··NUTPLATE	2438 / 0001	/	16
-	105	AN525-832R7		A	··SCREW	0002	0509	8
	108	AN525-832R8		A	··SCREW	0510	2437	8
	111	AN525-832R7	@	A	··SCREW	2438	3479	16
			#	A	··SCREW	3480 / 0001	/	18
	114	13443-001			·FAIRING, STRUT, LOWER, LH	0002	1696	1
					FOR SPARES USE P/N 14539-001			
	117	14539-001			·FAIRING, STRUT, LOWER, LH	1697	2437	1
-	120	13443-002			·FAIRING, STRUT, LOWER, RH	0002	1696	1
					FOR SPARES USE P/N 14539-002			
-	123	14539-002			·FAIRING, STRUT, LOWER, RH	1697	2437	1
	126	13420-101		A	·SCREW	0002	2437	1
	129	NAS1149FN832P		A	·WASHER	0002	2437	1
	132	50741-005		A	·CLICK BOND (STANDOFF, ADHESIVE BONDED)	0002	2437	1
	135	AN525-832R7		A	·SCREW	0002	2437	2
	138	13443-101		A	·CLIP	0002	2437	2
					ALTERNATE FOR P/N 12976-101			
-	141	12976-101		A	·CLIP	0002	2437	2
					ALTERNATE FOR P/N 13443-101			
	144	16180-001		A	·SPACER	0915	2437	2
					BEFORE SB2X-32-08			
				A	·SPACER	0002	0914	2
					AFTER SB2X-32-08			
	147	13397-001			·FAIRING, STRUT, UPPER, LH	0002	1696	1
					FOR SPARES USE P/N 14538-001			
	150	14538-001			·FAIRING, STRUT, UPPER, LH	1697	2437	1
	153	18139-001			·FAIRING, STRUT, UPPER, LH	2438	3119	1
	154	18988-001			·FAIRING, STRUT, UPPER, LH	3120	3603	1
					FOR SPARES USE P/N 18988-003			
	155	18988-003			·FAIRING, STRUT, UPPER, LH	3604 / 0001	/	1
-	156	13397-002			·FAIRING, STRUT, UPPER, RH	0002	1696	1
					FOR SPARES USE P/N 14538-002			
-	159	14538-002			·FAIRING, STRUT, UPPER, RH	1697	2437	1
-	162	18139-002			·FAIRING, STRUT, UPPER, RH	2438	3119	1
-	163	18988-002			·FAIRING, STRUT, UPPER, RH	3120	3603	1
					FOR SPARES USE P/N 18988-004			
-	164	18988-004			·FAIRING, STRUT, UPPER, RH	3604 / 0001	/	1
	165	AN525-10R16		A	·SCREW	0002	2437	6
	168	50802-001		A	·WELLNUT (LONG)	0002	2437	6

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	171	AN525-10R11		A	·SCREW	0002	2437	2
	174	50803-001		A	·WELLNUT (SHORT)	0002	2437	2
	178	AN525-832R8		A	·SCREW	2438 / 0001	/	2
	179	AN525-832R11		A	·SCREW	2438 / 0001	/	2
	192	AN525-832R7		A	·SCREW	0002	2437	1
						2438 / 0001	/	2
	198	12975-101			·CLIP	0002	2437	1
	201	13641-001			·CLIP	2438	3603	2
	204	50498-200			·COVER	0002 / 0001	3914 / 0441	1
-	205	28439-001			·ACCESS DOOR	3915 / 0442	/	1
-	206	28439-002			·ACCESS DOOR	3915 / 0442	/	1
	207	18361-001			·GROMMET	2438 / 0001	/	1
	210	18362-001			·GROMMET	2438 / 0001	/	1
-	213	51042-105			·TAPE, TWO-SIDED	2438 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 32-10-02 DET			BRACKET, WHEEL FAIRING, LH			
	401	RF 32-10-02 DET			BRACKET, WHEEL FAIRING, UPPER			
	402	RF 32-10-02 DET			WHEEL PANT MOUNT, AXLE			
	403	RF 32-10-02 DET			MAIN WHEEL ASSEMBLY			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
			!		INSPECTION HOLE MOD OF ACCESS PANEL ON SERIAL NUMBER 22-1728 THRU 22-2437, 22-0002 THRU 22-1727 AFTER SB2X-32-14.			
			@		USED WITH PN# 18138-001 & 18138-002			
			#		USED WITH PN# 18138-003 & 18138-004			

Intentionally Left Blank

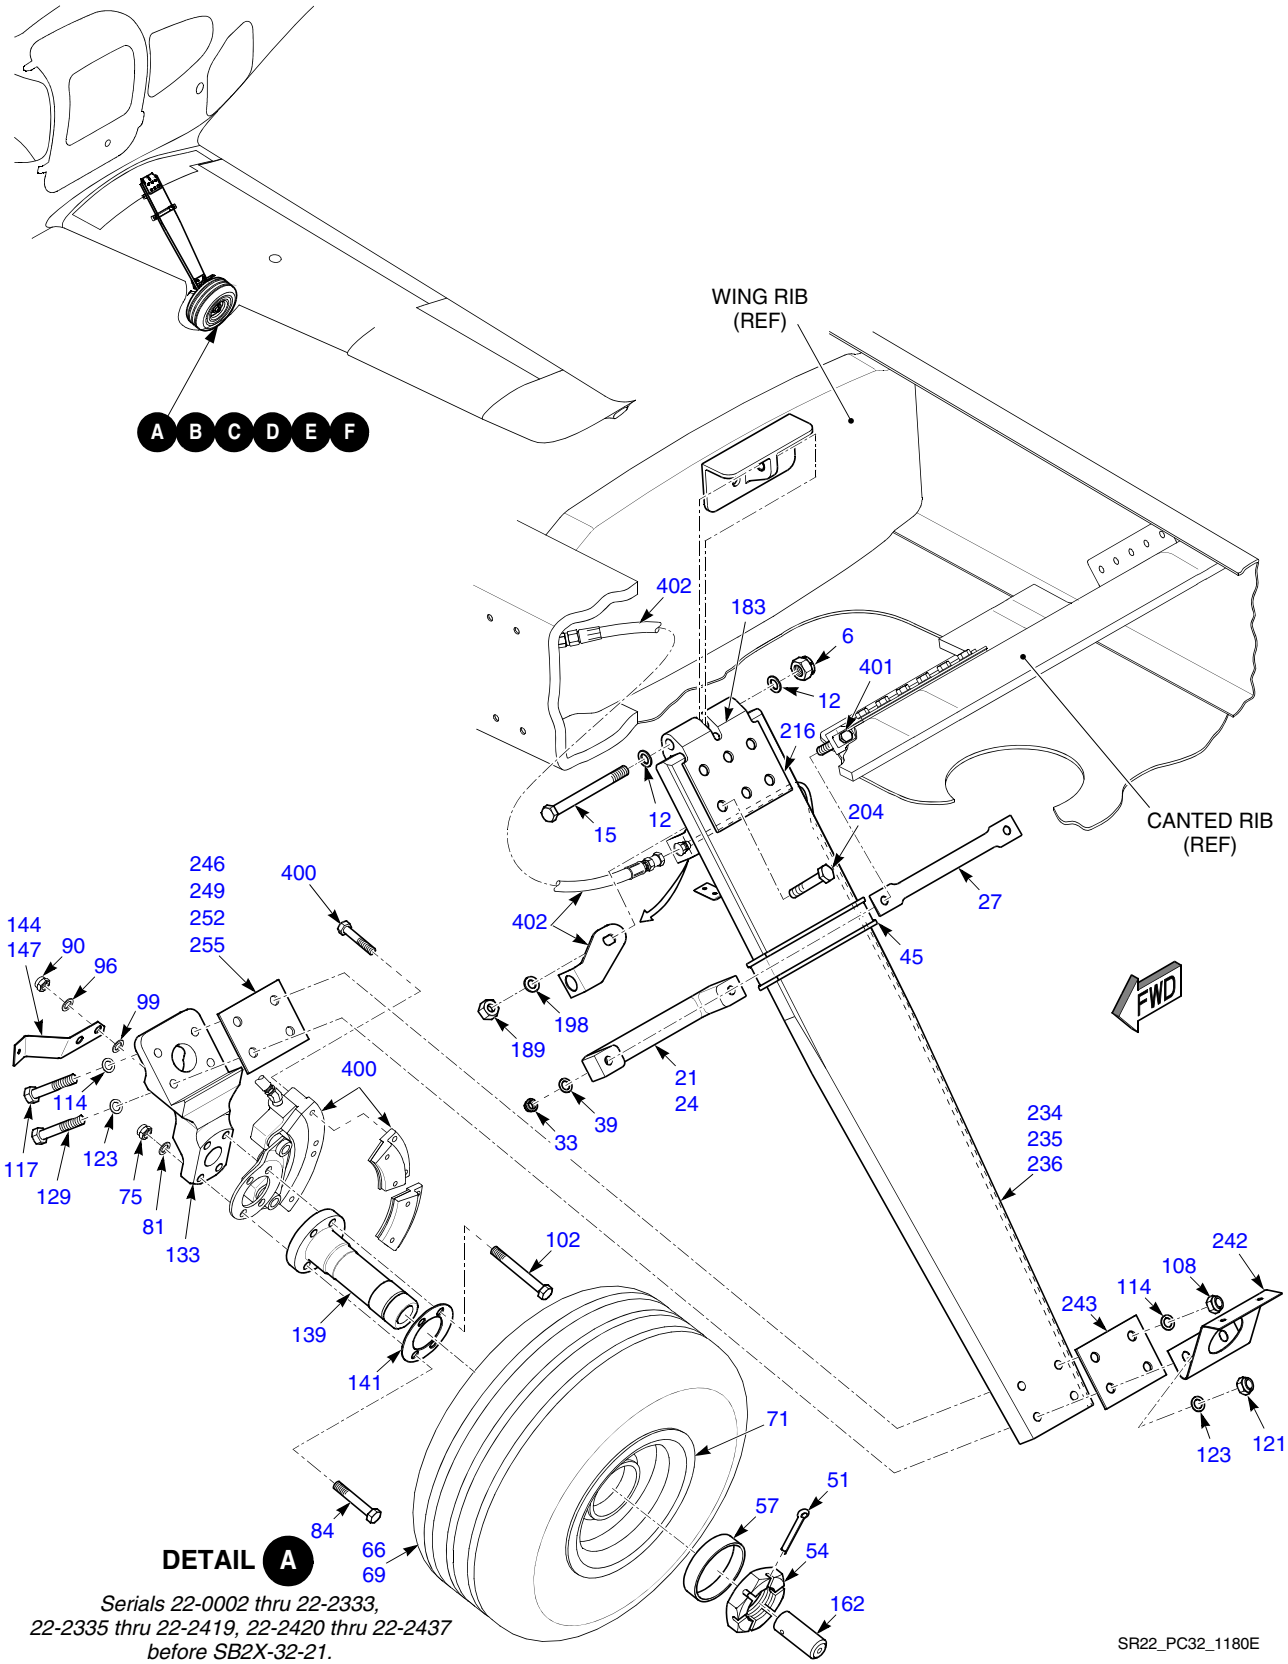

Figure-02

Main Landing Gear - Serials 22-0002 thru 22-2437 before SB2X-32-21 (1 of 6)

EFFECTIVITY:
Serials 22-0002 thru 22-2437 before SB2X-32-21

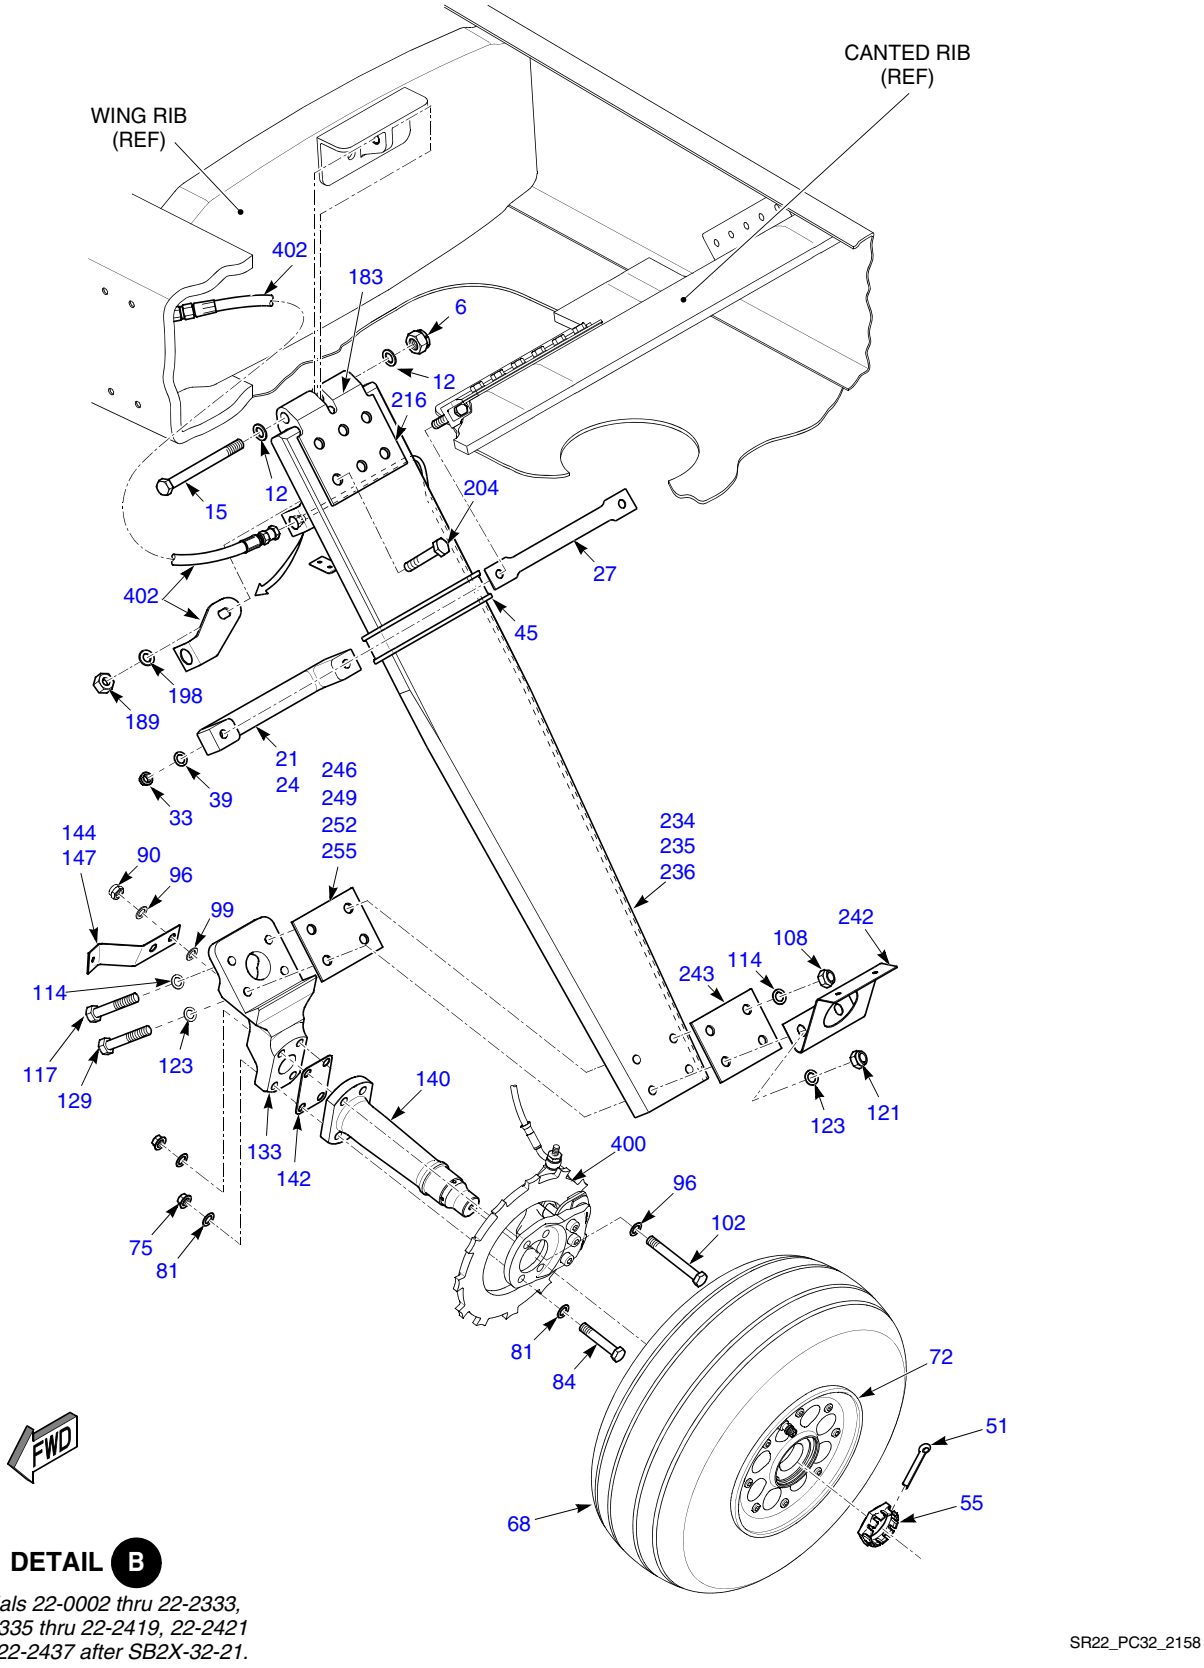

DETAIL B

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437 after SB2X-32-21.

SR22_PC32_2158

Figure-02

Main Landing Gear - Serials 22-0002 thru 22-2437 after SB2X-32-21 (2 of 6)

EFFECTIVITY:
Serials 22-0002 thru 22-2437 after SB2X-32-21

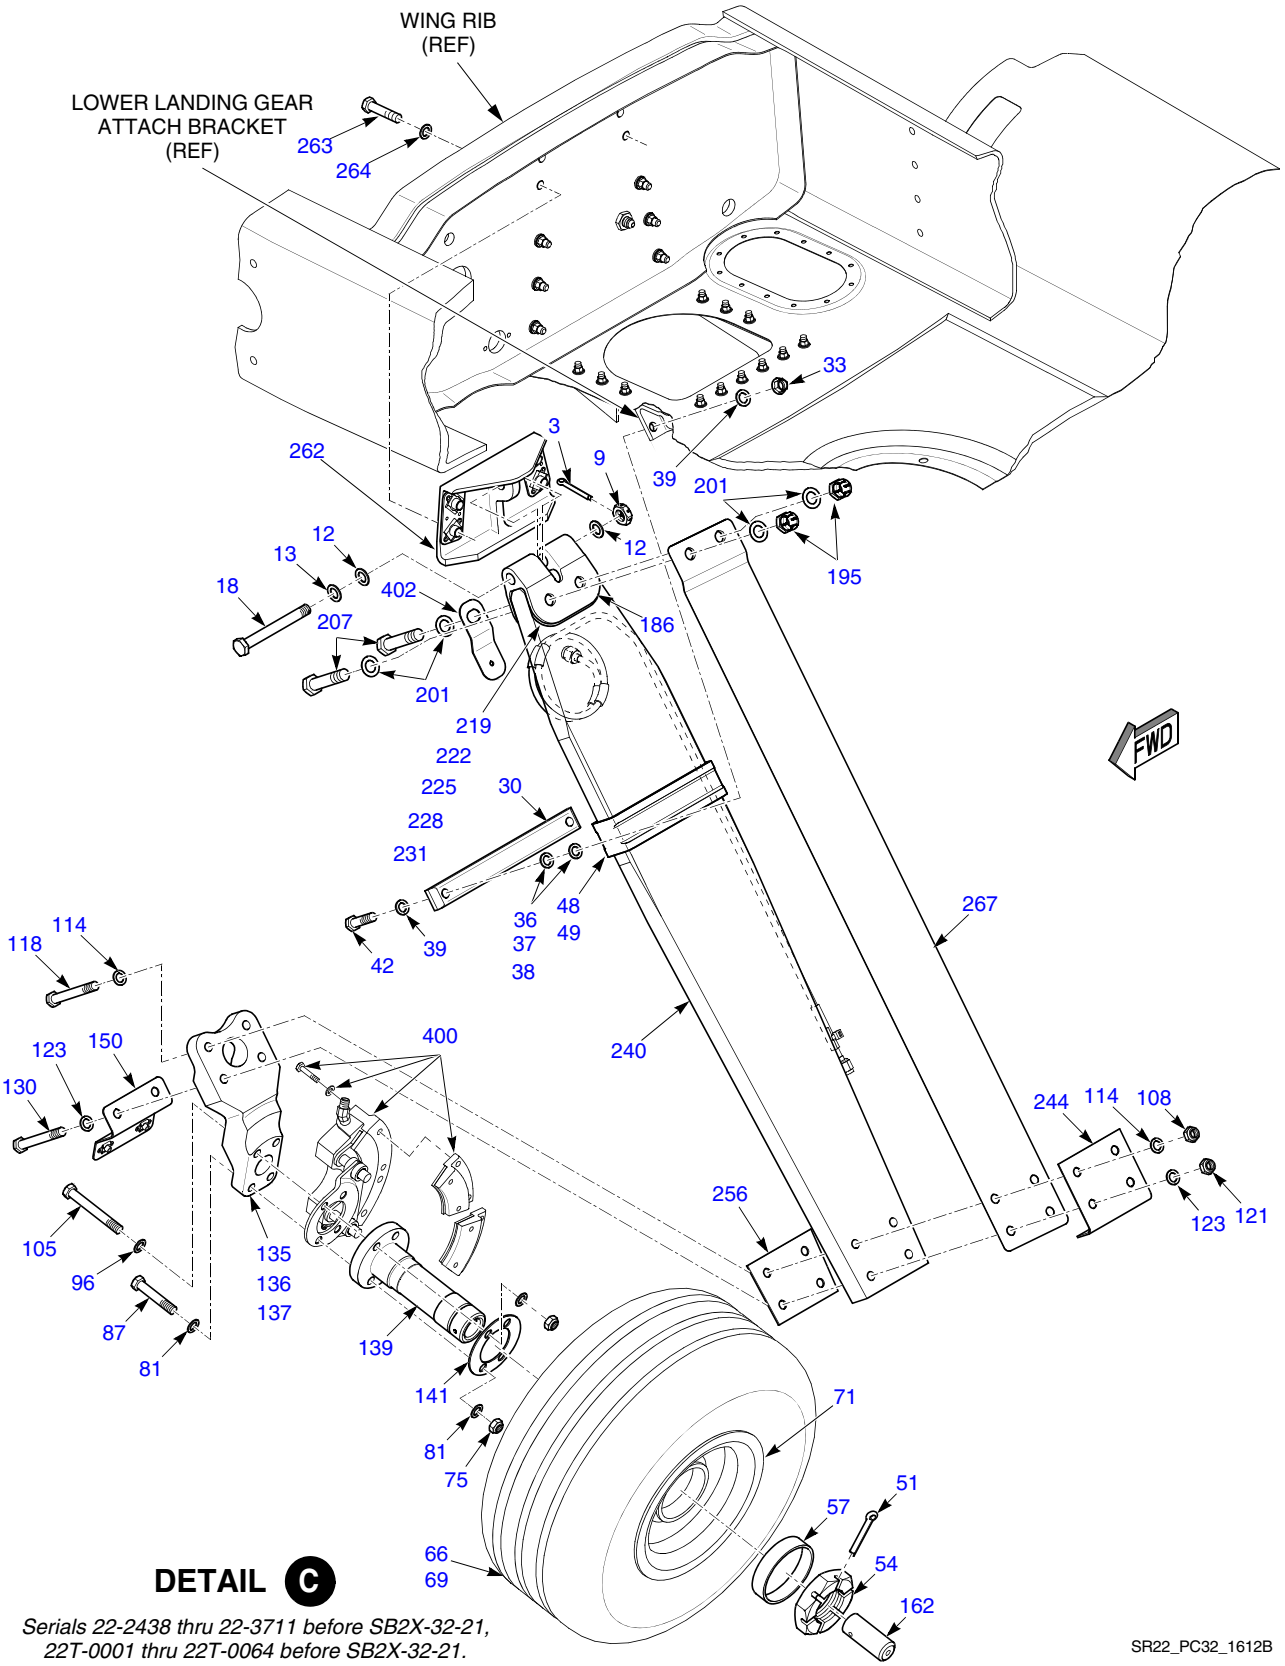

Figure-02

Main Landing Gear - Serials 22-2438 - 22-3711 before SB2X-32-21, 22T-0001 - 22T-0064 before SB2X-32-21 (3 of 6)

EFFECTIVITY:
Serials 22-2438 - 22-3711 before SB2X-32-21, 22T-0001 - 22T-0064 before SB2X-32-21

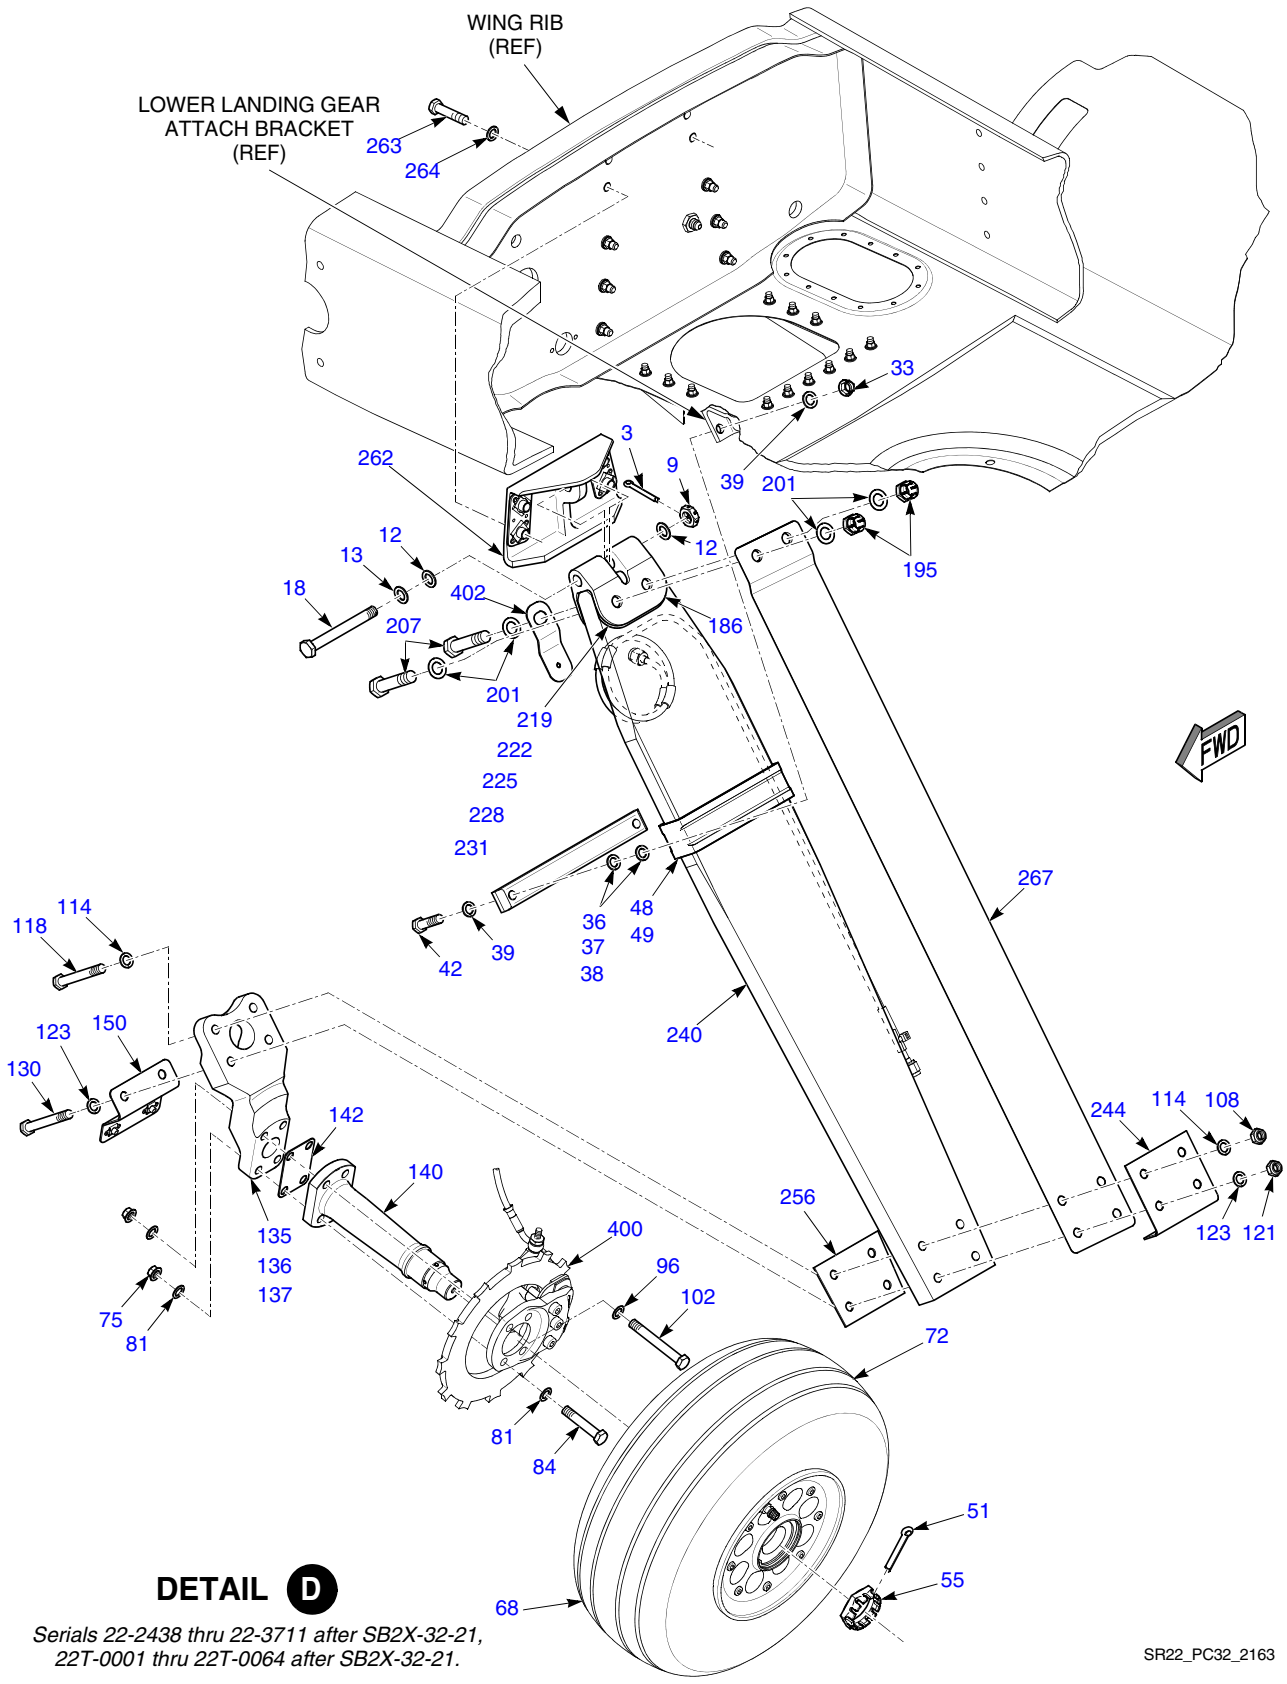

Figure-02

Main Landing Gear - Serials 22-2438 - 22-3711 after SB2X-32-21, 22T-0001 - 22T-0064 after SB2X-32-21 (4 of 6)

EFFECTIVITY:
Serials 22-2438 - 22-3711 after SB2X-32-21, 22T-0001 - 22T-0064 after SB2X-32-21

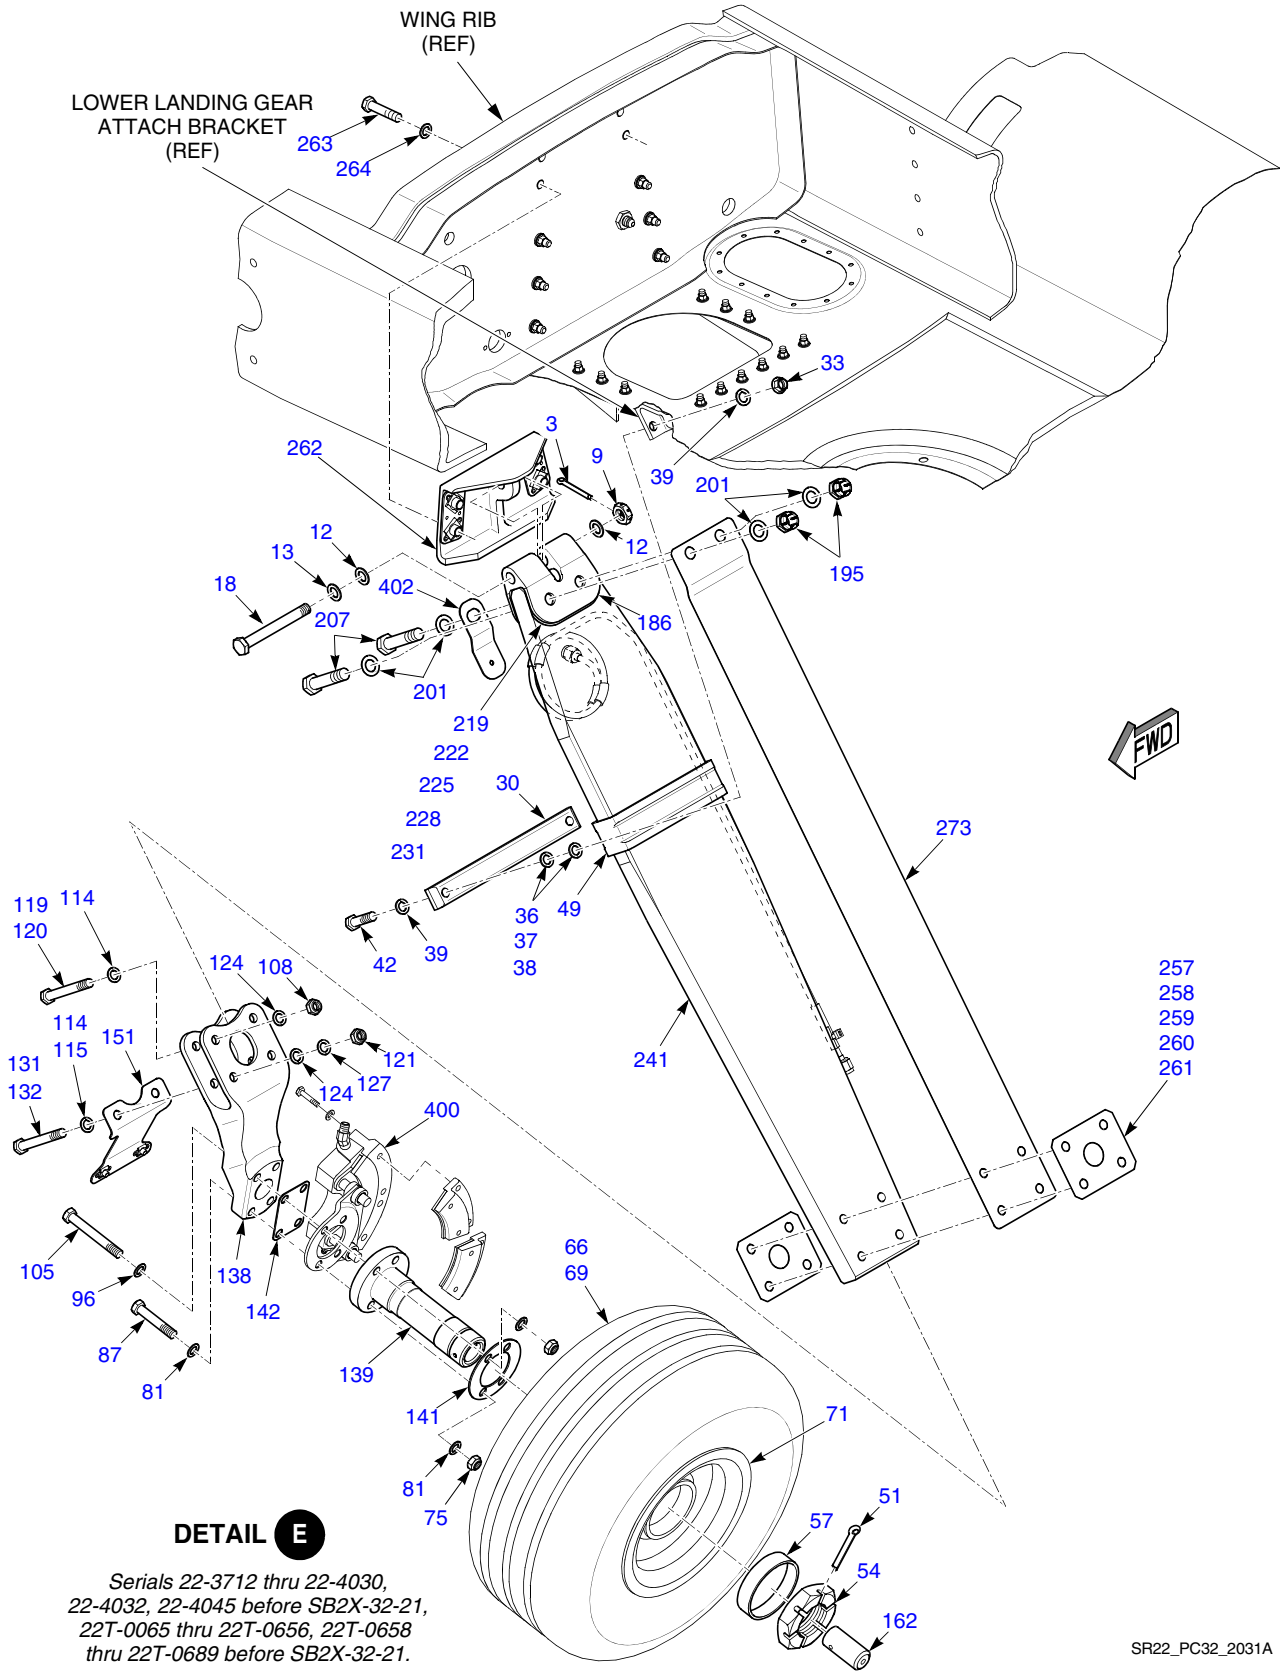

Figure-02

Main Landing Gear - Serials 22-3712 - 22-4045 before SB2X-32-21, 22T-0065 - 22T-0689 before SB2X-32-21 (5 of 6)

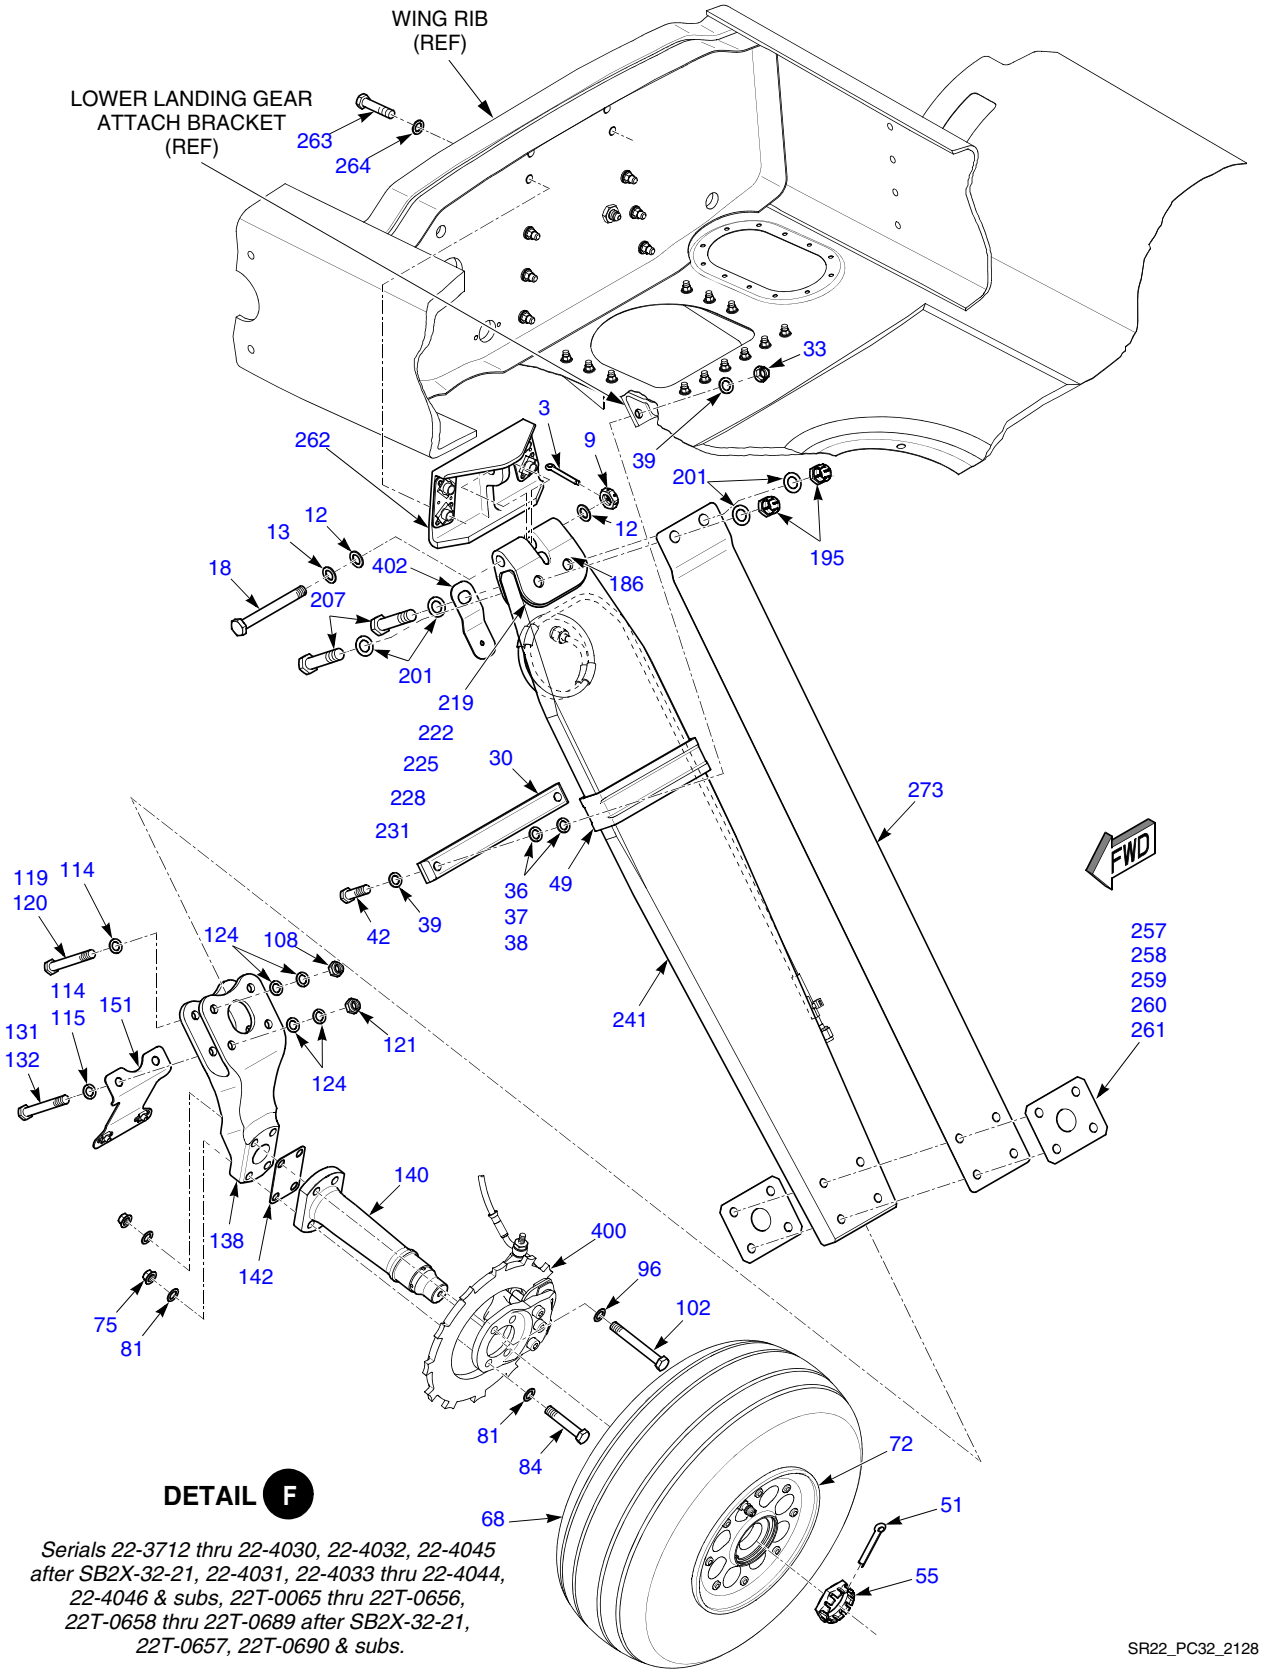

Figure-02

Main Landing Gear - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (6 of 6)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		MAIN LANDING GEAR INSTALLATION	0002 / 0001	/	NP
	3	MS24665-289		A	·COTTER PIN (ATTACH)	2438 / 0001	/	1
	6	NAS1291-7		A	·NUT (ATTACH)	0002	2437	1
					ALTERNATE FOR P/N MS21044N7			
-	7	MS21044N7		A	·NUT (ATTACH)	0002	2437	1
					ALTERNATE FOR P/N NAS1291-7			
	9	MS17826-7		A	·NUT (ATTACH)	2438 / 0001	/	1
	12	NAS1149D0716K		A	·WASHER (ATTACH)	0002 / 0001	/	2
	13	NAS1149D0763K		A	·WASHER (ATTACH)	2438 / 0001	/	1
	15	NAS6207-64		A	·BOLT (ATTACH)	0002	2437	1
	18	NAS6207-54D		A	·BOLT (ATTACH)	2438 / 0001	/	1
	21	11284-002	!	A	·CLAMP, GEAR ATTACH LOWER	0002	1103	1
					FOR SPARES USE P/N 17079-001			
					FOR SPARES USE P/N 17080-001			
	24	17079-001	@	A	·CLAMP, GEAR ATTACH LOWER	1104	2437	1
	27	17080-001	@	A	·SHIM, CLAMP, GEAR ATTACH LOWER	1104	2437	1
	30	16939-002		A	·CLAMP, GEAR ATTACH LOWER	2438 / 0001	/	1
	33	MS21042-6		A	·NUT (CLAMP)	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21045-6			
-	35	MS21045-6		A	·NUT (CLAMP)	0002	2437	2
					ALTERNATE FOR P/N MS21042-6			
	36	NAS1149D0632K	+	A	·WASHER (CLAMP)	2438 / 0001	/	4
	37	NAS1149D0663K	+	A	·WASHER (CLAMP)	2438 / 0001	/	4
	38	NAS1149D0616K	+	A	·WASHER (CLAMP)	2438 / 0001	/	4
	39	NAS1149D0632K		A	·WASHER (CLAMP)	0002	2437	2
				A	·WASHER (CLAMP)	2438 / 0001	/	4
	42	AN6-13A		A	·BOLT (CLAMP)	2438 / 0001	/	2
	45	10209-001			·GROMMET	0002	2275	1
					FOR SPARES USE P/N 16937-001			
	48	16937-001			·GROMMET	2276	2437	1
					FOR SPARES USE P/N 16937-002			
	49	16937-002			·GROMMET	2438 / 0001	/	1
	51	MS24665-360		A	·COTTER PIN	0002 / 0001	/	1
	54	MS21025-24		A	·NUT	0002 / 0001	4045 / 0689	1
	55	31491-004	~	A	·NUT	4046 / 0690	/	1
	57	11575-001			··SPACER, AXLE, MAIN LANDING GEAR	0002 / 0001	4045 / 0689	1
-	59	14075-002	?		··TIRE	0002 / 0001	4045 / 0689	1
					ALTERNATE FOR P/N 14075-005			
					ALTERNATE FOR P/N 14075-006			
					ALTERNATE FOR P/N 14075-007			
-	60	14075-004	?		··TIRE	0002	3339	1
					FOR SPARES USE P/N 14075-002			
					FOR SPARES USE P/N 14075-005			
					FOR SPARES USE P/N 14075-006			
					FOR SPARES USE P/N 14075-007			
-	63	14075-005	?		··TIRE	0002 / 0001	4045 / 0689	1
					ALTERNATE FOR P/N 14075-002			
					ALTERNATE FOR P/N 14075-006			
					ALTERNATE FOR P/N 14075-007			
	66	14075-006	?		··TIRE	0002 / 0001	4045 / 0689	1
					ALTERNATE FOR P/N 14075-002			
					ALTERNATE FOR P/N 14075-005			
					ALTERNATE FOR P/N 14075-007			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	67	14075-007	?		··TIRE	0002 / 0001	4045 / 0689	1
					ALTERNATE FOR P/N 14075-002			
					ALTERNATE FOR P/N 14075-005			
					ALTERNATE FOR P/N 14075-006			
	68	14075-008	?, ~		··TIRE	4046 / 0690	/	1
	69	14076-002			··TUBE	0002 / 0001	4045 / 0689	1
-	70	13399-101			··MAIN WHEEL ASSEMBLY	0002	1739	1
	71	17122-101			··MAIN WHEEL ASSEMBLY	0002	1739	1
					AFTER SB2X-32-13			
					··MAIN WHEEL ASSEMBLY	1740 / 0001	4045 / 0689	1
	72	31493-001	~		··MAIN WHEEL ASSEMBLY	4046 / 0690	/	1
-	73	NO PRT NUMBER			·AXLE ASSEMBLY	0002 / 0001	/	NP
	75	MS21042-6		A	·NUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21045-6			
-	78	MS21045-6		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21042-6			
	81	NAS1149D0632K		A	·WASHER	0002	2437	2
			~	A	·WASHER	2438 / 0001	/	4
	84	AN6-21A	~	A	·BOLT	0002	2437	2
						4046 / 0690	/	2
	87	AN6-20A		A	·BOLT	2438 / 0001	/	2
	90	MS21042-6		A	·NUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21045-6			
-	93	MS21045-6		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21042-6			
	96	NAS1149D0632K	~	A	·WASHER	0002	2437	2
				A	·WASHER	2438 / 0001	/	4
	99	NAS1149D0663K		A	·WASHER	0002	2437	2
	102	AN6-30A	~	A	·BOLT	0002	2437	2
						4046 / 0690	/	2
	105	AN6-27A		A	·BOLT	2438 / 0001	/	2
	108	MS21042-6		A	·NUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21045-6			
-	111	MS21045-6		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21042-6			
	114	NAS1149D0632K		A	·WASHER	0002 / 0001	3711 / 0064	4
						3712 / 0065	/	2
	115	NAS1149D0663K		A	·WASHER	3712 / 0065	/	2
	117	NAS6606-32		A	·BOLT	0002	2437	2
	118	NAS6606-31		A	·BOLT	2438 / 0001	3711 / 0064	2
	119	NAS6606-30		A	·BOLT	3712 / 0065	3731 / 0080	2
	120	AN6-23A		A	·BOLT	3732 / 0081	/	2
	121	MS21042-6		A	·NUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21045-6			
-	122	MS21045-6		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21042-6			
	123	NAS1149D0632K		A	·WASHER	0002 / 0001	3711 / 0064	4
	124	NAS1149D0663K		A	·WASHER	3712 / 0065	/	4
	127	NAS1149D0616K		A	·WASHER	3732 / 0081	/	2
	129	NAS6606-40		A	·BOLT	0002	2437	2
	130	NAS6606-40		A	·BOLT	2438 / 0001	3711 / 0064	2
	131	NAS6606-30		A	·BOLT	3712 / 0065	3731 / 0080	2
	132	AN6-24A		A	·BOLT	3732 / 0081	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	133	13284-001			··FITTING, AXLE	0002	2437	1
	135	18103-001			··FITTING, AXLE	2438	2884	1
					FOR SPARES USE P/N 18103-003			
	136	18103-002			··FITTING, AXLE	2885	3343	1
					FOR SPARES USE P/N 18103-003			
	137	18103-003			··FITTING, AXLE	3344 / 0001	3711 / 0064	1
	138	29154-001			··FITTING, AXLE	3712 / 0065	4045 / 0689	1
	139	11661-001			··AXLE	0002 / 0001	4045 / 0689	1
	140	31491-001	~		··AXLE	4046 / 0690	/	1
	141	11663-001		A	··WASHER	0002 / 0001	/	1
	142	26720-001	<		·SHIM	3712 / 0065	/	AR
	144	13524-001			··BRACKET, WHEEL FAIRING, INBOARD, LH	0002	1966	1
					FOR SPARES USE P/N 17205-001			
	147	17205-001			··BRACKET, WHEEL FAIRING, INBOARD, LH	1967	2437	1
-	148	13524-002			··BRACKET, WHEEL FAIRING, INBOARD, RH	0002	1966	1
					FOR SPARES USE P/N 17205-002			
-	149	17205-002			··BRACKET, WHEEL FAIRING, INBOARD, RH	1967	2437	1
	150	18460-001			··BRACKET, WHEEL FAIRING, INBOARD	2438 / 0001	3711 / 0064	1
	151	29149-001			··BRACKET, WHEEL FAIRING, INBOARD	3712 / 0065	/	1
	162	13447-001			··WHEEL PANT MOUNT, AXLE	0002 / 0001	/	1
-	165	13877-001			·STRUT ASSEMBLY, LH	0002	0005	1
-	168	14447-001			·STRUT ASSEMBLY, LH	0006	2437	1
-	171	18561-001			·STRUT ASSEMBLY, LH	2438 / 0001	3711 / 0064	1
-	172	29147-001			·STRUT ASSEMBLY, LH	3712 / 0065	/	1
-	174	13877-002			·STRUT ASSEMBLY, RH	0002	0005	1
-	177	14447-002			·STRUT ASSEMBLY, RH	0006	2437	1
-	180	18561-002			·STRUT ASSEMBLY, RH	2438 / 0001	3711 / 0064	1
-	181	29147-002			·STRUT ASSEMBLY, RH	3712 / 0065	/	1
	183	11726-001		A	··STRUT END, UPPER FITTING	0002	2437	1
	186	16947-001		A	··STRUT END, UPPER FITTING	2438 / 0001	/	1
	189	NAS1291-7		A	··NUT	0002	2437	6
					ALTERNATE FOR P/N MS21044N7			
-	192	MS21044N7		A	··NUT	0002	2437	6
					ALTERNATE FOR P/N NAS1291-7			
	195	MS21044N8		A	··NUT	2438 / 0001	/	2
	198	NAS1149D0732K		A	··WASHER	0002	2437	6
	201	NAS1149D0832K		A	··WASHER	2438 / 0001	/	4
	204	AN7-20A		A	··BOLT	0002	2437	6
	207	AN8-22A		A	··BOLT	2438 / 0001	/	2
-	210	13877-101			·SHIM	0002	0005	1
					ALTERNATE FOR P/N 11723-101			
-	213	11723-101			·SHIM	0002	0005	1
					ALTERNATE FOR P/N 13877-101			
	216	14447-101			·SHIM	0006	2437	1
	219	18097-015	&		·SHIM	2438 / 0001	/	AR
	222	18097-030	&		·SHIM	2438 / 0001	/	AR
	225	18097-040	&		·SHIM	2438 / 0001	/	AR
	228	18097-050	&		·SHIM	2438 / 0001	/	AR
	231	18097-063	&		·SHIM	2438 / 0001	/	AR
	234	13888-001			··STRUT	0002	2437	1
					FOR SPARES USE P/N 13888-002			
					FOR SPARES USE P/N 13888-003			
	235	13888-002			··STRUT	0002	2437	1
					ALTERNATE FOR P/N 13888-003			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	236	13888-003			··STRUT	0002	2437	1
					ALTERNATE FOR P/N 13888-002			
-	237	18096-001			··STRUT	2438	2911	1
					FOR SPARES USE P/N 18096-004			
-	238	18096-002			··STRUT	2912	3156	1
					FOR SPARES USE P/N 18096-004			
-	239	18096-003			··STRUT	3157 / 0001	3702 / 0042	1
					FOR SPARES USE P/N 18096-004			
	240	18096-004			··STRUT	3703 / 0043	3711 / 0064	1
	241	29148-001			··STRUT	3712 / 0065	/	1
	242	13522-001			·BRACKET, WHEEL FAIRING, UPPER	0002	2437	1
	243	11535-001			·PLATE, LOWER	0002	2437	1
	244	16469-001			·PLATE, LOWER	2438 / 0001	3711 / 0064	1
	246	10492-001	#		·SHIM	0002	2437	AR
	249	10492-002	$		·SHIM	0002	2437	AR
	252	10492-003	%		·SHIM	0002	2437	AR
	255	10492-004	^		·SHIM	0002	2437	AR
	256	19514-001	>		·SHIM	2438 / 0001	3711 / 0064	AR
	257	25019-015	&		·SHIM	3712 / 0065	/	AR
	258	25019-030	&		·SHIM	3712 / 0065	/	AR
	259	25019-040	&		·SHIM	3712 / 0065	/	AR
	260	25019-050	&		·SHIM	3712 / 0065	/	AR
	261	25019-063	&		·SHIM	3712 / 0065	/	AR
	262	16940-001			·UPPER GEAR ATTACH	2438 / 0001	/	1
	263	AN6-15A			·BOLT	2438 / 0001	/	4
	264	NAS1149D0632K			·WASHER	2438 / 0001	/	4
	267	18562-001			·STRAP, LIGHTNING	2438 / 0001	3711 / 0064	1
-	270	29199-001			·STRAP, LIGHTNING	3712 / 0065	/	1
					FOR SPARES USE P/N 29199-002			
	273	29199-002			·STRAP, LIGHTNING			
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 32-42-02 DET			BRAKE ASSEMBLY			
	401	RF 57-40-01 DET			WING ATTACH FITTINGS INSTALLATION			
	402	RF 32-42-01 DET			BRAKE SYSTEM INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBERS 22-4031, 22-4033 THRU 22-4044; REFER TO 22-4046 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0060, 22T-0063; REFER TO 22T-0065 FOR PART IDENTIFICATION.			
					4) SERIAL NUMBER 22T-0657; REFER TO 22T-0690 FOR PART IDENTIFICATION.			
			!		CLAMP 11284-002 MAY BE REPLACED WITH CLAMP 17079-001 AND SHIM 17080-001.			
			@		CLAMP 17079-001 MUST BE INSTALLED WITH SHIM 17080-001.			
			#		TOE: +/- 0.090", CAMBER: ~			
			$		TOE: ~, CAMBER: +1.0°			
			%		TOE: ~, CAMBER: -1.0°			
			^		TOE: +/- 0.057", CAMBER: ~			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			<		TOE: +/- 0.008", CAMBER: ~			
			>		TOE: +/- 0.025", CAMBER: ~			
			&		MULTIPLE SHIMS ON 1 OR BOTH SIDES MAY BE USED.			
			?		TIRES SHOULD BE INSTALLED AS MATCH SETS BETWEEN LEFT/RIGHT MAIN LANDING GEAR.			
			+		ADDITIONAL WASHERS (TWO MAXIMUM, ANY COMBINATION) MAY BE ADDED BETWEEN CLAMP AND LOWER ATTACH FITTING TO OBTAIN GAP TOLERANCE.			
			~		SERIAL NUMBER 22-0002 THRU 22-4030, 22-4032, 22-4045, 22T-0001 THRU 22T-0656, 22T-0658 THRU 22T-0689 AFTER SB2X-32-21			

Intentionally Left Blank

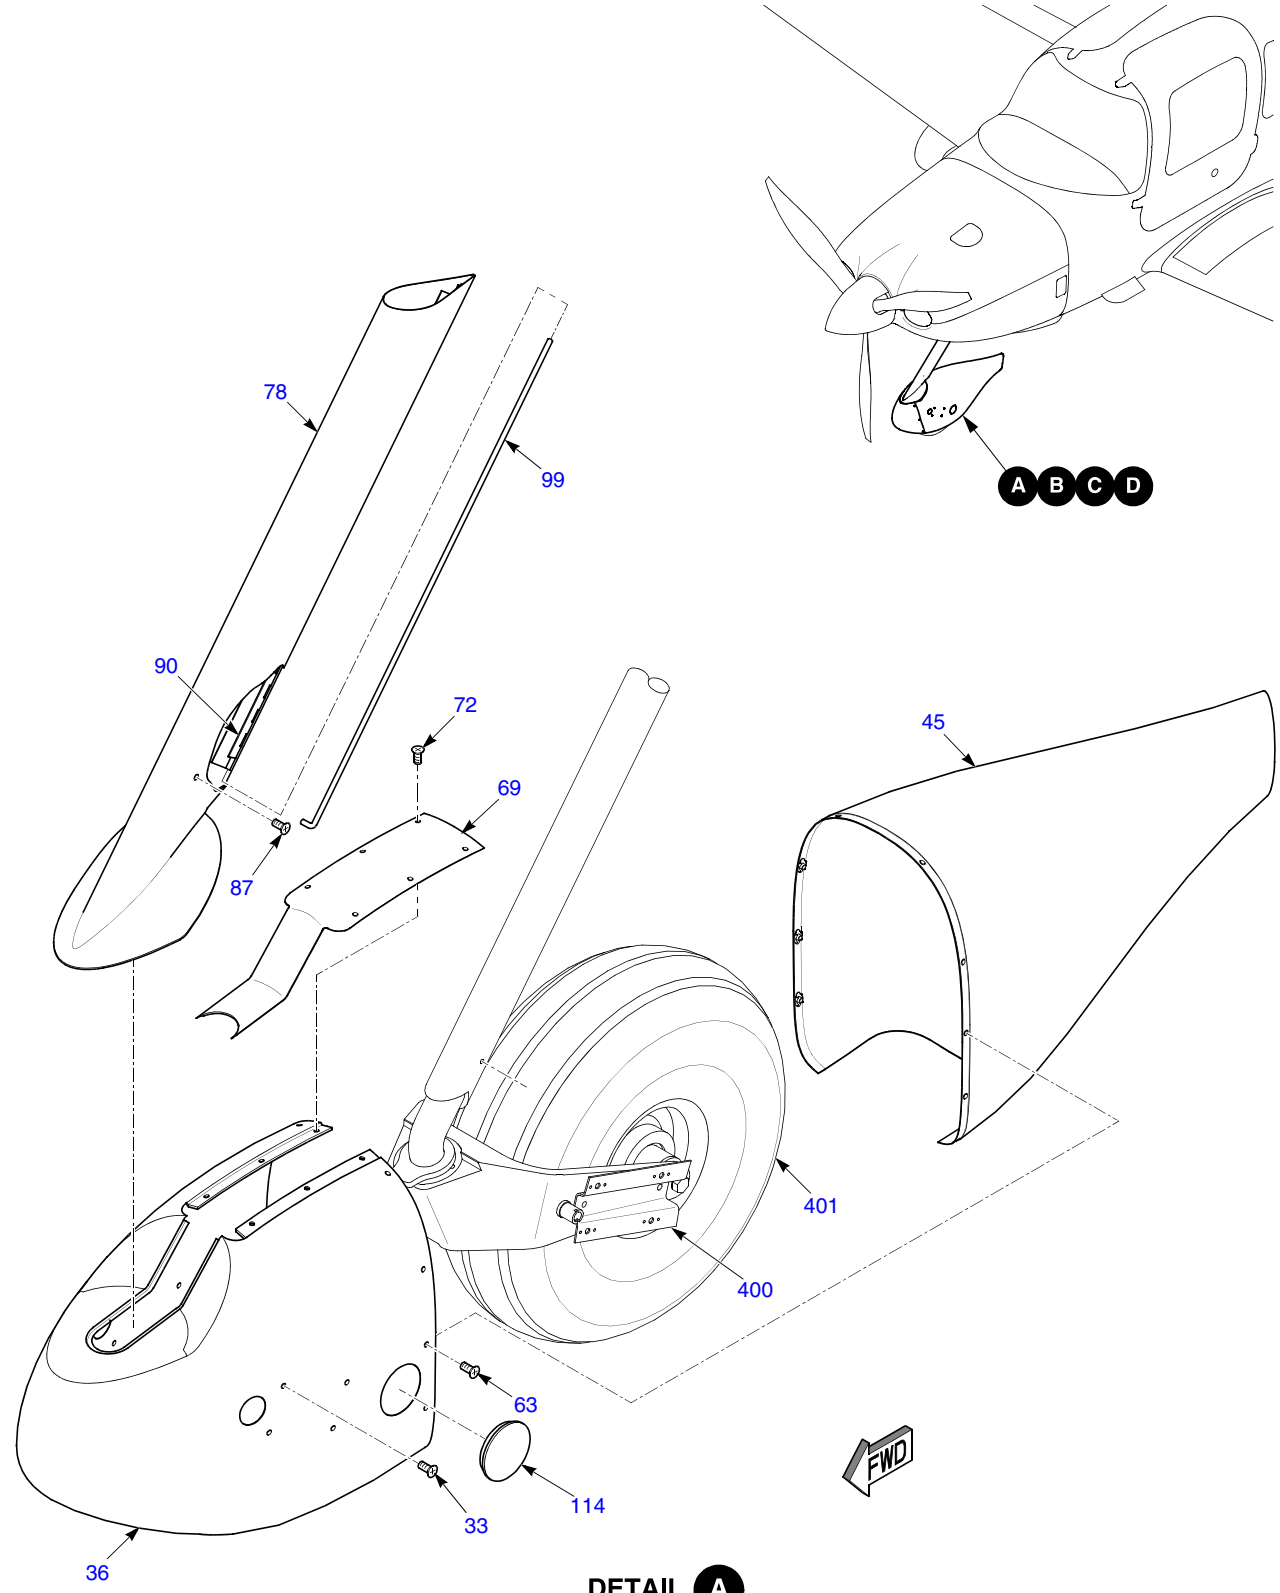

Figure-01
Nose Gear Fairing - Serials 22-0002 thru 22-0527 (1 of 4)

EFFECTIVITY:
Serials 22-0002 thru 22-0527

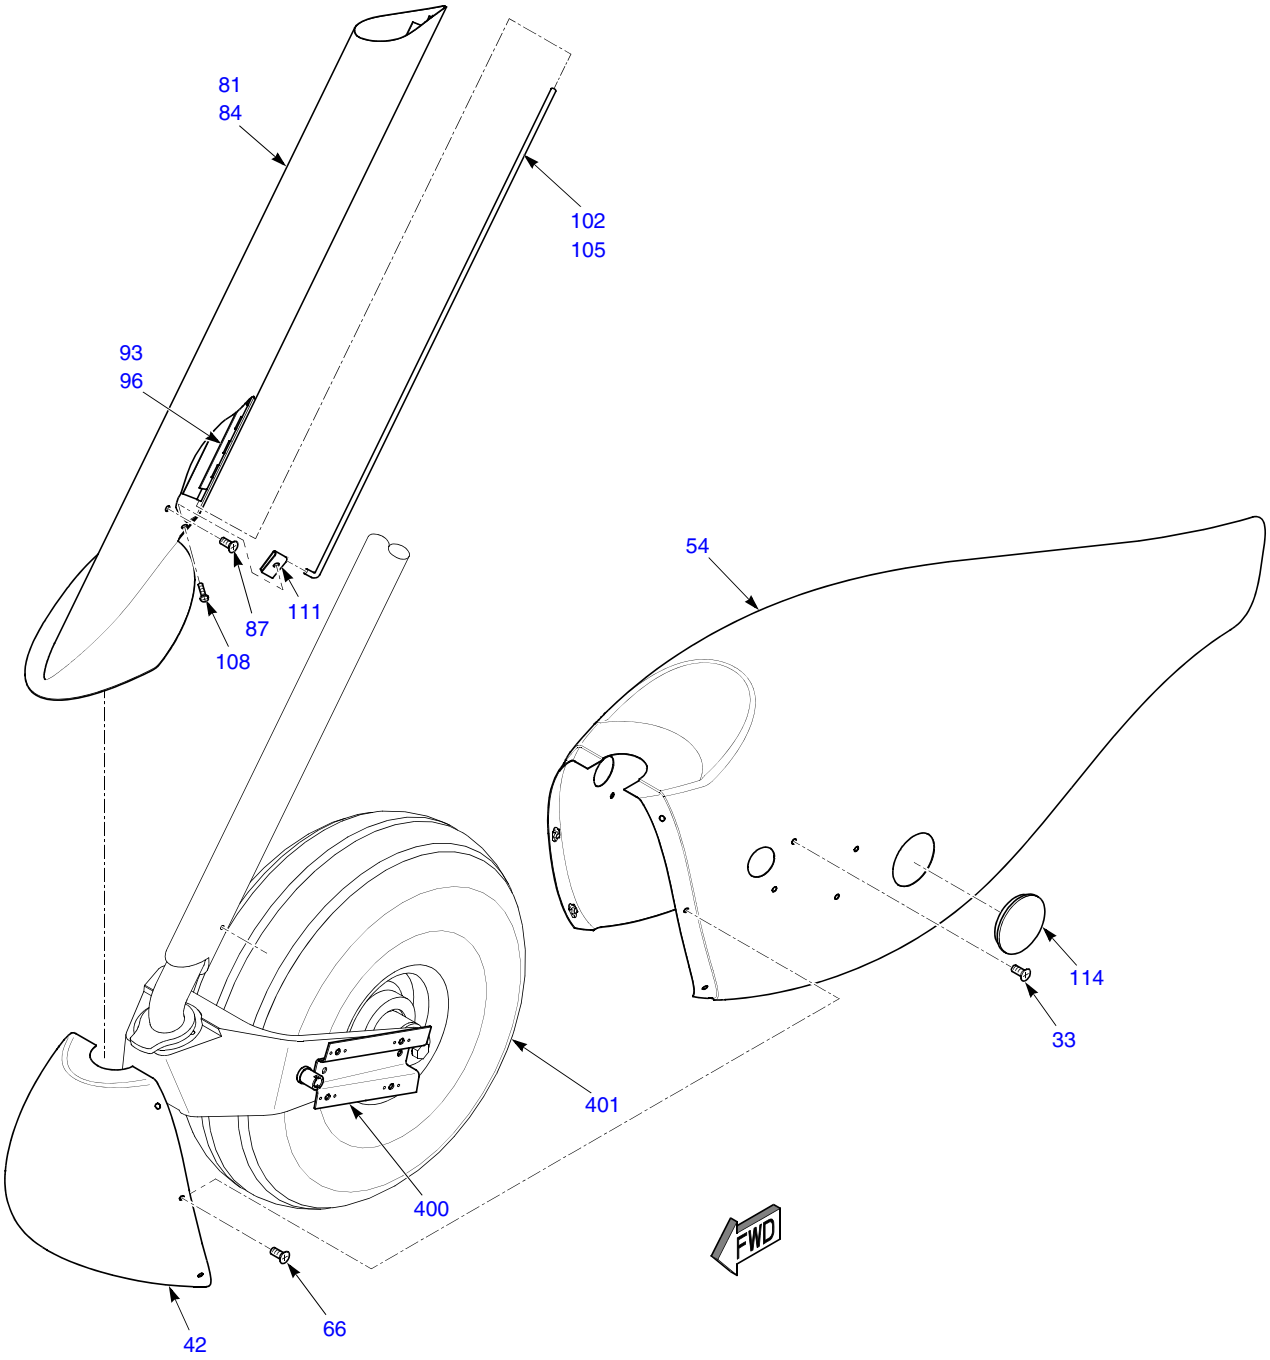

DETAIL B

Serials 22-0528 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC32_1392B

Figure-01

Nose Gear Fairing - Serials 22-0528 thru 22-2437 (2 of 4)

EFFECTIVITY:
Serials 22-0528 thru 22-2437

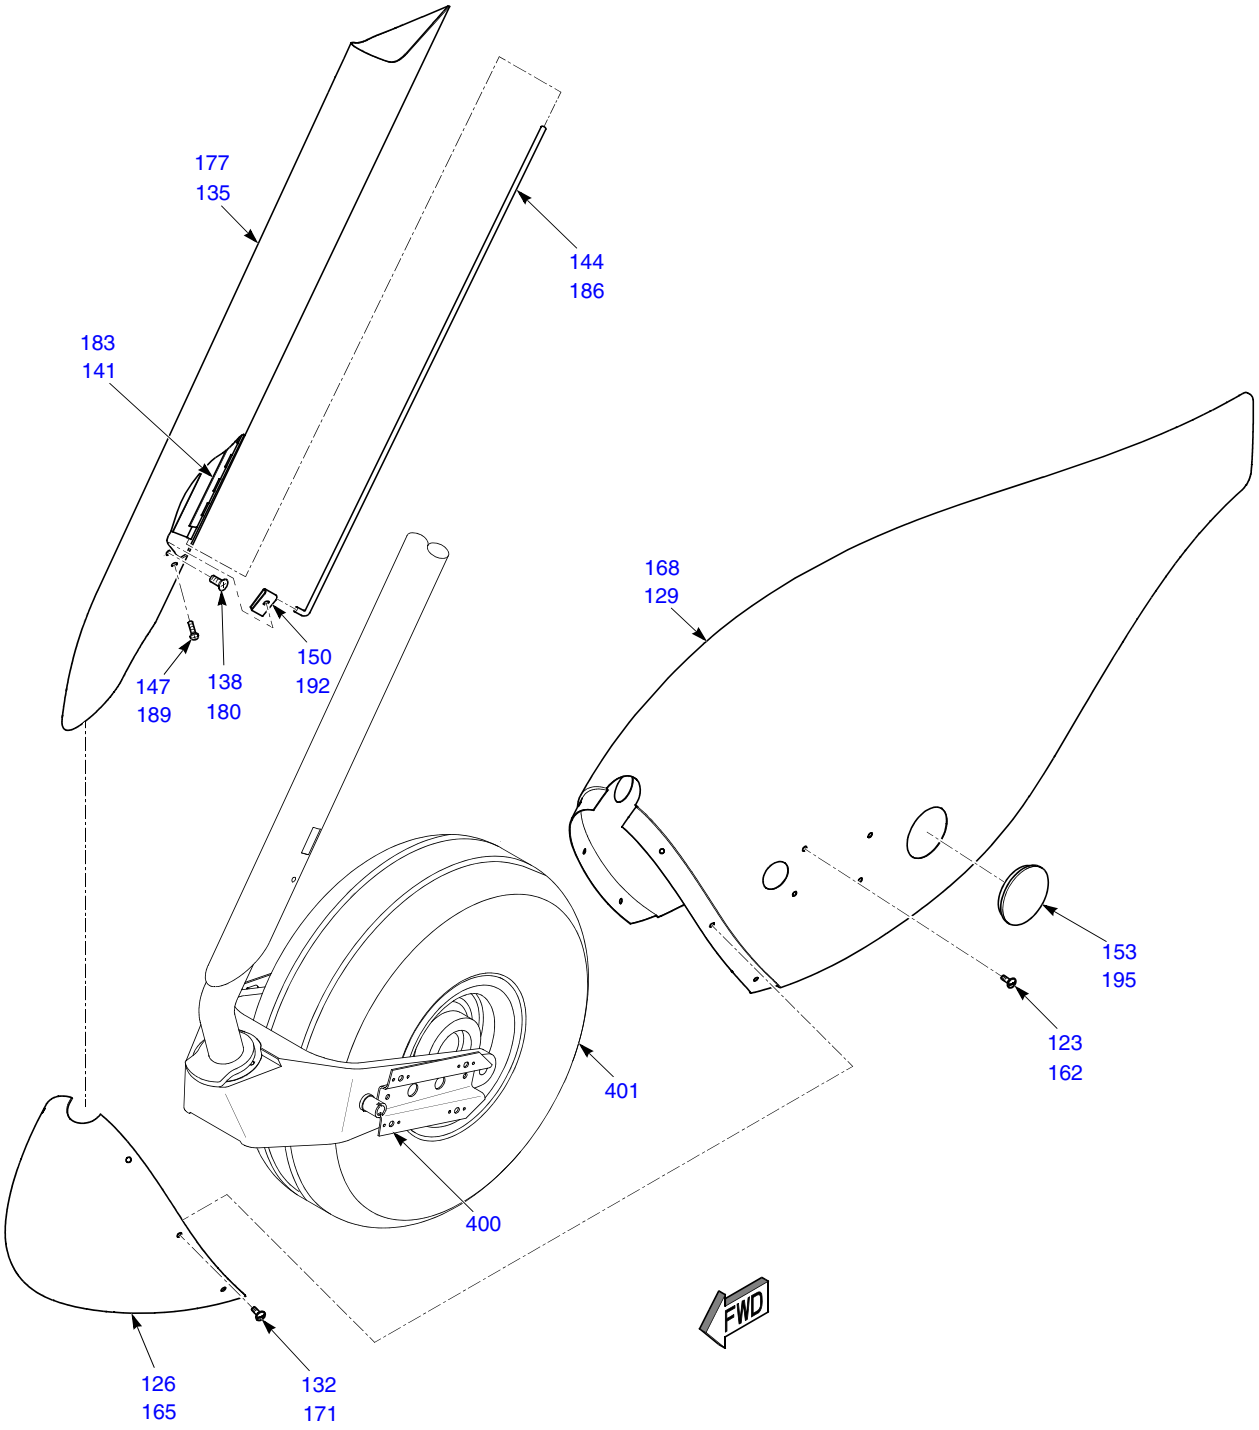

DETAIL C

Serials 22-2334, 22-2420, 22-2438 thru 22-3711.

SR22_PC32_1683A

Figure-01

Nose Gear Fairing - Serials 22-2438 thru 22-3711 (3 of 4)

EFFECTIVITY:
Serials 22-2438 thru 22-3711

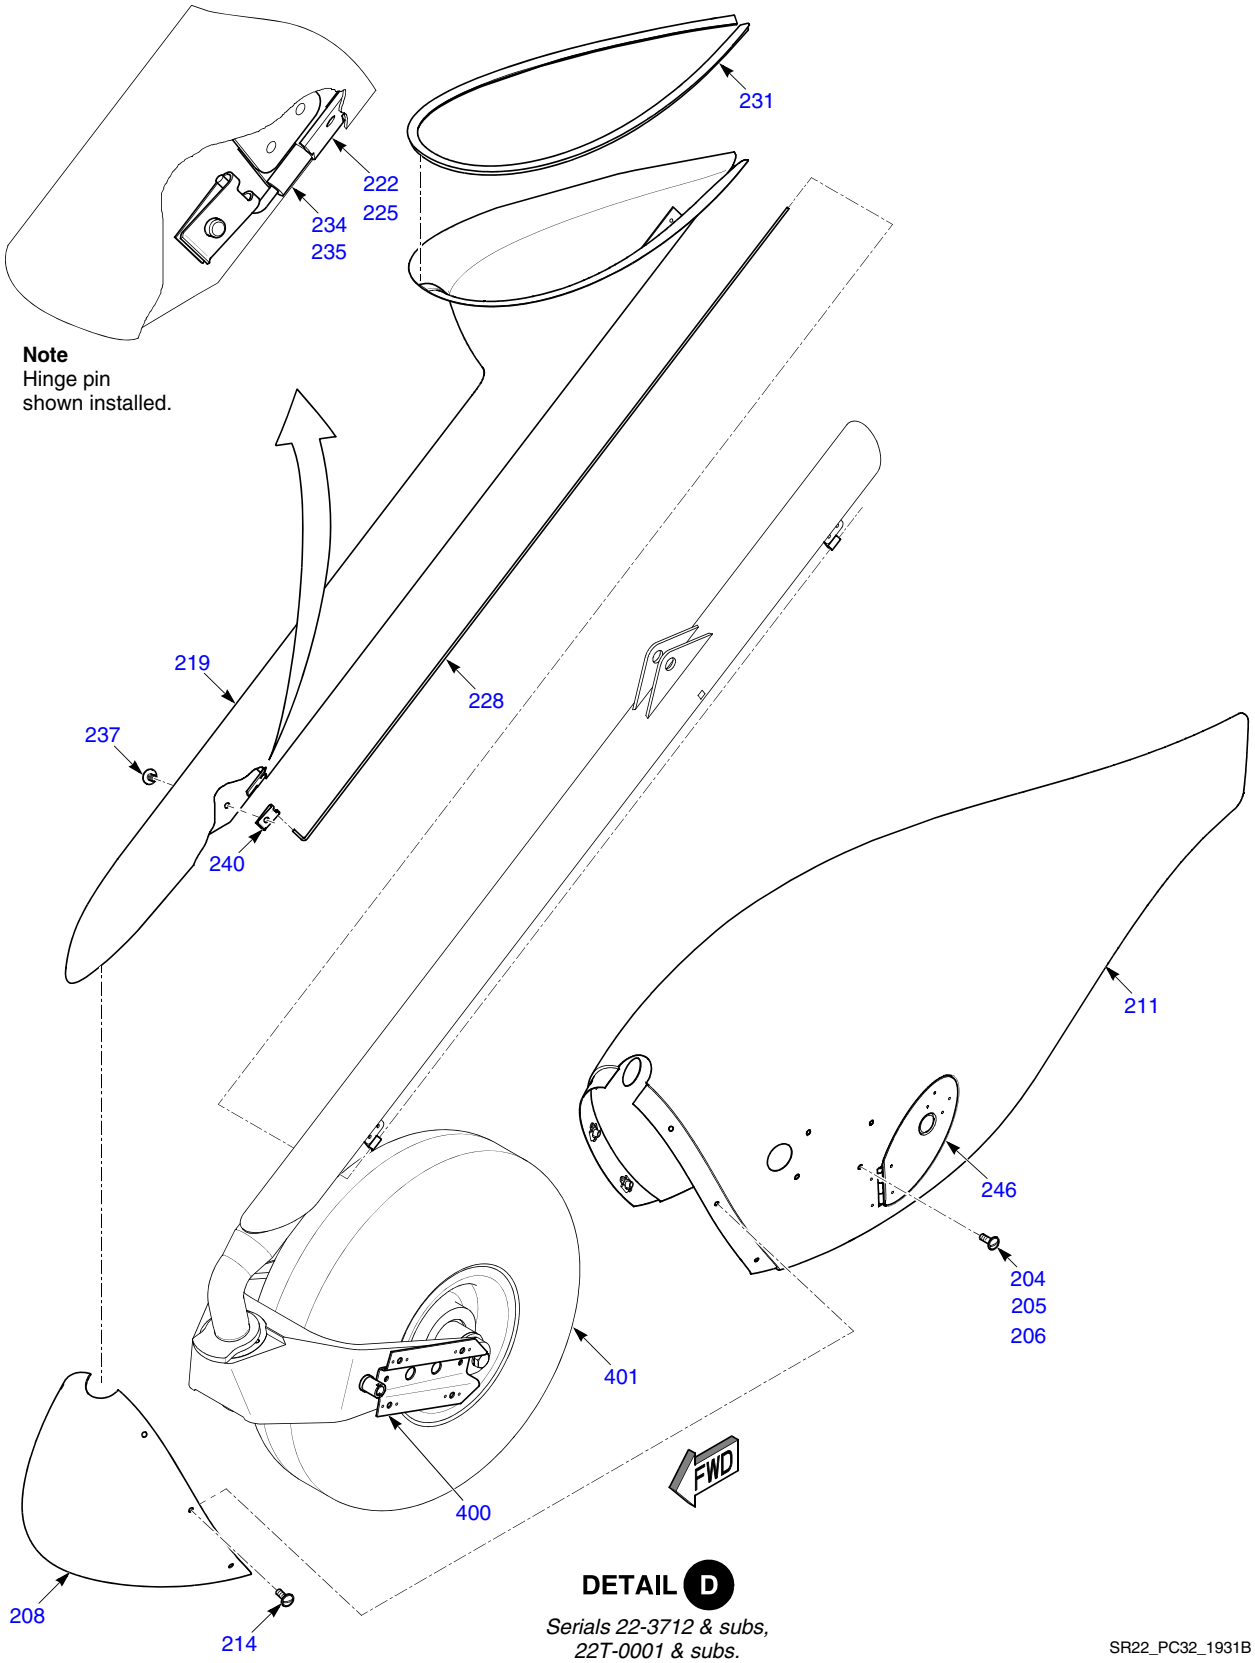

Figure-01

Nose Gear Fairing - Serials 22-3712 & subs, 22T-0001 & subs (4 of 4)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		NOSE GEAR FAIRING INSTALLATION	0002 / 0001	/	NP
-	2	14276-001			NOSE GEAR FAIRING ASSEMBLY	0002	0457	NP
					FOR SPARES USE P/N 15567-001			
-	3	14276-002			NOSE GEAR FAIRING ASSEMBLY	0458	0527	NP
					FOR SPARES USE P/N 15567-001			
-	6	13375-001			NOSE GEAR FAIRING ASSEMBLY	0528	1012	NP
					FOR SPARES USE P/N 15567-001			
-	9	15567-001			NOSE GEAR FAIRING ASSEMBLY	1013	2437	NP
-	12	12446-105	@		·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	0002	0457	1
-	15	12446-106	@		·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	0458	0527	1
-	18	15310-001			·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	0528	0719	1
					FOR SPARES USE P/N 15310-002			
-	21	15310-002			·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	0720	1012	1
					FOR SPARES USE P/N 15312-001			
-	24	15312-001			·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	1013	2437	1
-	27	MS24693-S272		A	·FLAT HEAD SCREW	0002	0457	8
-	30	NAS1169C10L		A	·COUNTERSUNK WASHER	0002	0457	8
					AFTER SB2X-32-06			
	33	AN525-10R8		A	·WASHER HEAD SCREW	0458	2437	8
	36	12446-101	@		··WHEEL PANT, FWD HALF	0002	0527	1
-	39	PRT OF ITM 18	#		··WHEEL PANT, FWD HALF	0528	0719	1
-	40	PRT OF ITM 21	#		··WHEEL PANT, FWD HALF	0720	1012	1
	42	PRT OF ITM 24	#		··WHEEL PANT, FWD HALF	1013	2437	1
	45	12446-102	@		··WHEEL PANT, AFT HALF	0002	0527	1
-	48	PRT OF ITM 18	#		··WHEEL PANT, AFT HALF	0528	0719	1
-	51	PRT OF ITM 21	#		··WHEEL PANT, AFT HALF	0720	1012	1
	54	PRT OF ITM 24	#		··WHEEL PANT, AFT HALF	1013	2437	1
-	57	MS24693-S50		A	··FLAT HEAD SCREW	0002	0457	8
-	60	NAS1169C8L		A	··COUNTERSUNK WASHER	0002	0457	8
					AFTER SB2X-32-06			
	63	AN525-832R8		A	··WASHER HEAD SCREW	0458	0527	8
	66	AN525-832R8		A	··WASHER HEAD SCREW	0528	2437	6
	69	12446-103	@		·ACCESS PANEL	0002	0527	1
	72	MS24693-S50		A	·FLAT HEAD SCREW	0002	0527	6
-	75	14277-001	@		·FAIRING NOSE LANDING GEAR STRUT	0002	0003	1
					FOR SPARES USE P/N 15566-001			
	78	14277-002	@		·FAIRING NOSE LANDING GEAR STRUT	0004	0527	1
					FOR SPARES USE P/N 15566-001			
	81	13376-001			·FAIRING NOSE LANDING GEAR STRUT	0528	1012	1
					FOR SPARES USE P/N 15566-001			
	84	15566-001			·FAIRING NOSE LANDING GEAR STRUT	1013	2437	1
	87	MS27039-1-06		A	·PAN HEAD SCREW	0002	2437	2
	90	14277-102			··HINGE	0002	0527	1
	93	13376-102			··HINGE	0528	1012	1
	96	15566-102			··HINGE	1013	2437	1
	99	PRT OF ITM 90			··PIN	0002	0527	1
	102	PRT OF ITM 93			··PIN	0528	1012	1
	105	PRT OF ITM 96			··PIN	1013	2437	1
	108	MS51861-35		A	··SCREW	1013	2437	1
	111	51378-001		A	··SPEED NUT "U" TYPE	1013	2437	1
	114	50498-200			·NYLON CAP	0002	2437	1
-	117	18303-001			NOSE GEAR FAIRING ASSEMBLY	2438	3402	NP
-	120	17473-001			·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	2438	3402	1
	123	AN525-10R8		A	·WASHER HEAD SCREW	2438	3402	8

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	126	PRT OF ITM 120	#		··WHEEL PANT, FWD HALF	2438	3402	1
	129	PRT OF ITM 120	#		··WHEEL PANT, AFT HALF	2438	3402	1
	132	AN525-10R8		A	··WASHER HEAD SCREW	2438	3402	6
-	133	17472-001			·FAIRING NOSE LANDING GEAR STRUT ASSEMBLY	2438	3402	1
	135	17472-101			·FAIRING NOSE LANDING GEAR STRUT	2438	3402	1
	138	MS27039-1-06		A	·PAN HEAD SCREW	2438	3402	2
	141	17472-102			··HINGE	2438	3402	1
	144	PRT OF ITM 141			··PIN	2438	3402	1
	147	NASM51861-34		A	··SCREW	2438	3402	1
	150	51378-001		A	··SPEED NUT "U" TYPE	2438	3402	1
	153	50498-200			·NYLON CAP	2438	3402	1
-	156	18303-002			NOSE GEAR FAIRING ASSEMBLY	3403	3711	NP
-	159	26168-001			·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	3403	3711	1
	162	NAS8103U8		A	·PAN HEAD SCREW	3403	3711	8
	165	PRT OF ITM 159	#		··WHEEL PANT, FWD HALF	3403	3711	1
	168	PRT OF ITM 159	#		··WHEEL PANT, AFT HALF	3403	3711	1
	171	NAS8103U8		A	··WASHER HEAD SCREW	3403	3711	6
-	174	17472-001			·FAIRING NOSE LANDING GEAR STRUT ASSEMBLY	3403	3711	1
	177	17472-101			·FAIRING NOSE LANDING GEAR STRUT	3403	3711	1
	180	MS27039-1-06		A	·PAN HEAD SCREW	3403	3711	1
	183	17472-102			··HINGE	3403	3711	1
	186	PRT OF ITM 183			··PIN	3403	3711	1
	189	NASM51861-34		A	··SCREW	3403	3711	1
	192	51378-001		A	··SPEED NUT "U" TYPE	3403	3711	1
	195	50498-200			·NYLON CAP	3403	3711	1
-	198	26960-001			NOSE GEAR FAIRING ASSEMBLY	3712 / 0001	/	NP
-	201	26168-001			·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	3712 / 0001	3914 / 0441	1
-	202	26873-001			·WHEEL PANT ASSEMBLY, NOSE LANDING GEAR	3915 / 0442	/	1
	204	NAS8103U8		A	·PAN HEAD SCREW	3712 / 0001	/	8
					ALTERNATE FOR P/N MS51958-63			
					ALTERNATE FOR P/N AN525-10R8			
	205	MS51958-63			·PAN HEAD SCREW	3712 / 0001	/	8
					ALTERNATE FOR P/N NAS8103U8			
	206	AN525-10R8			·SCREW	4054 / 0725	/	8
					ALTERNATE FOR P/N NAS8103U8			
-	207	PRT OF ITM 201	#		··WHEEL PANT, FWD HALF	3712 / 0001	3914 / 0441	1
	208	PRT OF ITM 202	#		··WHEEL PANT, FWD HALF	3915 / 0442	/	1
-	210	PRT OF ITM 201	#		··WHEEL PANT, AFT HALF	3712 / 0001	3914 / 0441	1
	211	PRT OF ITM 202	#		··WHEEL PANT, AFT HALF	3915 / 0442	/	1
-	213	NAS8103U8		A	·PAN HEAD SCREW	3712 / 0001	3914 / 0441	6
	214	NAS8102U8		A	·PAN HEAD SCREW	3915 / 0442	/	6
-	216	26607-001			·FAIRING NOSE LANDING GEAR STRUT ASSEMBLY	3712 / 0001	/	1
	219	26607-101			··FAIRING NOSE LANDING GEAR STRUT	3712 / 0001	/	1
	222	26607-102			··HINGE	3712 / 0001	/	1
					ALTERNATE FOR P/N 26607-103			
	225	26607-103			··HINGE	3712 / 0001	/	1
					ALTERNATE FOR P/N 26607-102			
	228	26607-105			··PIN	3712 / 0001	/	1
	231	26607-104			··SEAL	3712 / 0001	/	1
	234	26960-103		A	·HINGE TAB	/ 0001	/ 0065	2
					FOR SPARES USE P/N 26960-104			
	235	26960-104		A	·HINGE TAB	3712 / 0066	/	2
	237	AN525-10R8		A	·SCREW	3712 / 0001	/	1
	240	51378-001		A	·SPEED NUT "U" TYPE	3712 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	243	50498-200			·NYLON CAP	3712 / 0001	3914 / 0441	1
	246	26880-001			·ACCESS DOOR	3915 / 0442	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 32-20-02 DET			NOSE WHEEL FORK ASSEMBLY			
	401	RF 32-20-02 DET			NOSE WHEEL ASSEMBLY			
					SYMBOL NOTES:			
			@		IF ITEM NEEDS REPLACING THE ENTIRE ASSEMBLY MUST BE REPLACED WITH ASSEMBLY 15567-001.			
			#		FORWARD AND AFT WHEEL PANTS HALVES ARE SOLD AS PAIRS ONLY.			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			

Intentionally Left Blank

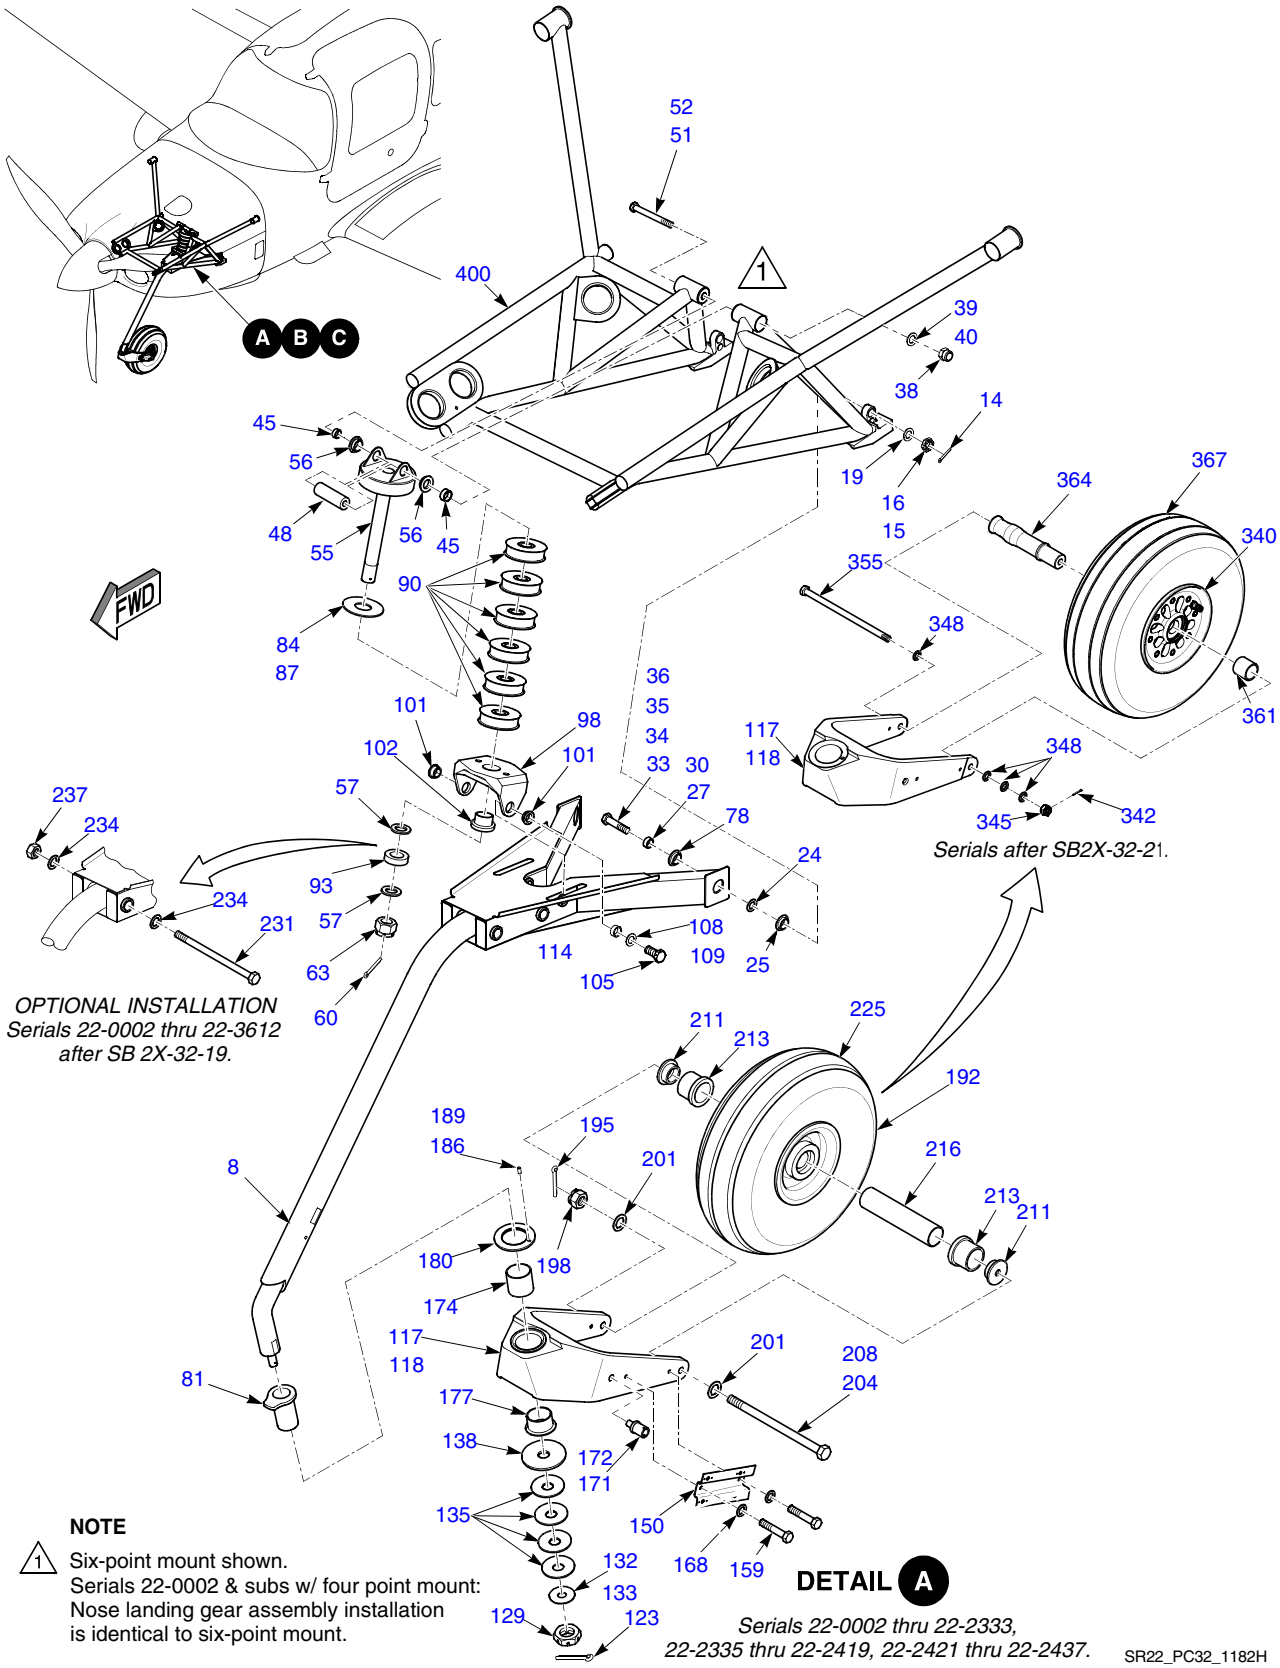

NOTE

1 Six-point mount shown.
Serials 22-0002 & subs w/ four point mount:
Nose landing gear assembly installation
is identical to six-point mount.

Figure-02

Nose Landing Gear - Serials 22-0002 thru 22-2437 (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

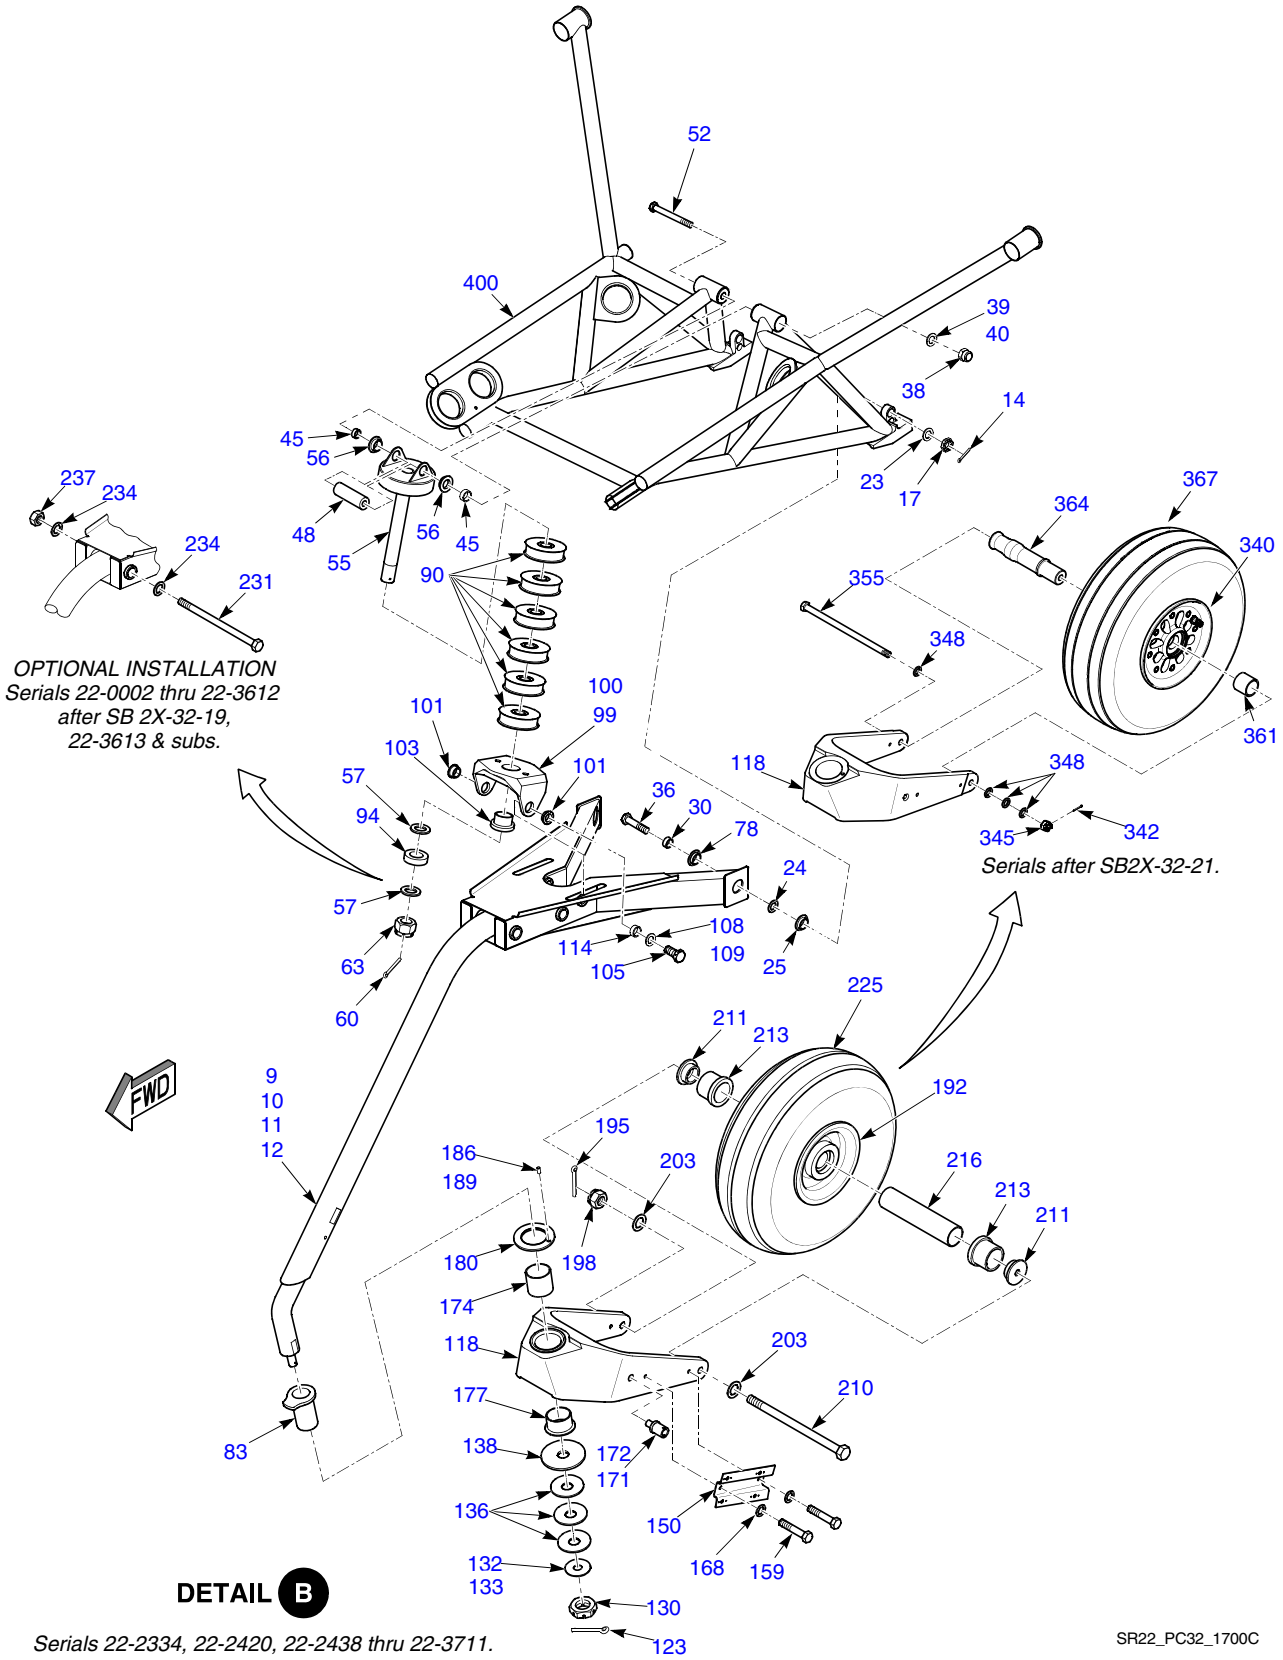

Figure-02

Nose Landing Gear - Serials 22-2438 thru 22-3711 (2 of 3)

EFFECTIVITY:
Serials 22-2438 thru 22-3711

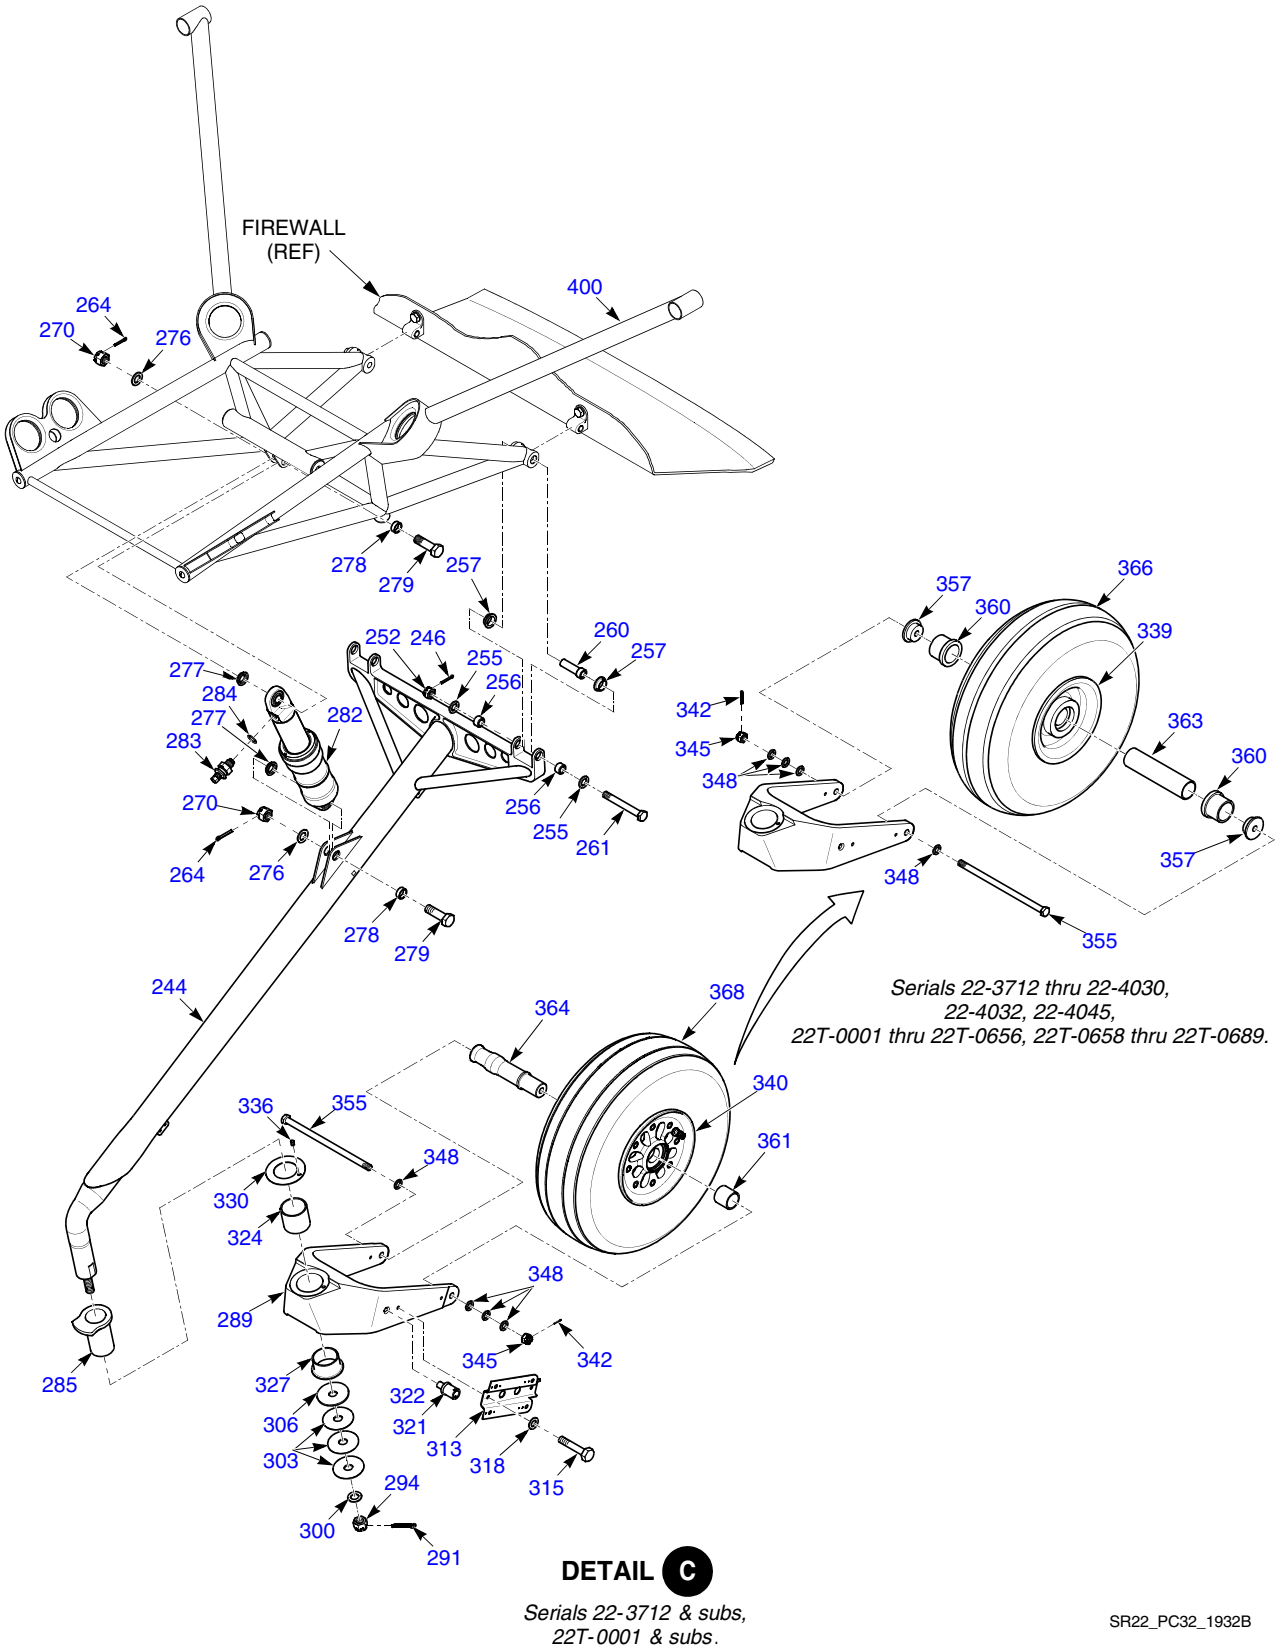

Figure-02

Nose Landing Gear - Serials 22-3712 & subs, 22T-0001 & subs (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		NOSE LANDING GEAR INSTALLATION	0002 / 0001	/	NP
-	3	14082-001			·NOSE LANDING GEAR STRUT ASSEMBLY	0002	0074	1
					FOR SPARES USE P/N 14082-006			
-	6	14082-002			·NOSE LANDING GEAR STRUT ASSEMBLY	0075	0138	1
					FOR SPARES USE P/N 14082-006			
-	7	14082-003			·NOSE LANDING GEAR STRUT ASSEMBLY	0139	1348	1
					FOR SPARES USE P/N 14082-006			
	8	14082-004			·NOSE LANDING GEAR STRUT ASSEMBLY	1349	2437	1
					FOR SPARES USE P/N 14082-006			
	9	18101-001			·NOSE LANDING GEAR STRUT ASSEMBLY	2438	3513	1
					FOR SPARES USE P/N 18101-004			
	10	18101-002			·NOSE LANDING GEAR STRUT ASSEMBLY	3514	3595	1
					FOR SPARES USE P/N 18101-004			
	11	18101-003			·NOSE LANDING GEAR STRUT ASSEMBLY	3596	3622	1
					FOR SPARES USE P/N 18101-004			
	12	18101-004			·NOSE LANDING GEAR STRUT ASSEMBLY	3623	3711	1
	14	MS24665-285		A	·COTTER PIN	0002		2
	15	AN320-8		A	·NUT	0002	1961	2
	16	AN310-8		A	·NUT	1962	2437	2
	17	AN310-8		A	·NUT	2438	3711	2
-	18	NAS1149F0863P		A	·WASHER	0002	1961	1
					ALTERNATE FOR P/N NAS1149F0832P			
	19	NAS1149F0832P		A	·WASHER	0002	1961	1
					ALTERNATE FOR P/N NAS1149F0863P			
-	20	NAS1149F0863P		A	·WASHER	1962	2437	2
					ALTERNATE FOR P/N NAS1149F0832P			
-	21	NAS1149F0832P		A	·WASHER	1962	2437	2
					ALTERNATE FOR P/N NAS1149F0863P			
-	22	NAS1149F0863P		A	·WASHER	2438	3711	1
					ALTERNATE FOR P/N NAS1149F0832P			
	23	NAS1149F0832P		A	·WASHER	2438	3711	1
					ALTERNATE FOR P/N NAS1149F0863P			
	24	NAS1149F1032P		A	·WASHER	0078	3711	2
	25	NAS77-8-050		A	·BUSHING	0002	3711	2
	27	13705-001		A	·SPACER, BUSHING	0002	0077	2
	30	13705-003		A	·SPACER, BUSHING	0078	3711	2
	33	NAS6608-25D		A	·BOLT, W/ 4-POINT MOUNT	0002	0655	2
	34	NAS6608-10D	**	A	·BOLT, W/ 6-POINT MOUNT	0656	1961	2
					BEFORE SB2X-71-06			
	35	NAS6608-10D		A	·BOLT, W/ 6-POINT MOUNT	0002	1961	2
					AFTER SB2X-71-06			
	36	NAS6608-14D		A	·BOLT, W/ 6-POINT MOUNT	1962	3711	2
	38	MS21045L8		A	·NUT	0002	3711	1
	39	NAS1149F0863P		A	·WASHER	0002	3711	1
					ALTERNATE FOR P/N NAS1149F0832P			
	40	NAS1149F0832P		A	·WASHER	0002	3711	1
					ALTERNATE FOR P/N NAS1149F0863P			
-	42	13705-001		A	·SPACER, BUSHING	0002	0077	2
	45	13705-003		A	·SPACER, BUSHING	0078	3711	2
	48	13704-001		A	·SPACER	0002	3711	1
	51	AN178-45A		A	·BOLT	0002	2051	1
	52	AN178-46A		A	·BOLT	2052	3711	1
	55	13549-002			·UPPER PUCK PAN	0002	3711	1
	56	NAS77-10-013		A	··BUSHING	0002	3711	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	57	NAS1149F1690P	$	A	·WASHER	0002	3711	2
	60	MS24665-359		A	·COTTER PIN	0002	3711	1
	63	AN310-15		A	·NUT	0002	3711	1
	78	NAS77-10-013	#	A	··BUSHING	0002	3711	2
	81	11637-001			··SPINDLE CUP	0002	2437	1
					ALTERNATE FOR P/N 18110-001			
-	82	18110-001			··SPINDLE CUP	0002	2437	1
					ALTERNATE FOR P/N 11637-001			
	83	18110-001			··SPINDLE CUP	2438	3711	1
	84	14296-001	%		·SPACER	0002	0794	1
						0796	0819	
	87	20583-001	%		·SPACER	0795	0795	1
						0820	2437	
	90	13386-001			·PUCK	0002	3711	6
	93	13703-001			·BUMPER	0002	2469	1
					FOR SPARES USE P/N 18380-001			
	94	18380-001	&		·BUMPER	2470	3711	1
-	95	14073-001			·LOWER PUCK PAN ASSEMBLY	0002	2437	1
					FOR SPARES USE P/N 18826-001			
-	96	18104-001	%		·LOWER PUCK PAN ASSEMBLY	2438	3163	1
					FOR SPARES USE P/N 18826-001			
-	97	18826-001	%		·LOWER PUCK PAN ASSEMBLY	3164	3711	1
	98	14072-001			··LOWER PUCK PAN	0002	2437	1
	99	18105-002			··LOWER PUCK PAN	2438	3163	1
	100	18827-001			··LOWER PUCK PAN	3164	3711	1
	101	NAS77-10-025		A	··BUSHING	0002	3711	2
	102	NAS77-18-085		A	··BUSHING	0002	2437	1
					FOR SPARES USE P/N 17481-001			
	103	17481-001		A	··BUSHING	2438	3711	1
	105	NAS6608H5		A	·BOLT	0002	3711	2
	108	NAS1149F0863P		A	·WASHER	0002	3711	2
					ALTERNATE FOR P/N NAS1149F0832P			
	109	NAS1149F0832P		A	·WASHER	0002	3711	2
					ALTERNATE FOR P/N NAS1149F0863P			
-	111	13705-002		A	·SPACER, BUSHING	0002	0077	2
					BEFORE SB22-32-01			
					FOR SPARES USE P/N 13705-004			
	114	13705-004		A	·SPACER, BUSHING	0002	3711	2
					AFTER SB22-32-01			
	117	11638-002			·FORK ASSEMBLY	0002	0235	1
	118	11638-003			·FORK ASSEMBLY	0236	3711	1
-	120	MS24665-285		A	·COTTER PIN	0002	0138	1
					BEFORE SB22-32-02			
					FOR SPARES USE P/N MS24665-355			
	123	MS24665-355		A	·COTTER PIN	0002	3711	1
					AFTER SB22-32-02			
-	126	AN320-8		A	·NUT	0002	0138	1
					BEFORE SB22-32-02			
	129	MS17826-8		A	·NUT	0002	2437	1
					AFTER SB22-32-02			
	130	MS17825-8		A	·NUT	2438	3711	1
	132	NAS1149F0863P		A	·WASHER	0002	3711	1
					ALTERNATE FOR P/N NAS1149F0832P			
	133	NAS1149F0832P		A	·WASHER	0002	3711	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					ALTERNATE FOR P/N NAS1149F0863P			
	135	50750-101		A	·BELLEVILLE SPRING WASHER	0002	2437	4
	136	51853-001		A	·BELLEVILLE SPRING WASHER	2438	3711	3
	138	AN970-8		A	·WASHER	0002	3711	1
-	141	11633-004			··FORK	0002	0235	1
-	142	11633-005			··FORK	0236	3711	1
-	144	11799-001			··PANT BRACKET	0002	0097	2
					BEFORE SB22-32-02			
					FOR SPARES USE P/N 11799-004			
-	147	11799-002			··PANT BRACKET	0002	0439	2
					AFTER SB22-32-02			
					FOR SPARES USE P/N 11799-004			
	150	11799-003			··PANT BRACKET	0440	3711	2
					FOR SPARES USE P/N 11799-004			
-	153	AN3-3A		A	··BOLT	0002	0097	4
					BEFORE SB22-32-02			
-	156	AN3H3A		A	··BOLT	0002	0439	4
					AFTER SB22-32-02			
	159	AN3H3A		A	··BOLT	0440	3711	4
-	162	NAS1149F0363P		A	··WASHER	0002	0097	4
					BEFORE SB22-32-02			
-	165	NAS1149F0332P		A	··WASHER	0002	0439	4
					AFTER SB22-32-02			
	168	NAS1149F0332P		A	··WASHER	0440	3711	4
	171	11869-001			··TOWBAR LUG	0002	4144	2
					FOR SPARES USE P/N 11869-002			
	172	11869-002			··TOWBAR LUG	4145		2
	174	50544-001			··BEARING	0002	3711	1
	177	50543-001			··FLANGED BEARING	0002	3711	1
	180	50545-001			··THRUST WASHER	0002	3711	1
-	183	50546-001			··DOWEL PIN	0002	0235	1
	186	51183-426			··SET SCREW	0236	3711	1
					ALTERNATE FOR P/N MS51964-51			
	189	MS51964-51			··SET SCREW	0236	3711	1
					ALTERNATE FOR P/N 51183-426			
	192	12798-001			·NOSE WHEEL ASSEMBLY	0002	3711	1
	195	MS24665-283		A	·COTTER PIN	0002	3711	1
	198	AN310-6		A	·NUT	0002	3711	1
	201	NAS1149F0632P		A	·WASHER	0002	2062	2
-	202	NAS1149F0663P		A	·WASHER	2063	2437	4
	203	NAS1149F0632P		A	·WASHER	2438		2
	204	AN6-71		A	·BOLT	0002	2062	1
					ALTERNATE FOR P/N AN6-72			
-	207	AN6-72		A	·BOLT	0002	2062	1
					ALTERNATE FOR P/N AN6-71			
	208	AN6-73		A	·BOLT	2063	2437	1
					ALTERNATE FOR P/N NAS6606-108D			
-	209	NAS6606-108D		A	·BOLT	2063	2437	1
					ALTERNATE FOR P/N AN6-73			
	210	AN6-71		A	·BOLT	2438	3711	1
	211	11635-001			·PLUG	0002	3711	2
	213	10033-002			·SPACER	0002	3711	2
	216	10024-003			·AXLE	0002	3711	1
-	218	12020-001			·TIRE	0002	3232	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						ALTERNATE FOR P/N 12020-002			
						ALTERNATE FOR P/N 12020-003			
-	219	12020-002			·TIRE		0002	3232	1
						ALTERNATE FOR P/N 12020-001			
						ALTERNATE FOR P/N 12020-003			
	225	12020-003			·TIRE		3233	3711	1
-	228	14076-001			·TUBE		0002	3711	1
	231	NAS6610-73			·BOLT		3613	3711	1
						FOR ALTERNATES, REFER TO SB2X-32-19			
			^			AFTER SB2X-32-19	0002	3612	
	234	NAS1149F1063P			·WASHER		3613	3711	2
			^			AFTER SB2X-32-19	0002	3612	
	237	MS21044N10			·NUT		3613	3711	1
			^			AFTER SB2X-32-19	0002	3612	
-	243	18632-003			·NOSE LANDING GEAR STRUT ASSEMBLY		3712 / 0001	/	1
						FOR SPARES USE P/N 18632-004			
	244	18632-004			·NOSE LANDING GEAR STRUT ASSEMBLY		3712 / 0001	/	1
	246	MS24665-210		A	·COTTER PIN		3712 / 0001	/	2
-	249	AN310-5		A	·NUT		3712 / 0001	/	2
						ALTERNATE FOR P/N MS17825-5			
	252	MS17825-5		A	·NUT		3712 / 0001	/	2
						ALTERNATE FOR P/N AN310-5			
	255	NAS1149F0563P		A	·WASHER		3712 / 0001	/	4
	256	18645-002		A	·BUSHING		3712 / 0001	/	4
	257	18646-001	@	A	·BUSHING, FLANGED (0.063 INCH)		3712 / 0001	/	4
						ALTERNATE FOR P/N 18646-002 OR 18646-003			
-	258	18646-002	@	A	·BUSHING, FLANGED (0.054 INCH)		3712 / 0001	/	4
						ALTERNATE FOR P/N 18646-001 OR 18646-003			
-	259	18646-003	@	A	·BUSHING, FLANGED (0.049 INCH)		3712 / 0001	/	4
						ALTERNATE FOR P/N 18646-001 OR 18646-002			
	260	19300-001		A	·SPACER		3712 / 0001	/	2
	261	AN5-24		A	·BOLT		3712 / 0001	/	2
	264	MS24665-285		A	·COTTER PIN		3712 / 0001	/	2
-	267	AN310-8		A	·NUT		3712 / 0001	/	2
						ALTERNATE FOR P/N MS17825-8	3712 / 0001	/	
	270	MS17825-8		A	·NUT		3712 / 0001	/	2
						ALTERNATE FOR P/N AN310-8	3712 / 0001	/	
-	273	NAS1149F0863P		A	·WASHER		3712 / 0001	/	2
						ALTERNATE FOR P/N NAS1149F0832P			
	276	NAS1149F0832P		A	·WASHER		3712 / 0001	/	2
						ALTERNATE FOR P/N NAS1149F0863P			
	277	NAS77-8-012		A	·BUSHING, FLANGED		3712 / 0001	/	2
	278	NAS75-8-008		A	·BUSHING		3712 / 0001	/	2
	279	AN8-15		A	·BOLT		3712 / 0001	/	2
	282	27057-002			·PNEUMATIC SHOCK ABSORBER		3712 / 0001	/	1
	283	MS28889-2			··VALVE		3712 / 0001	/	1
	284	MS28775-015			··O-RING		3712 / 0001	/	1
	285	19969-001			··SPINDLE CUP		3712 / 0001	/	1
-	288	11638-002			·FORK ASSEMBLY		/ 0001	/ 0022	1
	289	11638-004			·FORK ASSEMBLY		3712 / 0023	/	1
	291	MS24665-355		A	·COTTER PIN		3712 / 0001	/	1
	294	MS17825-8		A	·NUT		3712 / 0001	/	1
-	297	NAS1149F0863P		A	·WASHER		3712 / 0001	/	1
						ALTERNATE FOR P/N NAS1149F0832P			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	300	NAS1149F0832P		A	·WASHER	3712 / 0001	/	1
					ALTERNATE FOR P/N NAS1149F0863P			
	303	51853-001		A	·BELLEVILLE SPRING WASHER	3712 / 0001	/	3
	306	AN970-8		A	·WASHER	3712 / 0001	/	1
-	309	11633-006			··FORK	3712 / 0001	4012 / 0643	1
					FOR SPARES USE P/N 11633-007			
-	310	11633-007			··FORK	4013 / 0644	/	1
-	312	11799-003			··PANT BRACKET	3712 / 0001	3952 / 0535	2
					FOR SPARES USE P/N 11799-004			
	313	11799-004			··PANT BRACKET	3953 / 0536	/	2
	315	AN3H3A		A	··BOLT	3712 / 0001	/	4
	318	NAS1149F0332P		A	··WASHER	3712 / 0001	/	4
	321	11869-001			··TOWBAR LUG	3712 / 0001	4144 / 0908	2
					FOR SPARES USE P/N 11869-002			
	322	11869-002			··TOWBAR LUG	4145 / 0909	/	2
	324	50544-001			··BEARING	3712 / 0001	/	1
	327	50543-001			··FLANGED BEARING	3712 / 0001	/	1
	330	50545-001			··THRUST WASHER	3712 / 0001	/	1
-	333	51183-426			··SET SCREW	3712 / 0001	/	1
					ALTERNATE FOR P/N MS51964-51			
	336	MS51964-51			··SET SCREW	3712 / 0001	/	1
					ALTERNATE FOR P/N 51183-426			
	339	12798-001			·NOSE WHEEL ASSEMBLY	3712 / 0001	4045 / 0689	1
	340	31492-001	~		·NOSE WHEEL ASSEMBLY	4046 / 0690	/	1
	342	MS24665-283		A	·COTTER PIN	3712 / 0001	/	1
	345	AN310-6		A	·NUT	3712 / 0001	/	1
	348	NAS1149F0663P		A	·WASHER	3712 / 0001	/	4
-	351	AN6-73		A	·BOLT	/ 0001	/ 0022	1
					ALTERNATE FOR P/N NAS6606-108D			
-	354	NAS6606-108D		A	·BOLT	/ 0001	/ 0022	1
					ALTERNATE FOR P/N AN6-73			
	355	AN6-72		A	·BOLT	3712 / 0023	/	1
	357	11635-001			·PLUG	3712 / 0001	/	2
	360	10033-002			·SPACER	3712 / 0001	4045 / 0689	2
	361	31491-003	~		·SPACER	4046 / 0690	/	1
	363	10024-003			·AXLE	3712 / 0001	4045 / 0689	1
	364	31491-002	~		·AXLE	4046 / 0690	/	1
	366	12020-003			·TIRE	3712 / 0001	4045 / 0689	1
-	367	12020-004	~		·TIRE	4046 / 0690	/	1
					FOR SPARES USE 12020-005			
	368	12020-005	~		·TIRE	4046 / 0690	/	1
-	369	14076-001			·TUBE	3712 / 0001	4045 / 0689	1
-	372	70229-001	&		KIT, SPINDLE STUD REPLACEMENT	0002		NP
-	375	26310-001			·SPINDLE STUD	0002		1
-	378	NAS561P8-18			·SPRING PIN	0002		1
-	381	51853-001		A	·BELLEVILLE WASHER	0002		3
-	384	NAS1149F0863P		A	·WASHER	0002		1
-	387	AN970-8		A	·WASHER	0002		1
-	390	MS17825-8		A	·NUT	0002		1
-	393	MS24665-355		A	·COTTER PIN	0002		1
-	396	NAS77-10-013		A	·BUSHING	0002	3711	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 71-20-01 DET			ENGINE MOUNT FRAME ASSEMBLY			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-0610; REFER TO 22-0656 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2334, 22-2420; REFER TO SERIAL 22-2438 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-3483; REFER TO 22-3514 FOR PART IDENTIFICATION.			
					4) SERIAL NUMBERS 22-4031, 22-4033 THRU 22-4044; REFER TO 22-4046 FOR PART IDENTIFICATION.			
					5) SERIAL NUMBER 22T-0657; REFER TO 22T-0690 FOR PART IDENTIFICATION.			
			#		SERIAL NUMBER 22-0002 THRU 22-0074: BUSHINGS INSTALLED AT OUTBOARD LOCATIONS.			
			$		WASHER NAS1149F1690P NOT REQUIRED WHEN 18380-001 USED.			
			%		SPACER 14296-001 OR 20583-001 NOT REQUIRED WHEN 18104-001 OR 18826-001 USED.			
			^		SERIAL NUMBER 22-3395, 22-3396, 22-3398 THRU 22-3400, 22-3478, 22-3479, 22-3509 THRU 22-3511, 22-3518 THRU 22-3520, 22-3526, 22-3527, 22-3532, 22-3536, 22-3541, 22-3542, 22-3548 THRU 22-3551, 22-3555, 22-3556, 22-3568, 22-3577; REFER TO 22-3613.			
			@		SELECT BUSHING FLANGE THICKNESS SUCH THAT MAX ALLOWABLE GAP OF 0.01 INCH (0.25 MM) IS NOT EXCEEDED.			
			&		AFTER KIT 70229-001 PER AMM 32-20, USE KIT ONLY FOR REPLACEMENT OF RELATED PARTS.			
			~		SERIAL NUMBER 22-0002 THRU 22-4030, 22-4032, 22-4045, 22T-0001 THRU 22T-0656, 22T-0658 THRU 22T-0689 AFTER SB2X-32-21.			

Intentionally Left Blank

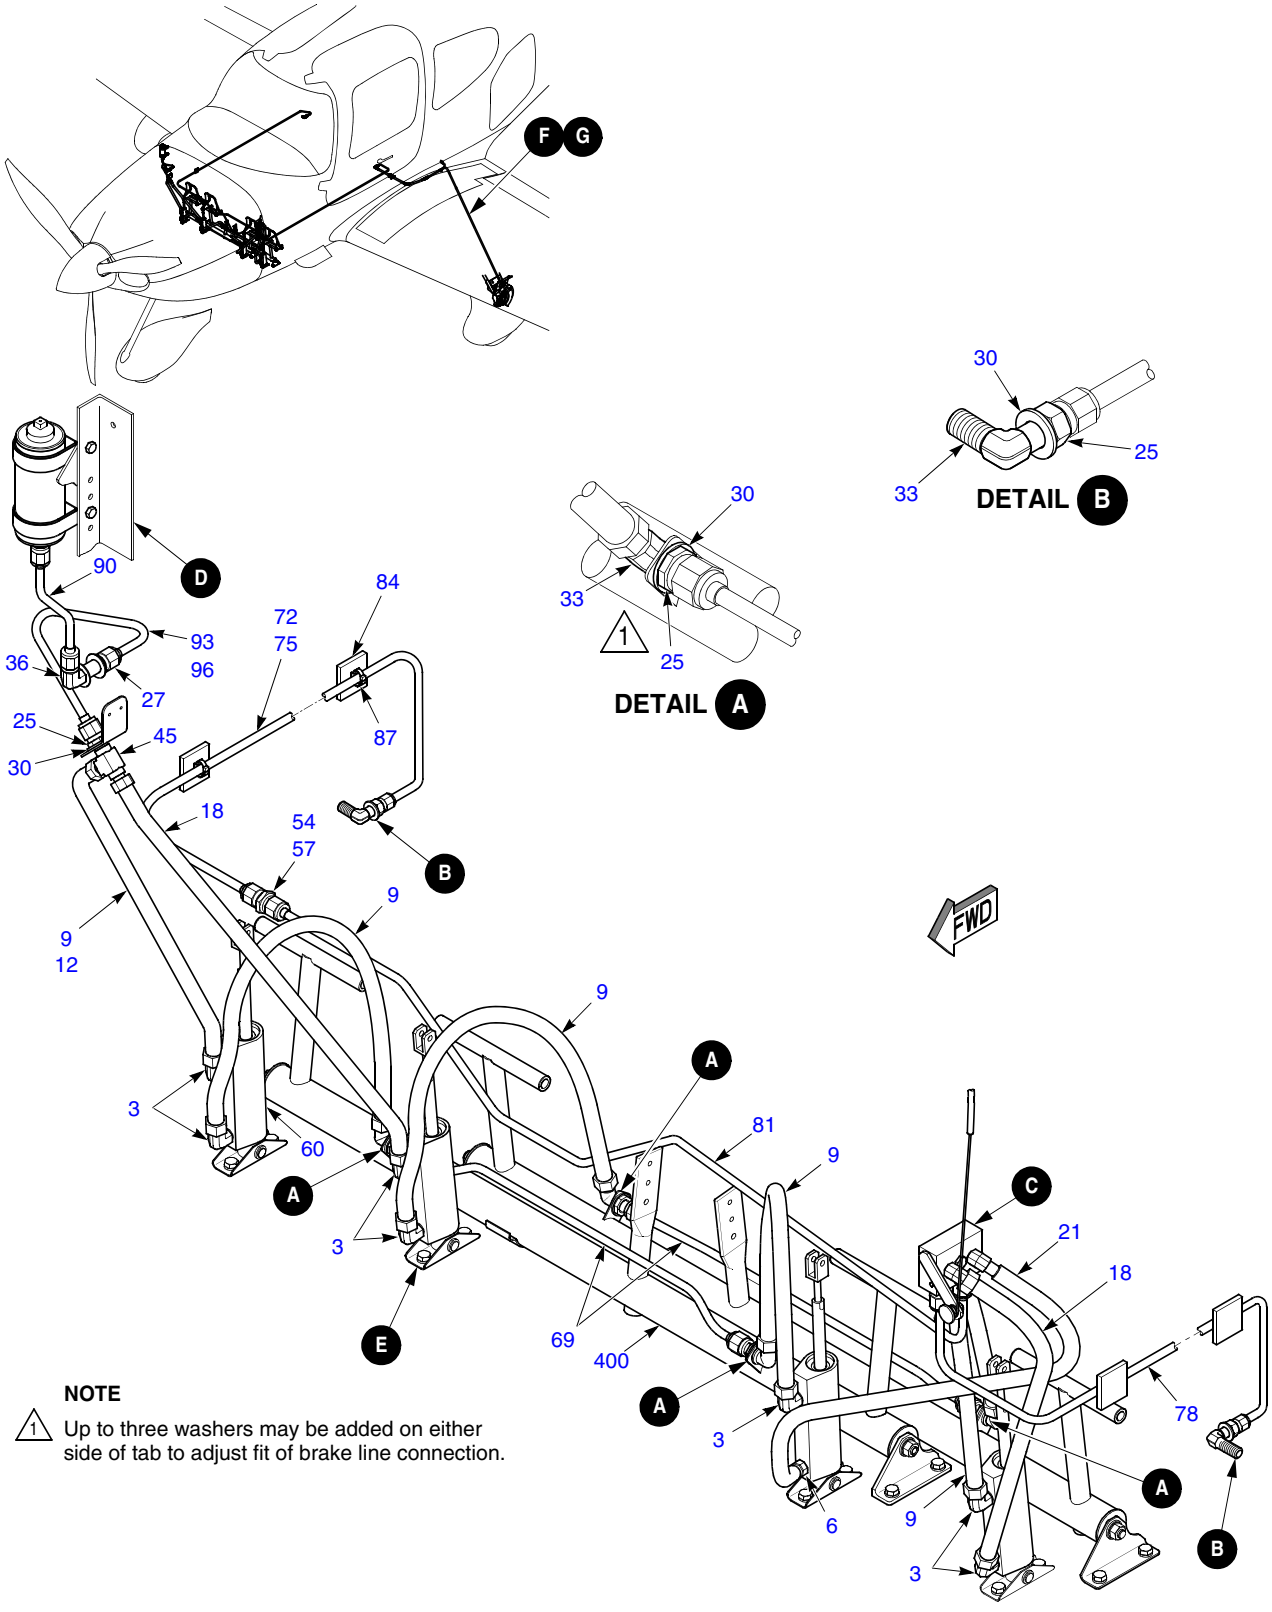

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2420 thru 22-2437 before SB2X-32-21.

SR22_PC32_1187F

Figure-01

Brake System - Serials 22-0002 thru 22-2437 before SB2X-32-21 (1 of 8)

EFFECTIVITY:
Serials 22-0002 thru 22-2437 before SB2X-32-21

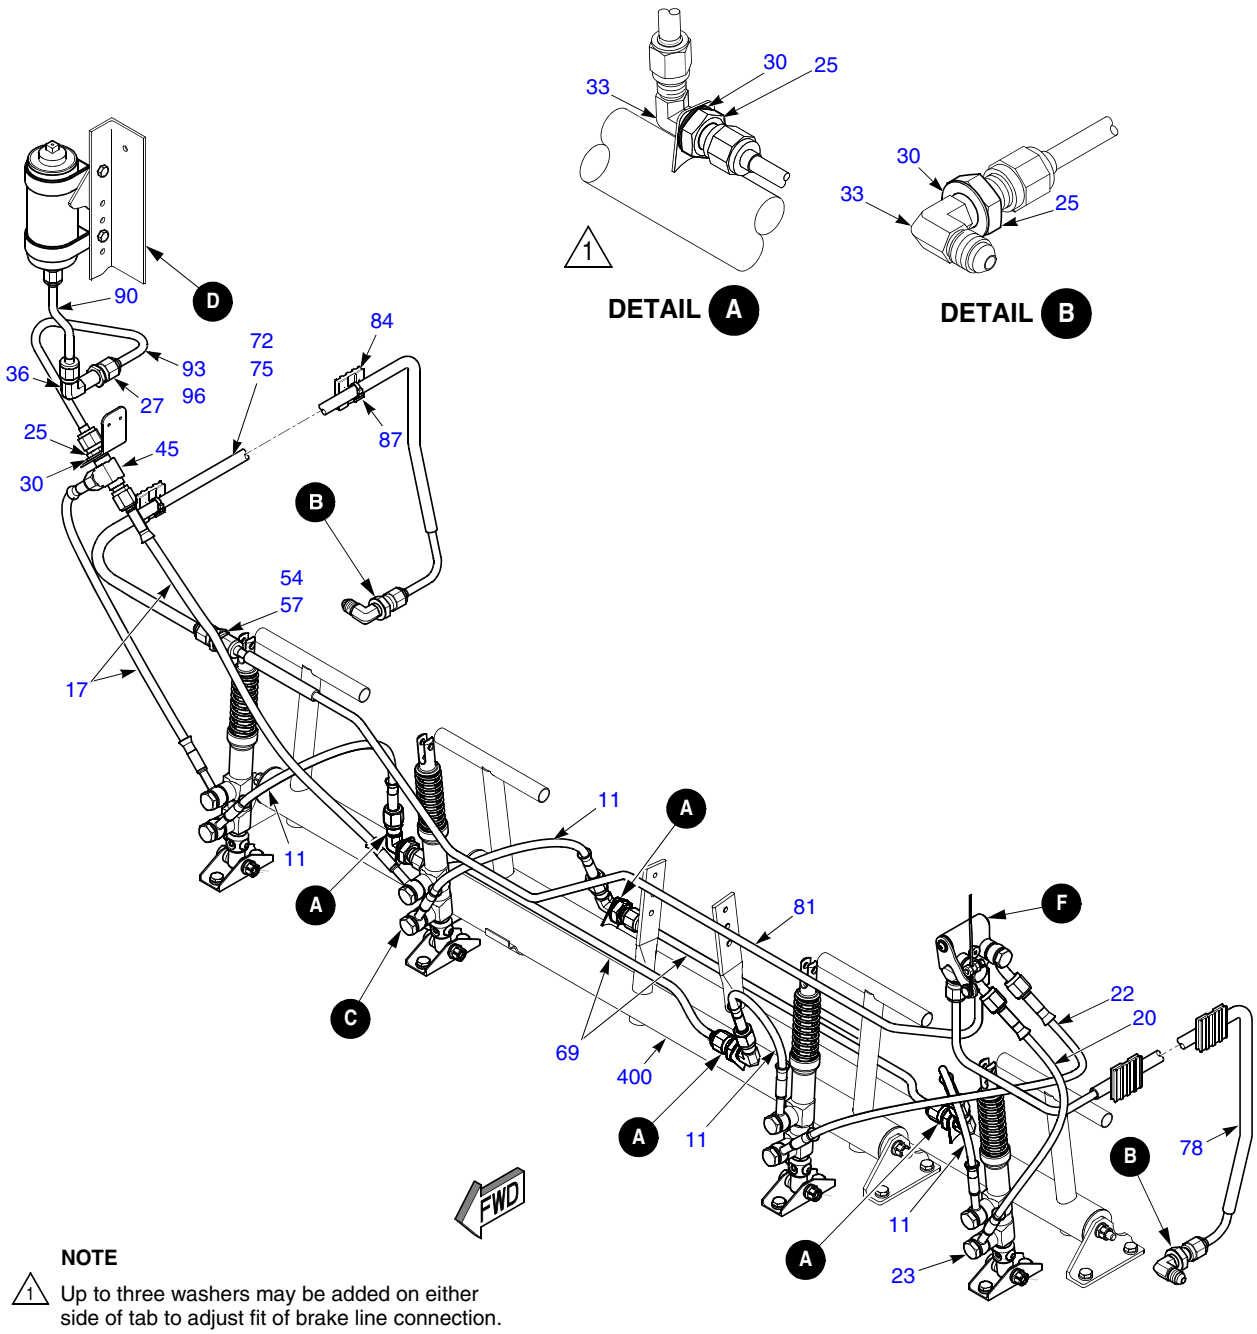

NOTE

1 Up to three washers may be added on either side of tab to adjust fit of brake line connection.

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437 after SB2X-32-21.

SR22_PC32_2159

Figure-01

Brake System - Serials 22-0002 thru 22-2437 after SB2X-32-21 (2 of 8)

EFFECTIVITY:
Serials 22-0002 thru 22-2437 after SB2X-32-21

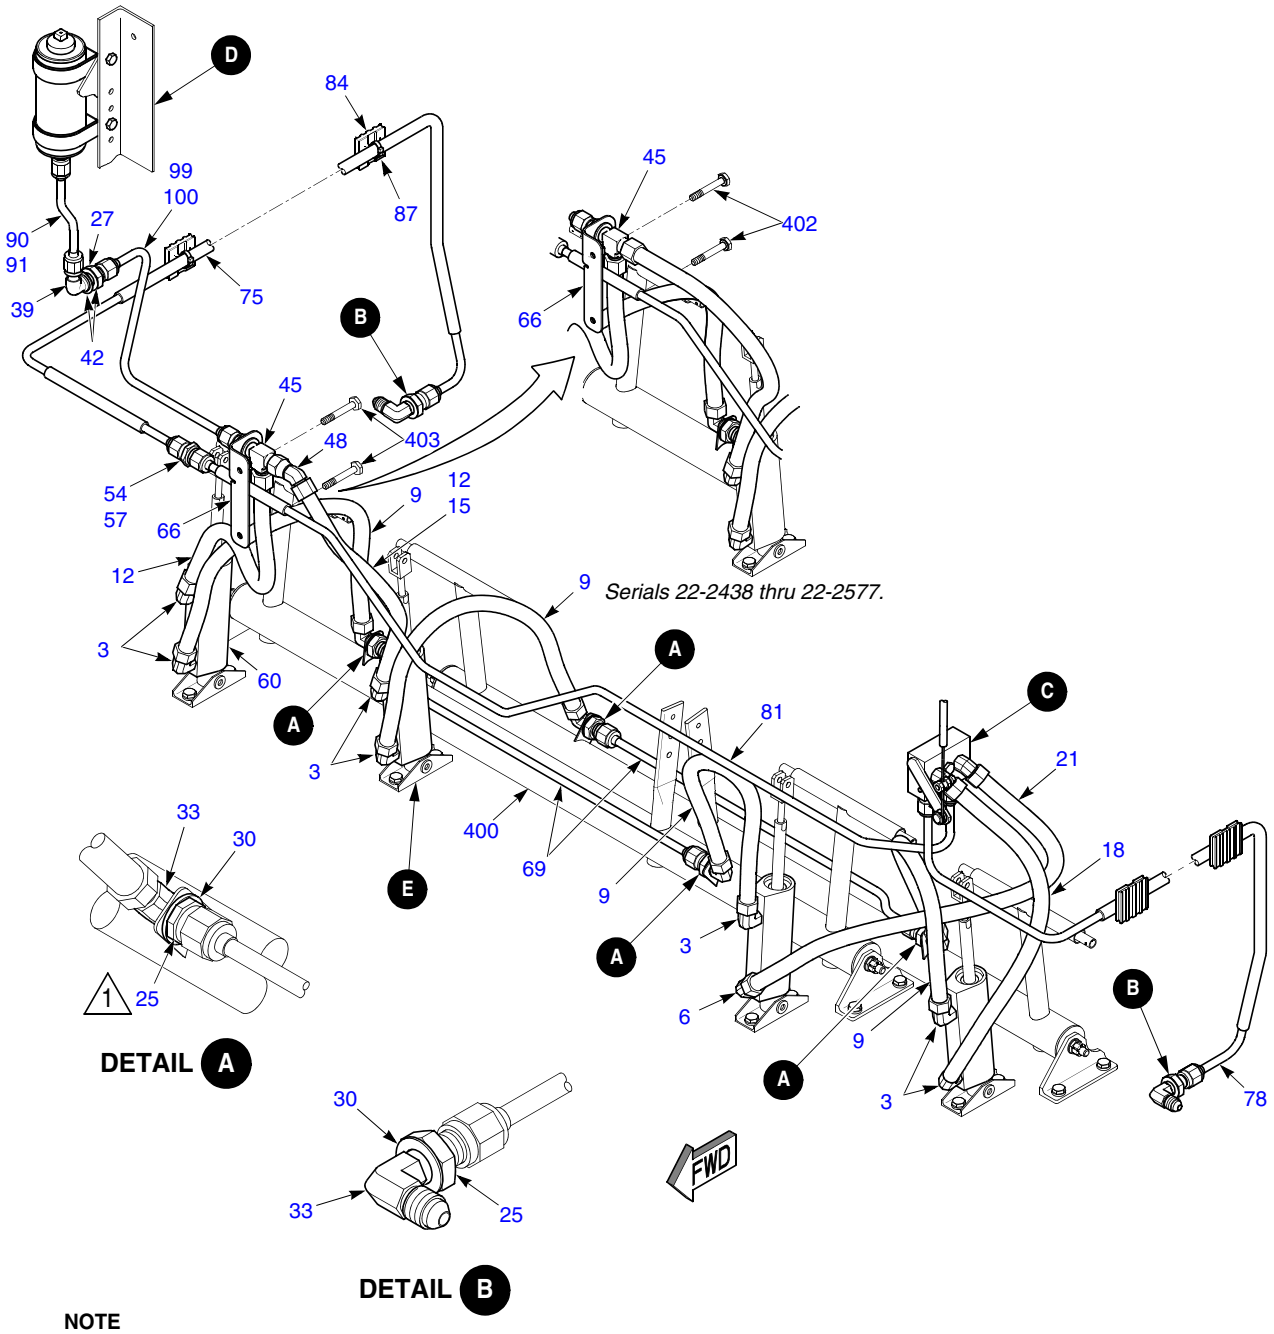

NOTE

1 Up to three washers may be added on either side of tab to adjust fit of brake line connection.

Serials 22-2438 thru 22-4030, 22-4032, 22-4045 before SB2X-32-21, 22T-0001 thru 22T-0656, 22T-0658 thru 22T-0689 before SB2X-32-21.

SR22_PC32_1606C

Figure-01

Brake System - Serials 22-2438 - 22-4045 before SB2X-32-21, 22T-0001 - 22T-0689 before SB2X-32-21 (3 of 8)

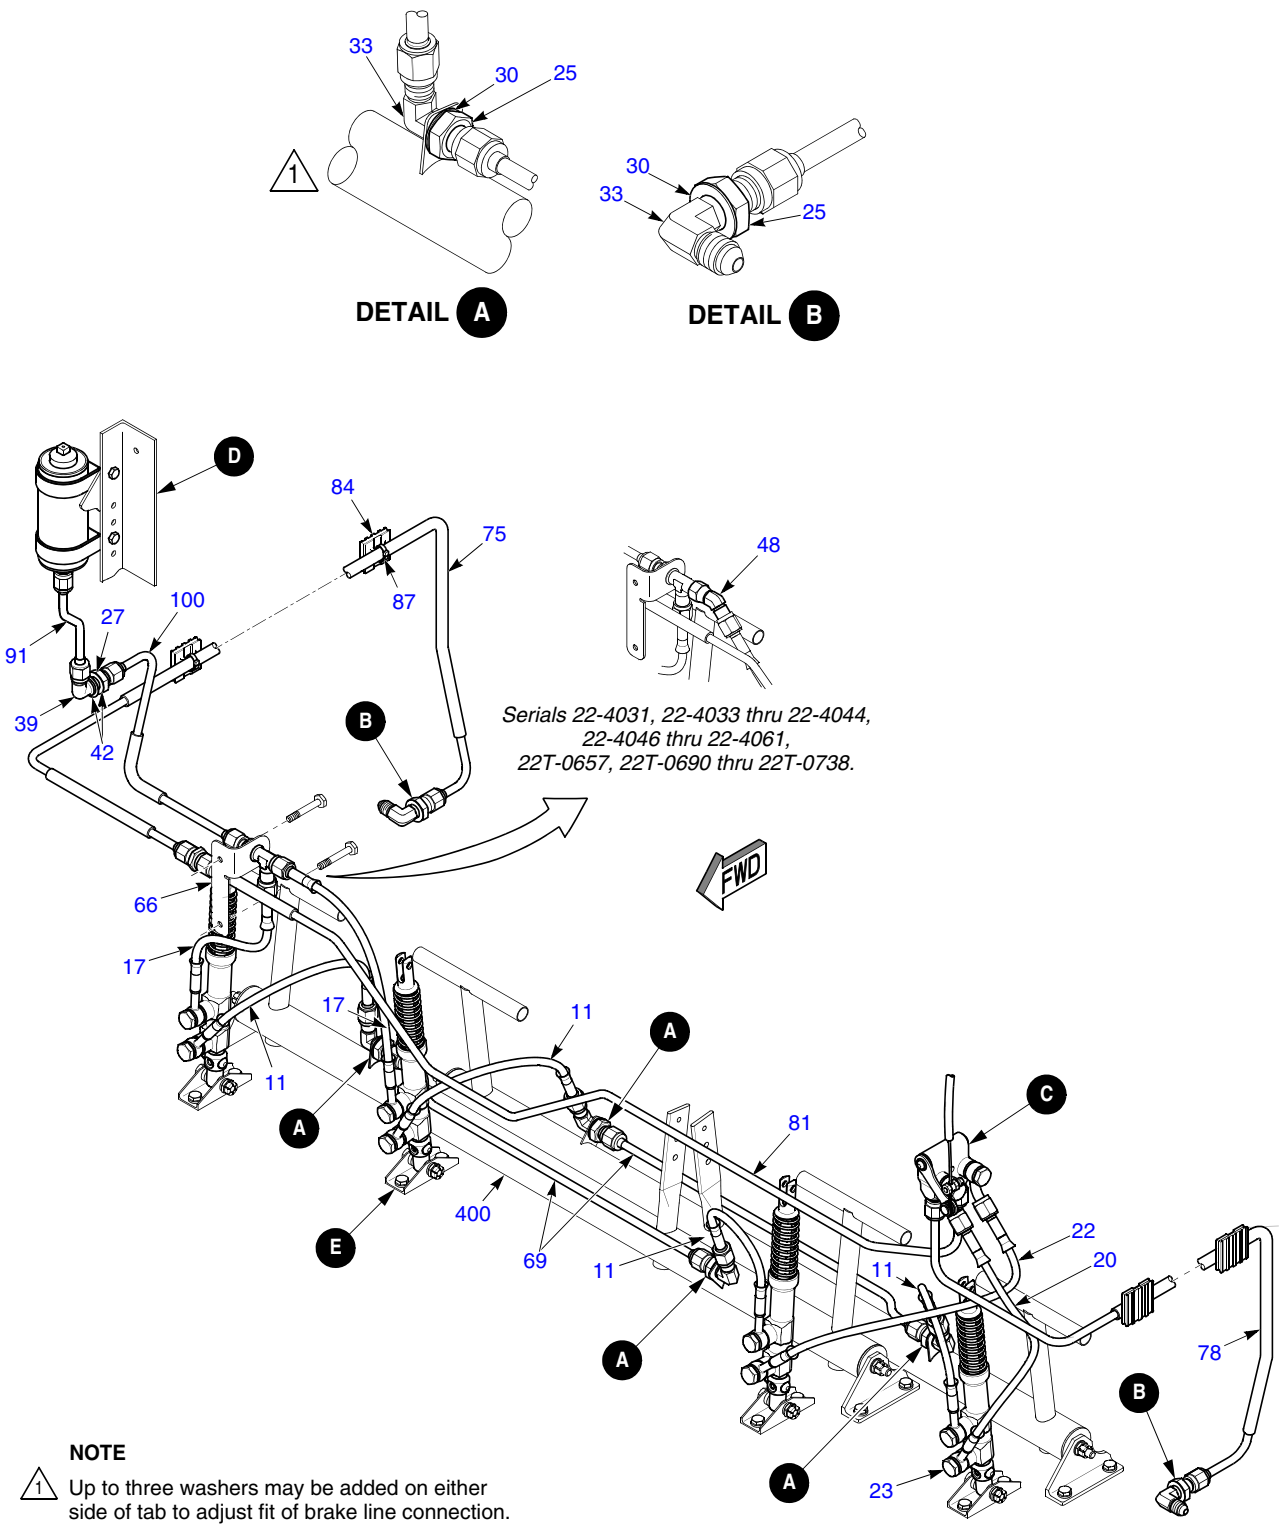

NOTE

1 Up to three washers may be added on either side of tab to adjust fit of brake line connection.

Serials 22-2438 thru 22-4030, 22-4032, 22-4045 after SB2X-32-21,
22-4031, 22-4033, 22-4046 & subs, 22T-0001 thru 22T-0656,
22T-0658 thru 22T-0689 after SB2X-32-21, 22T-0657, 22T-0690 & subs.

SR22_PC32_2130A

Figure-01

Brake System - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (4 of 8)

EFFECTIVITY:
All

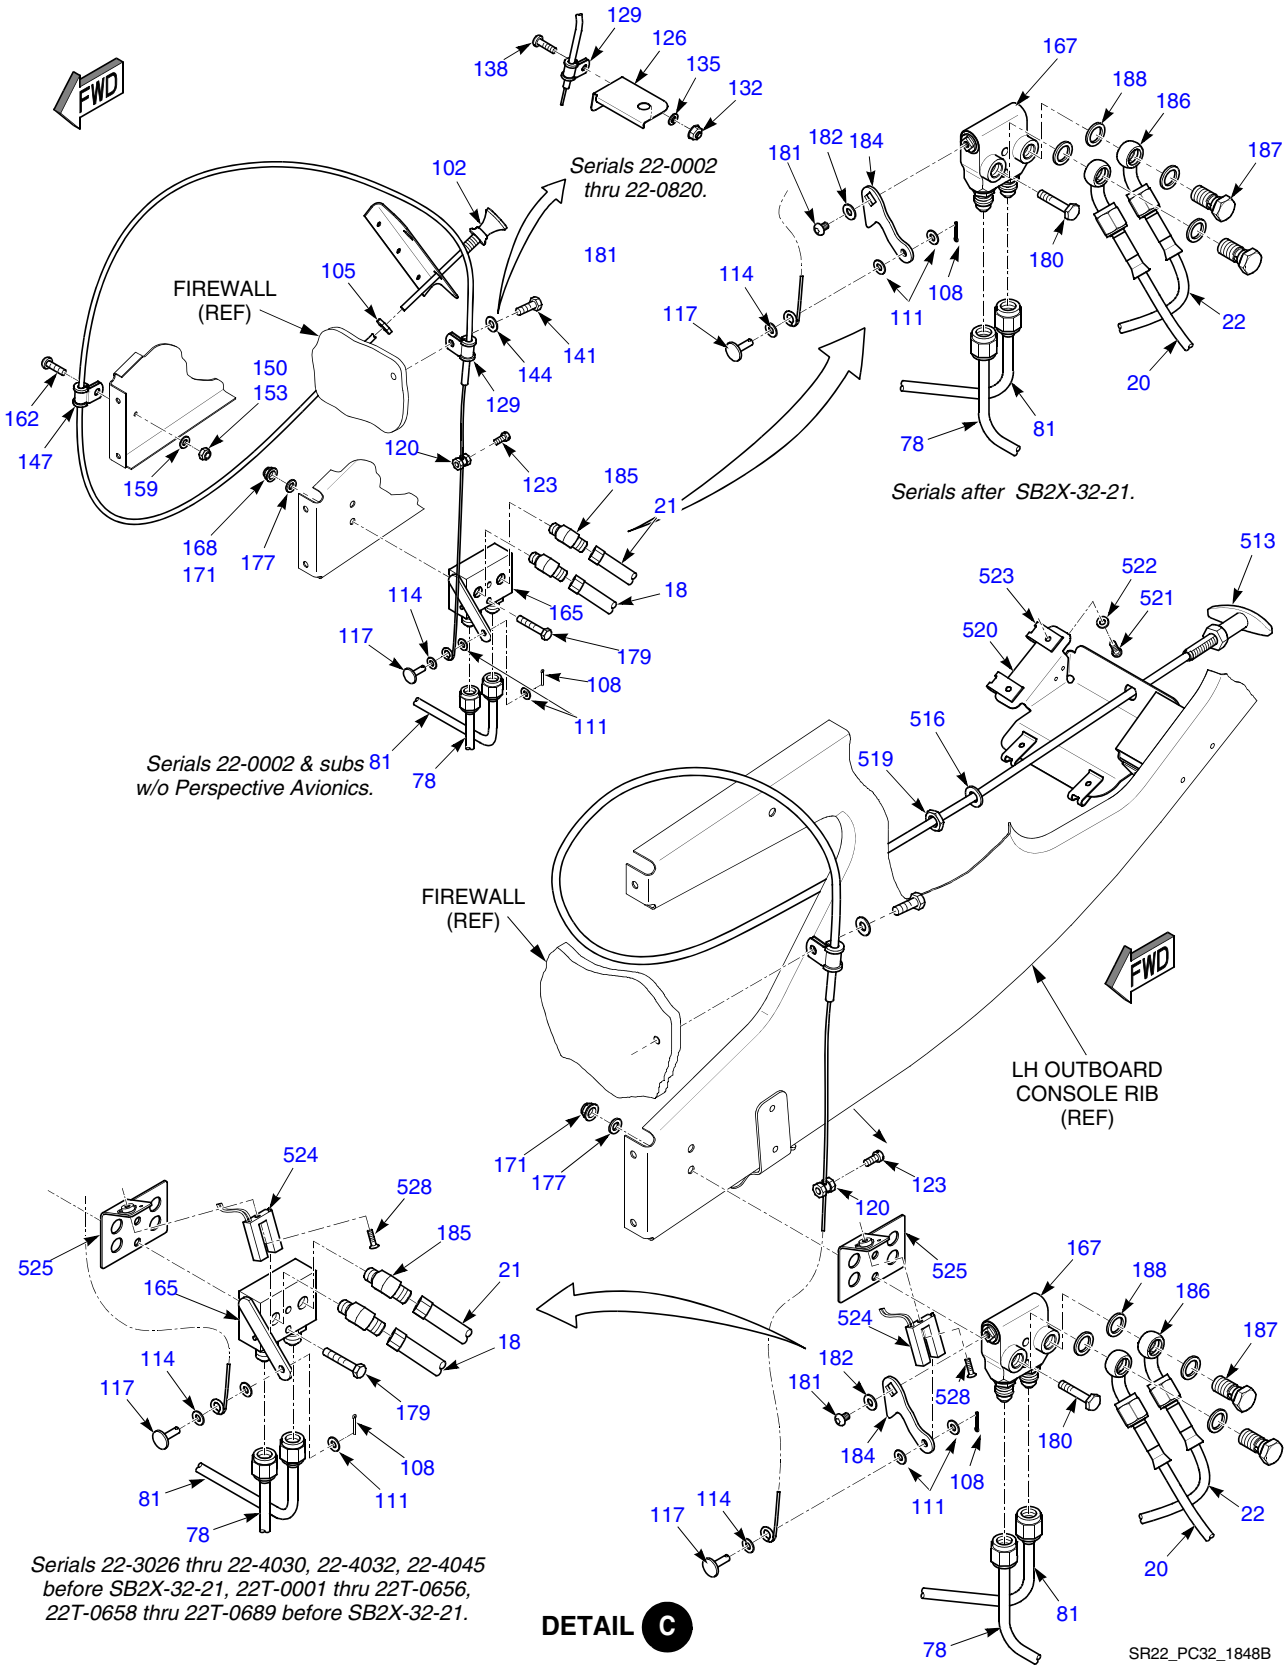

Figure-01
Brake System (5 of 8)

EFFECTIVITY:
All

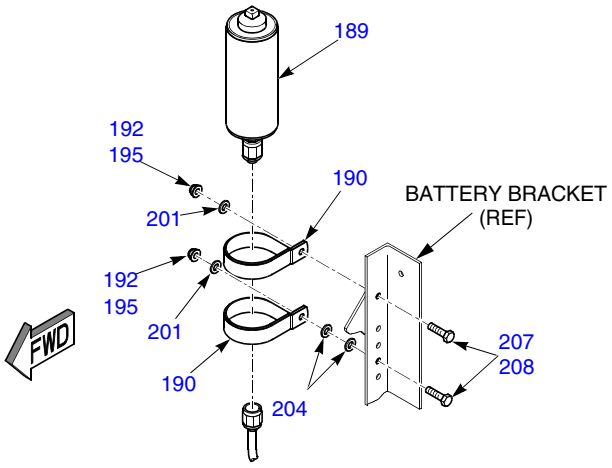

DETAIL D

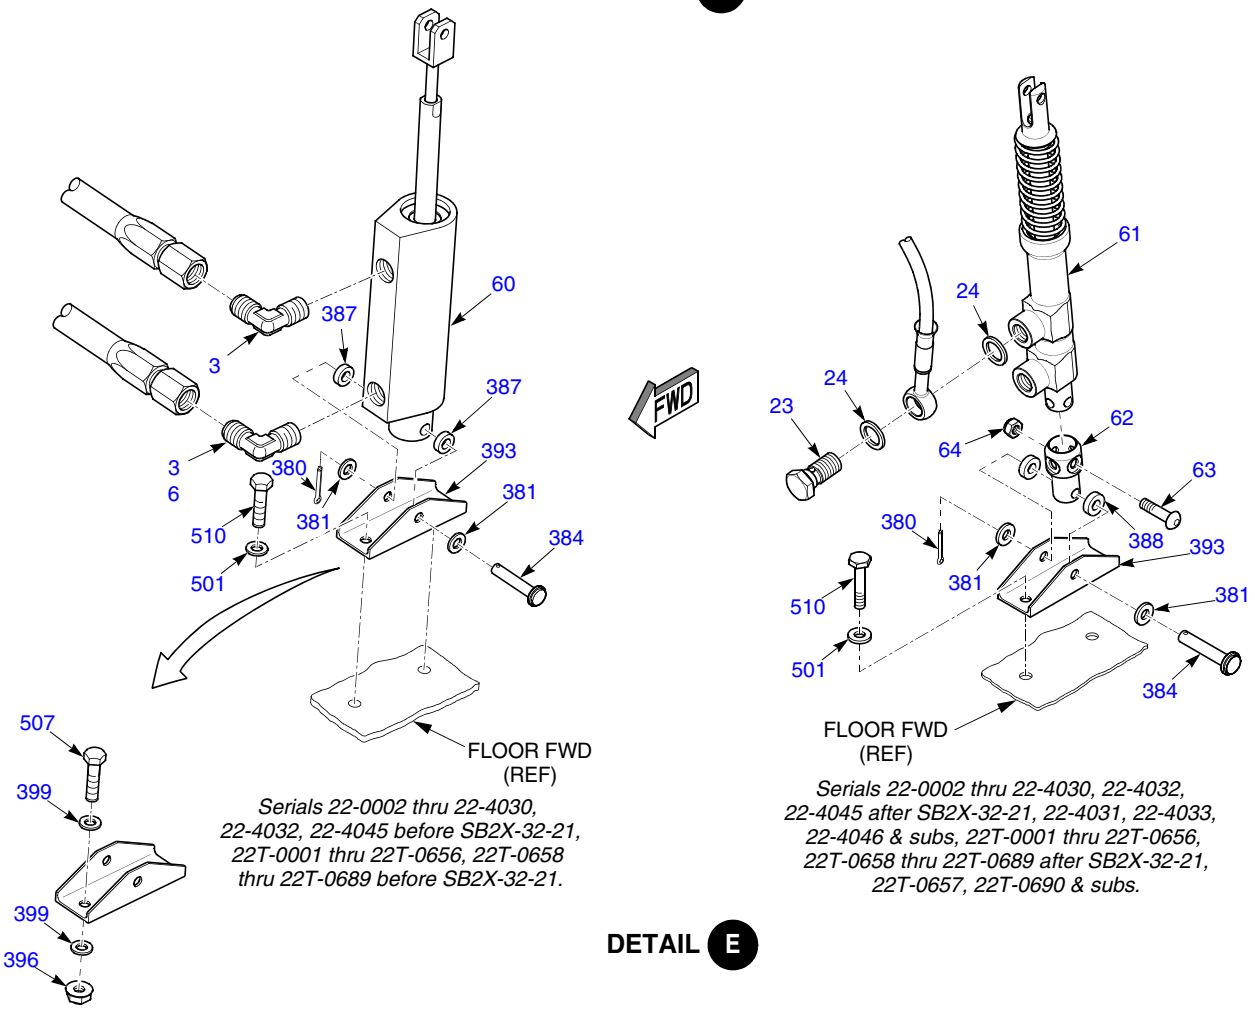

Serials 22-0002 thru 22-4030, 22-4032, 22-4045 before SB2X-32-21, 22T-0001 thru 22T-0656, 22T-0658 thru 22T-0689 before SB2X-32-21.

Serials 22-0002 thru 22-4030, 22-4032, 22-4045 after SB2X-32-21, 22-4031, 22-4033, 22-4046 & subs, 22T-0001 thru 22T-0656, 22T-0658 thru 22T-0689 after SB2X-32-21, 22T-0657, 22T-0690 & subs.

DETAIL E

Serials 22-0002 thru 22-1072.

SR22_PC32_1608C

Figure-01
Brake System (6 of 8)

EFFECTIVITY:
All

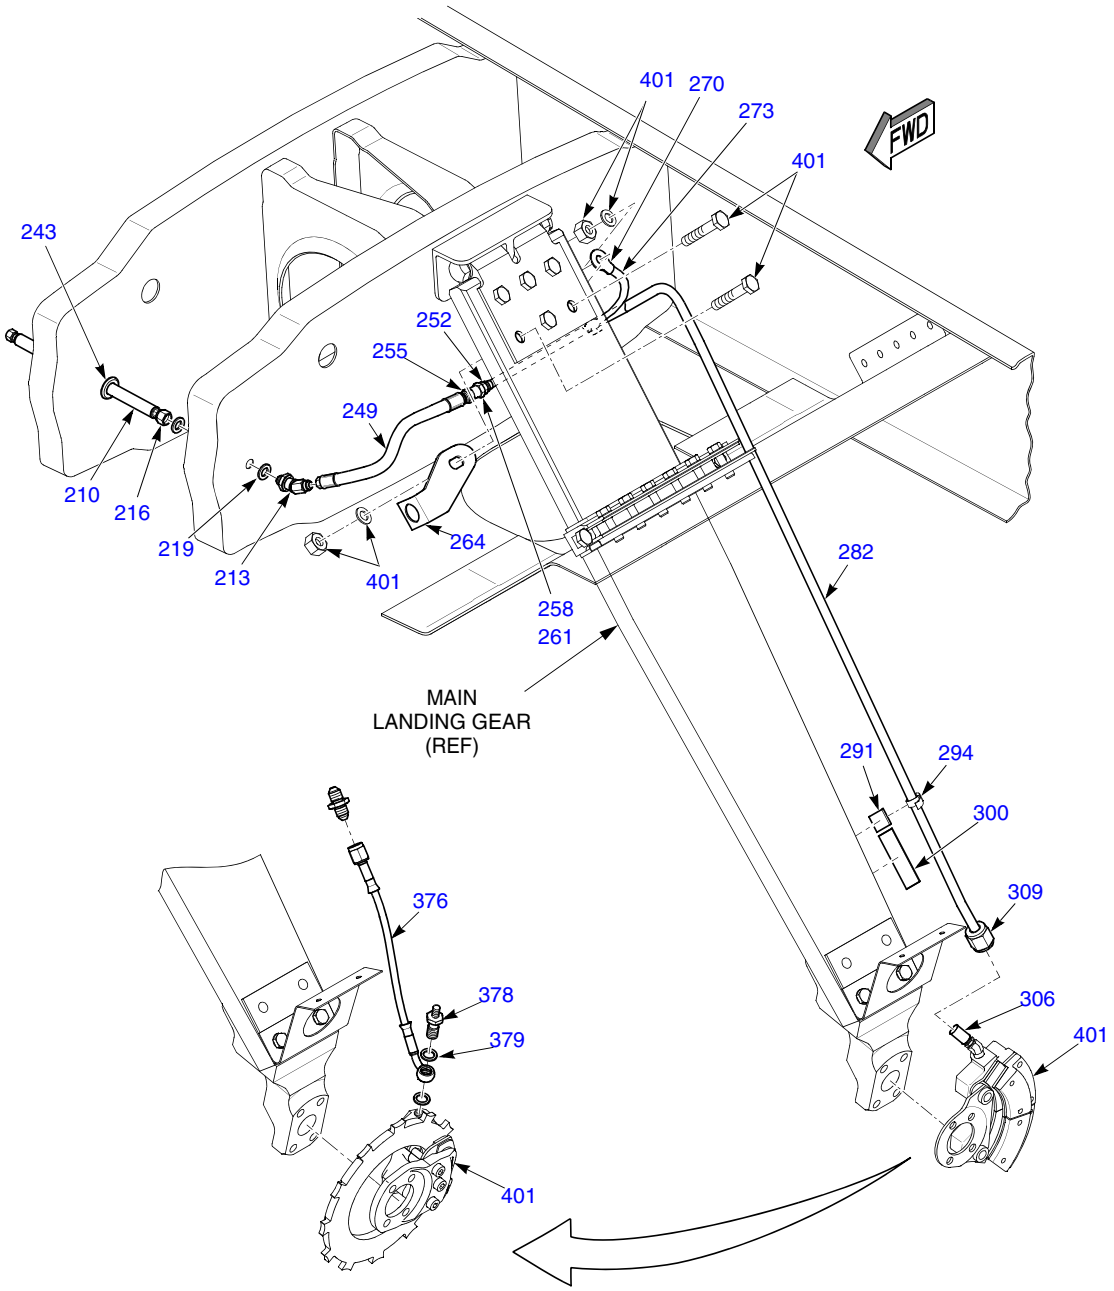

Serials after SB2X-32-21.

DETAIL F

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2420 thru 22-2437.

SR22_PC32_1296D

Figure-01

Brake System - Serials 22-0002 thru 22-2437 (7 of 8)

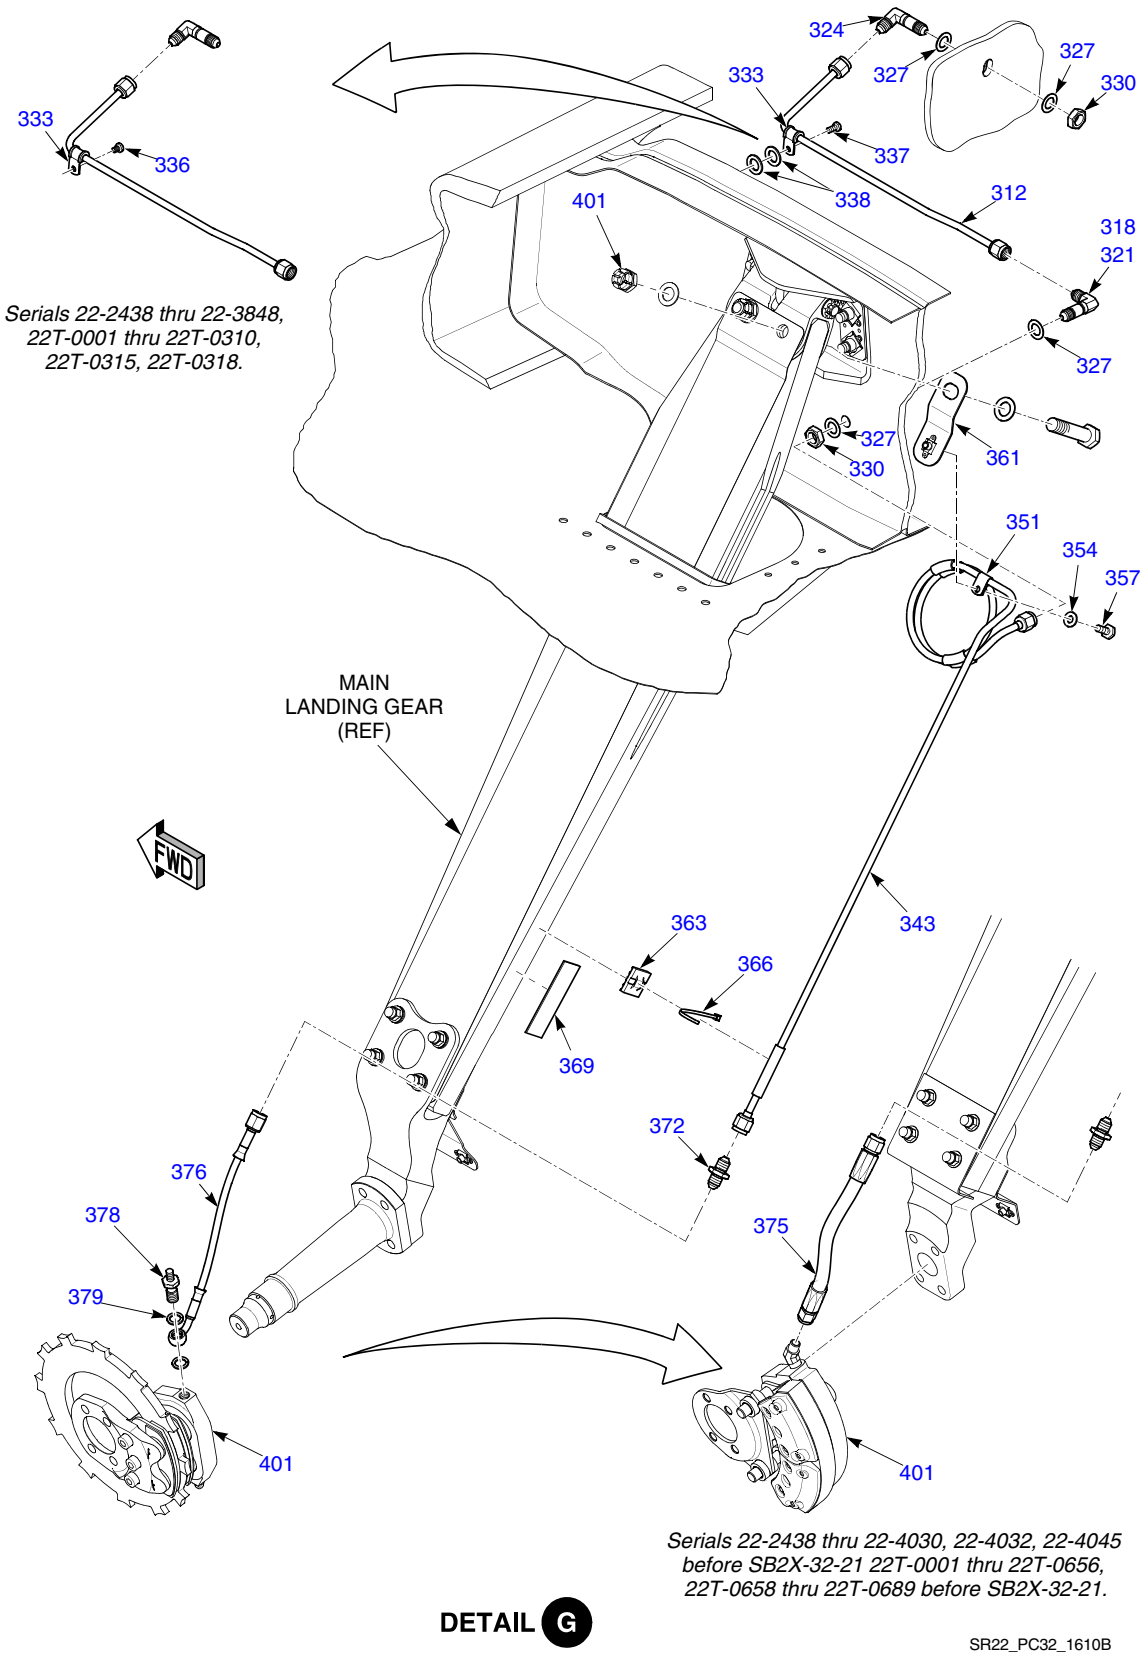

Figure-01

Brake System - Serials 22-2438 & subs, 22T-0001 & subs (8 of 8)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		BRAKE SYSTEM INSTALLATION	0002 / 0001	/	NP
	3	MS20822-4D			·ELBOW FITTING	0002 / 0001	4045 / 0689	7
	6	MS20823-4D			·ELBOW FITTING	0002 / 0001	4045 / 0689	1
	9	350-4-0150			·BRAKE HOSE	0002	1839	5
-	10	50555-150			·BRAKE HOSE	1840 / 0001	4045 / 0689	4
	11	31490-002	~		·BRAKE HOSE	4046 / 0690	/	4
	12	350-4-0120			·BRAKE HOSE	1840	2284	1
						2438	2577	2
-	13	50555-120			·BRAKE HOSE	2578 / 0001	4045 / 0689	1
	15	350-4-0104			·BRAKE HOSE	2285	2437	1
-	16	50555-105			·BRAKE HOSE	2578 / 0001	4045 / 0689	1
	17	31490-003	~		·BRAKE HOSE	4046 / 0690	/	2
	18	350-4-0164			·BRAKE HOSE	0002	2437	2
-	19	50555-164			·BRAKE HOSE	2438 / 0001	4045 / 0689	1
	20	31490-004	~		·BRAKE HOSE	4046 / 0690	/	1
	21	50555-200			·BRAKE HOSE	0002 / 0001	4045 / 0689	1
	22	31490-005	~		·BRAKE HOSE	4046 / 0690	/	1
	23	31490-006	~	A	·BANJO BOLT	4046 / 0690	/	8
	24	31490-007	~	A	·BANJO WASHER	4046 / 0690	/	8
	25	AN924-4D		A	·NUT	0002 / 0001	/	7
	27	AN924-4		A	·NUT	0002 / 0001	/	1
	30	NAS1149D0732K	$	A	·WASHER	0002 / 0001	/	AR
	33	AN833-4D			·ELBOW FITTING	0002 / 0001	/	6
	36	12450-001			·COMPOSITE BULKHEAD FITTING	0002	2437	1
	39	AN833-4			·COMPOSITE BULKHEAD FITTING	2438 / 0001	/	1
	42	NAS1149D0732K		A	·WASHER	2438 / 0001	/	2
	45	AN804-4D			·BULKHEAD TEE FITTING	0002 / 0001	/	1
	48	51939-001			·45° ELBOW FITTING	2578 / 0001	4061 / 0738	1
					ALTERNATE FOR P/N MS51522B4			
-	51	MS51522B4			·45° ELBOW FITTING	2578 / 0001	4061 / 0738	1
					ALTERNATE FOR P/N 51939-001			
	54	AN815-4D			·UNION	0002 / 0001	/	1
					ALTERNATE FOR P/N AS5174D0404			
	57	AS5174D0404			·UNION	0002 / 0001	/	1
					ALTERNATE FOR P/N AN815-4D			
	60	14269-001			·MASTER CYLINDER	0002 / 0001	4045 / 0689	4
	61	31393-001	~		·MASTER CYLINDER	4046 / 0690	/	4
	62	31393-003	~		·EXTENDER	4046 / 0690	/	4
	63	31393-004	~	A	·SCREW	4046 / 0690	/	4
	64	31393-005	~	A	·NUT	4046 / 0690	/	4
-	65	11553-001			·BRAKE LINE ASSEMBLY	0002	0299	2
	66	21828-002			·BRACKET	2438 / 0001	/	1
	69	11553-002			·BRAKE LINE ASSEMBLY	0300 / 0001	/	2
	72	11646-002			·BRAKE LINE ASSEMBLY	0002	1906	1
					FOR SPARES USE P/N 11646-003			
	75	11646-003			·BRAKE LINE ASSEMBLY	1907 / 0001	/	1
	78	11513-002			·BRAKE LINE ASSEMBLY	0002 / 0001	/	1
	81	11206-001			·BRAKE LINE ASSEMBLY	0002 / 0001	/	1
	84	50132-001	@	A	·TIE DOWN	0002 / 0001	/	AR
	87	MS3367-1-9	@	A	·STRAP	0002 / 0001	/	AR
	90	13837-001			·BRAKE LINE ASSEMBLY	0002	3615	1
	91	26618-001			·BRAKE LINE ASSEMBLY	3615 / 0001	/	1
	93	12008-002			·BRAKE LINE ASSEMBLY	0002	1676	1
					FOR SPARES USE P/N 12008-003			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	96	12008-003			·BRAKE LINE ASSEMBLY	1677	2437	1
	99	21812-002			·BRAKE LINE ASSEMBLY	2438	3195	1
					FOR SPARES USE P/N 21812-003			
	100	21812-003			·BRAKE LINE ASSEMBLY	3196 / 0001	/	1
	102	50551-052	+		·PARKING BRAKE CABLE ASSEMBLY	0002		1
	105	PRT OF ITM 102	+	A	·NUT	0002		1
	108	MS24665-134		A	·COTTER PIN	0002 / 0001	/	1
	111	NAS1149F0316P		A	·WASHER	0002 / 0001	/	2
	114	NAS1149F0332P		A	·WASHER	0002 / 0001	/	1
	117	MS20392-2C9		A	·CLEVIS PIN	0002 / 0001	/	1
	120	50553-001			·CABLE STOP	0002 / 0001	/	1
	123	AN503-8-6		A	·SCREW	0002 / 0001	/	1
	126	12440-001			·BRACKET	0002	0820	1
	129	MS21919WDG4		A	·CLAMP	0002 / 0001	/	1
	132	MS21045L3		A	·NUT	0002	0820	1
	135	NAS1149F0363P		A	·WASHER	0002	0820	1
	138	MS27039-1-10		A	·SCREW	0002	0820	1
	141	AN3-4A		A	·BOLT	0821 / 0001	/	1
	144	NAS1149F0332P		A	·WASHER	0821 / 0001	/	1
	147	MS21919WDG4	+	A	·CLAMP	0002		1
	150	MS21045L3		A	·NUT	0002	2437	1
	153	MS21042-3	+	A	·NUT	2438		1
					ALTERNATE FOR P/N MS21044N3			
-	156	MS21044N3	+	A	·NUT	2438		1
					ALTERNATE FOR P/N MS21042-3			
	159	NAS1149F0363P	+	A	·WASHER	0002		1
	162	MS27039-1-10	+	A	·SCREW	0002		1
	165	50204-001			·PARKING BRAKE	0002 / 0001	4045 / 0689	1
-	166	31394-001			·PARKING BRAKE	4046 / 0690	4064 / 0743	1
	167	31394-002	~		·PARKING BRAKE	4065 / 0744		1
	168	MS21045L3		A	·NUT	0002 / 0001	/	2
	171	MS21042-3		A	·NUT	0821 / 0001	/	2
					ALTERNATE FOR P/N MS21044N3			
-	174	MS21044N3		A	·NUT	0821 / 0001	/	2
					ALTERNATE FOR P/N MS21042-3			
	177	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	179	AN3-11A		A	·BOLT	0002 / 0001	4045 / 0689	2
	180	AN3-10A	~	A	·BOLT	4046 / 0690	/	2
	181	PRT OF ITM 166, 167	~	A	·SCREW	4046 / 0690	/	1
	182	PRT OF ITM 166, 167	~	A	·WASHER	4046 / 0690	/	1
-	183	PRT OF ITM 166			·ACTUATION ARM	4046 / 0690	/	1
	184	PRT OF ITM 167	~		·ACTUATION ARM	4065 / 0744		1
	185	MS20823-4D			·45 DEG ELBOW FITTING (PIPE TO FLARE)	0002 / 0001	4045 / 0689	2
	186	31490-008	~		·45° BANJO ADAPTER	4046 / 0690	/	2
	187	31490-006	~	A	·BANJO BOLT	4046 / 0690	/	2
	188	31490-007	~	A	·BANJO WASHER	4046 / 0690	/	4
	189	12006-001			·RESERVOIR, BRAKE FLUID	0002 / 0001	/	1
	190	MS21919WDG26		A	·CLAMP	0002 / 0001	/	2
	192	MS21045L3		A	·NUT	0002	2437	2
	195	MS21042-3		A	·NUT	2438 / 0001	/	2
					ALTERNATE FOR P/N MS21044N3			
-	198	MS21044N3		A	·NUT	2438 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					ALTERNATE FOR P/N MS21042-3			
	201	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	204	NAS1149F0363P		A	·WASHER	2438 / 0001	/	2
	207	AN3-6A		A	·BOLT	0002 / 0001	4045 / 0689	2
	208	AN3-5A	~	A	·BOLT	4046 / 0690	/	2
	210	12647-001			·TUBE ASSEMBLY	0002	2437	1
	213	AN837-4D		A	·BULKHEAD FITTING	0002	2437	1
	216	AN924-4D		A	·NUT	0002	2437	1
	219	NAS1149D0716K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0716J			
-	222	NAS1149D0716J		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0716K			
-	225	MS21919WDG4		A	·CLAMP	0002	0007	1
-	228	MS27039-1-10		A	·SCREW CLAMPS	0002	0007	1
-	231	NAS1149D0332K		A	·WASHER	0002	0007	1
-	234	13993-003		A	·CLIP, SYSTEM RESTRAINT, STANDARD	0002	0007	1
-	237	MS35489-46			·GROMMET	0002	0007	1
					ALTERNATE FOR P/N MS21266-4			
-	240	MS21266-4			·GROMMET	0002	0007	1
					ALTERNATE FOR P/N MS35489-46			
	243	MS35489-46			·GROMMET	0008	2437	1
					ALTERNATE FOR P/N MS35489-75			
-	246	MS35489-75			·GROMMET	0008	2437	1
					ALTERNATE FOR P/N MS35489-46			
	249	50555-072			·BRAKE HOSE ASSEMBLY	0002	2437	1
	252	AN832-4D		A	·BULKHEAD FITTING	0002	2437	1
	255	AN924-4D		A	·NUT	0002	2437	1
	258	NAS1149D0763K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0716K			
	261	NAS1149D0716K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0763K			
	264	12776-001			·BRACKET, BRAKE LINE, STRUT, LANDING GEAR, LH	0002	2437	1
-	267	12776-002			·BRACKET, BRAKE LINE, STRUT, LANDING GEAR, RH	0002	2437	1
	270	MS20659-148			·TERMINAL RING, 3/8", #2AWG	0002	2437	1
	273	50215-001			·TUBULAR BRAID	0002	2437	1
-	276	50743-451		A	·BREEZE CLAMP	0002	2437	1
-	279	11727-001	#		·BRAKE LINE, MAIN LANDING GEAR, LH	0002	0005	1
					FOR SPARES USE P/N 14445-001			
	282	14445-001			·BRAKE LINE, MAIN LANDING GEAR, LH	0006	2437	1
-	285	11727-002	#		·BRAKE LINE, MAIN LANDING GEAR, RH	0002	0005	1
					FOR SPARES USE P/N 14445-002			
-	288	14445-002			·BRAKE LINE, MAIN LANDING GEAR, RH	0006	2437	1
	291	50132-001	@	A	·TIE DOWN	0002	2437	AR
	294	MS3367-1-9	@	A	·STRAP	0002	2437	AR
-	297	13877-102			·RUBBER SHEET	0002	0005	1
	300	14447-102			·RUBBER SHEET	0006	2437	1
-	303	50555-046			·BRAKE HOSE ASSEMBLY	0002	0005	1
					FOR SPARES USE P/N 50555-072			
	306	50555-072			·BRAKE HOSE ASSEMBLY	0006	2437	1
	309	AN815-4D			·UNION	0002	2437	1
	312	17401-001			·BRAKE LINE LH	2438 / 0001	/	1
-	315	17402-002			·BRAKE LINE RH	2438 / 0001	/	1
	318	AN833-4D			·ELBOW FITTING	2438 / 0001	/	1
					FOR SPARES USE P/N 18734-001			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	321	18734-001			·ELBOW FITTING	2438 / 0001	/	1
	324	AN833-4D			·ELBOW FITTING	2438 / 0001	/	1
	327	NAS1149D0732K		A	·WASHER	2438 / 0001	/	4
	330	AN924-4D		A	·NUT	2438 / 0001	/	2
	333	MS21919WDG4		A	·CLAMP	2438 / 0001	/	1
	336	NAS1801-3-4		A	·SCREW	2438 / 0001	3848 / 0318	1
	337	NAS1801-3-6		A	·SCREW	3849 / 0319	/	1
	338	NAS1149D0363K		A	·WASHER	3849 / 0319	/	2
-	339	17345-001			·BRAKE LINE, MAIN LANDING GEAR, LH	2438	2566	1
					FOR SPARES USE P/N 29225-001			
-	342	17531-001			·BRAKE LINE, MAIN LANDING GEAR, LH	2567 / 0001	3731 / 0082	1
					FOR SPARES USE P/N 29225-001			
	343	29225-001			·BRAKE LINE, MAIN LANDING GEAR, LH	3732 / 0083	/	1
-	345	17345-002			·BRAKE LINE, MAIN LANDING GEAR, RH	2438	2576	1
					FOR SPARES USE P/N 29225-002			
-	348	17531-002			·BRAKE LINE, MAIN LANDING GEAR, RH	2577 / 0001	3731 / 0082	1
					FOR SPARES USE P/N 29225-002			
-	349	29225-002			·BRAKE LINE, MAIN LANDING GEAR, RH	3732 / 0083	/	1
	351	AN742D4		A	·CLAMP	2438 / 0001	/	1
	354	NAS1149D0332K		A	·WASHER	2438 / 0001	/	1
	357	AN3-4A		A	·BOLT	2438 / 0001	/	1
-	360	17346-001			·BRACKET, BRAKE LINE, STRUT	2438 / 0001	3869 / 0367	1
					FOR SPARES USE P/N 17346-002			
	361	17346-002			·BRACKET, BRAKE LINE, STRUT	3870 / 0368	/	1
	363	50132-001	@	A	·TIE DOWN	2438 / 0001	/	1
	366	MS3367-1-9	@	A	·STRAP	2438 / 0001	/	1
	369	50064-062			·RUBBER SHEET	2438 / 0001	/	1
	372	AN815-4D			·UNION	2438 / 0001	/	1
	375	50555-072			·BRAKE HOSE ASSEMBLY	2438 / 0001	4045 / 0689	1
	376	31490-001	~		·BRAKE HOSE ASSEMBLY	4046 / 0690	/	1
	378	31490-009	~	A	·STUDDED BANJO BOLT	4046 / 0690	/	1
	379	31490-007	~	A	·BANJO WASHER	4046 / 0690	/	2
	380	MS24665-130		A	··COTTER PIN	0002 / 0001	/	1
	381	NAS1149F0363P		A	··WASHER	0002 / 0001	/	2
	384	MS20392-2C29		A	··CLEVIS PIN	0002 / 0001	/	1
	387	NAS43DD3-12FC		A	··SPACER	0002 / 0001	4045 / 0689	2
	388	31393-002	~	A	··SPACER	4046 / 0690	/	2
-	390	11479-001			··BRACKET, MASTER CYLINDER	0002	0227	4
					FOR SPARES USE P/N 11479-002			
	393	11479-002			··BRACKET, MASTER CYLINDER	0228 / 0001	/	4
	396	MS21044N3		A	··LOCK NUT	0002	1072	2
	399	NAS1149F0363P		A	··WASHER	0002	1072	4
	501	NAS1149F0363P		A	··WASHER	1073 / 0001	/	2
-	504	AN3-7A		A	··BOLT	0002	0227	2
	507	AN3-10A		A	··BOLT	0228	1072	2
	510	AN3-10A		A	··BOLT	1073 / 0001	/	2
	513	18456-001	^		·PARKING BRAKE CABLE ASSEMBLY	3026 / 0001	/	1
	516	PRT OF ITM 513	^	A	·WASHER	3026 / 0001	/	1
	519	PRT OF ITM 513	^	A	·NUT	3026 / 0001	/	1
	520	18108-001	^		·BRACKET	3026 / 0001	/	1
	521	51969-001	^	A	·SCREW	3026 / 0001	/	4
	522	NAS1149FN832P	^	A	·WASHER	3026 / 0001	/	4
	523	50486-101	^	A	·FASTENER	3026 / 0001	/	4
	524	24511-002	^		·PARKING BRAKE POSITION SENSOR	3026 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	525	22132-001	^		·BRACKET, PARKING BRAKE POSITION SENSOR	3026 / 0001	/	1
					ALTERNATE FOR P/N 22132-002			
-	526	22132-002	^		·BRACKET, PARKING BRAKE POSITION SENSOR	3026 / 0001	/	1
					ALTERNATE FOR P/N 22132-001			
	528	MS24693BB5	^	A	·SCREW	3026 / 0001	/	1
-	531	70207-001	!		5-YEAR KIT, BRAKE HOSE SR22	0002	0005	1
-	534	70207-002	%		5-YEAR KIT, BRAKE HOSE SR22	0006	1839	1
-	537	70207-003	&		5-YEAR KIT, BRAKE HOSE SR22	1840	2299	1
-	540	70207-004	?		5-YEAR KIT, BRAKE HOSE SR22	2300	2437	1
-	543	70207-005	&		5-YEAR KIT, BRAKE HOSE SR22	2438	2577	1
-	546	70207-006	>		5-YEAR KIT, BRAKE HOSE SR22	2578 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 27-20-02			RUDDER PEDAL ASSEMBLY			
	401	RF 32-42-02			BRAKE ASSEMBLY			
	402	RF 28-20-03			FUEL SYSTEM			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0311 THRU 22T-0314, 22T-0316 THRU 22T-0317; REFER TO 22T-0319 FOR PART IDENTI-FICATION.			
					4) SERIAL NUMBER 22-4031, 22-4033 THRU 22-4044; REFER TO 22-4046 FOR PART IDENTIFICATION.			
					5) SERIAL NUMBER 22T-0657; REFER TO 22T-0690 FOR PART IDENTIFICATION.			
			$		USE UP TO 3 WASHERS ON EITHER SIDE OF TAB AS REQUIRED.			
			@		INSTALL STRAP SUCH THAT BRAKE LINE IS HELD SNUG TO TIE DOWN.			
			#		IF REPLACING P/N 11727 BRAKE LINE, P/N 50555 BRAKE HOSE ASSY MUST BE REPLACED.			
			!		CONSUMES ITEMS 9, 18, 21, 303, 306.			
			%		CONSUMES ITEMS 9, 18, 21, 306.			
			&		CONSUMES ITEMS 9, 12, 18, 21, 306.			
			?		CONSUMES ITEMS 9, 15, 18, 21, 306.			
			>		CONSUMES ITEMS 9, 12, 15, 18, 21, 306.			
			+		INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			
			^		INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.			
			~		SERIAL NUMBER 22-0002 THRU 22-4030, 22-4032, 22-4045, 22T-0001 THRU 22T-0656, 22T-0658 THRU 22T-0689 AFTER SB2X-32-21			

Intentionally Left Blank

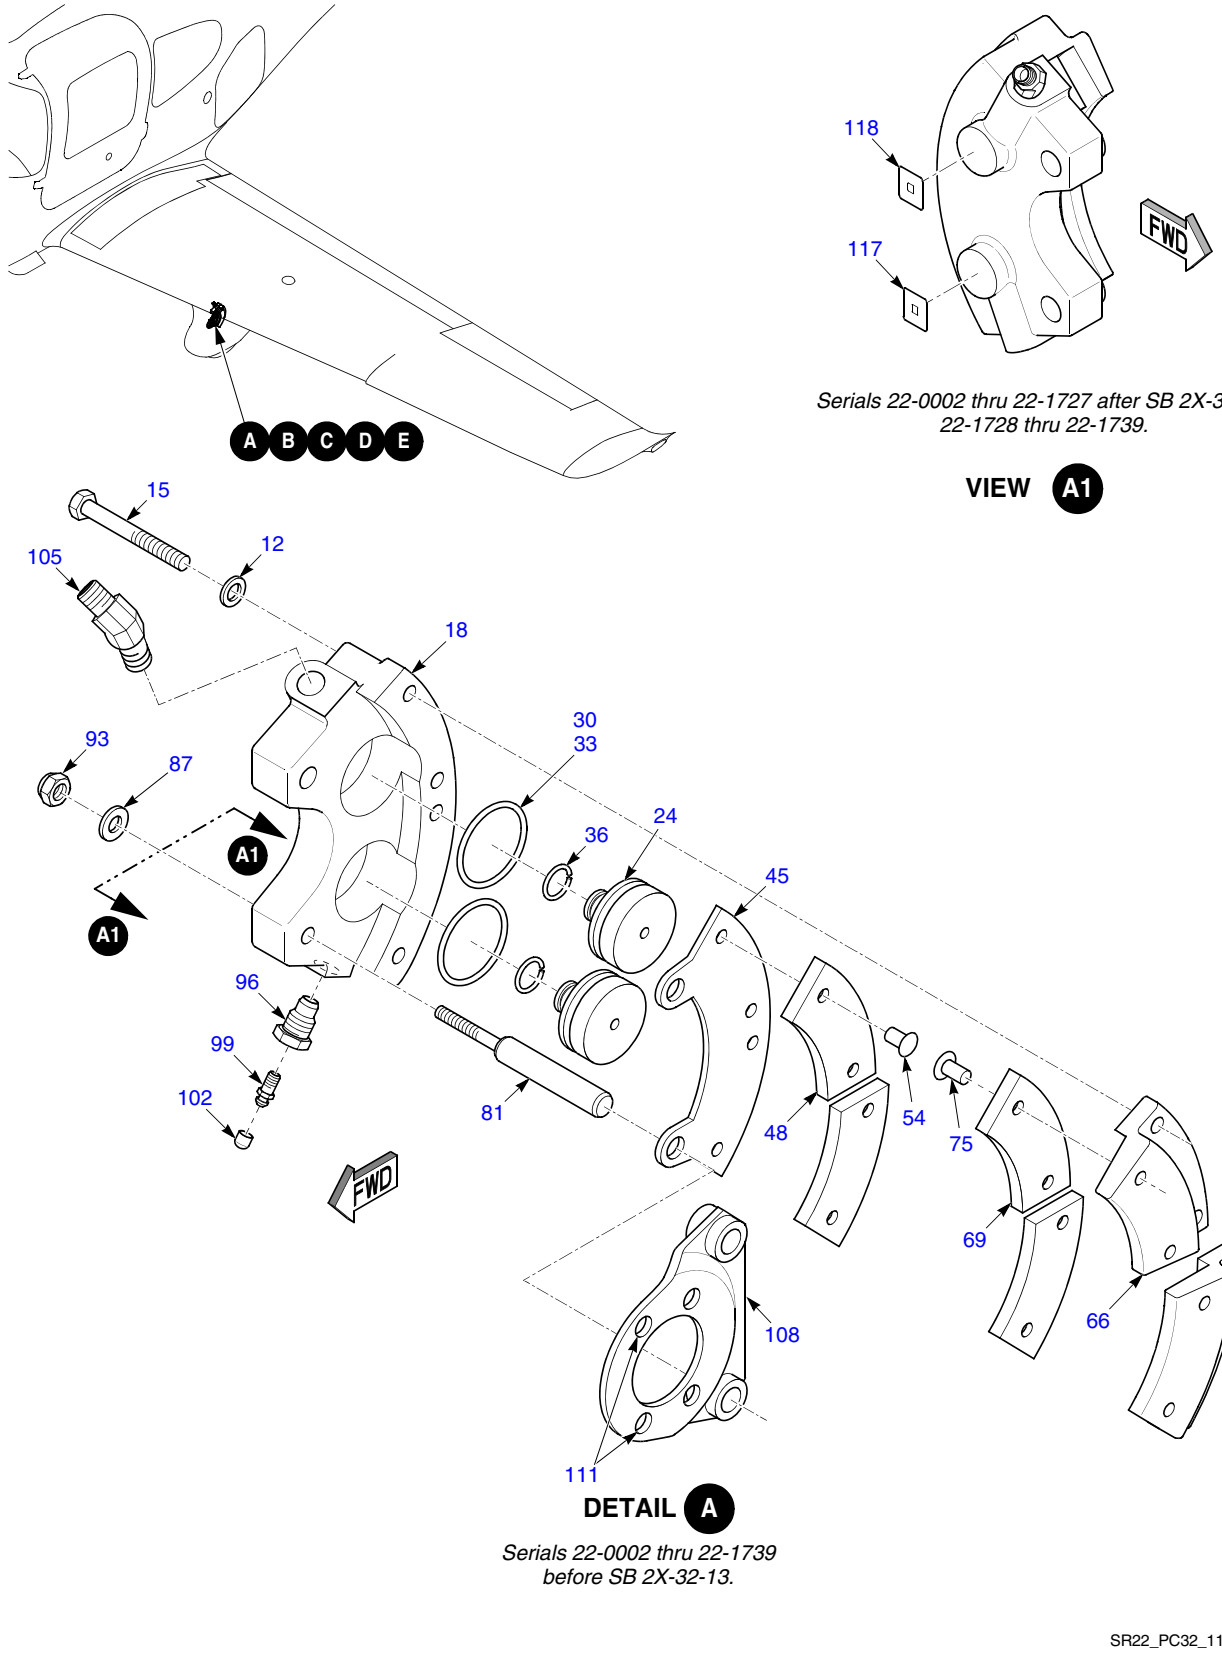

SR22_PC32_1188G

Figure-02

Brake Assembly - Serials 22-0002 - 22-1739 before SB2X-32-13 (1 of 5)

EFFECTIVITY:
Serials 22-0002 - 22-1739 before SB2X-32-13

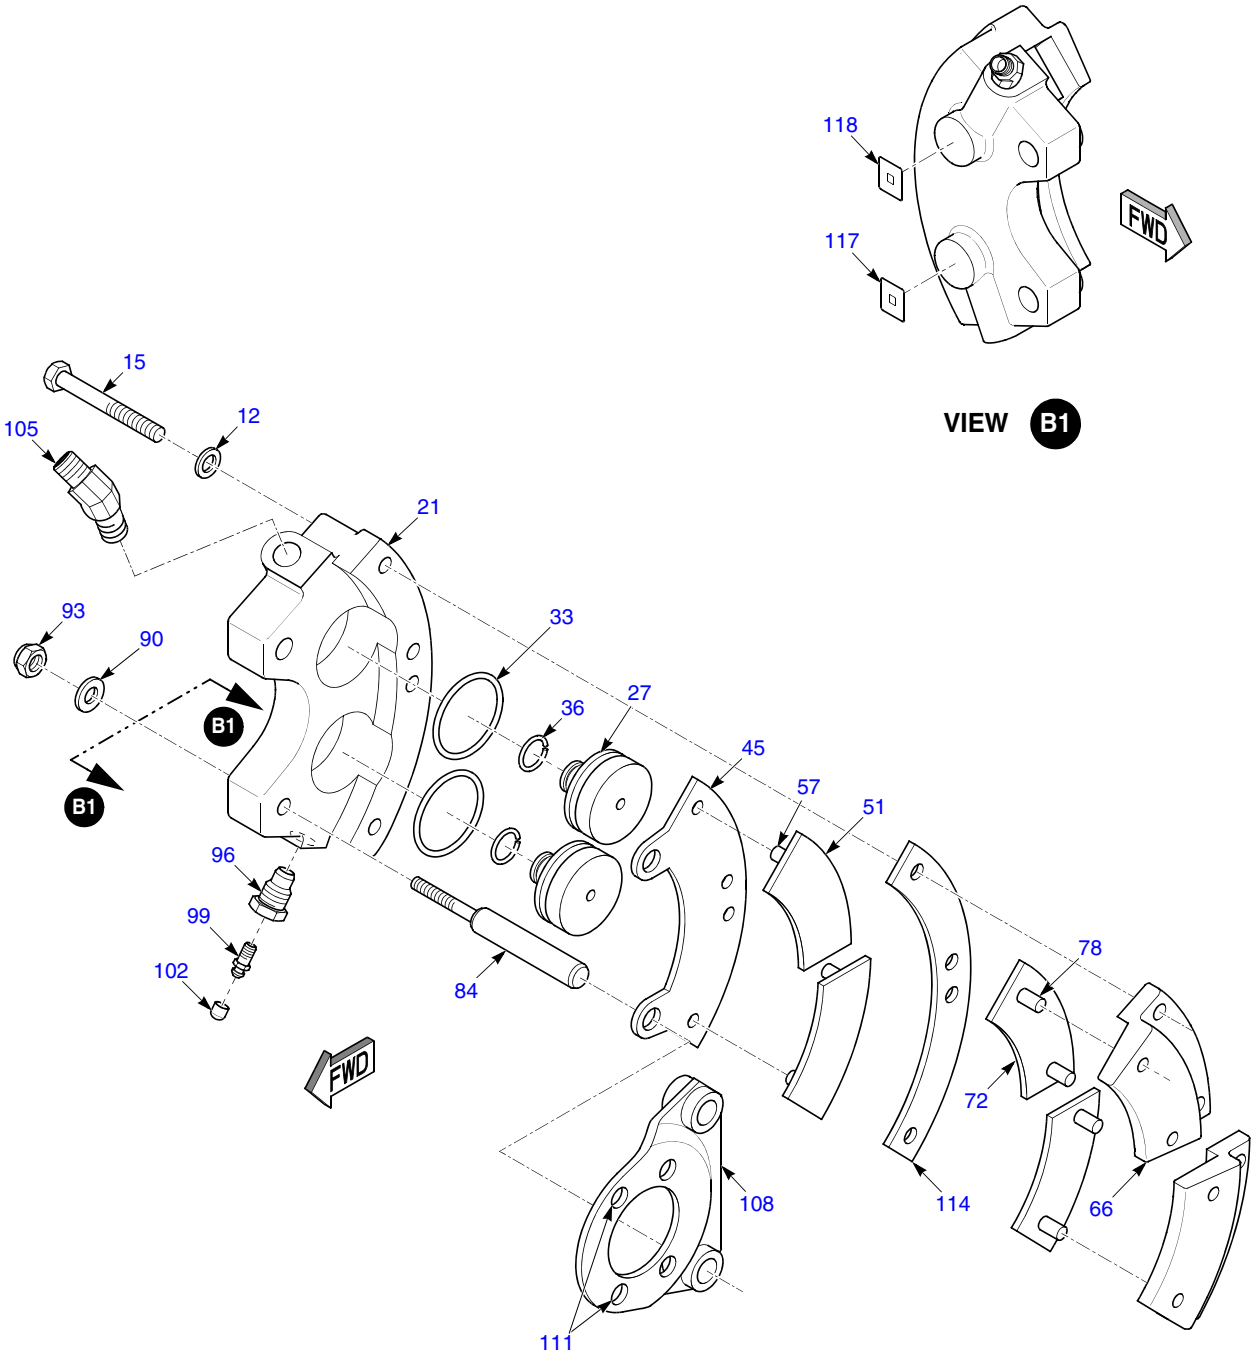

Serials 22-0002 thru 22-1739 after SB2X-32-13,
22-1740 thru 22-4045 before SB2X-32-21,
22T-0001 thru 22T-0689 before SB2X-32-21.

SR22_PC32_1998C

Figure-02

Brake Assembly - Serials 22-0002 - 22-1739 after SB2X-32-13, 22-1740 - 22-4045, 22T-0001 - 22T-0689 (2 of 5)

EFFECTIVITY:
All

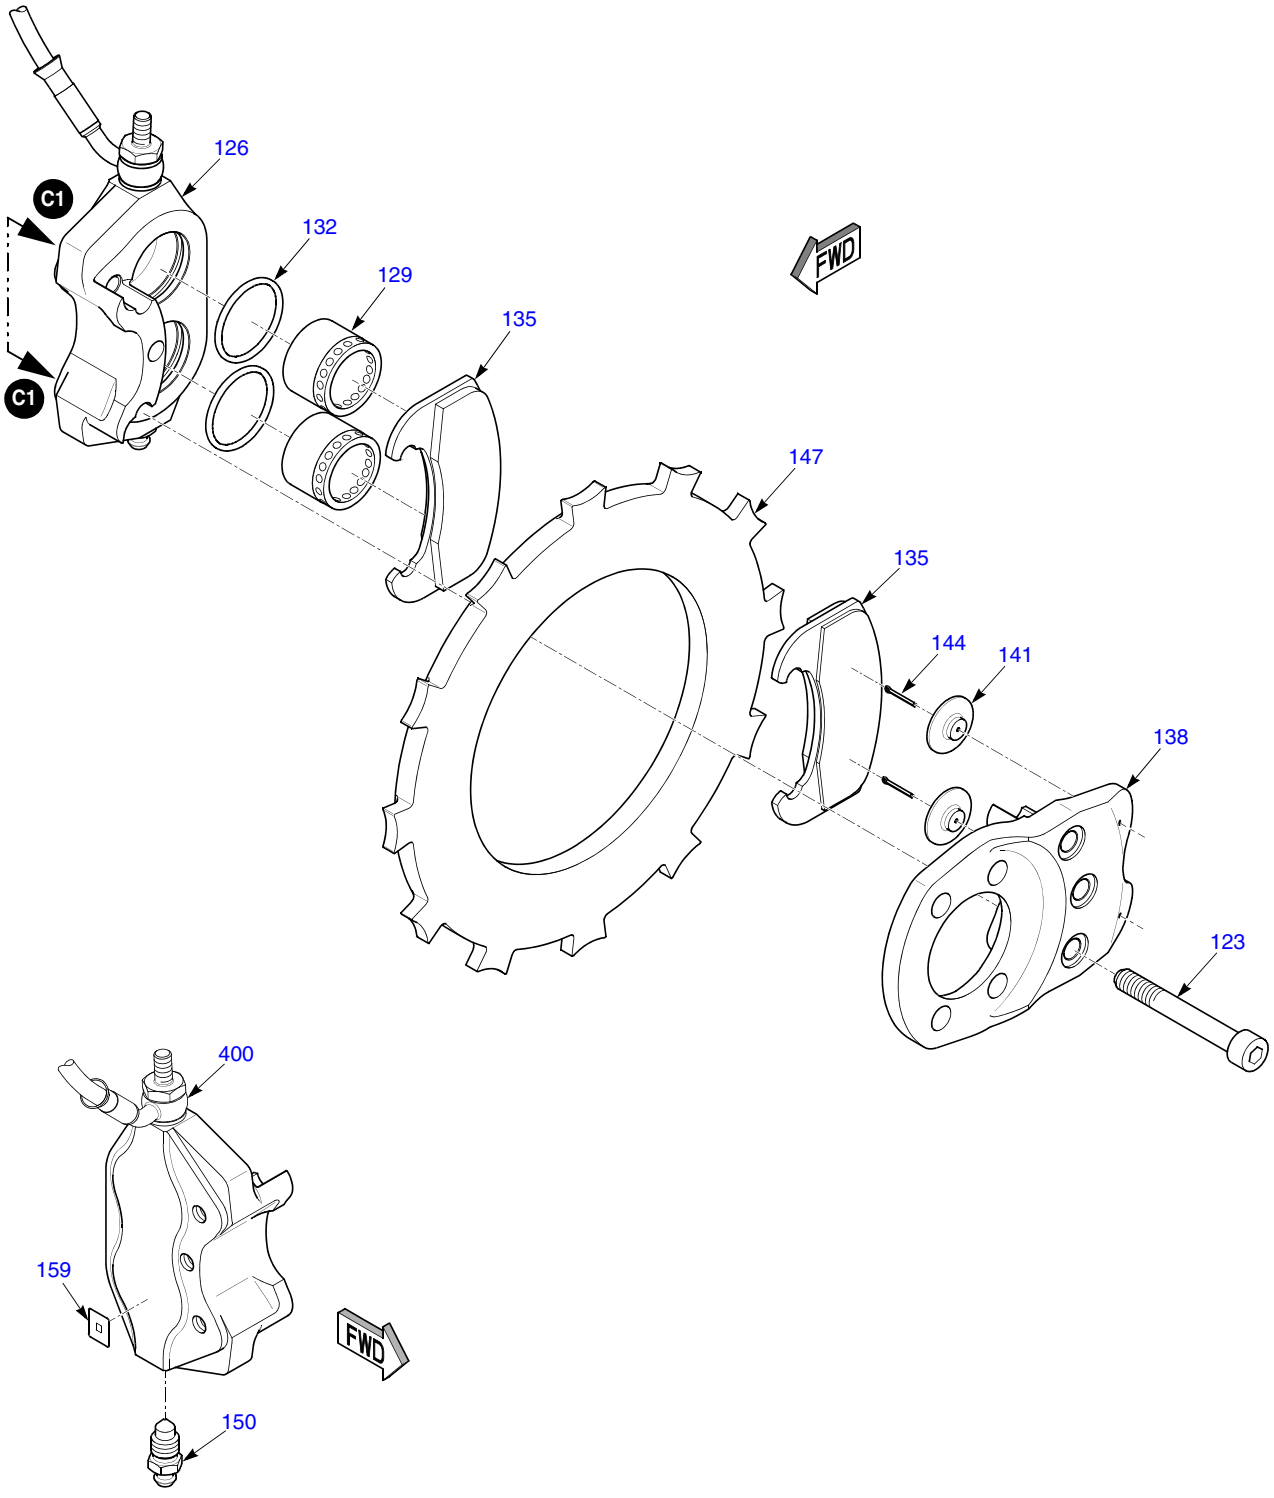

Figure-02

Brake Assembly - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (3 of 5)

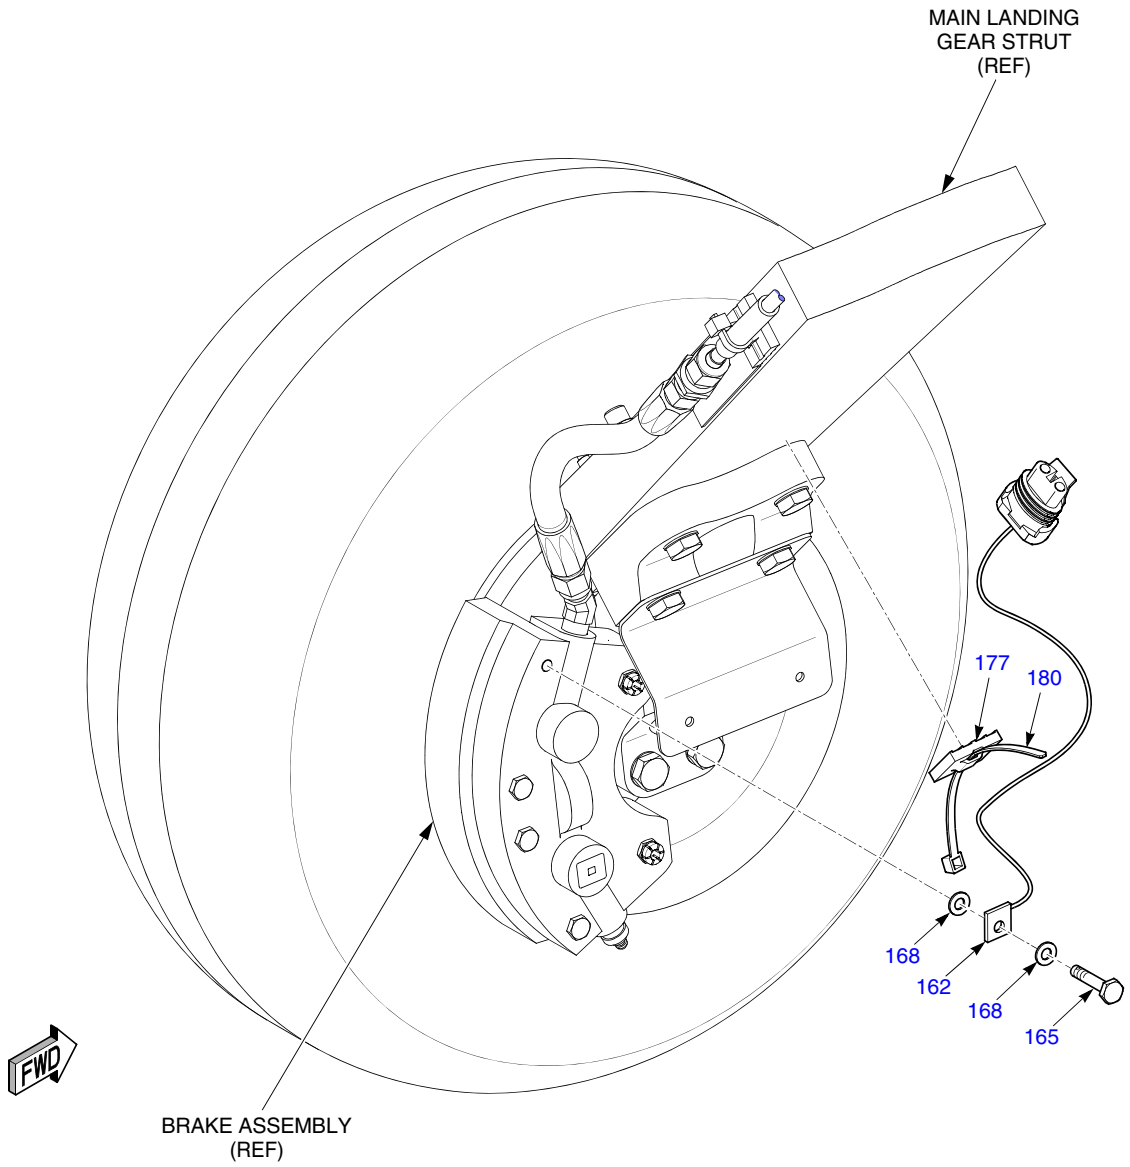

DETAIL D

Serials 22-3026 thru 22-4045 before SB2X-32-21,
22T-0001 thru 22T-0689 before SB2X-32-21.

SR22_PC32_1806D

Figure-02

Brake Assembly - Serials 22-3026 - 22-4045 before SB2X-32-21, 22T-0001 - 22T-0689 before SB2X-32-21 (4 of 5)

EFFECTIVITY:
All

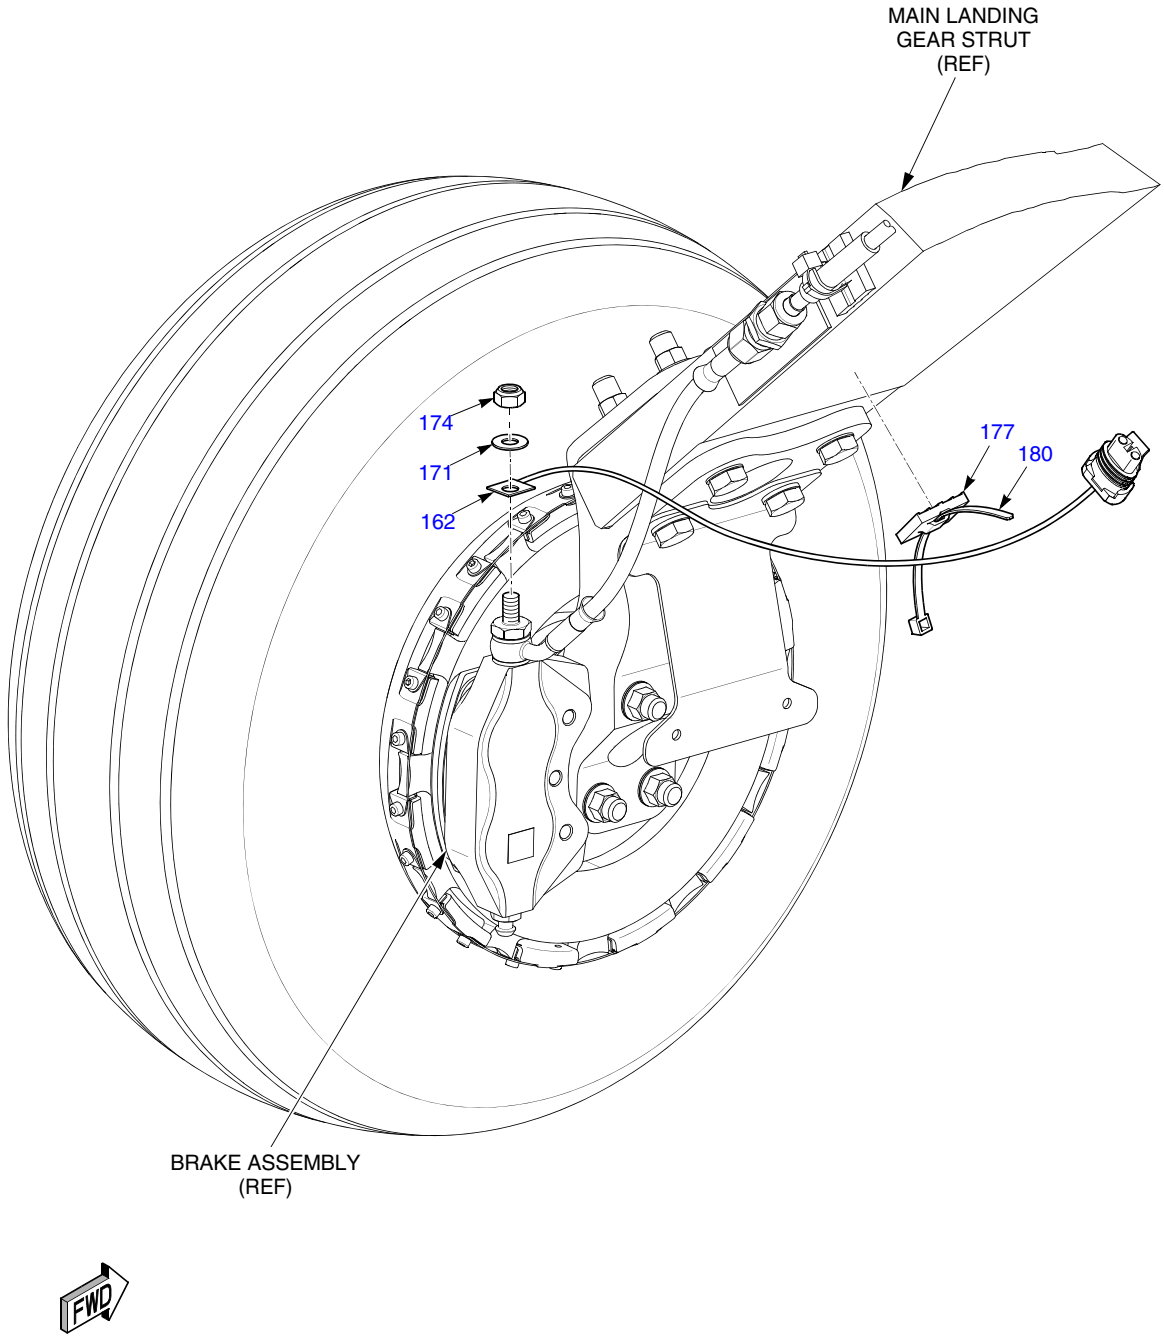

DETAIL E

Serials 22-0002 thru 22-4045 after SB2X-32-21,
22-4046 & subs,
22T-0001 thru 22T-0689 after SB2X-32-21,
22T-0690 & subs.

SR22_PC32_2126B

Figure-02

Brake Assembly - Serials 22-4046 & subs, 22T-0690 & subs, serials after SB2X-32-21 (5 of 5)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		BRAKE ASSEMBLY INSTALLATION	0002	1739	AR
-	3	13399-103	**		BRAKE ASSEMBLY	0002	1739	AR
-	4	17122-103			BRAKE ASSEMBLY	1740 / 0001	4045 / 0689	AR
					AFTER SB2X-32-13	0002	1739	
-	6	091-02100			·CYLINDER ASSEMBLY	0002	1739	1
-	9	091-21202			·CYLINDER ASSEMBLY	1740 / 0001	4045 / 0689	1
	12	095-10400		A	·WASHER	0002 / 0001	4045 / 0689	4
	15	103-11800		A	·BOLT	0002 / 0001	4045 / 0689	4
	18	061-01800			··CYLINDER	0002	1739	1
	21	061-01802			··CYLINDER	1740 / 0001	4045 / 0689	1
	24	062-01500			··PISTON	0002	1739	2
	27	062-01800			··PISTON	1740 / 0001	4045 / 0689	2
	30	101-02700			··O-RING	0002	1739	2
					FOR SPARES USE P/N 101-34500			
	33	101-34500			··O-RING	1740 / 0001	4045 / 0689	2
	36	082-02000			··SPRING, FRICTION	1740 / 0001	4045 / 0689	2
-	39	073-01000			··PRESSURE PLATE ASSEMBLY	0002	1739	1
-	42	073-02700			··PRESSURE PLATE ASSEMBLY	1740 / 0001	4045 / 0689	1
	45	063-01100			···PRESSURE PLATE	0002 / 0001	4045 / 0689	1
	48	066-10500			···LINING	0002	1739	2
	51	066-06200			···LINING	1740 / 0001	4045 / 0689	2
	54	105-00200		A	···RIVET	0002	1739	4
	57	PRT OF ITM 51		A	···PIN	1740 / 0001	4045 / 0689	4
-	60	074-01000			··BACK PLATE ASSEMBLY	0002	1739	1
-	63	074-03000			··BACK PLATE ASSEMBLY	1740 / 0001	4045 / 0689	1
	66	064-01500			···BACK PLATE	0002 / 0001	4045 / 0689	2
	69	066-10500			···LINING	0002	1739	2
	72	066-06200			···LINING	1740 / 0001	4045 / 0689	2
	75	105-00200		A	···RIVET	0002	1739	4
	78	PRT OF ITM 72		A	···PIN	1740 / 0001	4045 / 0689	4
	81	069-00400			·ANCHOR BOLT	0002	1739	2
	84	069-01900			·ANCHOR BOLT	1740 / 0001	4045 / 0689	2
	87	095-10200		A	·WASHER	0002	1739	2
	90	095-10400		A	·WASHER	1740 / 0001	4045 / 0689	2
	93	094-10300		A	·NUT	0002 / 0001	4045 / 0689	2
	96	081-00100			·SEAT, BLEEDER	0002 / 0001	4045 / 0689	1
	99	079-00300			·SCREW, BLEEDER	0002 / 0001	4045 / 0689	1
	102	183-00100			·CAP, BLEEDER	0002 / 0001	4045 / 0689	1
	105	104-00500			·FITTING	0002 / 0001	4045 / 0689	1
	108	075-01500			·TORQUE PLATE ASSEMBLY	0002 / 0001	4045 / 0689	1
	111	145-01000			·BUSHING	0002 / 0001	4045 / 0689	2
	114	068-01100			·SHIM	1740 / 0001	4045 / 0689	1
	117	51698-001			·TEMPERATURE INDICATOR	1728	3450	1
					AFTER SB2X-32-14	0002	1727	
	118	51698-003			·TEMPERATURE INDICATOR	3451 / 0001	4045 / 0689	1
					AFTER SB2X-05-01	0002	3450	
-	120	31392-001	~		BRAKE ASSEMBLY	4046 / 0690	/	AR
	123	31392-104	~	A	·SCREW	4046 / 0690	/	3
	126	31392-102	~		·CYLINDER	4046 / 0690	/	1
	129	31392-103	~		·PISTON	4046 / 0690	/	2
	132	31392-107	~		·SEAL	4046 / 0690	/	2
	135	31392-105	~		·BRAKE PAD	4046 / 0690	/	2
	138	31392-101	~		·BACK PLATE	4046 / 0690	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	141	31392-109	~		·BACK STOP	4046 / 0690	/	2
	144	31392-110	~	A	·COTTER PIN	4046 / 0690	/	2
	147	31392-108	~		·DISC	4046 / 0690	/	1
	150	31392-106	~		·BLEEDER	4046 / 0690	/	1
	159	51698-004	~		·TEMPERATURE INDICATOR	4046 / 0690	/	1
	162	24649-001			·TEMPERATURE SENSOR W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	165	NAS6204-29		A	··BOLT	3026 / 0001	4045 / 0689	1
	168	NAS1149C0432R		A	··WASHER	3026 / 0001	4045 / 0689	2
	171	NAS1149F0432P	~	A	··WASHER	4046 / 0690	/	1
	174	MS21042-4	~	A	··NUT	4046 / 0690	/	1
	177	50132-001			··CABLE TIE ANCHOR	3026 / 0001	/	AR
	180	50239-020			··CABLE TIE	3026 / 0001	/	AR
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 32-42-01 DET			BRAKE SYSTEM INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBERS 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBERS 22-4031, 22-4033 THRU 22-4044; REFER TO 22-4046 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0657; REFER TO 22T-0690 FOR PART IDENTIFICATION.			
			~		SERIAL NUMBER 22-0002 THRU 22-4030, 22-4032, 22-4045, 22T-0001 THRU 22T-0656, 22T-0658 THRU 22T-0689 AFTER SB2X-32-21			

Intentionally Left Blank

CHAPTER 33

LIGHTS

Intentionally Left Blank

CHAPTER 33 - LIGHTS
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
33-LOEP	1	04 SEP 2018
33-LOEP	2	04 SEP 2018
33-TOC	1	04 SEP 2018
33-TOC	2	04 SEP 2018
33-10-01	1	01 JAN 2016
33-10-01	2	01 JAN 2016
33-10-01	3	01 JAN 2016
33-10-01	4	01 JAN 2016
33-10-01	5	01 JAN 2016
33-10-01	6	01 JAN 2016
33-10-01	7	01 JAN 2016
33-10-01	8	01 JAN 2016
33-40-01	1	15 DEC 2014
33-40-01	2	15 DEC 2014
33-40-01	3	15 DEC 2014
33-40-01	4	15 DEC 2014
33-40-01	5	19 SEP 2017
33-40-01	6	19 SEP 2017
33-40-01	7	19 SEP 2017
33-40-01	8	19 SEP 2017
33-40-01	9	19 SEP 2017
33-40-01	10	19 SEP 2017
33-40-02	1	19 SEP 2017
33-40-02	2	19 SEP 2017
33-40-02	3	19 SEP 2017
33-40-02	4	19 SEP 2017
33-40-02	5	19 SEP 2017
33-40-02	6	04 SEP 2018
33-40-02	7	04 SEP 2018
33-40-02	8	15 DEC 2014
33-40-03	1	01 JAN 2016
33-40-03	2	01 JAN 2016
33-40-04	1	04 SEP 2018
33-40-04	2	04 SEP 2018

Intentionally Left Blank

CHAPTER 33 - LIGHTS
TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Interior Lighting (1 of 5)	33-10-01
Interior Lighting (2 of 5)	33-10-01
Interior Lighting (3 of 5)	33-10-01
Interior Lighting (4 of 5)	33-10-01
Interior Lighting (5 of 5)	33-10-01
Landing Light - Serials 22-0002 thru 22-0319 (1 of 5)	33-40-01
Landing Light - Serials 22-0320 thru 22-0820 (2 of 5)	33-40-01
Landing Light - Serials 22-0821 thru 22-3495 (3 of 5)	33-40-01
Landing Light w/ HID - Serials 22-3496 & subs, 22T-0001 & subs w/o Anniversary Option (4 of 5)	33-40-01
Landing Light w/ LED - Serials after SB2X-33-07, 3828 & subs, 22T-0188,22T-0268 & subs (5 of 5)	33-40-01
Anti-Collision Light - Serials 22-0002 thru 22-2437 before SB2X-33-03 (1 of 5)	33-40-02
Anti-Collision Light - Serials 22-0002 thru 22-2437 after SB2X-33-03 (2 of 5)	33-40-02
Anti-Collision & Recognition Light - Serials 22-2438 thru 22-3416 before SB2X-33-03 (3 of 5)	33-40-02
Anti-Collision & Recognition Light - Serials w/ LED/Flash Tube Strobe (Sheet 4 of 5)	33-40-02
Anti-Collision & Recognition Light - Serials w/ LED Strobe (Sheet 5 of 5)	33-40-02
Entry Step LED Assembly - Serials 22-4300 & subs, 22T-1233 & subs	33-40-03
Ice Protection System: Detection - Serials 22-3403 & subs, 22T-0001 & subs	33-40-04

Intentionally Left Blank

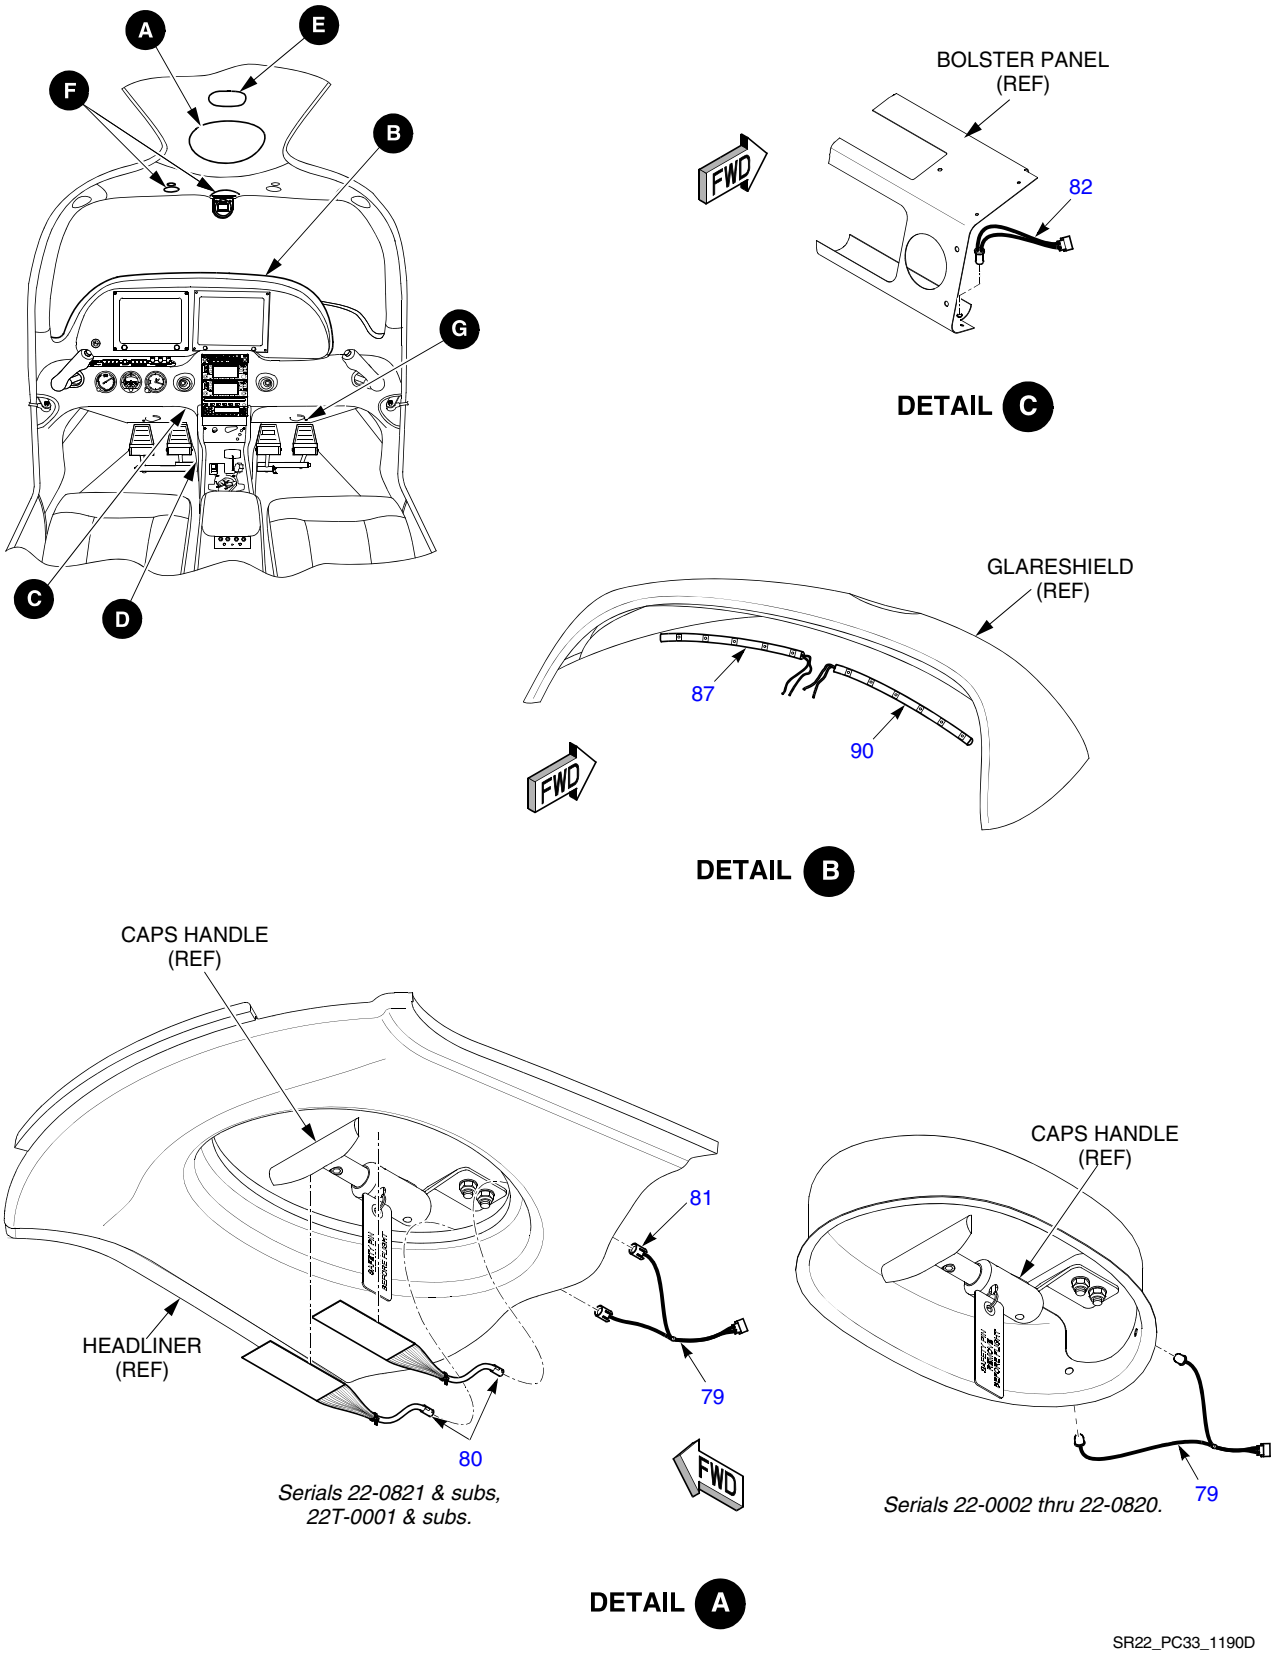

Figure-01
Interior Lighting (1 of 5)

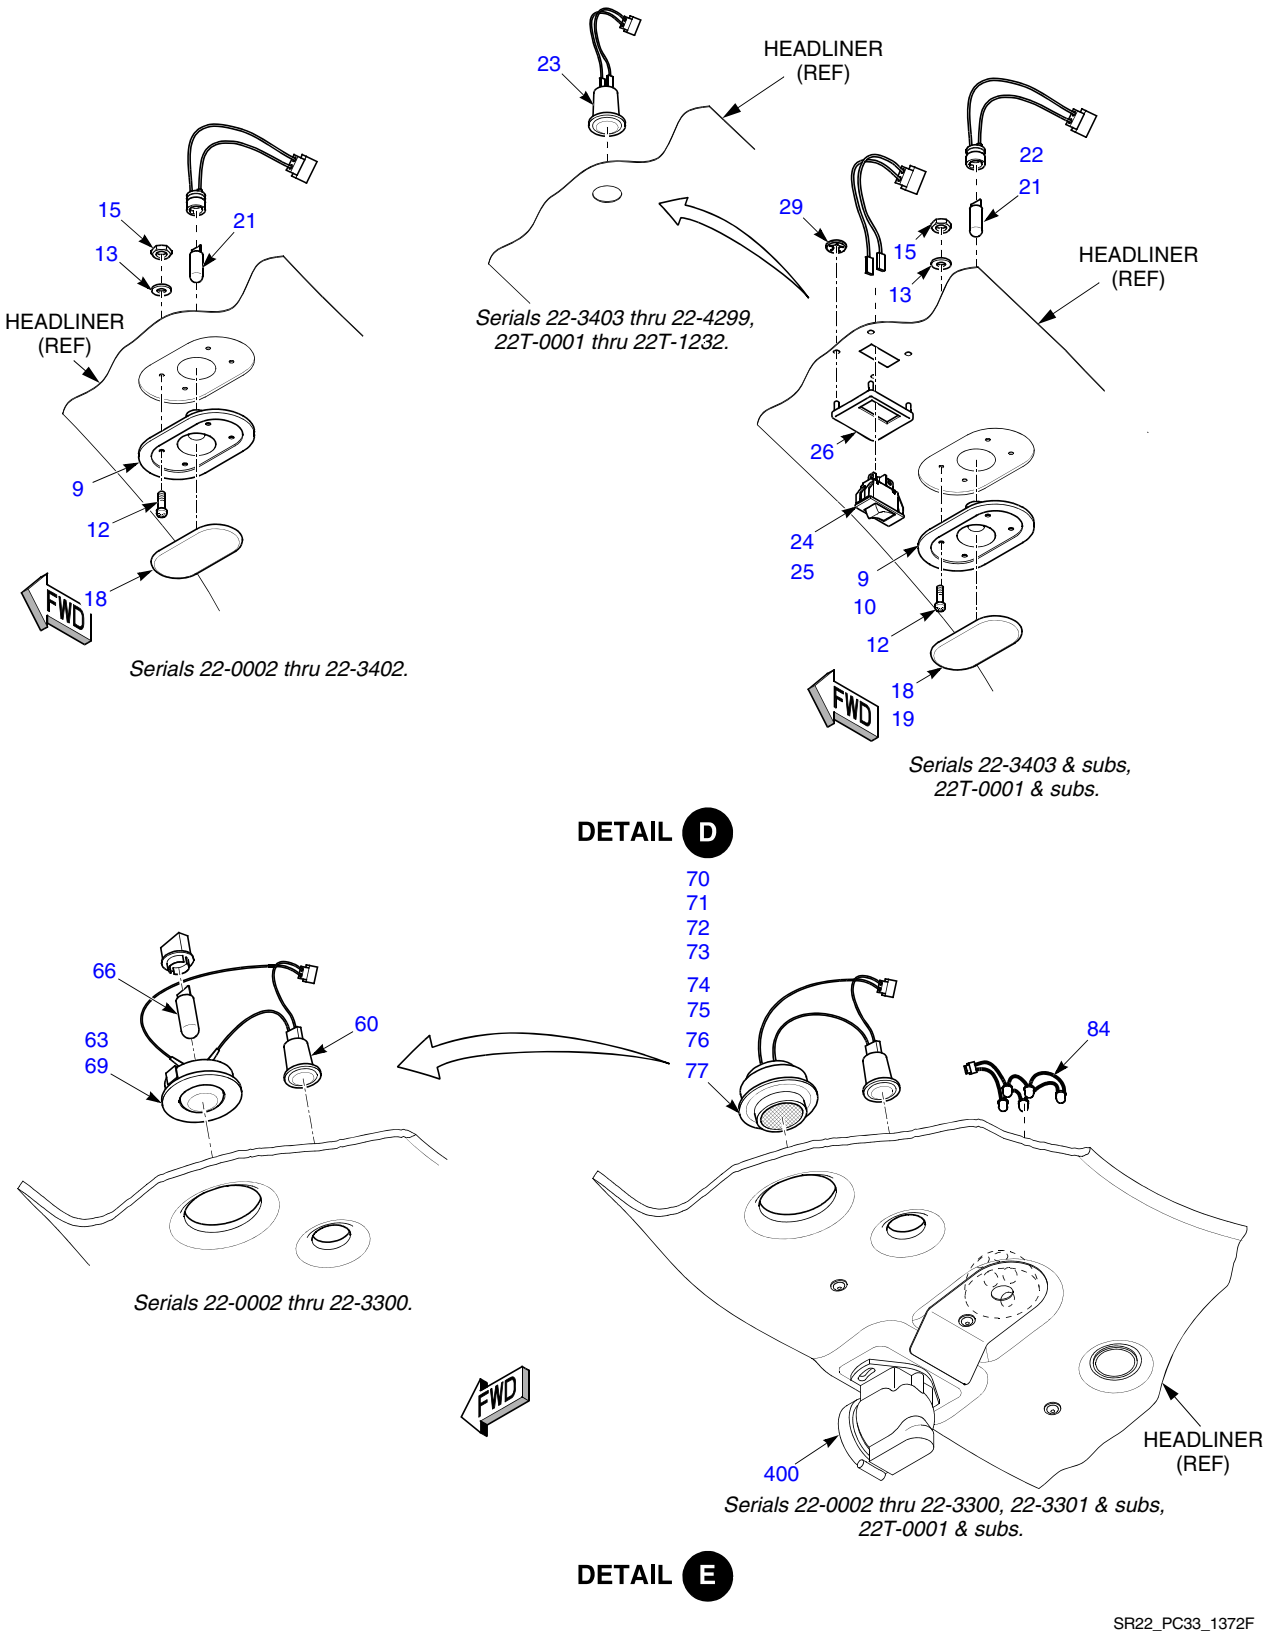

Figure-01
Interior Lighting (2 of 5)

EFFECTIVITY:
All

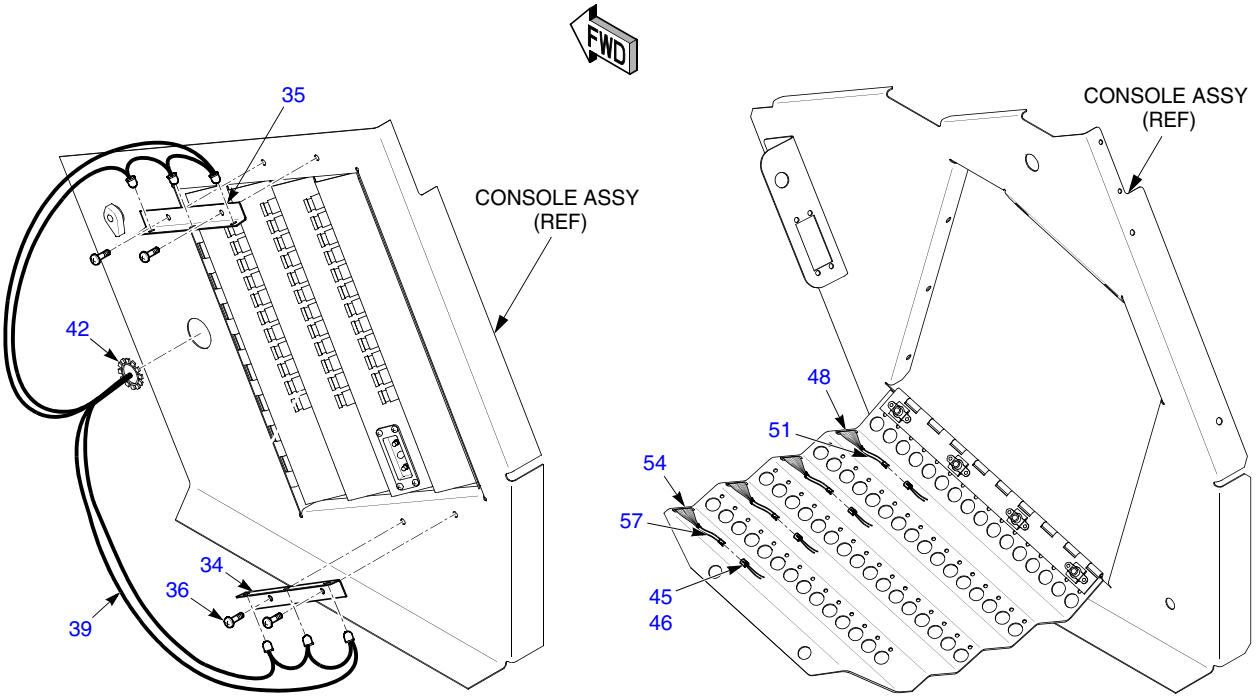

Serials 22-0002 & subs w/o Perspective Avionics.

Serials w/ Perspective Avionics.

DETAIL F

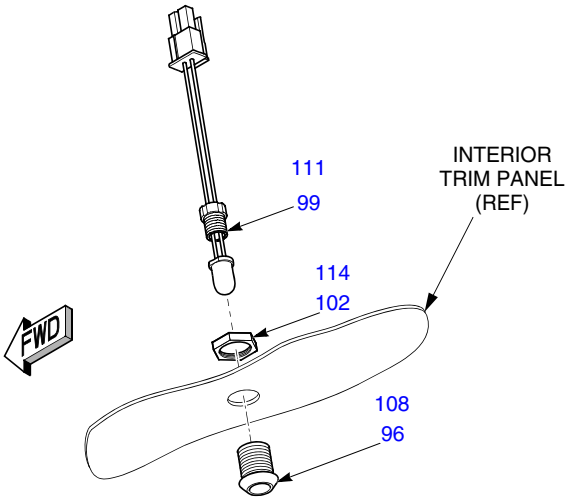

Serials 22-4300 & subs, 22T-1233 & subs.

DETAIL G

SR22_PC33_1955B

Figure-01
Interior Lighting (3 of 5)

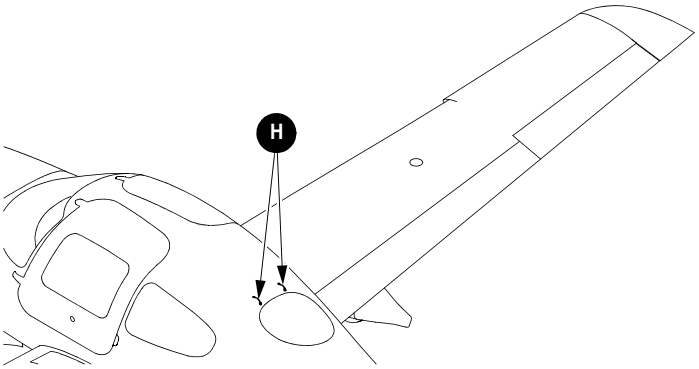

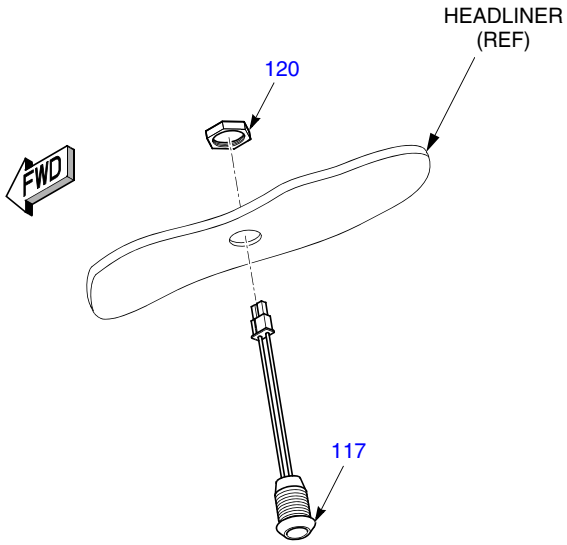

DETAIL H

Serials 22-4300 & subs, 22T-1233 & subs w/ Convenience Lighting

SR22_PC33_2205

Figure-01
Interior Lighting (4 of 5)

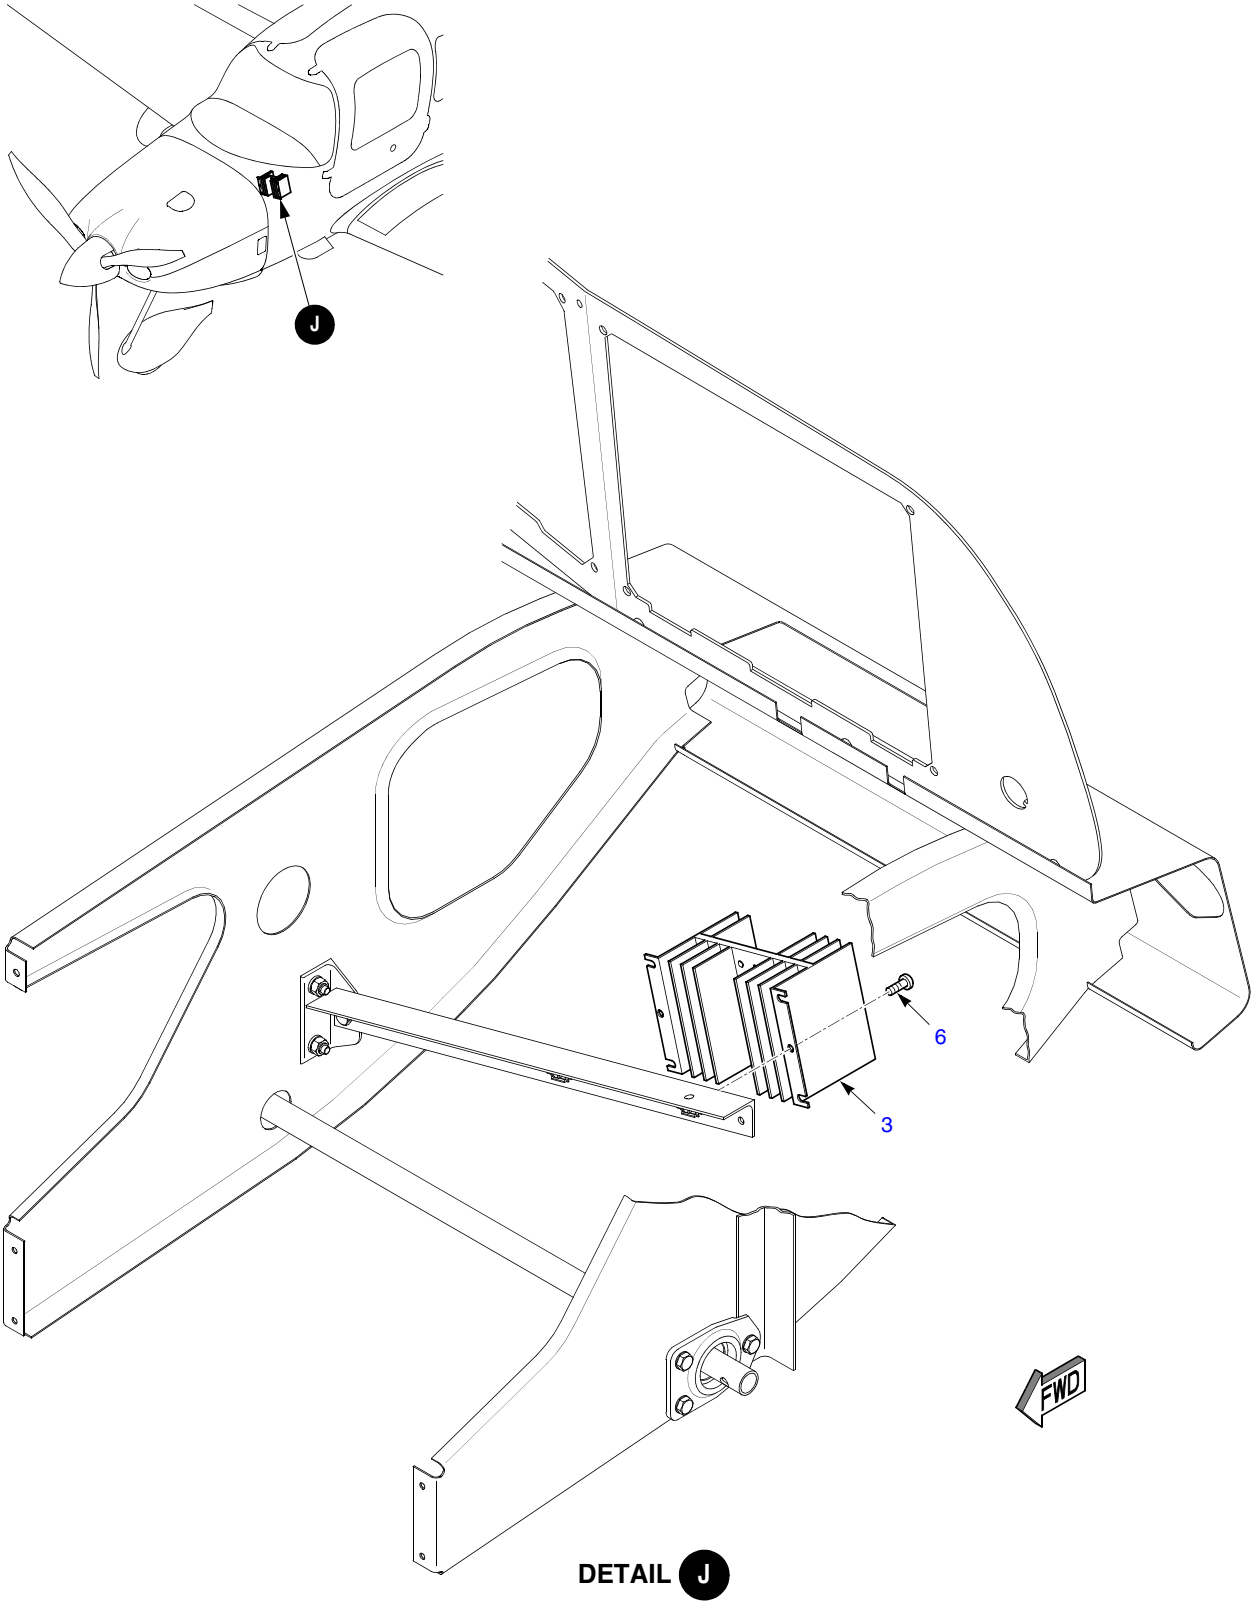

Figure-01
Interior Lighting (5 of 5)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		INTERIOR LIGHT INSTALLATION	0002 / 0001	/	NP
	3	12018-002			·DIMMER CIRCUIT CARD	0002 / 0001	/	1
	6	MS35206-246		A	·SCREW	0002 / 0001	/	2
	9	12458-001			·CABIN LIGHT	0002 / 0001	4299 / 1232	1
	10	12458-002			·CABIN LIGHT	4300 / 1233	/	1
	12	MS35206-230		A	·SCREW	0002 / 0001	/	4
	13	NAS1149FN832P		A	·WASHER	0002 / 0001	/	4
	15	MS21044N06		A	·NUT	0002 / 0001	/	4
	18	PRT OF ITM 9			··LENS, CABIN LIGHT	0002 / 0001	4299 / 1232	1
	19	PRT OF ITM 10			··LENS, CABIN LIGHT	4300 / 1233	/	1
	21	50608-001			··LAMP, 24VDC, 1 WATT	0002 / 0001	4299 / 1232	4
	22	54678-001			··LAMP, 12VDC, DOME, LED	4300 / 1233	/	4
	23	24932-001			·SWITCH, CABIN LIGHT	3403 / 0001	4299 / 1232	1
	24	37248-001		!	·ASSEMBLY, DOME LIGHT SWITCH	4300 / 1233	/	1
	25	37248-002		*	·ASSEMBLY, DOME LIGHT SWITCH	4300 / 1233		1
	26	37209-001			·BEZEL, SWITCH, LIGHT, INTERIOR	4300 / 1233	/	1
-	27	37210-001		!	·OVERLAY, BEZEL, SWITCH, LIGHT, INTERIOR	4300 / 1233		1
-	28	37210-002		*	·OVERLAY, BEZEL, SWITCH, LIGHT, INTERIOR	4300 / 1233		1
	29	54653-001			·NUT	4300 / 1233	/	4
-	30	53434-088	#		·PLUG	3026 / 0001	/	1
-	31	53434-175	#		·PLUG	3026 / 0001	/	1
-	32	12504-001			·BRACKET, BREAKER PANEL LIGHTING	0002	1160	2
					FOR SPARES USE P/N 12504-002			
-	33	12504-002			·BRACKET, BREAKER PANEL LIGHTING	1161	2380	2
	34	17838-001	@		·BRACKET, BREAKER PANEL LIGHTING, LOWER	2381		1
	35	17838-002	@		·BRACKET, BREAKER PANEL LIGHTING, UPPER	2381		1
	36	MS27039-0808	@	A	·SCREW	0002		4
	39	12460-002	@		·WIRE HARNESS, CB PANEL LIGHTS	0002		1
	42	MS21266-2N	@		·GROMMET	0002		AR
	45	53102-001	%		·LED DIODE, T1 3/4 5MM, WHITE	3026 / 0001	3690 / 0040	4
						3696	3700	
	46	53102-002	%		·LED DIODE, T1 3/4 5MM, WHITE	3691 / 0041	3695 /	4
						3701		
	48	24743-001	%		·LIGHT STRIP DIFFUSER	3026 / 0001	/	3
	51	PRT OF ITM 48	%		·CLIP	3026 / 0001	/	3
	54	24743-002	%		·LIGHT STRIP DIFFUSER	3026 / 0001	/	1
	57	PRT OF ITM 54	%		·CLIP	3026 / 0001	/	1
	60	12457-002			·SWITCH, EYEBALL LIGHT	0002	3428	4
	63	50491-001			·LIGHT, SWIVEL EYEBALL	0002	0299	4
					FOR SPARES USE P/N 50491-002			
	66	50608-001			··LAMP, 24VDC, 1 WATT	0002	0299	4
	69	50491-002			·LIGHT, SWIVEL EYEBALL	0300	3428	4
	70	19065-001			·LIGHT, READING, BLACK	3429 / 0001	4299 / 1232	2
	71	37364-001			·LIGHT, READING, BLACK	4300 1233		2
	72	19065-004			·LIGHT, READING, CHROME	3429 / 0001	4299 / 1232	2
	73	37364-004			·LIGHT, READING, CHROME	4300 / 1233	/	2
	74	19065-005			·LIGHT, READING, BRIGHT NICKEL	3429 / 0001	4299 / 1232	2
	75	37364-005			·LIGHT, READING, BRIGHT NICKEL	4300 / 1233	/	2
	76	19065-006			·LIGHT, READING, BRIGHT BUFF	3429 / 0001	4299 / 1232	2
	77	37364-006			·LIGHT, READING, BRIGHT BUFF	4300 / 1233	/	2
-	78	37364-101			·LAMP MODULE, LED, 28 VDC	4300 / 1233	/	2
	79	12459-002			·WIRE HARNESS, CAPS HANDLE LIGHTS	0002 / 0001	/	1
	80	51383-001			·LIGHT STRIP DIFFUSER	0821 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	81	PRT OF ITM 80			·CLIP	0821 / 0001	/	2
	82	12574-002			·WIRE HARNESS, ALT. AIR & PARKING BRAKE LIGHT	0002 / 0001	/	1
	84	12885-001			·WIRE HARNESS, YOKE, ENVIR. CONTROL, THROTTLE	0002 / 0001	/	1
	87	50511-012			·LIGHT STRIP, 12-INCH	0002 / 0001	/	1
	90	50511-016			·LIGHT STRIP, 16-INCH	0002 / 0001	/	1
-	93	37078-001			·LED ASSEMBLY (KICK PLATE, AFT CNSL REAR COVER)	4300 / 1233	/	3
	96	PRT OF ITM 93			··LED LAMPHOLDER	4300 / 1233	/	3
	99	PRT OF ITM 93			··LED ASSEMBLY	4300 / 1233	/	3
	102	PRT OF ITM 93		A	··NUT	4300 / 1233	/	3
-	105	37078-002			·LED ASSEMBLY (REAR CABIN SIDE TRIM)	4300 / 1233		2
	108	PRT OF ITM 108			··LED LAMPHOLDER	4300 / 1233		2
	111	PRT OF ITM 108			··LED ASSEMBLY	4300 / 1233		2
	114	PRT OF ITM 108		A	··NUT	4300 / 1233		2
	117	37250-001			·LED ASSEMBLY	4300 / 1233		2
	120	PRT OF ITM 117			··NUT	4300 / 1233		2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 34-20-01 DET			MAGNETIC COMPASS			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PER-SPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
			@		INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			
			%		INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.			
			#		INSTALLED ON AIRCRAFT W/O AFT READING LIGHTS.			
			*		INSTALLED ON AIRCRAFT W/O CONVENIENCE LIGHTING			
			!		INSTALLED ON AIRCRAFT W/ CONVENIENCE LIGHTING			

Intentionally Left Blank

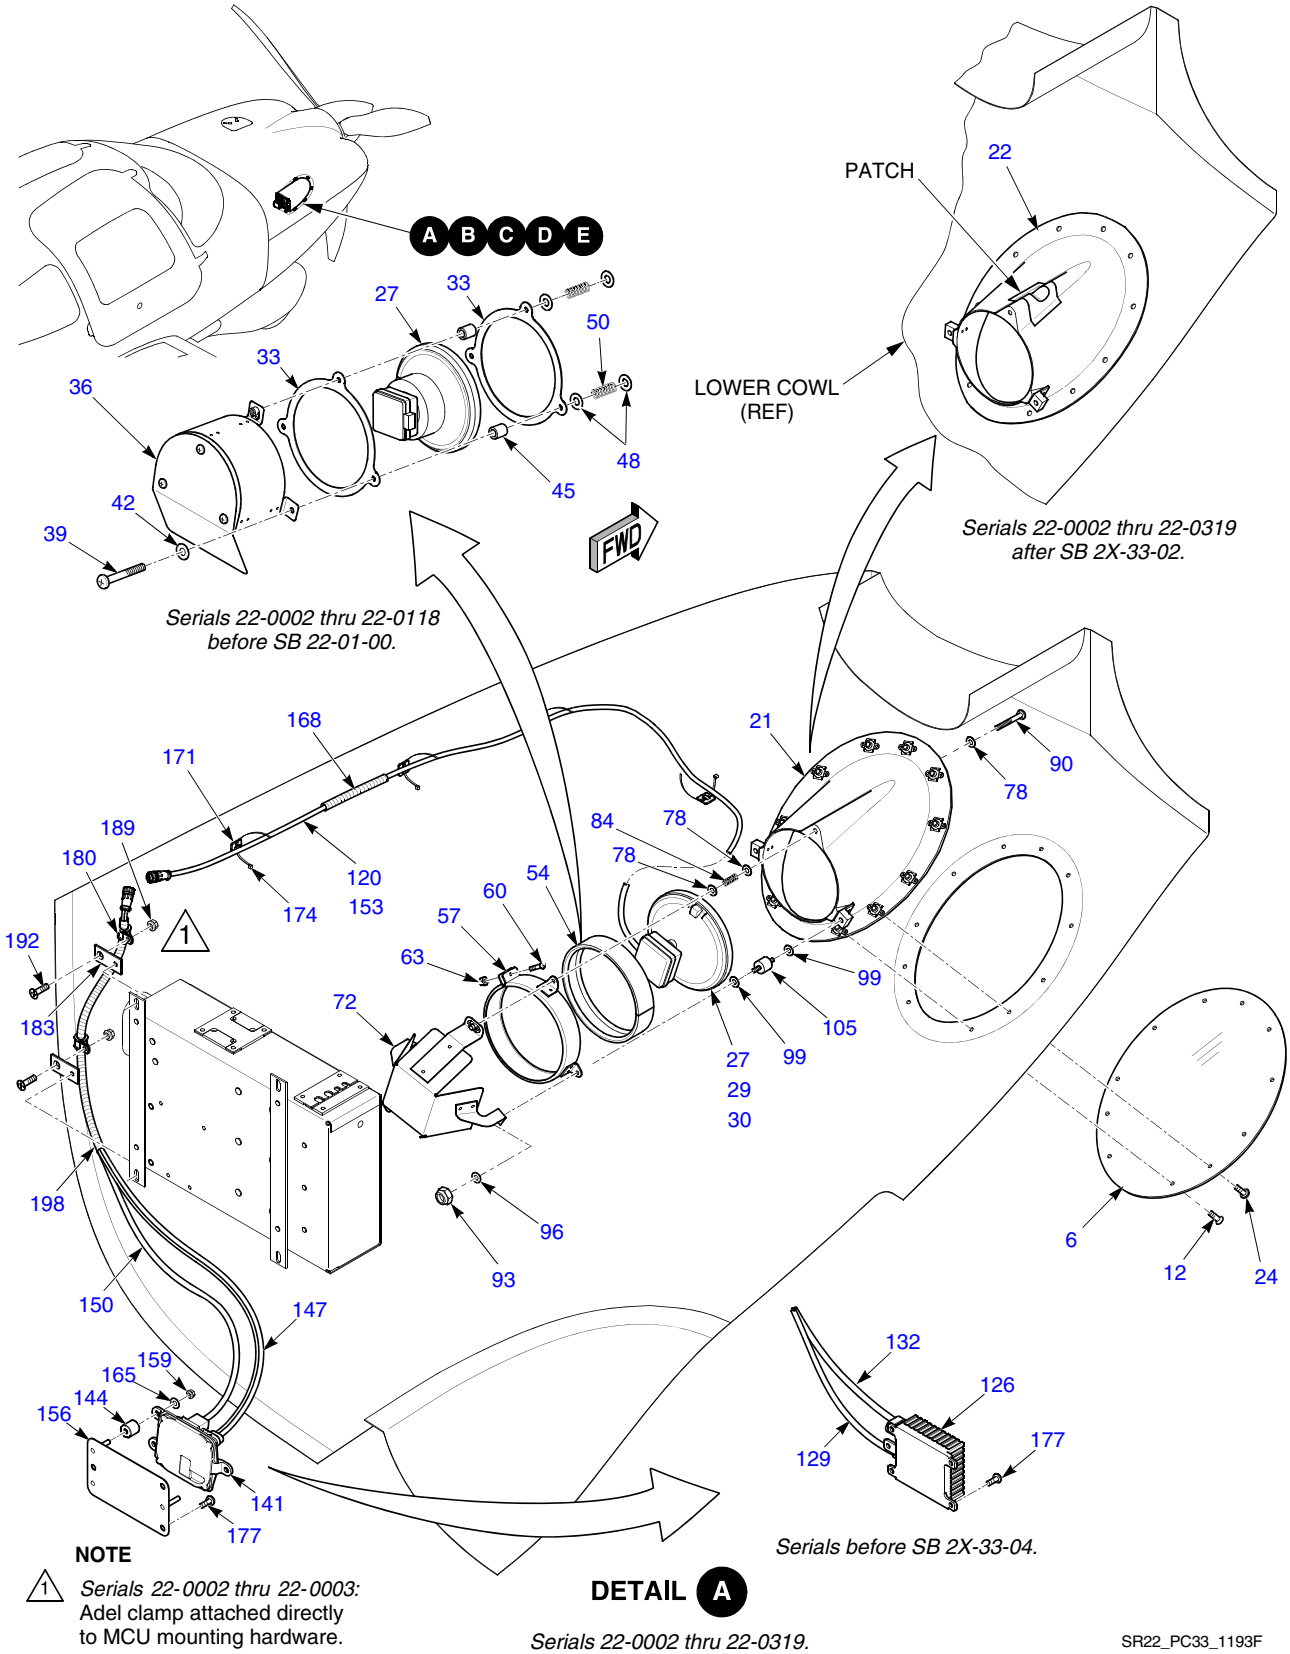

Figure-01

Landing Light - Serials 22-0002 thru 22-0319 (1 of 5)

EFFECTIVITY:
Serials 22-0002 thru 22-0319

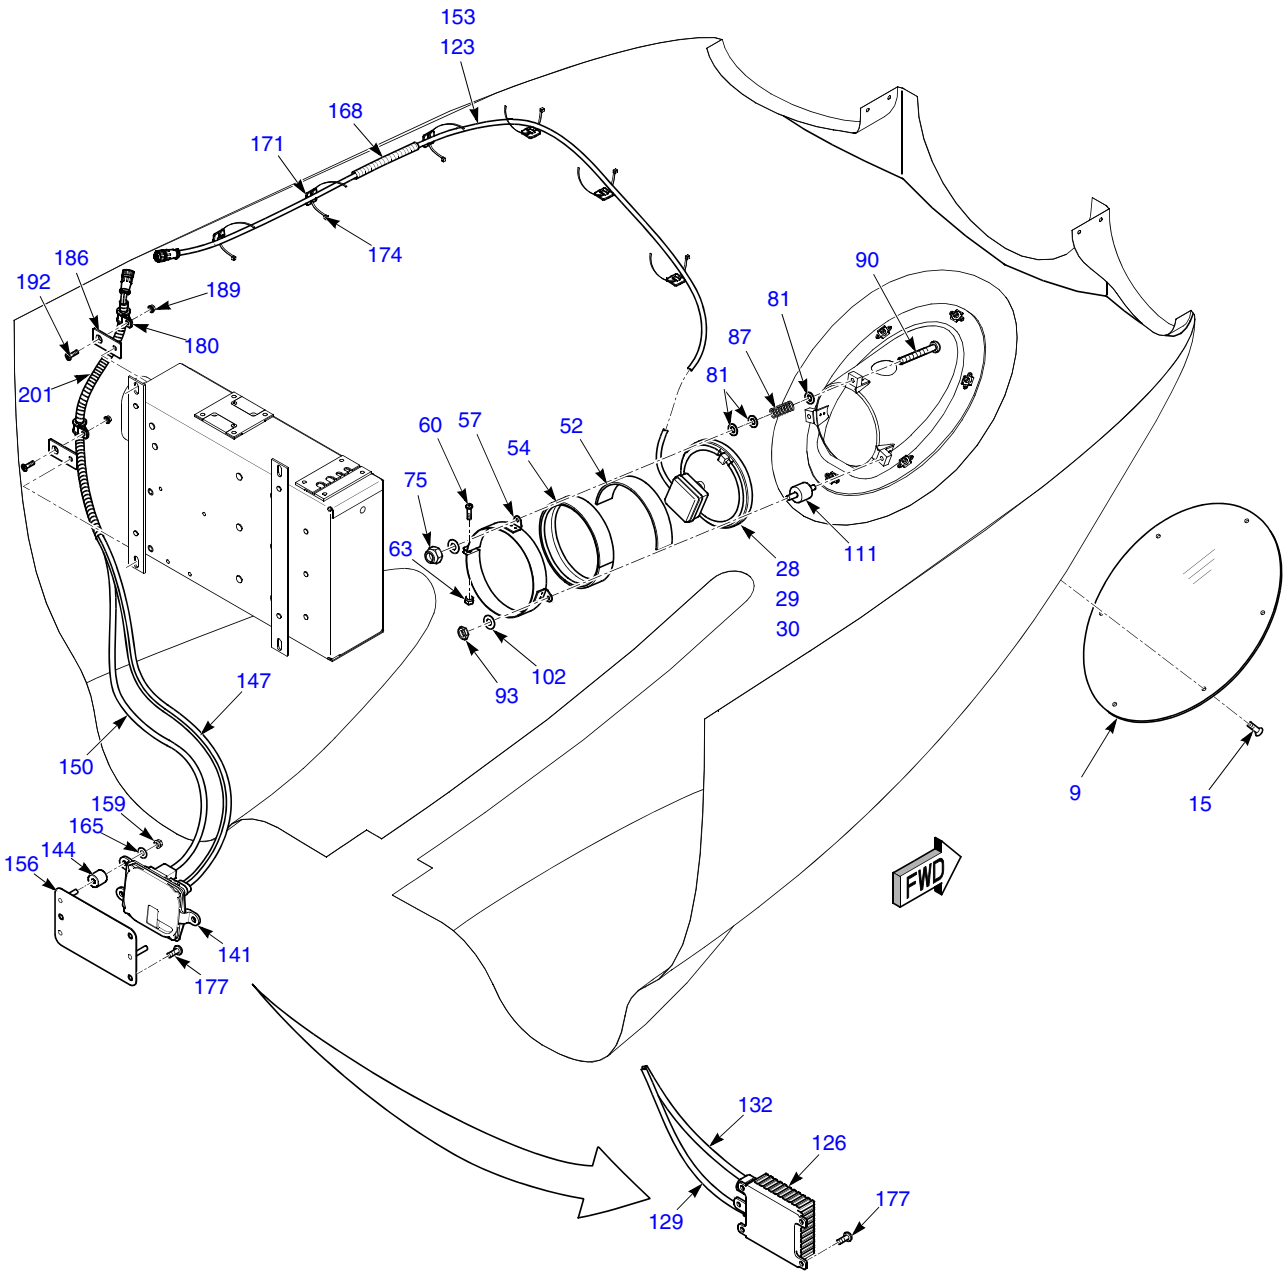

Serials before SB 2X-33-04.

DETAIL B

Serials 22-0320 thru 22-0820.

SR22_PC33_1317D

Figure-01

Landing Light - Serials 22-0320 thru 22-0820 (2 of 5)

EFFECTIVITY:
Serials 22-0320 thru 22-0820

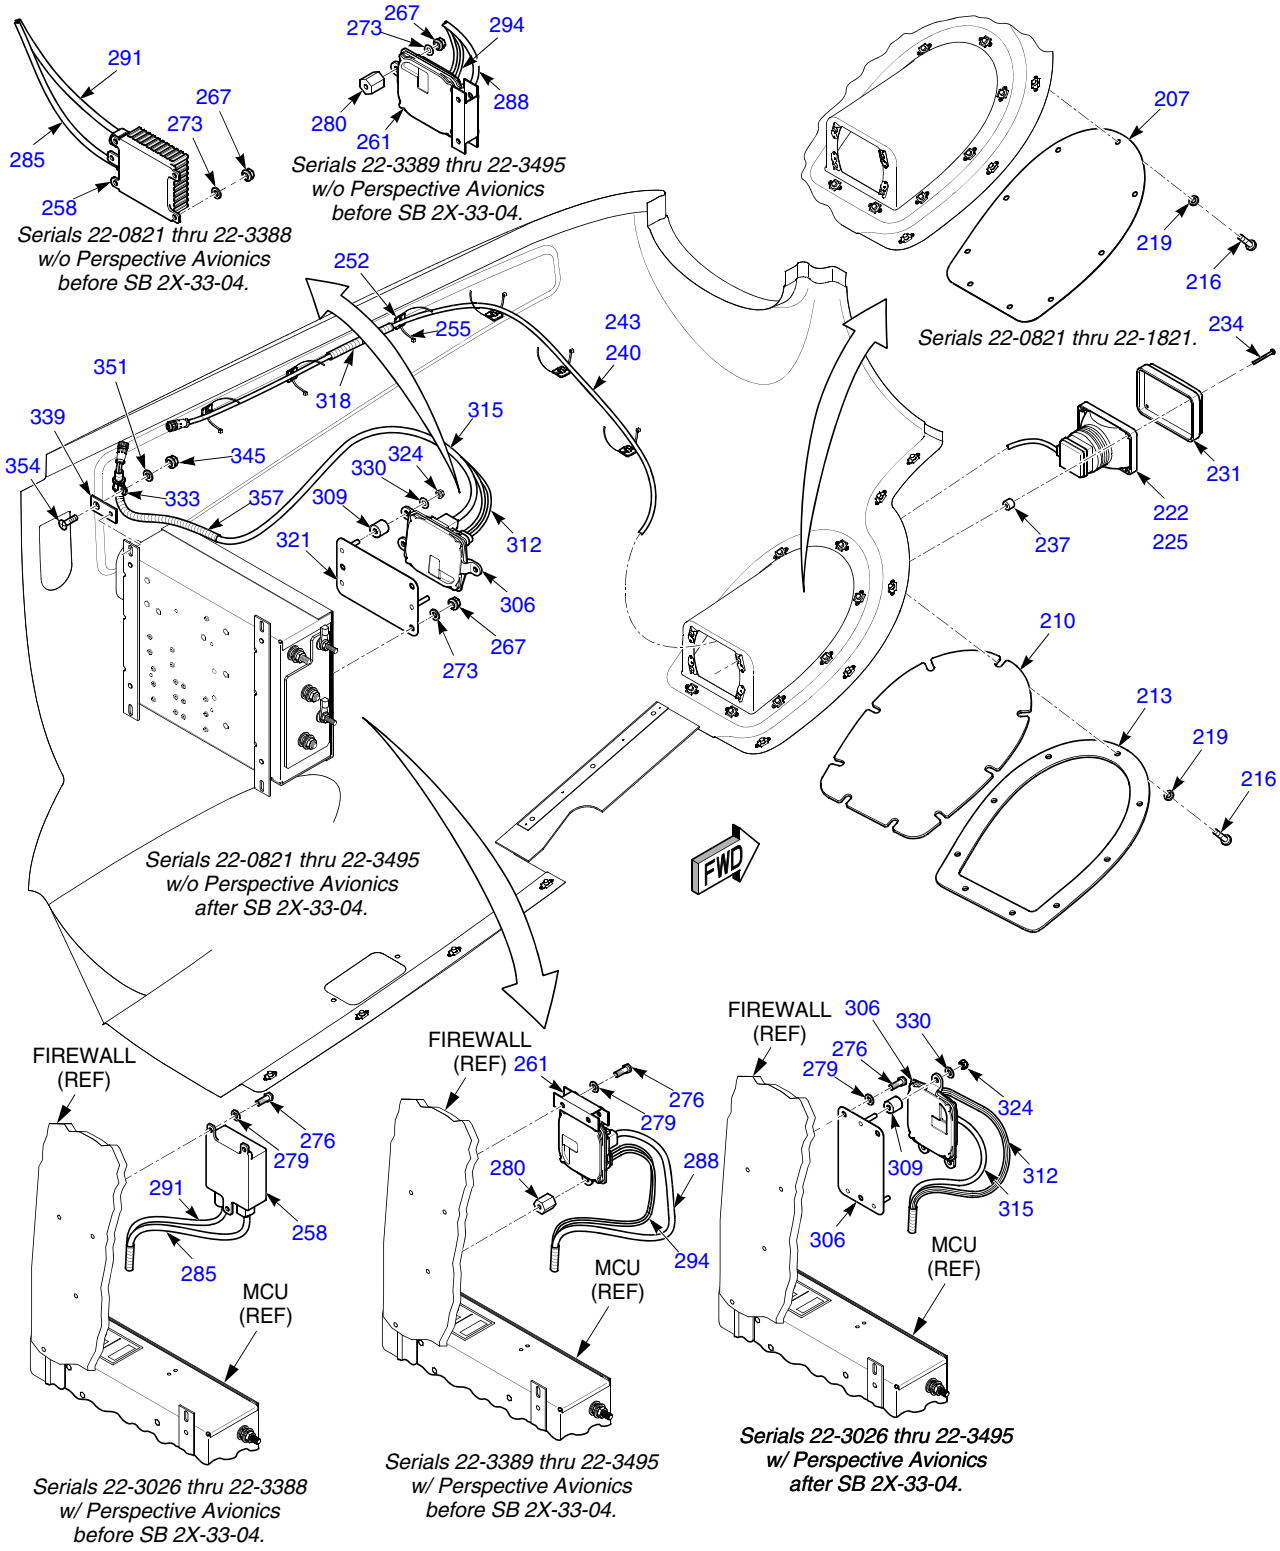

DETAIL C

Serials 22-0821 thru 22-3495.

SR22_PC33_1375F

Figure-01

Landing Light - Serials 22-0821 thru 22-3495 (3 of 5)

EFFECTIVITY:
Serials 22-0821 thru 22-3495

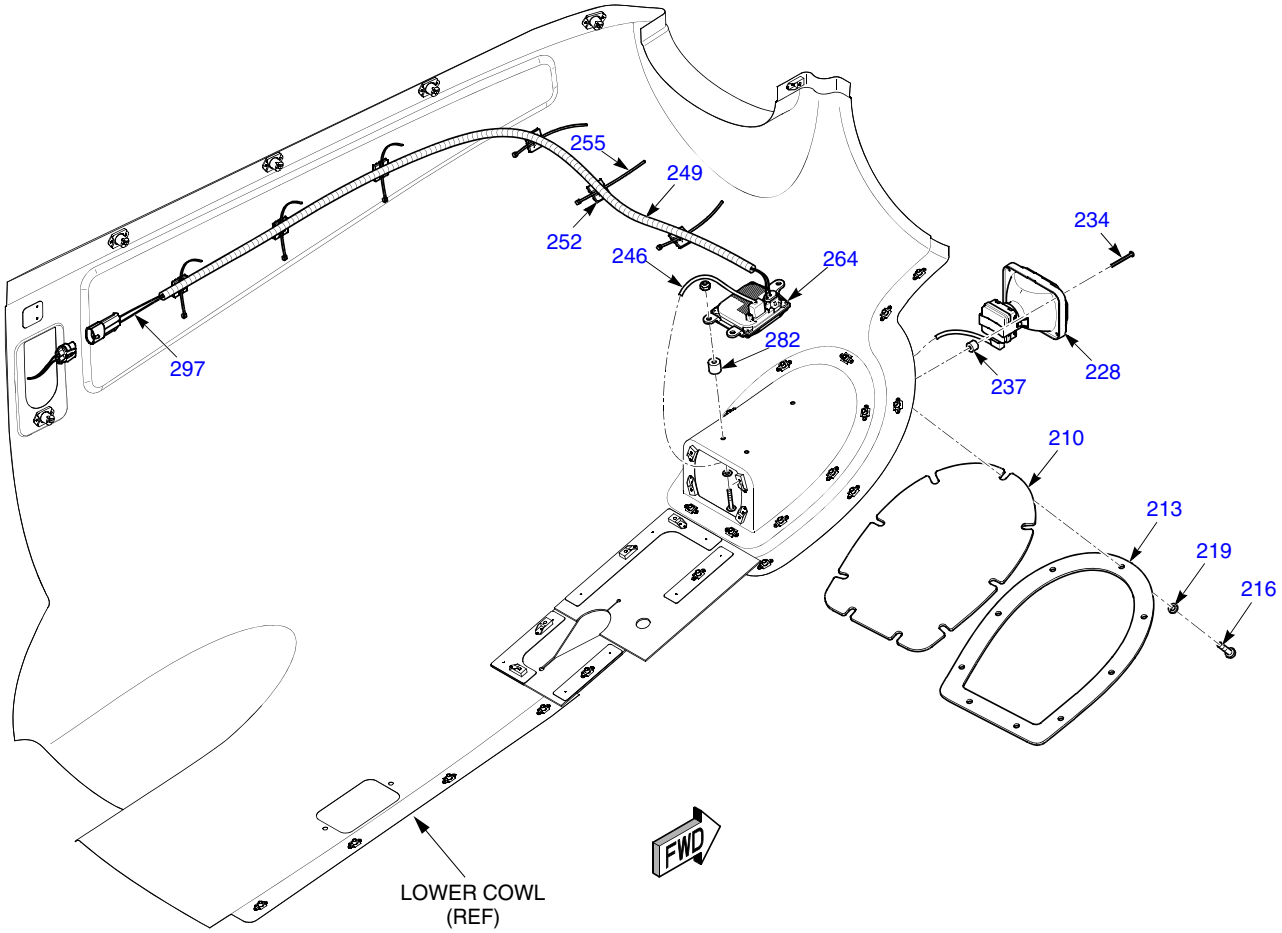

DETAIL D

Serials 22-3496 & subs,
22T-0001 & subs w/ HID.

SR22_PC33_1916A

Figure-01

Landing Light w/ HID - Serials 22-3496 & subs, 22T-0001 & subs w/o Anniversary Option (4 of 5)

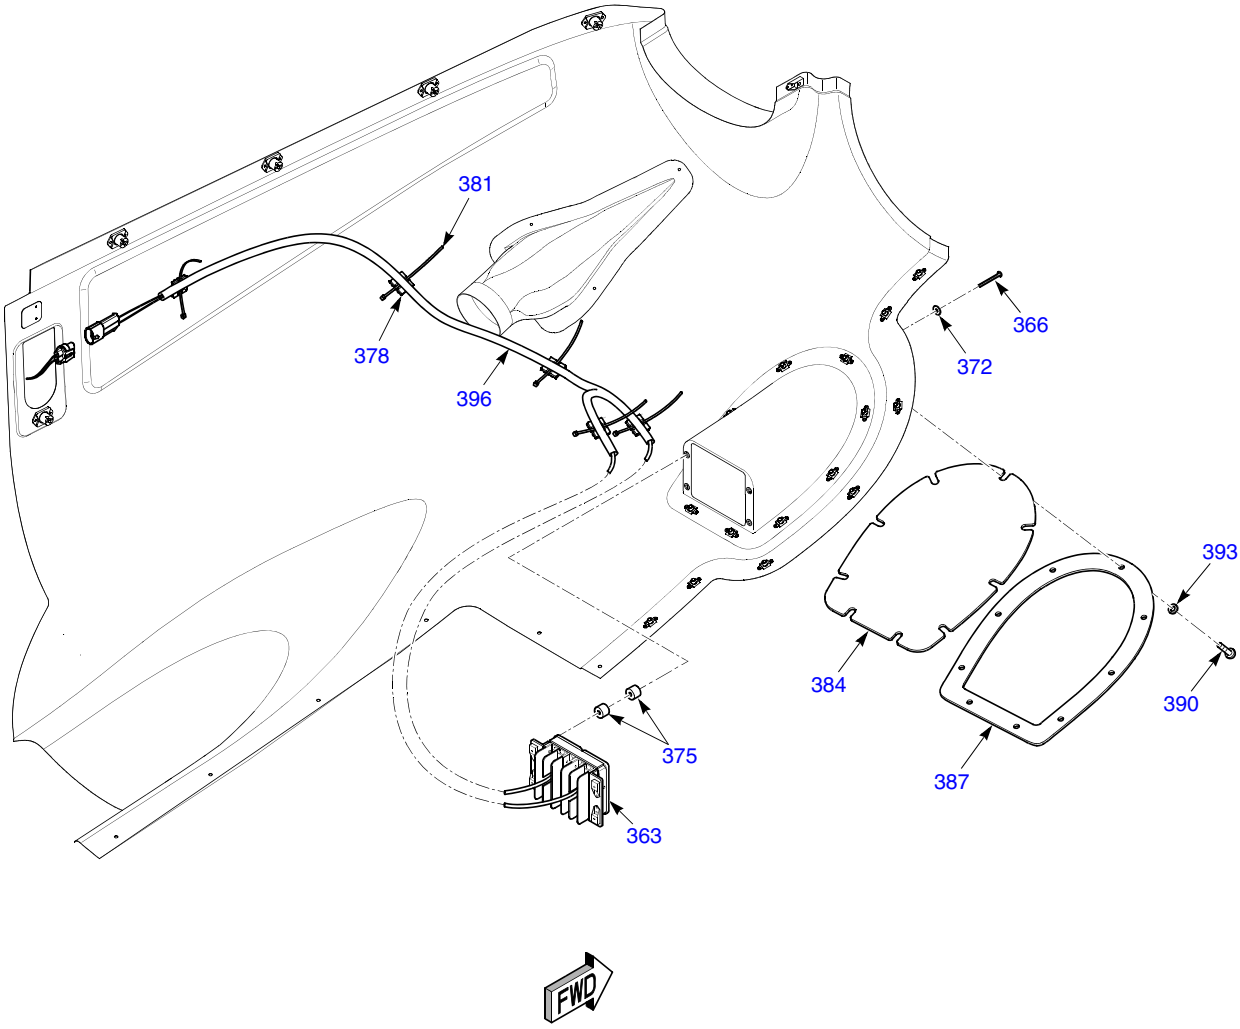

DETAIL E

Serials 22-3026 thru 3827 after SB2X-33-07,
3828 & subs 22T-0001 thru 0187 after SB2X-33-07, 22T-0188 w/ Anniversary,
22T-0268 & subs w/ LED.

SR22_PC33_2002A

Figure -01
Landing Light w/ LED - Serials 22-3026-3827 after SB2X-33-07, 3828 & subs 22T-0001-0187 after SB2X-33-07, 22T-0188 w/ Anniversary, 22T-0268 & subs (5 of 5)

EFFECTIVITY:
Serials 22-3026-3827 after SB2X-33-07, 3828 & subs 22T-0001-0187 after SB2X-33-07, 22T-0188 w/ Anniversary, 22T-0268 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		LANDING LIGHT INSTALLATION	0002	0820	NP
-	3	14199-001			·LENS, LANDING LIGHT	0002	0099	1
	6	14199-002			·LENS, LANDING LIGHT	0100	0319	1
	9	15205-001			·LENS, LANDING LIGHT	0320	0820	1
					FOR SPARES USE P/N 17983-001			
					FOR SPARES USE P/N 17984-001			
	12	MS24694S6		A	·SCREW	0002	0319	8
	15	51219-044		A	·SCREW	0320	0820	8
-	18	14257-001			·HOUSING, LANDING LIGHT	0002	0118	1
					BEFORE SB2X-33-03			
	21	14257-002			·HOUSING, LANDING LIGHT	0119	0319	1
					BEFORE SB2X-33-03			
	22	14257-002	%		·HOUSING, LANDING LIGHT	0002	0319	1
					AFTER SB2X-33-03			
	24	MS27039-0807		A	·SCREW	0002	0319	3
	27	14525-103			·BULB ASSEMBLY	0002	0319	1
					FOR SPARES USE P/N 14830-003			
	28	12580-123			·BULB ASSEMBLY	0320	0820	1
					FOR SPARES USE P/N 14830-003			
	29	14830-002			·BULB ASSEMBLY	0002	0820	1
					FOR SPARES USE P/N 14830-003			
	30	14830-003			·BULB ASSEMBLY	0002	0820	1
-	31	12580-102			··BULB	0002	0820	1
					FOR SPARES USE P/N 53419-001			
-	32	53419-001			··BULB	0002	0820	1
	33	14210-001		A	·RING, LANDING LIGHT	0002	0118	2
					BEFORE SB22-01-00			
	36	14206-001		A	·HEAT SHIELD, LANDING LIGHT	0002	0118	1
					BEFORE SB22-01-00			
	39	MS35207-269		A	·SCREW	0002	0118	2
					BEFORE SB22-01-00			
	42	NAS1149F0332P		A	·WASHER	0002	0118	2
					BEFORE SB22-01-00			
	45	NAS43DD3-24FC		A	·SPACER	0002	0118	3
					BEFORE SB22-01-00			
	48	NAS1149F0332P		A	·WASHER	0002	0118	6
					BEFORE SB22-01-00			
	50	50500-005		A	·SPRING, COMPRESSION	0002	0118	3
					BEFORE SB22-01-00			
	52	15204-105	@		·SHIM	0320	0820	1
	54	12580-108		A	·LAMP GASKET	0002	0820	1
					AFTER SB22-01-00			
	57	14559-001		A	·CLAMP RING ASSEMBLY	0002	0820	1
					AFTER SB22-01-00			
	60	PRT OF ITM 57		A	·SCREW	0002	0820	1
					AFTER SB22-01-00			
	63	PRT OF ITM 57		A	·LOCK NUT	0002	0820	1
					AFTER SB22-01-00			
-	66	PRT OF ITM 57		A	·O-RING	0002	0820	1
					AFTER SB22-01-00			
-	69	14682-001			·HEAT SHIELD, LANDING LIGHT	0119	0204	1
	72	14828-001			·HEAT SHIELD, LANDING LIGHT	0002	0319	1
					AFTER SB22-01-00			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	75	MS21042-08		A	·NUT, SELF LOCKING	0320	0820	1
	78	NAS1149F0332P		A	·WASHER	0002	0319	3
					AFTER SB22-01-00			
	81	NAS1149DN832K	&	A	·WASHER	0320	0820	3
	84	50500-005		A	·SPRING, COMPRESSION	0002	0319	1
					AFTER SB22-01-00			
	87	50500-004		A	·SPRING, COMPRESSION	0320	0820	1
	90	MS35206-253		A	·SCREW	0002	0820	1
					AFTER SB22-01-00			
	93	MS21042-08		A	·NUT, SELF LOCKING	0002	0820	2
					AFTER SB22-01-00			
	96	NAS1149DN816K		A	·WASHER, #8	0002	0319	2
					ALTERNATE FOR P/N NAS1149DN816P			
					AFTER SB22-01-00			
	99	NAS1149DN832K	&	A	·WASHER, #8	0002	0319	2
					ALTERNATE FOR P/N NAS1149DN832P			
					AFTER SB22-01-00			
	102	NAS1149DN832K		A	·WASHER	0320	0820	2
	105	14502-003		A	·VIBRATION MOUNT	0002	0319	2
					AFTER SB22-01-00			
					ALTERNATE FOR P/N 14502-002			
-	108	14502-002		A	·VIBRATION MOUNT	0002	0319	2
					ALTERNATE FOR P/N 14502-003			
	111	14502-003		A	·VIBRATION MOUNT	0320	0820	2
					ALTERNATE FOR P/N 14502-001			
-	114	14502-001		A	·VIBRATION MOUNT	0320	0820	2
					ALTERNATE FOR P/N 14502-003			
-	117	NO PRT NUMBER	(		LANDING LIGHT BALLAST ASSEMBLY	0002	0820	NP
					BEFORE SB2X-33-04			
					FOR SPARES USE 70244-001			
	120	12580-107	(		·HARNESS, RECEPTACLE TO BULB	0002	0319	1
	123	12580-109	(		·HARNESS, RECEPTACLE TO BULB	0320	0820	1
	126	12580-104	(		·H.I.D. BALLAST ASSEMBLY	0002	0820	1
	129	12580-105	(		·HARNESS, BALLAST TO PLUG	0002	0820	1
	132	12580-106	(		·HARNESS, BALLAST POWER INPUT 24V DC	0002	0820	1
-	135	70244-001			·LANDING LIGHT BALLAST ASSEMBLY	0002	0820	NP
-	138	14830-001			··RETROFIT BALLAST	0002	0820	1
	141	18969-102			···H.I.D. BALLAST ASSEMBLY	0002	0820	1
	144	18969-105		A	···SPACER	0002	0820	3
	147	14830-101			···HARNESS, BALLAST POWER INPUT 24V DC	0002	0820	1
	150	14830-102			···HARNESS, BALLAST TO PLUG	0002	0820	1
	153	14830-103			···HARNESS, RECEPTACLE TO BULB	0002	0820	1
	156	14829-001			··MOUNTING ADAPTER	0002	0820	1
	159	MS21042-3		A	··NUT	0002	0820	3
					ALTERNATE FOR P/N NASM21042-3			
-	162	NASM21042-3		A	··NUT	0002	0820	3
					ALTERNATE FOR P/N MS21042-3			
	165	NAS1149F0332P		A	··WASHER	0002	0820	3
	168	50943-025			·LOOM	0002	0820	AR
	171	50132-001		A	·TIE DOWN	0002	0820	7
	174	MS3367-1-9		A	·STRAP, TIE DOWN	0002	0820	7
	177	AN525-10R8		A	·SCREW	0002	0820	3
	180	MS21919WDG6		A	·CLAMP	0002	0820	2
	183	14198-102		A	·TAB, MOUNTING	0004	0319	2

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	186	15204-102		A	·TAB, MOUNTING	0320	0820	2
					FOR SPARES USE P/N 14198-102			
	189	MS21042-3		A	·NUT	0002	0820	2
	192	MS24694S6		A	·SCREW	0004	0820	2
-	195	14198-101			·LOOM	0002	0319	AR
	198	14198-103			·LOOM	0004	0319	AR
	201	50943-025			·LOOM	0320	0820	AR
-	204	NO PRT NUMBER			LANDING LIGHT INSTALLATION W/ HID	0821 / 0001	/	NP
	207	20179-001			·LENS, LANDING LIGHT	0821	1821	1
					FOR SPARES USE P/N 17298-001			
					FOR SPARES USE P/N 17299-001			
	210	17298-001			·LENS, LANDING LIGHT	1822 / 0001	/	1
	213	17299-001			·LENS RETAINER, LANDING LIGHT	1822 / 0001	/	1
	216	AN525-10R18		A	·SCREW	0821 / 0001	/	9
	219	50813-003		A	·WASHER	0821 / 0001	/	9
	222	20247-101			·BULB ASSEMBLY	0821	3388	1
					FOR SPARES USE P/N 18969-101			
	225	20247-201			·BULB ASSEMBLY	3389	3495	1
					FOR SPARES USE P/N 18969-101			
	228	18969-101			·BULB ASSEMBLY	3496 / 0001	/	1
-	230	53419-001			··BULB	3389 / 0001	/	1
	231	20247-104			·LENS, LAMP	0821	3495	1
					FOR SPARES USE P/N 20247-210			
	234	MS35206-236		A	·SCREW	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1801-06-18			
-	235	NAS1801-06-18		A	·SCREW	0821 / 0001	/	4
					ALTERNATE FOR P/N MS35206-236			
	237	20375-001		A	·RUBBER MOUNT	0821 / 0001	/	4
	240	20247-106	(		·HARNESS, RECEPTACLE TO BULB	0821	3388	1
					BEFORE SB2X-33-04			
	243	20247-206	(		·HARNESS, RECEPTACLE TO BULB	3389	3495	1
					BEFORE SB2X-33-04			
	246	18969-103			·HARNESS, RECEPTACLE TO BULB	3496 / 0001	/	1
	249	50943-050	#		·LOOM	0821 / 0001	/	AR
	252	50132-001		A	·TIE DOWN	0821 / 0001	/	7
	255	MS3367-1-9		A	·STRAP, TIE DOWN	0821 / 0001	/	7
	258	20247-103	(		·H.I.D. BALLAST ASSEMBLY	0821	3388	1
					BEFORE SB2X-33-04			
	261	20247-203	(		·H.I.D. BALLAST ASSEMBLY	3389	3495	1
					BEFORE SB2X-33-04			
	264	18969-102			·H.I.D. BALLAST ASSEMBLY	3496 / 0001	/	1
	267	MS21042-3	^	A	·NUT	0821	3495	3
					ALTERNATE FOR P/N MS21044N3			
-	270	MS21044N3	^	A	·NUT	0821	3495	3
					ALTERNATE FOR P/N MS21042-3			
	273	NAS1149F0332P	^	A	·WASHER	0821	3495	3
	276	AN3-4A	*	A	·BOLT	3026	3495	3
	279	NAS1149F0332P	*	A	·WASHER	3026	3495	3
	280	20247-209	(	A	·SPACER	3389	3495	1
	282	18969-105		A	·SPACER	3496 / 0001	/	3
	285	20247-105	(		·HARNESS, BALLAST TO PLUG	0821	3388	1
					BEFORE SB2X-33-04			
	288	20247-205	(		·HARNESS, BALLAST TO PLUG	3389	3495	1
					BEFORE SB2X-33-04			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	291	20247-107	(			·HARNESS, BALLAST POWER INPUT 24V DC	0821	3388	1
						BEFORE SB2X-33-04			
	294	20247-207	(			·HARNESS, BALLAST POWER INPUT 24V DC	3389	3495	1
						BEFORE SB2X-33-04			
	297	18969-104				·HARNESS, BALLAST POWER	3496 / 0001	/	1
-	300	70244-001				·LANDING LIGHT BALLAST ASSEMBLY	0821	3495	NP
-	303	14830-001				··RETROFIT BALLAST	0821	3495	1
	306	18969-102				···H.I.D. BALLAST ASSEMBLY	0821	3495	1
	309	18969-105		A		···SPACER	0821	3495	3
	312	14830-101				···HARNESS, BALLAST POWER INPUT 24V DC	0821	3495	1
	315	14830-102				···HARNESS, BALLAST TO PLUG	0821	3495	1
	318	14830-103				···HARNESS, RECEPTACLE TO BULB	0821	3495	1
	321	14829-001				··MOUNTING ADAPTER	0821	3495	1
	324	MS21042-3		A		··NUT	0821	3495	3
						ALTERNATE FOR P/N NASM21042-3			
-	327	NASM21042-3		A		··NUT	0821	3495	3
						ALTERNATE FOR P/N MS21042-3			
	330	NAS1149F0332P		A		··WASHER	0821	3495	3
	333	MS21919WDG8	$	A		·CLAMP	0821	3495	1
-	336	MS21919WDG11	$	A		·CLAMP	0821	3495	1
	339	50083-090		A		·TAB, MOUNTING	0821	3495	1
						ALTERNATE FOR P/N 14198-102			
-	342	50031-090		A		·TAB, MOUNTING	0821	3495	1
						ALTERNATE FOR P/N 15204-102			
	345	MS21042-3		A		·NUT	0821	3495	1
						ALTERNATE FOR P/N MS21044N3			
-	348	MS21044N3		A		·NUT	0821	3495	1
						ALTERNATE FOR P/N MS21042-3			
	351	NAS1149F0332P		A		·WASHER	0821	3495	1
	354	MS24694S6		A		·SCREW	0821	3495	1
	357	50943-063	#			·LOOM	0821	3495	AR
-	360	NO PRT NUMBER	!			LANDING LIGHT INSTALLATION W/ LED	3828 / 0268	/	NP
	363	24946-001				·LANDING LIGHT, LED	3828 / 0268	/	1
						AFTER SB2X-33-07	3026 0001		
	366	NAS1801-06-18		A		·SCREW	3828 / 0268	/	4
						ALTERNATE FOR P/N MS35206-236			
						AFTER SB2X-33-07	3026 0001		
-	369	MS35206-236		A		·SCREW	3828 / 0268	/	4
						ALTERNATE FOR P/N NAS1801-06-18			
						AFTER SB2X-33-07	3026 0001		
	372	NAS1149F0632P		A		·WASHER	3828 / 0268	/	4
						AFTER SB2X-33-07	3026 0001		
	375	20375-001		A		·RUBBER MOUNT	3828 / 0268	/	8
						AFTER SB2X-33-07	3026 0001		
	378	50132-001		A		·TIE DOWN	3828 / 0268	/	5
						AFTER SB2X-33-07	3026 0001		
	381	MS3367-1-9		A		·STRAP, TIE DOWN	3828 / 0268	/	5
						AFTER SB2X-33-07	3026 0001		
	384	17298-001				·LENS, LANDING LIGHT	3828 / 0268	/	1
						AFTER SB2X-33-07	3026 0001		
	387	17299-001				·LENS RETAINER, LANDING LIGHT	3828 / 0268	/	1
						AFTER SB2X-33-07	3026 0001		
	390	51219-050		A		·SCREW	3828 / 0268	/	9
						AFTER SB2X-33-07	3026 0001		

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	393	50813-003		A	·WASHER	3828 / 0268	/	9
					AFTER SB2X-33-07	3026 0001		
	396	29277-001			·HARNESS, POWER	3828 / 0268	/	1
					AFTER SB2X-33-07	3026 0001		
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 FOR PART IDENTIFICATION.			
			&		TWO ADDITIONAL WASHERS MAY BE USED TO ADJUST FIT.			
			@		SHIM MAY BE INSTALLED, AS REQUIRED, BETWEEN CLAMP AND GASKET.			
			#		LOPRESTI LANDING LIGHT ASSEMBLIES COME WITH SHIELDED WIRES, LOOM IS OPTIONAL.			
			$		USE MS21919WDG11 CLAMP WITH OPTIONAL 50943-063 LOOM.			
			%		ONLY REQUIRED FOR OIL SUMP TO LANDING LIGHT HOUSING CONTACT.			
			^		INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			
			*		INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.			
			!		INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 THRU 22T-0188 AS OPTIONAL EQUIPMENT.			
			(		IF REPLACING, ORDER KIT 70244-001			

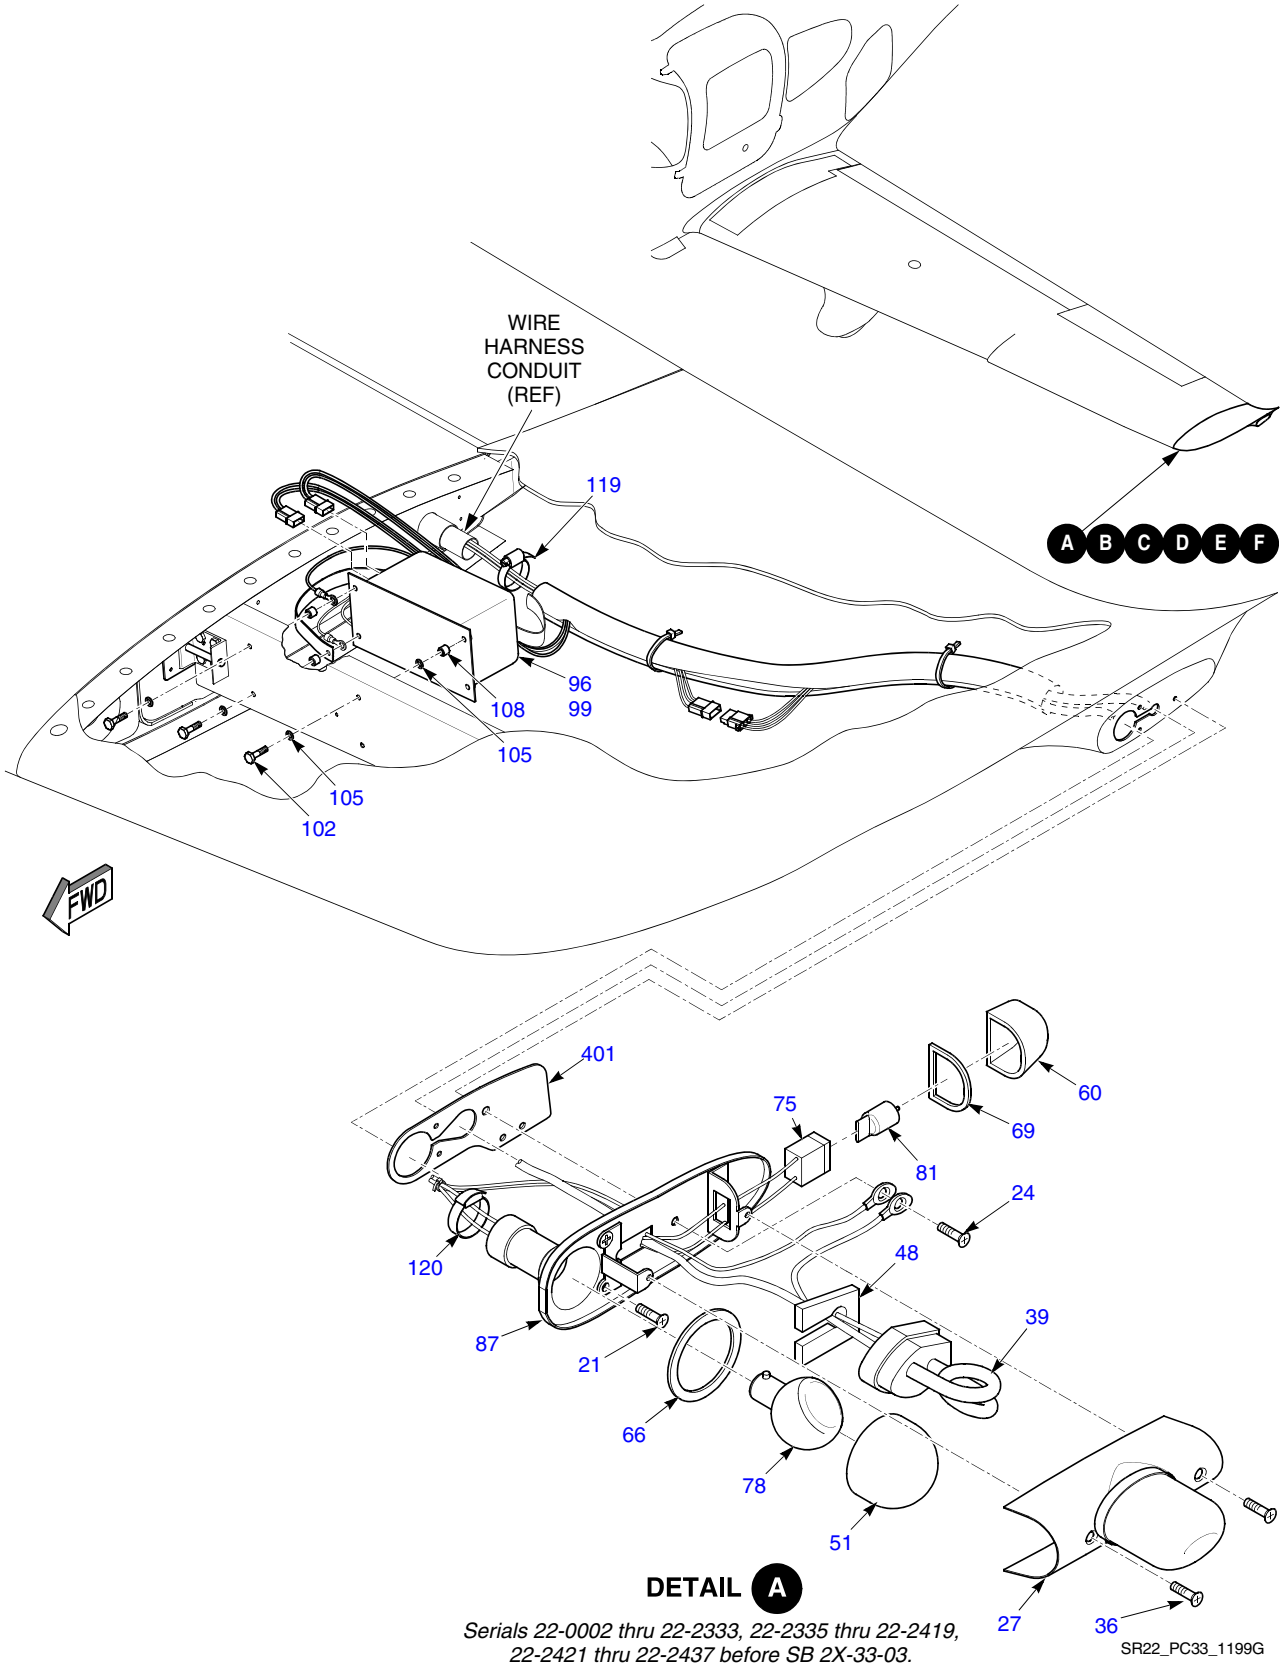

Figure-02

Anti-Collision Light - Serials 22-0002 thru 22-2437 before SB2X-33-03 (1 of 5)

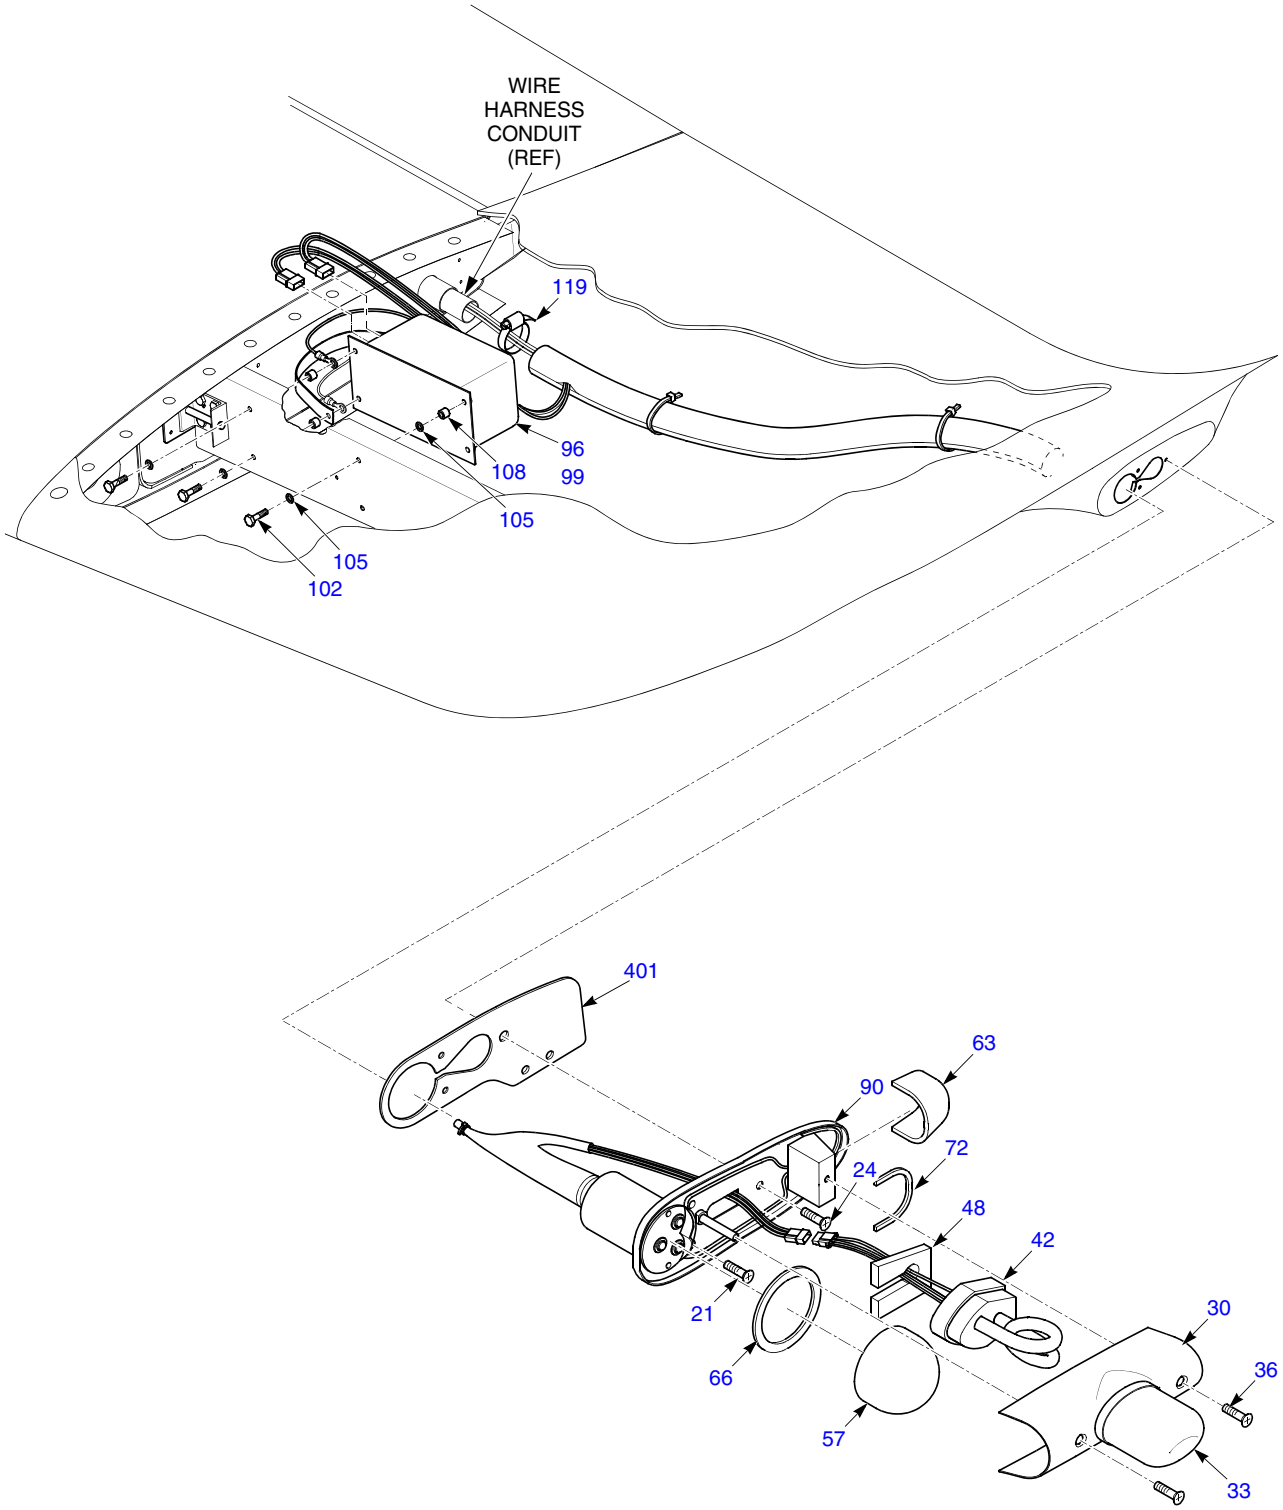

DETAIL B

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437 after SB 2X-33-03.

SR22_PC33_1872B

Figure-02

Anti-Collision Light - Serials 22-0002 thru 22-2437 after SB2X-33-03 (2 of 5)

EFFECTIVITY:
All

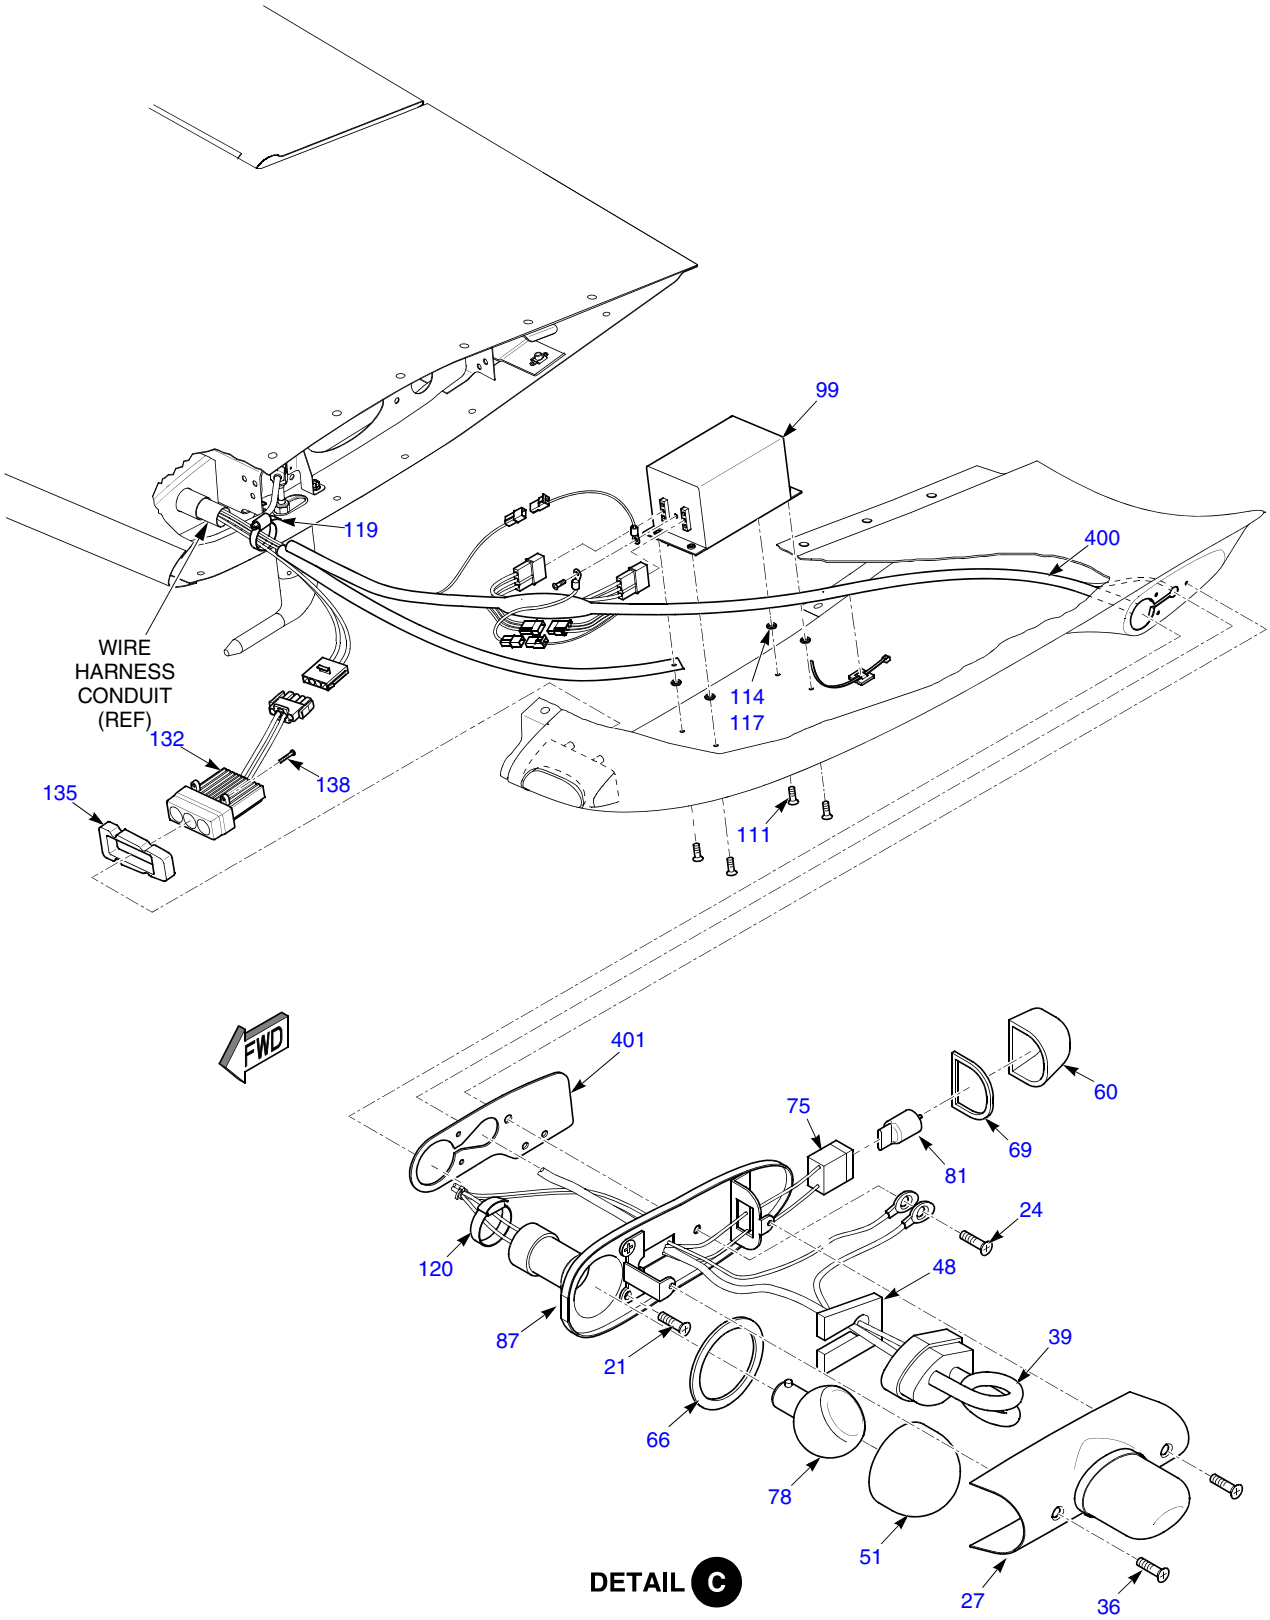

Serials 22-2334, 22-2420, 22-2438 thru 22-3416 before SB 2X-33-03.

SR22_PC33_1673D

Figure-02

Anti-Collision & Recognition Light - Serials 22-2438 thru 22-3416 before SB2X-33-03 (3 of 5)

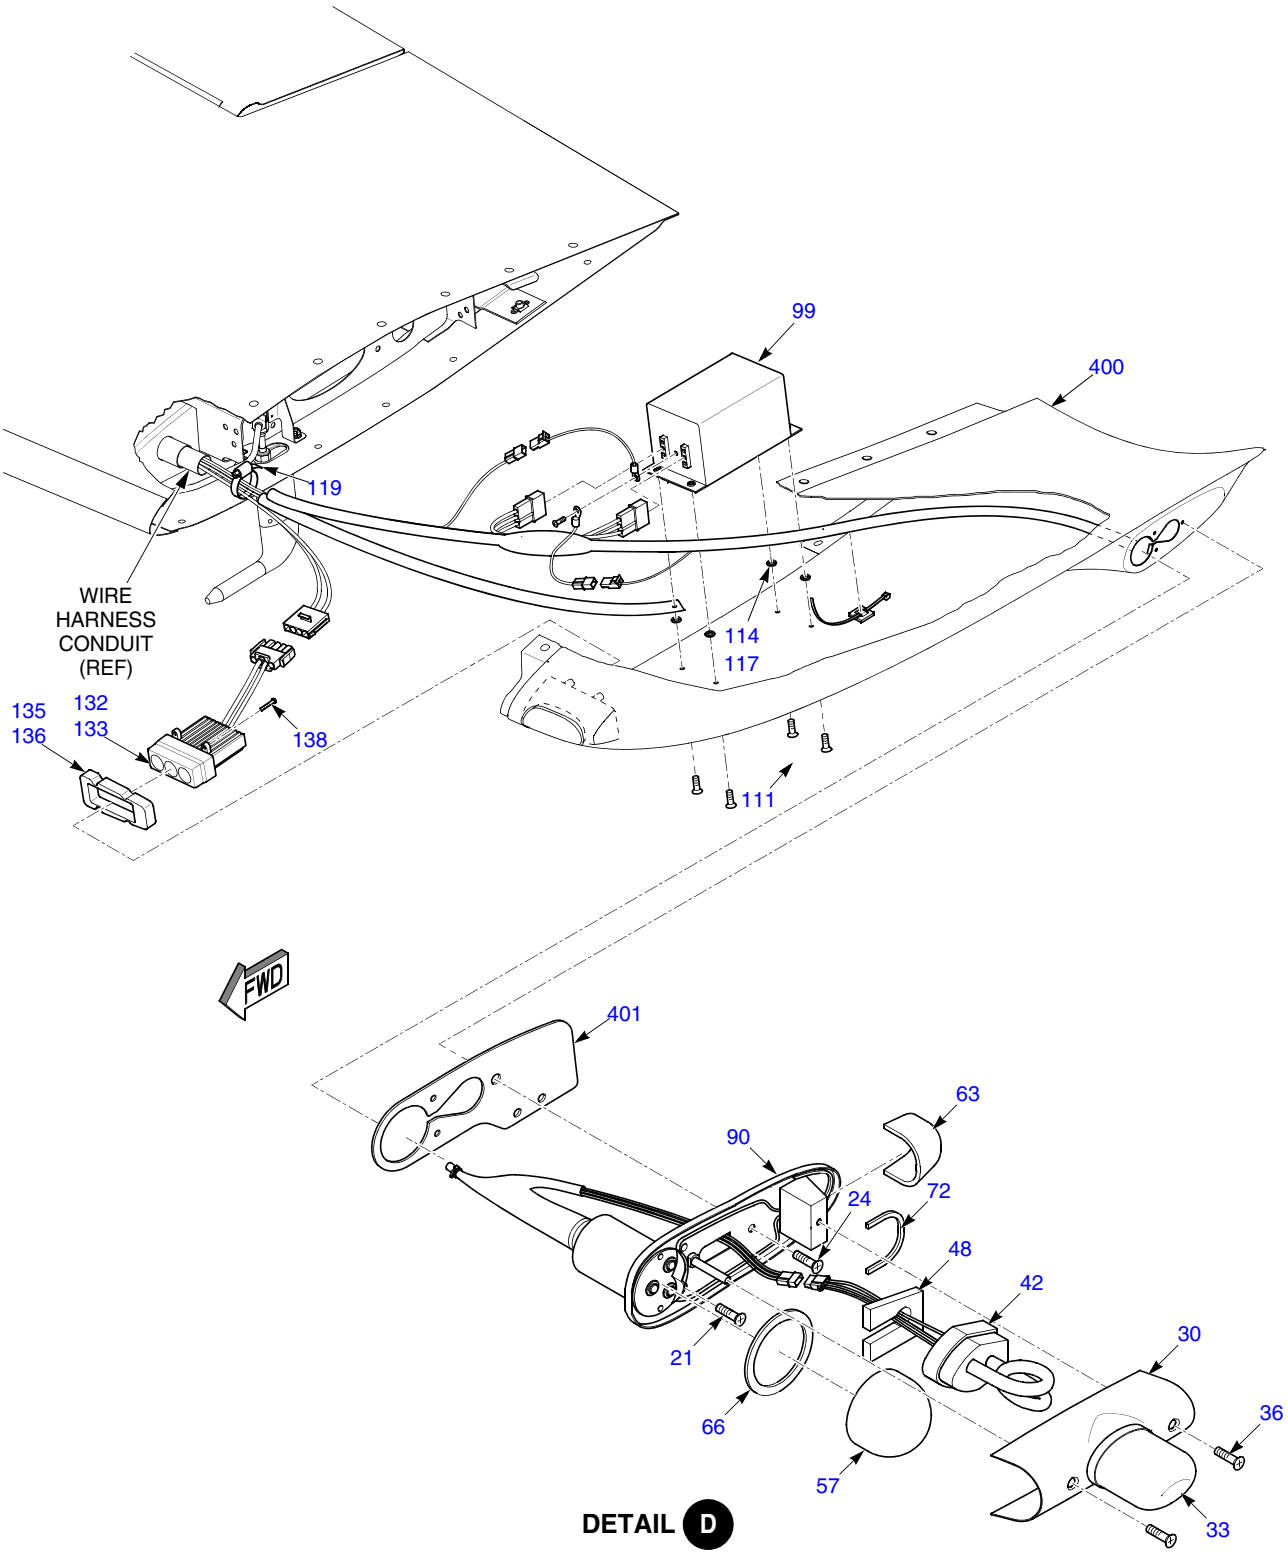

DETAIL D

Serials 22-3417 thru 22-4030, 22-4032, 22-4045 w/ LED/Flash Tube Strobe, 22-2334, 22-2420, 22-2438 thru 22-3416 after SB 2X-33-03, 22T-0189 thru 22T-0656, 22T-0658 thru 22T-0689 w/ LED/Flash Tube Strobe, 22T-0001 thru 22T-0188 w/o Anniversary Option.

SR22_PC33_1874D

Figure-02

Anti-Collision & Recognition Light - Serials w/ LED/Flash Tube Strobe (Sheet 4 of 5)

EFFECTIVITY:
All

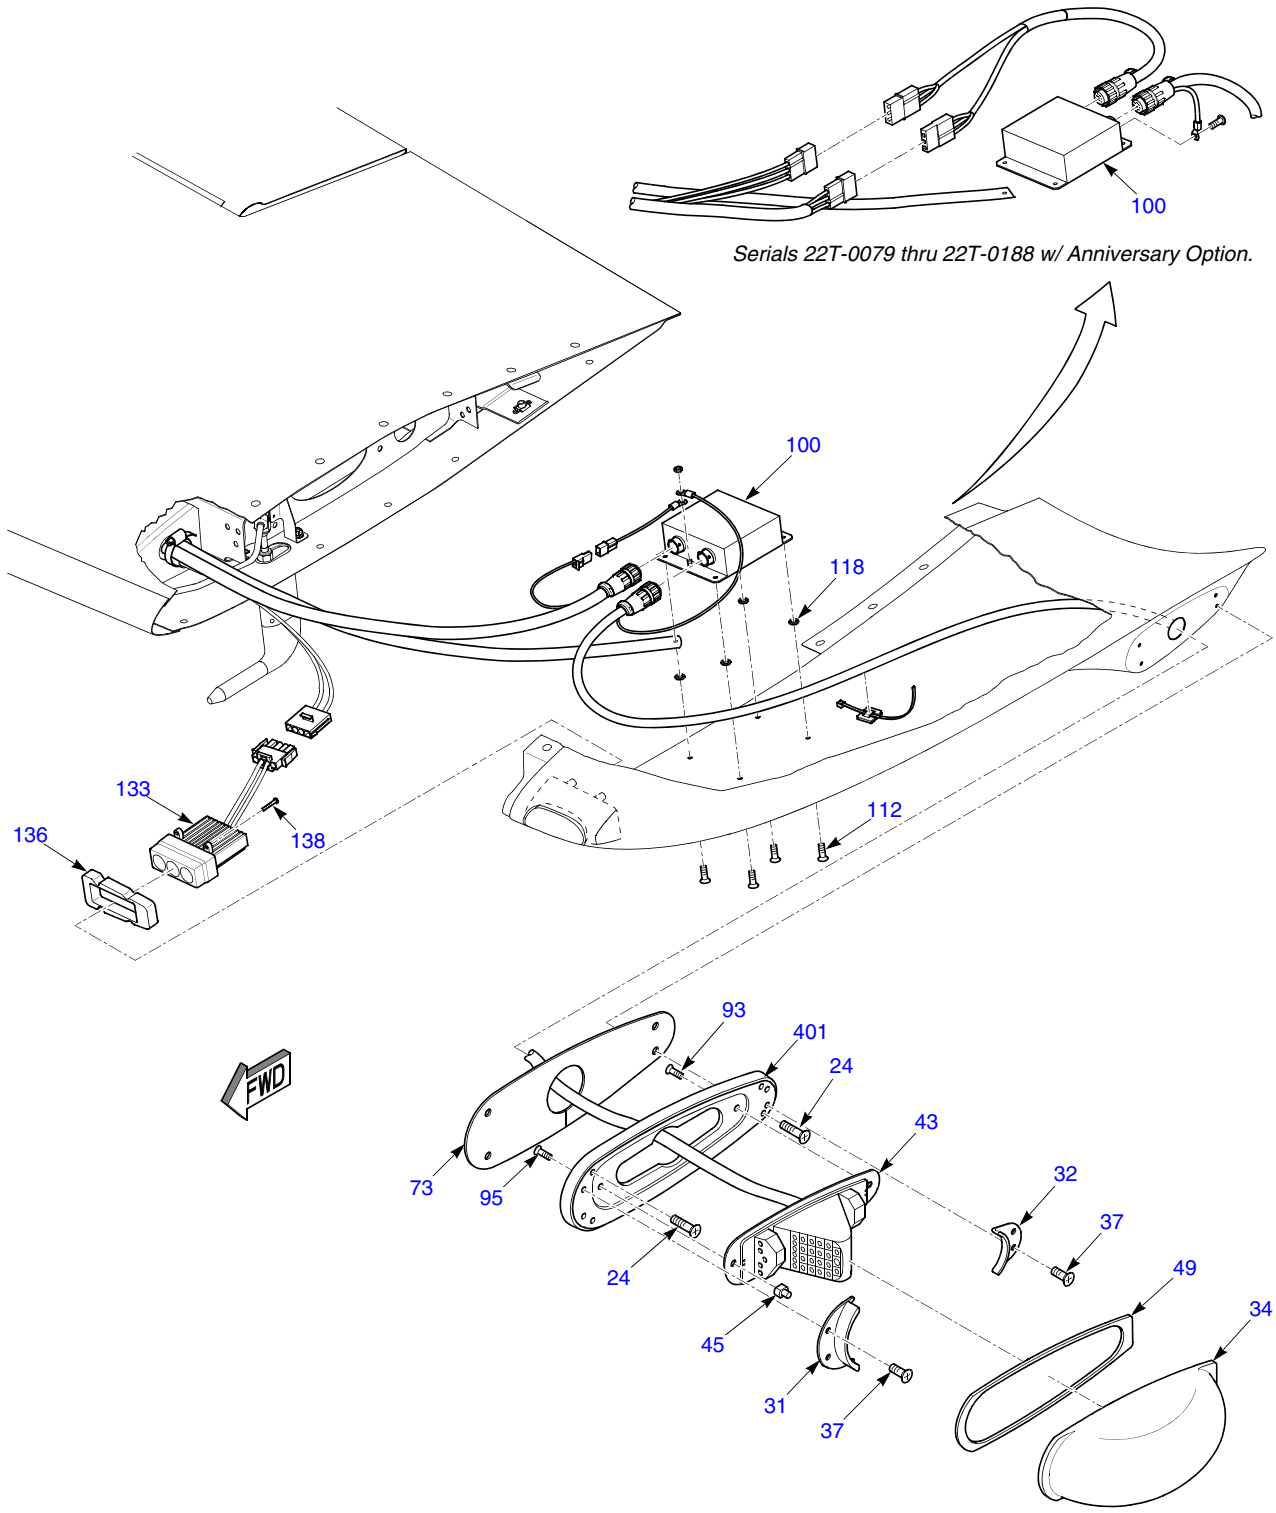

DETAIL E

Serials 22-3828 thru 22-4030, 22-4032, 22-4045 w/ LED Strobe,
22T-0268 thru 22T-0656, 22T-0658 thru 22T-0689 w/ LED Strobe,
22T-0079 thru 22T-0188 w/ Anniversary Option.

SR22_PC33_2001B

Figure-02

Anti-Collision & Recognition Light - Serials w/ LED Strobe (Sheet 5 of 5)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		ANTI-COLLISION AND RECOGNITION LIGHT INSTL	0002 / 0001	/	NP
-	3	50626-002			·ANTI-COLLISION LIGHT ASSEMBLY, LH (RED)	0002	1703	1
					FOR SPARES USE P/N 17140-001			
-	6	17140-001			·ANTI-COLLISION LIGHT ASSEMBLY, LH (RED)	1704	3416	1
-	9	17140-005			·ANTI-COLLISION LIGHT ASSEMBLY, LH (RED)	3417 / 0001	/	1
					AFTER SB2X-33-03	0002	3416	
-	11	17140-007	$		·ANTI-COLLISION LIGHT ASSEMBLY, LH (LED)	3828 / 0268	/	1
-	12	50626-001			·ANTI-COLLISION LIGHT ASSEMBLY, RH (GREEN)	0002	1703	1
					FOR SPARES USE P/N 17140-002			
-	15	17140-002			·ANTI-COLLISION LIGHT ASSEMBLY, RH (GREEN)	1704	3416	1
-	18	17140-006			·ANTI-COLLISION LIGHT ASSEMBLY, RH (GREEN)	3417 / 0001	/	1
					AFTER SB2X-33-03	0002	3416	
-	20	17140-008	$		·ANTI-COLLISION LIGHT ASSEMBLY, RH (LED)	3828 / 0268	/	1
	21	MS35206-230		A	·SCREW	0002 / 0001	/	2
	24	MS24693-S28		A	·SCREW	0002 / 0001	/	1
			$			3828 / 0268	/	4
	27	50988-001			··LENS/RETAINER	0002	3416	1
	30	19-170049-010			··RETAINER	3417 / 0001	/	1
	31	19-171471-100	$		··RETAINER	3828 / 0268	/	1
	32	19-151003-100	$		··RETAINER	3828 / 0268	/	1
	33	68-2290005-34			··LENS	3417 / 0001	/	1
	34	68-3990574A30	$		··LENS	3828 / 0268	/	1
	36	14-0050508-27		A	··SCREW	0002 / 0001	/	2
	37	14-0050581-03	$	A	··SCREW	3828 / 0268	/	2
	39	50909-001			··FLASH TUBE	0002	3416	1
	42	36-0050626-03			··FLASH TUBE	3417 / 0001	/	1
	43	01-0271482-02	$		··LED ASSEMBLY, LH (RED)	3828 / 0268	/	1
-	44	01-0271482-01	$		··LED ASSEMBLY, RH (GREEN)	3828 / 0268	/	1
	45	68-5451007-00	$		··REFLECTOR	3828 / 0268	/	1
-	47	38-0130878-01			··GASKET	0002	1703	1
	48	38-0130107-00			··GASKET	1704 / 0001	/	1
	49	38-0231219-00	$		··GASKET	3828 / 0268	/	1
	51	50936-001			··LENS, GREEN	0002	3416	1
-	54	50937-001			··LENS, RED	0002	3416	1
	57	68-3950902A30			··LENS, CLEAR	3417 / 0001	/	1
	60	68-4250066-30			··LENS, TAIL POSITION	0002	3416	1
	63	68-3950903A30			··LENS, TAIL POSITION	3417 / 0001	/	1
	66	50987-001			··GASKET	0002 / 0001	/	1
	69	38-0130090-00			··GASKET	0002	3416	1
	72	38-0250901-00			··GASKET	3417 / 0001	/	1
	73	17140-101			··GASKET	4207 / 1050	/	
	75	02-0350260-00			··SOCKET	0002	3416	1
	78	50910-001			··LAMP, 28 VOLT	0002	3416	1
	81	50911-001			··LAMP, 28 VOLT	0002	3416	1
-	84	50991-001			··BASEPLATE	0002	1703	1
	87	02-0350259-00			··BASEPLATE	1704	3416	1
	90	01-0290338-06			··BASEPLATE, RED, LH	3417 / 0001	/	1
-	91	01-0290338-05			··BASEPLATE, GREEN, RH	3417 / 0001	/	1
	92	06-171472-100	$		··BASEPLATE	3828 / 0268	/	1
	93	14-0050581-03	$	A	··SCREW	3828 / 0268	/	1
	94	14-0050581-05	$	A	··SCREW	3828 / 0268	/	1
	96	50625-001			·STROBE LIGHT POWER SUPPLY	0002	2199	1
					FOR SPARES USE P/N 14286-002			
	99	14286-002			·STROBE LIGHT POWER SUPPLY	2200 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	100	14286-003	$		·STROBE LIGHT POWER SUPPLY	3828 / 0268	/	1
	102	AN3-6A		A	·BOLT	0002	2437	4
	105	NAS1149D0332J		A	·WASHER	0002	2437	6
	108	NAS43DD3-16	@	A	·SPACER	0002	2437	AR
	111	MS24694-S50		A	·SCREW	2438 / 0001	/	4
	112	MS24694-S6	$	A	·SCREW	/ 0079	/	4
	114	NAS1149F0363P	#	A	·WASHER	2438 / 0001	/	AR
	117	NAS1149F0332P	#	A	·WASHER	2438 / 0001	/	AR
	118	NAS1149FN832P	$	A	·WASHER	3828 / 0268	/	AR
	119	50742-020		A	·CLAMP, HOSE	0002		1
	120	50507-002		A	·CLAMP, BAND	0002	3416	1
					BEFORE SB2X-33-03			
-	121	18285-001			·RECOGNITION LIGHT ASSEMBLY, LH	2438	3124	1
					FOR SPARES USE P/N 18957-001			
-	123	18957-001			·RECOGNITION LIGHT ASSEMBLY, LH	3125	3416	1
-	124	18957-003			·RECOGNITION LIGHT ASSEMBLY, LH	3417 / 0001	/	1
-	126	18285-002			·RECOGNITION LIGHT ASSEMBLY, RH	2438	3124	1
					FOR SPARES USE P/N 18957-002			
-	129	18957-002			·RECOGNITION LIGHT ASSEMBLY, RH	3125	3416	1
-	130	18957-004			·RECOGNITION LIGHT ASSEMBLY, RH	3417 / 0001	/	1
	132	18278-001			·RECOGNITION LIGHT	2438	3416	1
					FOR SPARES USE P/N 18278-002			
	133	18278-002			·RECOGNITION LIGHT	3417 / 0001	/	1
	135	18841-001			·SEAL	3125	3416	1
	136	18841-002			·SEAL	3417 / 0001	/	1
	138	51856-001		A	·SCREW	2438 / 0001	/	4
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 57-20-01 DET			WING TIP INSTALLATION			
	401	RF 23-60-01 DET			STATIC WICK INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 FOR PART IDENTIFICATION.			
			@		SPACER IS OPTIONAL, USE SPACERS IF FACE OF STROBE LIGHT POWER SUPPLY CONTACTS RADII OF SHEAR WEB.			
			#		INSTALL WASHERS AS REQUIRED BETWEEN WING TIP AND STROBE LIGHT POWER SUPPLY SO LOWER SKIN IS NOT DEFORMED.			
			$		INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 THRU 22T-0188 AS OPTIONAL EQUIPMENT.			

Intentionally Left Blank

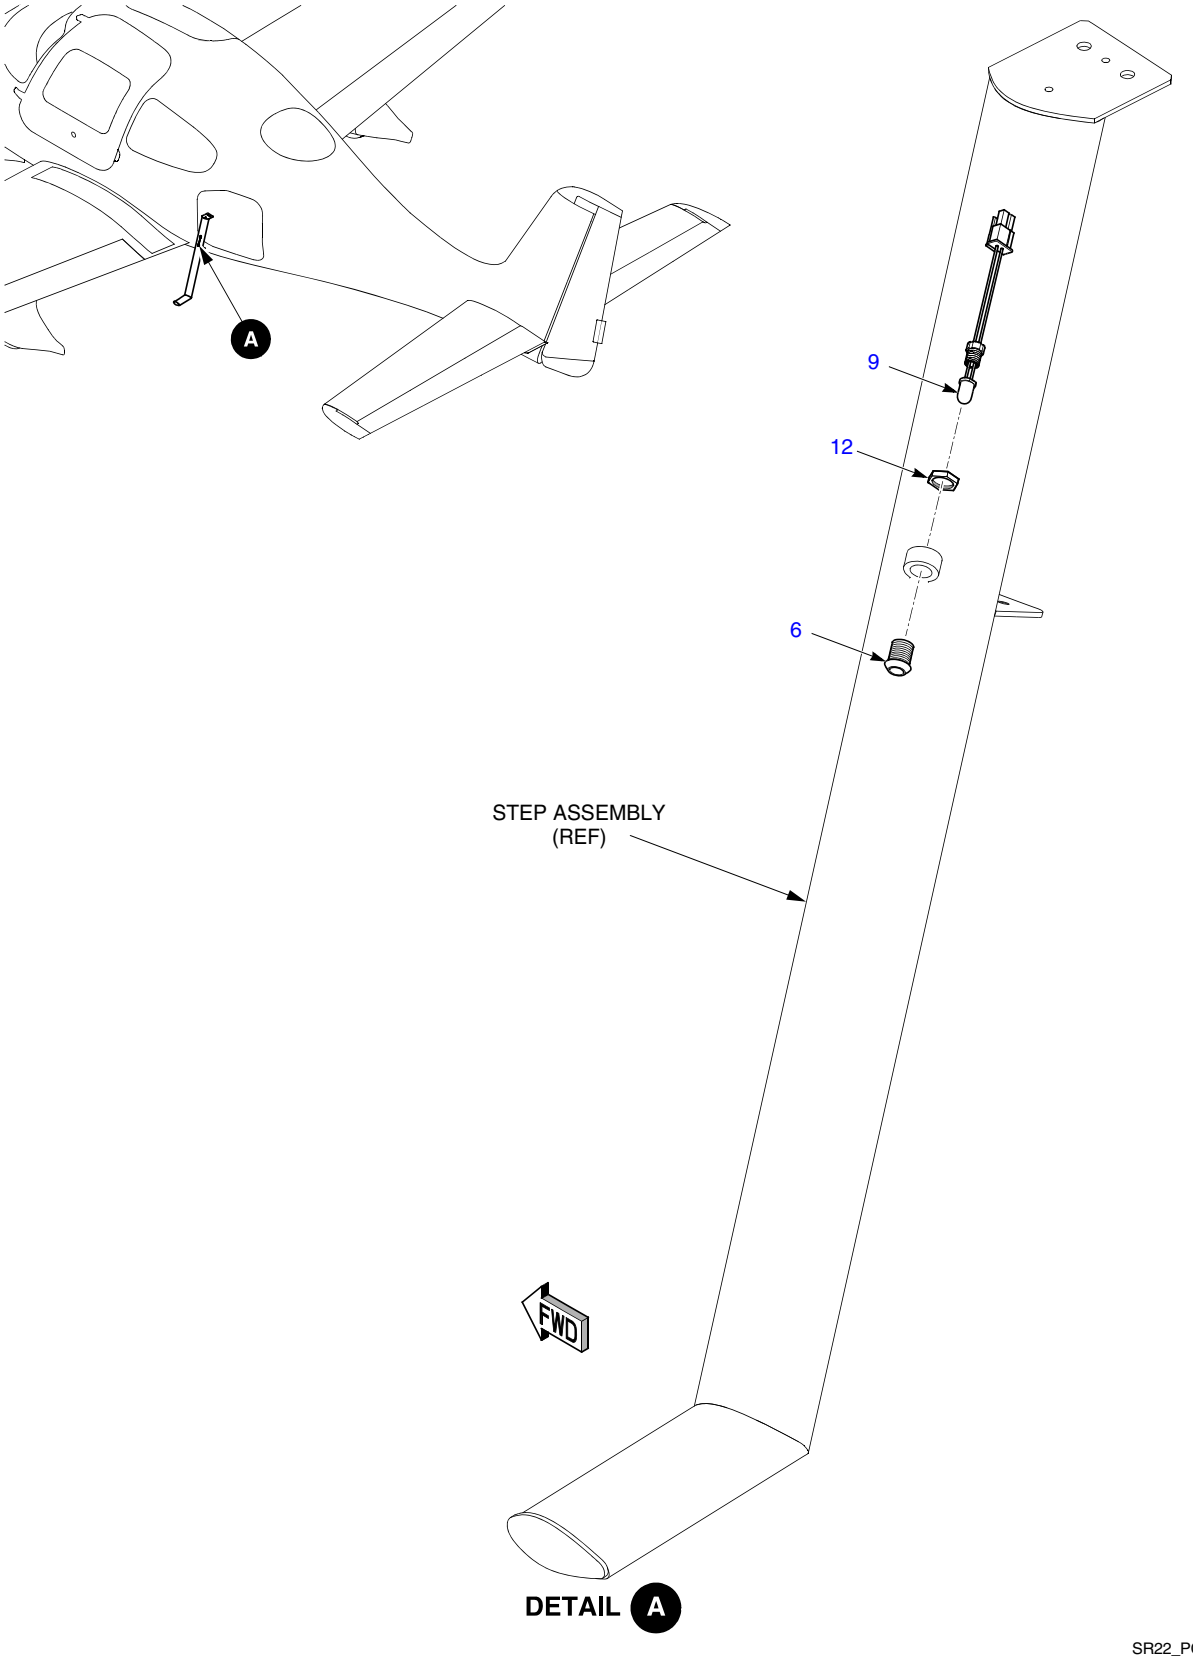

Figure-03

Entry Step LED Assembly - Serials 22-4300 & subs, 22T-1233 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	NO PRT NUMBER			STEP LIGHT INSTALLATION	4300 / 1233	/	NP
-	3	37078-003			·INTERIOR LIGHTING LED ASSEMBLY (STEP)	4300 / 1233	/	2
	6	PRT OF ITEM 3			··LED LAMPHOLDER	4300 / 1233	/	2
	9	PRT OF ITEM 3			··LED ASSEMBLY	4300 / 1233	/	2
	12	PRT OF ITEM 3			··NUT	4300 / 1233	/	2

EFFECTIVITY:
All

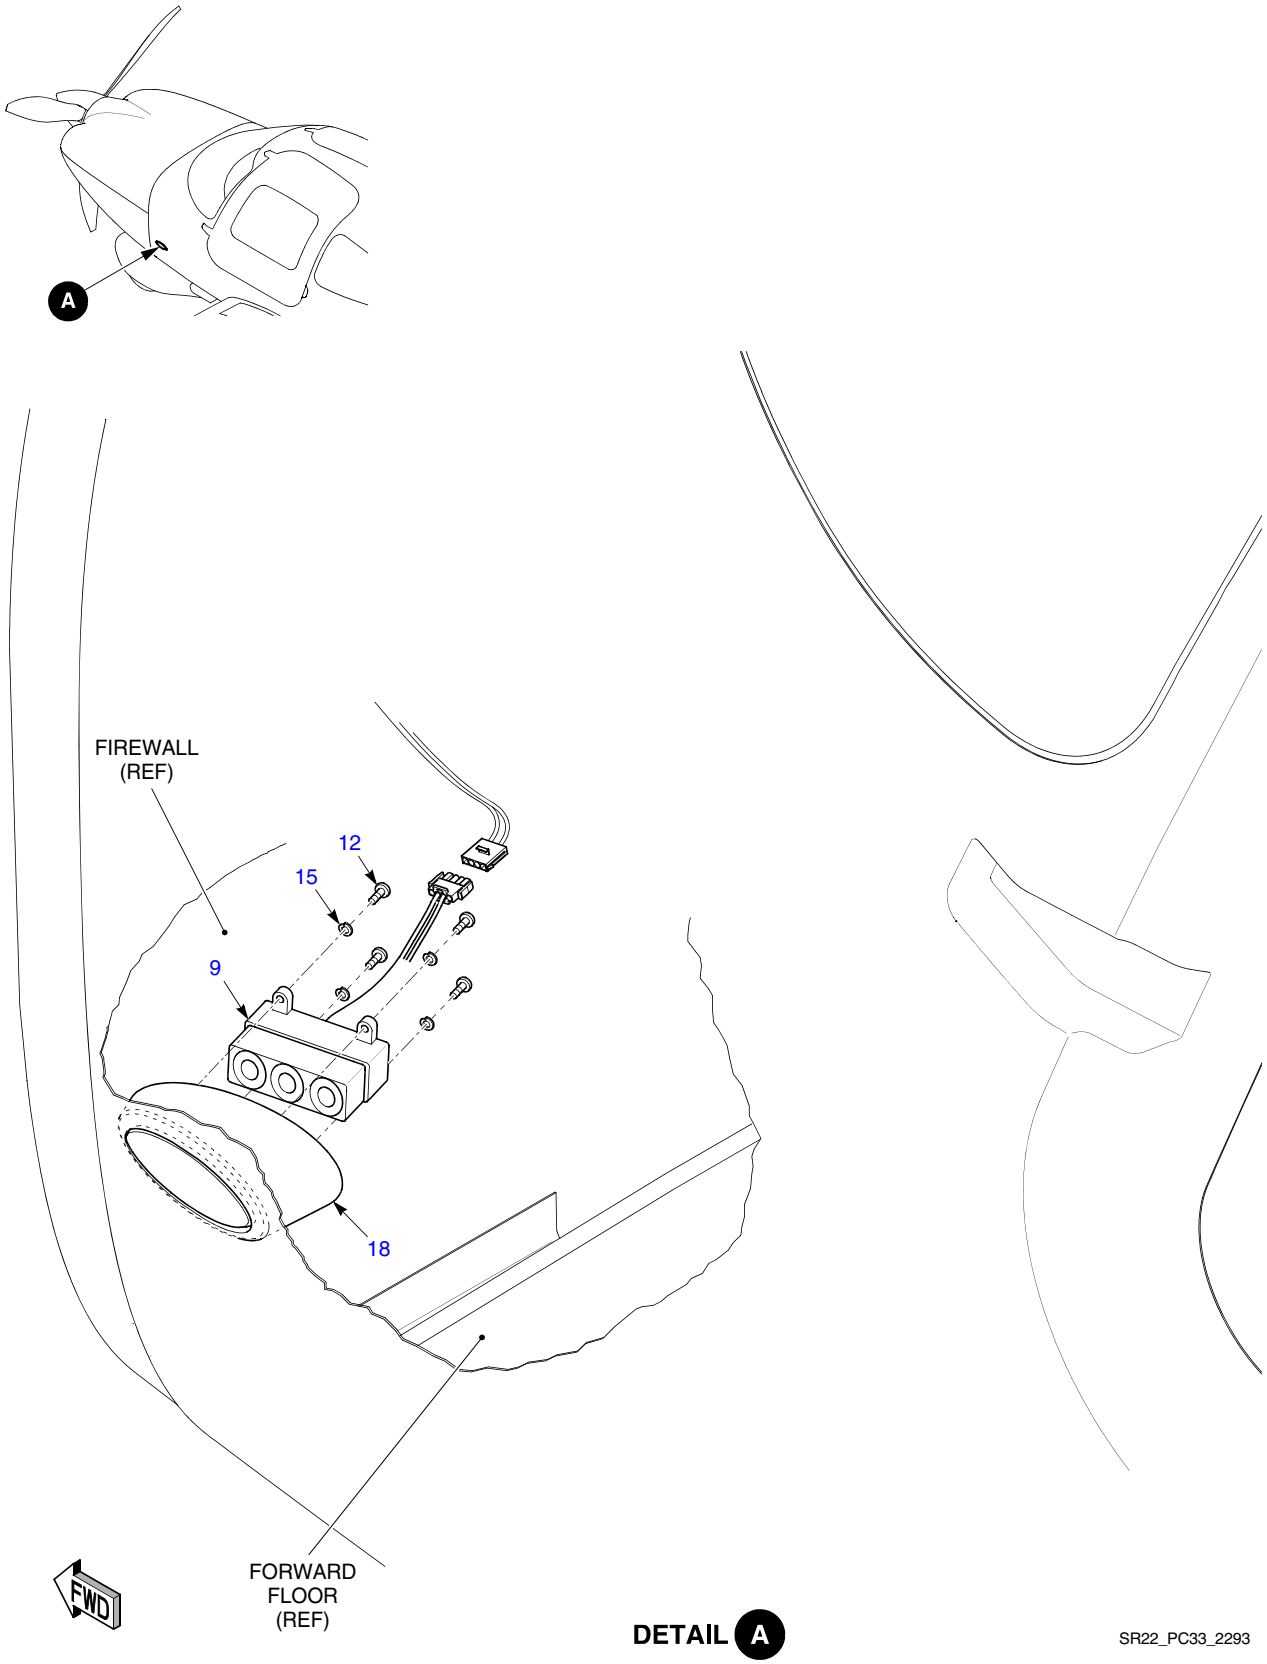

Figure-04

Ice Protection System: Detection - Serials 22-3403 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ICE LIGHT	3403 / 0001	/	NP
-	3	19984-001			·ICE LIGHT ASSEMBLY, LH	3403 / 0001	/	1
-	6	19984-002			·ICE LIGHT ASSEMBLY, RH	3403 / 0001	/	1
	9	18278-002			··ICE LIGHT	3403 / 0001	/	1
	12	MS51957-30		A	··SCREW	3403 / 0001	/	4
	15	MS35338-136		A	··WASHER	3403 / 0001	/	4
	18	PRT OF ITM 3			··LENS/HOUSING	3403 / 0001	/	1
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

CHAPTER

34

NAVIGATION AND PITOT STATIC

Intentionally Left Blank

CHAPTER 34 - NAVIGATION AND PITOT STATIC
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
34-LOEP	1	04 SEP 2018
34-LOEP	2	04 SEP 2018
34-LOEP	3	04 SEP 2018
34-LOEP	4	04 SEP 2018
34-TOC	1	04 SEP 2018
34-TOC	2	04 SEP 2018
34-10-01	1	15 DEC 2014
34-10-01	2	15 DEC 2014
34-10-01	3	15 DEC 2014
34-10-01	4	15 DEC 2014
34-10-01	5	04 SEP 2018
34-10-01	6	04 SEP 2018
34-10-01	7	15 DEC 2014
34-10-01	8	15 DEC 2014
34-10-01	9	15 DEC 2014
34-10-01	10	04 SEP 2018
34-10-01	11	04 SEP 2018
34-10-01	12	04 SEP 2018
34-10-01	13	04 SEP 2018
34-10-01	14	04 SEP 2018
34-10-01	15	04 SEP 2018
34-10-01	16	15 DEC 2014
34-10-02	1	15 DEC 2014
34-10-02	2	15 DEC 2014
34-10-03	1	15 DEC 2014
34-10-03	2	15 DEC 2014
34-10-03	3	15 DEC 2014
34-10-03	4	15 DEC 2014
34-10-04	1	15 DEC 2014
34-10-04	2	15 DEC 2014
34-10-04	3	15 DEC 2014
34-10-04	4	15 DEC 2014
34-10-05	1	15 DEC 2014
34-10-05	2	15 DEC 2014
34-10-05	3	15 DEC 2014
34-10-05	4	15 DEC 2014
34-10-06	1	15 DEC 2014
34-10-06	2	15 DEC 2014
34-10-07	1	04 SEP 2018
34-10-07	2	04 SEP 2018

CHAPTER 34 - NAVIGATION AND PITOT STATIC
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
34-20-01	1	15 DEC 2014
34-20-01	2	15 DEC 2014
34-20-01	3	15 DEC 2014
34-20-01	4	15 DEC 2014
34-20-02	1	15 DEC 2014
34-20-02	2	15 DEC 2014
34-20-02	3	15 DEC 2014
34-20-02	4	15 DEC 2014
34-20-03	1	15 DEC 2014
34-20-03	2	15 DEC 2014
34-20-03	3	15 DEC 2014
34-20-03	4	15 DEC 2014
34-20-04	1	15 DEC 2014
34-20-04	2	15 DEC 2014
34-20-04	3	15 DEC 2014
34-20-04	4	15 DEC 2014
34-20-05	1	15 DEC 2014
34-20-05	2	15 DEC 2014
34-30-01	1	15 DEC 2014
34-30-01	2	15 DEC 2014
34-30-01	3	15 DEC 2014
34-30-01	4	15 DEC 2014
34-40-01	1	15 DEC 2014
34-40-01	2	15 DEC 2014
34-40-01	3	15 DEC 2014
34-40-01	4	15 DEC 2014
34-40-02	1	15 DEC 2014
34-40-02	2	15 DEC 2014
34-40-02	3	15 DEC 2014
34-40-02	4	15 DEC 2014
34-40-02	5	15 DEC 2014
34-40-02	6	15 DEC 2014
34-40-03	1	15 DEC 2014
34-40-03	2	15 DEC 2014
34-40-04	1	01 JAN 2016
34-40-04	2	01 JAN 2016
34-40-04	3	01 JAN 2016
34-40-04	4	01 JAN 2016
34-40-04	5	01 JAN 2016
34-40-04	6	01 JAN 2016

EFFECTIVITY:
All

CHAPTER 34 - NAVIGATION AND PITOT STATIC
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
34-50-01	1	15 DEC 2014
34-50-01	2	15 DEC 2014
34-50-02	1	15 DEC 2014
34-50-02	2	15 DEC 2014
34-50-02	3	15 DEC 2014
34-50-02	4	15 DEC 2014
34-50-02	5	15 DEC 2014
34-50-02	6	15 DEC 2014
34-50-03	1	15 DEC 2014
34-50-03	2	15 DEC 2014
34-50-03	3	04 SEP 2018
34-50-03	4	04 SEP 2018
34-50-04	1	15 DEC 2014
34-50-04	2	19 SEP 2017
34-50-04	3	19 SEP 2017
34-50-04	4	19 SEP 2017
34-50-05	1	15 DEC 2014
34-50-05	2	15 DEC 2014
34-50-05	3	15 DEC 2014
34-50-05	4	15 DEC 2014
34-50-06	1	15 DEC 2014
34-50-06	2	15 DEC 2014
34-50-06	3	15 DEC 2014
34-50-06	4	01 JAN 2016
34-50-06	5	15 DEC 2014
34-50-06	6	19 SEP 2017
34-50-06	7	19 SEP 2017
34-50-06	8	15 DEC 2014
34-50-07	1	15 DEC 2014
34-50-07	2	15 DEC 2014
34-50-08	1	15 DEC 2014
34-50-08	2	04 SEP 2018
34-50-09	1	15 DEC 2014
34-50-09	2	15 DEC 2014
34-60-01	1	15 DEC 2014
34-60-01	2	15 DEC 2014

Intentionally Left Blank

CHAPTER 34 - NAVIGATION AND PITOT STATIC
TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Pitot-Static System - Serials 22-0002 thru 22-0820 w/o PFD before SB2X-34-22 (1 of 9)	34-10-01
Pitot-Static System - Serials 22-0435 thru 22-1862 w/ PFD before SB2X-34-22 (2 of 9)	34-10-01
Pitot-Static System - Serials 22-1863 thru 22-2437 (3 of 9)	34-10-01
Pitot-Static System - Serials 22-2438 & subs w/o Perspective (4 of 9)	34-10-01
Pitot-Static System - Serials w/ Perspective (5 of 9)	34-10-01
Pitot-Static System - Serials w/ MD302 Standby Attitude Module (Sheet 6 of 9)	34-10-01
Pitot-Static System (7 of 9)	34-10-01
Pitot-Static System - Serials 22-0002 & subs w/o Perspective (8 of 9)	34-10-01
Pitot-Static System (9 of 9)	34-10-01
Vertical Speed Indicator - Serials 22-0002 thru 22-0820 w/o PFD	34-10-02
Airspeed Indicator - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)	34-10-03
Airspeed Indicator - Serials 22-0435 & subs w/ PFD, 22T-0001 & subs (2 of 2)	34-10-03
Altimeter - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)	34-10-04
Altimeter - Serials 22-0435 & subs w/ PFD, 22T-0001 & subs (2 of 2)	34-10-04
Electric Clock/OAT - Serials 22-0002 & subs w/o Perspective (1 of 2)	34-10-05
Electric Clock/OAT - Serials w/ Perspective (2 of 2)	34-10-05
Air Data Computer - Serials w/ Perspective	34-10-06
MD302 Standby Attitude Module	34-10-07
Magnetic Compass - Serials 22-0002 thru 22-0820 (1 of 2)	34-20-01
Magnetic Compass - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)	34-20-01
Attitude Indicator - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)	34-20-02
Attitude Indicator - Serials 22-0435 & subs w/ PFD, 22T-0001 & subs (2 of 2)	34-20-02
Turn Coordinator - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)	34-20-03
Turn Coordinator - Serials 22-0435 & subs w/ PFD and w/o Perspective (2 of 2)	34-20-03
Magnetometer/OAT Sensor - Serials 22-0435 thru 22-2437 w/ PFD (1 of 3)	34-20-04
Magnetometer/OAT Sensor - Serials 22-2438 & subs w/o Perspective (2 of 3)	34-20-04
Magnetometer/OAT Sensor - Serials w/ Perspective (3 of 3)	34-20-04
Attitude Heading Reference System - Serials w/ Perspective	34-20-05
Marker Beacon Antenna - Serials 22-0002 & subs, 22T-0001 & subs w/o AC (1 of 2)	34-30-01
Marker Beacon Antenna - Serials 22-1863 & subs, 22T-0001 & subs w/ AC (2 of 2)	34-30-01
Stormscope and Antenna - Serials 22-0002 & subs, 22T-0001 & subs w/o AC (1 of 2)	34-40-01
Stormscope and Antenna - Serials 22-1863 & subs, 22T-0001 & subs w/ AC (2 of 2)	34-40-01
Skywatch - Serials 22-0002 thru 22-1862 (1 of 4)	34-40-02

CHAPTER 34 - NAVIGATION AND PITOT STATIC

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Skywatch - Serials 22-1863 thru 22-3150 w/o Perspective (2 of 4)	34-40-02
Skywatch - Serials w/ Perspective, Serials 22-3151 & subs (3 of 4)	34-40-02
Skywatch (4 of 4)	34-40-02
TAWS - Serials 22-1036 & subs w/o Perspective	34-40-03
GTS 800 Traffic System - Serials 3665 & subs, 22T-0004 & subs w/ Perspective and w/o GDL 88 (1 of 3)	34-40-04
GTS 800 Traffic System - Serials w/ GDL 88 (2 of 3)	34-40-04
GTS 800 Traffic System - Serials 3665 & subs, 22T-0004 & subs w/ Perspective (3 of 3)	34-40-04
Communications/Navigation Receiver - Serials 22-0002 & subs w/o Perspective	34-50-01
WAAS/GPS/COM Antenna - Serials 22-0002 thru 22-2577 (1 of 3)	34-50-02
WAAS/GPS/COM Antenna (2 of 3)	34-50-02
WAAS/GPS/COM Antenna - Serials 22-2578 & subs, 22T-0001 & subs (3 of 3)	34-50-02
Transponder and Antenna - Serials 22-0002 & subs w/o Perspective (1 of 2)	34-50-03
Transponder and Antenna - Serials w/ Perspective (2 of 2)	34-50-03
VOR/LOC and Antenna - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)	34-50-04
VOR/LOC and Antenna (2 of 2)	34-50-04
HSI - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)	34-50-05
HSI - Serials 22-0002 thru 22-0820 w/o PFD (2 of 2)	34-50-05
XM Radio/Weather - Serials 22-0002 thru 22-1862 (1 of 5)	34-50-06
XM Radio/Weather - Serials 22-1863 thru 22-2437 (2 of 5)	34-50-06
XM Radio/Weather - Serials 22-2438 & subs w/o Perspective (3 of 5)	34-50-06
XM Radio/Weather - Serials w/ Perspective (4 of 5)	34-50-06
XM Radio/Weather (5 of 5)	34-50-06
DME - Serials w/ Perspective	34-50-07
ADF - Serials w/ Perspective	34-50-08
Iridium Weather System - Serials 22-3828 & subs, 22T-0268 & subs	34-50-09
FMS Keyboard - Serials w/ Perspective	34-60-01

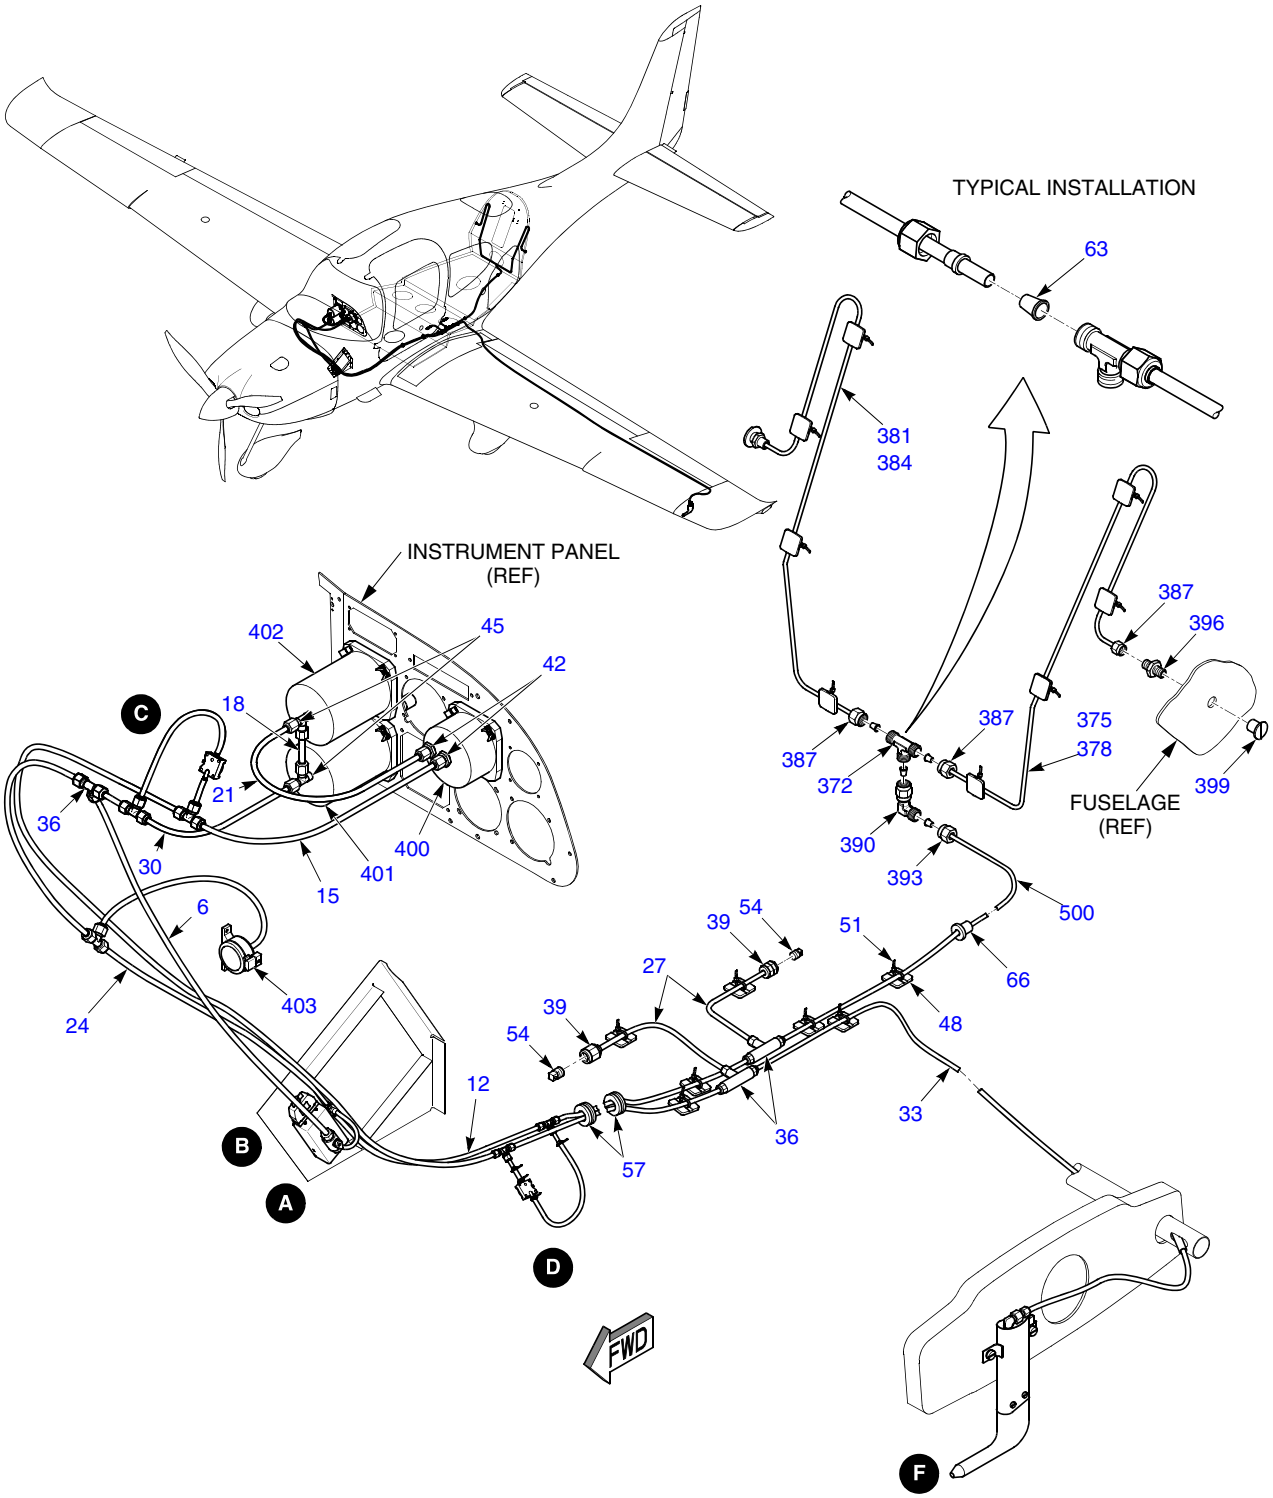

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD before SB 2X-34-22.

SR22_PC34_1200D

Figure-01

Pitot-Static System - Serials 22-0002 thru 22-0820 w/o PFD before SB2X-34-22 (1 of 9)

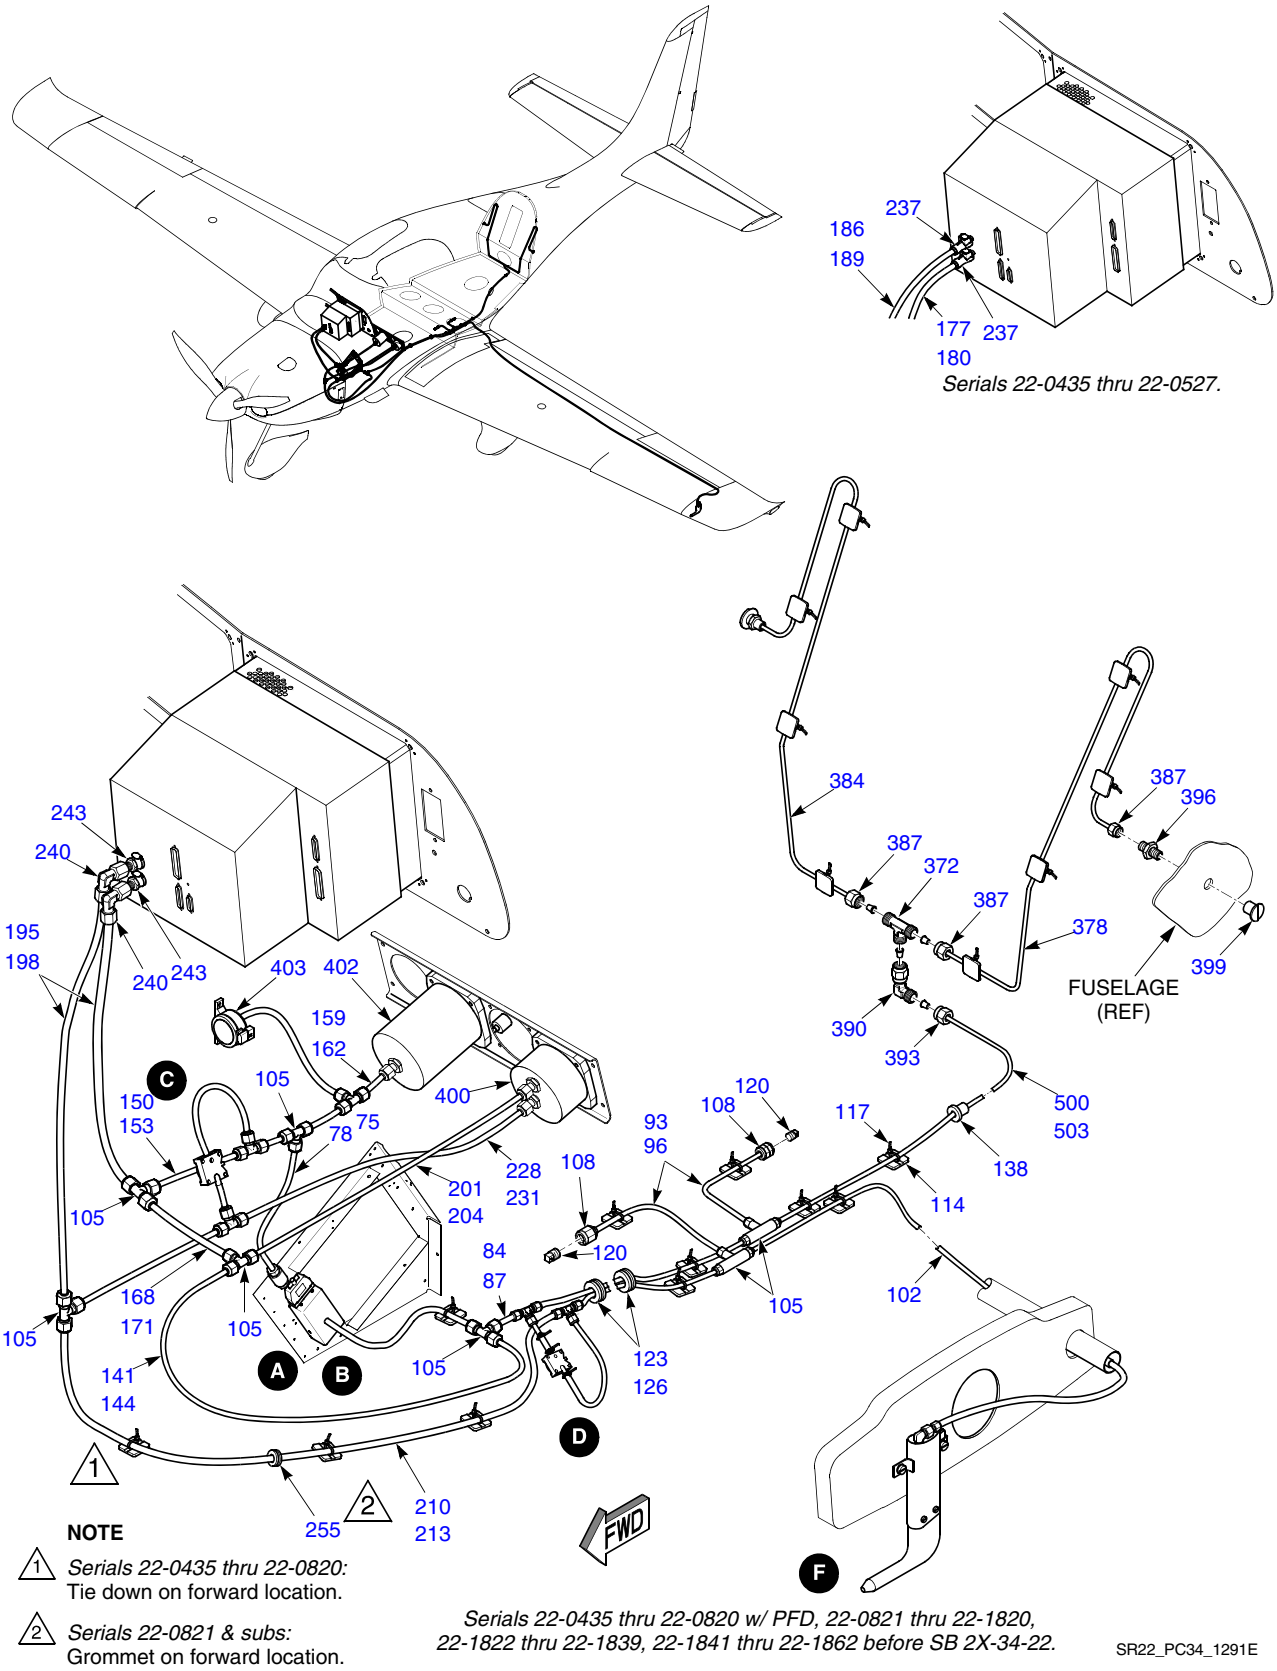

NOTE

1 *Serials 22-0435 thru 22-0820:* Tie down on forward location.

2 *Serials 22-0821 & subs:* Grommet on forward location.

Serials 22-0435 thru 22-0820 w/ PFD, 22-0821 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862 before SB 2X-34-22.

SR22_PC34_1291E

Figure-01

Pitot-Static System - Serials 22-0435 thru 22-1862 w/ PFD before SB2X-34-22 (2 of 9)

EFFECTIVITY:
Serials 22-0435 thru 22-1862 w/ PFD before SB2X-34-22

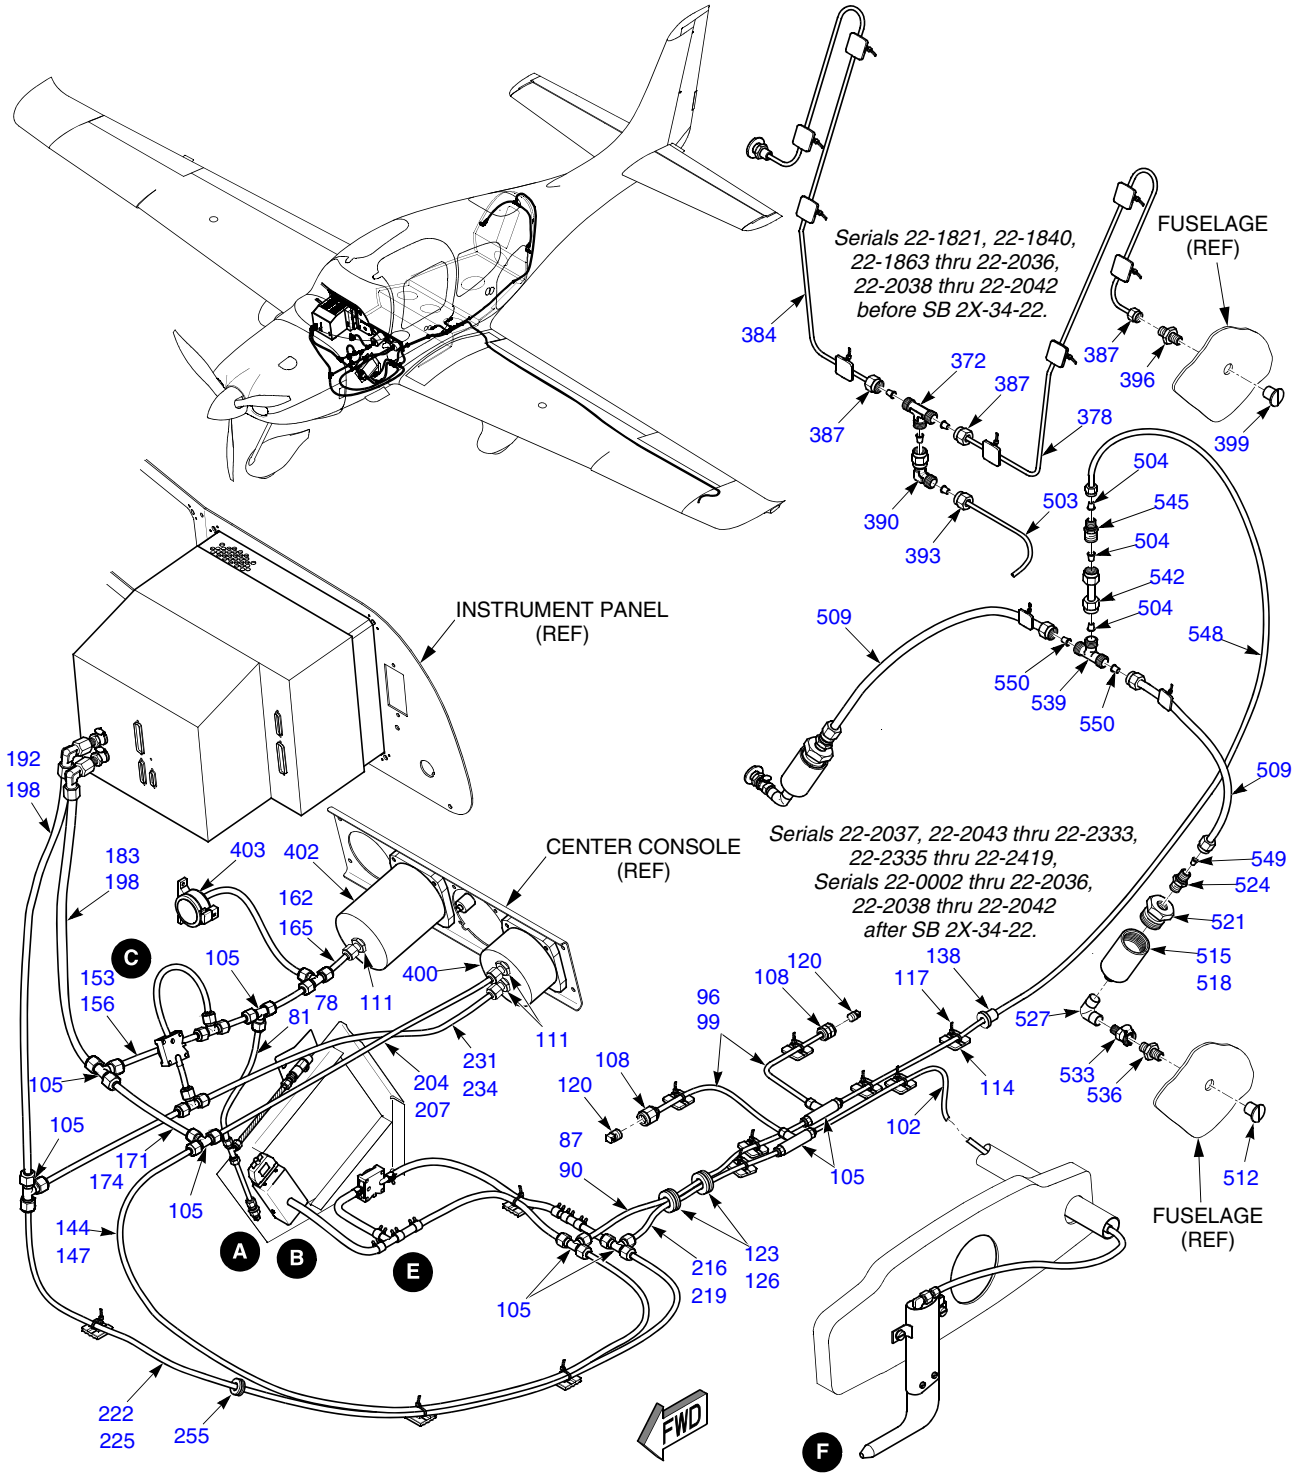

Serials 22-1821, 22-1840, 22-1863 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC34_1644A

Figure-01

Pitot-Static System - Serials 22-1863 thru 22-2437 (3 of 9)

EFFECTIVITY:
Serials 22-1863 thru 22-2437

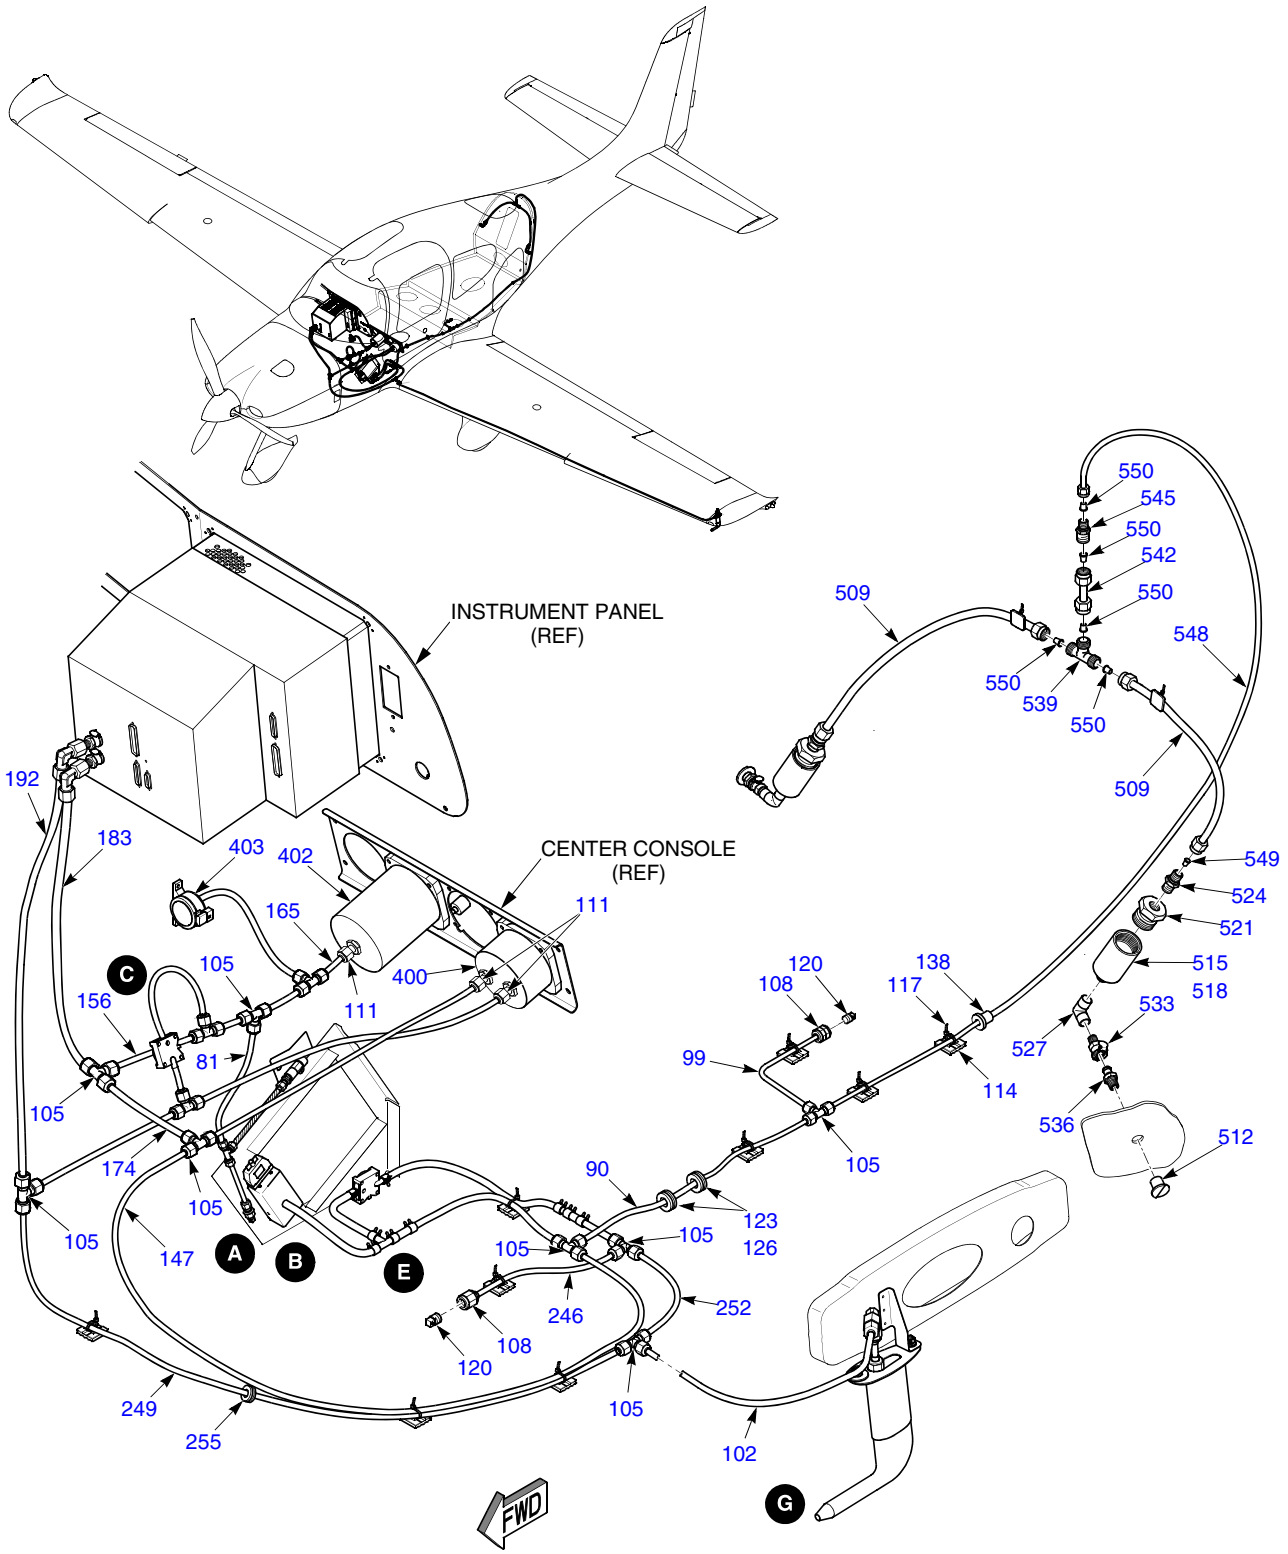

Serials 22-2334, 22-2420, 22-2438 & subs w/o Perspective Avionics.

SR22_PC34_1646B

Figure-01

Pitot-Static System - Serials 22-2438 & subs w/o Perspective (4 of 9)

EFFECTIVITY:
Serials 22-2438 & subs w/o Perspective

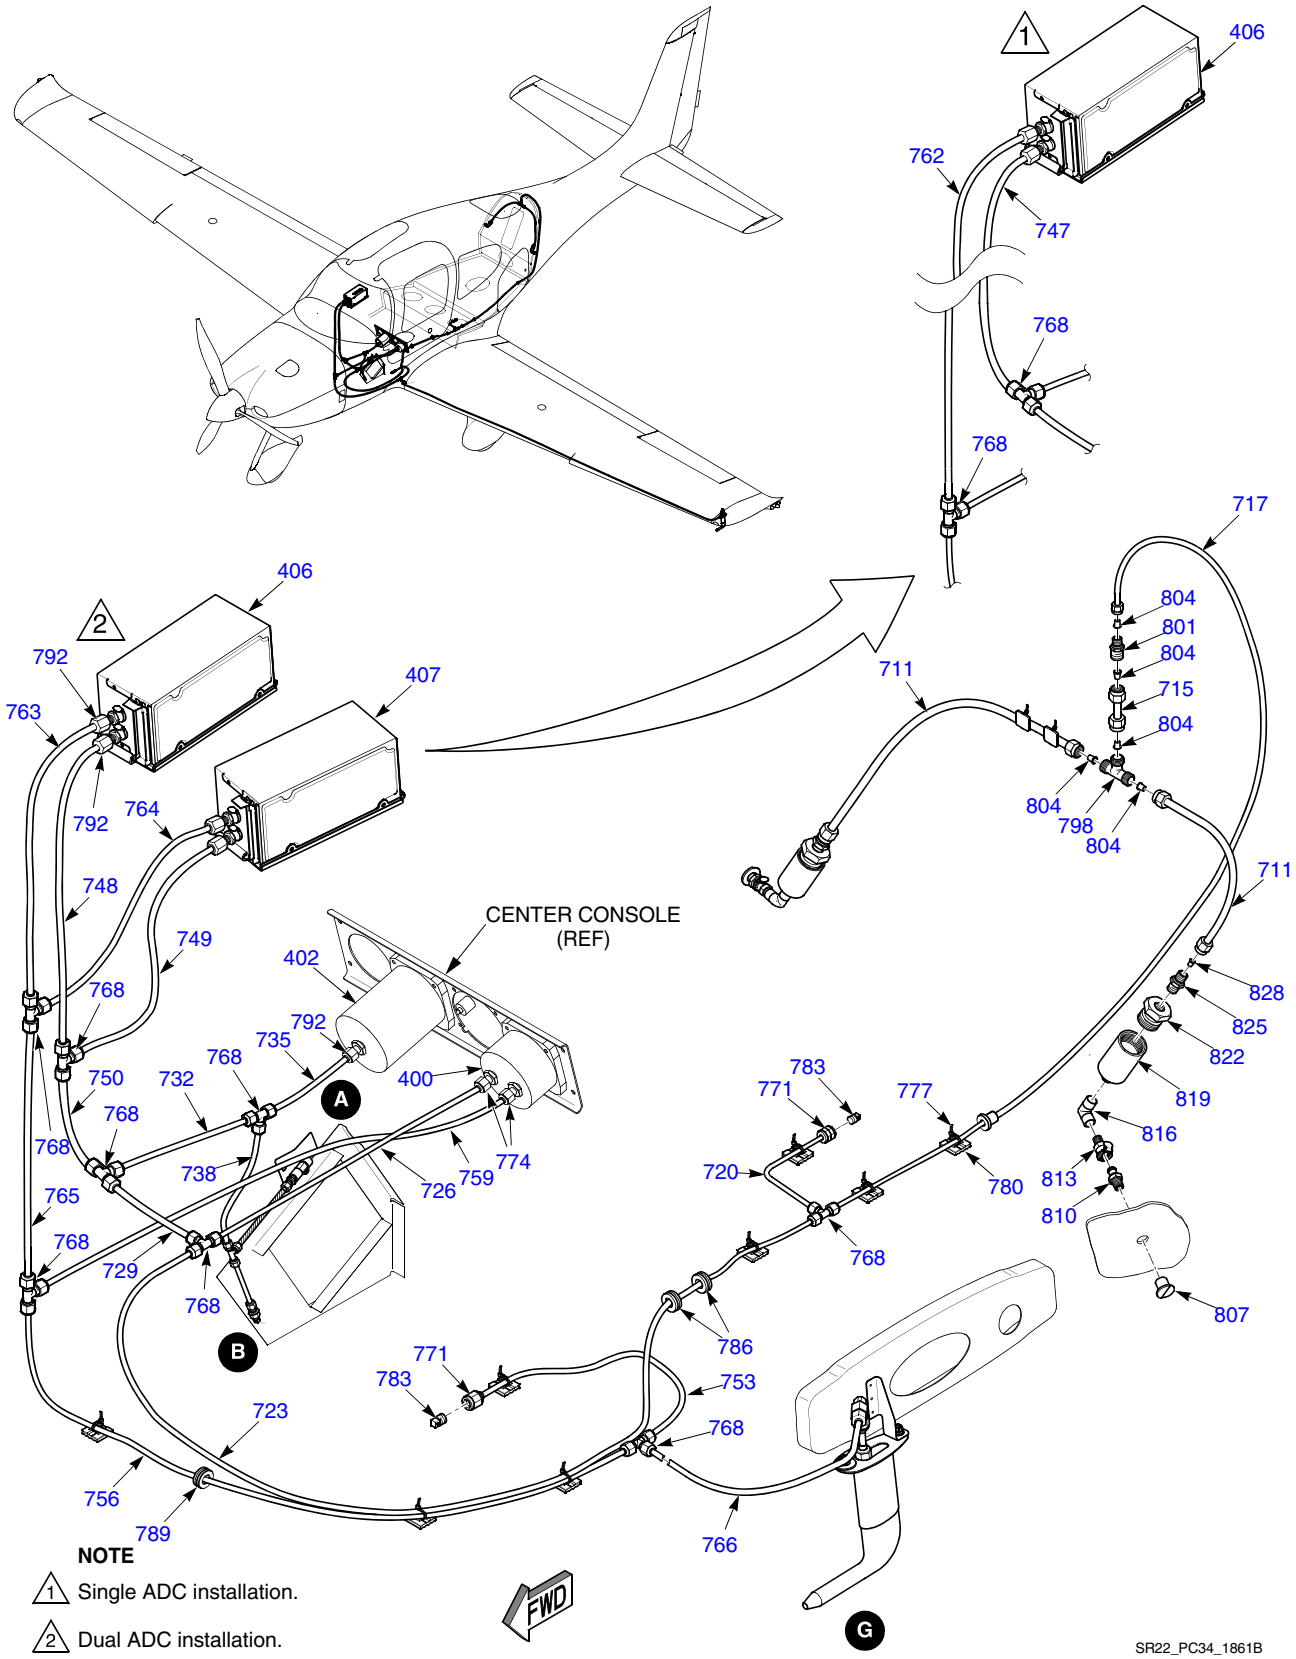

Figure-01

Pitot-Static System - Serials w/ Perspective (5 of 9)

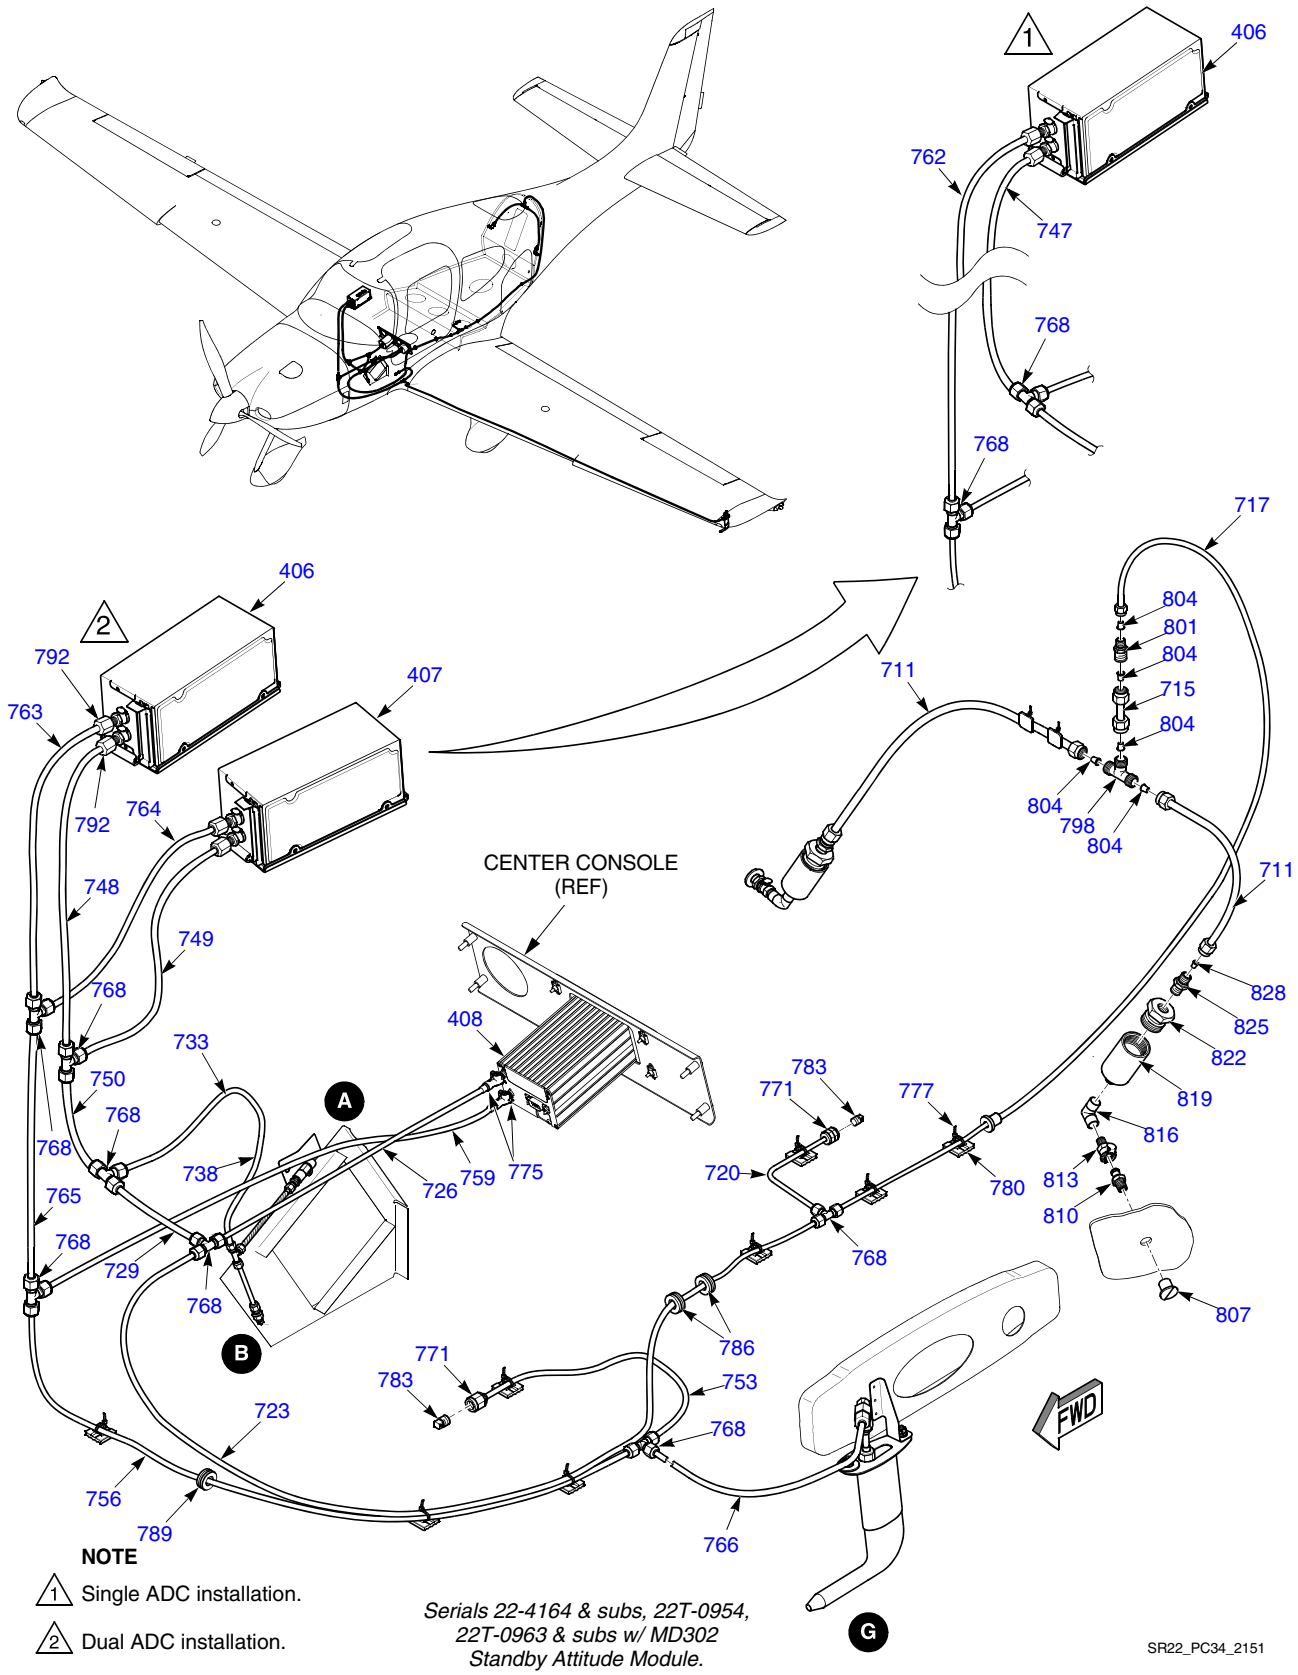

-01

Pitot-Static System - Serials w/ MD302 Standby Attitude Module (Sheet 6 of 9)

EFFECTIVITY:
Serials w/ MD302 Standby Attitude Module

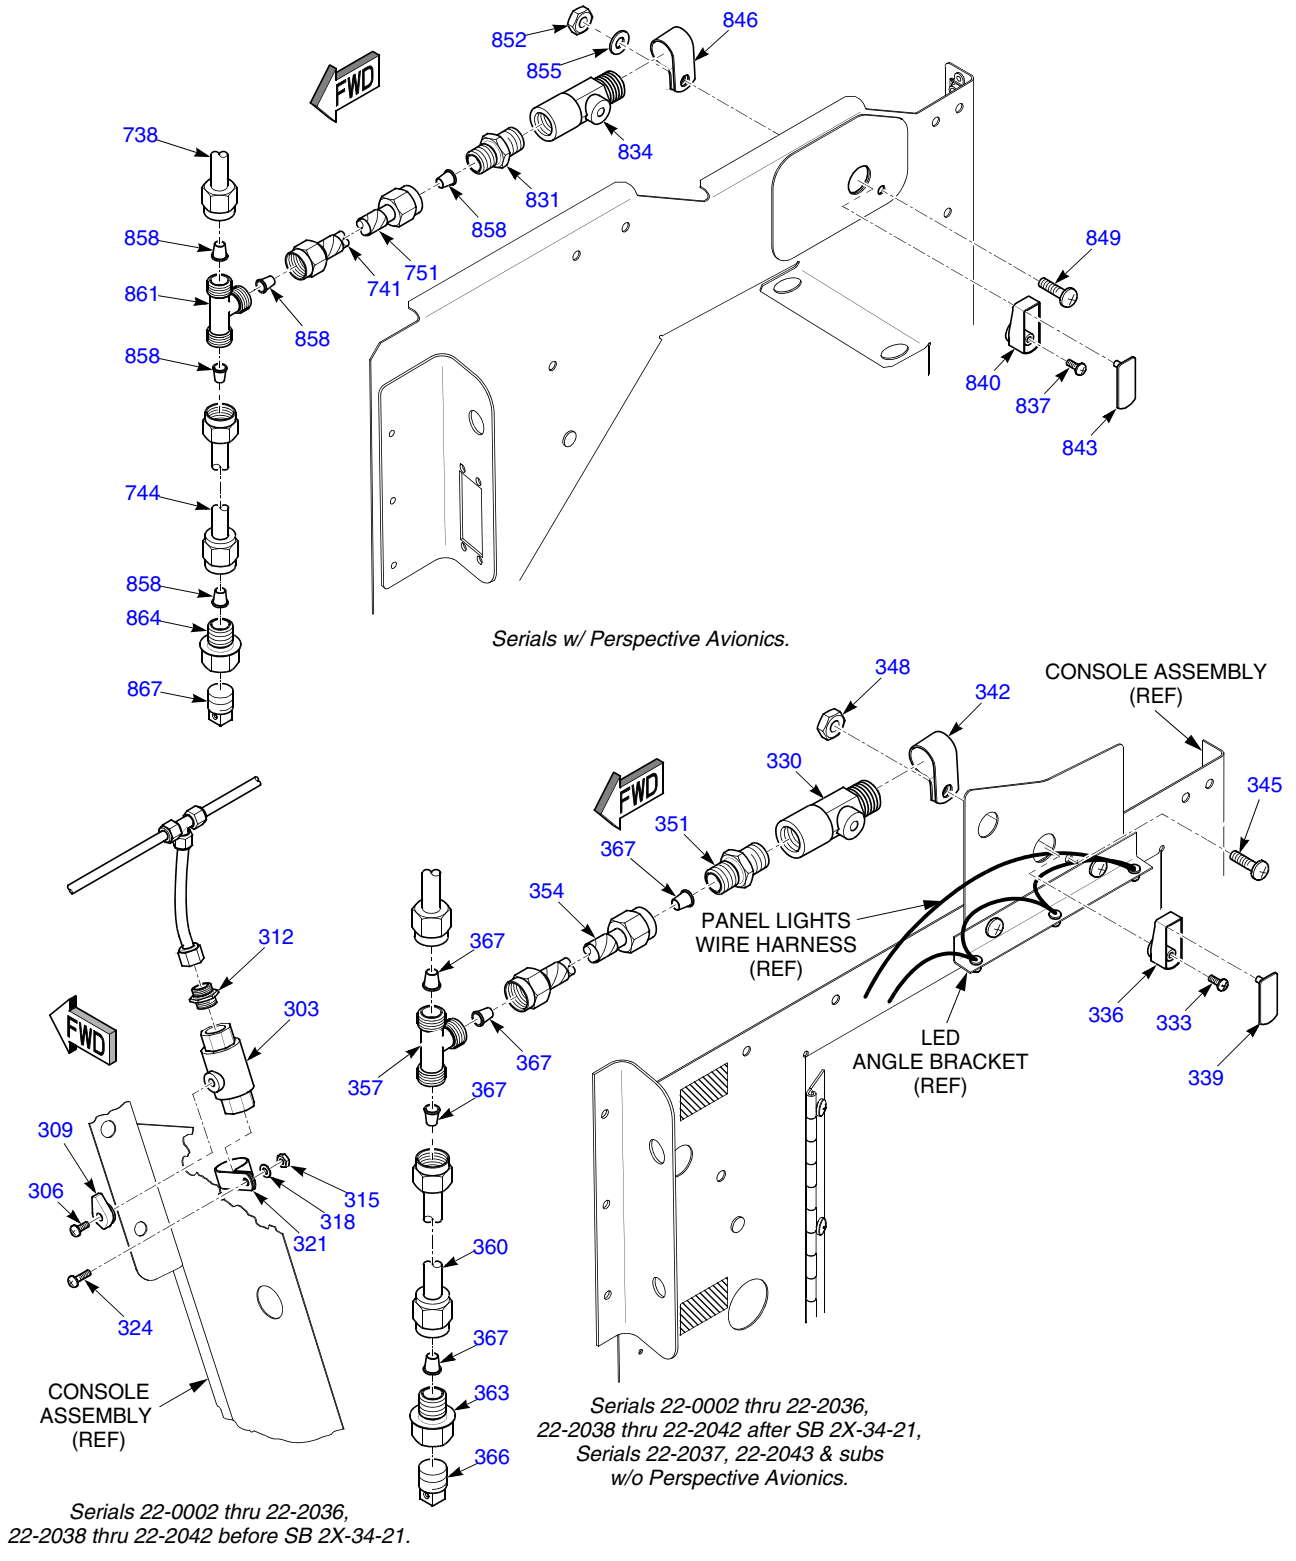

DETAIL A

SR22_PC34_1201E

Figure-01
Pitot-Static System (7 of 9)

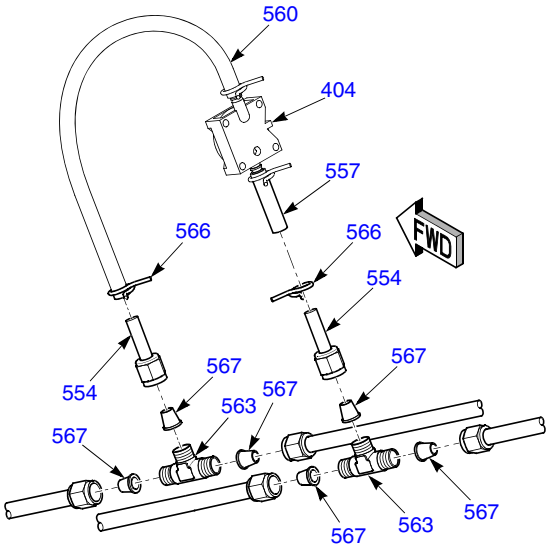

Serials 22-0002 thru 22-3025 w/ SKYWATCH, 22-3026 & subs w/ SKYWATCH, w/o Perspective Avionics.

DETAIL C

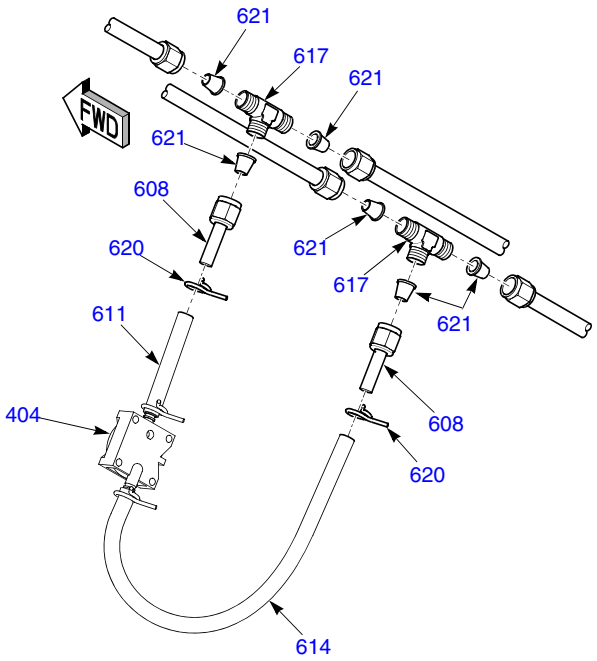

Serials 22-0002 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862 after SB 2X-31-01.

DETAIL D

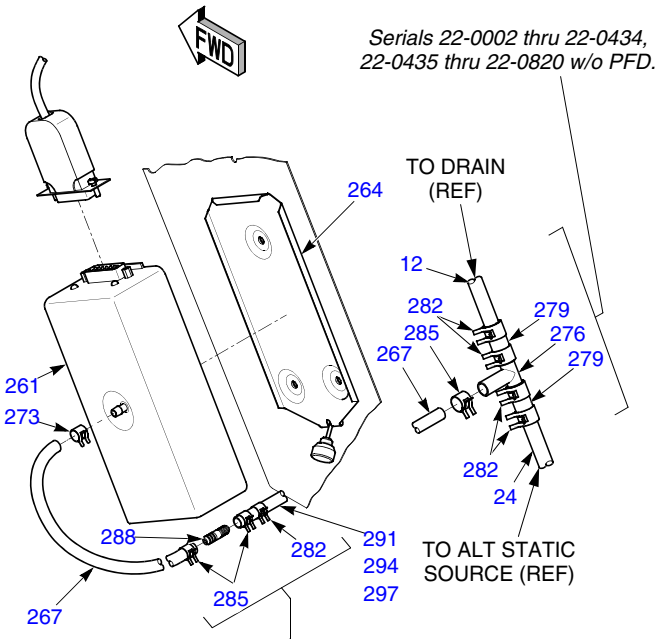

Serials 22-0435 thru 22-0820 w/ PFD, 22-0821 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

DETAIL B

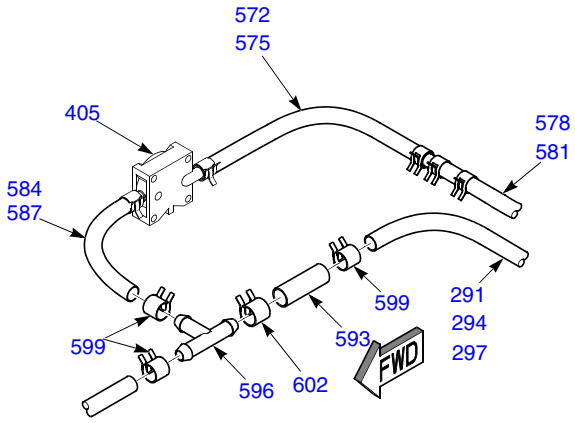

Serials 22-1821, 22-1840, 22-1863 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

DETAIL E

SR22_PC34_1664A

Figure-01

Pitot-Static System - Serials 22-0002 & subs w/o Perspective (8 of 9)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

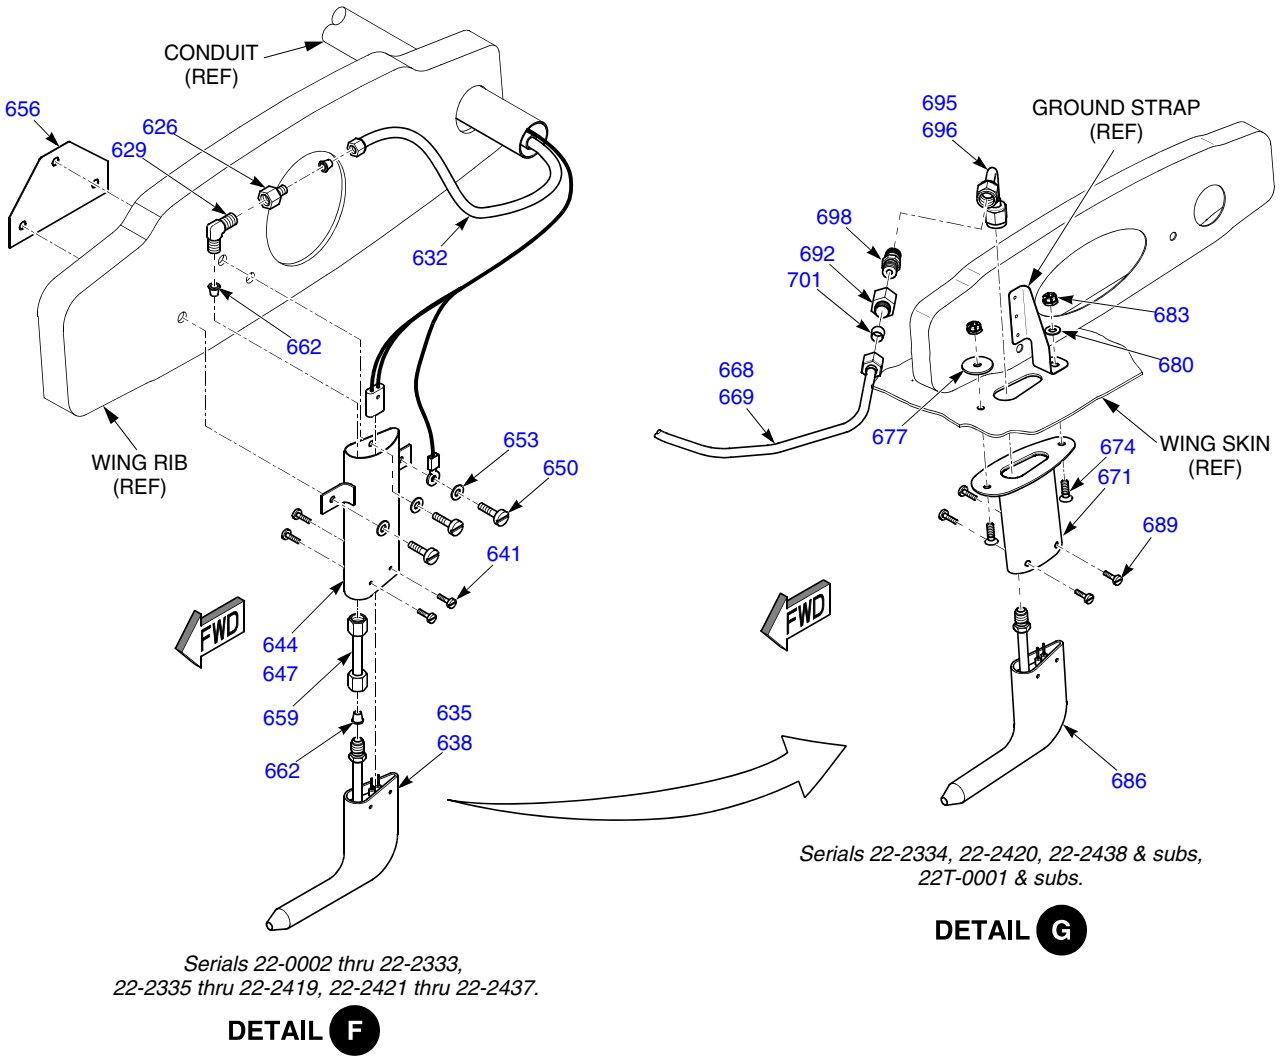

SR22_PC34_1202C

Figure-01
Pitot-Static System (9 of 9)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		PITOT-STATIC INSTALLATION	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·PITOT-STATIC INSTALLATION, W/O PFD	0002	0820	NP
-	4	50349-001			··CURRENT SENSOR	0002	0820	1
	6	11590-111			··STATIC TUBE, ALT STATIC SOURCE VALVE	0002	0820	1
	12	11590-113			··STATIC TUBE, DRAIN TO ALT DGTZR	0002	0820	1
	15	11590-114			··PITOT TUBE, DRAIN TO AIR SPEED INDICATOR	0002	0386	1
	18	11590-115			··STATIC TUBE, VSI TO ALT	0002	0386	1
	21	11590-116			··STATIC TUBE, ALT TO AIRSPEED	0002	0386	1
	24	11590-117			··STATIC TUBE, ALT DGTZR TO ALT STAT SOURCE	0002	0386	1
	27	11590-118			··PITOT-STATIC DRAIN TUBE	0002	0820	2
	30	11590-119			··STATIC TUBE, ALT STATIC SOURCE TO VSI	0002	0386	1
	33	11597-105			··PITOT TUBE, PITOT MAST TO DRAIN	0002	0820	1
	36	50385-001			··UNION TEE	0002	0820	3
	39	50386-001			··FITTING, NYLON, FEMALE TUBE CONNECTOR	0002	0820	2
	42	50387-001			··FITTING, NYLON	0002	0820	2
	45	50389-002			··FITTING, NYLON, MALE RUN TEE	0002	0434	2
	48	50132-001		A	··TIE DOWN	0002	0820	AR
	51	MS3367-1-9		A	··STRAP	0002	0820	AR
	54	MS20913-1D			··PLUG	0002	0820	2
	57	MS35489-149			··GROMMET	0002	0820	2
-	60	50428-001			··TUBING, SPIRAL WRAP	0002	0820	AR
	63	50928-025			··NYLON INSERT	0002	0820	19
	66	50145-301			··BUSHING	0002	0386	1
-	69	MS35489-40			··GROMMET	0387	0820	1
-	72	NO PRT NUMBER			·PITOT-STATIC INSTALLATION, W/ AVIDYNE/ARNAV PFD	0435		NP
-	73	50349-001			··CURRENT SENSOR	0435		1
	75	11590-120			··STATIC TUBE, ALT STATIC SOURCE VALVE	0435	0820	1
	78	20351-120			··STATIC TUBE, ALT STATIC SOURCE VALVE	0821	2042	1
	81	21686-103			··STATIC TUBE, ALT STATIC SOURCE VALVE	2043		1
	84	11590-121			··STATIC TUBE, DRAIN TO ALT DGTZR	0435	0820	1
	87	20351-121			··STATIC TUBE, DRAIN TO ALT DGTZR	0821	2042	1
	90	21686-104			··STATIC TUBE, DRAIN TO ALT DGTZR	2043		1
	93	11590-118			··PITOT-STATIC DRAIN TUBE	0435	0820	2
	96	20351-118			··PITOT-STATIC DRAIN TUBE	0821	2042	2
	99	21686-102			··PITOT-STATIC DRAIN TUBE	2043	2437	2
					··PITOT-STATIC DRAIN TUBE	2438		1
	102	11597-105			··PITOT TUBE, PITOT MAST TO DRAIN	0435	2437	1
	105	50385-001			··UNION TEE	0435	1862	7
					··UNION TEE	1863		8
	108	50386-001			··FITTING, NYLON, FEMALE TUBE CONNECTOR	0435		2
	111	50387-001			··FITTING, NYLON	0435		3
	114	50132-001		A	··TIE DOWN	0435		AR
	117	MS3367-1-9		A	··STRAP	0435		AR
	120	MS20913-1D			··PLUG	0435		2
	123	MS35489-149			··GROMMET	0435	0820	2
	126	51050-075			··SNAP BUSHING	0821		2
-	129	50428-001			··TUBING, SPIRAL WRAP	0435	0820	AR
-	132	50928-025			··NYLON INSERT	0435	1862	24
					··NYLON INSERT	1863	2042	27
					··NYLON INSERT	2043		31
	138	MS35489-40			··GROMMET	0435		1
	141	11590-122			··STATIC TUBE, ALT DGTZR TO ALTIMETER	0435	0820	1
	144	20351-122			··STATIC TUBE, ALT DGTZR TO ALTIMETER	0821	2042	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	147	21686-105			··STATIC TUBE, ALT DGTZR TO ALTIMETER	2043		1
	150	11590-123			··STATIC TUBE, ALT DGTZR TO ALT STAT SOURCE	0435	0820	1
	153	20351-123			··STATIC TUBE, ALT DGTZR TO ALT STAT SOURCE	0821	2042	1
	156	21686-106			··STATIC TUBE, ALT DGTZR TO ALT STAT SOURCE	2043		1
	159	11590-124			··STATIC TUBE, ALT STAT SOURCE TO ALTIMETER	0435	0820	1
	162	20351-124			··STATIC TUBE, ALT STAT SOURCE TO ALTIMETER	0821	2042	1
	165	21686-107			··STATIC TUBE, ALT STAT SOURCE TO ALTIMETER	2043		1
	168	11590-125			··STATIC TUBE, ALT STAT SOURCE TO TEE, PFD	0435	0820	1
	171	20351-125			··STATIC TUBE, ALT STAT SOURCE TO TEE, PFD	0821	2042	1
	174	21686-108			··STATIC TUBE, ALT STAT SOURCE TO TEE, PFD	2043		1
	177	11590-126			··STATIC TUBE, PFD	0435	0527	1
	180	20351-126			··STATIC TUBE, PFD	0435	0527	1
					ALTERNATE FOR P/N 11590-126			
	183	21686-109			··STATIC TUBE, PFD	2043 / 0001	/	1
	186	11590-130			··PITOT TUBE, PFD	0435	0527	1
	189	20351-130			··PITOT TUBE, PFD	0435	0527	1
					ALTERNATE FOR P/N 11590-130			
	192	21686-112			··PITOT TUBE, PFD	2043 / 0001	/	1
	195	11590-132			··PITOT-STATIC TUBE, W/ PFD	0528	0820	2
	198	20351-132			··PITOT-STATIC TUBE, W/ PFD	0821	2042	2
	201	11590-127			··STATIC TUBE, PFD TO AIRSPEED INDICATOR	0435	0820	1
	204	20351-127			··STATIC TUBE, PFD TO AIRSPEED INDICATOR	0821	2042	1
	207	21686-110			··STATIC TUBE, PFD TO AIRSPEED INDICATOR	2043 / 0001	/	1
	210	11590-128			··PITOT TUBE, DRAIN TO PFD	0435	0820	1
	213	20351-128			··PITOT TUBE, DRAIN TO PFD	0821	1862	1
	216	20351-133			··PITOT TUBE, DRAIN TO TEE	1863	2042	1
	219	21686-115			··PITOT TUBE, DRAIN TO TEE	2043	2437	1
					ALTERNATE FOR P/N 20351-133			
	222	20351-137			··PITOT TUBE, TEE TO PFD	1863	2042	1
	225	21686-118			··PITOT TUBE, TEE TO PFD	2043	2437	1
					ALTERNATE FOR P/N 20351-137			
	228	11590-129			··PITOT TUBE, PFD TO AIRSPEED INDICATOR	0435	0820	1
	231	20351-129			··PITOT TUBE, PFD TO AIRSPEED INDICATOR	0821	2042	1
	234	21686-111			··PITOT TUBE, PFD TO AIRSPEED INDICATOR	2043		1
	237	51228-001			··QUICK CONNECT FITTING	0435	0527	2
	240	51296-001			··FITTING, NYLON	0528		2
	243	51228-002			··TUBE COUPLING	0528		2
	246	21686-125			··PITOT TUBE, SPAR TEE TO DRAIN	2438		1
	249	21686-123			··PITOT TUBE, WING TEE TO PFD TEE	2438		1
	252	21686-124			··PITOT TUBE, WING TEE TO SPAR TEE	2438		1
	255	MS21266-2N	#		··GROMMET	0821		AR
-	258	12738-001			··ALTITUDE DIGITIZER KIT	0002		1
	261	12738-050			···ALTITUDE ENCODER	0002		1
	264	12738-101			···MOUNTING TRAY	0002		1
	267	12738-113			···TUBING	0002		1
-	270	12738-116		A	···SPRING CLIP	0002	0820	1
					FOR SPARES USE P/N 12738-115			
	273	12738-115		A	···HOSE CLAMP	0821		1
	276	12738-111			···TEE, W/O PFD	0002	0820	1
	279	12738-112			···HOSE, W/O PFD	0002	0820	2
					···HOSE, W/ PFD	0435		1
	282	12738-114		A	···HOSE CLAMP, W/O PFD	0002	0820	4
					···HOSE CLAMP, W/ PFD	0435		1
	285	12738-115		A	···HOSE CLAMP, W/O PFD	0002	0820	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					···HOSE CLAMP, W/ PFD	0435		2
	288	51272-002			··COUPLING, W/ PFD	0435		1
	291	11590-131			··STATIC TUBE, ENCODER, W/ PFD	0435	0820	1
	294	20351-131			··STATIC TUBE, ENCODER, W/ PFD	0821	2042	1
					ALTERNATE FOR P/N 11590-131			
	297	21686-113			··STATIC TUBE, ENCODER, W/ PFD	2043		1
-	300	NO PRT NUMBER			·ALT STATIC SOURCE VALVE INSTALLATION	0002	2042	NP
					BEFORE SB2X-34-21			
	303	50391-001			··FITTING, VACUUM VALVE	0002	2042	1
	306	PRT OF ITM 303		A	··SCREW	0002	2042	1
	309	PRT OF ITM 303			··KNOB	0002	2042	1
	312	50388-001			··FITTING, MALE TUBE CONNECTOR	0002	2042	1
	315	MS21044N3		A	··NUT	0002	2042	1
	318	NAS1149F0363P		A	··WASHER	0002	2042	1
	321	AN742D13		A	··CLAMP	0002	2042	1
	324	MS27039-1-08		A	··SCREW	0002	2042	1
-	325	50928-025			··NYLON INSERT	2043		1
-	327	NO PRT NUMBER			·ALT STATIC SOURCE VALVE INSTALLATION	2043		NP
					AFTER SB2X-34-21	0002	2042	
	330	17982-001			··FITTING, VACUUM VALVE	2043		1
	333	PRT OF ITM 330		A	··SCREW	2043		1
	336	PRT OF ITM 330			··KNOB	2043		1
	339	PRT OF ITM 330			··PLATE	2043		1
	342	AN742-8		A	··CLAMP	2043		1
	345	MS35214-41		A	··SCREW	2043		1
	348	AN364-832A		A	··NUT	2043		1
	351	50388-001			··FITTING, MALE TUBE CONNECTOR	2043		1
	354	21686-119			··STATIC TUBE, ALT STATIC VALVE	2043		1
	357	50385-001			··UNION TEE	2043		1
	360	21686-120			··STATIC TUBE, ALT STATIC VALVE	2043		1
	363	50386-001			··FITTING, FEMALE TUBE CONNECTOR	2043		1
	366	MS20913-1D			··PLUG	2043		1
	367	50928-025			··NYLON INSERT	2043		5
-	369	NO PRT NUMBER			·EMPENNAGE STATIC LINE INSTALLATION	0002	2042	NP
					BEFORE SB2X-34-22			
	372	MS20825-4D			··TEE, PIPE ON SIDE	0002	2042	1
	375	12172-003			··STATIC LINE, BULKHEAD 222, LH	0002	0314	1
	378	12172-005			··STATIC LINE, BULKHEAD 222, LH	0315	2042	1
	381	12172-004			··STATIC LINE, BULKHEAD 222, RH	0002	0314	1
	384	12172-006			··STATIC LINE, BULKHEAD 222, RH	0315	2042	1
	387	AN818-4D			··TUBE NUT	0002	2042	4
	390	AN914-1D			··ELBOW	0002	2042	1
	393	50386-001			··FITTING, FEMALE TUBE CONNECTOR	0002	2042	1
	396	AN816-4D			··PIPE TO FLARE	0002	2042	2
	399	11657-001			··STATIC PORT	0002	2042	2
	500	11590-112			··STATIC TUBE, DRAIN TO EMPENNAGE	0002	0820	1
	503	20351-120			··STATIC TUBE, DRAIN TO EMPENNAGE	0821	2042	1
	504	50928-025			··NYLON INSERT	2043		3
-	506	NO PRT NUMBER			·EMPENNAGE STATIC LINE INSTALLATION	2043		NP
					AFTER SB2X-34-22	0002	2042	
	509	21686-121			··STATIC LINE, STATIC PORT TO TEE	2043		2
	512	11657-002			··STATIC PORT	2043		2
	515	18059-001			··STATIC LINE SUMP	2043	2201	2
					FOR SPARES USE P/N 18059-002			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	518	18059-002			··STATIC LINE SUMP	2202		2
	521	51815-002			··REDUCER BUSHING	2043		2
	524	51838-001			··FITTING, MALE CONNECTOR	2043		2
	527	AN916-1D			··ELBOW	2043		2
-	530	AN911-1D			··NIPPLE	2043	2149	2
					FOR SPARES USE P/N 51228-002			
	533	51228-002			··TUBE COUPLING, QUICK-DISCONNECT	2150		2
	536	51228-003			··TUBE COUPLING, QUICK-DISCONNECT INSERT	2150		2
	539	70-6-N-PG			··TEE	2043		1
					FOR SPARES USE P/N 51839-001			
	542	21686-122			··STATIC TUBE, TEE TO REDUCER	2043		1
-	543	50928-025			··NYLON INSERT	2043		3
	545	51837-001			··FITTING	2043		1
	548	21686-101			··STATIC TUBE, DRAIN TO EMPENNAGE	2043		1
	549	50928-025			··NYLON INSERT	2043		2
	550	51836-001			··NYLON INSERT	2043		6
-	551	NO PRT NUMBER	@		·PRESSURE SWITCH INSTALLATION, W/ SKYWATCH	0002		NP
	554	14127-101			··HOSE	0002		2
	557	14127-102			··HOSE	0002		1
	560	14127-103			··HOSE	0002		1
	563	50385-001			··UNION TEE	0002		2
	566	50566-002		A	··SPRING CLAMP	0002		2
	567	50928-025			··NYLON INSERT	0002		6
-	569	NO PRT NUMBER			·#2 HOUR METER DIFF. PRES. SWITCH INSTALLATION	1863		NP
					BEFORE SB2X-31-01			
	572	20351-134			··PITOT TUBE, TEE TO SPEED SWITCH	1863	2042	1
	575	21686-116			··PITOT TUBE, TEE TO SPEED SWITCH	2043		1
	578	20351-135			··PITOT TUBE, TEE ADAPTER	1863	2042	1
	581	21686-117			··PITOT TUBE, TEE ADAPTER	2043		1
	584	20351-136			··STATIC TUBE, TEE TO SPEED SWITCH	1863	2042	1
	587	12738-113			··STATIC TUBE, TEE TO SPEED SWITCH	2043		1
-	590	12738-115		A	··SPRING CLAMP	1863		2
	593	12738-112			··HOSE	1863		1
	596	12738-111			··TEE	1863		1
	599	12738-115		A	··HOSE CLAMP	1863		3
	602	12738-114		A	··HOSE CLAMP	1863		1
-	605	NO PRT NUMBER			·#2 HOUR METER DIFF. PRES. SWITCH INSTALLATION	0002	1862	NP
					AFTER SB2X-31-01			
	608	14127-101			··STATIC TUBE	0002	1862	2
	611	14127-102			··TUBING	0002	1862	1
	614	14127-103			··TUBING	0002	1862	1
	617	50385-001			··UNION TEE	0002	1862	2
	620	50566-002		A	··SPRING CLAMP, 5/16	"0002	1862	2
	621	50928-025			··NYLON INSERT	0002	1862	6
-	623	NO PRT NUMBER			·PITOT INSTALLATION, WING	0002	2437	NP
	626	50386-001			··TUBE CONNECTOR	0002	2437	1
	629	MS20822-4D			··PIPE TO FLARE	0002	2437	1
	632	11597-104			··TUBING	0002	2437	1
	635	20919-001			··PITOT MAST	0002	2437	1
					ALTERNATE FOR P/N AN5812-1			
	638	AN5812-1			··PITOT MAST	0002	2437	1
					ALTERNATE FOR P/N 20919-001			
	641	PT OF 635 & 638		A	··SCREW	0002	2437	4
	644	11613-002			··BRACKET	0002	1893	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 11613-003			
	647	11613-003			··BRACKET	1894	2437	1
	650	MS27039-1-09		A	··SCREW	0002	2437	3
	653	NAS1149F0363P		A	··WASHER	0002	2437	3
	656	11598-001			··BACKING PLATE	0002	2437	1
	659	11502-002			··EXTENSION TUBE	0002	2437	1
	662	50928-025			··NYLON INSERT	0002	2437	AR
-	665	NO PRT NUMBER			·PITOT INSTALLATION, WING	2438 / 0001	/	NP
	668	17440-101			··PITOT TUBE LINE	2438 / 0001	4030 / 0656	1
	669	17440-301	!		··PITOT TUBE LINE	4031 / 0657	/	1
	671	18470-001			··BRACKET	2438 / 0001	/	1
	674	MS24694-51		A	··SCREW	2438 / 0001	/	2
	677	AN970-3		A	··WASHER	2438 / 0001	/	1
	680	NAS1149D0332J		A	··WASHER	2438 / 0001	/	1
	683	MS21042L3		A	··NUT	2438 / 0001	/	2
	686	20919-001			··PITOT MAST	2438 / 0001	/	1
	689	PRT OF ITM 686		A	··SCREW	2438 / 0001	/	4
	692	50386-001			··TUBE CONNECTOR	2438 / 0001	/	1
	695	18148-001			··EXTENSION TUBE	2438 / 0001	4030 / 0656	1
	696	18148-002	!		··EXTENSION TUBE	4031 / 0657	/	1
	698	AN816-4D			··PIPE TO FLARE	2438 / 0001	/	1
	701	50928-025			··NYLON INSERT	2438 / 0001	/	1
-	704	MS35489-149			··GROMMET	2438 / 0001	/	1
-	707	MS35489-135			··GROMMET	2438 / 0001	/	1
-	708	NO PRT NUMBER			·PITOT-STATIC INSTL W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
-	709	50349-001			··CURRENT SENSOR	3026 / 0002	/	1
	711	24510-101			··STATIC TUBE, STATIC PORT TO TEE	3026 / 0001	/	2
-	714	24510-102			··STATIC TUBE, TEE TO REDUCER	3026 / 0001	3914 / 0441	1
	715	24510-123			··STATIC TUBE, TEE TO REDUCER	3915 / 0442	/	1
	717	24510-103			··STATIC TUBE, DRAIN TO EMPENNAGE	3026 / 0001	/	1
	720	24510-104			··PITOT-STATIC DRAIN TUBE	3026 / 0001	/	1
	723	24510-105			··STATIC TUBE, DRAIN TO AIRSPEED TEE	3026 / 0001	/	1
	726	24510-106			··STATIC TUBE, AIRSPEED INDICATOR	3026 / 0001	/	1
	729	24510-107			··STATIC TUBE, AIRSPEED TEE TO ALTIMETER TEE	3026 / 0001	/	1
	732	24510-108			··STATIC TUBE, ALTIMTR TEE TO ALT STATIC SRCE TEE	3026 / 0001	/	1
	733	24510-124			··STATIC TUBE, STATIC TO ALT STATIC SRCE TEE	4164 / 0963	/	1
	735	24510-109			··STATIC TUBE, ALTIMETER	3026 / 0001	/	1
	738	24510-110			··STATIC TUBE, ALTSTATSRCETEE TO ALTSTATDRAIN TEE	3026 / 0001	/	1
	741	24510-111			··STATIC TUBE, ALT STATIC SOURCE	3026 / 0001	/	1
	744	24510-112			··STATIC TUBE, ALT STATIC DRAIN	3026 / 0001	/	1
	747	24510-113	%		··STATIC TUBE, ALTIMETER TEE TO ADC	3026 / 0001	/	1
	748	24510-115	$		··STATIC TUBE, ADC TEE TO ADC#1	3026 / 0001	/	1
	749	24510-116	$		··STATIC TUBE, ADC TEE TO ADC#2	3026 / 0001	/	1
	750	24510-114	$		··STATIC TUBE, ALTIMETER TEE TO ADC TEE	3026 / 0001	/	1
	751	50428-001			··SPIRAL WRAP	3026 / 0001	/	AR
	753	24510-104			··PITOT-STATIC DRAIN TUBE	3026 / 0001	/	1
	756	24510-117			··PITOT TUBE, WING TEE TO AIRSPEED TEE	3026 / 0001	/	1
	759	24510-118			··PITOT TUBE, AIRSPEED INDICATOR	3026 / 0001	/	1
					ALTERNATE FOR P/N 24510-106			
	762	24510-119	%		··PITOT TUBE, AIRSPEED TEE TO ADC	3026 / 0001	/	1
	763	24510-121	$		··PITOT TUBE, ADC TEE TO ADC#1	3026 / 0001	/	1
	764	24510-122	$		··PITOT TUBE, ADC TEE TO ADC#2	3026 / 0001	/	1
	765	24510-120	$		··PITOT TUBE, AIRSPEED TEE TO ADC TEE	3026 / 0001	/	1
	766	17440-101			··PITOT TUBE, PITOT MAST TO DRAIN	3026 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	768	50385-001	%		··UNION TEE	3026 / 0001	/	7
			$		··UNION TEE	3026 / 0001	/	9
	771	50386-001			··FITTING, NYLON, FEMALE TUBE CONNECTOR	3026 / 0001	/	2
	774	50387-001			··FITTING, NYLON	3026 / 0001	/	2
	775	30499-211			··PNEUMATIC CONNECTOR (MD302 STANDBY INST)	4164 / 0963	/	
	777	50132-001		A	··TIE DOWN	3026 / 0001	/	AR
	780	MS3367-1-9		A	··STRAP	3026 / 0001	/	AR
	783	MS20913-1D			··PLUG	3026 / 0001	/	2
	786	51050-075			··GROMMET	3026	3309	2
	789	MS21266-2N			··GROMMET, FLEXIBLE	3026 / 0001	/	AR
	792	50387-001			··FITTING, NYLON	3026 / 0001	/	1
-	795	50428-001			··TUBING, SPIRAL WRAP	3026 / 0001	/	AR
	798	70-6-N-PG			··TEE	3026 / 0001	/	1
					FOR SPARES USE P/N 51839-001			
	801	51837-001			··FITTING	3026 / 0001	/	1
	804	51836-001			··NYLON INSERT	3026 / 0001	/	5
	807	11657-002			··STATIC PRESSURE PORT	3026 / 0001	/	2
	810	51228-003			··TUBE COUPLING	3026 / 0001	/	2
	813	51228-002			··TUBE COUPLING	3026 / 0001	/	2
	816	AN916-1D			··ELBOW	3026 / 0001	/	2
	819	18059-002			··STATIC LINE SUMP	3026 / 0001	/	2
	822	51815-002			··REDUCER BUSHING	3026 / 0001	/	2
	825	51838-001			··NYLON FITTING	3026 / 0001	/	2
	828	50928-025			··NYLON INSERT	3026 / 0001	/	2
	831	50388-001			··FITTING, MALE TUBE CONNECTOR	3026 / 0001	/	1
	834	17982-001			··FITTING, ALT STATIC VALVE	3026 / 0001	/	1
	837	PRT OF ITM 834		A	··SCREW	3026 / 0001	/	1
	840	PRT OF ITM 834			··KNOB	3026 / 0001	/	1
	843	PRT OF ITM 834			··PLATE	3026 / 0001	/	1
	846	AN742-8			··CLAMP	3026 / 0001	/	1
	849	MS35214-41		A	··SCREW	3026 / 0001	/	1
	852	AN364-832A		A	··NUT	3026 / 0001	/	1
	855	NAS1149FN832P		A	··WASHER	3026 / 0001	/	1
	858	50928-025			··NYLON INSERT	3026 / 0001	/	5
	861	50385-001			··UNION TEE	3026 / 0001	/	1
	864	50386-001			··FITTING, NYLON, FEMALE TUBE CONNECTOR	3026 / 0001	/	1
	867	MS20913-1D			··PLUG	3026 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 34-10-03 DET			AIRSPEED INDICATOR INSTALLATION			
	401	RF 34-10-02 DET			VERTICAL SPEED INDICATOR INSTALLATION			
	402	RF 34-10-04 DET			ALTIMETER INSTALLATION			
	403	RF 22-11-01 DET			SYSTEM 55 INSTALLATION			
	404	RF 34-40-02 DET			SKYWATCH INSTALLATION			
	405	RF 31-30-01 DET			HOUR METER INSTALLATION			
	406	RF 34-10-06 DET			ADC#1 INSTALLATION			
	407	RF 34-10-06 DET			ADC#2 INSTALLATION			
	408	RF 34-10-07 DET			MD302 INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PART IDENTIFICATION.			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					2) SERIAL NUMBER 22-2037; REFER TO 22-2043 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					4) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
			!		SERIAL NUMBER 22-4032, 22-4045; REFER TO 22-2438 FOR PART IDENTIFICATION, SERIAL NUMBER 22T-0658 THRU 22T-0689; REFER TO 22T-0001 FOR PART IDENTIFICATION.			
			@		INSTALLED ON AIRCRAFT W/ OPTIONAL SKYWATCH.			
			#		INSTALLED AT EXISTING HOLE IN FORWARD SPAR.			
			%		SINGLE ADC INSTALLATION.			
			$		DUAL ADC INSTALLATION.			

Intentionally Left Blank

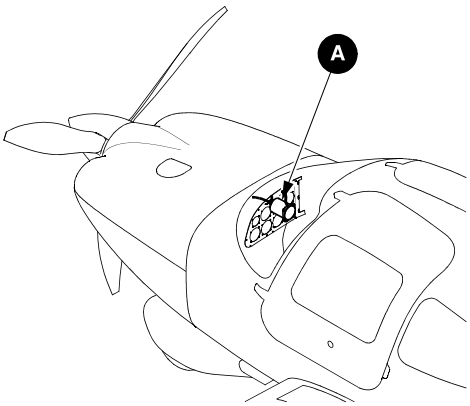

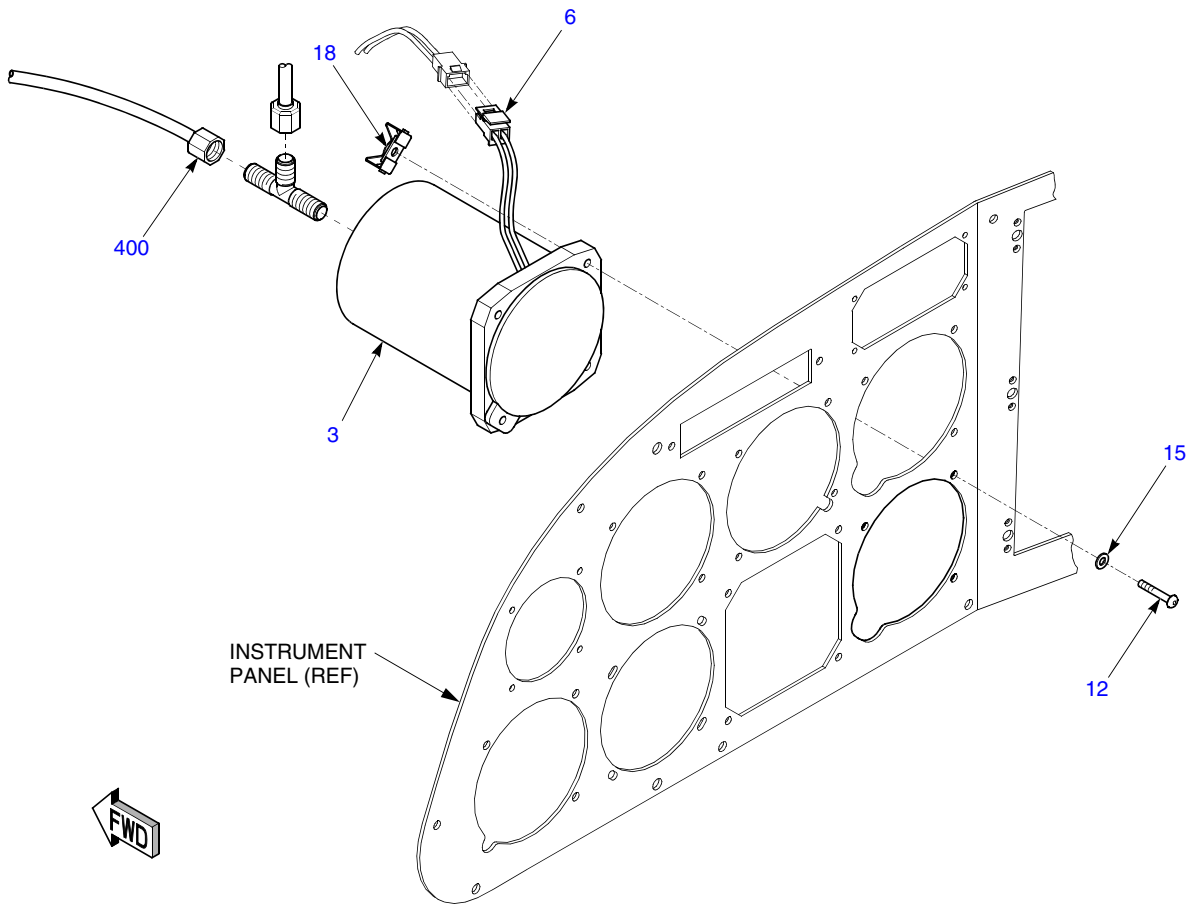

DETAIL A

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

SR22_PC34_1203A

Figure-02

Vertical Speed Indicator - Serials 22-0002 thru 22-0820 w/o PFD

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			VERTICAL SPEED INDICATOR	0002	0820	NP
	3	12103-001			·VERTICAL SPEED INDICATOR	0002	0820	1
	6	50158-002			··CONNECTOR	0002	0820	1
-	9	50157-001			··PIN	0002	0820	2
	12	50834-016		A	·BUTTON HEAD CAP SCREW	0002	0820	3
	15	50813-001		A	·WASHER	0002	0820	3
	18	MS33737-16C		A	·NUT CLIP	0002	0820	3
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 34-10-01 DET			PITOT-STATIC			

EFFECTIVITY:
All

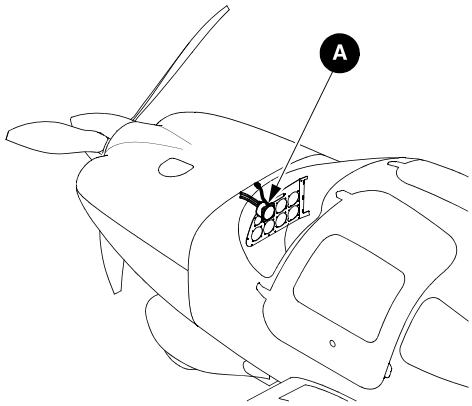

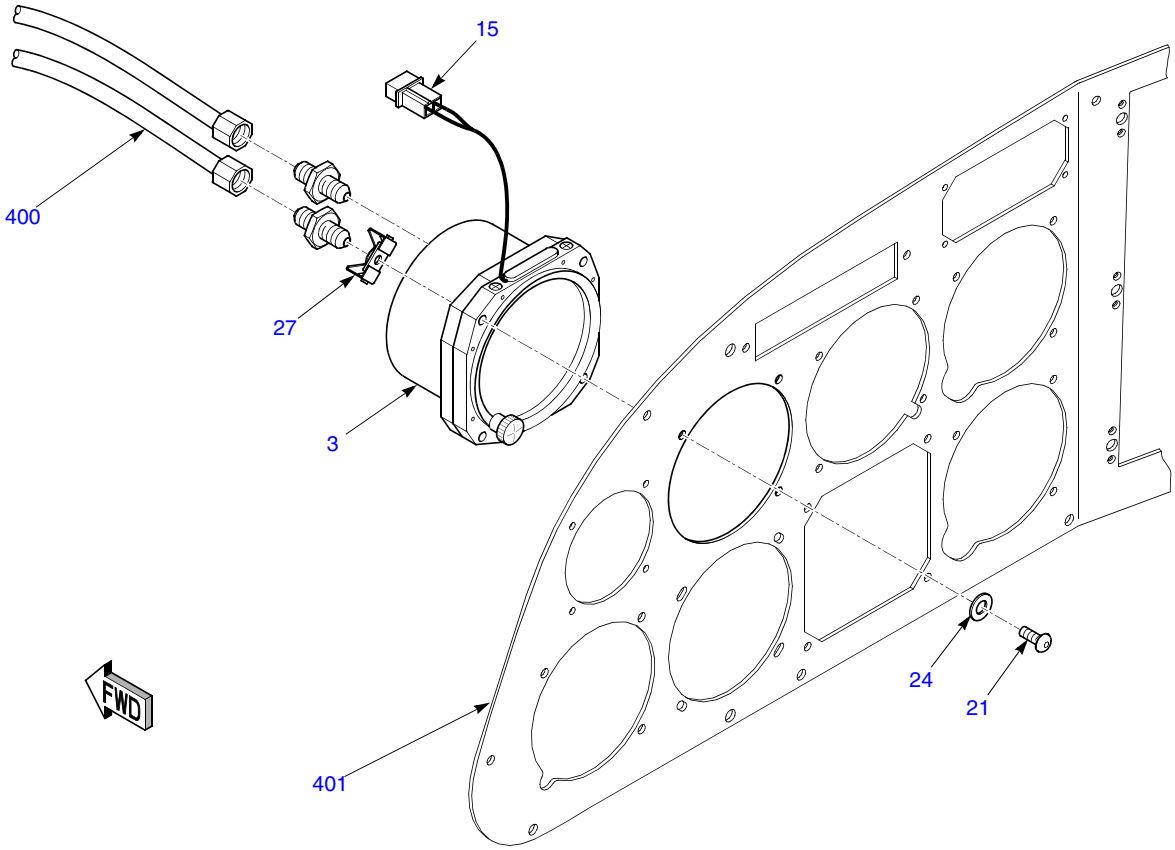

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

DETAIL A

SR22_PC34_1204C

Figure-03
Airspeed Indicator - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

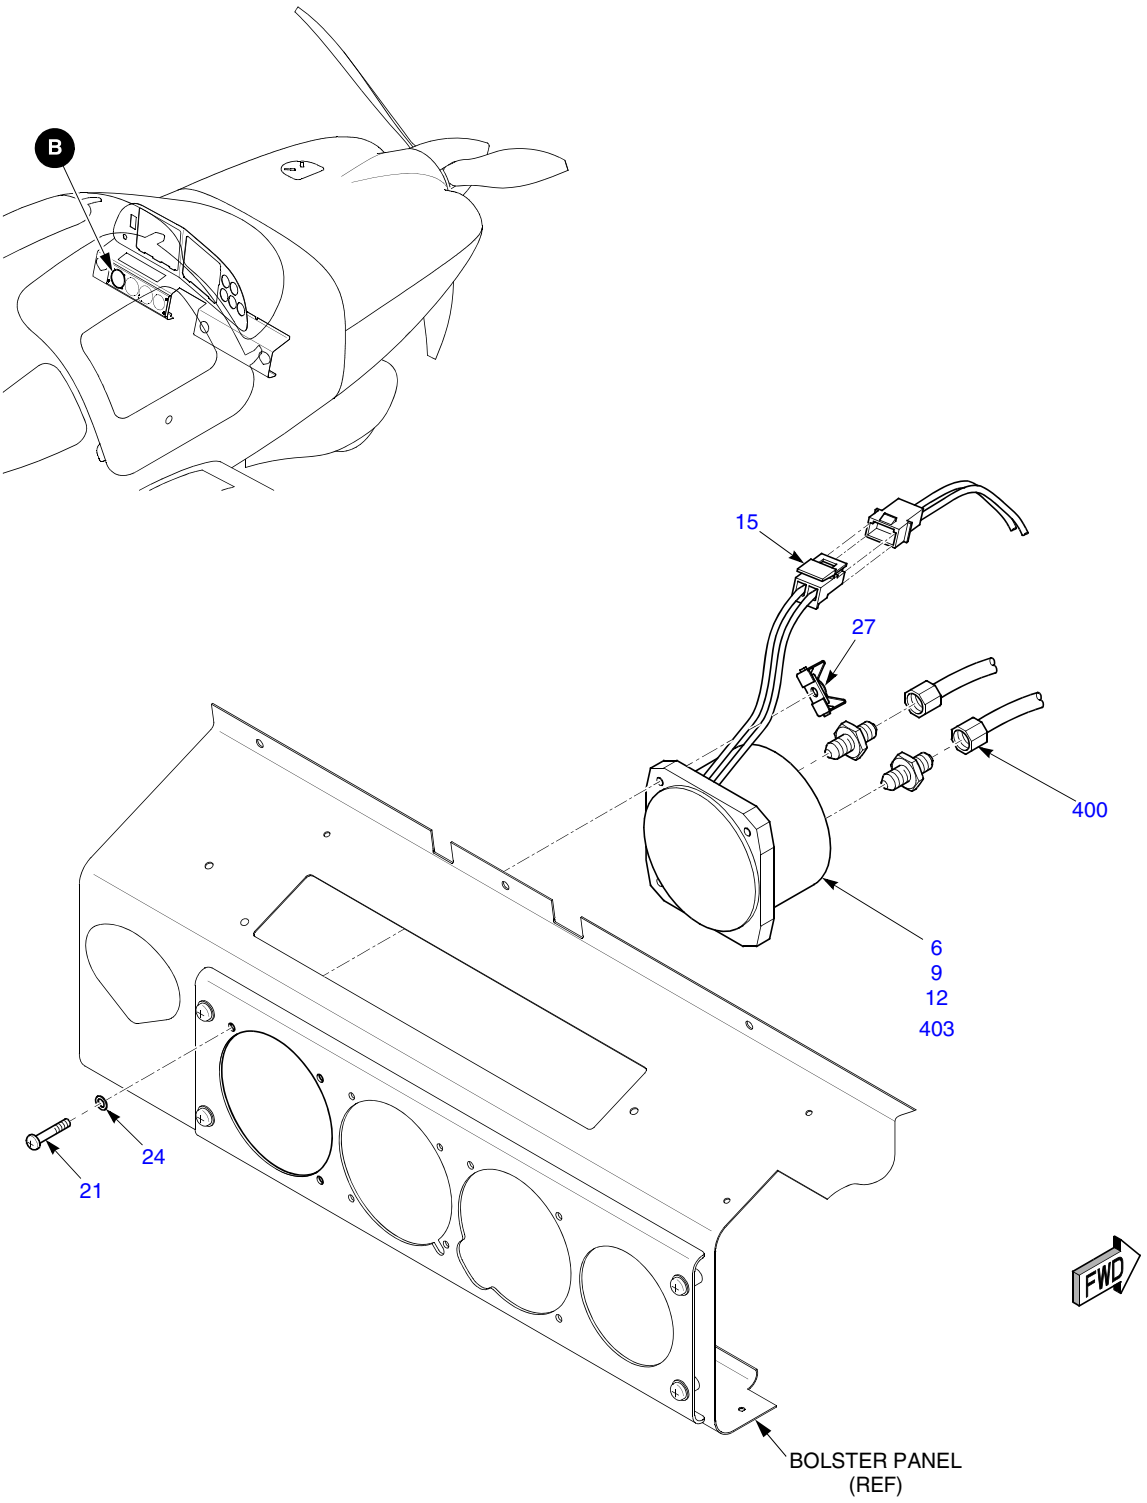

Figure-03

Airspeed Indicator - Serials 22-0435 & subs w/ PFD, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0435 & subs w/ PFD, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		AIRSPEED INDICATOR INSTALLATION	0002 / 0001	/	NP
	3	13568-001			·AIRSPEED INDICATOR, W/O PFD	0002	0820	1
	6	13568-002			·AIRSPEED INDICATOR W/ PFD	0435	2437	1
	9	13568-003			·AIRSPEED INDICATOR W/ PFD	2438 / 0001	3914 / 0441	1
	12	13568-004			·AIRSPEED INDICATOR W/ PFD	3915 / 0442	/	1
	15	50158-002			··CONNECTOR, 2 PIN, MALE	0002 / 0001	/	1
-	18	50157-001			··PIN, CRIMP, 18-24 AWG	0002 / 0001	/	2
	21	50834-016		A	·BUTTON HEAD CAP SCREW	0002 / 0001	/	3
	24	50813-001		A	·WASHER, BLACK NYLON	0002 / 0001	/	3
	27	MS33737-16C		A	·NUT CLIP	0002 / 0001	/	3
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 34-10-01 DET			PITOT-STATIC INSTALLATION			
	401	RF 31-10-01 DET			INSTRUMENT PANEL			
	403	RF 31-10-07 DET			MD302 STANDBY ATTITUDE MODULE (OPTIONAL)	4164 / 0963	/	
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			

Intentionally Left Blank

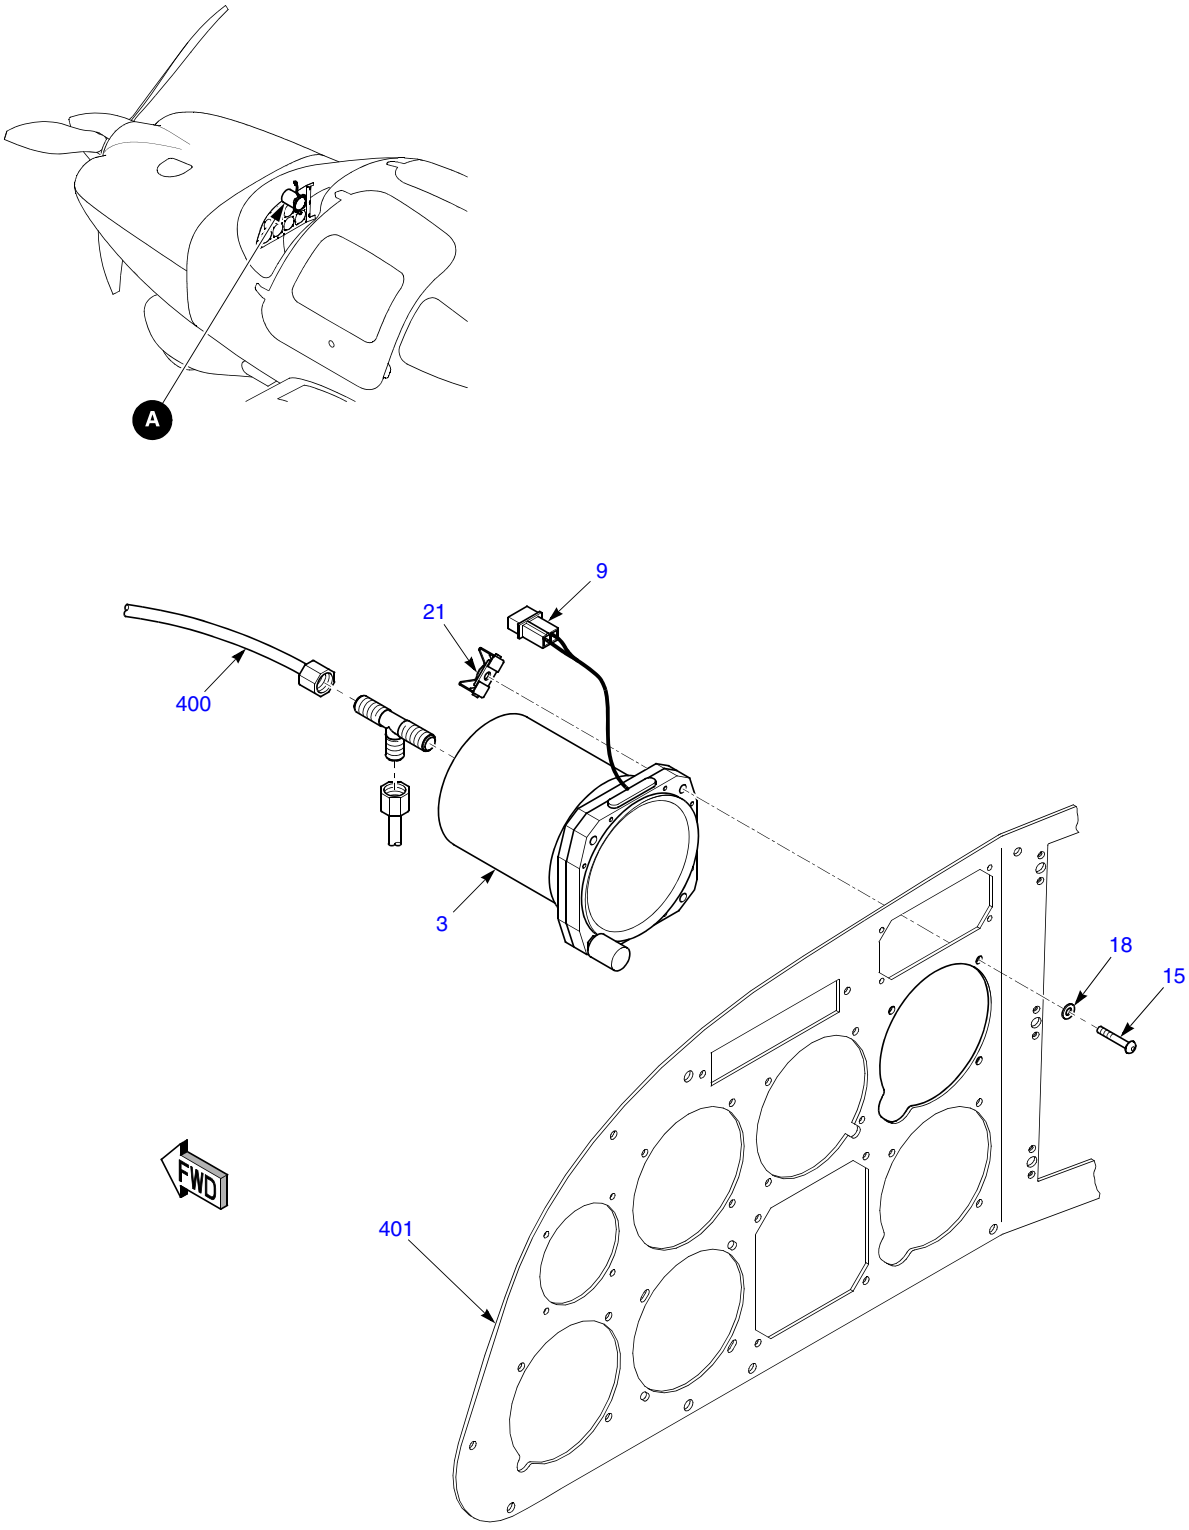

DETAIL A

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

SR22_PC34_1205B

Figure-04

Altimeter - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

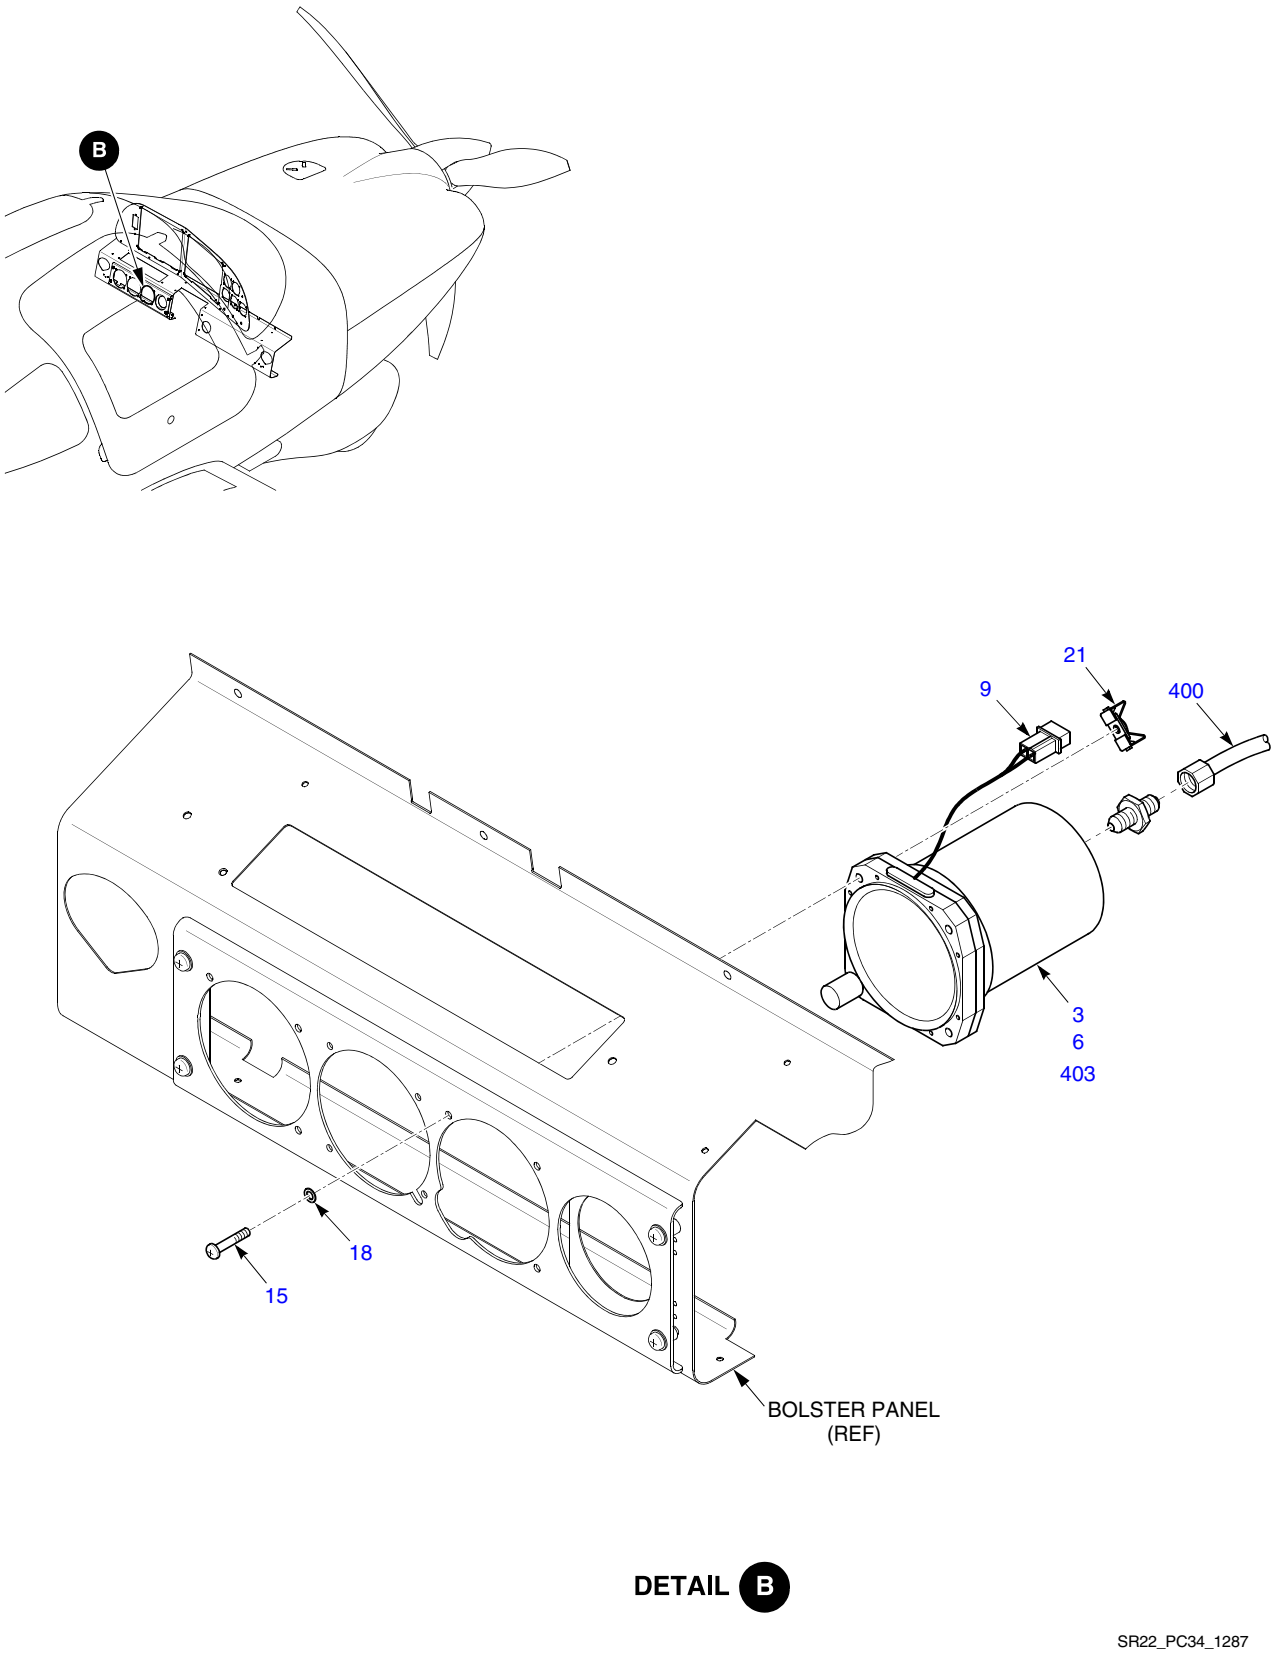

Figure-04

Altimeter - Serials 22-0435 & subs w/ PFD, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0435 & subs w/ PFD, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04			ALTIMETER INSTALLATION	0002 / 0001	/	NP
	3	12102-001			·ALTIMETER	0002	2235	1
	6	12102-002			·ALTIMETER	2236 / 0001	/	1
	9	50158-002			··CONNECTOR	0002 / 0001	/	1
-	12	50157-001			··PIN	0002 / 0001	/	2
	15	50834-016		A	·SCREW	0002 / 0001	/	3
	18	50813-001		A	·WASHER, BLACK NYLON	0002 / 0001	/	3
	21	MS33737-16C		A	·NUT CLIP	0002 / 0001	/	3
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 34-10-01 DET			PITOT-STATIC INSTALLATION			
	401	RF 31-10-01 DET			INSTRUMENT PANEL			
	403	RF 31-10-07 DET			MD302 STANDBY ATTITUDE MODULE (OPTIONAL)	4164 / 0963	/	

Intentionally Left Blank

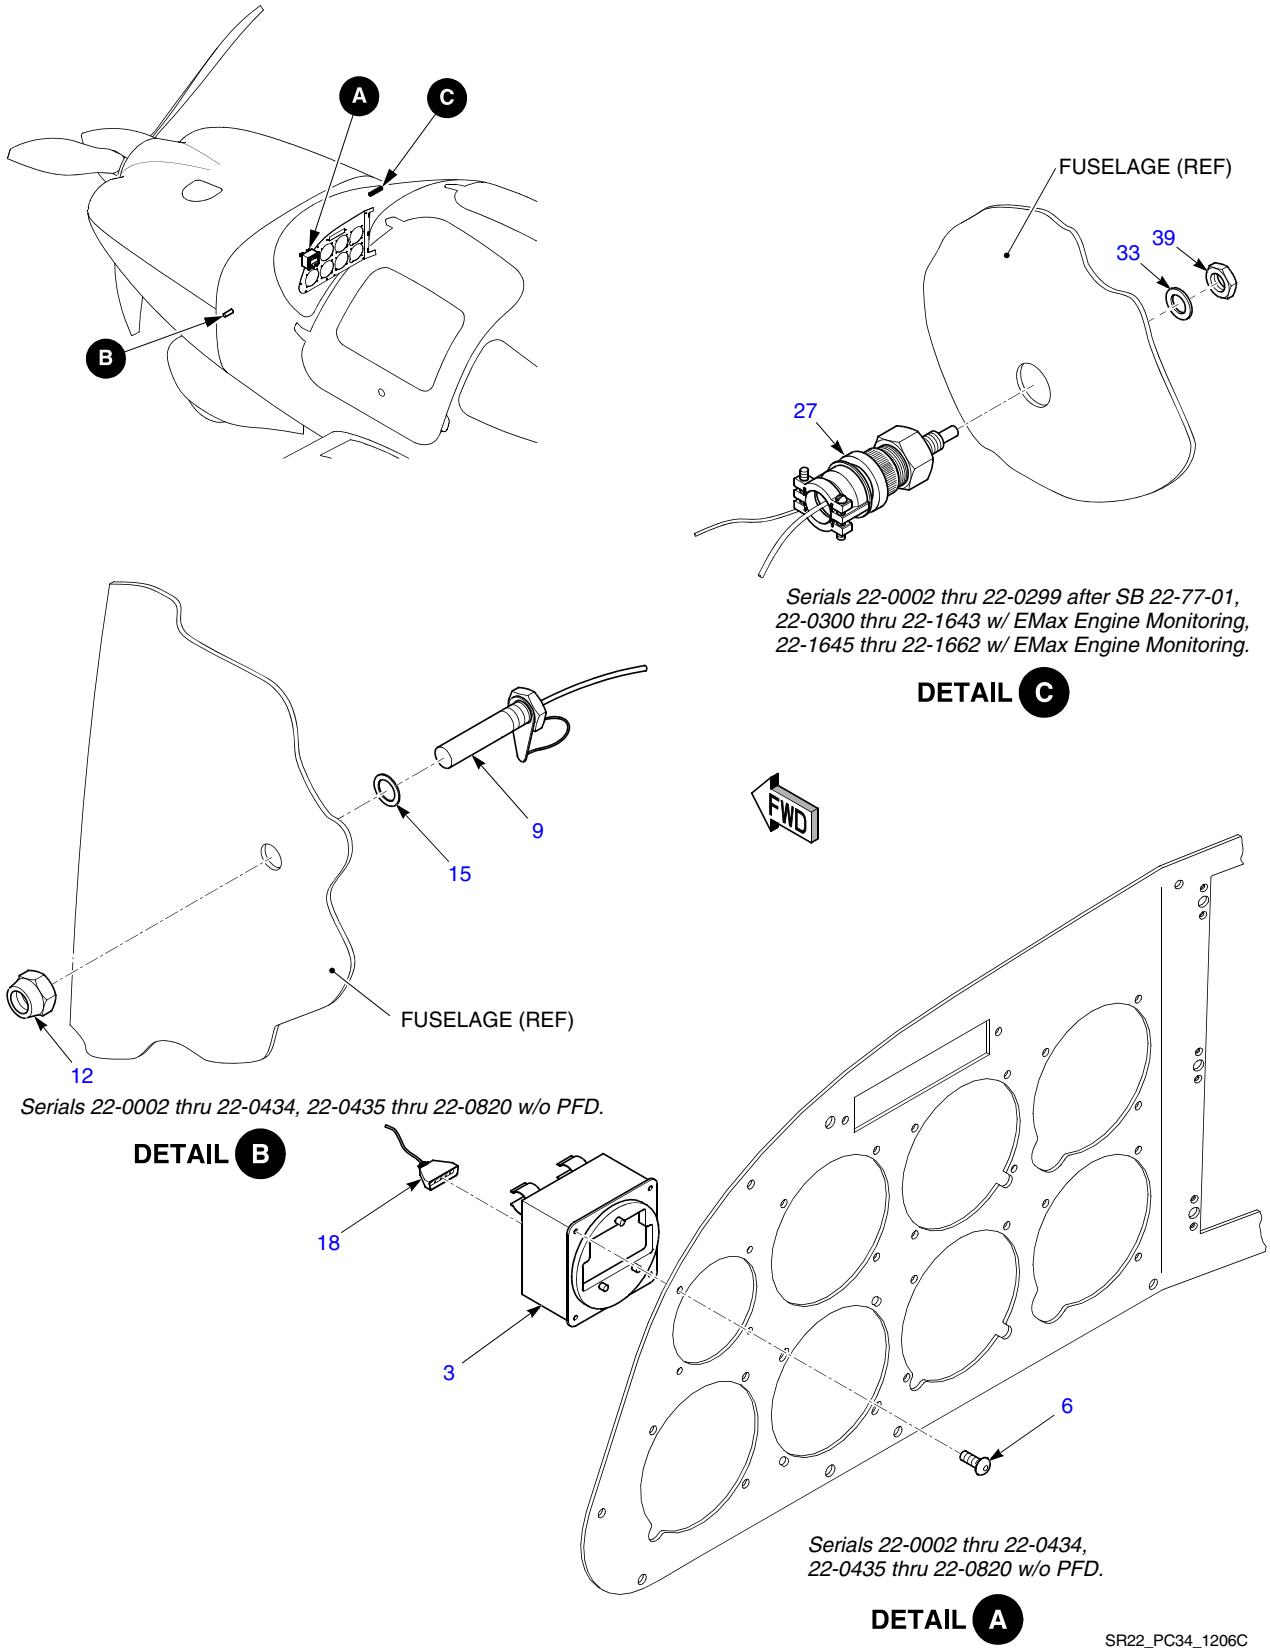

Figure-05

Electric Clock/OAT - Serials 22-0002 & subs w/o Perspective (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

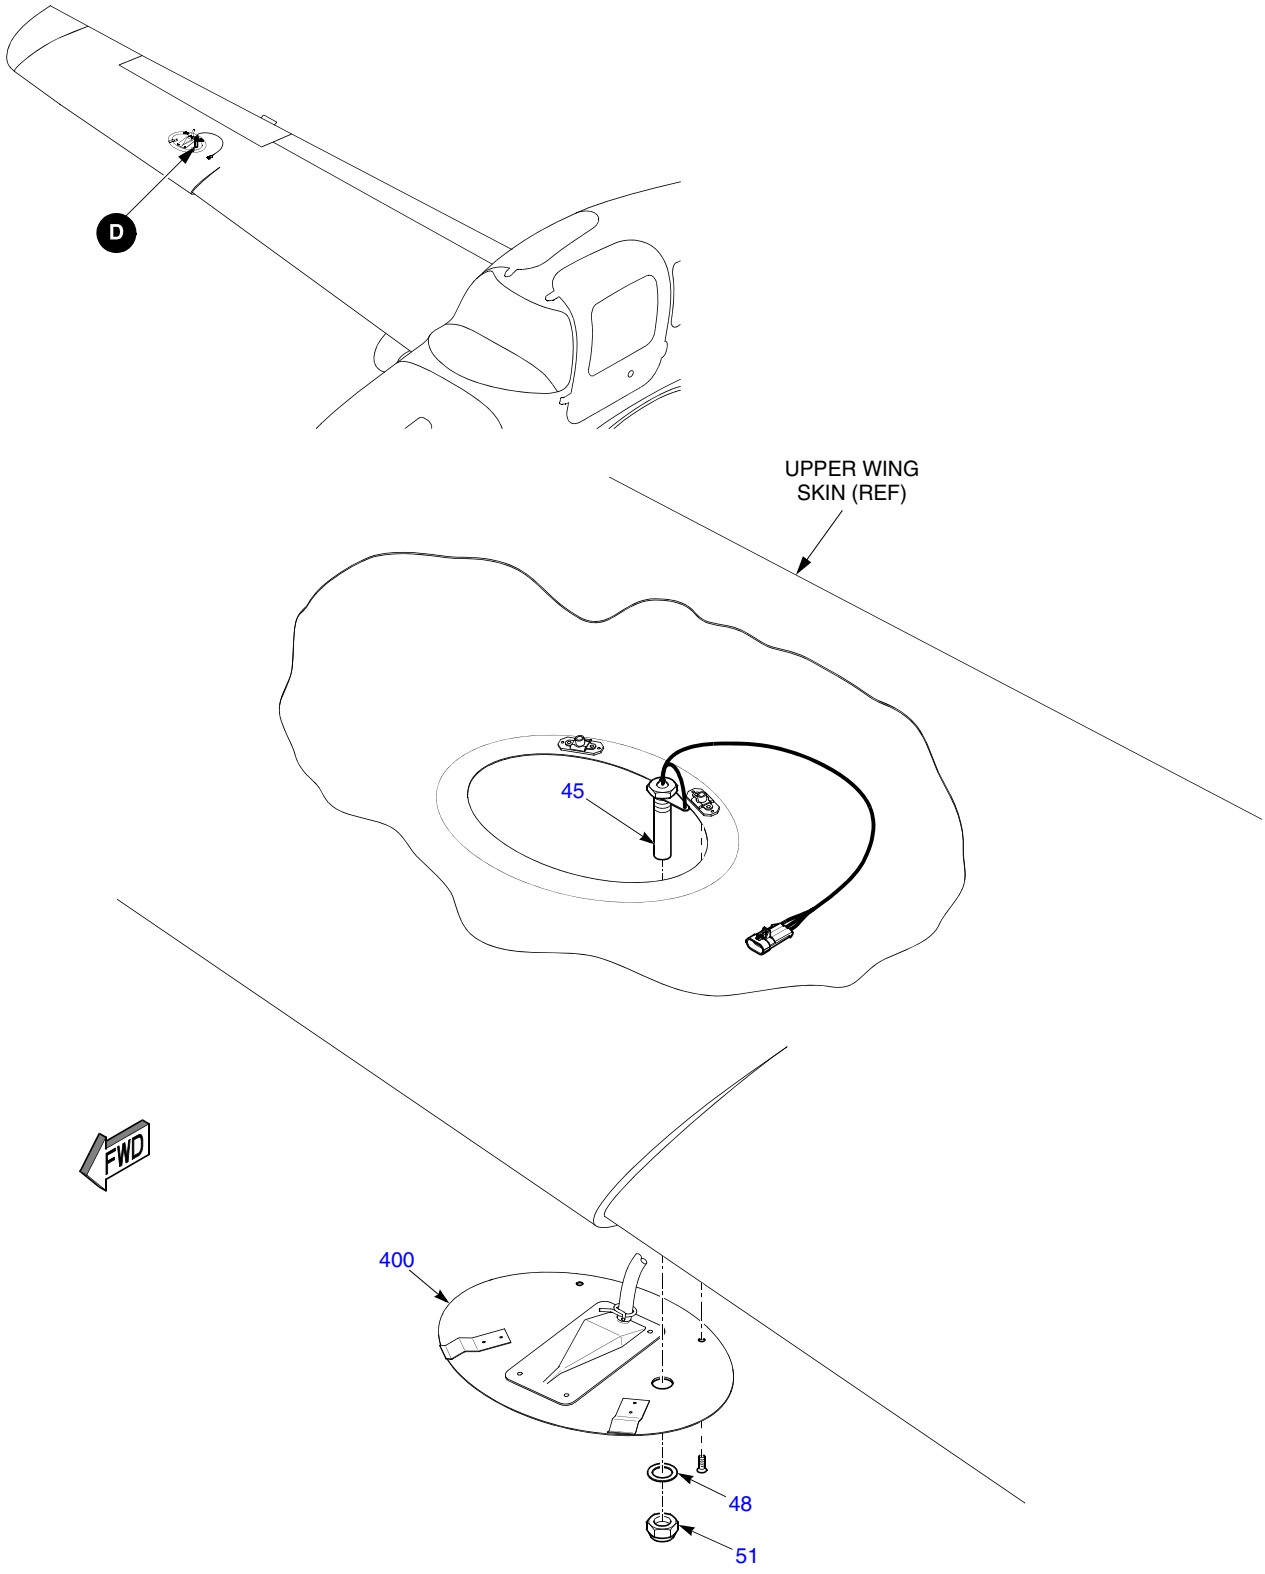

Figure-05
Electric Clock/OAT - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05	**		ELECTRIC CLOCK/OAT	0002	0434	NP
-	2	NO PRT NUMBER			ELECTRIC CLOCK/OAT W/O PFD	0435	0820	NP
	3	50352-001			·ELECTRIC CLOCK/OAT GAUGE	0002	0820	1
	6	50838-006		A	·SCREW	0002	0820	4
	9	C307PRF11			·OAT SENSOR	0002	0820	1
	12	PRT OF ITM 9		A	·NUT	0002	0820	1
	15	PRT OF ITM 9	.	A	·CAPTIVE O-RING	0002	0820	1
	18	50257-001			··CONNECTOR	0002	0820	1
-	21	NO PRT NUMBER			OAT W/ EMAX ENGINE MONITORING	0002		NP
-	24	14848-001			·OAT SENSOR	0002	0299	1
					AFTER SB22-77-01			
	27	14848-001			·OAT SENSOR	0300		1
-	30	98017A204		A	·WASHER	0002	0299	1
	31	51184-001			AFTER SB22-77-01			
	33	51184-001		A	·WASHER	0300		1
-	36	94805A221		A	·NUT	0002	0299	1
	37	51185-001			AFTER SB22-77-01			
	39	51185-001		A	·NUT	0300		1
-	42	NO PRT NUMBER			OAT W/ PERSPECTIVE	3026 / 0001	/	NP
	45	24663-050			·OAT SENSOR	3026 / 0001	/	1
	48	NAS1149C0532R		A	·WASHER	3026 / 0001	/	1
	51	51986-001		A	·NUT	3026 / 0001	/	1
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 57-30-01 DET			LOWER WING ACCESS PANELS			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			

Intentionally Left Blank

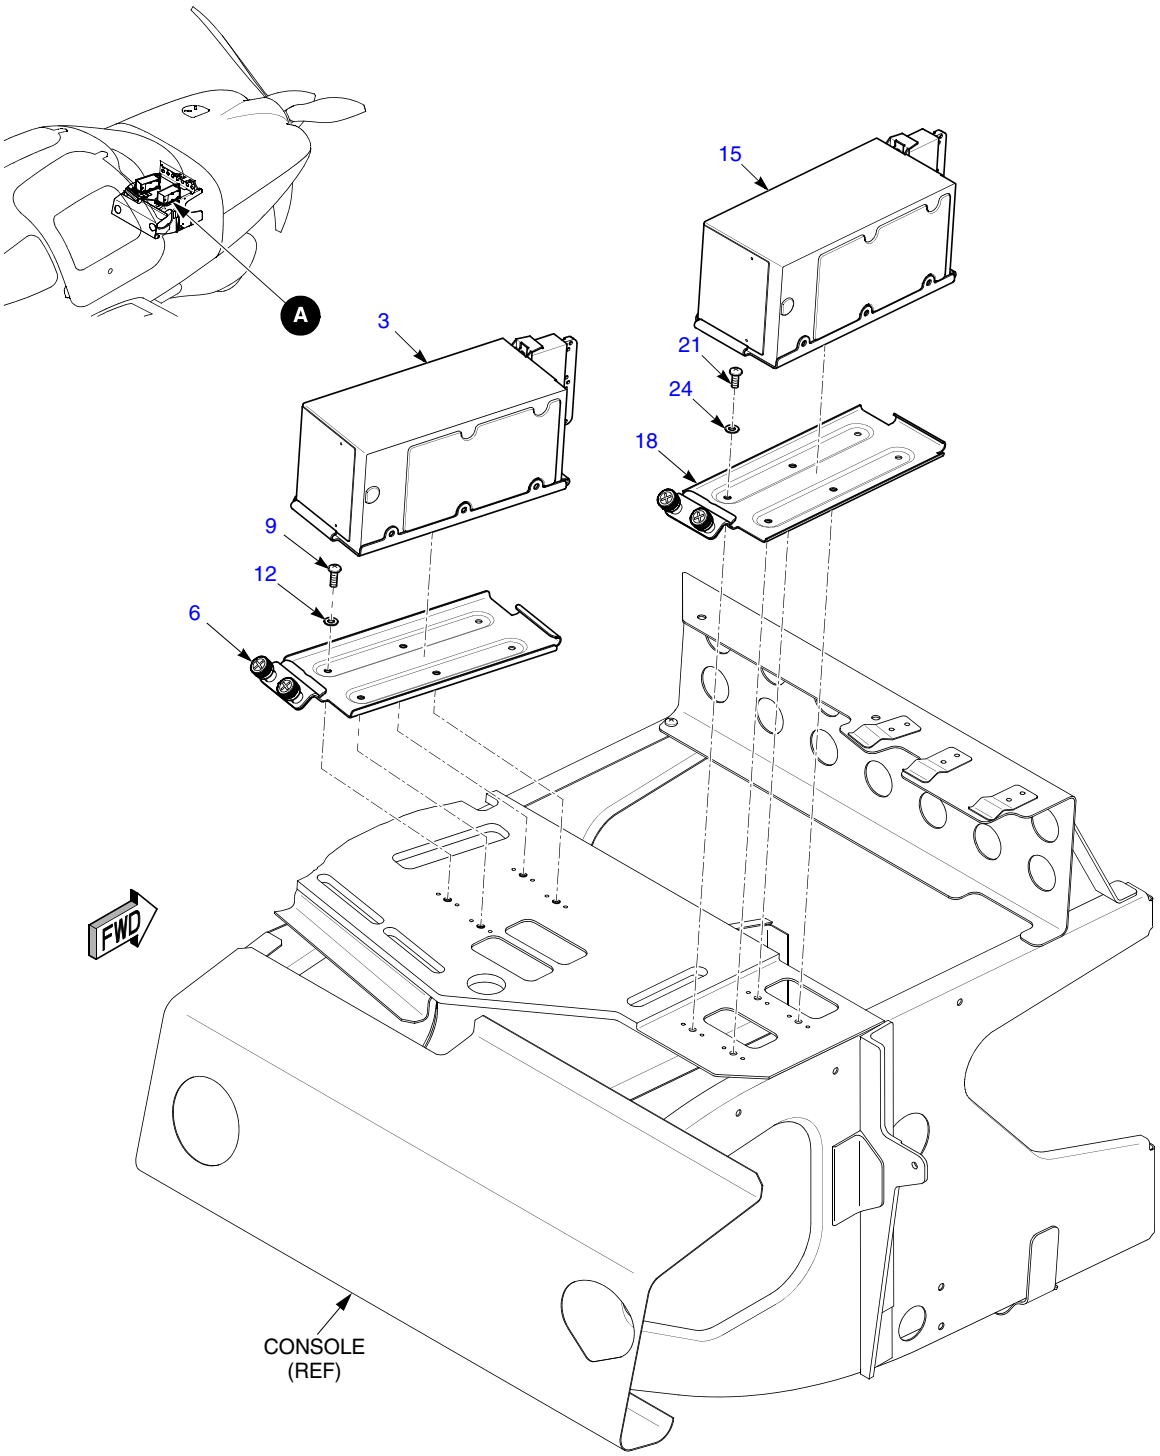

DETAIL A

SR22_PC34_1780A

Figure-06
Air Data Computer - Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 06	**		AIR DATA COMPUTER	3026 / 0001	/	NP
	3	24651-001			·GDC 74 AIR DATA COMPUTER	3026 / 0001	/	1
	6	24651-101			·RACK	3026 / 0001	/	1
	9	MS35206-245		A	·SCREW	3026 / 0001	/	4
	12	NAS1149FN832P		A	·WASHER	3026 / 0001	/	4
	15	24651-001	@		·GDC 74 AIR DATA COMPUTER	3026 / 0001	/	1
	18	24651-101	@		·RACK	3026 / 0001	/	1
	21	MS35206-245	@	A	·SCREW	3026 / 0001	/	4
	24	NAS1149FN832P	@	A	·WASHER	3026 / 0001	/	4
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992 AND 22-3002; REFER TO 22-3026 W/ PERSPECTIVE FOR PRT IDENTIFICATION.			
			@		OPTIONAL DUAL ADC			

EFFECTIVITY:
All

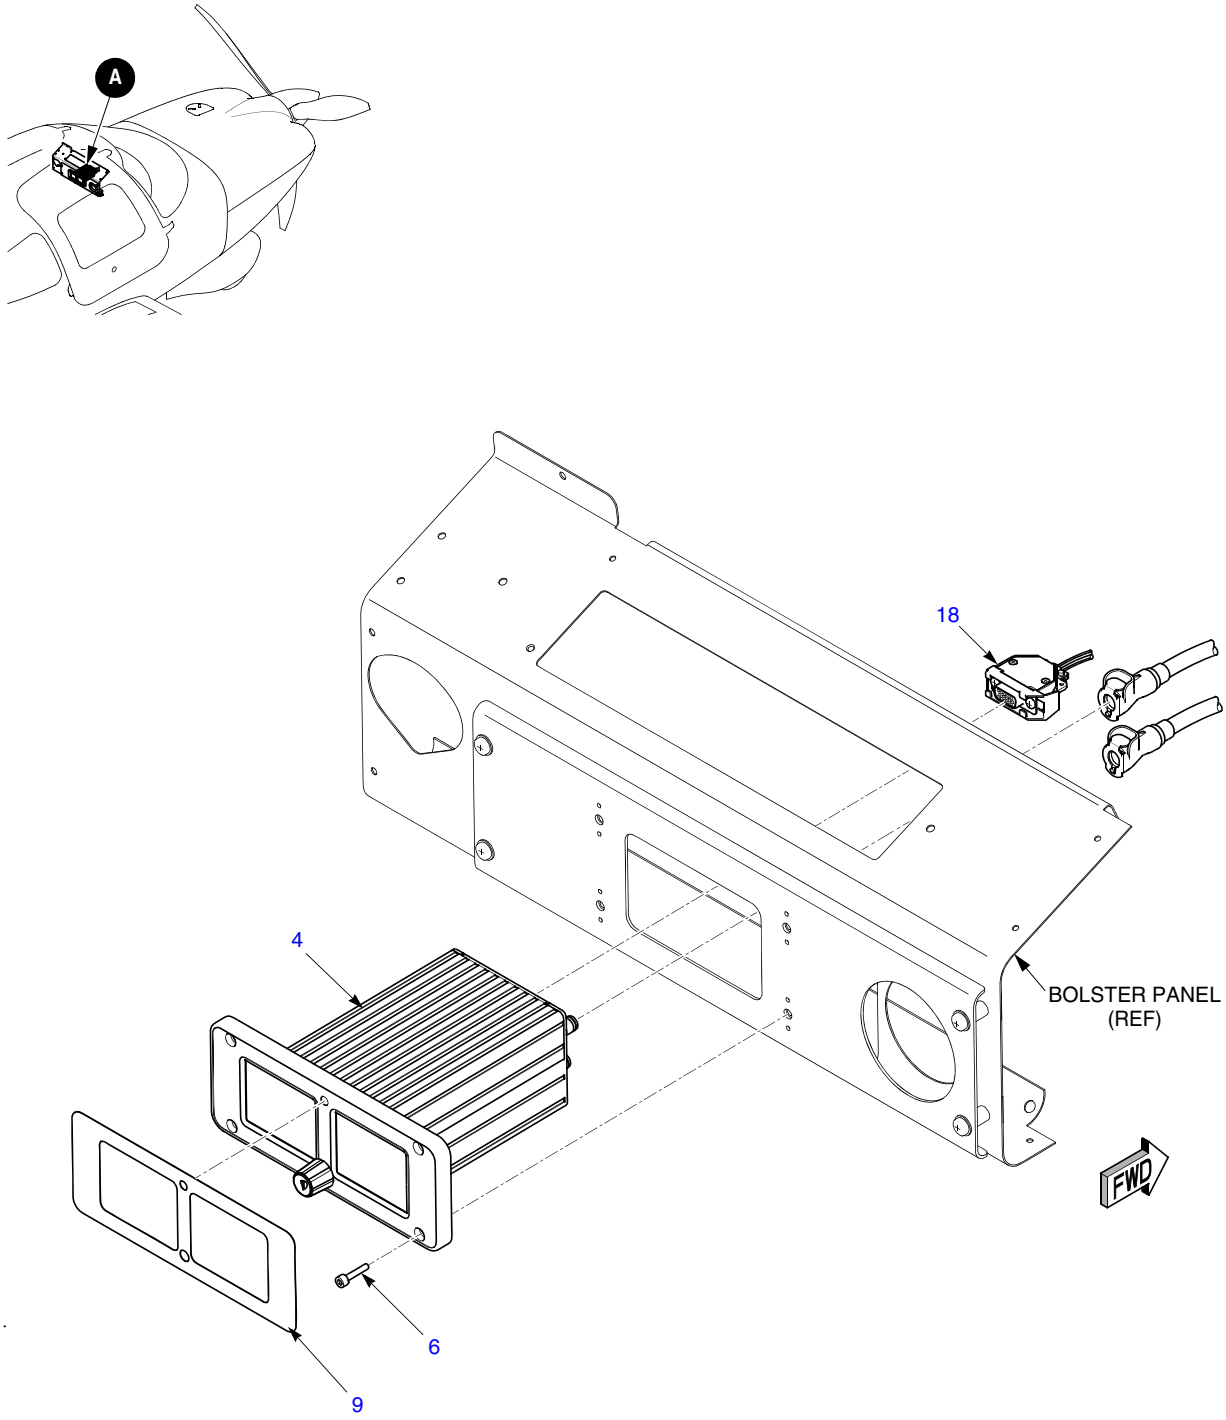

DETAIL A

Serials 22-4164 & subs, 22T-0954, 22T-0963 & subs w/ MD302 Standby Attitude Module.

SR22_PC34_2154

Figure-07
MD302 Standby Attitude Module

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 07			MD302 STANDBY ATTITUDE MODULE	4164 / 0963	/	NP
-	3	30499-004			MD302 STANDBY ATTITUDE MODULE	4164 / 0963		1
					FOR SPARES USE P/N 30499-006			
	4	30499-006			MD302 STANDBY ATTITUDE MODULE	4164 / 0963	/	1
	6	30499-212		A	·SCREW	4164 / 0963	/	4
	9	34983-001			·OVERLAY, MD302 STANDBY ATTITUDE, (CARBON)	4164 / 0963	/	1
-	12	34983-002			·OVERLAY, MD302 STANDBY ATTITUDE, (GLOSS)	4164 / 0963	/	1
-	15	34983-003			·OVERLAY, MD302 STANDBY ATTITUDE, (FLAT)	4164 / 0963	/	1
	18	30499-214			·CONFIG MODULE KIT, MD302 STANDBY ATTITUDE	4164 / 0963	/	1

EFFECTIVITY:
All

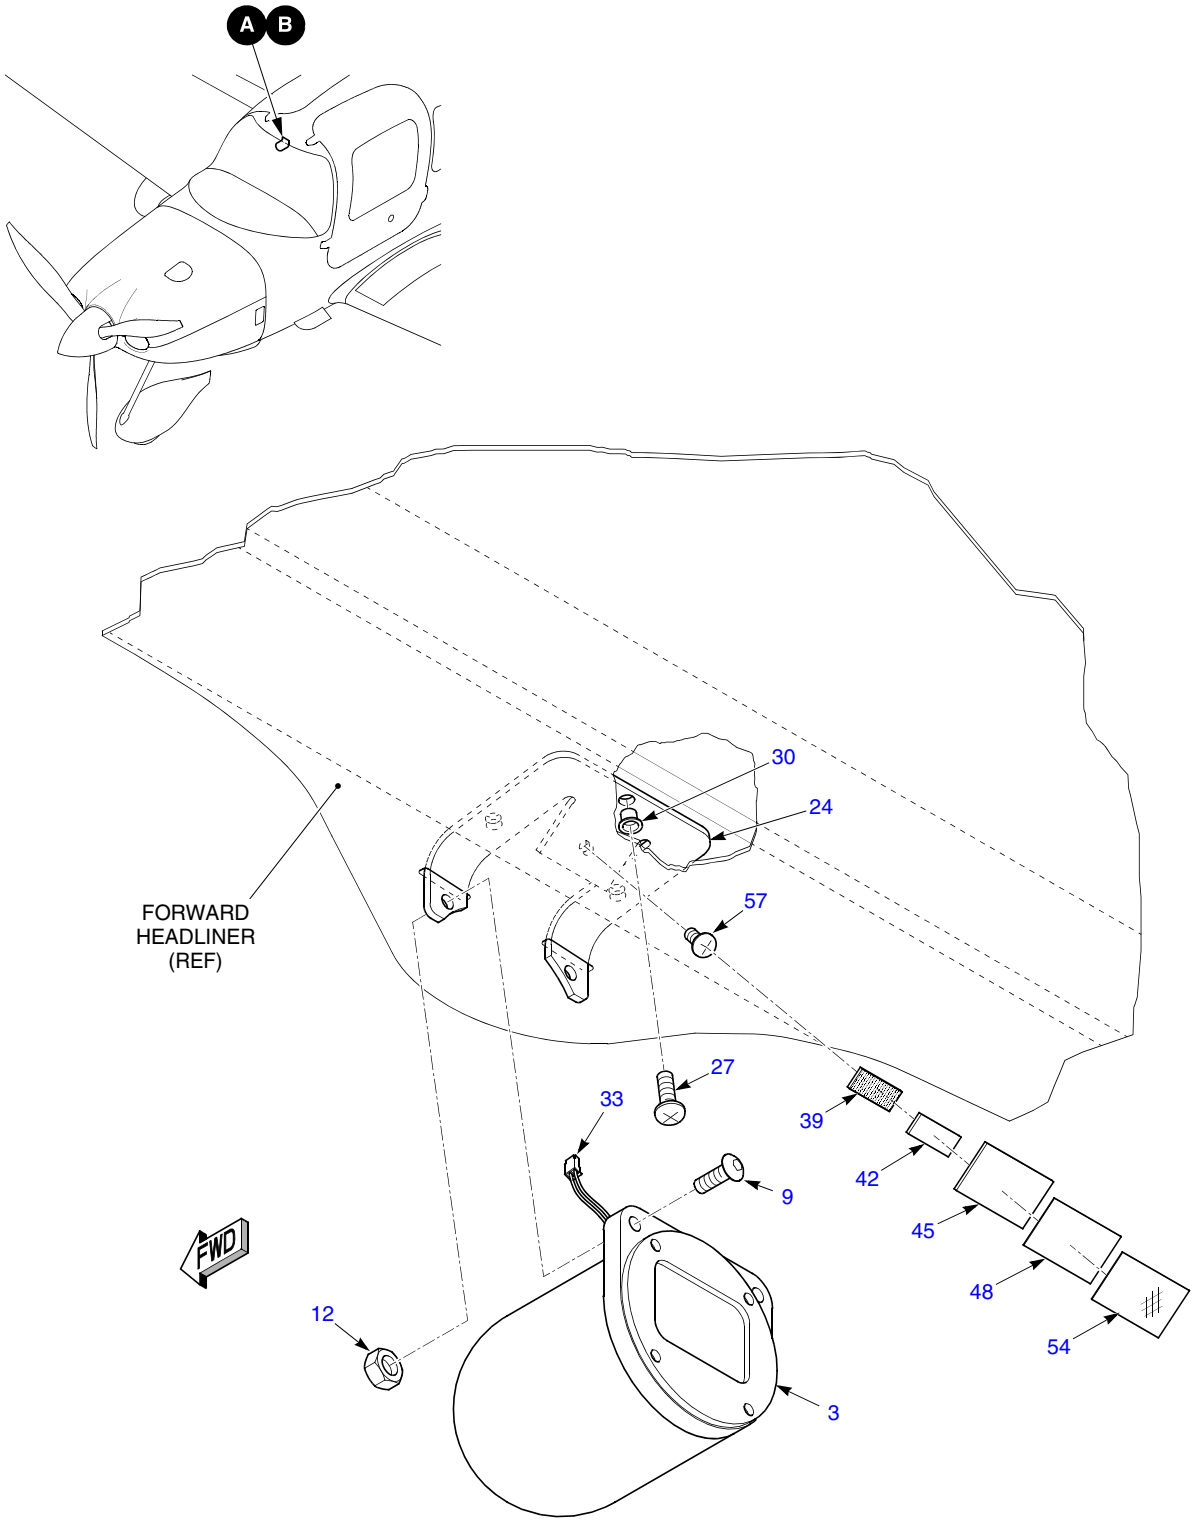

DETAIL A

Serials 22-0002 thru 22-0820.

SR22_PC34_1207B

Figure-01

Magnetic Compass - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

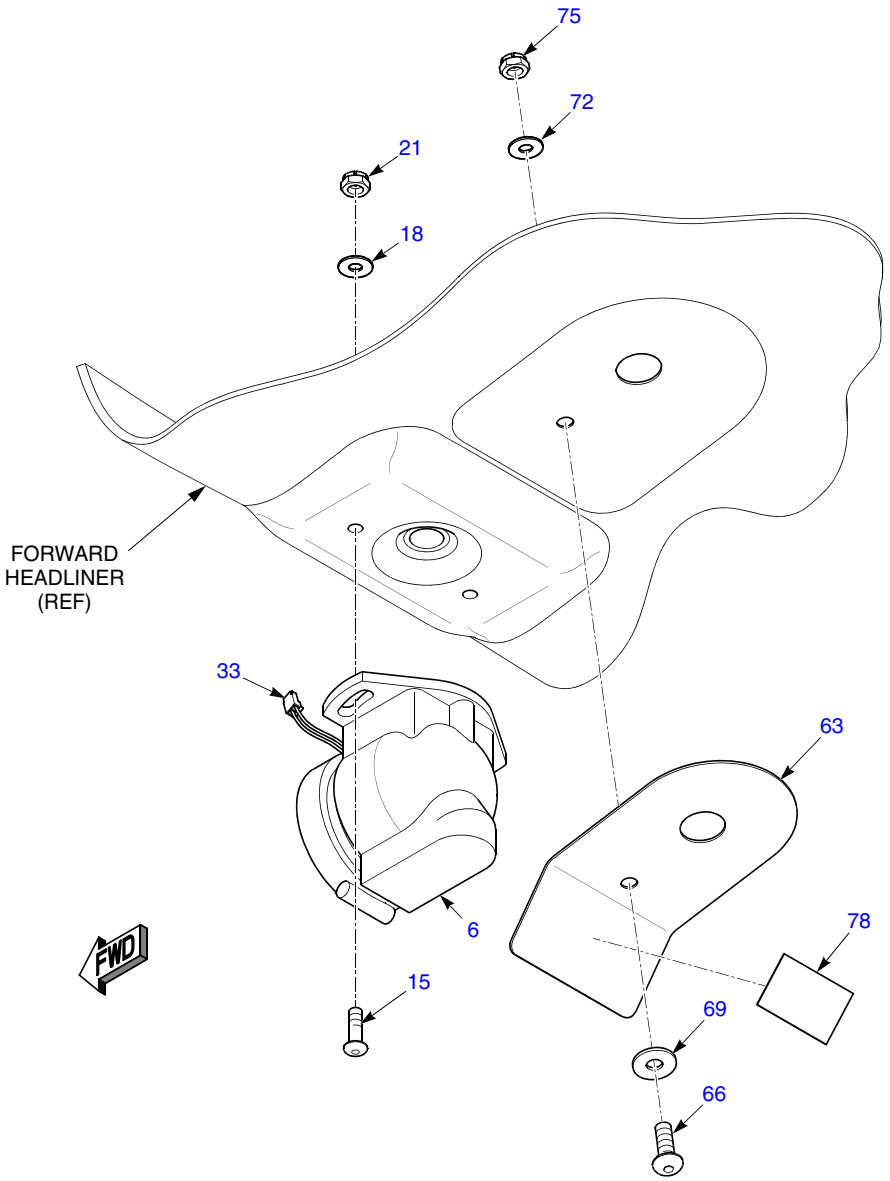

DETAIL B

SR22_PC34_1430A

Figure-01

Magnetic Compass - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			COMPASS	0002 / 0001	/	NP
	3	12451-001			·MAGNETIC COMPASS	0002	0820	1
	6	12451-002			·MAGNETIC COMPASS	0821 / 0001	/	1
	9	PRT OF ITM 3		A	·SCREW	0002	0820	2
	12	PRT OF ITM 3		A	·NUT	0002	0820	2
	15	50834-010		A	·SCREW	0821 / 0001	/	2
	18	NAS1149FN832P	@	A	·WASHER	0821 / 0001	/	2
	21	MS21044N06	@	A	·NUT	0821 / 0001	/	2
-	22	51543-001	@	A	·PLUSNUT	0821 / 0001	/	2
	24	12387-001			·BRACKET	0002	0820	1
	27	MS35206-245		A	·SCREW	0002	0820	3
	30	50748-101		A	·RIVNUT	0002	0820	3
	33	50158-002			··CONNECTOR	0002 / 0001	/	1
-	36	50157-001			··PIN	0002 / 0001	/	2
	39	11831-101			·DUAL LOCK	0002	0820	2
	42	11831-102			·DUAL LOCK	0002	0820	1
	45	PRT OF ITM 3			·CARD HOLDER	0002	0820	1
	48	PRT OF ITM 3			·CARD	0002	0820	1
					ALTERNATE FOR P/N 12376-001			
-	51	12376-001			·CARD	0002	0820	1
					ALTERNATE FOR ITM 48			
	54	PRT OF ITM 3			·CLEAR CARD COVER	0002	0820	1
	57	MS35206-227			·SCREW	0002	0820	1
-	60	12823-001			·TRIM, LIGHT SHIELD, UPPER WINDSHIELD	0002	0820	1
	63	20431-001			·TRIM, LIGHT SHIELD, UPPER WINDSHIELD	0821 / 0001	/	1
	66	50834-010		A	·SCREW	0821 / 0001	/	1
	69	50813-001		A	·WASHER	0821 / 0001	/	1
	72	NAS1149FN832P	@	A	·WASHER	0821 / 0001	/	1
	75	MS21044N06	@	A	·NUT	0821 / 0001	/	1
-	76	51543-001	@	A	·PLUSNUT	0821 / 0001	/	1
	78	PRT OF ITM 6			·CARD	0821 / 0001	/	1
					SYMBOL NOTES:			
			@		ALTERNATE USES PLUSNUT IN PLACE OF WASHER AND NUT.			

Intentionally Left Blank

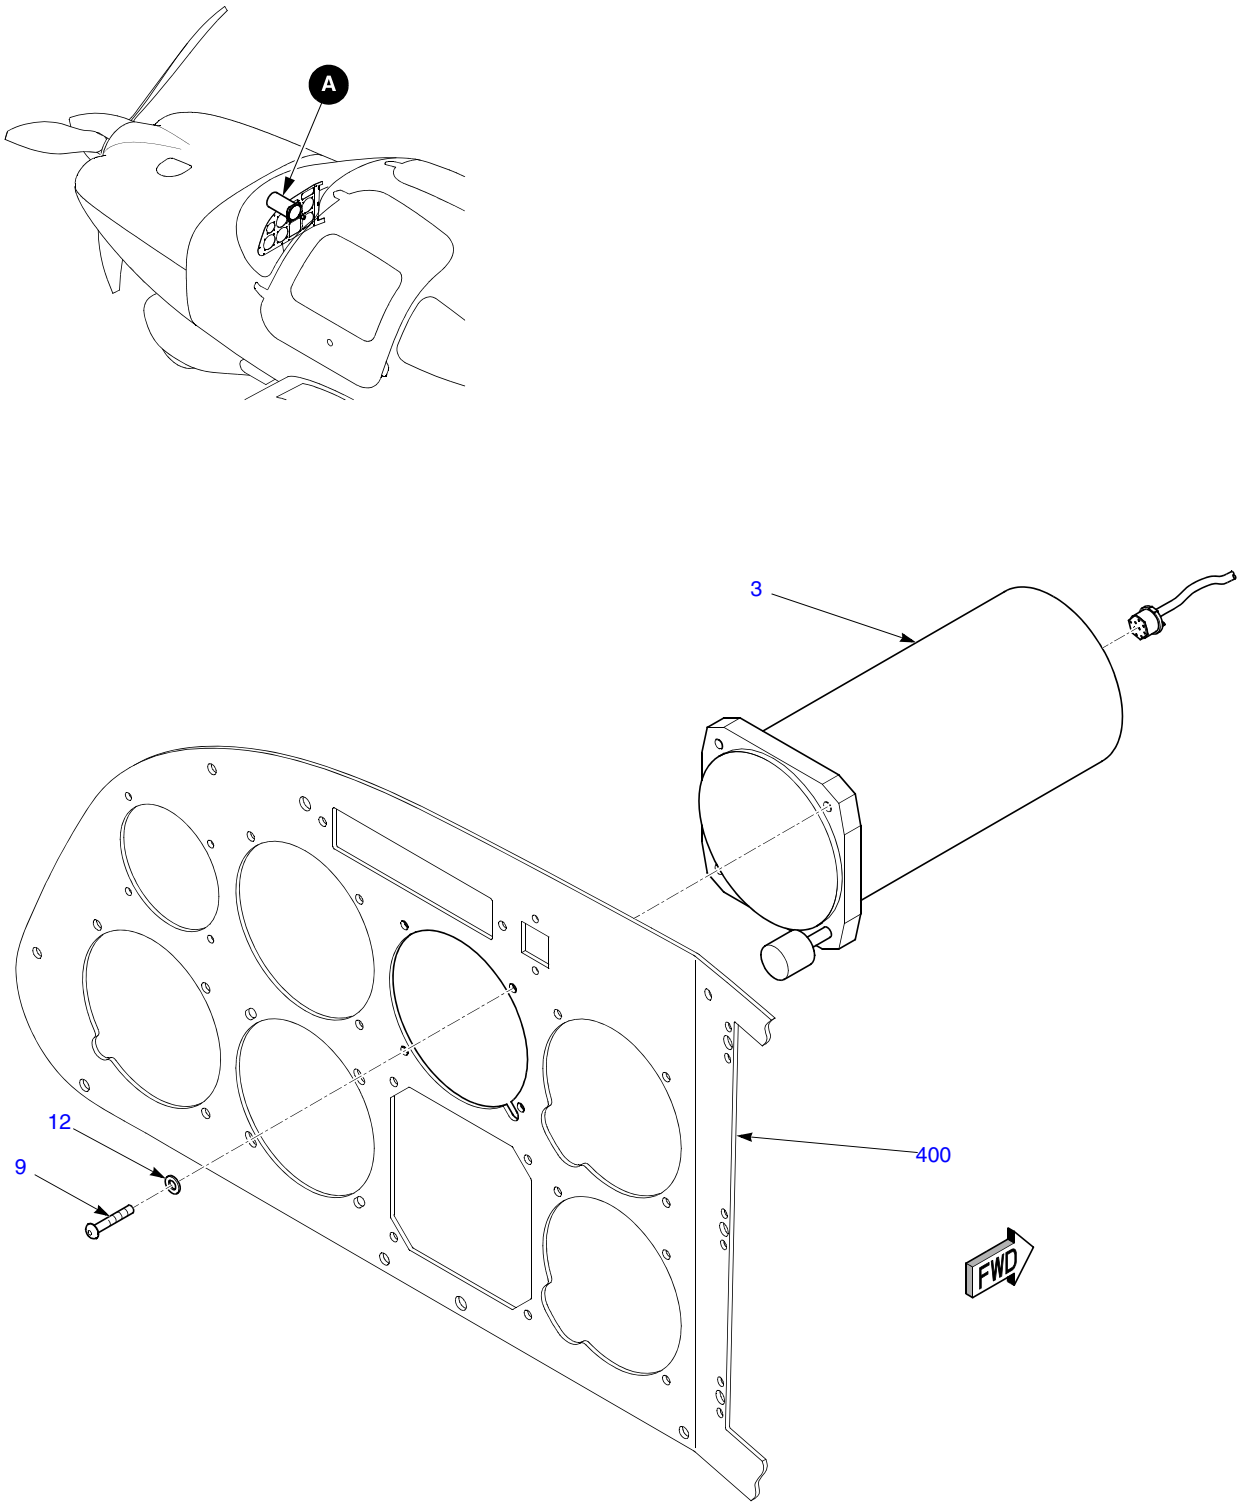

DETAIL A

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

SR22_PC34_1208B

Figure-02

Attitude Indicator - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

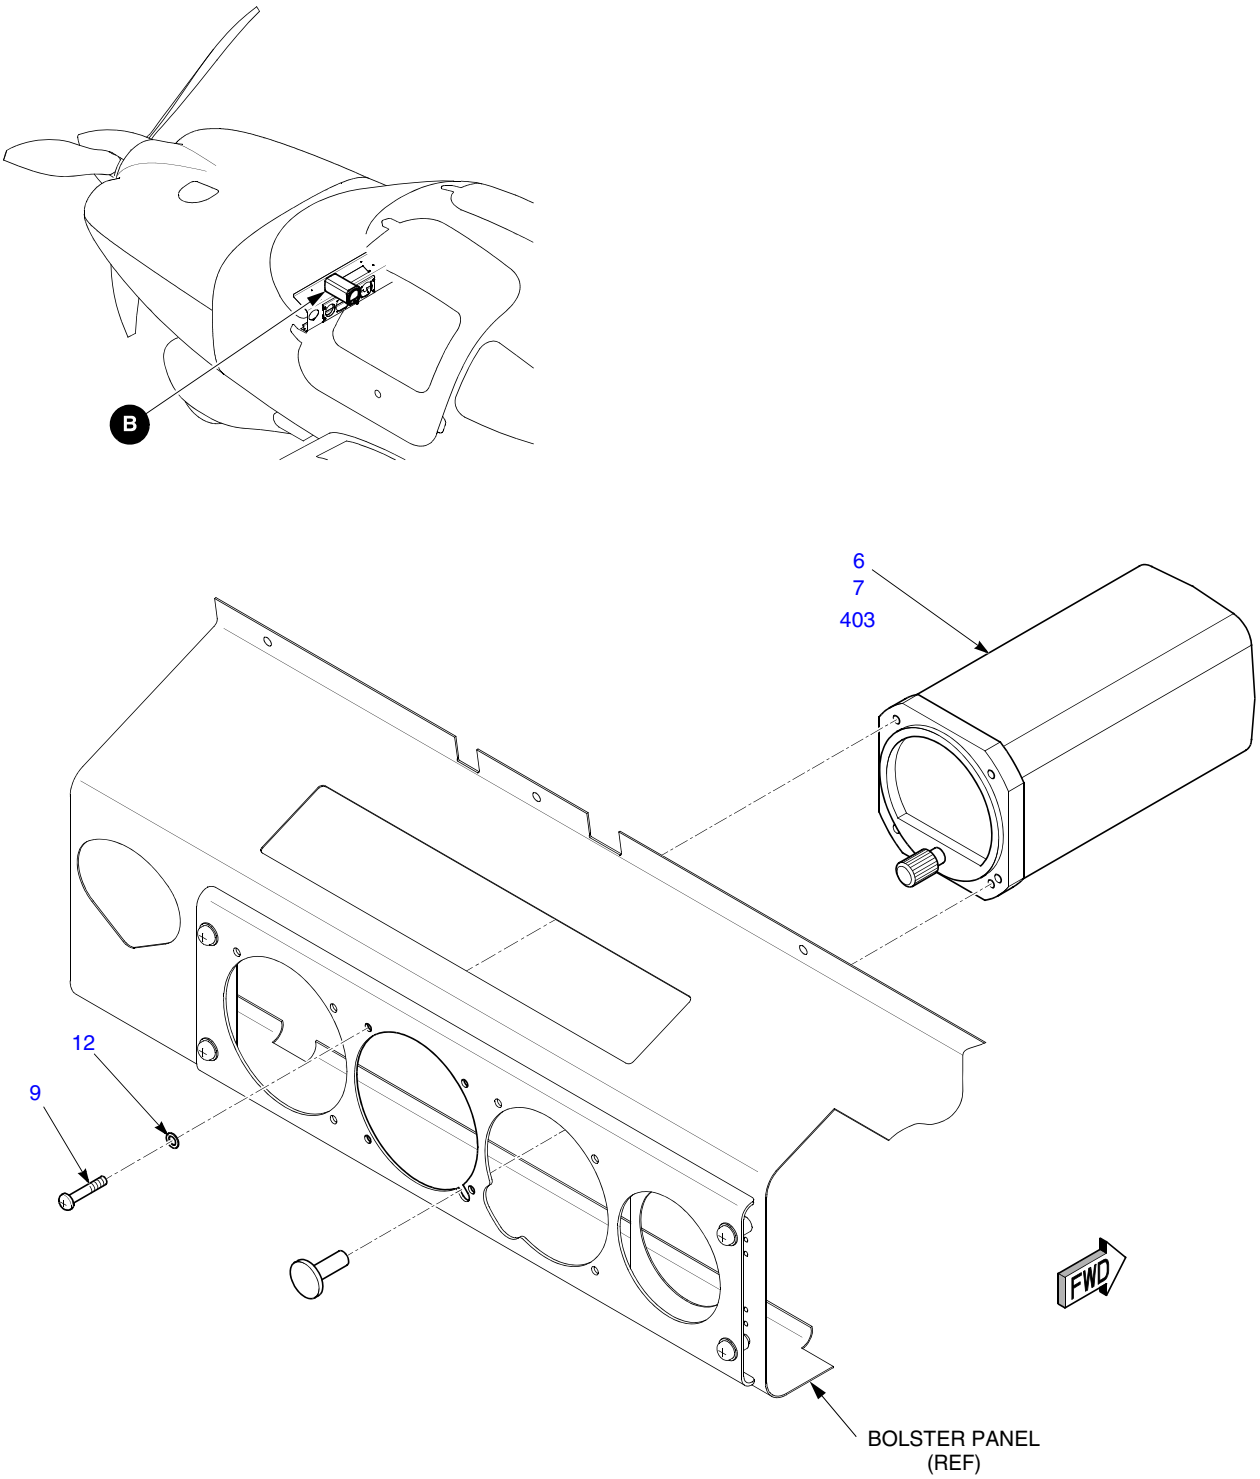

Figure-02

Attitude Indicator - Serials 22-0435 & subs w/ PFD, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0435 & subs w/ PFD, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		ATTITUDE INDICATOR INSTALLATION	0002 / 0001	/	NP
	3	13468-001			·ATTITUDE INDICATOR, W/O PFD	0002	0820	1
	6	13468-114			·ATTITUDE INDICATOR, W/ AVIDYNE PFD	0435		1
	7	24668-001			·ATTITUDE INDICATOR, W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
					ALTERNATE FOR P/N 24668-003			
-	8	24668-003			·ATTITUDE INDICATOR, W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
					ALTERNATE FOR P/N 24668-001			
	9	50834-014		A	·SCREW	0002 / 0001	/	4
	12	50813-001		A	·WASHER	0002 / 0001	/	4
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 31-10-01 DET			INSTRUMENT PANEL			
	403	RF 31-10-07 DET			MD302 STANDBY ATTITUDE MODULE (OPTIONAL)	4164 / 0963	/	
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			

Intentionally Left Blank

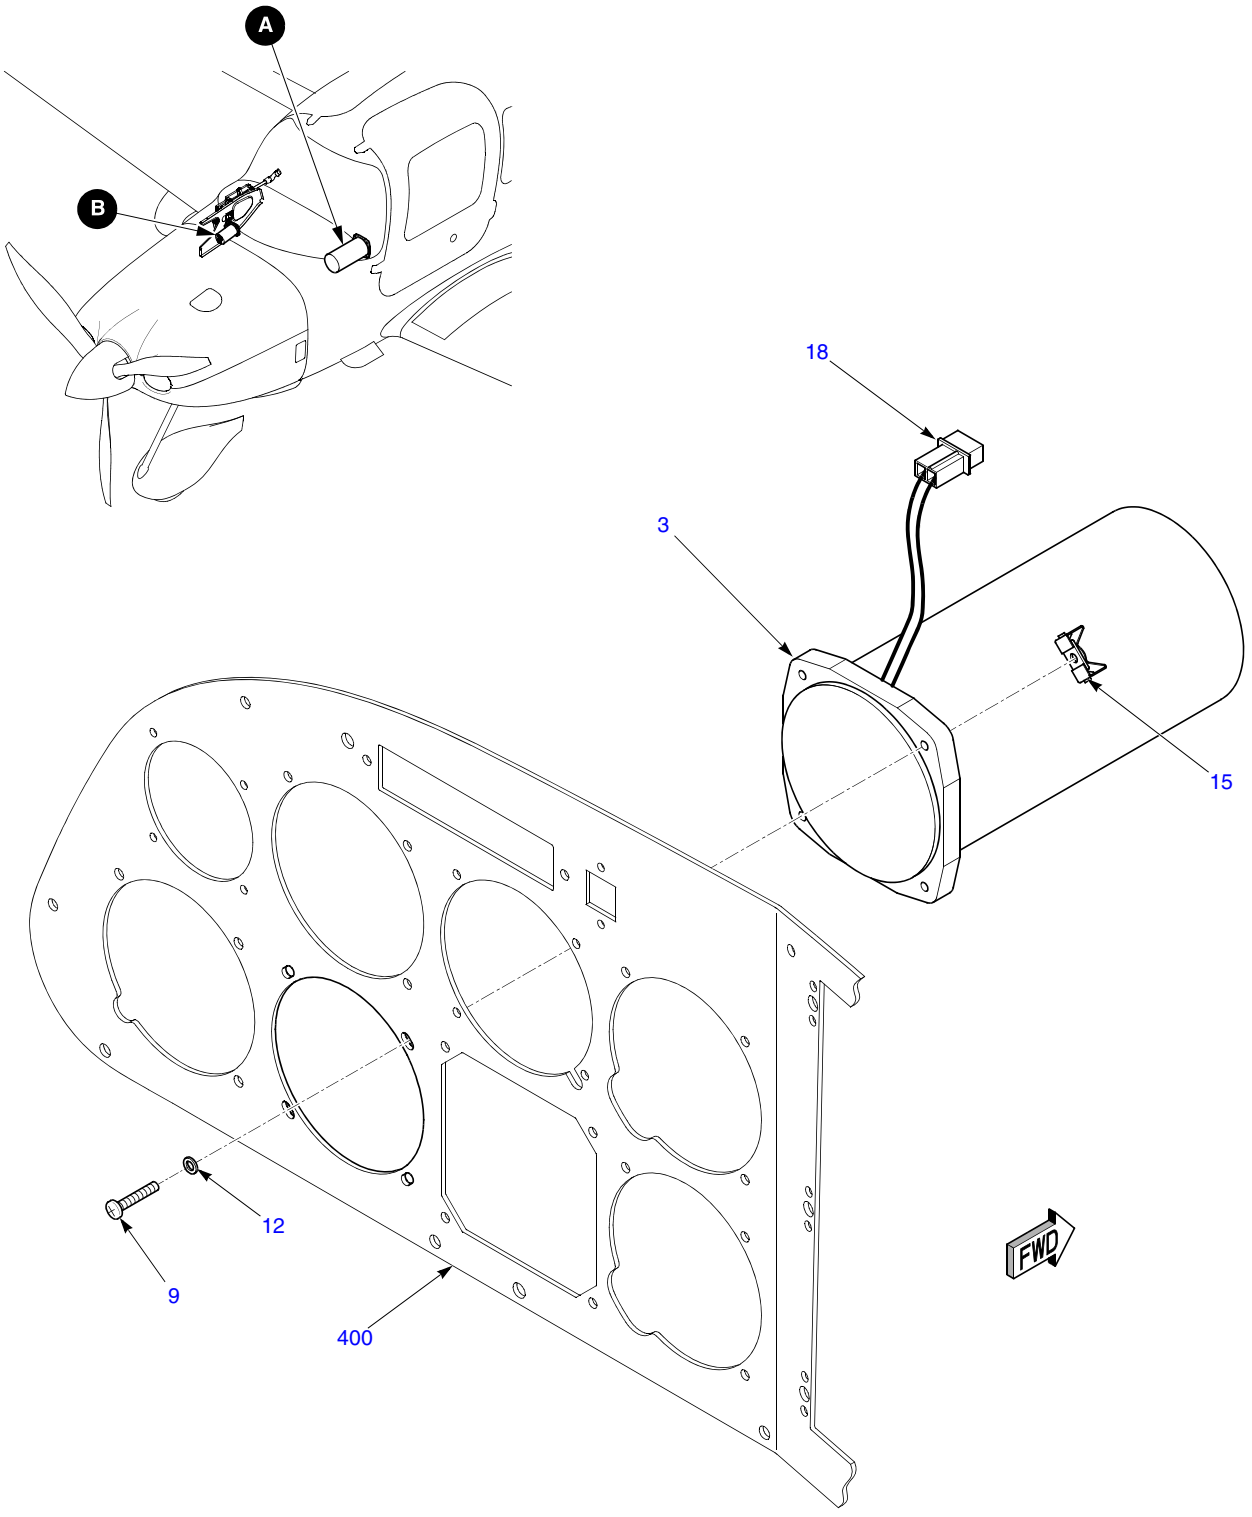

DETAIL A

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

SR22_PC34_1209A

Figure-03

Turn Coordinator - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

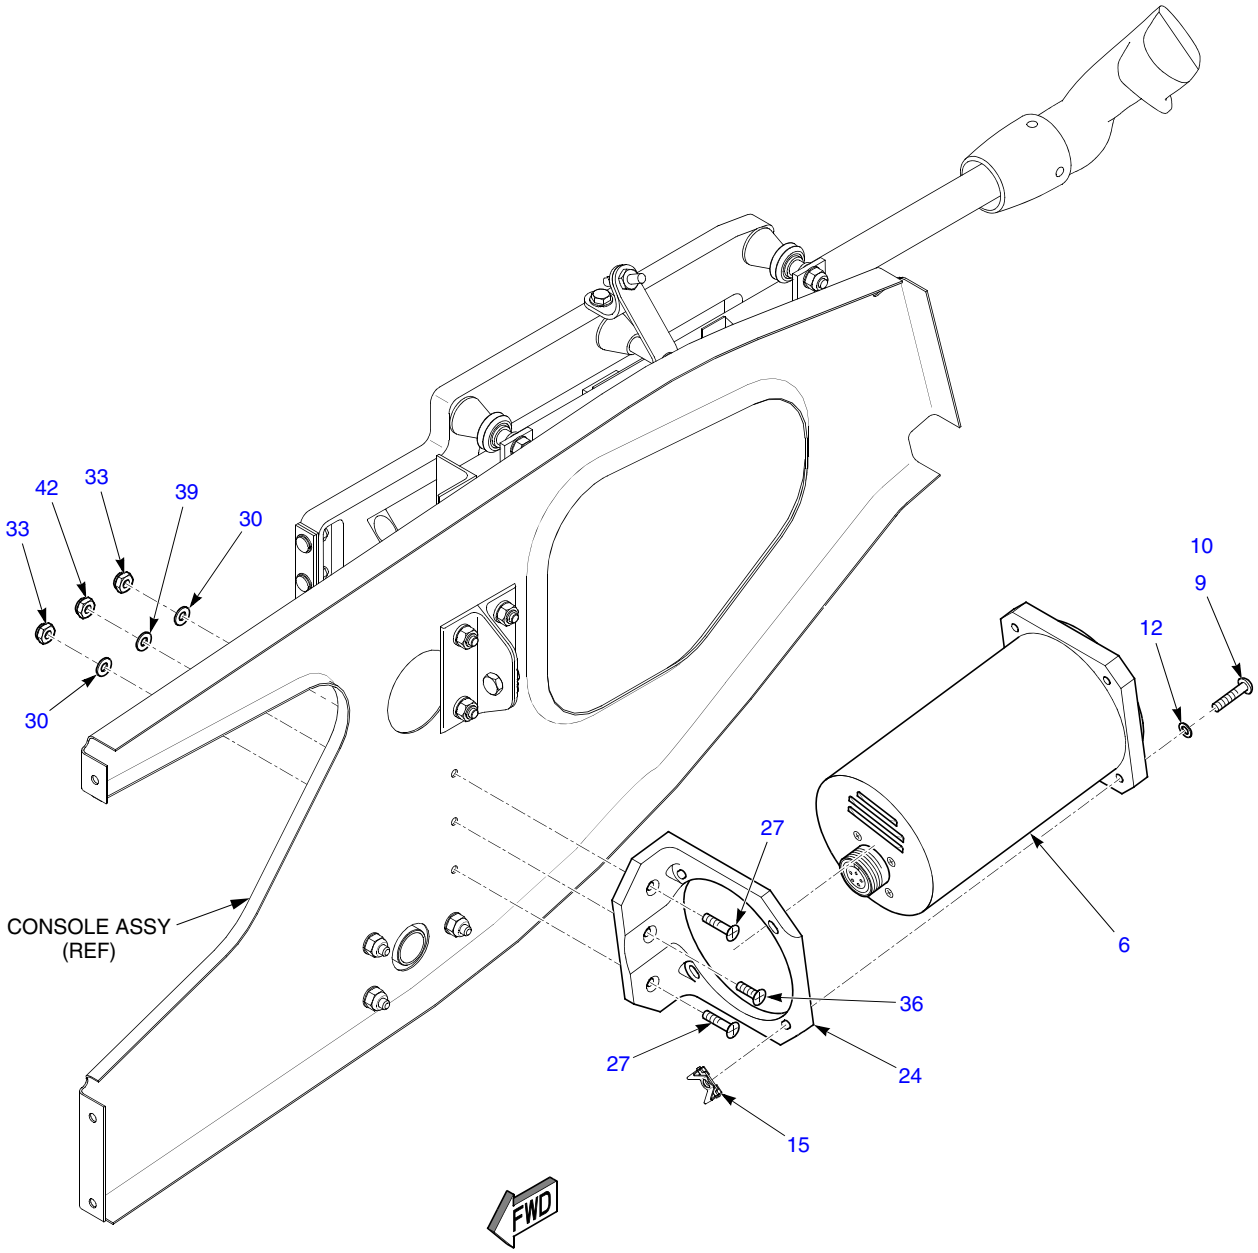

DETAIL B

Serials 22-0435 thru 22-0820 w/PFD, 22-0821 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

SR22_PC34_1283A

Figure-03

Turn Coordinator - Serials 22-0435 & subs w/ PFD and w/o Perspective (2 of 2)

EFFECTIVITY:
Serials 22-0435 & subs w/ PFD and w/o Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			TURN COORDINATOR	0002		NP
	3	11891-001	@		·TURN COORDINATOR, W/O PFD	0002	0820	1
	6	12733-001	@		·TURN COORDINATOR, W/ PFD	0435		1
	9	50834-014		A	·SCREW	0002	2229	4
	10	50834-024		A	·SCREW	2230		4
	12	50813-001		A	·WASHER	0002		4
	15	MS33737-16C		A	·NUTCLIP	0002		4
	18	50158-002			··CONNECTOR	0002		1
-	21	50157-001			··PIN	0002		2
	24	15294-002			·BRACKET, W/ PFD	0435		1
	27	MS24694-S9		A	·SCREW, W/ PFD	0435		2
	30	NAS1149FN832P		A	·WASHER, W/ PFD	0435		2
	33	MS21083N08		A	·NUT, W/ PFD	0435		2
	36	MS24694-S7		A	·SCREW, W/ PFD	0435		1
	39	NAS1149FN832P		A	·WASHER, W/ PFD	0435		1
	42	MS21083N08		A	·NUT, W/ PFD	0435		1
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 31-10-01 DET			INSTRUMENT PANEL			
					SYMBOL NOTES:			
			@		REPLACEMENT OF 11891-001 TURN COORDINATOR REQUIRES 50834-024 SCREWS.			

Intentionally Left Blank

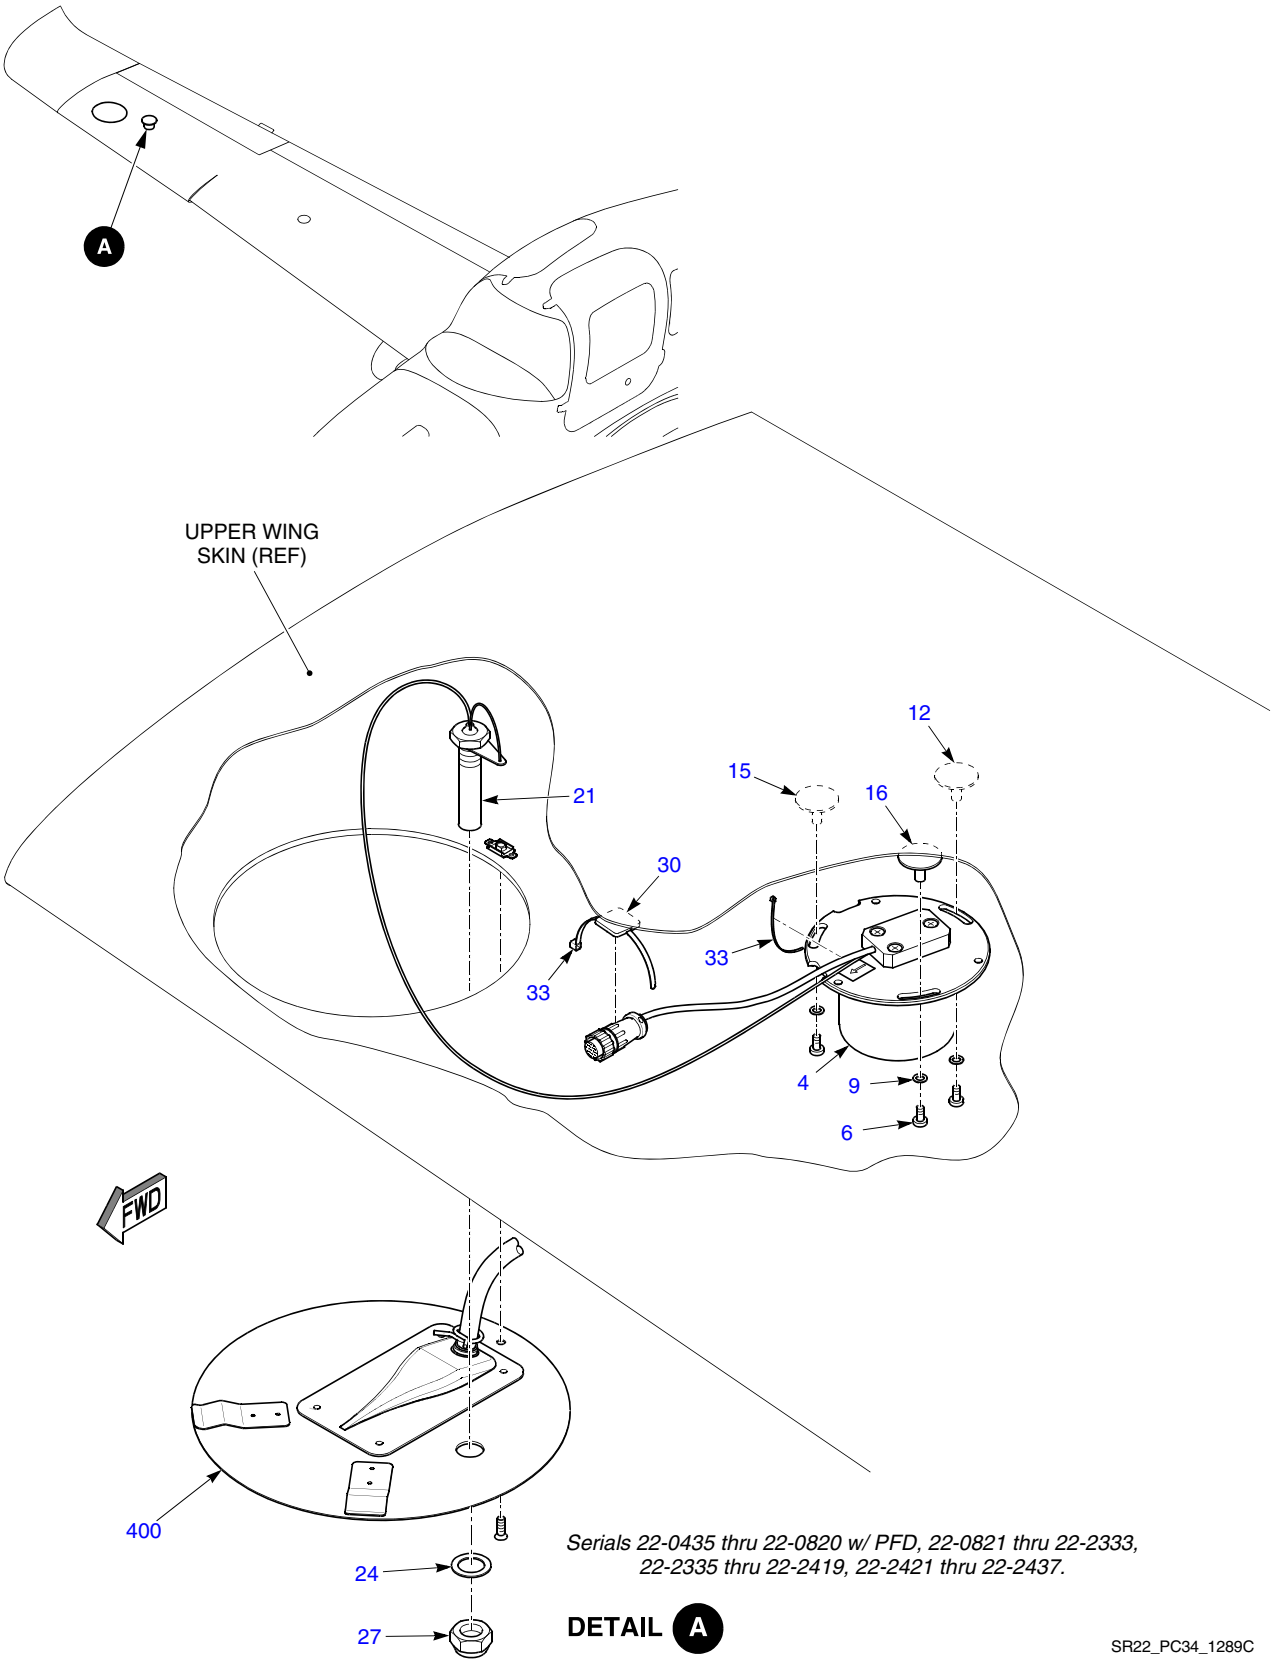

Figure-04

Magnetometer/OAT Sensor - Serials 22-0435 thru 22-2437 w/ PFD (1 of 3)

EFFECTIVITY:
Serials 22-0435 thru 22-2437 w/ PFD

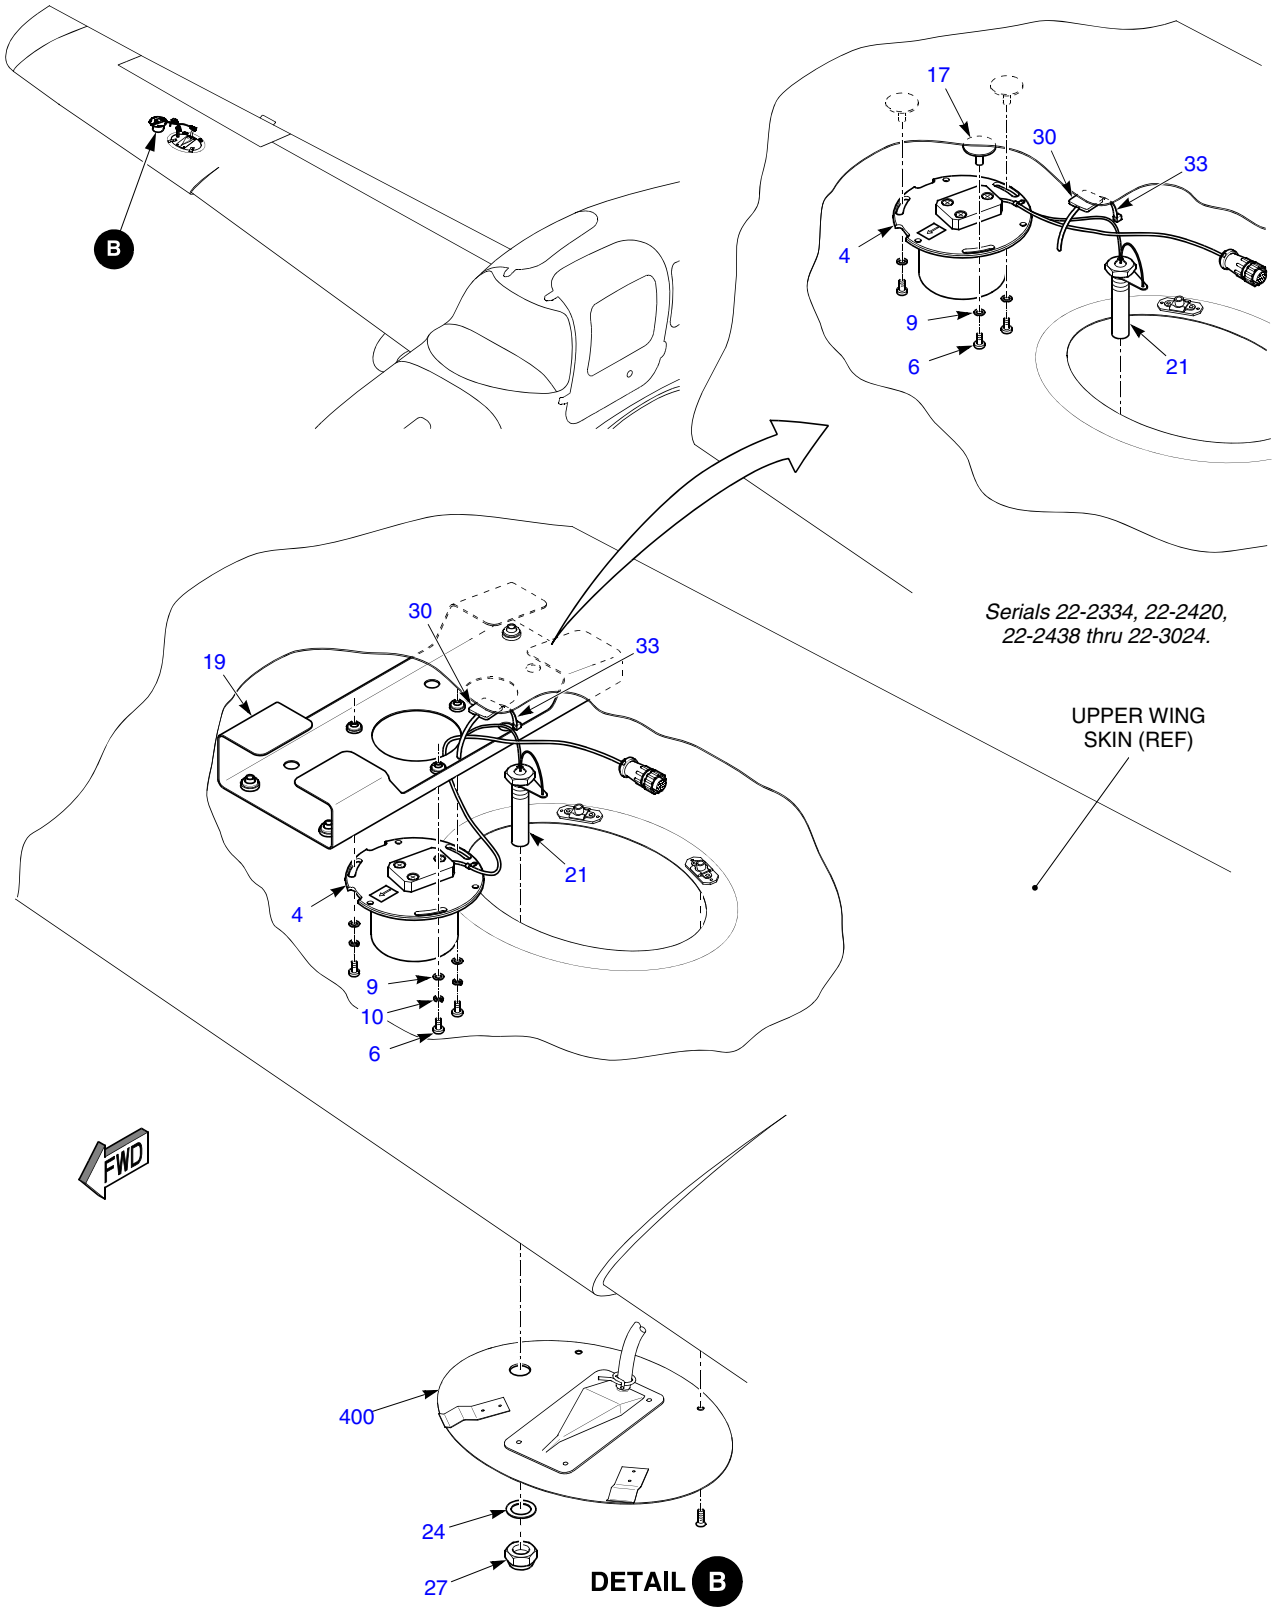

Figure-04

Magnetometer/OAT Sensor - Serials 22-2438 & subs w/o Perspective (2 of 3)

EFFECTIVITY:
Serials 22-2438 & subs w/o Perspective

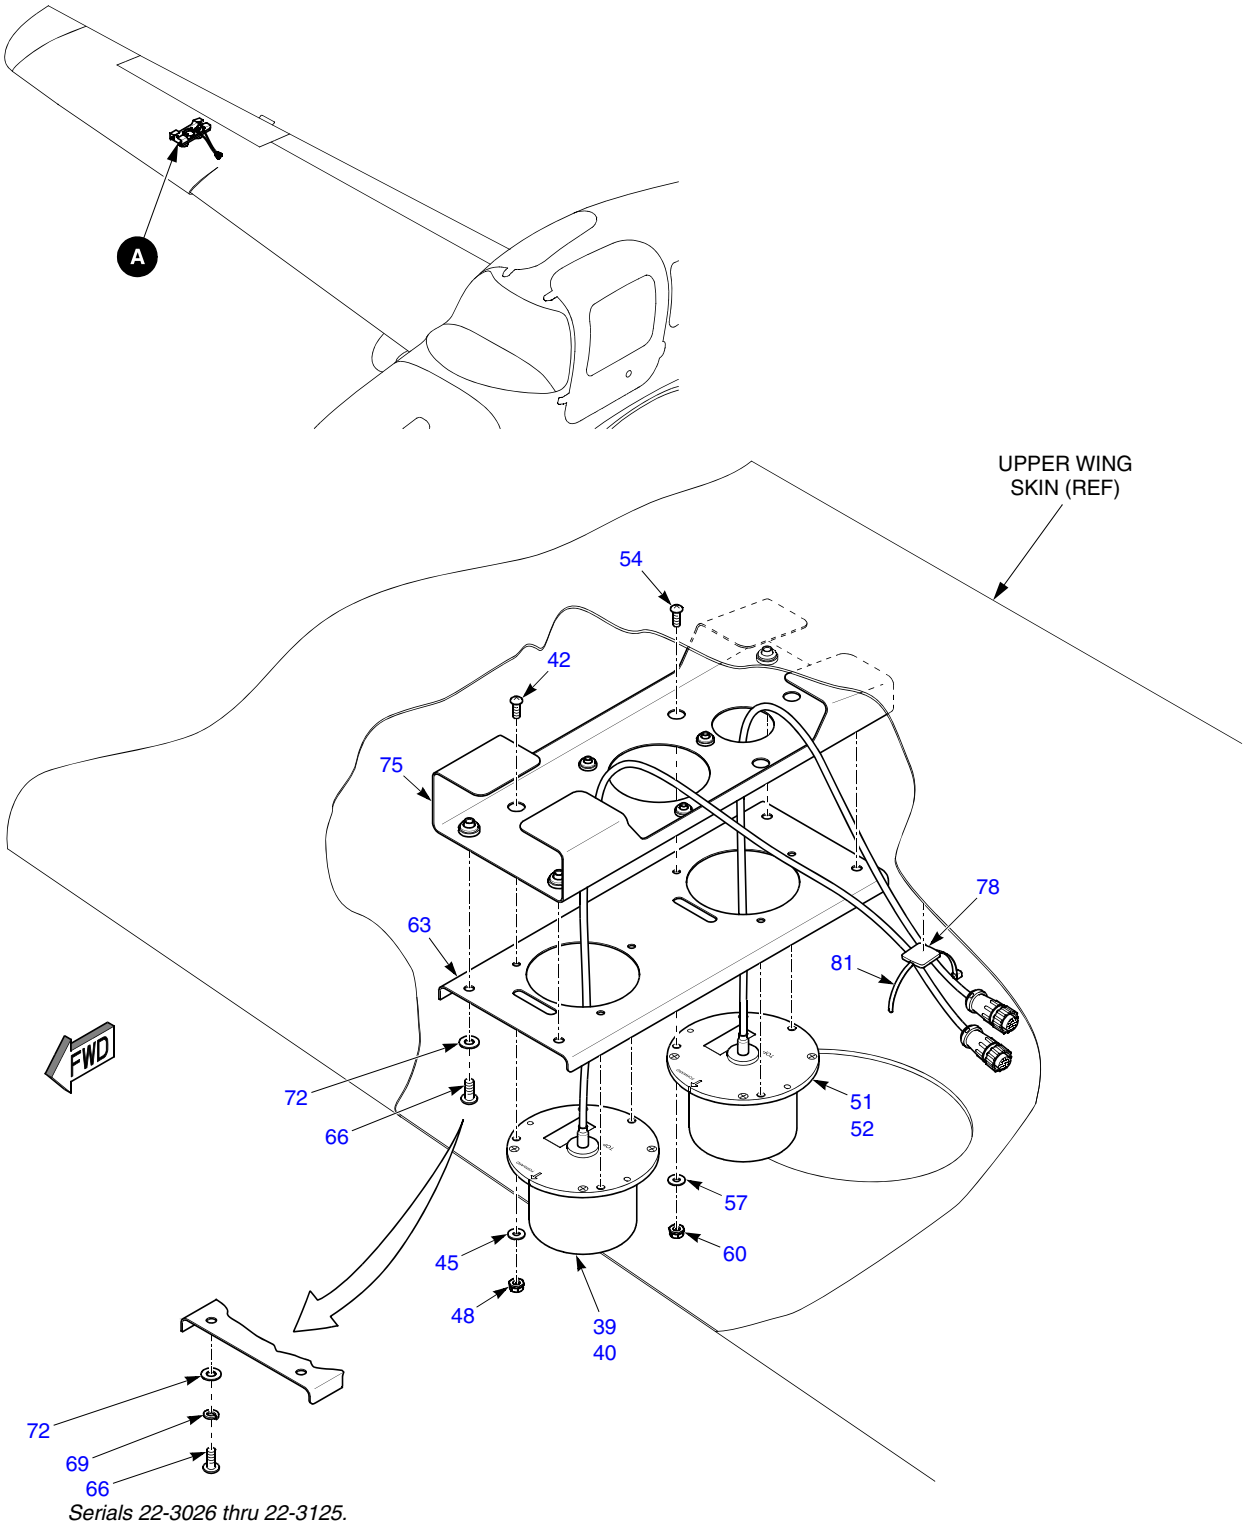

Serials 22-3026 thru 22-3125.

DETAIL A

Serials w/ Perspective Avionics.

SR22_PC34_1838A

Figure-04
Magnetometer/OAT Sensor - Serials w/ Perspective (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04	**		MAGNETOMETER/OAT SENSOR INSTL W/O PERSPECTIVE AVIONICS	0435		NP
-	3	15222-101			·MAGNETOMETER/OAT SENSOR	0435	1283	1
					FOR SPARES USE P/N 15222-102			
	4	15222-102			·MAGNETOMETER/OAT SENSOR	1284		1
					FOR SPARES USE P/N 15222-101			
	6	MS35214-25		A	·SCREW	0435		3
	9	NAS1149BN632H		A	·WASHER	0435		3
	10	MS35338-98		A	·WASHER	3026	3378	3
	12	50757-006		A	·STANDOFF	0435	2437	1
	15	50757-007		A	·STANDOFF	0435	2437	1
	16	CB3001AA06-8		A	·STANDOFF	0435	2437	1
	17	50757-008				2438	3025	3
	19	19456-001			·STANDOFF	3026		1
	21	PRT OF ITM 3, 4			·OAT SENSOR	0435		1
	24	PRT OF ITM 3, 4		A	·WASHER	0435		1
	27	PRT OF ITM 3, 4		A	·NUT	0435		1
	30	50132-001			·ANCHOR, CABLE TIE	0435		AR
	33	50239-010			·CABLE TIE	0435		AR
-	36	NO PRT NUMBER			MAGNETOMETER INSTL W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	39	24650-001			·MAGNETOMETER 1	3026 / 0001	3698 / 0017	1
					FOR SPARE USE P/N 24650-002			
	40	24650-002			·MAGNETOMETER 1	3699 / 0018	/	1
	42	MS35214-26		A	·SCREW	3026 / 0001	/	3
	45	NAS1149BN632H		A	·WASHER	3026 / 0001	/	3
	48	MS21083B06		A	·NUT	3026 / 0001	/	3
	51	24650-001			·MAGNETOMETER 2	3026 / 0001	3698 / 0017	1
					FOR SPARE USE P/N 24650-002			
	52	24650-002			·MAGNETOMETER 2	3699 / 0018	/	1
	54	MS35214-26		A	·SCREW	3026 / 0001	/	3
	57	NAS1149BN632H		A	·WASHER	3026 / 0001	/	3
	60	MS21083B06		A	·NUT	3026 / 0001	/	3
	63	19265-001			·PLATE	3026 / 0001	/	1
	66	MS35215-56		A	·SCREW	3026 / 0001	/	4
	69	MS35338-100		A	·WASHER, SPLIT LOCK	3026	3125	4
	72	NAS1149B0332H		A	·WASHER	3026 / 0001	/	4
	75	19456-001			·STANDOFF	3026 / 0001	/	1
	78	50132-001			·ANCHOR, CABLE TIE	3026 / 0001	/	AR
	81	50239-010			·CABLE TIE	3026 / 0001	/	AR
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 57-30-01 DET			LOWER WING ACCESS PANEL			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

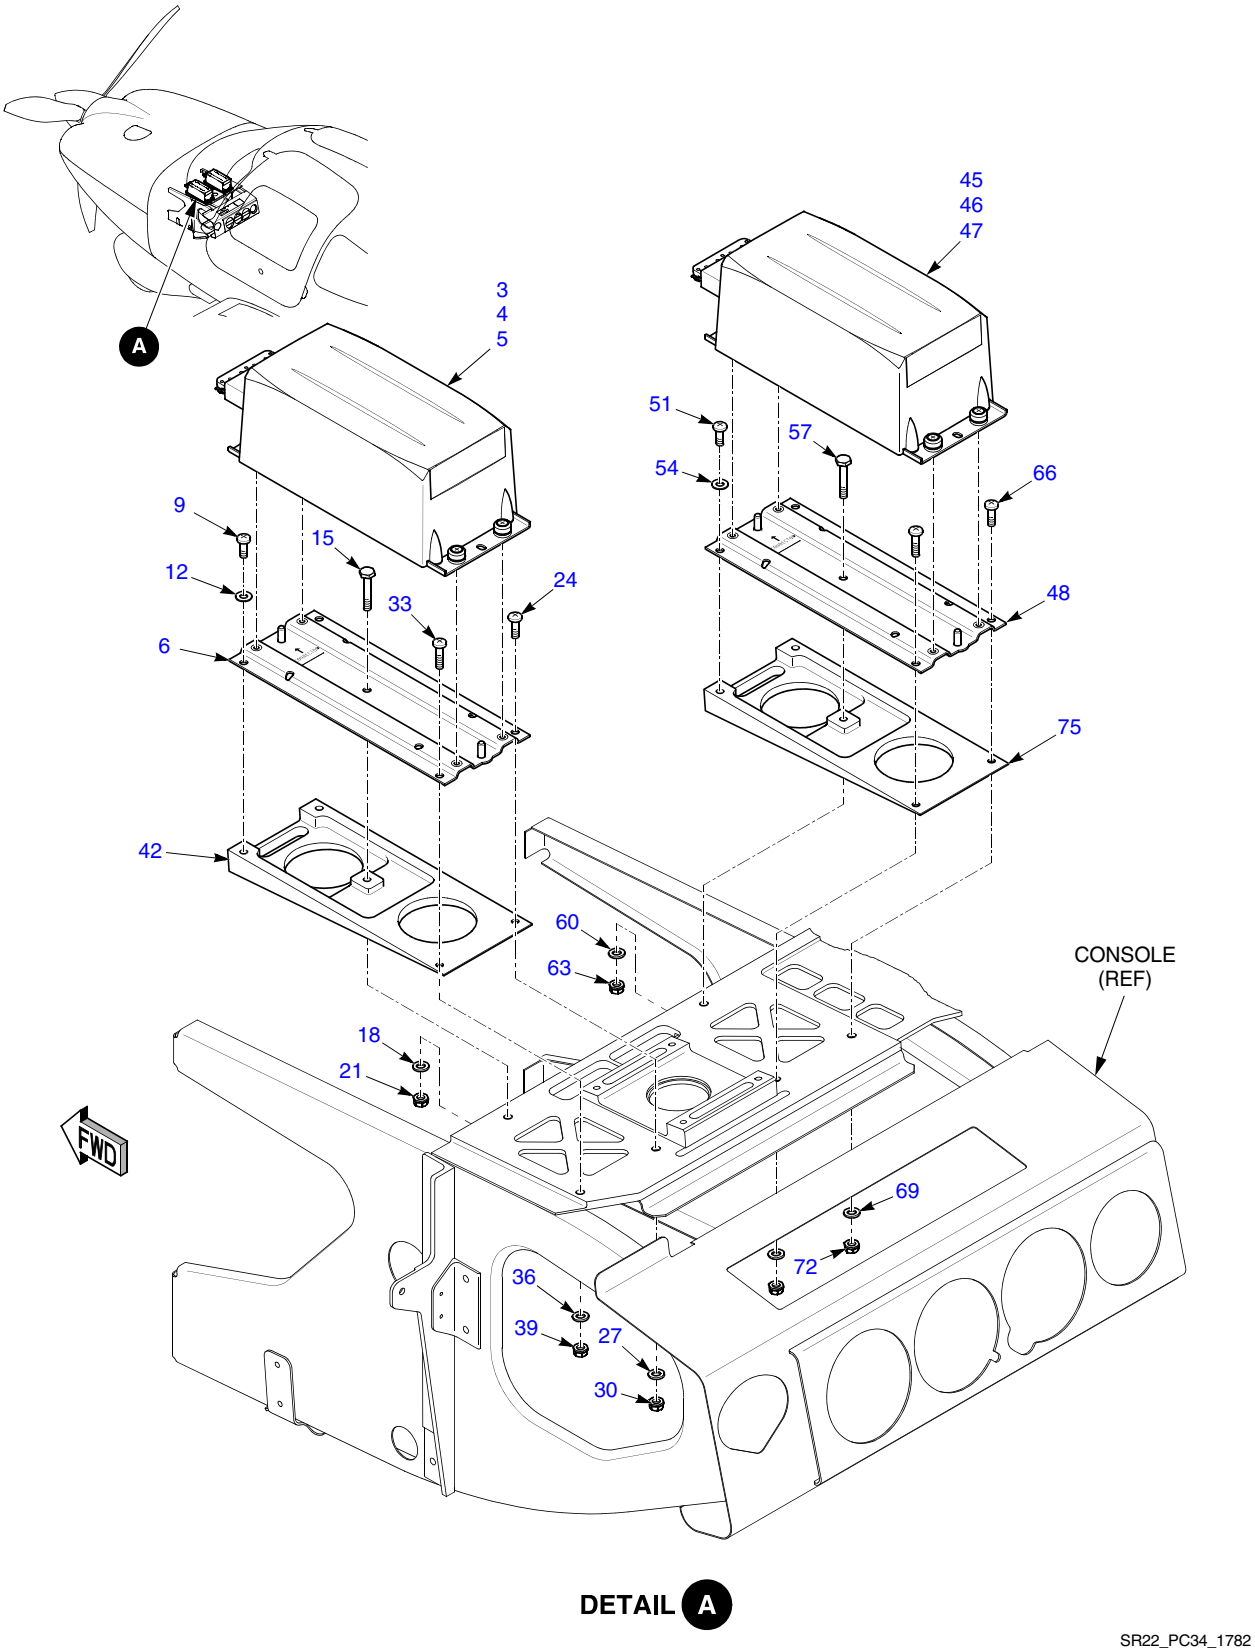

Figure-05
Attitude Heading Reference System - Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05	**		AHRS	3026 / 0001	/	NP
	3	24661-001			·GRS 77 AHRS UNIT 1 (STANDARD)	3026	3433	1
					FOR SPARES USE P/N 24661-002 OR 24661-003			
	4	24661-002			·GRS 77 AHRS UNIT 1 (STANDARD)	3434	3434	1
					FOR SPARES USE P/N 24661-001 OR 24661-003			
	5	24661-003			·GRS 77 AHRS UNIT 1 (STANDARD)	3435 / 0001	/	1
	6	24661-101			·RACK	3026 / 0001	/	1
	9	MS27039-1-08		A	·SCREW	3026 / 0001	/	2
	12	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	15	AN3-11A		A	·BOLT	3026 / 0001	/	1
	18	19234-001		A	·WASHER	3026 / 0001	/	1
	21	MS21083N3		A	·NUT	3026 / 0001	/	1
	24	MS27039-1-11		A	·SCREW	3026 / 0001	/	1
	27	19234-001		A	·WASHER	3026 / 0001	/	1
	30	MS21083N3		A	·NUT	3026 / 0001	/	1
	33	MS27039-1-13		A	·SCREW	3026 / 0001	/	1
	36	19234-001		A	·WASHER	3026 / 0001	/	1
	39	MS21083N3		A	·NUT	3026 / 0001	/	1
	42	19219-001			·WEDGE	3026 / 0001	/	1
	45	24661-001			·GRS 77 AHRS UNIT 2 (OPTIONAL)	3026	3433	1
					FOR SPARES USE P/N 24661-002 OR 24661-003			
	46	24661-002			·GRS 77 AHRS UNIT 2 (OPTIONAL)	3434	3434	1
					FOR SPARES USE P/N 24661-001 OR 24661-003			
	47	24661-003			·GRS 77 AHRS UNIT 2 (OPTIONAL)	3435 / 0001	/	1
	48	24661-101			·RACK	3026 / 0001	/	1
	51	MS27039-1-08		A	·SCREW	3026 / 0001	/	2
	54	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	57	AN3-11A		A	·BOLT	3026 / 0001	/	1
	60	19234-001		A	·WASHER	3026 / 0001	/	1
	63	MS21083N3		A	·NUT	3026 / 0001	/	1
	66	MS27039-1-09		A	·SCREW	3026 / 0001	/	2
	69	19234-001		A	·WASHER	3026 / 0001	/	2
	72	MS21083N3		A	·NUT	3026 / 0001	/	2
	75	19219-001			·WEDGE	3026 / 0001	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-2979, 22-2992 AND 22-3002; REFER TO 22-3026 FOR PRT IDENTIFICATION.

2) SERIAL NUMBER 22-3369, 22-3408, 22-3425 AND 22-3430; REFER TO 22-3434 FOR PRT IDENTIFICATION.

EFFECTIVITY:
All

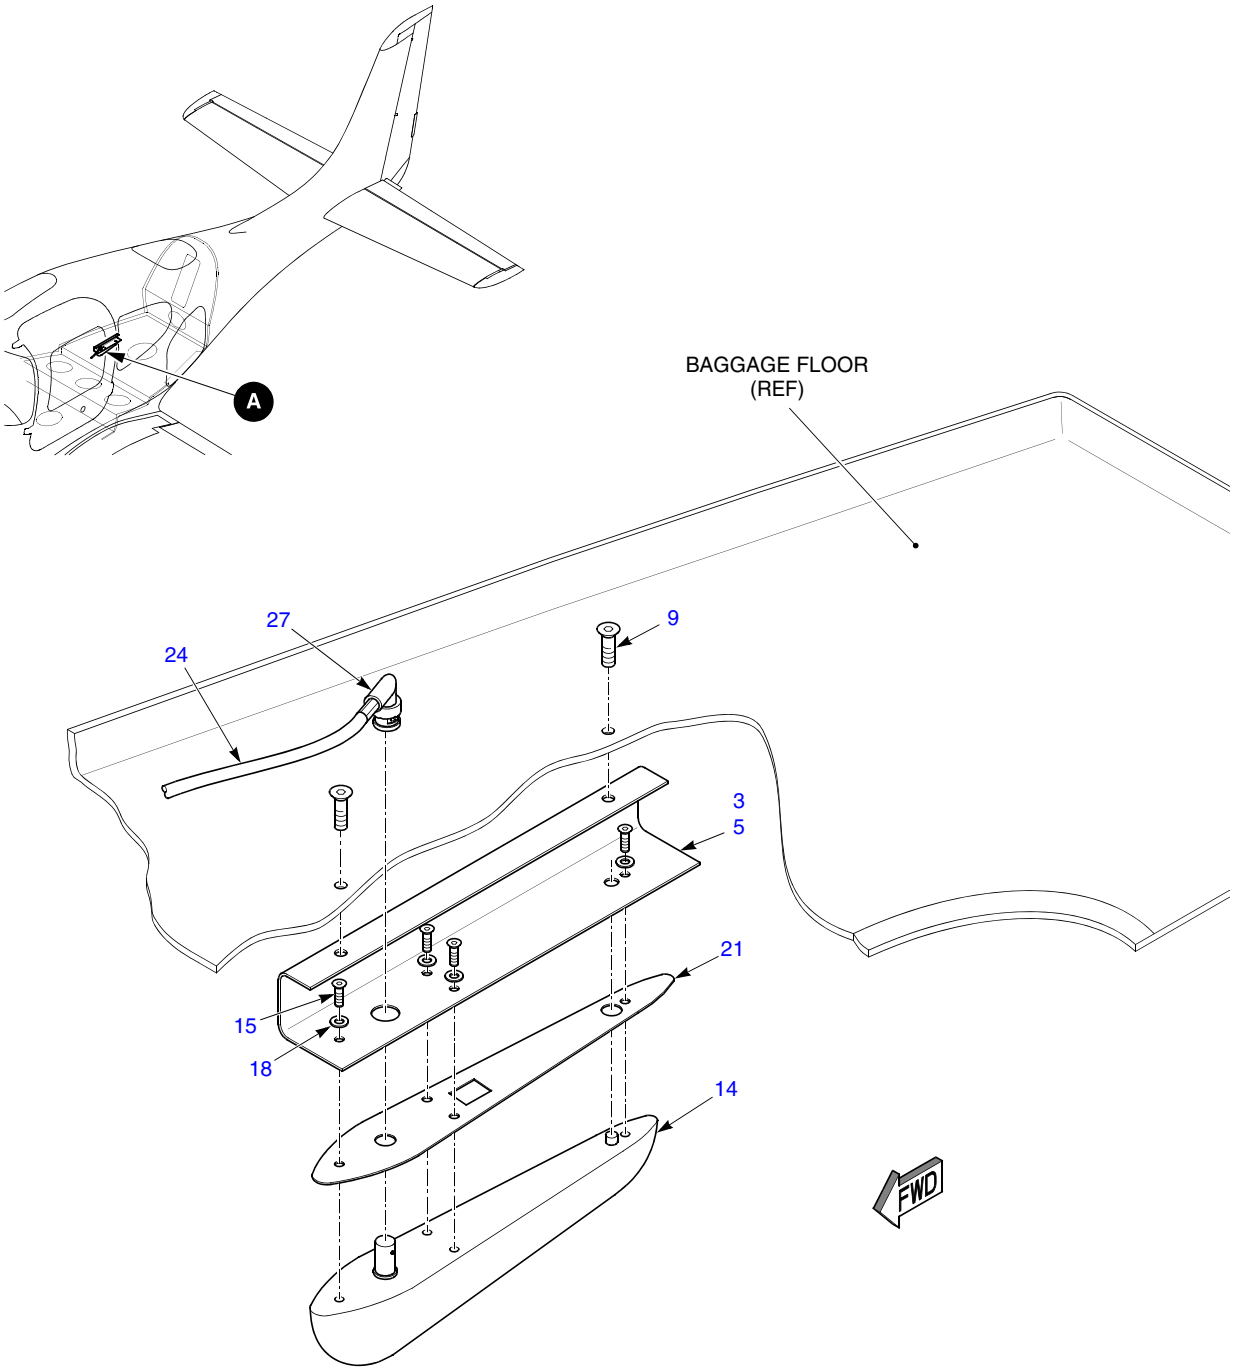

DETAIL A

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1839,
22-1841 thru 22-1862, 22-1863 & subs, 22T-0001 & subs w/o Air Conditioning.

SR22_PC34_1210A

Figure-01

Marker Beacon Antenna - Serials 22-0002 & subs, 22T-0001 & subs w/o AC (1 of 2)

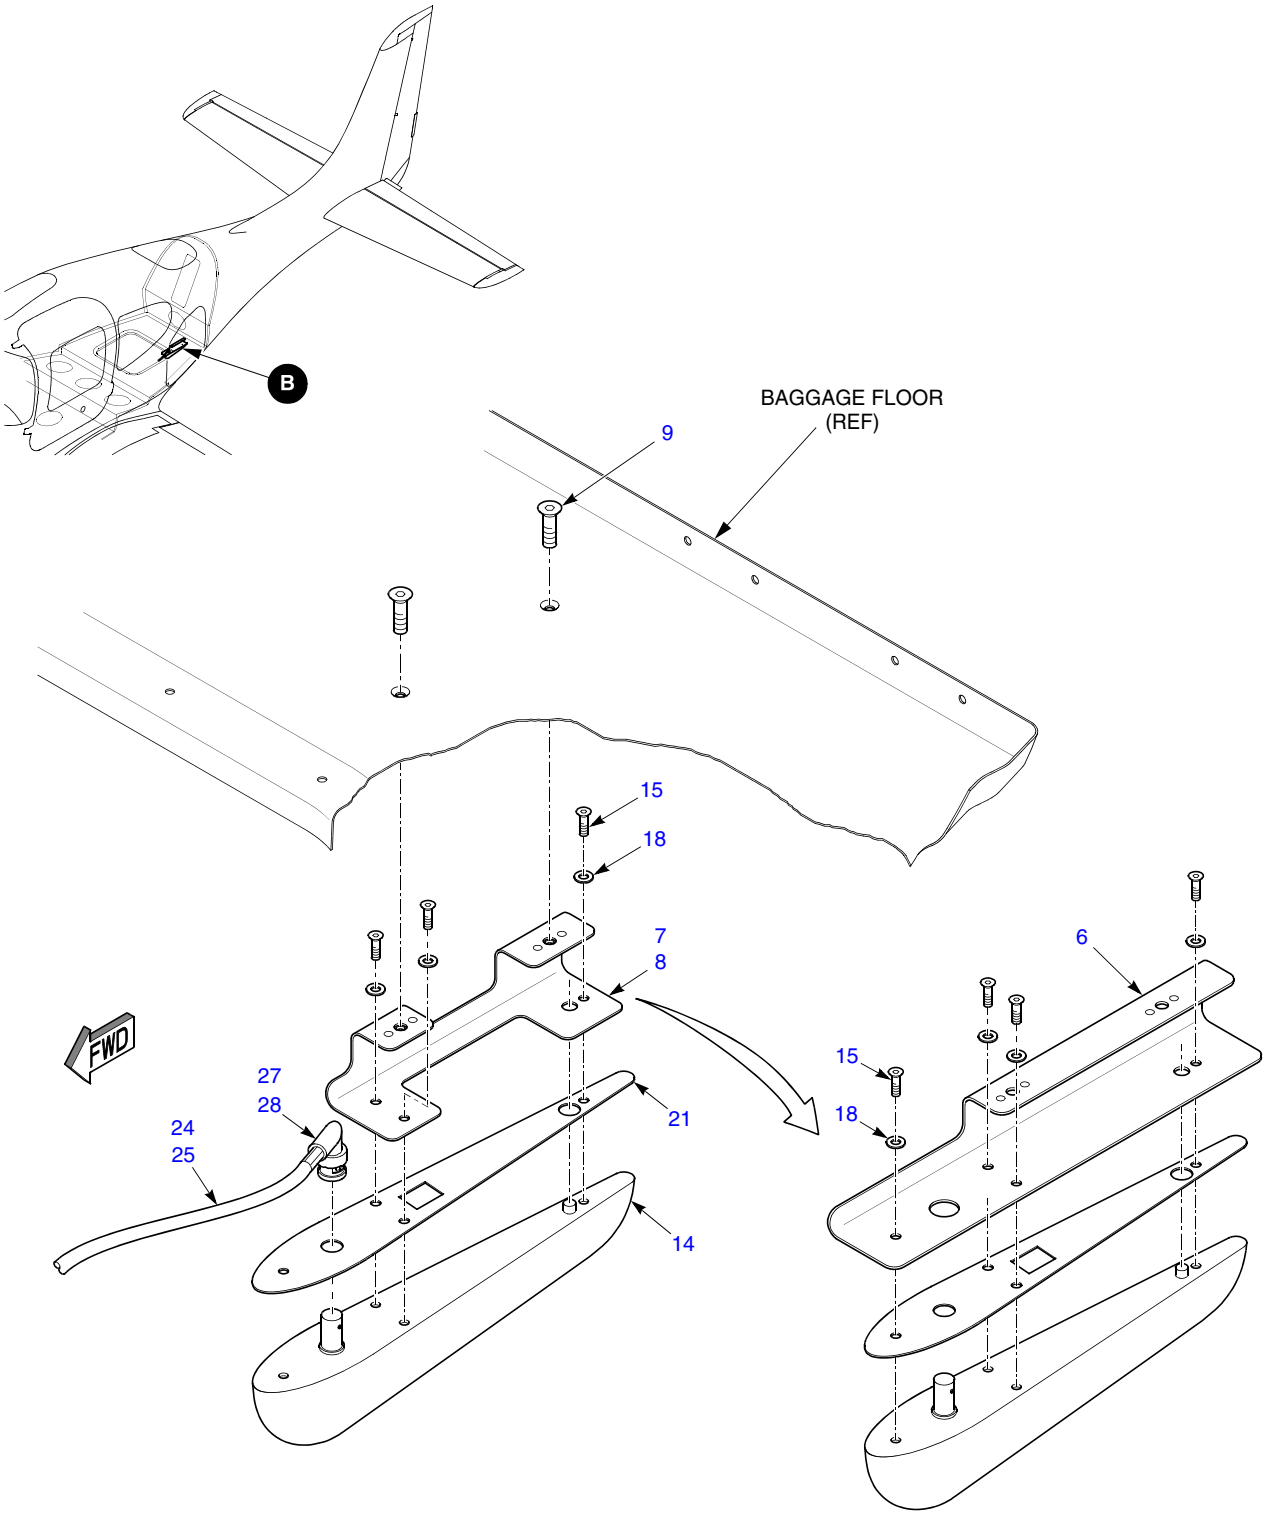

Serials 22-1602, 22-1840, 22-1863 thru 22-3104.

DETAIL B

Serials 22-1602, 22-1840, 22-1863 & subs, 22T-0001 & subs w/ Air Conditioning. SR22_PC34_1572A

Figure-01

Marker Beacon Antenna - Serials 22-1863 & subs, 22T-0001 & subs w/ AC (2 of 2)

EFFECTIVITY:
Serials 22-1863 & subs, 22T-0001 & subs w/ AC

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		MARKER BEACON ANTENNA INSTALLATION	0002 / 0001	/	NP
	3	12386-001			·MOUNTING BRACKET W/O AIR CONDITIONING	0002 / 0001	3605 / 0001	1
					FOR SPARES USE P/N 12386-006			
	5	12386-006			·MOUNTING BRACKET W/O AIR CONDITIONING	3606 / 0002	/	1
	6	12386-003			·MOUNTING BRACKET W/ AIR CONDITIONING	1863	3104	1
					FOR SPARES USE P/N 12386-005			
	7	12386-004			·MOUNTING BRACKET W/ AIR CONDITIONING	3105 / 0001	3605 / 0001	1
					FOR SPARES USE P/N 12386-005			
	8	12386-005			·MOUNTING BRACKET W/ AIR CONDITIONING	3606 / 0002	/	1
	9	MS24694-S56		A	·SCREW	0002 / 0001	/	2
-	12	12743-001			·MARKER BEACON ANTENNA	0002 / 0001	3605 / 0001	1
					ALTERNATE FOR P/N 12743-002			
					ALTERNATE FOR P/N 12743-003			
-	13	12743-002			·MARKER BEACON ANTENNA	3606 / 0002	3670 / 0013	1
					ALTERNATE FOR P/N 12743-001			
					ALTERNATE FOR P/N 12743-003			
	14	12743-003			·MARKER BEACON ANTENNA	3671 / 0014	/	1
					ALTERNATE FOR P/N 12743-001			
					ALTERNATE FOR P/N 12743-002			
	15	MS35207-263		A	·SCREW	0002	3104	4
						3105 / 0001	/	3
	18	NAS1149F0332P		A	·WASHER	0002	3104	4
						3105 / 0001	/	3
	21	PRT OF ITM 12			·GASKET	0002 / 0001	/	1
	24	50713-001			·COAXIAL CABLE	0002 / 0001	/	AR
	25	50713-002	#		·COAXIAL CABLE	3026 / 0001	/	AR
	27	50465-001		A	·CONNECTOR	0002 / 0001	/	1
	28	51300-002	#	A	·CONNECTOR	3026 / 0001	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-1602, 22-1840; REFER TO 22-1863 FOR PART IDENTIFICATION.

2) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.

INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.

Intentionally Left Blank

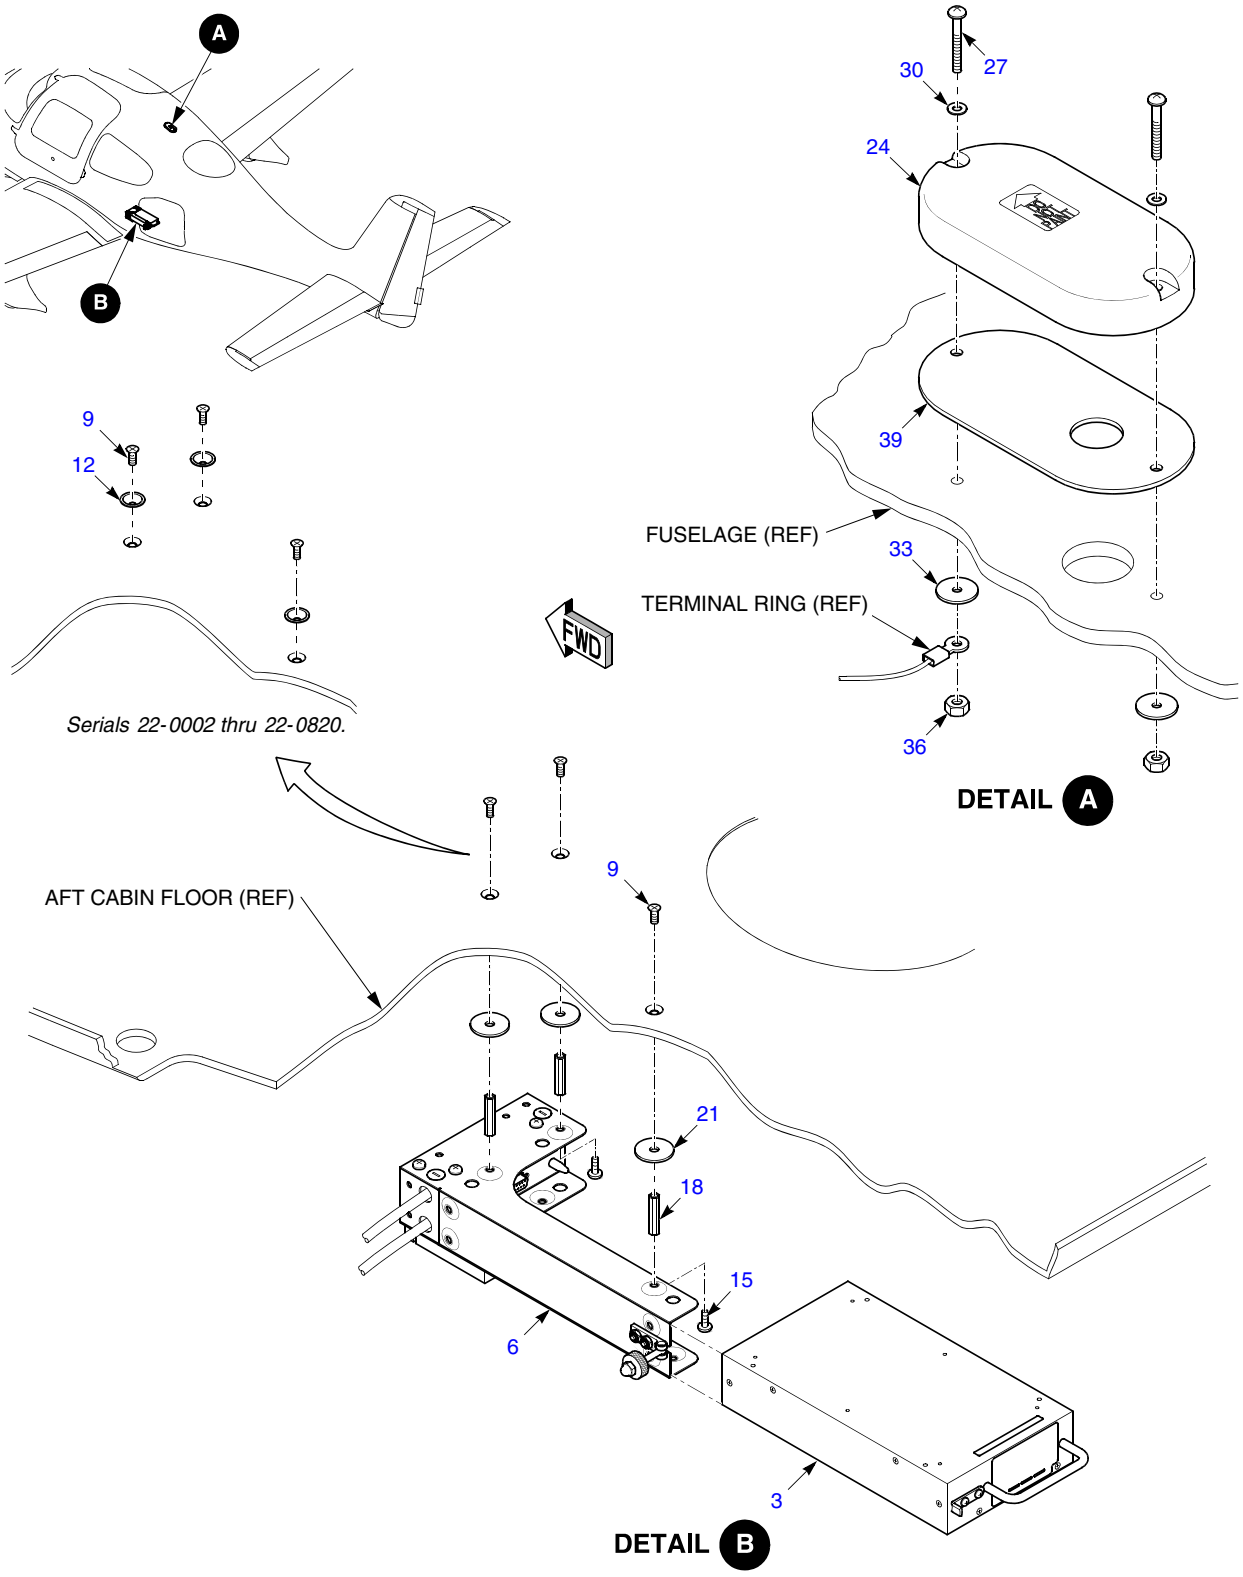

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 & subs, 22T-0001 & subs w/o Air Conditioning.

SR22_PC34_1236B

Figure-01

Stormscope and Antenna - Serials 22-0002 & subs, 22T-0001 & subs w/o AC (1 of 2)

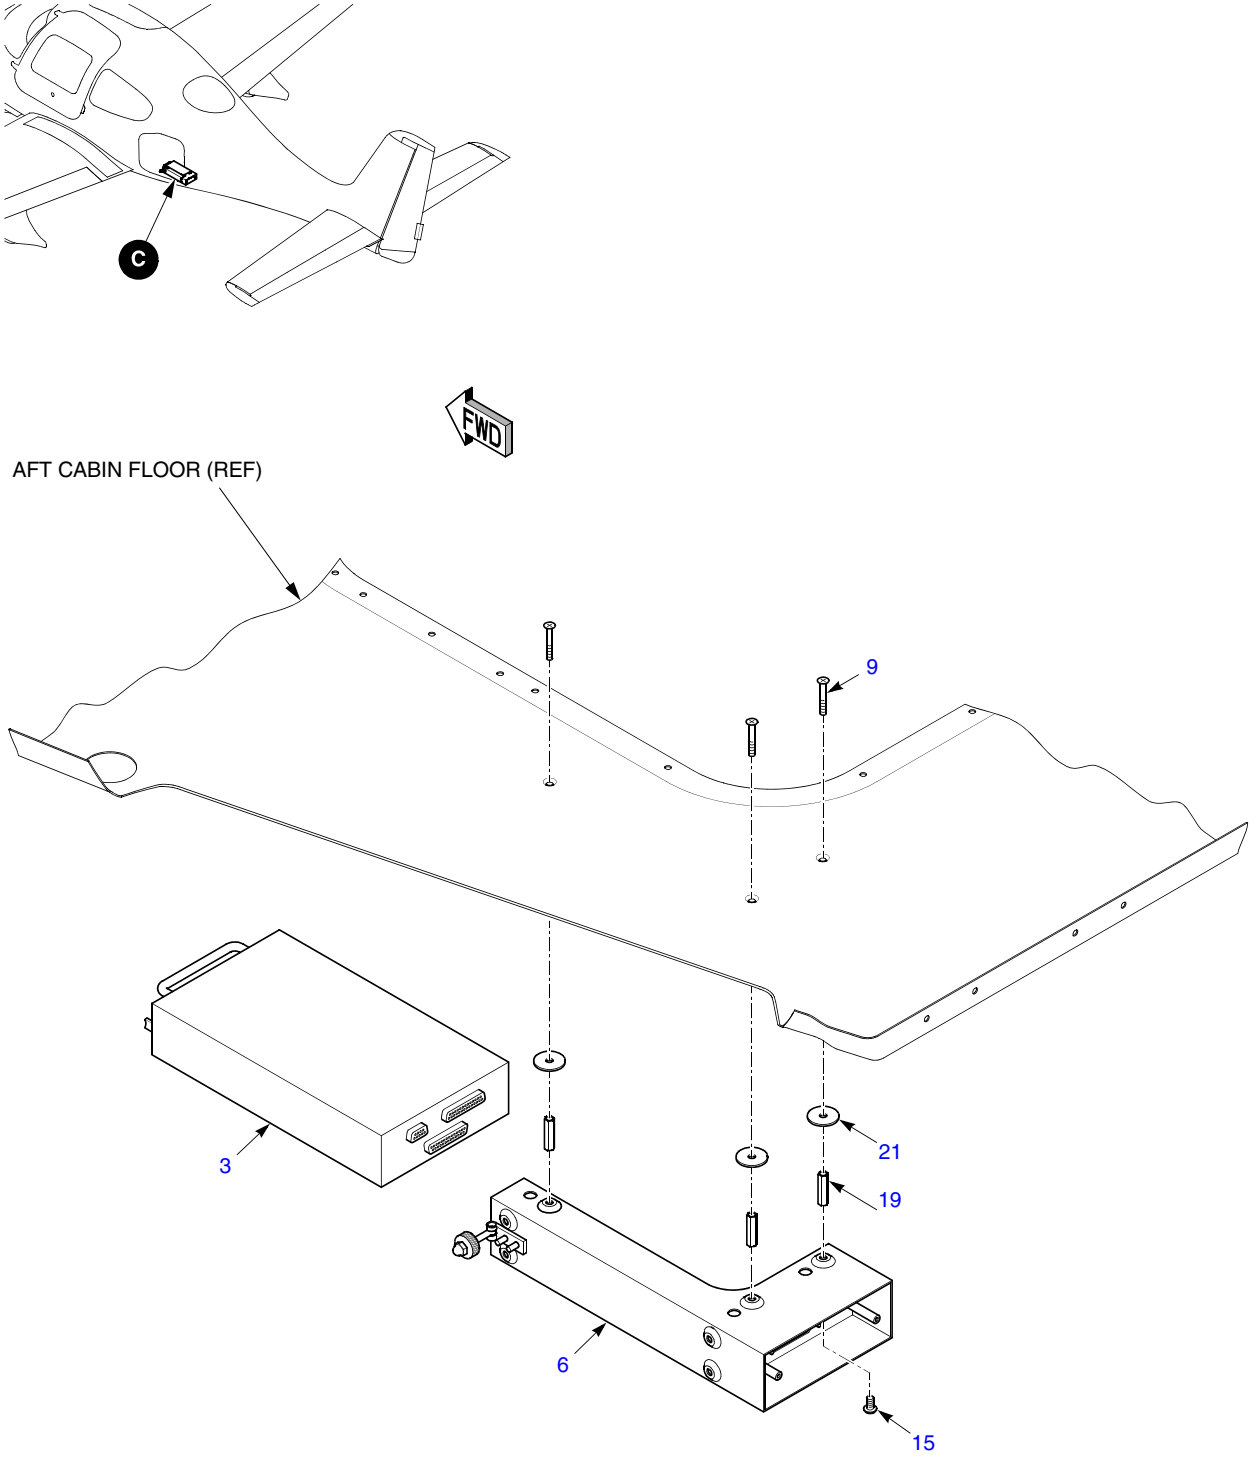

DETAIL C

Serials 22-1602, 22-1821, 22-1840, 22-1863 & subs, 22T-0001 & subs w/ Air Conditioning.

SR22_PC34_1553

Figure-01

Stormscope and Antenna - Serials 22-1863 & subs, 22T-0001 & subs w/ AC (2 of 2)

EFFECTIVITY:
Serials 22-1863 & subs, 22T-0001 & subs w/ AC

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ·····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		STORMSCOPE AND ANTENNA	0002 / 0001	/	NP
	3	12745-050			·STORMSCOPE PROCESSOR	0002 / 0001	/	1
	6	12745-144		A	·MOUNTING TRAY	0002 / 0001	/	1
	9	MS24693-S274		A	·SCREW	0002 / 0001	/	3
					ALTERNATE FOR P/N MS24694S55			
-	10	MS24694S55		A	·SCREW	0002 / 0001	/	3
					ALTERNATE FOR P/N MS24693-S274			
	12	NAS1169-10		A	·WASHER	0002	0820	3
	15	12745-203		A	·SCREW	0002 / 0001	/	3
					ALTERNATE FOR P/N MS51958-61			
-	16	MS51958-61		A	·SCREW	0002 / 0001	/	3
					ALTERNATE FOR P/N 12745-203			
	18	50866-001		A	·STANDOFF, W/O AIR CONDITIONING	0002 / 0001	/	3
	19	50866-075		A	·STANDOFF, W/ AIR CONDITIONING	1863 / 0001	/	3
	21	AN970-3		A	·WASHER	0002 / 0001	/	3
	24	12745-070			·STORMSCOPE ANTENNA	0002 / 0001	/	1
	27	12745-201		A	·SCREW	0002 / 0001	/	2
	30	12745-204		A	·WASHER	0002 / 0001	/	2
	33	AN970-3		A	·WASHER	0002 / 0001	/	2
	36	MS21044N3		A	·NUT	0002 / 0001	/	2
	39	12745-142			··ANTENNA GASKET	0002 / 0001	/	1
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1602 AND 22-1840; REFER TO 1863 FOR PRT IDENTIFICATION.			

Intentionally Left Blank

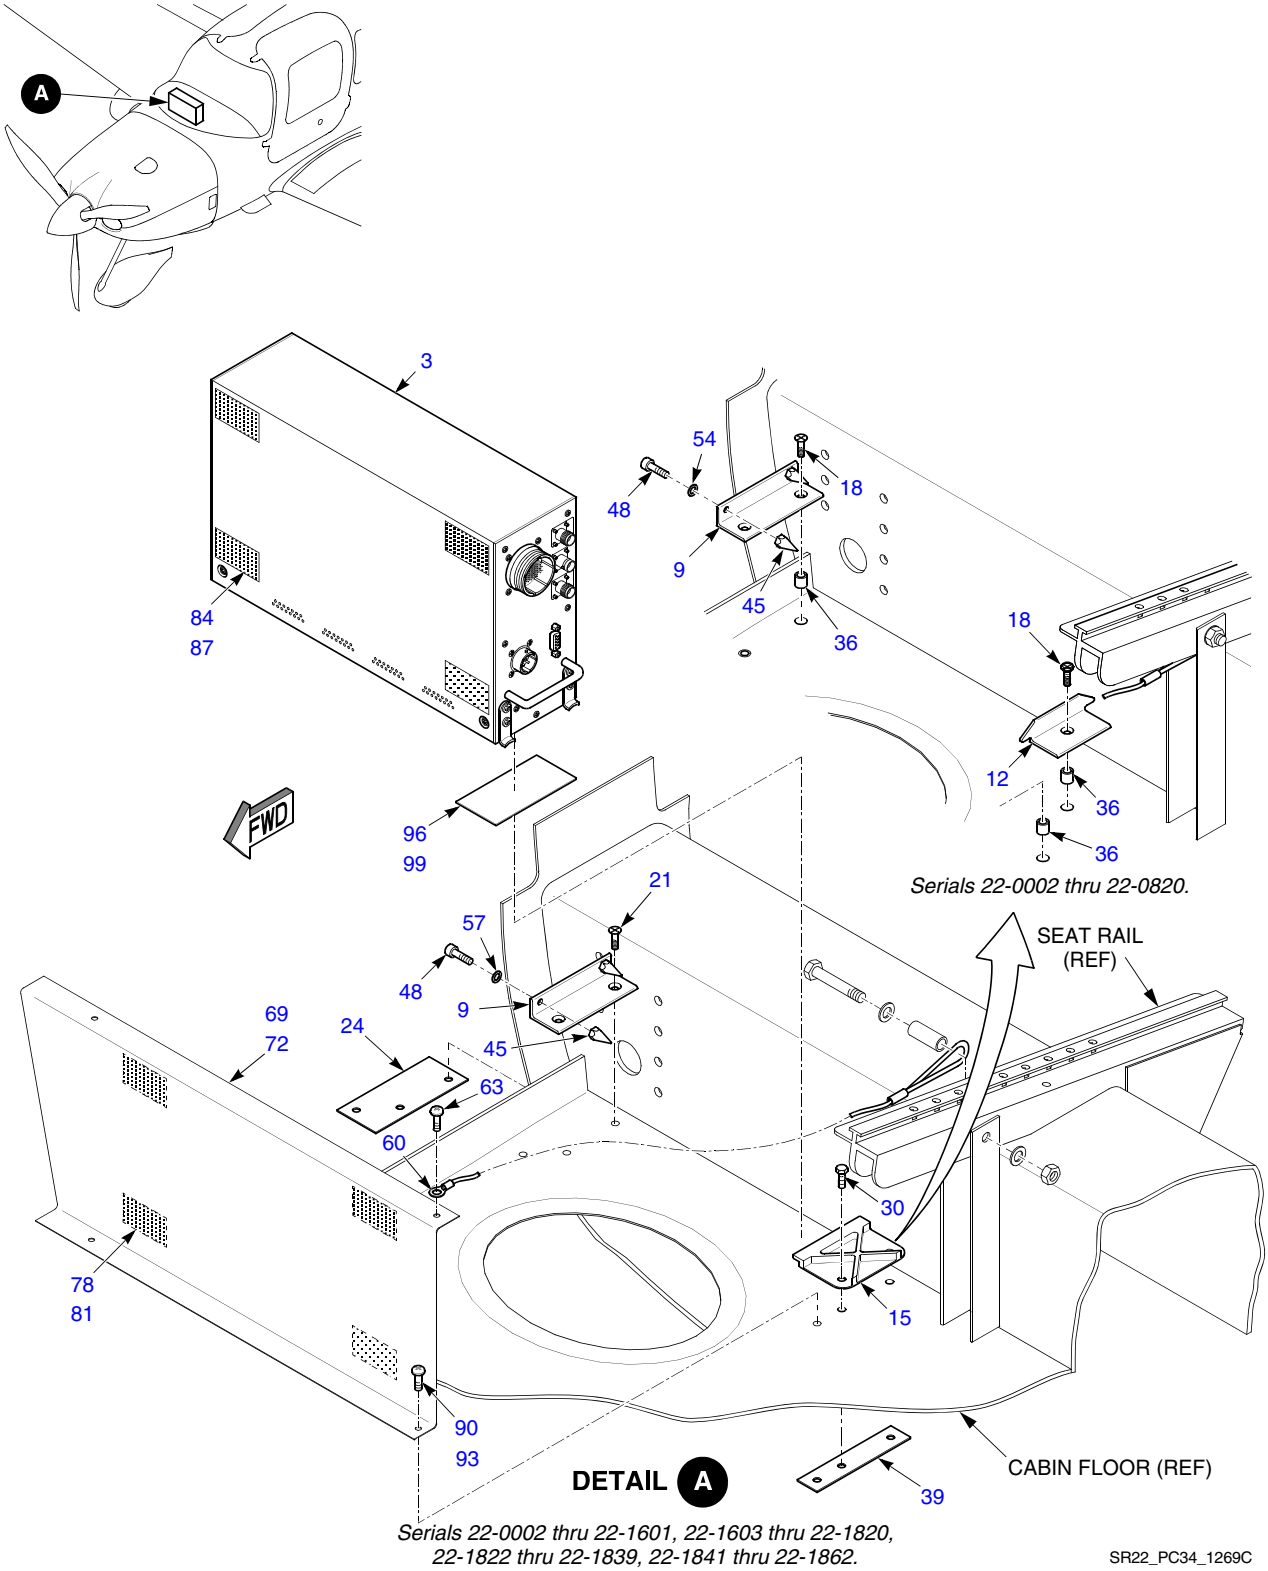

Figure-02

Skywatch - Serials 22-0002 thru 22-1862 (1 of 4)

EFFECTIVITY:
Serials 22-0002 thru 22-1862

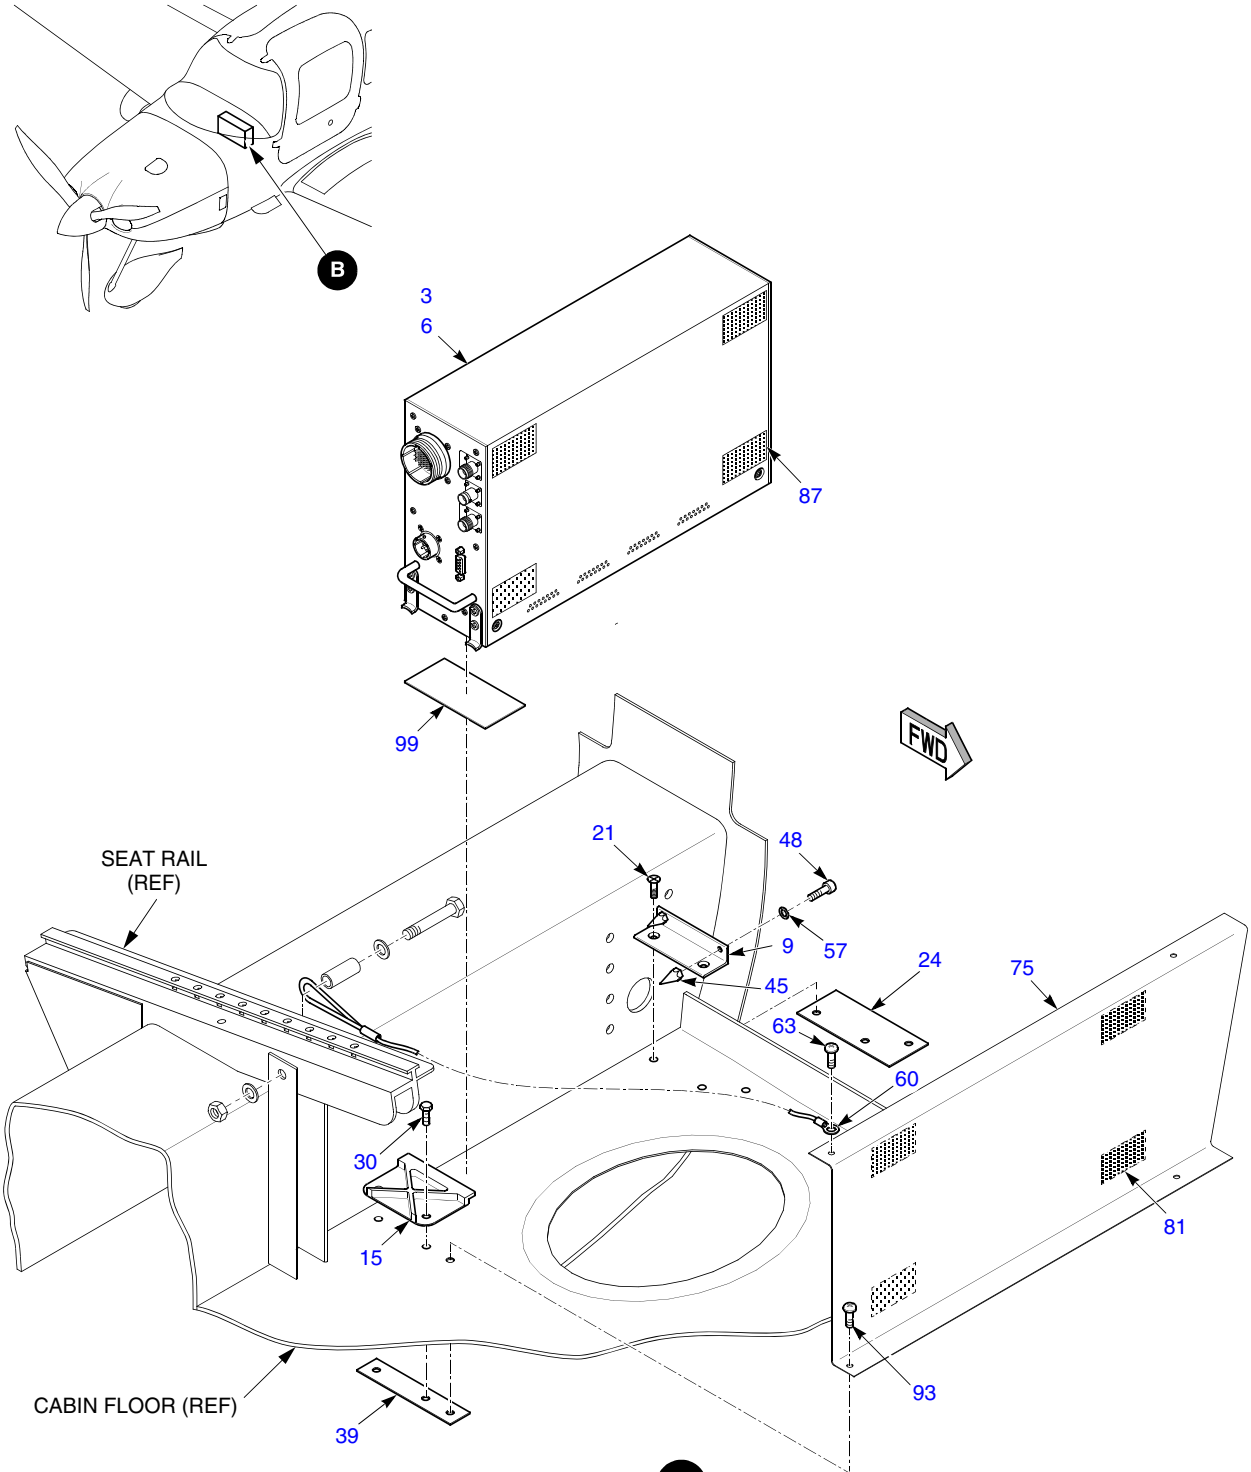

Serials 22-1602, 22-1821, 22-1840, 22-1863 thru 22-3150 w/o Perspective Avionics.

SR22_PC34_1549C

Figure-02

Skywatch - Serials 22-1863 thru 22-3150 w/o Perspective (2 of 4)

EFFECTIVITY:
Serials 22-1863 thru 22-3150 w/o Perspective

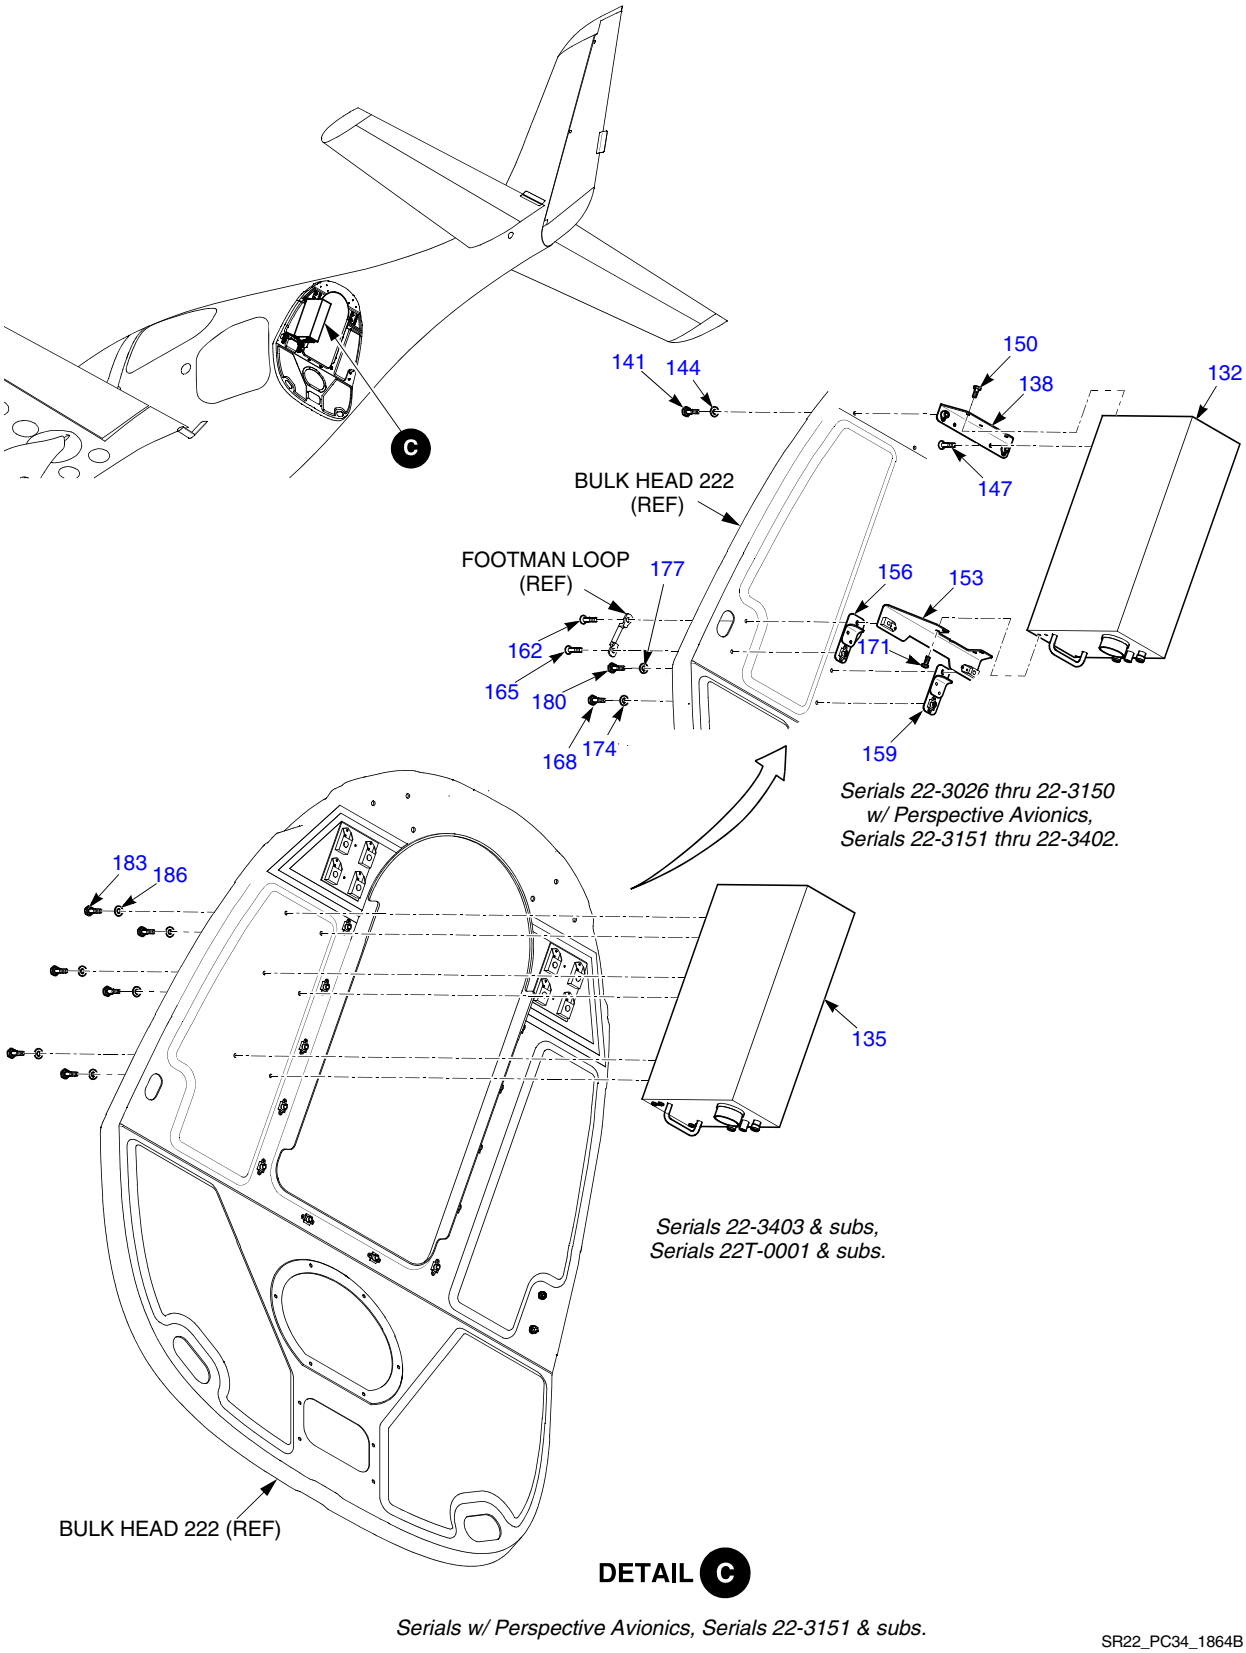

Figure-02

Skywatch - Serials w/ Perspective, Serials 22-3151 & subs (3 of 4)

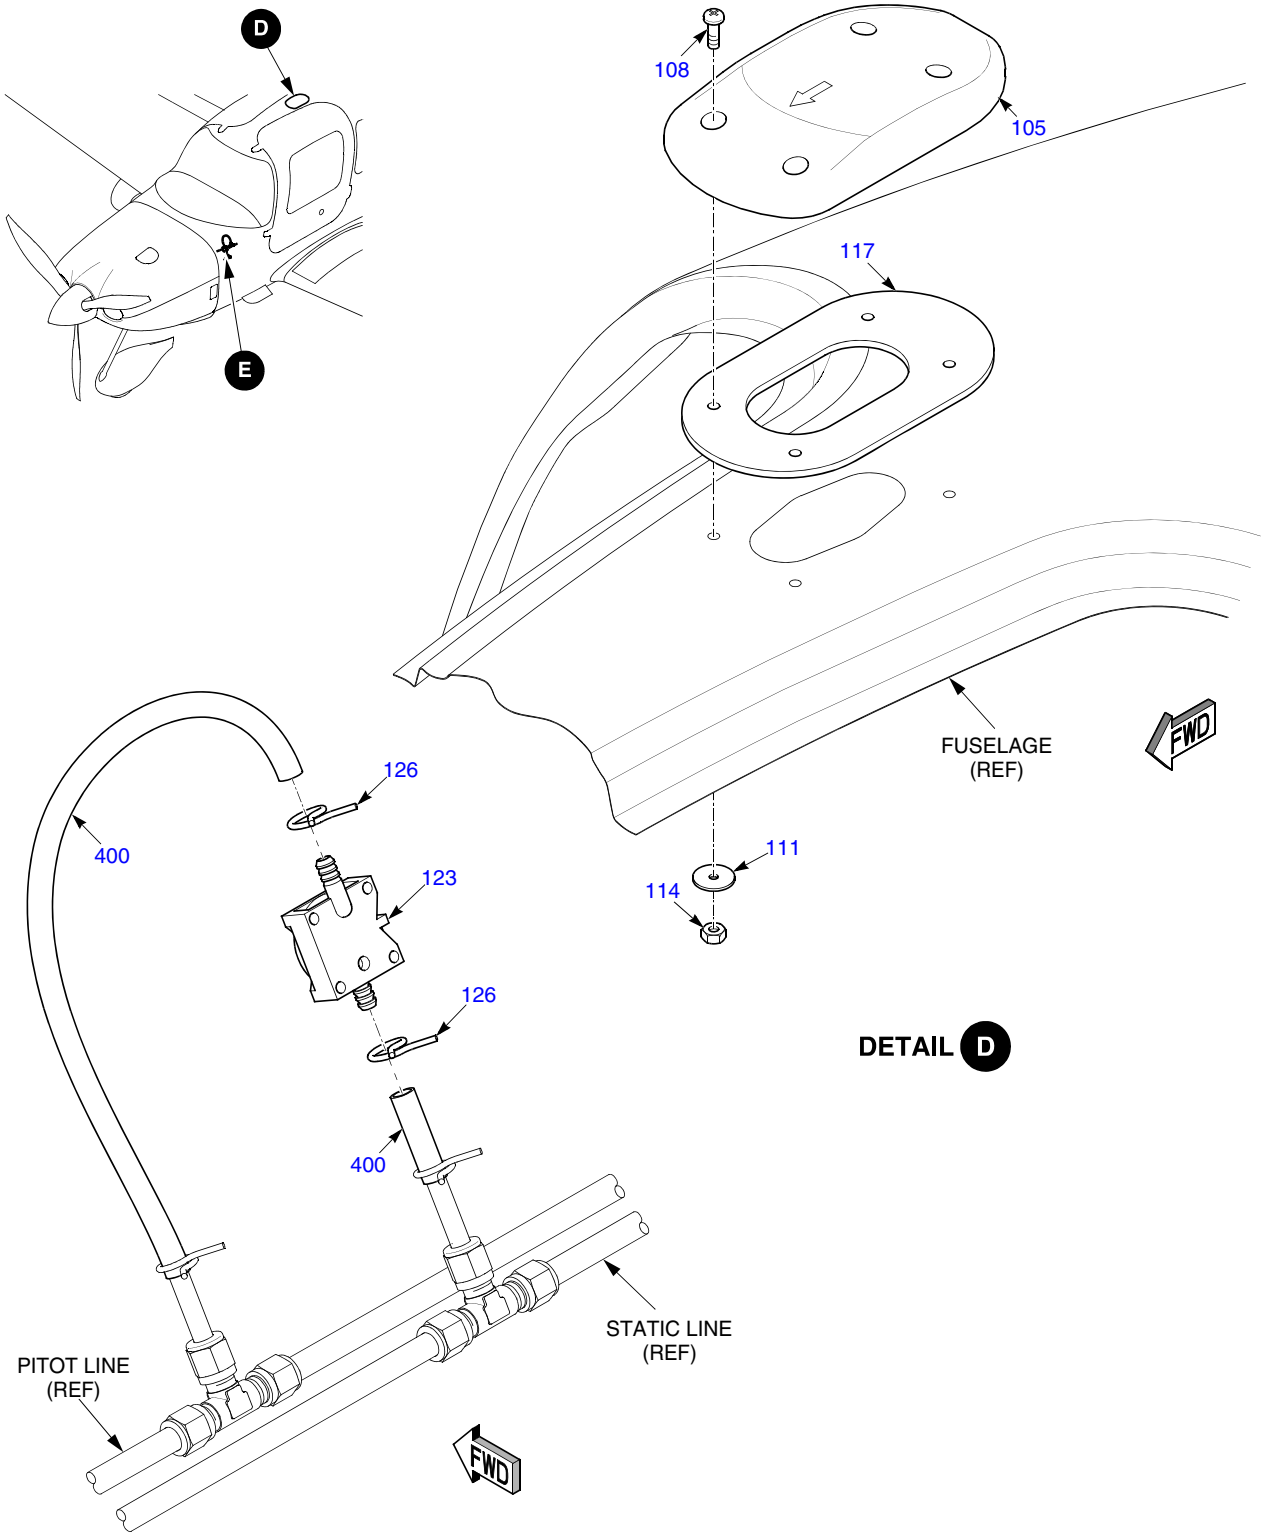

Figure-02
Skywatch (4 of 4)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		SKYWATCH INSTALL W/O PERSPECTIVE	0002		NP
	3	14477-050			·TRC BOX, SKYWATCH SYSTEM	0002	2344	1
					FOR SPARES USE P/N 14477-051			
	6	14477-051			·TRC BOX, SKYWATCH SYSTEM	2345	3150	1
					FOR SPARES USE P/N 14477-052			
	9	14489-001		A	·OUTBOARD RETAINER BRACKET	0002	3150	1
	12	14488-002		A	·INBOARD RETAINER BRACKET	0002	0820	1
	15	20378-001		A	·INBOARD RETAINER BRACKET	0821	3150	1
	18	MS24693-S274		A	·SCREW	0002	0820	3
	21	MS24694S56		A	·SCREW	0821	3150	2
	24	20377-101			·NUT PLATE	0002	3150	1
					ALTERNATE FOR P/N 16728-101			
-	27	16728-101			·NUT PLATE	0002	3150	1
					ALTERNATE FOR P/N 20377-101			
	30	AN3-6A		A	·BOLT	0821	3150	2
					ALTERNATE FOR P/N MS27039-1-13			
-	33	MS27039-1-13		A	·BOLT	0821	3150	2
					ALTERNATE FOR P/N AN3-6A			
	36	NAS43DD3-24FC		A	·SPACER	0002	0820	3
	39	20377-102			·NUT PLATE	0002	3150	1
					ALTERNATE FOR P/N 16728-102			
-	42	16728-102			·NUT PLATE	0002	3150	1
					ALTERNATE FOR P/N 20377-102			
	45	14477-203		A	··PIN	0002	3150	2
	48	NAS1351-3-5P		A	··SCREW	0002	3150	2
					ALTERNATE FOR P/N AN3-4A			
-	51	AN3-4A		A	··BOLT	0002	3150	2
					ALTERNATE FOR P/N NAS1351-3-5P			
	54	NAS1149FN332P		A	··WASHER	0002	0820	2
	57	NAS1149F0332P	%	A	··WASHER	0821	3150	AR
	60	14595-001			·LANYARD	0002	3150	2
	63	MS35207-261		A	·SCREW	0002	3150	2
					ALTERNATE FOR P/N AN3-3A			
-	66	AN3-3A		A	·BOLT	0002	3150	2
					ALTERNATE FOR P/N MS35207-261			
	69	14491-002			·COVER PANEL	0002	0820	1
	72	14491-003			·COVER PANEL	0821	1862	1
	75	16763-001			·COVER PANEL	1863	3150	1
	78	14490-102		A	·PATCH, DUAL LOCK	0002	0820	4
	81	50494-001		A	·PATCH, DUAL LOCK	0821	3150	4
	84	14490-103		A	·PATCH, DUAL LOCK	0002	0820	4
	87	50494-002		A	·PATCH, DUAL LOCK	0821	3150	4
	90	MS35207-265		A	·SCREW	0002	0820	2
	93	MS27039-1-16		A	·SCREW	0821	3150	2
	96	14490-101			··SPACER	0002	0820	1
					FOR SPARES USE P/N 20377-103			
	99	20377-103	$		··SPACER	0821	3150	1
					ALTERNATE FOR P/N 14490-101			
					ALTERNATE FOR P/N 16728-103			
-	102	16728-103	$		··SPACER	0821	3150	1
					ALTERNATE FOR P/N 14490-101			
					ALTERNATE FOR P/N 20377-103			
	105	14477-101			·ANTENNA, SKYWATCH SYSTEM	0002		1
	108	MS27039-1-20		A	·SCREW	0002		4

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	111	AN970-3		A	·WASHER	0002		4
	114	MS21044N3		A	·NUT	0002		4
	117	14480-101			··GASKET	0002		1
-	120	NO PRT NUMBER			·PRESSURE SWITCH	0002		NP
	123	14128-001			··PRESSURE SWITCH	0002		1
	126	50566-002		A	··SPRING CLAMP	0002		2
-	129	NO PRT NUMBER			SKYWATCH W/ PERSPECTIVE	3026 / 0001	/	NP
					W/O PERSPECTIVE	3151		
	132	14477-051			·TRC BOX, SKYWATCH SYSTEM	3026	3402	1
					FOR SPARES USE P/N 14477-052			
	135	14477-052			·TRC BOX, SKYWATCH SYSTEM	3403 / 0001	/	1
					FOR SPARES USE P/N 14477-051			
	138	19913-001			·BRACKET	3026	3402	1
	141	AN3-6A		A	·BOLT	3026	3402	2
	144	NAS1149F0332P		A	·WASHER	3026	3402	2
	147	MS24693S6		A	·SCREW	3026	3402	2
	150	MS35206-215		A	·SCREW	3026	3402	3
	153	19915-001			·BRACKET	3026	3402	1
	156	19916-001			·BRACKET	3026	3402	1
	159	19918-001			·BRACKET	3026	3402	1
	162	MS24694S56		A	·SCREW	3026	3402	1
	165	MS24694S51		A	·SCREW	3026	3402	1
	168	AN3-3A		A	·BOLT	3026	3402	1
	171	PRT OF ITM 128		A	·SCREW	3026	3402	4
	174	NAS1149F0332P		A	·WASHER	3026	3402	1
	177	NAS1149F0332P		A	·WASHER	3026	3402	1
	180	AN3-6A		A	·BOLT	3026	3402	1
	183	NAS1801-08-13		A	·SCREW	3403 0001		6
	186	NAS1149FN832P		A	·WASHER	3403 0001		6
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 34-10-01 DET			PITOT-STATIC			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PRT IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			
					3) SERIAL NUMBER 22-3151 & SUBS W/O PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			
			%		1 TO 4 WASHERS MAY BE ADDED BETWEEN BOLT HEAD & BRACKET TO OBTAIN PROPER CLEARANCE. USE THE SAME NUMBER OF WASHERS AT BOTH LOCATIONS.			
			$		1 SPACER MAY BE ADDED TO GAIN SECURE FIT OF TRC BOX.			

EFFECTIVITY:
All

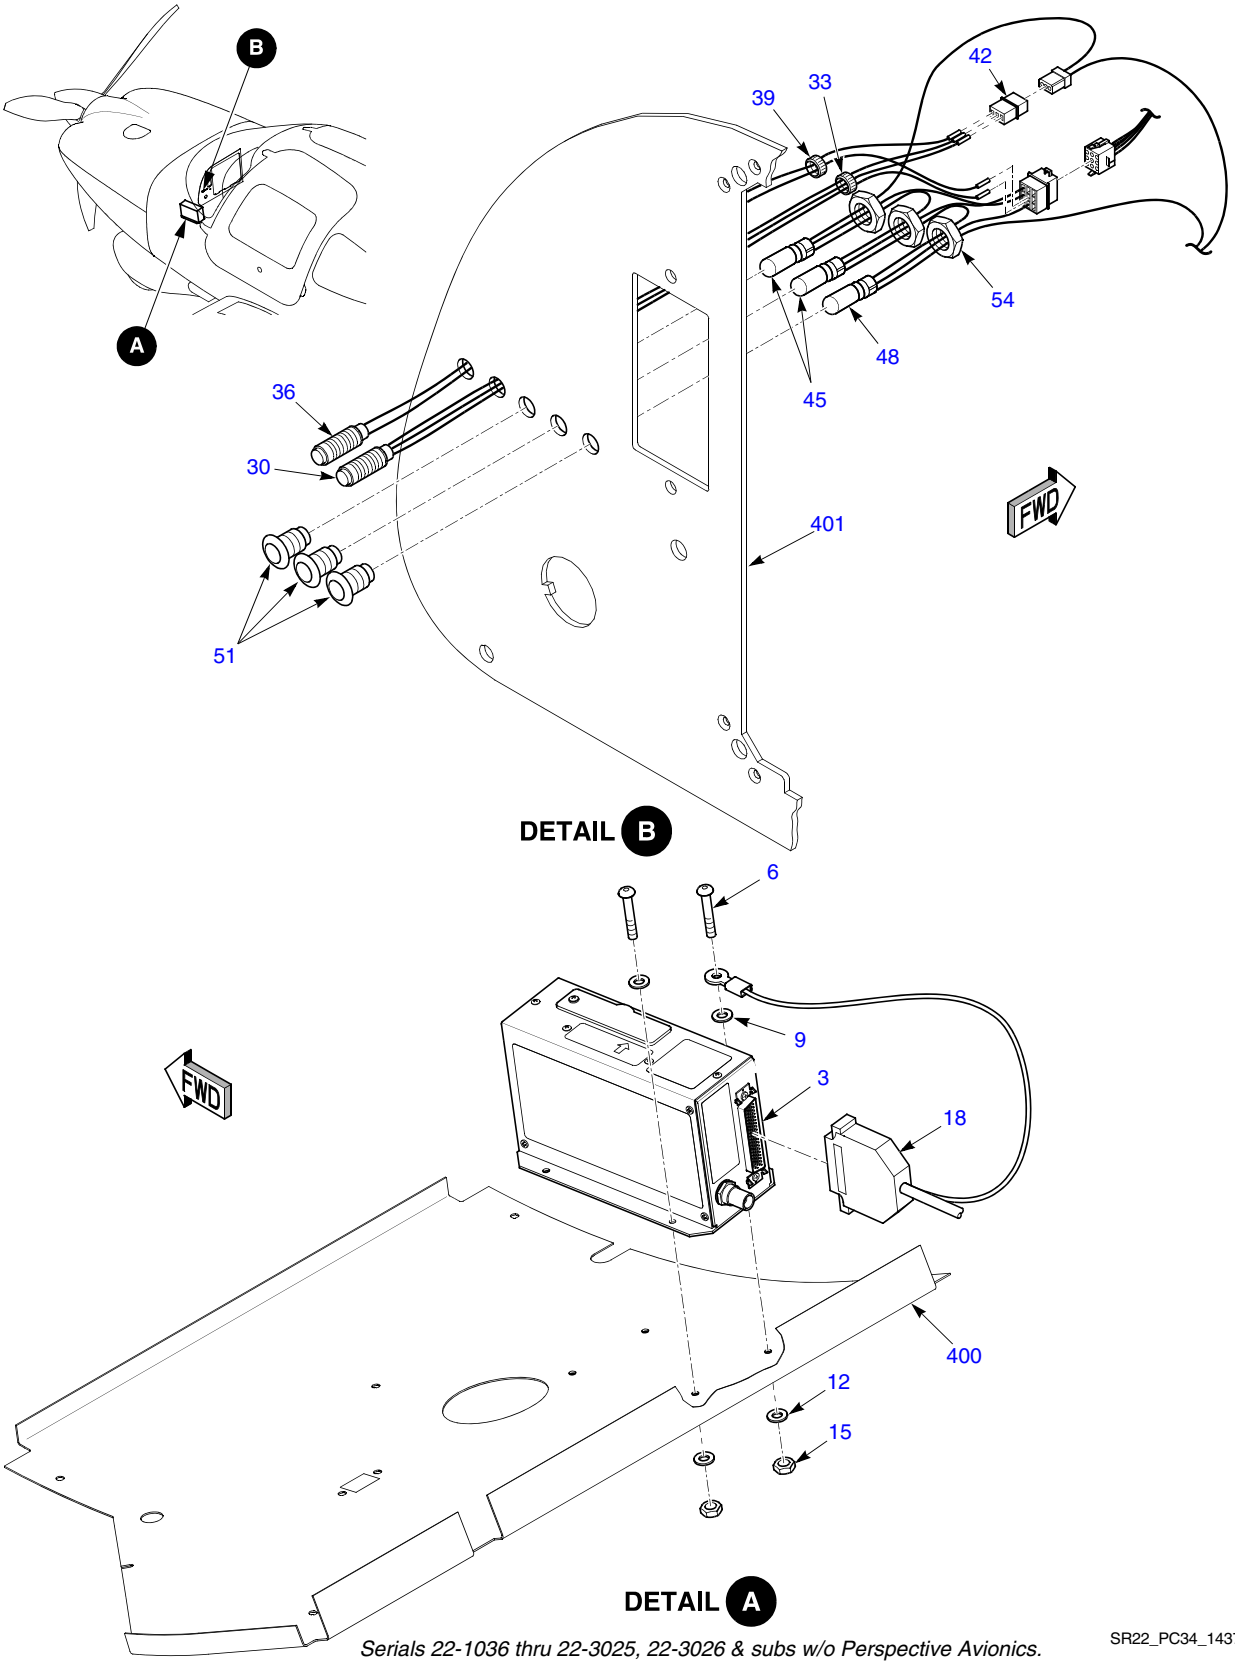

Serials 22-1036 thru 22-3025, 22-3026 & subs w/o Perspective Avionics.

Figure-03

TAWS - Serials 22-1036 & subs w/o Perspective

EFFECTIVITY:
Serials 22-1036 & subs w/o Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			TAWS INSTALLATION	1036 / 0001	/	NP
	3	15963-001			·GA-TAWS LRU	1036 / 0001	/	1
	6	50834-007		A	·SCREW	1036 / 0001	/	4
	9	50813-001		A	·WASHER	1036 / 0001	/	4
	12	NAS1149FN616P		A	·WASHER	1036 / 0001	/	4
	15	MS21083N06		A	·NUT	1036 / 0001	/	4
	18	51164-001			·CONNECTOR	1036 / 0001	/	1
-	21	15963-201			·DATA CARD, AMERICAS	1036 / 0001	/	1
-	24	15963-202			·DATA CARD, ATLANTIC	1036 / 0001	/	1
-	27	15963-203			·DATA CARD, PACIFIC	1036 / 0001	/	1
	30	51408-001	@		·SWITCH	1036 / 0001	/	1
-	31	51407-001	@		·LENS	1036 / 0001	/	1
	33	PRT OF ITM 30		A	·NUT	1036 / 0001	/	1
	36	51408-001			·SWITCH	1036 / 0001	/	1
	39	PRT OF ITM 36		A	·NUT	1036 / 0001	/	1
	42	50158-003			·CONNECTOR	1036 / 0001	/	1
	45	51419-001			··LED, YELLOW, W/ TAWS	1036 / 0001	/	2
	48	51415-001			··LED, RED, W/ TAWS	1036 / 0001	/	1
	51	51414-001		A	··LED LAMPHOLDER, W/ TAWS	1036 / 0001	/	3
	54	PRT OF ITM 51		A	··NUT, W/ TAWS	1036 / 0001	/	3
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 25-10-04 DET			KICK PLATE, LH			
	401	RF 31-10-01 DET			INSTRUMENT PANEL			
					SYMBOL NOTES:			
			@		PARTS MUST BE ORDERED CONCURRENTLY.			

EFFECTIVITY:
All

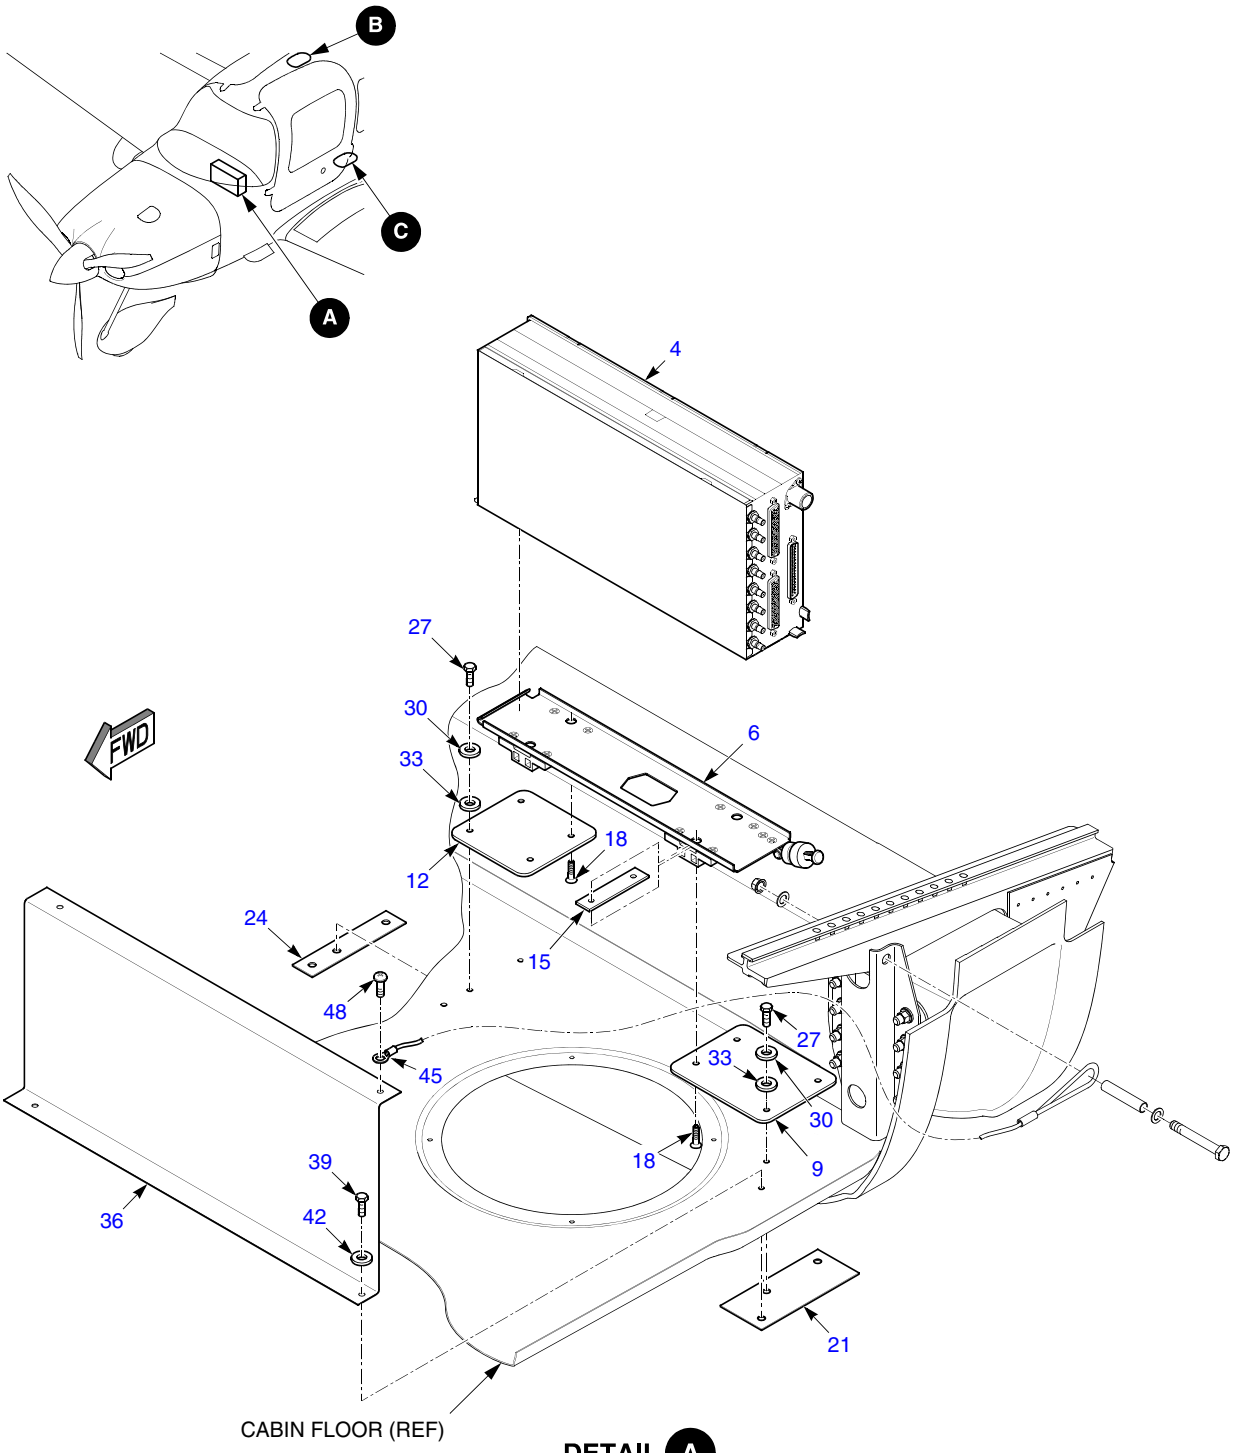

Serials 22-3665 & subs w/ Perspective Avionics and w/o GDL 88, 22T-0004 & subs w/o GDL 88.

SR22_PC34_1975

Figure-04

GTS 800 Traffic System - Serials 3665 & subs, 22T-0004 & subs w/ Perspective and w/o GDL 88 (1 of 3)

EFFECTIVITY:
Serials 3665 & subs, 22T-0004 & subs w/ Perspective and w/o GDL 88

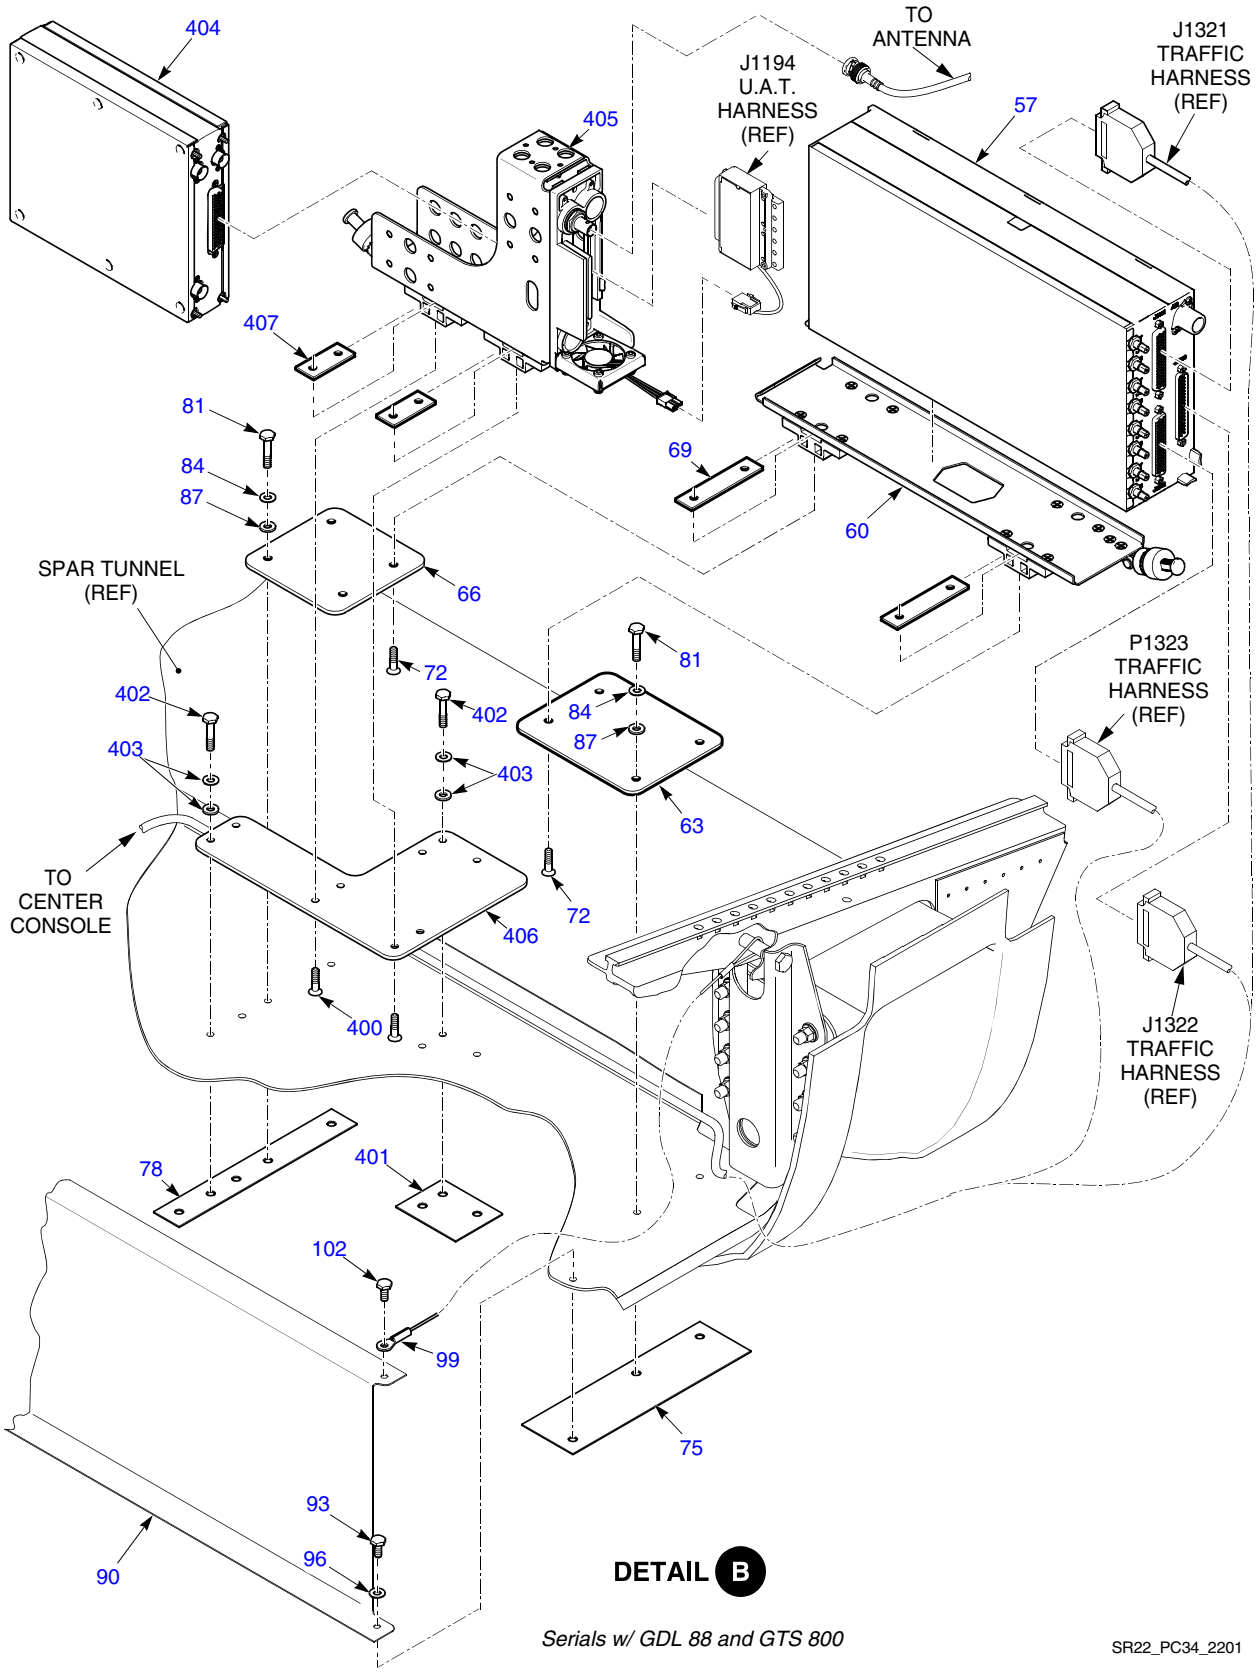

Serials w/ GDL 88 and GTS 800

SR22_PC34_2201

Figure-04

GTS 800 Traffic System - Serials w/ GDL 88 (2 of 3)

EFFECTIVITY:
Serials w/ GDL 88

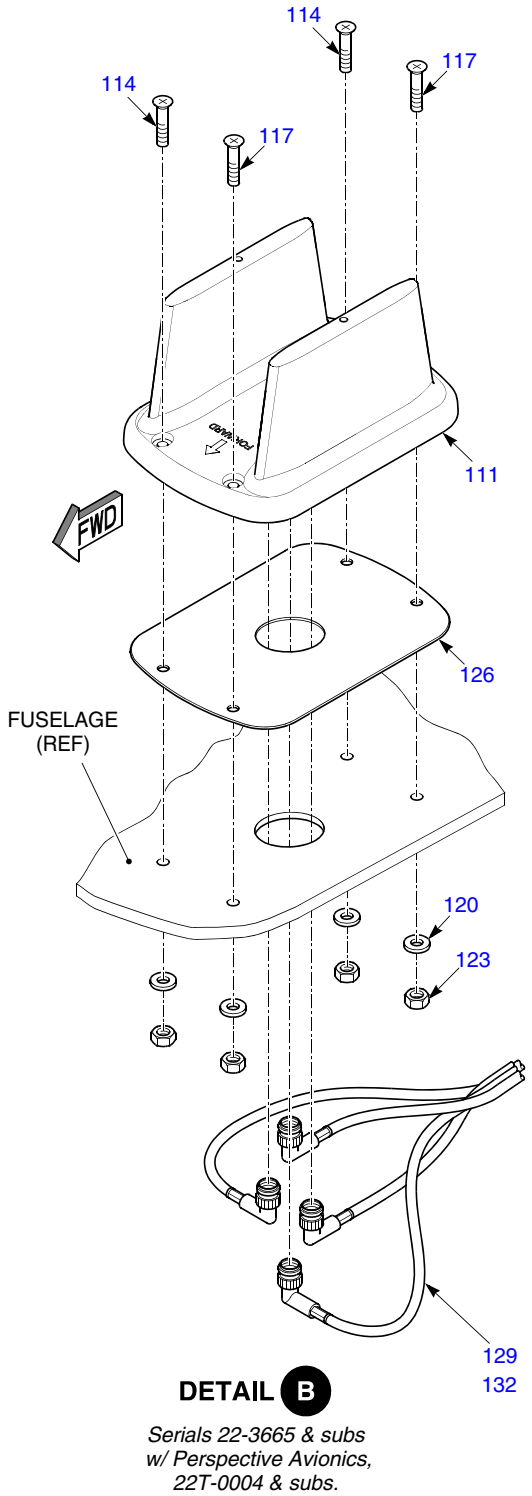

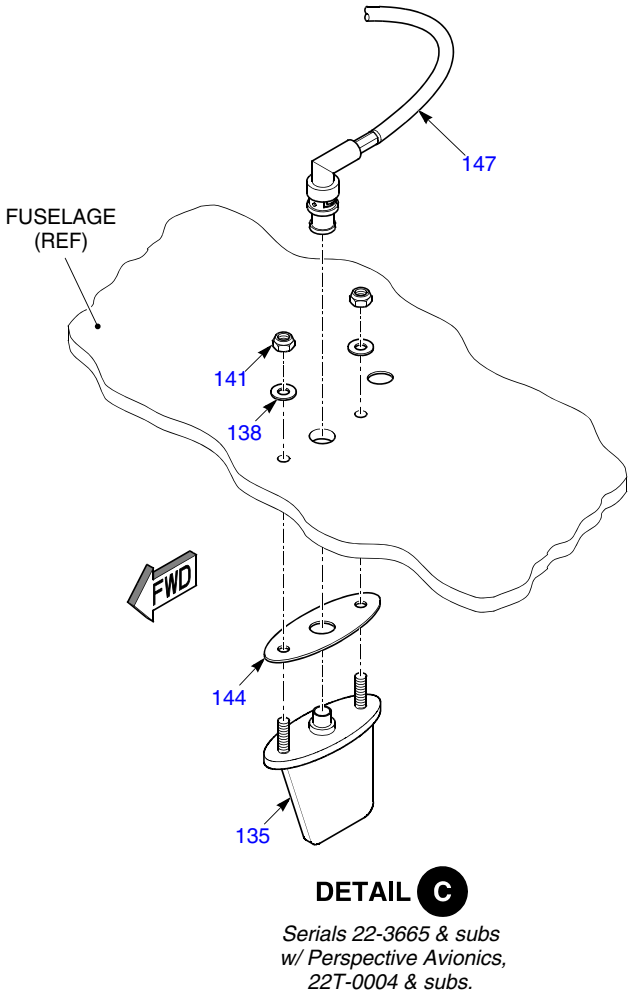

SR22_PC34_1977

Figure-04

GTS 800 Traffic System - Serials 3665 & subs, 22T-0004 & subs w/ Perspective (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04			GARMIN GTS 800 SYSTEM INSTALLATION	3665 / 0004	/	NP
-	3	NO PRT NUMBER			·GTS 800 LRU INSTALLATION W/O GDL 88	3665 / 0004	/	NP
	4	26659-001			··GARMIN GTS 800 LINE REPLACEABLE UNIT	3665 / 0004	/	1
	6	26659-101			··LRU, RACK, GTS 800	3665 / 0004	/	1
	9	14824-001			··BRACKET, OUTBOARD	3665 / 0004	/	1
	12	14824-002			··BRACKET, INBOARD	3665 / 0004	/	1
	15	14825-001			··RETAINER PLATE	3665 / 0004	/	2
	18	MS24694-S54		A	··SCREW	3665 / 0004	/	4
	21	26664-101			··NUT PLATE, OUTBOARD	3665 / 0004	/	1
	24	26664-102			··NUT PLATE, INBOARD	3665 / 0004	/	1
	27	AN3-10A		A	··BOLT	3665 / 0004	/	4
	30	NAS1149D0332K		A	··WASHER	3665 / 0004	/	4
	33	NAS1149D0363K		A	··WASHER	3665 / 0004	/	4
	36	16763-001			··COVER PANEL	3665 / 0004	/	1
	39	AN3-7A		A	··BOLT	3665 / 0004	/	2
	42	NAS1149D0363K		A	··WASHER	3665 / 0004	/	2
	45	14595-001			··LANYARD	3665 / 0004	/	2
	48	AN3-3A		A	··BOLT	3665 / 0004	/	2
-	51	26659-303			··QMA TERMINATION PLUGS	3665 / 0004	/	3
-	54	NO PRT NUMBER			·GTS 800 LRU INSTALLATION W/ GDL 88	4300 / 1233	/	NP
	57	26659-001			··GARMIN GTS 800 LINE REPLACEABLE UNIT	4300 / 1233	/	1
	60	26659-101			··LRU, RACK, GTS 800	4300 / 1233	/	1
	63	14824-001			··BRACKET, OUTBOARD	4300 / 1233	/	1
	66	14824-002			··BRACKET, INBOARD	4300 / 1233	/	1
	69	14825-001			··RETAINER PLATE	4300 / 1233	/	2
	72	MS24694-S54		A	··SCREW	4300 / 1233	/	4
	75	26664-202			··NUT PLATE, OUTBOARD	4300 / 1233	/	1
	78	26664-201			··NUT PLATE, INBOARD	4300 / 1233	/	1
	81	AN3-10A		A	··BOLT	4300 / 1233	/	4
	84	NAS1149D0332K		A	··WASHER	4300 / 1233	/	4
	87	NAS1149D0363K		A	··WASHER	4300 / 1233	/	4
	90	16763-002			··COVER PANEL	4300 / 1233	/	1
	93	AN3-7A		A	··BOLT	4300 / 1233	/	2
	96	NAS1149D0363K		A	··WASHER	4300 / 1233	/	2
	99	14595-201			··LANYARD	4300 / 1233	/	2
	102	AN3-3A		A	··BOLT	4300 / 1233	/	2
-	105	26659-303			··QMA TERMINATION PLUGS	4300 / 1233	/	3
-	108	NO PRT NUMBER			·GTS 800 ANTENNA INSTALLATION	3665 / 0004	/	NP
	111	26659-050			··ANTENNA, UPPER	3665 / 0004	/	1
	114	MS27039-0813	@	A	··SCREW	3665 / 0004	/	2
	117	MS27039-0815		A	··SCREW	3665 / 0004	/	2
	120	AN970-3		A	··WASHER	3665 / 0004	/	4
	123	MS21044N08		A	··NUT	3665 / 0004	/	4
	126	26665-101			··GASKET	3665 / 0004	/	1
	129	26666-002			··ANTENNA CABLE	3665 / 0004	3739 / 0082	1
					FOR SPARES USE P/N 26666-003			
	132	26666-003			··ANTENNA CABLE	3740 / 0083	/	1
	135	26656-001			··ANTENNA, LOWER	3665 / 0004	/	1
	138	NAS1149FN832P		A	··WASHER	3665 / 0004	/	2
	141	MS21083N08		A	··NUT	3665 / 0004	/	2
	144	PRT OF ITM 72			···GASKET	3665 / 0004	/	1
	147	26666-001			··ANTENNA CABLE	3665 / 0004	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 23-20-01 DET			SCREW			
	401	RF 23-20-01 DET			NUT PLATE			
	402	RF 23-20-01 DET			BOLT			
	403	RF 23-20-01 DET			WASHER			
	404	RF 23-20-01 DET			GDL 88 LRU			
	405	RF 23-20-01 DET			GDL 88 LRU RACK			
	406	RF 23-20-01 DET			BRACKET			
	407	RF 23-20-01 DET			RETAINER PLATE			
					SYMBOL NOTES:			
			@		INSTALL LONGER SCREWS ON RH SIDE OF UPPER ANTENNA.			

Intentionally Left Blank

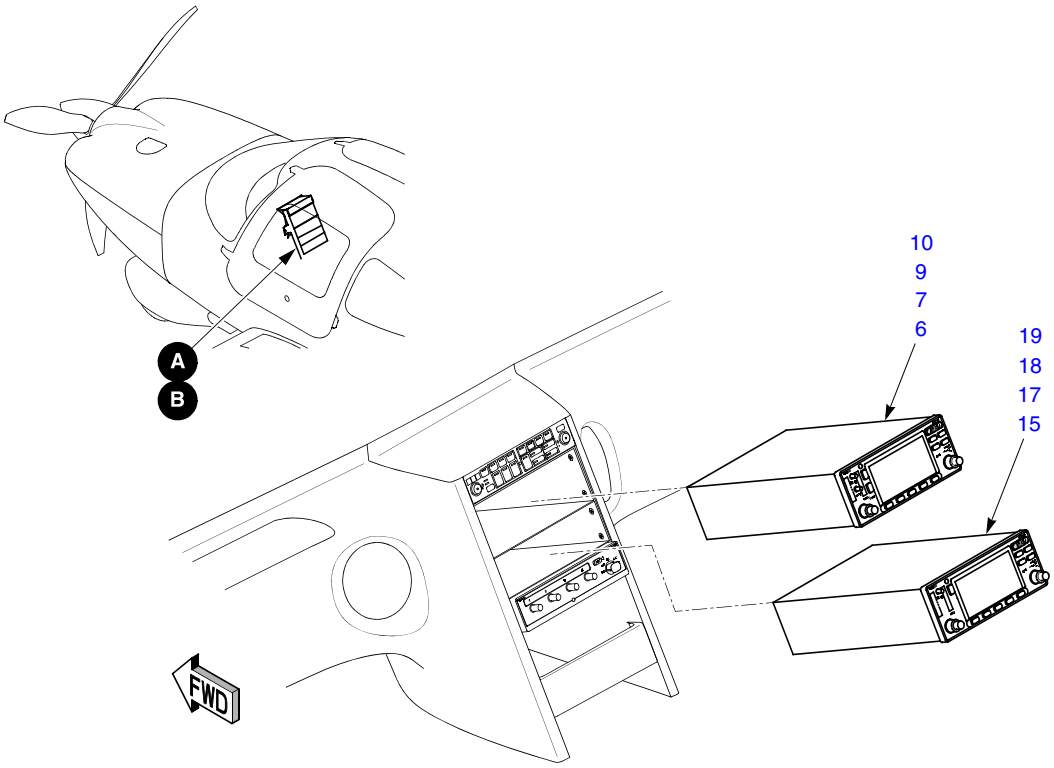

Serials w/ Configuration A Standard or PFD Standard.

DETAIL A

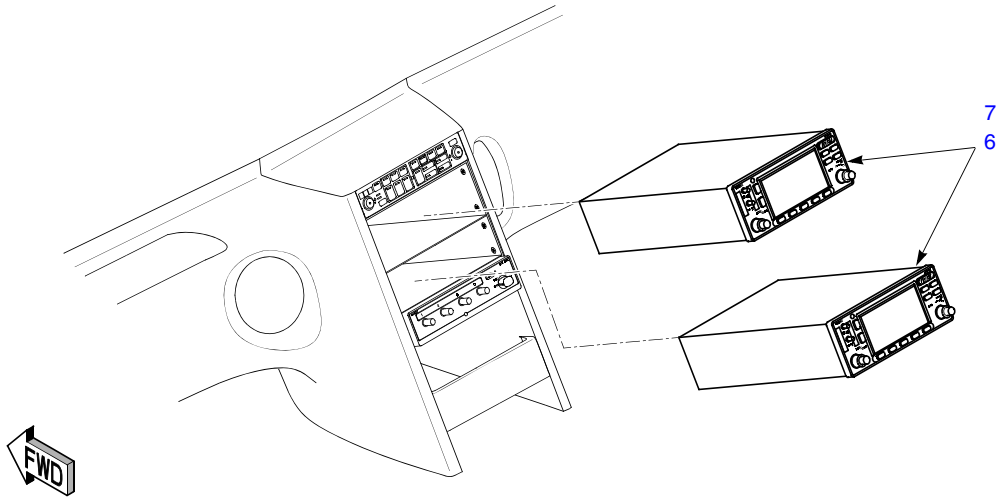

Serials w/ Configuration B Standard or Configuration PFD w/ 430 & 430.

DETAIL B

SR22_PC34_1268A

Figure-01
Communications/Navigation Receiver - Serials 22-0002 & subs w/o Perspective

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			COMMUNICATIONS/NAVIGATION RECEIVER INSTL	0002		NP
-	3	12718-050			·GPS/COM/NAV, GNS 430, 28 VOLT	0002	2559	AR
					FOR SPARES USE P/N 12718-051			
	6	12718-051			·GPS/COM/NAV, GNS 430, 14/28 VOLT	0002	2559	AR
						2561	2577	
	7	12718-051ST	@		·GPS/COM/NAV, GNS 430, 14/28 VOLT	0002	2559	AR
						2561	2577	
	9	12718-071	@		·WAAS/GPS/COM/NAV, GNS 430, 14/28 VOLT	2560	2560	AR
						2578	2895	
					FOR SPARES USE P/N 12718-072			
	10	12718-072	@		·WAAS/GPS/COM/NAV, GNS 430, 14/28 VOLT	2896		AR
-	12	12718-060			·GPS/COM/NAV, GNC 420, 14/28 VOLT	0002	2559	AR
					FOR SPARES USE P/N 12718-061			
	15	12718-061	@		·GPS/COM, GNC 420, 14/28 VOLT	0002	2559	AR
						2561	2577	
	18	12718-081	@		·WAAS/GPS/COM, GNC 420, 14/28 VOLT	2560	2560	AR
						2578	2895	
					FOR SPARES USE P/N 12718-082			
	19	12718-082	@		·WAAS/GPS/COM, GNC 420, 14/28 VOLT	2896		AR
-	21	12735-001			·DATACARD, GARMIN 400 SERIES, AMERICAS	0002	2559	1
						2561	2577	
-	24	12735-301			·DATACARD, GARMIN 400 SERIES, AMERICAS	2560	2560	
						2578		
-	27	12735-051			·DATACARD, GARMIN 400 SERIES, INTERNATIONAL	0002	2559	1
						2561	2577	
-	30	12735-351			·DATACARD, GARMIN 400 SERIES, INTERNATIONAL	2560	2560	
						2578		
-	33	12735-201			·DATACARD, GARMIN, TERRAIN DATA	0002	2559	1
						2561	2577	
-	36	12735-202			·DATACARD, GARMIN, TERRAIN DATA	2560	2560	1
						2578		
					SYMBOL NOTES:			
			@		THIS UNIT HAS TERRAIN INSTALLED.			

EFFECTIVITY:
All

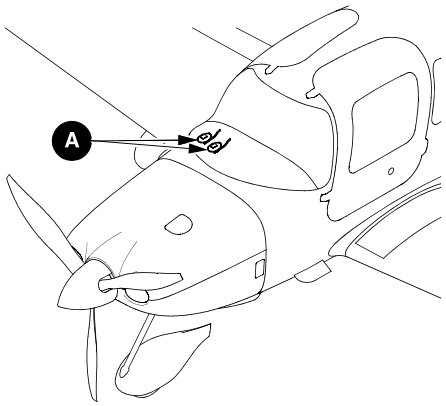

Serials 22-0002 thru 22-0820 after SB 2X-34-06.

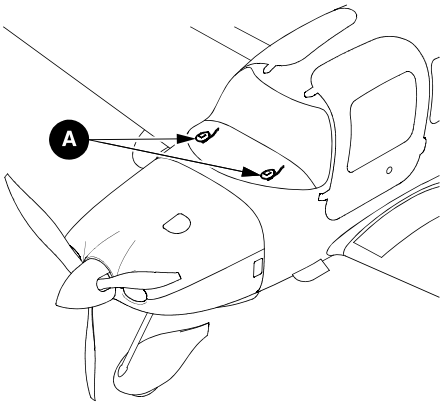

Serials 22-0821 thru 22-2559, 22-2561 thru 22-2577.

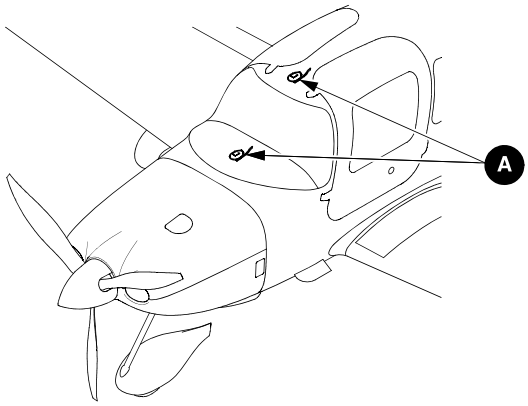

Serials 22-0002 thru 22-0820 before SB 2X-34-06.

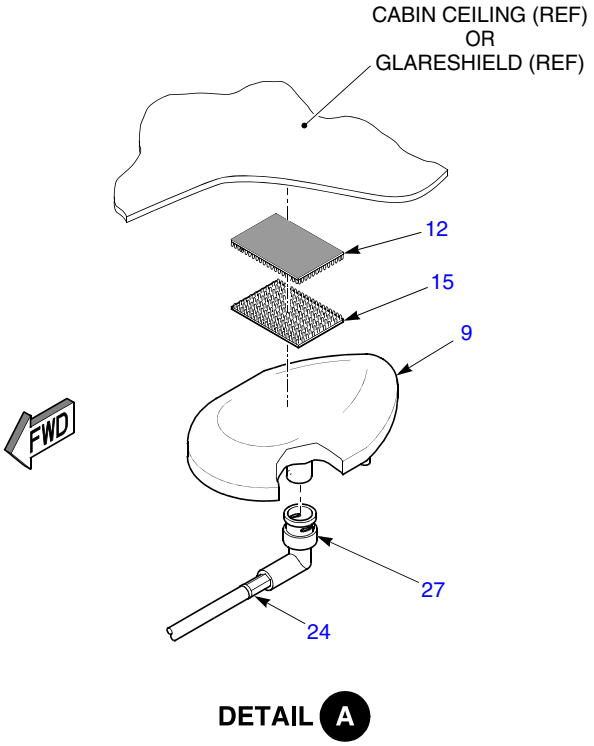

SR22_PC34_1265D

Figure-02
WAAS/GPS/COM Antenna - Serials 22-0002 thru 22-2577 (1 of 3)

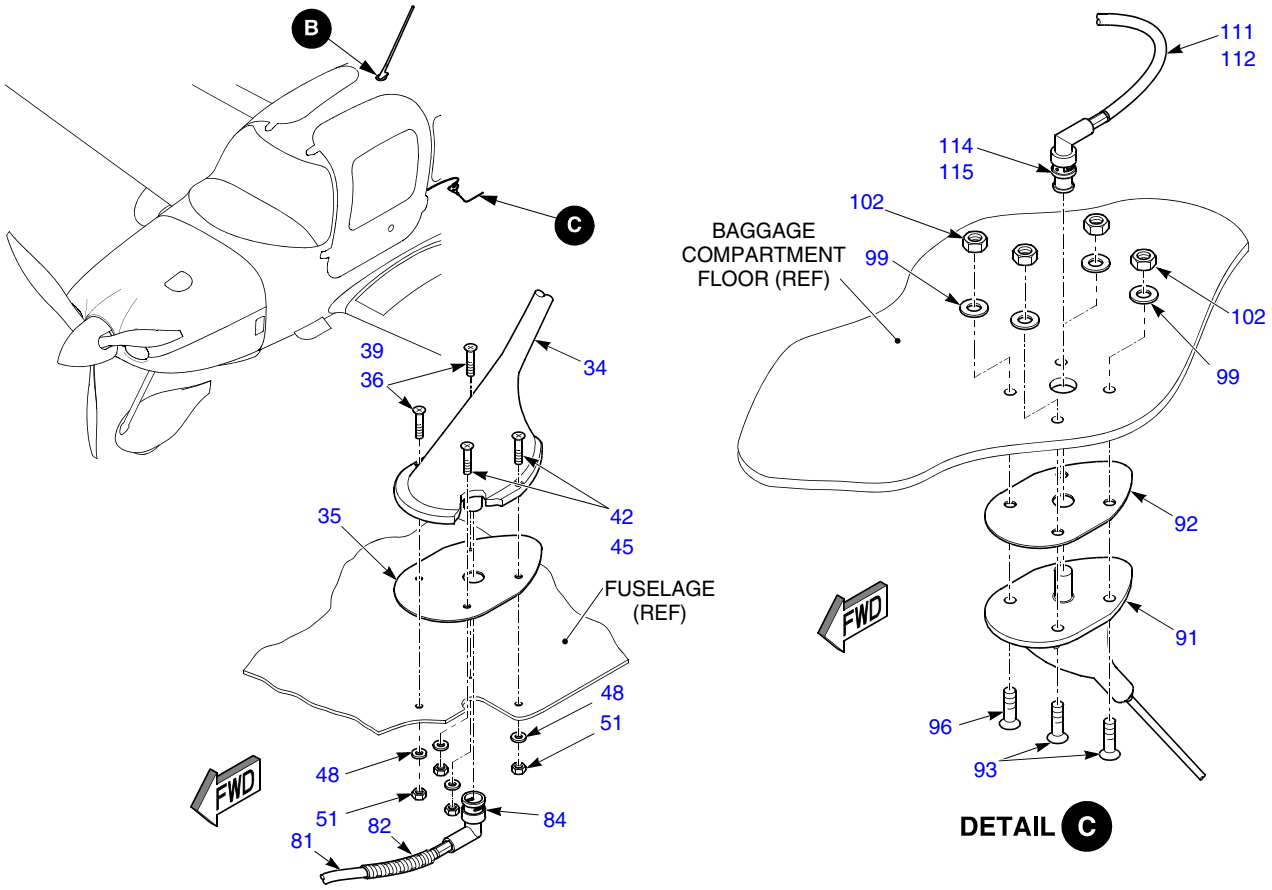

Serials 22-1793 & subs, 22-0002 thru 22-1792 before SB 2X-34-06 w/ COM 1 / XM antenna in kit, Serials 22-0002 thru 22-1792 after SB 2X-34-06 w/o COM 1 / XM antenna in kit.

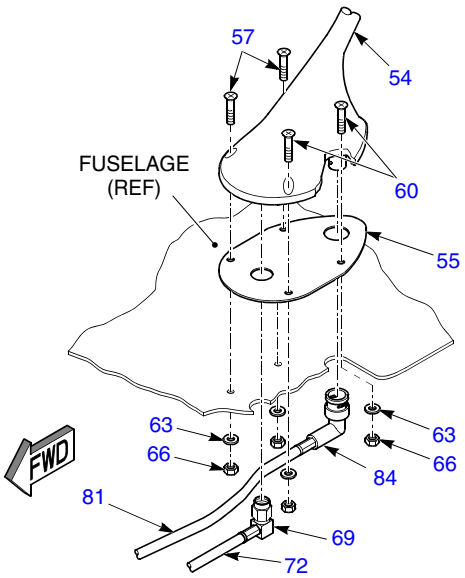

Serials 22-1087 thru 22-1643 w/ factory XM Weather, 22-0002 thru 22-1792 after SB 2X-34-06 w/ COM 1 / XM antenna in kit.

DETAIL B

SR22_PC34_1711B

Figure-02
WAAS/GPS/COM Antenna (2 of 3)

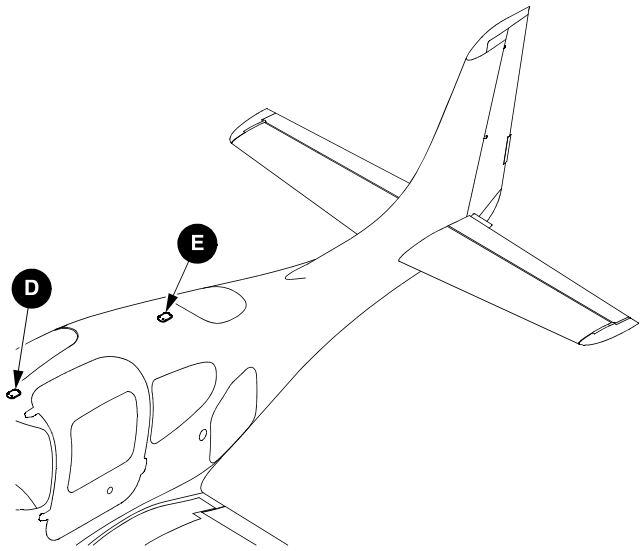

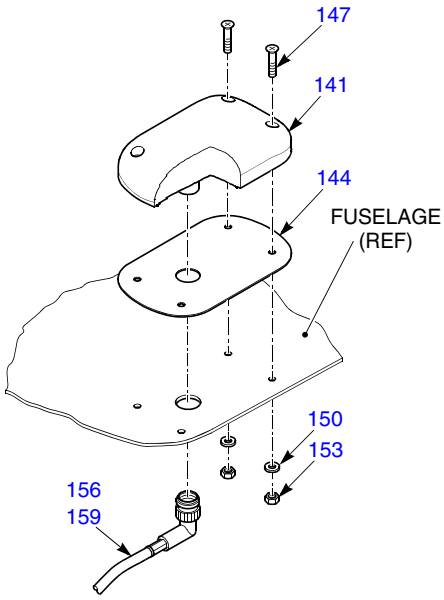

Serials 22-0002 thru 22-0820 after SB 2X-34-23,
Serials 22-0435 thru 22-2559, 22-2561 thru 22-2577
after SB 2X-34-24,
Serials 22-2560, 22-2578 thru 22-3827,
22T-0001 thru 22T-0267 w/ WAAS GPS2.

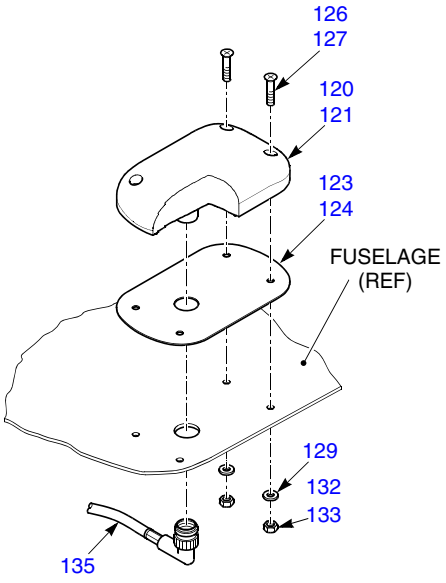

DETAIL D

Serials 22-0002 thru 22-0820 after SB 2X-34-23 w/o XM Weather,
Serials 22-0435 thru 22-2559, 22-2561 thru 22-2577 after
SB 2X-34-24 w/o XM Weather,
Serials 22-2560, 22-2578 & subs,
22T-0001 & subs w/ WAAS GPS1 w/o XM Weather.

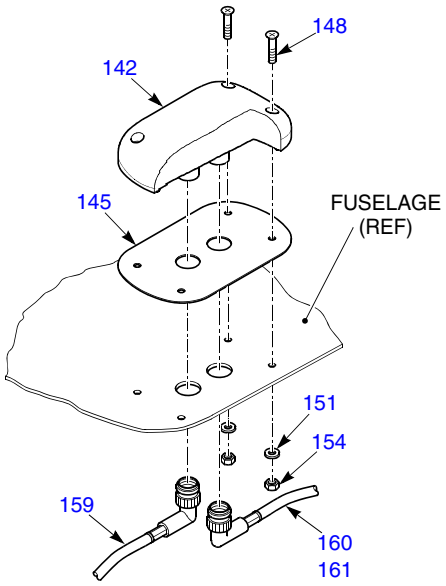

DETAIL E

Serials 22-3828 & subs,
22T-0268 & subs w/ WAAS GPS2.

SR22_PC34_1706B

Figure-02

WAAS/GPS/COM Antenna - Serials 22-2578 & subs, 22T-0001 & subs (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		GPS/COM ANTENNA INSTALLATIONS	0002 / 0001	/	NP
-	3	12761-001			·GPS 1 ANTENNA INSTALLATION	0002	2577	NP
-	6	12762-002			·GPS 2 ANTENNA INSTALLATION	0002	2577	NP
	9	12744-001			··ANTENNA, GPS 1 AND GPS 2	0002	2577	1
	12	50494-001			··DUAL LOCK	0002	2577	AR
	15	50494-002			··DUAL LOCK	0002	2577	AR
-	18	50132-001			··ANCHOR, CABLE TIE	0002	2577	AR
-	21	50239-020			··CABLE TIE	0002	2577	AR
	24	50713-001			··COAXIAL CABLE	0002	2577	AR
	27	50465-001			··CONNECTOR	0002	2577	2
-	30	12759-001			·COM 1 ANTENNA INSTALLATION, W/O XM WEATHER	0002 / 0001	/	NP
					W/ FACTORY XM WEATHER	1644 / 0001	/	
					AFTER SB2X-34-06 W/O COM 1/XM ANTENNA IN KIT	0002	1643	
-	33	12740-001			··ANTENNA, COM 1	0002	3592	1
					ALTERNATE FOR P/N 12740-004			
	34	12740-004			··ANTENNA, COM 1	3593 / 0001	/	1
					ALTERNATE FOR P/N 12740-001			
	35	PRT OF ITM 33			··GASKET	0002 / 0001	/	1
	36	MS24694S8		A	··SCREW	0002	1086	2
	39	MS24694S53		A	··SCREW	1087 / 0001	/	2
	42	MS24694S11		A	··SCREW	0002	1086	2
	45	MS24694S56		A	··SCREW	1087 / 0001	/	2
	48	AN970-3		A	··WASHER	0002 / 0001	/	4
	51	MS21044N08		A	··NUT	0002 / 0001	/	4
-	52	NO PRT NUMBER			·COM 1 ANTENNA INSTALLATION W/ XM WEATHER	1087	1643	NP
					AFTER SB2X-34-06 W/ COM 1/XM ANTENNA IN KIT	0002	1792	
	54	16127-001			··ANTENNA, COM 1, W/ XM WEATHER	1087	1643	1
	55	PRT OF ITM 54			··GASKET	1087	1643	1
	57	MS27039-1-16		A	··SCREW	1087	1643	2
	60	MS27039-1-18		A	··SCREW	1087	1643	2
	63	AN970-3		A	··WASHER	1087	1643	4
	66	MS21044N3		A	··NUT	1087	1643	4
	69	51427-001			··CONNECTOR	1087	1643	1
	72	50713-002			··COAXIAL CABLE	1087	1643	AR
-	75	50132-001			··CABLE TIE ANCHOR	0002 / 0001	/	AR
-	78	50239-020			··CABLE TIE	0002 / 0001	/	AR
	81	50713-001			··COAXIAL CABLE	0002 / 0001	/	AR
	82	50943-035			··SPLIT WIRE LOOM	2750 / 0001	/	AR
	84	50465-001			··CONNECTOR	0002 / 0001	/	2
-	87	12760-001			·COM 2 ANTENNA INSTALLATION	0002 / 0001	/	NP
-	90	12741-001			··ANTENNA, COM 2	0002	3586	1
					ALTERNATE FOR P/N 12741-002			
	91	12741-002			··ANTENNA, COM 2	3587 / 0001	/	1
					ALTERNATE FOR P/N 12741-001			
	92	PRT OF ITM 90			··GASKET	0002 / 0001	/	1
	93	MS24694S8		A	··SCREW	0002 / 0001	/	2
	96	MS24694S13		A	··SCREW	0002 / 0001	/	2
	99	AN970-3		A	··WASHER	0002 / 0001	/	4
	102	MS21044N08		A	··NUT	0002 / 0001	/	4
-	105	50132-001			··CABLE TIE ANCHOR	0002 / 0001	/	AR
-	108	50239-020			··CABLE TIE	0002 / 0001	/	AR

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	111	50713-001			··COAXIAL CABLE, W/O PERSPECTIVE AVIONICS	0002		AR
	112	50713-002			··COAXIAL CABLE, W/ PERSPECTIVE AVIONICS	3026 / 0001	/	AR
	114	50465-001			··CONNECTOR, W/O PERSPECTIVE AVIONICS	0002		2
	115	51300-002			··CONNECTOR, W/ PERSPECTIVE AVIONICS	3026 / 0001	/	2
-	117	18513-001			·GPS1 ANTENNA INSTALL. W/O XM WEATHER (WAAS)	2578 / 0001	/	NP
	120	12744-004			··ANTENNA, WAAS GPS	2578 / 0001	3894 / 0410	1
	121	12744-002			··ANTENNA, WAAS GPS	3895 / 0411	/	1
	123	24742-101			··GASKET	2578 / 0001	3894 / 0410	1
	124	24742-111			··GASKET	3895 / 0411	/	1
	126	51952-138		A	··SCREW	2578 / 0001	3894 / 0410	4
	127	53695-138		A	··SCREW	3895 / 0411	/	4
	129	AN970-3		A	··WASHER	2578 / 0001	/	4
	132	MS21083N08		A	··NUT	2578 / 0001	3894 / 0410	4
	133	MS21083N3		A	··NUT	3895 / 0411	/	4
	135	18515-001			··CABLE	2578 / 0001	/	1
-	138	18514-001			·GPS2 ANTENNA INSTALL. (WAAS)	2578 / 0001	/	NP
	141	12744-004			··ANTENNA, WAAS GPS	2578 / 0001	3827 / 0267	1
	142	29301-001			··ANTENNA, WAAS GPS\IRIDIUM	3828 / 0268	/	1
	144	18513-101			··GASKET	2578 / 0001	3827 / 0267	1
	145	29298-001			··GASKET	3828 / 0268	/	1
	147	51952-138		A	··SCREW	2578 / 0001	3827 / 0267	4
	148	53437-125		A	··SCREW	3828 / 0268	/	4
	150	NAS1149FN832P		A	··WASHER	2578 / 0001	3827 / 0267	4
	151	NAS1149FN632P		A	··WASHER	3828 / 0268	/	4
	153	MS1083N08		A	··NUT	2578 / 0001	3827 / 0267	4
	154	MS21083N06		A	··NUT	3828 / 0268	/	4
	156	18515-002			··CABLE, W/O PERSPECTIVE AVIONICS	2578		1
	159	18515-004			··CABLE, W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	160	29302-001			··CABLE, W/ IRIDIUM WEATHER SYSTEM	3828 / 0268	3866 / 0358	1
	161	29302-002			··CABLE, W/ IRIDIUM WEATHER SYSTEM	3867 / 0359	/	1
-	162	50132-001			··CABLE TIE ANCHOR	2578 / 0001	/	AR
-	165	50239-020			··CABLE TIE	2578 / 0001	/	AR
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2560; REFER TO 22-2578 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 FOR PART IDENTIFICATION.			

Intentionally Left Blank

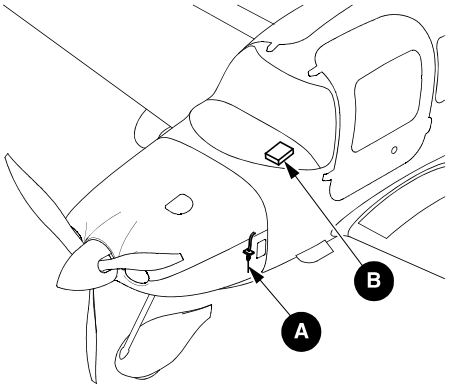

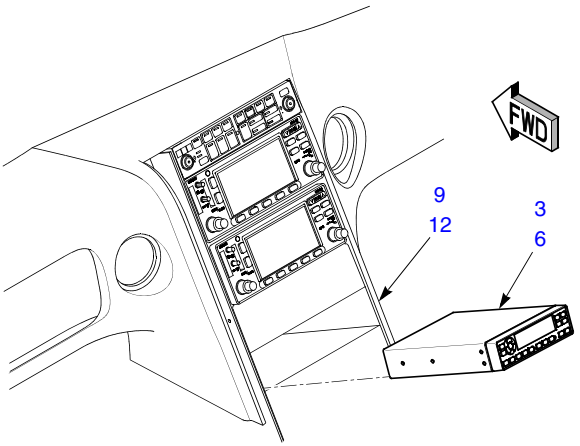

NOTE

1. Typical installation shown.
Avionics stackup may change based on optional equipment installation.

DETAIL B

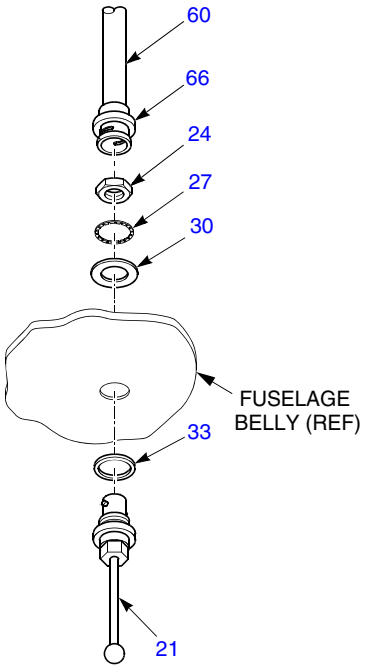

Serials 22-0002 thru 22-0706 before SB 2X-34-05.

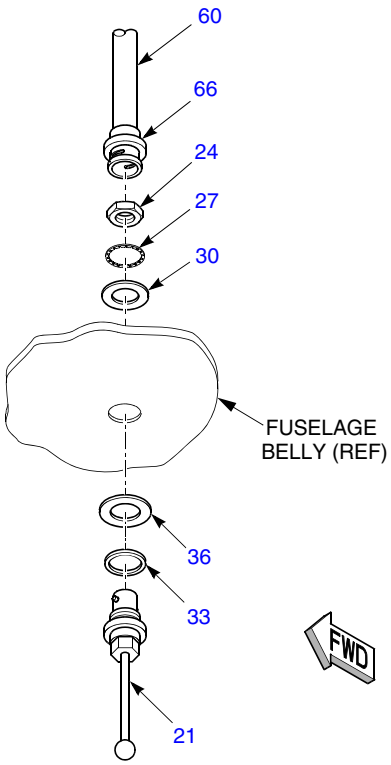

Serials 22-0002 thru 22-0319 after SB 2X-34-05.

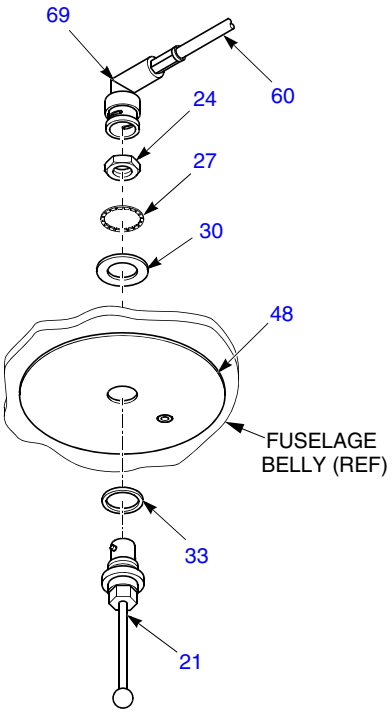

Serials 22-0320 thru 22-0706 after SB 2X-34-05, Serials 22-0707 & subs w/o Perspective Avionics.

DETAIL A

SR22_PC34_1271B

Figure-03

Transponder and Antenna - Serials 22-0002 & subs w/o Perspective (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

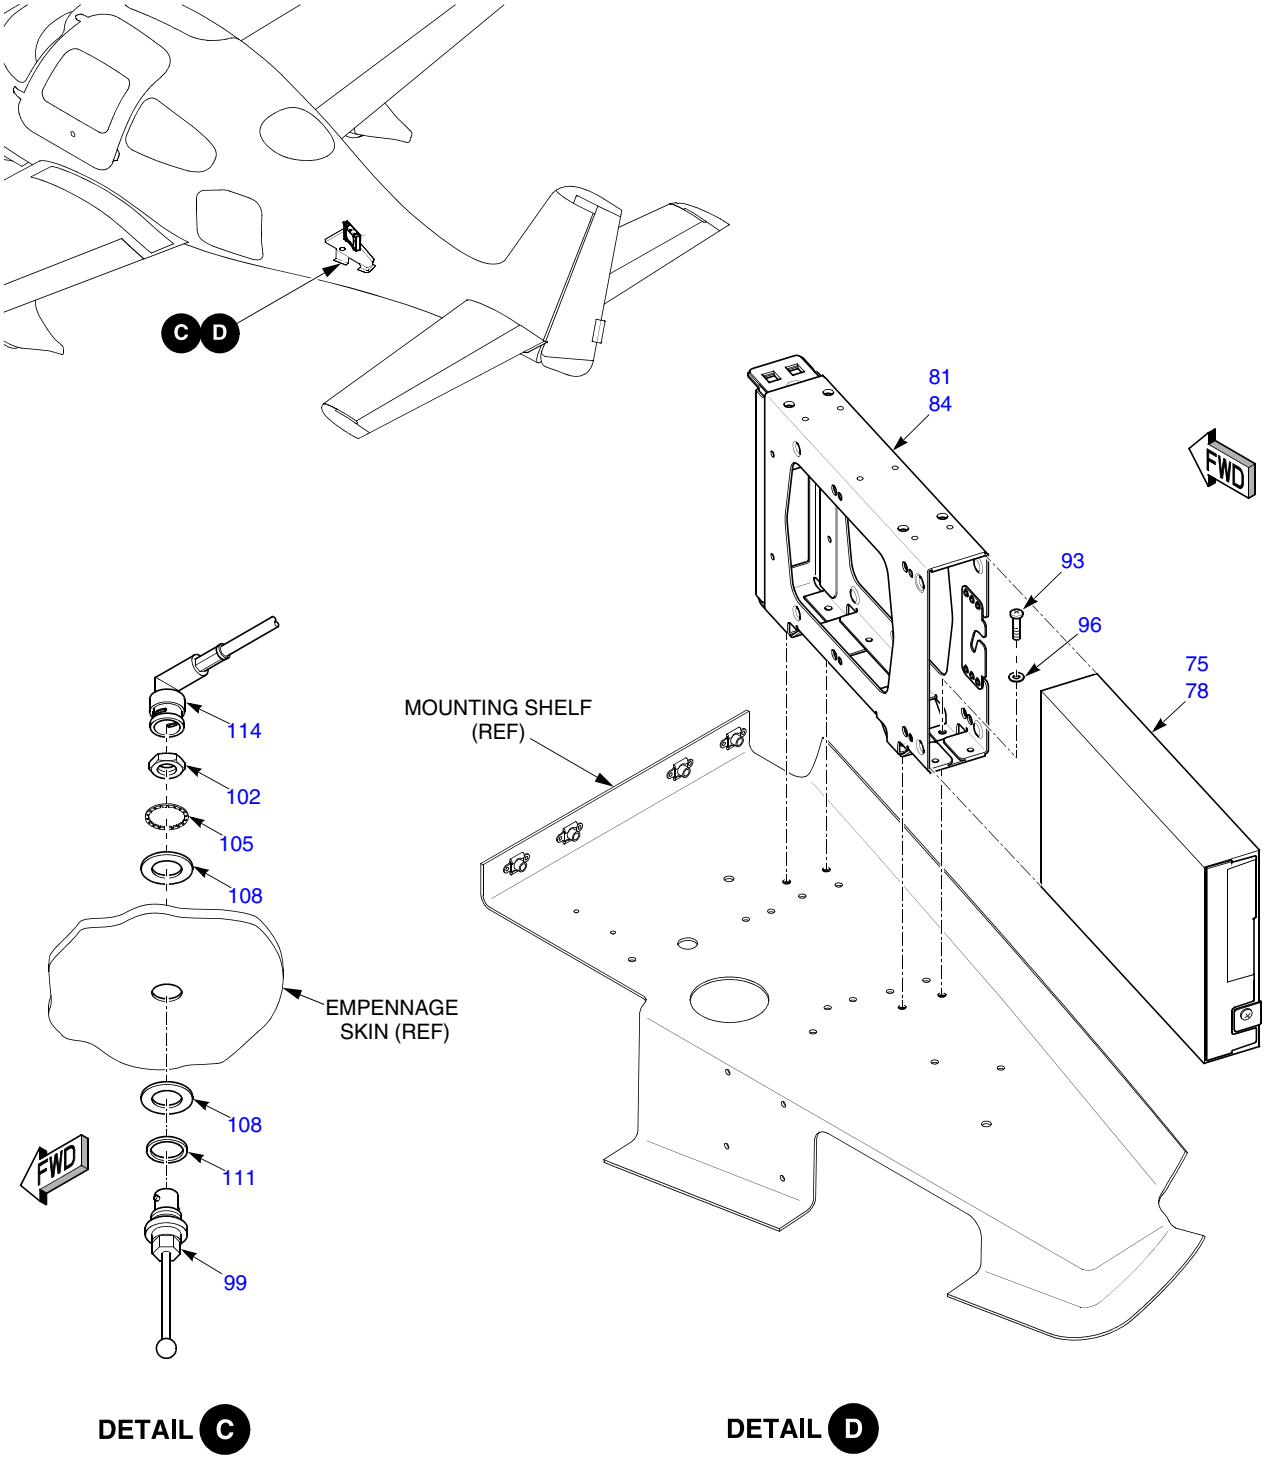

Figure-03

Transponder and Antenna - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		TRANSPONDER AND ANTENNA INSTALLATIONS W/O PERSPECTIVE AVIONICS	0002		NP
	3	13587-050			·TRANSPONDER, GTX 327	0002		1
	6	15966-050	@		·TRANSPONDER, GTX 330	0821		1
					AFTER SB2X-34-09	0435		
	9	13587-101		A	·MOUNTING RACK	0002		1
	12	15966-101	@	A	·MOUNTING RACK	0821		1
-	15	13587-102		A	·RACK BACK PLATE	0002		1
-	18	13587-201		A	·CONNECTOR KIT	0002		1
	21	12739-001			·TRANSPONDER ANTENNA	0002		1
	24	PRT OF ITM 21		A	·NUT	0002		1
	27	PRT OF ITM 21		A	·LOCK WASHER	0002		1
	30	NAS1149F0916P		A	·WASHER	0002		1
	33	PRT OF ITM 21		A	·GASKET	0002		1
	36	15649-002			·RING, GROUNDING PLANE, AFTER SB2X-34-05	0002	0319	1
-	39	NAS1149F0932P			·GROUNDING WASHER	0707		1
					AFTER SB2X-34-05	0320		
					ALTERNATE FOR P/N NAS1149F0832P			
					ALTERNATE FOR P/N NAS1149F0863P			
-	42	NAS1149F0832P			·GROUNDING WASHER	0707		1
					AFTER SB2X-34-05	1005		
					ALTERNATE FOR P/N NAS1149F0932P			
					ALTERNATE FOR P/N NAS1149F0863P			
-	45	NAS1149F0863P			·GROUNDING WASHER	0707		1
					AFTER SB2X-34-05	1005		
					ALTERNATE FOR P/N NAS1149F0932P			
					ALTERNATE FOR P/N NAS1149F0832P			
	48	15649-001			·RING, GROUNDING PLANE	0707		1
					AFTER SB2X-34-05	0320		
-	51	15764-003			·CABLE ASSEMBLY	0002	0820	1
-	54	20386-001			·CABLE ASSEMBLY	0821		1
					ALTERNATE FOR P/N 15977-003			
-	57	15977-003	@		·CABLE ASSEMBLY	0821		1
					ALTERNATE FOR P/N 20386-001			
	60	50713-001			··COAXIAL CABLE	0002		AR
-	63	50465-001			··CONNECTOR	0002	0820	1
	66	50285-001			··CONNECTOR	0002	0820	1
	69	50465-001			··CONNECTOR	0821		2
-	72	NO PRT NUMBER			TRANSPONDER AND ANTENNA INSTALLATIONS W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	75	24653-001			·TRANSPONDER, MODE S, GTX 33	3026 / 0001	/	1
-	76	24653-002			·TRANSPONDER, MODE S, GTX 33ES	3026 / 0001	/	1
	78	24652-001			·TRANSPONDER, MODE C, GTX 32	3026 / 0001	/	1
	81	24653-101		A	·MOUNTING RACK, MODE S, GTX 33	3026 / 0001	/	1
	84	24652-101		A	·MOUNTING RACK, MODE C, GTX 32	3026 / 0001	/	1
-	87	24653-102		A	·BACK PLATE, MODE S, GTX 33	3026 / 0001	/	1
-	90	24652-103		A	·BACK PLATE, MODE C, GTX 32	3026 / 0001	/	1
	93	MS27039-0809		A	·SCREW	3026 / 0001	/	4
	96	NAS1149FN832P		A	·WASHER	3026 / 0001	/	4
	99	12739-001			·TRANSPONDER ANTENNA	3026 / 0001	/	1
	102	PRT OF ITM 99		A	·NUT	3026 / 0001	/	1
	105	PRT OF ITM 99		A	·LOCK WASHER	3026 / 0001	/	1
	108	NAS1149F0832P		A	·WASHER	3026 / 0001	/	2
	111	PRT OF ITM 99		A	·GASKET	3026 / 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	114	24738-001			·CABLE ASSEMBLY	3026 / 0001	/	1
-	117	50132-001			··CABLE TIE ANCHOR	3026 / 0001	/	AR
-	120	50239-020			··CABLE TIE	3026 / 0001	/	AR
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
			@		GTX330 MODE S TRANSPONDER REQUIRES OPTIONAL RADIO RACK INSTALLATION.			

EFFECTIVITY:
All

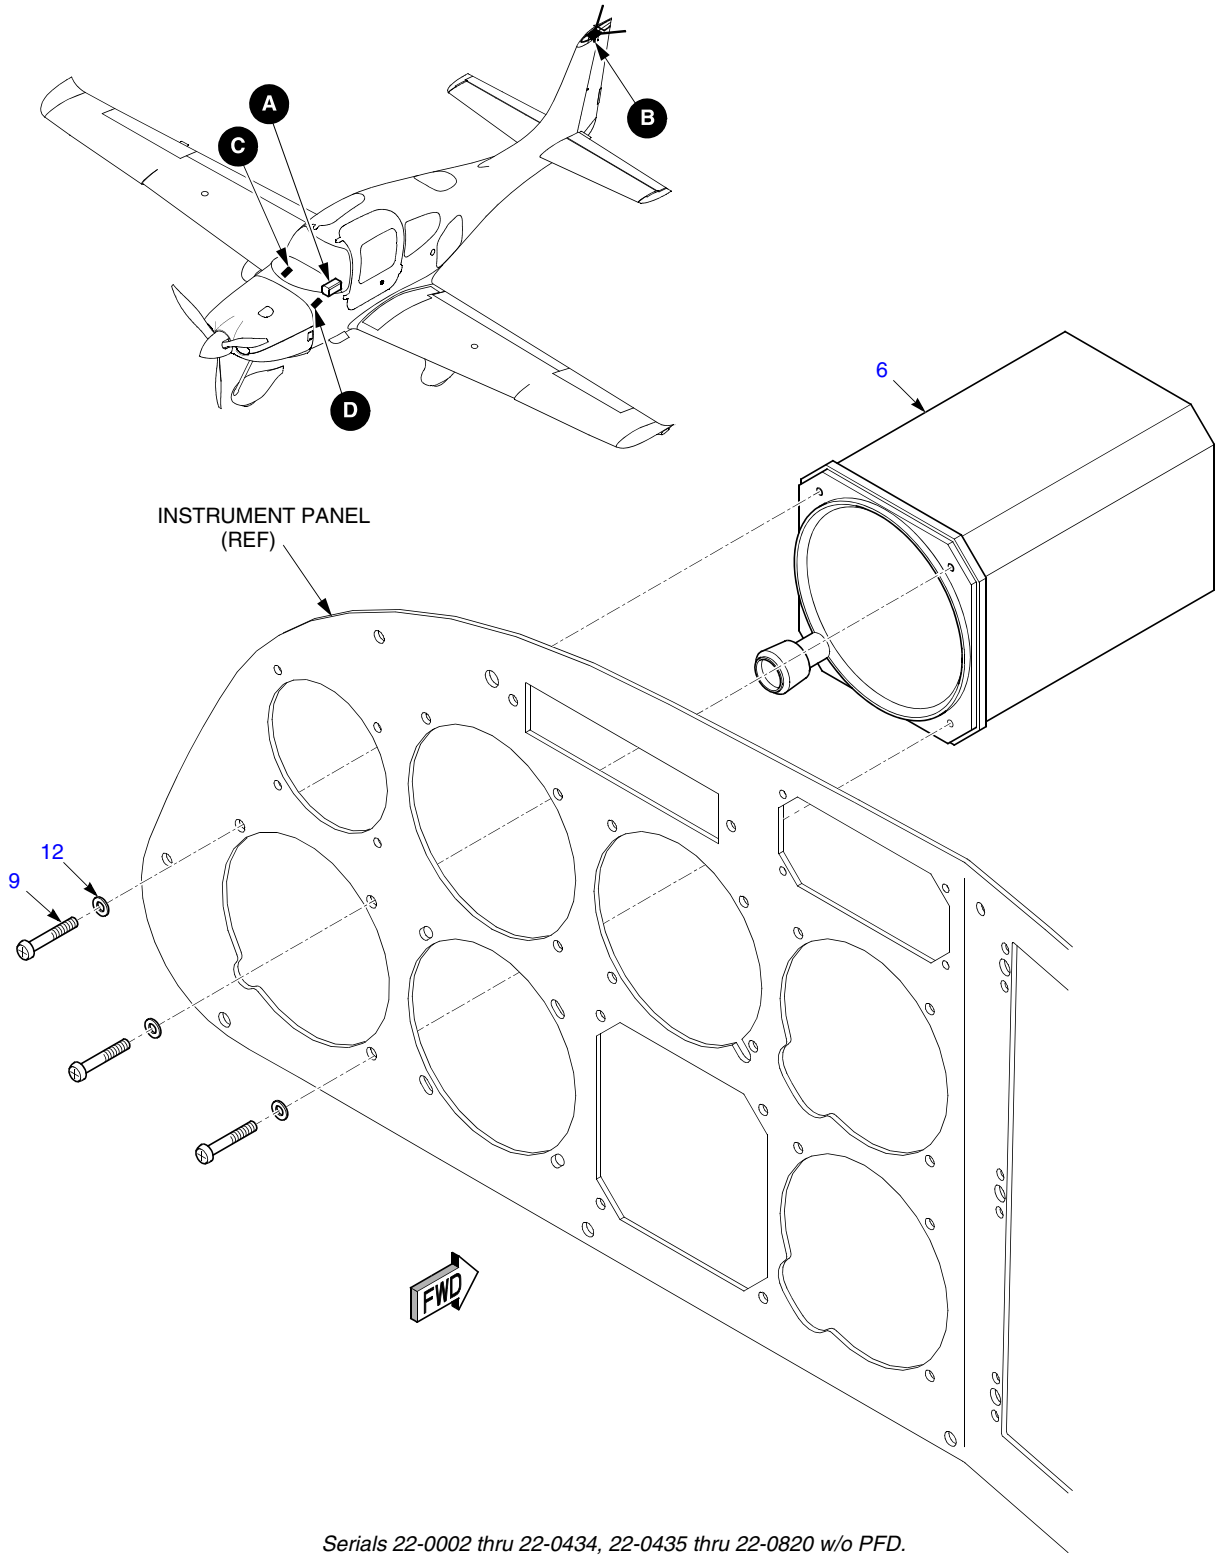

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

DETAIL A

SR22_PC34_1879

Figure-04
VOR/LOC and Antenna - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)

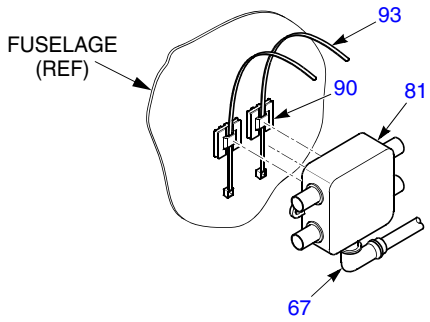

Serials 22-3026 thru 22-3854 w/ Perspective Avionics, 22T-0001 thru 22T-0324, 22T-0326.

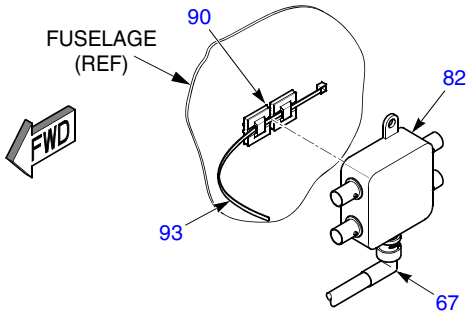

Serials 22-3855 & subs w/ Perspective Avionics, 22T-0325, 22T-0327 & subs.

DETAIL C

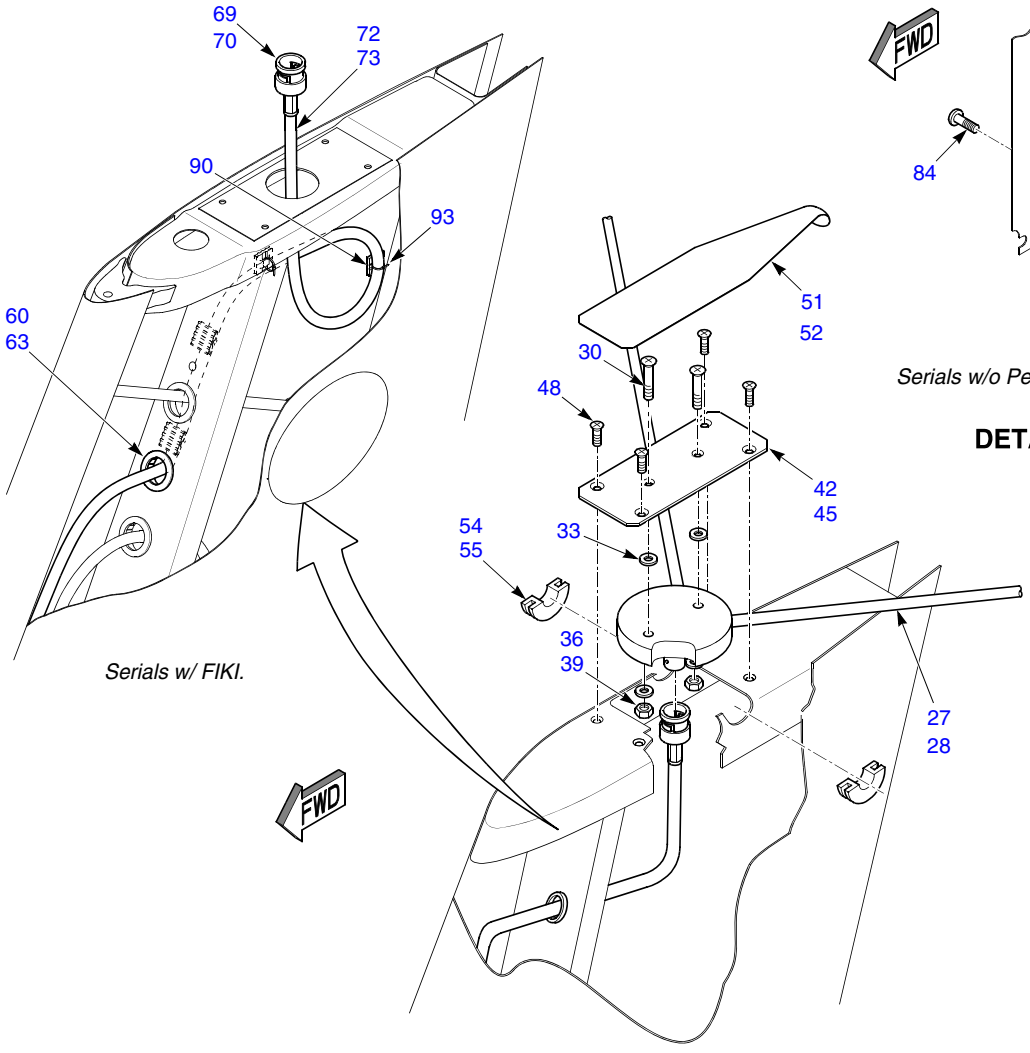

Serials w/ FIKI.

Serials w/o FIKI.

DETAIL B

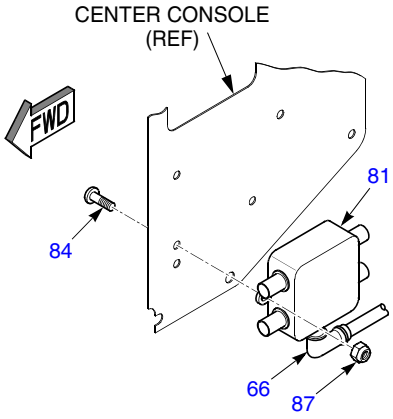

Serials w/o Perspective Avionics.

DETAIL D

SR22_PC34_1255F

Figure-04
VOR/LOC and Antenna (2 of 2)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04	**		VOR/LOC AND ANTENNA INSTALLATION	0002 / 0001	/	NP
-	3	11847-002			COURSE DEVIATION INDICATOR INSTALL (OPTION A)	0002	0820	NP
	6	12723-102			·COURSE DEVIATION INDICATOR (GI102A)	0002	0820	1
	9	50834-014		A	·CAP SCREW	0002	0820	3
	12	50813-001		A	·WASHER	0002	0820	3
-	15	11847-003			COURSE DEVIATION INDICATOR INSTALL (OPTION B)	0002	0820	NP
-	18	12723-152			·COURSE DEVIATION INDICATOR (GI106A)	0002	0820	1
-	21	50834-014		A	·CAP SCREW	0002	0820	3
-	24	50813-001		A	·WASHER	0002	0820	3
	27	12742-001			·VOR/LOC ANTENNA	0002 / 0001	3854 / 0326	1
					ALTERNATE FOR P/N 29592-001			
	28	29592-001			·VOR/LOC ANTENNA	3855 / 0327	/	1
					ALTERNATE FOR P/N 12742-001			
	30	MS24694S13		A	·SCREW	0002 / 0001	/	2
	33	NAS1149FN832P		A	·WASHER	0002 / 0001	/	4
	36	MS21083N08		A	·LOCKNUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS20364-832A			
	39	MS20364-832A		A	·LOCKNUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21083N08			
	42	12562-003			·MOUNTING PLATE	0002	0820	1
	45	20110-001			·MOUNTING PLATE	0821 / 0001	/	1
	48	MS24694S50		A	·SCREW	0002 / 0001	/	4
	51	50379-002			·TAPE, TIN PLATED COPPER, (4")	0002 / 0001	/	AR
					ALTERNATE FOR P/N 54506-001			
	52	54506-001			·TAPE, ALUMINUM, CONDUCTIVE ADHESIVE	0002 / 0001	/	AR
					ALTERNATE FOR P/N 50379-002			
	54	MS35489-135			·GROMMET	0002	3025	2
					FOR SPARES USE P/N MS35489-20			
	55	MS35489-20			·GROMMET	3026 / 0001	/	2
-	57	MS35489-149			·GROMMET	0002	0820	1
	60	50145-601			·BUSHING	0821 / 0001	/	1
					ALTERNATE FOR P/N 51050-100			
	63	51050-100			·BUSHING	0821 / 0001	/	1
					ALTERNATE FOR P/N 50145-601			
	66	50465-001	#		·CONNECTOR, RIGHT ANGLE	0002		1
	67	51300-002	@		·CONNECTOR, RIGHT ANGLE	3026 / 0001	/	1
	69	50285-001	#		·CONNECTOR, STRAIGHT	0002		1
	70	51300-001	@		·CONNECTOR, STRAIGHT	3026 / 0001	/	1
	72	50713-001	#		·COAXIAL CABLE	0002		AR
	73	50713-002	@		·COAXIAL CABLE	3026 / 0001	/	AR
-	75	50132-001		A	·CABLE ANCHORS	0002 / 0001	/	AR
-	78	50239-020		A	·CABLE TIES	0002 / 0001	/	AR
	81	50365-002			·DUAL DIPLEXER-ANTENNA VOR/GLIDE SLOPE	0002 / 0001	3854 / 0326	1
	82	29592-050			·DUAL DIPLEXER-ANTENNA VOR/GLIDE SLOPE	3855 / 0327	/	1
	84	MS35207-263	#	A	·SCREW	0002		2
	87	MS21044N3	#	A	·NUT	0002		2
	90	50132-001	@	A	·CABLE ANCHORS	3026 / 0001	/	2
	93	50239-020	@	A	·CABLE TIES	3026 / 0001	/	2

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					1) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22T-0325; REFER TO 22T-0327 FOR PART IDENTIFICATION.			
			#		INSTALLED ON AIRCRAFT W/O PERSPECTIVE AVIONICS.			
			@		INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.			

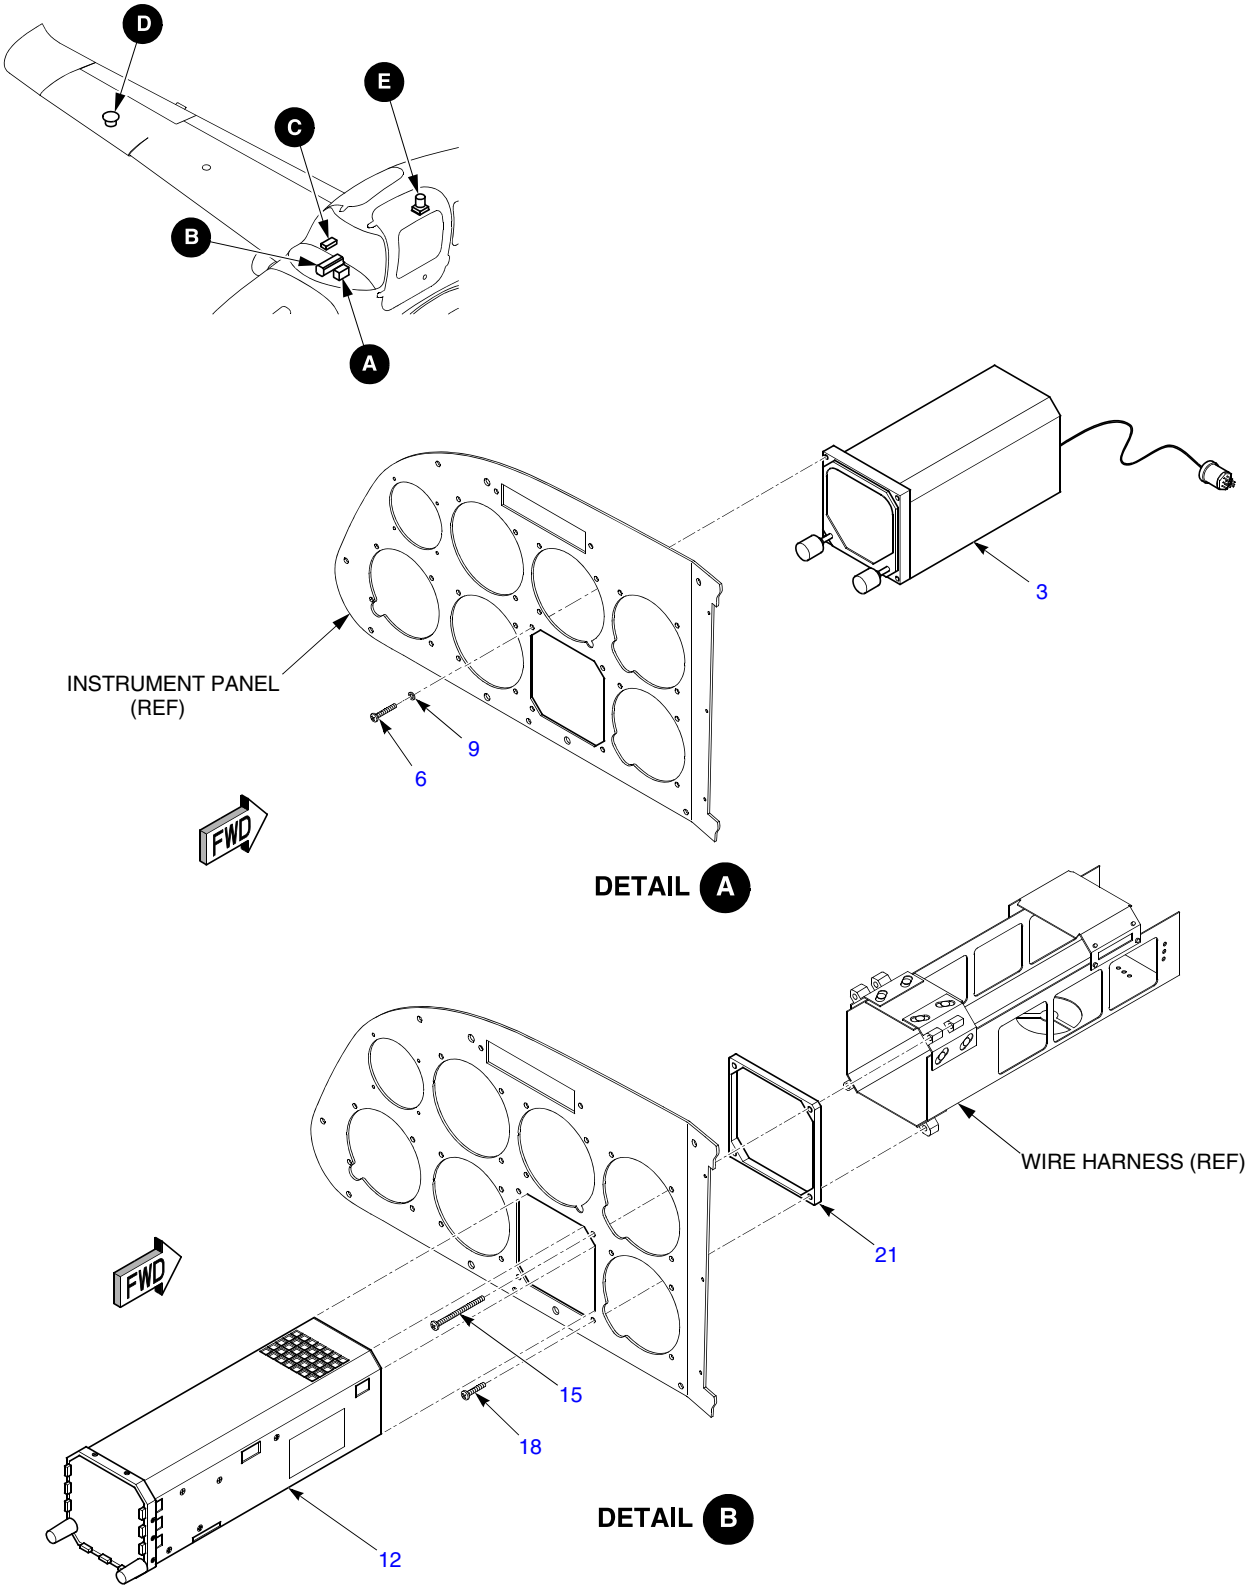

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

SR22_PC34_1399A

Figure-05

HSI - Serials 22-0002 thru 22-0820 w/o PFD (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

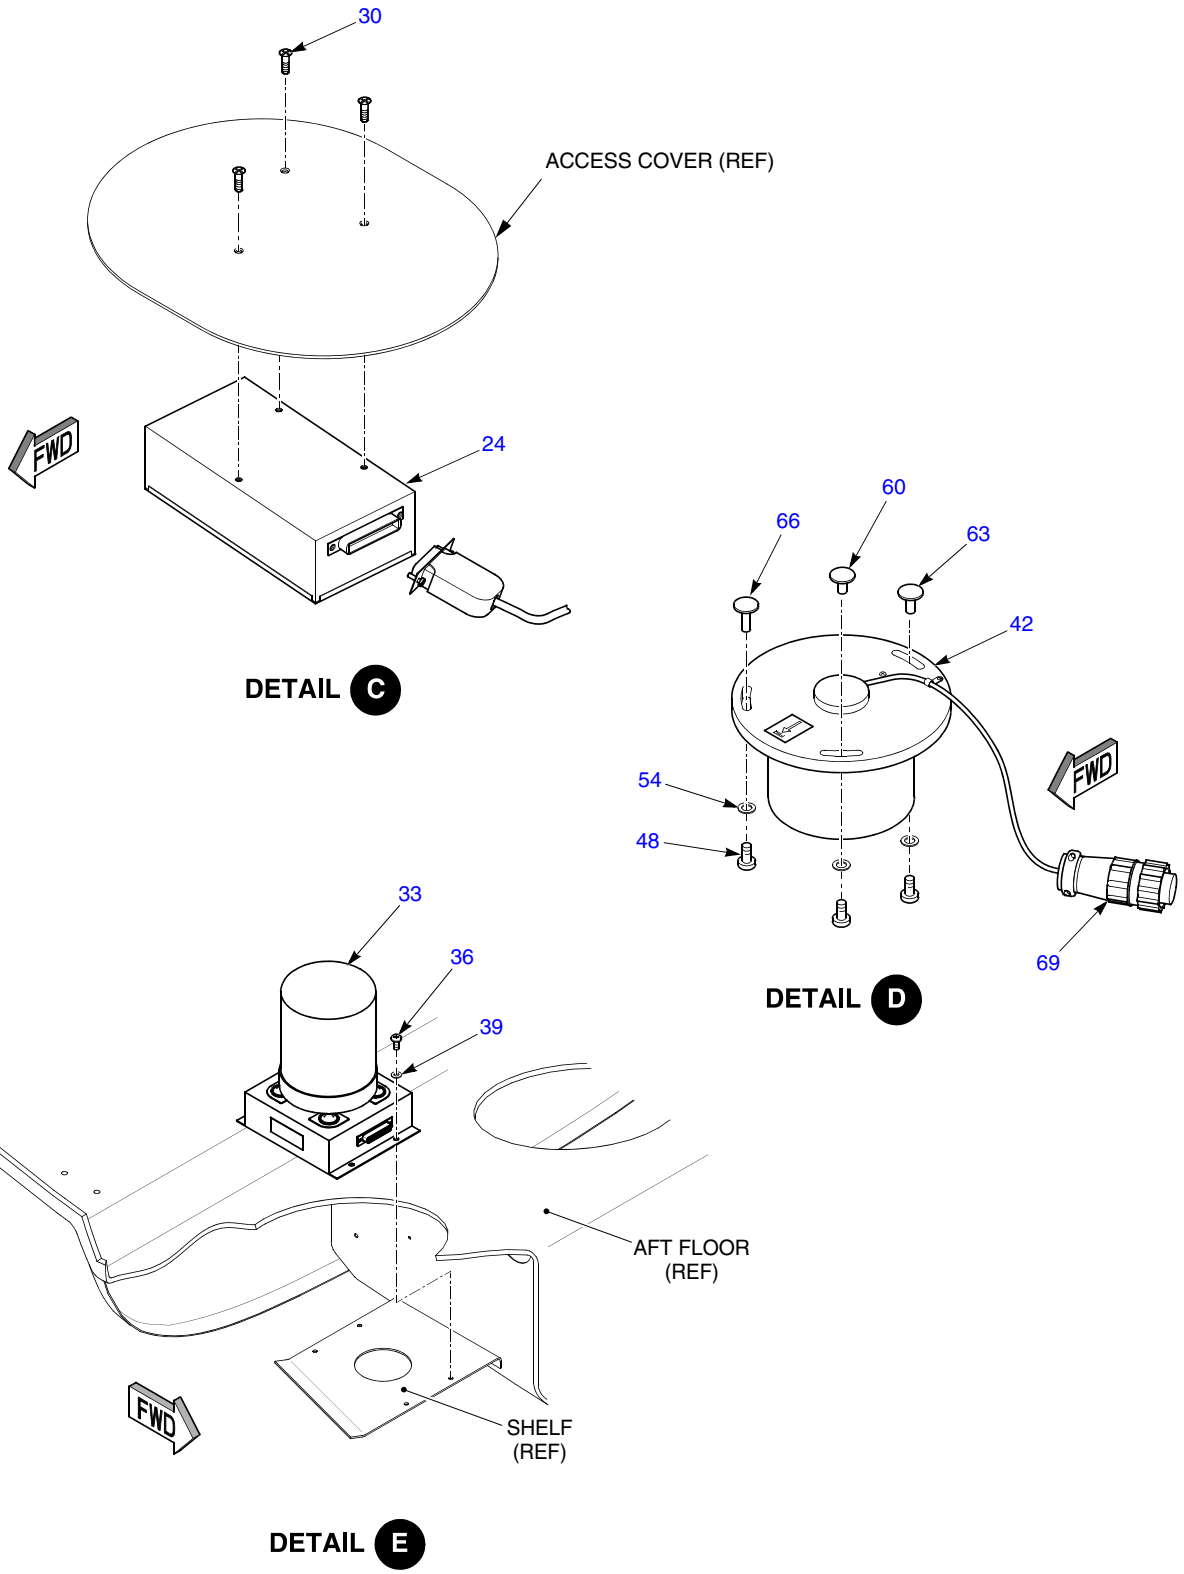

Serials 22-0002 thru 22-0434, 22-0435 thru 22-0820 w/o PFD.

SR22_PC34_1400A

Figure-05

HSI - Serials 22-0002 thru 22-0820 w/o PFD (2 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/o PFD

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05			HSI	0002	0820	NP
	3	12734-151			·HSI, NSD-1000	0002	0820	1
	6	50834-010		A	·SCREW	0002	0820	4
	9	50813-001		A	·WASHER	0002	0820	4
	12	14356-001			·HSI, SANDEL, ELECTRONIC	0002	0820	1
	15	50835-032		A	·BUTTON HEAD CAP SCREW	0002	0820	2
	18	50835-012		A	·BUTTON HEAD CAP SCREW	0002	0820	2
	21	14356-101			··FLUSH MOUNT KIT	0002	0820	1
	24	12734-111			·GYRO SLAVING AMPLIFIER	0002	0820	1
-	27	12734-112			·GYRO SLAVING AMPLIFIER (W/ STORMSCOPE)	0002	0820	1
	30	MS24693-S29		A	·SCREW	0002	0820	3
	33	14357-001			·REMOTE GYRO	0002	0820	1
	36	MS27039-1-06		A	·SCREW	0002	0820	4
	39	NAS1149F0316P		A	·WASHER	0002	0820	4
	42	14358-001			·FLUX DETECTOR	0002	0398	1
-	45	14358-002			·FLUX DETECTOR	0399	0429	1
	48	MS35214-25		A	·SCREW	0002	0398	3
						0430	0820	
-	51	MS35214-25		A	·SCREW	0399	0429	9
	54	NAS1149BN632H		A	·WASHER	0002	0398	3
						0430	0820	
-	57	NAS1149BN632H		A	·WASHER	0399	0429	9
	60	50757-006		A	·STANDOFF	0002	0820	1
	63	50757-007		A	·STANDOFF	0002	0820	1
	66	50757-008		A	·STANDOFF	0002	0820	1
	69	50274-001			··RECEPTACLE, 9 SOCKET, CIRCULAR	0002	0820	1
-	72	51252-001			·STANDOFF, 1/4" HEX, #6-32 X 1.5	"0399	0429	3
-	75	15351-001			·ADAPTER PLATE	0399	0429	1

Intentionally Left Blank

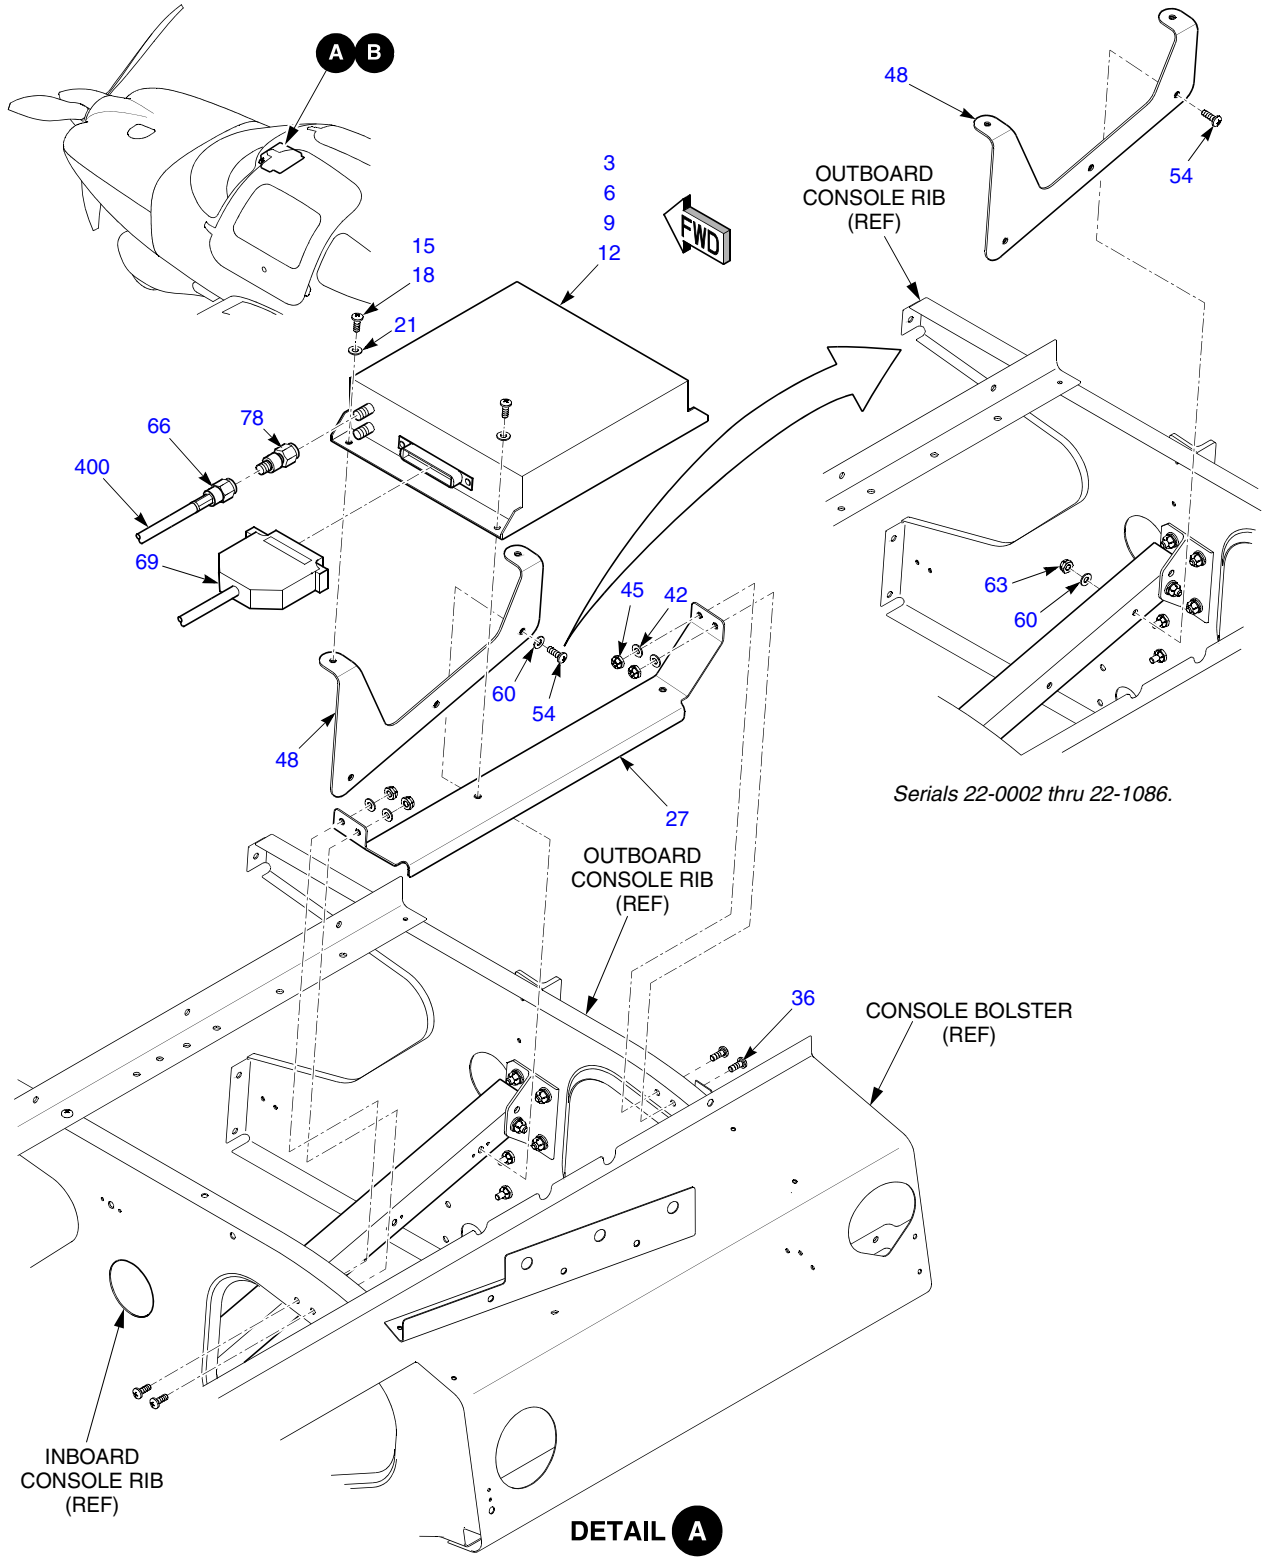

Serials 22-0002 thru 22-1086.

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

SR22_PC34_1443B

Figure-06

XM Radio/Weather - Serials 22-0002 thru 22-1862 (1 of 5)

EFFECTIVITY:
Serials 22-0002 thru 22-1862

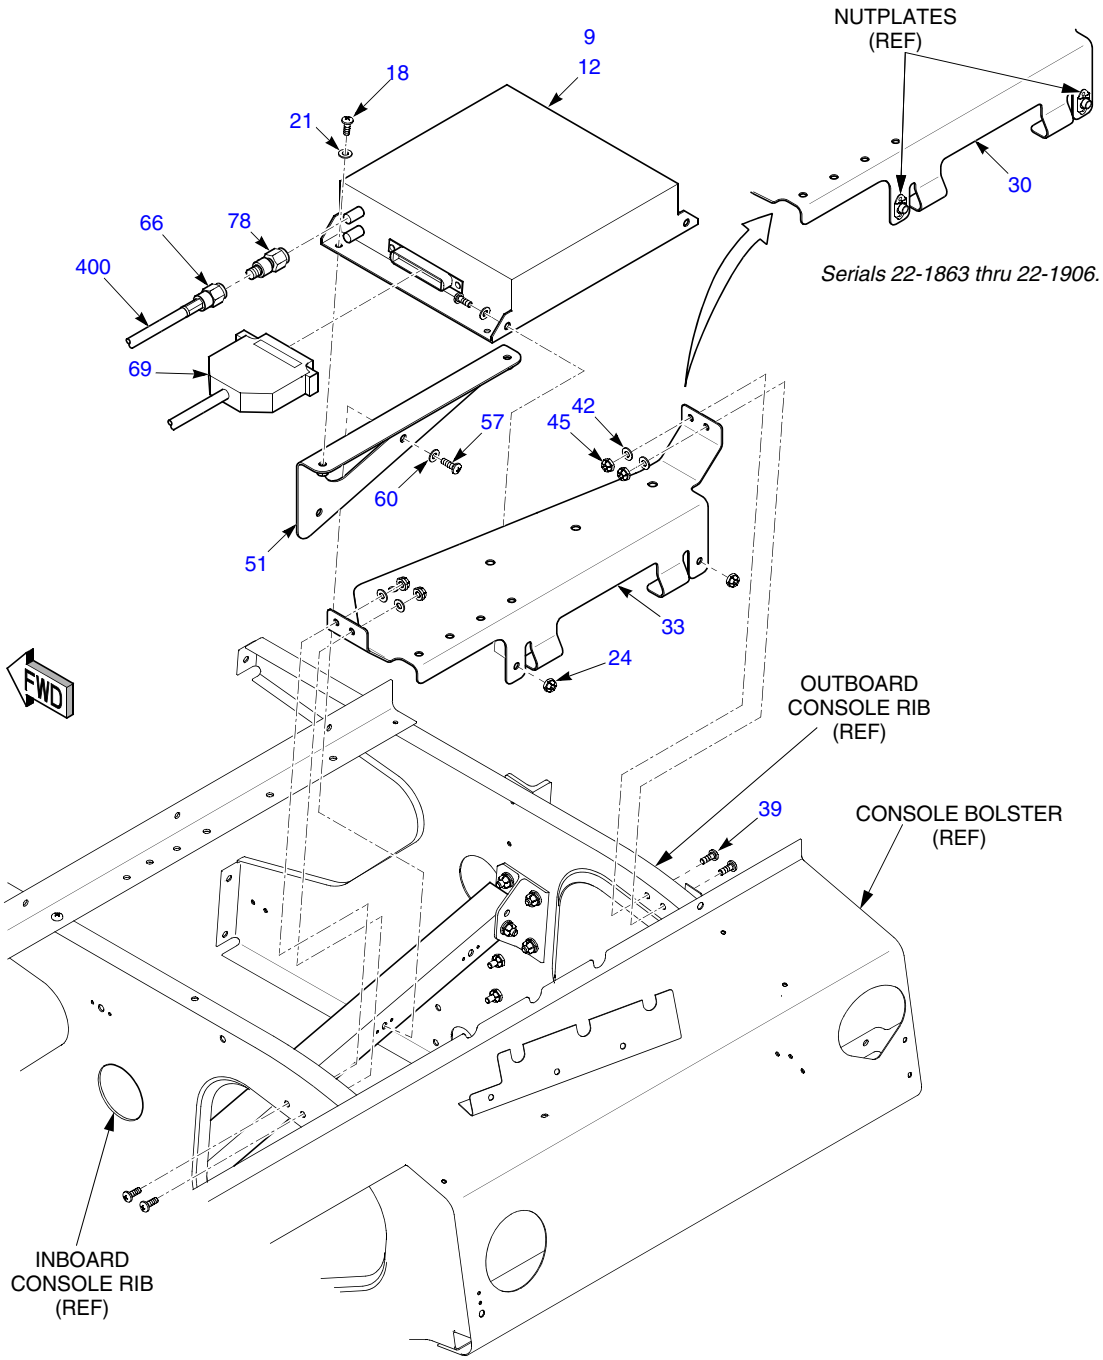

DETAIL B

Serials 22-1602, 22-1821, 22-1840, 22-1863 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC34_1551B

Figure-06

XM Radio/Weather - Serials 22-1863 thru 22-2437 (2 of 5)

EFFECTIVITY:
Serials 22-1863 thru 22-2437

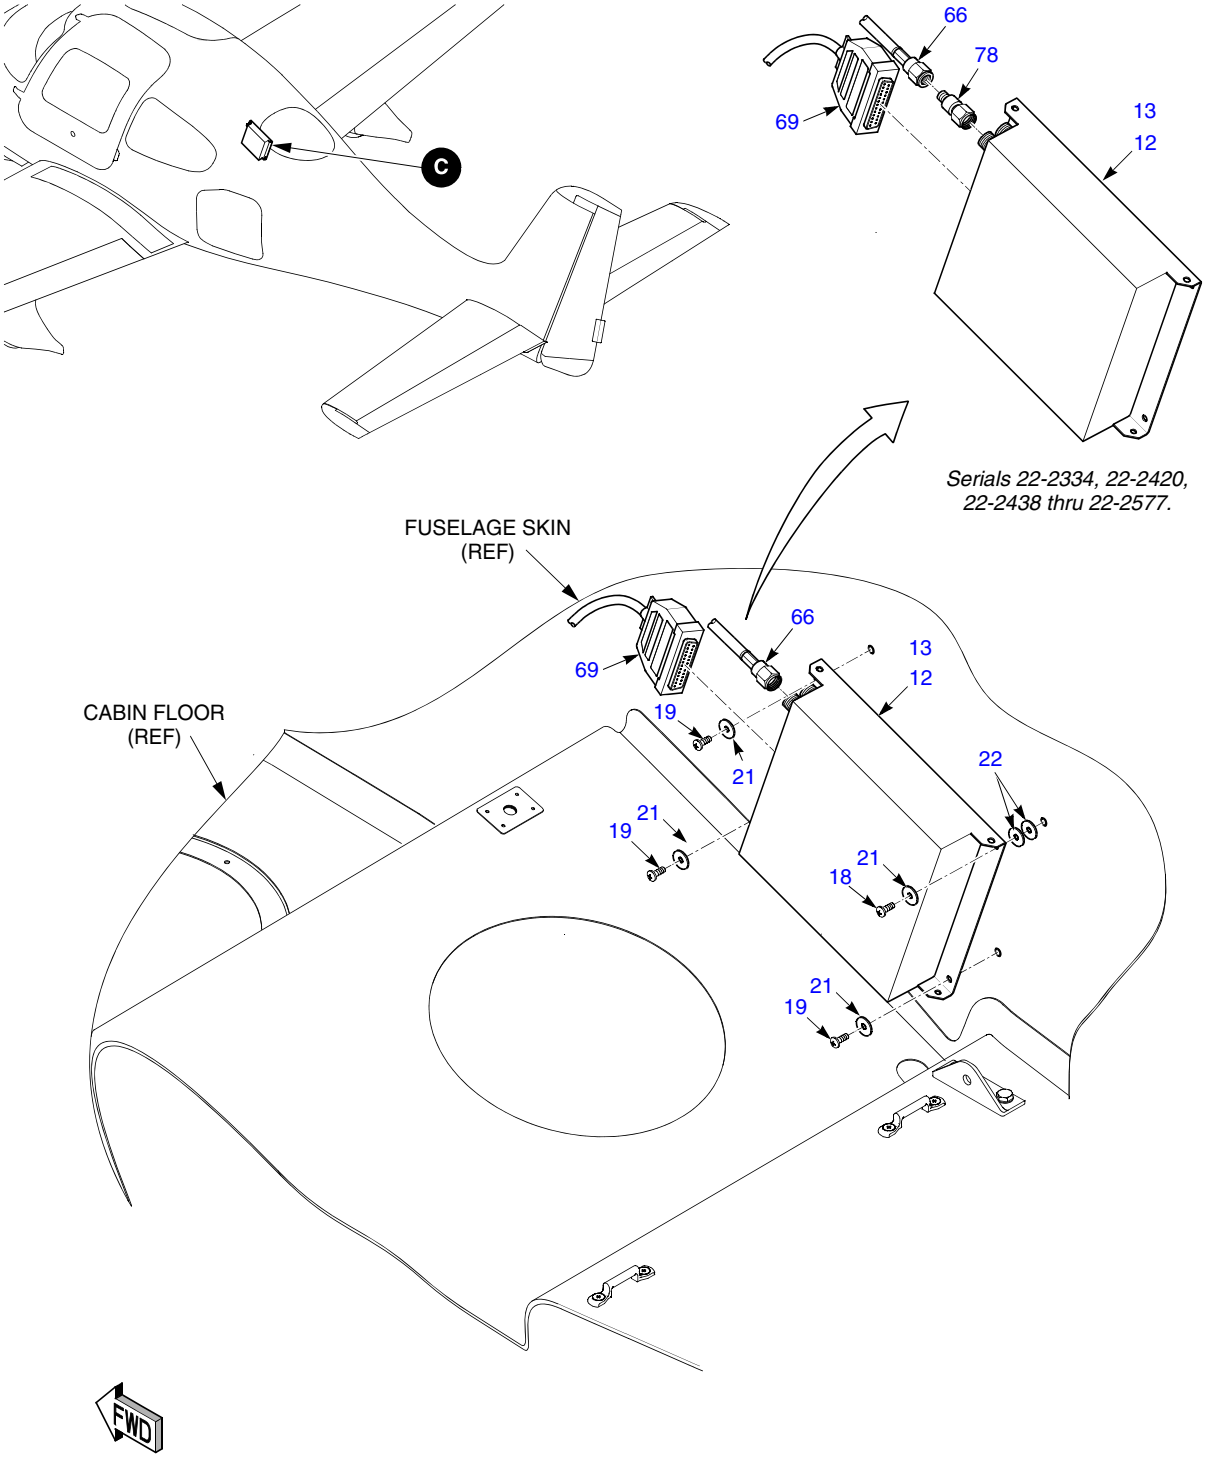

DETAIL C

Serials 22-2334, 22-2420, 22-2438 & subs w/o Perspective Avionics.

SR22_PC34_1679B

Figure-06

XM Radio/Weather - Serials 22-2438 & subs w/o Perspective (3 of 5)

EFFECTIVITY:
Serials 22-2438 & subs w/o Perspective

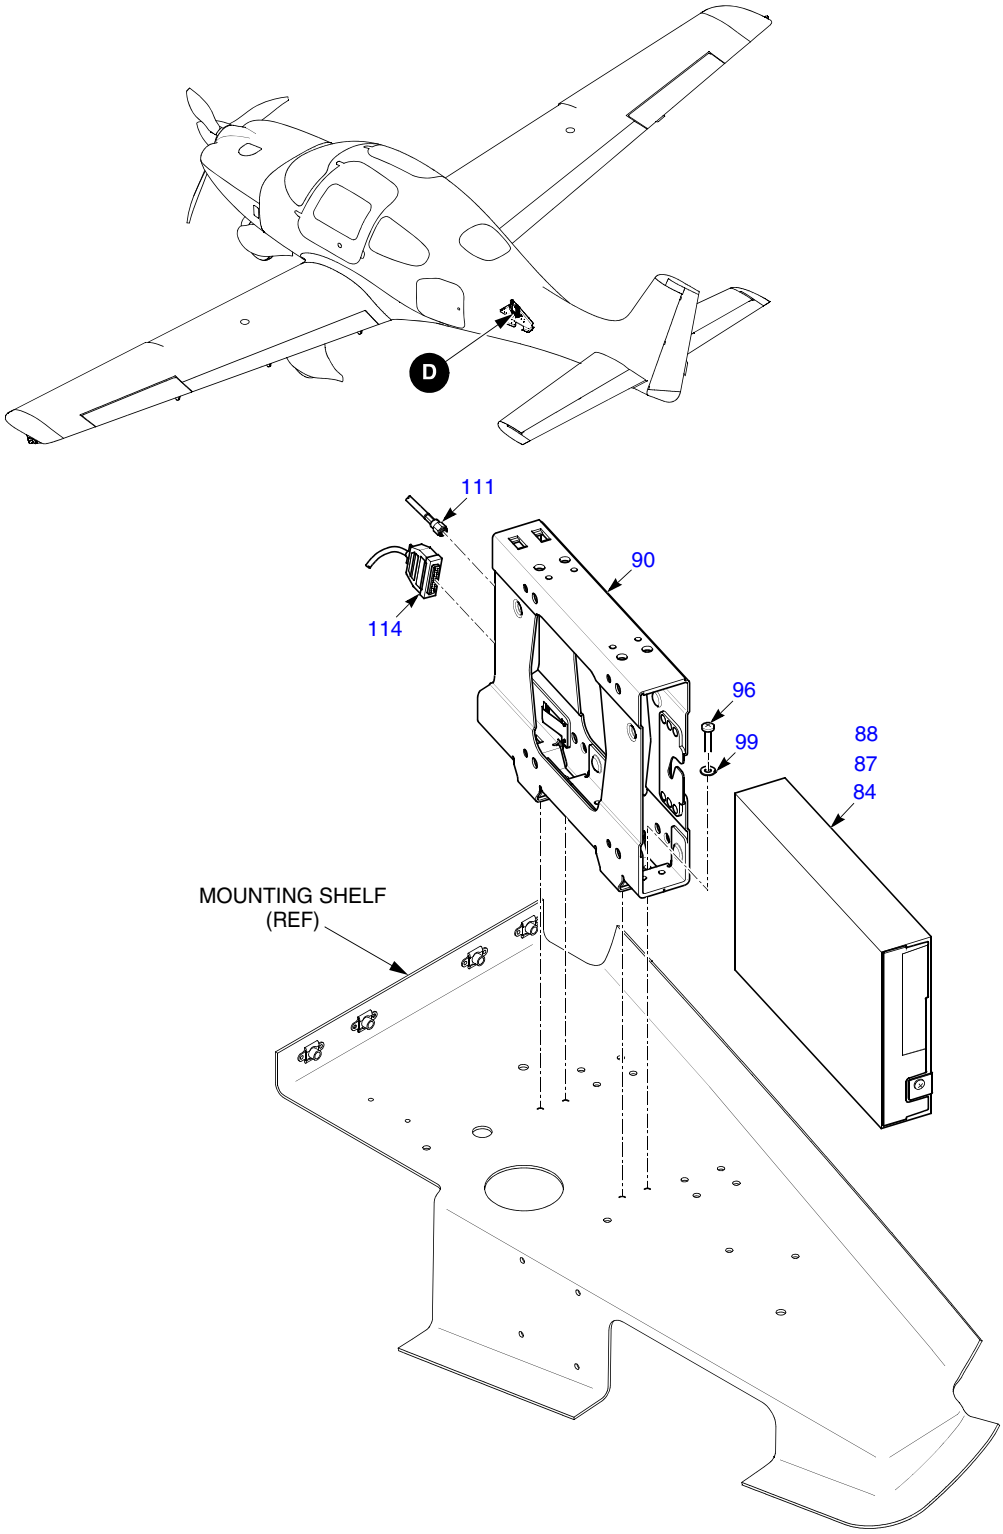

DETAIL D

Serials w/ Perspective Avionics.

SR22_PC34_1850

Figure-06
XM Radio/Weather - Serials w/ Perspective (4 of 5)

EFFECTIVITY:
Serials w/ Perspective

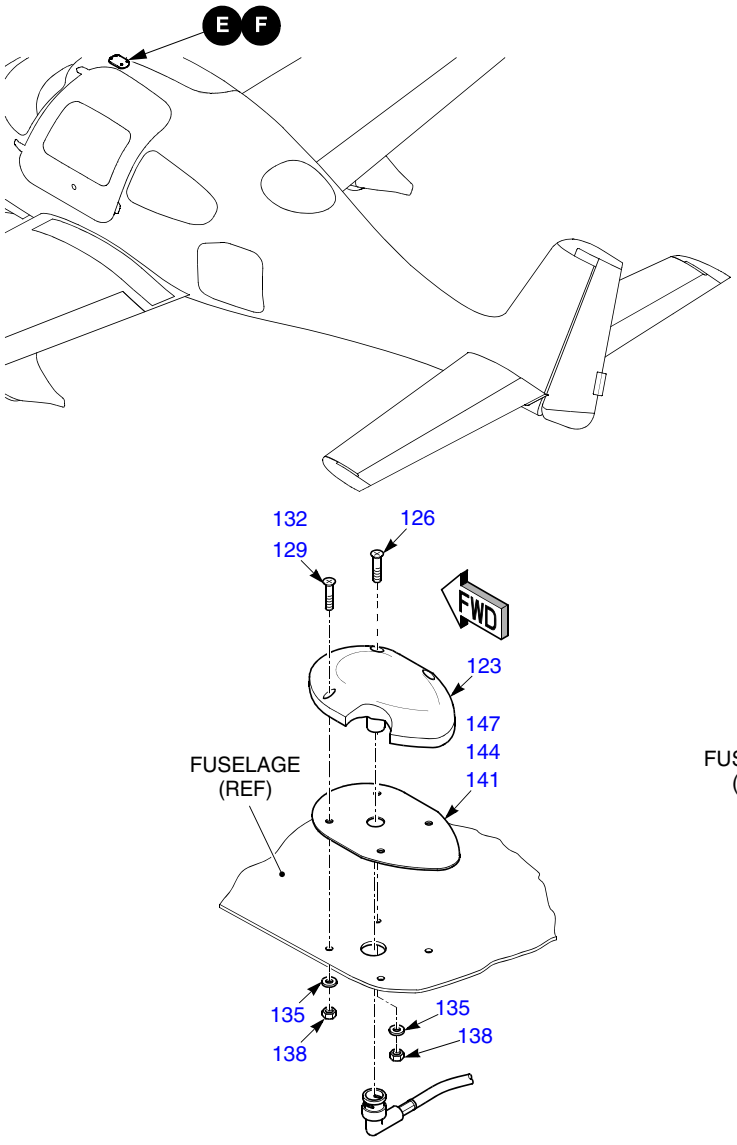

DETAIL E

Serials 22-0002 thru 22-2559, 22-2561 thru 22-2577 after SB 2X-34-06 w/ standalone XM antenna in kit, Serials 22-1644 thru 22-2559, 22-2561 thru 22-2577 w/ factory XM Weather.

DETAIL F

Serials 22-0002 thru 22-0820 after SB 2X-34-23, Serials 22-0435 thru 22-2559, 22-2561 thru 22-2577 after SB 2X-34-24, Serials 22-2560, 22-2578 & subs, 22T-0001 & subs w/ WAAS GPS/XM.

SR22_PC34_1680C

Figure-06
XM Radio/Weather (5 of 5)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 06	**		XM RADIO/WEATHER INSTL W/O PERSPECTIVE	0002		NP
	3	16121-001			·XM RECEIVER, WEATHER	0002	1543	1
	6	16665-001			·XM RECEIVER, RADIO/WEATHER	1544	1862	1
					AFTER SB2X-34-14	0002		
					FOR SPARES USE P/N 16665-004			
	9	16665-002			·XM RECEIVER, RADIO/WEATHER	1863	1906	1
					FOR SPARES USE P/N 16665-004			
	12	16665-003			·XM RECEIVER, RADIO/WEATHER	1907	3002	1
					FOR SPARES USE P/N 16665-004			
	13	16665-004			·XM RECEIVER, RADIO/WEATHER	3003		1
	15	MS35206-244		A	·SCREW	0002	1543	4
	18	MS35206-245		A	·SCREW	1544	2437	4
				A	·SCREW	2438		1
	19	MS35206-242		A	·SCREW	2438		3
	21	NAS1149FN832P		A	·WASHER	0002		4
	22	NAS1149F0363P		A	·WASHER	2438		2
	24	MS21083N08		A	·NUT	1907	2437	2
	27	16118-001			·BRACKET	0002	1862	1
	30	16118-003			·BRACKET	1863	1906	1
	33	16118-004			·BRACKET	1907	2437	1
	36	MS35206-244		A	·SCREW	0002	1862	4
	39	MS35206-245		A	·SCREW	1863	2437	4
	42	NAS1149FN832P		A	·WASHER	0002	2437	4
	45	MS21083N08		A	·NUT	0002	2437	4
	48	16119-001			·BRACKET	0002	1862	1
	51	16119-003			·BRACKET	1863	2437	1
	54	MS35206-244		A	·SCREW	0002	1862	3
	57	MS35206-245		A	·SCREW	1863	2437	3
	60	NAS1149FN832P		A	·WASHER	0002	2437	3
	63	MS21083N08		A	·NUT	0002	1086	3
	66	51428-001			·CONNECTOR	0002		1
	69	51424-001			·CONNECTOR	0002		1
-	72	16665-501			·XM RADIO REMOTE CONTROL	1544	1965	1
					FOR SPARES USE P/N 16665-502			
-	75	16665-502			·XM RADIO REMOTE CONTROL	1966		1
					AFTER SB2X-34-14	0002		
	78	60619-4			·ATTENUATOR	2215	2577	1
					BEFORE SB2X-34-06			
-	79	51589-001			·ATTENUATOR	0002	2214	1
					AFTER SB2X-34-06			
-	81	NO PRT NUMBER			XM RADIO/WEATHER INSTALL W/ PERSPECTIVE	3026 / 0001	/	NP
	84	24657-001			·XM RECEIVER W/ WEATHER	3026 / 0001	/	1
	87	24657-002			·XM RECEIVER W/ RADIO/WEATHER	3026 / 0001	4299 / 1232	1
	88	24657-003	#		·XM RECEIVER W/ RADIO/WEATHER	4300 / 1233	/	1
					ALTERNATE FOR P/N 24657-002			
	90	24657-101			·RACK, REMOTE MOUNT	3026 / 0001	/	1
-	93	24657-102			·BACK PLATE ASSEMBLY	3026 / 0001	/	1
	96	MS27039-0809		A	·SCREW	3026 / 0001	/	4
	99	NAS1149FN832P		A	·WASHER	3026 / 0001	/	4
	111	TMS195-1			·CONNECTOR	3026 / 0001	/	1
	114	24657-201			·CONNECTOR	3026 / 0001	/	1
-	117	24641-001			·XM RADIO REMOTE CONTROL	3026 / 0001	/	1
-	120	NO PRT NUMBER	@		XM ANTENNA & COAX INSTALLATION	1644 / 0001	/	NP

EFFECTIVITY:
All

NO ITEM PIC	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
				AFTER SB2X-34-06 W/ STANDALONE	0002	2577	
				XM ANTENNA			
123	16127-002			·ANTENNA, XM SATELLITE	1644	2577	1
126	MS27039-0814		A	·SCREW	1644	2577	2
129	MS27039-0819		A	·SCREW	1644	2437	2
132	NASM27039-0817		A	·SCREW	2438	2577	2
135	AN970-3		A	·WASHER	1644	2577	4
138	MS21044N08		A	·NUT	1644	2577	4
141	16970-101			·GASKET	1644	2437	1
				ALTERNATE FOR P/N 18612-101			
144	18612-101			·GASKET	1644	2437	1
				ALTERNATE FOR P/N 16970-101			
147	17468-101			·GASKET	2438	2577	1
150	12744-005			·ANTENNA, WAAS GPS/XM	2578 / 0001	3894 / 0410	1
151	12744-003			·ANTENNA, WAAS GPS/XM	3895 / 0411	/	1
153	51952-138		A	·SCREW	2578 / 0001	3894 / 0410	4
154	53695-138		A	·SCREW	3895 / 0411	/	4
156	AN970-3		A	·WASHER	2578 / 0001	/	4
159	MS21083N08		A	·NUT	2578 / 0001	3894 / 0410	4
160	MS21083N3		A	·NUT	3895 / 0411	/	4
162	18513-101			·GASKET W/O PERSPECTIVE AVIONICS	2578		1
165	24742-101			·GASKET W/ PERSPECTIVE AVIONICS	3026 / 0001	3894 / 0410	1
168	24742-111			·GASKET W/ PERSPECTIVE AVIONICS	3895 / 0411	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PART IDENTIFICATION.

2) SERIAL NUMBER 22-2334, 22-2420; REFER TO SERIAL 22-2438 FOR PART IDENTIFICATION.

3) SERIAL NUMBER 22-2560; REFER TO SERIAL 22-2578 FOR PART IDENTIFICATION.

4) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.

@ FACTORY INSTALL. FOR COM 1 / XM ANTENNA INSTALL, RF 34-50-02 DET

REQUIRES PERSPECTIVE AVIONICS SYSTEM SOFTWARE 0764.25 OR LATER

Intentionally Left Blank

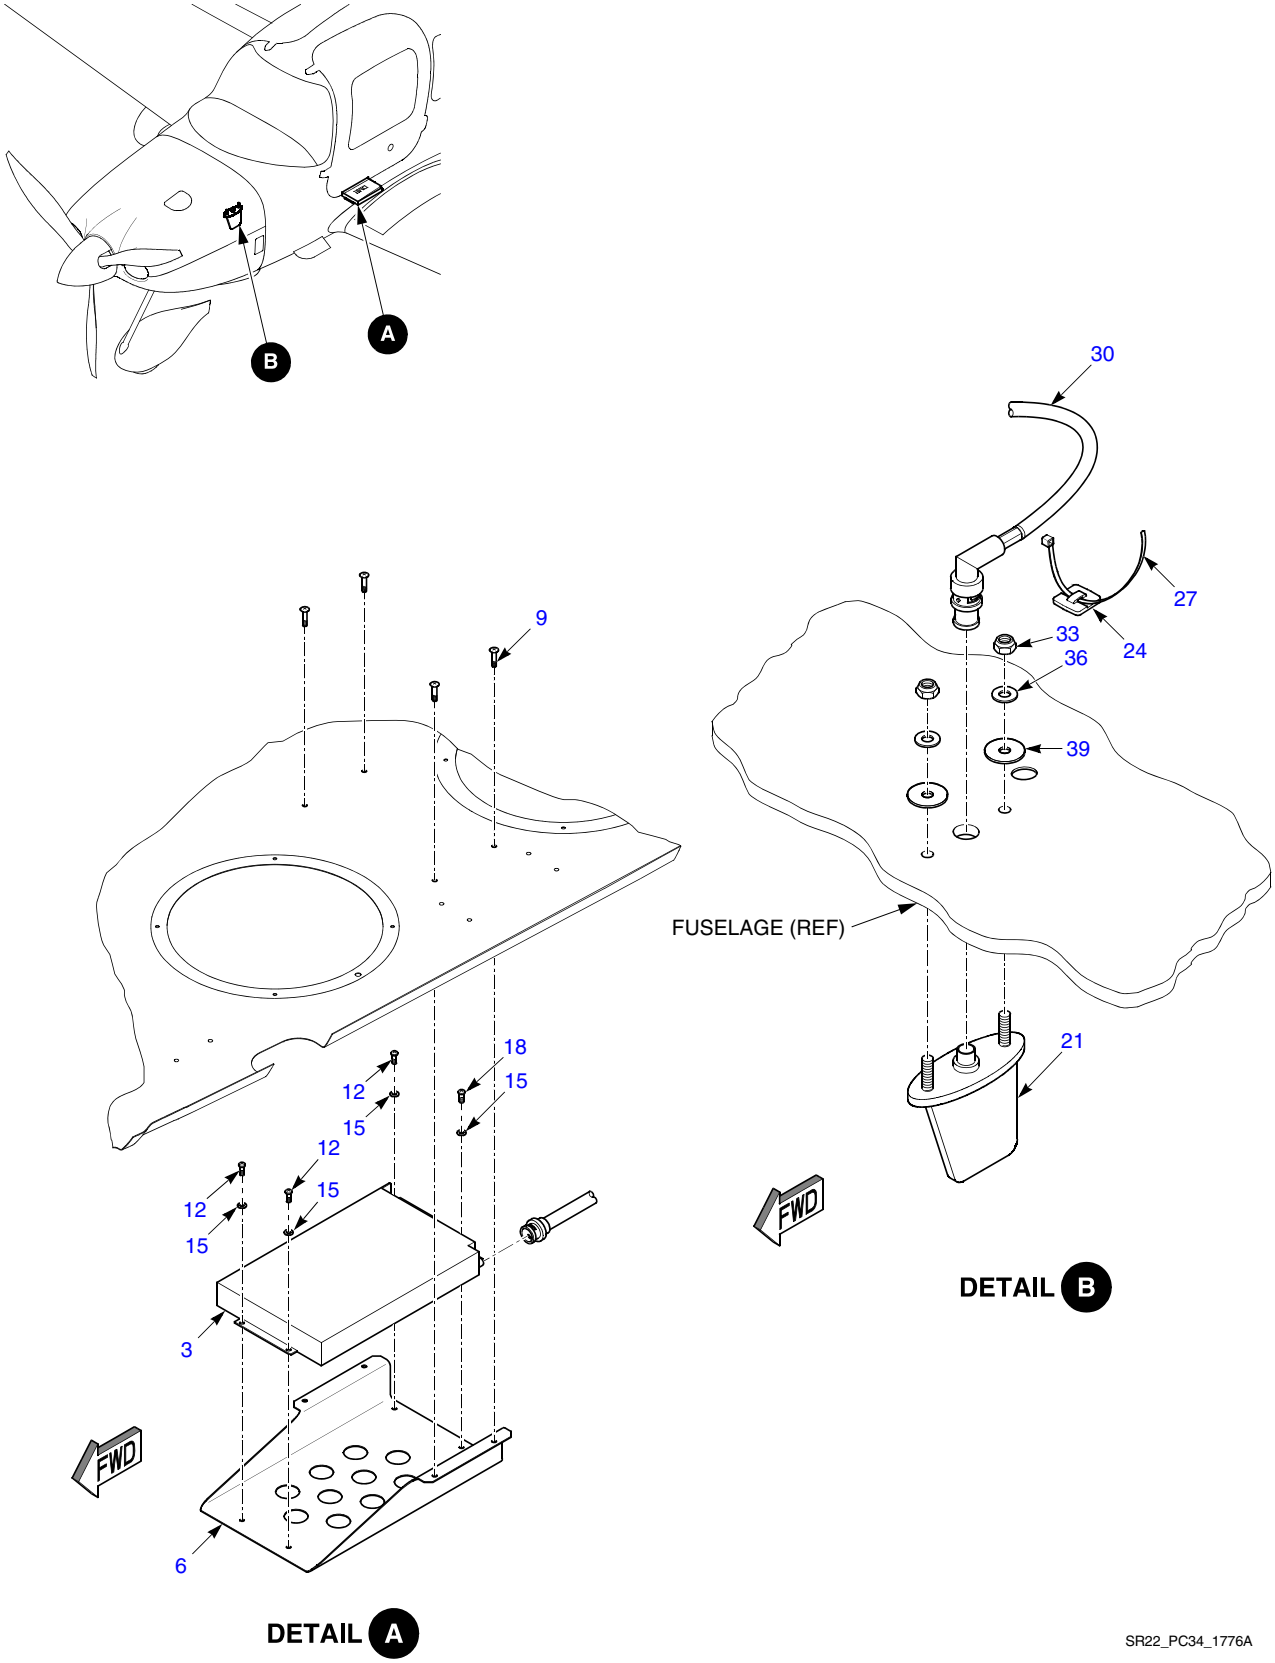

Figure-07
DME - Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 07	**		DME INSTALLATION	3026 / 0001	/	NP
	3	24658-001			·KN 63, DME	3026 / 0001	/	1
	6	19223-001			·SHELF	3026 / 0001	/	1
	9	MS24694S55		A	·SCREW	3026 / 0001	/	4
	12	MS27039-0807		A	·SCREW	3026 / 0001	/	3
	15	NAS1149FN832P		A	·WASHER	3026 / 0001	/	4
	18	MS27039-0808		A	·SCREW	3026 / 0001	/	1
	21	24658-100			·ANTENNA	3026 / 0001	/	1
	24	50132-001			·CABLE TIE ANCHOR	3026 / 0001	/	AR
	27	50239-020			·CABLE TIE	3026 / 0001	/	AR
	30	24732-001			·ANTENNA CABLE	3026 / 0001	/	1
	33	PRT OF ITM 21		A	·NUT	3026 / 0001	/	2
	36	PRT OF ITM 21		A	·WASHER	3026 / 0001	/	2
	39	AN970-3		A	·WASHER	3026 / 0001	/	2
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

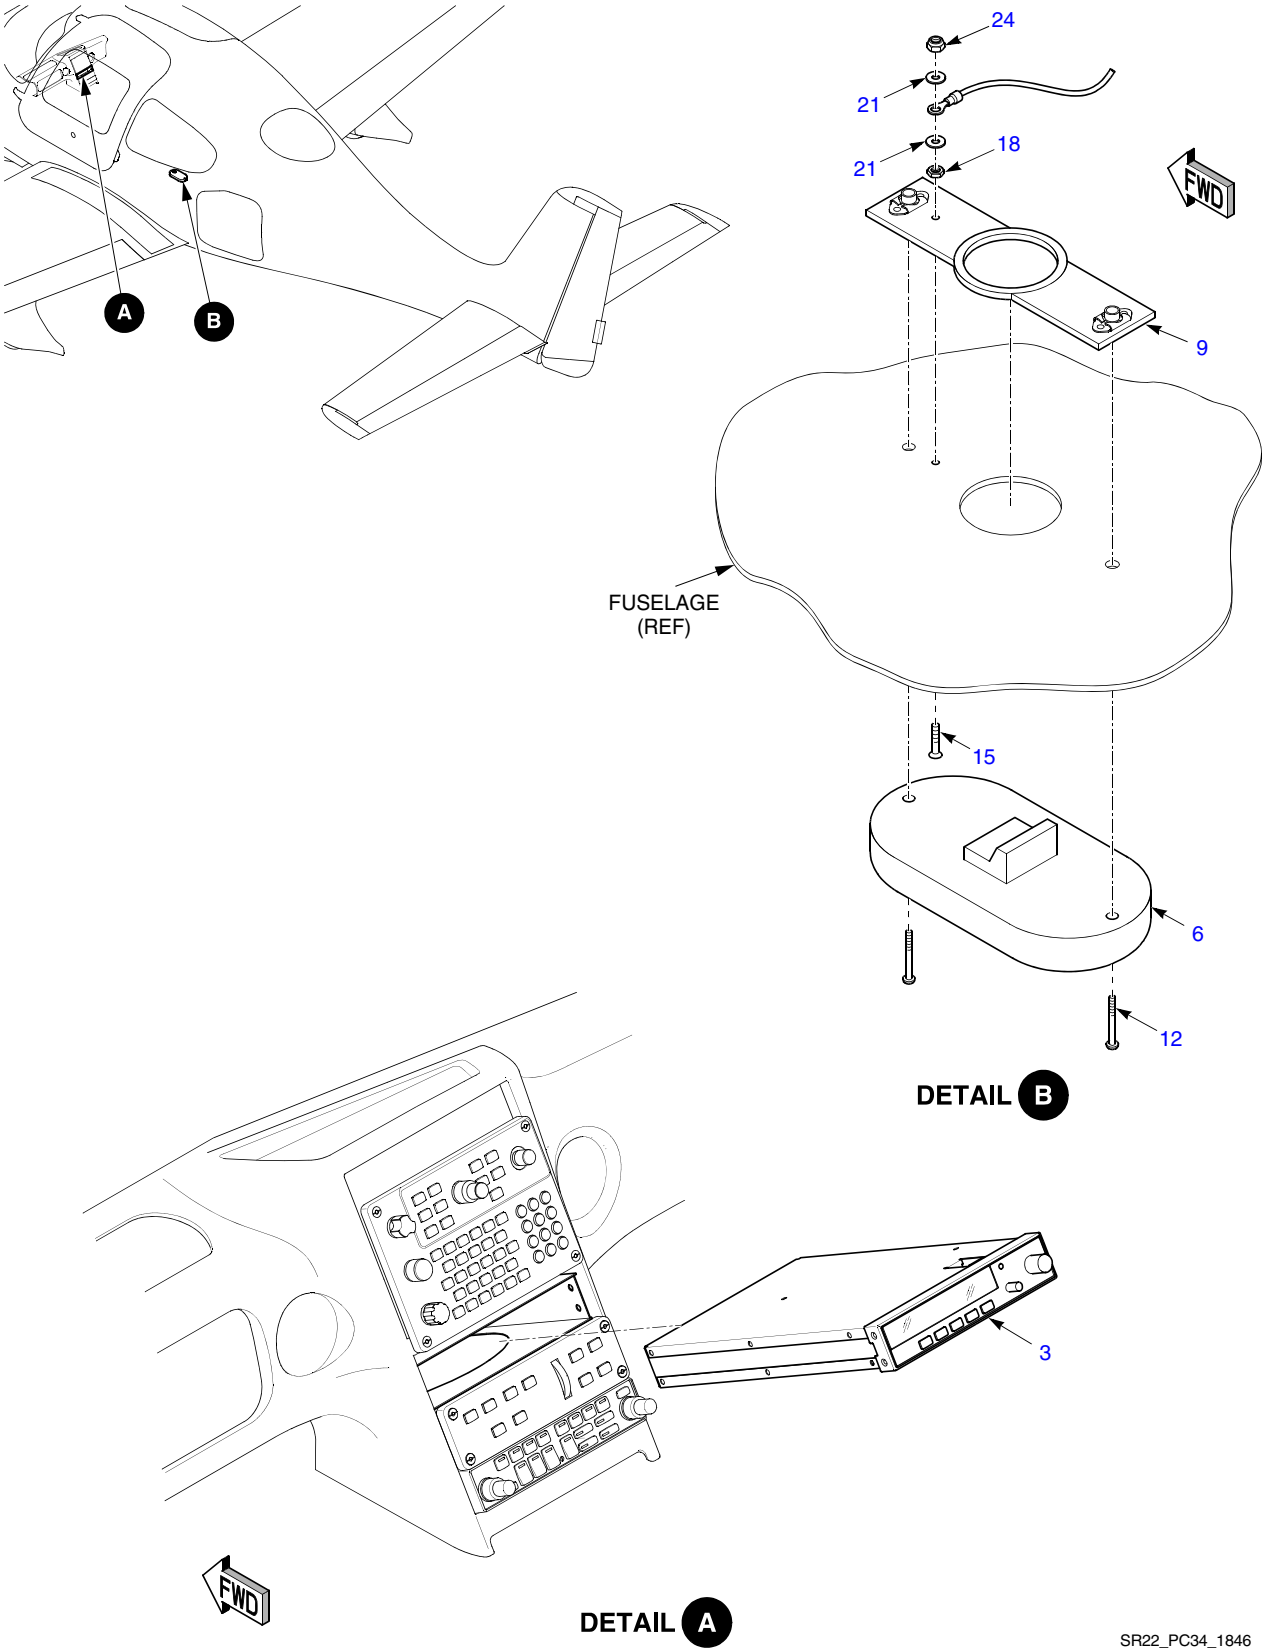

Figure-08
ADF - Serials w/ Perspective

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 08	**		AUTOMATIC DIRECTION FINDER	3026 / 0001	/	NP
	3	24659-001			·KR 87 ADF RECEIVER	3026 / 0001	/	1
	6	24659-100			·KA 44B ADF ANTENNA	3026 / 0001	/	1
	9	24659-101			·KR 87 MOUNTING RACK	3026 / 0001	/	1
	12	PRT OF ITM 6			·SCREW	3026 / 0001	/	2
	15	MS24693-S58			·SCREW	3026 / 0001	/	1
	18	MS35649-282			·NUT	3026 / 0001	/	1
	21	NAS1149FN832P			·WASHER	3026 / 0001	/	2
	24	MS21044N08			·NUT	3026 / 0001	/	1
-	27	24716-001			·ANTENNA CABLE	3026 / 0001	/	1
-	30	50132-001		A	·CABLE ANCHORS	3026 / 0001	/	AR
-	33	50239-020		A	·CABLE TIES	3026 / 0001	/	AR
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

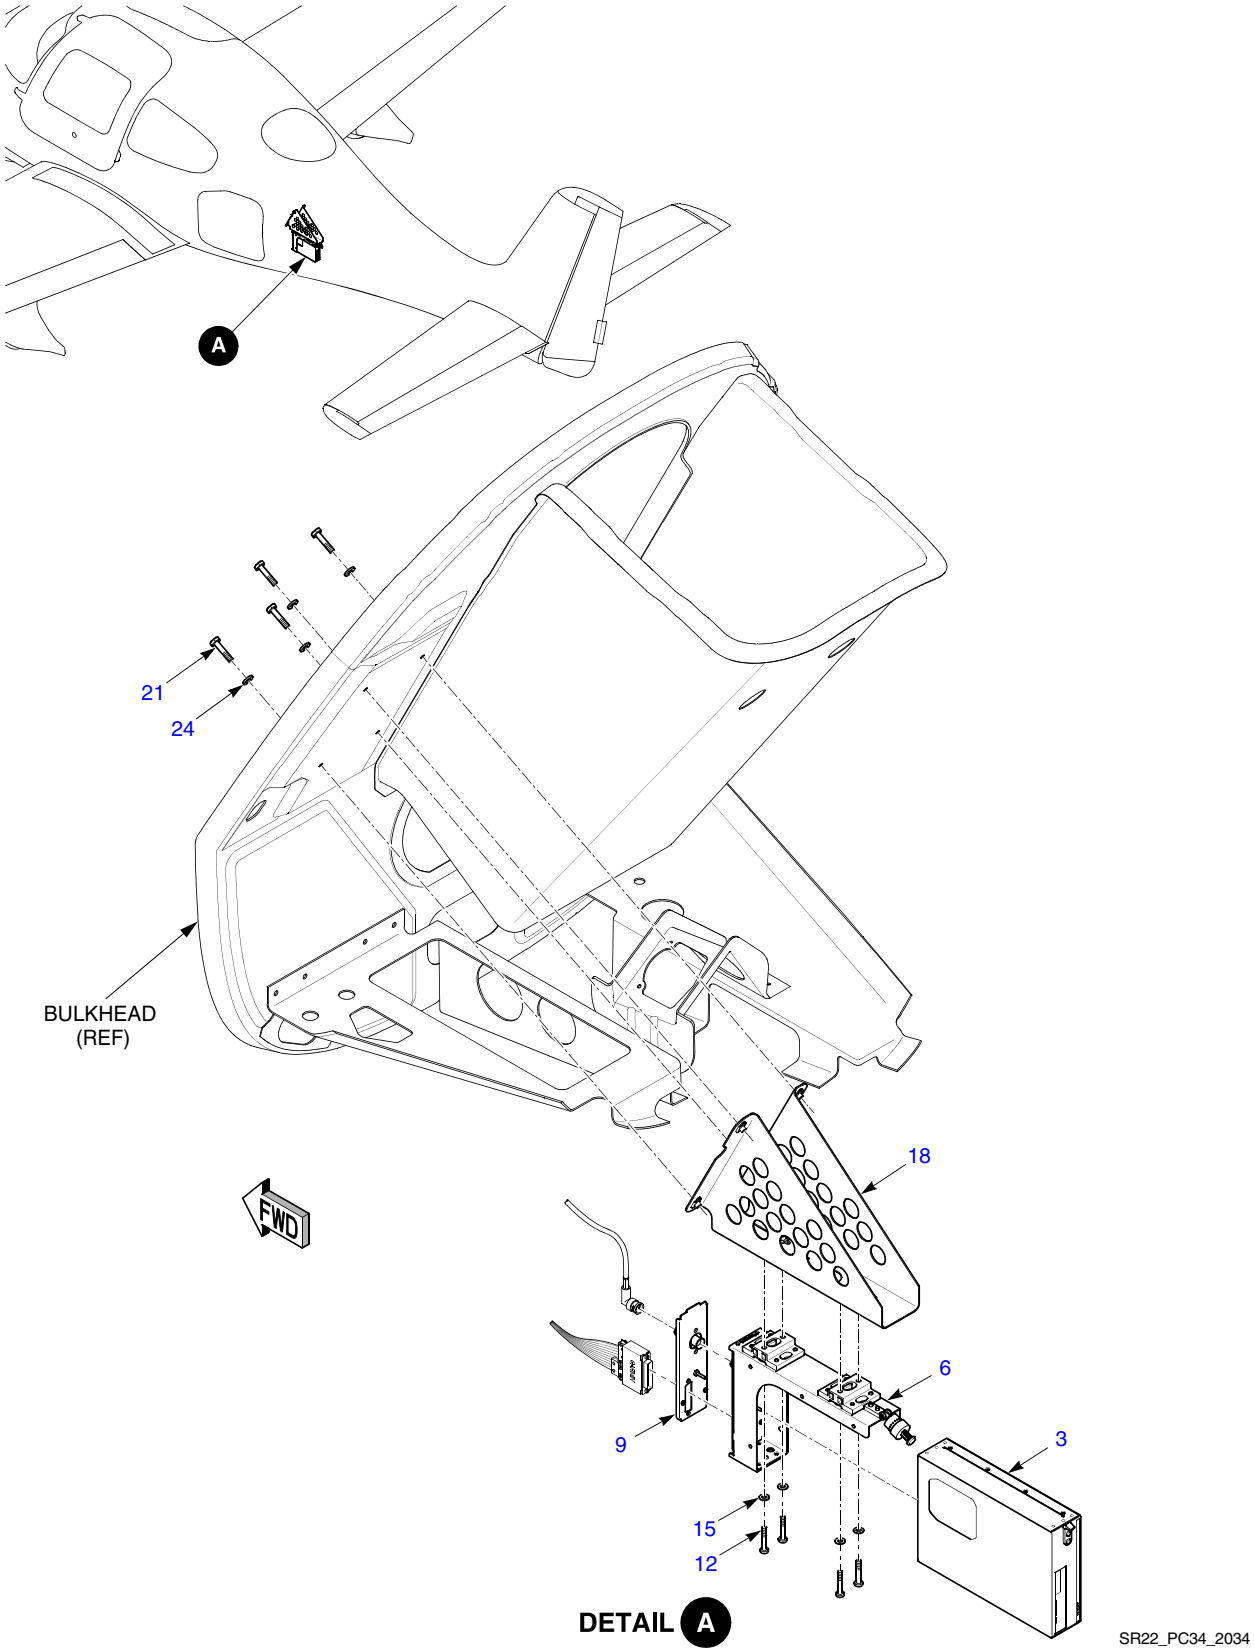

Figure-09
Iridium Weather System - Serials 22-3828 & subs, 22T-0268 & subs

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 09	**		IRIDIUM WEATHER SYSTEM INSTALLATION	3828 / 0268	/	NP
	3	29307-001			·GSR 56 TRANSCEIVER	3828 / 0268	/	1
	6	29307-101			·GSR 56 MOUNTING RACK	3828 / 0268	/	1
	9	29307-102			·GSR 56 MOUNTING RACK PLATE	3828 / 0268	/	1
	12	MS27039-816		A	·SCREW	3828 / 0268	/	4
	15	NAS1149FN832P		A	·WASHER	3828 / 0268	/	4
	18	26733-002			·GRS 56 MOUNTING SHELF	3828 / 0268	/	1
	21	AN3-7A		A	·BOLT	3828 / 0268	/	4
	24	NAS1149D0363K		A	·WASHER	3828 / 0268	/	4
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0251; REFER TO 22T-0268 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

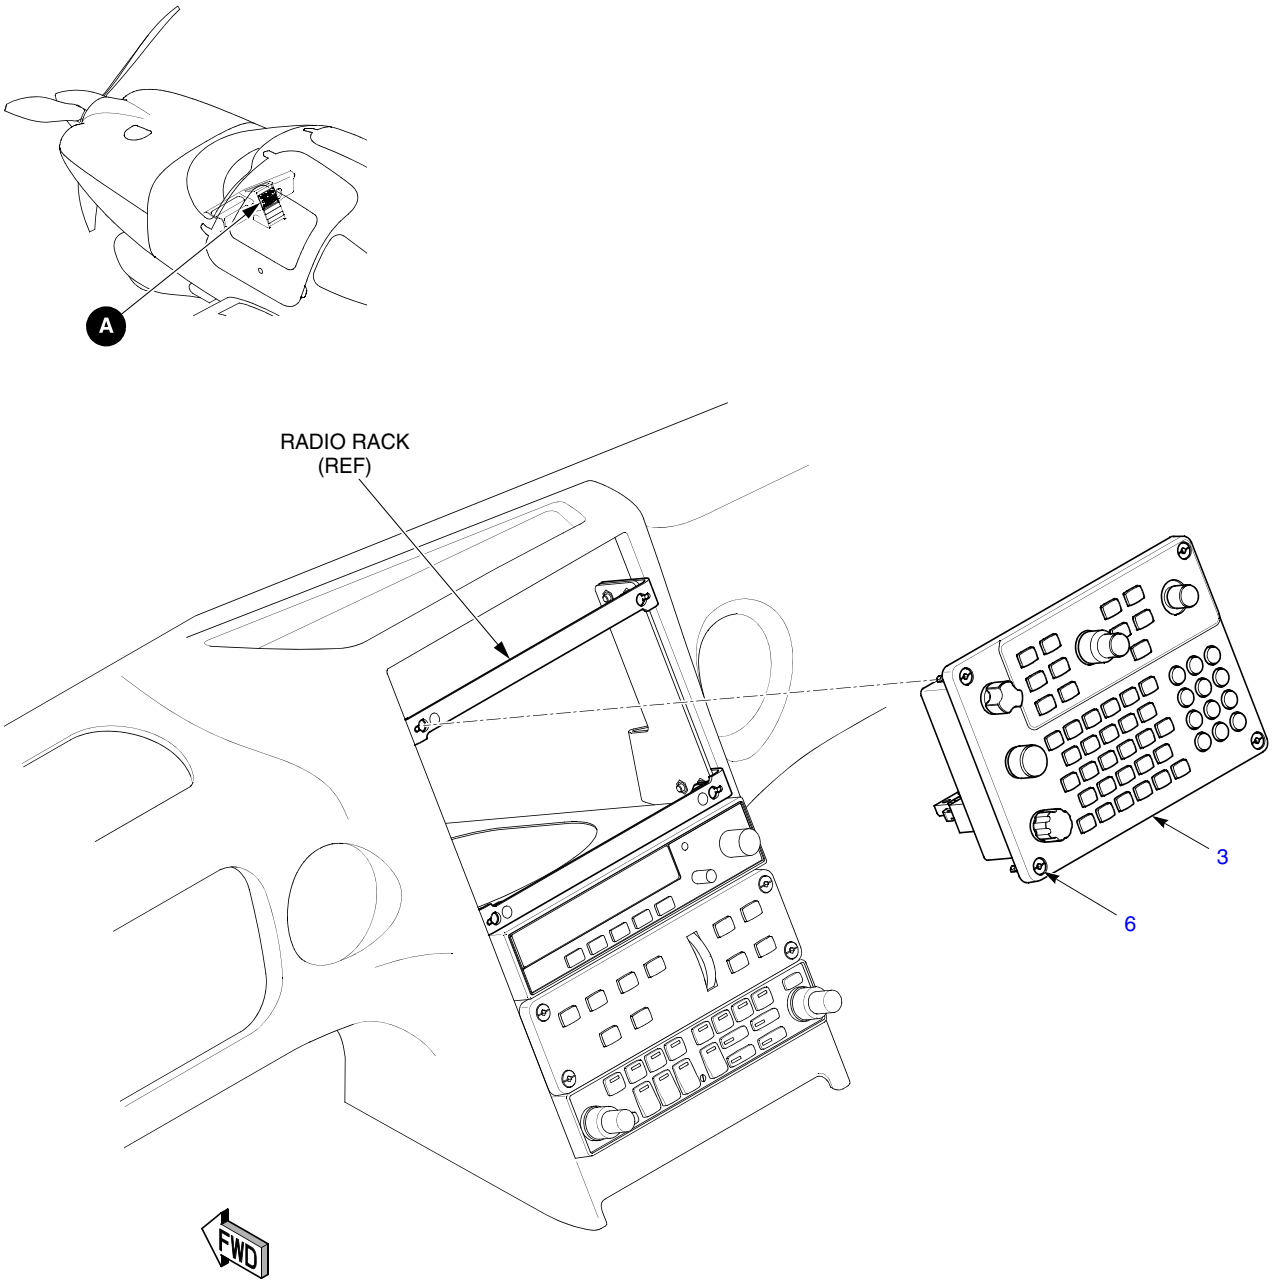

DETAIL A

SR22_PC34_1784

Figure-01
FMS Keyboard - Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FMS KEYBOARD	3026 / 0001	/	NP
	3	24654-002			·GCU 478 FMS KEYBOARD	3026 / 0001	/	1
	6	PRT OF ITM 3		A	·JACK SCREW	3026 / 0001	/	4
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICA-TION.			

EFFECTIVITY:
All

CHAPTER 51

STANDARD PRACTICES: STRUCTURES

Intentionally Left Blank

CHAPTER 51 - STANDARD PRACTICES

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
51-LOEP	1	15 DEC 2014
51-LOEP	2	15 DEC 2014
51-TOC	1	15 DEC 2014
51-TOC	2	15 DEC 2014
51-80-01	1	15 DEC 2014
51-80-01	2	15 DEC 2014
51-80-01	3	15 DEC 2014
51-80-01	4	15 DEC 2014

Intentionally Left Blank

CHAPTER 51 - STANDARD PRACTICES

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Lightning Protection, Wing - Serials 22-2438 & subs, 22T-0001 & subs	51-80-01

Intentionally Left Blank

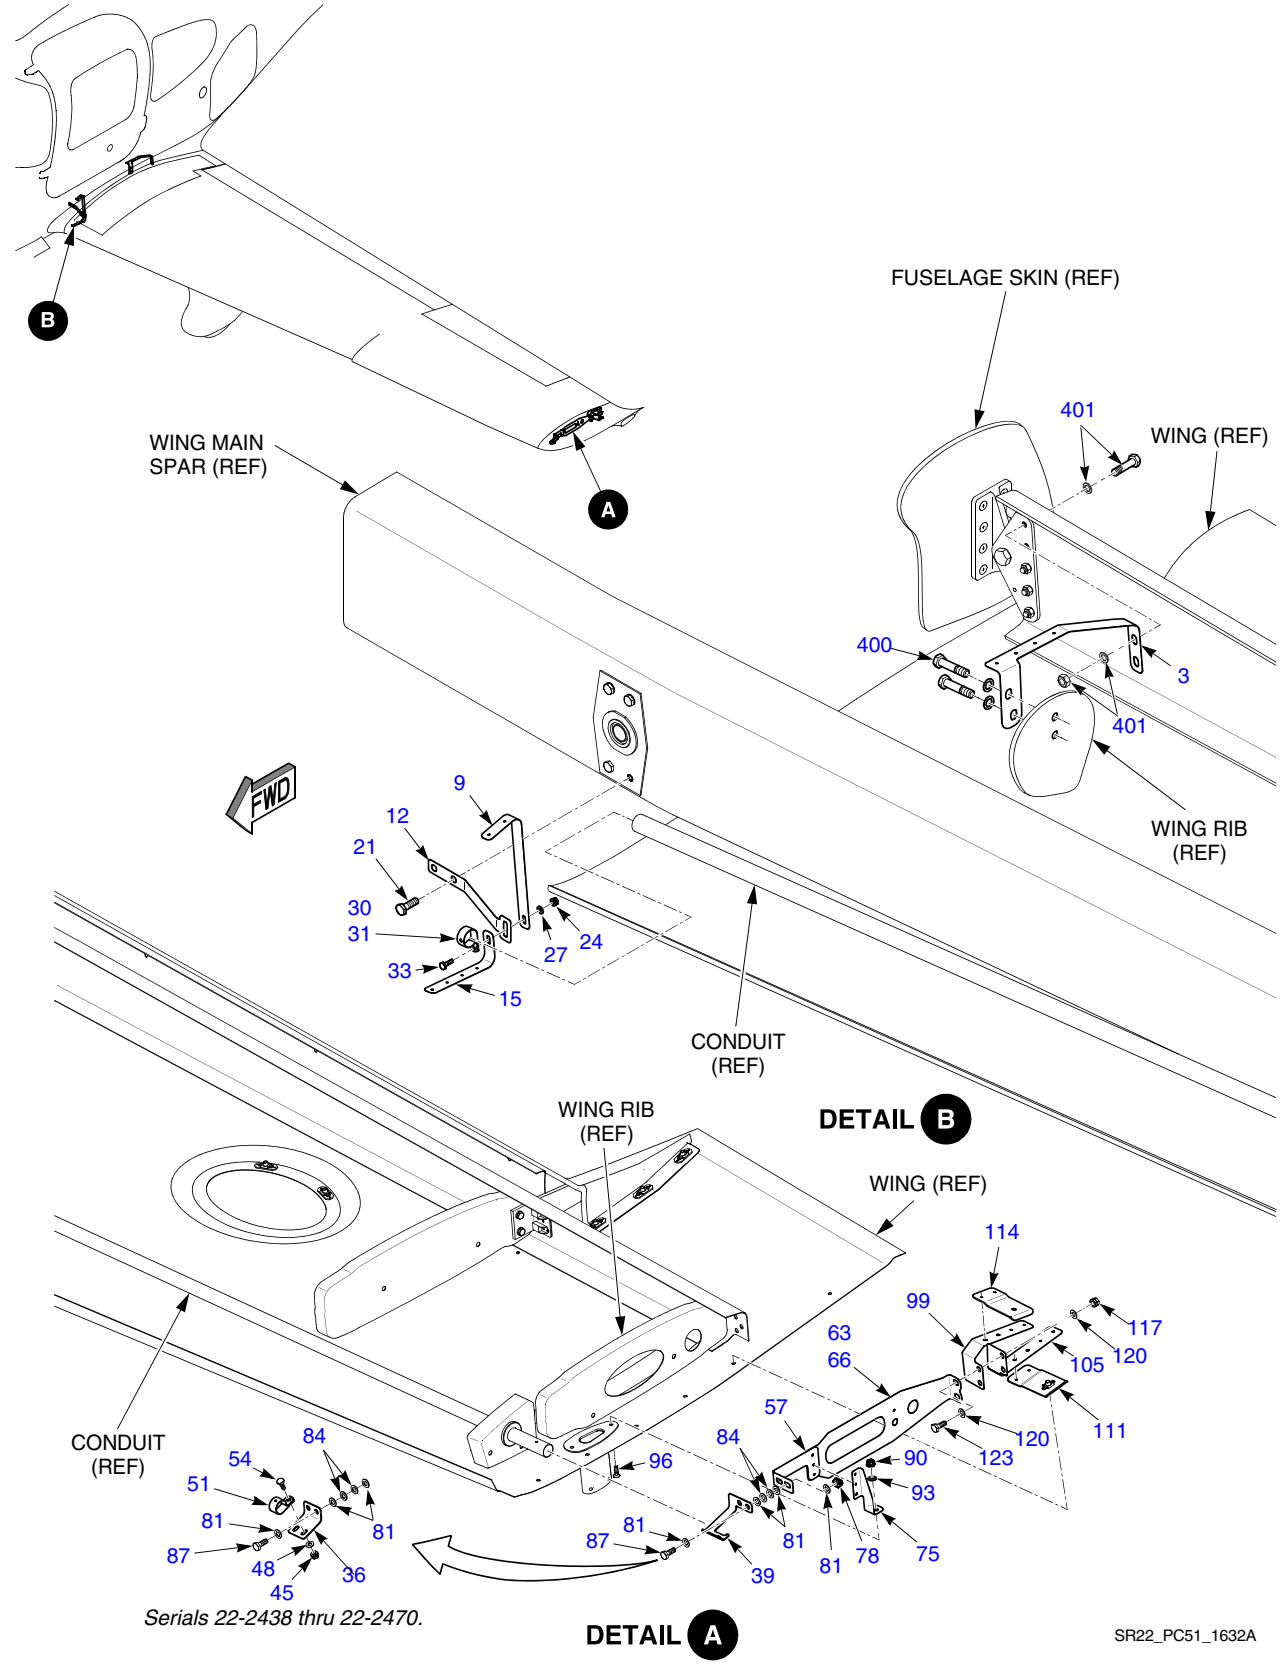

Figure-01

Lightning Protection, Wing - Serials 22-2438 & subs, 22T-0001 & subs

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		LIGHTNING PROTECTION	2438 / 0001	/	NP
	3	17369-001			·GROUND STRAP LEFT	2438 / 0001	/	1
-	6	17369-002			·GROUND STRAP RIGHT	2438 / 0001	/	1
	9	17362-001			·GROUND STRAP	2438 / 0001	/	1
	12	17368-001			·GROUND STRAP	2438 / 0001	/	1
	15	17367-001			·GROUND STRAP LEFT	2438 / 0001	/	1
-	18	17367-002			·GROUND STRAP RIGHT	2438 / 0001	/	1
	21	NAS6406U-12		A	·BOLT	2438 / 0001	/	2
	24	MS21042-3		A	·NUT	2438 / 0001	/	1
	27	NAS1149D0332K		A	·WASHER	2438 / 0001	/	1
	30	AN742-16		A	·CLAMP	2438 / 3369	/	1
	31	19639-001		A	·CLAMP	3370		1
	33	AN3-5A		A	·BOLT	2438 / 0001	/	1
	36	16861-001			·CONDUIT BRACKET	2438	2470	1
	39	18525-001			·CONDUIT BRACKET, LH	2471 / 0001	/	1
-	42	18525-002			·CONDUIT BRACKET, RH	2471 / 0001	/	1
	45	MS21042-3	@	A	·NUT	2438	2470	1
	48	NAS1149D0332K	@	A	·WASHER	2438	2470	1
	51	AN742-12	@	A	·CLAMP	2438	2470	1
	54	AN3-3A	@	A	·BOLT	2438	2470	1
	57	18145-001			·GROUND STRAP LEFT	2438 / 0001	/	1
-	60	18145-002			·GROUND STRAP RIGHT	2438 / 0001	/	1
	63	18146-001			·GROUND STRAP LEFT	2438	2681	1
	66	18797-001			·GROUND STRAP LEFT	2682 / 0001	/	1
-	69	18146-002			·GROUND STRAP RIGHT	2438	2681	1
-	72	18797-002			·GROUND STRAP RIGHT	2682 / 0001	/	1
	75	18466-001	#		·STIFFENER, PITOT TUBE BRACKET	2438 / 0001	/	1
	78	MS21043-4		A	·NUT	2438 / 0001	/	1
	81	NAS1149F0432P		A	·WASHER	2438 / 0001	/	4
	84	NAS1149E0432R		A	·WASHER	2438 / 0001	/	2
	87	NAS6404U-5		A	·BOLT	2438 / 0001	/	1
	90	MS21042L3	#	A	·NUT	2438 / 0001	/	1
	93	NAS1149D0332J	#	A	·WASHER	2438 / 0001	/	1
	96	MS24694-51	#	A	·SCREW	2438 / 0001	/	1
	99	18229-001			·GROUND STRAP UPPER LEFT	2438 / 0001	/	1
-	102	18229-002			·GROUND STRAP UPPER RIGHT	2438 / 0001	/	1
	105	18231-001			·GROUND STRAP LOWER LEFT	2438 / 0001	/	1
-	108	18231-002			·GROUND STRAP LOWER RIGHT	2438 / 0001	/	1
	111	18218-001			·BRACKET LOWER LIGHTNING WING TIP	2438 / 0001	/	1
	114	18218-001			·BRACKET UPPER LIGHTNING WING TIP	2438 / 0001	/	1
	117	MS21042-4		A	·NUT	2438 / 0001	/	2
	120	NAS1149F0432P		A	·WASHER	2438 / 0001	/	2
	123	AN4-4A		A	·BOLT	2438 / 0001	/	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 32-10-02 DET			MAIN LANDING GEAR			
	401	RF 57-10-01 DET			WING			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334 AND 22-2420; REFER TO 22-2438 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			@		FASTENERS MAY BE INSTALLED IN EITHER HOLE OF CONDUIT BRACKET.			
			#		LH SIDE ONLY.			

Intentionally Left Blank

CHAPTER

52

DOORS

CHAPTER 52 - DOORS
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
52-LOEP	1	04 SEP 2018
52-LOEP	2	04 SEP 2018
52-TOC	1	04 SEP 2018
52-TOC	2	04 SEP 2018
52-10-01	1	19 SEP 2017
52-10-01	2	15 DEC 2014
52-10-01	3	19 SEP 2017
52-10-01	4	19 SEP 2017
52-10-01	5	19 SEP 2017
52-10-01	6	19 SEP 2017
52-10-01	7	19 SEP 2017
52-10-01	8	19 SEP 2017
52-10-02	1	19 SEP 2017
52-10-02	2	01 JAN 2016
52-10-02	3	01 JAN 2016
52-10-02	4	04 SEP 2018
52-10-02	5	04 SEP 2018
52-10-02	6	04 SEP 2018
52-10-02	7	04 SEP 2018
52-10-02	8	04 SEP 2018
52-10-02	9	04 SEP 2018
52-10-02	10	19 SEP 2017
52-10-03	1	19 SEP 2017
52-10-03	2	19 SEP 2017
52-10-03	3	01 JAN 2016
52-10-03	4	19 SEP 2017
52-10-03	5	01 JAN 2016
52-10-03	6	01 JAN 2016
52-10-03	7	04 SEP 2018
52-10-03	8	04 SEP 2018
52-10-03	9	04 SEP 2018
52-10-03	10	04 SEP 2018
52-30-01	1	01 JAN 2016
52-30-01	2	19 SEP 2017
52-30-01	3	19 SEP 2017
52-30-01	4	01 JAN 2016

Intentionally Left Blank

CHAPTER 52 - DOORS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Cabin Door - Serials 22-0002 thru 22-0820 (1 of 2)	52-10-01
Cabin Door - Serials 22-0002 thru 22-0820 (2 of 2)	52-10-01
Cabin Door - Serials 22-0821 thru 22-4299, 22T-0001 thru 22T-1232 (1 of 3)	52-10-02
Cabin Door - Serials 22-0821 thru 22-4299, 22T-0001 thru 22T-1232 (2 of 3)	52-10-02
Cabin Door - Serials 22-0821 thru 22-4299, 22T-0001 thru 22T-1232 (3 of 3)	52-10-02
Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (1 of 6)	52-10-03
Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (2 of 6)	52-10-03
Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (3 of 6)	52-10-03
Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (Sheet 4 of 6)	52-10-03
Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (Sheet 5 of 6)	52-10-03
Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs w/ Convenience Lighting (Sheet 6 of 6)	52-10-03
Baggage Door	52-30-01
Baggage Door Magnet & Proximity Sensor - 22-4300 & subs, 22T-1233 & subs w/ Conv Lighting	52-30-01

Intentionally Left Blank

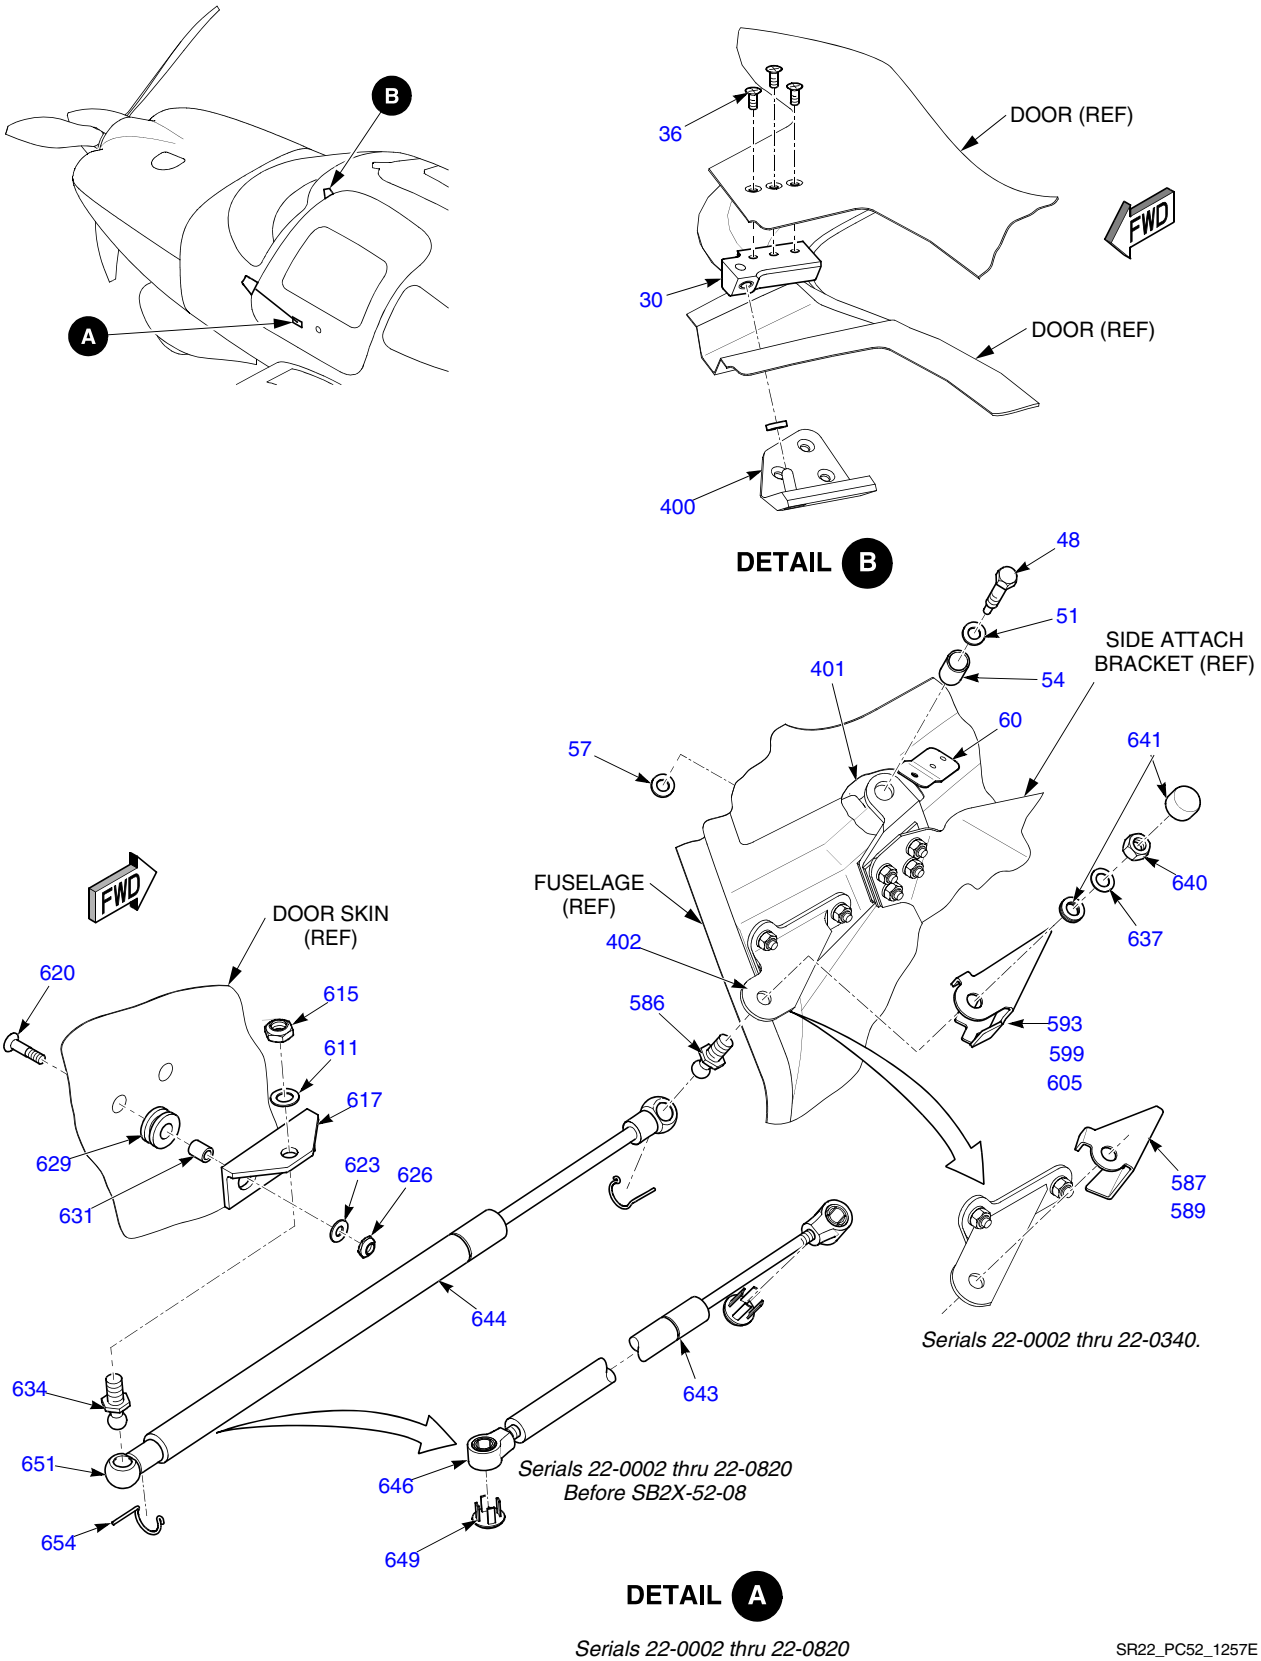

Figure-01
Cabin Door - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

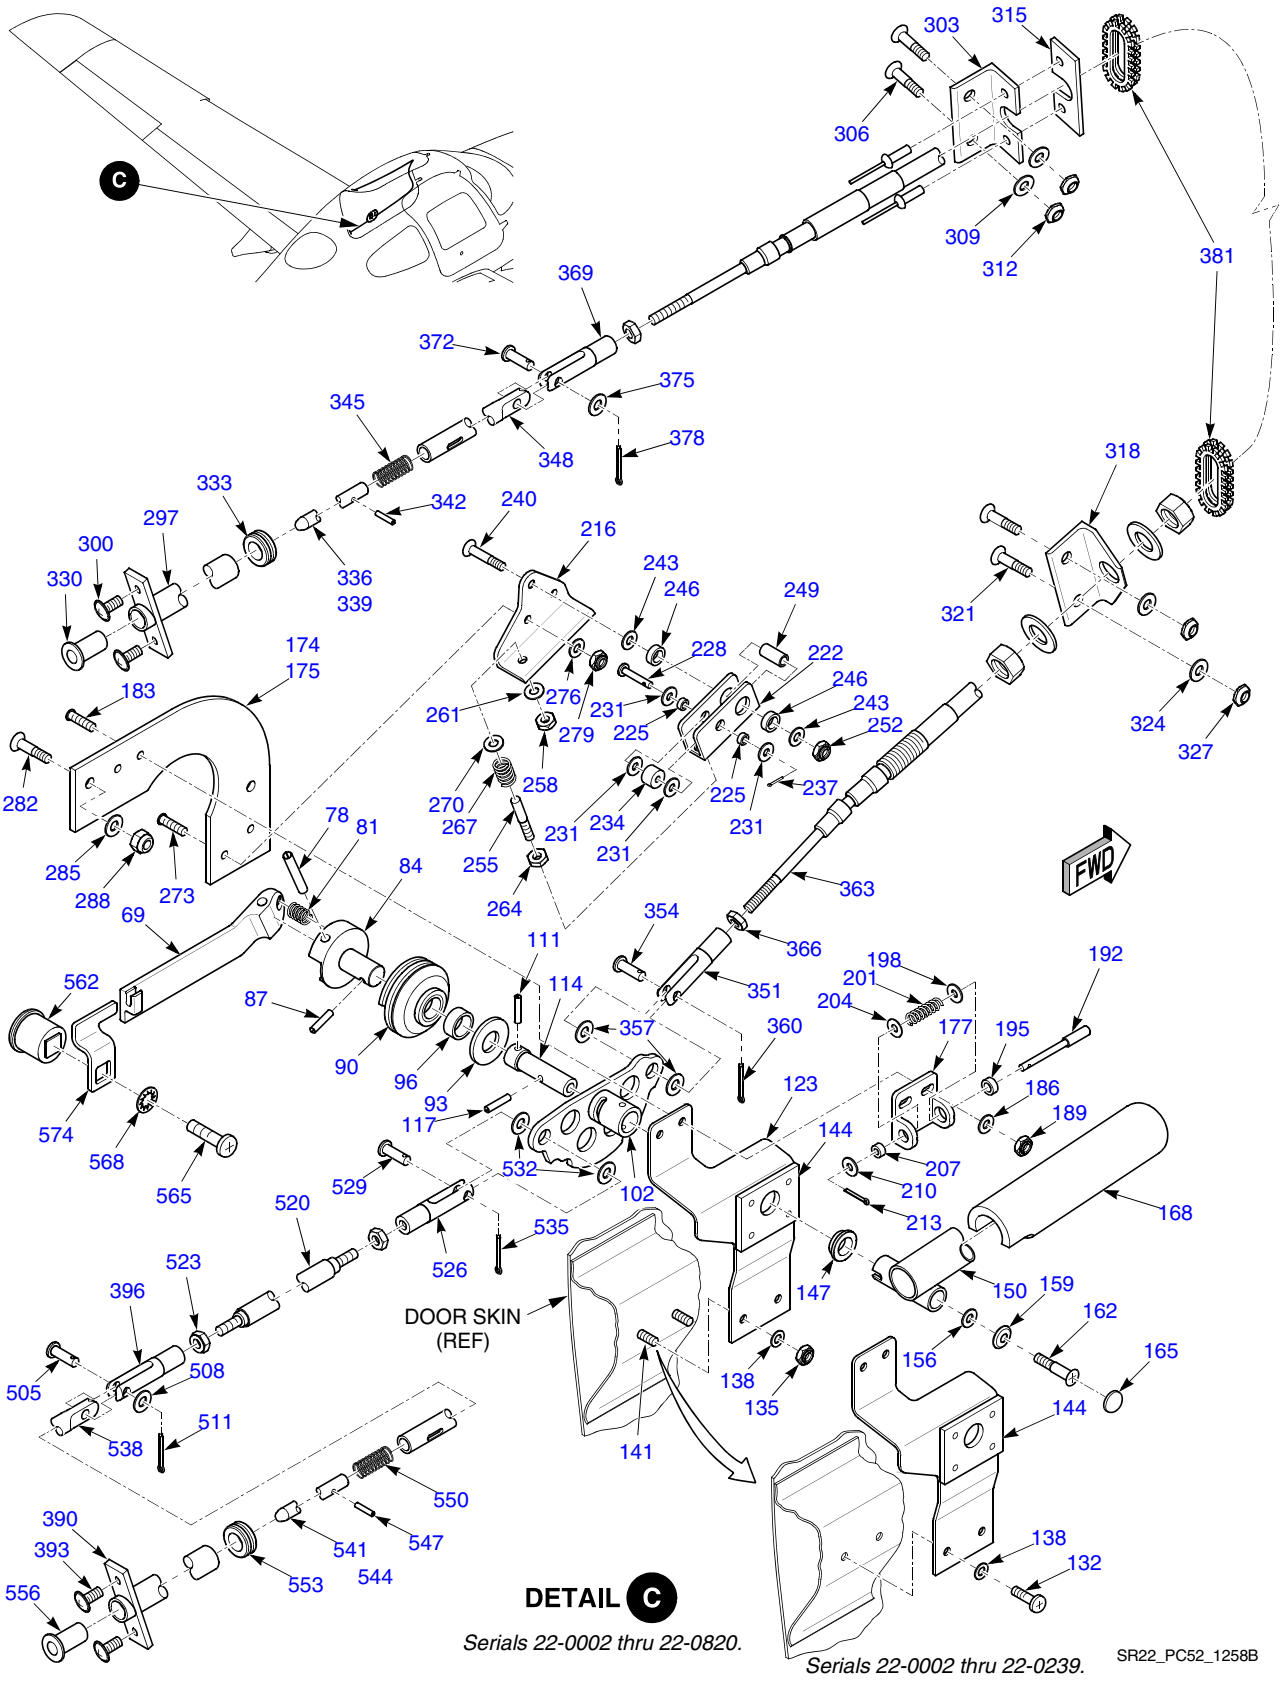

Figure-01

Cabin Door - Serials 22-0002 thru 22-0820 (2 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			CABIN DOOR INSTALLATION	0002	0820	NP
-	3	12843-003			·CABIN DOOR ASSY, LH	0002	0239	1
					ALTERNATE FOR P/N 14972-001			
-	6	14972-001			·CABIN DOOR ASSY, LH	0240	0820	1
-	9	12843-004			·CABIN DOOR ASSY, RH	0002	0239	1
					ALTERNATE FOR P/N 14972-002			
-	12	14972-002			·CABIN DOOR ASSY, RH	0240	0820	1
-	15	10073-003			··CABIN DOOR STRUCTURAL ASSY, LH	0002	0239	1
-	18	14973-001			··CABIN DOOR STRUCTURAL ASSY, LH	0240	0820	1
-	21	10073-004			··CABIN DOOR STRUCTURAL ASSY, RH	0002	0239	1
-	24	14973-002			··CABIN DOOR STRUCTURAL ASSY, RH	0240	0820	1
-	27	NO PRT NUMBER		A	··CABIN DOOR ASSY ATTACHING PARTS	0002	0820	NP
	30	11921-005			··UPPER HINGE, LH	0002	0820	1
-	33	11921-006			··UPPER HINGE, RH	0002	0820	1
	36	MS24693-S47		A	··SCREW	0002	0820	3
-	39	11923-005			··LOWER HINGE, LH	0002	0820	1
-	42	11923-006			··LOWER HINGE, RH	0002	0820	1
-	45	MS24693-S47		A	··SCREW	0002	0820	4
	48	12858-002		A	··BOLT	0002	0820	1
	51	NAS1149F0463P		A	··WASHER	0002	0820	AR
	54	NAS43DD4-79		A	··SPACER	0002	0820	1
	57	NAS1515H3L	@	A	··WASHER, NYLON	0002	0820	AR
	60	13597-001			··TAB	0002	0820	1
-	63	NO PRT NUMBER			···DOOR HANDLE ASSEMBLY	0002	0820	NP
-	66	11871-005			····EXTERIOR HANDLE, LH	0002	0239	1
	69	14977-001			····EXTERIOR HANDLE, LH	0240	0820	1
-	72	11871-006			····EXTERIOR HANDLE, RH	0002	0239	1
-	75	14977-002			····EXTERIOR HANDLE, RH	0240	0820	1
	78	MS16562-239		A	····ROLL PIN	0002	0820	1
	81	51256-001			····SPRING	0002	0820	1
					FOR SPARES USE P/N MS24585-C81			
	84	11870-003			····MAIN SHAFT	0002	0820	1
	87	MS16562-224		A	····ROLL PIN	0002	0820	1
	90	11963-003			····MAIN SHAFT HOUSING	0002	0820	1
	93	NAS1149F0732P	%	A	····WASHER	0002	0820	AR
	96	12763-002			····BUSHING	0002	0820	1
-	99	12155-005			····ACTUATION DISK, LH	0002	0074	1
	102	12155-007			····ACTUATION DISK, LH	0075	0820	1
-	105	12155-006			····ACTUATION DISK, RH	0002	0074	1
-	108	12155-008			····ACTUATION DISK, RH	0075	0820	1
	111	MS16562-224		A	····ROLL PIN	0002	0820	1
	114	12162-002			····SHAFT, INTERIOR HANDLE	0002	0820	1
	117	MS16562-223		A	····ROLL PIN	0002	0820	1
-	120	12164-003			····SPAN BRACKET, LH	0002	0239	1
	123	12164-005			····SPAN BRACKET, LH	0240	0820	1
-	126	12164-004			····SPAN BRACKET, RH	0002	0239	1
-	129	12164-006			····SPAN BRACKET, RH	0240	0820	1
	132	MS27039-0807		A	····SCREW	0002	0239	2
	135	MS21083N08		A	····NUT	0240	0820	2
	138	NAS1149FN816P		A	····WASHER	0002	0820	2
	141	14807-001			····STUD PLATE	0240	0820	1
	144	12163-001			····BEARING BLOCK	0002	0820	1
	147	PRT OF ITM 144		A	····BUSHING	0002	0820	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····· NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	150	12856-001			····INTERIOR HANDLE, LH	0002	0820	1
-	151	12856-003	&		····INTERIOR HANDLE, LH	0656 / 0001	/	1
-	153	12856-002			····INTERIOR HANDLE, RH	0002	0820	1
-	154	12856-004	&		····INTERIOR HANDLE, RH	0656 / 0001	/	1
	156	NAS1149F0332P		A	····WASHER	0002	0820	1
	159	50826-001		A	····WASHER CAP	0002	0820	1
	162	NAS1801-3-15		A	····SCREW	0002	0820	1
	165	50825-001			····SCREW CAP	0002	0820	1
	168	12921-001			····FOAM COVER, HANDLE	0002	0820	1
-	171	12837-001			····DOOR HANDLE, PLATE, ASSEMBLY, LH	0002	0820	1
-	172	12837-002			····DOOR HANDLE, PLATE, ASSEMBLY, RH	0002	0820	1
	174	12768-001			·····PLATE, DOOR HANDLE ASSEMBLY	0002	0706	1
	175	12768-002			·····PLATE, DOOR HANDLE ASSEMBLY	0707	0820	1
	177	12033-003			·····SPRING RETURN BRACKET, LH	0002	0820	1
-	180	12033-004			·····SPRING RETURN BRACKET, RH	0002	0820	1
	183	50048-201		A	·····PEM THREADED FASTENER	0002	0820	2
	186	NAS1149FN832P		A	·····WASHER	0002	0820	2
	189	MS21044N08		A	·····NUT, LOCKING	0002	0820	2
	192	12764-001			·····SPRING RETURN PIN	0002	0820	1
	195	50475-001		A	·····BUSHING	0002	0820	1
	198	NAS1149FN632P		A	·····WASHER	0002	0820	1
	201	MS24585C135			·····SPRING, COMPRESSION	0002	0820	1
	204	NAS1149FN616P		A	·····WASHER	0002	0820	1
	207	50691-001		A	·····BUSHING	0002	0820	1
	210	NAS1149FN516P		A	·····WASHER	0002	0820	1
	213	MS224665-130		A	·····COTTER PIN	0002	0820	1
	216	12160-003			·····CHANNEL BRACKET, LH	0002	0820	1
-	219	12160-004			·····CHANNEL BRACKET, RH	0002	0820	1
	222	12158-002			·····SPRING CHANNEL	0002	0820	1
	225	PRT OF ITM 222		A	·····BUSHING	0002	0820	2
	228	MS20392-1C19		A	·····CLEVIS PIN	0002	0820	1
	231	NAS1149FN632P		A	·····WASHER	0002	0820	4
	234	12547-001		A	·····NYLON SPACER	0002	0820	1
	237	MS224665-130		A	·····COTTER PIN	0002	0820	1
	240	MS24694S11		A	·····SCREW	0002	0820	1
	243	NAS1149FN832P		A	·····WASHER	0002	0820	2
	246	50692-001		A	·····BUSHING	0002	0820	2
	249	12765-001		A	·····BUSHING, DOOR HANDLE PIVOT	0002	0820	1
	252	MS21083N08		A	·····NUT, LOCKING	0002	0820	1
	255	12159-002			·····SPRING ROD	0002	0820	1
	258	MS21044N08		A	·····NUT, LOCKING	0002	0820	1
	261	NAS1149FN832P		A	·····WASHER	0002	0820	1
	264	MS35649-282		A	·····NUT, JAM	0002	0820	1
	267	MS24585C187			·····SPRING, COMPRESSION	0002	0820	1
	270	NAS1149F0332P		A	·····WASHER	0002	0820	1
	273	50048-201		A	·····PEM THREADED FASTENER	0002	0820	2
	276	NAS1149FN832P		A	·····WASHER	0002	0820	2
	279	MS21044N08		A	·····NUT, LOCKING	0002	0820	2
	282	MS24694-S55		A	····SCREW	0002	0820	2
	285	NAS1149F0332P		A	····WASHER	0002	0820	2
	288	MS21083N3		A	····NUT	0002	0820	2
-	291	NO PRT NUMBER			···UPPER CABLE ASSEMBLY	0002	0820	NP
-	294	10479-002		A	····OUTER SPRING TUBE	0002	0124	1
	297	10479-003		A	····OUTER SPRING TUBE	0125	0820	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	300	AN525-10R7		A	....SCREW	0002	0820	2
	303	12832-003		A	....UPPER CABLE BRACKET BASE	0002	0820	1
	306	MS24694-S54		A	....SCREW	0002	0820	2
	309	NAS1149F0332P		A	....WASHER	0002	0820	2
	312	MS21083N3		A	....NUT	0002	0820	2
	315	12832-004		A	....UPPER CABLE BRACKET	0002	0820	1
	318	12372-001		A	....LOWER CABLE BRACKET	0002	0820	1
	321	MS24694-S55		A	....SCREW	0002	0820	2
	324	NAS1149F0332P		A	....WASHER	0002	0820	2
	327	MS21083N3		A	....NUT	0002	0820	2
	330	50145-002			....BUSHING	0002	0820	1
	333	MS35489-141			....GROMMET	0002	0820	1
	336	10484-002			....DOOR PIN	0002	0820	1
					ALTERNATE FOR P/N 10484-001			
	339	10484-001			....DOOR PIN	0002	0820	1
					ALTERNATE FOR P/N 10484-002			
	342	MS16562-211		A	....ROLL PIN	0002	0820	1
	345	50500-003			....SPRING	0002	0820	1
	348	10480-002			....INNER SPRING TUBE	0002	0820	1
	351	50499-001			....YOKE ROD END	0002	0820	1
	354	MS20392-2C15		A	....CLEVIS PIN	0002	0820	1
	357	NAS1149F0332P		A	....WASHER	0002	0820	1
	360	MS24665-130		A	....COTTER PIN	0002	0820	1
	363	10642-002			....CABLE	0002	0820	1
	366	AN315-3R		A	....NUT	0002	0820	2
	369	50499-001			....YOKE ROD END	0002	0820	1
	372	MS20392-2C15		A	....CLEVIS PIN	0002	0820	1
	375	NAS1149F0332P		A	....WASHER	0002	0820	2
	378	MS24665-130		A	....COTTER PIN	0002	0820	1
	381	MS21266-1N			....GROMMET	0002	0820	AR
-	384	NO PRT NUMBER			...LOWER CABLE ASSEMBLY	0002	0820	NP
-	387	12146-002		A	....OUTER SPRING TUBE	0002	0124	1
	390	12146-003		A	....OUTER SPRING TUBE	0125	0820	1
	393	AN525-10R7		A	....SCREW	0002	0820	2
	396	50499-001			....YOKE ROD END	0002	0820	1
	505	MS20392-2C15		A	....CLEVIS PIN	0002	0820	1
	508	NAS1149F0332P		A	....WASHER	0002	0820	2
	511	MS24665-130		A	....COTTER PIN	0002	0820	1
-	514	12157-003			....ACTUATION LEVER	0002	0227	1
-	517	12157-004			....ACTUATION LEVER	0228	0757	1
	520	12157-005			....ACTUATION LEVER	0758	0820	1
	523	AN315-3R		A	....NUT	0002	0820	2
	526	50499-001			....YOKE ROD END	0002	0820	1
	529	MS20392-2C15		A	....CLEVIS PIN	0002	0820	1
	532	NAS1149F0332P		A	....WASHER	0002	0820	1
	535	MS24665-130		A	....COTTER PIN	0002	0820	1
	538	10480-002			....INNER SPRING TUBE	0002	0820	1
	541	10484-002			....DOOR PIN	0002	0820	1
					ALTERNATE FOR P/N 10484-001			
	544	10484-001			....DOOR PIN	0002	0820	1
					ALTERNATE FOR P/N 10484-002			
	547	MS16562-211			....ROLL PIN	0002	0820	1
	550	50500-003			....SPRING	0002	0820	1
	553	MS35489-141			....GROMMET	0002	0820	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····· NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	556	50145-002			····BUSHING	0002	0820	1
-	559	NO PRT NUMBER			···DOOR LOCK ASSEMBLY	0002	0820	NP
	562	50487-001			····LOCK ASSY	0002	0820	1
	565	PRT OF ITM 562		A	····SCREW	0002	0820	1
	568	PRT OF ITM 562		A	····WASHER	0002	0820	1
-	571	12165-003			····LOCK TAB, LH	0002	0239	1
	574	14976-001			····LOCK TAB, LH	0240	0820	1
					FOR SPARES USE P/N 14976-002			
-	577	12165-004			····LOCK TAB, RH	0002	0239	1
-	580	14976-001			····LOCK TAB, RH	0240	0820	1
					FOR SPARES USE P/N 14976-002			
-	583	NO PRT NUMBER			···GAS STRUT INSTALLATION	0002	0820	NP
	586	50567-001			····BALL STUD	0002	0820	1
	587	17578-001	)		····CATCHER/DIVERTER, LEFT	0002	0340	1
					AFTER SB2X-52-04			
-	588	17578-002	)		····CATCHER/DIVERTER, RIGHT	0002	0340	1
					AFTER SB2X-52-04			
	589	17581-001	)		····CATCHER/DIVERTER, LEFT	0341	0819	1
					AFTER SB2X-52-04			
-	590	17581-002	)		····CATCHER/DIVERTER, RIGHT	0341	0819	1
					AFTER SB2X-52-04			
	593	17578-003	^		····CATCHER/DIVERTER, LEFT	0002	0819	1
					AFTER SB2X-52-08			
-	596	17578-004	^		····CATCHER/DIVERTER, RIGHT	0002	0819	1
					AFTER SB2X-52-08			
	599	17581-003	?		····CATCHER/DIVERTER, LEFT	0002	0819	1
					AFTER SB2X-52-08			
-	602	17581-004	?		····CATCHER/DIVERTER, RIGHT	0002	0819	1
					AFTER SB2X-52-08			
	605	17582-007	*		····CATCHER/DIVERTER, LEFT	0820	0820	1
					AFTER SB2X-52-08			
-	608	17582-008	*		····CATCHER/DIVERTER, RIGHT	0820	0820	1
					AFTER SB2X-52-08			
	611	NAS1149F0532P		A	····WASHER	0002	0820	1
	615	50865-518			····NUT	0002	0820	1
	617	12382-001			····BRACKET	0002	0820	1
	620	MS24694-S57		A	····SCREW	0002	0820	2
	623	NAS1149F0332P		A	····WASHER	0002	0820	2
	626	MS21083N3		A	····NUT	0002	0820	2
	629	50580-001			····GROMMET	0002	0820	2
	631	50579-001			····ALUMINUM SPACER	0002	0820	2
	634	50567-001			····BALL STUD	0002	0820	1
	637	NAS1149F0532P		A	····WASHER	0002	0820	1
	640	50865-518		A	····NUT	0002	0820	1
	641	19030-001		A	····NUT CAP	0002	0820	1
					AFTER SB2X-52-08			
	643	12545-001			····GAS STRUT	0002	0820	1
	644	18200-003			····GAS STRUT	0002	0820	1
	646	EF110		)	·····ROD END	0002	0820	2
	649	18200-102			·····ROD END	0002	0820	2
					AFTER SB2X-52-08			
	651	PRT OF ITM 646		)	·····LOCKING CAP	0002	0820	2
	654	PRT OF ITM 649			·····WIRE RETAINING CLIP	0002	0820	2
					AFTER SB2X-52-08			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-03 DET				UPPER FUSELAGE HINGE			
	401	RF 53-40-03 DET				LOWER FUSELAGE HINGE			
	402	RF 53-40-03 DET				STRUT ATTACH BRACKET			
						SYMBOL NOTES:			
			@			MAXIMUM SHIM THICKNESS OF 0.064 INCH.			
			%			ADDITIONAL WASHERS MAY BE ADDED/OMITTED AS REQUIRED TO REDUCE/ELIMINATE AXIAL PLAY IN DOOR HANDLE MECHANISM.			
			&			INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT.			
			)			IF REPLACING ORDER KIT 70542-001 OR 70543-001, REFER TO SB2X-52-08			
			^			SERIALS W/ WELDED GAS STRUT			
			?			SERIALS W/ MACHINED GAS STRUT			
			*			SR22 SERIAL 0795 ORDER 17582-007, -008			

Intentionally Left Blank

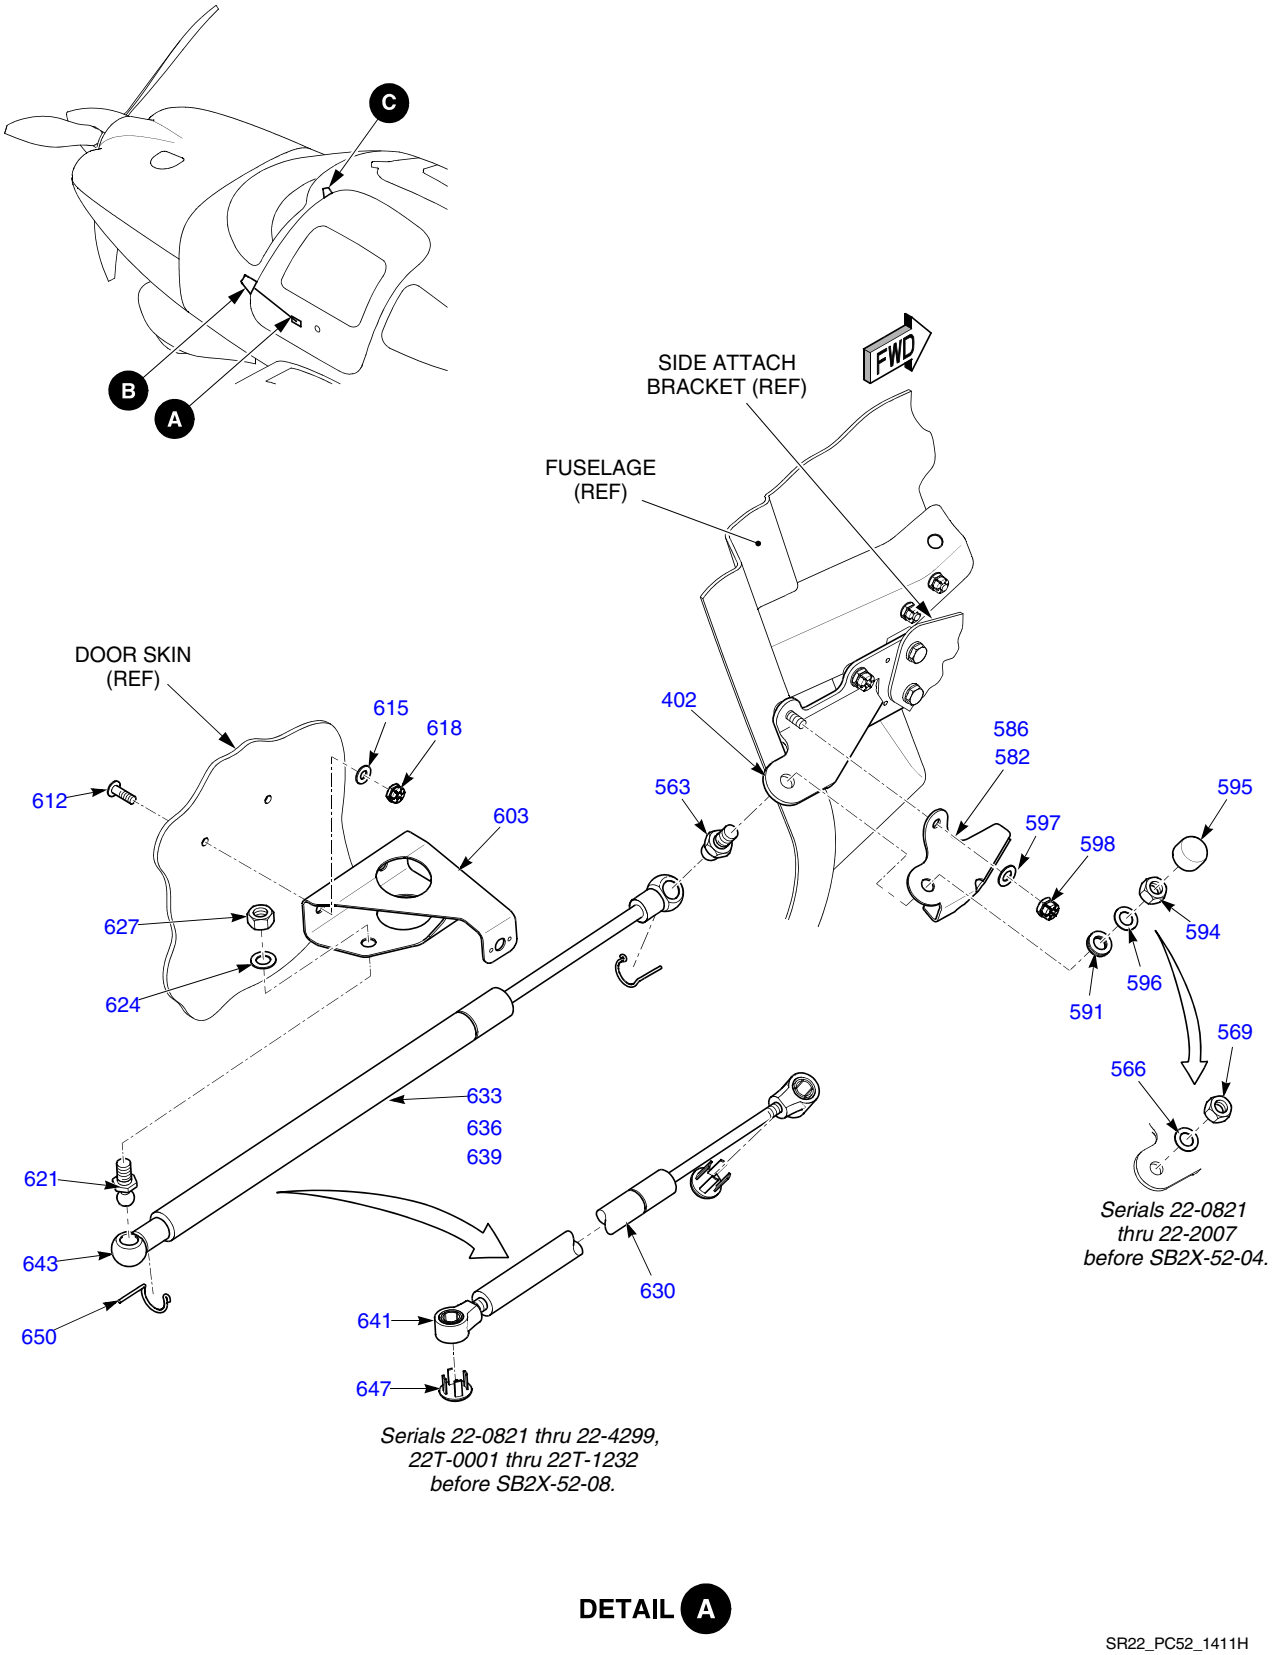

DETAIL A

SR22_PC52_1411H

Figure-02

Cabin Door - Serials 22-0821 thru 22-4299, 22T-0001 thru 22T-1232 (1 of 3)

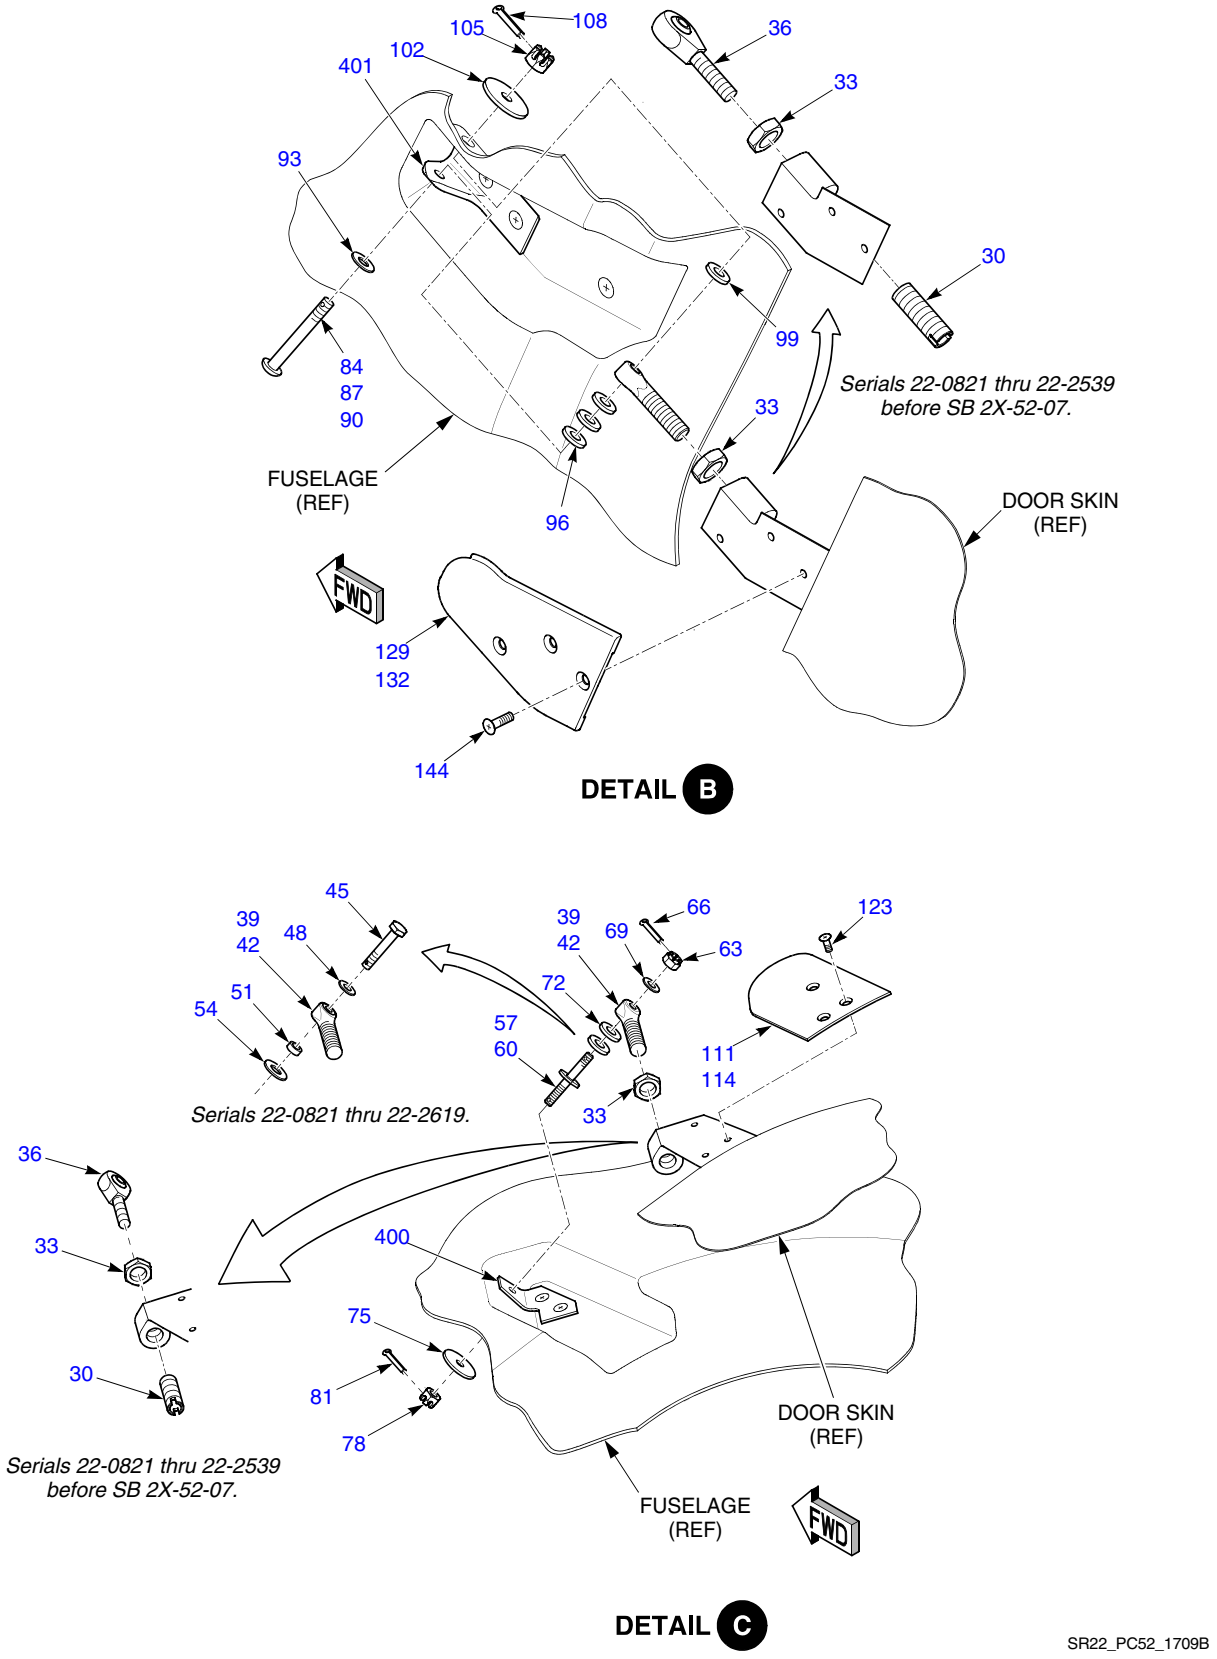

Figure-02

Cabin Door - Serials 22-0821 thru 22-4299, 22T-0001 thru 22T-1232 (2 of 3)

EFFECTIVITY:
Serials 22-0821 thru 22-4299, 22T-0001 thru 22T-1232

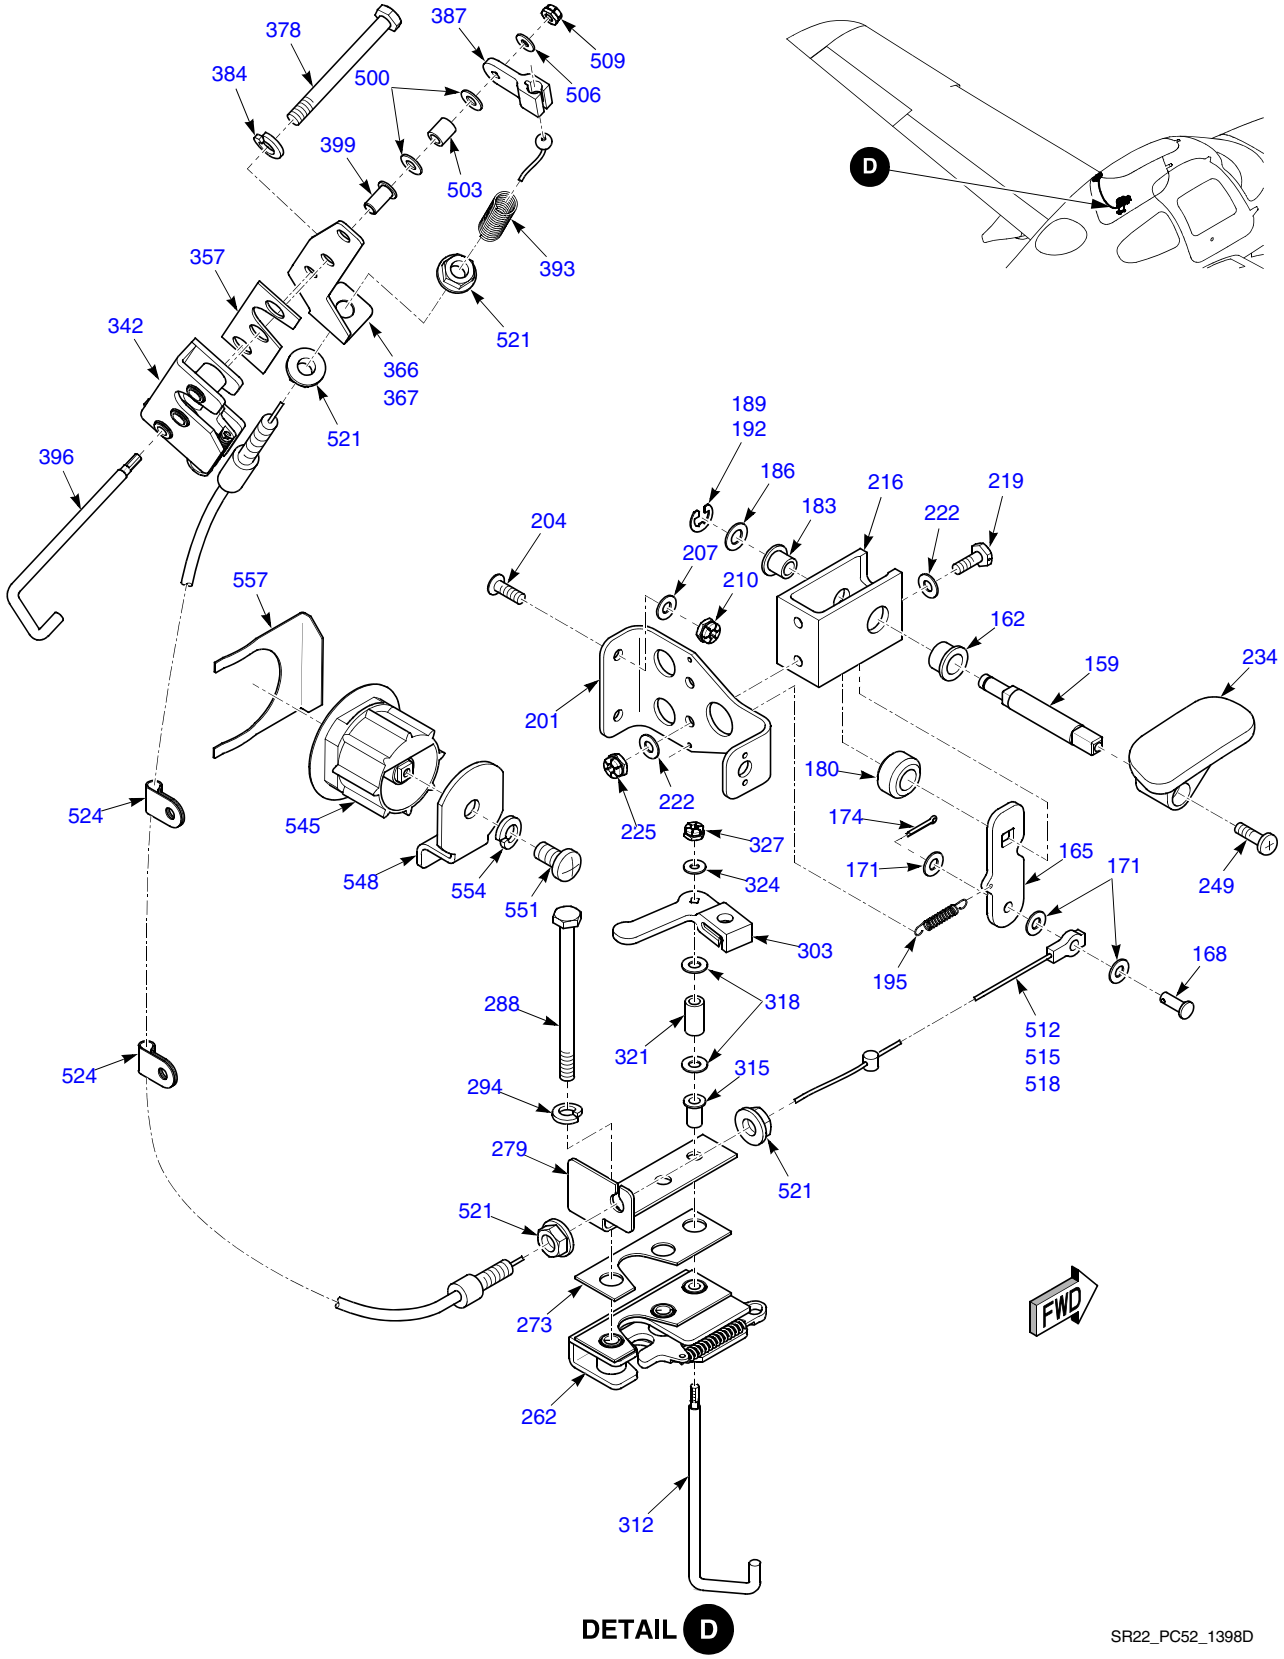

Figure-02

Cabin Door - Serials 22-0821 thru 22-4299, 22T-0001 thru 22T-1232 (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		CABIN DOOR INSTALLATION	0821 / 0001	4299 / 1232	NP
-	3	20257-001			·CABIN DOOR ASSY LH	0821	2623	1
-	6	20257-002			·CABIN DOOR ASSY LH	2624 / 0001	4299 / 1232	1
-	9	20256-001			·CABIN DOOR ASSY RH	0821	2623	1
-	12	20256-002			·CABIN DOOR ASSY RH	2624 / 0001	4299 / 1232	1
-	15	20259-001			··CABIN DOOR STRUCTURAL ASSY LH	0821	2709	1
					FOR SPARES USE P/N 20259-002			
-	18	20259-002			··CABIN DOOR STRUCTURAL ASSY LH	2710	3459	1
					FOR SPARES USE P/N 20259-003			
-	19	20259-003			··CABIN DOOR STRUCTURAL ASSY LH	3460 / 0001	4299 / 1232	1
-	21	20258-001			··CABIN DOOR STRUCTURAL ASSY RH	0821	2709	1
					FOR SPARES USE P/N 20258-002			
-	24	20258-002			··CABIN DOOR STRUCTURAL ASSY RH	2710	3459	1
					FOR SPARES USE P/N 20258-003			
-	25	20258-003			··CABIN DOOR STRUCTURAL ASSY RH	3460 / 0001	4299 / 1232	1
-	27	NO PRT NUMBER			···CABIN DOOR ASSY ATTACHING PARTS	0821 / 0001	4299 / 1232	NP
	30	20269-001			····SLEEVE, HINGE	0821	2539	2
	33	AN316-6R		A	····HEX NUT	0821 / 0001	4299 / 1232	2
	36	ML34-14M			····ROD END	0821	2539	2
	39	21845-001			····ROD END	2540	2976	2
					ALTERNATE FOR P/N 21845-002			
	42	21845-002			····ROD END	2977 / 0001	4299 / 1232	2
					AFTER SB2X-52-07	0821	2539	
					ALTERNATE FOR P/N 21845-001			
	45	AN3-13		A	····BOLT	0821	2912	1
	48	NAS1149F0316P		A	····WASHER	0821	2912	1
	51	NAS43DD3-8FC		A	····SPACER	0821	2912	1
	54	NAS1149F0363P	$	A	····WASHER	0821	2912	1
	57	21933-003		A	····HINGE PIN, AFTER SB2X-52-07	0821	2912	1
					ALTERNATE FOR P/N 21933-004			
	60	21933-004		A	····HINGE PIN	2913 / 0001	4299 / 1232	1
					ALTERNATE FOR P/N 21933-003			
	63	MS17825-3		A	····NUT	2913 / 0001	4299 / 1232	1
					AFTER SB2X-52-07	0821	2912	
	66	MS24665-132		A	····COTTER PIN	2913 / 0001	4299 / 1232	1
					AFTER SB2X-52-07	0821	2912	
	69	NAS1149F0316P	$	A	····WASHER	2913 / 0001	4299 / 1232	1
					AFTER SB2X-52-07	0821	2912	
	72	NAS1149F0363P	$	A	····WASHER	2913 / 0001	4299 / 1232	1
					AFTER SB2X-52-07	0821	2912	
	75	AN970-3		A	····WASHER	0821 / 0001	4299 / 1232	1
	78	MS17825-3		A	····NUT	0821 / 0001	4299 / 1232	1
	81	MS24665-132		A	····COTTER PIN	0821 / 0001	4299 / 1232	1
	84	AN3-14		A	····BOLT	0821	1593	1
					FOR SPARES USE P/N AN23-22			
	87	AN3-13		A	····BOLT	1594 / 0001	4299 / 1232	1
					FOR SPARES USE P/N AN23-22			
	90	AN23-22		A	····BOLT	1594 / 0001	4299 / 1232	1
					AFTER SB2X-52-07	0821	2912	
	93	NAS1149F0316P		A	····WASHER	0821 / 0001	4299 / 1232	1
	96	NAS1149F0363P	!	A	····WASHER	0821 / 0001	4299 / 1232	1
	99	NAS43DD3-8FC	!	A	····SPACER	0821 / 0001	4299 / 1232	1
	102	AN970-3		A	····WASHER	0821 / 0001	4299 / 1232	1
	105	MS17825-3		A	····NUT	0821 / 0001	4299 / 1232	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	108	MS24665-132		A	····COTTER PIN	0821 / 0001	4299 / 1232	1
	111	20270-001			····PLATE, COVER, HINGE, UPPER, LH	0821	1407	1
						1594 / 0001	4299 / 1232	1
	114	20270-003			····PLATE, COVER, HINGE, UPPER, LH	1408	1593	1
-	117	20270-002			····PLATE, COVER, HINGE, UPPER, RH	0821	1407	1
						1594 / 0001	4299 / 1232	1
-	120	20270-004			····PLATE, COVER, HINGE, UPPER, RH	1408	1593	1
	123	MS24693S26		A	····SCREW	0821 / 0001	4299 / 1232	3
-	126	20271-003			····PLATE, COVER, HINGE, LOWER, LH	0821	1182	1
					FOR SPARES USE P/N 20271-007			
	129	20271-007	?		····PLATE, COVER, HINGE, LOWER, LH	1183 / 0001	4299 / 1232	1
	132	20271-005	?		····PLATE, COVER, HINGE, LOWER, LH	1183 / 0001	4299 / 1232	1
-	135	20271-004			····PLATE, COVER, HINGE, LOWER, RH	0821	1182	1
					FOR SPARES USE P/N 20271-008			
-	138	20271-008	?		····PLATE, COVER, HINGE, LOWER, RH	1183 / 0001	4299 / 1232	1
-	141	20271-006	?		····PLATE, COVER, HINGE, LOWER, RH	1183 / 0001	4299 / 1232	1
	144	MS24693S28		A	····SCREW	0821 / 0001	4299 / 1232	3
-	147	20324-001			···HANDLE ASSEMBLY	0821	1016	NP
					FOR SPARES USE P/N 20324-002			
-	150	20324-002			···HANDLE ASSEMBLY	1017 / 0001	4299 / 1232	NP
-	153	20275-001			····HANDLE, SHAFT	0821	1016	1
-	156	20275-002			····HANDLE, SHAFT	1017	1306	1
	159	20275-003			····HANDLE, SHAFT	1307 / 0001	4299 / 1232	1
	162	51359-806			····BUSHING	0821 / 0001	4299 / 1232	1
	165	20276-001			····HANDLE, ACTUATION ARM	0821 / 0001	4299 / 1232	1
	168	MS20392-2C13		A	····PIN	0821 / 0001	4299 / 1232	1
	171	NAS1149F0332P		A	····WASHER	0821 / 0001	4299 / 1232	3
	174	MS24665-132		A	····COTTER PIN	0821 / 0001	4299 / 1232	1
-	177	20313-001		A	····SPACER, HANDLE	0821	1306	1
	180	20313-002		A	····SPACER, HANDLE	1307 / 0001	4299 / 1232	1
	183	51358-606			····BUSHING	0821 / 0001	4299 / 1232	1
	186	NAS1149F0432P		A	····WASHER	0821 / 0001	4299 / 1232	1
	189	MS3215-1025		A	····E-CLIP	0821 / 0001	4299 / 1232	1
					ALTERNATE FOR P/N MS3215-2025			
	192	MS3215-2025		A	····E-CLIP	0821 / 0001	4299 / 1232	1
					ALTERNATE FOR P/N MS3215-1025			
	195	20278-001			····HANDLE, SPRING	0821 / 0001	4299 / 1232	1
-	198	20310-001			····HANDLE, BRACKET	0821	1306	1
	201	20310-003			····HANDLE, BRACKET	1307 / 0001	4299 / 1232	1
	204	MS24694S53		A	····SCREW	0821 / 0001	4299 / 1232	2
	207	NAS1149F0332P		A	····WASHER	0821 / 0001	4299 / 1232	2
	210	MS21044N3		A	····NUT	0821 / 0001	4299 / 1232	2
-	213	20322-001			····CLEVIS, HANDLE, CABIN DOOR	0821	1016	1
					FOR SPARES USE P/N 20322-002			
	216	20322-002			····CLEVIS, HANDLE, CABIN DOOR	1017 / 0001	4299 / 1232	1
	219	NAS6203-4		A	····HEX HEAD, SHORT THREAD	0821 / 0001	4299 / 1232	2
	222	NAS1149F0332P		A	····WASHER	0821 / 0001	4299 / 1232	4
	225	MS21044N3		A	····NUT	0821 / 0001	4299 / 1232	2
-	228	20274-001			····HANDLE, LH	0821	1066	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20274-003			
-	231	20274-003			····HANDLE, LH	0821	1066	1
					AFTER SB2X-52-03			
	234	20274-003			····HANDLE, LH	1067 / 0001	4299 / 1232	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····· NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	237	20274-002			····HANDLE, RH	0821	1066	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20274-004			
-	240	20274-004			····HANDLE, RH	0821	1066	1
					AFTER SB2X-52-03			
-	243	20274-004			····HANDLE, RH	1067 / 0001	4299 / 1232	1
-	246	MS35206-243		A	····SCREW	0821	1306	1
					ALTERNATE FOR P/N 51472-001			
	249	51472-001		A	····SCREW	1307 / 0001	4299 / 1232	1
					ALTERNATE FOR P/N MS35206-243			
-	252	NO PRT NUMBER			···LOWER CABLE ASSEMBLY	0821 / 0001	4299 / 1232	NP
-	255	20267-001			····LATCH, ROTARY, LH	0821	1012	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 21861-001			
-	258	20267-003			····LATCH, ROTARY, LH	0821	1012	1
					AFTER SB2X-52-03			
					FOR SPARES USE P/N 21861-001			
-	261	20267-003			····LATCH, ROTARY, LH	1013	2623	1
					FOR SPARES USE P/N 21861-001			
	262	21861-001			····LATCH, ROTARY, LH	2624 / 0001	4299 / 1232	1
-	263	21861-112			·····SPRING	2624 / 0001	4299 / 1232	1
-	264	20267-002			····LATCH, ROTARY, RH	0821	1012	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 21889-001			
-	267	20267-004			····LATCH, ROTARY, RH	0821	1012	1
					AFTER SB2X-52-03			
					FOR SPARES USE P/N 21889-001			
-	270	20267-004			····LATCH, ROTARY, RH	1013	2623	1
					FOR SPARES USE P/N 21889-001			
-	271	21889-001			····LATCH, ROTARY, RH	2624 / 0001	4299 / 1232	1
-	272	21889-112			·····SPRING	2624 / 0001	4299 / 1232	1
	273	20298-001			····SPACER, ROTARY LATCH	0821 / 0001	4299 / 1232	1
-	276	20293-001			····CABLE ATTACH BRACKET, LOWER, LEFT	0821	0890	1
	279	20293-003			····CABLE ATTACH BRACKET, LOWER, LEFT	0891 / 0001	4299 / 1232	1
-	282	20293-002			····CABLE ATTACH BRACKET, LOWER, RIGHT	0821	0890	1
-	285	20293-004			····CABLE ATTACH BRACKET, LOWER, RIGHT	0891 / 0001	4299 / 1232	1
	288	AN4-32A		A	····BOLT	0821 / 0001	4299 / 1232	2
-	291	NAS1149F0463P	#	A	····WASHER	0821	1103	2
	294	MS35338-44		A	····WASHER, SPLIT LOCK	1104 / 0001	4299 / 1232	2
-	297	20291-001			····ROTARY ARM, ACTUATION	0821	1012	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20291-002			
-	300	20291-002			····ROTARY ARM, ACTUATION	0821	1012	1
					AFTER SB2X-52-03			
	303	20291-002			····ROTARY ARM, ACTUATION	1013 / 0001	4299 / 1232	1
-	306	20289-001		A	····ACTUATOR, LOWER ROTARY LATCH	0821	1016	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20289-002			
-	309	20289-002		A	····ACTUATOR, LOWER ROTARY LATCH	0821	1016	1
					AFTER SB2X-52-03			
	312	20289-002			····ACTUATOR, LOWER ROTARY LATCH	1017 / 0001	4299 / 1232	1
	315	50145-408		A	····BUSHING	0821 / 0001	4299 / 1232	1
	318	NAS1149F0332P		A	····WASHER	0821 / 0001	4299 / 1232	2
	321	NAS43DD3-38FC	(	A	····SPACER, SLEEVE, BOLT	0821 / 0001	4299 / 1232	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	324	NAS1149FN632P		A	····WASHER	0821 / 0001	4299 / 1232	1
	327	MS21044N06		A	····NUT	0821 / 0001	4299 / 1232	1
-	330	NO PRT NUMBER			···UPPER CABLE ASSEMBLY	0821 / 0001	4299 / 1232	NP
-	333	20267-001			····LATCH, ROTARY, LH	0821	1012	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 21861-001			
-	336	20267-003			····LATCH, ROTARY, LH	0821	1012	1
					AFTER SB2X-52-03			
					FOR SPARES USE P/N 21861-001			
-	339	20267-003			····LATCH, ROTARY, LH	1013	2623	1
					FOR SPARES USE P/N 21861-001			
	342	21861-001			····LATCH, ROTARY, LH	2624 / 0001	4299 / 1232	1
-	343	21861-112			·····SPRING	2624 / 0001	4299 / 1232	1
-	345	20267-002			····LATCH, ROTARY, RH	0821	1012	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 21889-001			
-	348	20267-004			····LATCH, ROTARY, RH	0821	1012	1
					AFTER SB2X-52-03			
					FOR SPARES USE P/N 21889-001			
-	351	20267-004			····LATCH, ROTARY, RH	1013	2623	1
					FOR SPARES USE P/N 21889-001			
-	354	21889-001			····LATCH, ROTARY, RH	2624 / 0001	4299 / 1232	1
-	355	21889-112			·····SPRING	2624 / 0001	4299 / 1232	1
	357	20298-001			····SPACER, ROTARY LATCH	0821 / 0001	4299 / 1232	1
-	360	20294-001			····CABLE ATTACH BRACKET, UPPER, LEFT	0821	0890	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20294-003			
-	363	20294-003			····CABLE ATTACH BRACKET, UPPER, LEFT	0821	0890	1
					AFTER SB2X-52-03			
	366	20294-003			····CABLE ATTACH BRACKET, UPPER, LEFT	0891	3539	1
	367	20294-005			····CABLE ATTACH BRACKET, UPPER, LEFT	3540 / 0001	4299 / 1232	1
-	369	20294-002			····CABLE ATTACH BRACKET, UPPER, RIGHT	0821	0890	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20294-003			
-	372	20294-004			····CABLE ATTACH BRACKET, RIGHT, LEFT	0821	0890	1
					AFTER SB2X-52-03			
-	375	20294-004			····CABLE ATTACH BRACKET, RIGHT, LEFT	0891	3539	1
-	376	20294-006			····CABLE ATTACH BRACKET, RIGHT, LEFT	3540 / 0001	4299 / 1232	1
	378	AN4-24A		A	····BOLT	0821 / 0001	4299 / 1232	2
-	381	NAS1149F0463P	#	A	····WASHER	0821	1103	2
	384	MS35338-44		A	····WASHER, SPLIT LOCK	1104 / 0001	4299 / 1232	2
	387	20296-001			····ROTARY ARM, ACTUATION	0821 / 0001	4299 / 1232	1
-	390	20515-001			····SPRING	0821	0956	1
	393	20515-002			····SPRING	0957	2623	1
-	394	20290-001			····ACTUATOR, UPPER ROTARY LATCH	0821	1216	1
					FOR SPARES USE P/N 20290-002			
	396	20290-002			····ACTUATOR, UPPER ROTARY LATCH	1017 / 0001	4299 / 1232	1
	399	50145-408		A	····BUSHING	0821 / 0001	4299 / 1232	1
	500	NAS1149F0332P		A	····WASHER	0821 / 0001	4299 / 1232	2
	503	NAS43DD3-22FC	(	A	····SPACER, SLEEVE, BOLT	0821 / 0001	4299 / 1232	1
	506	NAS1149FN632P		A	····WASHER	0821 / 0001	4299 / 1232	1
	509	MS21044N06		A	····NUT	0821 / 0001	4299 / 1232	1
	512	20292-001			····LATCH ACTUATION CABLE	0821	2462	1
					FOR SPARES USE P/N 20290-004			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	515	20292-003			····LATCH ACTUATION CABLE	2463	2946	1
					FOR SPARES USE P/N 20290-004			
	518	20292-004			····LATCH ACTUATION CABLE	2947 / 0001	4299 / 1232	1
	521	PRT OF CABLE		A	····NUT	0821 / 0001	4299 / 1232	4
	524	PRT OF CABLE		A	····CLIP	0821 / 0001	4299 / 1232	2
-	525	51157-001		A	····RETAINER	0821 / 0001	4299 / 1232	2
-	527	NO PRT NUMBER			···DOOR LOCK ASSEMBLY	0821 / 0001	4299 / 1232	NP
-	530	20273-001			····ACTUATOR, PUSH BUTTON	0821	2958	1
					FOR SPARES USE P/N 20273-002			
-	533	PRT OF ITM 530			·····LOCKING CAM	0821	2958	1
-	536	PRT OF ITM 530			·····SCREW	0821	2958	1
-	539	PRT OF ITM 530			·····LOCK WASHER	0821	2958	1
-	542	PRT OF ITM 530			·····CLIP, RETAINER	0821	2958	1
	545	20273-002			····ACTUATOR, PUSH BUTTON	2959 / 0001	4299 / 1232	1
	548	18954-001			·····LOCKING CAM	2959 / 0001	4299 / 1232	1
	551	PRT OF ITM 545			·····SCREW	2959 / 0001	4299 / 1232	1
	554	PRT OF ITM 545			·····LOCK WASHER	2959 / 0001	4299 / 1232	1
	557	PRT OF ITM 545			·····CLIP, RETAINER	2959 / 0001	4299 / 1232	1
-	560	NO PRT NUMBER			···GAS STRUT ASSEMBLY	0821 / 0001	4299 / 1232	NP
	563	50567-001		A	····BALL STUD	0821 / 0001	4299 / 1232	1
	566	NAS1149F0532P		A	····WASHER	0821	2007	1
	569	50865-518		A	····NUT	0821	2007	1
-	572	17582-001	)		····CATCHER/DIVERTER, LEFT	2008	2203	1
					AFTER SB2X-52-04	0820	2007	
			)		FOR SPARES USE P/N 17582-003			
-	575	17582-002	)		····CATCHER/DIVERTER, RIGHT	2008	2203	1
					AFTER SB2X-52-04	0820	2007	
			)		FOR SPARES USE P/N 17582-004			
-	578	17582-003	)		····CATCHER/DIVERTER, LEFT	2204 / 0001	4299 / 1232	1
					AFTER SB2X-52-04			
-	581	17582-004	)		····CATCHER/DIVERTER, RIGHT	2204 / 0001	4299 / 1232	1
					AFTER SB2X-52-04			
	582	17582-007			····CATCHER/DIVERTER, LEFT	0821 / 0001	4299 / 1232	1
					AFTER SB2X-52-08			
-	583	17582-008			····CATCHER/DIVERTER, RIGHT	0821 / 0001	4299 / 1232	1
					AFTER SB2X-52-08			
	586	17582-009	@		····CATCHER/DIVERTER, LEFT	/ 1198	/ 1203	1
					AFTER SB2X-52-08			
-	589	17582-010	@		····CATCHER/DIVERTER, RIGHT	/ 1198	/ 1203	1
					AFTER SB2X-52-08			
	591	19030-001		A	····SEAT	2008 / 0001	4299 / 1232	1
	594	50865-518		A	····NUT	2008 / 0001	4299 / 1232	1
	595	19030-001		A	····NUT-CAP	2008 / 0001	4299 / 1232	1
	596	NAS1149F0532P			····WASHER	2009 / 0001	4299 / 1232	1
	597	NAS1149F0332P		A	····WASHER	0821 / 0001	4299 / 1232	2
	598	MS21044N3		A	····NUT	0821 / 0001	4299 / 1232	2
-	600	20272-001			····ATTACH BRACKET, LEFT	0821	1306	1
	603	20272-003			····ATTACH BRACKET, LEFT	1307 / 0001	4299 / 1232	1
-	606	20272-002			····ATTACH BRACKET, RIGHT	0821	1306	1
-	609	20272-004			····ATTACH BRACKET, RIGHT	1307 / 0001	4299 / 1232	1
	612	MS24694S55		A	····SCREW	0821 / 0001	4299 / 1232	2
	615	NAS1149F0332P		A	····WASHER	0821 / 0001	4299 / 1232	2
	618	MS21042-3		A	····NUT	0821 / 0001	4299 / 1232	2
	621	50567-001		A	····BALL STUD	0821 / 0001	4299 / 1232	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	624	NAS1149F0532P		A	····WASHER	0821 / 0001	4299 / 1232	1
	627	50865-518		A	····NUT	0821 / 0001	4299 / 1232	1
	630	20297-001			····GAS STRUT	0821	2114	1
					FOR SPARES USE P/N 18200-003			
	633	18200-001			····GAS STRUT	2115	2224	1
					FOR SPARES USE P/N 18200-003			
	636	18200-002			····GAS STRUT	2225	2235	1
					FOR SPARES USE P/N 18200-003			
	639	18200-003			····GAS STRUT	2236 / 0001	4299 / 1232	1
	641	EF110			·····ROD END	0821	2114	2
	643	18200-102			·····ROD END	2115 / 0001	4299 / 1232	2
					AFTER SB2X-52-08			
	647	PRT OF ITM 641			·····LOCKING CAP	0821 / 0001	4299 / 1232	2
	650	PRT OF ITM 643			·····WIRE RETAINING CLIP	0822 / 0001	4299 / 1233	2
					AFTER SB2X-52-08			
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-03 DET			UPPER FUSELAGE HINGE			
	401	RF 53-40-03 DET			LOWER FUSELAGE HINGE			
	402	RF 53-40-03 DET			STRUT ATTACH BRACKET			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1557, 22-1569; REFER TO 22-1594 FOR PART IDENTIFICATION.			
			!		STACKUP SEQUENCE IS OPTIONAL, SPACER AND WASHERS MAY BE SUBSTITUTED AS REQUIRED TO SHIM DOOR IN DOOR JAM/HINGE POCKET.			
			$		WASHER MAY BE ADDED IF REQUIRED TO REDUCE CLEARANCE BETWEEN BRACKET AND FUSELAGE.			
			#		ADDITIONAL WASHERS MAY BE ADDED AS REQUIRED TO ENSURE PROPER BOLT FIT.			
			?		USE EITHER COVER FOR BEST FIT WITH FUSELAGE HINGE POCKET.			
			)		IF REPLACING ORDER KIT 70544 REFER TO SB2X-52-08.			
			@		SERIALS 1198 AND 1203 ORDER 17582-009, -010.			
			(		MAY BE SUBSTITUTED BY ALT SPACER NAS43DD3-XXFC & NAS1149 WASHERS TO OBTAIN CLEARANCE OF 0.01 TO 0.03 INCH W/ ROTARY ARM.			

Intentionally Left Blank

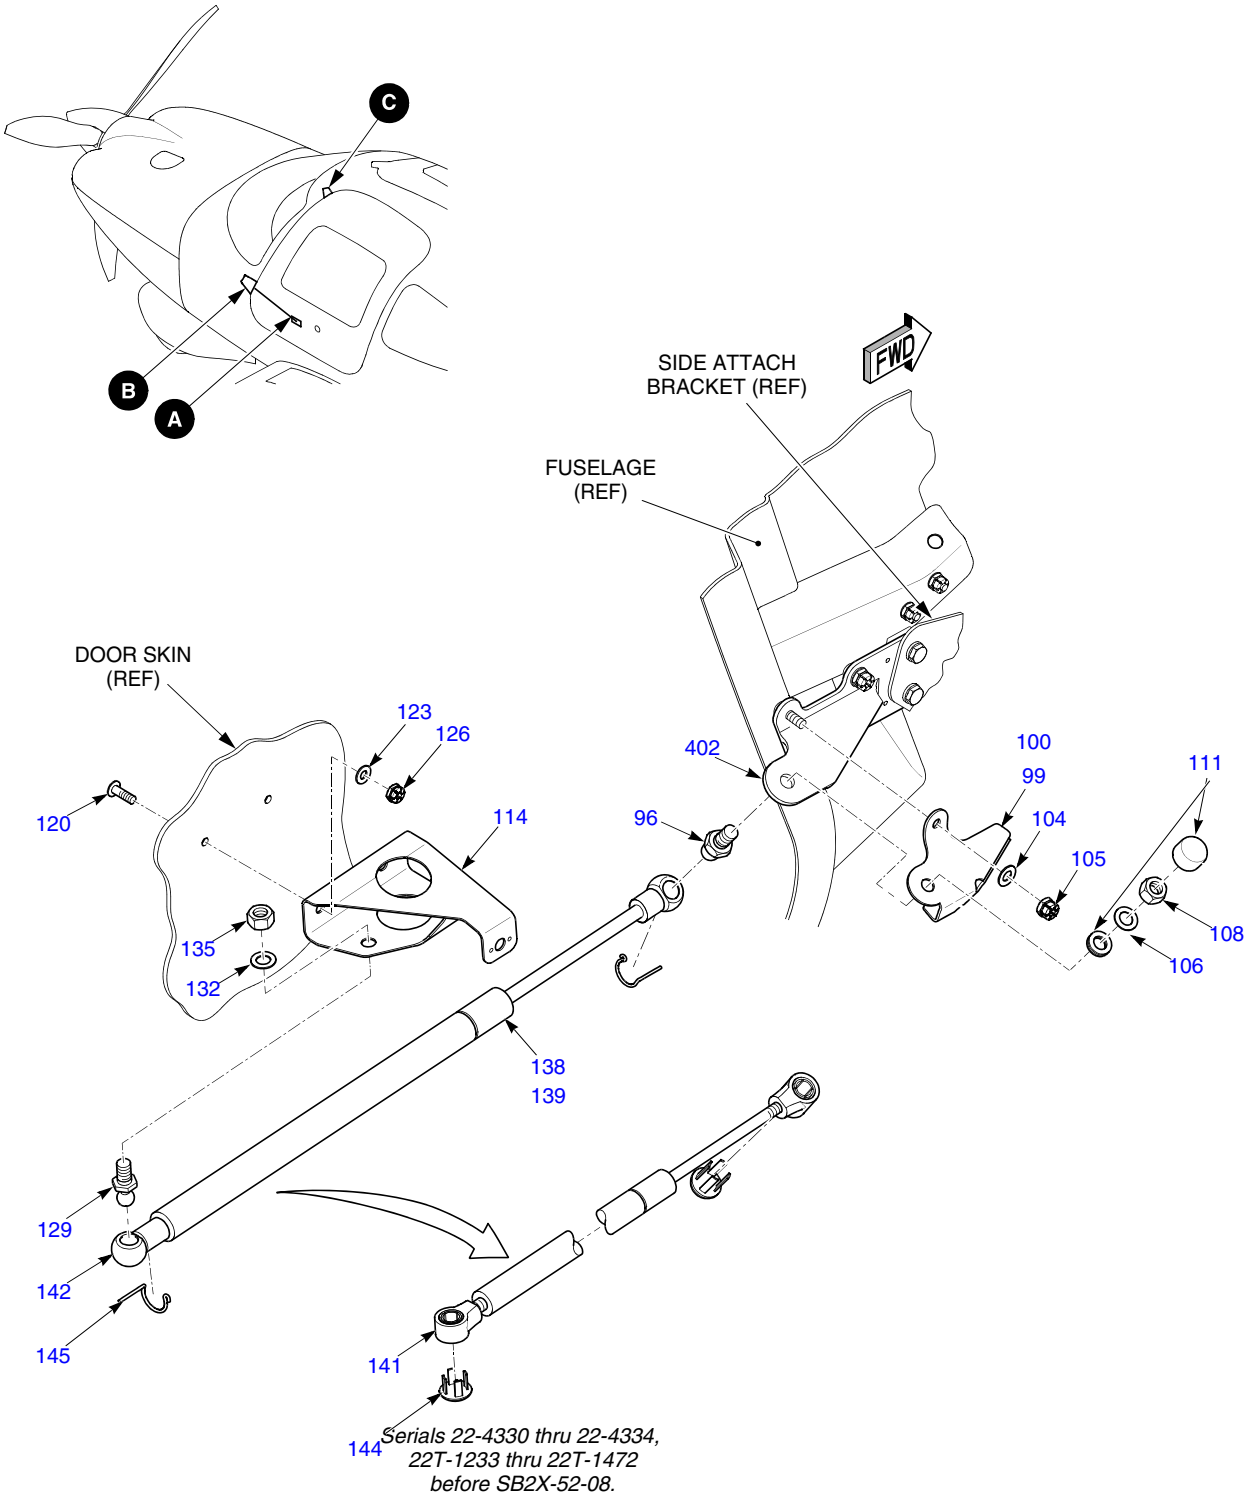

Figure-03

Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (1 of 6)

EFFECTIVITY:
Serials 22-4300 & subs, 22T-1233 & subs

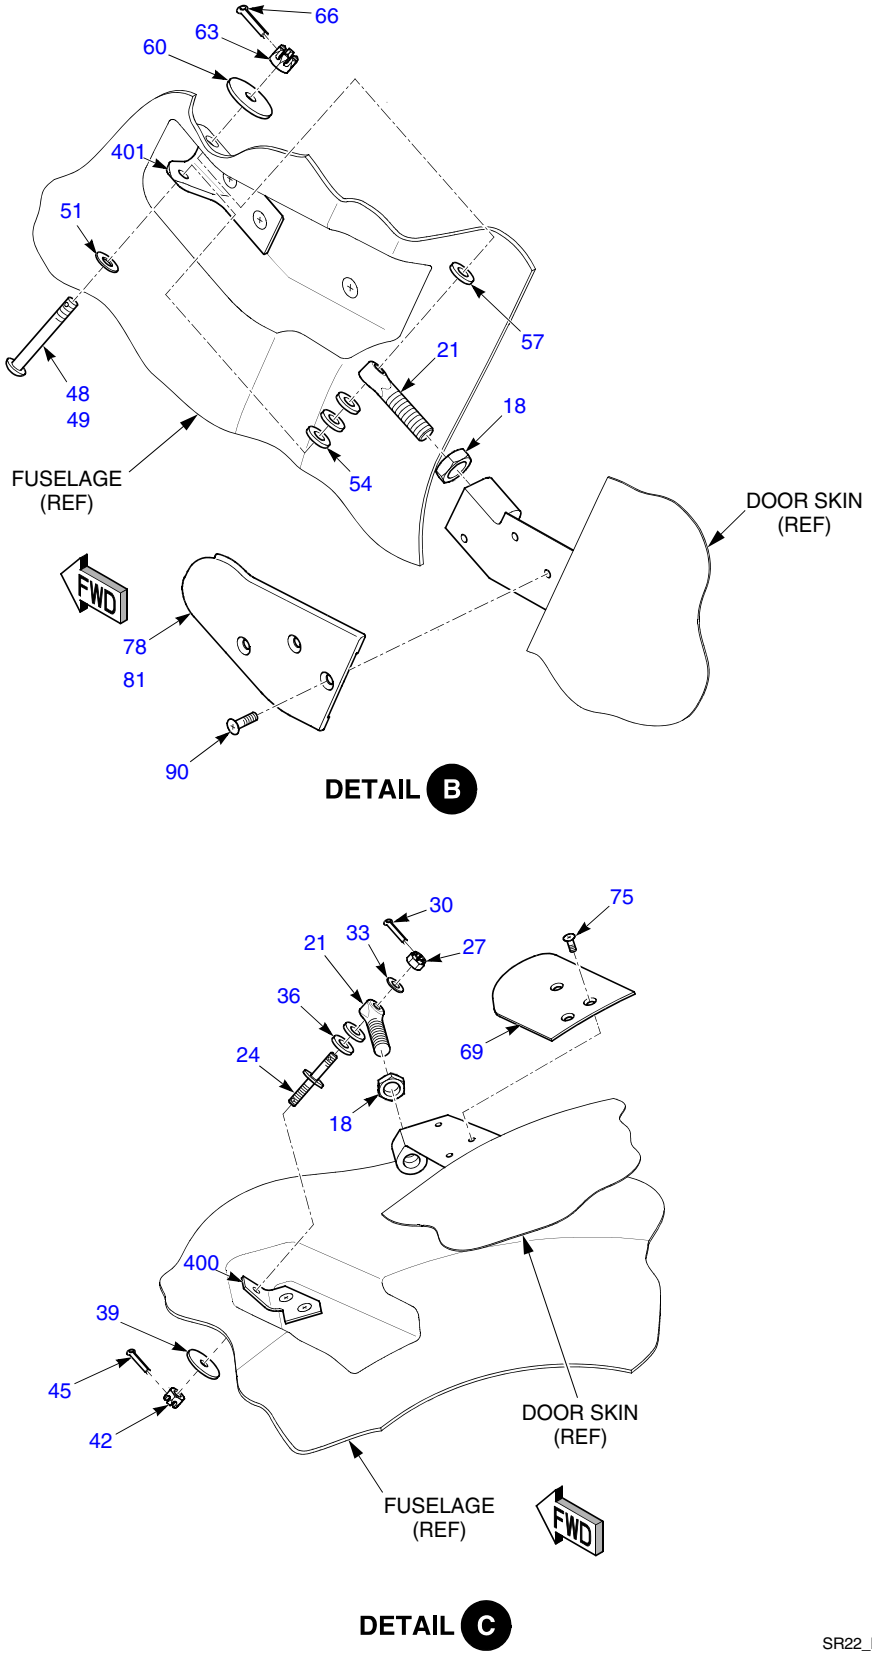

Figure-03

Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (2 of 6)

EFFECTIVITY:
Serials 22-4300 & subs, 22T-1233 & subs

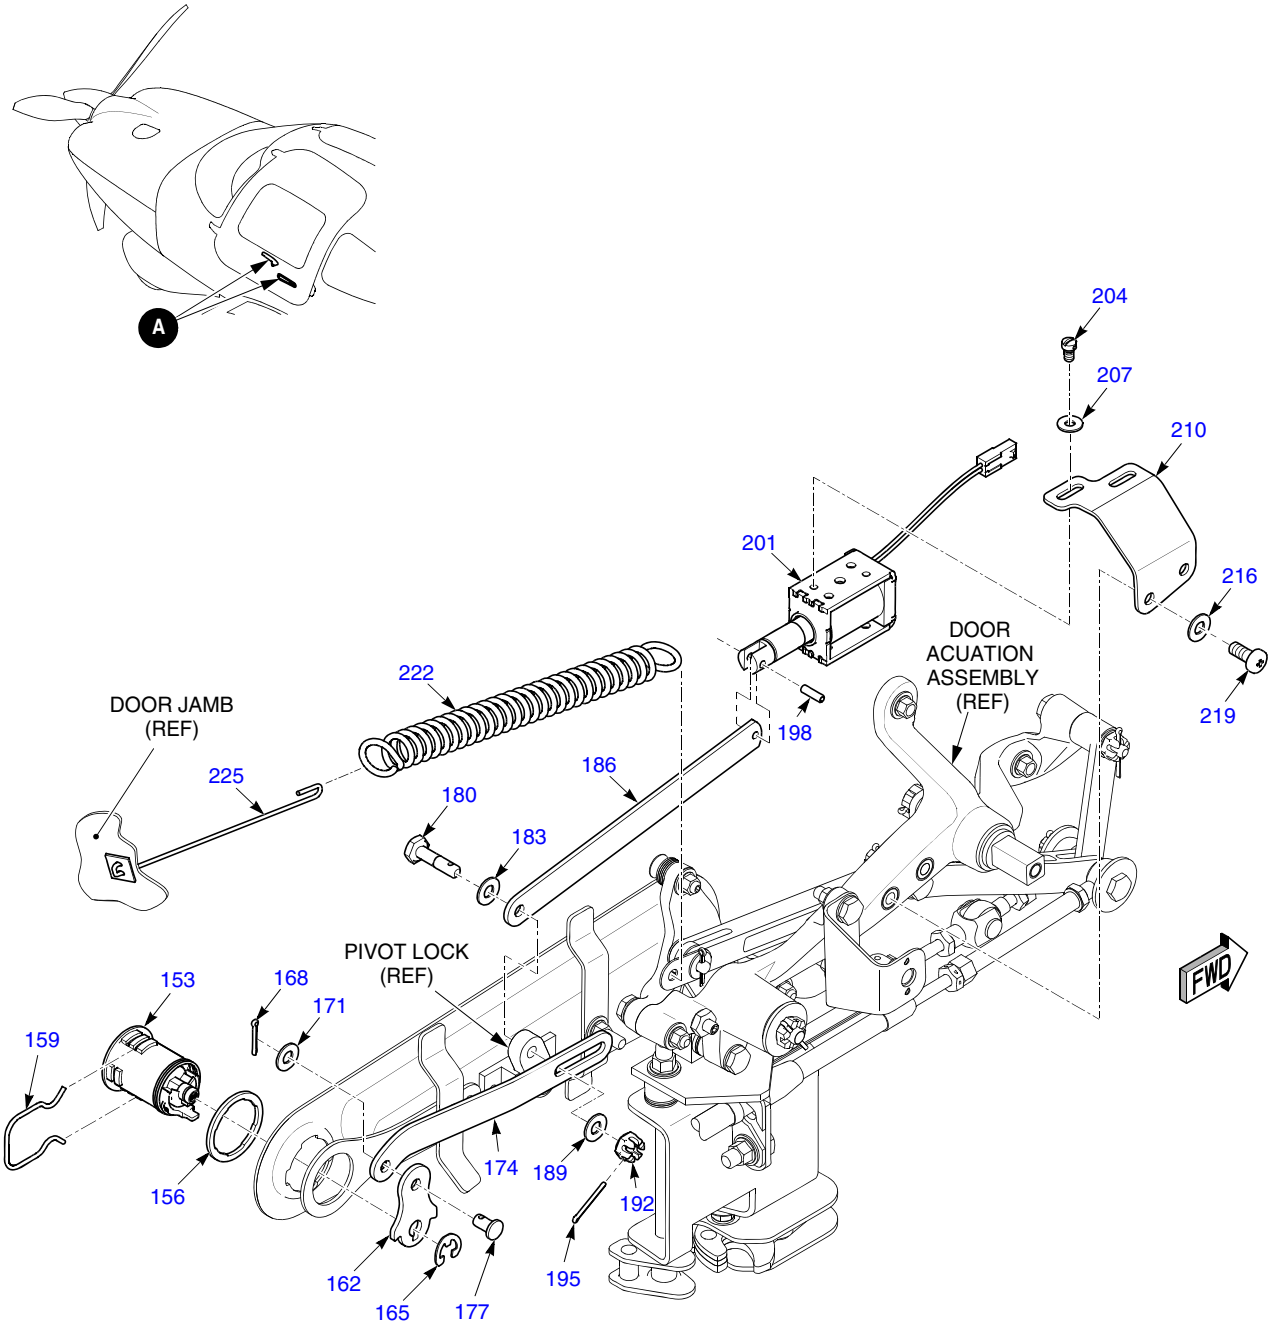

DETAIL A

Serials 22-4300 & subs, 22T-1233 & subs

SR22_PC52_2215

Figure-03
Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (3 of 6)

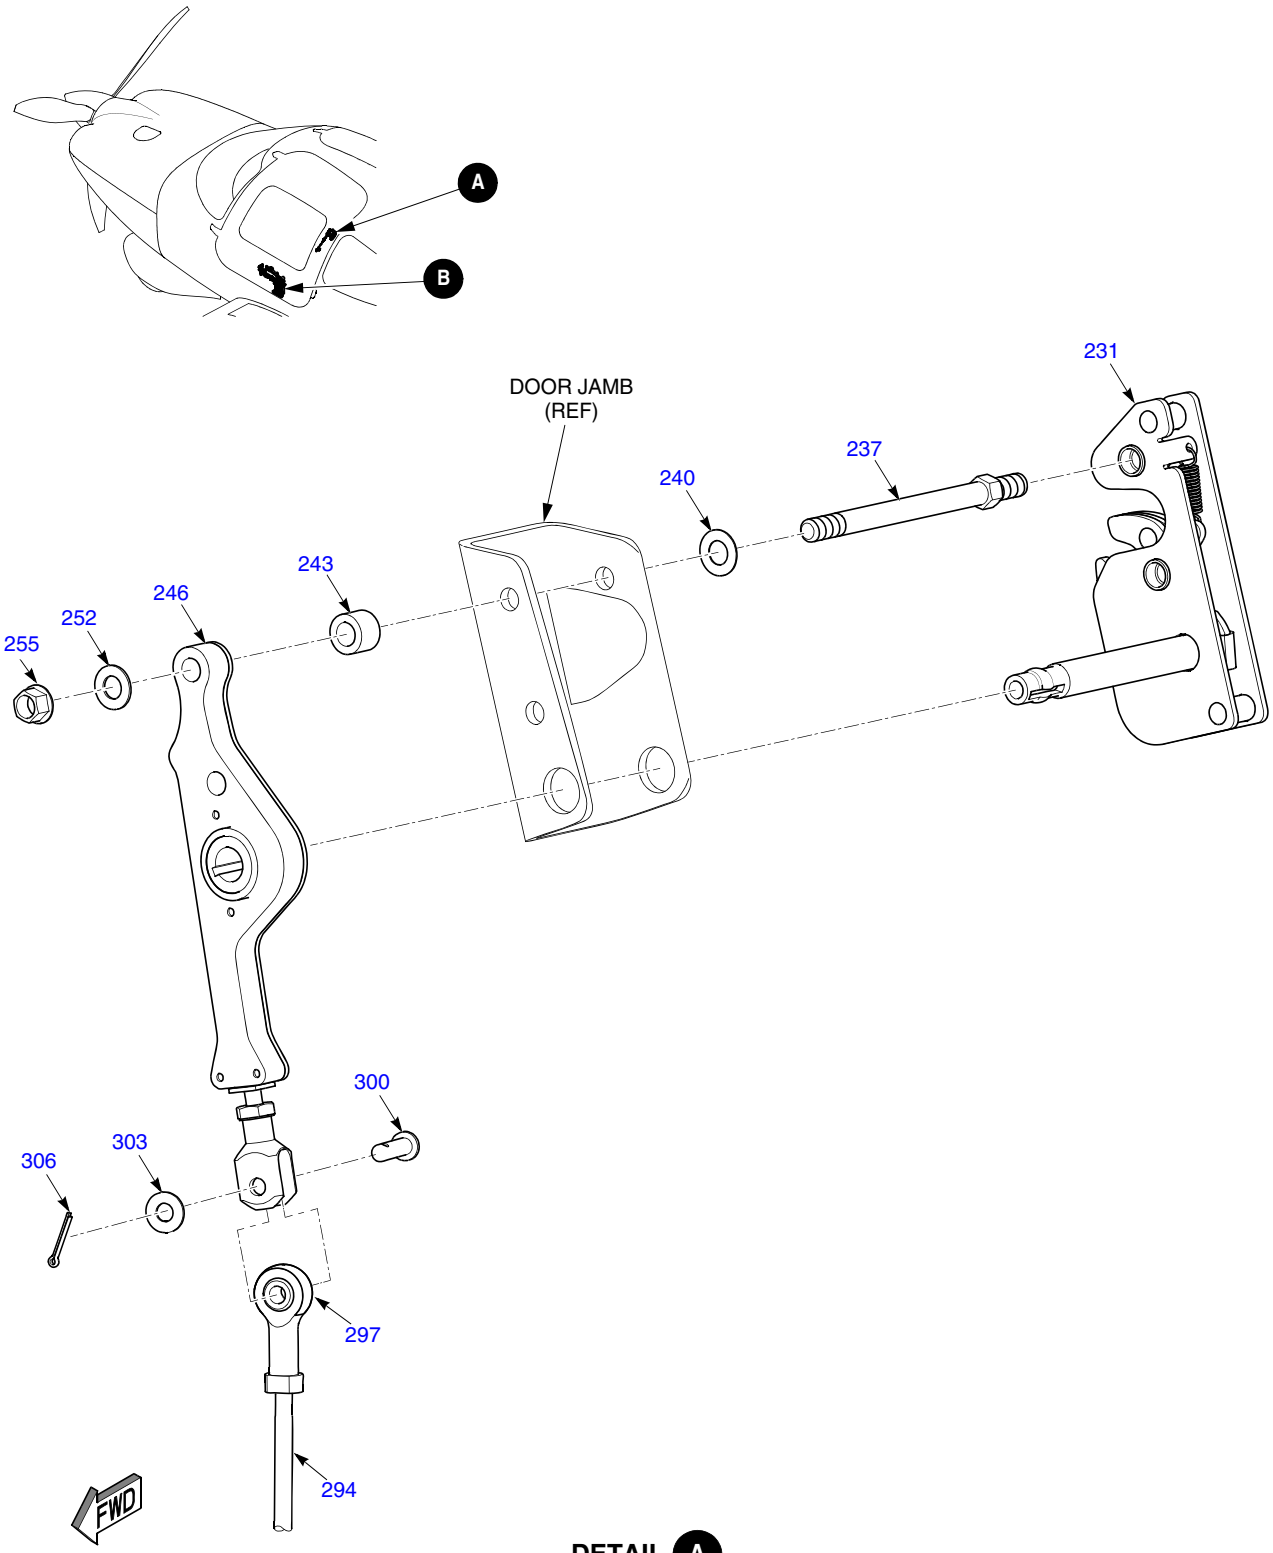

DETAIL A

Serials 22-4300 & subs, 22T-1233 & subs

SR22_PC52_2217

Figure-03

Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (Sheet 4 of 6)

EFFECTIVITY:
All

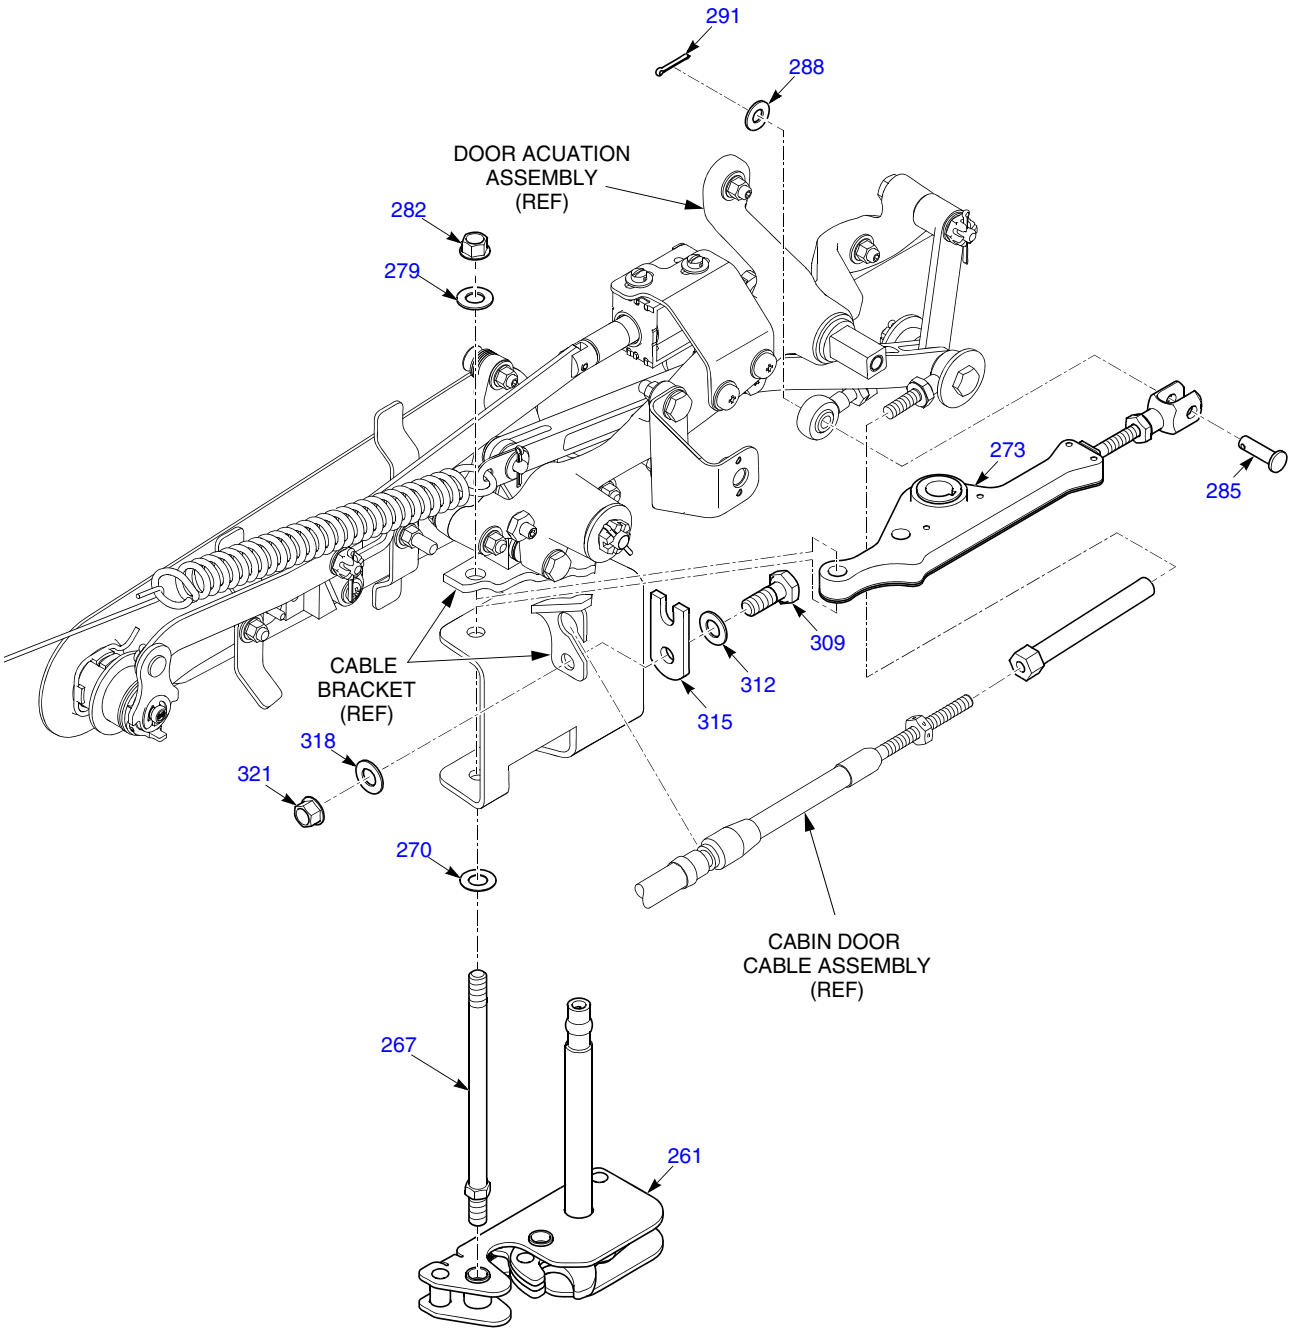

DETAIL B

Serials 22-4300 & subs, 22T-1233 & subs

SR22_PC52_2219

Figure-03

Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs (Sheet 5 of 6)

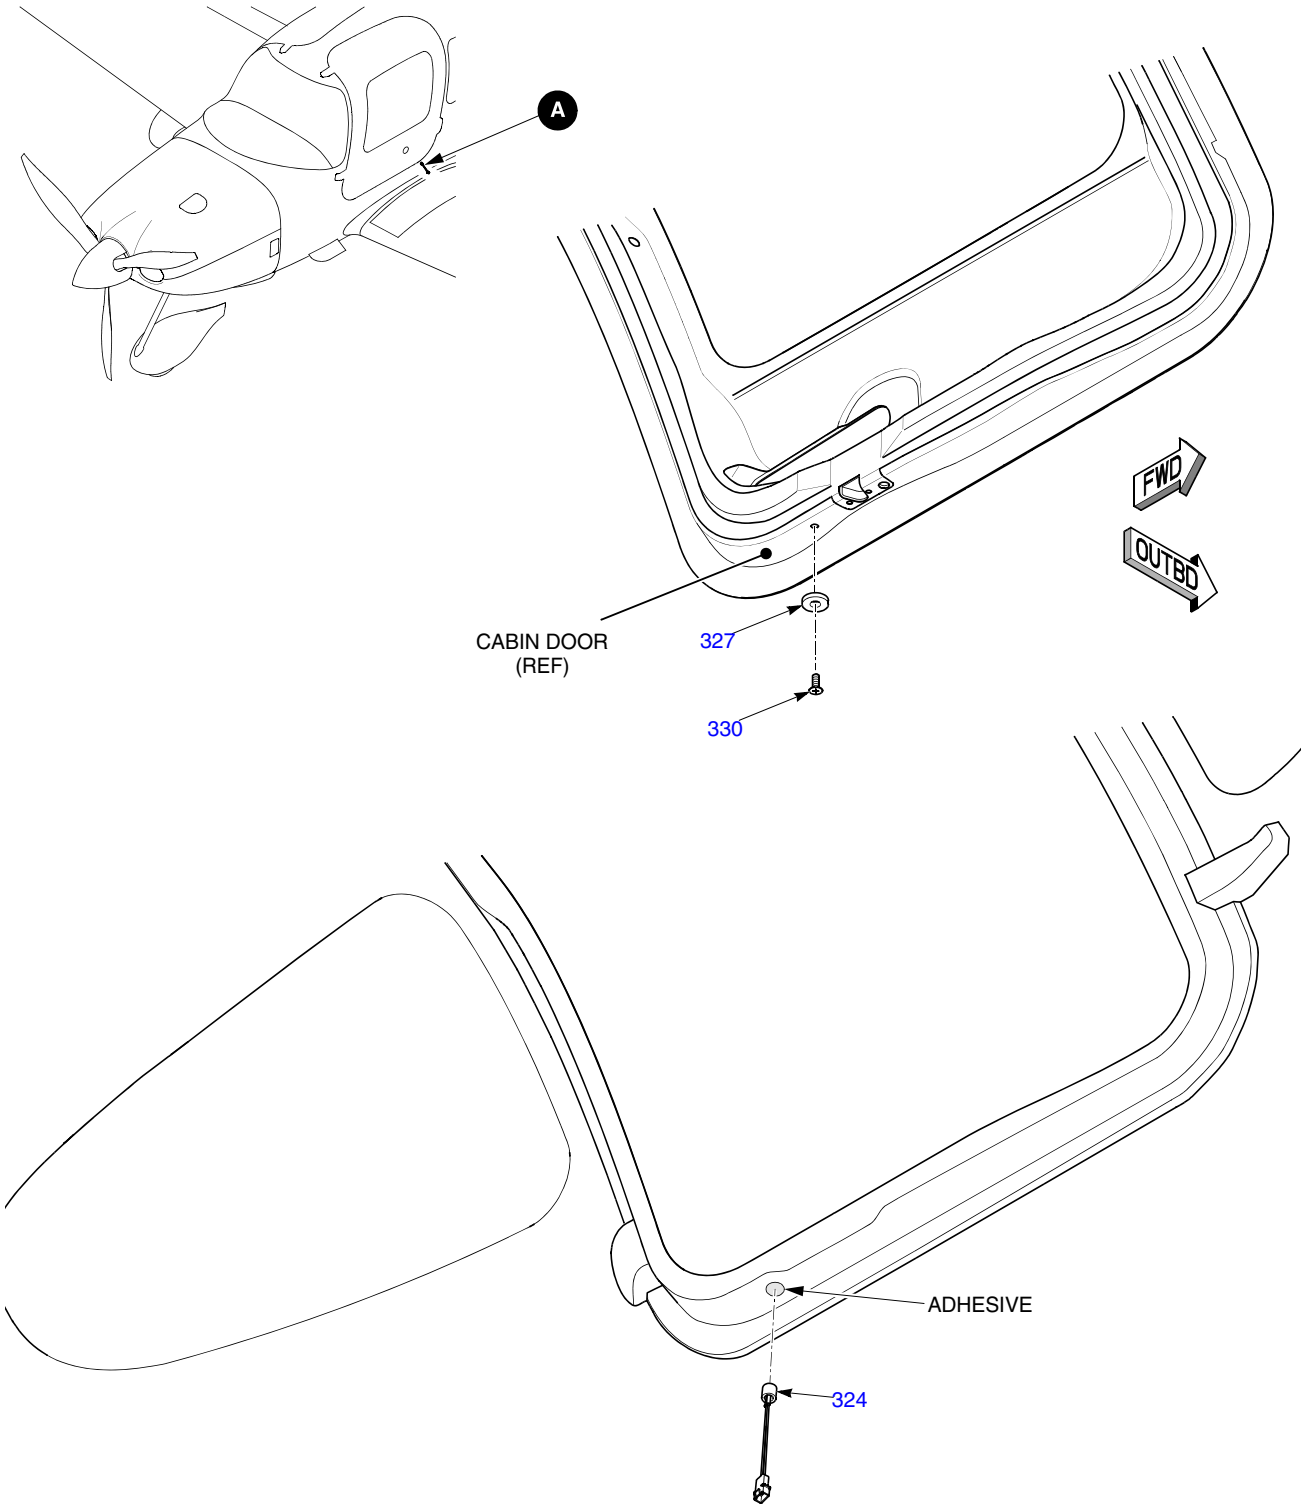

DETAIL A

Serials 22-4300 & subs, 22T-1233 & subs w/ Convenience Lighting

SR22_PC52_2213

Figure-03

Cabin Door - Serials 22-4300 & subs, 22T-1233 & subs w/ Convenience Lighting (Sheet 6 of 6)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		CABIN DOOR INSTALLATION	4300 / 1233	/	NP
-	3	32918-001			·CABIN DOOR ASSY LH	4300 / 1233	/	1
					FOR SPARES USE P/N 32918-007			
-	4	32918-003			·CABIN DOOR ASSY LH	4300 / 1233	/	1
					FOR SPARES USE P/N 32918-007			
-	5	32918-007			·CABIN DOOR ASSY LH	4300 / 1233	/	1
-	6	32918-002			·CABIN DOOR ASSY RH	4300 / 1233	/	1
					FOR SPARES USE P/N 32918-008			
-	7	32918-004			·CABIN DOOR ASSY RH	4300 / 1233	/	1
					FOR SPARES USE P/N 32918-008			
-	8	32918-008			·CABIN DOOR ASSY RH	4300 / 1233	/	1
-	9	33589-001			··CABIN DOOR STRUCTURAL ASSY LH	4300 / 1233	/	1
					FOR SPARES USE P/N 33589-003			
-	10	33589-003			··CABIN DOOR STRUCTURAL ASSY LH			
-	12	33589-002			··CABIN DOOR STRUCTURAL ASSY RH	4300 / 1233	/	1
					FOR SPARES USE P/N 33589-004			
-	13	33589-004			··CABIN DOOR STRUCTURAL ASSY RH	4300 / 1233	/	1
-	15	NO PRT NUMBER			···CABIN DOOR ASSY ATTACHING PARTS	4300 / 1233	/	NP
	18	AN316-6R		A	····HEX NUT	4300 / 1233	/	2
	21	21845-002			····ROD END	4300 / 1233	/	2
	24	21933-004		A	····HINGE PIN	4300 / 1233	/	1
	27	MS17826-3		A	····NUT	4300 / 1233	/	1
	30	MS24665-132		A	····COTTER PIN	4300 / 1233	/	1
	33	NAS1149F0316P		A	····WASHER	4300 / 1233	/	1
	36	NAS1149F0363P	!	A	····WASHER	4300 / 1233	/	1
	39	AN970-3		A	····WASHER	4300 / 1233	/	1
	42	MS17825-3		A	····NUT	4300 / 1233	/	1
	45	MS24665-132		A	····COTTER PIN	4300 / 1233	/	1
	48	AN3-13		A	····BOLT	4300 / 1233	/	1
					ALTERNATE FOR P/N AN23-22			
	49	AN23-22		A	····BOLT	4300 / 1233	/	1
					ALTERNATE FOR P/N AN3-13			
	51	NAS1149F0316P		A	····WASHER	4300 / 1233	/	1
	54	NAS1149F0363P	!	A	····WASHER	4300 / 1233	/	1
	57	NAS43DD3-8FC	!	A	····SPACER	4300 / 1233	/	1
	60	AN970-3		A	····WASHER	4300 / 1233	/	1
	63	MS17825-3		A	····NUT	4300 / 1233	/	1
	66	MS24665-132		A	····COTTER PIN	4300 / 1233	/	1
	69	20270-001			····PLATE, COVER, HINGE, UPPER, LH	4300 / 1233	/	1
-	72	20270-002			····PLATE, COVER, HINGE, UPPER, RH	4300 / 1233	/	1
	75	MS24693S26		A	····SCREW	4300 / 1233	/	3
	78	20271-007	?		····PLATE, COVER, HINGE, LOWER, LH	4300 / 1233	/	1
	81	20271-005	?		····PLATE, COVER, HINGE, LOWER, LH	4300 / 1233	/	1
-	84	20271-008	?		····PLATE, COVER, HINGE, LOWER, RH	4300 / 1233	/	1
-	87	20271-006	?		····PLATE, COVER, HINGE, LOWER, RH	4300 / 1233	/	1
	90	MS24693S28		A	····SCREW	4300 / 1233	/	3
-	93	NO PRT NUMBER			···GAS STRUT ASSEMBLY	4300 / 1233	/	NP
	96	50567-001		A	····BALL STUD	4300 / 1233	/	1
	99	17582-005	)		····CATCHER/DIVERTER, LH	4300 / 1233	4328 / 1301	1
					FOR SPARES USE P/N 17582-009			
	100	17582-009			····CATCHER/DIVERTER, LH	4329 / 1302	/	1
-	102	17582-006	)		····CATCHER/DIVERTER, RH	4300 / 1233	4328 / 1301	1
					FOR SPARES USE P/N 17582-010			
-	103	17582-010			····CATCHER/DIVERTER, RH	4329 / 1302	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	104	NAS1149F0332P			····WASHER	4300 / 1233	/	1
	105	MS21044N3			····NUT	4300 / 1233	/	1
	106	NAS1149F0532P		A	····WASHER	4300 / 1233	/	1
	108	50865-518		A	····NUT	4300 / 1233	/	1
	111	19030-001		A	····NUT-CAP	4300 / 1233	/	1
	114	20272-003			····ATTACH BRACKET, LEFT	4300 / 1233	/	1
-	117	20272-004			····ATTACH BRACKET, RIGHT	4300 / 1233	/	1
	120	HL-21-6-4			····HI-LOK	4300 / 1233	/	2
	123	NAS1149F0332P		A	····WASHER	4300 / 1233	/	2
	126	MS21042-3			····NUT	4300 / 1233	/	2
	129	50567-001		A	····BALL STUD	4300 / 1233	/	1
	132	NAS1149F0532P		A	····WASHER	4300 / 1233	/	1
	135	50865-518		A	····NUT	4300 / 1233	/	1
	138	18200-003			····GAS STRUT	4300 / 1233	4328 / 1301	1
	139	18200-004			····GAS STRUT	4329 / 1302	/	1
	141	EF110			·····ROD END	4300 / 1233	/	2
	142	18200-102			·····ROD END	4300 / 1233	/	2
					AFTER SB2X-52-08			
	144	PRT OF ITM 141			·····LOCKING CAP	4300 / 1233	/	2
	145	PRT OF ITEM 142			·····WIRE RETAINING CLIP			
					AFTER SB2X-52-08			
-	147	NO PRT NUMBER			···DOOR LOCK ASSEMBLY	4300 / 1233	/	NP
-	150	33525-001			····LOCK CYLINDER, CABIN DOOR	4300 / 1233	/	1
	153	33525-101			·····LOCK	4300 / 1233	/	1
	156	33525-102			·····GASKET	4300 / 1233	/	1
	159	33525-103			·····WIRE RETAINING CLIP	4300 / 1233	/	1
	162	33525-104			·····CAM	4300 / 1233	/	1
	165	33525-105			·····E-CLIP	4300 / 1233	/	1
	168	MS24665-132		A	····COTTER PIN	4300 / 1233	/	1
	171	NAS1149B0332H		A	····WASHER	4300 / 1233	/	1
	174	33573-001			····LINKAGE, POWERED DOOR LOCK	4300 / 1233	/	1
	177	MS20392-2C7		A	····CLEVIS PIN	4300 / 1233	/	1
	180	AN3-6		A	····BOLT	4300 / 1233	/	1
	183	NAS1149B0332H		A	····WASHER	4300 / 1233	/	1
	186	35181-002			····LINKAGE, SOLENOID, POWERED DOOR LOCK	4300 / 1233	/	1
	189	NAS1149B0332H		A	····WASHER	4300 / 1233	/	1
	192	AN310-3		A	····NUT	4300 / 1233	/	1
	195	MS24665-134		A	····COTTER PIN	4300 / 1233	/	1
	198	51625-002		A	····SPRING PIN	4300 / 1233	/	1
	201	37613-001			····SOLENOID, POWERED DOOR LOCK	4300 / 1233	/	1
	204	AN503-6-4		A	····SCREW	4300 / 1233	/	2
	207	NAS1149FN632P		A	····WASHER	4300 / 1233	/	2
	210	35179-001			····BRACKET, POWERED DOOR LOCK, LH	4300 / 1233	/	1
-	213	35180-001			····BRACKET, POWERED DOOR LOCK, RH	4300 / 1233	/	1
	216	NAS1149F0332P		A	····WASHER	4300 / 1233	/	2
	219	MS27039-1-07		A	····SCREW	4300 / 1233	/	2
	222	54688-001			···SPRING, EXTENSION	4300 / 1233	/	1
	225	33590-001			···HOOK, SPRING ATTACH, DOOR	4300 / 1233	/	1
-	228	NO PRT NUMBER			···UPPER LATCH ASSEMBLY	4300 / 1233	/	NP
-	230	32920-011			····ASSY, LATCH, DOOR, UPPER, LH	4300 / 1233	/	1
					FOR SPARES USE P/N 32920-015			
	231	32920-015			····ASSY, LATCH, DOOR, UPPER, LH	4300 / 1233	/	1
-	234	32920-012			····ASSY, LATCH, DOOR, UPPER, RH	4300 / 1233	/	1
					FOR SPARES USE P/N 32920-016			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	235	32920-016			····ASSY, LATCH, DOOR, UPPER, RH	4300 / 1233	/	1
-	236	37205-001			····STUD, LATCH, CABIN DOOR, UPPER	4300 / 1233	/	2
					FOR SPARES USE P/N 37205-003			
	237	37205-003			····STUD, LATCH, CABIN DOOR, UPPER	4300 / 1233	/	2
	240	NAS1149F0416P		A	····WASHER	4300 / 1233	/	2
	243	NAS42DD8-20FC		A	····SPACER	4300 / 1233	/	2
	246	33515-001			····ASSY, UPPER GEARBOX, LH	4300 / 1233	/	1
-	249	33515-002			····ASSY, UPPER GEARBOX, RH	4300 / 1233	/	1
	252	NAS1149F0432P		A	····WASHER	4300 / 1233	/	2
	255	MS21042-4		A	····NUT	4300 / 1233	/	2
-	258	NO PRT NUMBER			···LOWER LATCH ASSEMBLY	4300 / 1233	/	NP
	261	32920-009			····ASSY, LATCH, DOOR, LOWER, LH	4300 / 1233	/	1
-	264	32920-010			····ASSY, LATCH, DOOR, LOWER, RH	4300 / 1233	/	1
-	266	37205-002			····STUD, LATCH, CABIN DOOR, LOWER	4300 / 1233	/	2
					FOR SPARES USE P/N 37205-004			
	267	37205-004			····STUD, LATCH, CABIN DOOR, LOWER	4300 / 1233	/	2
	270	NAS1149F0416P		A	····WASHER	4300 / 1233	/	2
-	271	33514-001			····ASSY, LOWER GEARBOX, LH	4300 / 1233	/	1
					FOR SPARES USE P/N 33514-005			
-	272	33514-003			····ASSY, LOWER GEARBOX, LH	4300 / 1233	/	1
					FOR SPARES USE P/N 33514-005			
	273	33514-005			····ASSY, LOWER GEARBOX, LH	4300 / 1233	/	1
-	276	33514-002			····ASSY, LOWER GEARBOX, RH	4300 / 1233	/	1
					FOR SPARES USE P/N 33514-006			
-	277	33514-004			····ASSY, LOWER GEARBOX, RH	4300 / 1233	/	1
					FOR SPARES USE P/N 33514-006			
-	278	33514-006			····ASSY, LOWER GEARBOX, RH	4300 / 1233	/	1
	279	NAS1149F0432P		A	····WASHER	4300 / 1233	/	2
	282	MS21042-4		A	····NUT	4300 / 1233	/	2
	285	MS20392-2C17			····CLEVIS PIN	4300 / 1233	/	1
	288	NAS1149F0332P		A	····WASHER	4300 / 1233	/	1
	291	MS24665-132		A	····COTTER PIN	4300 / 1233	/	1
	294	33520-001			···DOOR CABLE	4300 / 1233	/	1
	297	54117-003			····ROD END	4300 / 1233	/	1
	300	MS20392-2C17		A	···CLEVIS PIN	4300 / 1233	/	1
	303	NAS1149F0332P		A	···WASHER	4300 / 1233	/	1
	306	MS24665-132		A	···COTTER PIN	4300 / 1233	/	1
	309	AN4-5A		A	···BOLT	4300 / 1233	/	1
	312	NAS1149F0432P		A	···WASHER	4300 / 1233	/	1
	315	50223-001			···CLIP	4300 / 1233	/	1
	318	NAS1149F0432P		A	···WASHER	4300 / 1233	/	1
	321	MS21042-4			···NUT	4300 / 1233	/	1
	324	37223-001	#		·ASSEMBLY, MAGNETIC SWITCH	4300 / 1233	/	2
	327	37306-001	#		·MAGNET, DOOR	4300 / 1233	/	2
	330	MS24694-C50	#	A	·SCREW	4300 / 1233	/	2
-	333	36774-001	#		·ASSEMBLY, KEY FOB	4300 / 1233	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-03 DET			UPPER FUSELAGE HINGE			
	401	RF 53-40-03 DET			LOWER FUSELAGE HINGE			
	402	RF 53-40-03 DET			STRUT ATTACH BRACKET			
					SYMBOL NOTES:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22T-1198, 22T-1203; REFER TO 22T-1233 FOR PART IDENTIFICATION.			
			!		STACKUP SEQUENCE IS OPTIONAL, SPACER AND WASHERS MAY BE SUBSTITUTED AS REQUIRED TO SHIM DOOR IN DOOR JAM/HINGE POCKET.			
			?		USE EITHER COVER FOR BEST FIT WITH FUSELAGE HINGE POCKET.			
			#		INSTALLED ON AIRCRAFT W/ CONVENIENCE LIGHTING			
			)		IF REPLACING ORDER KIT 70545 REFER TO SB2X-52-08.			

EFFECTIVITY:
All

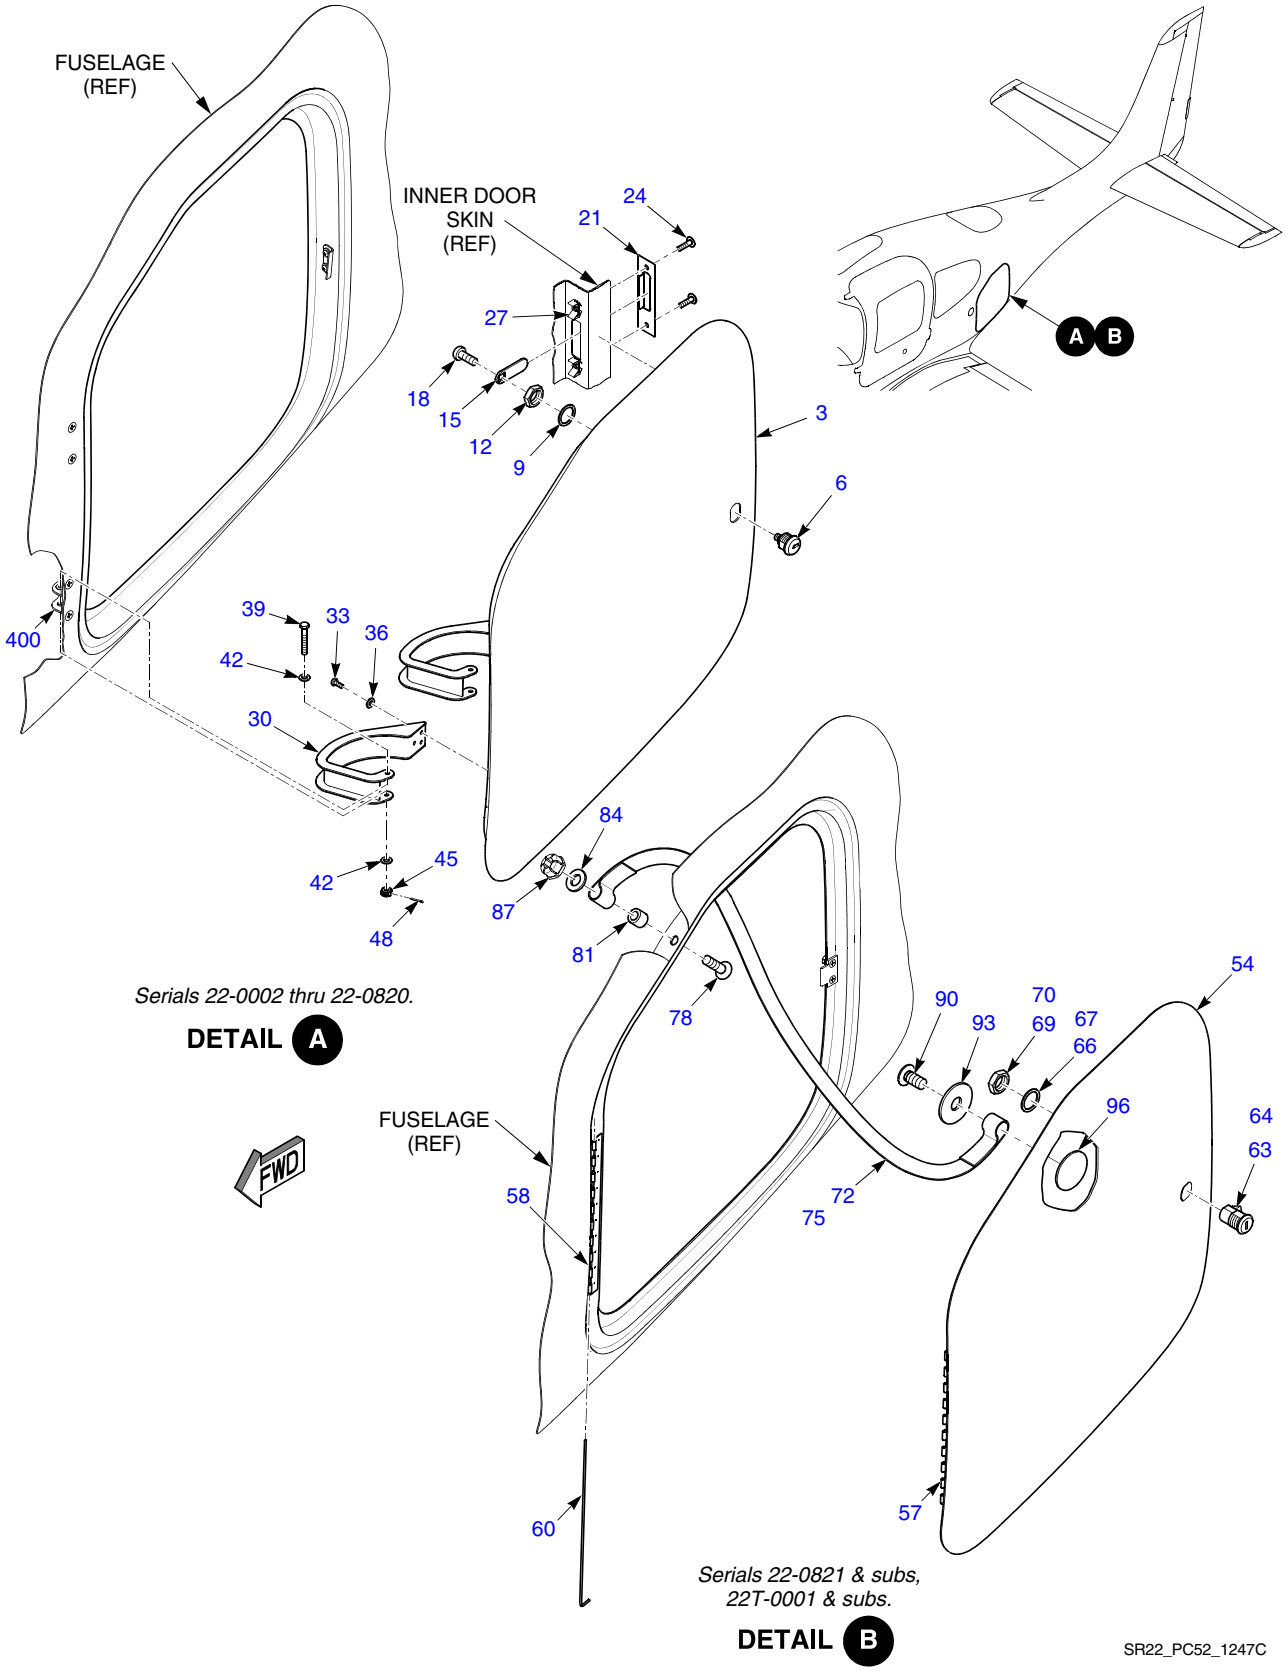

Figure-01
Baggage Door

EFFECTIVITY:
All

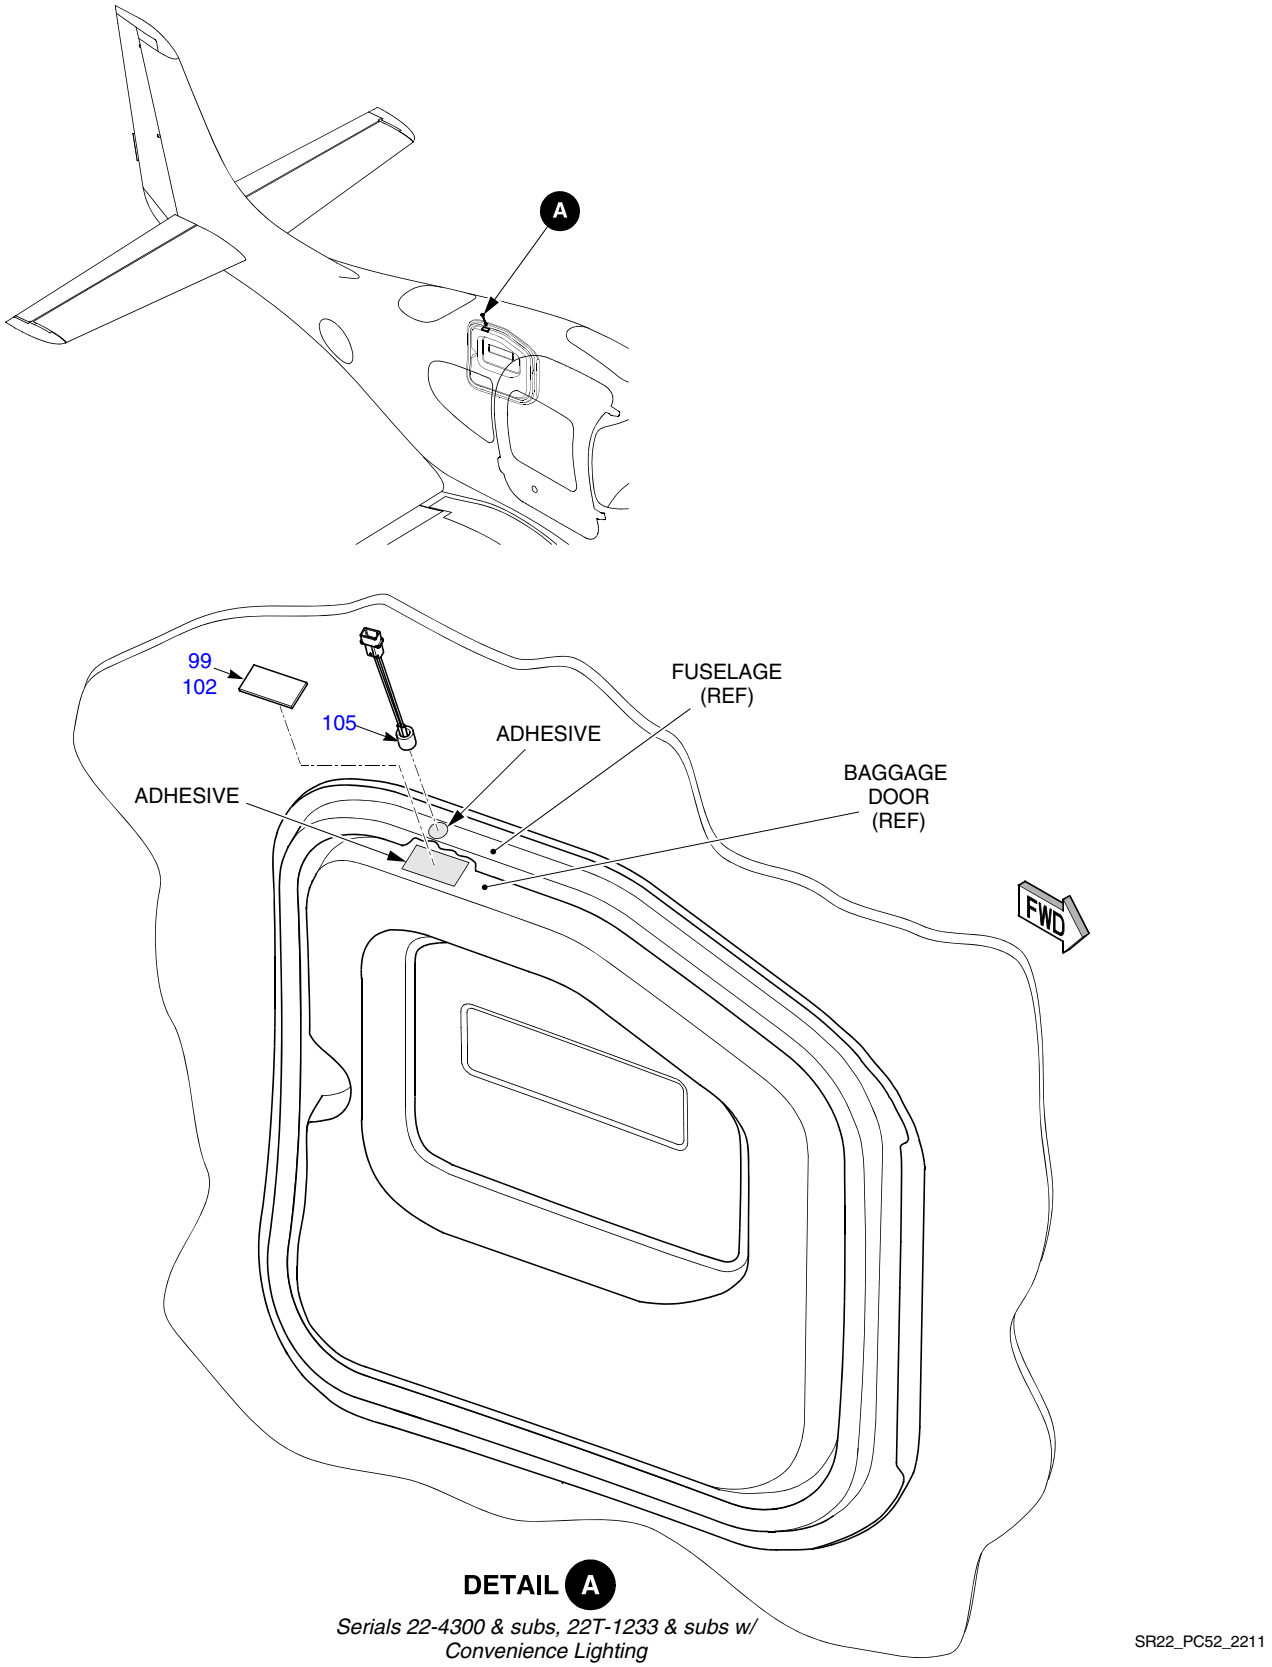

Figure-01

Baggage Door Magnet and Proximity Sensor - Serials 22-4300 & subs, 22T-1233 & subs w/ Convenience Lighting

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			BAGGAGE DOOR INSTALLATION	0002	0820	NP
	3	10223-002			·BAGGAGE DOOR ASSY	0002	0820	1
	6	50487-002			·LOCK ASSEMBLY	0002	0820	1
	9	PRT OF ITM 6		A	·WASHER	0002	0820	1
	12	PRT OF ITM 6		A	·NUT	0002	0820	1
	15	PRT OF ITM 6			·LOCK TAB	0002	0820	1
	18	PRT OF ITM 6		A	·SCREW	0002	0820	1
	21	11965-004			·LOCK COVER	0002	0820	1
	24	MS51861-45		A	·SCREW	0002	0820	2
	27	50486-002		A	·CLIP	0002	0820	2
	30	11983-001			·HINGE	0002	0820	2
	33	MS27039-0809		A	·SCREW	0002	0820	6
	36	NAS1149FN832P		A	·WASHER	0002	0820	6
	39	AN3-16		A	·BOLT	0002	0820	2
	42	NAS1149F0363P		A	·WASHER	0002	0820	4
	45	AN320-3		A	·NUT	0002	0820	2
	48	MS24665-130		A	·COTTER PIN	0002	0820	2
-	51	NO PRT NUMBER			BAGGAGE DOOR INSTALLATION	0821 / 0001	/	NP
	54	20302-001			·BAGGAGE DOOR ASSY	0821 / 0001	/	1
	57	20305-001			·HINGE, BAGGAGE DOOR	0821 / 0001	/	1
	58	20309-001			·HINGE, FUSELAGE	0821 / 0001	/	
	60	20303-102		A	·HINGE ROD	0821 / 0001	/	1
	63	20277-001			·LOCK ASSEMBLY	0821 / 0001	4299 / 1232	1
	64	33525-002			·LOCK ASSEMBLY	4300 / 1233	/	1
	66	PRT OF ITM 63		A	·WASHER	0821 / 0001	4299 / 1232	1
	67	PRT OF ITM 64		A	·WASHER	4300 / 1233	/	1
	69	PRT OF ITM 63		A	·NUT	0821 / 0001	4299 / 1232	1
	70	PRT OF ITM 64		A	·NUT	4300 / 1233	/	1
	72	20554-001			·LANYARD	0821	1044	1
	75	20579-001			·LANYARD	1045 / 0001	/	1
	78	MS24694-S53		A	·SCREW	0821 / 0001	/	1
	81	NAS43DD3-16FC		A	·SPACER	0821 / 0001	/	1
	84	NAS1149F0463P		A	·WASHER	0821 / 0001	/	1
	87	MS21083N3		A	·NUT	0821 / 0001	/	1
	90	MS35214-25		A	·SCREW	0821 / 0001	/	1
	93	AN970-3		A	·WASHER	0821 / 0001	/	1
	96	50757-006		A	·STANDOFF, LOCKING THREAD	0821 / 0001	/	1
	99	37305-001	!		·BAGGAGE MAGNET	4300 / 1233	/	1
					ALTERNATE FOR 37305-002			
	102	37305-002			·BAGGAGE MAGNET	4300 / 1233	/	1
					ALTERNATE FOR 37305-001			
	105	37223-001	!		·MAGNETIC SWITCH ASSEMBLY	4300 / 1233	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-04 DET			BAGGAGE DOOR ATTACH FITTINGS			
					SYMBOL NOTES:			
			!		INSTALLED ON AIRCRAFT W/ CONVENIENCE LIGHTING			

Intentionally Left Blank

CHAPTER

53

FUSELAGE

Intentionally Left Blank

CHAPTER 53 - FUSELAGE
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
53-LOEP	1	04 SEP 2018
53-LOEP	2	04 SEP 2018
53-LOEP	3	04 SEP 2018
53-LOEP	4	04 SEP 2018
53-TOC	1	04 SEP 2018
53-TOC	2	04 SEP 2018
53-20-01	1	15 DEC 2014
53-20-01	2	15 DEC 2014
53-20-01	3	15 DEC 2014
53-20-01	4	15 DEC 2014
53-20-01	5	15 DEC 2014
53-20-01	6	15 DEC 2014
53-20-02	1	01 JAN 2016
53-20-02	2	01 JAN 2016
53-20-02	3	01 JAN 2016
53-20-02	4	15 DEC 2014
53-20-03	1	19 SEP 2017
53-20-03	2	15 DEC 2014
53-20-03	3	15 DEC 2014
53-20-03	4	15 DEC 2014
53-30-01	1	15 DEC 2014
53-30-01	2	15 DEC 2014
53-30-01	3	15 DEC 2014
53-30-01	4	15 DEC 2014
53-30-02	1	15 DEC 2014
53-30-02	2	15 DEC 2014
53-30-02	3	15 DEC 2014
53-30-02	4	15 DEC 2014
53-40-01	1	15 DEC 2014
53-40-01	2	15 DEC 2014
53-40-01	3	15 DEC 2014
53-40-01	4	15 DEC 2014
53-40-01	5	15 DEC 2014
53-40-01	6	15 DEC 2014
53-40-01	7	15 DEC 2014
53-40-01	8	15 DEC 2014
53-40-02	1	15 DEC 2014
53-40-02	2	15 DEC 2014
53-40-02	3	15 DEC 2014
53-40-02	4	15 DEC 2014

CHAPTER 53 - FUSELAGE

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
53-40-03	1	19 SEP 2017
53-40-03	2	19 SEP 2017
53-40-03	3	19 SEP 2017
53-40-03	4	19 SEP 2017
53-40-03	5	19 SEP 2017
53-40-03	6	19 SEP 2017
53-40-04	1	15 DEC 2014
53-40-04	2	15 DEC 2014
53-40-05	1	15 DEC 2014
53-40-05	2	15 DEC 2014
53-40-05	3	15 DEC 2014
53-40-05	4	15 DEC 2014
53-40-06	1	15 DEC 2014
53-40-06	2	15 DEC 2014
53-40-06	3	15 DEC 2014
53-40-06	4	15 DEC 2014
53-40-06	5	15 DEC 2014
53-40-06	6	15 DEC 2014
53-40-06	7	15 DEC 2014
53-40-06	8	15 DEC 2014
53-40-06	9	15 DEC 2014
53-40-06	10	15 DEC 2014
53-40-07	1	15 DEC 2014
53-40-07	2	15 DEC 2014
53-40-08	1	15 DEC 2014
53-40-08	2	15 DEC 2014
53-40-08	3	15 DEC 2014
53-40-08	4	15 DEC 2014
53-40-09	1	15 DEC 2014
53-40-09	2	15 DEC 2014
53-40-10	1	15 DEC 2014
53-40-10	2	15 DEC 2014
53-40-11	1	15 DEC 2014
53-40-11	2	15 DEC 2014
53-40-11	3	15 DEC 2014
53-40-11	4	15 DEC 2014
53-50-01	1	15 DEC 2014
53-50-01	2	01 JAN 2016
53-50-01	3	01 JAN 2016
53-50-01	4	15 DEC 2014

EFFECTIVITY:
All

CHAPTER 53 - FUSELAGE

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
53-50-02	1	15 DEC 2014
53-50-02	2	15 DEC 2014
53-50-03	1	04 SEP 2018
53-50-03	2	04 SEP 2018
53-50-03	3	04 SEP 2018
53-50-03	4	15 DEC 2014

Intentionally Left Blank

CHAPTER 53 - FUSELAGE

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Cabin Access Panels - Serials 22-0002 thru 22-0820 (1 of 2)	53-20-01
Cabin Access Panels - Serials 22-0821 thru 22-1862 (2 of 3)	53-20-01
Cabin Access Panels - Serials 22-1863 & subs, 22T-0001 & subs (3 of 3)	53-20-01
Entry Step and Handle	53-20-02
Aft Tie Down - Serials 22-0002 & subs w/o Perspective (1 of 2)	53-20-03
Aft Tie Down - Serials w/ Perspective (2 of 2)	53-20-03
Empennage Access Panels - Serials 22-0002 thru 22-0820 (1 of 2)	53-30-01
Empennage Access Panels - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)	53-30-01
Belly Fire Shield - Serials 22-0002 thru 22-0820 (1 of 2)	53-30-02
Belly Fire Shield - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)	53-30-02
Seat Track Attach Fittings - Serials 22-0002 thru 22-0820 (1 of 2)	53-40-01
Seat Track Attach Fittings - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)	53-40-01
Footman Loop Attach Fittings - 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (1 of 2)	53-40-02
Footman Loop Attach Fittings - 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (2 of 2)	53-40-02
Cabin Door Attach Fittings - Serials 22-0002 thru 22-0820 (1 of 2)	53-40-03
Cabin Door Attach Fittings - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)	53-40-03
Baggage Door Attach Fittings	53-40-04
Lower Mount Attach Fittings - Serials 22-0821 thru 22-3711	53-40-05
Lower Mount Attach Fittings - Serials 22-3712 & subs, 22T-0001 & subs	53-40-05
Seat Belt & Shoulder Harness Attach Fittings - Serials 22-0002 thru 22-0820 (1 of 3)	53-40-06
Seat Belt and Harness Attach Fittings - 22-0821 & subs, 22T-0001 & subs w/o 2+1 R Seat (2 of 3)	53-40-06
Seat Belt and Harness Attach Fittings - 22-3828 & subs, 22T-0268 & subs w/ 2+1 R Seat (3 of 3)	53-40-06
Battery 1 Bracket	53-40-07
Pitch Servo Bracket - Serials 22-1368 & subs w/ System 55 (1 of 2)	53-40-08
Pitch Servo Bracket - Serials 22-3026 & subs, 22T-0001 & subs w/ GFC 700 (2 of 2)	53-40-08
Roll Servo Bracket - Serials w/ Perspective	53-40-09
Yaw Servo Bracket - Serials w/ Perspective	53-40-10
Relay Mounting Plate - Serials 0002 & subs w/o Perspective (1 of 3)	53-40-11
Relay Mounting Plate - Serials 3026 & subs w/ Perspective (2 of 3)	53-40-11
Relay Mounting Plate - Serials 3446 & subs w/ System 55X and Perspective (3 of 3)	53-40-11
Wing Root Fairing - Serials 22-0002 thru 22-2437 (1 of 2)	53-50-01
Wing Root Fairing - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	53-50-01

CHAPTER 53 - FUSELAGE

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Horizontal Stabilizer Fairing	53-50-02
Wing Walk - Serials 22-0002 thru 22-2437 (1 of 2)	53-50-03
Wing Walk - Serials 22-2043, 22-2438 & subs, 22T-0001 & subs. (2 of 2)	53-50-03

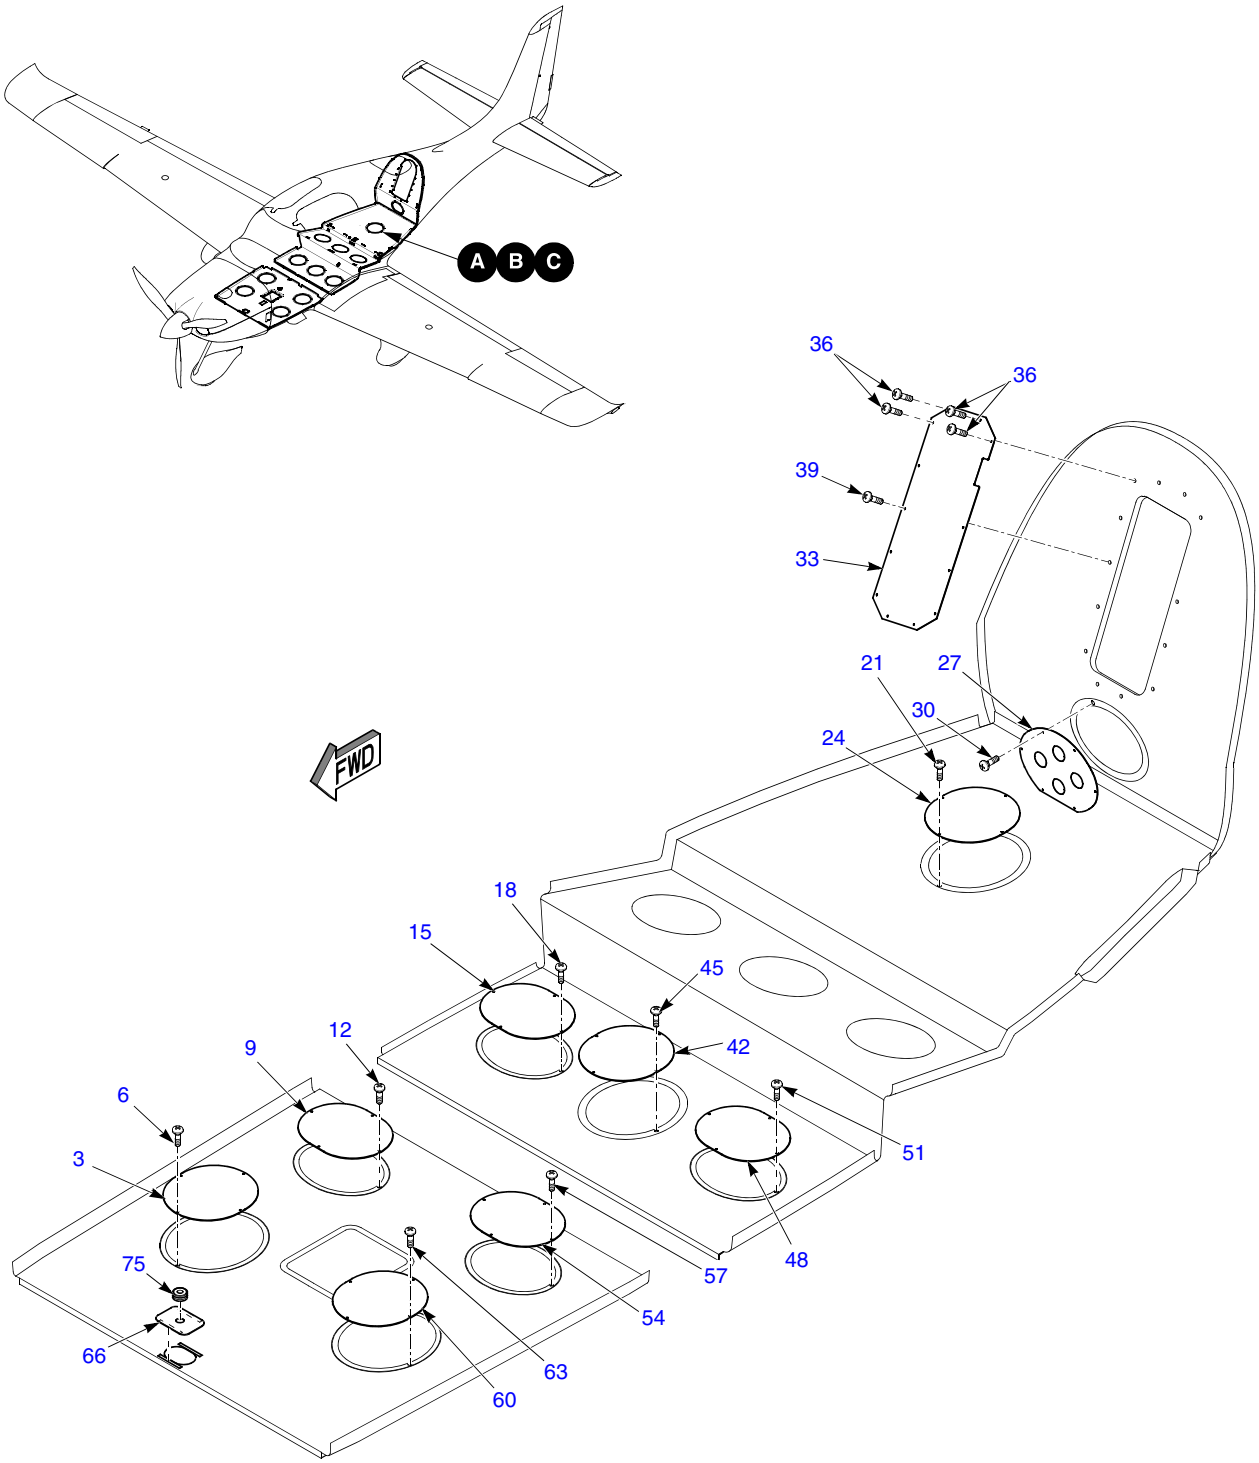

DETAIL A

Serials 22-0002 thru 22-0820.

SR22_PC53_1250B

Figure-01

Cabin Access Panels - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

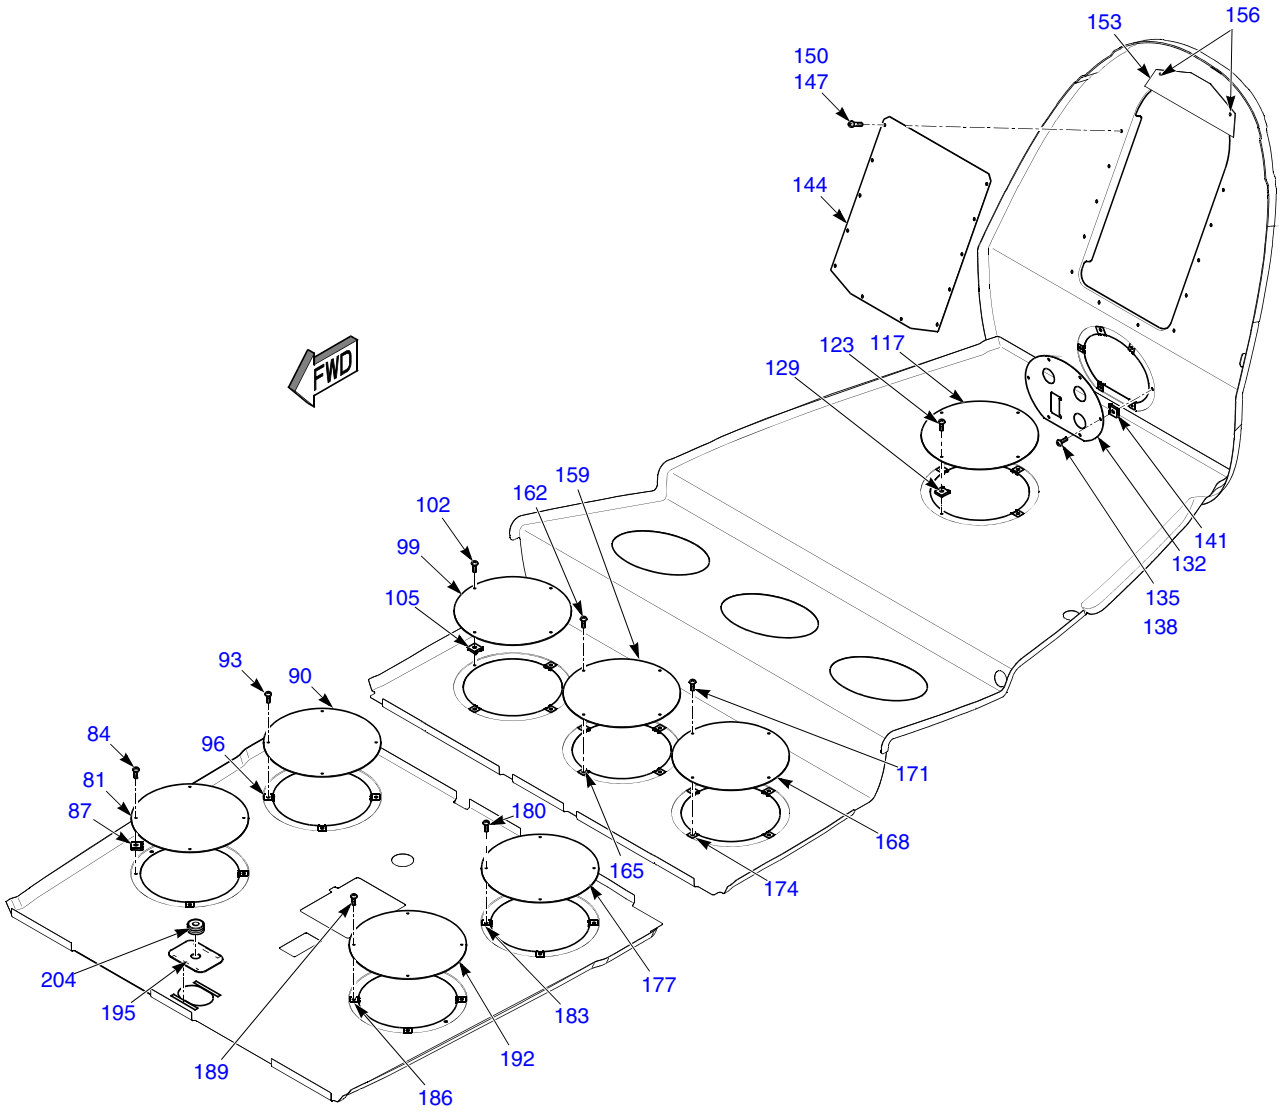

DETAIL B

Serials 22-0821 thru 22-1601, 22-1603 thru 22-1820, 22-1822 thru 22-1839, 22-1841 thru 22-1862.

SR22_PC53_1373A

Figure-01

Cabin Access Panels - Serials 22-0821 thru 22-1862 (2 of 3)

EFFECTIVITY:
Serials 22-0821 thru 22-1862

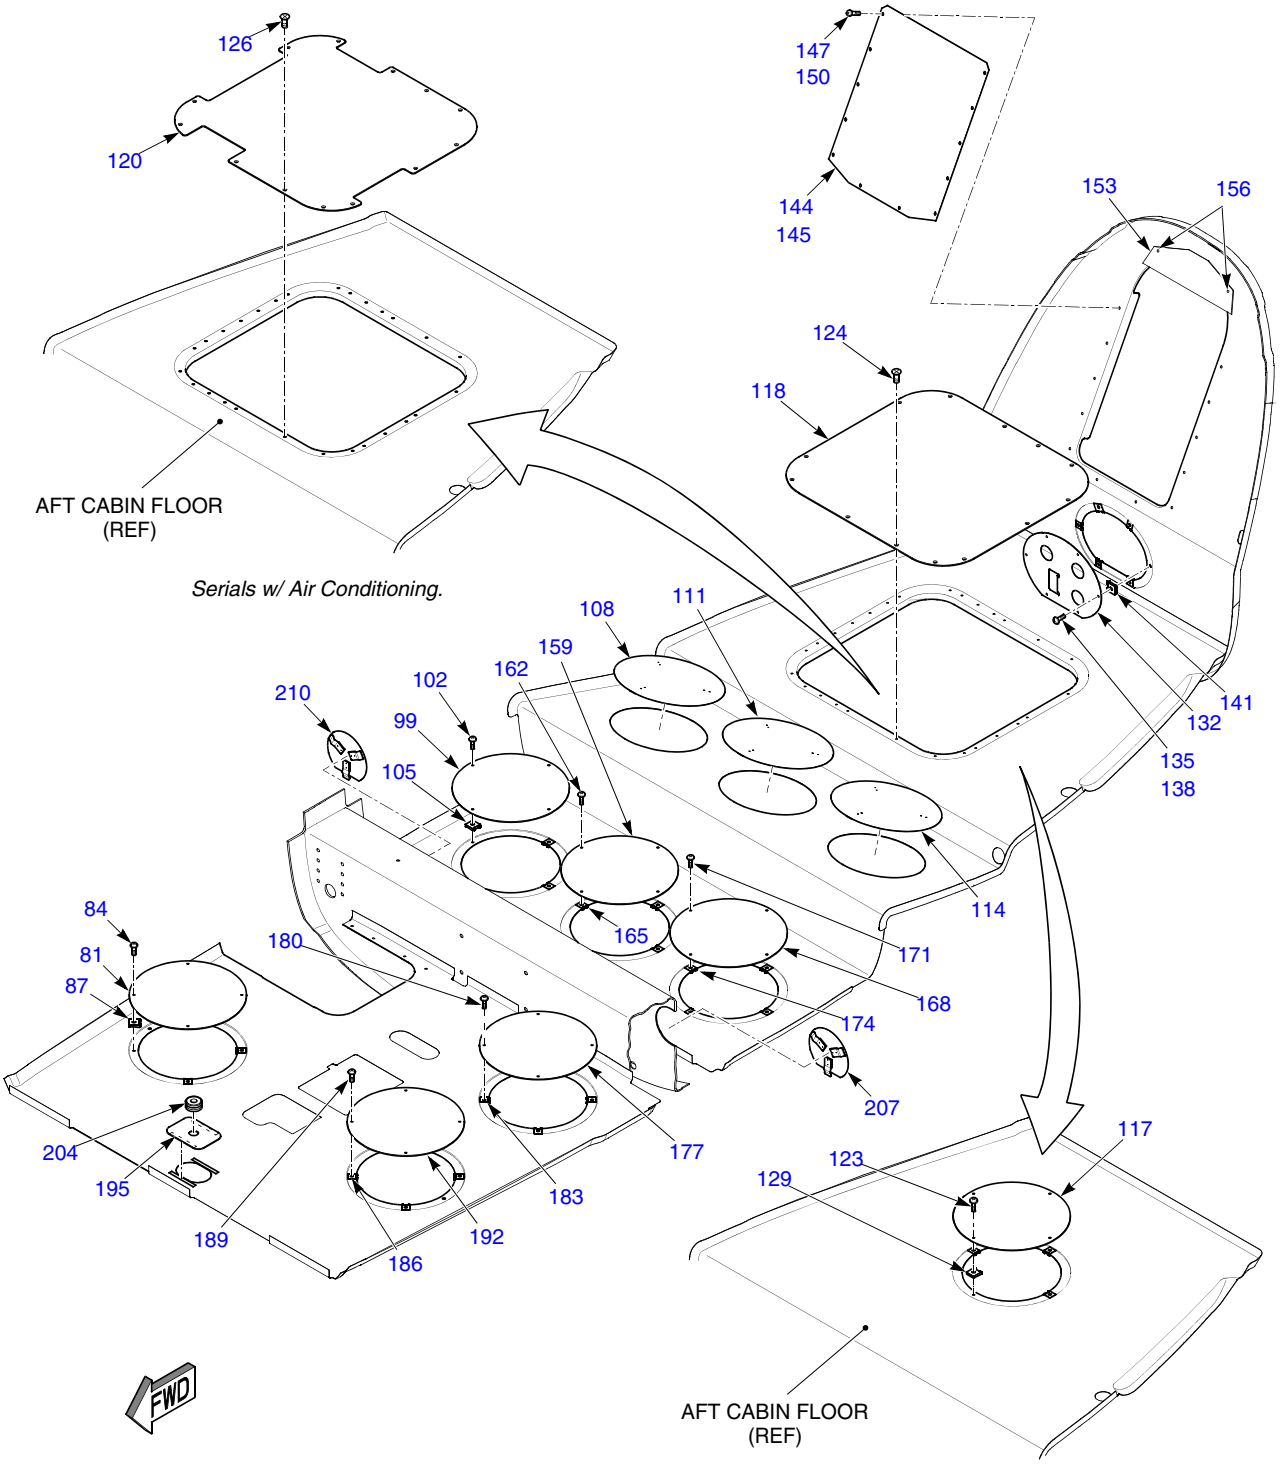

Serials w/ Air Conditioning.

Serials 22-1863 thru 22-3497.

DETAIL C

Serials 22-1602, 22-1821, 22-1840, 22-1863 & subs, 22T-0001 & subs.

SR22_PC53_1536A

Figure-01

Cabin Access Panels - Serials 22-1863 & subs, 22T-0001 & subs (3 of 3)

EFFECTIVITY:
Serials 22-1863 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FLOOR ACCESS PANEL INSTALLATION	0002	0820	NP
	3	10494-002			·ACCESS PANEL, CF1R	0002	0820	1
	6	MS21207-8-8		A	·SCREW	0002	0820	4
	9	10493-002			·ACCESS PANEL, CF2R	0002	0820	1
	12	MS21207-8-8		A	·SCREW	0002	0820	4
	15	10493-002			·ACCESS PANEL, CF3R	0002	0820	1
	18	MS21207-8-8		A	·SCREW	0002	0820	4
	21	10494-002			·ACCESS PANEL, CF5	0002	0820	1
	24	MS21207-8-8		A	·SCREW	0002	0820	4
	27	10510-002			·ACCESS PANEL, CB6	0002	0820	1
	30	50793-375		A	·SCREW	0002	0820	6
	33	10511-002			·ACCESS PANEL, CB7	0002	0820	1
	36	MS27039-0810		A	·SCREW	0002	0820	4
	39	MS27039-0808		A	·SCREW	0002	0820	9
	42	10494-002			·ACCESS PANEL, CF3C	0002	0820	1
	45	MS21207-8-8		A	·SCREW	0002	0820	4
	48	10493-002			·ACCESS PANEL, CF3L	0002	0820	1
	51	MS21207-8-8		A	·SCREW	0002	0820	4
	54	10493-002			·ACCESS PANEL, CF2L	0002	0820	1
	57	MS21207-8-8		A	·SCREW	0002	0820	4
	60	10494-002			·ACCESS PANEL, CF1L	0002	0820	1
	63	MS21207-8-8		A	·SCREW	0002	0820	4
	66	12939-001			·ACCESS PANEL, CF8	0002	0820	1
-	69	50457-001		A	·LOOP FASTENER	0002	0820	AR
-	72	50458-001		A	·HOOK FASTENER	0002	0820	AR
	75	MS35489-17			··GROMMET, RUBBER	0002	0820	1
-	78	NO PRT NUMBER			FLOOR ACCESS PANEL INSTALLATION	0821 / 0001	/	NP
	81	20314-001			·ACCESS PANEL, CF1R	0821 / 0001	/	1
	84	MS21207-8-8		A	·SCREW	0821 / 0001	/	4
	87	50486-101		A	·FASTENER	0821 / 0001	/	4
	90	20314-001			·ACCESS PANEL, CF2R	0821	1862	1
	93	MS21207-8-8		A	·SCREW	0821	1862	4
	96	50486-101		A	·FASTENER	0821	1862	4
	99	20314-001			·ACCESS PANEL, CF3R	0821 / 0001	/	1
	102	MS21207-8-8		A	·SCREW	0821 / 0001	/	4
	105	50486-101		A	·FASTENER	0821 / 0001	/	4
	108	17125-001			·ACCESS PANEL, CF4R	1863 / 0001	/	1
	111	17125-001			·ACCESS PANEL, CF4C	1863 / 0001	/	1
	114	17125-001			·ACCESS PANEL, CF4L	1863 / 0001	/	1
	117	20314-001			·ACCESS PANEL, CF5	0821	1862	1
					W/O AIR CONDITIONING	1863	3497	1
	118	21392-002			·ACCESS PANEL, CF5	3498 / 0001	/	1
					W/O AIR CONDITIONING			
	120	21392-001			·ACCESS PANEL, CF5	1863 / 0001	/	1
					W/ AIR CONDITIONING			
	123	MS21207-8-8		A	·SCREW	0821	1862	4
					W/O AIR CONDITIONING	1863	3497	4
	124	MS24694-S50		A	·SCREW	3498 / 0001	/	13
					W/O AIR CONDITIONING			
	126	MS24694-S50		A	·SCREW	1863 / 0001	/	13
					W/ AIR CONDITIONING			
	129	50486-101		A	·FASTENER	0821	1862	4
					W/O AIR CONDITIONING	1863 / 0001	/	4
	132	10510-003			·ACCESS PANEL, CB6	0821 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	135	50793-375		A	·SCREW	0821 / 0001	/	6
	138	50793-500		A	·SCREW	0821 / 0001	/	6
	141	50486-101		A	·FASTENER	0821 / 0001	/	6
	144	20135-001			·ACCESS PANEL, CB7	0821 / 0001	3914 / 0441	1
					FOR SPARES USE P/N 20135-002			
	145	20135-002			·ACCESS PANEL, CB7	3915 / 0442	/	1
	147	AN525-832R8		A	·SCREW	0821 / 0001	/	12
					ALTERNATE FOR P/N MS27039-0808			
	150	MS27039-0808		A	·SCREW	0821 / 0001	/	12
					ALTERNATE FOR P/N AN525-832R8			
	153	20366-001			·ACCESS PANEL, CB8	0821 / 0001	/	1
	156	51364-250		A	·PLASTI-RIVET	0821 / 0001	/	2
	159	20314-001			·ACCESS PANEL, CF3C	0821 / 0001	/	1
	162	MS21207-8-8		A	·SCREW	0821 / 0001	/	4
	165	50486-101		A	·FASTENER	0821 / 0001	/	4
	168	20314-001			·ACCESS PANEL, CF3L	0821 / 0001	/	1
	171	MS21207-8-8		A	·SCREW	0821 / 0001	/	4
	174	50486-101		A	·FASTENER	0821 / 0001	/	4
	177	20314-001			·ACCESS PANEL, CF2L	0821 / 0001	/	1
	180	MS21207-8-8		A	·SCREW	0821 / 0001	/	4
	183	50486-101		A	·FASTENER	0821 / 0001	/	4
	186	20314-001			·ACCESS PANEL, CF1L	0821 / 0001	/	1
	189	MS21207-8-8		A	·SCREW	0821 / 0001	/	4
	192	50486-101		A	·FASTENER	0821 / 0001	/	4
	195	12939-001			·ACCESS PANEL, CF8	0821 / 0001	/	1
-	198	50457-001		A	·LOOP FASTENER	0821 / 0001	/	AR
-	201	50458-001		A	·HOOK FASTENER	0821 / 0001	/	AR
	204	MS35489-17			··GROMMET, RUBBER	0821 / 0001	/	1
	207	17107-001			·ACCESS PANEL, CS1L	1863 / 0001	/	1
	210	17107-001			·ACCESS PANEL, CS1R	1863 / 0001	/	1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

SERIAL NUMBERS 1602, 1821, AND 1840, REFER TO 22-1863 FOR PART IDENTIFICATION.

Intentionally Left Blank

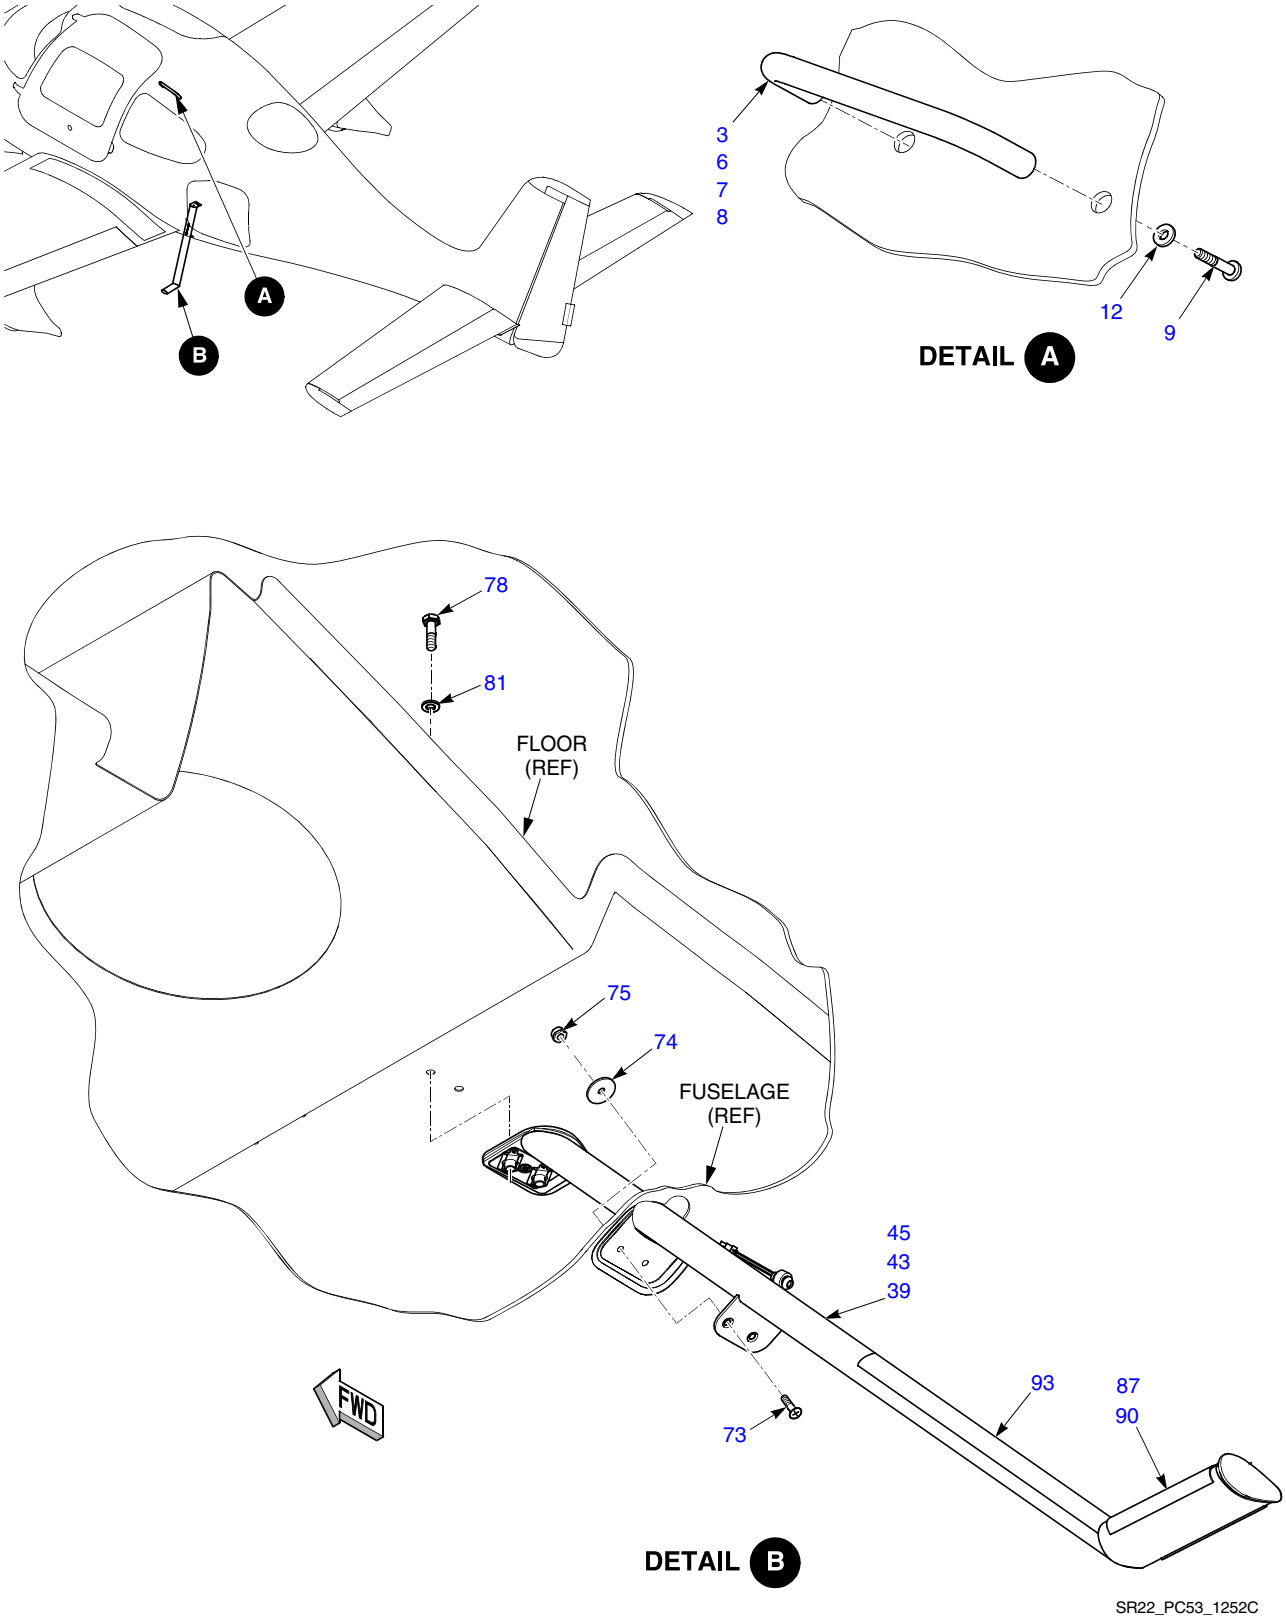

Figure-02
Entry Step and Handle

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			ENTRY STEP AND HANDLE INSTALLATION	0002 / 0001	/	NP
	3	10690-001			·HANDLE	0002		1
	6	10690-002	@		·HANDLE - (CHROME PLATE)	0656	3548	1
					FOR SPARES USE P/N 10690-003			
	7	10690-003			·HANDLE - (POWDER COAT SILVER)	3549 / 0001	/	1
	8	10690-004	$		·HANDLE - (POWDER COAT BLACK)	/ 0079	/	1
	9	MS27039-0814		A	·SCREW	0002 / 0001	/	2
	12	NAS1149FN832P		A	·WASHER	0002 / 0001	/	2
-	15	10689-001			·STEP ASSEMBLY, LH, (WHITE)	0002	0794	1
					FOR SPARES USE P/N 10689-011			
					·STEP ASSEMBLY, LH, (WHITE)	0795	0795	1
					FOR SPARES USE P/N 10689-009			
					·STEP ASSEMBLY, LH, (WHITE)	0796	0819	1
					FOR SPARES USE P/N 10689-011			
					·STEP ASSEMBLY, LH, (WHITE)	0820	1773	1
					FOR SPARES USE P/N 10689-009			
-	18	10689-003	@		·STEP ASSEMBLY, LH, (CHROME PLATE)	0656	0819	1
					FOR SPARES USE P/N 10689-013			
			@		·STEP ASSEMBLY, LH, (CHROME PLATE)	0820	2100	1
					FOR SPARES USE P/N 10689-007			
-	21	10689-005			·STEP ASSEMBLY, LH, (POWDER COAT WHITE)	1774	2148	1
					FOR SPARES USE P/N 10689-009			
-	24	10689-009			·STEP ASSEMBLY, LH, (POWDER COAT WHITE)	2149	2437	1
-	27	10689-011	#		·STEP ASSEMBLY, LH, (POWDER COAT WHITE)	0002	0819	1
-	30	10689-007			·STEP ASSEMBLY, LH, (NICKEL)	2101	2437	1
-	33	10689-013	#		·STEP ASSEMBLY, LH, (NICKEL)	0656	0819	1
-	36	18201-001	&		·STEP ASSEMBLY, LH, (NICKEL)	2438	3548	1
					FOR SPARES USE P/N 28658-005			
-	37	28658-001			·STEP ASSEMBLY, LH, (POWDER COAT SILVER)	3549 / 0001	3761 / 0135	1
					FOR SPARES USE P/N 28658-005			
-	38	28658-005			·STEP ASSEMBLY, LH, (POWDER COAT SILVER)	2762 0136	4299 / 1232	1
	39	28658-017			·STEP ASSEMBLY, LH, (NON-SKID, SILVER)	4300 / 1233		1
-	40	18201-003			·STEP ASSEMBLY, LH, (POWDER COAT WHITE)	2438	3548	1
					FOR SPARES USE P/N 28658-007			
-	41	28658-003			·STEP ASSEMBLY, LH, (POWDER COAT WHITE)	3549 / 0001	3761 / 0135	1
					FOR SPARES USE P/N 28658-007			
-	42	28658-007			·STEP ASSEMBLY, LH, (POWDER COAT WHITE)	3762 0136	4299 / 1232	1
	43	28658-019			·STEP ASSEMBLY, LH, (NON-SKID, WHITE)	4300 / 1233		1
-	44	28658-009	$		·STEP ASSEMBLY, LH, (POWDER COAT BLACK)	/ 0079	/ 1232	1
	45	28658-021			·STEP ASSEMBLY, LH, (NON-SKID, BLACK)	/ 1233		1
-	46	10689-002			·STEP ASSEMBLY, RH, (WHITE)	0002	0794	1
					FOR SPARES USE P/N 10689-012			
					·STEP ASSEMBLY, RH, (WHITE)	0795	0795	1
					FOR SPARES USE P/N 10689-010			
					·STEP ASSEMBLY, RH, (WHITE)	0796	0819	1
					FOR SPARES USE P/N 10689-012			
					·STEP ASSEMBLY, RH, (WHITE)	0820	1773	1
					FOR SPARES USE P/N 10689-010			
-	47	10689-004	@		·STEP ASSEMBLY, RH, (CHROME PLATE)	0656	0819	1
					FOR SPARES USE P/N 10689-014			
			@		·STEP ASSEMBLY, RH, (CHROME PLATE)	0820	2100	1
					FOR SPARES USE P/N 10689-008			
-	48	10689-006			·STEP ASSEMBLY, RH, (POWDER COAT WHITE)	1774	2148	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 10689-010			
-	51	10689-010			·STEP ASSEMBLY, RH, (POWDER COAT WHITE)	2149	2437	1
-	54	10689-012	#		·STEP ASSEMBLY, RH, (POWDER COAT WHITE)	0002	0819	1
-	57	10689-014	#		·STEP ASSEMBLY, RH, (NICKEL)	0656	0819	1
-	60	10689-008			·STEP ASSEMBLY, RH, (NICKEL)	2101	2437	1
-	63	18201-002	!		·STEP ASSEMBLY, RH, (NICKEL)	2438	3548	1
					FOR SPARES USE P/N 28658-006			
-	64	28658-002			·STEP ASSEMBLY, RH, (POWDER COAT SILVER)	3549 / 0001	3761 / 0135	1
					FOR SPARES USE P/N 28658-006			
-	65	28658-006			·STEP ASSEMBLY, RH, (POWDER COAT SILVER)	3762 / 0136	4299 / 1232	1
-	66	28658-018			·STEP ASSEMBLY, RH, (NON-SKID, SILVER)	4300 / 1233		1
-	67	18201-004			·STEP ASSEMBLY, RH, (POWDER COAT WHITE)	2438	3548	1
					FOR SPARES USE P/N 28658-008			
-	68	28658-004			·STEP ASSEMBLY, RH, (POWDER COAT WHITE)	3549 / 0001	3761 / 0135	1
					FOR SPARES USE P/N 28658-008			
-	69	28658-008			·STEP ASSEMBLY, RH, (POWDER COAT WHITE)	3762 / 0136	4299 / 1232	1
-	70	28658-020			·STEP ASSEMBLY, RH, (NON-SKID, WHITE)	4300 / 1233		1
-	71	28658-010	$		·STEP ASSEMBLY, RH, (POWDER COAT BLACK)	/ 0079	/ 1232	1
-	72	28658-022			·STEP ASSEMBLY, RH, (NON-SKID, BLACK)	/ 1233		1
	73	MS24694S54		A	·SCREW	0002 / 0001	/	2
	74	AN970-3		A	·WASHER	0002 / 0001	/	2
	75	MS21044N3		A	·NUT	0002 / 0001	/	2
	78	AN4-5A		A	·BOLT	0002 / 0001	/	2
	81	NAS1149F0463P		A	·WASHER	0002 / 0001	4299 / 1232	4
						4300 1233		2
-	84	MS21044N4		A	·NUT	0002 / 0001	/	2
	87	12683-003			·NON SKID STEP TAPE	0002	1585	2
					FOR SPARES USE P/N 12683-006			
	90	12683-006			·NON SKID STEP TAPE	1586	2100	2
	93	51372-015	%		·POLY. PROTECTIVE TAPE	2101 / 0001	/	2
					ALTERNATE FOR P/N 51372-020			
-	96	51372-020	%		·POLY. PROTECTIVE TAPE	2101 / 0001	/	2
					ALTERNATE FOR P/N 51372-015			

SYMBOL NOTES:

@	INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT AND SUBS AS OPTIONAL EQUIPMENT. CHROME STEPS SPARED OUT WITH NICKEL SHOULD BE REPLACED AS A PAIR WITH BOTH A LEFT AND A RIGHT.
#	AVAILABLE AS SPARE ONLY.
%	MAY BE INSTALLED ON ALL AIRCRAFT.
$	INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 & SUBS AS OPTIONAL EQUIPMENT.
&	OPTIONAL SPARES 28658-001S (SERVICED) OR 28658-007 (WHITE)
!	OPTIONAL SPARES 28658-002S (SERVICED) OR 28658-008 (WHITE)

Intentionally Left Blank

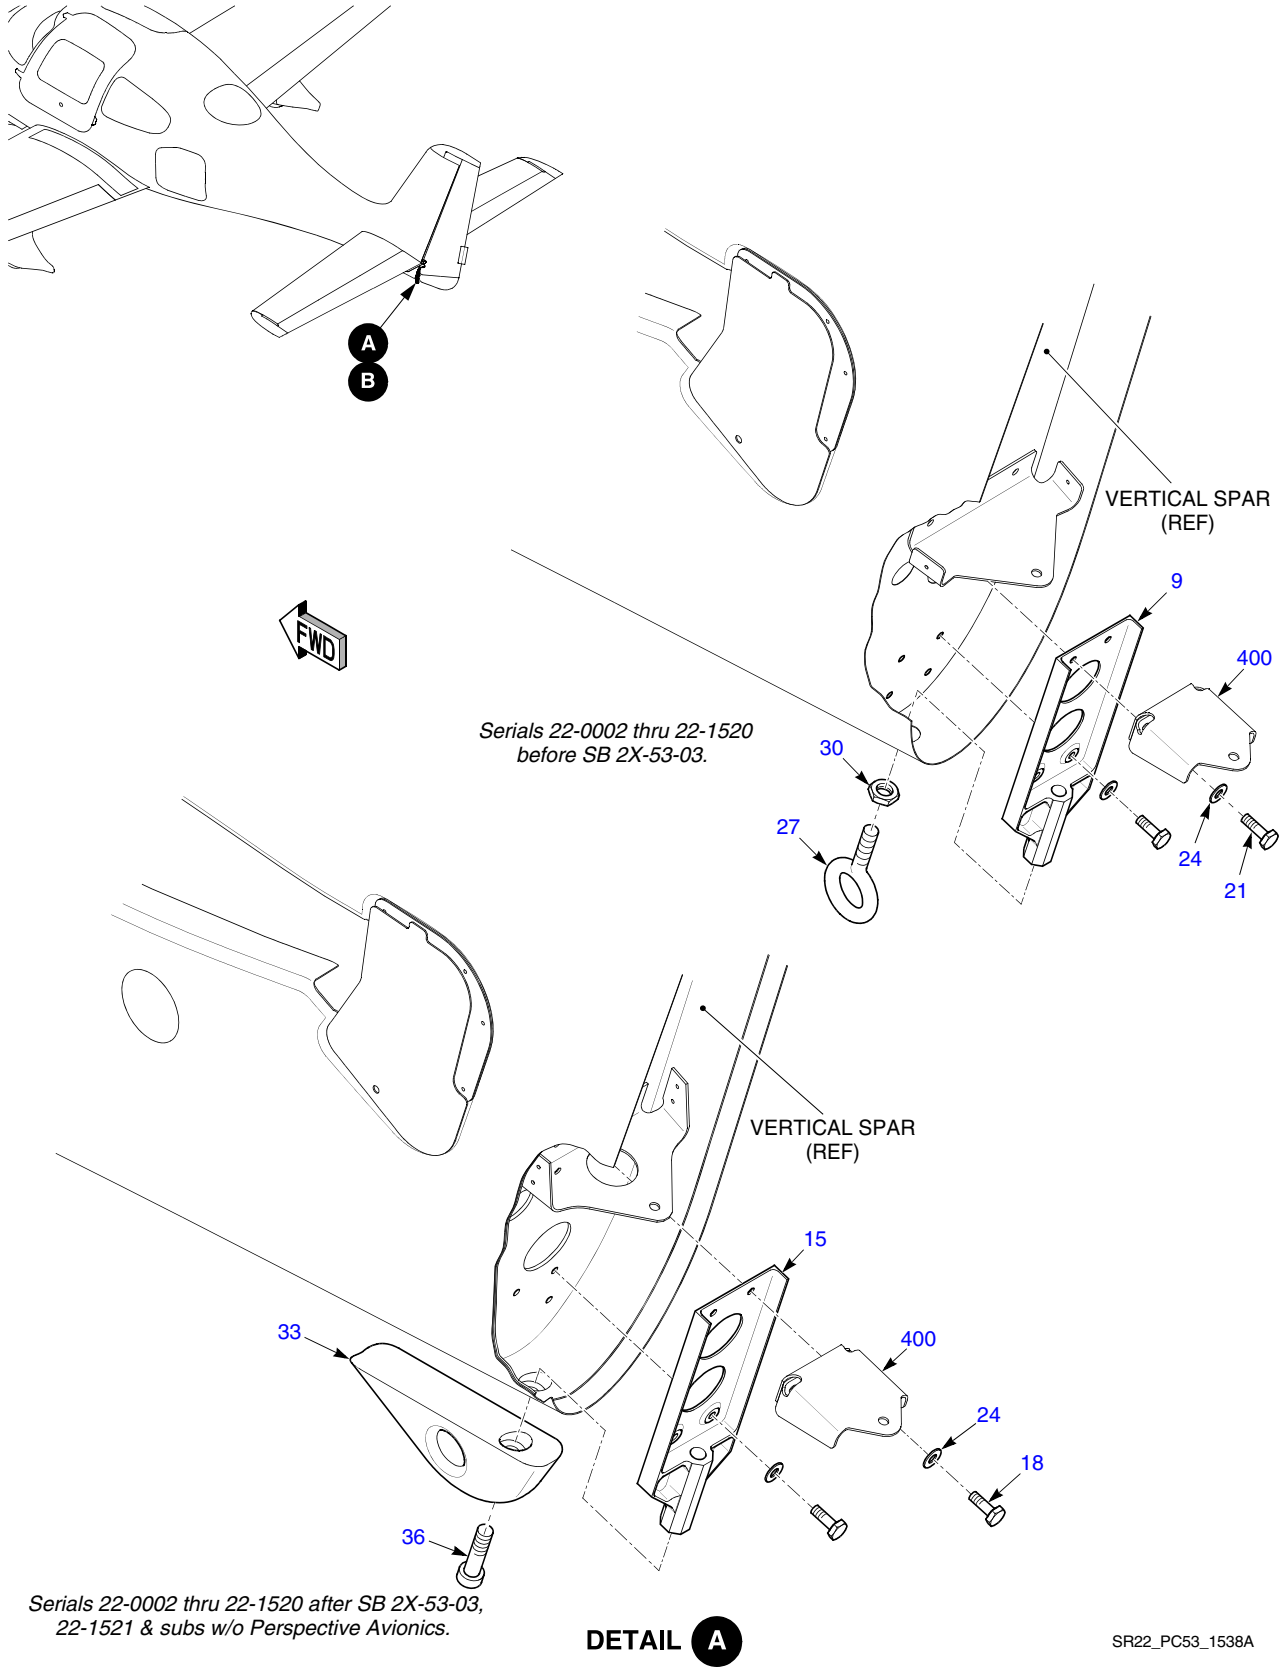

Figure-03

Aft Tie Down - Serials 22-0002 & subs w/o Perspective (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

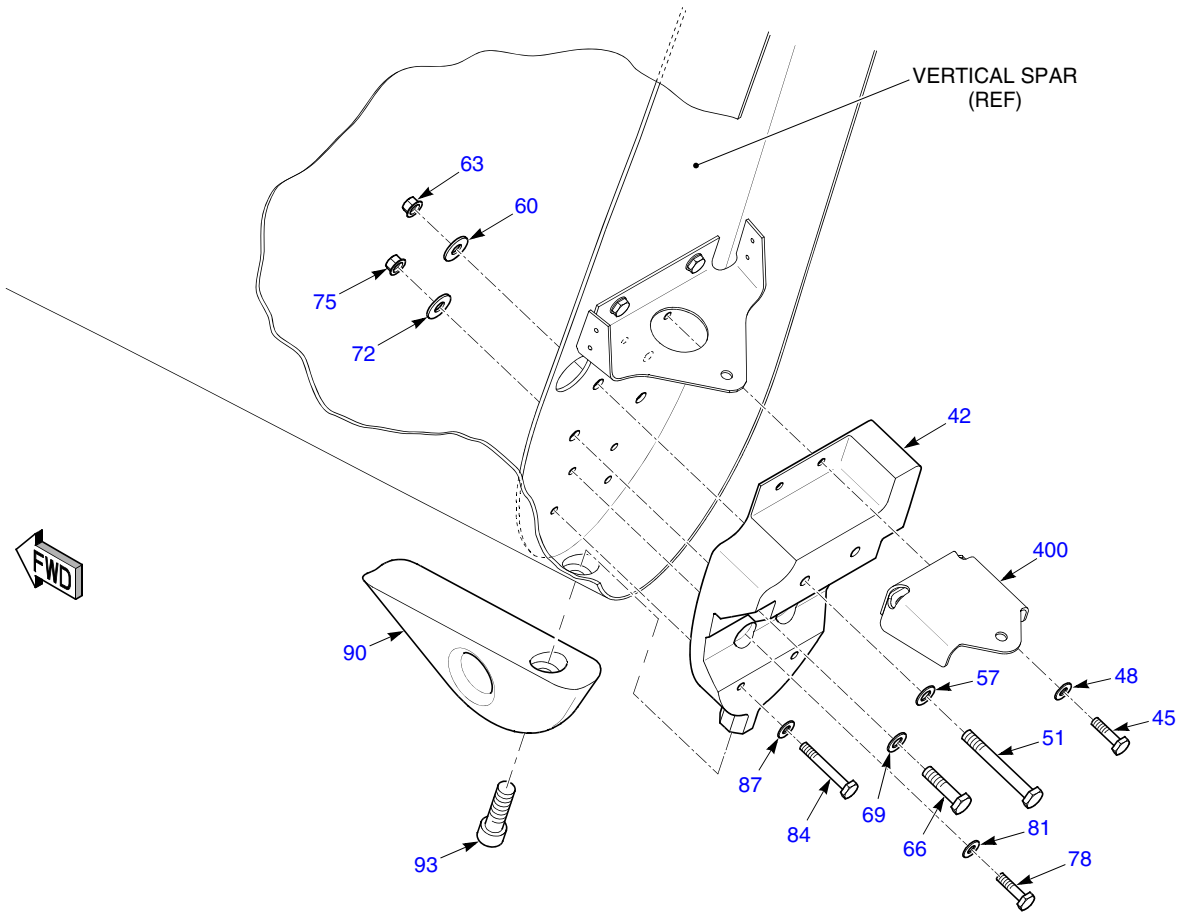

DETAIL B

SR22_PC53_1866

Figure-03
Aft Tie Down - Serials w/ Perspective (2 of 2)

EFFECTIVITY:
Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			AFT TIE DOWN, W/O PERSPECTIVE	0002		NP
-	3	10595-001			·AFT TIE DOWN, BRACKET	0002	0339	1
					FOR SPARES USE P/N 15191-002			
-	6	15191-001			·AFT TIE DOWN, BRACKET	0340	0457	1
					FOR SPARES USE P/N 15191-002			
	9	15191-002			·AFT TIE DOWN, BRACKET	0458	0820	1
-	12	20111-002			·AFT TIE DOWN, BRACKET	0821	1012	1
					FOR SPARES USE P/N 20111-003			
	15	20111-003			·AFT TIE DOWN, BRACKET	1013		1
	18	AN3-4A		A	··BOLT	0002	0820	4
	21	AN3-5A		A	··BOLT	0821		4
	24	NAS1149D0332J		A	··WASHER	0002		4
	27	12403-001			··EYE BOLT	0002	1520	1
	30	50831-375		A	··NUT	0002	1520	1
	33	16678-001			·AFT TIE DOWN, BUMPER	1521		1
					AFTER SB2X-53-03	0002	1520	1
	36	51631-001		A	··BOLT	1521		1
-	39	NO PRT NUMBER	**		AFT TIE DOWN, W/ PERSPECTIVE	3026 / 0001	/	NP
	42	19029-001			·AFT TIE DOWN, BRACKET	3026 / 0001	/	1
	45	AN3-6A		A	··BOLT	3026 / 0001	/	2
	48	NAS1149F0332P		A	··WASHER	3026 / 0001	/	2
	51	AN4-21A		A	··BOLT	3026 / 0001	/	2
					ALTERNATE FOR P/N AN4-21			
-	54	AN4-21		A	··BOLT	3026 / 0001	/	2
					ALTERNATE FOR P/N AN4-21A			
	57	NAS1149F0463P		A	··WASHER	3026 / 0001	/	2
	60	AN970-4		A	··WASHER	3026 / 0001	/	2
	63	MS21044N4		A	··NUT	3026 / 0001	/	2
	66	AN4-11A		A	··BOLT	3026 / 0001	/	2
	69	NAS1149F0463P		A	··WASHER	3026 / 0001	/	2
	72	AN970-4		A	··WASHER	3026 / 0001	/	2
	75	MS21044N4		A	··NUT	3026 / 0001	/	2
	78	AN3-6A		A	··BOLT	3026 / 0001	/	2
	81	NAS1149F0332P		A	··WASHER	3026 / 0001	/	2
	84	AN3-13A		A	··BOLT	3026 / 0001	/	2
	87	NAS1149F0332P		A	··WASHER	3026 / 0001	/	2
	90	16678-001			·AFT TIE DOWN, BUMPER	3026 / 0001	/	1
	93	51631-001		A	··BOLT	3026 / 0001	/	1
					ALTERNATE FOR P/N NAS1352-6-20P			
-	96	NAS1352-6-20P		A	··BOLT	3026 / 0001	/	1
					ALTERNATE FOR P/N 51631-001			
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 55-50-02 DET			RUDDER ATTACH FITTINGS			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			

Intentionally Left Blank

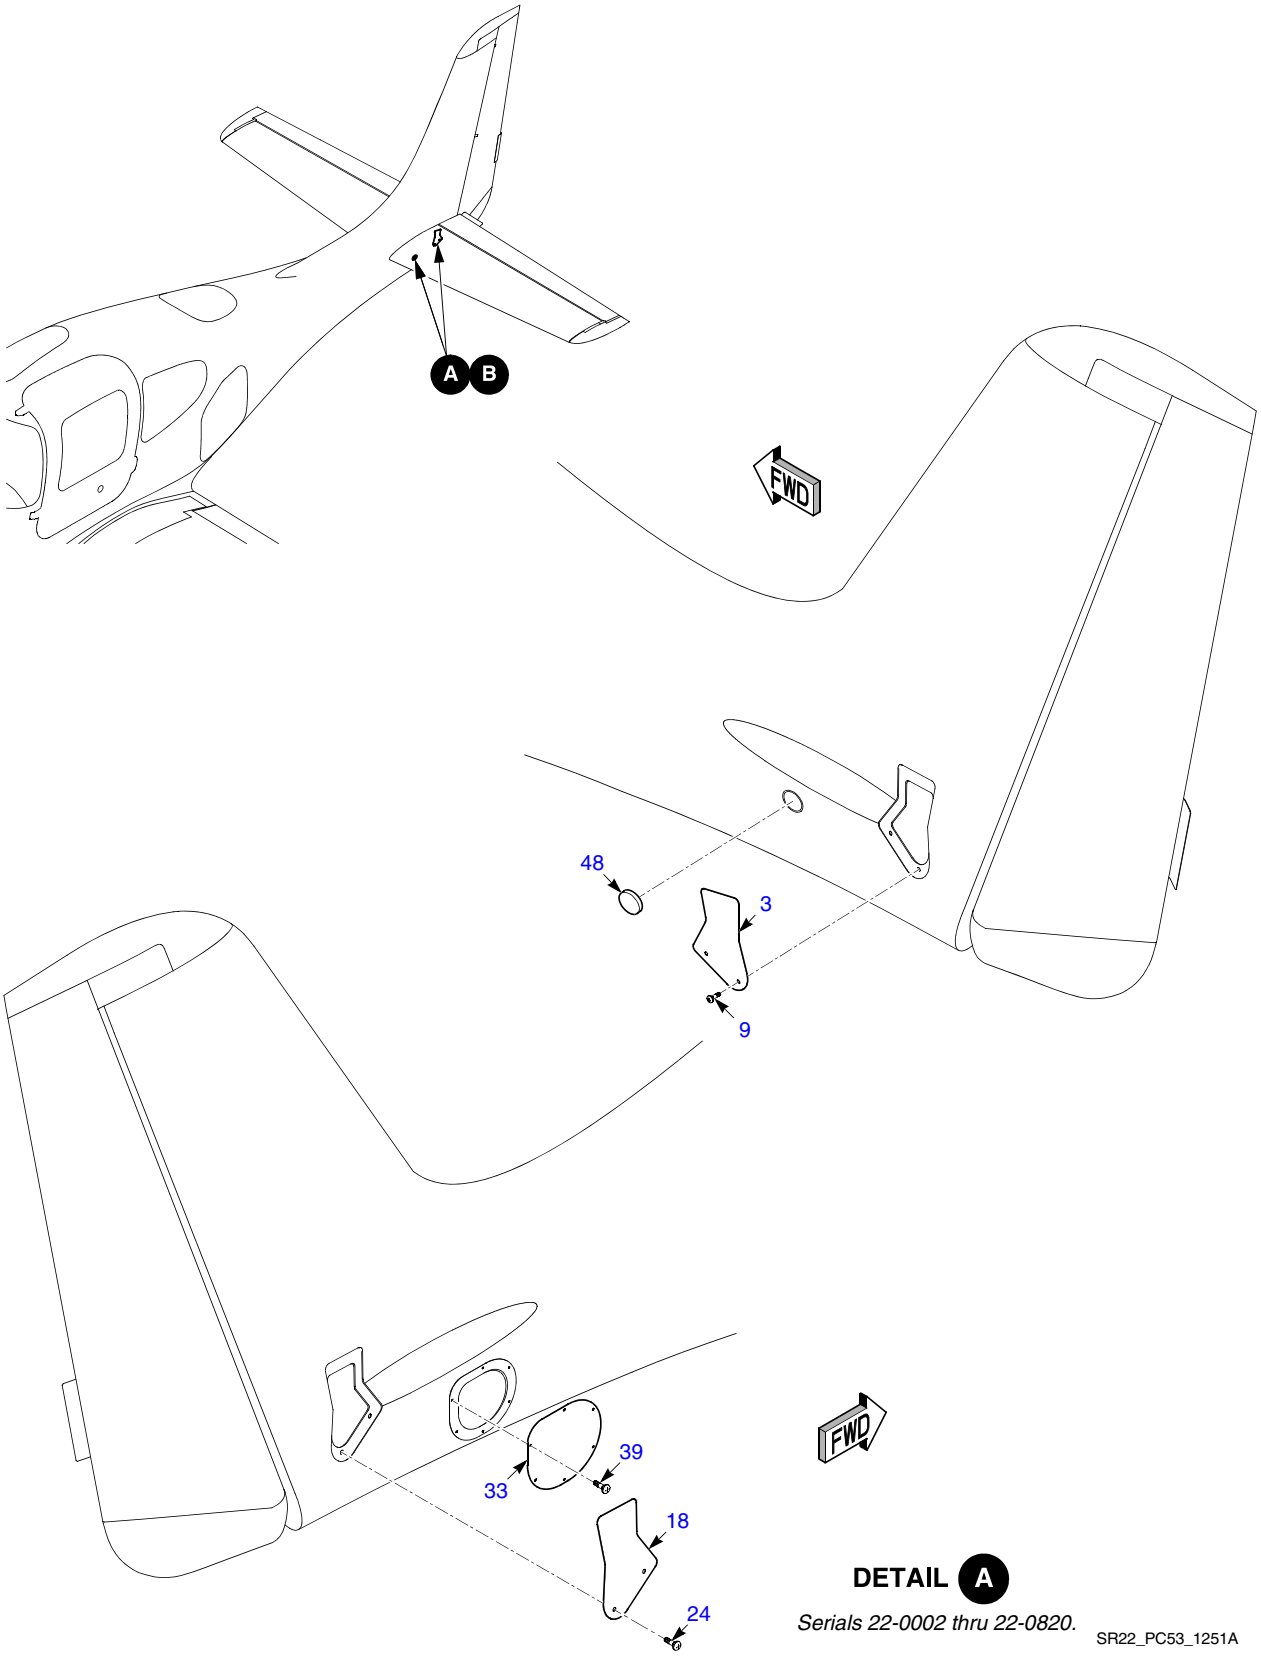

Figure-01

Empennage Access Panels - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

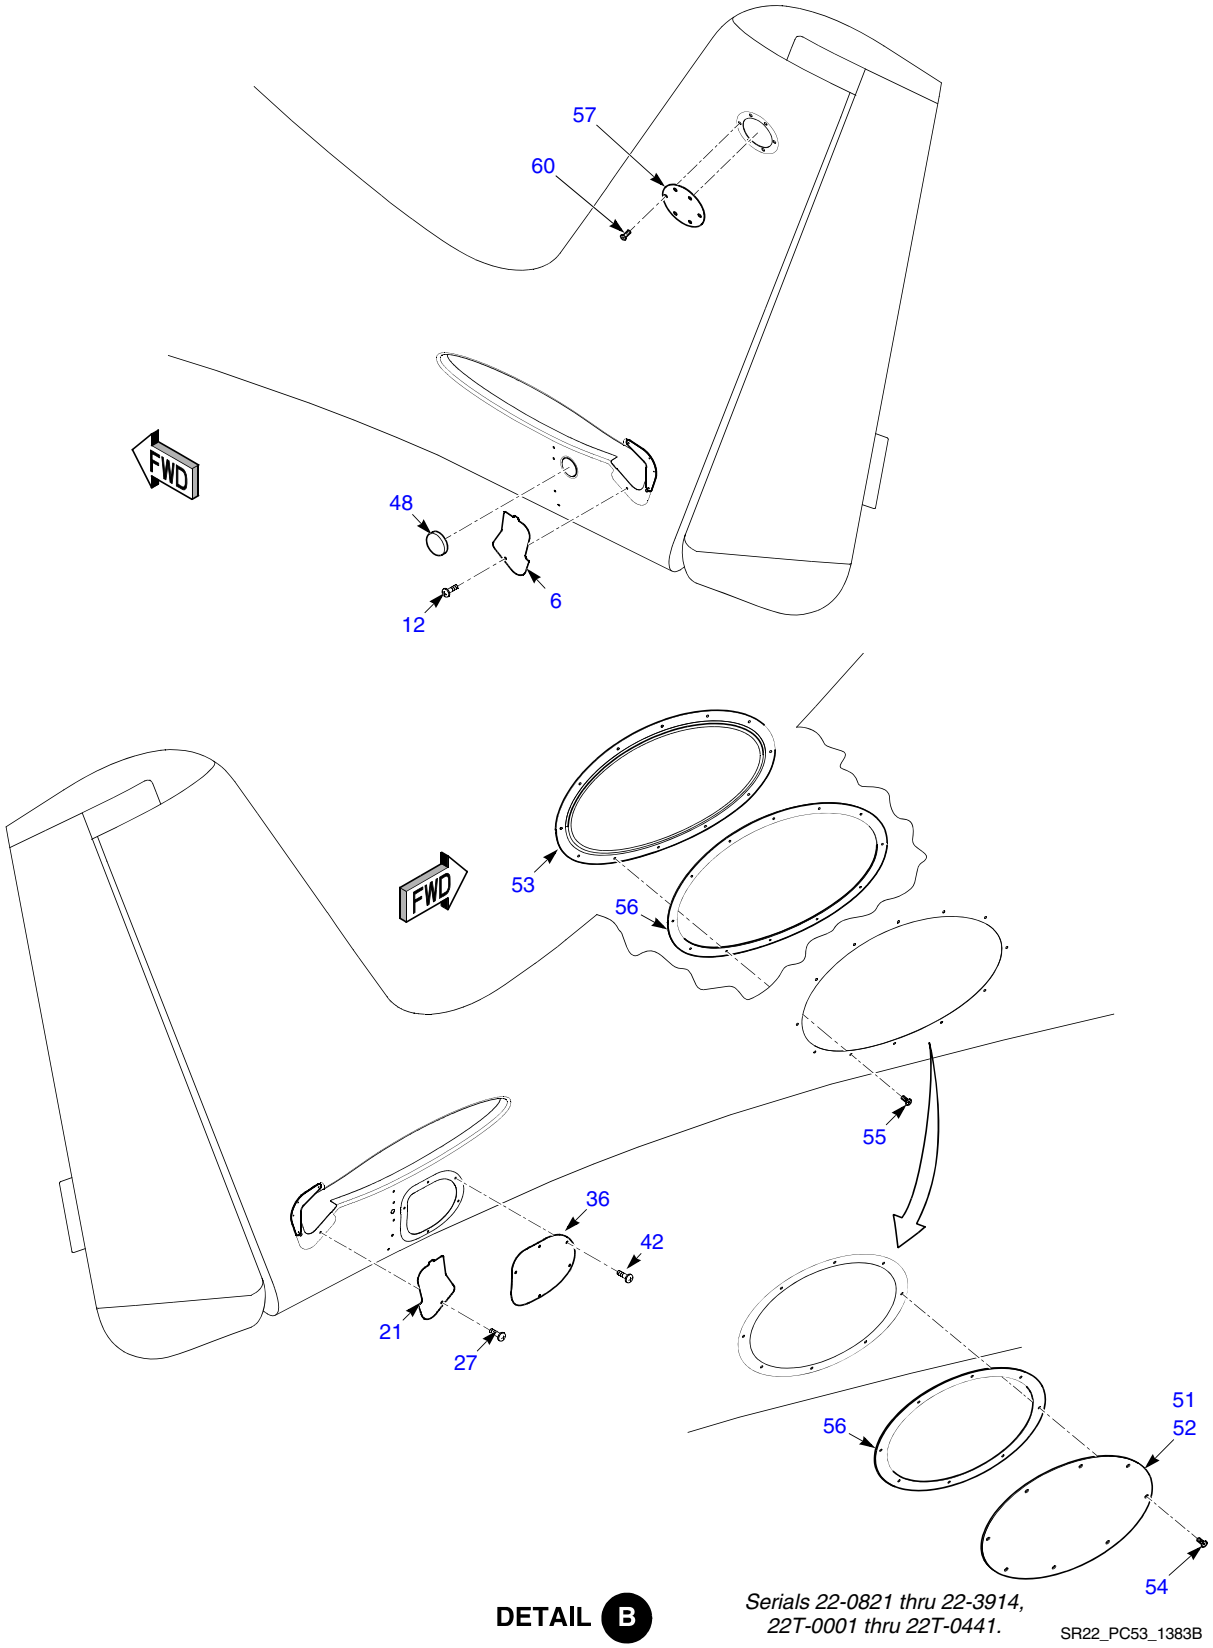

Figure-01

Empennage Access Panels - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			EMPENNAGE ACCESS PANEL INSTALLATION	0002 / 0001	/	NP
	3	13030-001			·ACCESS PANEL, LE1	0002	0820	1
	6	20319-001			·ACCESS PANEL, LE1	0821 / 0001	/	1
	9	MS27039-0806		A	·SCREW	0002	0820	2
	12	AN525-832R7		A	·SCREW	0821 / 0001	/	1
					ALTERNATE FOR P/N MS27039-0806			
-	15	MS27039-0806		A	·SCREW	0821 / 0001	/	1
					ALTERNATE FOR P/N AN525-832R7			
	18	13030-001			·ACCESS PANEL, RE1	0002	0820	1
	21	20319-001			·ACCESS PANEL, RE1	0821 / 0001	/	1
	24	MS27039-0806		A	·SCREW	0002	0820	2
	27	AN525-832R7		A	·SCREW	0821 / 0001	/	1
					ALTERNATE FOR P/N MS27039-0806			
-	30	MS27039-0806		A	·SCREW	0821 / 0001	/	1
					ALTERNATE FOR P/N AN525-832R7			
	33	10719-002			·ACCESS PANEL, RE2	0002	0820	1
	36	10719-003			·ACCESS PANEL, RE2	0821 / 0001	/	1
	39	MS27039-0808		A	·SCREW	0002	0820	6
	42	AN525-832R8		A	·SCREW	0821 / 0001	/	5
					ALTERNATE FOR P/N MS27039-0808			
-	45	MS27039-0808		A	·SCREW	0821 / 0001	/	5
					ALTERNATE FOR P/N AN525-832R8			
	48	50498-200			·ACCESS PLUG, LE2	0002 / 0001	/	1
	51	20317-001			·ACCESS PANEL, RE3	0821 / 0001	3658 / 0003	1
					FOR SPARES USE P/N 20317-002			
	52	20317-002			·ACCESS PANEL, RE3	3659 / 0004	3914 / 0441	1
	53	29611-001			·ACCESS PANEL, RE3	3915 / 0442	/	1
	54	MS24694-S50		A	·SCREW	0821 / 0001	3914 / 0441	8
	55	MS24694-S52		A	·SCREW	3915 / 0442	/	12
	56	53167-063	@		·SEAL	3659 / 0004	3914 / 0441	1
			#		·SEAL	3915 / 0442	/	1
	57	19554-001	!		·ACCESS PANEL, LE3, FIKI	3403 / 0001	/	1
	60	MS24694S5	!	A	·SCREW, FIKI	3403 / 0001	/	6
					SYMBOL NOTES:			
			@		CUT TO 42-INCH LENGTH.			
			#		CUT TO 55-INCH LENGTH.			
			!		SERIAL NUMBERS W/ FIKI.			

Intentionally Left Blank

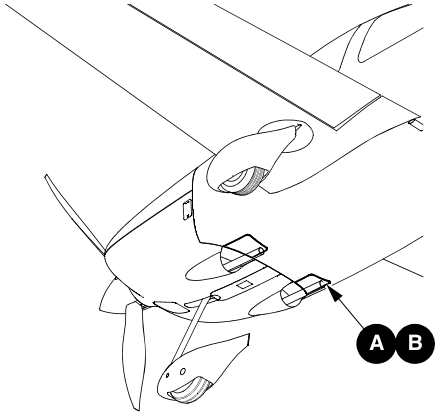

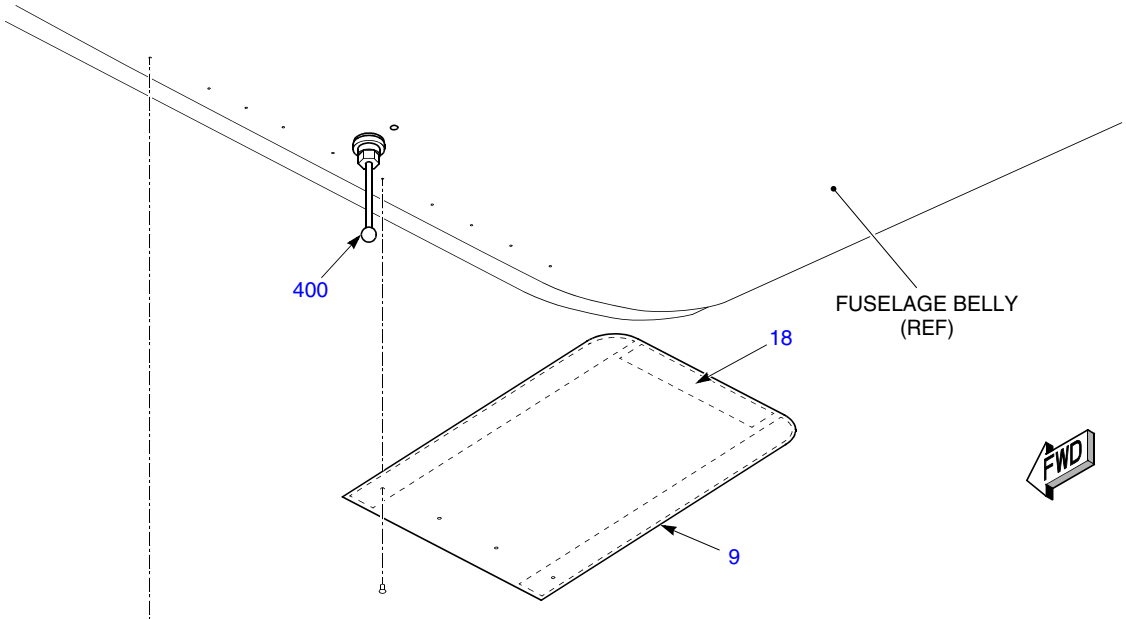

Serials 22-0320 thru 22-0820.

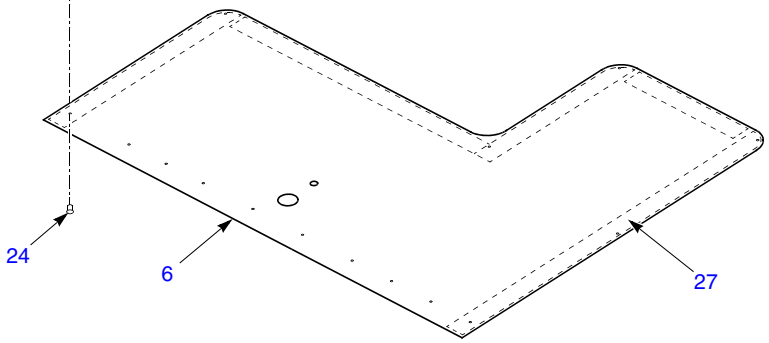

Serials 22-0002 thru 22-0319.

DETAIL A

SR22_PC53_1390A

Figure-02

Belly Fire Shield - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

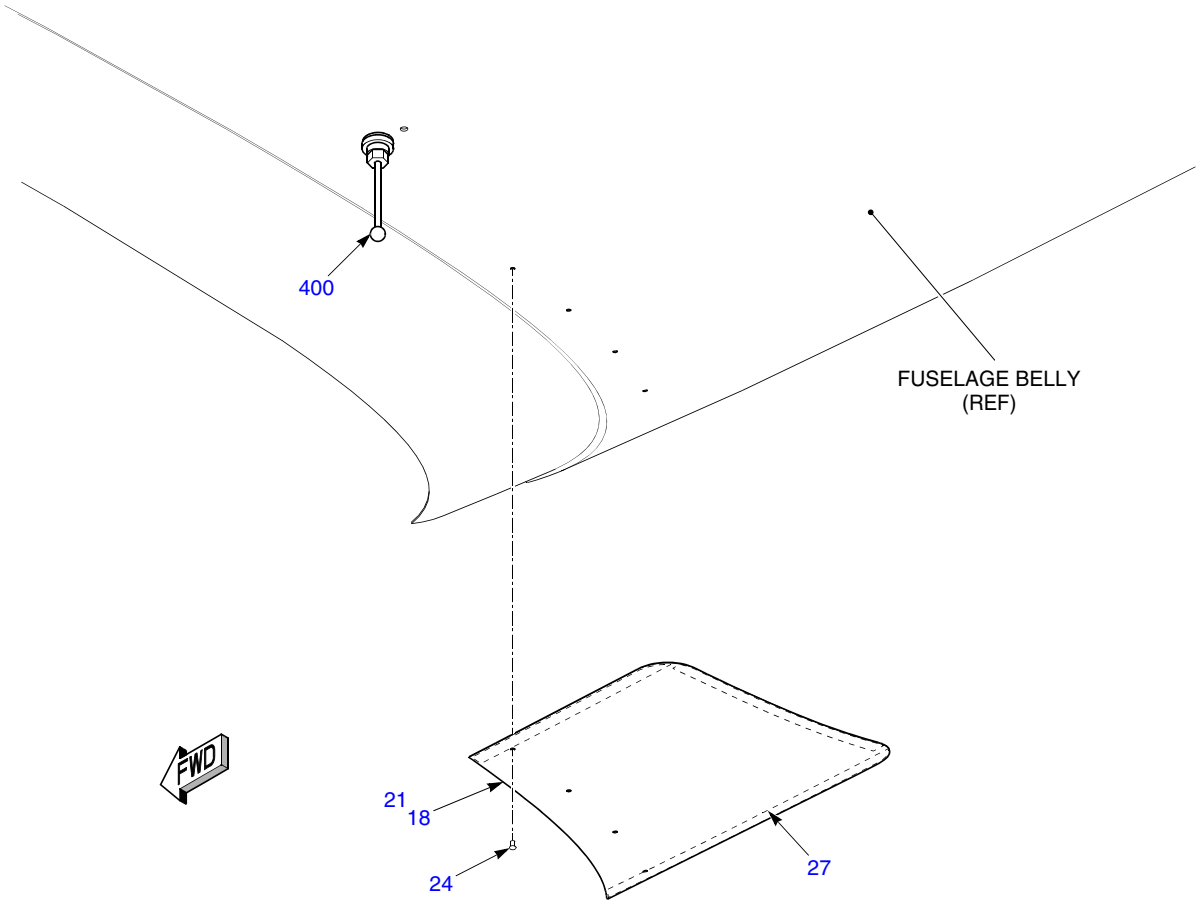

DETAIL B

Serials 22-0821 & subs,
22T-0001 & subs.

SR22_PC53_1391A

Figure-02

Belly Fire Shield - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			FIRE SHIELD-BELLY	0002 / 0001	/	NP
-	3	12347-001			·FIRE SHIELD, BELLY	0002	0104	1
					FOR SPARES USE P/N 12347-002			
	6	12347-002			·FIRE SHIELD, BELLY	0105	0319	1
	9	12551-001			·FIRE SHIELD, BELLY	0320	0820	2
-	12	20184-001			·FIRE SHIELD, BELLY, LH	0821	0872	1
-	15	20184-003			·FIRE SHIELD, BELLY, LH	0873 / 0001	/	1
	18	20184-002			·FIRE SHIELD, BELLY, RH	0821	0872	1
	21	20184-004			·FIRE SHIELD, BELLY, RH	0873 / 0001	/	1
	24	CR3523-4		A	·RIVET	0002 / 0001	/	8
	27	50640-045		A	·TAPE	0002 / 0001	/	AR
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 34-50-03 DET			TRANSPONDER AND ANTENNA			

Intentionally Left Blank

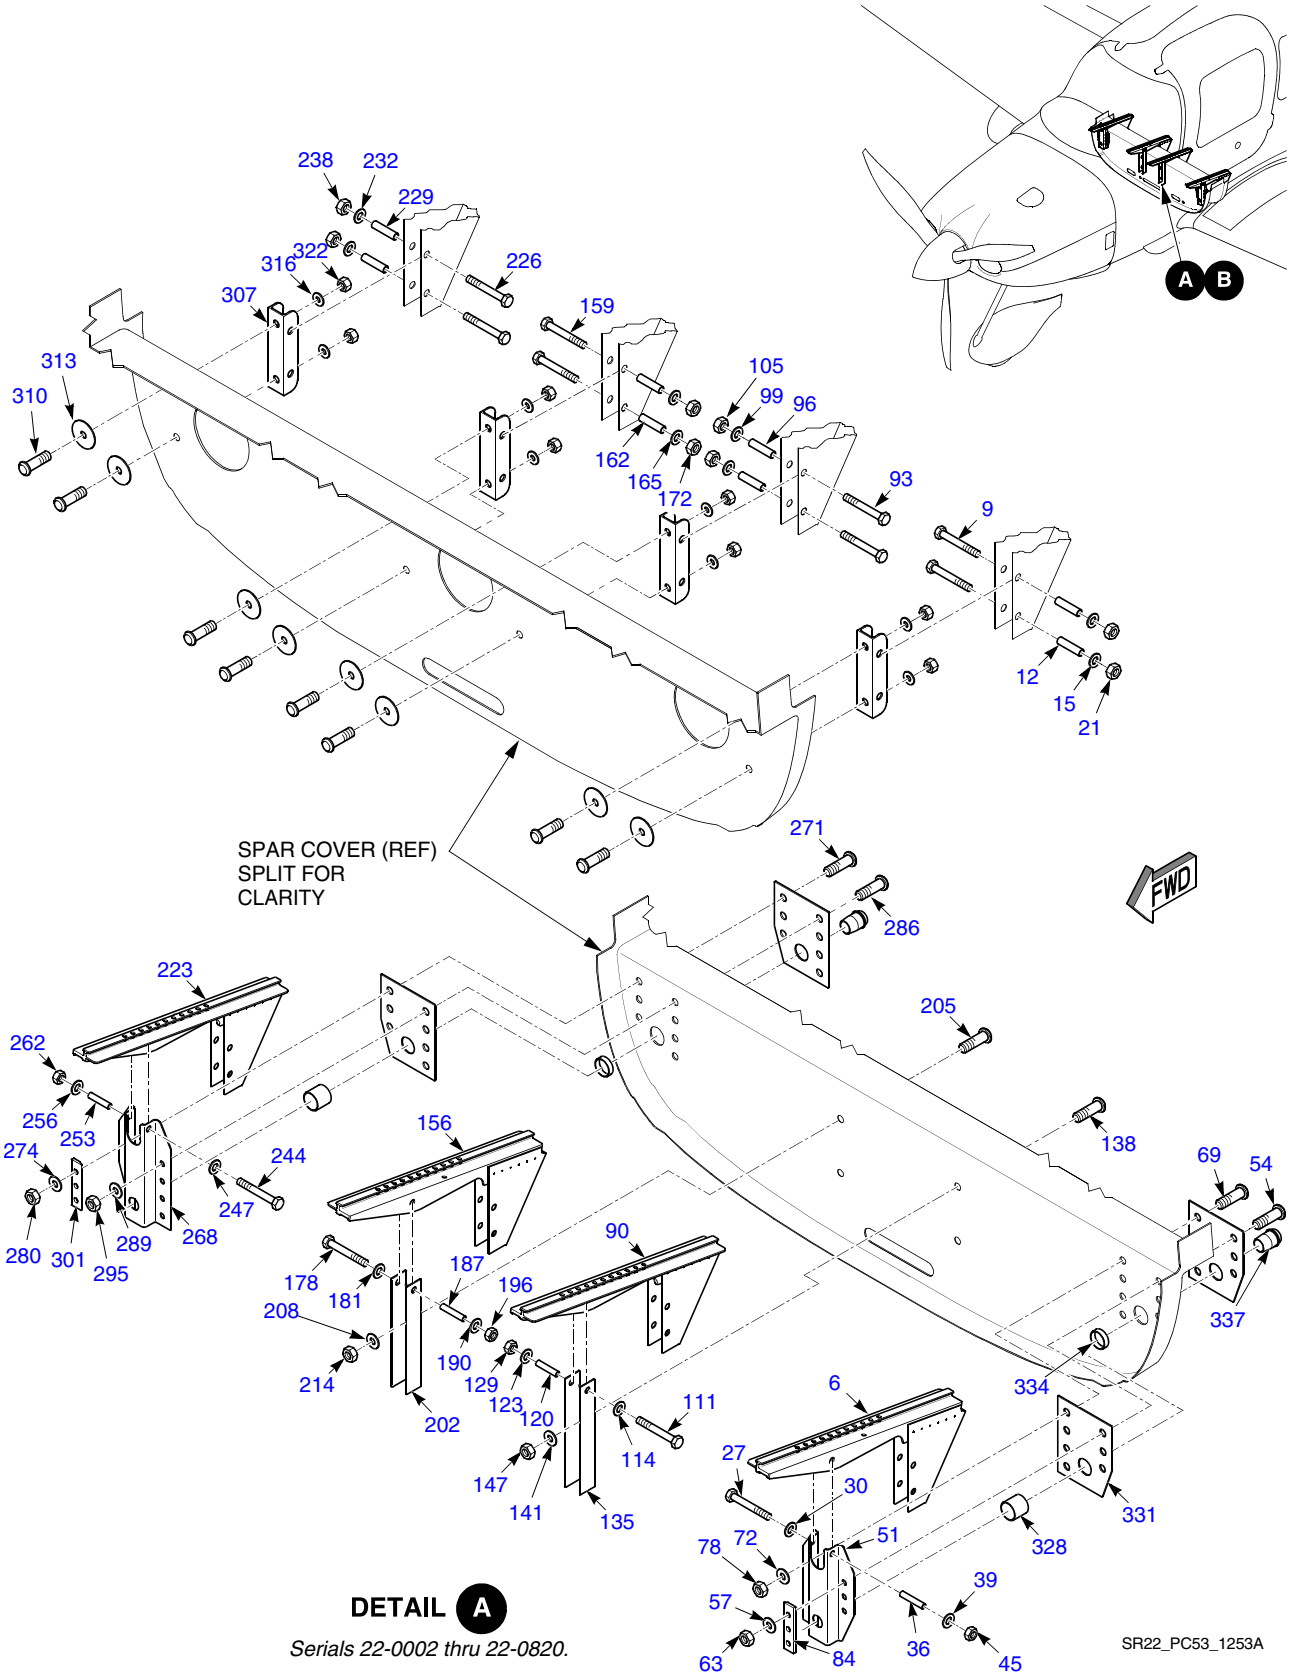

Figure-01

Seat Track Attach Fittings - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

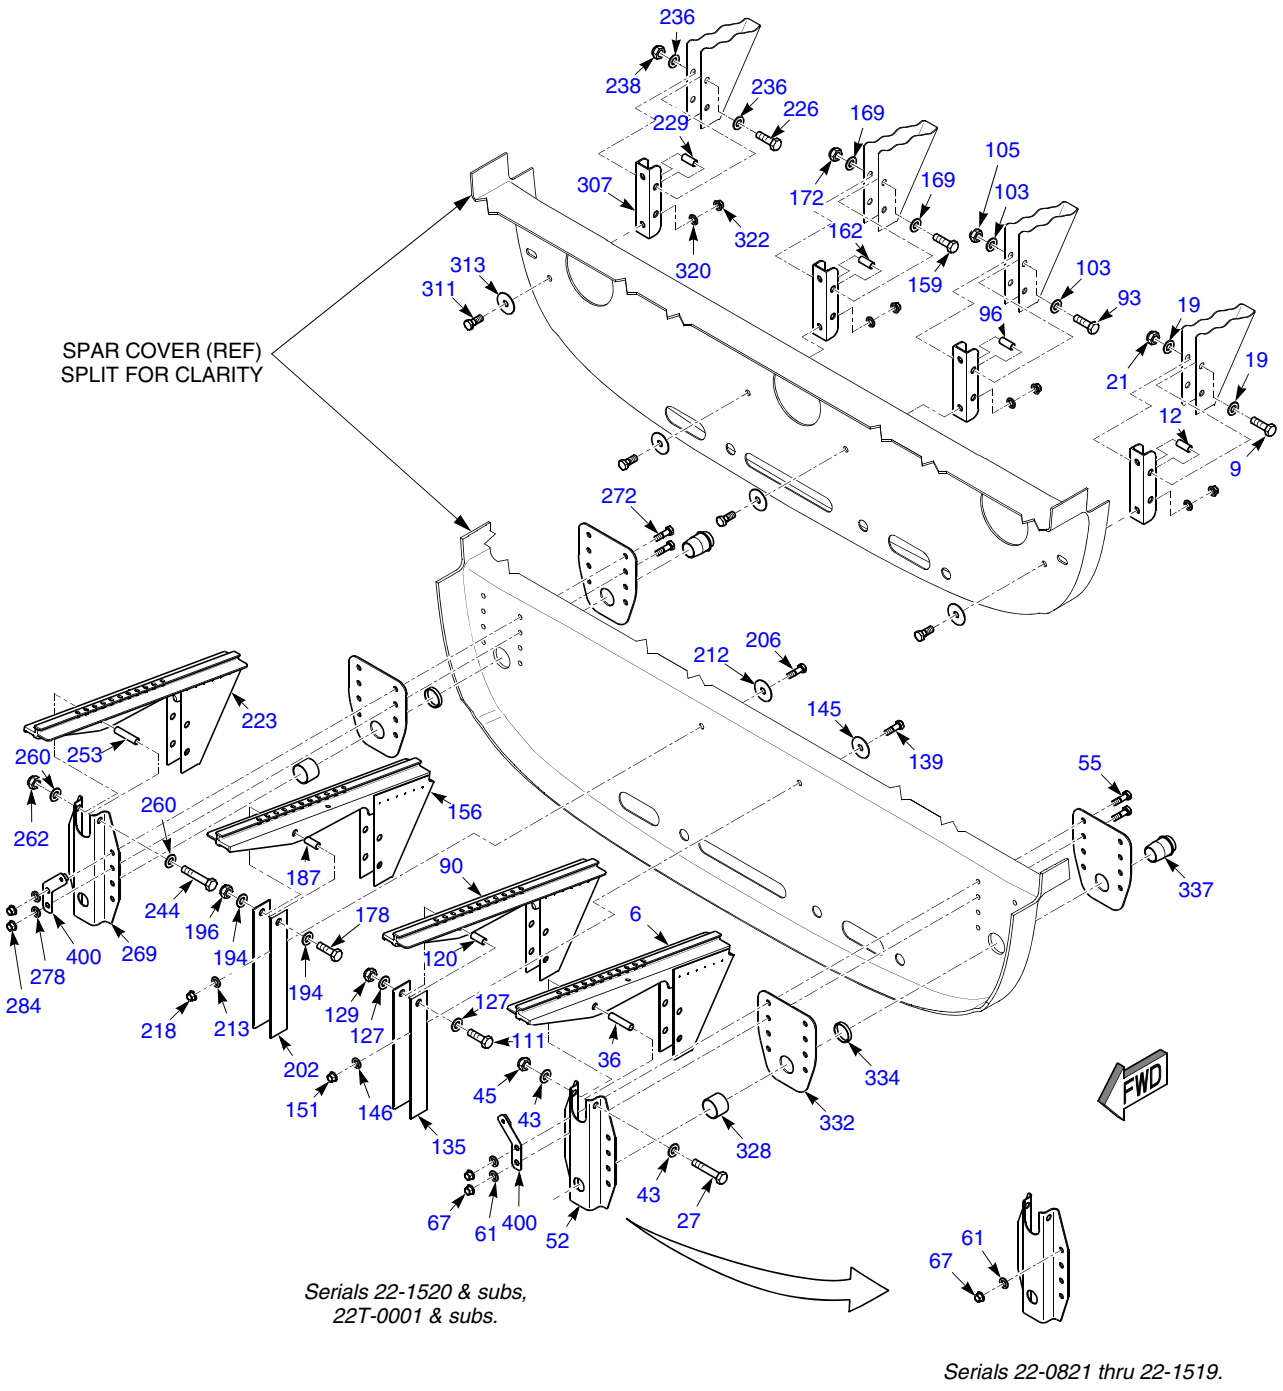

DETAIL A

SR22_PC53_1381A

Figure-01

Seat Track Attach Fittings - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			SEAT TRACK ATTACH FITTINGS	0002 / 0001	/	NP
-	3	12490-003			·SEAT TRACK ASSEMBLY, LH	0002	0097	1
	6	12490-009			·SEAT TRACK ASSEMBLY, LH	0098 / 0001	/	1
	9	AN5-16A		A	·BOLT	0002 / 0001	/	2
	12	11245-002		A	·TUBE SPACER	0002 / 0001	/	2
	15	NAS1149D0563J		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149F0563P			
-	18	NAS1149F0563P		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149D0563J			
	19	NAS1149D0532K		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0532P			
-	20	NAS1149F0532P		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0532K			
	21	MS21042-5		A	·LOCKNUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21044N5			
-	24	MS21044N5		A	·LOCKNUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21042-5			
	27	AN5-22A		A	·BOLT	0002 / 0001	/	1
	30	NAS1149D0532J		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0532P			
-	33	NAS1149F0532P		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149D0532J			
	36	11242-002		A	·TUBE SPACER	0002 / 0001	/	1
	39	NAS1149D0563J		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0563P			
-	42	NAS1149F0563P		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149D0563J			
	43	NAS1149D0532K		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0532P			
-	44	NAS1149F0532P		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0532K			
	45	MS21042-5		A	·LOCKNUT	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21044N5			
-	48	MS21044N5		A	·LOCKNUT	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21042-5			
	51	12688-001			·SEAT ATTACH BRACKET, LH	0002	0820	1
	52	20108-002			·SEAT ATTACH BRACKET, LH	0821 / 0001	/	1
	54	50745-010		A	·HI-LOK PIN	0002	0820	3
	55	AN5-10A		A	·BOLT	0821 / 0001	/	8
	57	NAS1149D0663J		A	·WASHER	0002	0820	3
					ALTERNATE FOR P/N NAS1149F0663P			
-	60	NAS1149F0663P		A	·WASHER	0002	0820	3
					ALTERNATE FOR P/N NAS1149D0663J			
	61	NAS1149D0563J		A	·WASHER	0821 / 0001	/	8
					ALTERNATE FOR P/N NAS1149F0563P			
-	62	NAS1149F0563P		A	·WASHER	0821 / 0001	/	8
					ALTERNATE FOR P/N NAS1149D0563J			
	63	MS21042-6		A	·LOCKNUT	0002	0820	3
					ALTERNATE FOR P/N MS21044N6			
-	66	MS21044N6		A	·LOCKNUT	0002	0820	3
					ALTERNATE FOR P/N MS21042-6			
	67	MS21042-5		A	·LOCKNUT	0821 / 0001	/	8
	69	50745-005 TO -008	@	A	·HI-LOK PIN	0002	0820	4

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	72	NAS1149D0663J		A	·WASHER	0002	0820	4
					ALTERNATE FOR P/N NAS1149F0663P			
-	75	NAS1149F0663P		A	·WASHER	0002	0820	4
					ALTERNATE FOR P/N NAS1149D0663J			
	78	MS21042-6		A	·LOCKNUT	0002	0820	4
					ALTERNATE FOR P/N MS21044N6			
-	81	MS21044N6		A	·LOCKNUT	0002	0820	4
					ALTERNATE FOR P/N MS21042-6			
	84	12694-001			·RADIUS FILLER	0002	0820	1
-	87	12490-004			·SEAT TRACK ASSEMBLY, RH	0002	0097	1
	90	12490-010			·SEAT TRACK ASSEMBLY, RH	0098 / 0001	/	1
	93	AN5-16A		A	·BOLT	0002 / 0001	/	2
	96	11245-002		A	·TUBE SPACER	0002 / 0001	/	2
	99	NAS1149D0563J		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149F0563P			
-	102	NAS1149F0563P		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149D0563J			
	103	NAS1149D0532K		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0532P			
-	104	NAS1149F0532P		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0532K			
	105	MS21042-5		A	·LOCKNUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21044N5			
-	108	MS21044N5		A	·LOCKNUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21042-5			
	111	AN5-16A		A	·BOLT	0002 / 0001	/	1
	114	NAS1149D0532J		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0532P			
-	117	NAS1149F0532P		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149D0532J			
	120	11247-001		A	·TUBE SPACER	0002 / 0001	/	1
	123	NAS1149D0563J		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0563P			
-	126	NAS1149F0563P		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149D0563J			
	127	NAS1149D0532K		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0532P			
-	128	NAS1149F0532P		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0532K			
	129	MS21042-5		A	·LOCKNUT	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21044N5			
-	132	MS21044N5		A	·LOCKNUT	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21042-5			
	135	11248-003			·SEAT ATTACH CHANNEL, FWD	0002 / 0001	/	1
	138	50745-005 TO -008	@	A	·HI-LOK PIN	0002	0820	2
	139	AN6-6A		A	·BOLT	0821 / 0001	/	2
	141	NAS1149D0663J		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149F0663P			
-	144	NAS1149F0663P		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149D0663J			
	145	AN970-6		A	·WASHER	0821 / 0001	/	2
	146	NAS1149D0632J		A	·WASHER	0821 / 0001	/	2
	147	MS21042-6		A	·LOCKNUT	0002	0820	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						ALTERNATE FOR P/N MS21044N6			
-	150	MS21044N6		A		·LOCKNUT	0002	0820	2
						ALTERNATE FOR P/N MS21042-6			
	151	MS21083N6		A		·LOCKNUT	0821 / 0001	/	2
-	153	12490-003				·SEAT TRACK ASSEMBLY, LH	0002	0097	1
	156	12490-009				·SEAT TRACK ASSEMBLY, LH	0098 / 0001	/	1
	159	AN5-16A		A		·BOLT	0002 / 0001	/	2
	162	11245-002		A		·TUBE SPACER	0002 / 0001	/	2
	165	NAS1149D0563J		A		·WASHER	0002	0820	2
						ALTERNATE FOR P/N NAS1149F0563P			
-	168	NAS1149F0563P		A		·WASHER	0002	0820	2
						ALTERNATE FOR P/N NAS1149D0563J			
	169	NAS1149D0532K		A		·WASHER	0821 / 0001	/	4
						ALTERNATE FOR P/N NAS1149F0532P			
-	170	NAS1149F0532P		A		·WASHER	0821 / 0001	/	4
						ALTERNATE FOR P/N NAS1149D0532K			
	172	MS21042-5		A		·LOCKNUT	0002 / 0001	/	2
						ALTERNATE FOR P/N MS21044N5			
-	175	MS21044N5		A		·LOCKNUT	0002 / 0001	/	2
						ALTERNATE FOR P/N MS21042-5			
	178	AN5-16A		A		·BOLT	0002 / 0001	/	1
	181	NAS1149D0532J		A		·WASHER	0002	0820	1
						ALTERNATE FOR P/N NAS1149F0532P			
-	184	NAS1149F0532P		A		·WASHER	0002	0820	1
						ALTERNATE FOR P/N NAS1149D0532J			
	187	11247-001		A		·TUBE SPACER	0002 / 0001	/	1
	190	NAS1149D0563J		A		·WASHER	0002	0820	1
						ALTERNATE FOR P/N NAS1149F0563P			
-	193	NAS1149F0563P		A		·WASHER	0002	0820	1
						ALTERNATE FOR P/N NAS1149D0563J			
	194	NAS1149D0532K		A		·WASHER	0821 / 0001	/	2
						ALTERNATE FOR P/N NAS1149F0532P			
-	195	NAS1149F0532P		A		·WASHER	0821 / 0001	/	2
						ALTERNATE FOR P/N NAS1149D0532K			
	196	MS21042-5		A		·LOCKNUT	0002 / 0001	/	1
						ALTERNATE FOR P/N MS21044N5			
-	199	MS21044N5		A		·LOCKNUT	0002 / 0001	/	1
						ALTERNATE FOR P/N MS21042-5			
	202	11248-003				·SEAT ATTACH CHANNEL, FWD	0002 / 0001	/	1
	205	50745-005 TO - 008	@	A		·HI-LOK PIN	0002	0820	2
	206	AN6-6A		A		·BOLT	0821 / 0001	/	2
	208	NAS1149D0663J		A		·WASHER	0002	0820	2
						ALTERNATE FOR P/N NAS1149F0663P			
-	211	NAS1149F0663P		A		·WASHER	0002	0820	2
						ALTERNATE FOR P/N NAS1149D0663J			
	212	AN970-6		A		·WASHER	0821 / 0001	/	2
	213	NAS1149D0632J		A		·WASHER	0821 / 0001	/	2
	214	MS21042-6		A		·LOCKNUT	0002	0820	2
						ALTERNATE FOR P/N MS21044N6			
-	217	MS21044N6		A		·LOCKNUT	0002	0820	2
						ALTERNATE FOR P/N MS21042-6			
	218	MS21083N6		A		·LOCKNUT	0821 / 0001	/	2
-	220	12490-004				·SEAT TRACK ASSEMBLY, RH	0002	0097	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	223	12490-010			·SEAT TRACK ASSEMBLY, RH	0098 / 0001	/	1
	226	AN5-16A		A	·BOLT	0002 / 0001	/	2
	229	11245-002		A	·TUBE SPACER	0002 / 0001	/	2
	232	NAS1149D0563J		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149F0563P			
-	235	NAS1149F0563P		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149D0563J			
	236	NAS1149D0532K		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0532P			
-	237	NAS1149F0532P		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0532K			
	238	MS21042-5		A	·LOCKNUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21044N5			
-	241	MS21044N5		A	·LOCKNUT	0002 / 0001	/	2
					ALTERNATE FOR P/N MS21042-5			
	244	AN5-22A		A	·BOLT	0002 / 0001	/	1
	247	NAS1149D0532J		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0532P			
-	250	NAS1149F0532P		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149D0532J			
	253	11242-002		A	·TUBE SPACER	0002 / 0001	/	1
	256	NAS1149D0563J		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0563P			
-	259	NAS1149F0563P		A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149D0563J			
	260	NAS1149D0532K		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0532P			
-	261	NAS1149F0532P		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0532K			
	262	MS21042-5		A	·LOCKNUT	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21044N5			
-	265	MS21044N5		A	·LOCKNUT	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21042-5			
	268	12688-002			·SEAT ATTACH BRACKET, RH	0002	0820	1
	269	20108-002			·SEAT ATTACH BRACKET, RH	0821 / 0001	/	1
	271	50745-010		A	·HI-LOK PIN	0002	0820	3
	272	AN5-10A		A	·BOLT	0821 / 0001	/	8
	274	NAS1149D0663J		A	·WASHER	0002	0820	3
					ALTERNATE FOR P/N NAS1149F0663P			
-	277	NAS1149F0663P		A	·WASHER	0002	0820	3
					ALTERNATE FOR P/N NAS1149D0663J			
	278	NAS1149D0563J		A	·WASHER	0821 / 0001	/	8
					ALTERNATE FOR P/N NAS1149F0563P			
-	279	NAS1149F0563P		A	·WASHER	0821 / 0001	/	8
					ALTERNATE FOR P/N NAS1149D0563J			
	280	MS21042-6		A	·LOCKNUT	0002	0820	3
					ALTERNATE FOR P/N MS21044N6			
-	283	MS21044N6		A	·LOCKNUT	0002	0820	3
					ALTERNATE FOR P/N MS21042-6			
	284	MS21042-5		A	·LOCKNUT	0821 / 0001	/	8
	286	50745-005 TO -008	@	A	·HI-LOK PIN	0002	0820	4
	289	NAS1149D0663J		A	·WASHER	0002	0820	4
					ALTERNATE FOR P/N NAS1149F0663P			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	292	NAS1149F0663P		A	·WASHER	0002	0820	4
					ALTERNATE FOR P/N NAS1149D0663J			
	295	MS21042-6		A	·LOCKNUT	0002	0820	4
					ALTERNATE FOR P/N MS21044N6			
-	298	MS21044N6		A	·LOCKNUT	0002	0820	4
					ALTERNATE FOR P/N MS21042-6			
	301	12694-001			·RADIUS FILLER	0002	0820	1
-	304	10584-001			·CHANNEL, CREW SEAT ATTACH, AFT	0002	0168	4
	307	10584-002			·CHANNEL, CREW SEAT ATTACH, AFT	0169 / 0001	/	4
	310	50745-005 TO -008	@	A	·HI-LOK PIN	0002	0820	8
	311	AN6-7A		A	·BOLT	0821 / 0001	/	8
	313	AN970-6		A	·WASHER	0002 / 0001	/	8
	316	NAS1149D0663J		A	·WASHER	0002	0820	8
					ALTERNATE FOR P/N NAS1149F0663P			
-	319	NAS1149F0663P		A	·WASHER	0002	0820	8
					ALTERNATE FOR P/N NAS1149D0663J			
	320	NAS1149D0632J		A	·WASHER	0821 / 0001	/	8
					ALTERNATE FOR P/N NAS1149F0632P			
-	321	NAS1149F0632P		A	·WASHER	0821 / 0001	/	8
					ALTERNATE FOR P/N NAS1149D0632J			
	322	MS21042-6		A	·LOCKNUT	0002 / 0001	/	8
					ALTERNATE FOR P/N MS21044N6			
-	325	MS21044N6		A	·LOCKNUT	0002 / 0001	/	8
					ALTERNATE FOR P/N MS21042-6			
	328	11243-002			·SPACER, FORWARD, MAIN WING ATTACH	0002 / 0001	/	2
	331	12687-003			·PLATE, WING ATTACH, SPAR BOX	0002	0820	4
	332	20107-001			·PLATE, WING ATTACH, SPAR BOX	0821 / 0001	/	4
	334	11241-002			·TUBE SPACER, AFT, MAIN WING ATTACH	0002 / 0001	/	2
	337	11099-001			·BUSHING,WING ATTACH	0002 / 0001	/	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 25-10-01 DET			FORWARD SEATS			
					SYMBOL NOTES:			
			@		DASH NUMBER INDICATES GRIP LENGTH WHICH VARIES WITH BOND LINE WIDTH.			

Intentionally Left Blank

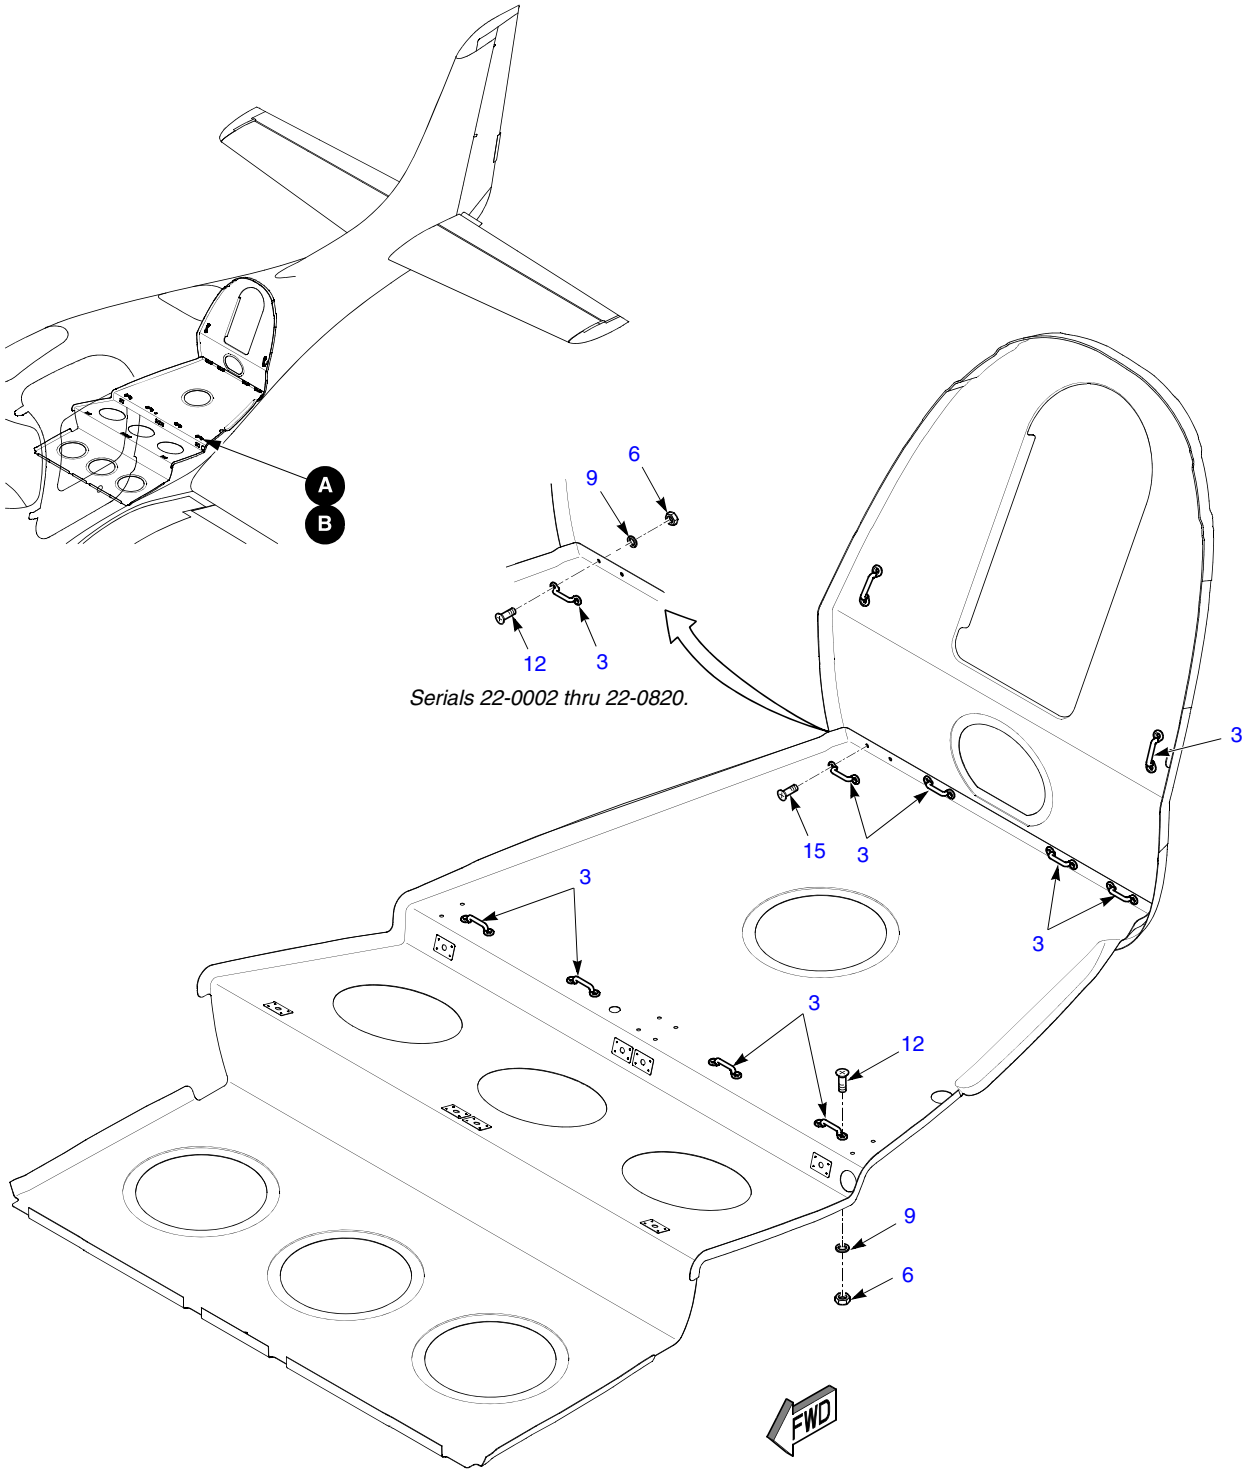

DETAIL A

Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat.

SR22_PC53_1329D

Figure-02

Footman Loop Attach Fittings - Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs, 22T-0001 & subs w/o 2+1 Rear Seat

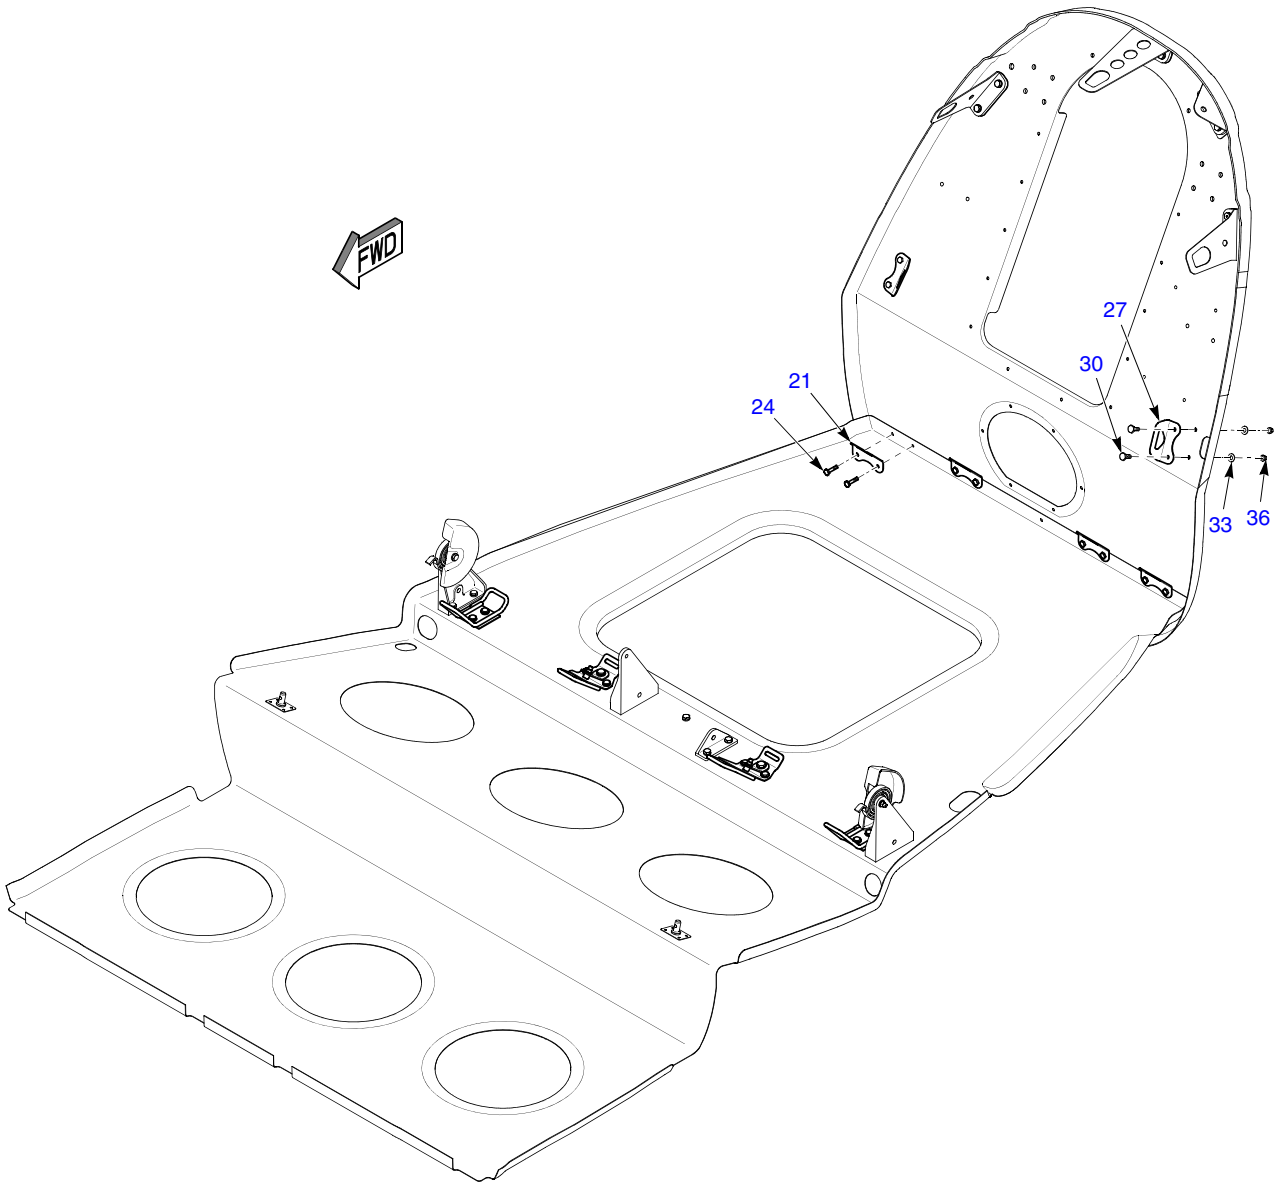

DETAIL B

Serials 22-3828 & subs,
22T-0268 & subs w/ 2+1 Rear Seat.

SR22_PC53_2046

Figure-02

Footman Loop Attach Fittings - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (2 of 2)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		FOOTMAN LOOP ATTACH FITTINGS	0002 / 0001	/	NP
	3	50497-001			·FOOTMAN LOOP	0002 / 0001	/	10
	6	MS21042-3		A	·NUT	0002 / 0001	0820 /	20
						0821		12
	9	NAS1149D0332J		A	·WASHER	0002 / 0001	0820 /	20
						0821		12
	12	MS24694-S50		A	·SCREW, COUNTERSUNK	0002 / 0001	0820 /	20
						0821		12
	15	MS24694-S55		A	·SCREW, COUNTERSUNK	0821 / 0001	/	8
-	18	NO PRT NUMBER	**		FOOTMAN LOOP ATTACH FITTINGS W/ 2+1 REAR SEAT	3828 / 0268	/	NP
	21	25046-001			·FOOTMAN LOOP	3828 / 0268	/	4
	24	AN3-7A		A	·BOLT	3828 / 0268	/	8
	27	25046-001			·FOOTMAN LOOP	3828 / 0268	/	2
	30	AN3-4A		A	·BOLT	3828 / 0268	/	4
	33	NAS1149D0332K		A	·WASHER	3828 / 0268	/	4
	36	MS21042L3		A	·NUT	3828 / 0268	/	4
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0251; REFER TO 22T-0268 W/ 2+1 REAR SEAT FOR PART IDENTIFICATION.			

Intentionally Left Blank

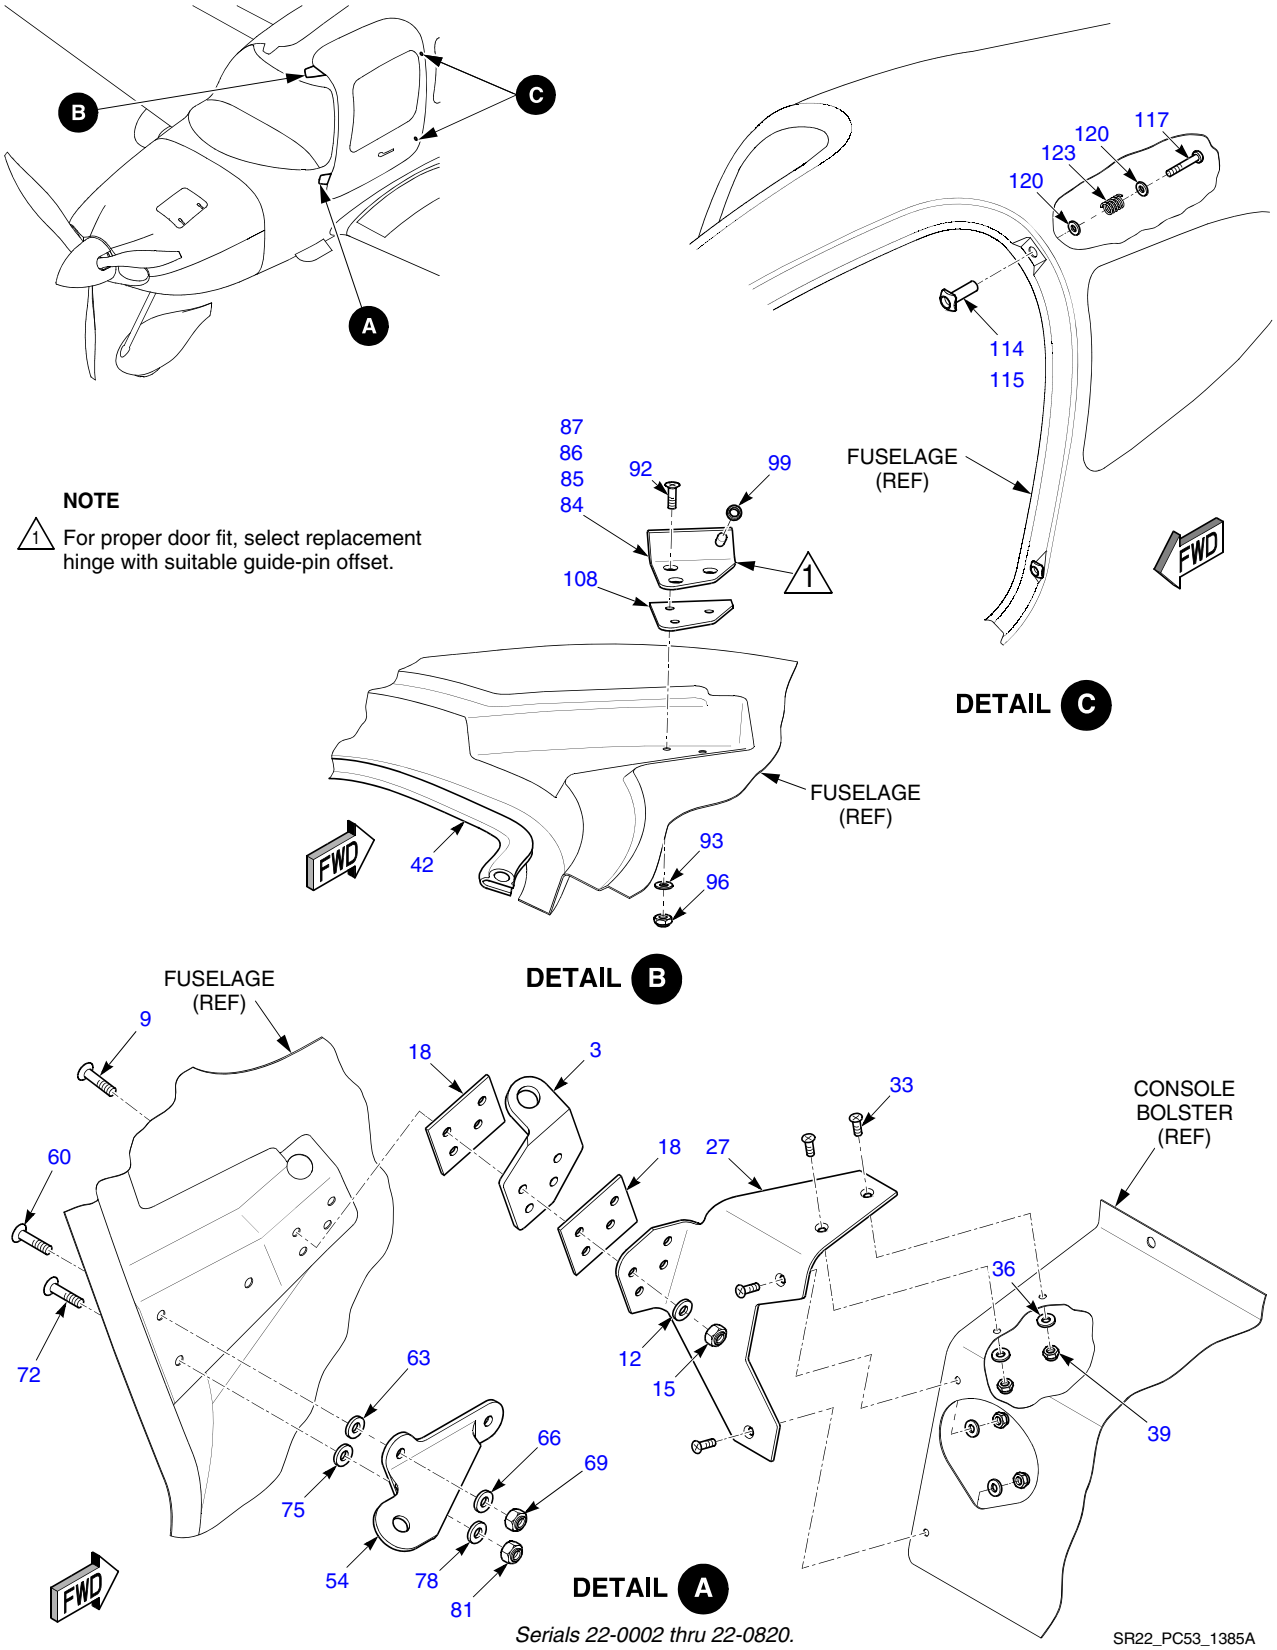

Figure-03
Cabin Door Attach Fittings - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

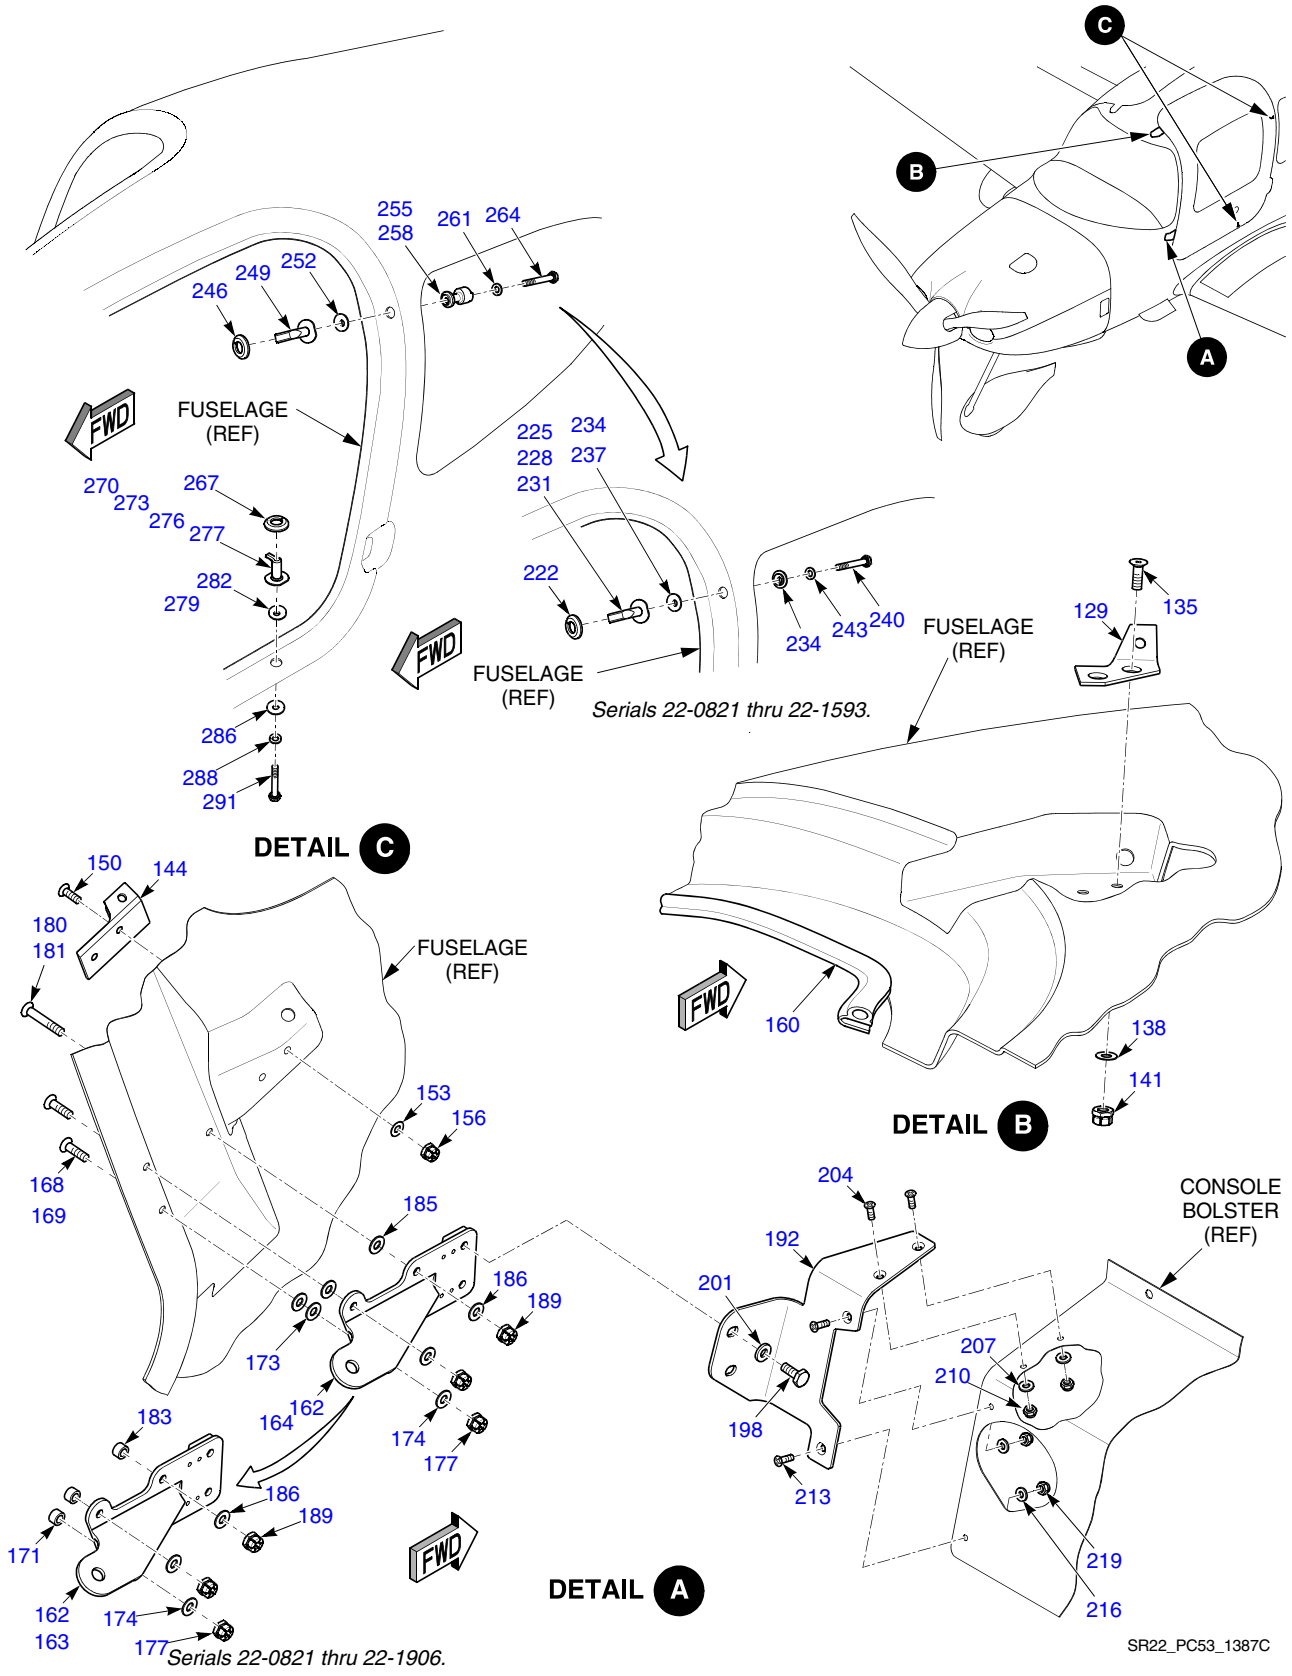

Figure-03

Cabin Door Attach Fittings - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			CABIN DOOR ATTACH FITTINGS	0002	0820	NP
	3	11910-005			·HINGE, LOWER FUSELAGE, LH	0002	0820	1
-	6	11910-006			·HINGE, LOWER FUSELAGE, RH	0002	0820	1
	9	MS24694-S8		A	·SCREW	0002	0820	3
	12	NAS1149FN816P		A	·WASHER	0002	0820	3
	15	MS21083N08		A	·NUT	0002	0820	3
	18	10652-103			·ALUMINUM SHIM	0002	0820	AR
-	21	13205-001			·SIDE ATTACH BRACKET, LH	0002	0820	1
					FOR SPARES USE P/N 13205-003			
-	24	13205-002			·SIDE ATTACH BRACKET, RH	0002	0820	1
					FOR SPARES USE P/N 13205-004			
	27	13205-003			·SIDE ATTACH BRACKET, LH	0002	0820	1
-	30	13205-004			·SIDE ATTACH BRACKET, RH	0002	0820	1
	33	MS24693-S25		A	·SCREW	0002	0820	4
	36	NAS1149FN616P		A	·WASHER	0002	0820	4
	39	MS21083N06		A	·NUT	0002	0820	4
	42	52010-008	@		·DOOR SEAL	0002	0820	AR
					ALTERNATE FOR P/N 52010-002			
-	45	52010-002	@		·DOOR SEAL	0002	0820	AR
					ALTERNATE FOR P/N 52010-008			
-	48	12021-001			·STRUT ATTACH BRACKET, LH	0002	0118	1
					FOR SPARES USE P/N 15242-001			
-	51	12021-002			·STRUT ATTACH BRACKET, RH	0002	0118	1
					FOR SPARES USE P/N 15242-002			
	54	15242-001			·STRUT ATTACH BRACKET, LH	0119	0820	1
-	57	15242-002			·STRUT ATTACH BRACKET, RH	0119	0820	1
	60	MS24694-S64		A	·SCREW	0002	0820	1
	63	50568-001		A	·ALUMINUM SPACER	0002	0820	1
	66	NAS1149F0332P		A	·WASHER	0002	0820	1
	69	MS21083N3		A	·NUT	0002	0820	1
	72	MS24694-S55		A	·SCREW	0002	0820	2
	75	50568-001		A	·ALUMINUM SPACER	0002	0820	2
	78	NAS1149F0332P		A	·WASHER	0002	0820	2
	81	MS21083N3		A	·NUT	0002	0820	2
	84	11908-005	!		·HINGE, UPPER FUSELAGE, LH	0002	0820	1
	85	11908-009	!!		·HINGE, UPPER FUSELAGE, LH	0002	0820	1
	86	11908-011	*		·HINGE, UPPER FUSELAGE, LH	0002	0820	1
	87	11908-013	**		·HINGE, UPPER FUSELAGE, LH	0002	0820	1
-	88	11908-006	!		·HINGE, UPPER FUSELAGE, RH	0002	0820	1
-	89	11908-010	!!		·HINGE, UPPER FUSELAGE, RH	0002	0820	1
-	90	11908-012	*		·HINGE, UPPER FUSELAGE, RH	0002	0820	1
-	91	11908-014	**		·HINGE, UPPER FUSELAGE, RH	0002	0820	1
	92	MS24694-S8		A	·SCREW	0002	0820	3
	93	NAS1149FN816P		A	·WASHER	0002	0820	3
	96	MS21083N08		A	·NUT	0002	0820	3
	99	NAS1149F0316P	#	A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0332P			
					ALTERNATE FOR P/N NAS1149F0363P			
-	102	NAS1149F0332P	#	A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0363P			
					ALTERNATE FOR P/N NAS1149F0316P			
-	105	NAS1149F0363P	#	A	·WASHER	0002	0820	1
					ALTERNATE FOR P/N NAS1149F0316P			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					ALTERNATE FOR P/N NAS1149F0332P			
	108	10652-104			·SHIM	0002	0820	AR
-	111	10498-002			·PIN RECEIVER	0002	0118	2
					FOR SPARES USE P/N 10498-003			
	114	10498-003			·PIN RECEIVER	0119	0820	2
					ALTERNATE FOR P/N 13970-001			
	115	13970-001			·PIN RECEIVER	0119	0820	2
					ALTERNATE FOR P/N 10498-003			
	117	MS27039-1-20		A	·SCREW	0002	0820	2
	120	NAS1149F0363P		A	·WASHER	0002	0820	4
	123	MS24585C169			·SPRING	0002	0820	2
-	126	NO PRT NUMBER			CABIN DOOR ATTACH FITTINGS	0821 / 0001	/	NP
	129	20299-001			·HINGE, UPPER FUSELAGE, LH	0821 / 0001	/	1
-	132	20299-002			·HINGE, UPPER FUSELAGE, RH	0821 / 0001	/	1
	135	MS24694S5		A	·SCREW	0821 / 0001	/	2
	138	NAS1149FN816P		A	·WASHER	0821 / 0001	/	2
	141	MS21044N08		A	·NUT	0821 / 0001	/	2
	144	20300-001			·HINGE, LOWER FUSELAGE, LH	0821 / 0001	/	1
-	147	20300-002			·HINGE, LOWER FUSELAGE, RH	0821 / 0001	/	1
	150	MS24694S5		A	·SCREW	0821 / 0001	/	3
	153	NAS1149FN816P		A	·WASHER	0821 / 0001	/	3
	156	MS21044N08		A	·NUT	0821 / 0001	/	3
-	159	52010-009	@		·DOOR SEAL	0821 / 0001	/	AR
					ALTERNATE FOR P/N 52010-008			
	160	52010-008	@		·DOOR SEAL	0821 / 0001	/	AR
					ALTERNATE FOR P/N 52010-009			
	162	20311-001			·GAS STRUT ATTACH BRACKET, LH	0821	2349	1
					FOR SPARES USE P/N 20311-002			
	163	20311-002			·GAS STRUT ATTACH BRACKET, LH	2350 / 0001	4299 / 1232	1
	164	20311-003			·GAS STRUT ATTACH BRACKET, LH	4300 / 1233		1
-	165	20383-001			·GAS STRUT ATTACH BRACKET, RH	0821	2349	1
					FOR SPARES USE P/N 20383-002			
-	166	20383-002			·GAS STRUT ATTACH BRACKET, RH	2350 / 0001	4299 / 1232	1
-	167	20383-003			·GAS STRUT ATTACH BRACKET, RH	4300 / 1233	/	1
	168	MS24694S53		A	·SCREW	0821	1906	1
	169	MS24694S54		A	·SCREW	1907 / 0001	/	1
	171	50568-001		A	·SPACER	0821	1906	1
					ALTERNATE FOR P/N NAS43DD3-12FC			
-	172	NAS43DD3-12FC			·SPACER	0821	1906	1
					ALTERNATE FOR P/N 50568-001			
	173	NAS1149F0363P		A	·WASHER	1907 / 0001	/	2
	174	NAS1149F0332P		A	·WASHER	0821 / 0001	/	1
	177	MS21044N3		A	·NUT, LOCKING	0821 / 0001	/	1
	180	MS24694S60		A	·SCREW	0821	1593	2
	181	MS24694S62		A	·SCREW	1594 / 0001	/	2
	183	50568-001		A	·SPACER	0821	1593	2
					ALTERNATE FOR P/N NAS43DD3-12FC			
-	184	NAS43DD3-12FC			·SPACER	0821	1593	2
					ALTERNATE FOR P/N 50568-001			
	185	AN970-3		A	·WASHER	1594 / 0001	/	2
	186	NAS1149F0332P		A	·WASHER	0821 / 0001	/	2
	189	MS21044N3		A	·NUT, LOCKING	0821 / 0001	/	2
	192	20364-001			·BOLSTER BRACKET, LH	0821 / 0001	/	1
-	195	20381-001			·BOLSTER BRACKET, RH	0821 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	198	AN3-4A		A	·BOLT	0821 / 0001	/	2
	201	NAS1149F0363P		A	·WASHER	0821 / 0001	/	2
	204	MS24693-S25		A	·SCREW	0821 / 0001	/	3
	207	NAS1149FN616P		A	·WASHER	0821 / 0001	/	AR
	210	MS21083N06		A	·NUT	0821 / 0001	/	3
	213	MS24693-S26		A	·SCREW	0821 / 0001	/	1
	216	NAS1149FN616P		A	·WASHER	0821 / 0001	/	AR
	219	MS21083N06		A	·NUT	0821 / 0001	/	1
	222	20575-001		A	·SPACER	0821	1906	1
	225	20268-001			·STRIKER PIN	0821	1044	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20268-003			
	228	20268-002			·STRIKER PIN	1045	1154	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20268-003			
	231	20268-003			·STRIKER PIN	1155	1906	1
					BEFORE SB2X-52-03			
					AFTER SB2X-52-03	0821	1154	1
	234	20522-001		A	·BUSHING, ADJUSTMENT	0821	0976	2
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20522-002			
	237	20522-002		A	·BUSHING, ADJUSTMENT	0977	1593	2
					BEFORE SB2X-52-03			
					AFTER SB2X-52-03	0821	1154	2
	240	MS35338-44		A	·WASHER	0821	1906	1
	243	AN4-17A		A	·BOLT	0821	1906	1
	246	20575-001		A	·SPACER	1907 / 0001	/	1
	249	20268-003			·STRIKER PIN	1907 / 0001	/	1
	252	14686-001		A	·WASHER	1594 / 0001	/	1
	255	15174-001		A	·SPACER	1594	1906	1
	258	15174-002		A	·SPACER	1907 / 0001	/	1
	261	MS35338-44		A	·WASHER	1907 / 0001	/	1
	264	AN4-20A		A	·BOLT	1907 / 0001	/	1
	267	20575-001		A	·SPACER	0821 / 0001	/	1
	270	20268-001			·STRIKER PIN	0821	1044	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20268-003			
	273	20268-002			·STRIKER PIN	1045	1154	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20268-003			
	276	20268-003			·STRIKER PIN	1155 / 0001	4299 / 1232	1
					BEFORE SB2X-52-03			
					AFTER SB2X-52-03	0821 / 0001	/	1
	277	20268-004			·STRIKER PIN	4300 / 1233	/	1
	279	20522-001		A	·BUSHING, ADJUSTMENT	0821	0976	1
					BEFORE SB2X-52-03			
					FOR SPARES USE P/N 20522-002			
	282	20522-002		A	·BUSHING, ADJUSTMENT	0977 / 0001	/	1
					BEFORE SB2X-52-03			
					AFTER SB2X-52-03	0821 / 0001	/	1
-	285	14686-001		A	·WASHER	0821 / 0001	/	1
					ALTERNATE FOR P/N 14686-002			
	286	14686-002		A	·WASHER, MODIFIED	0821 / 0001	/	1
					ALTERNATE FOR P/N 14686-001			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	288	MS35338-44		A	·WASHER	0821 / 0001	/	1
	291	AN4-6A		A	·BOLT	0821 / 0001	/	1
					SYMBOL NOTES:			
			#		ONE WASHER NOMINAL, ADD WASHER BETWEEN DOOR HINGES FOR CLEARANCE AND AXIS ALIGNMENT. ADDITIONAL WASHER PERMISSIBLE TO FACILITATE PROPER DOOR OPERATION.			
			@		BULK ITEM, CUT TO LENGTH.			
			!		11908-005 & 11908-006: GUIDE PIN OFFSET = 0.348 INCH			
			!!		11908-009 & 11908-010: GUIDE PIN OFFSET = 0.328 INCH			
			*		11908-011 & 11908-012: GUIDE PIN OFFSET = 0.308 INCH			
			**		11908-013 & 11908-014: GUIDE PIN OFFSET = 0.288 INCH			

EFFECTIVITY:
All

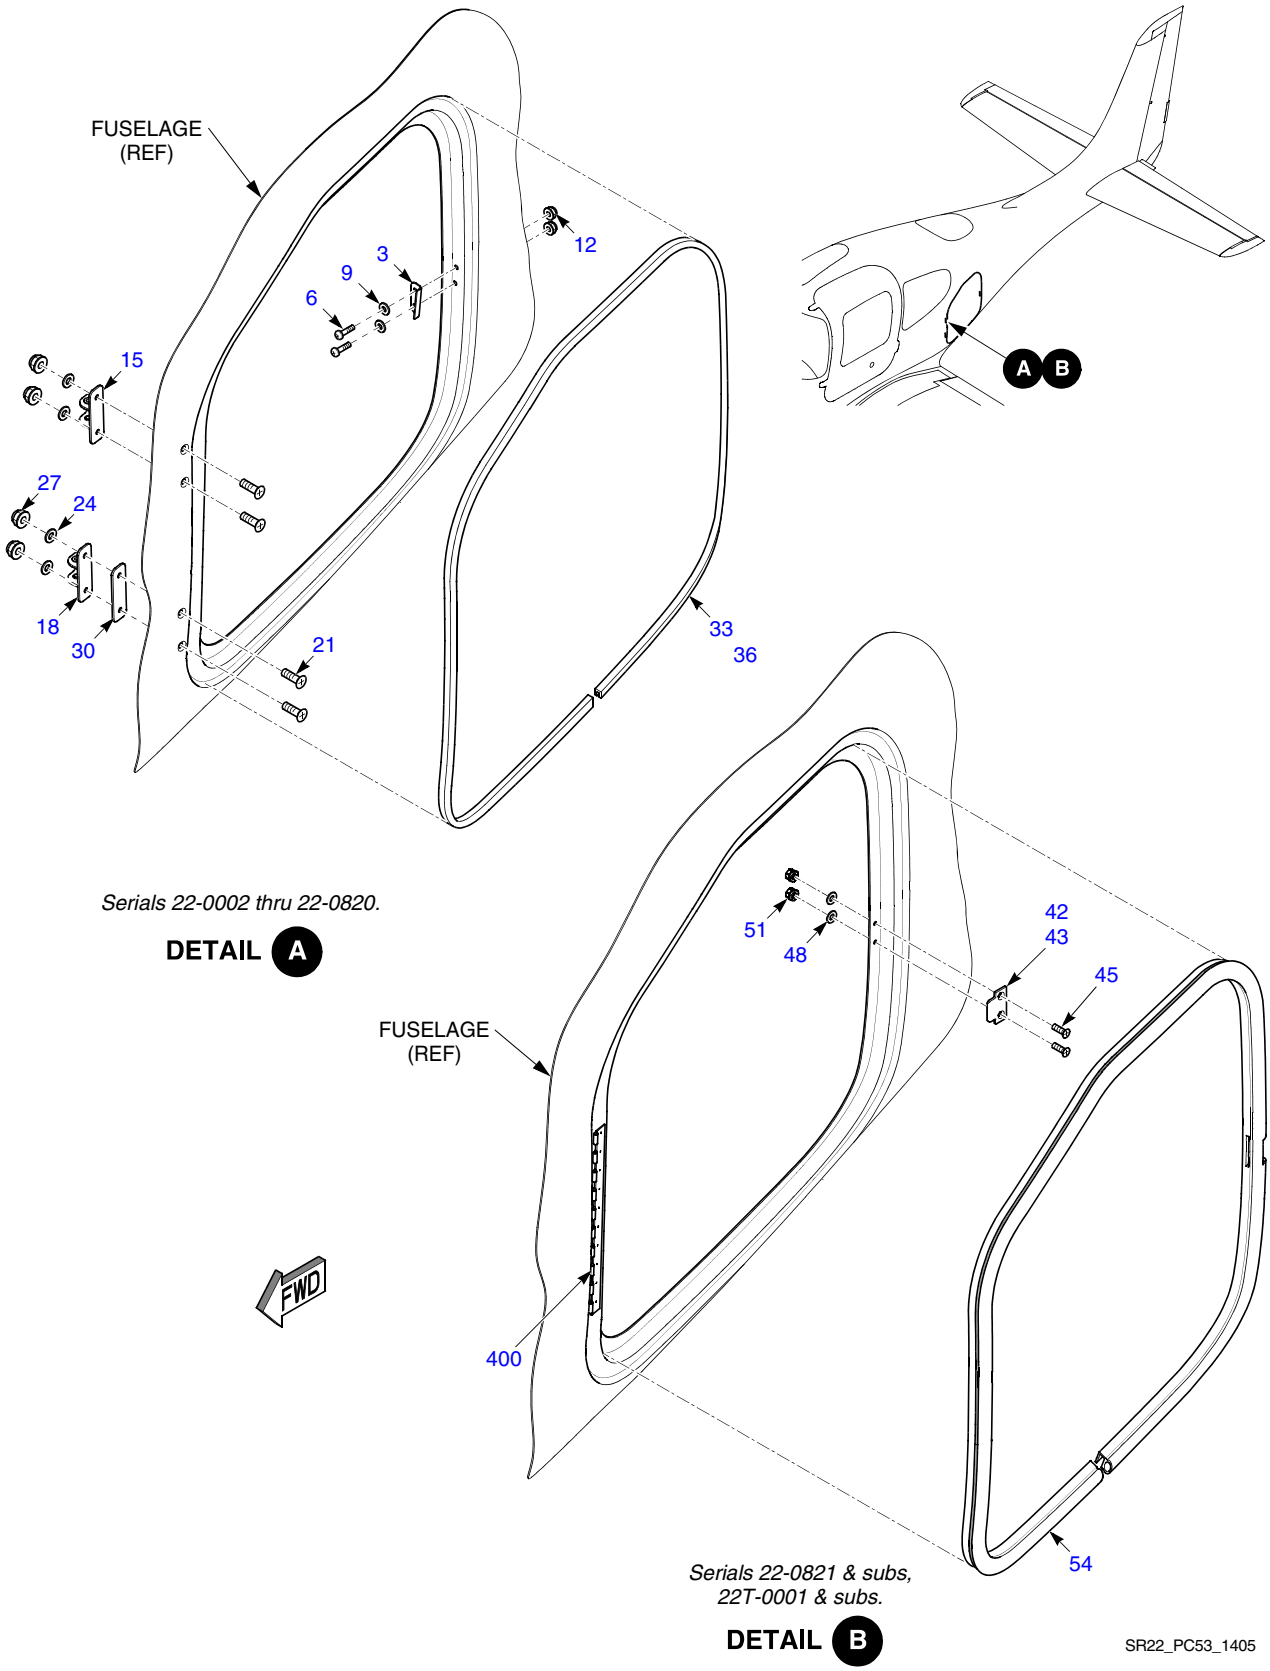

Figure-04
Baggage Door Attach Fittings

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04			BAGGAGE DOOR ATTACH FITTINGS	0002	0820	NP
	3	10664-002			·LOCK CATCH	0002	0820	1
	6	MS27039-1-10		A	·SCREW	0002	0820	2
	9	NAS1149F0363P		A	·WASHER	0002	0820	2
	12	MS21044N3		A	·NUT	0002	0820	2
	15	11984-001			·HINGE BRACKET, UPPER	0002	0820	1
	18	11985-001			·HINGE BRACKET, LOWER	0002	0820	1
	21	MS24694-S53		A	·SCREW	0002	0820	4
	24	NAS1149F0363P		A	·WASHER	0002	0820	4
	27	MS21044N3		A	·NUT	0002	0820	4
	30	12050-101			·SHIM	0002	0820	AR
	33	52010-008	@		·SEAL	0002	0820	AR
					ALTERNATE FOR P/N 52010-002			
	36	52010-002	@		·SEAL	0002	0820	AR
					ALTERNATE FOR P/N 52010-008			
-	39	NO PRT NUMBER			BAGGAGE DOOR INSTALLATION	0821 / 0001	/	NP
	42	20307-001			·LOCK CATCH	0821 / 0001	3707 / 0052	1
					FOR SPARES USE P/N 20307-002			
	43	20307-002			·LOCK CATCH	3708 / 0053	/	1
	45	MS24694-S5		A	·SCREW	0821 / 0001	/	2
	48	NAS1149FN832P		A	·WASHER	0821 / 0001	/	2
	51	MS21044N08		A	·NUT	0821 / 0001	/	2
	54	52010-008	@		·SEAL	0821 / 0001	/	AR
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 52-30-01 DET			BAGGAGE DOOR INSTALLATION			
					SYMBOL NOTES:			
			@		BULK ITEM, CUT TO LENGTH.			

EFFECTIVITY:
All

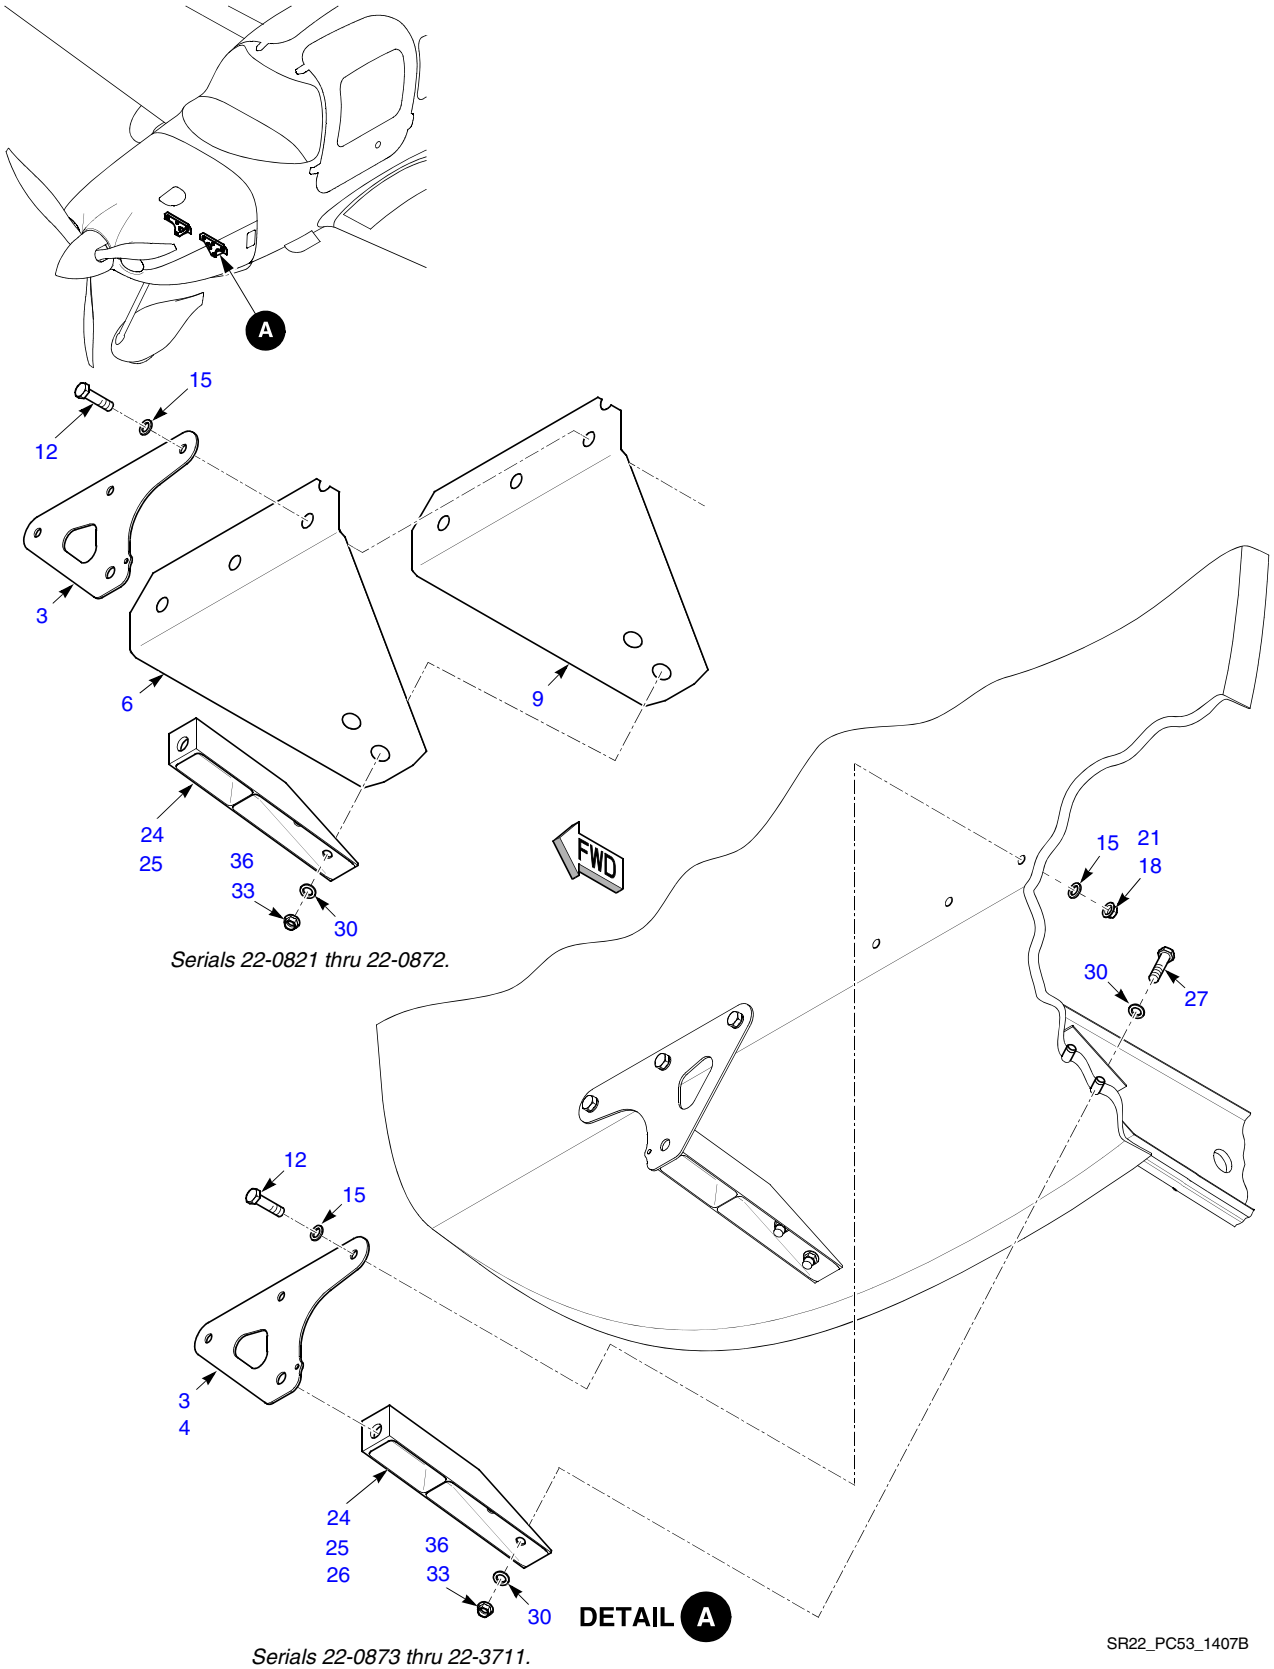

Figure-05

Lower Mount Attach Fittings - Serials 22-0821 thru 22-3711

EFFECTIVITY:
Serials 22-0821 thru 22-3711

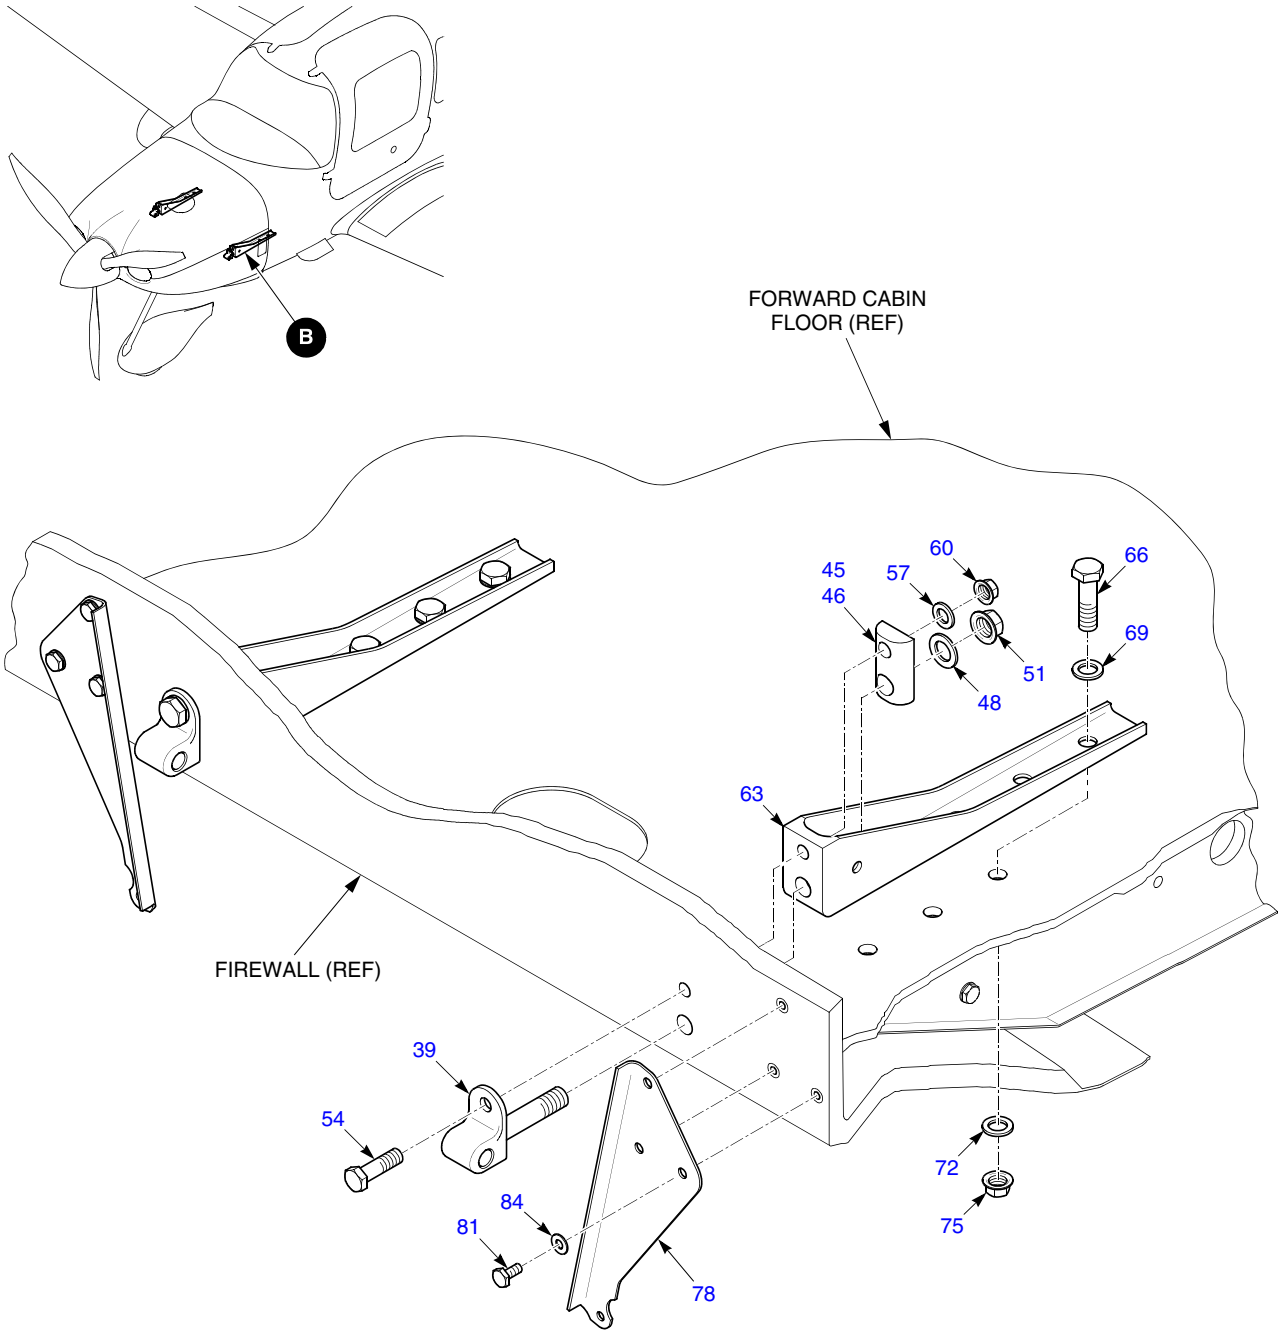

DETAIL B

Serials 22-3712 & subs, 22T-0001 & subs.

SR22_PC53_1954A

Figure-05

Lower Mount Attach Fittings - Serials 22-3712 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 05			LOWER MOUNT ATTACH FITTINGS	0821 / 0001	/	NP
	3	20140-002	@		·PLATE	0821	3567	2
					FOR SPARES USE P/N 20140-003			
	4	20140-003	@		·PLATE	3568	3711	2
	6	20183-002			·FIRE BARRIER, FIREWALL	0821	0872	2
	9	20384-001	#		·INSULATION, FIREWALL	0821	0872	2
	12	AN6-13A		A	·BOLT	0821	3711	6
	15	NAS1149F0663P		A	·WASHER	0821	3711	12
	18	MS21042L6		A	·NUT	0821	3711	6
					ALTERNATE FOR P/N MS21045-6			
	21	MS21045-6		A	·NUT	0821	3711	6
					ALTERNATE FOR P/N MS21042L6			
	24	18311-001			·BRIDGE	0821	3567	2
					ALTERNATE FOR P/N 20126-003			
					FOR SPARES USE P/N 20126-004			
	25	20126-003			·BRIDGE	0821	3567	2
					ALTERNATE FOR P/N 18311-001			
					FOR SPARES USE P/N 20126-004			
	26	20126-004			·BRIDGE	3568	3711	2
	27	AN6-14A		A	·BOLT	0821	3711	4
	30	NAS1149F0663P		A	·WASHER	0821	3711	8
	33	MS21042L6		A	·NUT	0821	3711	4
					ALTERNATE FOR P/N MS21045-6			
	36	MS21045-6		A	·NUT	0821	3711	4
					ALTERNATE FOR P/N MS21042L6			
	39	21899-002			·FITTING	3712 / 0001	/	2
-	42	21922-001			·SPACER	3712 / 0001	/	2
	45	21924-002			·RADIUS FILLER	/ 0001	/ 0047	2
	46	21924-003			·RADIUS FILLER	3712 / 0048	/	2
	48	NAS1149F0763P		A	·WASHER	3712 / 0001	/	2
	51	NAS1291-7		A	·NUT	3712 / 0001	/	2
	54	AN5-21A		A	·BOLT	3712 / 0001	/	2
	57	NAS1149F0563P		A	·WASHER	3712 / 0001	/	2
	60	MS21042-5		A	·NUT	3712 / 0001	/	2
	63	21903-003			·BRIDGE	/ 0001	/ 0047	2
	64	21903-004			·BRIDGE	3712 / 0048	/	2
	66	AN6-12A		A	·BOLT	3712 / 0001	/	6
	69	NAS1149F0632P		A	·WASHER	3712 / 0001	/	6
	72	NAS1149F0663P		A	·WASHER	3712 / 0001	/	6
	75	MS21042L6		A	·NUT	3712 / 0001	/	6
	78	29200-001			·EXHAUST HANGER BRACKET, LH	3712		1
	81	AN3-3A		A	·BOLT	3712		3
	84	NAS1149F0332P		A	·WASHER	3712		3
-	87	29200-002			·EXHAUST HANGER BRACKET, RH	3712		1
-	90	AN3-3A		A	·BOLT	3712		3
-	93	NAS1149F0332P		A	·WASHER	3712		3

SYMBOL NOTES:

@ ORIENT PLATE SO THAT EXHAUST HANGER HOLES ARE OUTBOARD.

INSTALL INSULATION BETWEEN FIRE BARRIER AND FIREWALL ONLY. WHERE NUT CONTACTS FIRE BARRIER, ENSURE INSULATION IS NOT BETWEEN NUT AND FIREWALL.

EFFECTIVITY:
All

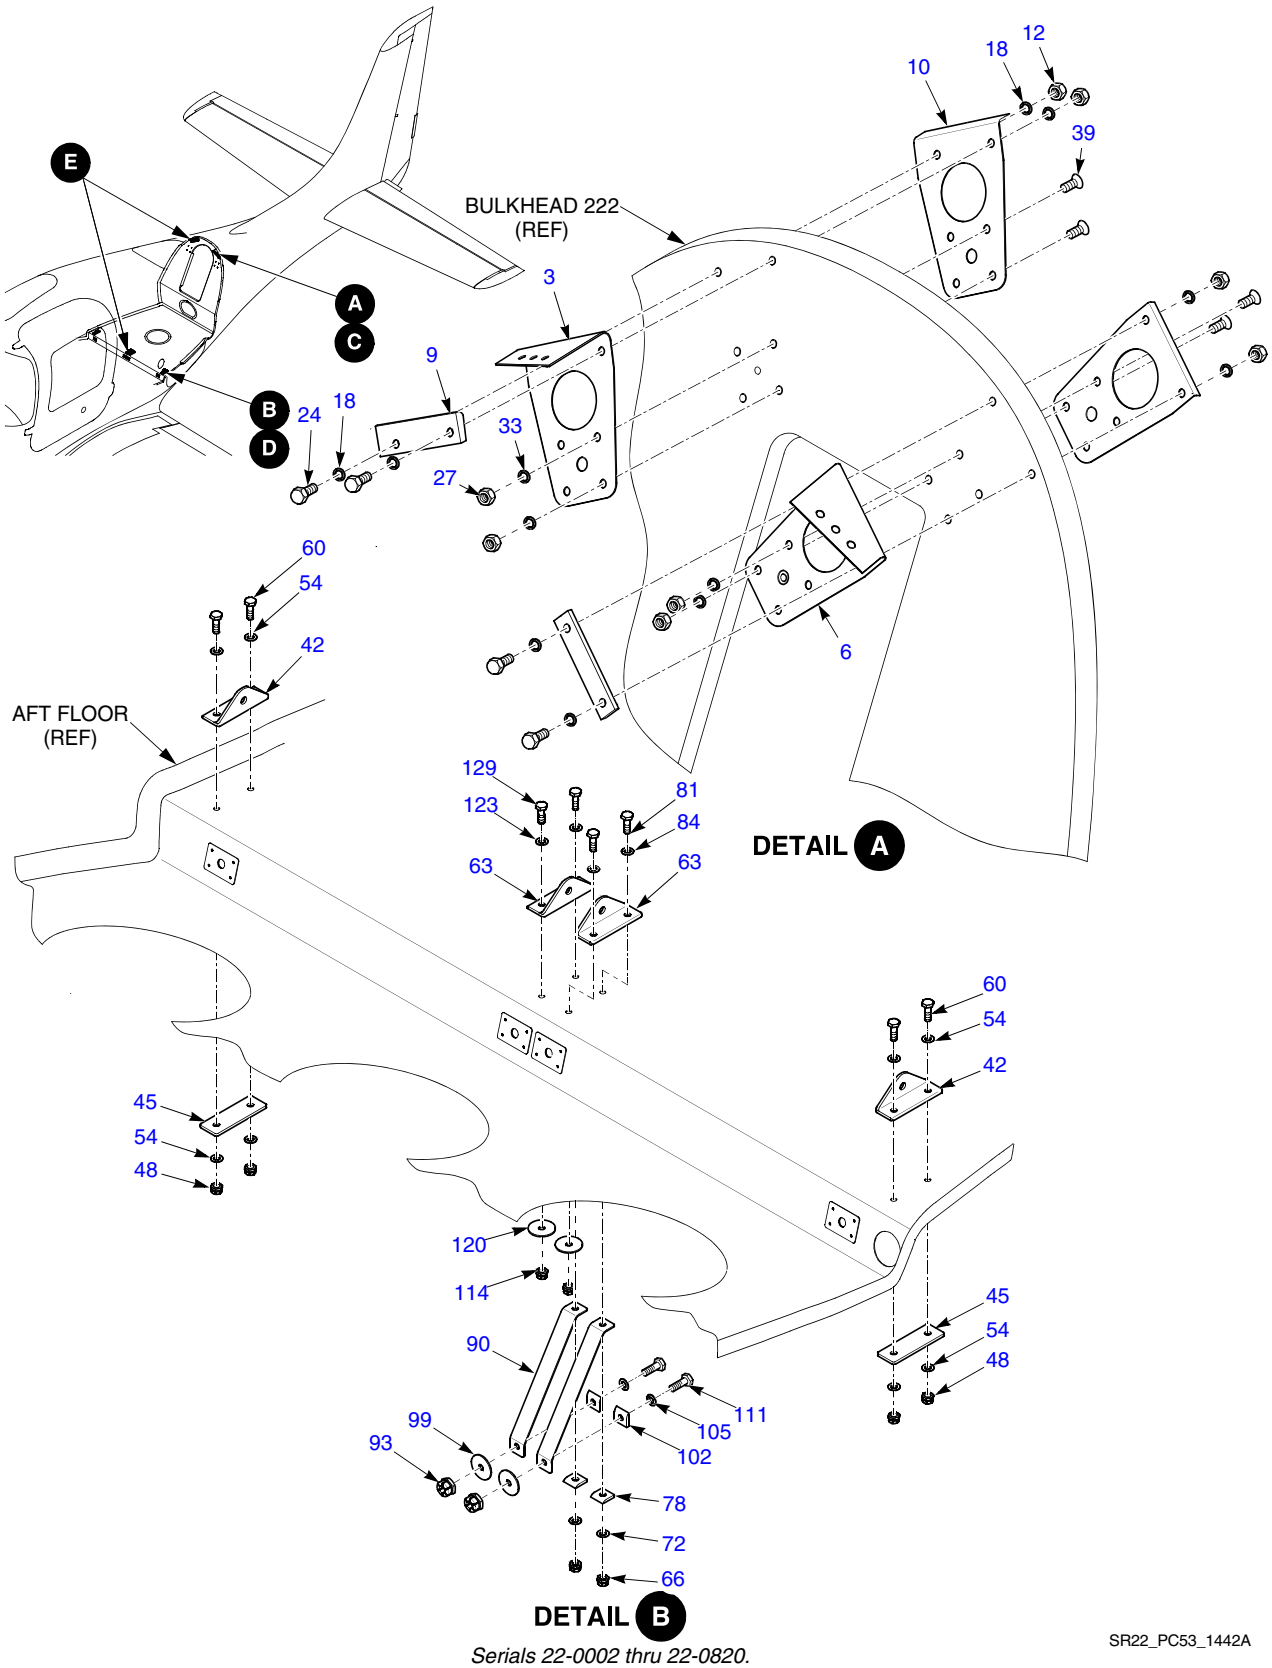

Serials 22-0002 thru 22-0820.

Figure-06

Seat Belt & Shoulder Harness Attach Fittings - Serials 22-0002 thru 22-0820 (1 of 3)

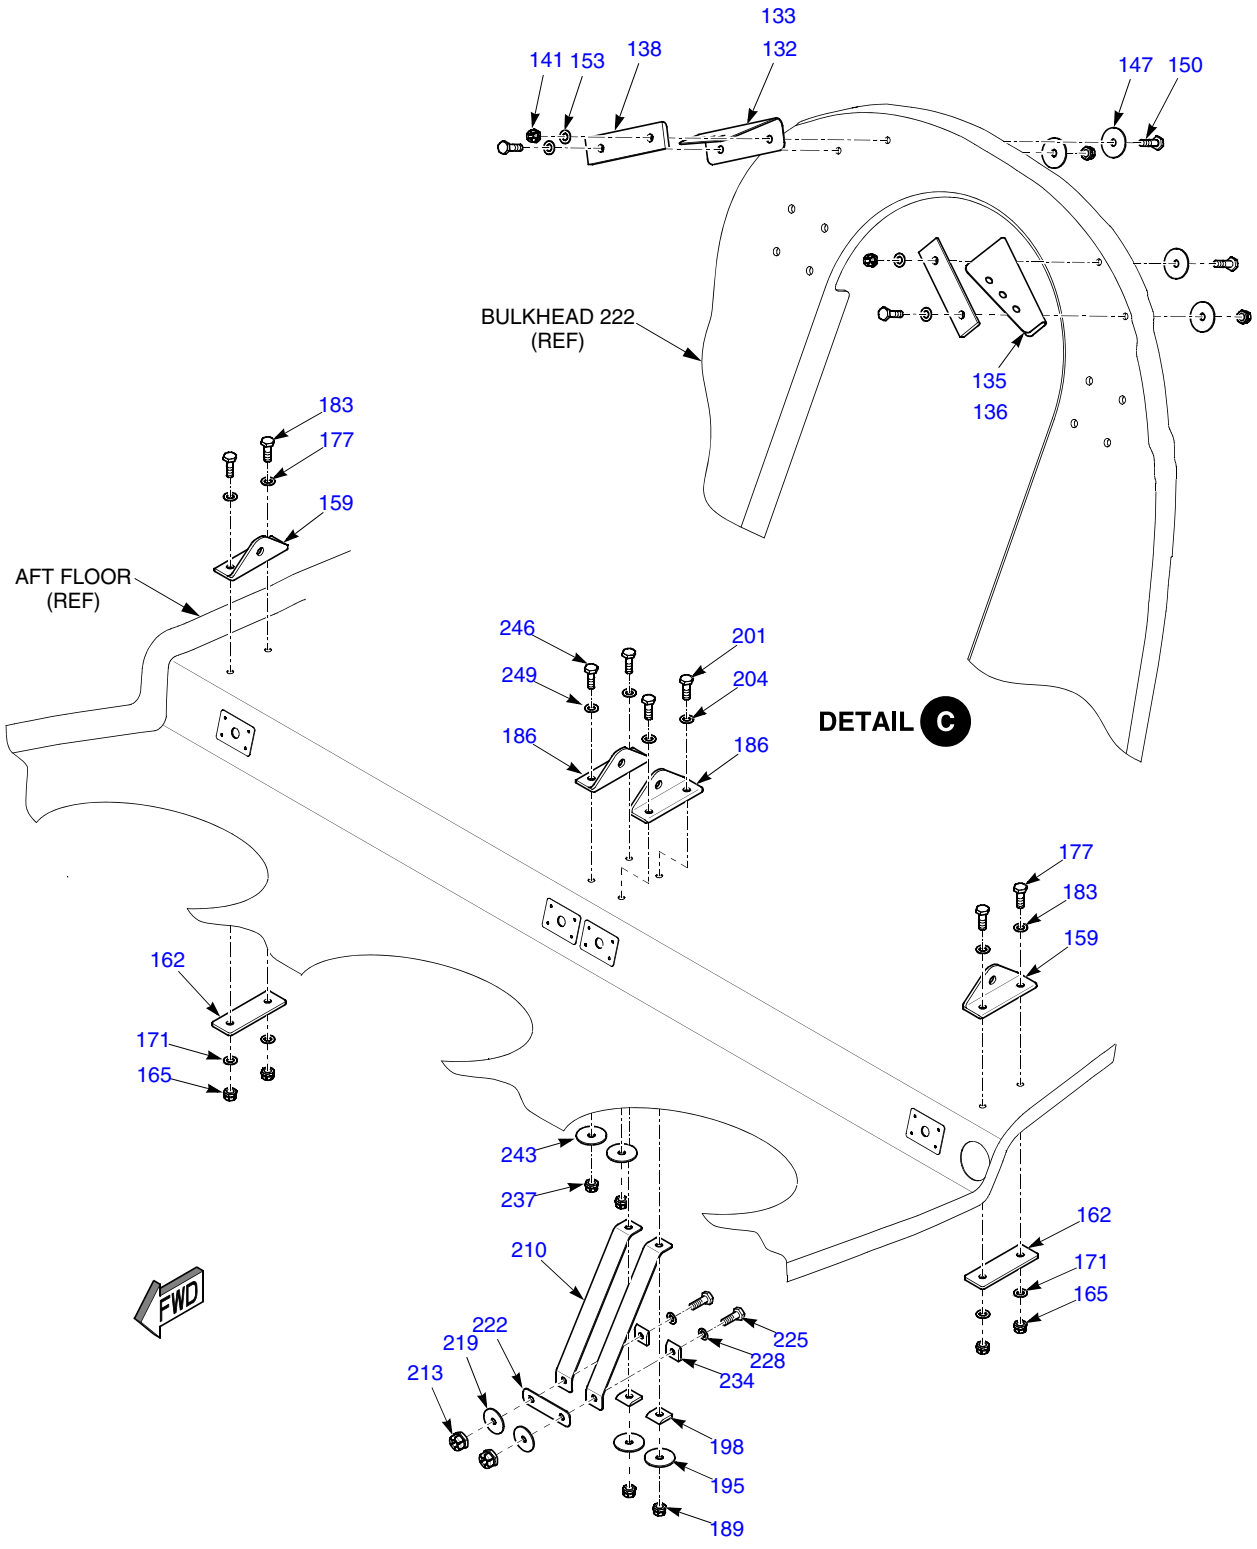

SR22_PC53_1441

Serials 22-0821 & subs, 22T-0001 & subs w/o 2+1 Rear Seat.

Figure-06

Seat Belt and Harness Attach Fittings - Serials 22-0821 & subs, 22T-0001 & subs w/o 2+1 Rear Seat (2 of 3)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs w/o 2+1 Rear Seat

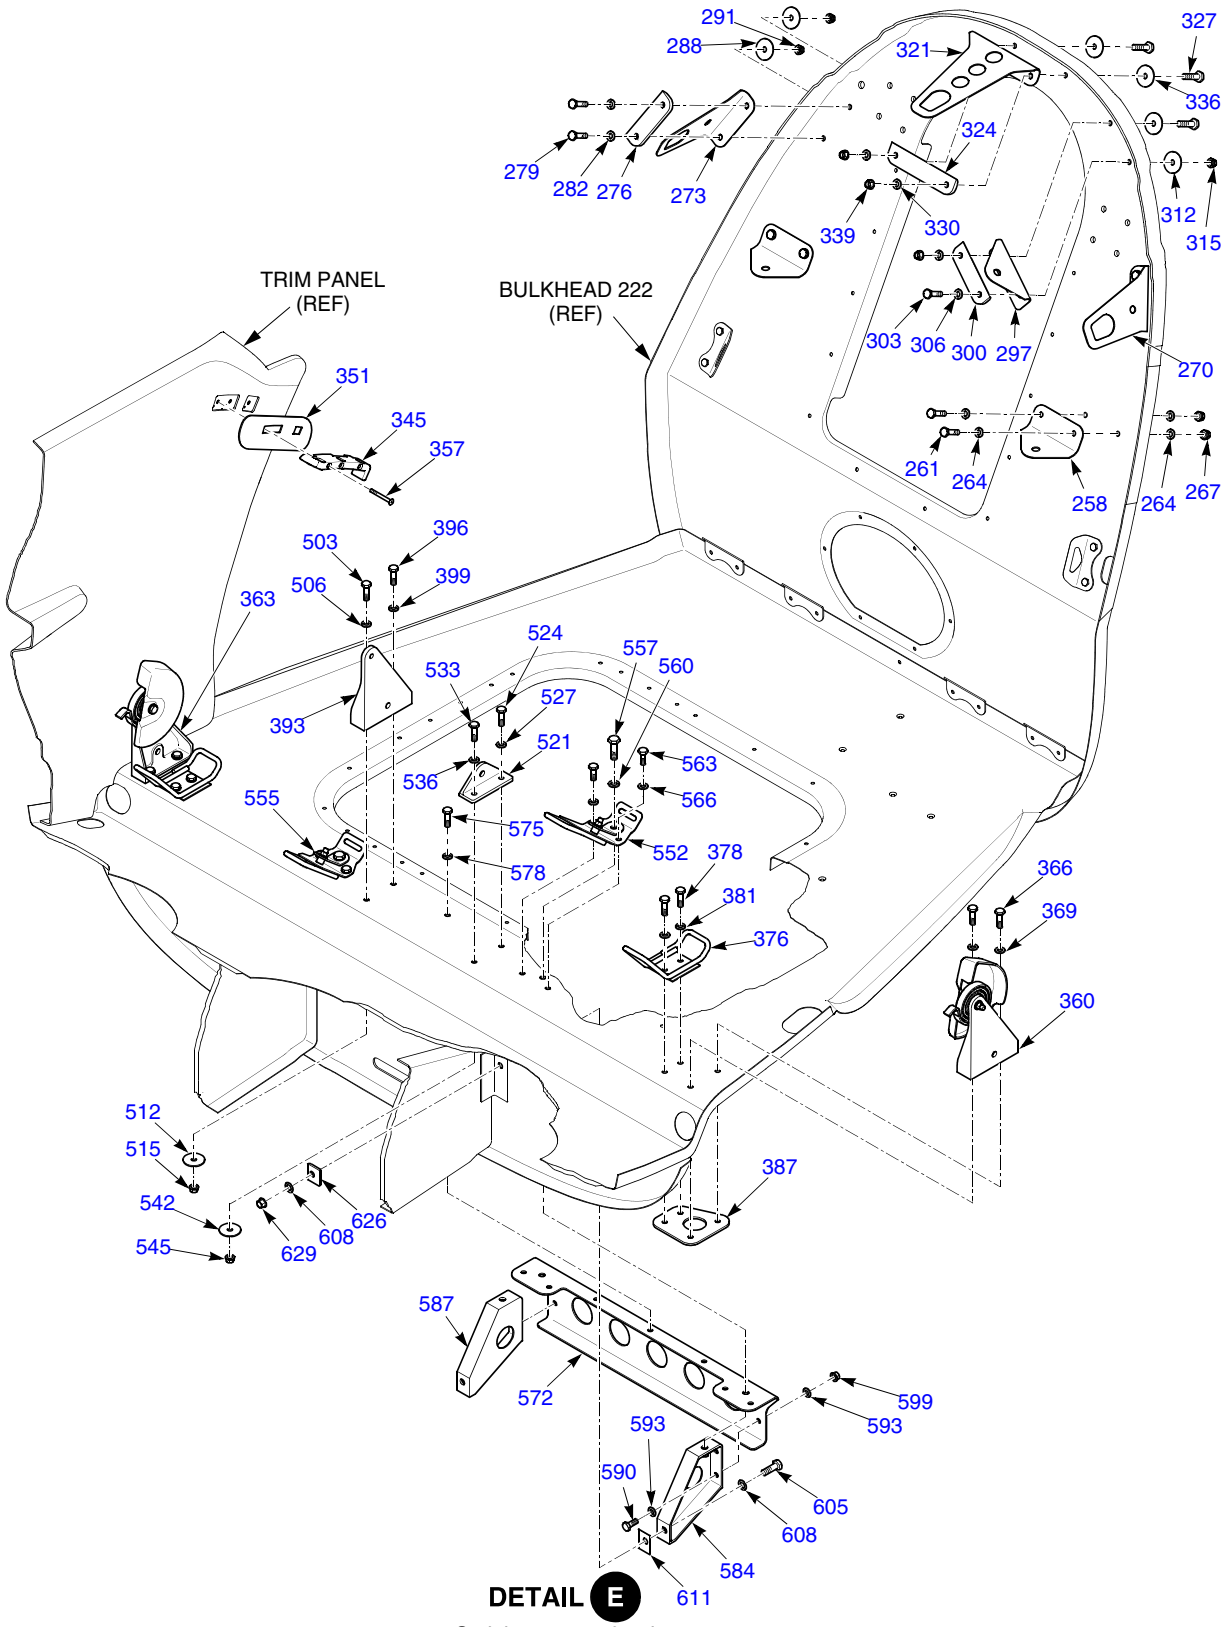

Serials 22-3828 & subs,
22T-0268 & subs w/ 2+1 Rear Seat.

SR22_PC53_2048

Figure-06

Seat Belt and Harness Attach Fittings - Serials 22-3828 & subs, 22T-0268 & subs w/ 2+1 Rear Seat (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 06	**		SEAT BELT AND SHOULDER HARNESS ATTACH FITTINGS			NP
	3	10437-001			·FITTING, SHOULDER HARNESS	0002	0820	1
	6	10437-002			·FITTING, SHOULDER HARNESS	0002	0820	1
	9	10438-001		A	·DOUBLER	0002	0820	2
	10	10439-001			·RISER, ATTACH LOWER	0002	0820	2
	12	MS21042-4		A	·NUT	0002	0820	4
					ALTERNATE FOR P/N MS21044N4			
-	15	MS21044N4		A	·NUT	0002	0820	4
					ALTERNATE FOR P/N MS21042-4			
	18	NAS1149D0463J		A	·WASHER	0002	0820	8
					ALTERNATE FOR P/N NAS1149F0463P			
-	21	NAS1149F0463P		A	·WASHER	0002	0820	8
					ALTERNATE FOR P/N NAS1149D0463J			
	24	AN4-10A		A	·BOLT	0002	0820	4
	27	MS21042-4		A	·NUT	0002	0820	8
					ALTERNATE FOR P/N MS21044N4			
-	30	MS21044N4		A	·NUT	0002	0820	8
					ALTERNATE FOR P/N MS21042-4			
	33	NAS1149D0463J		A	·WASHER	0002	0820	8
					ALTERNATE FOR P/N NAS1149F0463P			
-	36	NAS1149F0463P		A	·WASHER	0002	0820	8
					ALTERNATE FOR P/N NAS1149D0463J			
	39	MS24694-S101		A	·SCREW	0002	0820	8
	42	10547-001			·FITTING, LAP BELT	0002	0820	2
	45	12629-001		A	·BACKING PLATE	0002	0820	2
	48	MS21042-4		A	·NUT	0002	0820	4
					ALTERNATE FOR P/N MS21044N4			
-	51	MS21044N4		A	·NUT	0002	0820	4
					ALTERNATE FOR P/N MS21042-4			
	54	NAS1149D0432J		A	·WASHER	0002	0820	8
					ALTERNATE FOR P/N NAS1149F0432P			
-	57	NAS1149F0432P		A	·WASHER	0002	0820	8
					ALTERNATE FOR P/N NAS1149D0432J			
	60	AN4-6A		A	·BOLT	0002	0820	4
	63	10547-001			·FITTING, LAP BELT	0002	0820	2
	66	MS21042-4		A	·NUT	0002	0820	4
					ALTERNATE FOR P/N MS21044N4			
-	69	MS21044N4		A	·NUT	0002	0820	4
					ALTERNATE FOR P/N MS21042-4			
	72	NAS1149D0432J		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149F0432P			
-	75	NAS1149F0432P		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149D0432J			
	78	12626-002		A	·RADIUS FILLER	0002	0820	2
	81	AN4-6A		A	·BOLT	0002	0820	2
	84	NAS1149D0463J		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149F0463P			
-	87	NAS1149F0463P		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149D0463J			
	90	12614-002			·TENSION STRAP	0002	0820	2
	93	MS21042-4		A	·NUT	0002	0820	2
					ALTERNATE FOR P/N MS21044N4			
-	96	MS21044N4		A	·NUT	0002	0820	2
					ALTERNATE FOR P/N MS21042-4			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	99	AN970-4		A	·WASHER	0002	0820	2
	102	12626-002		A	·RADIUS FILLER	0002	0820	2
	105	NAS1149D0463J		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149F0463P			
-	108	NAS1149F0463P		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149D0463J			
	111	AN4-6A		A	·BOLT	0002	0820	2
	114	MS21042-4		A	·NUT	0002	0820	2
					ALTERNATE FOR P/N MS21044N4			
-	117	MS21044N4		A	·NUT	0002	0820	2
					ALTERNATE FOR P/N MS21042-4			
	120	AN970-4		A	·WASHER	0002	0820	2
	123	NAS1149D0432J		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149F0432P			
-	126	NAS1149F0432P		A	·WASHER	0002	0820	2
					ALTERNATE FOR P/N NAS1149D0432J			
	129	AN4-5A		A	·BOLT	0002	0820	2
-	130	NO PRT NUMBER			SEAT BELT AND SHOULDER HARNESS ATTACH FITTINGS W/O 2+1 REAR SEAT	0821 / 0001	/	NP
	132	20134-001			·FORWARD BRACKET	0821	1093	1
					FOR SPARES USE P/N 20134-002			
	133	20134-002			·FORWARD BRACKET	1094 / 0001	/	1
	135	20133-001			·FORWARD BRACKET	0821	1093	1
					FOR SPARES USE P/N 20133-002			
	136	20133-002			·FORWARD BRACKET	1094 / 0001	/	1
	138	10438-001		A	·DOUBLER	0821 / 0001	/	2
	141	MS21042L4		A	·NUT	0821 / 0001	/	4
					ALTERNATE FOR P/N MS21044N4			
-	144	MS21044N4		A	·NUT	0821 / 0001	/	4
					ALTERNATE FOR P/N MS21042L4			
	147	AN970-4		A	·WASHER	0821 / 0001	/	4
	150	AN4-7A		A	·BOLT	0821 / 0001	/	4
	153	NAS1149D0432J		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0432P			
-	156	NAS1149F0432P		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0432J			
	159	10547-001			·FITTING, LAP BELT	0821 / 0001	/	2
	162	12629-001		A	·BACKING PLATE	0821 / 0001	/	2
	165	MS21042L4		A	·NUT	0821 / 0001	/	4
					ALTERNATE FOR P/N MS21044N4			
-	168	MS21044N4		A	·NUT	0821 / 0001	/	4
					ALTERNATE FOR P/N MS21042L4			
	171	NAS1149D0432J		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0432P			
-	174	NAS1149F0432P		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0432J			
	177	NAS1149D0432J		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149F0432P			
-	180	NAS1149F0432P		A	·WASHER	0821 / 0001	/	4
					ALTERNATE FOR P/N NAS1149D0432J			
	183	AN4-6A		A	·BOLT	0821 / 0001	/	4
	186	10547-001			·FITTING, LAP BELT	0821 / 0001	/	2
	189	MS21042L4		A	·NUT	0821 / 0001	/	2
					ALTERNATE FOR P/N MS21044N4			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	192	MS21044N4		A	·NUT	0821 / 0001	/	2
					ALTERNATE FOR P/N MS21042L4			
	195	AN970-4		A	·WASHER	0821 / 0001	/	2
	198	12626-002		A	·RADIUS FILLER	0821 / 0001	/	2
	201	AN4-6A		A	·BOLT	0821 / 0001	/	2
	204	NAS1149D0432J		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0432P			
-	207	NAS1149F0432P		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0432J			
	210	12614-002			·TENSION STRAP	0821 / 0001	/	2
	213	MS21042L4		A	·NUT	0821 / 0001	/	2
					ALTERNATE FOR P/N MS21044N4			
-	216	MS21044N4		A	·NUT	0821 / 0001	/	2
					ALTERNATE FOR P/N MS21042L4			
	219	AN970-4		A	·WASHER	0821 / 0001	/	2
	222	12906-001		A	·SHIM	0821 / 0001	/	1
	225	AN4-7A		A	·BOLT	0821 / 0001	/	2
	228	NAS1149D0432J		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0432P			
-	231	NAS1149F0432P		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0432J			
	234	12626-002		A	·RADIUS FILLER	0821 / 0001	/	2
	237	MS21042L4		A	·NUT	0821 / 0001	/	2
					ALTERNATE FOR P/N MS21044N4			
-	240	MS21044N4		A	·NUT	0821 / 0001	/	2
					ALTERNATE FOR P/N MS21042L4			
	243	AN970-4		A	·WASHER	0821 / 0001	/	2
	246	AN4-5A		A	·BOLT	0821 / 0001	/	2
	249	NAS1149D0432J		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149F0432P			
-	252	NAS1149F0432P		A	·WASHER	0821 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0432J			
-	255	NO PRT NUMBER			SEAT BELT AND SHOULDER HARNESS ATTACH FITTINGS W/ 2+1 REAR SEAT	3828 / 0268	/	NP
	258	23506-001			·BRACKET, CARGO NET	3828 / 0268	/	2
	261	AN4-10A		A	·BOLT	3828 / 0268	/	4
	264	NAS1149D0463K		A	·WASHER	3828 / 0268	/	8
	267	MS21044N4		A	·NUT	3828 / 0268	/	4
	270	29385-001			·BRACKET, INERTIA REEL, LH	3828 / 0268	/	1
	273	29385-002			·BRACKET, INERTIA REEL, RH	3828 / 0268	/	1
	276	10438-002			·DOUBLER	3828 / 0268	/	2
	279	AN4-10A		A	·BOLT	3828 / 0268	/	4
	282	NAS1149D0463K		A	·WASHER	3828 / 0268	/	4
					ALTERNATE FOR P/N NAS1149F0463P			
-	285	NAS1149F0463P		A	·WASHER	3828 / 0268	/	4
					ALTERNATE FOR P/N NAS1149D0463K			
	288	AN970-4		A	·WASHER	3828 / 0268	/	4
	291	MS21042L4		A	·NUT	3828 / 0268	/	4
					ALTERNATE FOR P/N MS21044N4			
-	294	MS21044N4		A	·NUT	3828 / 0268	/	4
					ALTERNATE FOR P/N MS21042L4			
	297	29385-003			·BRACKET, INERTIA REEL, CENTER	3828 / 0268	/	1
	300	10438-002			·DOUBLER	3828 / 0268	/	1
	303	AN4-10A		A	·BOLT	3828 / 0268	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	306	NAS1149D0463K		A	·WASHER	3828 / 0268	/	2
					ALTERNATE FOR P/N NAS1149F0463P			
-	309	NAS1149F0463P		A	·WASHER	3828 / 0268	/	2
					ALTERNATE FOR P/N NAS1149D0463K			
	312	AN970-4		A	·WASHER	3828 / 0268	/	2
	315	MS21042L4		A	·NUT	3828 / 0268	/	2
					ALTERNATE FOR P/N MS21044N4			
-	318	MS21044N4		A	·NUT	3828 / 0268	/	2
					ALTERNATE FOR P/N MS21042L4			
	321	27737-001			·BRACKET, CHILD ATTACH, CENTER	3828 / 0268	/	1
	324	29412-001			·DOUBLER	3828 / 0268	/	1
	327	AN4-10A		A	·BOLT	3828 / 0268	/	2
	330	NAS1149D0463K		A	·WASHER	3828 / 0268	/	2
					ALTERNATE FOR P/N NAS1149F0463P			
-	333	NAS1149F0463P		A	·WASHER	3828 / 0268	/	2
					ALTERNATE FOR P/N NAS1149D0463K			
	336	AN970-4		A	·WASHER	3828 / 0268	/	2
	339	MS21042L4		A	·NUT	3828 / 0268	/	2
					ALTERNATE FOR P/N MS21044N4			
-	342	MS21044N4		A	·NUT	3828 / 0268	/	2
					ALTERNATE FOR P/N MS21042L4			
	345	29093-004			·SEAT RECLINE LOCK, RH	3828 / 0268	/	1
-	348	29093-003			·SEAT RECLINE LOCK, LH	3828 / 0268	/	1
	351	26740-002			·PLATE, COVER, RECLINE LOCK, RH	3828 / 0268	/	1
-	354	26740-003			·PLATE, COVER, RECLINE LOCK, LH	3828 / 0268	/	1
	357	MS24694-C21		A	·SCREW	3828 / 0268	/	6
	360	29080-004			·BELT ATTACH, BACK HINGE, LH	3828 / 0268	/	1
	363	29080-005			·BELT ATTACH, BACK HINGE, RH	3828 / 0268	/	1
	366	AN4-7A		A	·BOLT	3828 / 0268	/	4
	369	NAS1149D0432K		A	·WASHER	3828 / 0268	/	4
					ALTERNATE FOR P/N NAS1149F0432P			
-	372	NAS1149F0432P		A	·WASHER	3828 / 0268	/	4
					ALTERNATE FOR P/N NAS1149D0432K			
-	375	29293-001			·WELDMENT, BAGGAGE/CHILD SEAT ATTACH, OUTBD	3828 / 0268	3982 / 0581	2
					FOR SPARES USE P/N 29293-004			
	376	29293-004			·WELDMENT, BAGGAGE/CHILD SEAT ATTACH, OUTBD	3983 / 0582	/	2
	378	AN4-7A		A	·BOLT	3828 / 0268	/	4
	381	NAS1149D0463K		A	·WASHER	3828 / 0268	/	4
					ALTERNATE FOR P/N NAS1149F0463P			
-	384	NAS1149F0463P		A	·WASHER	3828 / 0268	/	4
					ALTERNATE FOR P/N NAS1149D0463K			
	387	29258-001			·PLATE, SEAT ATTACH, L/H	3828 / 0268	/	1
-	390	29258-002			·PLATE, SEAT ATTACH, R/H	3828 / 0268	/	1
	393	29080-006			·BELT ATTACH, BACK HINGE, CENTER	3828 / 0268	/	1
	396	AN4-7A		A	·BOLT	3828 / 0268	/	1
	399	NAS1149D0463K		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149F0463P			
-	500	NAS1149F0463P		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149D0463K			
	503	AN4-7A		A	·BOLT	3828 / 0268	/	1
	506	NAS1149D0463K		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149F0463P			
-	509	NAS1149F0463P		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149D0463K			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	512	AN970-4		A	·WASHER	3828 / 0268	/	1
	515	MS21042L4		A	·NUT	3828 / 0268	/	1
					ALTERNATE FOR P/N MS21044N4			
-	518	MS21044N4		A	·NUT	3828 / 0268	/	1
					ALTERNATE FOR P/N MS21042L4			
	521	29296-001			·BRACKET, SEAT BELT, CENTER	3828 / 0268	/	1
	524	AN4-7A		A	·BOLT	3828 / 0268	/	1
	527	NAS1149D0432K		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149F0432P			
-	530	NAS1149F0432P		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149D0432K			
	533	AN4-7A		A	·BOLT	3828 / 0268	/	1
	536	NAS1149D0432K		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149F0432P			
-	539	NAS1149F0432P		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149D0432K			
	542	AN970-4		A	·WASHER	3828 / 0268	/	1
	545	MS21042L4		A	·NUT	3828 / 0268	/	1
					ALTERNATE FOR P/N MS21044N4			
-	548	MS21044N4		A	·NUT	3828 / 0268	/	1
					ALTERNATE FOR P/N MS21042L4			
-	551	29293-002			·WELDMENT, BAGGAGE/CHILD SEAT ATTACH, INBD LH	3828 / 0268	3990 / 0595	1
					FOR SPARES USE P/N 29293-005			
	552	29293-005			·WELDMENT, BAGGAGE/CHILD SEAT ATTACH, INBD LH	3991 / 0596	/	1
-	554	29293-003			·WELDMENT, BAGGAGE/CHILD SEAT ATTACH, INBD RH	3828 / 0268	3993 / 0591	1
					FOR SPARES USE P/N 29293-006			
	555	29293-006			·WELDMENT, BAGGAGE/CHILD SEAT ATTACH, INBD RH	3994 / 0592	/	1
	557	AN5-10A		A	·BOLT	3828 / 0268	/	2
	560	NAS1149D0532K		A	·WASHER	3828 / 0268	/	2
	563	AN4-6A		A	·BOLT	3828 / 0268	/	4
	566	NAS1149D0432K		A	·WASHER	3828 / 0268	/	4
					ALTERNATE FOR P/N NAS1149F0432P			
-	569	NAS1149F0432P		A	·WASHER	3828 / 0268	/	4
					ALTERNATE FOR P/N NAS1149D0432K			
	572	29246-001			·SUPPORT CHANNEL, AFT SEAT	3828 / 0268	/	1
	575	AN4-6A		A	·BOLT	3828 / 0268	/	1
	578	NAS1149D0432K		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149F0432P			
-	581	NAS1149F0432P		A	·WASHER	3828 / 0268	/	1
					ALTERNATE FOR P/N NAS1149D0432K			
	584	29245-001			·GUSSET, BAGGAGE FLOOR L/H	3828 / 0268	/	1
	587	29245-002			·GUSSET, BAGGAGE FLOOR R/H	3828 / 0268	/	1
	590	AN4-5A		A	·BOLT	3828 / 0268	/	4
	593	NAS1149D0432K		A	·WASHER	3828 / 0268	/	8
					ALTERNATE FOR P/N NAS1149F0432P			
-	596	NAS1149F0432P		A	·WASHER	3828 / 0268	/	8
					ALTERNATE FOR P/N NAS1149D0432K			
	599	MS21042L4		A	·NUT	3828 / 0268	/	4
					ALTERNATE FOR P/N MS21044N4			
-	602	MS21044N4		A	·NUT	3828 / 0268	/	4
					ALTERNATE FOR P/N MS21042L4			
	605	AN5-7A		A	·BOLT	3828 / 0268	/	2
	608	NAS1149D0532K		A	·WASHER	3828 / 0268	/	4
	611	29384-020	&	A	·SHIM	3828 / 0268	/	AR

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	614	29384-032	&	A	·SHIM	3828 / 0268	/	AR
-	617	29384-040	&	A	·SHIM	3828 / 0268	/	AR
-	620	29384-050	&	A	·SHIM	3828 / 0268	/	AR
-	623	29384-063	&	A	·SHIM	3828 / 0268	/	AR
	626	29419-001			·DOUBLER	3828 / 0268	/	2
	629	MS21042-5		A	·NUT	3828 / 0268	/	2
					ALTERNATE FOR P/N MS21044N5			
-	632	MS21044N5		A	·NUT	3828 / 0268	/	2
					ALTERNATE FOR P/N MS21042-5			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0251; REFER TO 22T-0268 W/ 2+1 REAR SEAT FOR PART IDENTIFICATION.			
			&		MULTIPLE SHIMS MAY BE USED.			

Intentionally Left Blank

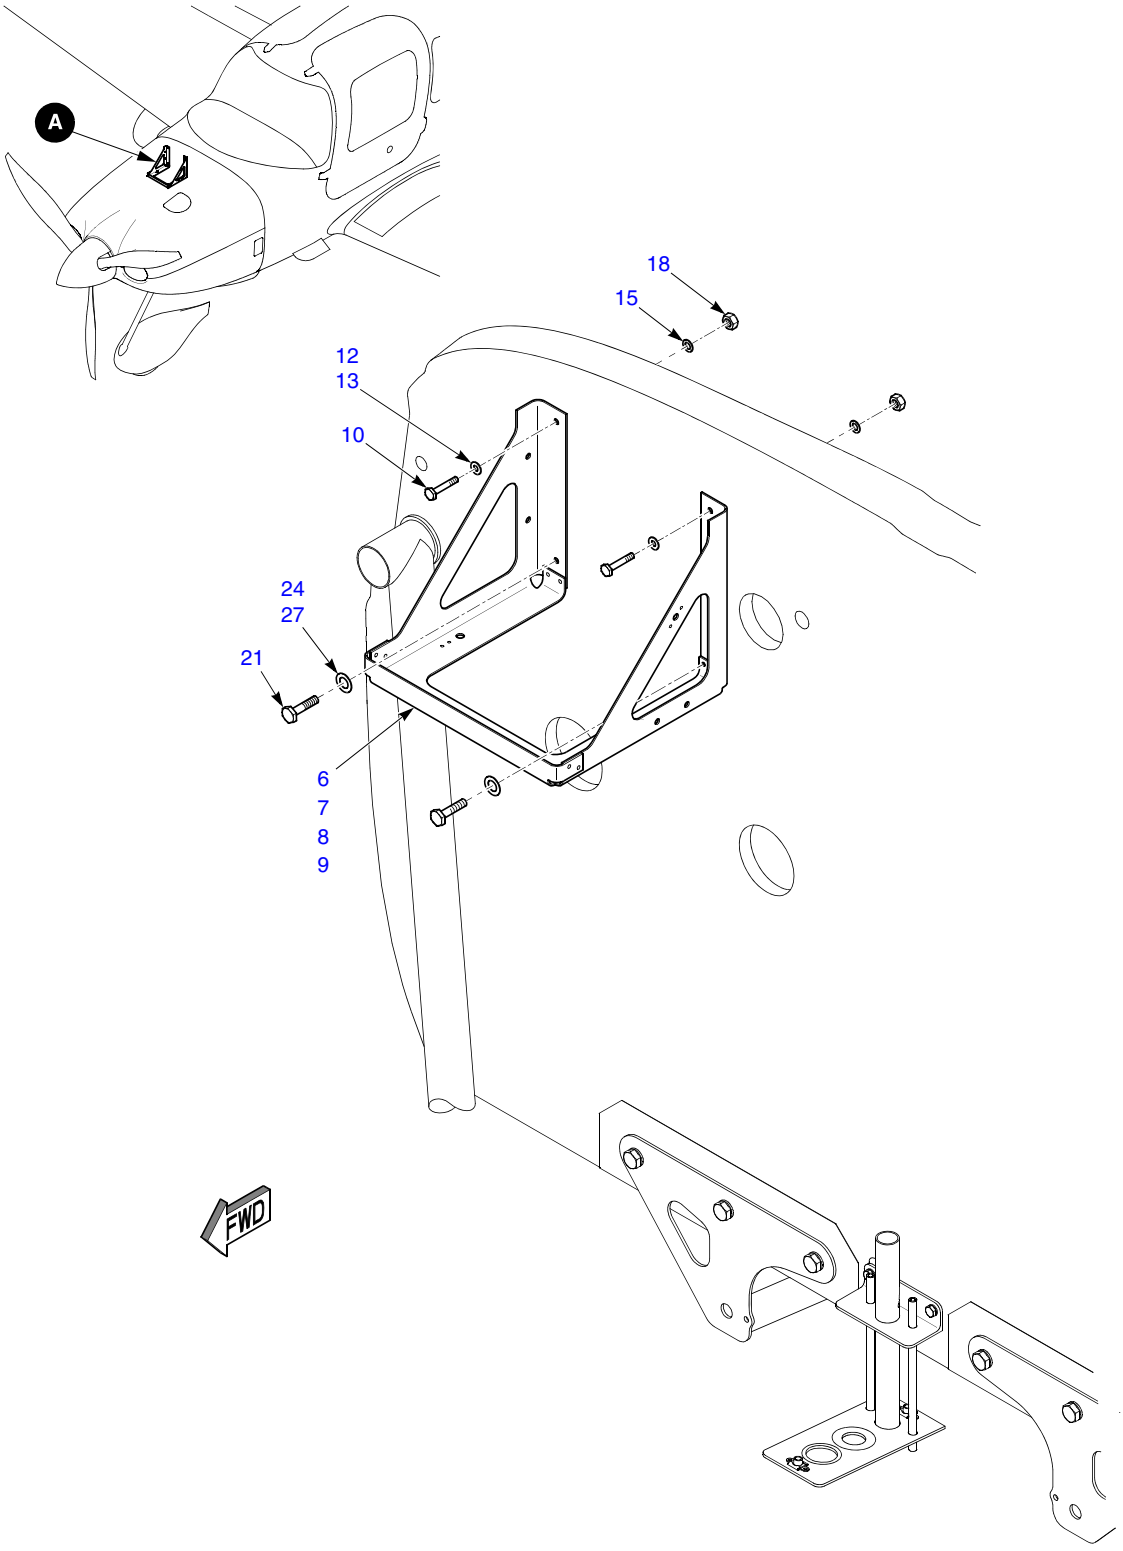

Figure-07
Battery 1 Bracket

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 07	**		BATTERY 1 BRACKET INSTALLATION	0002 / 0001	/	NP
-	3	10894-003			·BRACKET, BATTERY	0002	0497	1
					FOR SPARES USE P/N 10894-004			
	6	10894-004			·BRACKET, BATTERY	0498	3025	1
	7	16775-001			·BRACKET, BATTERY	3026	3614	1
	8	16775-002			·BRACKET, BATTERY	3615 / 0001	3700 / 0026	1
	9	28974-001			·BRACKET, BATTERY	3701 / 0027	/	1
	10	AN3-12A		A	·BOLT	0002 / 0001	/	2
	12	NAS1149F0363P		A	·WASHER	0002	3025	2
	13	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	15	AN970-3		A	·WASHER	0002 / 0001	/	2
	18	MS21044N3		A	·NUT	0002 / 0001	/	2
	21	AN3-4A		A	·BOLT	0002 / 0001	/	2
	24	NAS1149F0363P		A	·WASHER	0002	3025	2
	27	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
			**		SYMBOL NOTES:			
					SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-3676 THRU 22-3678, 22-3681 THRU 22-3695; REFER TO 22-3701 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

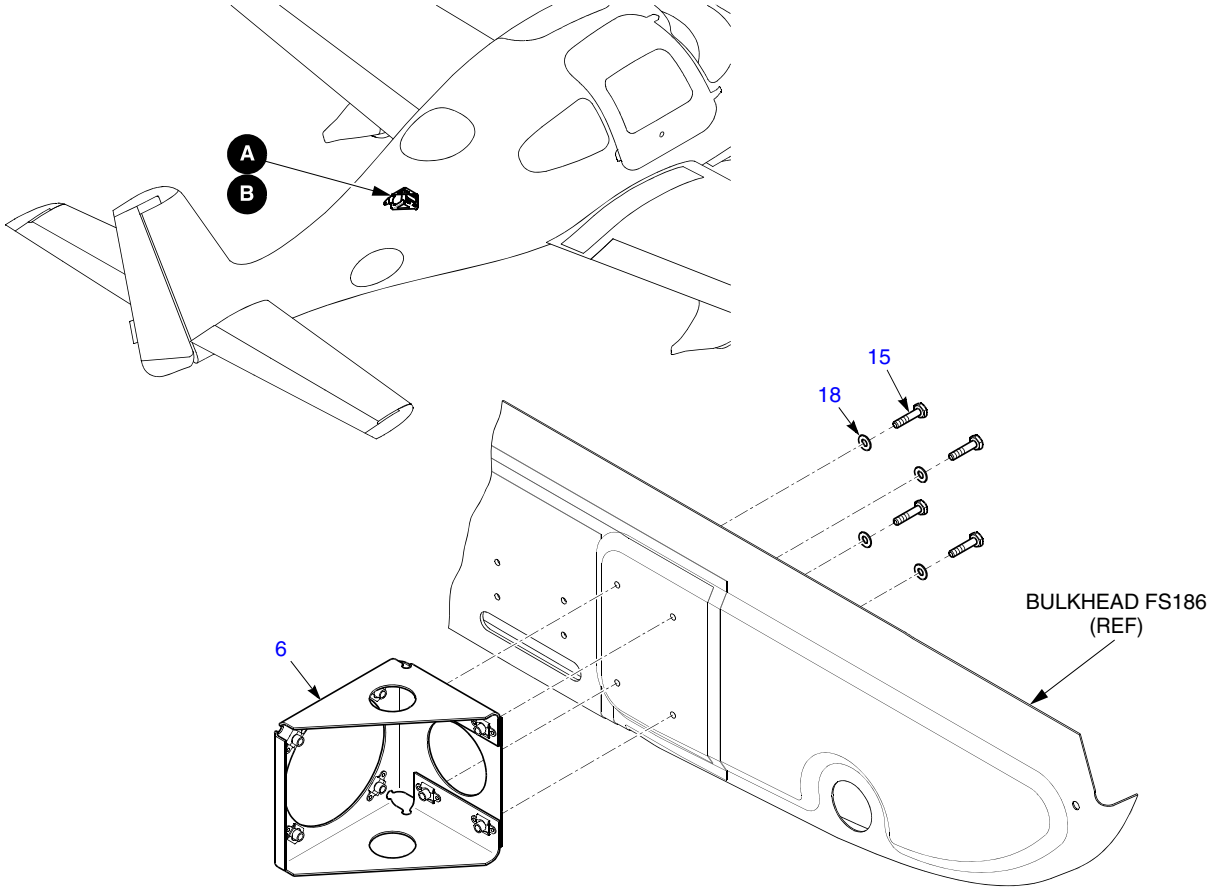

Serials 22-1368 & subs w/o Air Conditioning & w/ System 55.

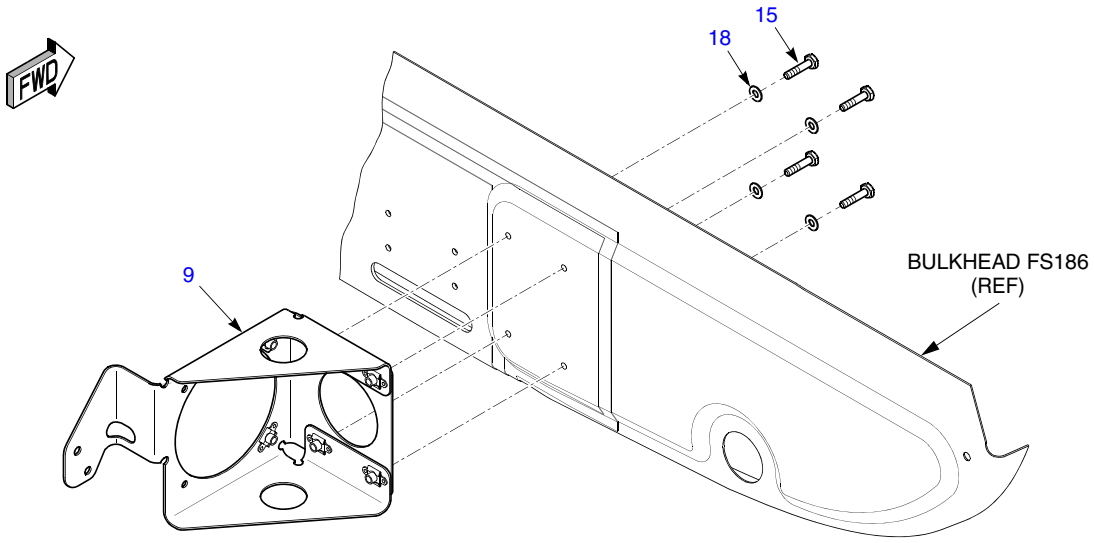

Serials 22-1863 & subs
w/ Air Conditioning & w/ System 55.

DETAIL A

SR22_PC53_1491C

Figure-08

Pitch Servo Bracket - Serials 22-1368 & subs w/ System 55 (1 of 2)

EFFECTIVITY:
Serials 22-1368 & subs w/ System 55

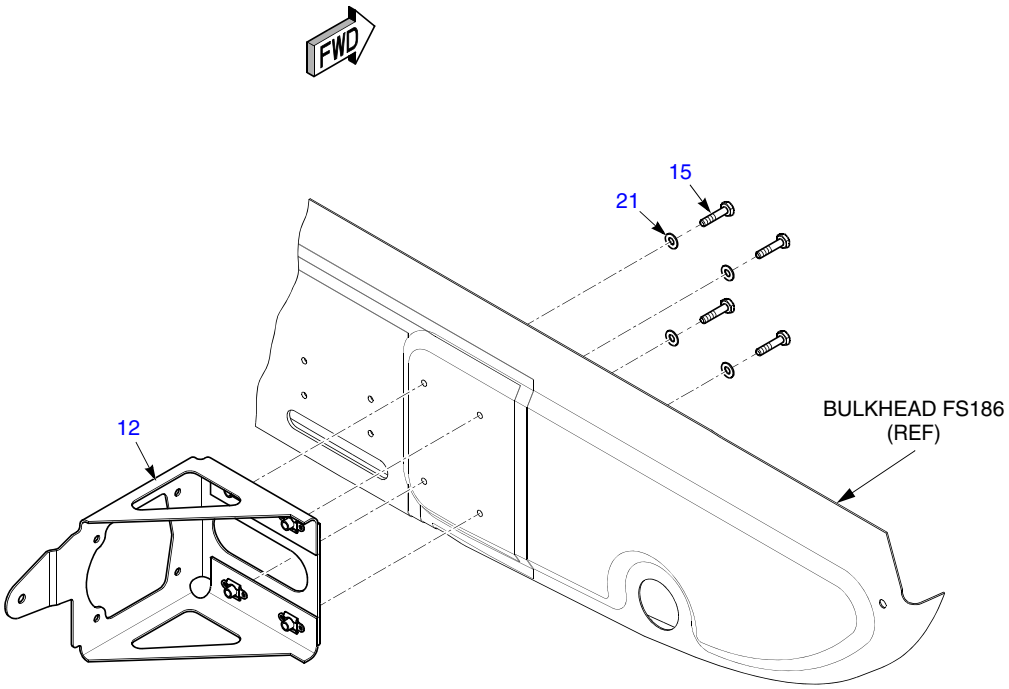

Serials 22-3026 & subs, 22T-0001 & subs w/ GFC 700.

DETAIL B

SR22_PC53_1720A

Figure-08

Pitch Servo Bracket - Serials 22-3026 & subs, 22T-0001 & subs w/ GFC 700 (2 of 2)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 08	**		PITCH SERVO BRACKET	0002 / 0001	/	NP
-	3	14334-001			·BRACKET	0002	1367	1
	6	16027-002			·BRACKET, W/O AC, W/ SYSTEM 55	1368		1
	9	16027-003			·BRACKET, W/ AC, W/ SYSTEM 55	1863		1
	12	19308-001			·BRACKET, W/ GFC 700	3026 / 0001	/	1
	15	AN3-7A		A	·BOLT	1368 / 0001	/	4
	18	NAS1149D0332J		A	·WASHER, W/ SYSTEM 55	1368		4
	21	NAS1149F0332P		A	·WASHER, W/ GFC 700	3026 / 0001	/	4
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1821, 22-1840, REFER TO 22-1863 FOR PRT IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			

Intentionally Left Blank

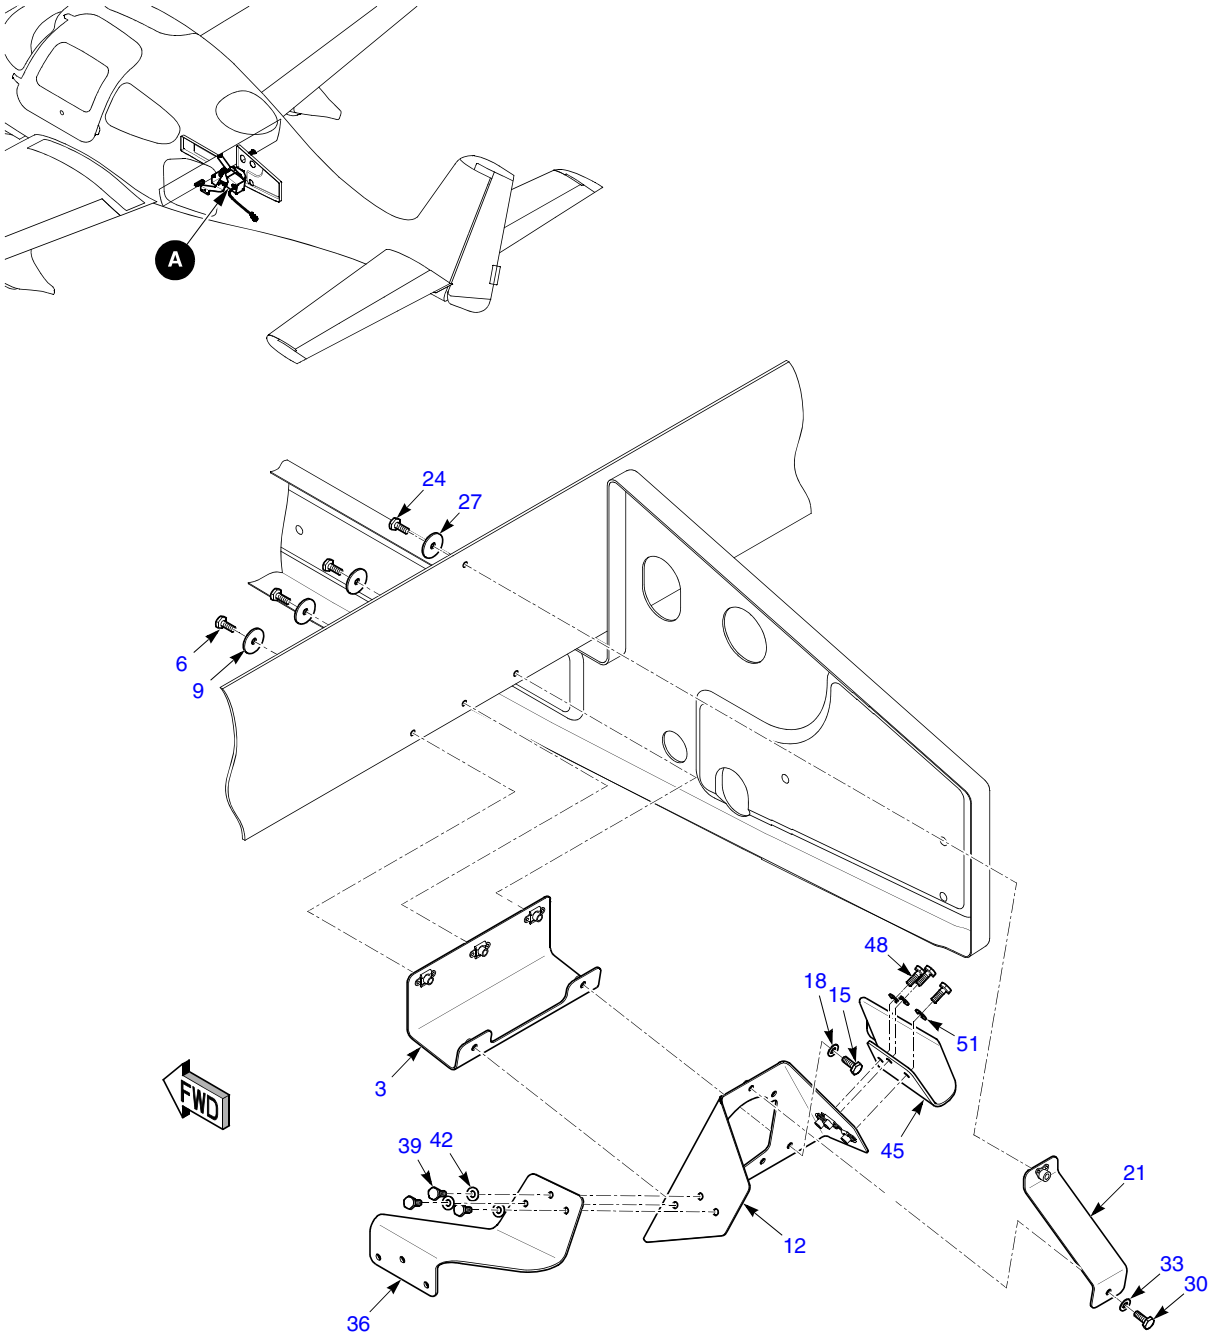

DETAIL A

Serials w/ Perspective Avionics.

SR22_PC53_1741

Figure-09
Roll Servo Bracket - Serials w/ Perspective

EFFECTIVITY:
Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 09	**		ROLL SERVO BRACKET INSTL W/ PERSPECTIVE	3026 / 0001	/	NP
	3	19336-001			·BRACKET, BOTTOM, ROLL SERVO	3026 / 0001	/	1
	6	AN3-4A		A	·BOLT	3026 / 0001	/	3
	9	AN970-3		A	·WASHER	3026 / 0001	/	3
	12	19338-001			·BRACKET, MAIN, ROLL SERVO	3026 / 0001	/	1
	15	AN3-4A		A	·BOLT	3026 / 0001	/	2
	18	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	21	19335-001			FORWARD STRAP, ROLL SERVO	3026 / 0001	/	1
	24	AN3-4A		A	·BOLT	3026 / 0001	/	1
	27	AN970-3		A	·WASHER	3026 / 0001	/	1
	30	AN3-4A		A	·BOLT	3026 / 0001	/	1
	33	NAS1149F0332P		A	·WASHER	3026 / 0001	/	1
	36	19337-001			BRACKET, SIDE PULLEY, LEFT	3026 / 0001	/	1
	39	AN3-4A		A	·BOLT	3026 / 0001	/	3
	42	NAS1149F0332P		A	·WASHER	3026 / 0001	/	3
	45	19337-002			BRACKET, SIDE PULLEY, RIGHT	3026 / 0001	/	1
	48	AN3-4A		A	·BOLT	3026 / 0001	/	3
	51	NAS1149F0332P		A	·WASHER	3026 / 0001	/	3
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

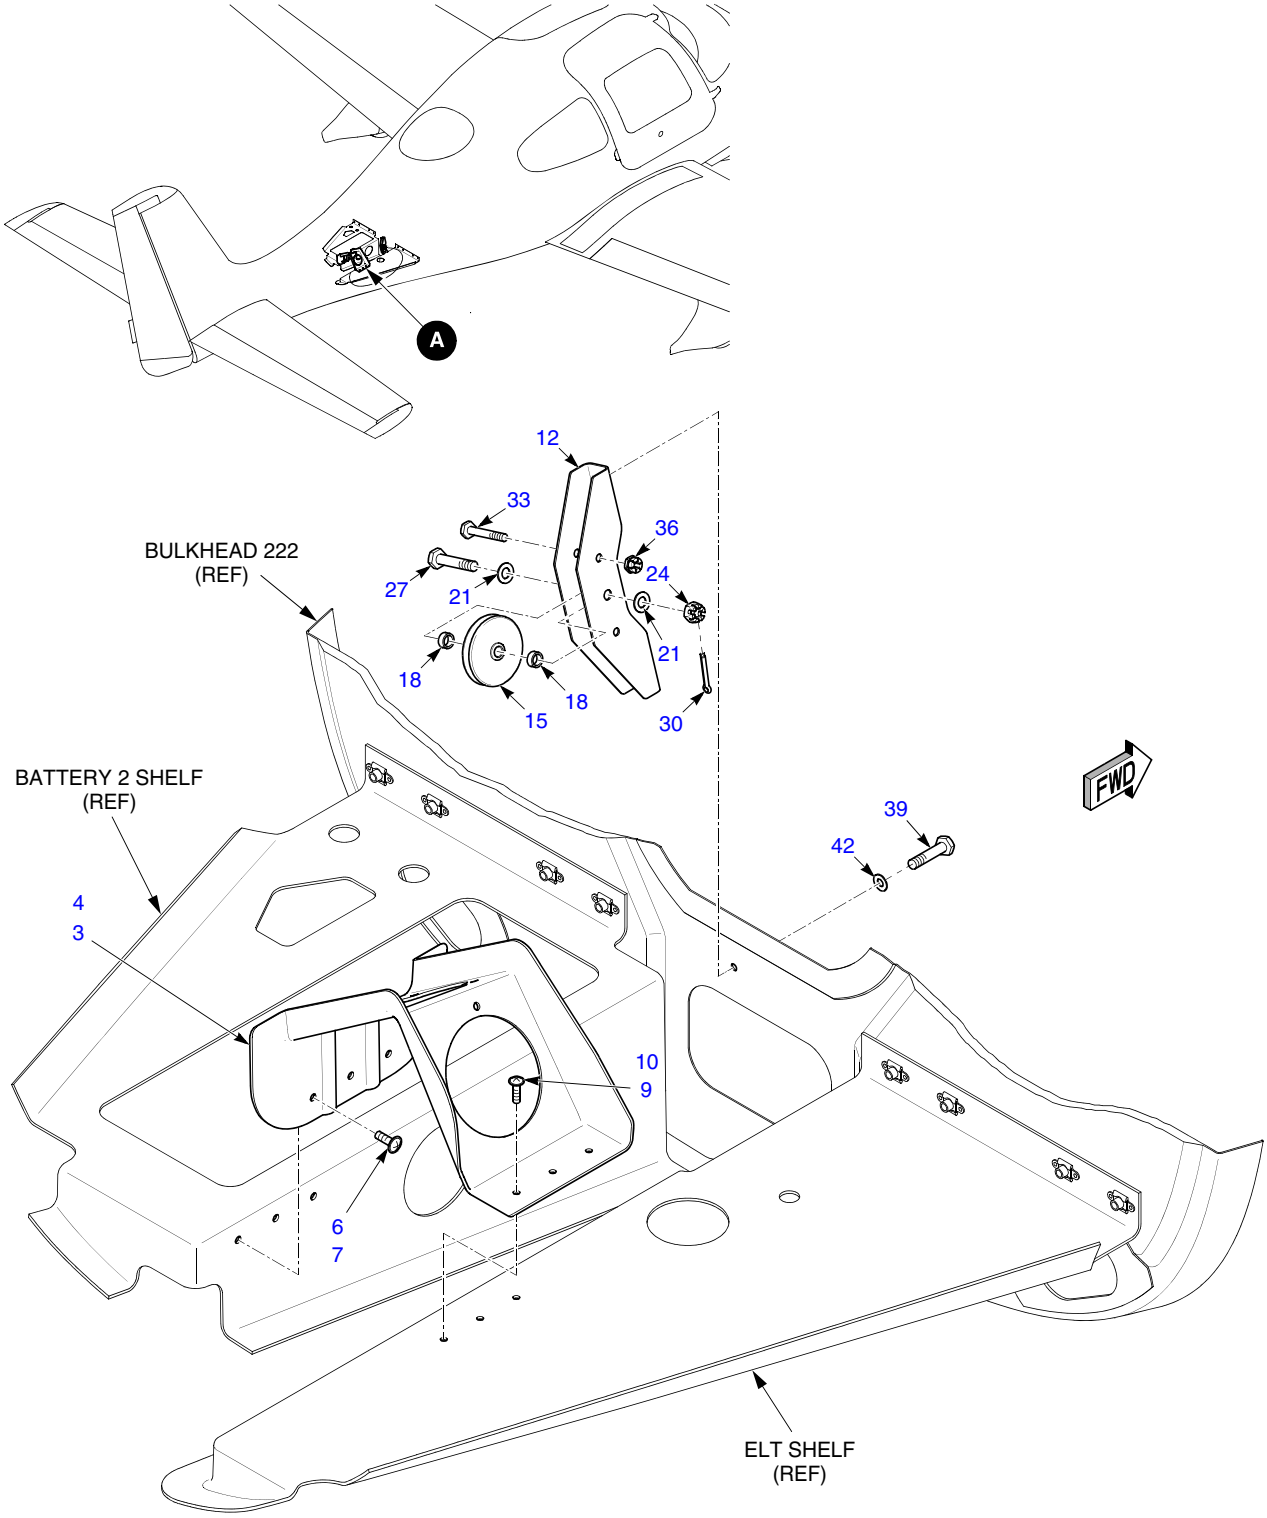

DETAIL A

Serials w/ Perspective Avionics.

SR22_PC53_1742A

Figure-10
Yaw Servo Bracket - Serials w/ Perspective

EFFECTIVITY:
Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 10	**		YAW SERVO BRACKET INSTL W/ PERSPECTIVE AVIONICS	3026 / 0001	/	NP
	3	19042-001			·BRACKET, YAW SERVO	3026 / 0001	3914 / 0441	1
	4	29589-001			·BRACKET, YAW SERVO	3915 / 0442	/	1
	6	AN525-10R9		A	·SCREW	3026 / 0001	3914 / 0441	3
	7	AN3-4A		A	·SCREW	3915 / 0442	/	3
	9	AN525-832R10		A	·SCREW	3026 / 0001	3914 / 0441	3
	10	MS24694-S5		A	·SCREW	3915 / 0442	/	2
	12	19052-001			·BRACKET, PULLEY BH222	3026 / 0001	/	1
	15	MS20219-2			·PULLEY	3026 / 0001	/	1
	18	NAS43DD4-10FC		A	·SPACER	3026 / 0001	/	2
	21	NAS1149F0432P		A	·WASHER	3026 / 0001	/	2
	24	MS17825-4		A	·NUT	3026 / 0001	/	1
	27	AN4-12		A	·BOLT	3026 / 0001	/	1
	30	MS24665-132		A	·COTTER PIN	3026 / 0001	/	1
	33	AN3-12A		A	·BOLT	3026 / 0001	/	2
	36	MS21044N3		A	·NUT	3026 / 0001	/	2
	39	AN3-4A		A	·BOLT	3026 / 0001	/	2
	42	NAS1149D0316K		A	·WASHER	3026	3308	4
				A	·WASHER	3309 / 0001	/	2
-	45	MS21044N3		A	·NUT	3026 / 0001	/	2
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

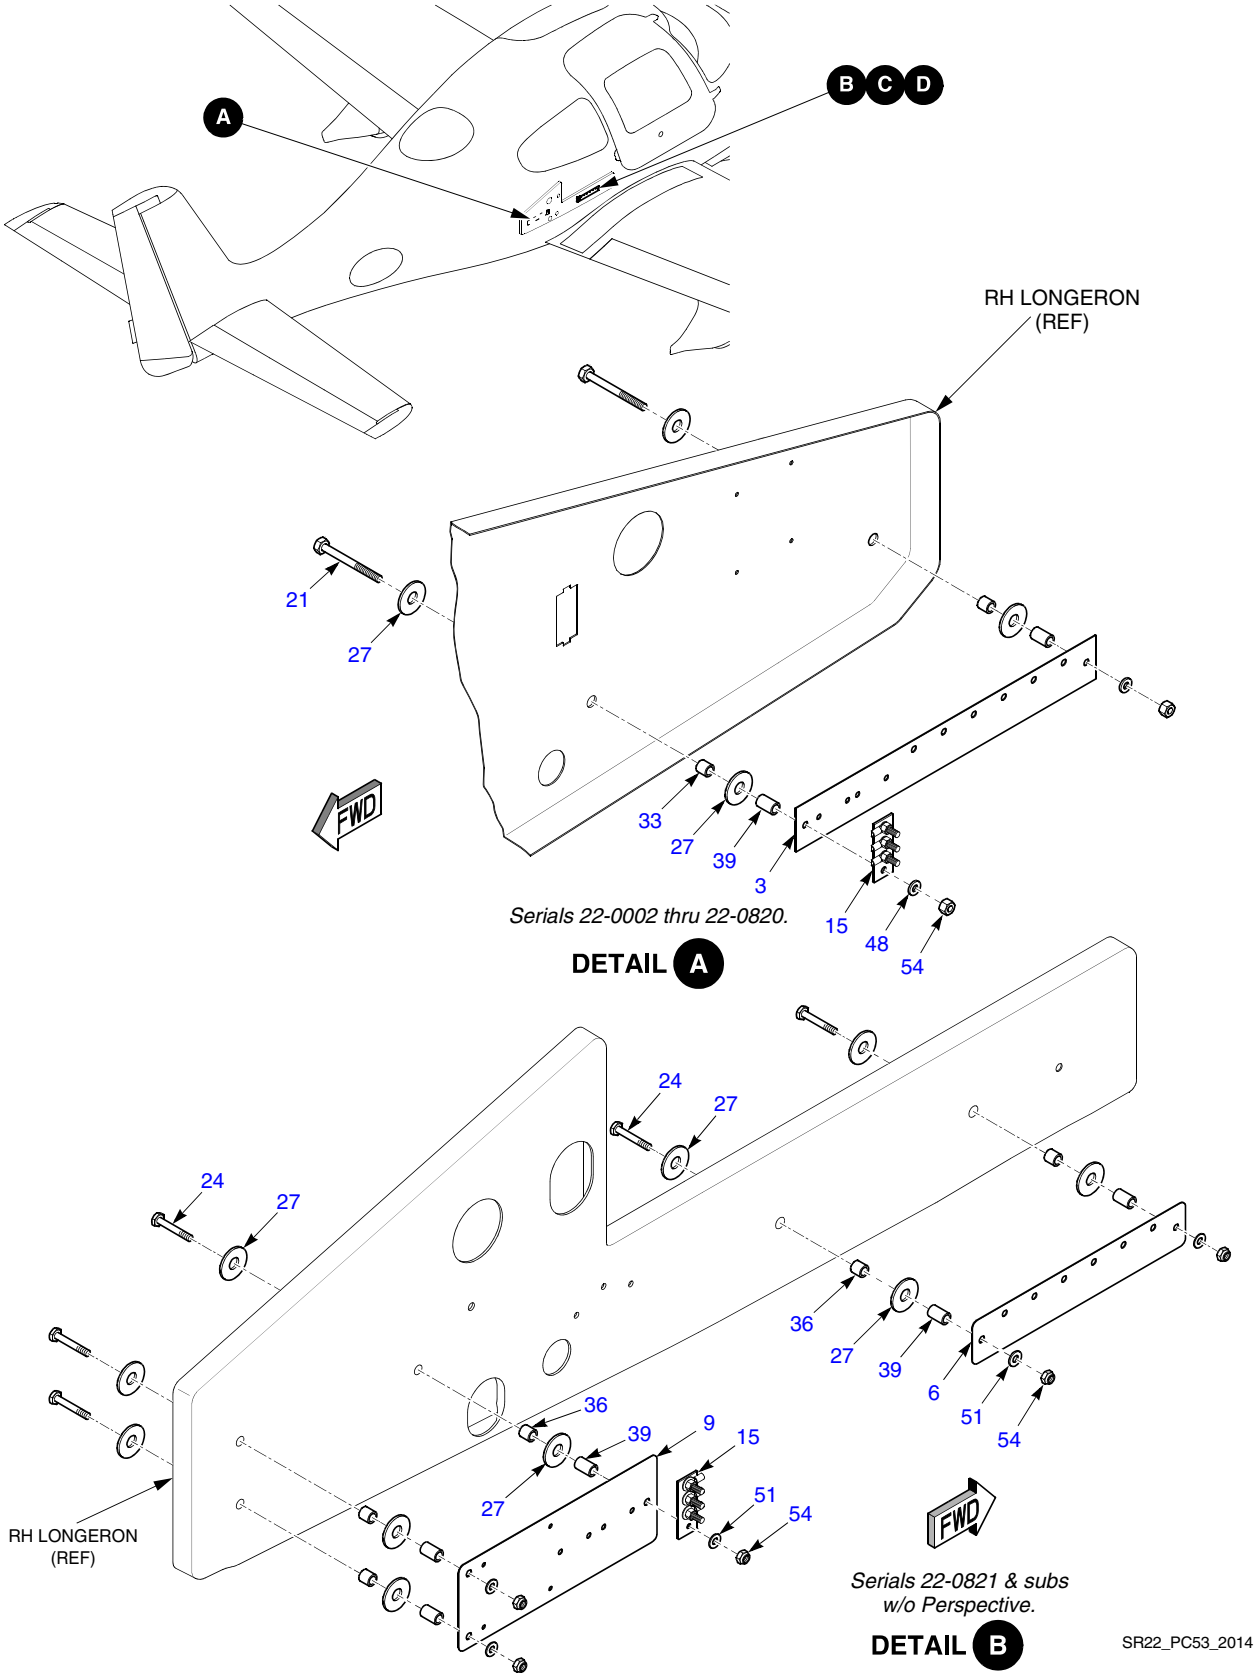

Figure-11

Relay Mounting Plate - Serials 0002 & subs w/o Perspective (1 of 3)

EFFECTIVITY:
Serials 0002 & subs w/o Perspective

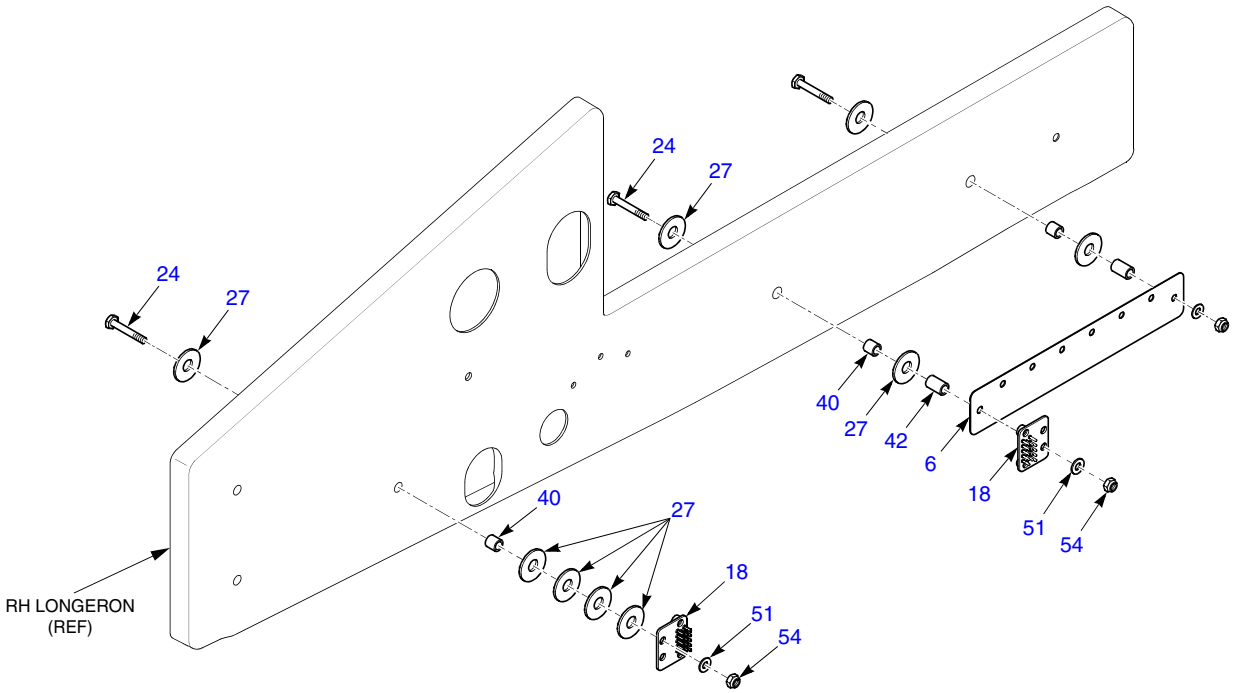

Serials 22-3026 thru 22-3402 w/ Perspective.

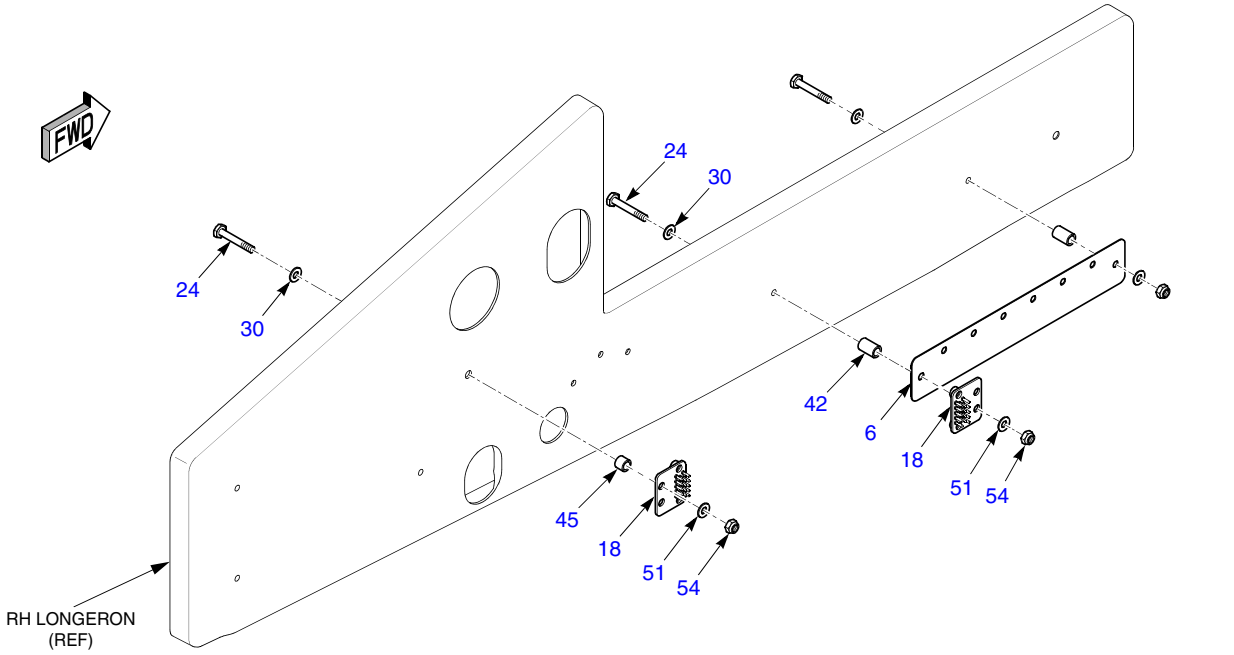

Serials 22-3403 & subs,
22T-0001 & subs w/ Perspective.

DETAIL C

SR22_PC53_2008

Figure-11

Relay Mounting Plate - Serials 3026 & subs w/ Perspective (2 of 3)

EFFECTIVITY:
Serials 3026 & subs w/ Perspective

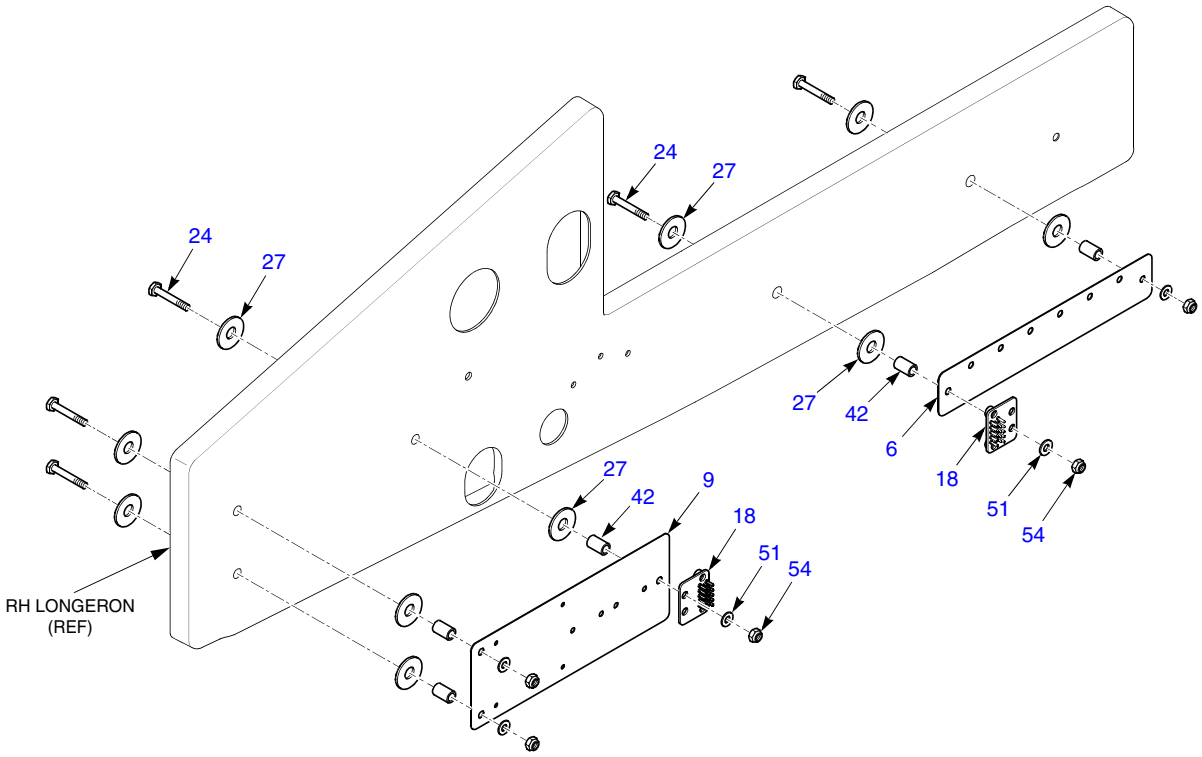

Serials 22-3446 thru 22-3740,
22T-0001 thru 22T-0100
w/ System 55X and Perspective.

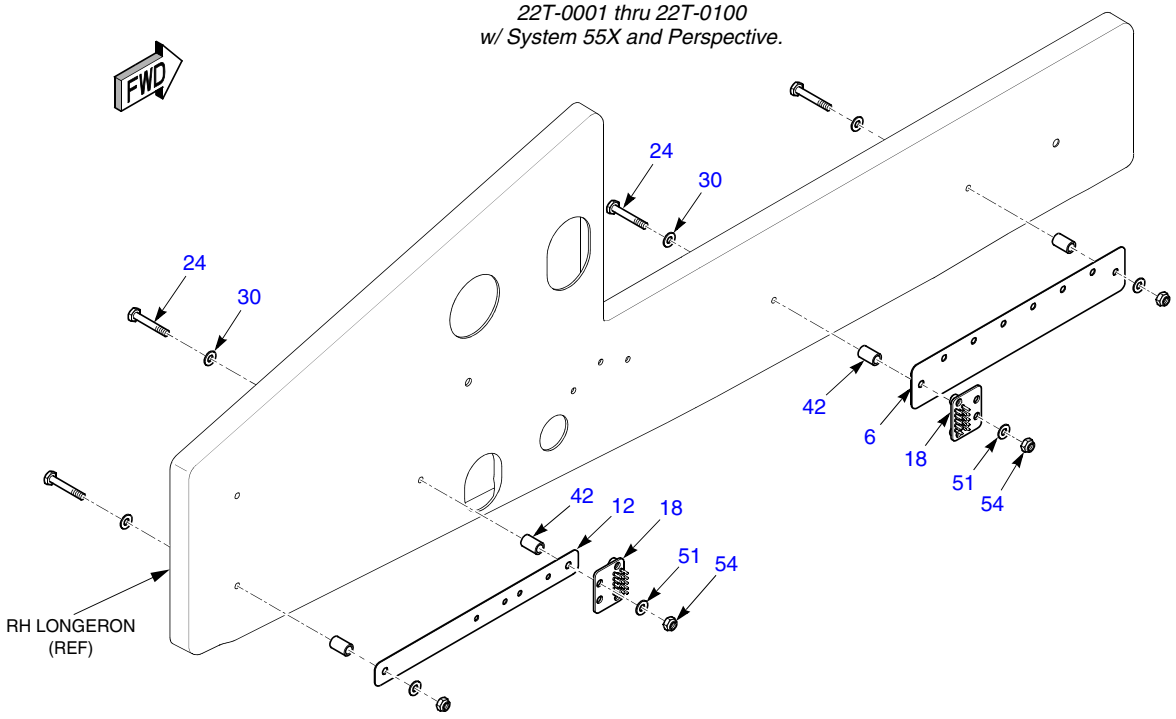

Serials 22-3741 & subs,
22T-0101 & subs
w/ System 55X and Perspective.

DETAIL D

SR22_PC53_2010

Figure-11

Relay Mounting Plate - Serials 3446 & subs w/ System 55X and Perspective (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	NO PRT NUMBER			RELAY MOUNTING PLATE INSTALLATION	0002 / 0001	/	NP
	3	11686-001			·MOUNTING PLATE, RELAY	0002	0820	1
	6	20233-001			·MOUNTING PLATE, RELAY, FORWARD	0821 / 0001	/	1
	9	20234-001			·MOUNTING PLATE, RELAY, AFT	0821		1
			@			3446 / 0001	3740 / 0100	1
	12	20234-002	@		·MOUNTING PLATE, RELAY, AFT	3741 / 0101	/	1
	15	11892-001			·AFT FUSELAGE GROUND BUS ASSEMBLY	0002		1
	18	50042-214			·AFT FUSELAGE GROUND BUS PLATE	3026 / 0001	/	2
	21	NAS428-3-16		A	·BOLT	0002	0820	2
	24	AN3-12A		A	·BOLT	0821		5
			!			3026 / 0001	/	3
			@			3446 / 0001	3740 / 0100	5
			@			3741 / 0101	/	4
	27	AN970-3		A	·WASHER	0002	0820	4
				A	·WASHER	0821		10
			!	A	·WASHER	3026	3402	9
			@	A	·WASHER	3446 / 0001	3740 / 0100	10
	30	NAS1149F0332P	!	A	·WASHER	3026 / 0001	/	3
			@	A	·WASHER	3446 / 0101	/	4
	33	11639-016		A	·SPACER	0002	0820	2
	36	11639-018		A	·SPACER	0821		5
	39	11639-032		A	·SPACER	0002	0820	2
						0821		5
	40	NAS43HT3-18	!	A	·SPACER	3026	3402	3
	42	NAS43DD3-32FC	!	A	·SPACER	3026 / 0001	/	2
			@			3446 / 0001	3740 / 0100	5
			@			3741 / 0101	/	4
	45	53205-001	!	A	·SPACER	3026 / 0001	/	1
	48	AN960-10		A	·WASHER	0002	0820	2
	51	NAS1149F0332P		A	·WASHER	0821		5
			!			3026 / 0001	/	3
			@			3446 / 0001	3740 / 0100	5
			@			3741 / 0101	/	4
	54	MS21044N3		A	·NUT	0002	0820	2
						0821		5
			!			3026 / 0001	/	3
			@			3446 / 0001	3740 / 0100	5
			@			3741 / 0101	/	4

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) AIRCRAFT SERIAL NUMBER 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.

! INSTALLED ON AIRCRAFT W/ PERSPECTIVE AVIONICS.

@ INSTALLED ON AIRCRAFT W/ OPTIONAL SYSTEM 55X/55R AUTOPILOT & PERSPECTIVE AVIONICS.

EFFECTIVITY:
All

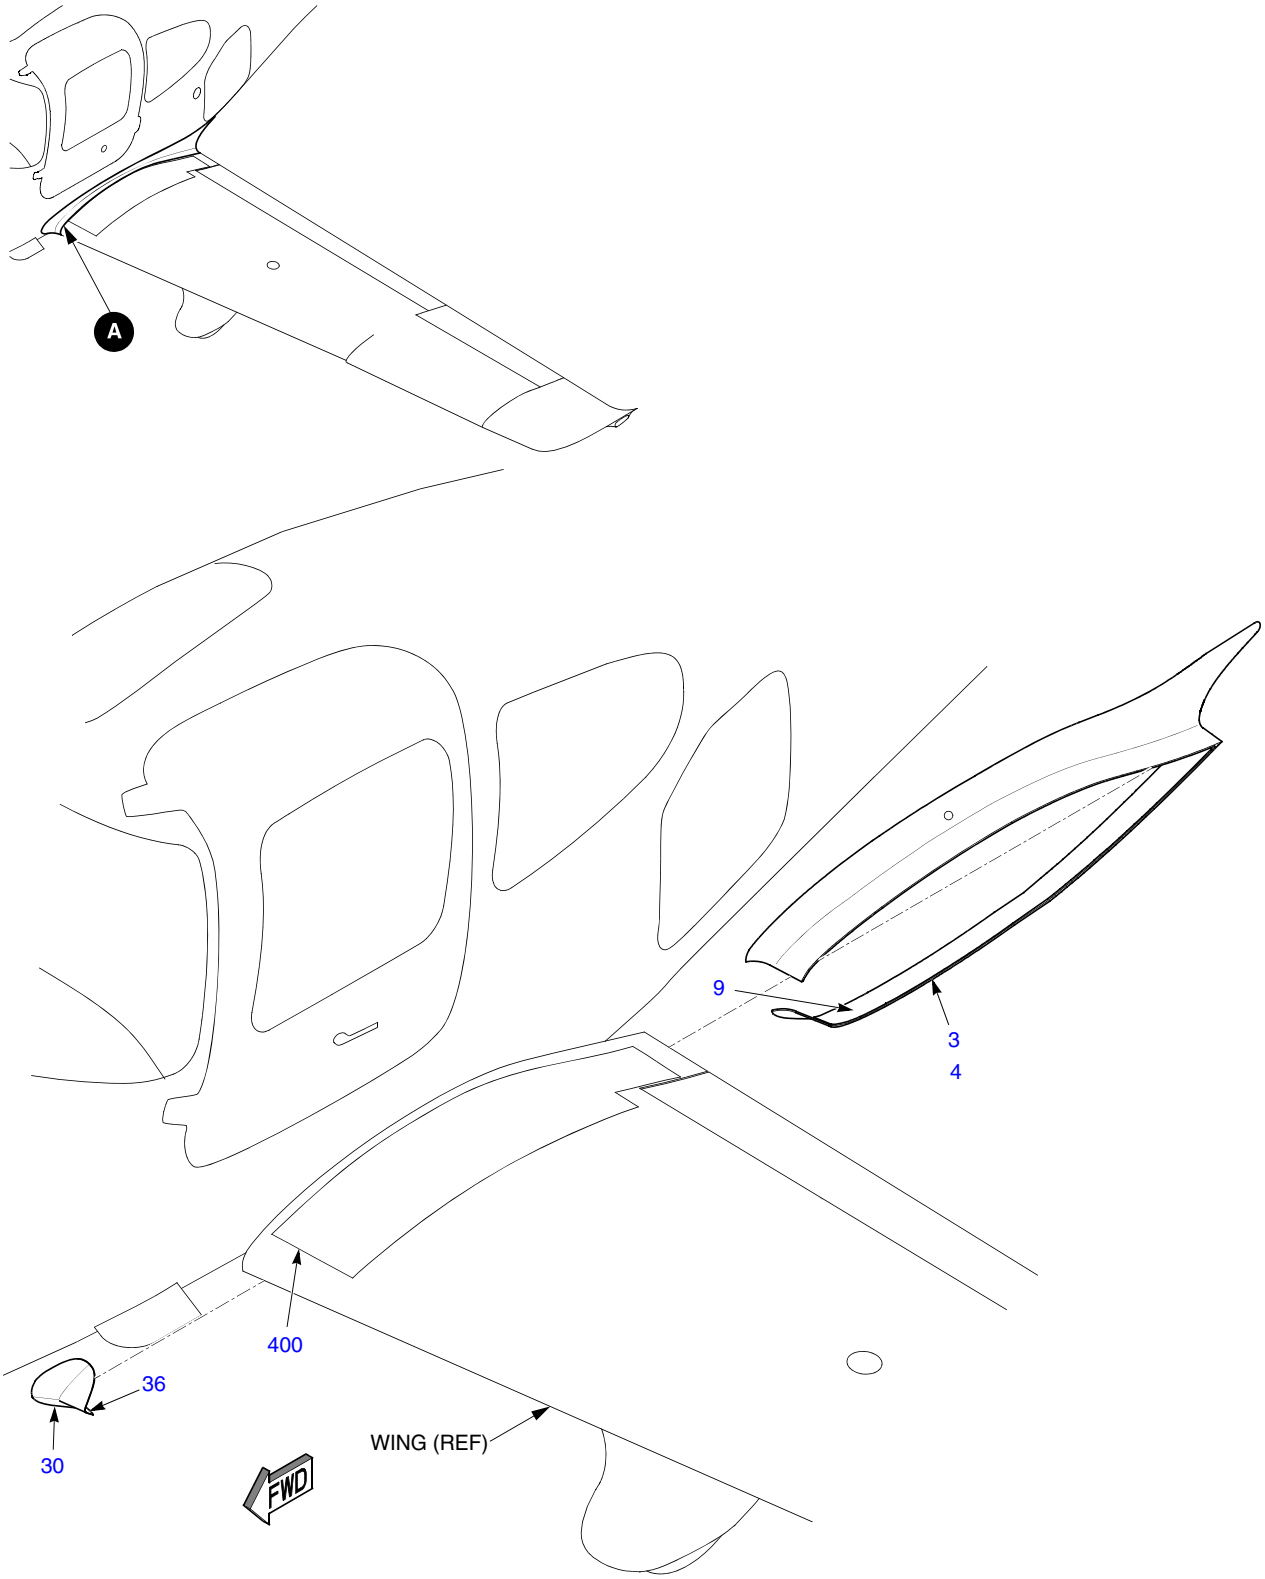

DETAIL A

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC53_1348A

Figure-01

Wing Root Fairing - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

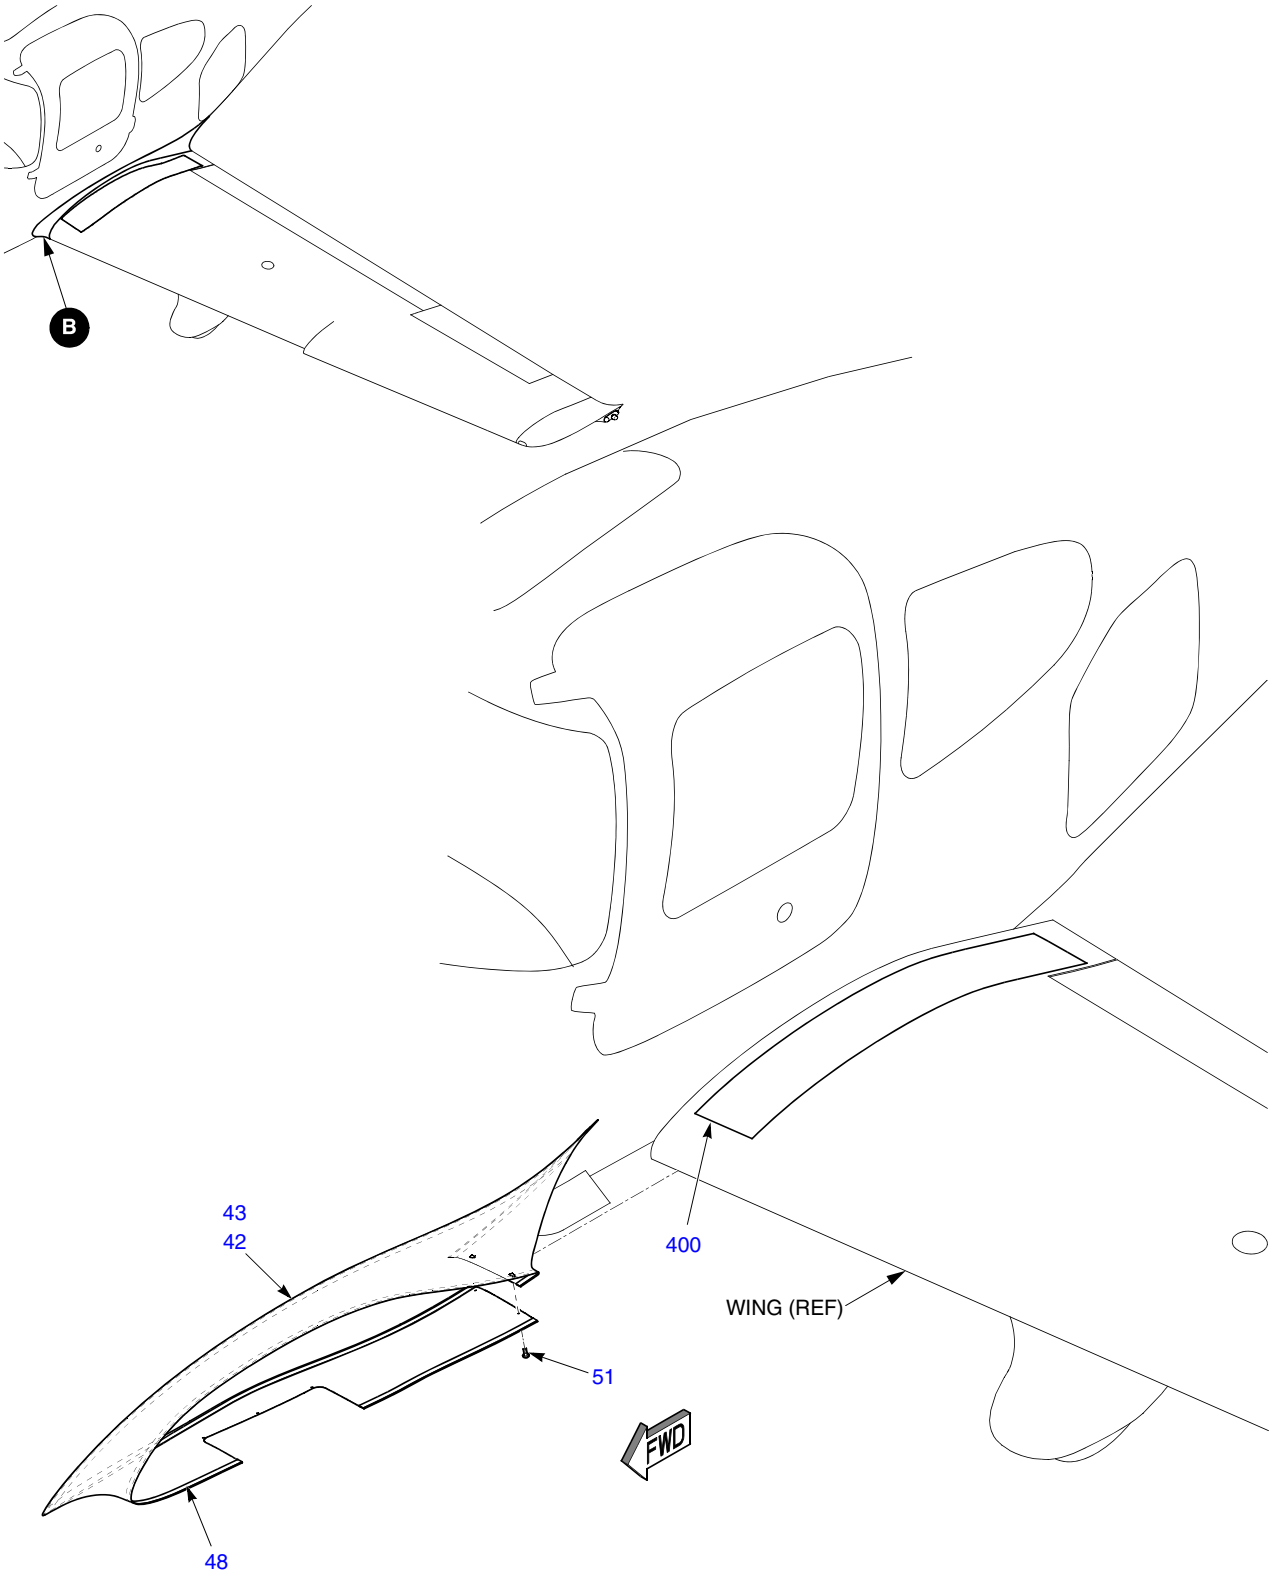

Figure-01
Wing Root Fairing - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		WING ROOT FAIRING, INSTALLATION	0002 / 0001	/	NP
	3	11617-003			·WING ROOT FAIRING, LEFT	0002	0979	1
					FOR SPARES USE P/N 11617-005			
	4	11617-005			·WING ROOT FAIRING, LEFT	0980	2437	1
-	6	11617-004			·WING ROOT FAIRING, RIGHT	0002	0979	1
					FOR SPARES USE P/N 11617-006			
-	7	11617-006			·WING ROOT FAIRING, RIGHT	0980	2437	1
	9	51847-045		A	·TAPE, TWO SIDED	0002	2437	AR
					ALTERNATE FOR P/N 50561-045			
					ALTERNATE FOR P/N 50640-045			
-	12	50008-001			·CLOSEOUT CAP, LEFT	0002	0007	1
					FOR SPARES USE P/N 15300-001			
-	15	50008-001			·CLOSEOUT CAP, RIGHT	0002	0007	1
					FOR SPARES USE P/N 15300-002			
-	18	15300-001			·CLOSEOUT CAP, LEFT	0008	0011	1
-	21	15300-002			·CLOSEOUT CAP, RIGHT	0008	0011	1
-	24	50008-001			·CLOSEOUT CAP, LEFT	0012	0012	1
					FOR SPARES USE P/N 15300-001			
-	27	50008-001			·CLOSEOUT CAP, RIGHT	0012	0012	1
					FOR SPARES USE P/N 15300-002			
	30	15300-001			·CLOSEOUT CAP, LEFT	0013	2437	1
-	33	15300-002			·CLOSEOUT CAP, RIGHT	0013	2437	1
	36	50640-045	@	A	·TAPE, TWO SIDED	0008	0011	AR
-	39	50561-045	@	A	TAPE, TWO SIDED FOAM	0013	2437	AR
	42	18583-001			·WING ROOT FAIRING, LEFT	2438 / 0001	4299 / 1232	1
	43	18583-003			·WING ROOT FAIRING, LEFT	4300 / 1233	/	1
-	45	18583-002			·WING ROOT FAIRING, RIGHT	2438 / 0001	4299 / 1232	1
-	46	18583-004			·WING ROOT FAIRING, RIGHT	4300 / 1233	/	1
	48	51847-045		A	·TAPE, TWO SIDED	2438 / 0001	/	AR
					ALTERNATE FOR P/N 50561-045			
					ALTERNATE FOR P/N 50640-045			
	51	AN525-832R7		A	·SCREW	2438 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-50-03 DET			WING WALK INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
			@		APPLY 4951 TAPE TO FAIRINGS 11617-003 AND 11617-004 WHEN SPARES FOR CLOSEOUT CAP 50008-001 ARE USED.			

Intentionally Left Blank

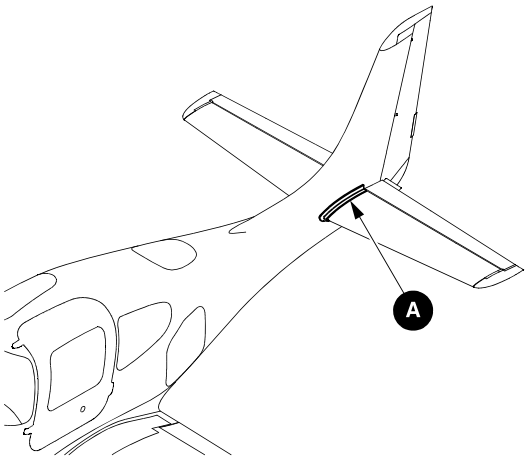

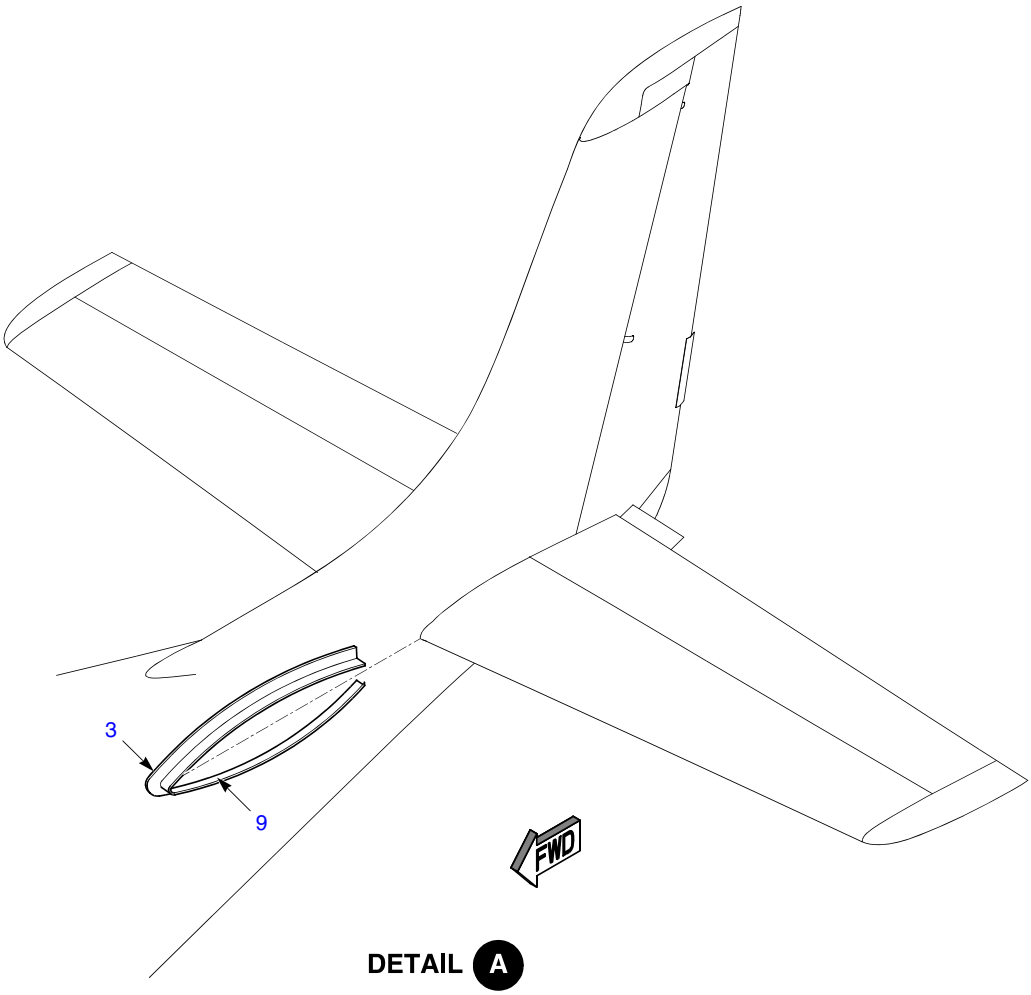

SR22_PC53_1343

Figure-02
Horizontal Stabilizer Fairing

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			HORIZONTAL STABILIZER FAIRING	0498 / 0001	/	NP
	3	15308-001	@		·HORIZONTAL ROOT FAIRING, LEFT	0498 / 0001	/	1
-	6	15308-002	@		·HORIZONTAL ROOT FAIRING, RIGHT	0498 / 0001	/	1
	9	50640-045	@	A	··TAPE, TWO SIDED	0498 / 0001	/	AR
					SYMBOL NOTES:			
			@		SERIAL NUMBER 22-0002 THRU 22-0497 MAY INSTALL THESE PARTS. PARTS MUST BE USED IN PAIRS WITH BOTH A LEFT AND 22-A RIGHT INSTALLED.			

EFFECTIVITY:
All

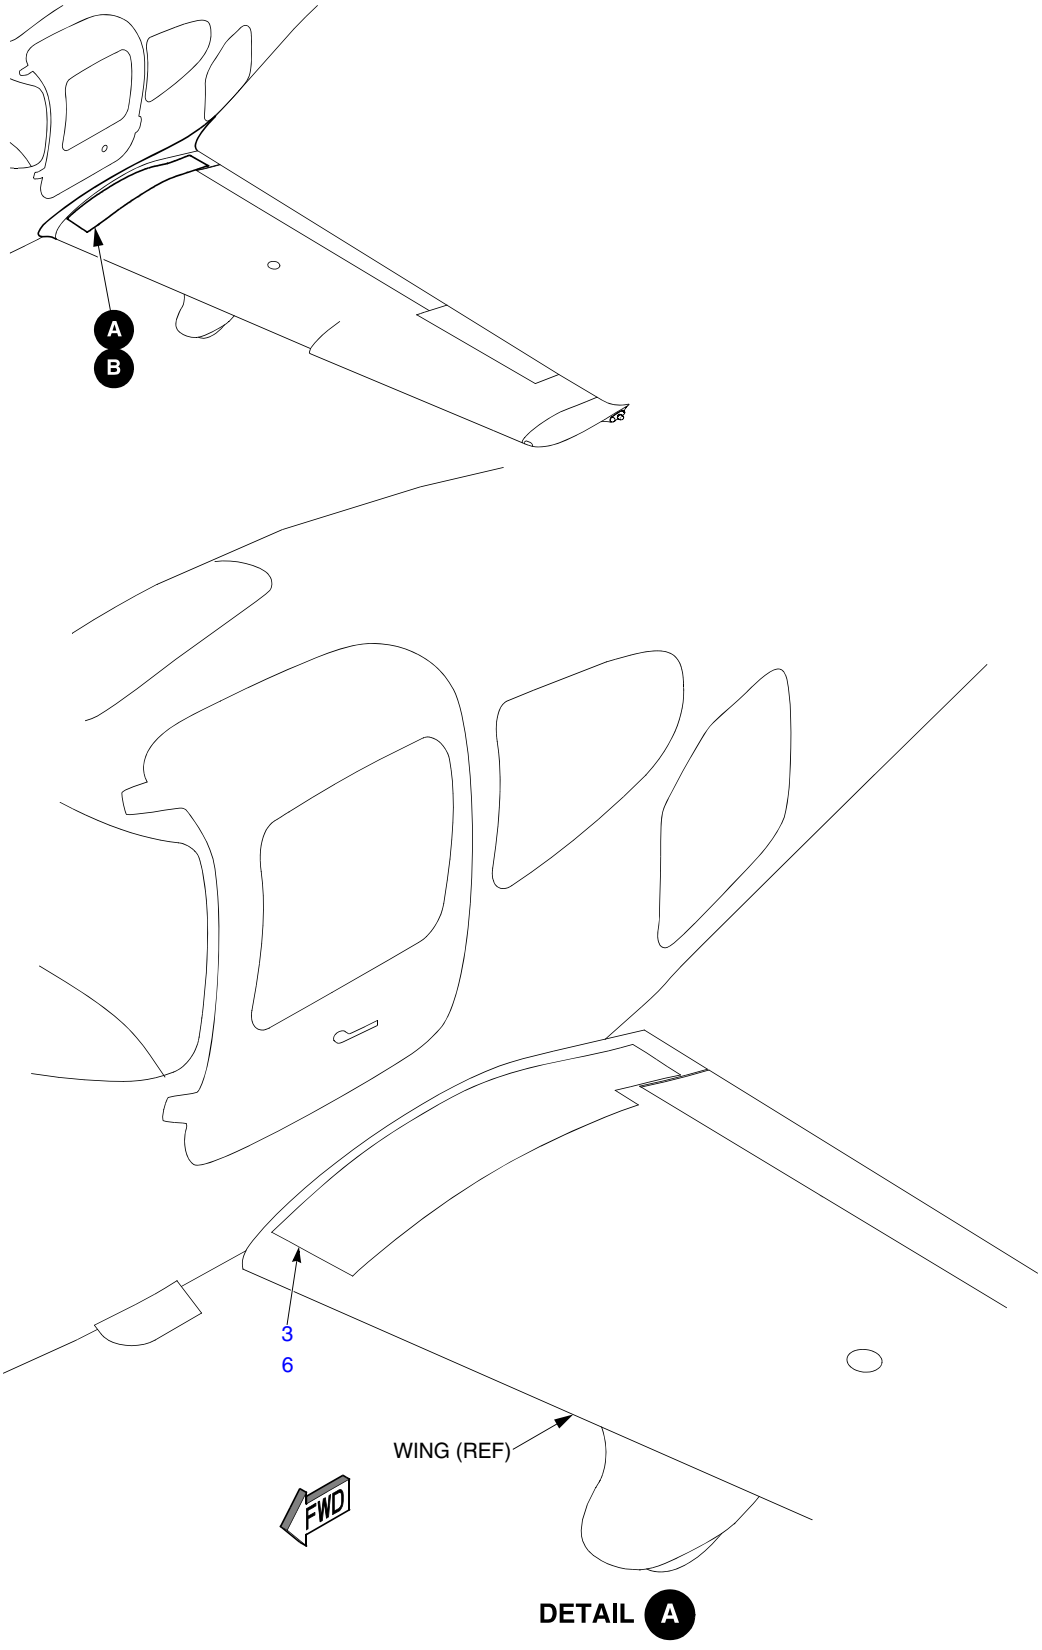

Figure-03
Wing Walk - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

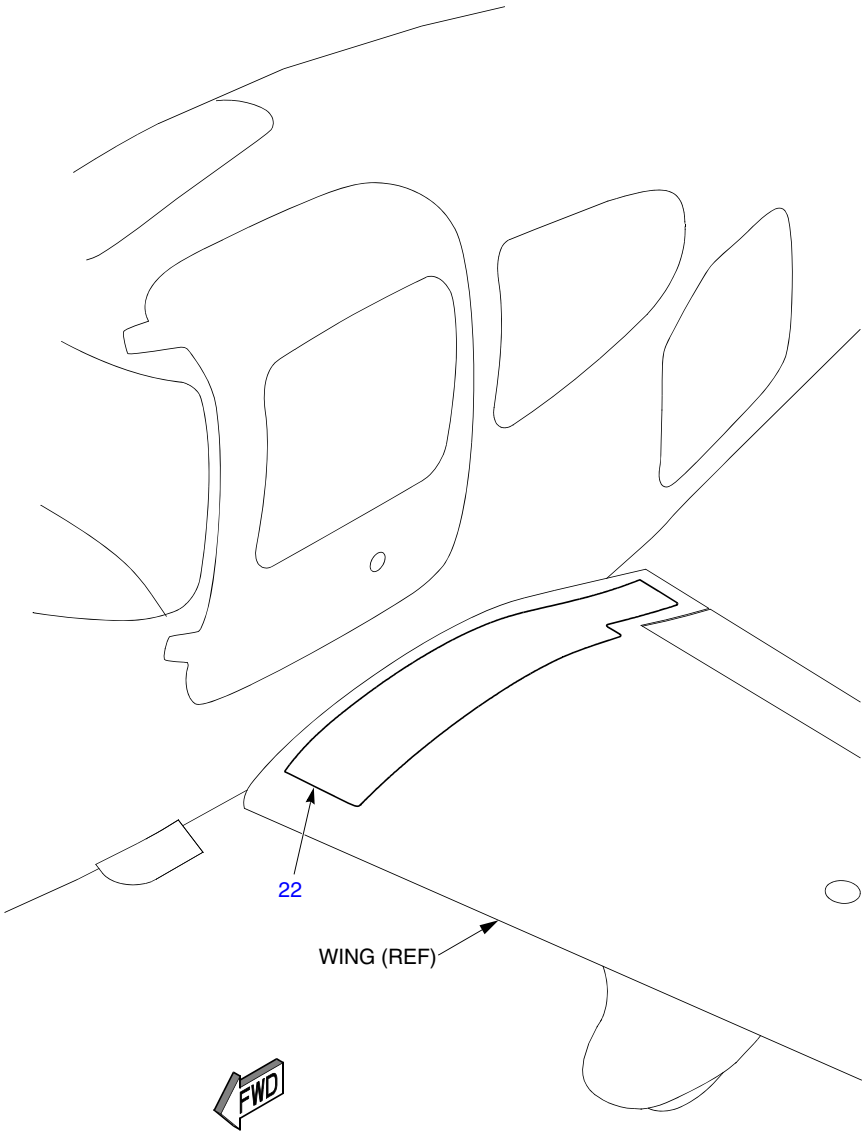

DETAIL B

SR22_PC53_1878C

Figure-03

Wing Walk - Serials 22-2043, 22-2438 & subs, 22T-0001 & subs. (2 of 2)

EFFECTIVITY:
Serials 22-2043, 22-2438 & subs, 22T-0001 & subs.

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		WING WALK INSTALLATION	0002 / 0001	/	NP
	3	12683-001	#		·WING WALK, LEFT	0002	1543	1
					FOR SPARES USE P/N 12683-004			
	6	12683-004	#		·WING WALK, LEFT	1544	2437	1
-	9	12683-002			·WING WALK, RIGHT	0002	1543	1
					FOR SPARES USE P/N 12683-005			
-	12	12683-005	#		·WING WALK, RIGHT	1544	2437	1
-	15	18063-001			·WING WALK, LEFT	2043	2043	1
-	18	18063-002			·WING WALK, RIGHT	2043	2043	1
-	21	18063-003			·WING WALK, LEFT	2438 / 0001	4083 / 0778	1
					FOR SPARES USE P/N 18063-005			
	22	18063-005			·WING WALK, LEFT	4084 / 0779	/	1
-	24	18063-004			·WING WALK, RIGHT	2438 / 0001	4083 / 0778	1
					FOR SPARES USE P/N 18063-006			
-	27	18063-006			·WING WALK, RIGHT	4084 / 0779	/	1
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2044, 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
			#		WHEN 12683-004 OR 12683-005 IS USED AS SPARE BOTH SIDES MUST BE REPLACED.			

Intentionally Left Blank

CHAPTER 55

STABILIZERS

Intentionally Left Blank

CHAPTER 55 - STABILIZERS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
55-LOEP	1	04 SEP 2018
55-LOEP	2	04 SEP 2018
55-TOC	1	04 SEP 2018
55-TOC	2	04 SEP 2018
55-10-01	1	15 DEC 2014
55-10-01	2	15 DEC 2014
55-20-01	1	04 SEP 2018
55-20-01	2	04 SEP 2018
55-20-01	3	04 SEP 2018
55-20-01	4	15 DEC 2014
55-40-01	1	15 DEC 2014
55-40-01	2	19 SEP 2017
55-40-01	3	19 SEP 2017
55-40-01	4	15 DEC 2014
55-50-01	1	15 DEC 2014
55-50-01	2	15 DEC 2014
55-50-02	1	19 SEP 2017
55-50-02	2	19 SEP 2017
55-50-02	3	19 SEP 2017
55-50-02	4	15 DEC 2014

Intentionally Left Blank

CHAPTER 55 - STABILIZERS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Horizontal Stabilizer	55-10-01
Elevator	55-20-01
Rudder	55-40-01
Elevator Attach Fittings	55-50-01
Rudder Attach Fittings - Serials 22-0002 thru 22-0820 (1 of 2)	55-50-02
Rudder Attach Fittings - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)	55-50-02

Intentionally Left Blank

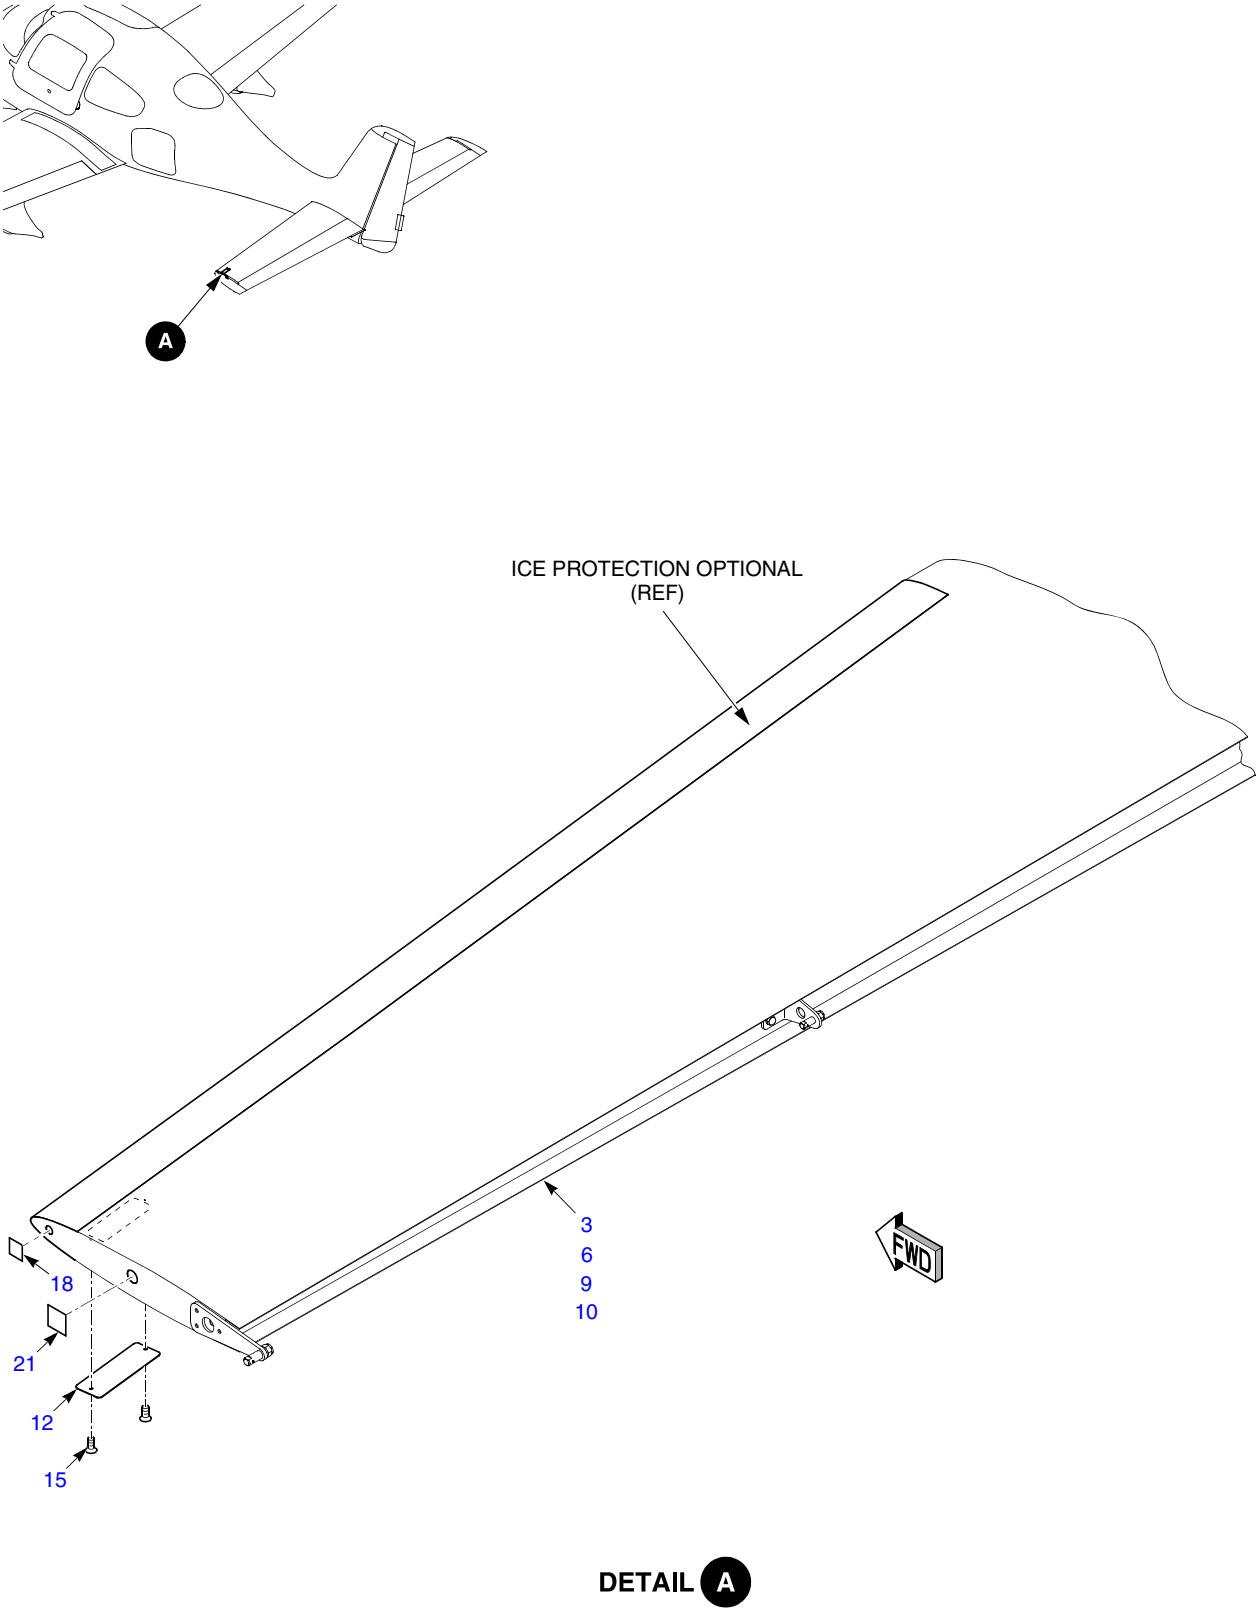

Figure-01
Horizontal Stabilizer

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			HORIZONTAL STABILIZER INSTALLATION	0002 / 0001	/	NP
	3	14120-001			·HORIZONTAL STABILIZER ASSEMBLY	0002	0160	1
	6	14120-002			·HORIZONTAL STABILIZER ASSEMBLY, W/O ICE	0161 / 0001	/	1
	9	15181-001			·HORIZONTAL STABILIZER ASSEMBLY, W/ NO HAZARD	0334 / 0001	/	1
	10	15181-002			·HORIZONTAL STABILIZER ASSEMBLY, W/ FIKI	3403 / 0001	/	1
	12	15274-001			·ACCESS PANEL, W/ ICE PROTECTION	0334 / 0001	/	2
	15	MS24694S5		A	·SCREW, W/ ICE PROTECTION	0334 / 0001	/	4
	18	15946-001			·FWD INSPECTION HOLE COVER	0875 / 0001	/	2
					AFTER SB2X-55-10	0002 / 0001	/	
	21	15947-001			·AFT INSPECTION HOLE COVER	0875 / 0001	/	2
					AFTER SB2X-55-10	0002 / 0001	/	
-	24	12012-001			·PRE-CURE SHIM	0002	0820	AR
-	27	12013-001			·PRE-CURE SHIM, TAPERED	0821 / 0001		AR

EFFECTIVITY:
All

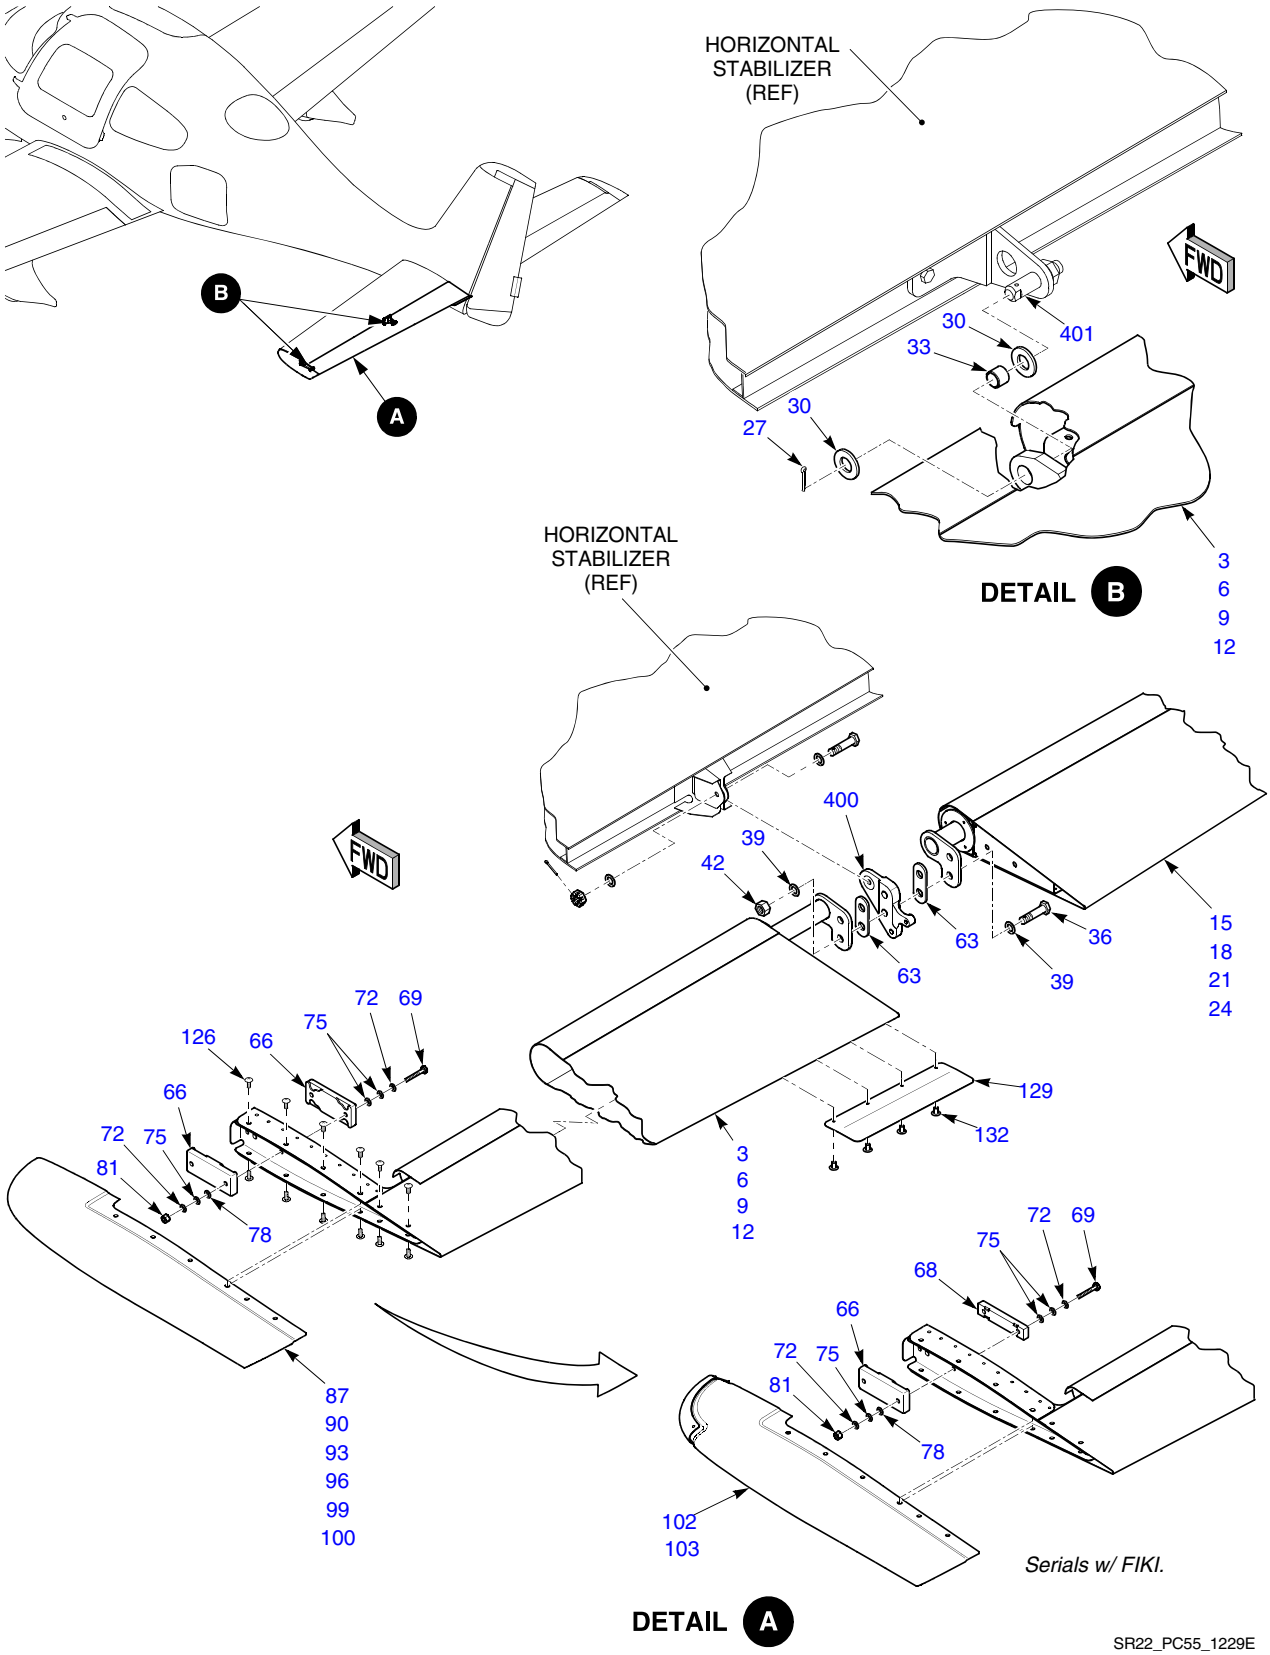

Figure-01
Elevator

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ELEVATOR INSTALLATION	0002 / 0001	/	NP
	3	10146-005			·ELEVATOR ASSY, LH	0002	0723	1
					FOR SPARES USE P/N 19658-001			
	6	10146-007			·ELEVATOR ASSY, LH	0724	0986	1
					FOR SPARES USE P/N 19658-001			
	9	10146-009			·ELEVATOR ASSY, LH	0987	3402	1
					FOR SPARES USE P/N 19658-001			
	12	19658-001			·ELEVATOR ASSY, LH	3403 / 0001	/	1
	15	10146-006			·ELEVATOR ASSY, RH	0002	0723	1
					FOR SPARES USE P/N 19658-002			
	18	10146-008			·ELEVATOR ASSY, RH	0724	0986	1
					FOR SPARES USE P/N 19658-002			
	21	10146-010			·ELEVATOR ASSY, RH	0987	3402	1
					FOR SPARES USE P/N 19658-002			
	24	19658-002			·ELEVATOR ASSY, RH	3403 / 0001	/	1
	27	MS24665-132		A	·COTTER PIN	0002 / 0001	/	2
	30	NAS1149F0516P		A	·WASHER	0002 / 0001	/	4
	33	50224-001			·BUSHING	0002 / 0001	/	2
	36	NAS6606H15		A	·BOLT	0002 / 0001	/	2
	39	NAS1149F0663P		A	·WASHER	0002 / 0001	/	4
	42	MS21044N6		A	·NUT	0002 / 0001	/	2
-	45	11508-002			·SHIM (0.141 INCH)	0002	2884	1
-	48	11508-003	@		·SHIM (0.016 INCH)	0002	2884	AR
					FOR SPARES USE P/N 22008-001			
-	51	22008-001	@		·SHIM (0.016 INCH)	2885 / 0001	/	AR
-	54	11508-004	@		·SHIM (0.032 INCH)	0002	2884	AR
					FOR SPARES USE P/N 22008-002			
-	57	22008-002	@		·SHIM (0.032 INCH)	2885 / 0001	/	AR
-	60	11508-005	@		·SHIM (0.063 INCH)	0002	2884	AR
					FOR SPARES USE P/N 22008-003			
	63	22008-003	@		·SHIM (0.063 INCH)	2885 / 0001	/	AR
	66	10748-001			·MASS BALANCE	0002 / 0001	/	2
					ALTERNATE FOR P/N 10748-003			
-	67	10748-003			·MASS BALANCE	0002 / 0001	/	2
					ALTERNATE FOR P/N 10748-001			
	68	10748-002			·MASS BALANCE W/ FIKI	3403 / 0001	/	1
	69	AN3-12A		A	·BOLT	0002 / 0001	/	2
	72	NAS1149F0332P		A	·WASHER	0002 / 0001	/	4
	75	AN970-3		A	·WASHER	0002 / 0001	/	AR
	78	12682-001		A	·LEAD WASHER	0002 / 0001	/	AR
	81	MS21044N3		A	·NUT	0002 / 0001	/	2
-	84	14133-001			·TIP ELEVATOR, LH	0002	0419	1
					FOR SPARES USE P/N 18343-002			
	87	14133-003			·TIP ELEVATOR, LH	0420	1579	1
					FOR SPARES USE P/N 18343-002			
	90	16720-002			·TIP ELEVATOR, LH	1580	1644	1
					FOR SPARES USE P/N 18343-002			
	93	16720-003			·TIP ELEVATOR, LH	1645	1828	1
					FOR SPARES USE P/N 18343-002			
	96	16720-004			·TIP ELEVATOR, LH	1829	2403	1
					FOR SPARES USE P/N 18343-002			
	99	18343-002			·TIP ELEVATOR, LH, NON-FIKI	2404 / 0001	4049 / 0714	1
					FOR SPARES USE P/N 18343-003			
	100	18343-003			·TIP ELEVATOR, LH	4050 / 0715	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	102	19633-001			·TIP ELEVATOR, LH, FIKI	3403 / 0001	4054 / 0724	1
					FOR SPARES USE P/N 19633-003			
	103	19633-003			·TIP ELEVATOR, LH, FIKI	4054 0725	/	1
-	105	14133-002			·TIP ELEVATOR, RH	0002	0419	1
					FOR SPARES USE P/N 18343-001			
-	108	14133-004			·TIP ELEVATOR, RH	0420	1579	1
					FOR SPARES USE P/N 18343-001			
-	111	16718-002			·TIP ELEVATOR, RH	1580	1644	1
					FOR SPARES USE P/N 18343-001			
-	114	16718-003			·TIP ELEVATOR, RH	1645	1828	1
					FOR SPARES USE P/N 18343-001			
-	117	16718-004			·TIP ELEVATOR, RH	1829	2403	1
					FOR SPARES USE P/N 18343-001			
-	120	18343-001			·TIP ELEVATOR, RH, NON-FIKI	2404 / 0001	4049 / 0714	1
					FOR SPARES USE P/N 18343-004			
-	121	18343-004			·TIP ELEVATOR, RH, NON-FIKI	4050 / 0715	/	1
-	123	19633-002			·TIP ELEVATOR, RH, FIKI	3403 / 0001	4053 / 0724	1
					FOR SPARES USE P/N 19633-004			
-	124	19633-004			·TIP ELEVATOR, RH, FIKI	4054 0725	/	1
	126	50958-037		A	·SCREW	0002 / 0001	/	14
	129	12934-002			·TRIM TAB	0002 / 0001	/	1
	132	NAS9301B4		A	·RIVET	0002 / 0001	/	4
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 27-00-05 DET			BELLCRANK			
	401	RF 55-50-01 DET			HINGE PIN			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					(1) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PART IDENTIFICATION.			
					(2) SERIAL NUMBER 22-4067, REFER TO 22-2404 FOR PART IDENTIFICATION.			
			@		INSTALL ANY COMBINATION OF SHIMS AS REQUIRED. MAXIMUM THICKNESS NOT TO EXCEED 0.063 INCH. SHIMS MAY NOT BE NECESSARY.			

Intentionally Left Blank

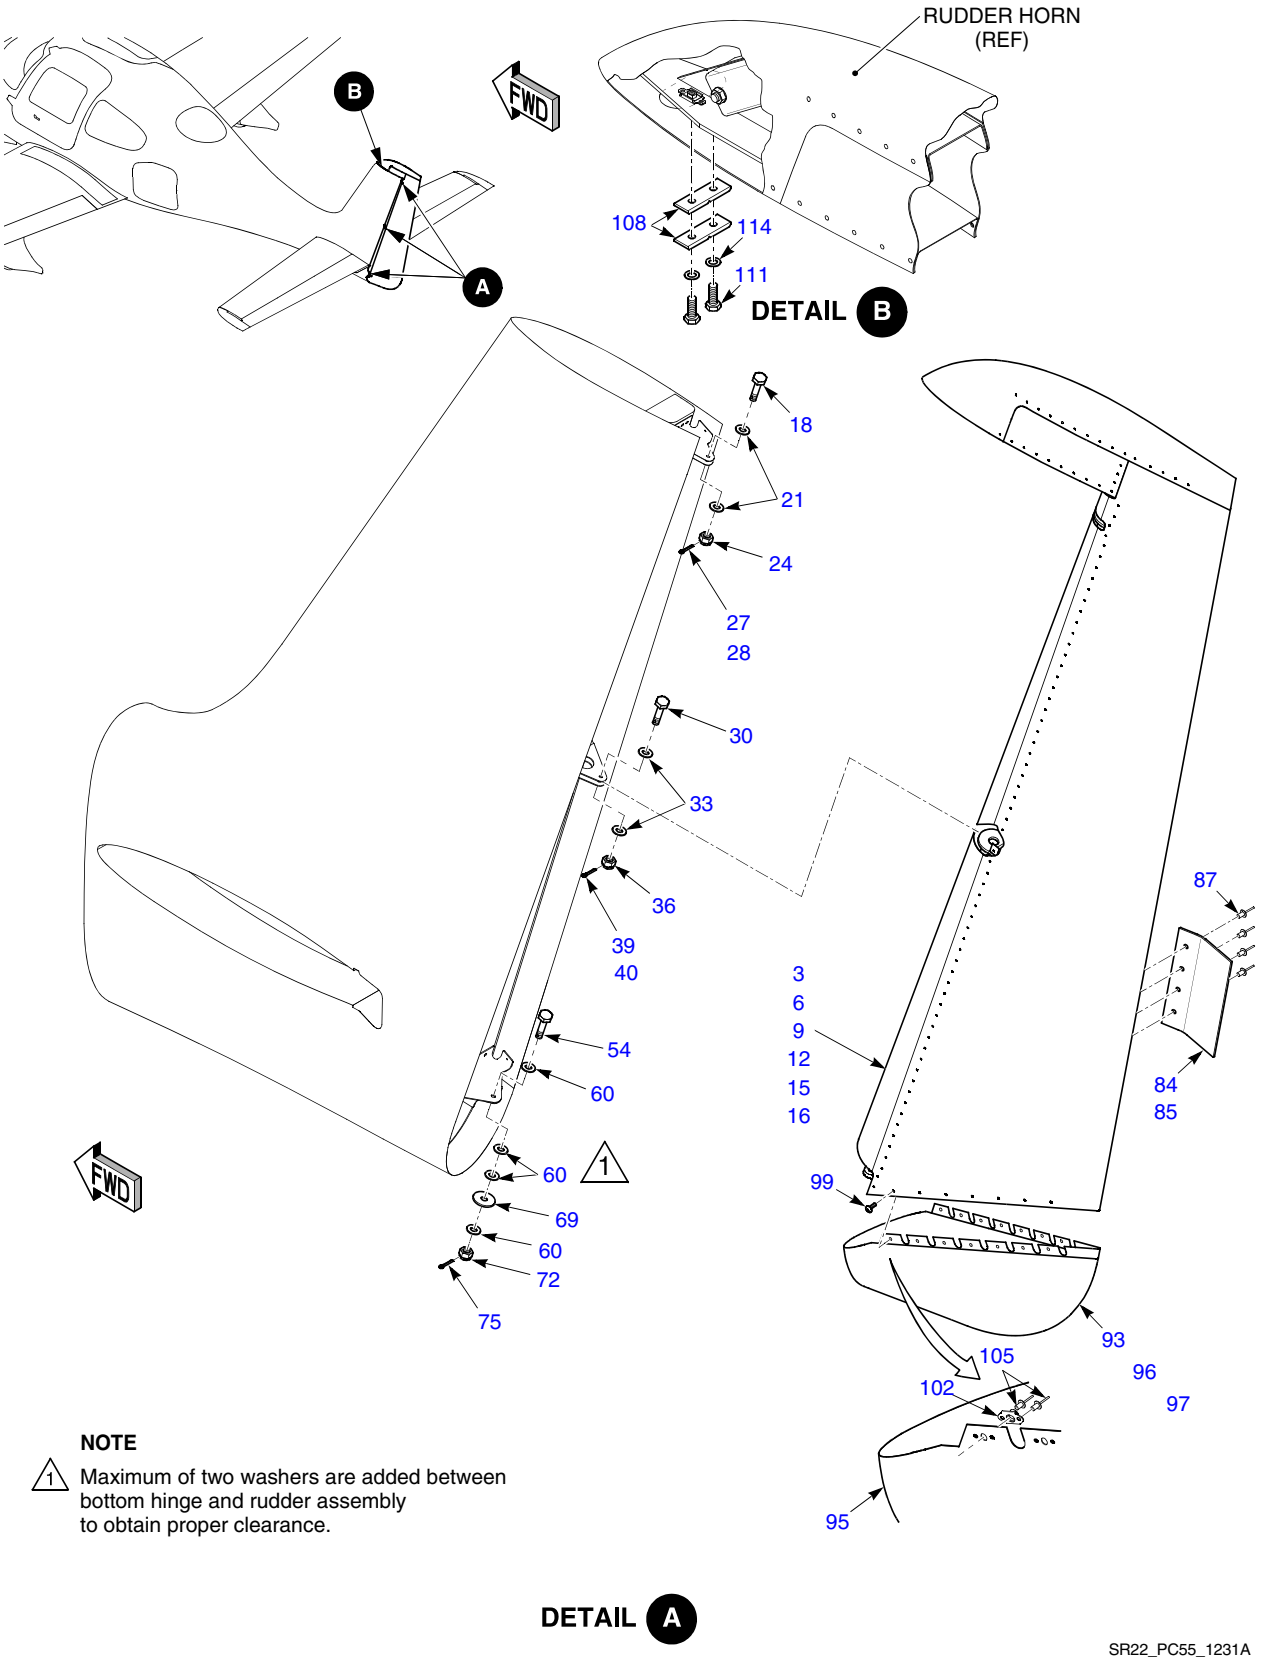

NOTE

1 Maximum of two washers are added between bottom hinge and rudder assembly to obtain proper clearance.

SR22_PC55_1231A

Figure-01
Rudder

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			RUDDER	0002 / 0001	/	NP
	3	10360-004			·RUDDER ASSEMBLY	0002	0118	1
					FOR SPARES USE P/N 10360-006			
	6	10360-005			·RUDDER ASSEMBLY	0119	0820	1
					FOR SPARES USE P/N 10360-006			
	9	10360-006	@		·RUDDER ASSEMBLY	0002	0820	1
	12	20365-001			·RUDDER ASSEMBLY	0821	1435	1
					FOR SPARES USE P/N 20365-002			
	15	20365-002			·RUDDER ASSEMBLY	1436	1633	1
					FOR SPARES USE P/N 20365-003			
	16	20365-003			·RUDDER ASSEMBLY	1634 / 0001	/	1
	18	AN3-7		A	·BOLT	0002 / 0001	/	1
	21	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	24	MS17825-3		A	·NUT	0002 / 0001	/	1
	27	MS24665-130		A	·COTTER PIN	0002 / 0001	/	1
					ALTERNATE FOR P/N MS24665-132			
	28	MS24665-132		A	·COTTER PIN	0002 / 0001	/	1
					ALTERNATE FOR P/N MS24665-130			
	30	AN3-7		A	·BOLT	0002 / 0001	/	1
	33	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	36	MS17825-3		A	·NUT	0002 / 0001	/	1
	39	MS24665-130		A	·COTTER PIN	0002 / 0001	/	1
					ALTERNATE FOR P/N MS24665-132			
	40	MS24665-132		A	·COTTER PIN	0002 / 0001	/	1
					ALTERNATE FOR P/N MS24665-130			
-	42	AN4-7		A	·BOLT	0002	0097	1
					BEFORE SB22-55-02			
-	45	AN4-10		A	·BOLT	0098 / 0001	/	1
					BEFORE SB22-55-02			
-	48	AN4-10		A	·BOLT	0002	0071	1
					AFTER SB22-55-02			
-	51	AN4-7		A	·BOLT	0072	0097	1
					AFTER SB22-55-02			
	54	AN4-10		A	·BOLT	0098 / 0001	/	1
					AFTER SB22-55-02			
-	57	NAS1149F0432P		A	·WASHER	0002	0097	1
					BEFORE SB22-55-02			
	60	NAS1149F0432P	#	A	·WASHER	0002 / 0001	/	4
					AFTER SB22-55-02			
-	63	NAS1149F0432P		A	·WASHER	0002	0097	1
					BEFORE SB22-55-02			
					FOR SPARES USE P/N 14686-001			
-	66	14686-001		A	·WASHER	0098 / 0001	/	1
					BEFORE SB22-55-02			
	69	14686-001		A	·WASHER	0002 / 0001	/	1
					AFTER SB22-55-02			
	72	MS17825-4		A	·NUT	0002 / 0001	/	1
	75	MS24665-132		A	·COTTER PIN	0002 / 0001	/	1
-	78	12934-001			·TRIM TAB	0002	0003	1
-	81	NO PRT NUMBER	$		·TRIM TAB	0004	0168	1
	84	12934-001			·TRIM TAB	0169 / 0001	/	1
					ALTERNATE FOR P/N 12934-002			
	85	12934-002			·TRIM TAB	0169 / 0001	/	1
					ALTERNATE FOR P/N 12934-001			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	87	NAS9301B4-2		A	·RIVET	0002 / 0001	/	4
-	90	10376-001			·COMPOSITE TIP, BOTTOM, RUDDER	0002	0419	1
					FOR SPARES USE P/N 20917-002			
	93	10376-002			·COMPOSITE TIP, BOTTOM, RUDDER	0420	1519	1
					FOR SPARES USE P/N 20917-002			
	95	20917-002			·COMPOSITE TIP, BOTTOM, RUDDER	0420	1519	1
	96	20917-001			·COMPOSITE TIP, BOTTOM, RUDDER	1520 / 0001	/	1
					ALTERNATE FOR P/N 20917-003			
	97	20917-003			·COMPOSITE TIP, BOTTOM, RUDDER	1520 / 0001	/	1
					ALTERNATE FOR P/N 20917-001			
	99	50958-050		A	·SCREW	0002 / 0001	/	14
	102	MS21059L3		A	·NUTPLATE	0002 / 0001	/	14
	105	MS20426AD3		A	·RIVET	0002 / 0001	/	28
	108	12682-001			·LEAD WASHER (MASS BALANCE)	0002 / 0001	/	2
	111	AN3H-5A		A	·BOLT	0002 / 0001	/	2
	114	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
					SYMBOL NOTES:			
			@		AVAILABLE AS SPARE ONLY.			
			#		2 WASHERS ARE ADDED BETWEEN BOTTOM HINGE AND RUDDER TO OBTAIN PROPER CLEARANCE.			
			$		REFER TO ELECTRIC RUDDER TRIM INSTALLATION (27-20-05).			

Intentionally Left Blank

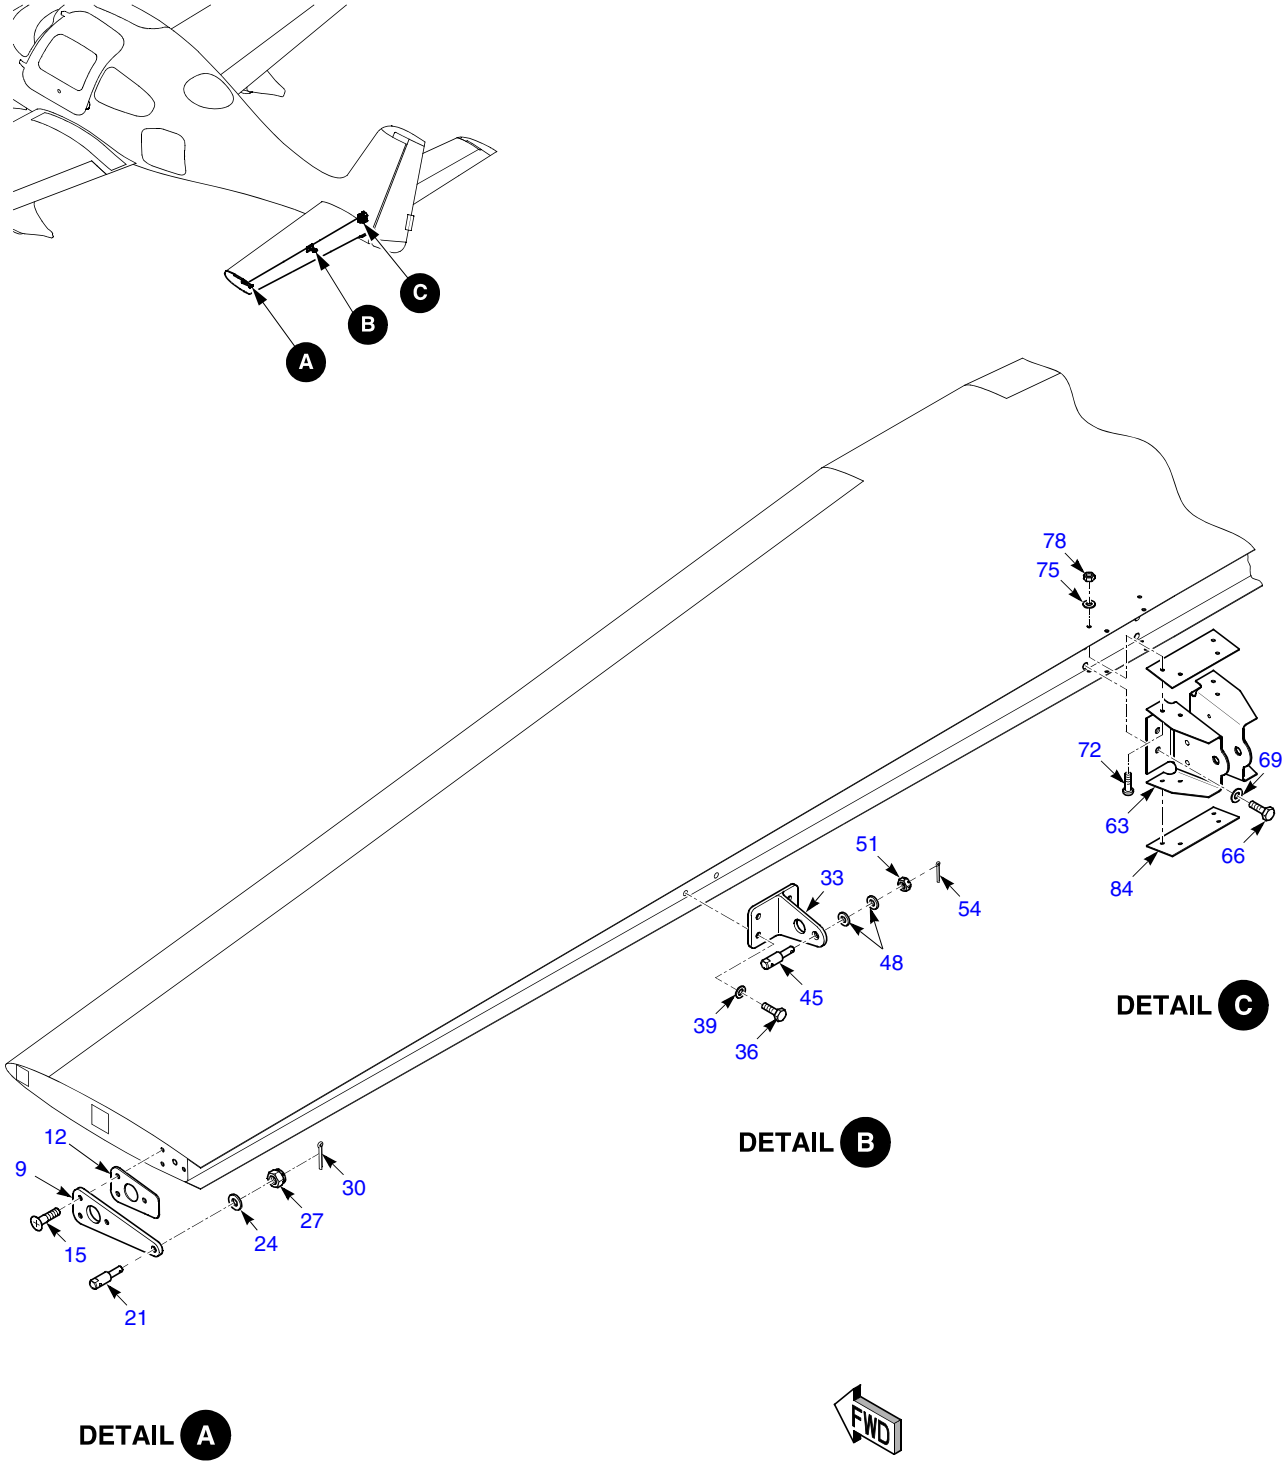

Figure-01
Elevator Attach Fittings

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			ELEVATOR ATTACH FITTINGS	0002 / 0001	/	NP
-	3	11626-002			·ELEVATOR HINGE, OUTBOARD	0002 / 0001	3789 / 0209	2
					FOR SPARES USE P/N 11626-004			
-	6	11626-003			·ELEVATOR HINGE, OUTBOARD	3790 / 0210	3866 / 0359	2
					FOR SPARES USE P/N 11626-004			
	9	11626-004			·ELEVATOR HINGE, OUTBOARD	3867 / 0360	/	2
	12	14120-101	@		·SHIM	0002 / 0001	/	AR
	15	MS24694-S53		A	·SCREW	0002 / 0001	/	6
-	18	11621-001		A	·HINGE PIN	0002	2083	2
	21	11621-002		A	·HINGE PIN	2084 / 0001	/	2
	24	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	27	MS17825-3		A	·NUT	0002 / 0001	/	2
	30	MS24665-132		A	·COTTER PIN	0002 / 0001	/	2
	33	11606-002			·ELEVATOR HINGE, MIDSPAN	0002 / 0001	/	2
	36	AN3-5A		A	·BOLT	0002 / 0001	/	8
	39	NAS1149F0332P		A	·WASHER	0002 / 0001	/	8
-	42	11621-001		A	·HINGE PIN	0002	2083	2
	45	11621-002		A	·HINGE PIN	2084 / 0001	/	2
	48	NAS1149F0363P		A	·WASHER	0002 / 0001	/	4
	51	MS17825-3		A	·NUT	0002 / 0001	/	2
	54	MS24665-132		A	·COTTER PIN	0002 / 0001	/	2
-	57	10496-002			·ELEVATOR HINGE, INBOARD	0002	0160	2
-	60	10496-003			·ELEVATOR HINGE, INBOARD	0161	1463	2
					FOR SPARES USE P/N 10496-004			
	63	10496-004			·ELEVATOR HINGE, INBOARD	1464 / 0001	/	2
	66	AN3-4A		A	·BOLT	0002 / 0001	/	4
	69	NAS1149F0332P		A	·WASHER	0002 / 0001	/	4
	72	MS27039-0808	#	A	·SCREW	0002 / 0001	/	8
	75	NAS1149FN832P	#	A	·WASHER	0002 / 0001	/	8
	78	MS21044N08	#	A	·NUT	0002 / 0001	/	8
-	81	MS20470AD5	#	A	·RIVET	0002 / 0001	/	8
	84	70116-101	@		·SHIM (0.022 INCH)	0002 / 0001	/	AR
-	87	70116-102	@		·SHIM (0.044 INCH)	0002 / 0001	/	AR
-	90	70116-103	@		·SHIM (0.055 INCH)	0002 / 0001	/	AR
-	93	70116-104	@		·SHIM (0.066 INCH)	0002 / 0001	/	AR

SYMBOL NOTES:

@ INSTALL AS REQUIRED.

ALTERNATE INSTALLATION USES RIVET IN PLACE OF SCREW, WASHER, AND NUT.

EFFECTIVITY:
All

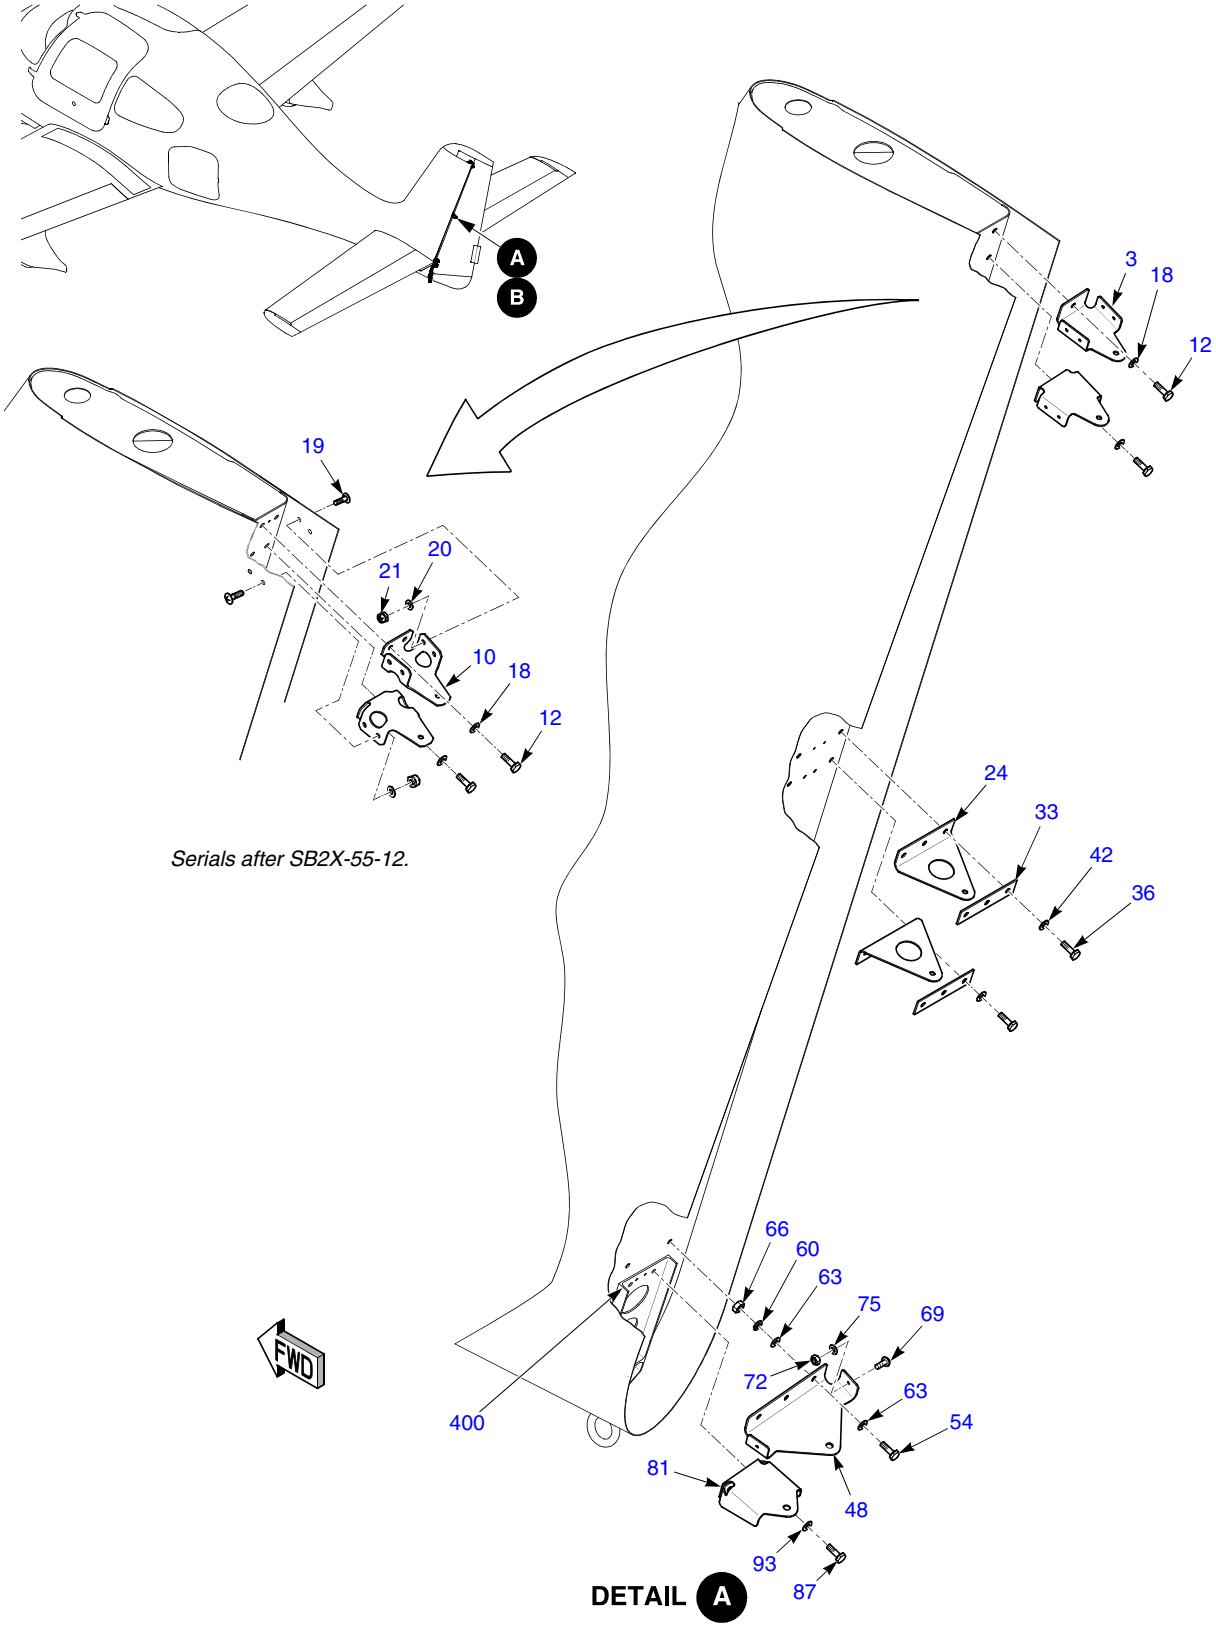

Serials 22-0002 thru 22-0820.

Figure-02

Rudder Attach Fittings - Serials 22-0002 thru 22-0820 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

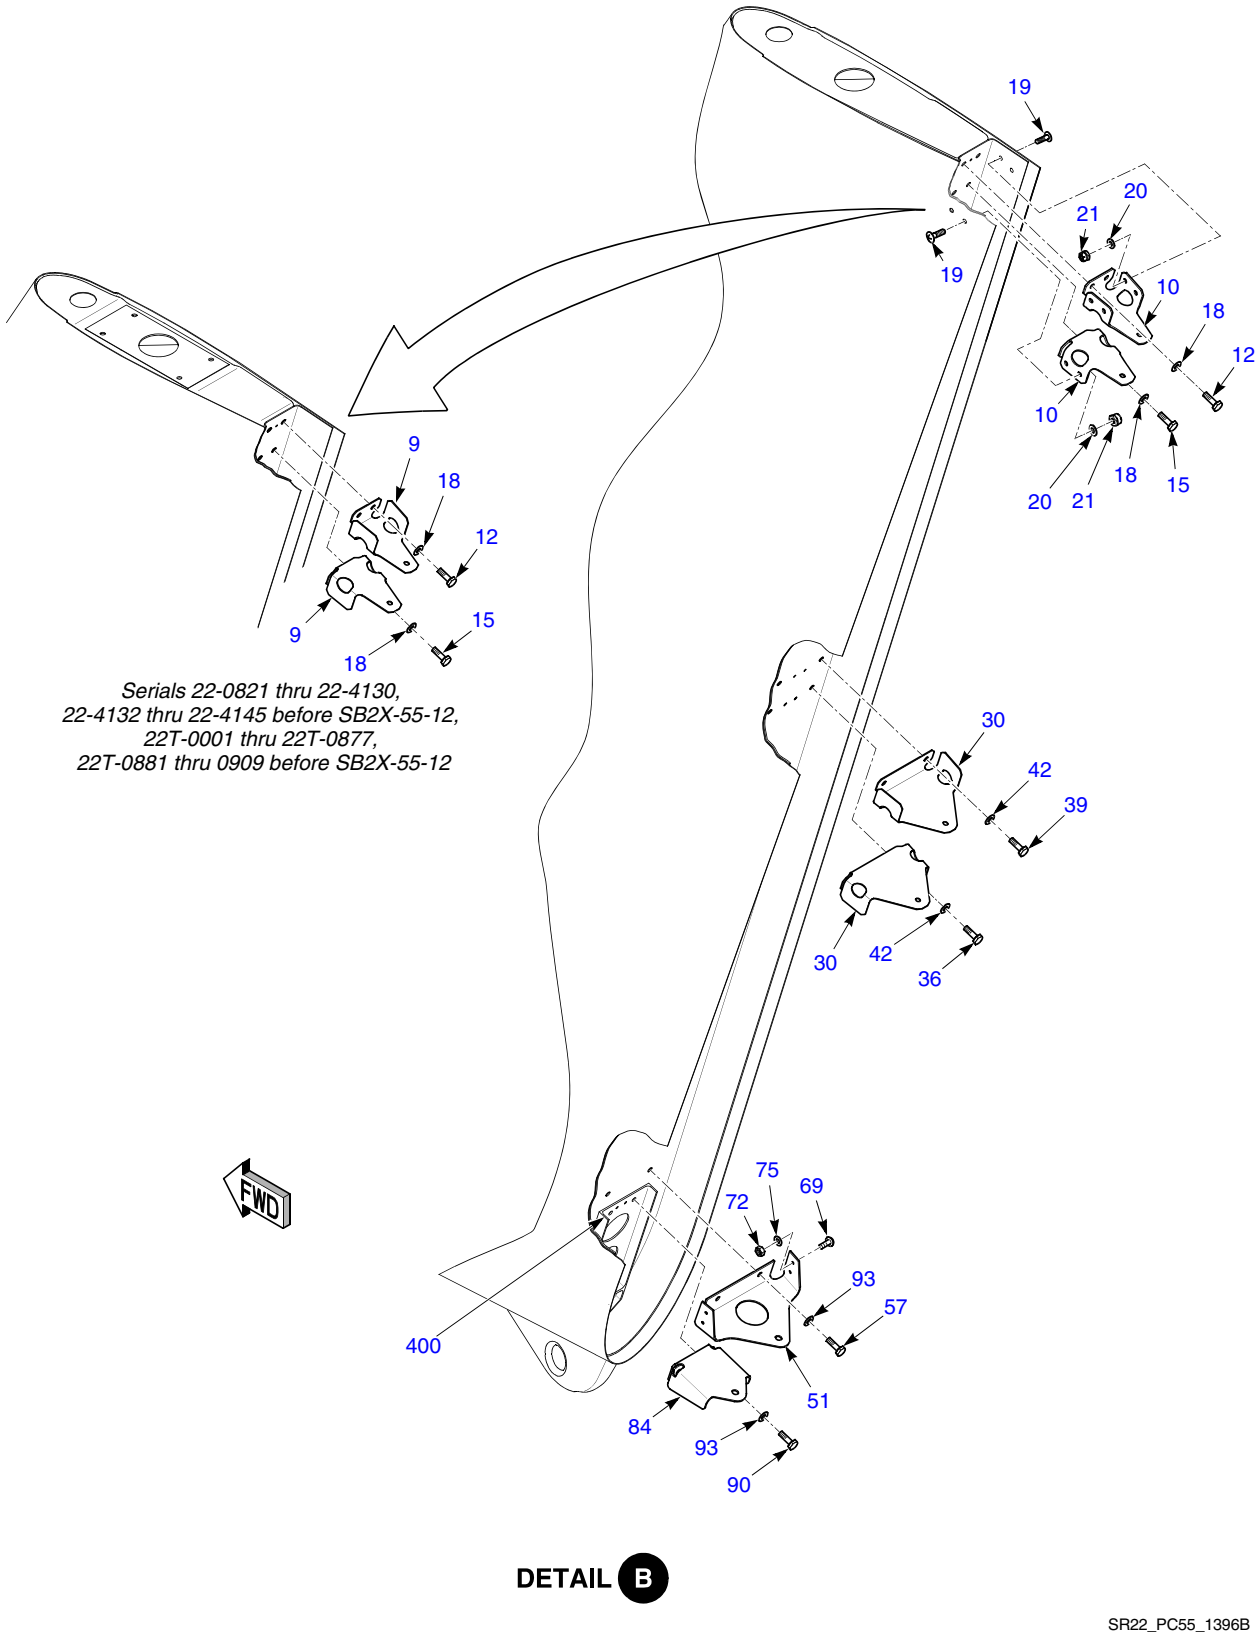

Figure-02

Rudder Attach Fittings - Serials 22-0821 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0821 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			RUDDER ATTACH FITTINGS	0002 / 0001	/	NP
	3	12394-001			·HINGE UPPER VERTICAL	0002	0820	2
-	6	20101-002			·HINGE UPPER VERTICAL	0821	1153	2
	9	20101-003		#	·HINGE UPPER VERTICAL	1154 / 0001	4145 / 0910	2
					FOR SPARES USE P/N 20101-004			
	10	20101-004			·HINGE UPPER VERTICAL	4146 / 0911		2
					AFTER SB2X-55-12	0002 / 0001	4145 / 0910	2
	12	AN3-4A		A	·BOLT	0002	0820	2
						0821 / 0001	/	1
	15	AN3-5A		A	·BOLT	0821 / 0001	/	1
	18	NAS1149D0332J		A	·WASHER	0002 / 0001	/	2
	19	AN525-832R9			·SCREW	4146 / 0911	/	8
					AFTER SB2X-55-12	0002 / 0001	4145 / 0910	8
	20	NAS1149DN832K			·WASHER	4146 / 0911		8
					AFTER SB2X-55-12	0002 / 0001	4145 / 0910	8
	21	MS21044N08			·NUT	4146 / 0911		8
					AFTER SB2X-55-12	0002 / 0001	4145 / 0910	8
-	22	MS20470AD5		A	·RIVET	0002 / 0001	/	8
	24	10588-001			·HINGE MID VERTICAL	0002	0820	2
-	27	20102-003			·HINGE MID VERTICAL	0821	1153	2
	30	20102-004			·HINGE MID VERTICAL	1154 / 0001	/	2
	33	11301-001		A	·RADIUS FILLER	0002	0820	2
	36	AN3-5A		A	·BOLT	0002	0820	4
						0821 / 0001	/	2
	39	AN3-4A		A	·BOLT	0821 / 0001	/	2
	42	NAS1149D0332J		A	·WASHER	0002	0820	4
-	45	MS20470AD5		A	·RIVET	0821 / 0001	/	8
	48	10589-003			·HINGE LOWER VERTICAL TOP	0002	0820	1
	51	20103-002			·HINGE LOWER VERTICAL TOP	0821 / 0001	/	1
	54	AN3-4A		A	·BOLT	0002	0820	2
	57	AN3-6A		A	·BOLT	0821 / 0001	/	2
	60	NAS1149D0332J		A	·WASHER	0002 / 0001	/	2
	63	NAS1149D0363J		A	·WASHER	0002	0820	4
	66	MS21042-3		A	·NUT	0002	0820	2
	69	AN525-10R8	@	A	·SCREW	0002 / 0001	/	2
	72	MS21042-3	@	A	·NUT	0002 / 0001	/	2
	75	NAS1149D0332J	@	A	·WASHER	0002 / 0001	/	2
-	78	MS20470AD5	@	A	·RIVET	0002 / 0001	/	AR
	81	11302-003			·HINGE LOWER VERTICAL BOTTOM	0002	0820	1
	84	20104-001			·HINGE LOWER VERTICAL BOTTOM	0821 / 0001	/	1
	87	AN3-5A		A	·BOLT	0002	0820	2
	90	AN3-6A		A	·BOLT	0821 / 0001	/	2
	93	NAS1149D0332J		A	·WASHER	0002 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-20-03 DET			AFT TIE DOWN			
					SYMBOL NOTES:			
			@		ALTERNATE INSTALLATION USES RIVET IN PLACE OF SCREW, WASHER, AND NUT.			
			#		REFER TO SB2X-55-12 WHEN SPARING FROM P/N 20101-003 TO P/N 20101-004			

Intentionally Left Blank

CHAPTER 56

WINDOWS

Intentionally Left Blank

CHAPTER 56 - WINDOWS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
56-LOEP	1	19 SEP 2017
56-LOEP	2	19 SEP 2017
56-TOC	1	19 SEP 2017
56-TOC	2	19 SEP 2017
56-10-01	1	15 DEC 2014
56-10-01	2	19 SEP 2017
56-30-01	1	15 DEC 2014
56-30-01	2	15 DEC 2014

Intentionally Left Blank

EFFECTIVITY:
All

CHAPTER 56 - WINDOWS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Fuselage Window	56-10-01
Cabin Door Window	56-30-01

Intentionally Left Blank

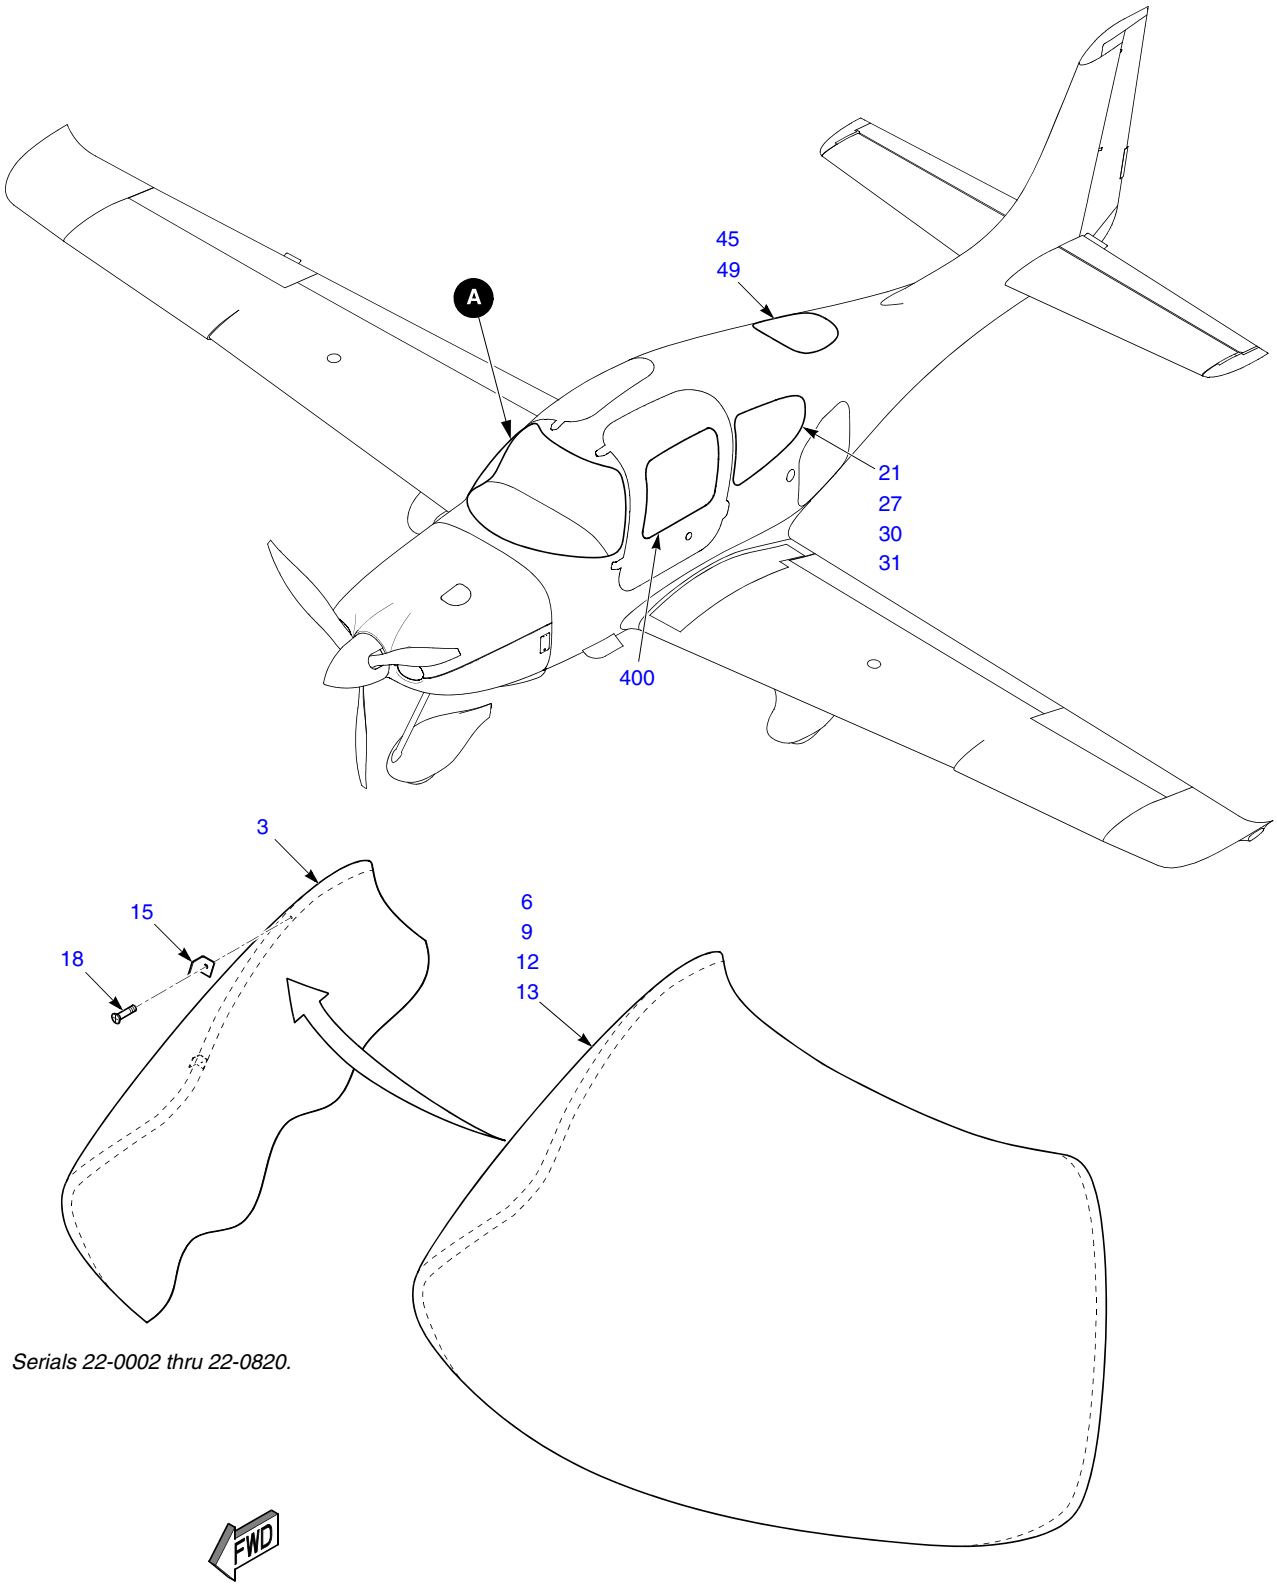

Figure-01
Fuselage Window

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			FUSELAGE WINDOW INSTALLATION	0002 / 0001	/	NP
	3	10711-002			·WINDSHIELD	0002	0820	1
	6	10711-004			·WINDSHIELD	0821	1149	1
					FOR SPARES USE P/N 12412-001			
	9	10711-005			·WINDSHIELD	1150	1487	1
					FOR SPARES USE P/N 12412-001			
	12	12412-001			·WINDSHIELD	1488 / 0001	4163 / 0962	1
	13	12412-003			·WINDSHIELD, UV	4164 / 0963	/	1
	15	10717-002		A	··CLIP	0002	0820	4
	18	MS24693-S270		A	·SCREW	0002	0820	4
	21	10714-003			·PASSENGER WINDOW, LH	0002	1487	1
					FOR SPARES USE P/N 12414-001			
-	24	10714-005	@		·PASSENGER WINDOW, GRAY, LH	1150	1487	1
					FOR SPARES USE P/N 12414-003			
	27	12414-001			·PASSENGER WINDOW, LH	1488 / 0001	4163 / 0962	1
	30	12414-003	@		·PASSENGER WINDOW, TINTED, LH	1488 / 0001	4163 / 0962	1
	31	12414-005			·PASSENGER WINDOW, UV, LH	4164 / 0963	/	1
-	33	10714-004			·PASSENGER WINDOW, RH	0002	1487	1
					FOR SPARES USE P/N 12414-002			
-	36	10714-006	@		·PASSENGER WINDOW, GRAY, RH	1150	1487	1
					FOR SPARES USE P/N 12414-004			
-	39	12414-002			·PASSENGER WINDOW, RH	1488 / 0001	4163 / 0962	1
-	42	12414-004	@		·PASSENGER WINDOW, TINTED, RH	1488 / 0001	4163 / 0962	1
-	43	12414-006			·PASSENGER WINDOW, UV, RH	4164 / 0963	/	1
	45	10716-002			·AFT WINDOW	0002 / 0001	4163 / 0962	1
-	48	10716-003	@		·AFT WINDOW, GRAY	1150 / 0001	4163 / 0962	1
	49	10716-005			·AFT WINDOW, GRAY, UV	4164 / 0963	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 56-30-01 DET			CABIN DOOR WINDOW			
					SYMBOL NOTES:			
			@		INSTALLED AS OPTIONAL EQUIPMENT.			

EFFECTIVITY:
All

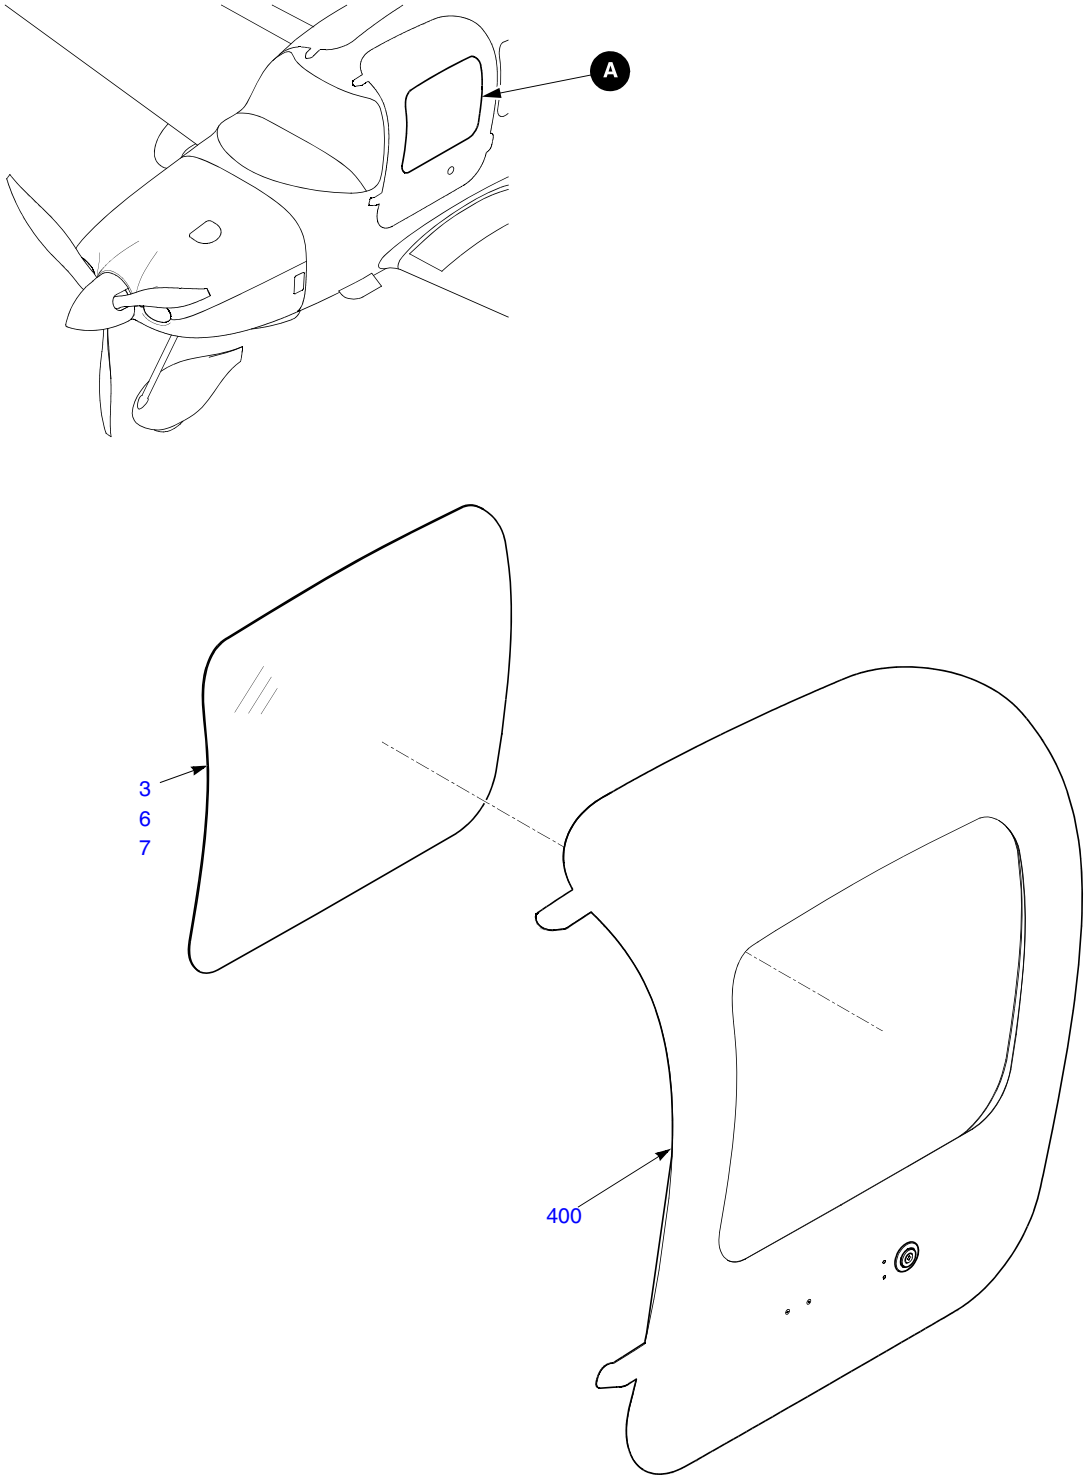

Figure-01
Cabin Door Window

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			CABIN DOOR WINDOW INSTALLATION	0002 / 0001	/	NP
	3	10712-003			·CABIN WINDOW LH	0002	1633	1
	6	10712-005			·CABIN WINDOW LH	1634 / 0001	4163 / 0963	1
	7	10712-007			·CABIN WINDOW, UV, LH	4164 / 0964	/	1
-	9	10712-004			·CABIN WINDOW RH	0002	1633	1
-	12	10712-006			·CABIN WINDOW RH	1634 / 0001	4163 / 0963	1
-	15	10712-008			·CABIN WINDOW, UV, RH	4164 / 0964	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 52-10-01 DET			CABIN DOOR			

EFFECTIVITY:
All

CHAPTER 57

WINGS

Intentionally Left Blank

CHAPTER 57 - WINGS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
57-LOEP	1	04 SEP 2018
57-LOEP	2	04 SEP 2018
57-TOC	1	04 SEP 2018
57-TOC	2	04 SEP 2018
57-10-01	1	15 DEC 2014
57-10-01	2	15 DEC 2014
57-10-01	3	15 DEC 2014
57-10-01	4	15 DEC 2014
57-10-01	5	15 DEC 2014
57-10-01	6	15 DEC 2014
57-10-02	1	15 DEC 2014
57-10-02	2	15 DEC 2014
57-20-01	1	15 DEC 2014
57-20-01	2	15 DEC 2014
57-20-01	3	15 DEC 2014
57-20-01	4	15 DEC 2014
57-20-02	1	15 DEC 2014
57-20-02	2	15 DEC 2014
57-20-02	3	01 JAN 2016
57-20-02	4	15 DEC 2014
57-30-01	1	15 DEC 2014
57-30-01	2	15 DEC 2014
57-30-01	3	15 DEC 2014
57-30-01	4	15 DEC 2014
57-30-01	5	15 DEC 2014
57-30-01	6	15 DEC 2014
57-40-01	1	04 SEP 2018
57-40-01	2	15 DEC 2014
57-40-01	3	19 SEP 2017
57-40-01	4	15 DEC 2014
57-40-01	5	19 SEP 2017
57-40-01	6	04 SEP 2018
57-40-01	7	04 SEP 2018
57-40-01	8	04 SEP 2018
57-40-01	9	04 SEP 2018
57-40-01	10	04 SEP 2018
57-40-01	11	04 SEP 2018
57-40-01	12	04 SEP 2018
57-50-01	1	15 DEC 2014
57-50-01	2	15 DEC 2014

CHAPTER 57 - WINGS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
57-50-01	3	15 DEC 2014
57-50-01	4	15 DEC 2014
57-50-01	5	15 DEC 2014
57-50-01	6	15 DEC 2014
57-50-01	7	15 DEC 2014
57-50-01	8	15 DEC 2014
57-50-02	1	15 DEC 2014
57-50-02	2	15 DEC 2014
57-50-02	3	15 DEC 2014
57-50-02	4	15 DEC 2014
57-50-02	5	15 DEC 2014
57-50-02	6	15 DEC 2014

EFFECTIVITY:
All

CHAPTER 57 - WINGS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Wing - Serials 22-0002 thru 22-2437 (1 of 2)	57-10-01
Wing - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	57-10-01
Belly Closeout Panel	57-10-02
Wing Tip - Serials 22-0002 thru 22-2437 (1 of 2)	57-20-01
Wing Tip - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	57-20-01
Stall Strip - Serials 22-0002 thru 22-2437 (1 of 2)	57-20-02
Stall Strip - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	57-20-02
Lower Wing Access Panels - Serials 22-0002 thru 22-2437 (1 of 2)	57-30-01
Lower Wing Access Panels - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	57-30-01
Wing Attach Fittings - Serials 22-0002 thru 22-2437 (1 of 5)	57-40-01
Wing Attach Fittings - Serials 22-0002 thru 22-2437 (2 of 5)	57-40-01
Wing Attach Fittings - Serials 22-2438 & subs, 22T-0001 & subs (3 of 5)	57-40-01
Wing Attach Fittings - Serials 22-2438 & subs, 22T-0001 & subs (4 of 5)	57-40-01
Wing Attach Fittings - Serials 22-2438 & subs, 22T-0001 & subs (5 of 5)	57-40-01
Flaps - Serials 22-0002 thru 22-1519 before SB2X-57-06 (1 of 3)	57-50-01
Flaps - Serials 22-1520 thru 22-2437, 22-0002 thru 22-1519 after SB2X-57-06 (2 of 3)	57-50-01
Flaps - Serials 22-2438 & subs, 22T-0001 & subs (3 of 3)	57-50-01
Ailerons - Serials 22-0002 thru 22-2437 (1 of 2)	57-50-02
Ailerons - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)	57-50-02

Intentionally Left Blank

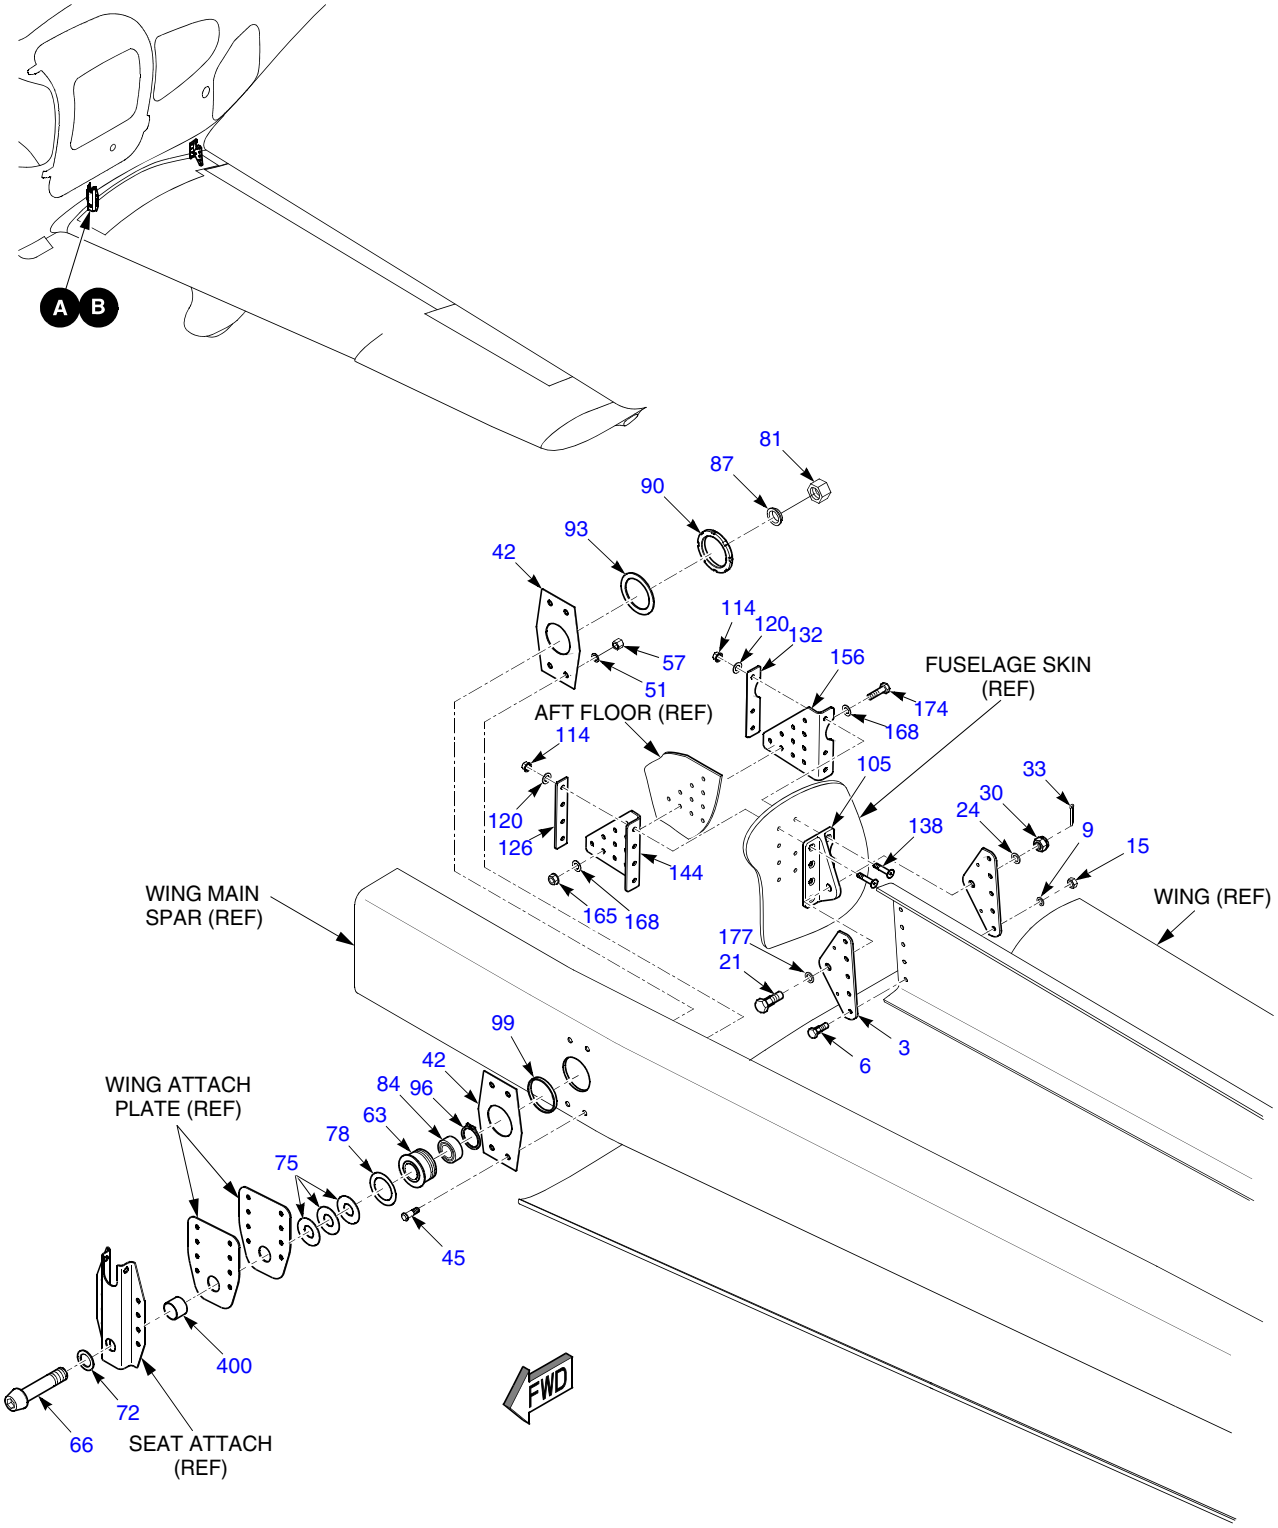

DETAIL A

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC57_1246E

Figure-01
Wing - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

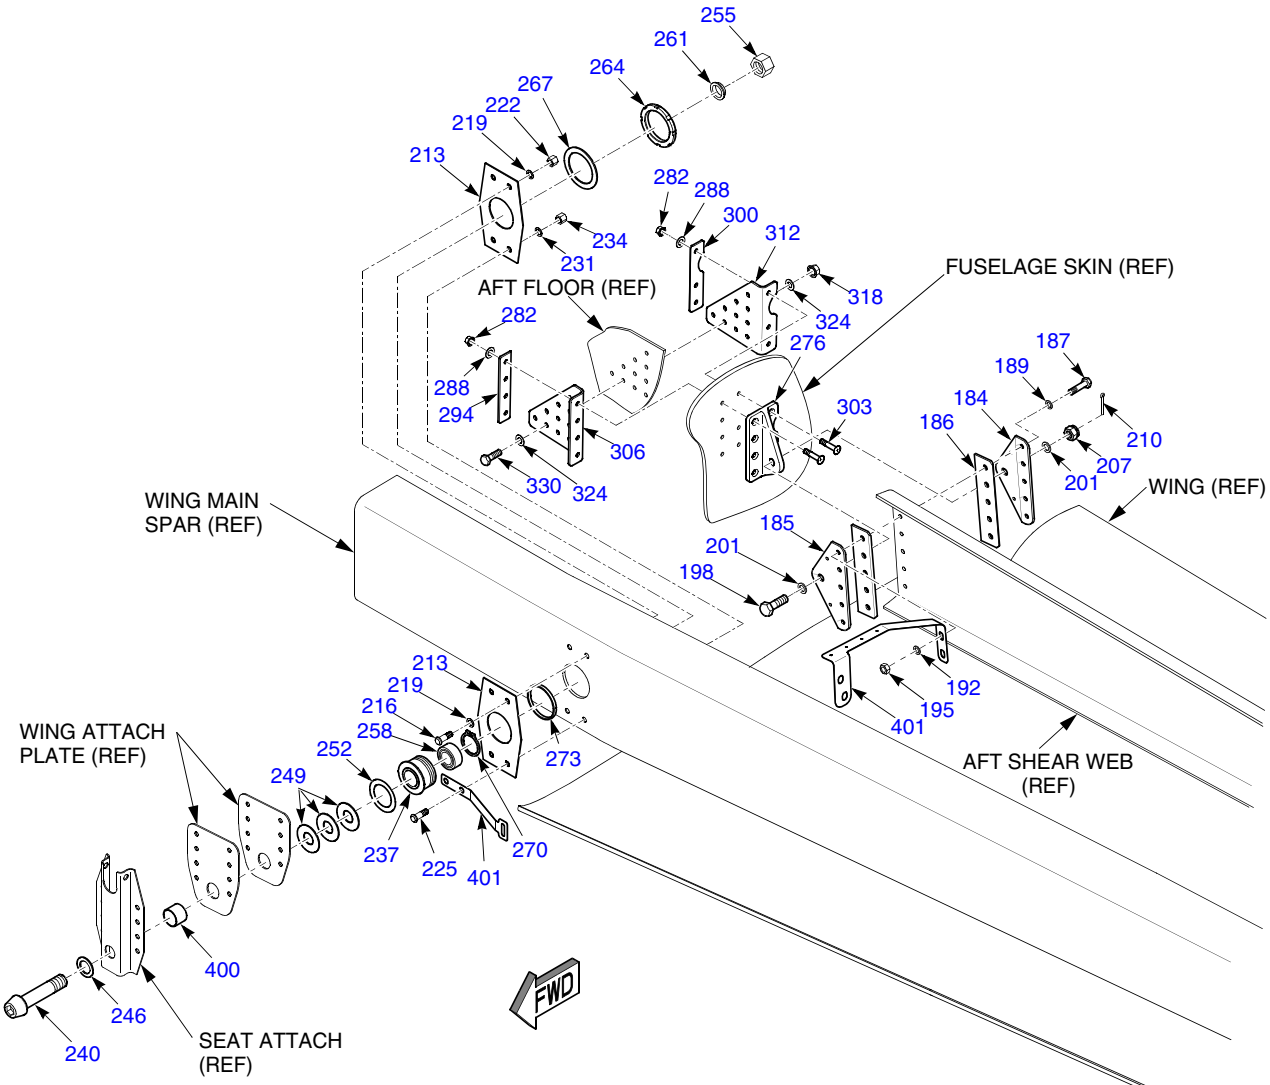

DETAIL B

SR22_PC57_1624A

Figure-01
Wing - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		WING ATTACH INSTALLATION	0002 / 0001	/	NP
	3	13437-001			·ATTACH FITTING, AFT WEB	0002	2437	2
	6	AN5-11A		A	·BOLT	0002	2437	5
	9	NAS1149D0532K		A	·WASHER	0002	2437	5
					ALTERNATE FOR P/N NAS1149D0532J			
-	12	NAS1149D0532J		A	·WASHER	0002	2437	5
					ALTERNATE FOR P/N NAS1149D0532K			
	15	MS21042-5		A	·NUT	0002	2437	5
					ALTERNATE FOR P/N MS21044N5			
-	18	MS21044N5		A	·NUT	0002	2437	5
					ALTERNATE FOR P/N MS21042-5			
	21	NAS6608D14		A	·BOLT	0002	2437	1
	24	NAS1149D0863J		A	·WASHER	0002	2437	1
					ALTERNATE FOR P/N NAS1149D0863K			
-	27	NAS1149D0863K		A	·WASHER	0002	2437	1
					ALTERNATE FOR P/N NAS1149D0863J			
	30	AN310-8		A	·NUT	0002	2437	1
	33	MS24665-285		A	·COTTER PIN	0002	2437	1
-	36	13423-105			·SHIM	0002	2437	AR
					ALTERNATE FOR P/N 11900-101			
-	39	11900-101			·SHIM	0002	2437	AR
					ALTERNATE FOR P/N 13423-105			
	42	11097-003			·PLATE, WING ATTACH, MAIN SPAR	0002	2437	2
	45	50745-010		A	·HI-LOCK PIN	0002	2437	4
					ALTERNATE FOR P/N HL20-12-10			
-	48	HL20-12-10		A	·HI-LOCK PIN	0002	2437	4
					ALTERNATE FOR P/N 50745-010			
	51	NAS1149D0632K		A	·WASHER	0002	2437	4
					ALTERNATE FOR P/N NAS1149D0632J			
-	54	NAS1149D0632J		A	·WASHER	0002	2437	4
					ALTERNATE FOR P/N NAS1149D0632K			
	57	MS21042-6		A	·NUT	0002	2437	4
					ALTERNATE FOR P/N MS21044N6			
-	60	MS21044N6		A	·NUT	0002	2437	4
					ALTERNATE FOR P/N MS21042-6			
	63	14021-001			·BEARING RETAINER	0002	2437	1
	66	MS20014-46		A	·BOLT	0002	2437	1
					ALTERNATE FOR P/N NAS6614D46			
-	69	NAS6614D46		A	·BOLT	0002	2437	1
					ALTERNATE FOR P/N MS20014-46			
	72	MS20002C14		A	·WASHER	0002	2437	1
	75	M12133/1-14P		A	·WASHER	0002	2437	3
	78	NAS1149F2632P		A	·WASHER	0002	2437	1
	81	MS21044N14		A	·NUT	0002	2437	1
	84	MS21155S14			·BEARING	0002	2437	1
	87	10586-001		A	·SPACER	0002	2437	1
	90	MS27955-23		A	·NUT	0002	2437	1
	93	NAS1149F3690P		A	·WASHER	0002	2437	1
	96	MS16625-1156		A	·SNAP RING	0002	2437	1
	99	14077-001			·RING SPACER	0002	2437	1
-	102	13722-003			·BRACKET, AFT WING ATTACH, LEFT	0002	0301	1
	105	13722-005			·BRACKET, AFT WING ATTACH, LEFT	0302	2437	1
-	108	13722-004			·BRACKET, AFT WING ATTACH, RIGHT	0002	0301	1
-	111	13722-006			·BRACKET, AFT WING ATTACH, RIGHT	0302	2437	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	114	MS21042-4		A	·NUT	0002	2437	7
					ALTERNATE FOR P/N MS21044C4			
-	117	MS21044C4			·NUT	0002	2437	7
					ALTERNATE FOR P/N MS21042-4			
	120	NAS1149D0463J		A	·WASHER	0002	2437	7
					ALTERNATE FOR P/N NAS1149D0463P			
-	123	NAS1149D0463P		A	·WASHER	0002	2437	7
					ALTERNATE FOR P/N NAS1149D0463J			
	126	11469-001		A	·RADIUS FILL	0002	2437	1
-	129	11469-002		A	·RADIUS FILL, AFT RIGHT	0002	2437	1
	132	11469-003		A	·RADIUS FILL, AFT LEFT	0002	2437	1
-	135	MS24694S104		A	·SCREW	0002	0820	7
	138	MS24694S106		A	·SCREW	0821	2437	7
-	141	11470-003			·CLIP, LEFT FRONT	0002	0097	1
	144	11470-007			·CLIP, LEFT FRONT	0098	2437	1
-	147	11470-004			·CLIP, RIGHT FRONT	0002	0097	1
-	150	11470-008			·CLIP, RIGHT FRONT	0098	2437	1
-	153	14023-001			·CLIP, LEFT REAR	0002	0097	1
	156	11470-009			·CLIP, LEFT REAR	0098	2437	1
-	159	14023-002			·CLIP, RIGHT REAR	0002	0097	1
-	162	11470-010			·CLIP, RIGHT REAR	0098	2437	1
	165	MS21042-4		A	·NUT	0002	2437	10
	168	NAS1149D0463J		A	·WASHER	0002	2437	20
-	171	AN4-10A		A	·BOLT	0002	0820	10
	174	AN4-7A		A	·BOLT	0821	2437	10
	177	NAS1149D0863J	@	A	·WASHER	0002	2437	1
					ALTERNATE FOR P/N NAS1149D0863K			
-	180	NAS1149D0863K	@	A	·WASHER	0002	2437	1
					ALTERNATE FOR P/N NAS1149D0483J			
-	183	17378-001			·ATTACH PLATE, AFT WEB	2438 / 0001	3669 / 0010	2
					FOR SPARES USE P/N 17378-002 & 17378-003			
	184	17378-002			·ATTACH PLATE, AFT, AFT WEB	3670 / 0011	/	1
	185	17378-003			·ATTACH PLATE, FWD, AFT WEB	3670 / 0011	/	1
	186	18740-001	#		·SHIM	2438 / 0001	/	AR
	187	AN5-12A		A	·BOLT	2438 / 0001	/	5
	189	NAS1149D0532K		A	·WASHER	2438 / 0001	/	5
	192	NAS1149D0563K		A	·WASHER	2438 / 0001	/	5
	195	MS21042-5		A	·NUT	2438 / 0001	/	5
	198	NAS6608D14		A	·BOLT	2438 / 0001	/	1
	201	NAS1149D0863J		A	·WASHER	2438 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0863K			
-	204	NAS1149D0863K		A	·WASHER	2438 / 0001	/	2
					ALTERNATE FOR P/N NAS1149D0863J			
	207	AN310-8		A	·NUT	2438 / 0001	/	1
	210	MS24665-285		A	·COTTER PIN	2438 / 0001	/	1
	213	16915-002			·PLATE, WING ATTACH, MAIN SPAR	2438 / 0001	/	2
	216	NAS6406U-12		A	·BOLT	2438 / 0001	/	2
	219	NAS1149F0632P		A	·WASHER	2438 / 0001	/	4
	222	MS21043-6		A	·NUT	2438 / 0001	/	2
	225	NAS6406U-12		A	·BOLT	2438 / 0001	/	2
	231	NAS1149F0632P		A	·WASHER	2438 / 0001	/	2
	234	MS21043-6		A	·NUT	2438 / 0001	/	2
	237	14021-001			·BEARING RETAINER	2438 / 0001	/	1
	240	MS20014-48		A	·BOLT	2438 / 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						ALTERNATE FOR P/N NAS6614D48			
						ALTERNATE FOR P/N MS21250-14048			
-	243	NAS6614D48		A		·BOLT	2438 / 0001	/	1
						ALTERNATE FOR P/N MS20014-48			
						ALTERNATE FOR P/N MS21250-14048			
-	244	MS21250-14048		A		·BOLT	2438 / 0001	/	1
						ALTERNATE FOR P/N MS20014-48			
						ALTERNATE FOR P/N NAS6614D48			
	246	MS20002C14		A		·WASHER	2438 / 0001	/	1
	249	M12133/1-14P		A		·WASHER	2438 / 0001	/	3
	252	NAS1149F2632P		A		·WASHER	2438 / 0001	/	1
	255	MS21044N14		A		·NUT	2438 / 0001	/	1
	258	MS14104-14				·BEARING	2438 / 0001	/	1
	261	10586-001		A		·SPACER	2438 / 0001	/	1
	264	MS172349		A		·NUT	2438 / 0001	/	1
	267	AN960-3616		A		·WASHER	2438 / 0001	/	1
	270	MS16625-1156		A		·SNAP RING	2438 / 0001	/	1
	273	16950-001				·RING SPACER	2438 / 0001	/	1
	276	13722-005				·BRACKET, AFT WING ATTACH, LEFT	2438 / 0001	/	1
-	279	13722-006				·BRACKET, AFT WING ATTACH, RIGHT	2438 / 0001	/	1
	282	MS21042-4		A		·NUT	2438 / 0001	/	7
						ALTERNATE FOR P/N MS21044C4			
-	285	MS21044C4				·NUT	2438 / 0001	/	7
						ALTERNATE FOR P/N MS21042-4			
	288	NAS1149D0463J		A		·WASHER	2438 / 0001	/	7
						ALTERNATE FOR P/N NAS1149D0463P			
-	291	NAS1149D0463P		A		·WASHER	2438 / 0001	/	7
						ALTERNATE FOR P/N NAS1149D0463J			
	294	11469-001		A		·RADIUS FILL	2438 / 0001	/	1
-	297	11469-002		A		·RADIUS FILL, AFT RIGHT	2438 / 0001	/	1
	300	11469-003		A		·RADIUS FILL, AFT LEFT	2438 / 0001	/	1
	303	MS24694S106		A		·SCREW	2438 / 0001	/	7
	306	11470-007				·CLIP, LEFT FRONT	2438 / 0001	/	1
-	309	11470-008				·CLIP, RIGHT FRONT	2438 / 0001	/	1
	312	11470-009				·CLIP, LEFT REAR	2438 / 0001	/	1
-	315	11470-010				·CLIP, RIGHT REAR	2438 / 0001	/	1
	318	MS21042-4		A		·NUT	2438 / 0001	/	10
						ALTERNATE FOR P/N MS21044C4			
-	321	MS21044C4		A		·NUT	2438 / 0001	/	10
						ALTERNATE FOR P/N MS21042-4			
	324	NAS1149D0463J		A		·WASHER	2438 / 0001	/	20
						ALTERNATE FOR P/N NAS1149F0463P			
-	327	NAS1149F0463P		A		·WASHER	2438 / 0001	/	20
						ALTERNATE FOR P/N NAS1149D0463J			
	330	AN4-7A		A		·BOLT	2438 / 0001	/	10
						REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-01 DET				SPACER			
	401	RF 51-80-01 DET				GROUND STRAP			
						SYMBOL NOTES:			
			**			SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
			@		SERIAL NUMBER 22-0002 THRU 22-0168: WASHER INSTALLATION OPTIONAL. SERIAL NUMBER 22-0169 & SUBS: WASHER INSTALLATION REQUIRED.			
			#		SERIAL NUMBER 22-2438 & SUBS: SHIM INSTALLATION OPTIONAL. FORWARD OF WIDE RIB FLANGE OR AFT OF SHEAR WEB.			

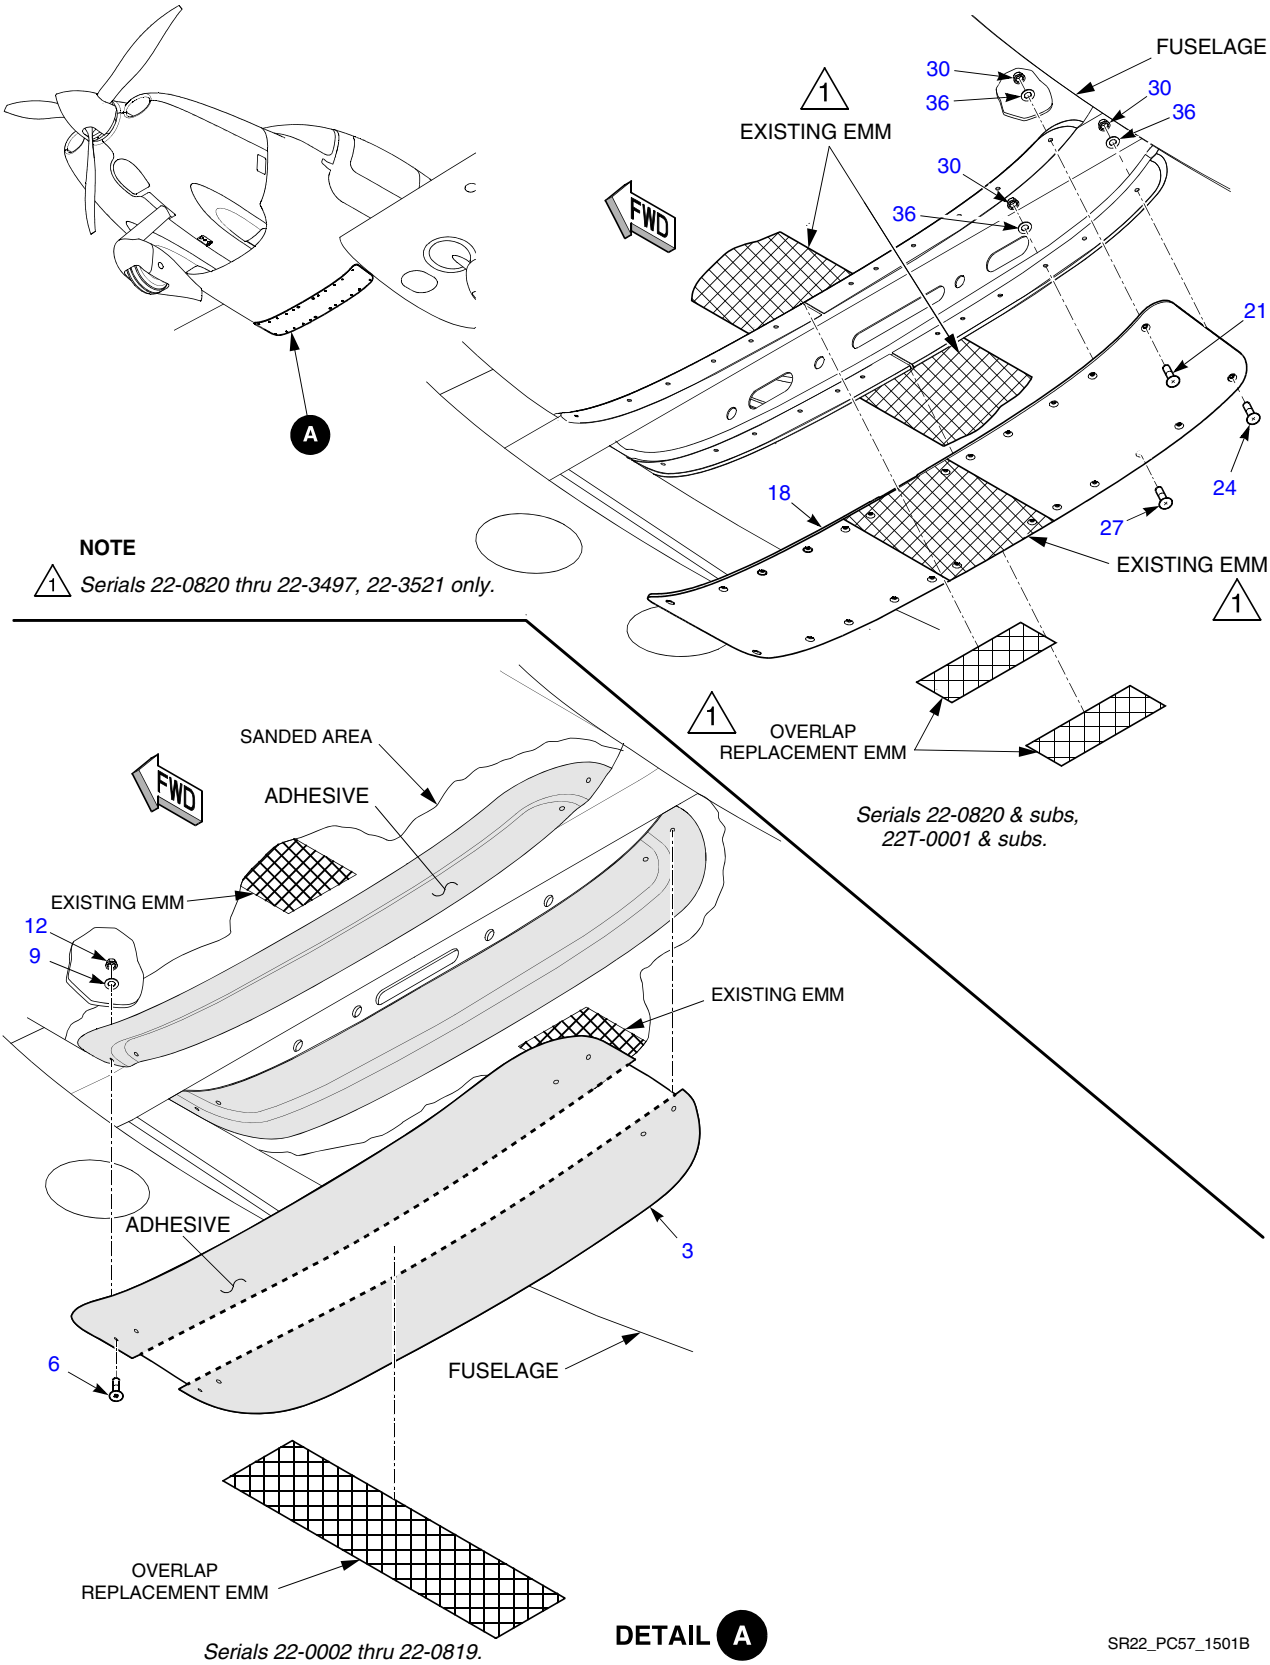

Figure-02
Belly Closeout Panel

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			BELLY CLOSEOUT PANEL INSTALLATION	0002 / 0001	/	NP
	3	10046-002	@		·CLOSEOUT PANEL	0002	0819	1
	6	MS24694S98		A	·SCREW	0002	0819	4
	9	AN960-416		A	·WASHER	0002	0819	4
	12	MS21044N4		A	·NUT	0002	0819	4
-	15	20072-001	@		·CLOSEOUT PANEL	0820	0820	1
	18	20072-002	@		·CLOSEOUT PANEL	0821 / 0001	/	1
	21	MS24694S102		A	·SCREW	0820 / 0001	/	2
	24	MS24694S101		A	·SCREW	0820 / 0001	/	2
	27	MS24694S100		A	·SCREW	0820 / 0001	/	20
	30	NAS1149D0432J		A	·WASHER	0820 / 0001	/	24
					ALTERNATE FOR P/N NAS1149F0432P			
-	33	NAS1149F0432P		A	·WASHER	0820 / 0001	/	24
					ALTERNATE FOR P/N NAS1149D0432J			
	36	MS21042-4		A	·NUT	0820 / 0001	/	24
					ALTERNATE FOR P/N MS21044N4			
-	39	MS21044N4		A	·NUT	0820 / 0001	/	24
					ALTERNATE FOR P/N MS21042-4			
					SYMBOL NOTES:			
			@		SERIALS 22-0002 THRU 22-3497, 22-3521: REPAIR EMM PER STANDARD PRACTICES (CHAPTER 51) IN MAINTE-NANCE MANUAL. REPAIR EMM PER STANDARD PRACTICES (CHAPTER 51) IN MAINTENANCE MANUAL.			

EFFECTIVITY:
All

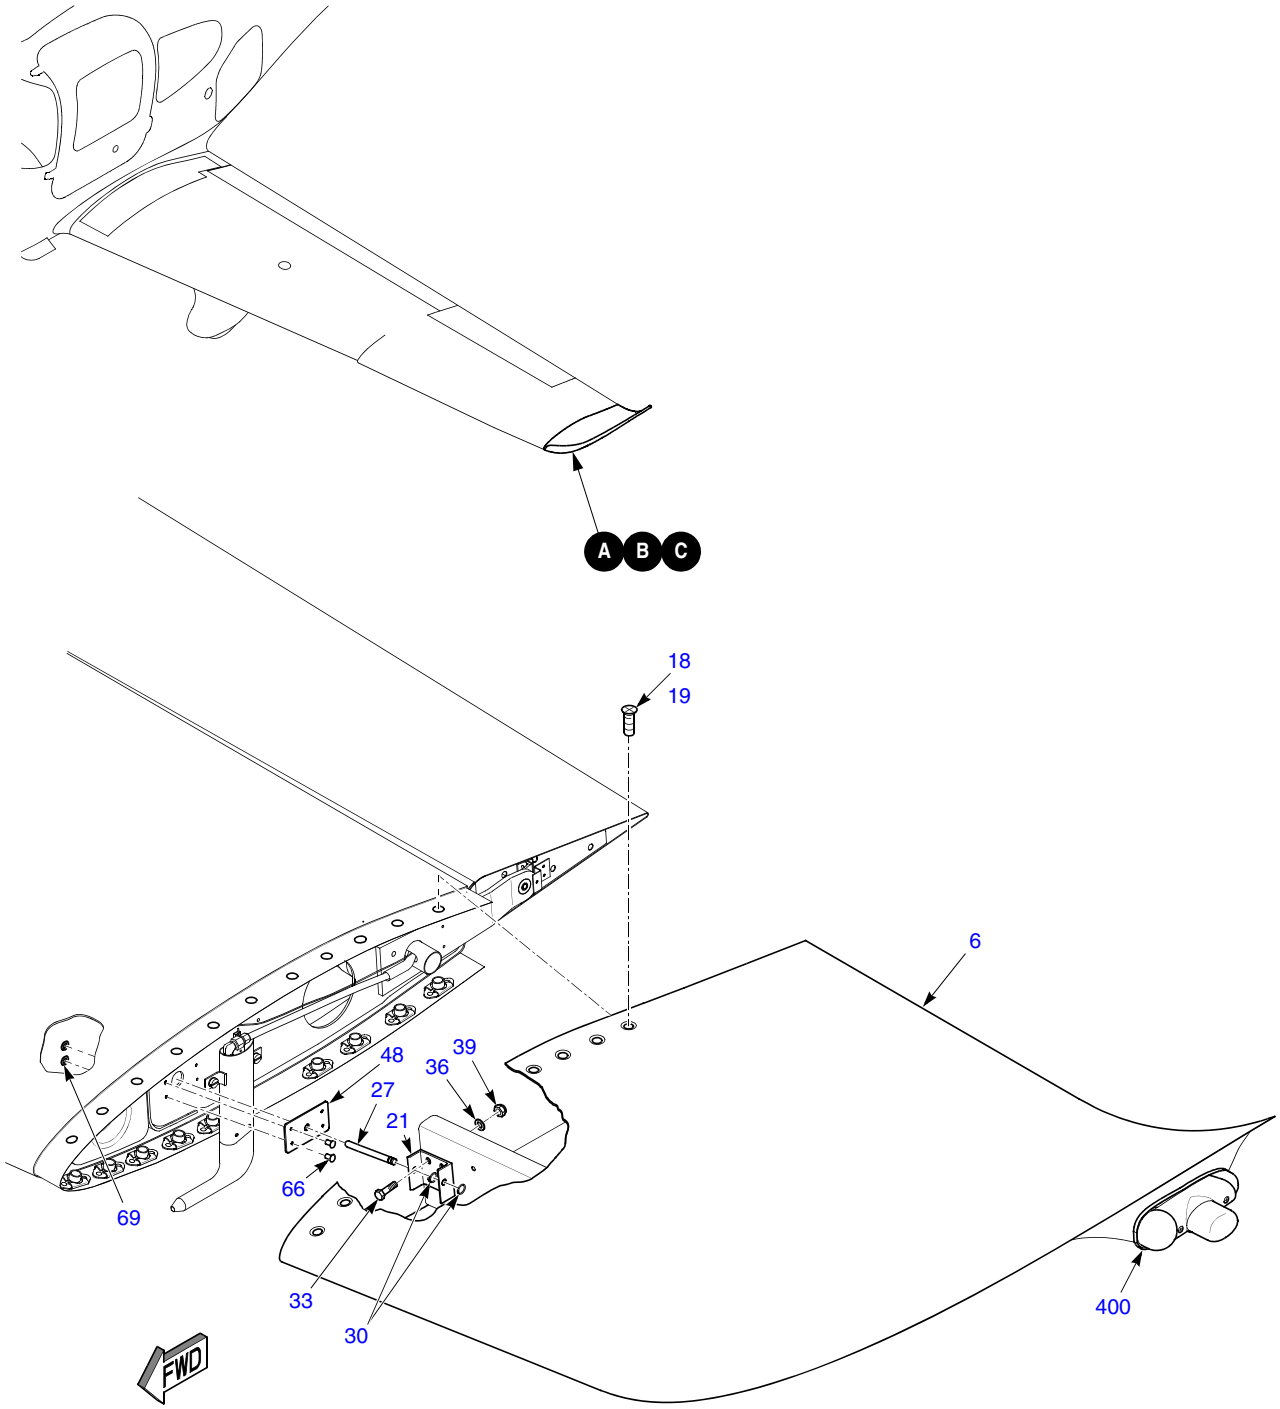

DETAIL A

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC57_1243B

Figure-01
Wing Tip - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

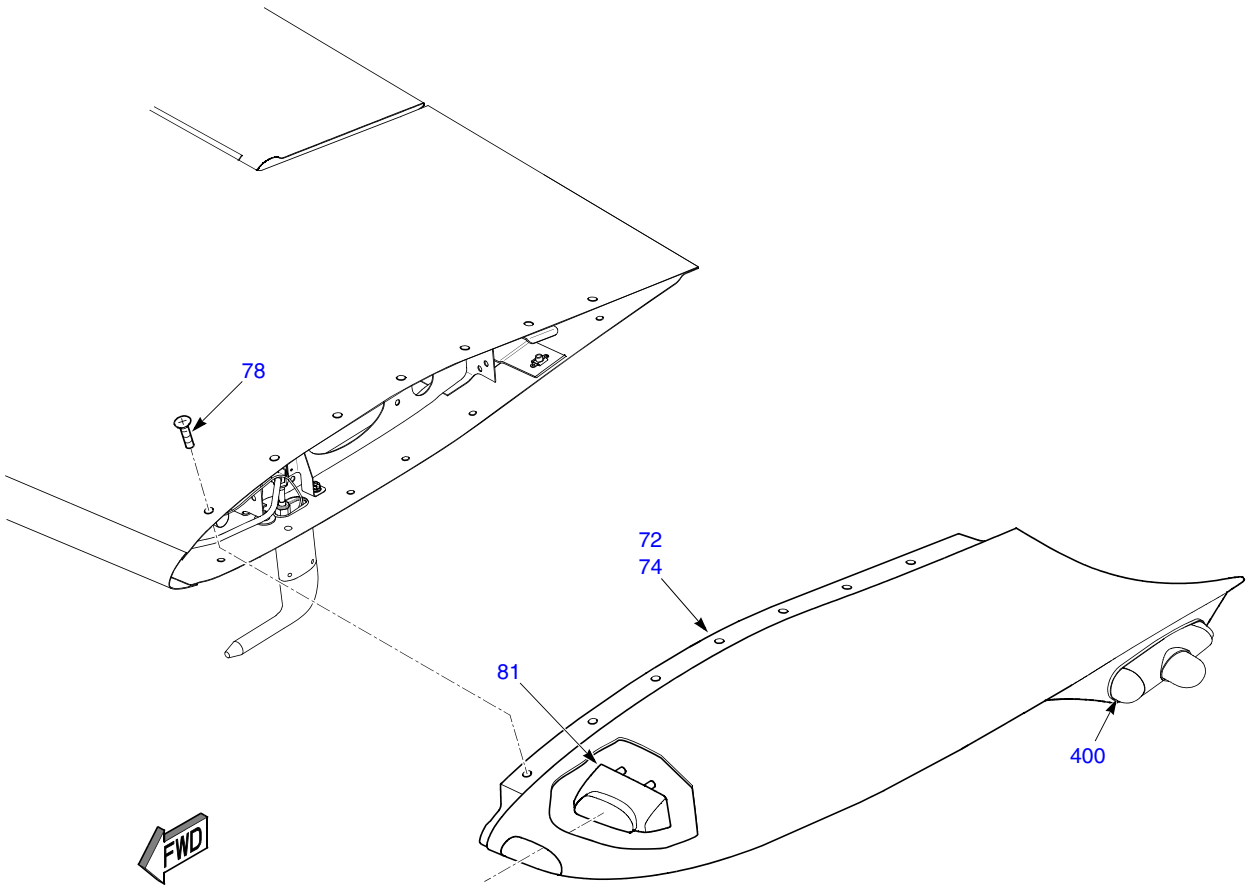

DETAIL B

Serials 22-2334, 22-2420, 22-2438 thru 22-4030, 22-4032, 22-4045, 22T-0001 thru 22T-0656, 22T-0658 thru 22T-0689.

SR22_PC57_1671B

Figure-01

Wing Tip - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		WING TIP INSTALLATION	0002 / 0001	/	NP
-	3	13380-001			·WING TIP ASSEMBLY, LH	0002	0004	1
					FOR SPARES USE P/N 13380-003			
	6	13380-003			·WING TIP ASSEMBLY, LH	0005	2437	1
-	9	13380-002			·WING TIP ASSEMBLY, RH	0002	0004	1
					FOR SPARES USE P/N 13380-004			
-	12	13380-004			·WING TIP ASSEMBLY, RH	0005	2437	1
-	15	MS24694S50		A	·SCREW	0002	0004	20
	18	MS24694S52		A	·SCREW	0005	1676	20
	19	MS24694C52		A	·SCREW	1677	2437	20
	21	13449-001			·BRACKET, SHEAR CLIP	0002	2437	1
-	24	13450-001			·SHEAR PIN, WING TIP	0002	0004	1
					FOR SPARES USE P/N 13450-002			
	27	13450-002			·SHEAR PIN, WING TIP	0005	2437	1
	30	MS16624-1025		A	·RING, RETAINING, EXTERNAL, BASIC	0002	2437	2
	33	AN4-5A		A	·BOLT	0002	2437	4
	36	AN960-416L		A	·WASHER	0002	2437	4
	39	MS21044N4		A	·NUT	0002	2437	4
-	42	13556-001			·BEARING PLATE	0002	0005	1
					BEFORE SB2X-57-03			
-	45	70054-101	@		·BEARING PLATE	0006	0434	1
					AFTER SB2X-57-03			
	48	13556-001			·BEARING PLATE	0435	2437	1
					AFTER SB2X-57-03			
-	51	NAS9301B6		A	·RIVET	0002	0005	4
					BEFORE SB2X-57-03			
-	54	NAS1149D0332J		A	·WASHER	0002	0005	4
					BEFORE SB2X-57-03			
-	57	AN3-6	@	A	·BOLT	0006	0434	4
					AFTER SB2X-57-03			
-	60	NAS1149F0332P	@	A	·WASHER	0006	0434	4
					AFTER SB2X-57-03			
-	63	MS21044N3	@	A	·NUT	0006	0434	4
					AFTER SB2X-57-03			
	66	NAS9301B6		A	·RIVET	0435	2437	4
					AFTER SB2X-57-03			
	69	NAS1149D0332J		A	·WASHER	0435	2437	4
					AFTER SB2X-57-03			
	72	18317-001			·WING TIP ASSEMBLY, LH	2438 / 0001	/	1
-	73	18317-005	#		·WING TIP ASSEMBLY, LH	/ 0079	/ 0188	1
					FOR SPARES USE P/N 18317-007			
	74	18317-007	$		·WING TIP ASSEMBLY, LH	3828 / 0268	/	1
-	75	18317-002			·WING TIP ASSEMBLY, RH	2438 / 0001	/	1
-	76	18317-006	#		·WING TIP ASSEMBLY, RH	/ 0079	/ 0188	1
					FOR SPARES USE P/N 18317-008			
-	77	18317-008	$		·WING TIP ASSEMBLY, RH	3828 / 0268	/	1
	78	MS24694S50		A	·SCREW	2438 / 0001	/	14
	81	17385-001			·LENS, LH	2438 / 0001	/	1
-	84	17385-002			·LENS, RH	2438 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 33-40-02 DET			ANTI-COLLISION LIGHT ASSY			
					SYMBOL NOTES:			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22T-0251; REFER TO 22T-0268 FOR PART IDENTIFICATION.			
			@		SERIAL NUMBER 22-0009, 22-0011, 22-0018, 22-0029 NOT AFFECTED BY SB2X-57-03.			
			#		INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 THRU 22T-0188 AS OPTIONAL EQUIPMENT.			
			$		INSTALLED ON AIRCRAFT W/ LED.			

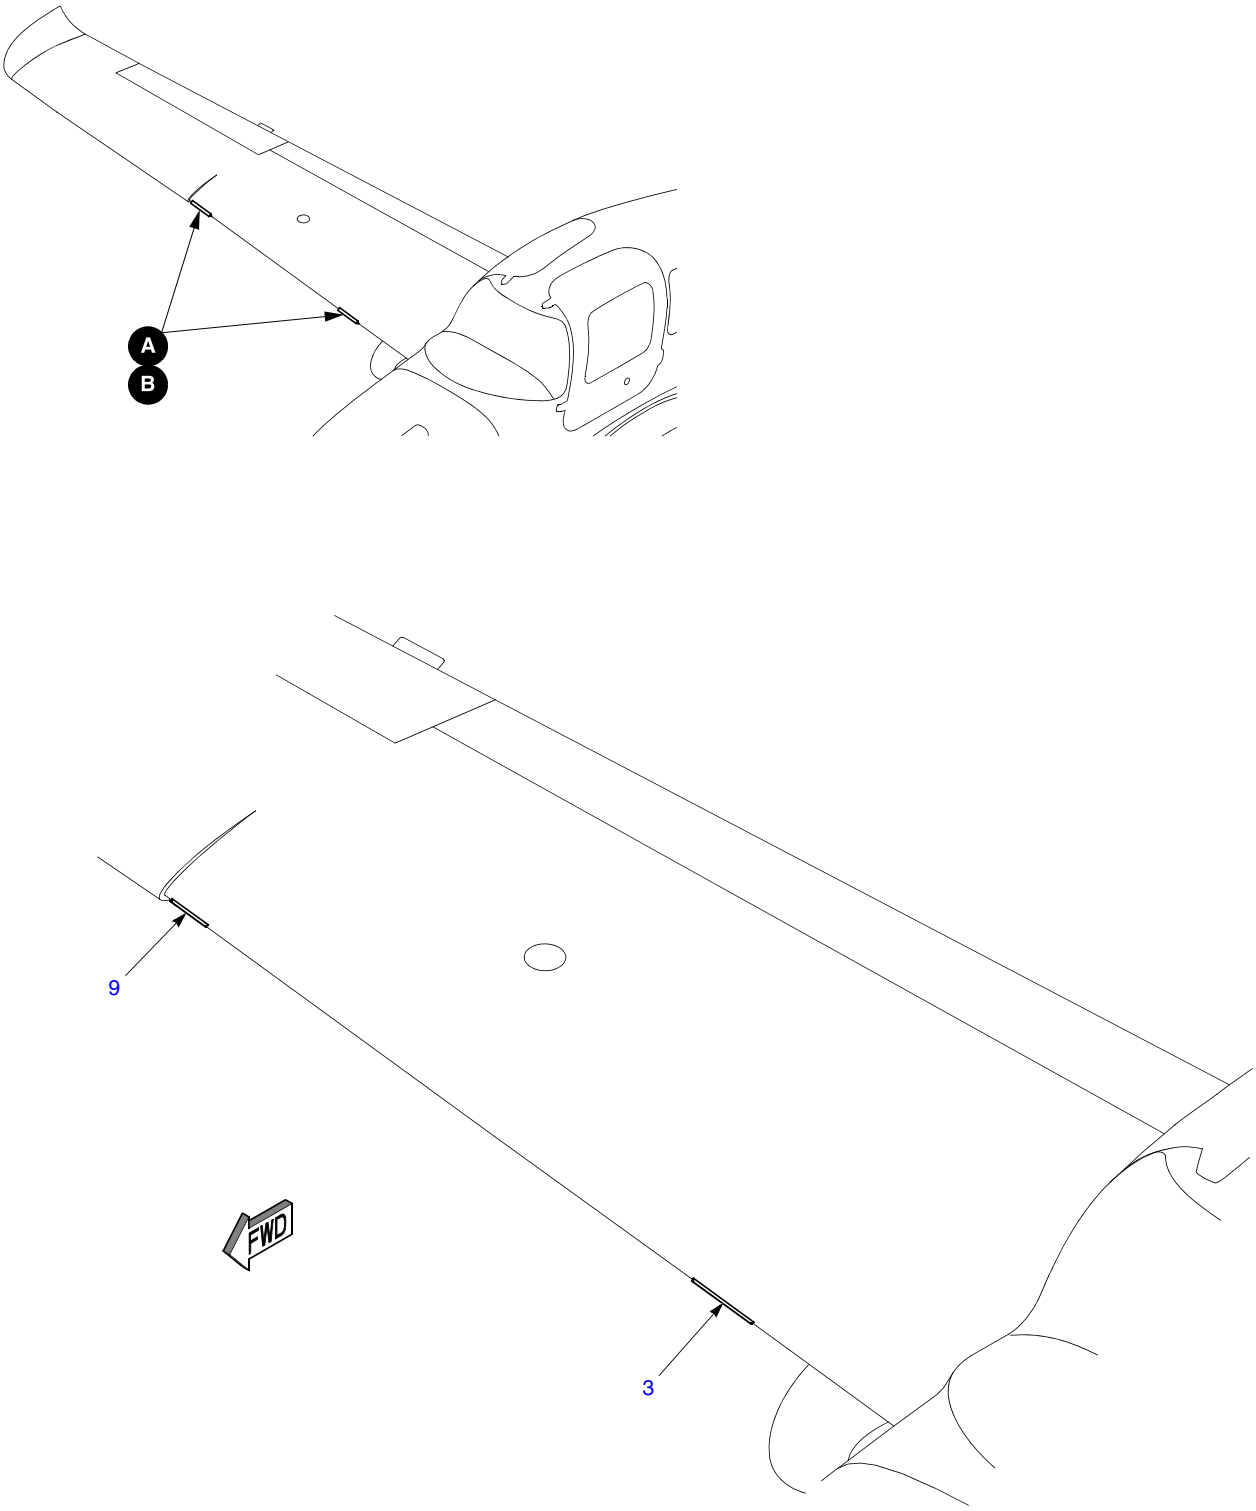

DETAIL A

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

SR22_PC57_1682

Figure-02

Stall Strip - Serials 22-0002 thru 22-2437 (1 of 2)

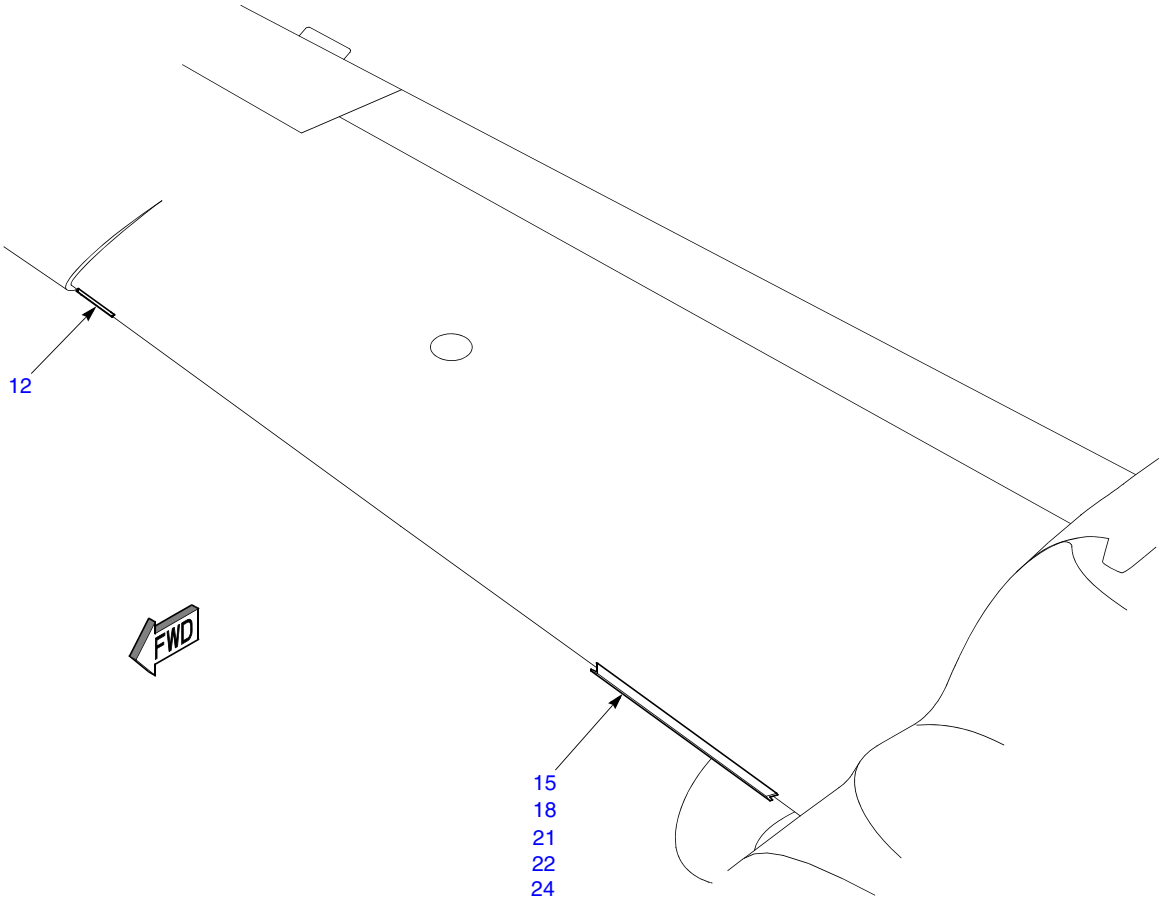

DETAIL B

SR22_PC57_1687

Figure-02

Stall Strip - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		STALL STRIP INSTALLATION	0002 / 0001	/	NP
	3	14118-001			·STALL STRIP, INBOARD, W/O ICE PROTECTION	0002	2437	2
-	6	14118-002			·STALL STRIP, INBOARD, W/ ICE PROTECTION, BASIC	0334	2437	2
	9	14119-001			·STALL STRIP, OUTBOARD, W/O ICE PROTECTION	0002	2437	2
	12	14119-002			·STALL STRIP, OUTBOARD	0334 / 0001	/	2
	15	18479-001			·STALL STRIP, INBOARD, W/O ICE PROTECTION	2438 / 0001	/	2
	18	18691-001			·STALL STRIP, INBOARD, W/ ICE PROTECTION	2438	3402	2
					FOR SPARES USE P/N 18691-003			
	21	18691-002			·STALL STRIP, INBOARD, W/ ICE PROTECTION	3403	3530	2
					FOR SPARES USE P/N 18691-004			
	22	186191-003			·STALL STRIP, INBOARD, W/ ICE PROTECTION	2438	3402	2
	24	18691-004			·STALL STRIP, INBOARD, W/ ICE PROTECTION	3531 / 0001	/	2
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-3310, 22-3326, 22-3342; REFER TO 22-3403 FOR PART IDENTIFICATION.			

Intentionally Left Blank

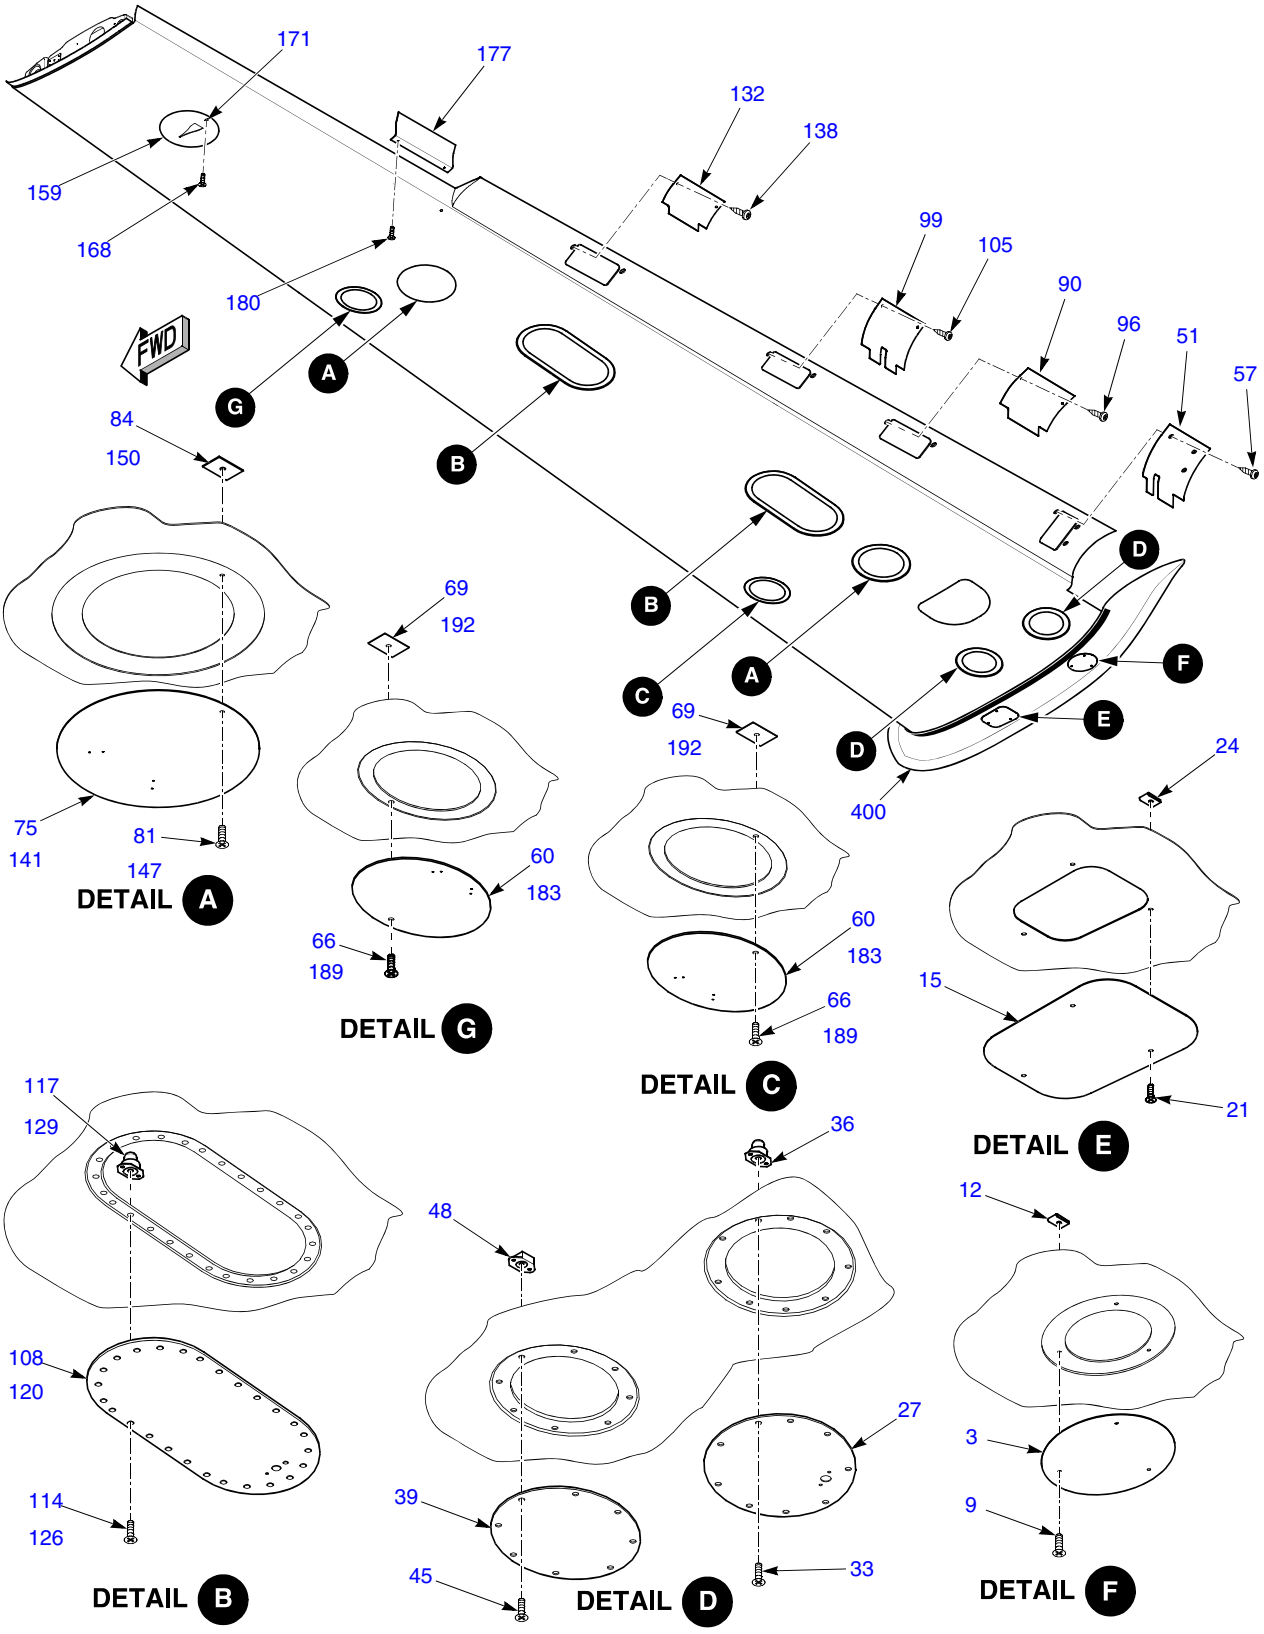

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

Figure-01

Lower Wing Access Panels - Serials 22-0002 thru 22-2437 (1 of 2)

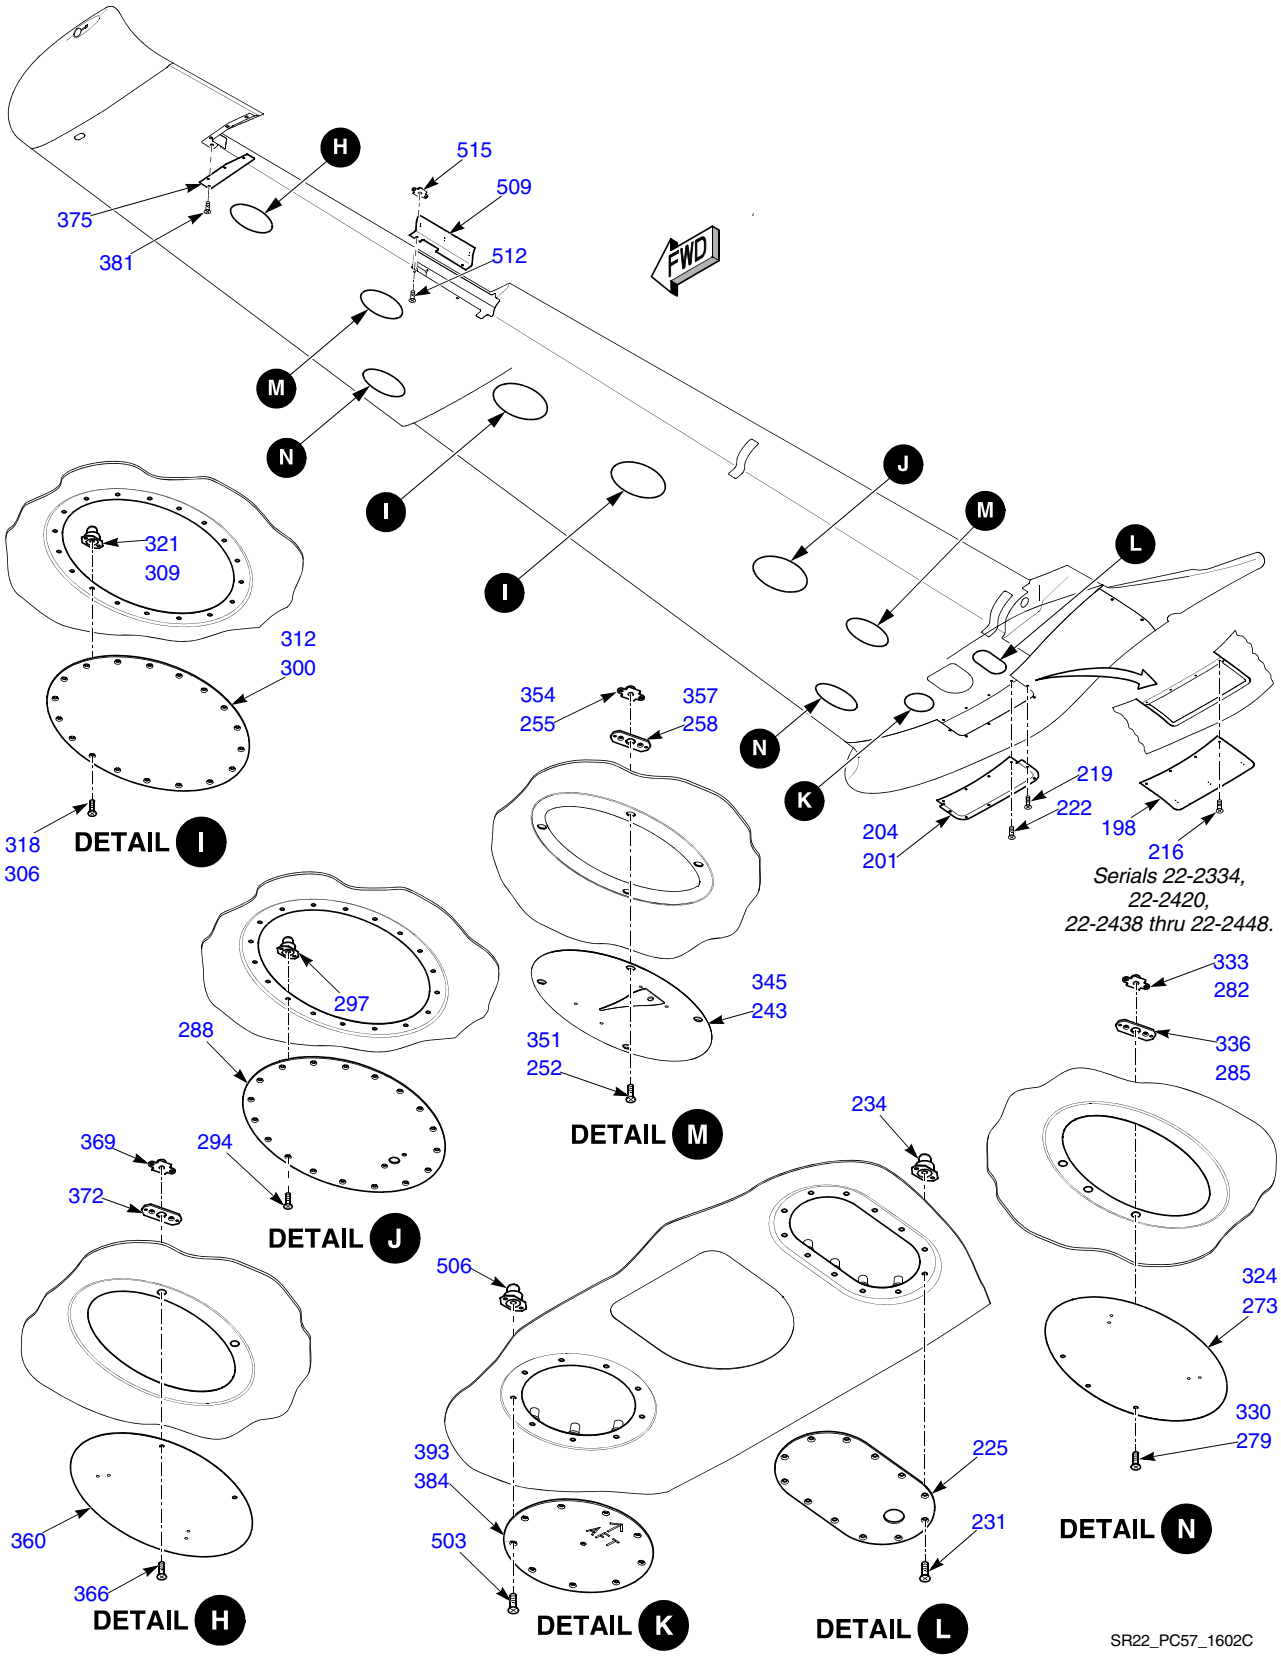

Figure-01

Lower Wing Access Panels - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		LOWER WING ACCESS PANELS	0002 / 0001	/	NP
	3	12415-001			·ACCESS PANEL, LW1	0002	2437	1
-	6	12415-001			·ACCESS PANEL, RW1	0002	2437	1
	9	MS-21207-8-6		A	·SCREW	0002	2437	3
	12	A-1932-82-1		A	·NUT	0002	2437	3
	15	12416-002			·ACCESS PANEL, LW2	0002	2437	1
-	18	12416-001			·ACCESS PANEL, RW2	0002	2437	1
	21	MS-21207-8-6		A	·SCREW	0002	2437	3
	24	A-1932-8Z-1		A	·NUT	0002	2437	3
	27	13405-005			·ACCESS PANEL, LW3	0002	2437	1
-	30	13405-006			·ACCESS PANEL, RW3	0002	2437	1
	33	MS24694S8		A	·SCREW	0002	2437	9
	36	NAS1473A08		A	·NUTPLATE	0002	2437	9
	39	13966-001			·ACCESS PANEL, LW4	0002	2437	1
-	42	13966-001			·ACCESS PANEL, RW4	0002	2437	1
	45	MS24694S7		A	·SCREW	0002	2437	8
	48	MS21059L08		A	·NUTPLATE	0002	2437	8
	51	11652-003			·ACCESS PANEL, LW5	0002	2437	1
-	54	11652-004			·ACCESS PANEL, RW5	0002	2437	1
	57	MS21207-8-6		A	·SCREW	0002	2437	3
	60	13034-001			·ACCESS PANEL, LW6	0002	2437	1
-	63	13034-001			·ACCESS PANEL, RW6	0002	2437	1
	66	MS24694S7		A	·SCREW	0002	2437	1
	69	13404-101		A	·NUTPLATE	0002	2437	1
					ALTERNATE FOR P/N 11746-101			
-	72	11746-101		A	·NUTPLATE	0002	2437	1
					ALTERNATE FOR P/N 13404-101			
	75	11990-001			·ACCESS PANEL, LW7	0002	2437	1
-	78	11990-001			·ACCESS PANEL, RW7	0002	2437	1
	81	MS24694S7		A	·SCREW	0002	2437	1
	84	13404-101		A	·NUTPLATE	0002	2437	1
					ALTERNATE FOR P/N 11746-101			
-	87	11746-101		A	·NUTPLATE	0002	2437	1
					ALTERNATE FOR P/N 13404-101			
	90	12185-002			·ACCESS PANEL, LW8	0002	2437	1
-	93	12185-002			·ACCESS PANEL, RW8	0002	2437	1
	96	MS21207-8-6		A	·SCREW	0002	2437	2
	99	11654-003			·ACCESS PANEL, LW9	0002	2437	1
-	102	11654-003			·ACCESS PANEL, RW9	0002	2437	1
	105	MS21207-8-6		A	·SCREW	0002	2437	2
	108	13983-002			·ACCESS PANEL, LW10	0002	2437	1
-	111	13983-002			·ACCESS PANEL, RW10	0002	2437	1
	114	MS24694S7			·SCREW	0002	2437	26
	117	NAS1473A08			·NUTPLATE	0002	2437	26
	120	13983-001			·ACCESS PANEL, LW11	0002	2437	1
-	123	13983-001			·ACCESS PANEL, RW11	0002	2437	1
	126	MS24694S7			·SCREW	0002	2437	26
	129	NAS1473A08			·NUTPLATE	0002	2437	26
	132	11655-002			·ACCESS PANEL, LW12	0002	2437	1
-	135	11655-002			·ACCESS PANEL, RW12	0002	2437	1
	138	MS21207-8-6		A	·SCREW	0002	2437	2
	141	11990-001			·ACCESS PANEL, LW13	0002	2437	1
-	144	11990-001			·ACCESS PANEL, RW13	0002	2437	1
	147	MS24694S7		A	·SCREW	0002	2437	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	150	13404-101		A		·NUTPLATE	0002	2437	1
						ALTERNATE FOR P/N 11746-101			
-	153	11746-101		A		·NUTPLATE	0002	2437	1
						ALTERNATE FOR P/N 13404-101			
-	156	13422-001				·ACCESS PANEL, LW14	0002	0447	1
						ALTERNATE FOR P/N 13422-002			
	159	13422-002				·ACCESS PANEL, LW14	0448	2437	1
						ALTERNATE FOR P/N 13422-001			
-	162	13422-001				·ACCESS PANEL, RW14	0002	0447	1
						ALTERNATE FOR P/N 13422-002			
-	165	13422-002				·ACCESS PANEL, RW14	0448	2437	1
						ALTERNATE FOR P/N 13422-001			
	168	MS24694S7		A		·SCREW	0002	2437	1
	171	13404-101		A		·NUTPLATE	0002	2437	1
						ALTERNATE FOR P/N 11746-101			
-	174	11746-101		A		·NUTPLATE	0002	2437	1
						ALTERNATE FOR P/N 13404-101			
	177	12338-007				·ACCESS PANEL, LW15	0002	2437	1
	180	MS24694S5		A		·SCREW	0002	2437	2
	183	13034-001				·ACCESS PANEL, LW16, W/ ICE PROTECTION, BASIC	0334	2437	1
-	186	13034-001				·ACCESS PANEL, RW16, W/ ICE PROTECTION, BASIC	0334	2437	1
	189	MS24694S7		A		·SCREW, W/ ICE PROTECTION, BASIC	0334	2437	1
	192	13404-101		A		·NUTPLATE, W/ ICE PROTECTION, BASIC	0334	2437	1
						ALTERNATE FOR P/N 11746-101			
-	195	11746-101		A		·NUTPLATE, W/ ICE PROTECTION, BASIC	0334	2437	1
						ALTERNATE FOR P/N 13404-101			
	198	18319-001				·ACCESS PANEL, LW1	2438	2448	1
	201	18585-001				·ACCESS PANEL, LW1	2449	3299	1
	204	18585-005				·ACCESS PANEL, LW1	3300 / 0001	/	1
-	207	18319-002				·ACCESS PANEL, RW1	2438	2448	1
-	210	18585-002				·ACCESS PANEL, RW1	2449	3299	1
-	213	18585-006				·ACCESS PANEL, RW1	3300 / 0001	/	1
	216	AN525-832R7		A		·SCREW	2438	2448	4
	219	AN525-832R7		A		·SCREW	2449	3299	7
							3300 / 0001	/	6
	222	AN525-832R11		A		·SCREW	3300 / 0001	/	4
	225	18358-001				·ACCESS PANEL, LW3	2438 / 0001	/	1
-	228	18358-001				·ACCESS PANEL, RW3	2438 / 0001	/	1
	231	MS24694S7		A		·SCREW	2438 / 0001	/	12
	234	NAS1473A08		A		·NUTPLATE	2438 / 0001	/	12
-	237	16922-002				·ACCESS PANEL, LW5, W/ ICE PROTECTION	2438	2829	1
-	240	18482-001				·ACCESS PANEL, LW5, W/O ICE PROTECTION	2438	2829	1
	243	19003-002				·ACCESS PANEL, LW5, W/ ICE PROTECTION	2830 / 0001	/	1
-	246	19003-004				·ACCESS PANEL, LW5, W/O ICE PROTECTION	2830 / 0001	/	1
-	249	19003-002				·ACCESS PANEL, LW5, FIKI, RW5	3403 / 0001	/	1
	252	MS24694S6		A		·SCREW	2438	2829	2
							2830 / 0001	/	4
	255	MS21059L08		A		·NUTPLATE	2438	2829	2
							2830 / 0001	/	4
	258	18033-101		A		·BACKING PLATE, NUTPLATE	2438	2829	2
-	261	18482-001				·ACCESS PANEL, RW5, NON-FIKI	2438 / 0001	/	1
-	264	MS24694S6		A		·SCREW	2438 / 0001	/	2
-	267	MS21059L08		A		·NUTPLATE	2438 / 0001	/	2
-	270	18033-101		A		·BACKING PLATE, NUTPLATE	2438 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	273	18475-001			·ACCESS PANEL, LW4	2438 / 0001	/	1
-	276	18475-001			·ACCESS PANEL, RW4	2438 / 0001	/	1
	279	MS24694S6		A	·SCREW	2438 / 0001	/	3
	282	MS21059L08		A	·NUTPLATE	2438 / 0001	/	3
	285	18033-101		A	·BACKING PLATE, NUTPLATE	2438 / 0001	/	3
	288	16921-002			·ACCESS PANEL, LW6	2438 / 0001	/	1
-	291	16921-002			·ACCESS PANEL, RW6	2438 / 0001	/	1
	294	MS24694S7		A	·SCREW	2438 / 0001	/	18
	297	NAS1473A08		A	·NUTPLATE	2438 / 0001	/	18
	300	16919-002			·ACCESS PANEL, LW7	2438 / 0001	/	1
-	303	16919-002			·ACCESS PANEL, RW7	2438 / 0001	/	1
	306	MS24694S7		A	·SCREW	2438 / 0001	/	18
	309	NAS1473A08		A	·NUTPLATE	2438 / 0001	/	18
	312	16919-002			·ACCESS PANEL, LW8	2438 / 0001	/	1
-	315	16919-002			·ACCESS PANEL, RW8	2438 / 0001	/	1
	318	MS24694S7		A	·SCREW	2438 / 0001	/	18
	321	NAS1473A08		A	·NUTPLATE	2438 / 0001	/	18
	324	18475-001			·ACCESS PANEL, LW9	2438 / 0001	/	1
-	327	18475-001			·ACCESS PANEL, RW9	2438 / 0001	/	1
	330	MS24694S6		A	·SCREW	2438 / 0001	/	3
	333	MS21059L08		A	·NUTPLATE	2438 / 0001	/	3
	336	18033-101		A	·BACKING PLATE, NUTPLATE	2438 / 0001	/	3
-	339	16922-002			·ACCESS PANEL, LW10	2438	2829	1
-	342	16922-002			·ACCESS PANEL, RW10	2438	2829	1
	345	19003-002			·ACCESS PANEL, LW10	2830 / 0001	/	1
-	348	19003-001			·ACCESS PANEL, RW10	2830 / 0001	/	1
	351	MS24694S6		A	·SCREW	2438	2829	2
						2830 / 0001	/	4
	354	MS21059L08		A	·NUTPLATE	2438	2829	2
						2830 / 0001	/	4
	357	18033-101		A	·BACKING PLATE, NUTPLATE	2438	2829	2
						2830 / 0001	/	4
	360	18482-001			·ACCESS PANEL, LW12	2438 / 0001	/	1
-	363	18482-001			·ACCESS PANEL, RW12	2438 / 0001	/	1
	366	MS24694S6		A	·SCREW	2438 / 0001	/	2
	369	MS21059L08		A	·NUTPLATE	2438 / 0001	/	2
	372	18033-101		A	·BACKING PLATE, NUTPLATE	2438 / 0001	/	2
	375	16923-001			·ACCESS PANEL, LW13	2438 / 0001	/	1
-	378	16923-002			·ACCESS PANEL, RW13	2438 / 0001	/	1
	381	MS24694S5		A	·SCREW	2438 / 0001	/	4
	384	18477-002			·ACCESS PANEL, LW2, W/O ICE PROTECTION	2438	3024	1
-	387	18477-001			·ACCESS PANEL, LW2, W/ ICE PROTECTION	2438	3024	1
-	390	18477-002			·ACCESS PANEL, LW2, W/O ICE PROTECTION	2585	3024	1
	393	18940-005			·ACCESS PANEL, LW2, W/O PROTECTION	3025 / 0001	/	1
-	396	18940-001			·ACCESS PANEL, LW2, W/ ICE PROTECTION	3025 / 0001	/	1
-	399	18940-006			·ACCESS PANEL, RW2, W/O FIKI	3025 / 0001	/	1
-	500	18940-002			·ACCESS PANEL, RW2, W/ FIKI	3403 / 0001	/	1
	503	MS24694S7		A	·SCREW	2438 / 0001	/	9
	506	NAS1473A08		A	·NUTPLATE	2438 / 0001	/	9
	509	18499-001			·ACCESS PANEL, LW11	2438 / 0001	/	1
	512	MS24694S5		A	·SCREW	2438 / 0001	/	2
	515	MS21059L08		A	·NUTPLATE	2438 / 0001	/	2

REFERENCED ITEMS NOT PRT OF ASSY/INSTL

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
400	RF 53-50-01 DET				WING ROOT FAIRING			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334 AND 22-2420; REFER TO 22-2438 FOR PRT IDENTIFICATION.			
					2) SERIAL NUMBER 22-3003, 22-3310, 22-3326; REFER TO 22-3403 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

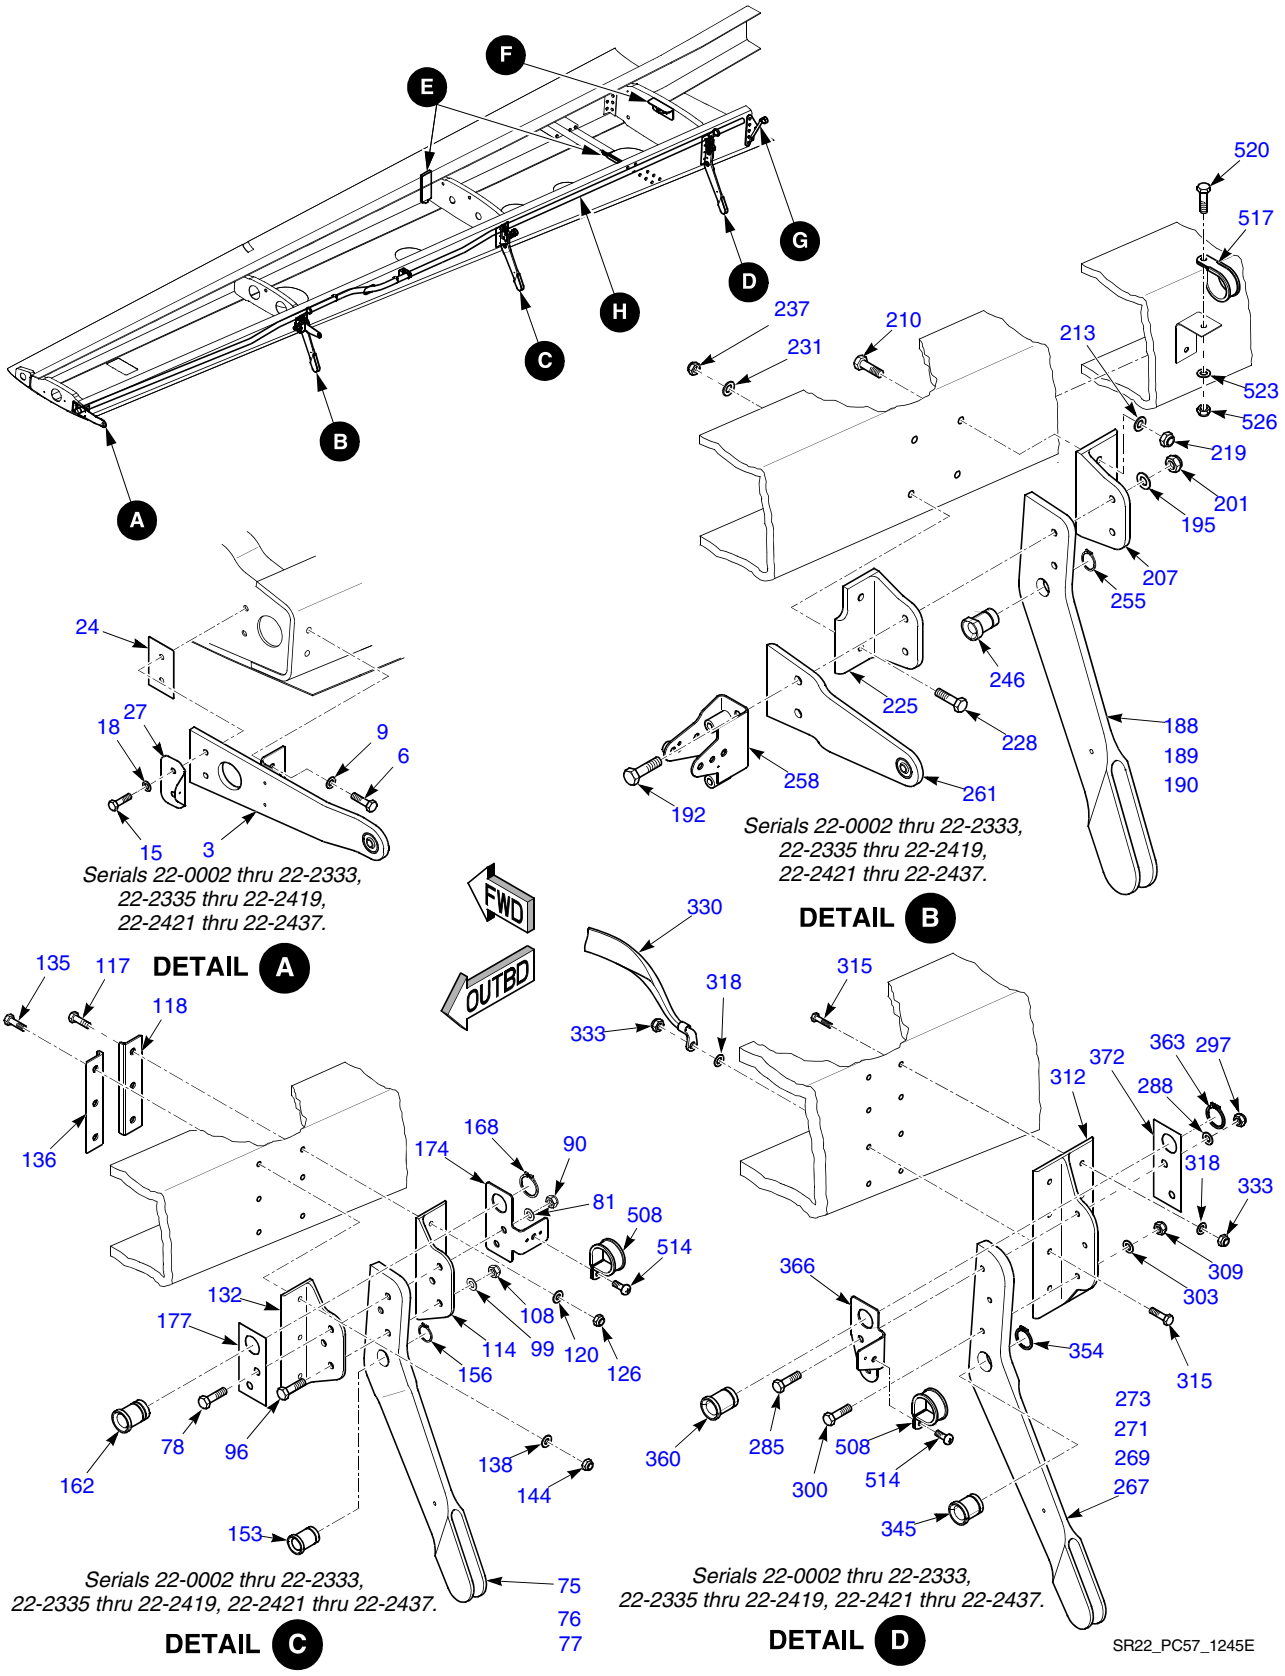

Figure-01

Wing Attach Fittings - Serials 22-0002 thru 22-2437 (1 of 5)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

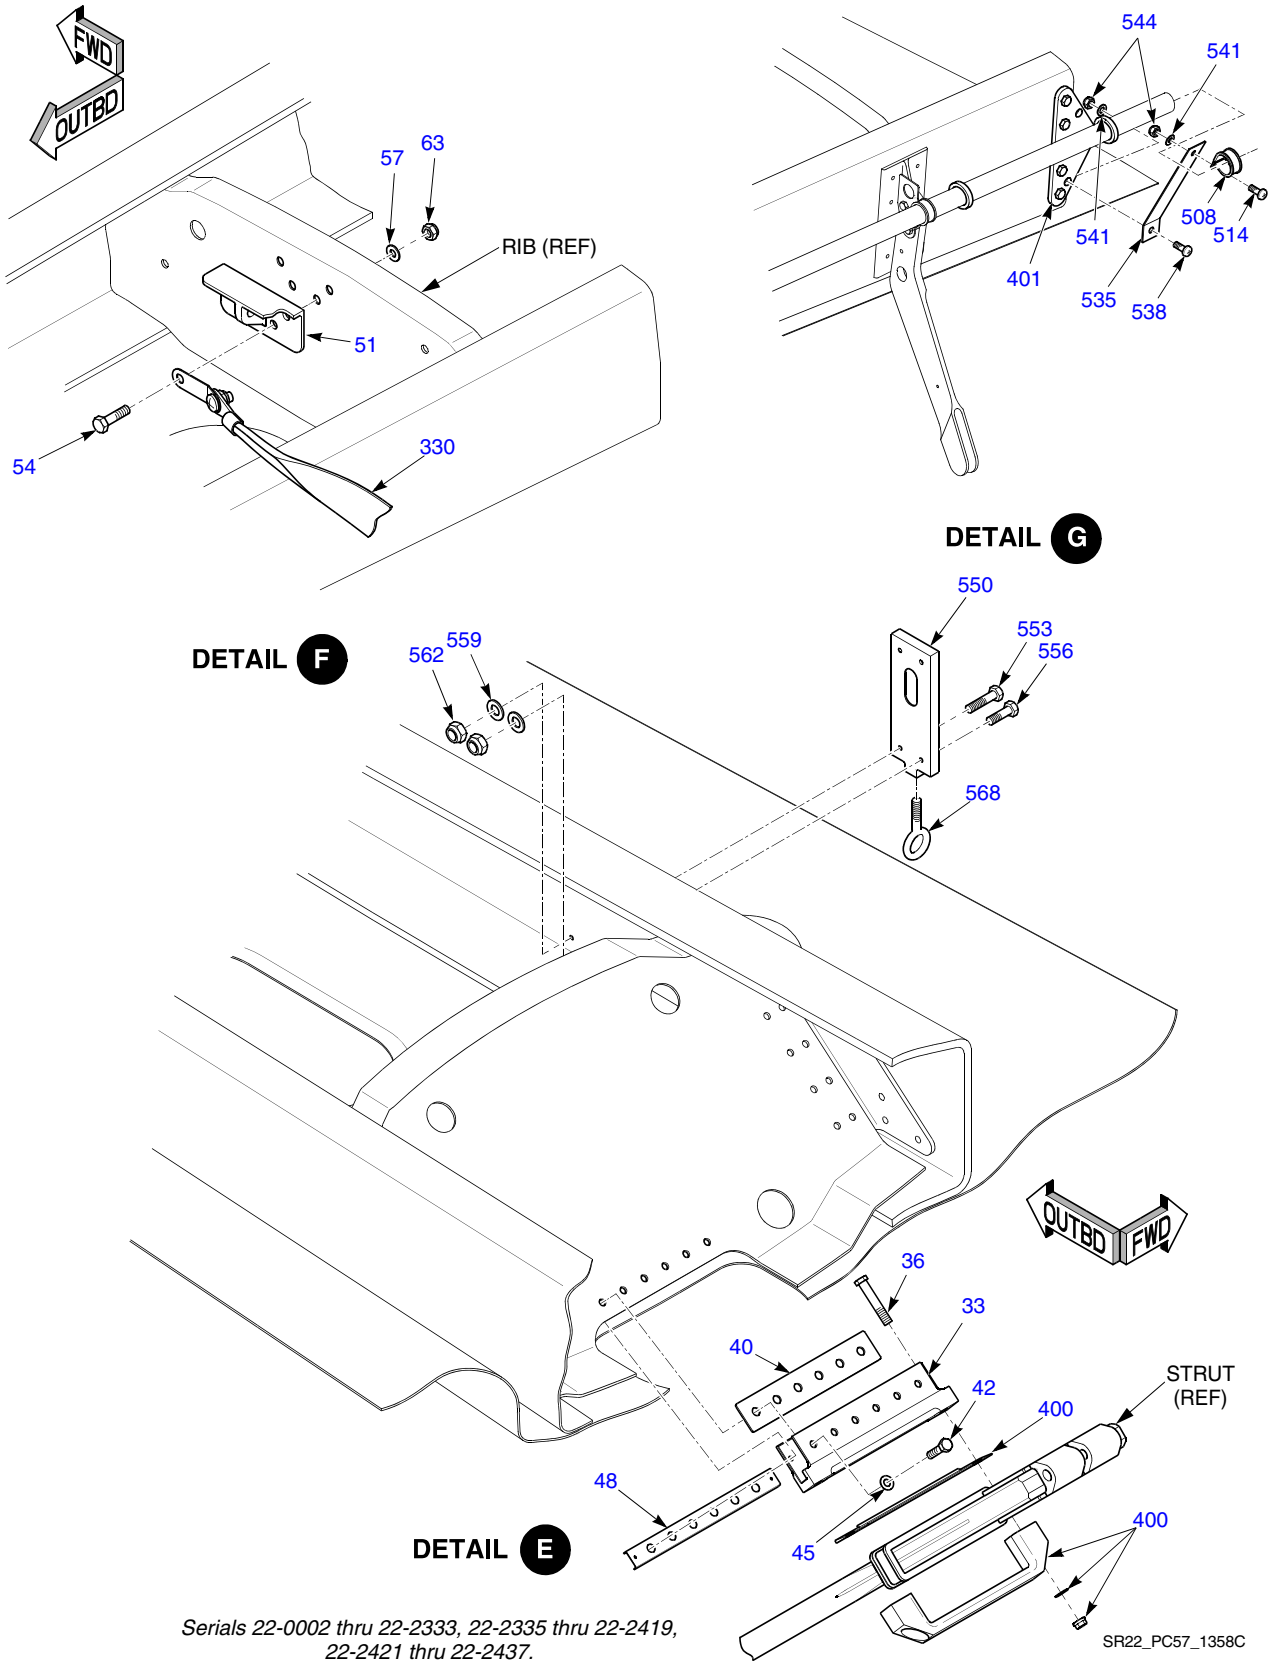

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

Figure-01

Wing Attach Fittings - Serials 22-0002 thru 22-2437 (2 of 5)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

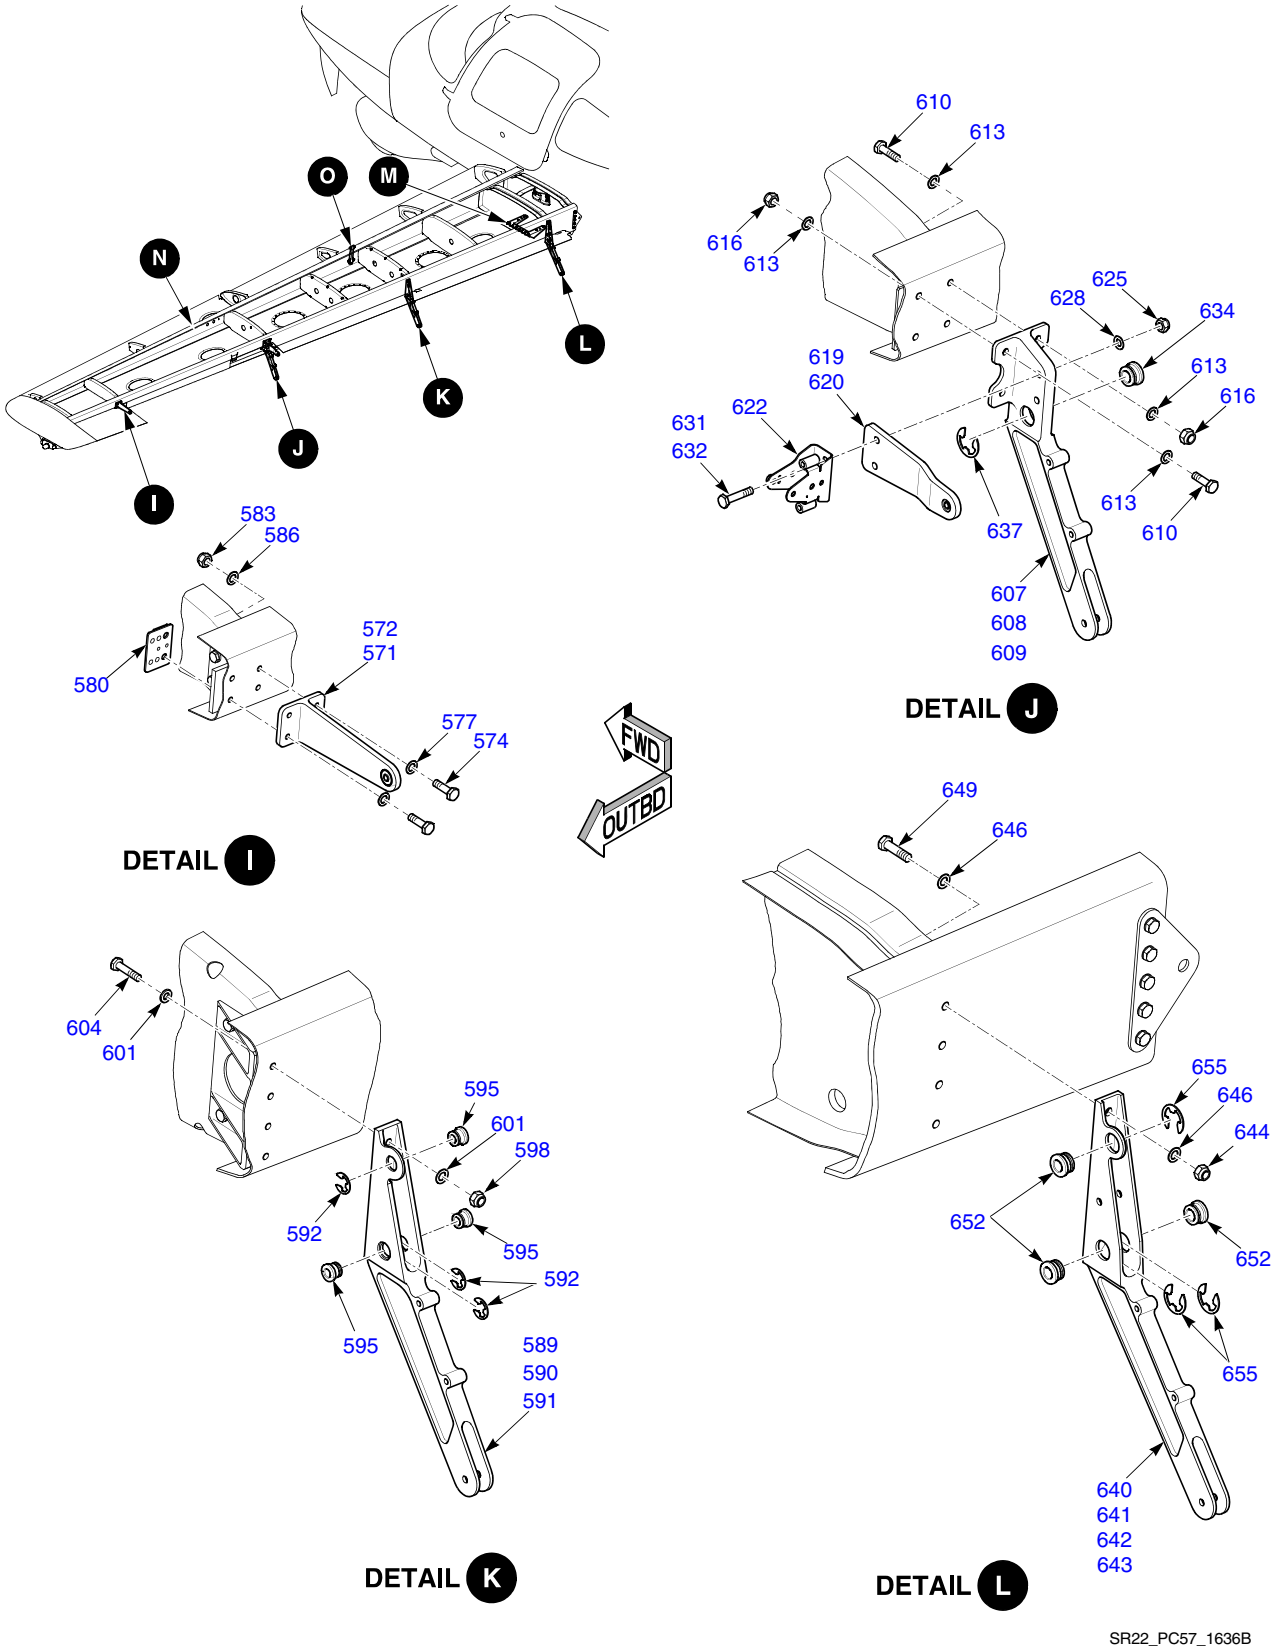

Figure-01
Wing Attach Fittings - Serials 22-2438 & subs, 22T-0001 & subs (3 of 5)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

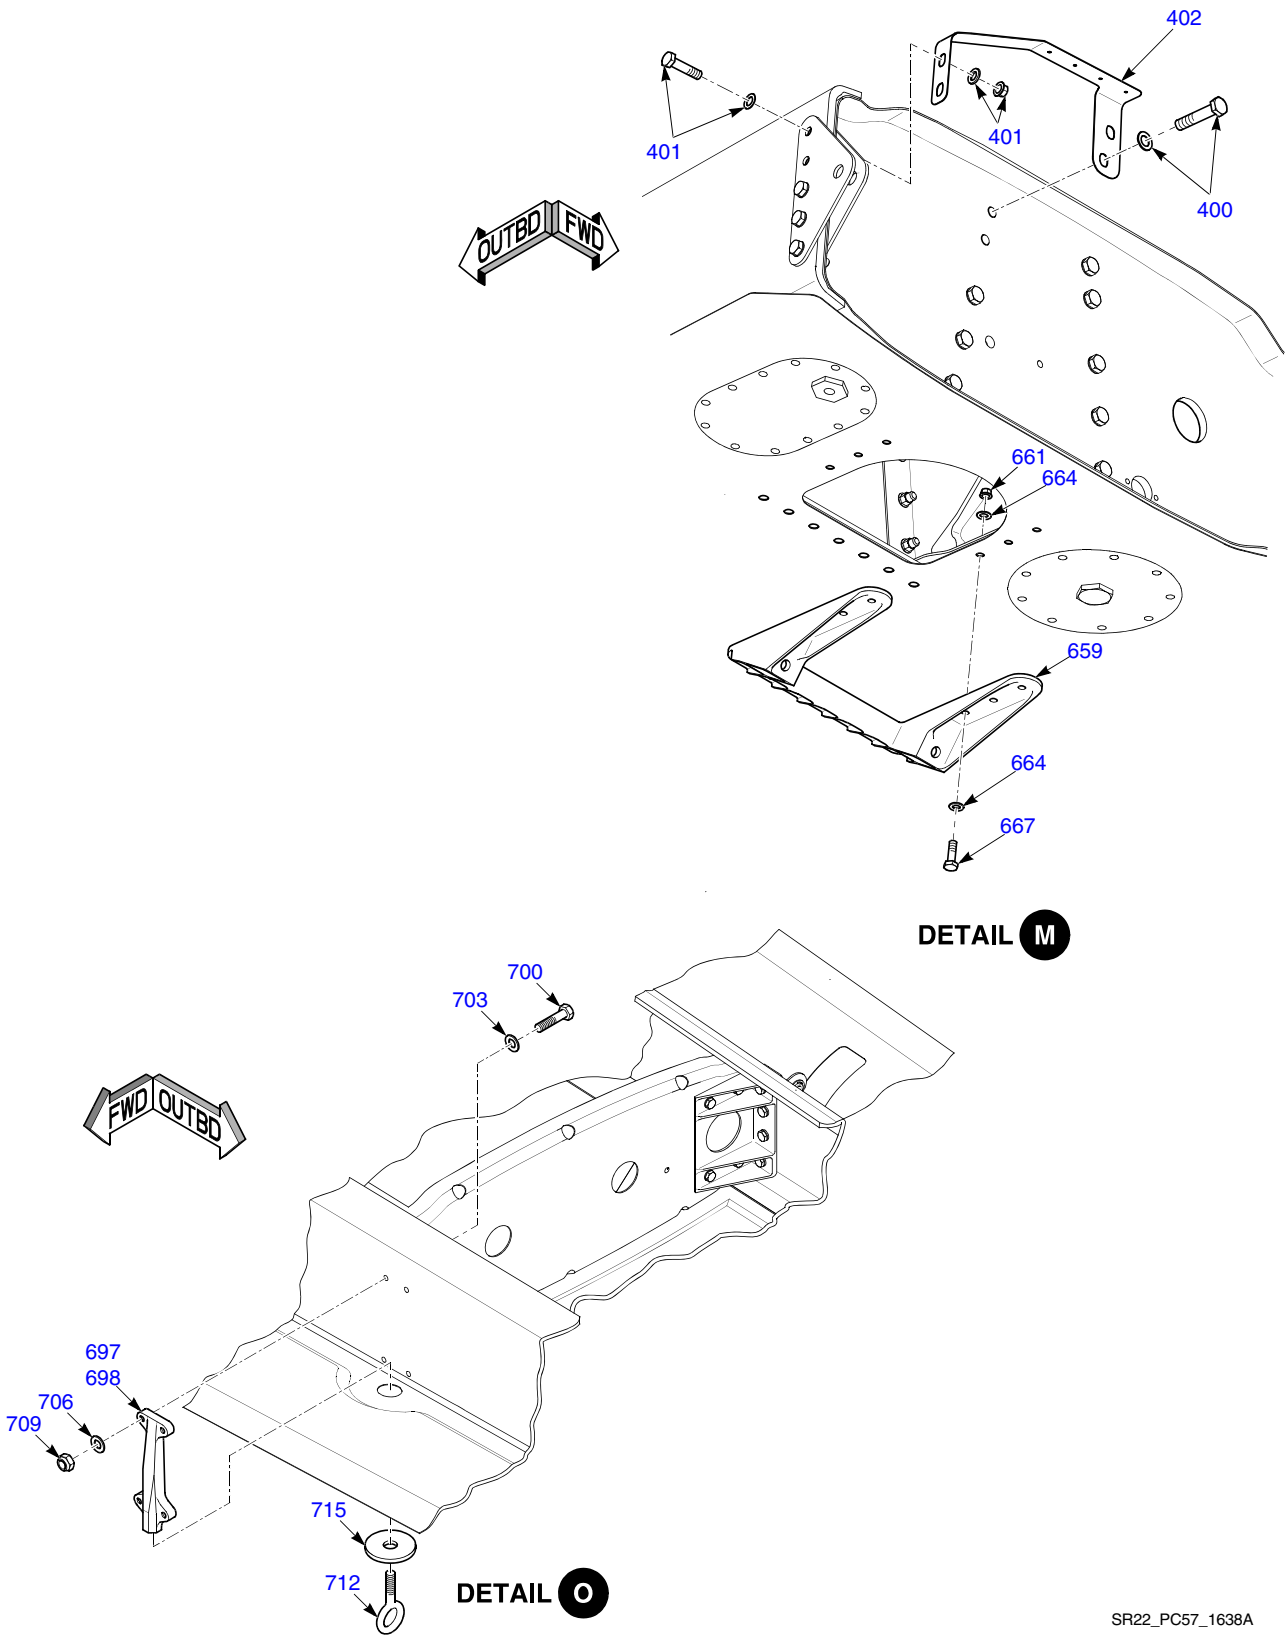

Figure-01

Wing Attach Fittings - Serials 22-2438 & subs, 22T-0001 & subs (4 of 5)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

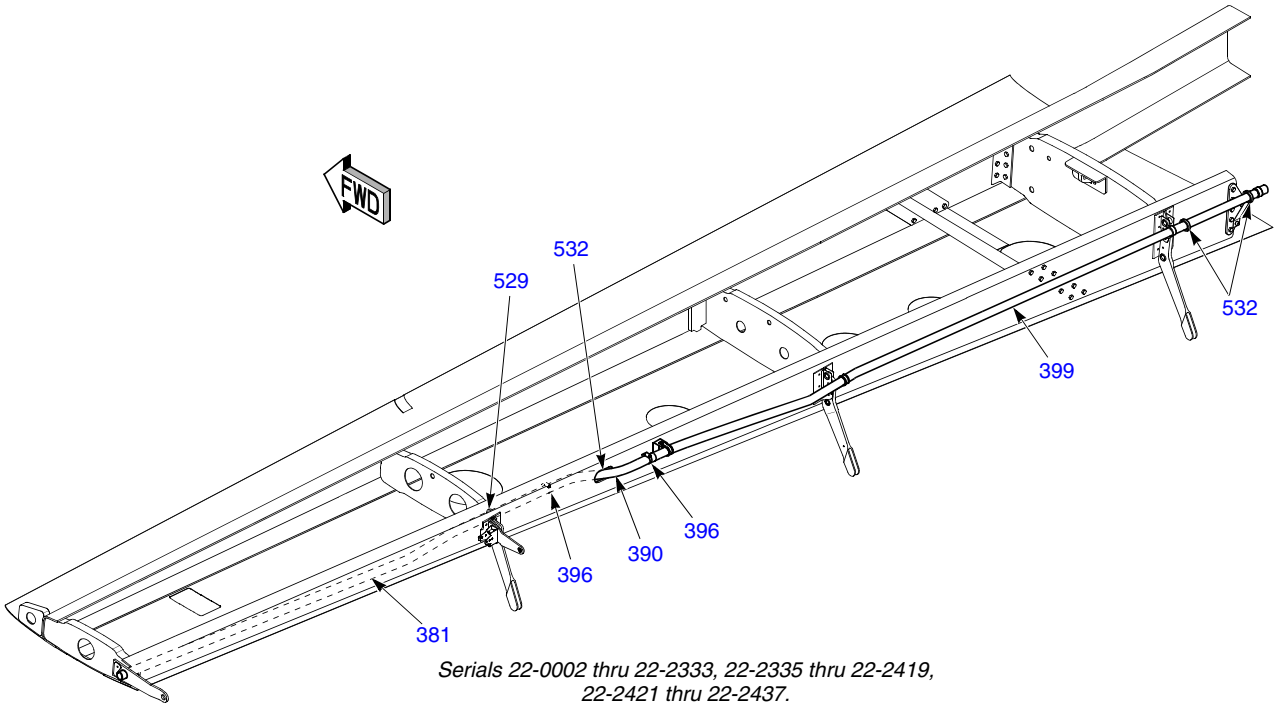

Serials 22-0002 thru 22-2333, 22-2335 thru 22-2419, 22-2421 thru 22-2437.

DETAIL H

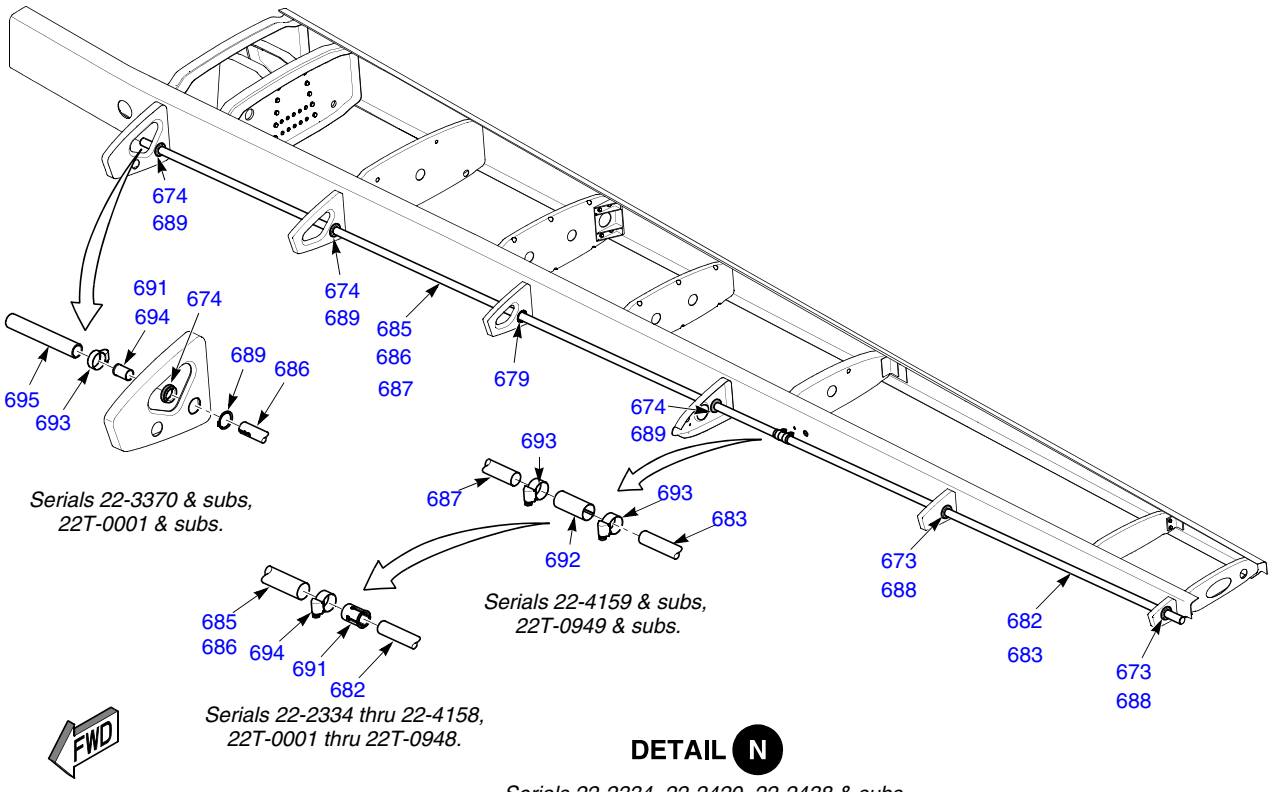

DETAIL N

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs.

SR22_PC57_1640B

Figure-01

Wing Attach Fittings - Serials 22-2438 & subs, 22T-0001 & subs (5 of 5)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FLAP AND AILERON HINGE INSTALLATION	0002 / 0001	/	NP
	3	11775-002			·OUTBOARD AILERON HINGE ASSEMBLY	0002	2437	1
	6	AN4-6A		A	·BOLT	0002	2437	2
	9	NAS1149D0432K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0432J			
-	12	NAS1149D0432J		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0432K			
	15	AN3-5A		A	·BOLT	0002	2437	2
	18	NAS1149D0332K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0332J			
-	21	NAS1149D0332J		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0332K			
	24	13423-110		A	·SHIM	0002	2437	AR
	27	11789-003			·BRACKET, CONDUIT	0002	2437	1
					ALTERNATE FOR P/N 11789-002			
-	30	11789-002			·BRACKET, CONDUIT	0002	2437	1
					ALTERNATE FOR P/N 11789-003			
	33	11283-001			·BRACKET, LOWER GEAR ATTACH	0002	2437	1
	36	11282-002		A	·BOLT	0002	2437	2
	40	13885-101		A	·SHIM	0002	2437	1
					ALTERNATE FOR P/N 13917-001			
-	41	13917-001		A	·SHIM	0002	2437	1
					ALTERNATE FOR P/N 13885-101			
	42	AN5-11A		A	·BOLT	0002	2437	6
	45	NAS1149D0532K		A	·WASHER	0002	2437	6
	48	11286-003		A	·NUTPLATE	0002	2437	1
	51	13974-001			·UPPER GEAR ATTACH	0002	2437	1
	54	AN7-11A		A	·BOLT	0002	2437	4
	57	NAS1149D0732K		A	·WASHER	0002	2437	4
					ALTERNATE FOR P/N NAS1149D0732J			
-	60	NAS1149D0732J		A	·WASHER	0002	2437	4
					ALTERNATE FOR P/N NAS1149D0732K			
	63	NAS1291-7		A	·NUT	0002	2437	4
					ALTERNATE FOR P/N MS21044N7			
-	66	MS21044N7		A	·NUT	0002	2437	4
					ALTERNATE FOR P/N NAS1291-7			
-	69	10735-001			·MID FLAP HINGE, LH	0002	0152	1
-	72	10735-002			·MID FLAP HINGE, RH	0002	0152	1
	75	14572-002			·MID FLAP HINGE	0153	1774	2
					FOR SPARES USE P/N 14572-004			
	76	14572-003			·MID FLAP HINGE	1775	2437	2
					FOR SPARES USE P/N 14572-004			
	77	14572-004			·MID FLAP HINGE	0002	2437	2
	78	AN4-12A		A	·BOLT	0002	2437	2
	81	NAS1149D0432K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0463K			
					ALTERNATE FOR P/N NAS1149F0432P			
-	84	NAS1149D0463K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0432K			
					ALTERNATE FOR P/N NAS1149F0432P			
-	87	NAS1149F0432P		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0432K			
					ALTERNATE FOR P/N NAS1149D0463K			
	90	MS21042-4		A	·NUT	0002	2437	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						ALTERNATE FOR P/N MS21044N4			
-	93	MS21044N4		A		·NUT	0002	2437	2
						ALTERNATE FOR P/N MS21042-4			
	96	AN4-11A		A		·BOLT	0002	2437	1
	99	NAS1149D0432K		A		·WASHER	0002	2437	1
						ALTERNATE FOR P/N NAS1149D0463K			
						ALTERNATE FOR P/N NAS1149F0432P			
-	102	NAS1149D0463K		A		·WASHER	0002	2437	1
						ALTERNATE FOR P/N NAS1149D0432K			
						ALTERNATE FOR P/N NAS1149F0432P			
-	105	NAS1149F0432P		A		·WASHER	0002	2437	1
						ALTERNATE FOR P/N NAS1149D0432K			
						ALTERNATE FOR P/N NAS1149D0463K			
	108	MS21042-4		A		·NUT	0002	2437	1
						ALTERNATE FOR P/N MS21044N4			
-	111	MS21044N4		A		·NUT	0002	2437	1
						ALTERNATE FOR P/N MS21042-4			
	114	11235-002				·BRACKET, INBOARD	0002	2437	1
	117	AN4-7A		A		·BOLT	0002	2437	3
	118	13838-001		A		·BACKING PLATE	0002	2437	1
	120	NAS1149D0463K		A		·WASHER	0002	2437	3
						ALTERNATE FOR P/N NAS1149D0463J			
-	123	NAS1149D0463J		A		·WASHER	0002	2437	3
						ALTERNATE FOR P/N NAS1149D0463K			
	126	MS21042-4		A		·NUT	0002	2437	3
						ALTERNATE FOR P/N MS21044N4			
-	129	MS21044N4		A		·NUT	0002	2437	3
						ALTERNATE FOR P/N MS21042-4			
	132	11235-001				·BRACKET, OUTBOARD	0002	2437	1
	135	AN4-7A		A		·BOLT	0002	2437	3
	136	13838-001		A		·BACKING PLATE	0002	2437	1
	138	NAS1149D0463K		A		·WASHER	0002	2437	3
						ALTERNATE FOR P/N NAS1149D0463J			
-	141	NAS1149D0463J		A		·WASHER	0002	2437	3
						ALTERNATE FOR P/N NAS1149D0463K			
	144	MS21042-4		A		·NUT	0002	2437	3
						ALTERNATE FOR P/N MS21044N4			
-	147	MS21044N4		A		·NUT	0002	2437	3
						ALTERNATE FOR P/N MS21042-4			
-	150	12905-002				·FAIRLEAD	0002	0209	2
						ALTERNATE FOR P/N 14812-002			
	153	14812-002				·FAIRLEAD	0210	2437	1
						ALTERNATE FOR P/N 12905-002			
	156	MS16624-1062		A		·EXTERNAL RETAINING RING	0002	2437	1
-	159	12905-005				·FAIRLEAD	0002	0209	2
						ALTERNATE FOR P/N 14812-004			
						ALTERNATE FOR P/N 14812-003			
	162	14812-003				·FAIRLEAD	0210	2437	1
						ALTERNATE FOR P/N 12905-005			
						ALTERNATE FOR P/N 14812-004			
-	165	14812-004				·FAIRLEAD	0002	2437	2
						ALTERNATE FOR P/N 12905-005			
						ALTERNATE FOR P/N 14812-003			
	168	MS16624-1075		A		·EXTERNAL RETAINING RING	0002	2437	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	169	11237-001			·DOUBLER	0002	0152	2
-	171	11462-001			·MOUNTING BRACKET, CONDUIT, WS89, LH	0002	2437	1
	174	11462-002			·MOUNTING BRACKET, CONDUIT, WS89, RH	0002	2437	1
	177	11569-001			·FAIRLEAD CLIP	0002	2437	1
-	180	10736-001			·OUTBOARD FLAP HINGE, LH	0002	0152	1
-	183	10736-002			·OUTBOARD FLAP HINGE, RH	0002	0152	1
-	186	14573-002			·OUTBOARD FLAP HINGE	0153	0167	2
					ALTERNATE FOR P/N 14704-001			
-	187	14704-001			·OUTBOARD FLAP HINGE	0153	0167	2
					ALTERNATE FOR P/N 14573-002			
	188	14573-002			·OUTBOARD FLAP HINGE	0168	1739	2
					FOR SPARES USE P/N 14573-004			
	189	14573-003			·OUTBOARD FLAP HINGE	1740	2437	2
					FOR SPARES USE P/N 14573-004			
	190	14573-004			·OUTBOARD FLAP HINGE	0002	2437	2
	192	AN4-12A		A	·BOLT	0002	2437	2
	195	NAS1149D0432K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149F0432P			
-	198	NAS1149F0432P		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0432K			
	201	MS21042-4		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21044N4			
-	204	MS21044N4		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21042-4			
	207	11236-001			·BRACKET, LH	0002	2437	1
	210	AN4-7A		A	·BOLT	0002	2437	2
	213	NAS1149D0463K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0463J			
-	216	NAS1149D0463J		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0463K			
	219	MS21042-4		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21044N4			
-	222	MS21044N4		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21042-4			
	225	11236-002			·BRACKET, RH	0002	2437	1
	228	AN4-7A		A	·BOLT	0002	2437	2
	231	NAS1149D0463K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0463J			
-	234	NAS1149D0463J		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0463K			
	237	MS21042-4		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21044N4			
-	240	MS21044N4		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21042-4			
-	243	12905-001			·FAIRLEAD	0002	0209	1
	246	14812-001			·FAIRLEAD	0210	2437	1
					ALTERNATE FOR P/N 12905-001			
					ALTERNATE FOR P/N 12905-006			
-	249	12905-006			·FAIRLEAD	0002	0209	1
-	252	14812-001			·FAIRLEAD	0210	2437	1
					ALTERNATE FOR P/N 12905-001			
					ALTERNATE FOR P/N 12905-006			
	255	MS16624-1050		A	·EXTERNAL RETAINING RING	0002	2437	1
	258	12346-004			·BRACKET, AILERON ACTUATION PULLEY	0002	2437	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	261	11386-001			·INBOARD AILERON HINGE	0002	2437	1
-	263	10734-001			·INBOARD FLAP HINGE, OUTBOARD, LH	0002	0152	1
-	265	10734-002			·INBOARD FLAP HINGE, INBOARD, LH	0002	0152	1
	267	14571-003			·INBOARD FLAP HINGE, ONE PIECE, LH	0153	1785	1
					FOR SPARES USE P/N 39731-001			
	269	14571-005			·INBOARD FLAP HINGE, ONE PIECE, LH	1786	2437	1
					FOR SPARES USE P/N 39731-001			
	271	14571-007			·INBOARD FLAP HINGE, ONE PIECE, LH	0002	2437	1
					FOR SPARES USE P/N 39731-001			
	273	39731-001			·INBOARD FLAP HINGE, ONE PIECE, LH	0002	2437	1
-	275	10734-002			·INBOARD FLAP HINGE, INBOARD, RH	0002	0152	1
-	277	10734-001			·INBOARD FLAP HINGE, OUTBOARD, RH	0002	0152	1
-	279	14571-004			·INBOARD FLAP HINGE, ONE PIECE, RH	0153	1785	1
					FOR SPARES USE P/N 39731-001			
-	281	14571-006			·INBOARD FLAP HINGE, ONE PIECE, RH	1786	2437	1
					FOR SPARES USE P/N 39731-001			
-	283	14571-008			·INBOARD FLAP HINGE, ONE PIECE, RH	0002	2437	1
					FOR SPARES USE P/N 39731-001			
-	284	39731-001			·INBOARD FLAP HINGE, ONE PIECE, RH	0002	2437	1
	285	AN4-12A		A	·BOLT	0002	2437	2
	288	NAS1149D0432K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0463K			
					ALTERNATE FOR P/N NAS1149F0432P			
-	291	NAS1149D0463K		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0432K			
					ALTERNATE FOR P/N NAS149F0432P			
-	294	NAS1149D0432P		A	·WASHER	0002	2437	2
					ALTERNATE FOR P/N NAS1149D0432K			
					ALTERNATE FOR P/N NAS149F0463K			
	297	MS21042-4		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21044N4			
-	298	MS21044N4		A	·NUT	0002	2437	2
					ALTERNATE FOR P/N MS21042-4			
	300	AN4-11A		A	·BOLT	0002	2437	1
	303	NAS1149D0432K		A	·WASHER	0002	2437	1
					ALTERNATE FOR P/N NAS1149D0463K			
-	306	NAS1149D0463K		A	·WASHER	0002	2437	1
					ALTERNATE FOR P/N NAS1149D0432K			
	309	MS21042-4		A	·NUT	0002	2437	1
	312	11234-001			·BRACKET	0002	2437	1
	315	AN5-11A		A	·BOLT	0002	2437	8
	318	NAS1149D0532K		A	·WASHER	0002	2437	8
					ALTERNATE FOR P/N NAS1149D0532J			
-	321	NAS1149D0532J		A	·WASHER	0002	2437	8
					ALTERNATE FOR P/N NAS1149D0532K			
-	324	14083-001			·GROUNDING STRAP	0002	0097	2
-	327	14083-002			·GROUNDING STRAP	0098	0820	2
	330	14083-003			·GROUNDING STRAP	0821	2437	2
	333	MS21042-5		A	·NUT	0002	2437	8
					ALTERNATE FOR P/N MS21044N5			
-	336	MS21044N5		A	·NUT	0002	2437	8
					ALTERNATE FOR P/N MS21042-5			
-	339	12905-003			·FAIRLEAD	0002	0209	2
					ALTERNATE FOR P/N 14812-004			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	342	14812-004			·FAIRLEAD	0002	2437	2
					ALTERNATE FOR P/N 12905-003			
	345	14812-003			·FAIRLEAD	0210	2437	1
					ALTERNATE FOR P/N 12905-003			
					ALTERNATE FOR P/N 14812-004			
-	348	12905-003			·FAIRLEAD	0002	2437	2
					ALTERNATE FOR P/N 14812-003			
					ALTERNATE FOR P/N 14812-004			
-	351	14812-004			·FAIRLEAD	0002	2437	2
					ALTERNATE FOR P/N 14812-003			
					ALTERNATE FOR P/N 12905-003			
	354	MS16624-1075		A	·EXTERNAL RETAINING RING	0002	2437	1
-	357	12905-004			·FAIRLEAD	0002	0209	2
					ALTERNATE FOR P/N 14812-003			
	360	14812-003			·FAIRLEAD	0210	2437	1
					ALTERNATE FOR P/N 12905-004			
	363	MS16624-1075		A	·EXTERNAL RETAINING RING	0002	2437	1
	366	11468-005			·MOUNTING BRACKET, CONDUIT, WS37, LH	0002	2437	1
-	369	11468-006			·MOUNTING BRACKET, CONDUIT, WS37, RH	0002	2437	1
	372	11569-002			·FAIRLEAD CLIP	0002	2437	1
					ALTERNATE FOR P/N 11569-003			
-	373	15569-003			·FAIRLEAD CLIP	0002	2437	1
					ALTERNATE FOR P/N 11569-002			
-	375	11378-001			·SPACER, LH	0002	0152	1
-	378	11378-002			·SPACER, RH	0002	0152	1
	381	13965-001			·CONDUIT, ELECTRICAL, LH OUTBOARD	0002	2437	1
-	384	13964-001			·CONDUIT, ELECTRICAL, RH OUTBOARD	0002	0429	1
-	387	13964-002			·CONDUIT, ELECTRICAL, RH OUTBOARD	0430	2437	1
	390	13962-101			·CONDUIT, ELECTRICAL, MIDSPAN	0002	2437	2
					ALTERNATE FOR P/N 11788-105			
-	393	11788-105			·CONDUIT, ELECTRICAL, MIDSPAN	0002	2437	2
					ALTERNATE FOR P/N 13962-101			
	396	50743-101		A	·BREEZE CLAMP	0002	2437	4
	399	14002-002			·CONDUIT, ELECTRICAL, INBOARD	0002	2437	2
					ALTERNATE FOR P/N 14002-001			
-	502	14002-001			·CONDUIT, ELECTRICAL, INBOARD	0002	2437	2
					ALTERNATE FOR P/N 14002-002			
-	505	AN742-16		A	·CLAMP	0002	0097	8
	508	AN742-16		A	·CLAMP	0098	2437	6
-	511	MS27039-1-10		A	·SCREW	0002	0097	8
	514	MS27039-1-10		A	·SCREW	0098	2437	6
	517	AN742-18		A	·CLAMP	0002	2437	2
	520	AN3-10A		A	·BOLT	0002	2437	2
	523	NAS1149D0332J		A	·WASHER	0002	2437	2
	526	MS21042-3		A	·NUT	0002	2437	2
	529	MS21266-4N			·GROMMET	0002	2437	AR
	532	MS21266-2N			·GROMMET	0002	2437	AR
	535	11467-002			·GROUNDING STRAP	0002	2437	2
	538	MS27039-1-17		A	·SCREW	0002	2437	2
	541	NAS1149D0332J		A	·WASHER	0002	2437	4
	544	MS21042-3		A	·NUT	0002	2437	4
-	547	13996-001			·TIEDOWN WELDMENT	0002	0277	1
	550	15095-001			·TIEDOWN WELDMENT	0278	2437	1
	553	AN3-10A		A	·BOLT	0002	2437	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	556	AN3-7A		A	·BOLT	0002	2437	2
	559	NAS1149D0332K		A	·WASHER	0002	2437	4
	562	MS21042-3		A	·NUT	0002	2437	4
					ALTERNATE FOR P/N MS21044N3			
-	565	MS21044N3		A	·NUT	0002	2437	4
					ALTERNATE FOR P/N MS21042-3			
	568	12403-001			·EYEBOLT, TIEDOWN	0002	2437	1
	571	16817-002			·OUTBOARD AILERON HINGE ASSEMBLY	2438	2841	1
					FOR SPARES USE P/N 16817-003			
	572	16817-003			·OUTBOARD AILERON HINGE ASSEMBLY	2842 / 0001	/	1
	574	AN3-6A		A	·BOLT	2438 / 0001	/	2
	577	NAS1149D0316K		A	·WASHER	2438 / 0001	/	2
	580	18043-001		A	·SHIM	2438 / 0001	/	1
	583	MS21042-3		A	·NUT	2438 / 0001	/	2
	586	NAS1149D0316K		A	·WASHER	2438 / 0001	/	2
	589	16815-001			·MID FLAP HINGE	2438	3669	1
	590	16815-002			·MID FLAP HINGE	3670 / 0001	3722 / 0066	1
	591	28955-001			·MID FLAP HINGE	3723 / 0067	/	1
	592	MS16633-1050		A	·EXTERNAL RETAINING RING	2438 / 0001	/	3
	595	18324-002			·FAIRLEAD	2438 / 0001	/	3
	598	MS21042-4		A	·NUT	2438 / 0001	/	4
	601	NAS1149F0463P		A	·WASHER	2438 / 0001	/	8
	604	AN4-11A		A	·BOLT	2438 / 0001	/	4
	607	16816-001			·OUTBOARD FLAP HINGE	2438	3669	1
	608	16816-002			·OUTBOARD FLAP HINGE	3670 / 0001	3722 / 0066	1
	609	28956-001			·OUTBOARD FLAP HINGE	3723 / 0067	/	1
	610	AN4-7A		A	·BOLT	2438 / 0001	/	4
	613	NAS1149F0432P		A	·WASHER	2438 / 0001	/	8
	616	MS21042-4		A	·NUT	2438 / 0001	/	4
	619	16818-002			·INBOARD AILERON HINGE	2438	3669	1
	620	16818-003			·INBOARD AILERON HINGE	3670 / 0001	/	1
	622	12346-103			·BRACKET, AILERON ACTUATION PULLEY	2438 / 0001	/	1
	625	MS21042-4		A	·NUT	2438 / 0001	/	2
	628	NAS1149D0432K		A	·WASHER	2438 / 0001	/	2
	631	AN174-12A		A	·BOLT	2438	3669	2
	632	NAS6604-13		A	·BOLT	3670 / 0001	/	2
	634	18324-001			·FAIRLEAD	2438 / 0001	/	1
	637	MS16633-1075		A	·EXTERNAL RETAINING RING	2438 / 0001	/	1
	640	16814-001			·INBOARD FLAP HINGE	2438	3669	1
	641	16814-002			·INBOARD FLAP HINGE	3670 / 0001	3722 / 0066	1
	642	28954-001			·INBOARD FLAP HINGE	3723 / 0067	4307 / 1255	1
					FOR SPARES USE P/N 28954-002			
	643	28954-002			·INBOARD FLAP HINGE	4308 / 1256	/	1
	644	MS21042-5		A	·NUT	2438 / 0001	/	4
	646	NAS1149F0532P		A	·WASHER	2438 / 0001	/	8
	649	AN5-11A		A	·BOLT	2438 / 0001	/	4
	652	18324-001			·FAIRLEAD	2438 / 0001	/	3
	655	MS16633-1075		A	·EXTERNAL RETAINING RING	2438 / 0001	/	3
-	658	16945-001			·BRACKET, LOWER GEAR ATTACH	2043	2043	1
	659	17185-001			·BRACKET, LOWER GEAR ATTACH	2044 / 0001	/	1
	661	MS21042-4		A	·NUT	2438 / 0001	/	6
	664	NAS1149D0432K		A	·WASHER	2438 / 0001	/	12
	667	AN4-7A		A	·BOLT	2438 / 0001	/	6
-	670	MS35489-20			·GROMMET	2043		AR

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	673	18324-003			·FAIRLEAD	2438 / 0001	4158 / 0948	AR
	674	18324-004			·FAIRLEAD	2438 / 0001	/	AR
-	676	MS35489-23			·GROMMET	2043		AR
	679	MS21266-2N			·GROMMET	2438 / 0001	/	AR
	682	17422-001			·CONDUIT, ELECTRICAL, OUTBOARD	2438 / 0001	4158 / 0948	1
	683	17422-002			·CONDUIT, ELECTRICAL, OUTBOARD	4159 / 0949	/	1
	685	17421-001			·CONDUIT, ELECTRICAL, INBOARD	2438	3369	1
	686	19540-002			·CONDUIT, ELECTRICAL, INBOARD	3370 / 0001	4158 / 0948	1
	687	19540-003			·CONDUIT, ELECTRICAL, INBOARD	4159 / 0949	/	1
	688	MS16624-1100			·RETAINING RING	2438 / 0001	4158 / 0948	AR
	689	MS16624-1137			·RETAINING RING	2438 / 0001	/	5
	691	18207-001			·SLEEVE	2438 / 0001	4158 / 0948	2
	692	33975-001			·COUPLER	4159 / 0949	/	2
	693	50743-501		A	·CLAMP	2438 / 0001	/	3
	694	19558-001		A	·FITTING	3370 / 0001	/	3
	695	19919-101			·TUBING, 8 IN.	3370 / 0001	/	1
	697	16881-001			·TIEDOWN WELDMENT	2438 / 0001	3849 / 0322	1
					FOR SPARES USE P/N 16881-002			
	698	16881-002			·TIEDOWN WELDMENT	3850 / 0323	/	1
	700	NAS6404U-13		A	·BOLT	2438 / 0001	/	4
	703	NAS1149C0432R		A	·WASHER	2438 / 0001	/	4
	706	NAS1149F0432P		A	·WASHER	2438 / 0001	/	4
	709	MS21043-4		A	·NUT	2438 / 0001	/	4
	712	12403-001			·EYEBOLT, TIEDOWN	2438 / 0001	/	1
	715	19758-001		A	·WASHER	3403 / 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 32-10-02 DET			CLAMP, LOWER GEAR ATTACH			
	401	RF 57-10-01 DET			WING INSTALLATION			
	402	RF 51-80-01 DET			LIGHTNING PROTECTION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-3712 THRU 22-3720; REFER TO 22-3723 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22T-0060, 22T-0063; REFER TO 22T-0067 FOR PART IDENTIFICATION.			

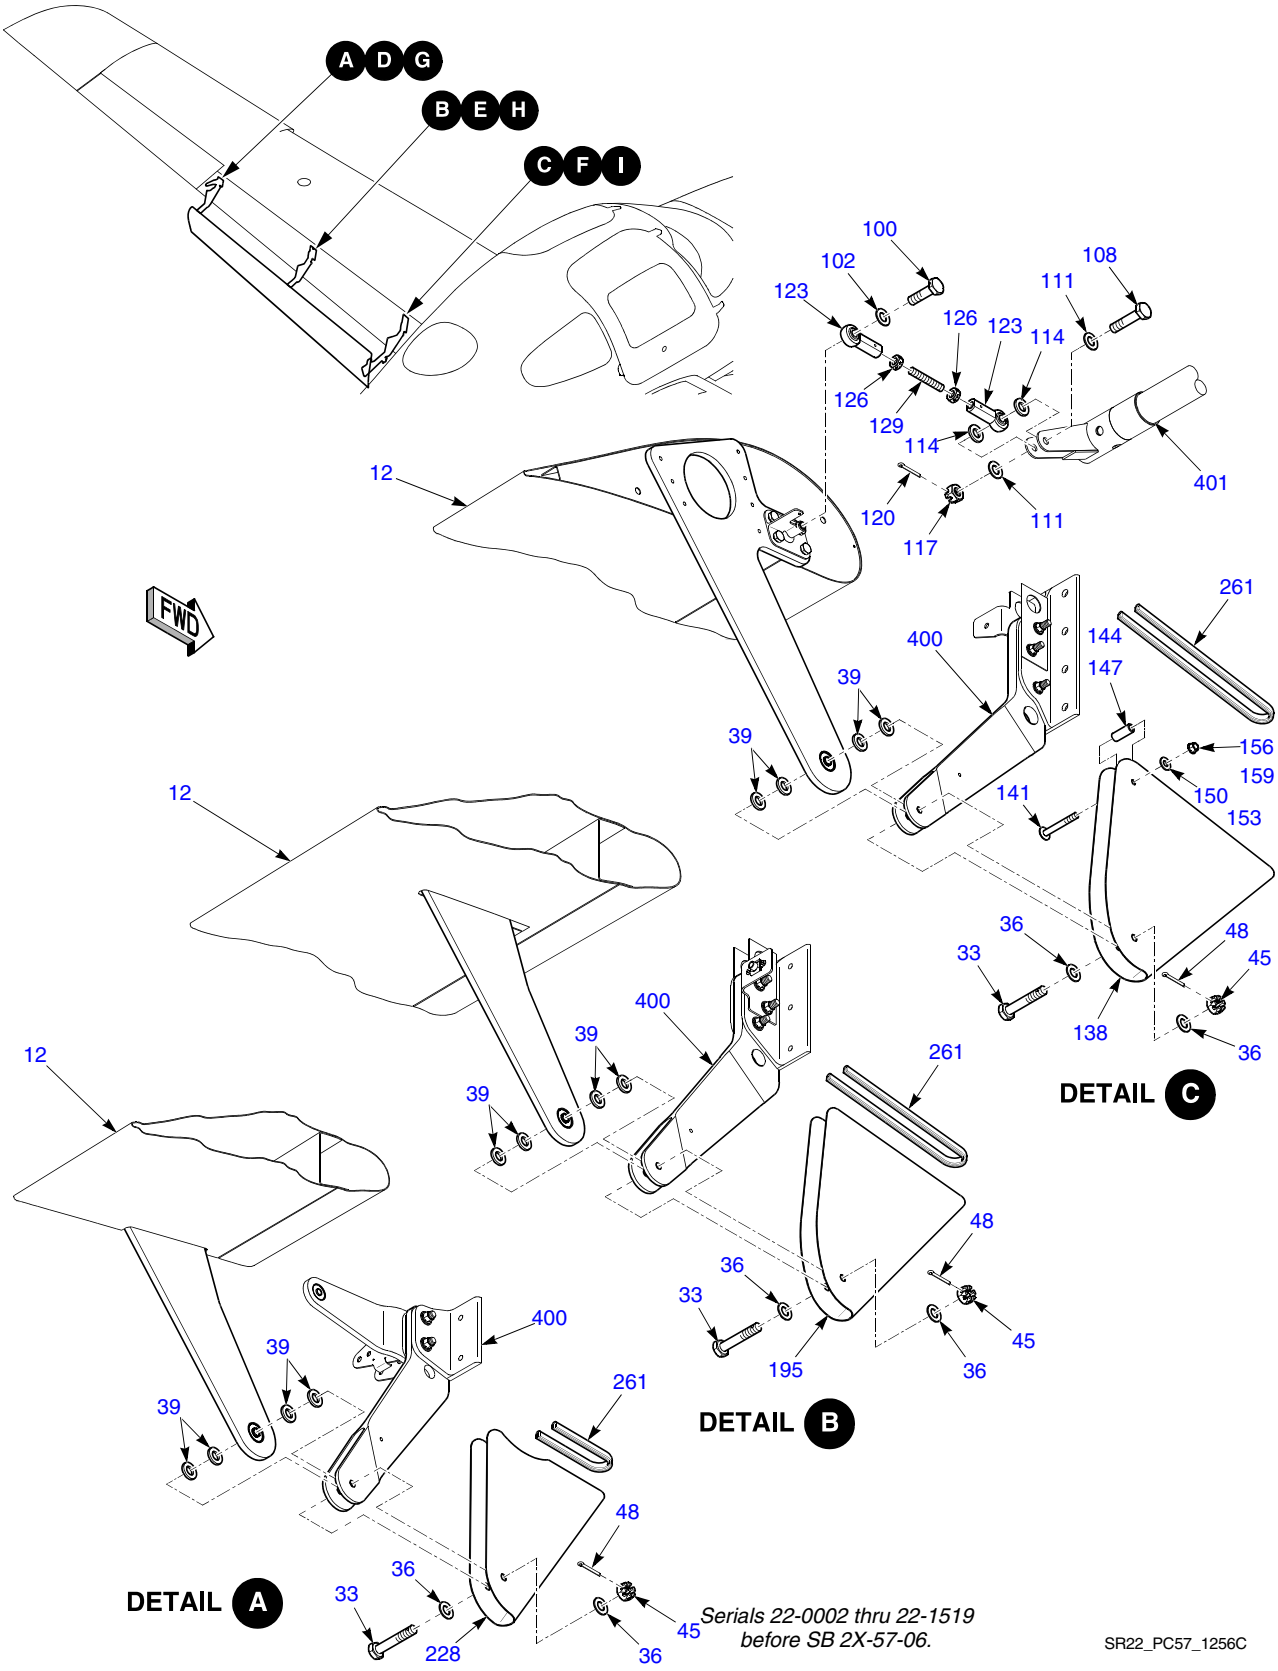

Figure-01

Flaps - Serials 22-0002 thru 22-1519 before SB2X-57-06 (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-1519 before SB2X-57-06

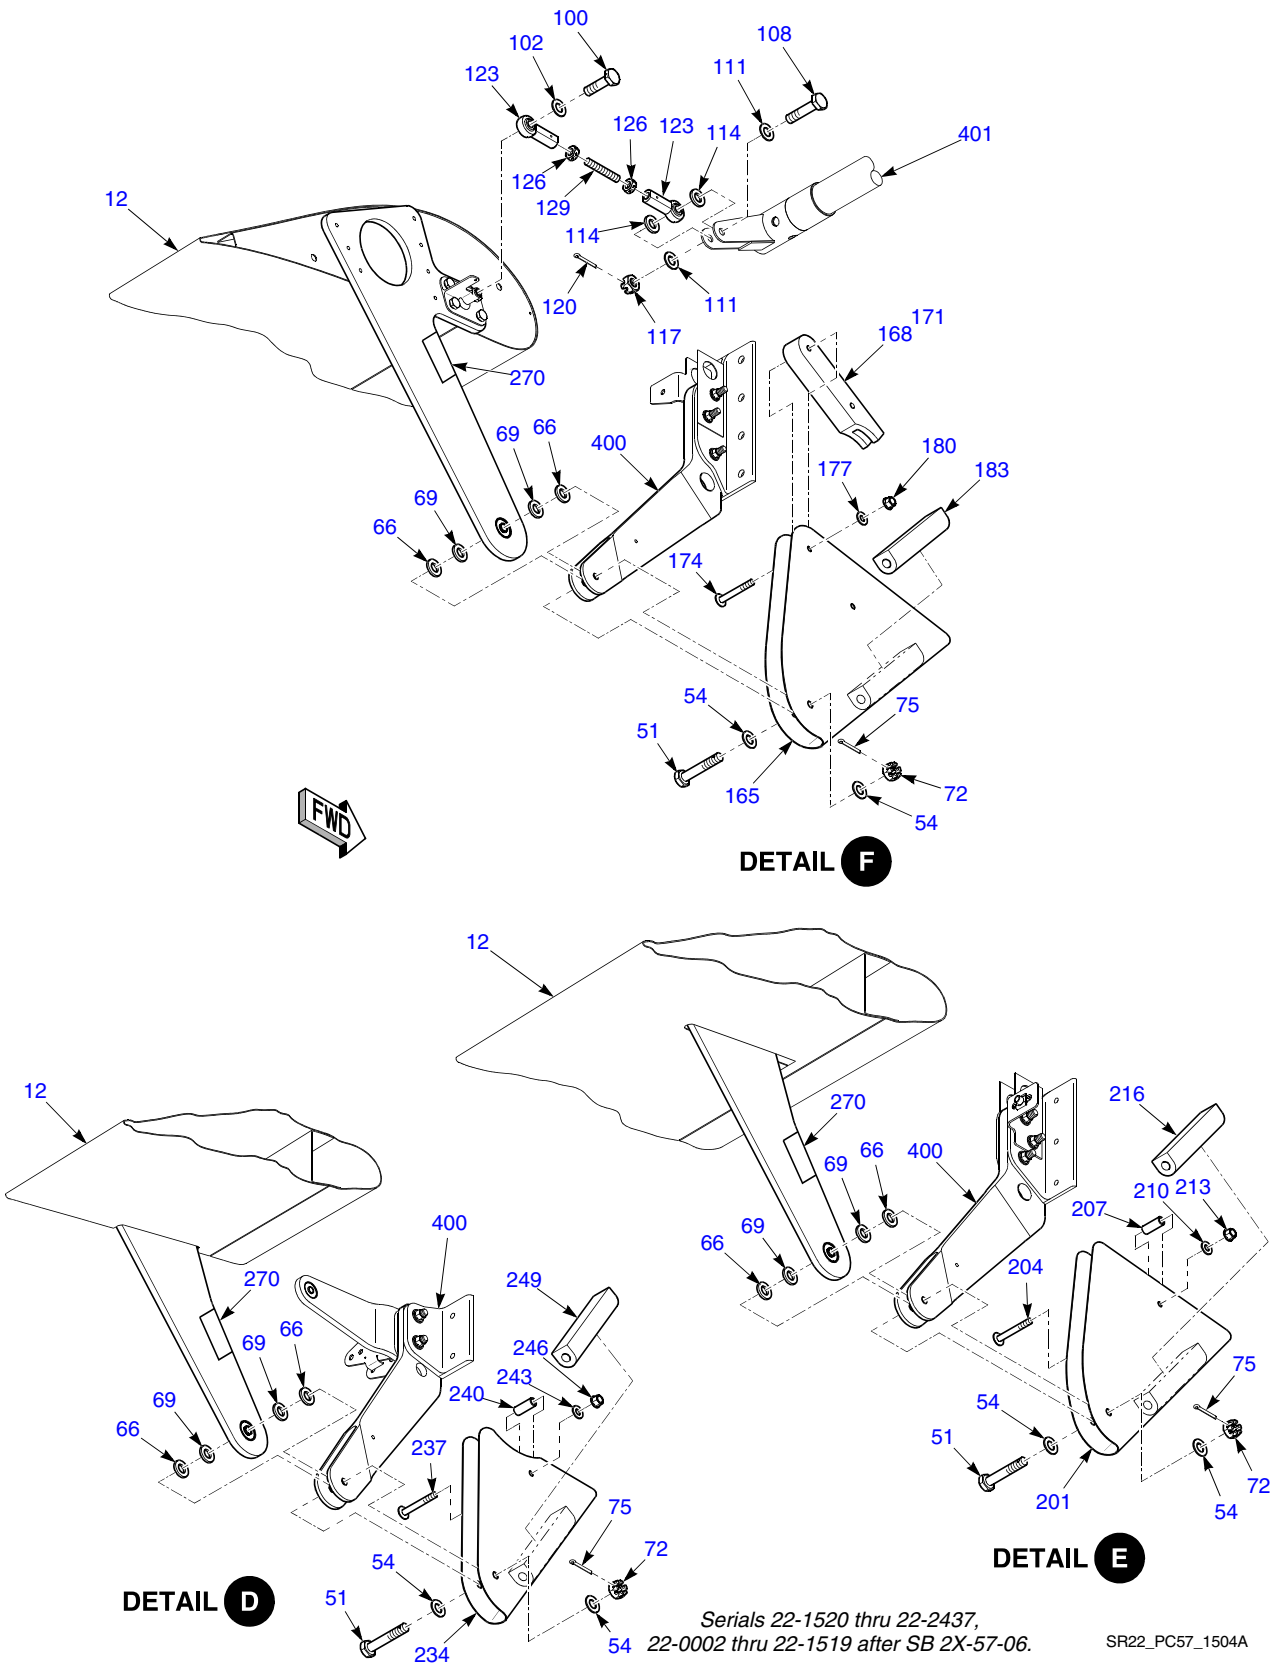

Figure-01

Flaps - Serials 22-1520 thru 22-2437, 22-0002 thru 22-1519 after SB2X-57-06 (2 of 3)

EFFECTIVITY:
Serials 22-1520 thru 22-2437, 22-0002 thru 22-1519 after SB2X-57-06

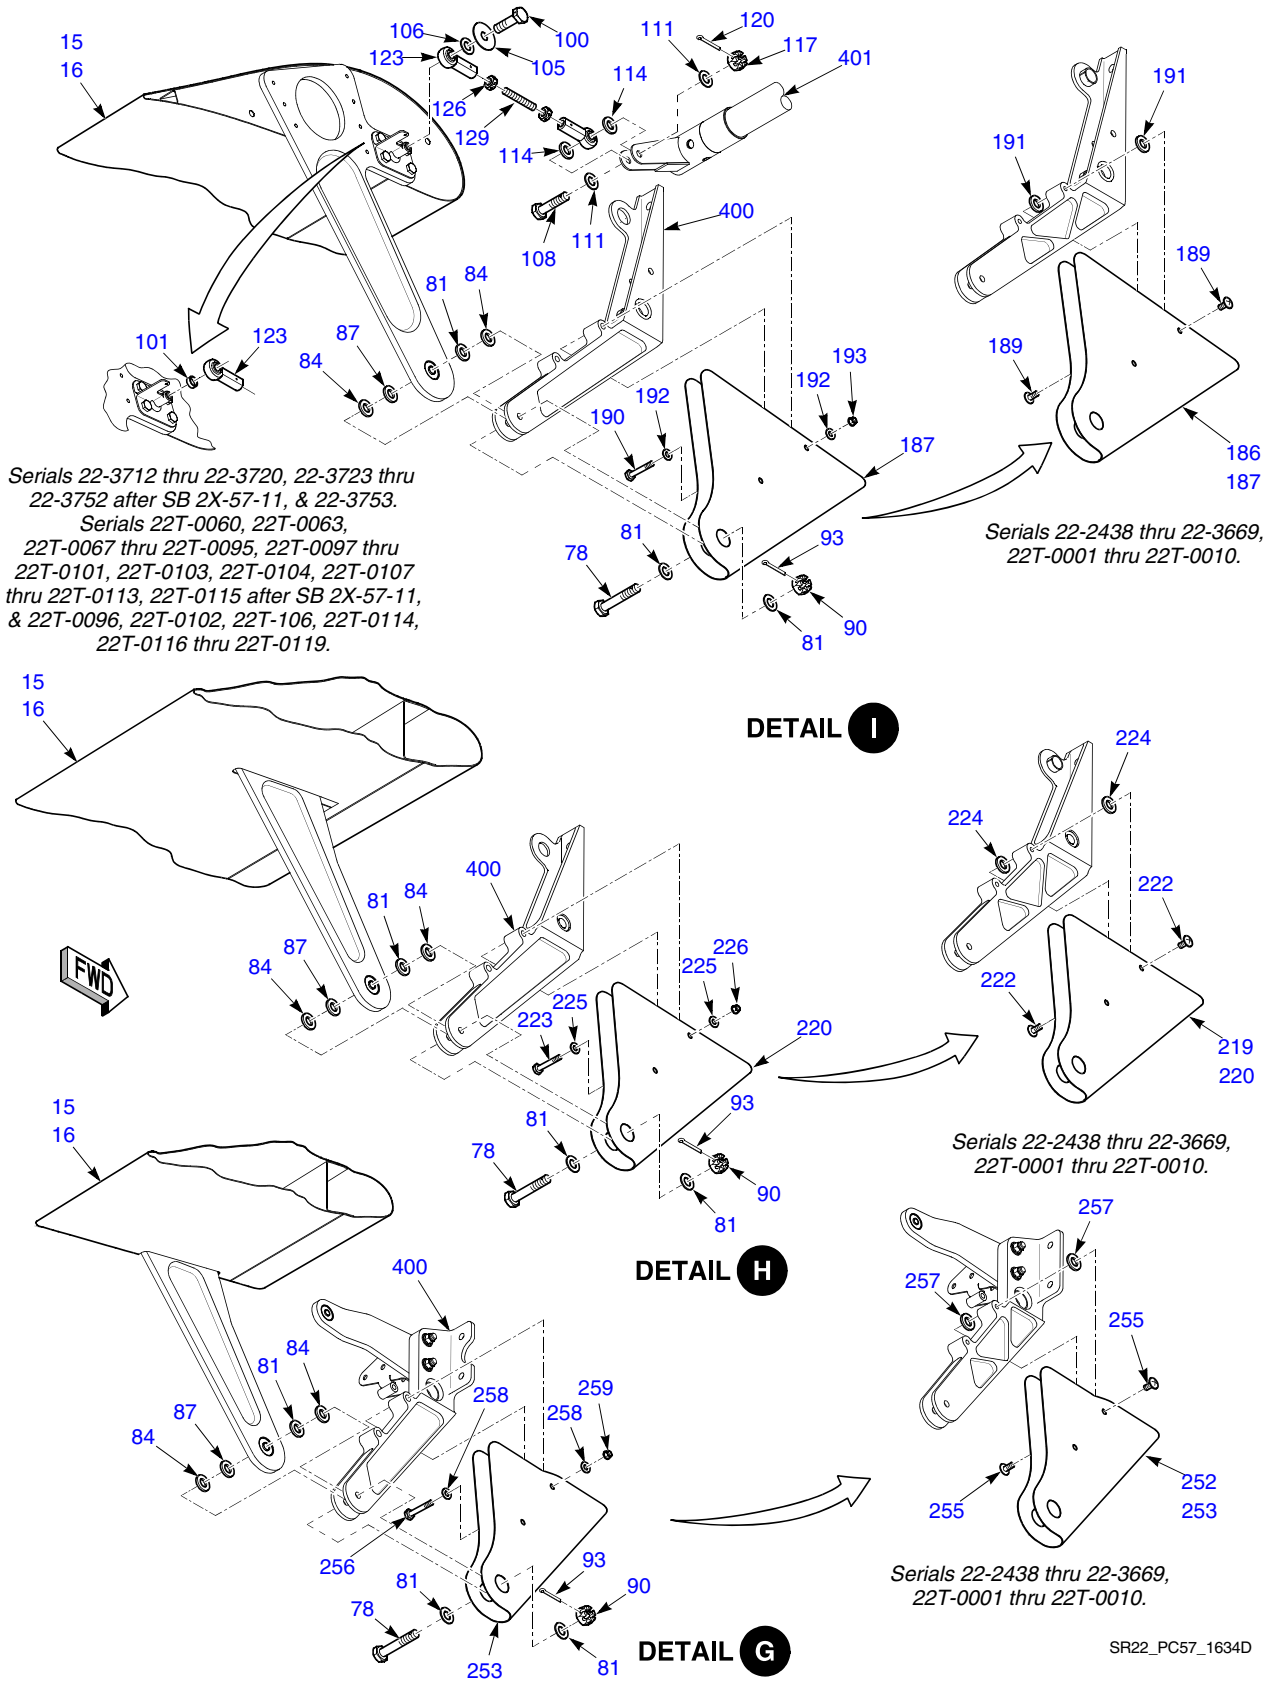

Figure-01

Flaps - Serials 22-2438 & subs, 22T-0001 & subs (3 of 3)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		FLAP INSTALLATION	0002 / 0001	/	NP
-	3	10377-003			·FLAP ASSY, LH	0002	0559	1
					FOR SPARES USE P/N 16891-001			
-	6	10377-005			·FLAP ASSY, LH	0560	0685	1
					FOR SPARES USE P/N 16891-001			
-	9	10377-007			·FLAP ASSY, LH	0686	1013	1
					FOR SPARES USE P/N 16891-001			
	12	10377-009			·FLAP ASSY, LH	1014	2437	1
					FOR SPARES USE P/N 16891-001			
	15	16891-001			·FLAP ASSY, LH	2438 / 0001	3711 / 0059	1
	16	28946-001			·FLAP ASSY, LH	3712 / 0060	/	1
-	18	10377-004			·FLAP ASSY, RH	0002	0559	1
					FOR SPARES USE P/N 16891-002			
-	21	10377-006			·FLAP ASSY, RH	0560	0685	1
					FOR SPARES USE P/N 16891-002			
-	24	10377-008			·FLAP ASSY, RH	0686	1013	1
					FOR SPARES USE P/N 16891-002			
-	27	10377-010			·FLAP ASSY, RH	1014	2437	1
					FOR SPARES USE P/N 16891-002			
-	30	16891-002			·FLAP ASSY, RH	2438 / 0001	3711 / 0059	1
-	31	28946-002			·FLAP ASSY, RH	3712 / 0060	/	1
	33	AN4-13		A	·BOLT	0002	0519	3
	36	NAS1149F0432P		A	·WASHER	0002	0519	6
	39	NAS1149F0463P		A	·WASHER	0002	0519	12
					ALTERNATE FOR P/N NAS42HT8-8			
					(W/ NAS1149F0463P)			
-	42	NAS42HT8-8			·SPACER	0002	0519	6
					ALTERNATE FOR P/N NAS1149F0463P			
					(W/ NAS1149F0463P)			
	45	MS17825-4		A	·NUT	0002	0519	3
	48	MS24665-132		A	·COTTER PIN	0002	0519	3
	51	AN4-13		A	·BOLT	0520	2437	3
	54	NAS1149F0432P		A	·WASHER	0520	2437	6
-	57	NAS42HT8-6		A	·SPACER	0520	1878	6
					ALTERNATE FOR P/N NAS1149F0463P			
					(W/ NAS1149F0432P)			
-	60	NAS1149F0463P		A	·WASHER	0520	1878	6
					ALTERNATE FOR P/N NAS42HT8-6			
					(W/ NAS1149F0432P)			
-	63	NAS1149F0432P		A	·WASHER	0520	1878	6
					ALTERNATE FOR P/N NAS42HT8-6			
					(W/ NAS1149F0463P)			
	66	NAS1149F0463P		A	·WASHER	1879	2437	6
	69	NAS1149F0416P	@	A	·WASHER	1879	2437	AR
	72	MS17825-4		A	·NUT	0520	2437	3
	75	MS24665-132		A	·COTTER PIN	0520	2437	3
	78	AN4-12		A	·BOLT	2438 / 0001	/	3
	81	NAS1149F0432P		A	·WASHER	2438 / 0001	/	9
	84	NAS1149F0463P		A	·WASHER	2438 / 0001	/	6
	87	NAS1149F0416P		A	·WASHER	2438 / 0001	/	3
	90	MS17825-4		A	·NUT	2438 / 0001	/	3
	93	MS24665-132		A	·COTTER PIN	2438 / 0001	/	3
-	96	NO PRT NUMBER			·THREADED ROD END ASSEMBLY	0002 / 0001	/	NP
-	99	AN4H7A		A	·BOLT	0002	2446	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N AN4H10A			
	100	AN4H10A		A	·BOLT	2447 / 0001	/	1
	101	NAS43HT4-6	$	A	·SPACER	3753 / 0116	3753 / 0119	1
					AFTER SB2X-57-11	3723 / 0115	3752 / 0115	
	102	NAS1149F0432P		A	·WASHER	0002	2437	1
	105	MS27183-52		A	·WASHER	2438 / 0001	/	1
	106	NAS1149F0463P		A	·WASHER	2438 / 0001	/	1
	108	AN4-10		A	·BOLT	0002 / 0001	/	1
	111	NAS1149F0432P		A	·WASHER	0002 / 0001	/	2
	114	NAS1149F0463P		A	·WASHER	0002 / 0001	/	2
	117	MS17825-4		A	·NUT	0002 / 0001	/	1
	120	MS24665-132		A	·COTTER PIN	0002 / 0001	/	1
	123	11314-004			··ROD END	0002 / 0001	/	2
	126	NAS509-4		A	··JAM NUT	0002 / 0001	/	2
	129	10659-002		A	··THREADED ROD	0002 / 0001	/	1
-	132	12423-001			·INBOARD FLAP HINGE FAIRING	0002	0251	1
					FOR SPARES USE P/N 16667-001			
-	135	15065-001			·INBOARD FLAP HINGE FAIRING	0252	0706	1
					FOR SPARES USE P/N 16667-001			
	138	15065-004			·INBOARD FLAP HINGE FAIRING	0707	1519	1
					FOR SPARES USE P/N 16667-001			
	141	AN525-832R20		A	·BOLT	0002	1519	1
	144	51047-001	#	A	·SPACER	0002	1519	1
					ALTERNATE FOR P/N 51047-002			
	147	51047-002	#	A	·SPACER	0002	1519	1
					ALTERNATE FOR P/N 51047-001			
	150	NAS1149DN832J		A	·WASHER	0002	1519	1
					ALTERNATE FOR P/N NAS1149DN832K			
	153	NAS1149DN832K		A	·WASHER	0002	1519	1
					ALTERNATE FOR P/N NAS1149DN832J			
	156	MS21042-08		A	·NUT	0002	1519	1
					ALTERNATE FOR P/N MS21044N08			
	159	MS21044N08		A	·NUT	0002	1519	1
					ALTERNATE FOR P/N MS21042-08			
-	162	16738-101			·INBOARD FLAP HINGE FAIRING ASSEMBLY	1520	2437	1
					AFTER SB2X-57-06	0002	2437	1
	165	16667-001			··INBOARD FLAP HINGE FAIRING	1520	2437	1
	168	16677-001			··STIFFENER	1520	1709	1
					FOR SPARES USE P/N 16677-002			
	171	16677-002			··STIFFENER	1710	2437	1
	174	AN525-832R18		A	··BOLT	1520	2437	2
	177	NAS1149DN832J		A	··WASHER	1520	2437	2
	180	MS21042-08		A	··NUT	1520	2437	2
	183	16684-001			··RUBBER SEAL	1520	2437	1
	186	16892-002			·INBOARD FLAP HINGE FAIRING	2438	3093	1
					FOR SPARES USE P/N 16892-003			
	187	16892-003			·INBOARD FLAP HINGE FAIRING	3094 / 0001	/	1
-	188	51867-313		A	·SCREW	2438	2465	4
					FOR SPARES USE P/N AN525-832R6			
	189	AN525-832R6		A	·SCREW	2466 / 0001	3669 / 0010	4
	190	AN3-12A		A	·BOLT	3670 / 0011	/	1
	191	NAS1149F0816P		A	·WASHER	3094 / 0001	3669 / 0010	4
	192	NAS1149F0316P		A	·WASHER	3670 / 0011	/	2
	193	MS21042-3		A	·NUT	3670 / 0011	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	194	12423-002			·MIDSPAN FLAP HINGE FAIRING	0002	0251	1
					FOR SPARES USE P/N 16668-001			
	195	15065-002			·MIDSPAN FLAP HINGE FAIRING	0252	1519	1
					FOR SPARES USE P/N 16668-001			
-	198	16738-102			·MIDSPAN FLAP HINGE FAIRING ASSEMBLY	1520	2437	1
					AFTER SB2X-57-06	0002	2437	1
	201	16668-001			··MIDSPAN FLAP HINGE FAIRING	1520	2437	1
	204	AN525-832R18		A	··BOLT	1520	2437	1
	207	51047-003		A	··SPACER	1520	2437	1
	210	NAS1149DN832J		A	··WASHER	1520	2437	1
	213	MS21042-08		A	··NUT	1520	2437	1
	216	16684-001			··RUBBER SEAL	1520	2437	1
	219	16893-002			·MIDSPAN FLAP HINGE FAIRING	2438	3093	1
					FOR SPARES USE P/N 16893-003			
	220	16893-003			·MIDSPAN FLAP HINGE FAIRING	3094 / 0001	/	1
-	221	51867-313		A	·SCREW	2438	2465	4
					FOR SPARES USE P/N AN525-832R6			
	222	AN525-832R6		A	·SCREW	2466 / 0001	3669 / 0010	4
	223	AN3-12A		A	·BOLT	3670 / 0011	/	1
	224	NAS1149F0816P		A	·WASHER	3094 / 0001	3669 / 0010	4
	225	NAS1149F0316P		A	·WASHER	3670 / 0011	/	2
	226	MS21042-3		A	·NUT	3670 / 0011	/	1
-	227	12423-003			·OUTBOARD FLAP HINGE FAIRING	0002	0251	1
					FOR SPARES USE P/N 16669-001			
	228	15065-003			·OUTBOARD FLAP HINGE FAIRING	0252	1519	1
					FOR SPARES USE P/N 16669-001			
-	231	16738-103			·OUTBOARD FLAP HINGE FAIRING ASSEMBLY	1520	2437	1
					AFTER SB2X-57-06	0002	2437	1
	234	16669-001			··OUTBOARD FLAP HINGE FAIRING	1520	2437	1
	237	AN525-832R18		A	··BOLT	1520	2437	1
	240	51047-003		A	··SPACER	1520	2437	1
	243	NAS1149DN832J		A	··WASHER	1520	2437	1
	246	MS21042-08		A	··NUT	1520	2437	1
	249	16684-001			··RUBBER SEAL	1520	2437	1
	252	16894-002			·OUTBOARD FLAP HINGE FAIRING	2438	3093	1
					FOR SPARES USE P/N 16894-003			
	253	16894-003			·OUTBOARD FLAP HINGE FAIRING	3094 / 0001	/	1
-	254	51867-313		A	·SCREW	2438	2465	4
					FOR SPARES USE P/N AN525-832R6			
	255	AN525-832R6		A	·SCREW	2466 / 0001	3669 / 0010	4
	256	AN3-12A		A	·BOLT	3670 / 0011	/	1
	257	NAS1149F0816P		A	·WASHER	3094 / 0001	3669 / 0010	4
	258	NAS1149F0316P		A	·WASHER	3670 / 0011	/	2
	259	MS21042-3		A	·NUT	3670 / 0011	/	1
-	260	50550-001		A	·FOAM TAPE	0002	2437	AR
	261	50673-001			·EXTRUDED VINYL TRIM	0002	1519	AR
-	264	51178-005			·RUB STRIP, FLAP ASSEMBLY	0169	0227	1
-	267	51168-002			·RUB STRIP, FLAP ASSEMBLY	0228	2437	1
						2828 / 0001	/	1
	270	51168-002			·RUB STRIP, FLAP HINGE	1520	2437	3
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 57-40-01 DET			FLAP HINGE			
	401	RF 27-50-01 DET			TORQUE TUBE ASSEMBLY			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						SYMBOL NOTES:			
			**			SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
						1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
						2) SERIAL NUMBER 22-3721, 22-3722; REFER TO 22-3670 FOR PART IDENTIFICATION.			
						3) SERIAL NUMBER 22T-0061, 22T-0062, 22T-0065, 22T-0065, 22T-0066; REFER TO 22T-0011 FOR PART IDENTIFICATION.			
						4) SERIAL NUMBER 22T-0096, 22T-0102, 22T-0106, 22T-0114; REFER TO 22T-0116 FOR PART IDENTIFICATION.			
						5) SERIAL NUMBER 22-3712 THRU 22-3720 AFTER SB2X-57-11; REFER TO 22-3723 FOR PART IDENTIFICATION.			
						6) SERIAL NUMBER 22T-0063, 22T-0067 THRU 22T-0095, 22T-0097 THRU 22T-0101, 22T-0103, 22T-0104, 22T-0107 THRU 22T-0113 AFTER SB2X-57-11; REFER TO 22T-0115 FOR PART IDENTIFICATION.			
			@			MAXIMUM ALLOWABLE GAP OF 0.013 INCH (0.03 CM) INSIDE OF FLAP HINGE. USE WASHER AS REQUIRED TO MEET GAP REQUIREMENT.			
			#			IF NECESSARY, ADJUST LENGTH OF SPACER SO DISTANCE BETWEEN FAIRING OUTER SURFACES DOES NOT EXCEED 0.95 INCH (2.41 CM). NOMINAL SPACER LENGTH IS 0.67 INCH (1.70 CM).			
			$			OMIT SPACER IF REPLACING END FITTING P/N 15231-001 (REFER TO 27-50-01)			

Intentionally Left Blank

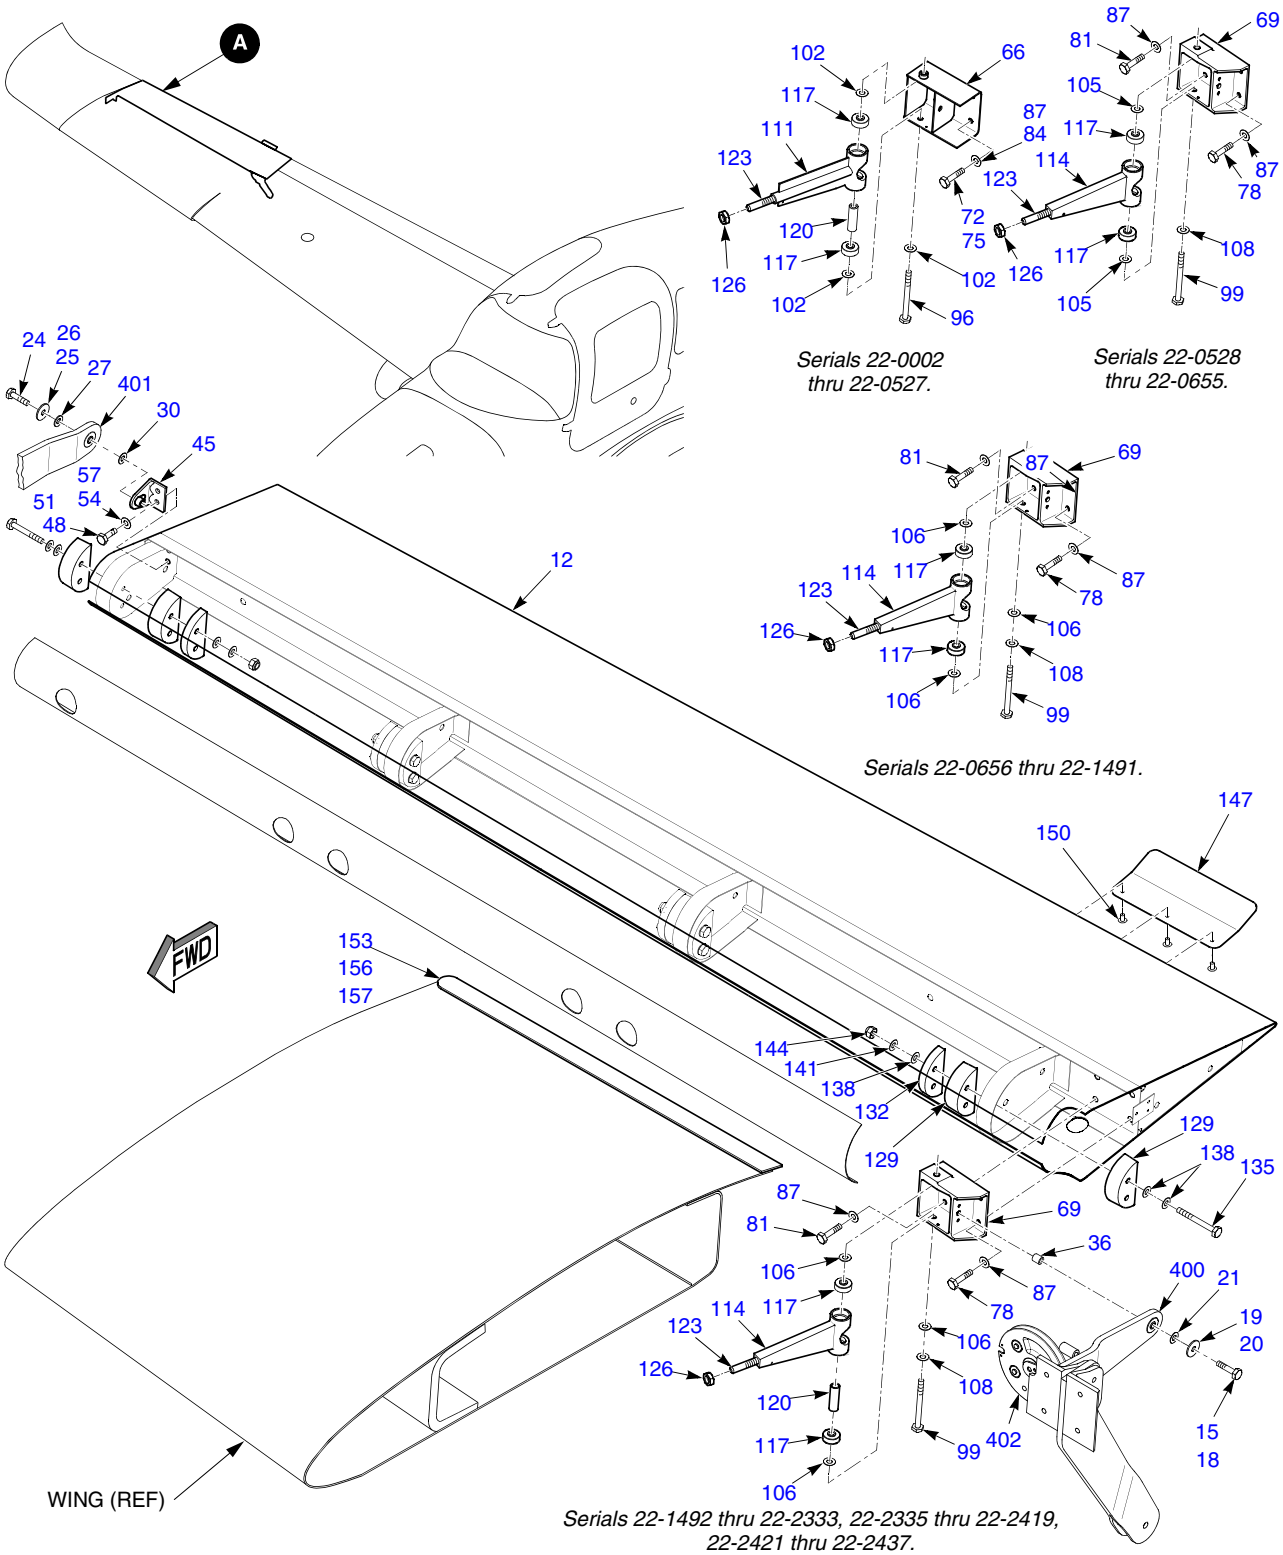

DETAIL A

SR22_PC57_1259G

Figure-02

Ailerons - Serials 22-0002 thru 22-2437 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-2437

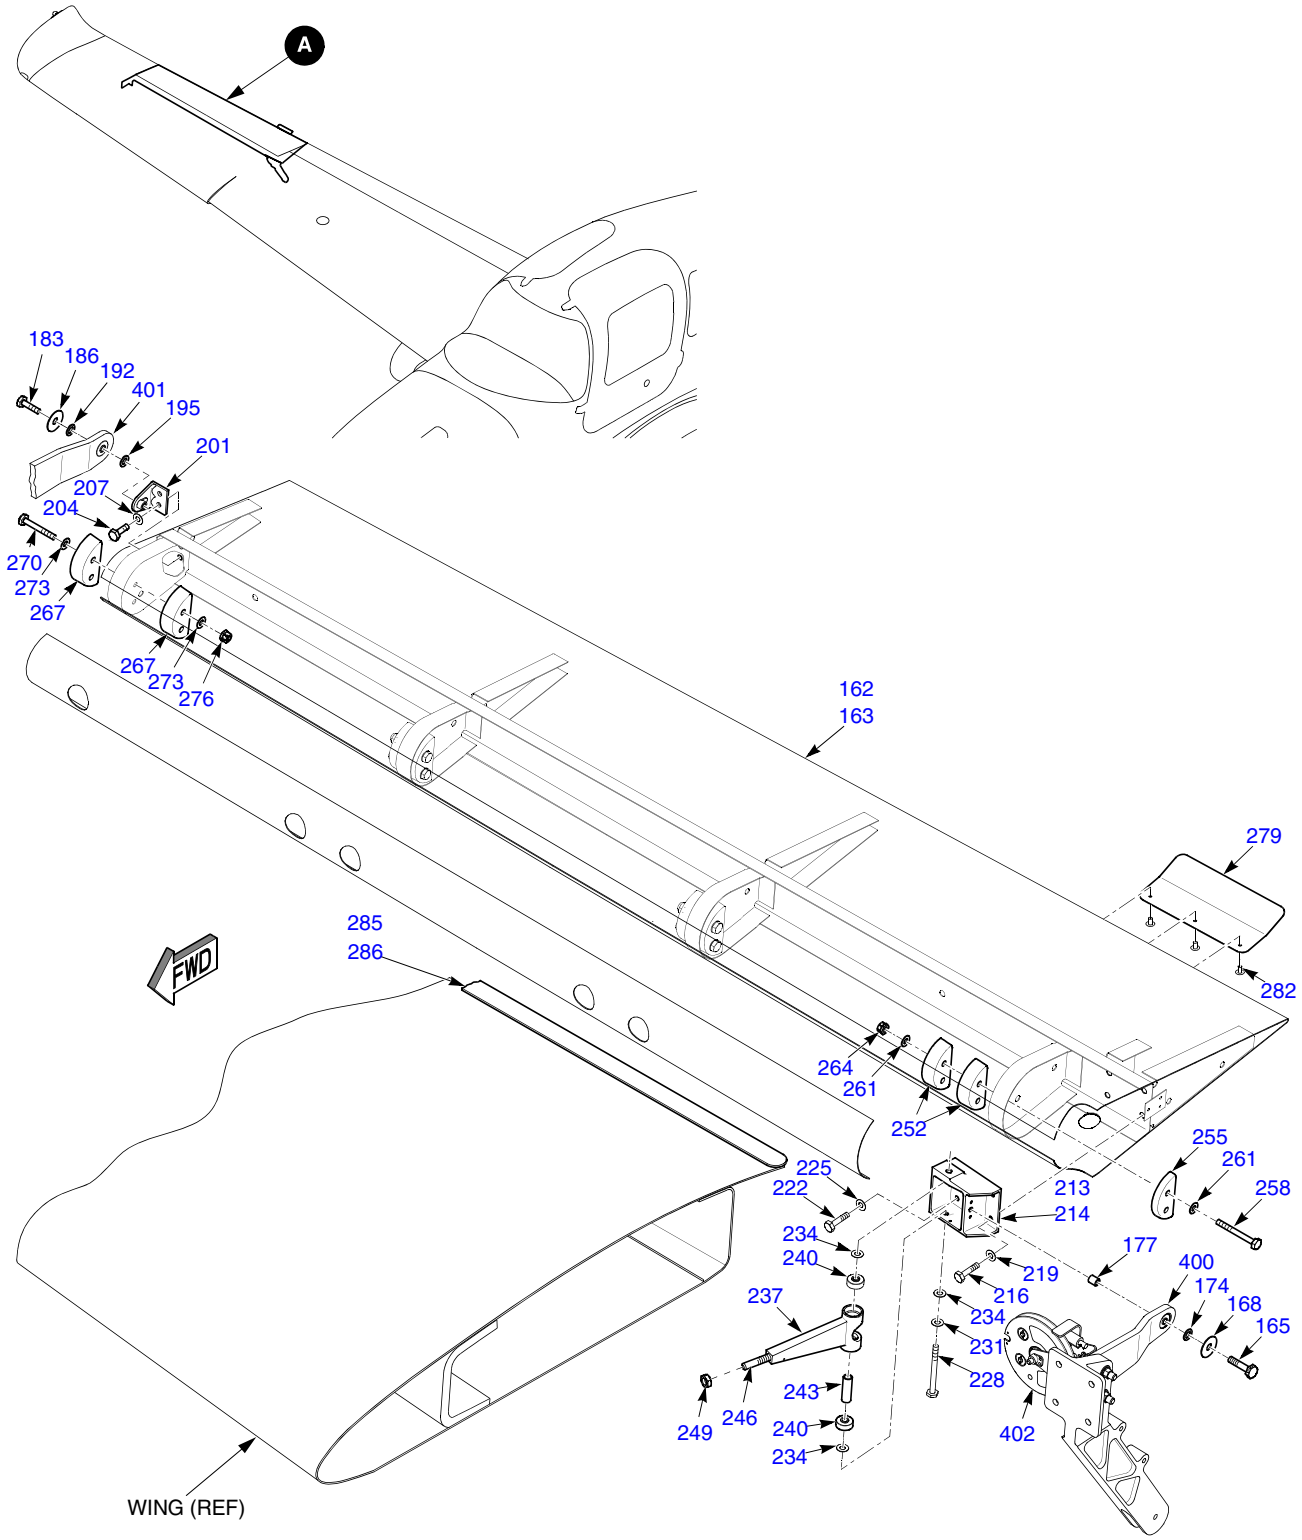

DETAIL A

Serials 22-2334, 22-2420, 22-2438 & subs, 22T-0001 & subs.

SR22_PC57_1667A

Figure-02

Ailerons - Serials 22-2438 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-2438 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		AILERON INSTALLATION	0002 / 0001	/	NP
-	3	10758-103			·AILERON ASSEMBLY, LH	0002	0527	1
					FOR SPARES USE P/N 16875-003			
-	6	10758-107			·AILERON ASSEMBLY, LH	0528	0992	1
						0993	2437	
					FOR SPARES USE P/N 16875-003			
-	9	10758-106			·AILERON ASSEMBLY, RH	0002	0527	1
					FOR SPARES USE P/N 16875-004			
	12	10758-108			·AILERON ASSEMBLY, RH	0528	0992	1
						0993	2437	
					FOR SPARES USE P/N 16875-004			
	15	NAS6203-9H		A	··BOLT	0002	0527	1
	18	NAS6203-10H		A	··BOLT	0528	2437	1
	19	MS63040-3		A	··WASHER	1287	2437	1
					ALTERNATE FOR P/N AN970-3			
-	20	AN970-3		A	··WASHER	1287	2437	1
					ALTERNATE FOR P/N MS63040-3			
	21	NAS1149F0332P		A	··WASHER	0002	2437	1
	24	NAS6203-6H		A	··BOLT	0002	2437	1
	25	MS63040-3		A	··WASHER	1287	2437	1
					ALTERNATE FOR P/N AN970-3			
-	26	AN970-3		A	··WASHER	1287	2437	1
					ALTERNATE FOR P/N MS63040-3			
	27	NAS1149F0332P		A	··WASHER	0002	2437	1
	30	NAS1149F0316P		A	··WASHER	0002	2437	1
					ALTERNATE FOR P/N NAS1149F0332P			
-	33	NAS1149F0332P		A	··WASHER	0002	2437	1
					ALTERNATE FOR P/N NAS1149F0316P			
	36	11639-016			·SPACER	0002	2437	1
					ALTERNATE FOR P/N NAS43HT3-16			
-	39	NAS43HT3-16			·SPACER	0002	2437	1
					ALTERNATE FOR P/N 11639-016			
-	42	10333-005			··OUTBOARD HINGE ATTACH BRACKET, LH	0002	2437	1
	45	10333-006			··OUTBOARD HINGE ATTACH BRACKET, RH	0002	2437	1
	48	AN3H5A		A	··BOLT	0002	0185	2
	51	AN3-5A		A	··BOLT	0186	2437	2
	54	NAS1149F0316P		A	··WASHER	0002	0185	2
	57	MS35338-43		A	··WASHER	0186	2437	2
-	60	10331-011			··INBOARD HINGE ATTACH BRACKET, LH	0002	0527	1
-	63	15123-001			··INBOARD HINGE ATTACH BRACKET, LH	0528	2437	1
	66	10331-012			··INBOARD HINGE ATTACH BRACKET, RH	0002	0527	1
	69	15123-002			··INBOARD HINGE ATTACH BRACKET, RH	0528	2437	1
	72	AN3H5A		A	··BOLT	0002	0185	4
	75	AN3-5A		A	··BOLT	0186	0527	4
	78	AN3-5A		A	··BOLT	0528	2437	2
	81	AN3-6A		A	··BOLT	0528	2437	2
	84	NAS1149F0316P		A	··WASHER	0002	0185	4
	87	MS35338-43		A	··WASHER	0186	2437	4
-	90	10330-003			··ACTUATION ARM ASSEMBLY	0002	0527	1
-	93	15353-001			··ACTUATION ARM ASSEMBLY	0528	1491	1
					FOR SPARES USE P/N 16790-001			
-	94	16790-001			··ACTUATION ARM ASSEMBLY	1492	2437	1
	96	AN3H-21A		A	··BOLT	0002	0527	1
	99	AN3H-22A		A	··BOLT	0528	2437	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	102	NAS1149F0316P		A	··WASHER	0002	0527	3
	105	NAS1149F0316P		A	··WASHER	0528	0655	2
	106	NAS1149F0316P		A	··WASHER	0656	2437	3
	108	NAS1149F0363P		A	··WASHER	0528	2437	1
	111	11195-007			···ACTUATION ARM	0002	0527	1
	114	15352-001			···ACTUATION ARM	0528	2437	1
	117	MS27641-3			···BEARING	0002	2437	2
	120	NAS43MT3-68			···SPACER	0002	0527	1
						1492	2437	1
	123	11196-003			···ACTUATION PIN	0002	2437	1
	126	NAS1423-4		A	···NUT	0002	2437	1
	129	10751-001			··MASS BALANCE	0002	2437	8
	132	10751-002			··MASS BALANCE	0002	2437	AR
	135	AN3-16A		A	··BOLT	0002	2437	8
	138	NAS1149F0332P		A	··WASHER	0002	2437	24
	141	12682-001	#		··LEAD WASHER	0002	2437	AR
	144	MS21044N3		A	··NUT	0002	2437	8
	147	14435-001	@		··TRIM TAB	0002	2437	1
	150	NAS9301B4-1		A	··BLIND RIVET	0002	2437	3
	153	14390-001			·AILERON GAP SEAL	0002	0209	2
					ALTERNATE FOR P/N 14390-002			
					FOR SPARES USE P/N 14390-003			
	156	14390-002			·AILERON GAP SEAL	0210	2437	2
					ALTERNATE FOR P/N 14390-001			
					FOR SPARES USE P/N 14390-003			
	157	14390-003			·AILERON GAP SEAL	0002	2437	2
-	158	51042-005			·TAPE, TWO-SIDED	0002	2437	AR
-	159	16875-001			·AILERON ASSEMBLY, LH	2438 / 0001	3635 / 0001	1
					FOR SPARES USE 16875-003			
-	160	16875-003			·AILERON ASSEMBLY, LH	3636 / 0002	/	1
	162	16875-002			·AILERON ASSEMBLY, RH	2438 / 0001	3635 / 0001	1
					FOR SPARES USE 16875-004			
	163	16875-004			·AILERON ASSEMBLY, RH	3636 / 0002	/	1
	165	NAS6203-12H		A	·BOLT	2438 / 0001	/	1
	168	AN970-3		A	·WASHER	2438 / 0001	/	1
					ALTERNATE FOR P/N MS63040-3			
-	171	MS63040-3		A	·WASHER	2438 / 0001	/	1
					ALTERNATE FOR P/N AN970-3			
	174	NAS1149F0316P		A	·WASHER	2438 / 0001	/	1
	177	NAS42DD6B-16FC			·SPACER	2438 / 0001	/	1
					ALTERNATE FOR P/N NAS42DD6B-16N			
-	180	NAS42DD6B-16N			·SPACER	2438 / 0001	/	1
					ALTERNATE FOR P/N NAS42DD6B-16FC			
	183	NAS6203-7H		A	·BOLT	2438 / 0001	/	1
	186	AN970-3		A	·WASHER	2438 / 0001	/	1
					ALTERNATE FOR P/N MS63040-3			
-	189	MS63040-3		A	·WASHER	2438 / 0001	/	1
					ALTERNATE FOR P/N AN970-3			
	192	NAS1149F0316P		A	·WASHER	2438 / 0001	/	1
	195	NAS1149F0363P		A	··WASHER	2438 / 0001	/	1
-	198	10333-005			··OUTBOARD HINGE ATTACH BRACKET, LH	2438 / 0001	/	1
	201	10333-006			··OUTBOARD HINGE ATTACH BRACKET, RH	2438 / 0001	/	1
	204	AN3-5A		A	··BOLT	2438 / 0001	/	2
	207	MS35338-43		A	··WASHER	2438 / 0001	/	2

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	210	15123-001			··INBOARD HINGE ATTACH BRACKET, LH	2438 / 0001	3635 / 0001	1
-	211	15123-003			··INBOARD HINGE ATTACH BRACKET, LH	3636 / 0002	/	1
	213	15123-002			··INBOARD HINGE ATTACH BRACKET, RH	2438 / 0001	3635 / 0001	1
	214	15123-004			··INBOARD HINGE ATTACH BRACKET, RH	3636 / 0002	/	1
	216	AN3-6A		A	··BOLT	2438 / 0001	/	2
	219	MS35338-43		A	··WASHER	2438 / 0001	/	2
	222	AN3-5A		A	··BOLT	2438 / 0001	/	2
	225	MS35338-43		A	··WASHER	2438 / 0001	/	2
-	226	16790-001			··ACTUATION ARM ASSEMBLY, AILERON	2438 / 0001	/	1
	228	AN3H-22A		A	··BOLT	2438 / 0001	/	1
	231	NAS1149F0363P		A	··WASHER	2438 / 0001	3635 / 0001	1
	234	NAS1149F0316P		A	··WASHER	2438 / 0001	/	3
	237	15352-001			···ACTUATION ARM	2438 / 0001	/	1
	240	MS27641-3			···BEARING	2438 / 0001	/	2
	243	NAS43HT3-68			···SPACER	2438 / 0001	/	1
	246	11196-003			···ACTUATION PIN	2438 / 0001	/	1
	249	NAS1423-4		A	···NUT	2438 / 0001	/	1
	252	10751-001			··MASS BALANCE	2438 / 0001	/	2
	255	10751-002			··MASS BALANCE	2438 / 0001	/	1
	258	AN3-17A		A	··BOLT	2438 / 0001	/	2
	261	NAS1149F0316P		A	··WASHER	2438 / 0001	/	4
	264	MS21044N3		A	··NUT	2438 / 0001	/	2
	267	10751-001			··MASS BALANCE	2438 / 0001	/	6
	270	AN3-15A		A	··BOLT	2438 / 0001	/	6
	273	NAS1149F0316P		A	··WASHER	2438 / 0001	/	12
	276	MS21044N3		A	··NUT	2438 / 0001	/	6
	279	14435-001	@		··TRIM TAB	2438 / 0001	/	1
	282	NAS9301B4		A	··BLIND RIVET	2438 / 0001	/	3
	285	14390-002			·AILERON GAP SEAL	2438 / 0001	3707 / 0048	2
					FOR SPARES USE P/N 14390-003			
	286	14390-003			·AILERON GAP SEAL	3708 / 0049		2
-	289	51042-005			·TAPE, TWO-SIDED	2438 / 0001		AR
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 57-40-01 DET			FLAP AND AILERON HINGE INSTALLATION			
	401	RF 57-40-01 DET			FLAP AND AILERON HINGE INSTALLATION			
	402	RF 27-10-03 DET			ROLL TRIM SYSTEM			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
			#		LEAD WASHER MAY BE ADDED TO OBTAIN BALANCE.			
			@		RH ASSEMBLY ONLY.			

Intentionally Left Blank

CHAPTER

61

PROPELLER

Intentionally Left Blank

CHAPTER 61 - PROPELLER
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
61-LOEP	1	19 SEP 2017
61-LOEP	2	19 SEP 2017
61-TOC	1	19 SEP 2017
61-TOC	2	19 SEP 2017
61-10-01	1	15 DEC 2014
61-10-01	2	15 DEC 2014
61-10-01	3	15 DEC 2014
61-10-01	4	15 DEC 2014
61-10-01	5	15 DEC 2014
61-10-01	6	15 DEC 2014
61-20-01	1	19 SEP 2017
61-20-01	2	19 SEP 2017
61-20-01	3	19 SEP 2017
61-20-01	4	19 SEP 2017

Intentionally Left Blank

EFFECTIVITY:
All

CHAPTER 61 - PROPELLER

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Propeller - Serials 22-0002 & subs, 22T-0001 & subs w/ Hartzell Propeller (1 of 2)	61-10-01
Propeller - Serials 22-0687 & subs w/ McCauley Propeller (2 of 2)	61-10-01
Governor - Serials 22-0002 & subs	61-20-01
Governor - Serials 22T-0001 & subs	61-20-01

Intentionally Left Blank

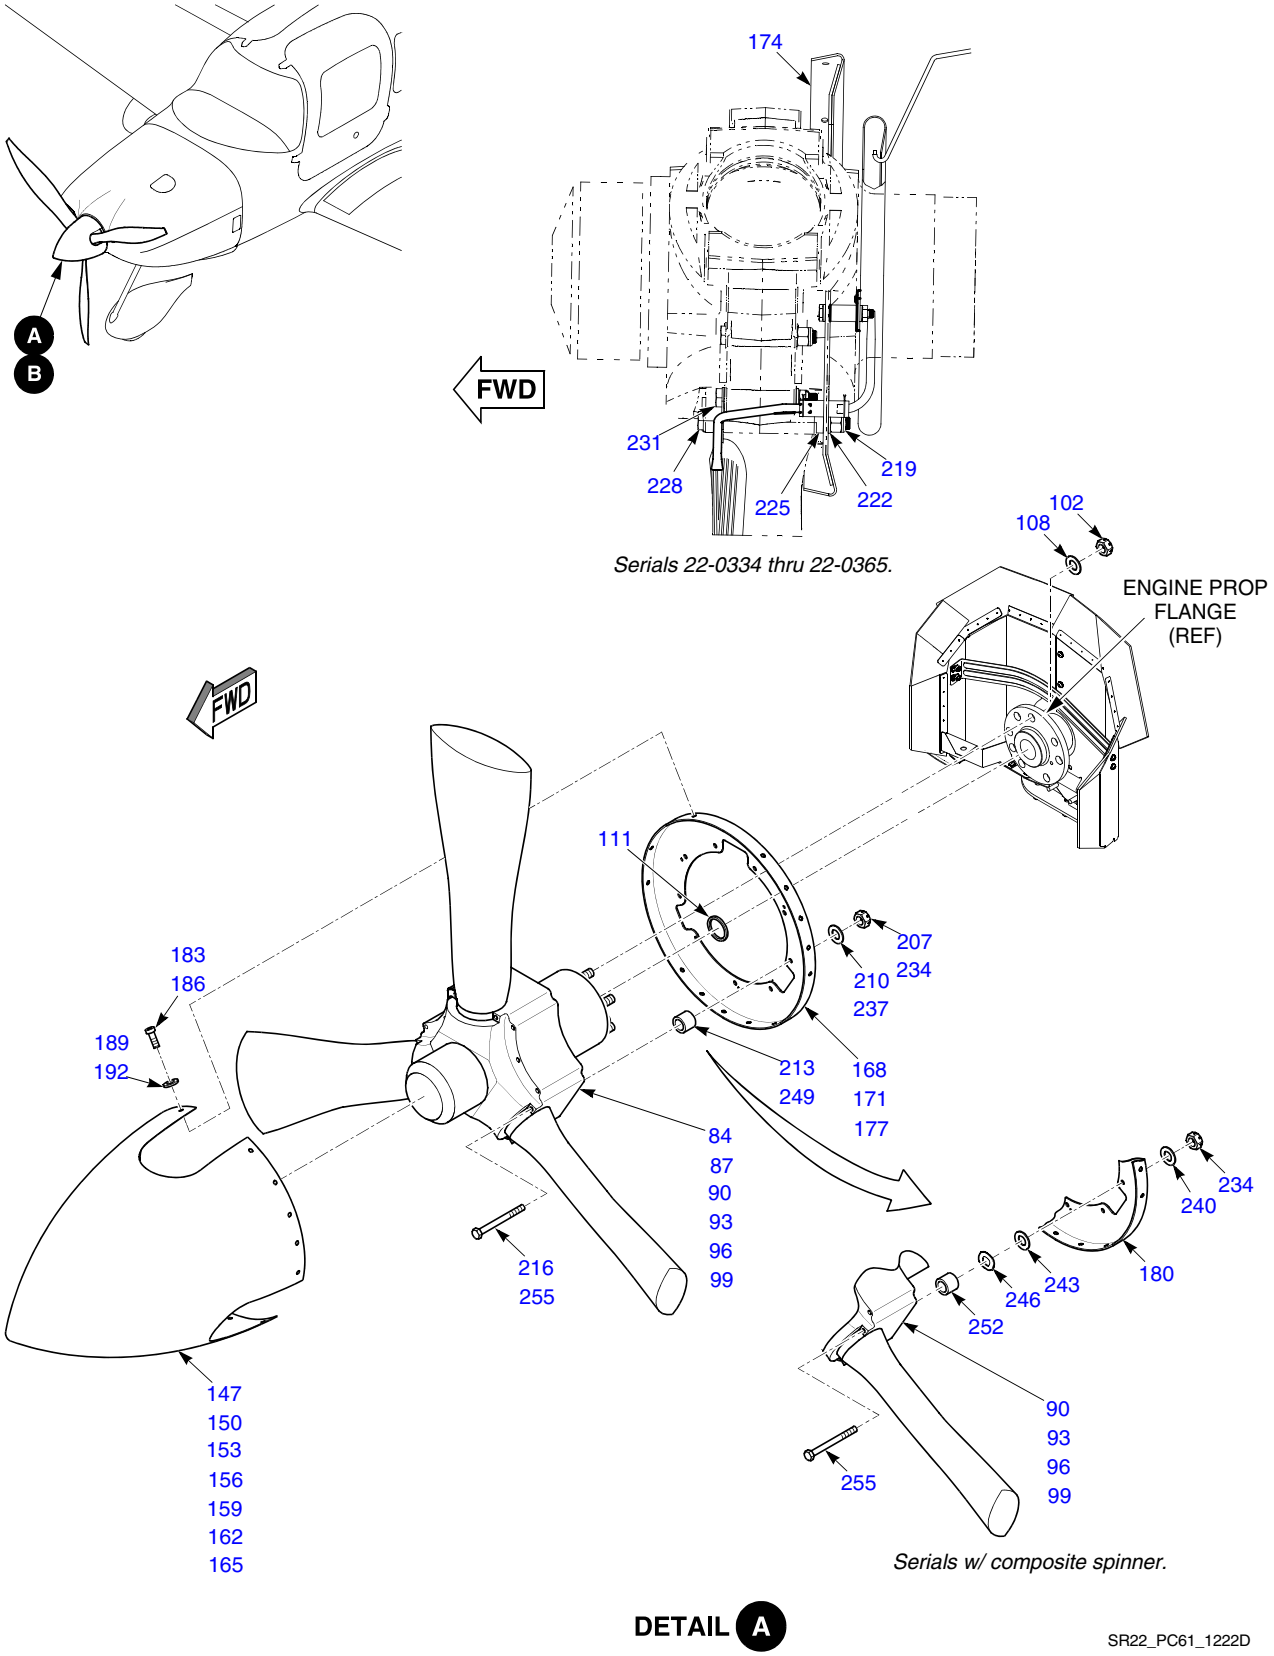

Figure-01

Propeller - Serials 22-0002 & subs, 22T-0001 & subs w/ Hartzell Propeller (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs, 22T-0001 & subs w/ Hartzell Propeller

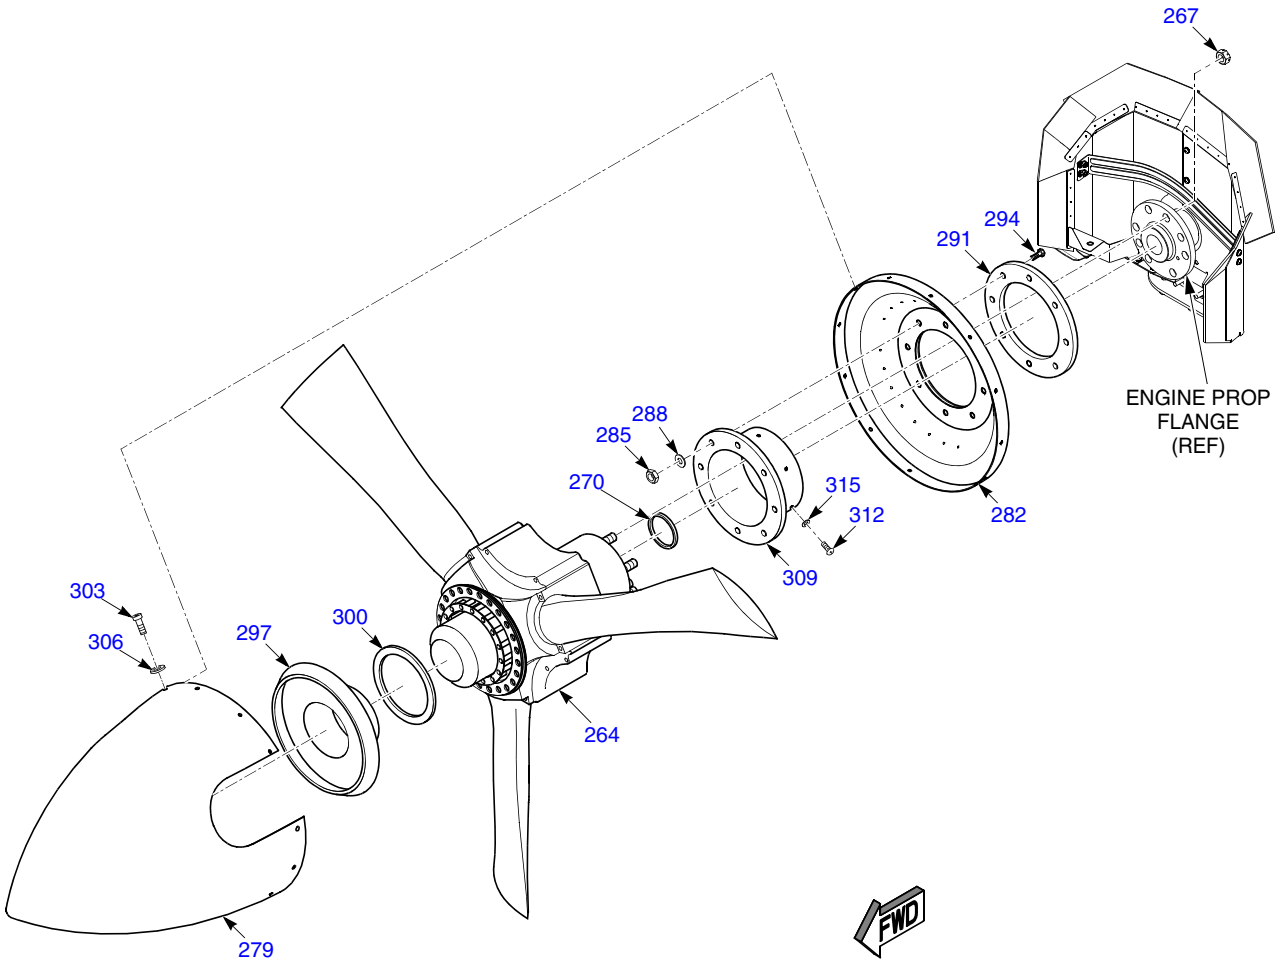

Figure-01
Propeller - Serials 22-0687 & subs w/ McCauley Propeller (2 of 2)

EFFECTIVITY:
Serials 22-0687 & subs w/ McCauley Propeller

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			PROPELLER (HARTZELL)	0002 / 0001	/	NP
-	3	14070-001			·PROP/MOUNT KIT, METAL PROP, GRAY	0002		AR
-	6	15176-001			·PROP/MOUNT KIT, METAL PROP (HARTZELL INSTALL)	0334	0365	AR
-	9	14070-002			·PROP/MOUNT KIT, METAL PROP, LINEN	0002		AR
-	12	14070-003			·PROP/MOUNT KIT, METAL PROP, WHITE	0002		AR
-	15	14070-004			·PROP/MOUNT KIT, METAL PROP, SILVER DF	0002		AR
-	18	14070-005			·PROP/MOUNT KIT, METAL PROP, WHITE DF	0002		AR
-	21	14070-006			·PROP/MOUNT KIT, METAL PROP, SILVER DF W/BOOTS	0366		AR
-	24	14070-007			·PROP/MOUNT KIT, METAL PROP, WHITE DF W/BOOTS	0366		AR
-	27	14070-008			·PROP/MOUNT KIT, METAL PROP, WHITE W/BOOTS	0366		AR
-	30	14070-009			·PROP/MOUNT KIT, METAL PROP, LINEN DF W/BOOTS	0366		AR
-	33	14070-010			·PROP/MOUNT KIT, METAL PROP, BLACK DF, W/BOOTS	0366		AR
-	36	14070-011			·PROP/MOUNT KIT, METAL PROP, BLACK DF W/BOOTS	0366		AR
-	39	14070-012			·PROP/MOUNT KIT, METAL PROP, B/SL DF W/BOOTS	0366		AR
-	42	14070-013			·PROP/MOUNT KIT, METAL PROP, BLACK/SILVER DF	0002		AR
-	45	14070-014			·PROP/MOUNT KIT, METAL PROP, BLACK/WHITE DF	0002		AR
-	48	18975-001			·PROP/MOUNT KIT, COMP PROP, B/W	2022 / 0001	/	AR
-	51	18975-002			·PROP/MOUNT KIT, COMP PROP, B/W W/BOOTS	2022 / 0001	/	AR
-	54	18975-003			·PROP/MOUNT KIT, COMP PROP, B/RD&YL SE W/BOOTS	2022 / 0001	/	AR
-	57	18975-004			·PROP/MOUNT KIT, COMP PROP, B/SL W/BOOTS	2022 / 0001	/	AR
-	60	18975-005			·PROP/MOUNT KIT, COMP PROP, B/W, LT	2022 / 0001	/	AR
-	63	18975-006			·PROP/MOUNT KIT, COMP PROP, B/W, LT W/BOOTS	2022 / 0001	/	AR
-	66	18975-007			·PROP/MOUNT KIT, COMP PROP/SPIN, B/W, LT	2022 / 0001	/	AR
-	69	18975-008			·PROP/MOUNT KIT, COMP PROP/SPIN, B/W, LT W/BOOTS	2022 / 0001	/	AR
-	72	18975-009			·PROP/MOUNT KIT, COMP PROP, B/SL, LT	2022 / 0001	/	AR
-	75	18975-010			·PROP/MOUNT KIT, COMP PROP, B/SL, LT W/BOOTS	2022 / 0001	/	AR
-	78	18975-011			·PROP/MOUNT KIT, COMP PROP/SPIN, B/SL, LT	2022 / 0001	/	AR
-	81	18975-012			·PROP/MOUNT KIT, COMP PROP/SPIN, B/SL, LT W/BOOTS	2022 / 0001	/	AR
	84	14070-101			··PROP ASSEMBLY	0002		1
	87	14070-103			··PROP ASSEMBLY, DF	0002		1
	90	18975-101			··PROP ASSEMBLY, COMPOSITE	2022 / 0001	/	1
	93	18975-102			··PROP ASSEMBLY, COMPOSITE W/BOOTS	2022 / 0001	/	1
	96	18975-104			··PROP ASSEMBLY, COMPOSITE LT	2022 / 0001	/	1
	99	18975-105			··PROP ASSEMBLY, COMPOSITE LT W/BOOTS	2022 / 0001	/	1
	102	A-2044		A	··NUT (HARTZELL)	0002 / 0001	/	6
					ALTERNATE FOR P/N MS21045-8			
-	105	MS21045-8		A	··NUT	0002 / 0001	/	6
					ALTERNATE FOR P/N A-2044			
	108	A-1381		A	··WASHER (HARTZELL)	0002 / 0001	/	6
	111	C-3317-228			··O-RING	0002 / 0001	/	1
-	114	13978-001			·SPINNER ASSEMBLY, W/O ICE, POLISHED	0002	0333	1
					ALTERNATE FOR P/N 13978-003			
-	117	13978-003			·SPINNER ASSEMBLY, W/O ICE, POLISHED	0002	0333	1
					ALTERNATE FOR P/N 13978-001			
-	120	13978-002			·SPINNER ASSEMBLY, W/O ICE, DULL	0002	0333	1
					ALTERNATE FOR P/N 13978-004			
-	123	13978-004			·SPINNER ASSEMBLY, W/O ICE, DULL	0002	0333	1
					ALTERNATE FOR P/N 13978-002			
-	126	13978-005			·SPINNER ASSEMBLY, W/O ICE, CARBON FIBER	2022 0001		1
-	129	15176-102	%		·SPINNER ASSEMBLY, W/ ICE (HARTZELL INSTL)	0334	0365	1
-	132	13978-001			·SPINNER ASSEMBLY,W/ ICE, POLISHED (CIRRUS INSTL)	0366		1
					ALTERNATE FOR P/N 13978-003			
-	135	13978-003			·SPINNER ASSEMBLY,W/ ICE, POLISHED (CIRRUS INSTL)	0366		1
					ALTERNATE FOR P/N 13978-001			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	138	13978-002			·SPINNER ASSEMBLY, W/ ICE, DULL (CIRRUS INSTL)	0366		1
					ALTERNATE FOR P/N 13978-004			
-	141	13978-004			·SPINNER ASSEMBLY, W/ ICE, DULL (CIRRUS INSTL)	0366		1
					ALTERNATE FOR P/N 13978-002			
-	144	13978-005			·SPINNER ASSEMBLY, W/ ICE, CARBON FIBER	2022 0001		1
	147	C-3532-5P	@		··SPINNER DOME, W/O ICE, POLISHED	0002		1
	150	C-3532-5	$		··SPINNER DOME, W/O ICE, DULL	0002		1
	153	102885( )			··SPINNER DOME, W/O ICE (CARBON FIBER)	2022 0001		1
	156	PRT OF ITM 129	%		··SPINNER DOME, W/ ICE (HARTZELL INSTL)	0334	0365	1
	159	C-3532-5P	@		··SPINNER DOME, W/ ICE, POLISHED (CIRRUS INSTL)	0366		1
	162	C-3532-5	$		··SPINNER DOME, W/ ICE, DULL (CIRRUS INSTL)	0366		1
	165	102885( )			··SPINNER DOME, W/ ICE (CARBON FIBER)	2022 0001		1
	168	C-2294-12P			··SPINNER BULKHEAD, W/O ICE PROTECTION	0002		1
	171	102892( )			··SPINNER BULKHEAD, W/O ICE (CARBON FIBER)	2022 0001		1
	174	PRT OF ITM 129	%		··SPINNER BULKHEAD, W/ ICE (HARTZELL INSTL)	0334	0365	1
	177	C-2294-12P			··SPINNER BULKHEAD, W/ ICE (CIRRUS INSTL)	0366		1
	180	102892( )			··SPINNER BULKHEAD, W/ ICE (CARBON FIBER)	2022 0001		1
	183	AN526C1032R8	^	A	··SCREW	0002		15
	186	B-3867-272	&	A	··SCREW	2022 0001		15
	189	A-1020	^	A	··WASHER	0002		15
	192	B-3860-10L	&	A	··WASHER	2022 / 0001	/	15
-	195	14070-102		A	··SPINNER MOUNTING KIT, W/O ICE PROTECTION	0002		1
-	198	PRT OF ITM 129		A	··SPINNER MOUNTING KIT, W/ ICE (HARTZELL INSTL)	0334	0365	1
-	201	14070-102		A	··SPINNER MOUNTING KIT, W/ ICE (CIRRUS INSTL)	0366		1
-	204	18975-106		A	··SPINNER MOUNTING KIT, W/ ICE (CARBON FIBER)	2022 / 0001	/	1
	207	B-3599	^	A	···NUT (METAL SPINNER - CIRRUS INSTL)	0002		6
	210	B-3834-0663	^	A	···WASHER (METAL SPINNER - CIRRUS INSTL)	0002		6
	213	A-2246-3	^	A	···SPACER (METAL SPINNER - CIRRUS INSTL)	0002		6
	216	A2433	^	A	···BOLT (METAL SPINNER - CIRRUS INSTL)	0002		6
	219	PRT OF ITM 129	^	A	···NUT (METAL SPINNER - HARTZELL INSTL)	0334	0365	6
	222	PRT OF ITM 129	^	A	···WASHER (METAL SPINNER - HARTZELL INSTL)	0334	0365	6
	225	PRT OF ITM 129	^	A	···SPACER (METAL SPINNER - HARTZELL INSTL)	0334	0365	6
	228	PRT OF ITM 129	^	A	···BOLT (METAL SPINNER - HARTZELL INSTL)	0334	0365	6
	231	PRT OF ITM 129	^	A	···BOLT (METAL SPINNER - HARTZELL INSTL)	0334	0365	3
	234	B-3599	&	A	···NUT	2022 / 0001	/	6
	237	B-3834-0663	&	A	···WASHER (METAL SPINNER)	2022 / 0001	/	6
	240	B-7423	&	A	···WASHER (COMPOSITE SPINNER)	2022 / 0001	/	6
	243	B-3834-0832	&	A	···WASHER (COMPOSITE SPINNER)	2022 / 0001	/	6
	246	B-7425	&	A	···WASHER, WAVE (COMPOSITE SPINNER)	2022 / 0001	/	6
	249	A-2246-3	&	A	···SPACER (METAL SPINNER)	2022 / 0001	/	6
	252	B-7424-1	&	A	···SPACER (COMPOSITE SPINNER)	2022 / 0001	/	6
	255	A-2433	&	A	···BOLT	2022 / 0001	/	6
					**********			
-	258	NO PRT NUMBER			PROPELLER (MCCAULEY)	0687		NP
-	261	15785-002	#		·PROPELLER ASSY & MOUNTING KIT (MCCAULEY)	0687		AR
	264	NO PRT NUMBER			··PROPELLER ASSEMBLY (MCCAULEY)	0687		1
	267	A-1639-2		A	··NUT (MCCAULEY)	0687		6
	270	A-1633-3			··O-RING (MCCAULEY)	0687		1
-	273	15832-001			··SPINNER ASSEMBLY (MCCAULEY), (POLISHED)	0687		1
					ALTERNATE FOR P/N 15832-002			
-	276	15832-002			··SPINNER ASSEMBLY (MCCAULEY), (SATIN)	0687		1
					ALTERNATE FOR P/N 15832-001			
	279	D-7782-X			···SPINNER DOME, (MCCAULEY)	0687		1
	282	D-7783			···SPINNER BULKHEAD, (MCCAULEY)	0687		1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	285	A-1639-4		A	···NUT (MCCAULEY)	0687		8
	288	A-1638-26		A	···WASHER (MCCAULEY)	0687		8
	291	B-7806		A	···BACKING PLATE (MCCAULEY)	0687		1
	294	A-2513-42		A	···BOLT (MCCAULEY)	0687		8
	297	C-6619			···SUPPORT, SPINNER (MCCAULEY)	0687		1
	300	B-3410-32			···SHIMS	0687		AR
	303	A-1635-133		A	···SCREW	0687		12
	306	A-1635-5		A	···WASHER	0687		12
	309	C-3498			···ADAPTOR (MCCAULEY)	0687		1
	312	A-1635-76		A	···SCREW	0687		6
	315	A-1638-15		A	···WASHER	0687		6
					SYMBOL NOTES:			
			#		FOR ALTERNATE COLOR PROPELLER ORDER P/N 15785-004 COLORED (WHITE).			
			%		HARTZELL PRT NUMBERS FOR SPINNER ASSEMBLIES, SPINNER DOMES, AND SPINNER BULKHEADS THAT INCLUDE THE SUFFIX LETTER "C" ARE NOT INTERCHANGEABLE WITH HARTZELL SPINNER ASSEMBLIES, SPINNER DOMES, AND SPINNER BULKHEADS THAT HAVE A PRT NUMBER WITH NO SUFFIX LETTER. SEE HARTZELL SERVICE LETTER HC-SL-61-225 FOR ADDITIONAL INFORMATION.			
			@		USE AS SPARE FOR ALL AIRCRAFT W/ 13978-001/13978-003.			
			$		USE AS SPARE FOR ALL AIRCRAFT W/ 13978-002/13978-004.			
			^		FOR METAL SPINNER			
			&		FOR COMPOSITE SPINNER			

Intentionally Left Blank

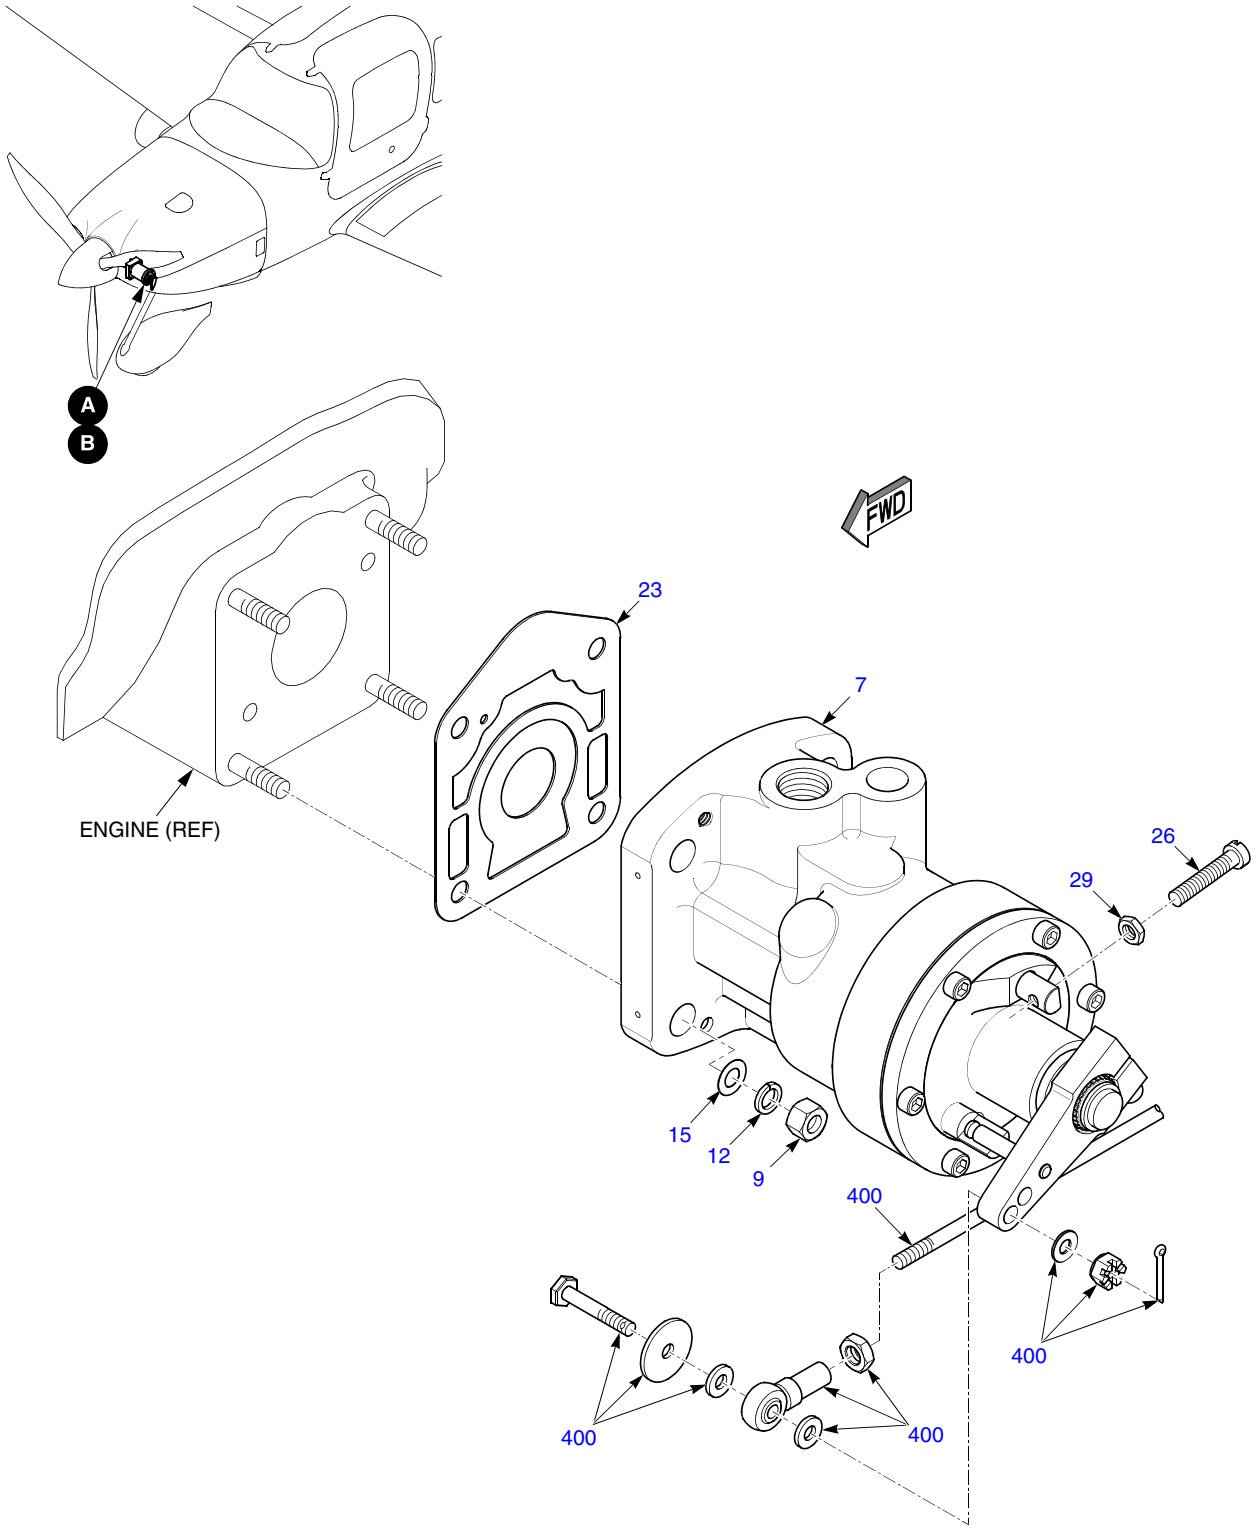

DETAIL A

Serials 22-0002 & subs.

SR22_PC61_1684B

Figure-01
Governor - Serials 22-0002 & subs

EFFECTIVITY:
Serials 22-0002 & subs

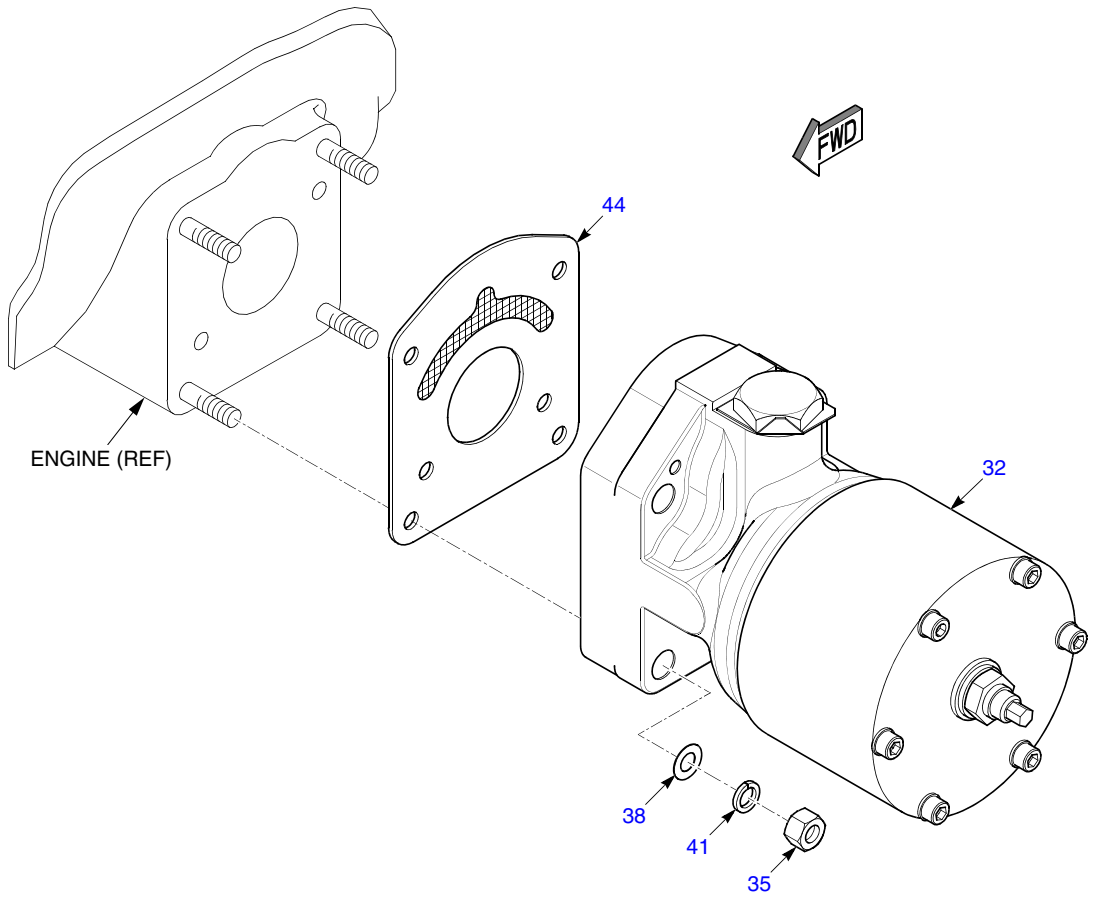

DETAIL B

Serials 22T-0001 & subs.

SR22_PC61_1953B

Figure-01
Governor - Serials 22T-0001 & subs

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			·GOVERNOR INSTALLATION	0002 / 0001	/	NP
-	3	13214-001			··GOVERNOR	0002	0567	1
					FOR SPARES USE P/N 19865-001			
-	6	15524-001			··GOVERNOR	0568	4300	1
					FOR SPARES USE P/N 19865-001			
	7	19865-001			··GOVERNOR	4301		1
	9	50897-001		A	··NUT	0002		4
	12	MS35338-45		A	··WASHER	0002		4
	15	PRT OF ENGINE	#	A	··WASHER	0002		4
-	18	MS9144-01			··GASKET	0002	0567	1
					ALTERNATE FOR P/N 209217			
-	21	PRT OF ENGINE	#		··GASKET	0002		1
					ALTERNATE FOR P/N MS9144-01			
	23	15524-101			···GASKET	0568		1
					ALTERNATE FOR P/N 209217			
	26	PRT OF ITM 7		A	···SCREW	0002		1
	29	PRT OF ITM 7		A	···NUT	0002		1
	32	21285-001			··GOVERNOR	/ 0001	/	1
	35	PRT OF ENGINE	@	A	··NUT	/ 0001	/	4
	38	PRT OF ENGINE	@	A	··WASHER	/ 0001	/	4
	41	MS35338-46		A	··WASHER	/ 0001	/	4
	44	21285-101			···GASKET	/ 0001	/	1
					SYMBOL NOTES:			
			@		REFER TO CONTINENTAL MOTORS IPC IO-550-N			
			#		REFER TO CONTINENTAL MOTORS IPC TSIO-550-K			
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 76-10-04 DET			GOVERNOR CONTROL CABLE INSTALLATION			

Intentionally Left Blank

CHAPTER 71

POWER PLANT

Intentionally Left Blank

CHAPTER 71 - POWER PLANT
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
71-LOEP	1	04 SEP 2018
71-LOEP	2	04 SEP 2018
71-TOC	1	04 SEP 2018
71-TOC	2	04 SEP 2018
71-00-01	1	15 DEC 2014
71-00-01	2	15 DEC 2014
71-00-01	3	15 DEC 2014
71-00-01	4	19 SEP 2017
71-00-02	1	15 DEC 2014
71-00-02	2	15 DEC 2014
71-00-02	3	15 DEC 2014
71-00-02	4	15 DEC 2014
71-00-02	5	15 DEC 2014
71-00-02	6	15 DEC 2014
71-00-02	7	15 DEC 2014
71-00-02	8	15 DEC 2014
71-00-02	9	15 DEC 2014
71-00-02	10	15 DEC 2014
71-00-02	11	15 DEC 2014
71-00-02	12	15 DEC 2014
71-00-03	1	15 DEC 2014
71-00-03	2	19 SEP 2017
71-00-03	3	19 SEP 2017
71-00-03	4	19 SEP 2017
71-00-03	5	19 SEP 2017
71-00-03	6	19 SEP 2017
71-00-04	1	15 DEC 2014
71-00-04	2	15 DEC 2014
71-10-01	1	04 SEP 2018
71-10-01	2	04 SEP 2018
71-10-01	3	15 DEC 2014
71-10-01	4	04 SEP 2018
71-10-01	5	04 SEP 2018
71-10-01	6	04 SEP 2018
71-10-01	7	04 SEP 2018
71-10-01	8	04 SEP 2018
71-10-02	1	04 SEP 2018
71-10-02	2	04 SEP 2018
71-10-02	3	04 SEP 2018
71-10-02	4	15 DEC 2014

CHAPTER 71 - POWER PLANT
LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
71-20-01	1	15 DEC 2014
71-20-01	2	15 DEC 2014
71-20-01	3	15 DEC 2014
71-20-01	4	15 DEC 2014
71-20-01	5	15 DEC 2014
71-20-01	6	15 DEC 2014
71-20-02	1	15 DEC 2014
71-20-02	2	15 DEC 2014
71-30-01	1	15 DEC 2014
71-30-01	2	15 DEC 2014
71-60-01	1	15 DEC 2014
71-60-01	2	15 DEC 2014
71-60-01	3	15 DEC 2014
71-60-01	4	15 DEC 2014
71-60-01	5	15 DEC 2014
71-60-01	6	15 DEC 2014
71-60-01	7	15 DEC 2014
71-60-01	8	15 DEC 2014
71-60-02	1	19 SEP 2017
71-60-02	2	19 SEP 2017
71-60-02	3	19 SEP 2017
71-60-02	4	19 SEP 2017
71-60-02	5	19 SEP 2017
71-60-02	6	19 SEP 2017
71-70-01	1	15 DEC 2014
71-70-01	2	15 DEC 2014
71-70-01	3	15 DEC 2014
71-70-01	4	15 DEC 2014
71-70-01	5	15 DEC 2014
71-70-01	6	15 DEC 2014
71-70-01	7	15 DEC 2014
71-70-01	8	15 DEC 2014
71-70-01	9	15 DEC 2014
71-70-01	10	15 DEC 2014
71-70-01	11	15 DEC 2014
71-70-01	12	15 DEC 2014

CHAPTER 71 - POWER PLANT

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Engine and Accessories - Serials 22-0002 & subs w/o Perspective (1 of 3)	71-00-01
Engine and Accessories - Serials 22-3026 & subs w/ Perspective (2 of 3)	71-00-01
Engine and Accessories - Serials 22T-0001 & subs (3 of 3)	71-00-01
Baffling Assembly - Serials 22-0002 thru 22-0820 (1 of 3)	71-00-02
Baffling Assembly - Serials 22-0821 & subs w/o Perspective (2 of 3)	71-00-02
Baffling Assembly - Serials 22-3026 & subs w/ Perspective (3 of 3)	71-00-02
Baffling Assembly - Serials 22T-0001 & subs	71-00-03
Engine Pre-Heater	71-00-04
Cowl Assembly - Serials 22-0002 thru 22-0319 (1 of 4)	71-10-01
Cowl Assembly - Serials 22-0320 thru 22-0820 (2 of 4)	71-10-01
Cowl Assembly - Serials 22-0821 thru 22-3711 (3 of 4)	71-10-01
Cowl Assembly - Serials 22-3712 & subs (4 of 4)	71-10-01
Cowl Assembly -Serials 22T-0001 & subs	71-10-02
Engine Mount and Isolator - Serials 22-0002 thru 22-0820 w/ Four-Point Mount (1 of 3)	71-20-01
Engine Mount and Isolator - Serials 22-0002 thru 22-0820 w/ Six-Point Mount (2 of 3)	71-20-01
Engine Mount and Isolator - Serials 22-0821 thru 22-3711 (3 of 3)	71-20-01
Engine Mount and Isolator - Serials 22-3712 & subs, 22T-0001 & subs	71-20-02
Heat Shield - Serials 22T-0001 & subs	71-30-01
Induction System - Serials 22-0002 thru 22-0685 (1 of 4)	71-60-01
Induction System - Serials 22-0686 & subs w/o Perspective (2 of 4)	71-60-01
Induction System - Serials 22-3026 & subs w/ Perspective (3 of 4)	71-60-01
Induction System - Serials 22-3026 & subs w/ Perspective (4 of 4)	71-60-01
Induction System - Serials 22T-0001 & subs (1 of 2)	71-60-02
Induction System - Serials 22T-0001 & subs (2 of 2)	71-60-02
Engine Drain - Serials 22-0002 & subs w/o Perspective (1 of 5)	71-70-01
Engine Drain - Serials 22-3026 thru 22-3711 w/ Perspective (2 of 5)	71-70-01
Engine Drain - Serials 22-3712 & subs (3 of 5)	71-70-01
Engine Drain - Serials 22T-0001 & subs (4 of 5)	71-70-01
Engine Drain - Serials 22-0002 thru 22-0820 after SB2X-71-01 (5 of 5)	71-70-01

Intentionally Left Blank

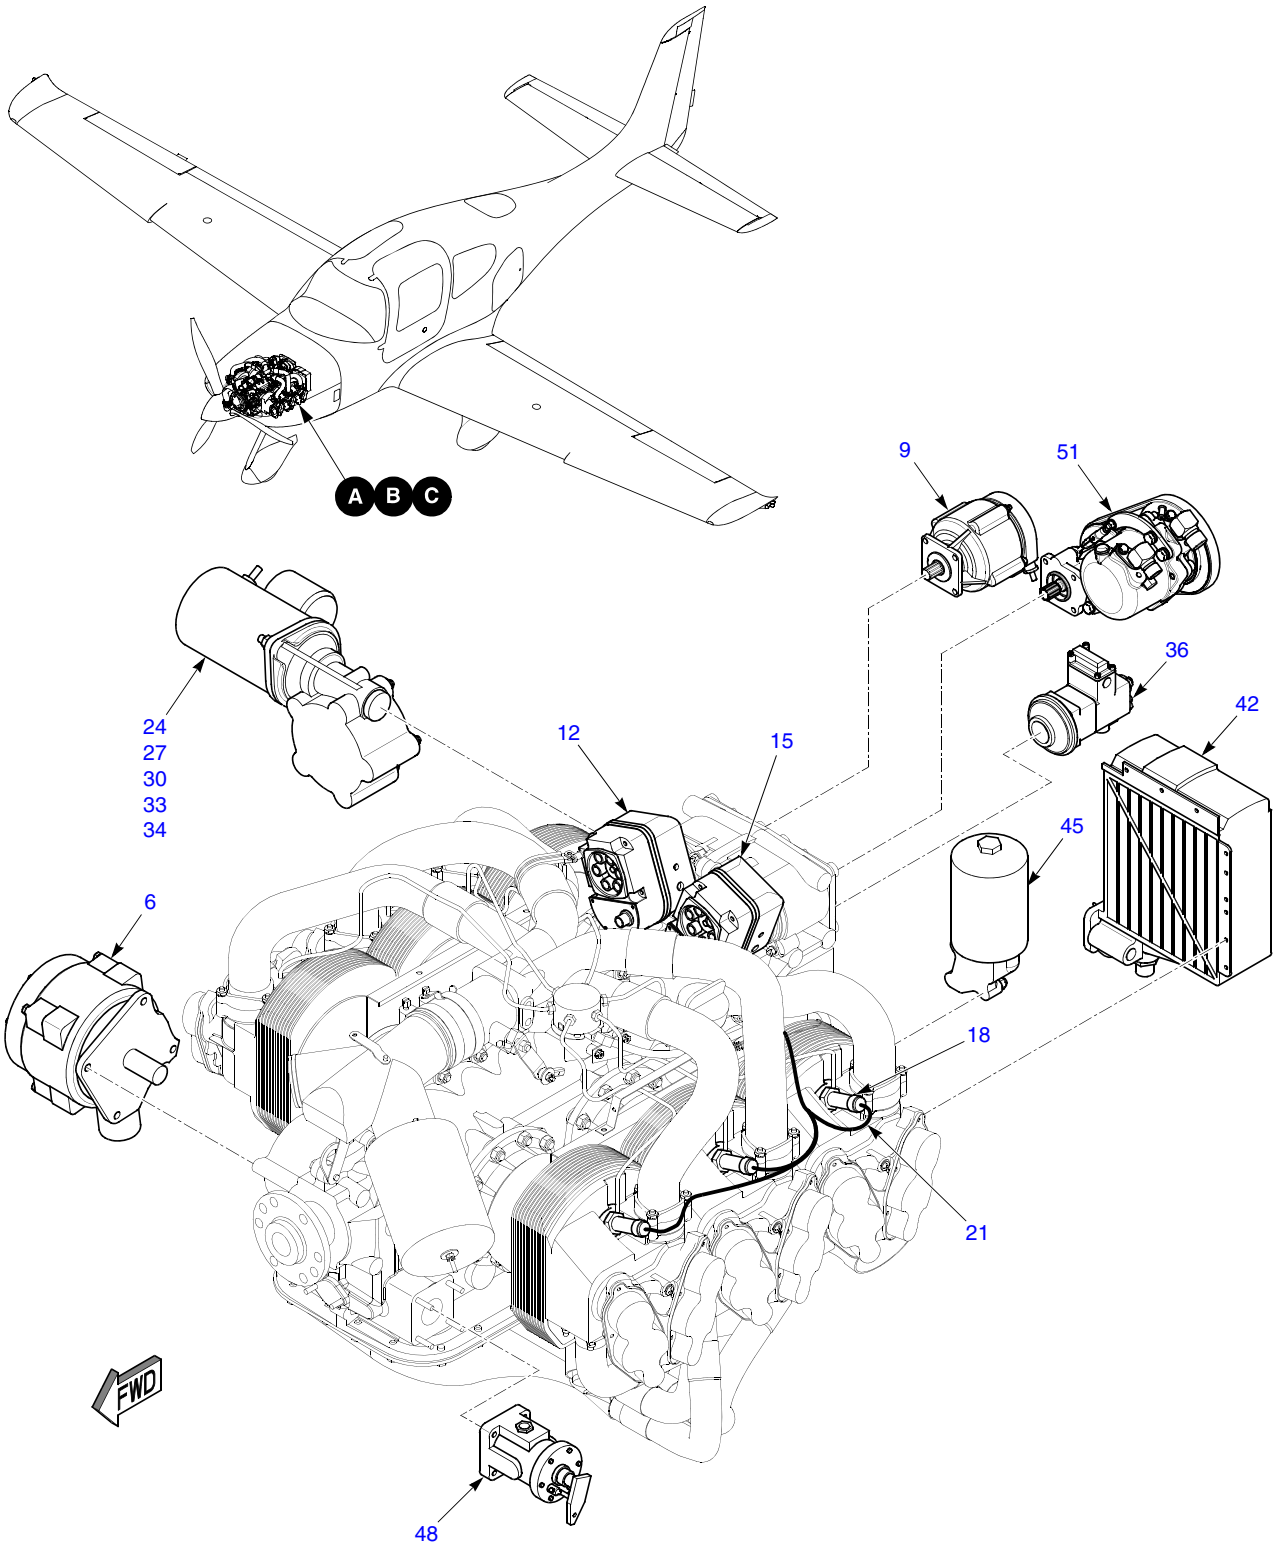

DETAIL A

Serials 22-0002 & subs w/o Perspective Avionics.

SR22_PC71_1272C

Figure-01

Engine and Accessories - Serials 22-0002 & subs w/o Perspective (1 of 3)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

....

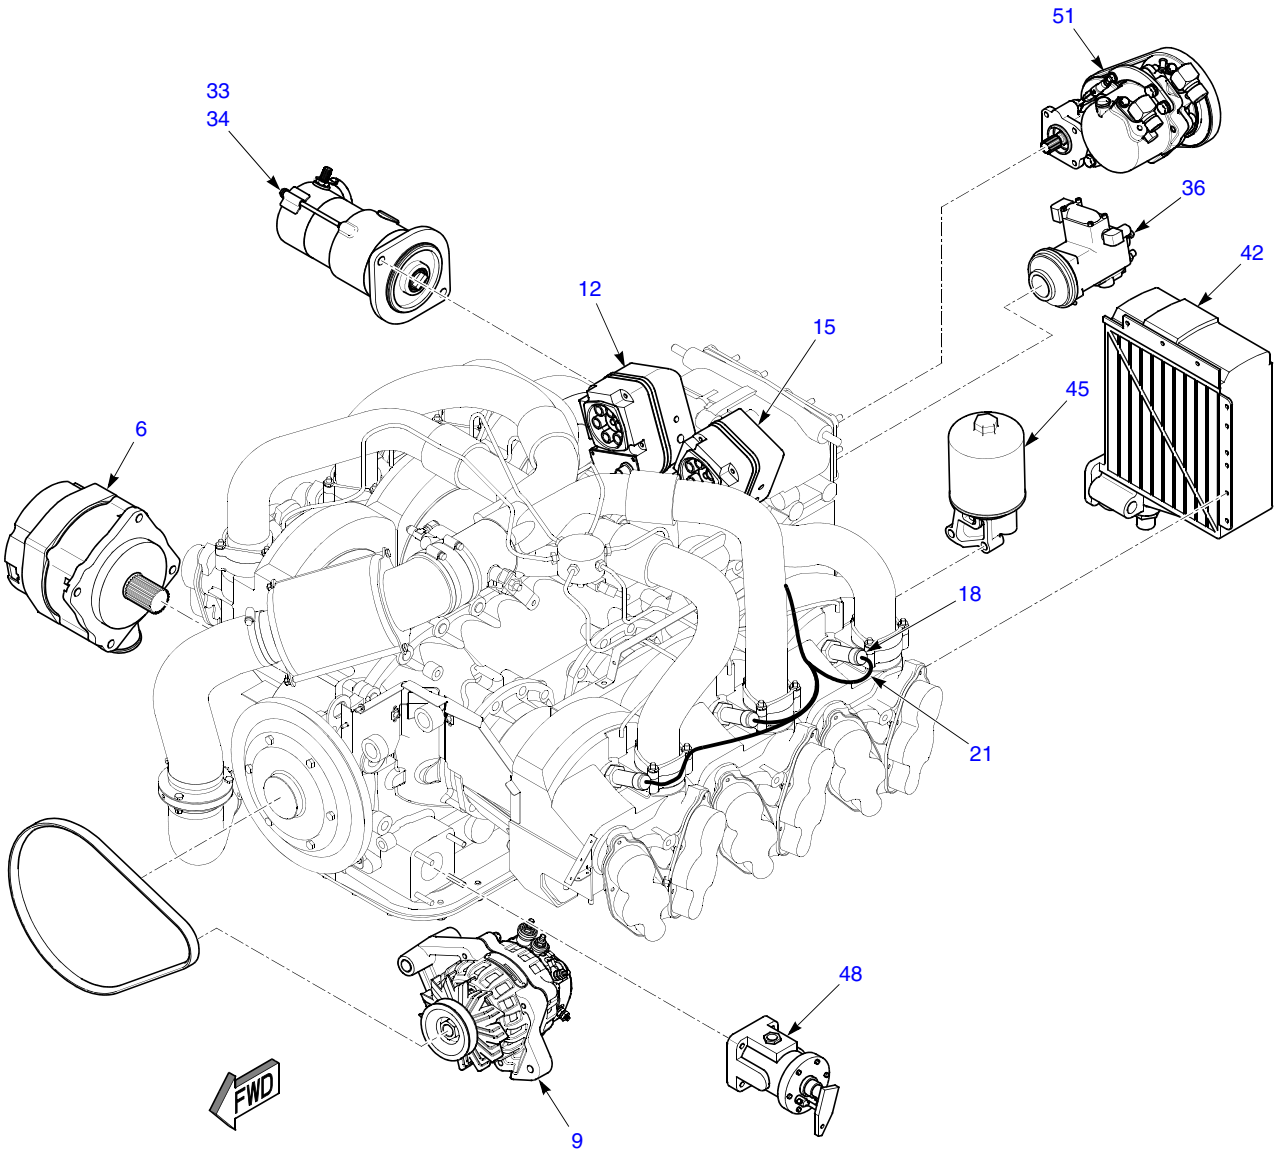

DETAIL B

Serials 22-3026 & subs w/ Perspective Avionics.

SR22_PC71_1766

Figure-01

Engine and Accessories - Serials 22-3026 & subs w/ Perspective (2 of 3)

EFFECTIVITY:
All

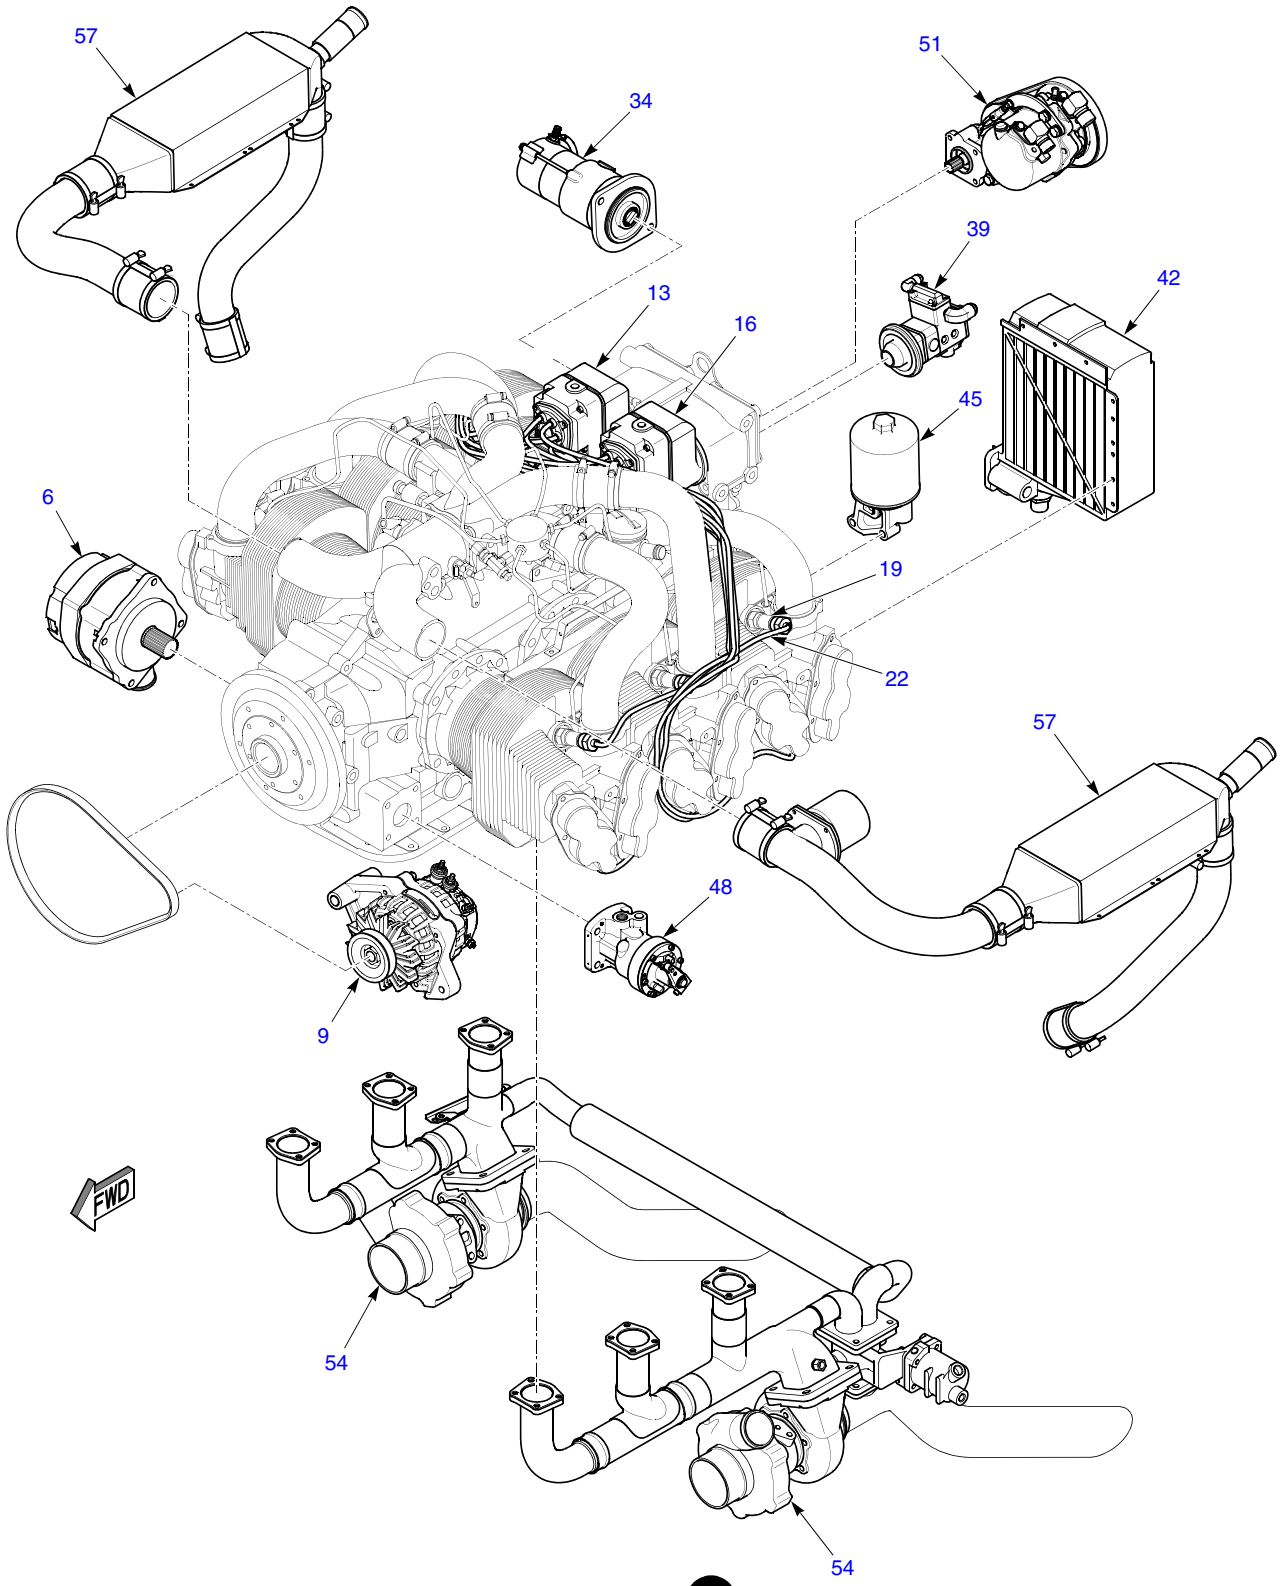

DETAIL C

Serials 22T-0001 & subs.

SR22_PC71_1937

Figure-01

Engine and Accessories - Serials 22T-0001 & subs (3 of 3)

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ENGINE AND ACCESSORIES	0002 / 0001	/	NP
-	3	NO PRT NUMBER			·IO-550-N ENGINE CONFIGURATION	0002		AR
-	4	NO PRT NUMBER	$		·IO-550-N27 ENGINE CONFIGURATION	0656		AR
-	5	NO PRT NUMBER			·TSIO-550-K1B ENGINE CONFIGURATION	/ 0001	/	AR
	6	RF 24-30-01 NHA			··PRIMARY ALTERNATOR	0002 / 0001	/	AR
	9	RF 24-30-02 NHA			··SECONDARY ALTERNATOR	0002 / 0001	/	AR
	12	RF 74-10-01 NHA			··MAGNETO, LH	0002		AR
	13	RF 74-10-01 NHA			··MAGNETO, LH	/ 0001	/	AR
	15	RF 74-10-01 NHA			··MAGNETO, RH	0002		AR
	16	RF 74-10-01 NHA			··MAGNETO, RH	/ 0001	/	AR
	18	PRT OF ENGINE	@		··SPARK PLUG	0002		AR
	19	PRT OF ENGINE	@		··SPARK PLUG	/ 0001	/	AR
	21	PRT OF ENGINE	@		··IGNITION HARNESS	0002		AR
	22	PRT OF ENGINE	@		··IGNITION HARNESS	/ 0001	/	AR
	24	50895-001	#		··STARTER	0002	0174	AR
			@		ALTERNATE FOR P/N ITM 33			
	27	PRT OF ENGINE	@		··STARTER	0175	0497	AR
					FOR SPARES USE P/N 50895-001			
			@		FOR SPARES USE ITM 33			
	30	15515-001	#		··STARTER	0498	0536	AR
					FOR SPARES USE P/N 50895-001			
			@		FOR SPARES USE ITM 33			
	33	PRT OF ENGINE	@		··STARTER	0537	3402	AR
					AFTER SB2X-80-01	0175	0497	
					ALTERNATE FOR P/N 50895-001			
	34	19761-001			··STARTER	3403 / 0001	/	AR
	36	PRT OF ENGINE	@		··FUEL PUMP	0002		AR
	39	649386-44A16	@		··FUEL PUMP	/ 0001	/	AR
	42	RF 79-20-01 NHA			··OIL COOLER	0002 / 0001	/	AR
	45	50857-001			··OIL FILTER	0002 / 0001	/	AR
	48	RF 61-20-01 NHA			··PROPELLER GOVERNOR	0002 / 0001	/	AR
	51	RF 21-50-01 NHA			··COMPRESSOR W/ AIR CONDITIONING	1863 / 0001	/	AR
	54	RF 81-20-01 NHA			··TURBOCHARGER	/ 0001	/	AR
	57	RF 71-60-02 NHA			··INTERCOOLER	/ 0001	/	AR

SYMBOL NOTES:

**
SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:
SERIAL NUMBERS 1602 AND 1840, REFER TO 22-1863 FOR PART IDENTIFICATION.

#
IF REPLACING P/N 50895-001 OR 15515-001 WITH P/N 656181, MODIFY BATTERY BRACKET PER SB2X-80-01.

$
INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT.

@
REFER TO CMI IPC

EFFECTIVITY:
All

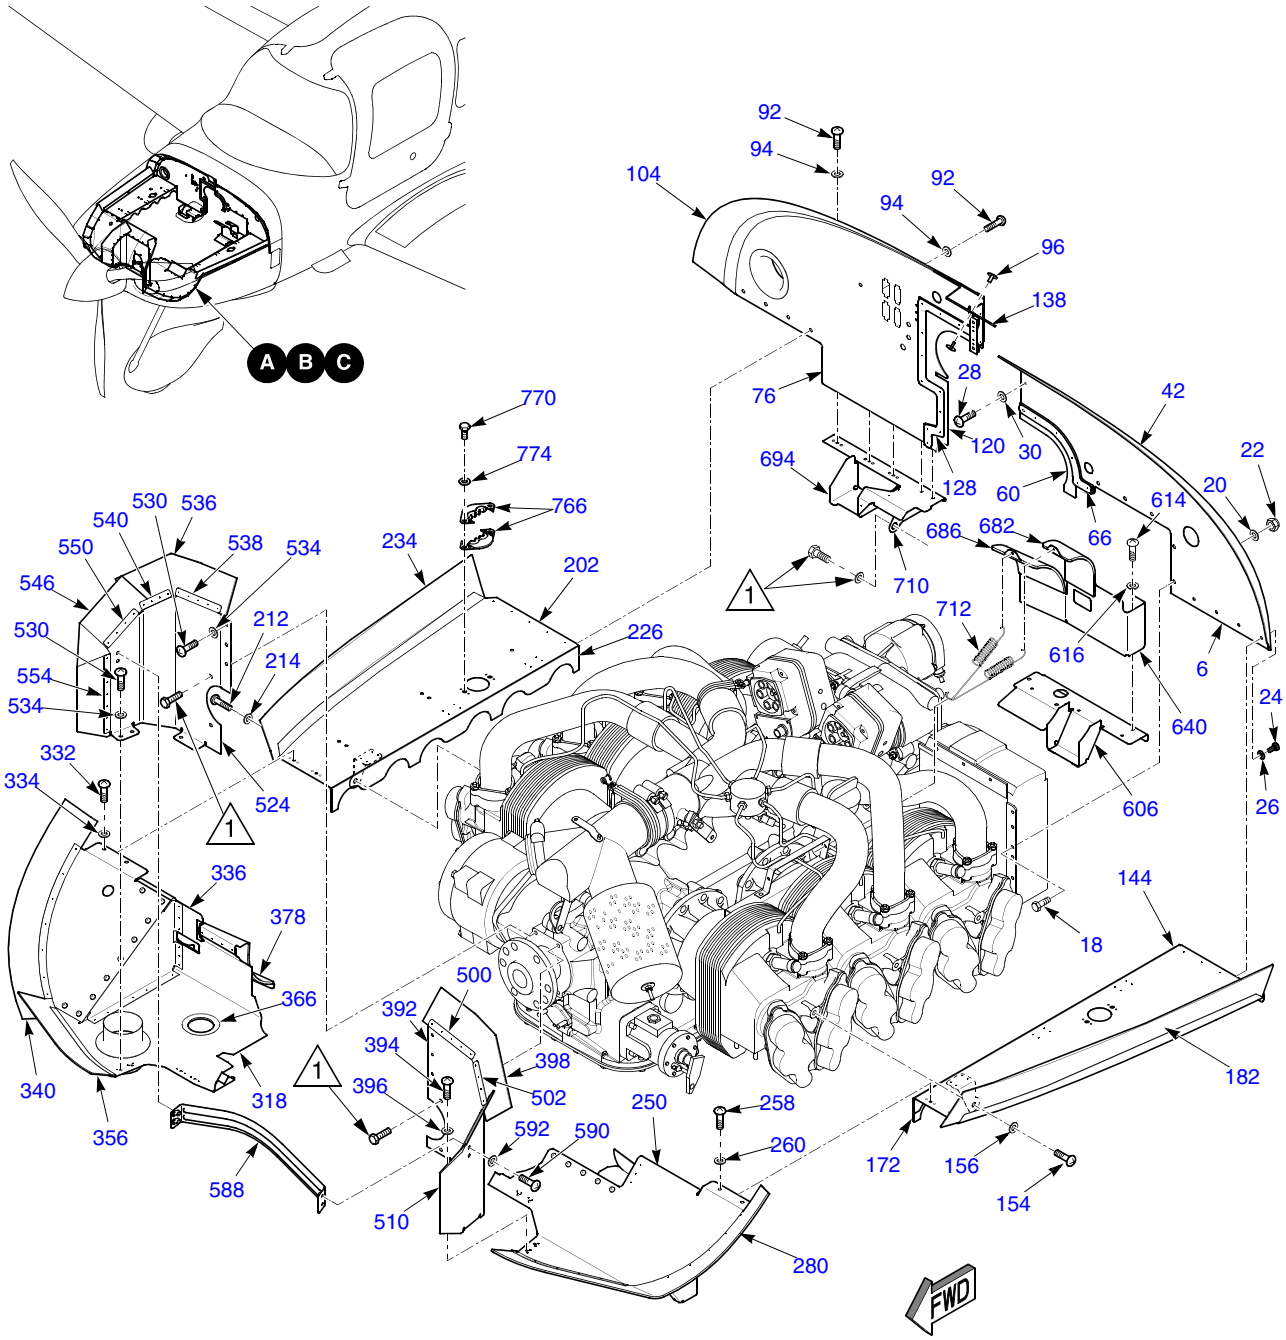

NOTE

1 Fasten using engine hardware.

DETAIL A

Serials 22-0002 thru 22-0820.

SR22_PC71_1266E

Figure-02

Baffling Assembly - Serials 22-0002 thru 22-0820 (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0820

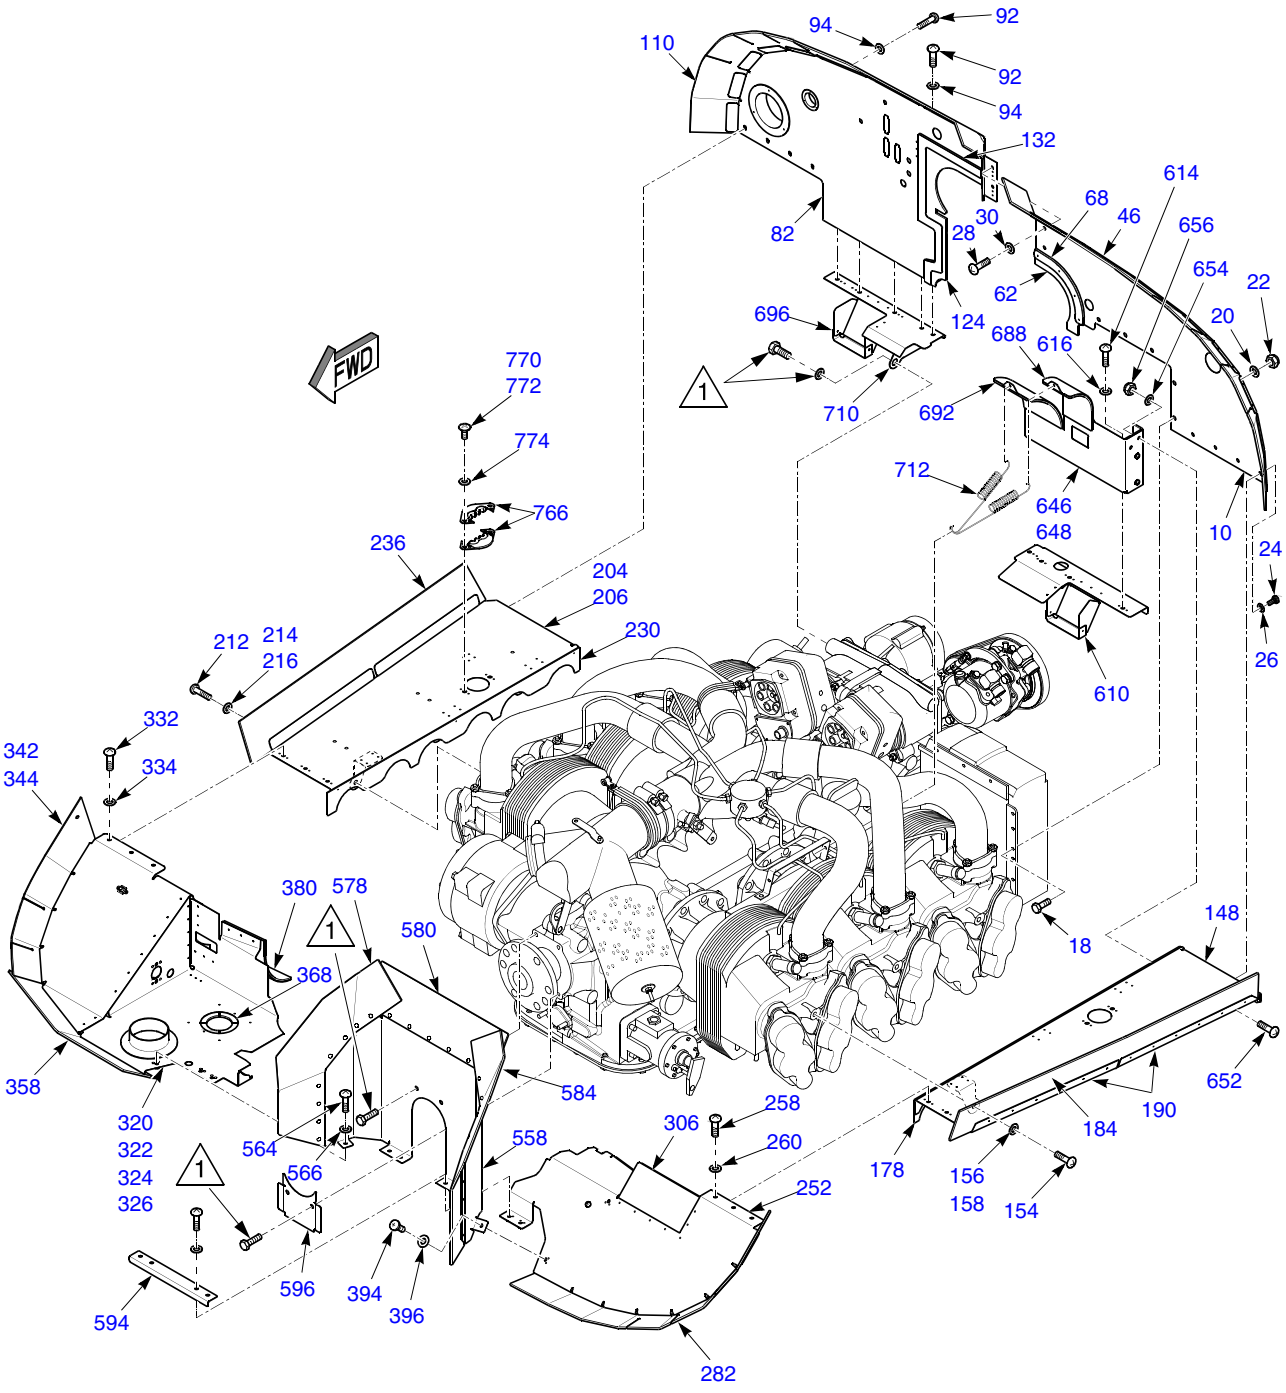

Serials 22-0821 & subs w/o Perspective Avionics.

NOTE

1 Fasten using engine hardware.

DETAIL B

SR22_PC71_1388F

Figure-02

Baffling Assembly - Serials 22-0821 & subs w/o Perspective (2 of 3)

EFFECTIVITY:
Serials 22-0821 & subs w/o Perspective

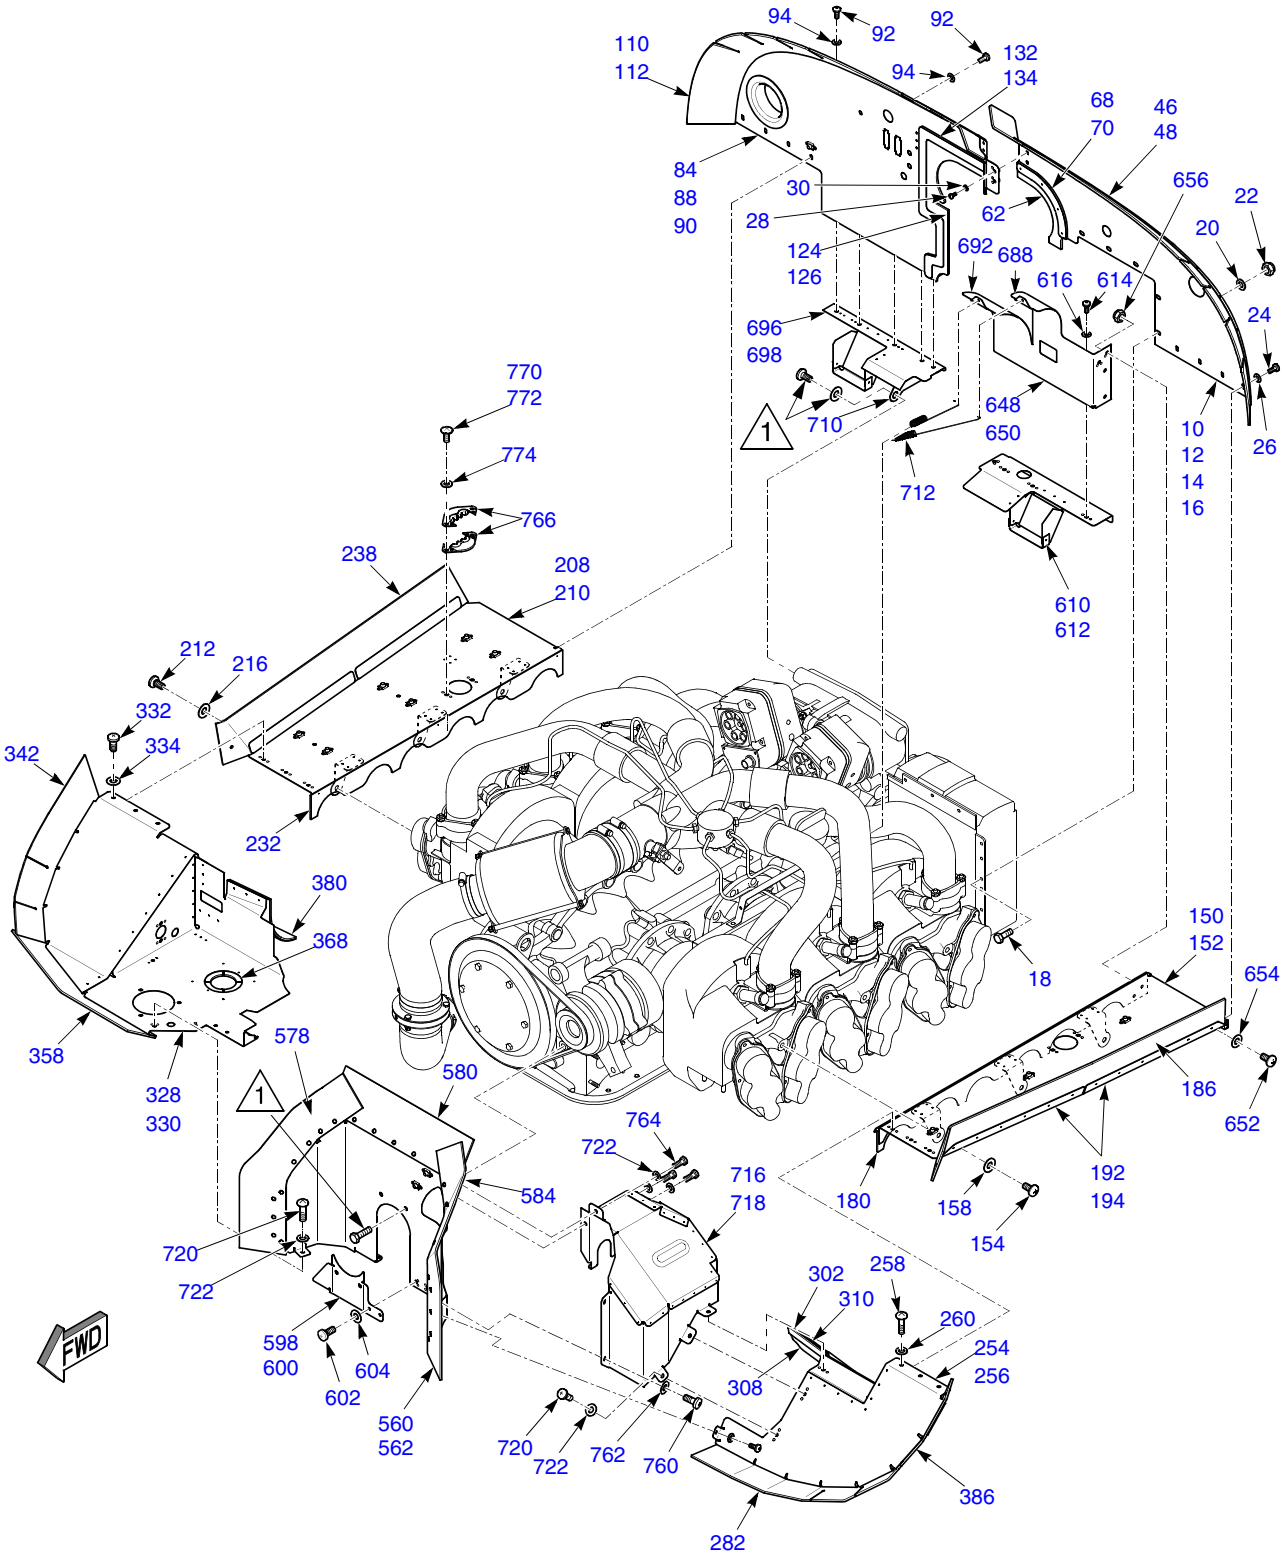

Serials 22-3026 & subs w/ Perspective Avionics.

NOTE

1 Fasten using engine hardware.

DETAIL C

SR22_PC71_1768C

Figure-02

Baffling Assembly - Serials 22-3026 & subs w/ Perspective (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		BAFFLING INSTALLATION	0002		NP
-	2	NO PRT NUMBER			BAFFLING ASSEMBLY W/ NORMALLY ASPIRATED ENGINE	0002		NP
-	3	14139-001			·BAFFLE ASSEMBLY, REAR, LEFT	0002	0193	1
					FOR SPARES USE P/N 14139-002			
	6	14139-002			·BAFFLE ASSEMBLY, REAR, LEFT	0194	0820	1
-	9	15473-001			·BAFFLE ASSEMBLY, REAR, LEFT	0821	1208	1
	10	15473-002			·BAFFLE ASSEMBLY, REAR, LEFT	1209	3670	1
	12	15473-005			·BAFFLE ASSEMBLY, REAR, LEFT	3671	3711	1
	14	15473-007	&		·BAFFLE ASSEMBLY, REAR, LEFT	3712		1
	16	15473-010			·BAFFLE ASSEMBLY, REAR, LEFT, BLACK	4046		1
	18	AN3-4A		A	·BOLT	0002		5
	20	NAS1149F0332P		A	·WASHER	0002		5
	22	MS21042-3		A	·NUT	0002		5
	24	MS27039-0806		A	·SCREW	0002		4
	26	NAS1149FN832P		A	·WASHER	0002		4
	28	MS27039-0806		A	·SCREW	0002		2
	30	NAS1149FN832P		A	·WASHER	0002		2
-	32	15472-001			··BAFFLE, AFT, LEFT	0821	1208	1
-	34	15472-002			··BAFFLE, AFT, LEFT	1209	3670	1
-	36	15472-006			··BAFFLE, AFT, LEFT	3671	3711	1
-	38	15472-008	&		··BAFFLE, AFT, LEFT	3712		1
-	40	15472-011			··BAFFLE, AFT, LEFT, BLACK	4046		1
	42	14139-101			··BAFFLE SEAL, LEFT	0002	0820	1
-	44	15877-001			··BAFFLE SEAL, LEFT	0821	1208	1
	46	15877-002			··BAFFLE SEAL, LEFT	1209	3711	1
	48	15877-005			··BAFFLE SEAL, LEFT	3712		1
-	50	14139-102			··BACKING PLATE	0002	0820	1
-	52	15884-001			··SEAL DOUBLER	0821		3
-	54	15883-001	&		··SEAL DOUBLER	0821		5
-	56	15883-002			··SEAL DOUBLER, BLACK	4046		5
-	58	14139-103			··BAFFLE SEAL, MAGNETO, LEFT	0002	0193	1
	60	14139-105			··BAFFLE SEAL, MAGNETO, LEFT	0194	0820	1
	62	15878-001			··BAFFLE SEAL, MAGNETO, LEFT	0821		1
-	64	14139-104			··BACKING PLATE	0002	0193	1
	66	14139-106			··BACKING PLATE	0194	0820	1
	68	15879-001	&		··BACKING PLATE	0821		1
	70	15879-002			··BACKING PLATE, BLACK	4046		1
-	72	14141-001			·BAFFLE ASSEMBLY, REAR, RIGHT	0002	0193	1
					FOR SPARES USE P/N 14141-002			
-	74	14141-002			·BAFFLE ASSEMBLY, REAR, RIGHT	0194	0277	1
	76	14141-003			·BAFFLE ASSEMBLY, REAR, RIGHT	0278	0820	1
-	78	15469-001			·BAFFLE ASSEMBLY, REAR, RIGHT	0821	1208	1
-	80	15469-002			·BAFFLE ASSEMBLY, REAR, RIGHT	1209	1862	1
	82	15469-005			·BAFFLE ASSEMBLY, REAR, RIGHT	1863		1
	84	15469-007			·BAFFLE ASSEMBLY, REAR, RIGHT	3026	3711	1
-	86	15469-009			·BAFFLE ASSEMBLY, REAR, RIGHT	3712	3849	1
					FOR SPARES USE P/N 15469-011			
	88	15469-011	&		·BAFFLE ASSEMBLY, REAR, RIGHT	3850		1
	90	15469-013			·BAFFLE ASSEMBLY, REAR, RIGHT, BLACK	4046		1
	92	MS27039-0806		A	·SCREW	0002		9
	94	NAS1149FN832P		A	·WASHER	0002		9
	96	50208-001		A	·SCREW	0002	0820	2
-	98	15468-009			··BAFFLE, AFT, RIGHT	3712	3849	1
-	100	15468-011	&		··BAFFLE, AFT, RIGHT	3850		1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	102	15468-013			··BAFFLE, AFT, RIGHT, BLACK	4046		1
	104	14141-101			··BAFFLE SEAL, RIGHT	0002	0820	1
-	106	15872-001			··BAFFLE SEAL, RIGHT	0821	1208	1
-	108	15872-002			··BAFFLE SEAL, RIGHT	1209	1862	1
	110	15872-004			··BAFFLE SEAL, RIGHT	1863	3711	1
	112	15872-005			··BAFFLE SEAL, RIGHT	3712		1
-	114	14141-102			··BACKING PLATE	0002	0820	1
-	116	15883-001			··BACKING PLATE	0821		7
-	118	15884-001			··BACKING PLATE	0821		3
	120	14141-103			··BAFFLE SEAL, MAGNETO, RIGHT	0002	0820	1
-	122	15874-001			··BAFFLE SEAL, MAGNETO, RIGHT	0821	1208	1
	124	15874-002			··BAFFLE SEAL, MAGNETO, RIGHT	1209	3711	1
	126	15874-005			··BAFFLE SEAL, MAGNETO, RIGHT	3712		1
	128	14141-104			··BACKING PLATE	0002	0820	1
-	130	15873-001			··SEAL DOUBLER	0821	1208	1
	132	15873-002	&		··SEAL DOUBLER	1209		1
	134	15873-005			··SEAL DOUBLER, BLACK	4046		1
-	136	14141-105			··BAFFLE SEAL, REAR, RIGHT	0002	0193	1
	138	14141-107			··BAFFLE SEAL, REAR, RIGHT	0194	0820	1
-	140	14141-106			··BACKING PLATE	0002	0820	1
-	142	13651-001			·BAFFLE ASSEMBLY, SIDE, LEFT	0002	0193	1
					FOR SPARES USE P/N 13651-002			
	144	13651-002			·BAFFLE ASSEMBLY, SIDE, LEFT	0194	0820	1
-	146	15475-001			·BAFFLE ASSEMBLY, SIDE, LEFT	0821	1489	1
	148	15475-002			·BAFFLE ASSEMBLY, SIDE, LEFT W/O PERSPECTIVE	1490		1
	150	15475-003	&		·BAFFLE ASSEMBLY, SIDE, LEFT W/ PERSPECTIVE	3026		1
	152	15475-006			·BAFFLE ASSEMBLY, SIDE, LEFT W/ PERSPECTIVE, BLACK	4046		1
	154	MS35206-279		A	·SCREW	0002		3
	156	MS15795-710		A	·WASHER	0002	1208	3
	158	MS35338-44		A	·WASHER	1209		3
-	160	15474-001			··BAFFLE, SIDE, LEFT	0821	1221	1
-	162	15474-002			··BAFFLE, SIDE, LEFT	1222	1489	1
-	164	15474-003			··BAFFLE, SIDE, LEFT W/O PERSPECTIVE	1490		1
-	166	15474-004	&		··BAFFLE, SIDE, LEFT W/ PERSPECTIVE	3026		1
-	168	15474-007			··BAFFLE, SIDE, LEFT W/ PERSPECTIVE, BLACK	4046		1
-	170	13651-101			··CYL SEAL, BAFFLE, LEFT	0002	0193	1
	172	13651-104			··CYL SEAL, BAFFLE, LEFT	0194	0820	1
-	174	15881-001			··CYL SEAL, BAFFLE, LEFT	0821	1221	1
-	176	15881-002			··CYL SEAL, BAFFLE, LEFT	1222	1489	1
	178	15881-003			··CYL SEAL, BAFFLE, LEFT	1490		1
	180	15881-004			··CYL SEAL, BAFFLE, LEFT	3026		1
	182	13651-102			··COWL SEAL, BAFFLE, LEFT	0002	0820	1
	184	15880-001			··COWL SEAL, BAFFLE, LEFT	0821		1
	186	15880-002			··COWL SEAL, BAFFLE, LEFT	3026		1
-	188	13651-103			··SEAL DOUBLER, BAFFLE, LEFT	0002	0820	1
	190	15476-001			··BACKING PLATE	0821		2
	192	15476-002	&		··BACKING PLATE	3026		2
	194	15476-003			··BACKING PLATE, BLACK	4046		2
-	196	13654-001			·BAFFLE ASSEMBLY, SIDE, RIGHT	0002	0193	1
					FOR SPARES USE P/N 13654-002			
-	198	13654-002			·BAFFLE ASSEMBLY, SIDE, RIGHT	0194	0333	1
						0340	0359	
					FOR SPARES USE P/N 13654-003			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	200	13654-003			·BAFFLE ASSEMBLY, SIDE, RIGHT	0334	0339	1
						0360	0692	
	202	13654-004			·BAFFLE ASSEMBLY, SIDE, RIGHT	0693	0820	1
	204	15471-001			·BAFFLE ASSEMBLY, SIDE, RIGHT	0821	1862	1
	206	15471-003			·BAFFLE ASSEMBLY, SIDE, RIGHT W/O PERSPECTIVE	1863		1
	208	15471-002	&		·BAFFLE ASSEMBLY, SIDE, RIGHT W/ PERSPECTIVE	3026		1
	210	15471-007			·BAFFLE ASSEMBLY, SIDE, RIGHT W/ PERSPECTIVE, BLACK	4046		1
	212	MS35206-279		A	·SCREW	0002		3
	214	MS15795-710		A	·WASHER	0002	1208	3
	216	MS35338-44		A	·WASHER	1209		3
-	218	15470-001			··BAFFLE, SIDE, RIGHT W/O PERSPECTIVE	0821		1
-	220	15470-002	&		··BAFFLE, SIDE, RIGHT W/ PERSPECTIVE	3026		1
-	222	15470-006			··BAFFLE, SIDE, RIGHT W/ PERSPECTIVE, BLACK	4046		1
-	224	13654-101			··CYL SEAL, BAFFLE, RIGHT	0002	0193	1
	226	13654-104			··CYL SEAL, BAFFLE, RIGHT	0194	0820	1
-	228	15876-001			··CYL SEAL, BAFFLE, RIGHT	0821	1221	1
	230	15876-002			··CYL SEAL, BAFFLE, RIGHT	1222		1
	232	15876-003			··CYL SEAL, BAFFLE, RIGHT	3026		1
	234	13654-102			··COWL SEAL, BAFFLE, RIGHT	0002	0820	1
	236	15875-001			··COWL SEAL, BAFFLE, RIGHT	0821		1
	238	15875-002			··COWL SEAL, BAFFLE, RIGHT	3026		1
-	240	13654-103			··SEAL DOUBLER, BAFFLE, RIGHT	0002	0820	1
-	242	15476-001	&		··SEAL DOUBLER, BAFFLE, RIGHT	0821		2
-	244	15476-003			··SEAL DOUBLER, BAFFLE, RIGHT, BLACK	4046		2
-	246	13661-002			·BAFFLE ASSEMBLY, FRONT, LEFT	0002	0193	1
					FOR SPARES USE P/N 13661-003			
-	248	13661-003			·BAFFLE ASSEMBLY, FRONT, LEFT	0194	0319	1
	250	13661-004			·BAFFLE ASSEMBLY, FRONT, LEFT	0320	0820	1
	252	15477-001			·BAFFLE ASSEMBLY, FRONT, LEFT W/O PERSPECTIVE	0821		1
	254	15477-003	&		·BAFFLE ASSEMBLY, FRONT, LEFT W/ PERSPECTIVE	3026		1
	256	15477-004			·BAFFLE ASSEMBLY, FRONT, LEFT W/ PERSPECTIVE, BLACK	4046		1
	258	MS27039-0806		A	·SCREW	0002	0820	2
						0821		3
	260	NAS1149FN832P		A	·WASHER	0002	0820	2
						0821		3
-	262	15478-001			··BAFFLE, FWD, LEFT	0821	1221	1
-	264	15478-002			··BAFFLE, FWD, LEFT	1222		1
-	266	15478-004	&		··BAFFLE, FWD, LEFT	3026		1
-	268	15478-005			··BAFFLE, FWD, LEFT, BLACK	4046		1
-	270	15479-001			··BAFFLE ATTACH, FWD, LEFT	0821		1
-	272	15479-004	&		··BAFFLE ATTACH, FWD, LEFT	3026		1
-	274	15479-005			··BAFFLE ATTACH, FWD, LEFT, BLACK	4046		1
-	276	13667-001			··BAFFLE SEAL, FRONT, LEFT	0002	0820	1
-	278	13661-106			··BAFFLE SEAL, FRONT, LEFT	0002	0319	1
	280	13661-110			··BAFFLE SEAL, FRONT, LEFT	0320	0820	1
	282	15885-002			··BAFFLE SEAL, FRONT, LEFT	0821		1
-	284	13661-107			··DOUBLER	0002	0319	1
-	286	13661-111			··DOUBLER	0320	0820	1
-	288	13661-108			··DOUBLER	0002	0319	1
-	290	13661-112			··DOUBLER	0320	0820	1
-	292	15883-001			··DOUBLER	0821		7
-	294	13661-104			··SEAL, SHEET	0002	0144	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	296	13661-109			··SEAL, SHEET	0145	0820	1
-	298	13661-105			··SEAL, SHEET	0002	0820	1
-	300	15887-001			··SHEET, CYLINDER, LEFT	0821		1
	302	15887-002			··SHEET, CYLINDER, LEFT	3026		1
-	304	15888-001			··SEAL, CYLINDER, BAFFLE	0821	1221	1
	306	15888-002			··SEAL, CYLINDER, BAFFLE	1222		1
	308	15888-003			··SEAL, CYLINDER, BAFFLE	3026		1
	310	21821-001			··SEAL, CYLINDER, ALT2	3026		1
-	312	13669-002			·BAFFLE ASSEMBLY, FRONT, RIGHT	0002	0193	1
					FOR SPARES USE P/N 13669-003			
-	314	13669-003			·BAFFLE ASSEMBLY, FRONT, RIGHT	0194	0319	1
-	316	13669-004			·BAFFLE ASSEMBLY, FRONT, RIGHT	0320	0333	1
						0340	0359	
					FOR SPARES USE P/N 13669-005			
	318	13669-005			·BAFFLE ASSEMBLY, FRONT, RIGHT	0334	0339	1
						0360	0820	
	320	15487-001			·BAFFLE ASSEMBLY, FRONT, RIGHT	0821		1
	322	15487-002			·BAFFLE ASSEMBLY, FRONT, RIGHT	1863	2151	1
	324	15487-004			·BAFFLE ASSEMBLY, FRONT, RIGHT	2152	2379	1
	326	15487-006			·BAFFLE ASSEMBLY, FRONT, RIGHT W/O PERSPECTIVE	2380		1
	328	15487-005	&		·BAFFLE ASSEMBLY, FRONT, RIGHT W/ PERSPECTIVE	3026		1
	330	15487-009			·BAFFLE ASSEMBLY, FRONT, RIGHT W/ PERSPECTIVE, BLACK	4046		1
	332	MS27039-0806		A	·SCREW	0002	0820	2
						0821		3
	334	NAS1149FN832P		A	·WASHER	0002	0820	2
						0821		3
	336	13681-001			··BAFFLE, SEAL, FRONT	0002	0820	1
-	338	13669-109			··SEAL, BAFFLE, FRONT	0002	0319	1
	340	13669-115			··SEAL, BAFFLE, FRONT	0320	0820	1
	342	15892-001			··SEAL, BAFFLE, FRONT	0821	1221	1
						3026		1
	344	15892-002			··SEAL, BAFFLE, FRONT	1222		1
-	346	13669-111			··DOUBLER	0002	0319	1
-	348	13669-117			··DOUBLER	0320	0820	1
-	350	15899-001	&		··DOUBLER	0821		1
-	352	15899-002			··DOUBLER, BLACK	4046		1
-	354	13669-110			··SEAL, BAFFLE, FRONT	0002	0319	1
	356	13669-116			··SEAL, BAFFLE, FRONT	0320	0820	1
	358	15896-001			··SEAL, BAFFLE, FRONT	0821		1
-	360	13669-112			··DOUBLER	0002	0319	1
-	362	13669-118			··DOUBLER	0320	0820	1
-	364	15899-001			··DOUBLER	0821		1
	366	13669-105			··SEAL, ALTERNATOR	0002	0820	1
	368	15902-001			··SEAL, ALTERNATOR	0821		1
-	370	13669-106			··DOUBLER	0002	0820	1
-	372	15903-001	&		··DOUBLER	0821		1
-	374	15903-002			··DOUBLER, BLACK	4046		1
-	376	13669-107			··SEAL, CYLINDER	0002	0144	1
	378	13669-114			··SEAL, CYLINDER	0145	0820	1
	380	15897-001			··SEAL, CYLINDER	0821		1
-	382	13669-108			··SEAL, HEAD	0002	0820	2
-	384	15898-001			··SEAL, CYLINDER, FRONT	0821		1
	386	15883-001			··BACKING PLATE	3026		4

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	388	13668-002			·BAFFLE ASSEMBLY, SPINNER, LEFT	0002	0193	1
					FOR SPARES USE P/N 13668-003			
-	390	13668-003			·BAFFLE ASSEMBLY, SPINNER, LEFT	0194	0319	1
	392	13668-004			·BAFFLE ASSEMBLY, SPINNER, LEFT	0320	0820	1
	394	MS27039-0806		A	·SCREW	0002	0820	4
						0821		3
	396	NAS1149FN832P		A	·WASHER	0002	0820	4
						0821	3025	3
	398	13668-107			··BAFFLE SEAL, LEFT	0002	0820	1
	500	13668-108			··BACKING PLATE	0002	0820	1
	502	13668-109			··BACKING PLATE	0002	0319	2
						0320	0820	1
-	504	13668-111			··BAFFLE SEAL, VERT	0002	0007	1
-	506	13668-112			··BAFFLE SEAL, VERT	0008	0193	1
-	508	13668-114			··BAFFLE SEAL, VERT	0194	0319	1
	510	13668-117			··BAFFLE SEAL, VERT	0320	0820	1
-	512	13668-116			··BACKING PLATE	0320		1
-	514	13668-110			··BACKING PLATE	0002	0007	1
-	516	13668-113			··BACKING PLATE	0008	0319	1
-	518	13668-115			··BACKING PLATE	0320		1
-	520	13677-002			·BAFFLE ASSEMBLY, SPINNER, RIGHT	0002	0193	1
					FOR SPARES USE P/N 13677-003			
-	522	13677-003			·BAFFLE ASSEMBLY, SPINNER, RIGHT	0194	0319	1
	524	13677-004			·BAFFLE ASSEMBLY, SPINNER, RIGHT	0320	0333	1
						0340	0820	
-	526	13677-005			·BAFFLE ASSEMBLY, SPINNER, RIGHT	0334	0339	1
-	528	MS27039-0806		A	·SCREW	0002	0193	7
	530	MS27039-0806		A	·SCREW	0194	0820	6
-	532	NAS1149FN832P		A	·WASHER	0002	0193	7
	534	NAS1149FN832P		A	·WASHER	0194	0820	6
	536	13677-107			··BAFFLE SEAL, RIGHT	0002	0820	1
	538	13677-108			··BACKING PLATE	0002	0820	1
	540	13677-109			··BACKING PLATE	0002	0820	1
-	542	13677-112			··BAFFLE SEAL, VERT	0002	0193	1
-	544	13677-113			··BAFFLE SEAL, VERT	0194	0319	1
	546	13677-116			··BAFFLE SEAL, VERT	0320	0820	1
-	548	13677-110			··BACKING PLATE	0002	0319	1
	550	13677-114			··BACKING PLATE	0320	0820	1
-	552	13677-111			··BACKING PLATE	0002	0319	1
	554	13677-115			··BACKING PLATE	0320	0820	1
-	556	15480-001			·BAFFLE ASSEMBLY, SPINNER	0821	1208	1
					FOR SPARES USE P/N 15480-002			
	558	15480-002			·BAFFLE ASSEMBLY, SPINNER W/O PERSPECTIVE	1209		1
	560	15480-003	&		·BAFFLE ASSEMBLY, SPINNER W/ PERSPECTIVE	3026		1
	562	15480-005			·BAFFLE ASSEMBLY, SPINNER W/ PERSPECTIVE, BLACK	4046		1
	564	MS27039-0806		A	·SCREW	0821		6
	566	NAS1149FN832P		A	·WASHER	0821		6
-	568	15481-001			··BAFFLE, SPINNER	0821	1208	1
-	570	15481-002			··BAFFLE, SPINNER	1209		1
-	572	15481-004	&		··BAFFLE, SPINNER	3026		1
-	574	15481-006			··BAFFLE, SPINNER, BLACK	4046		1
-	576	15891-002			··BAFFLE SEAL, VERT	0821	1208	1
	578	15891-003			··BAFFLE SEAL, VERT	1209		1
	580	15890-001			··BAFFLE SEAL, SPINNER	0821		1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	582	15906-002			··BAFFLE SEAL, VERT	0821	1208	1
	584	15906-003			··BAFFLE SEAL, VERT	1209		1
-	586	13834-001			·BRACE ASSEMBLY, SPINNER	0002	0319	1
	588	13834-002			·BRACE ASSEMBLY, SPINNER	0320	0820	1
	590	MS27039-0806		A	·SCREW	0002	0820	4
	592	NAS1149FN832P		A	·WASHER	0002	0820	4
	594	15461-001			·ANGLE, BAFFLE, SPINNER	0821		1
	596	15490-001			·CLOSEOUT, SPINNER W/O PERSPECTIVE	0821		1
	598	15490-002	&		·CLOSEOUT, SPINNER W/ PERSPECTIVE	3026		1
	600	15490-003			·CLOSEOUT, SPINNER W/ PERSPECTIVE, BLACK	4046		1
	602	MS27039-0806		A	·SCREW	3026		2
	604	NAS1149FN832P		A	·WASHER	3026		2
	606	14143-001			·BAFFLE ASSEMBLY, OIL COOLER	0002	0820	1
-	608	15489-001			·BAFFLE ASSEMBLY, OIL COOLER	0821	1208	1
	610	15489-002	&		·BAFFLE ASSEMBLY, OIL COOLER	1209		1
	612	15489-005			·BAFFLE ASSEMBLY, OIL COOLER, BLACK	4046		1
	614	MS27039-0806		A	·SCREW	0002		4
	616	NAS1149FN832P		A	·WASHER	0002		4
-	618	15463-001			··BAFFLE, OIL COOLER	0821	1208	1
-	620	15463-002	&		··BAFFLE, OIL COOLER	1209		1
-	622	15463-005			··BAFFLE, OIL COOLER, BLACK	4046		1
-	624	15466-001	&		··BAFFLE, CYLINDER, BOTTOM, LEFT, AFT	0821		1
-	626	15466-002			··BAFFLE, CYLINDER, BOTTOM, LEFT, AFT, BLACK	4046		1
-	628	15905-001			··SEAL, BAFFLE, OIL COOLER	0821		1
-	630	14143-101			··BACKING PLATE	0002	0820	1
-	632	14143-102			··BACKING PLATE	0002	0820	1
-	634	14143-103			··BACKING PLATE	0002	0820	1
-	636	15905-001			··BAFFLE SEAL	0821		1
-	638	14176-001			·ASSY, CLOSEOUT, BAFFLE, LOWER, LEFT	0002	0193	1
					FOR SPARES USE P/N 14176-002			
	640	14176-002			·ASSY, CLOSEOUT, BAFFLE, LOWER, LEFT	0194	0820	1
-	642	15486-001			·ASSY, CLOSEOUT, BAFFLE, LOWER, LEFT	0821	1208	1
-	644	15486-002			·ASSY, CLOSEOUT, BAFFLE, LOWER, LEFT	1209	1489	1
	646	15486-003			·ASSY, CLOSEOUT, BAFFLE, LOWER, LEFT	1490	2379	1
	648	15486-004	&		·ASSY, CLOSEOUT, BAFFLE, LOWER, LEFT	2380		1
	650	15486-007			·ASSY, CLOSEOUT, BAFFLE, LOWER, LEFT, BLACK	4046		1
	652	MS27039-0806		A	·SCREW	1490		2
	654	NAS1149FN832P		A	·WASHER	1490		2
	656	MS21042-08		A	·NUT	1490		2
-	658	MS27039-0806		A	·SCREW	0002	0820	4
						0821		2
-	660	NAS1149FN832P		A	·WASHER	0002	0820	4
						0821		2
-	662	15462-001			··CLOSEOUT, BAFFLE, LOWER, LEFT	0821	1208	1
-	664	15462-002			··CLOSEOUT, BAFFLE, LOWER, LEFT	1209	1489	1
-	668	15462-003			··CLOSEOUT, BAFFLE, LOWER, LEFT	1490	2379	1
-	670	15462-004	&		··CLOSEOUT, BAFFLE, LOWER, LEFT	2380		1
-	672	15462-007			··CLOSEOUT, BAFFLE, LOWER, LEFT, BLACK	4046		1
-	674	16350-001			··SEAL, BAFFLE, OIL COOLER SOFT ATTACH	1490		1
-	676	MS27039-0806		A	··SCREW	1490		3
-	678	16653-001	&		··PLATE, BACKING	1490		1
-	680	16653-002			··PLATE, BACKING, BLACK	4046		1
	682	14176-101			··BAFFLE SEAL, CLOSEOUT	0002	0820	1
-	684	14176-102			··BAFFLE SEAL, CLOSEOUT	0002	0193	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	686	14176-103			··BAFFLE SEAL, CLOSEOUT	0194	0820	1
	688	15894-001			··BAFFLE SEAL, CLOSEOUT	0821		1
-	690	15893-001			··BAFFLE SEAL, CLOSEOUT	0821	1208	1
	692	15893-002			··BAFFLE SEAL, CLOSEOUT	1209		1
	694	13675-001			·BAFFLE ASSEMBLY, LOWER, REAR, RIGHT	0002	0820	1
	696	15488-001	&		·ASSY, CLOSEOUT, BAFFLE, CYLINDER, RIGHT	0821		1
	698	15488-002			·ASSY, CLOSEOUT, BAFFLE, CYLINDER, RIGHT, BLACK	4046		1
-	700	15464-001	&		··TOP, REAR, RIGHT	0821		1
-	702	15464-002			··TOP, REAR, RIGHT, BLACK	4046		1
-	704	15465-001	&		··BAFFLE, AFT CYLINDER, RIGHT	0821		1
-	706	15465-002			··BAFFLE, AFT CYLINDER, RIGHT, BLACK	4046		1
-	708	15904-001			··BAFFLE SEAL, CLOSEOUT	0821		1
	710	13685-001			·ASSEMBLY, SUPPORT, BAFFLE, LOWER, RIGHT	0002		1
	712	51021-001			·SPRING	0002		2
-	714	17547-004			·ENCLOSURE ASSEMBLY, ALTERNATOR	3026	3849	1
	716	17547-006	&		·ENCLOSURE ASSEMBLY, ALTERNATOR	3850		1
	718	17547-007			·ENCLOSURE ASSEMBLY, ALTERNATOR, BLACK	4046		1
	720	MS27039-0806		A	·SCREW	3026		4
	722	NAS1149FN832P		A	·WASHER	3026		7
-	724	17541-003	&		··BAFFLE, ALTERNATOR, SIDE	3026		1
-	726	17541-006			··BAFFLE, ALTERNATOR, SIDE, BLACK	4046		1
-	728	17542-003			··BAFFLE, ALTERNATOR, AFT	3026	3849	1
-	730	17542-006	&		··BAFFLE, ALTERNATOR, AFT	3850		1
-	732	17542-007			··BAFFLE, ALTERNATOR, AFT, BLACK	4046		1
-	734	17540-004	&		··BAFFLE, ALTERNATOR, TOP	3026		1
-	736	17540-007			··BAFFLE, ALTERNATOR, TOP, BLACK	4046		1
-	738	19056-001	&		··BAFFLE, ALTERNATOR, CORNER	3026		1
-	740	19056-004			··BAFFLE, ALTERNATOR, CORNER, BLACK	4046		1
-	742	19057-001			··BAFFLE, ALTERNATOR, INBOARD	3026	3849	1
-	744	19057-003	&		··BAFFLE, ALTERNATOR, INBOARD	3850		1
-	746	19057-004			··BAFFLE, ALTERNATOR, INBOARD, BLACK	4046		1
-	748	19059-001			··SEAL, ALTERNATOR CLOSEOUT	3026		1
-	750	19061-001	&		··DOUBLER, ALTERNATOR CLOSEOUT SEAL	3026		1
-	752	19061-002			··DOUBLER, ALTERNATOR CLOSEOUT SEAL, BLACK	4046		1
-	754	19059-001			··SEAL, ALTERNATOR CLOSEOUT	3026		1
-	756	19061-001			··DOUBLER, ALTERNATOR CLOSEOUT SEAL	3026		1
-	758	19056-001			·CLOSEOUT BAFFLE, ALTERNATOR	3026		1
	760	MS27039-0806		A	·SCREW	3026		2
	762	NAS1149FN832P		A	·WASHER	3026		2
	764	NAS1801-08-07		A	·HEX HEAD SCREW	3026		3
	766	25904-001			·GROMMET	0002		2
					ALTERNATE FOR P/N 50764-001			
-	768	50764-001			·GROMMET	0002		2
					ALTERNATE FOR P/N 25904-001			
	770	AN3-4A		A	·BOLT	0002	3312	4
	772	AN524-10R7		A	·SCREW	3313		4
	774	NAS1149F0332P		A	·WASHER	0002		4

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22-1602, 22-1821, 22-1840; REFER TO 22-1863 FOR PART IDENTIFICATION.

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-4031, 22-4033 THRU 22-4044; REFER TO 22-4046 FOR PART IDENTIFICATION.			
			&		AIRCRAFT SERIALS 22-4046 & SUBS, INSTALLED AS OPTIONAL EQUIPMENT.			
			!		AFTER SB2X-77-04.			
			$		13651-002 MUST BE INSTALLED WITH 13661-003.			
			@		13654-002 MUST BE INSTALLED WITH 13669-003.			
			#		13668-003 MUST BE INSTALLED WITH 13677-003.			

Intentionally Left Blank

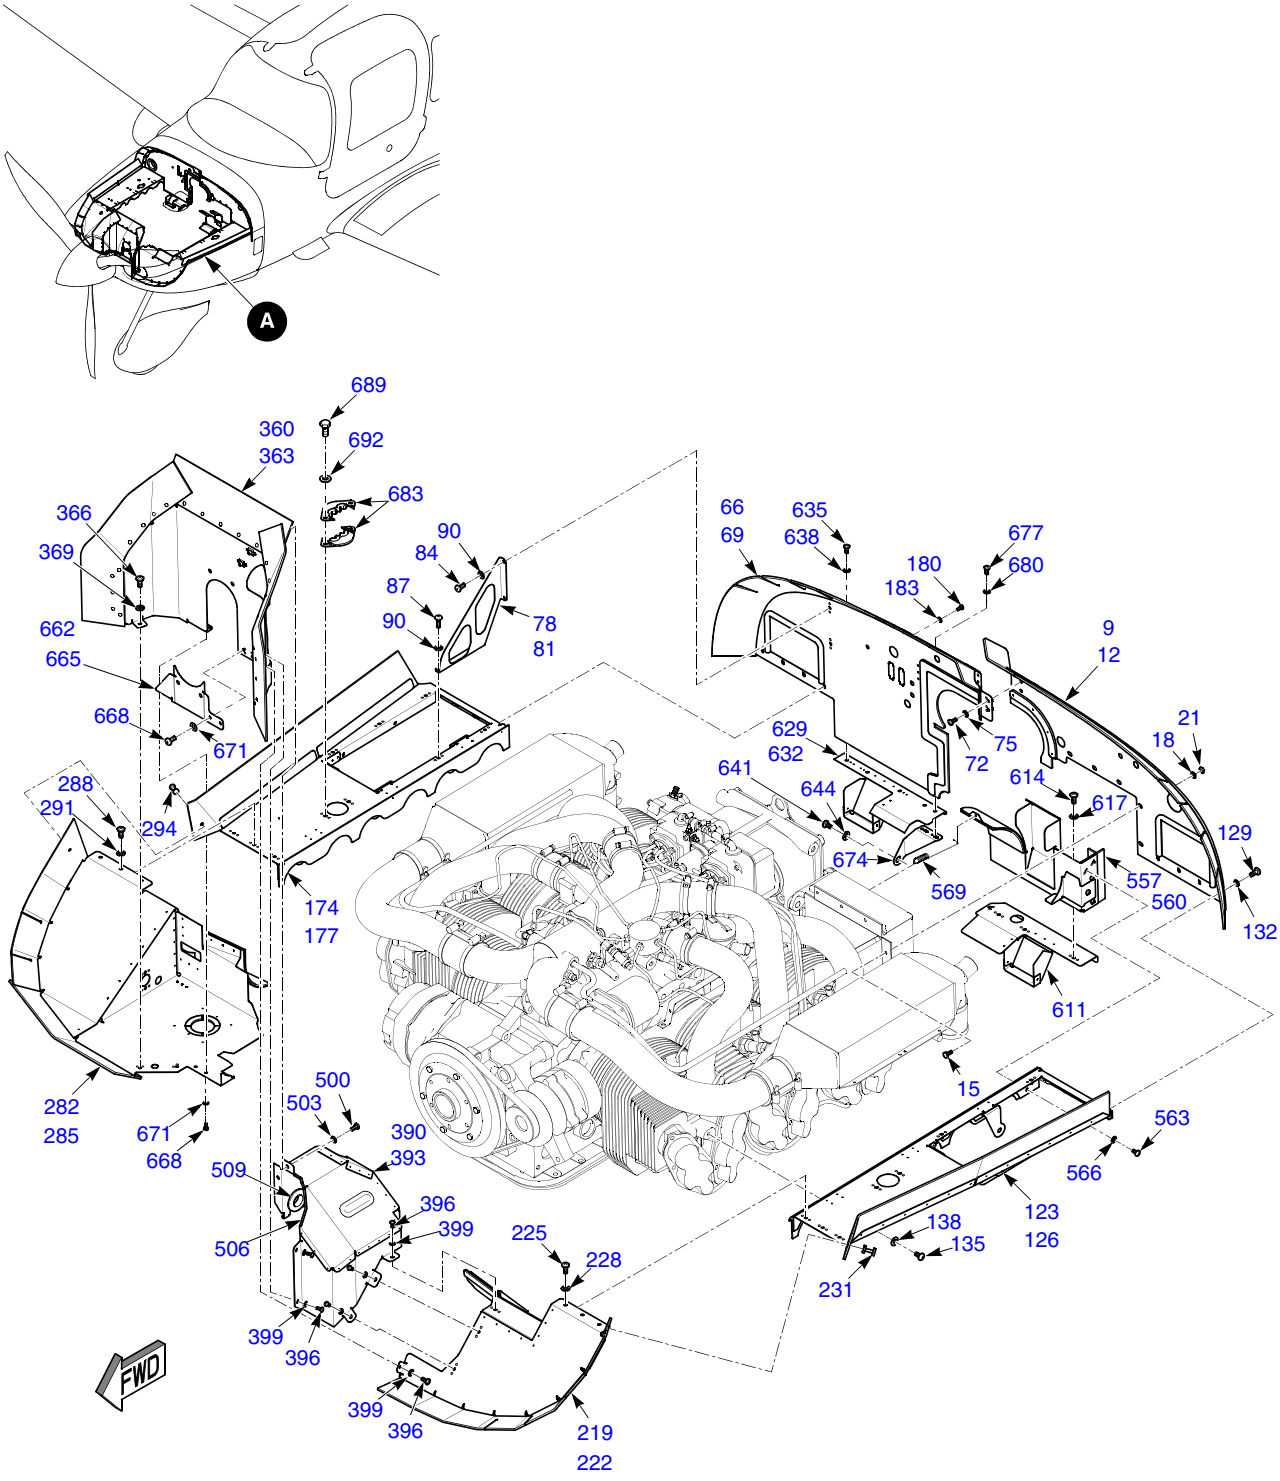

DETAIL A

Serials 22T-0001 & subs.

SR22_PC71_1950A

Figure-03
Baffling Assembly - Serials 22T-0001 & subs

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		SR22T BAFFLING ASSEMBLY	/ 0001	/	NP
-	3	15473-004			·ASSEMBLY, BAFFLE, REAR, LEFT	/ 0001	/ 0001	1
-	6	15473-006			·ASSEMBLY, BAFFLE, REAR, LEFT	/ 0002	/ 0213	1
	9	15473-008	#		·ASSEMBLY, BAFFLE, REAR, LEFT	/ 0214	/	1
	12	15473-009	@		·ASSEMBLY, BAFFLE, REAR, LEFT, BLACK	/ 0214	/	1
	15	AN3-4A		A	·BOLT	/ 0001	/	5
	18	NAS1149F0316P		A	·WASHER	/ 0001	/	5
	21	MS21042-3		A	·NUT	/ 0001	/	5
-	24	15472-005			··BAFFLE, AFT, LEFT	/ 0001	/ 0001	1
-	27	15472-007			··BAFFLE, AFT, LEFT	/ 0002	/ 0213	1
-	30	15472-009	#		··BAFFLE, AFT, LEFT	/ 0214	/	1
-	33	15472-010	@		··BAFFLE, AFT, LEFT, BLACK	/ 0214	/	1
-	36	15878-001			··SEAL, BAFFLE, MAGNETO, LEFT	/ 0001	/	1
-	39	15879-001	#		··PLATE, BACKING, SEAL, BAFFLE	/ 0001	/	1
-	42	15879-002	@		··PLATE, BACKING, SEAL, BAFFLE, BLACK	/ 0001	/	1
-	45	15877-005			··SEAL, BAFFLE, LEFT	/ 0001	/	1
-	48	15473-101			··SEAL, RUBBER	/ 0001	/	1
-	51	26393-001			··PLATE, DOUBLER	/ 0001	/ 0001	1
-	54	26393-002	#		··PLATE, DOUBLER	/ 0002	/	1
-	57	26393-003	@		··PLATE, DOUBLER, BLACK	/ 0002	/	1
-	60	26397-001			··BRACKET, ANGLE	/ 0001	/	1
-	63	15469-008			·ASSEMBLY, BAFFLE, REAR, RIGHT	/ 0001	/ 0310	1
			!		FOR SPARES USE P/N 15469-010			
	66	15469-010	#		·ASSEMBLY, BAFFLE, REAR, RIGHT	/ 0311	/	1
	69	15469-012	@		·ASSEMBLY, BAFFLE, REAR, RIGHT, BLACK	/ 0311	/	1
	72	MS27039-0806		A	·SCREW	/ 0001	/	2
	75	NAS1149FN816P		A	·WASHER	/ 0001	/	2
	78	28403-001	#		·GUSSET	/ 0311	/	1
	81	28403-001	@		·GUSSET, BLACK	/ 0311	/	1
	84	MS27039-0806		A	·SCREW	/ 0311	/	2
	87	MS27039-0808		A	·SCREW	/ 0311	/	2
	90	NAS1149FN832P		A	·WASHER	/ 0311	/	4
-	93	15468-008			··BAFFLE, AFT, RIGHT	/ 0001	/ 0310	1
-	94	15468-010			··BAFFLE, AFT, RIGHT	/ 0311	/	1
-	96	15872-005			··SEAL, BAFFLE, RIGHT	/ 0001	/	1
-	99	13660-002			··SUPPORT, BAFFLE, REAR, RIGHT	/ 0001	/	1
-	102	15874-002	#		··SEAL, BAFFLE, MAG, LEFT	/ 0001	/	1
-	105	15874-005	@		··SEAL, BAFFLE, MAG, LEFT, BLACK	/ 0001	/	1
-	108	15873-002	#		··DOUBLER, SEAL, BAFFLE, MAG, RIGHT	/ 0001	/	1
-	111	15873-005	@		··DOUBLER, SEAL, BAFFLE, MAG, RIGHT, BLACK	/ 0001	/	1
-	114	15469-101			··SEAL, REAR	/ 0001	/	1
-	117	26393-001	#		··PLATE, DOUBLER	/ 0001	/	1
-	120	26393-003	@		··PLATE, DOUBLER, BLACK	/ 0001	/	1
	123	15475-004	#		·ASSEMBLY, BAFFLE, SIDE, LEFT	/ 0001	/	1
	126	15475-005	@		·ASSEMBLY, BAFFLE, SIDE, LEFT, BLACK	/ 0001	/	1
	129	MS27039-0806		A	·SCREW	/ 0001	/	4
	132	NAS1149FN816P		A	·WASHER	/ 0001	/	4
	135	MS35206-278		A	·SCREW	/ 0001	/	3
	138	MS35338-44		A	·WASHER	/ 0001	/	3
-	141	15474-005	#		··BAFFLE, SIDE, LEFT	/ 0001	/	1
-	144	15474-006	@		··BAFFLE, SIDE, LEFT, BLACK	/ 0001	/	1
-	147	13653-002			··SUPPORT, BAFFLE	/ 0001	/	3
-	150	15880-003			··SEAL, BAFFLE, LEFT	/ 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	153	15881-004			··SEAL, CYLINDER, BAFFLE, LEFT	/ 0001	/	1
-	156	15476-001	#		··PLATE, BACKING SEAL BAFFLE SIDE	/ 0001	/	1
-	159	15476-003	@		··PLATE, BACKING SEAL BAFFLE SIDE, BLACK	/ 0001	/	1
-	162	15476-002	#		··PLATE, BACKING SEAL BAFFLE SIDE	/ 0001	/	1
-	165	15476-004	@		··PLATE, BACKING SEAL BAFFLE SIDE, BLACK	/ 0001	/	1
-	168	26397-001	#		··ANGLE BRACKET	/ 0001	/	1
-	171	26397-003	@		··ANGLE BRACKET, BLACK	0001		1
	174	15471-005	#		·ASSEMBLY, BAFFLE, SIDE, RIGHT	/ 0001	/	1
	177	15471-006	@		·ASSEMBLY, BAFFLE, SIDE, RIGHT, BLACK	/ 0001	/	1
	180	MS27039-0806		A	·SCREW	/ 0001	/	4
	183	NAS1149FN816P		A	·WASHER	/ 0001	/	4
-	186	MS35206-278		A	·SCREW	/ 0001	/	3
-	189	MS35338-44		A	·WASHER	/ 0001	/	3
-	192	15470-004	#		··BAFFLE, SIDE, RIGHT	/ 0001	/	1
-	195	15470-005	@		··BAFFLE, SIDE, RIGHT, BLACK	/ 0001	/	1
-	198	13653-002			··SUPPORT, BAFFLE	/ 0001	/	3
-	201	15875-002			··SEAL, BAFFLE, RIGHT	/ 0001	/	1
-	204	15876-003			··SEAL, CYLINDER, BAFFLE, RIGHT	/ 0001	/	1
-	207	15476-001	#		··DOUBLER, SEAL, BAFFLE, RIGHT	/ 0001	/	2
-	210	15476-003	@		··DOUBLER, SEAL, BAFFLE, RIGHT, BLACK	/ 0001	/	2
-	213	26937-001	#		··BRACKET, ANGLE	/ 0001	/	1
-	216	26937-003	@		··BRACKET, ANGLE, BLACK	/ 0001	/	1
	219	15477-003	#		·ASSEMBLY, BAFFLE, FWD, LEFT	/ 0001	/	1
	222	15477-004	@		·ASSEMBLY, BAFFLE, FWD, LEFT, BLACK	/ 0001	/	1
	225	MS27039-0806		A	·SCREW	/ 0001	/	3
	228	NAS1149FN816P		A	·WASHER	/ 0001	/	3
	231	50208-001		A	·SCREW, BINDING	/ 0001	/	1
-	234	15478-004	#		··BAFFLE, FWD, LEFT	/ 0001	/	1
-	237	15478-005	@		··BAFFLE, FWD, LEFT, BLACK	/ 0001	/	1
-	240	15479-004	#		··BAFFLE ATTACH, FWD, LEFT	/ 0001	/	1
-	243	15479-005	@		··BAFFLE ATTACH, FWD, LEFT, BLACK	/ 0001	/	1
-	246	15885-002			··SEAL, BAFFLE, FRONT, LEFT	/ 0001	/	1
-	249	15883-001	#		··DOUBLER, SEAL, BAFFLE	/ 0001	/	7
-	252	15883-002	@		··DOUBLER, SEAL, BAFFLE, BLACK	/ 0001	/	7
-	255	15887-002			··SEAL, SHEET, CYLINDER, LEFT	/ 0001	/	1
-	258	15888-003			··SEAL, CYLINDER, BAFFLE	/ 0001	/	1
-	261	17544-002	#		··BAFFLE, CYLINDER, FWD, LEFT	/ 0001	/	1
-	264	17544-003	@		··BAFFLE, CYLINDER, FWD, LEFT, BLACK	/ 0001	/	1
-	267	17545-001	#		··CLIP, BAFFLE, CYLINDER	/ 0001	/	2
-	270	17545-002	@		··CLIP, BAFFLE, CYLINDER, BLACK	/ 0001	/	2
-	273	21820-001	#		··BAFFLE, WEDGE	/ 0001	/	1
-	276	21820-002	@		··BAFFLE, WEDGE, BLACK	/ 0001	/	1
-	279	21821-001			··SEAL, CYLINDER, ALT2	/ 0001	/	1
	282	15487-007	#		·ASSEMBLY, BAFFLE, FRONT, RIGHT	/ 0001	/	1
	285	15487-008	@		·ASSEMBLY, BAFFLE, FRONT, RIGHT, BLACK	/ 0001	/	1
	288	MS27039-0806		A	·SCREW	/ 0001	/	3
	291	NAS1149FN816P		A	·WASHER	/ 0001	/	3
	294	50208-001		A	·SCREW, BINDING	/ 0001	/	1
-	297	15484-007	#		··BAFFLE, FRONT, RIGHT	/ 0001	/	1
-	300	15484-008	@		··BAFFLE, FRONT, RIGHT, BLACK	/ 0001	/	1
-	303	15483-006	#		··BAFFLE, FWD, RIGHT	/ 0001	/	1
-	306	15483-007	@		··BAFFLE, FWD, RIGHT, BLACK	/ 0001	/	1
-	309	15467-001	#		··BAFFLE, CYLINDER, BOTTOM	/ 0001	/	1
-	312	15467-002	@		··BAFFLE, CYLINDER, BOTTOM, BLACK	0001		1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	315	15485-001	#		··BAFFLE, CYLINDER, FRONT, RIGHT	/ 0001	/	1
-	318	15485-002	@		··BAFFLE, CYLINDER, FRONT, RIGHT, BLACK	0001		1
-	321	15883-001	#		··BACKING STRIP, BAFFLE	/ 0001	/	4
-	324	15883-002	@		··BACKING STRIP, BAFFLE, BLACK	0001		4
-	327	15899-001	#		··DOUBLER, SEAL, FRONT	/ 0001	/	2
-	330	15899-002	@		··DOUBLER, SEAL, FRONT, BLACK	0001		2
-	333	15897-001			··SEAL, CYLINDER, BAFFLE	/ 0001	/	1
-	336	15898-001			··SEAL, BAFFLE, CYLINDER, FRONT	/ 0001	/	1
-	339	15902-001			··SEAL, BAFFLE, ALTERNATOR	/ 0001	/	1
-	342	15903-001	#		··DOUBLER, SEAL, ALTERNATOR	/ 0001	/	1
-	345	15903-002	@		··DOUBLER, SEAL, ALTERNATOR, BLACK	/ 0001	/	1
-	348	15896-001			··SEAL, BAFFLE, FRONT	/ 0001	/	1
-	351	15892-002			··SEAL, BAFFLE, FRONT	/ 0001	/	1
-	354	15491-001	#		··SUPPORT, BAFFLE, CYLINDER, AFT	/ 0001	/	1
-	357	15491-002	@		··SUPPORT, BAFFLE, CYLINDER, AFT, BLACK	/ 0001	/	1
	360	15480-003	#		·ASSEMBLY, BAFFLE, SPINNER	/ 0001	/	1
	363	15480-005	@		·ASSEMBLY, BAFFLE, SPINNER, BLACK	/ 0001	/	1
	366	MS27039-0806		A	·SCREW	/ 0001	/	1
	369	NAS1149FN816P		A	·WASHER	/ 0001	/	1
-	372	15481-004	#		··BAFFLE, SPINNER	/ 0001	/	1
-	375	15481-006	@		··BAFFLE, SPINNER, BLACK	/ 0001	/	1
-	378	15891-003			··SEAL, BAFFLE, VERTICAL	/ 0001	/	1
-	381	15890-001			··SEAL, BAFFLE, SPINNER	/ 0001	/	1
-	384	15906-003			··SEAL, BAFFLE, VERTICAL	/ 0001	/	1
-	387	17547-004			·ASSEMBLY, ENCLOSURE, ALTERNATOR	/ 0001	/ 0310	1
					FOR SPARES USE P/N 17547-006			
	390	17547-006	#		·ASSEMBLY, ENCLOSURE, ALTERNATOR	/ 0311	/	1
	393	17547-007	@		·ASSEMBLY, ENCLOSURE, ALTERNATOR, BLACK	/ 0001	/	1
	396	MS27039-0806		A	·SCREW	/ 0001	/	6
	399	NAS1149FN816P		A	·WASHER	/ 0001	/	6
	500	NAS1801-08-7		A	·HEX HEAD SCREW	/ 0001	/	2
	503	NAS1149FN816P		A	·WASHER	/ 0001	/	2
	506	15460-101			·GROMMET	/ 0001	/	AR
	509	MS35489-22			·GROMMET	/ 0001	/	1
-	512	17541-003	#		··BAFFLE, ALTERNATOR, SIDE	/ 0001	/	1
-	515	17541-006	@		··BAFFLE, ALTERNATOR, SIDE, BLACK	/ 0001	/	1
-	518	17542-003			··BAFFLE, ALTERNATOR, AFT	/ 0001	/ 0310	1
-	521	17542-006	#		··BAFFLE, ALTERNATOR, AFT	/ 0311	/	1
-	524	17542-007	@		··BAFFLE, ALTERNATOR, AFT, BLACK	/ 0001	/	1
-	527	17540-004	#		··BAFFLE, ALTERNATOR, TOP	/ 0001	/	1
-	530	17540-007	@		··BAFFLE, ALTERNATOR, TOP, BLACK	/ 0001	/	1
-	533	19056-001	#		··BAFFLE, ALTERNATOR, CORNER	/ 0001	/	1
-	536	19056-004	@		··BAFFLE, ALTERNATOR, CORNER, BLACK	/ 0001	/	1
-	539	19057-001			··BAFFLE, ALTERNATOR, INBOARD	/ 0001	/ 0310	1
-	542	19057-003	#		··BAFFLE, ALTERNATOR, INBOARD	/ 0311	/	1
-	545	19057-004	@		··BAFFLE, ALTERNATOR, INBOARD, BLACK	/ 0001	/	1
-	548	19059-001			··SEAL, ALTERNATOR CLOSEOUT	/ 0001	/	1
-	551	19061-001	#		··DOUBLER, ALTERNATOR CLOSEOUT SEAL	/ 0001	/	1
-	554	19061-002	@		··DOUBLER, ALTERNATOR CLOSEOUT SEAL, BLACK	/ 0001	/	1
	557	15486-005	#		·ASSEMBLY, BAFFLE, CLOSEOUT, LOWER, LEFT	/ 0001	/	1
	560	15486-006	@		·ASSEMBLY, BAFFLE, CLOSEOUT, LOWER, LEFT, BLACK	/ 0001	/	1
	563	MS27039-0806		A	·SCREW	/ 0001	/	2
	566	NAS1149FN816P		A	·WASHER	/ 0001	/	2
	569	51021-001			·SPRING	/ 0001	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	572	15462-005	#		··CLOSEOUT, BAFFLE, LOWER, LEFT	/ 0001	/	1
-	575	15462-006	@		··CLOSEOUT, BAFFLE, LOWER, LEFT, BLACK	/ 0001	/	1
-	578	15893-002			··SEAL, BAFFLE, CLOSEOUT	/ 0001	/	1
-	581	26380-001	#		··CLOSEOUT, BAFFLE, LOWER, LEFT, GUSSET	/ 0001	/	1
-	584	26380-002	@		··CLOSEOUT, BAFFLE, LOWER, LEFT, GUSSET, BLACK	/ 0001	/	1
-	587	26381-001	#		··BAFFLE, CYL 2, SHROUD	/ 0001	/	1
-	590	26381-002	@		··BAFFLE, CYL 2, SHROUD, BLACK	0001		1
-	593	16350-003			··SEAL, BAFFLE, OIL COOLER SOFT ATTACH	/ 0001	/	1
-	596	MS27039-0806		A	··SCREW	/ 0001	/	3
-	599	16653-001	#		··PLATE, BACKING	/ 0001	/	1
-	602	16653-002	@		··PLATE, BACKING, BLACK	/ 0001	/	1
-	605	MS21042-08		A	··NUT	/ 0001	/	3
-	608	NAS1149FN816P		A	··WASHER	/ 0001	/	1
	611	15489-004			·ASSEMBLY, BAFFLE, OIL COOLER	/ 0001	/	1
	614	MS27039-0806		A	·SCREW	/ 0001	/	4
	617	NAS1149FN816P		A	·WASHER	/ 0001	/	4
-	620	15463-004			··BAFFLE, OIL COOLER	/ 0001	/	1
-	623	15466-001			··BAFFLE, CYLINDER, BOTTOM, LEFT, AFT	/ 0001	/	1
-	626	15905-001			··SEAL, BAFFLE, OIL COOLER	/ 0001	/	1
	629	15488-001	#		·ASSEMBLY, BAFFLE, CYLINDER CLOSEOUT, RIGHT	/ 0001	/	1
	632	15488-002	@		·ASSEMBLY, BAFFLE, CYLINDER CLOSEOUT, RIGHT, BLACK	/ 0001	/	1
	635	MS27039-0806		A	·SCREW	/ 0001	/	3
	638	NAS1149FN816P		A	·WASHER	/ 0001	/	3
	641	PRT OF ENGINE		A	·BOLT	/ 0001	/	1
	644	PRT OF ENGINE		A	·WASHER	/ 0001	/	1
-	647	15464-001			··TOP, REAR, RIGHT	/ 0001	/	1
-	650	15464-002	@		··TOP, REAR, RIGHT, BLACK	/ 0001	/	1
-	653	15465-001	#		··BAFFLE, AFT CYLINDER, RIGHT	/ 0001	/	1
-	656	15465-002	@		··BAFFLE, AFT CYLINDER, RIGHT, BLACK	/ 0001	/	1
-	659	15904-001			··SEAL, BAFFLE, CLOSEOUT	/ 0001	/	1
	662	15490-002	#		·CLOSEOUT, SPINNER	/ 0001	/	1
	665	15490-003	@		·CLOSEOUT, SPINNER, BLACK	/ 0001	/	1
	668	MS27039-0806		A	·SCREW	/ 0001	/	4
	671	NAS1149FN816P		A	·WASHER	/ 0001	/	4
	674	27052-001			·ASSEMBLY, SUPPORT, BAFFLE, LOWER, RIGHT	/ 0001	/	1
	677	MS27039-0806		A	·SCREW	/ 0001	/	2
	680	NAS1149FN816P		A	·WASHER	/ 0001	/	2
	683	25904-001			·GROMMET	/ 0001	/	2
					ALTERNATE FOR P/N 50764-001			
-	686	50764-001			·GROMMET	/ 0001	/	2
					ALTERNATE FOR P/N 25904-001			
	689	AN3-4A		A	·BOLT	/ 0001	/	4
	692	NAS1149F0332P		A	·WASHER	/ 0001	/	4

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

1) SERIAL NUMBER 22T-0199, 22T-0200, 22T-0202, 22T-0204 THRU 22T-0212; REFER TO 22T-0214 FOR PART IDENTIFICATION.

! AFTER SB2X-77-04.

@ AIRCRAFT SERIALS PRIOR TO 22T-0690, INSTALLED AS OPTIONAL EQUIPMENT.

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
			#		AIRCRAFT SERIALS 22T-0690 & SUBS, INSTALLED AS OPTIONAL EQUIPMENT.			

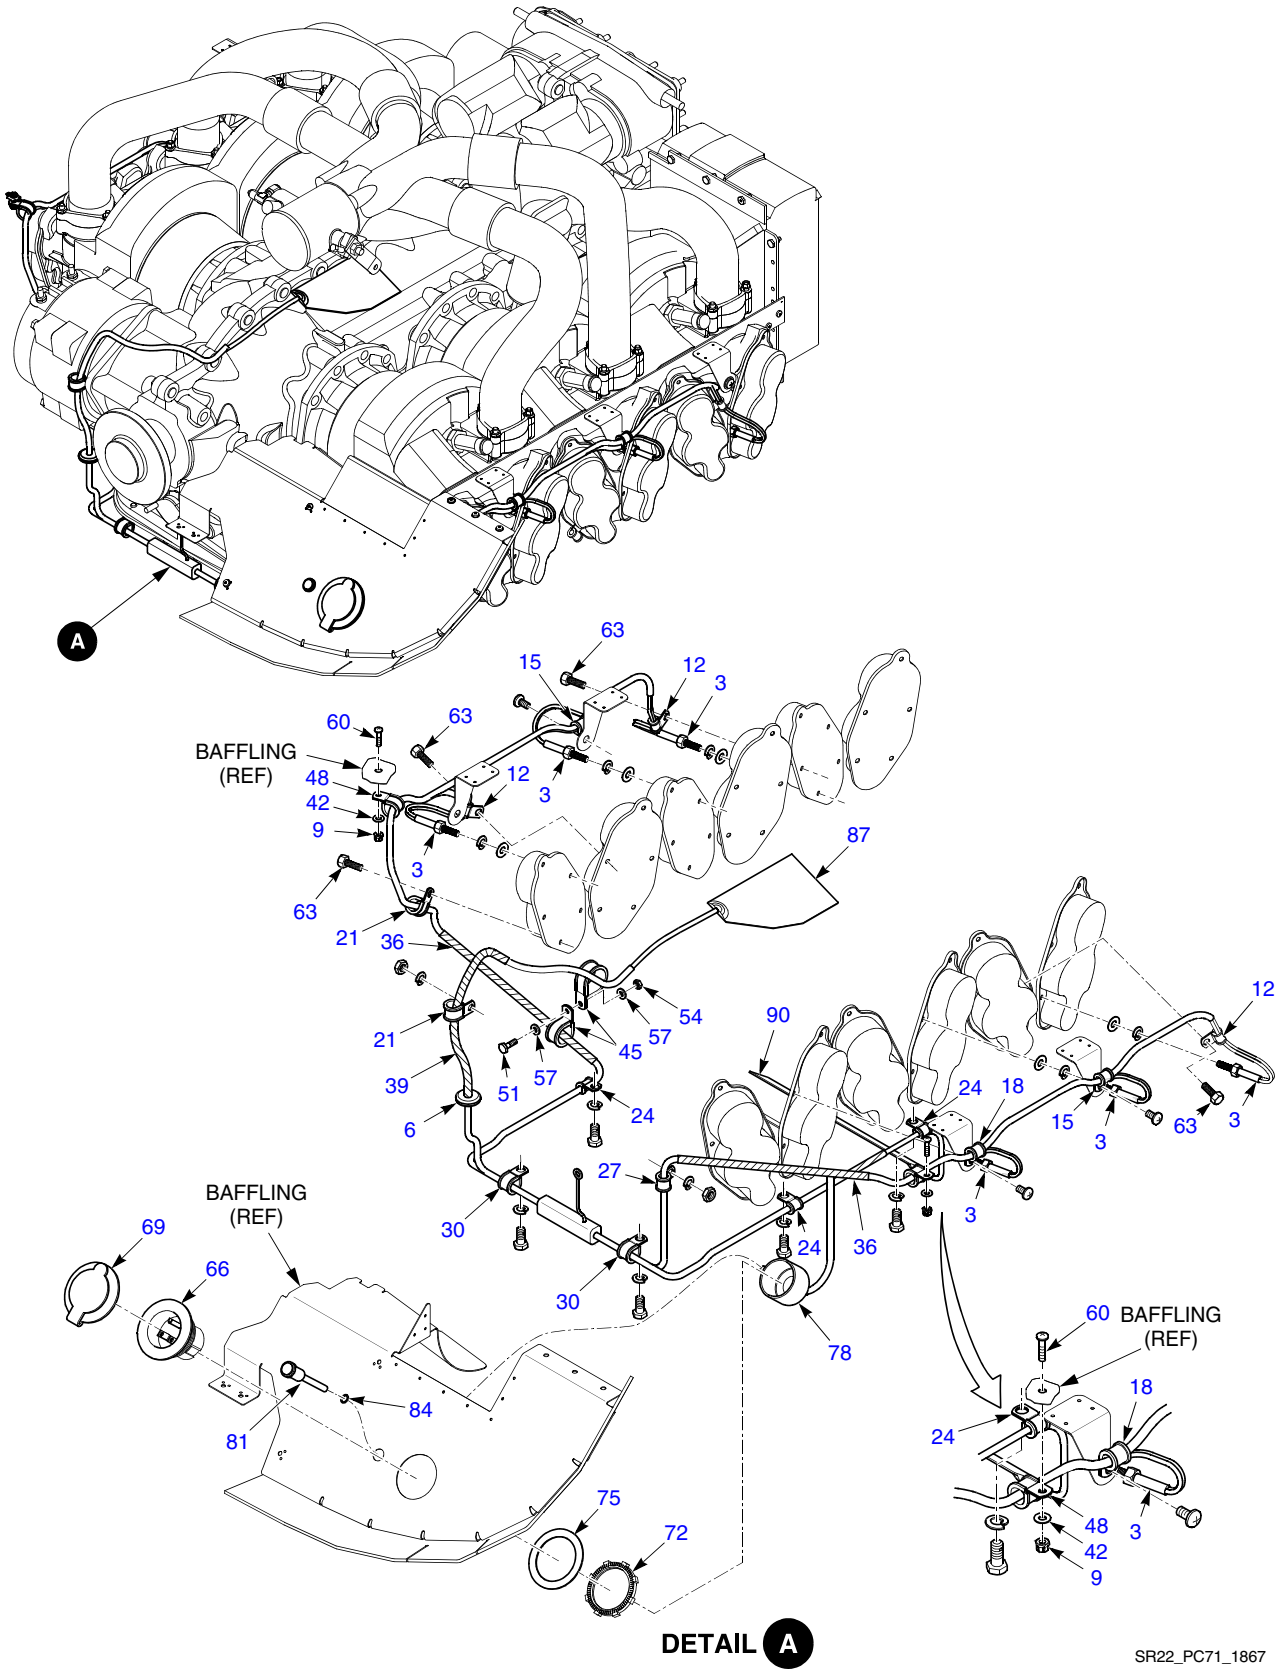

Figure-04
Engine Pre-Heater

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			ENGINE PRE-HEATER	3026 / 0001	/	NP
	3	23623-110	@		·ENGINE, BOLT-HEATER, 110 VOLT	3026 / 0001	/	6
	6	MS35489-7			·GROMMET	3026 / 0001	/	1
	9	MS21045-08		A	·NUT	3026 / 0001	/	1
	12	MS21333-97	#		·CLAMP	3026 / 0001	/	3
	15	MS21333-99	$		·CLAMP	3026 / 0001	/	2
	18	MS21333-100	$		·CLAMP	3026 / 0001	/	1
	21	MS21333-102	%		·CLAMP	3026 / 0001	/	1
	24	MS21333-109	$		·CLAMP	3026 / 0001	/	3
	27	MS21333-111	%		·CLAMP	3026 / 0001	/	1
	30	MS21333-112	$		·CLAMP	3026 / 0001	/	2
-	33	50239-040-1		A	·CABLE TIE	3026 / 0001	/	AR
	36	50943-063			·LOOM	3026 / 0001	/	2
	39	50943-035			·LOOM	3026 / 0001	/	1
	42	NAS1149F0332P		A	·WASHER	3026 / 0001	/	2
	45	AS4149WDG12			·CLAMP	3026 / 0001	/	2
	48	AS4149WDG8			·CLAMP	3026 / 0001	/	2
	51	AN3-5A		A	·BOLT	3026 / 0001	/	1
	54	MS21045-3		A	·NUT	3026 / 0001	/	1
	57	NAS1149F0363P		A	·WASHER	3026 / 0001	/	2
	60	MS35206-247		A	·SCREW	3026 / 0001	/	2
	63	PRT OF ENGINE		A	·BOLT	3026 / 0001	/	4
	66	23623-102			·PLUG	3026 / 0001	/	1
	69	23623-103			·COVER	3026 / 0001	/	1
	72	23623-104		A	·NUT	3026 / 0001	/	1
	75	23623-111		A	·WASHER	3026 / 0001	/	1
	78	23623-105			·CAP	3026 / 0001	/	1
	81	23623-106			·LIGHT	3026 / 0001	/	1
	84	50648-012			·O-RING	3090 / 0001	/	1
	87	23623-107			·CASE PAD	3026 / 0001	/	1
	90	23623-108			·OIL PAN PAD	3026 / 0001	/	1

SYMBOL NOTES:

@	REINSTALL ORIGINAL LOCK AND FLAT WASHERS.
#	INSTALL WTH EXISTING ROCKER COVER HARDWARE.
$	REMOVE FLAT WASHER< INSTALL WITH EXISTING HARDWARE.
%	REINSTALL ORIGINAL NUT AND LOCK WASHERS.

EFFECTIVITY:
All

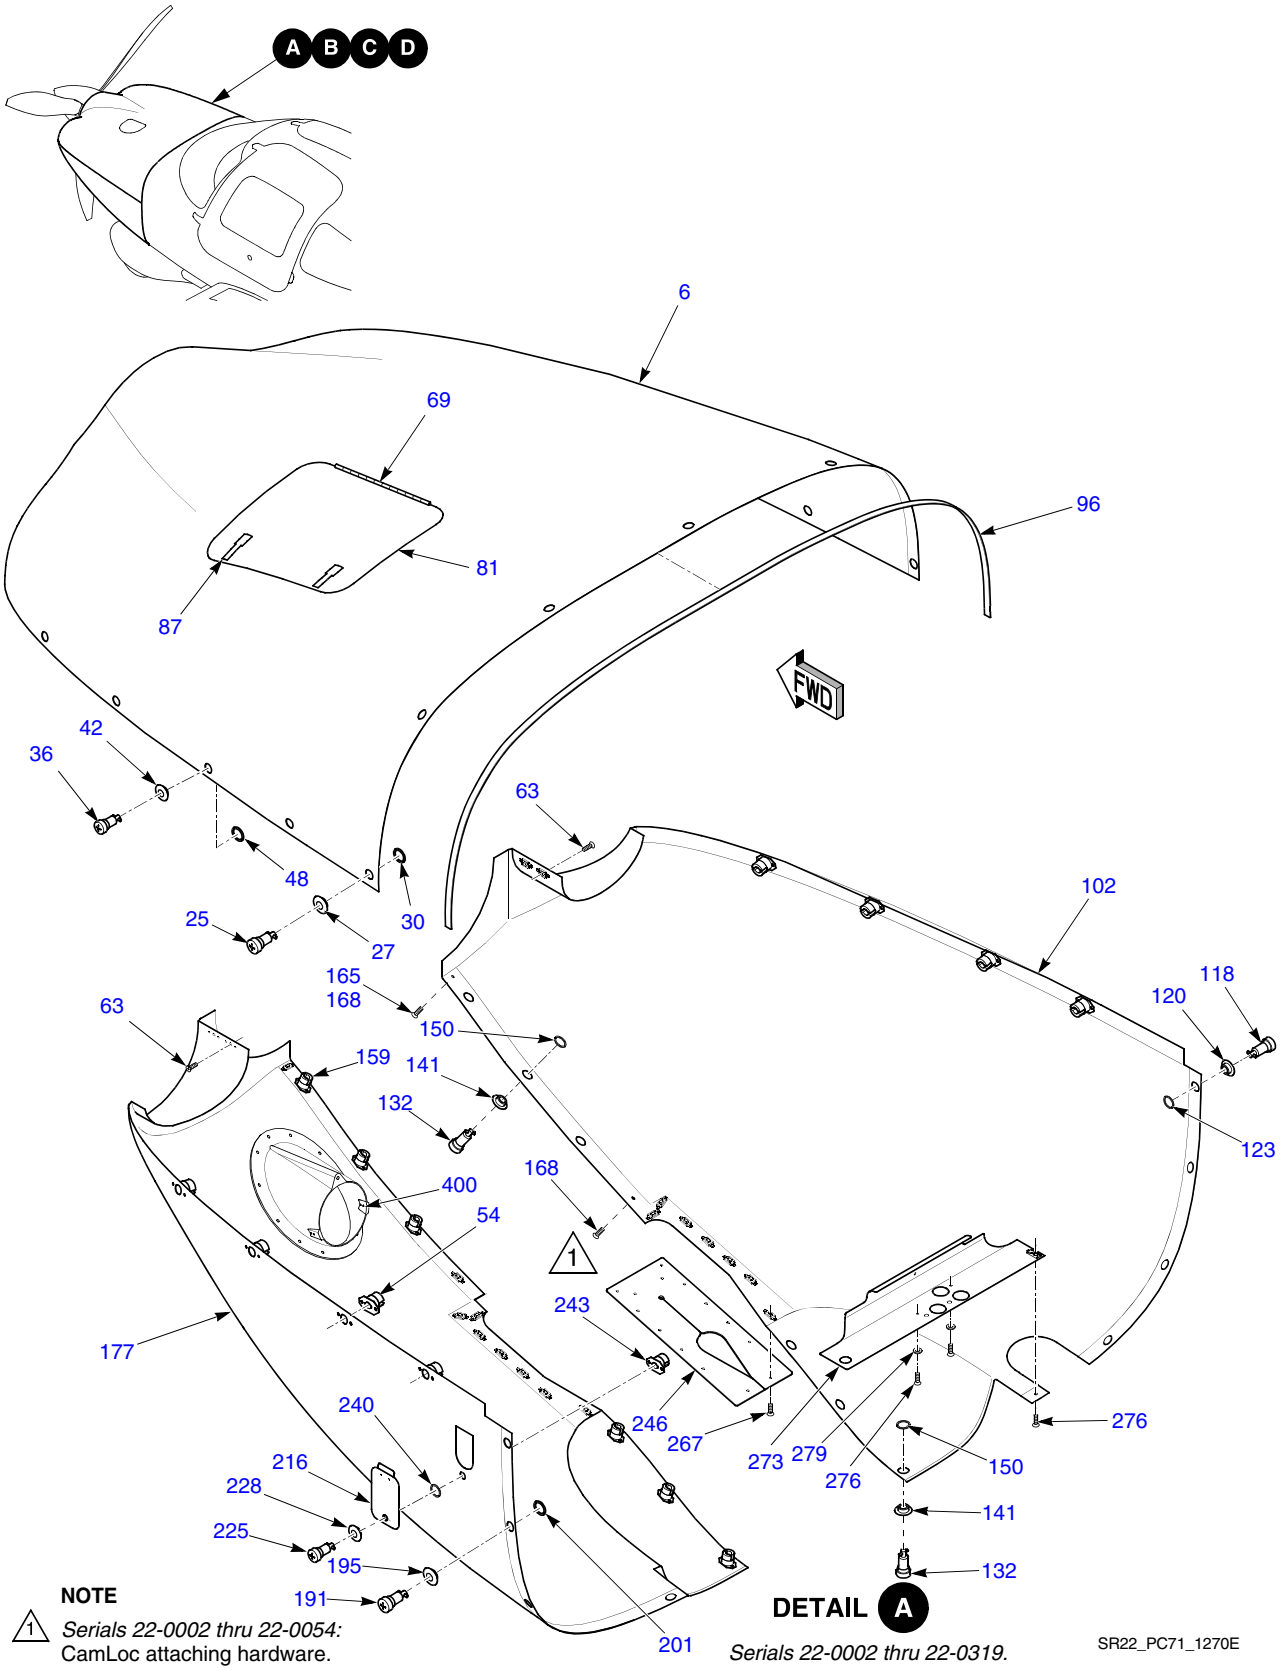

Figure-01

Cowl Assembly - Serials 22-0002 thru 22-0319 (1 of 4)

EFFECTIVITY:
Serials 22-0002 thru 22-0319

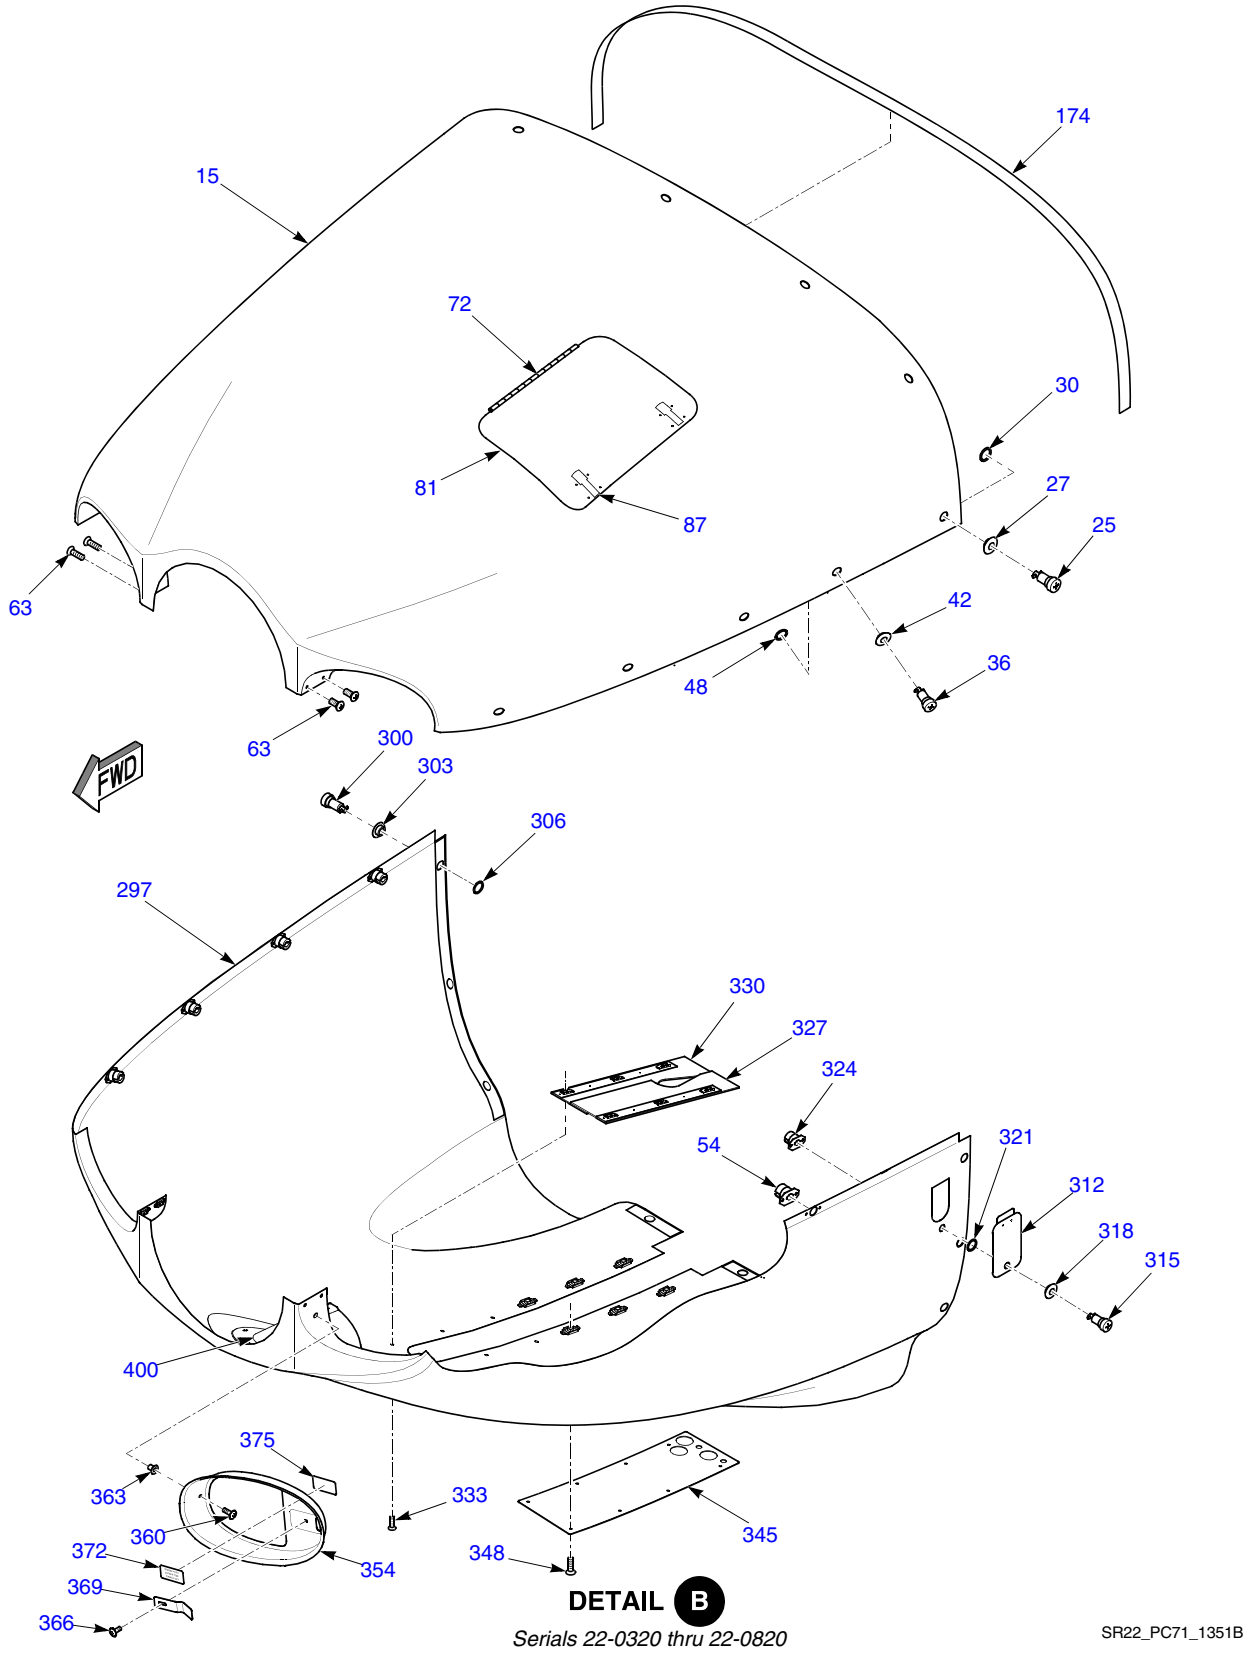

Figure-01

Cowl Assembly - Serials 22-0320 thru 22-0820 (2 of 4)

EFFECTIVITY:
Serials 22-0320 thru 22-0820

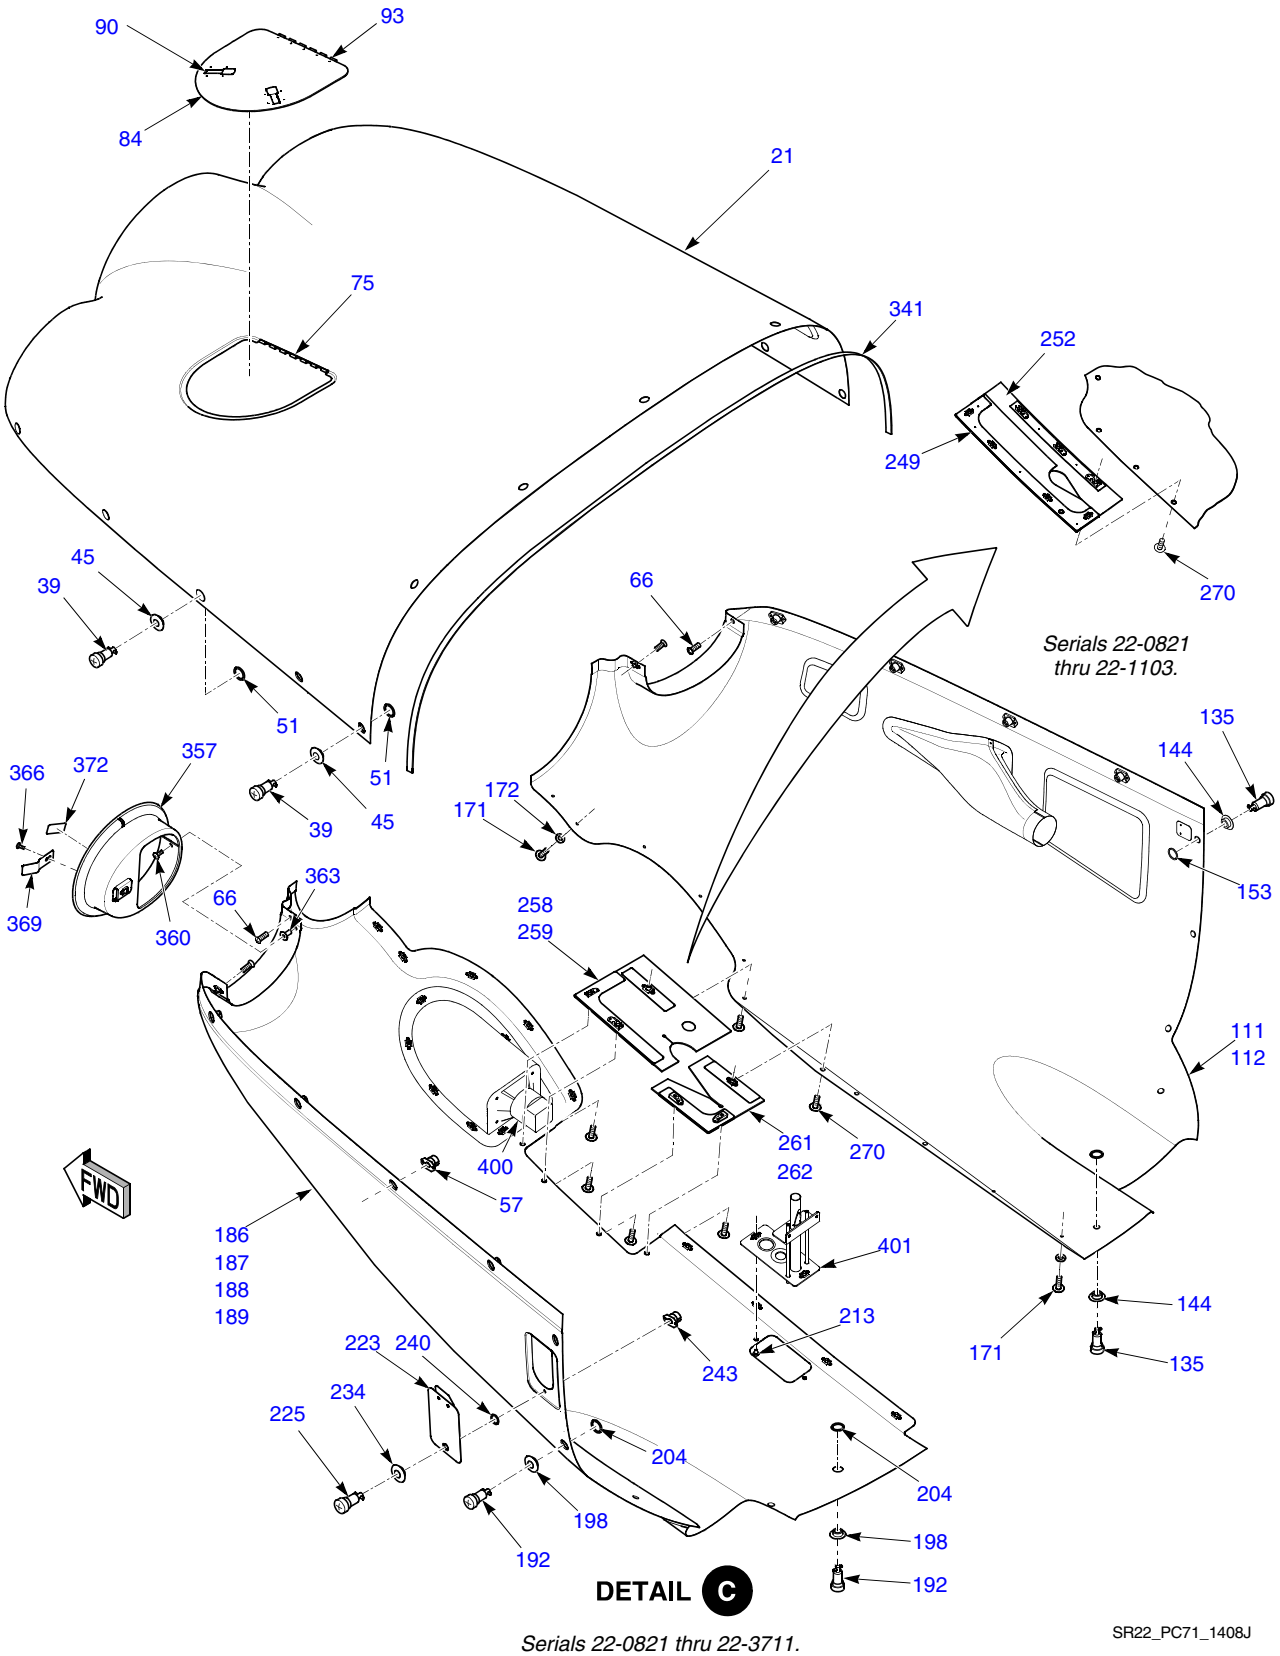

Serials 22-0821 thru 22-3711.

Figure-01

Cowl Assembly - Serials 22-0821 thru 22-3711 (3 of 4)

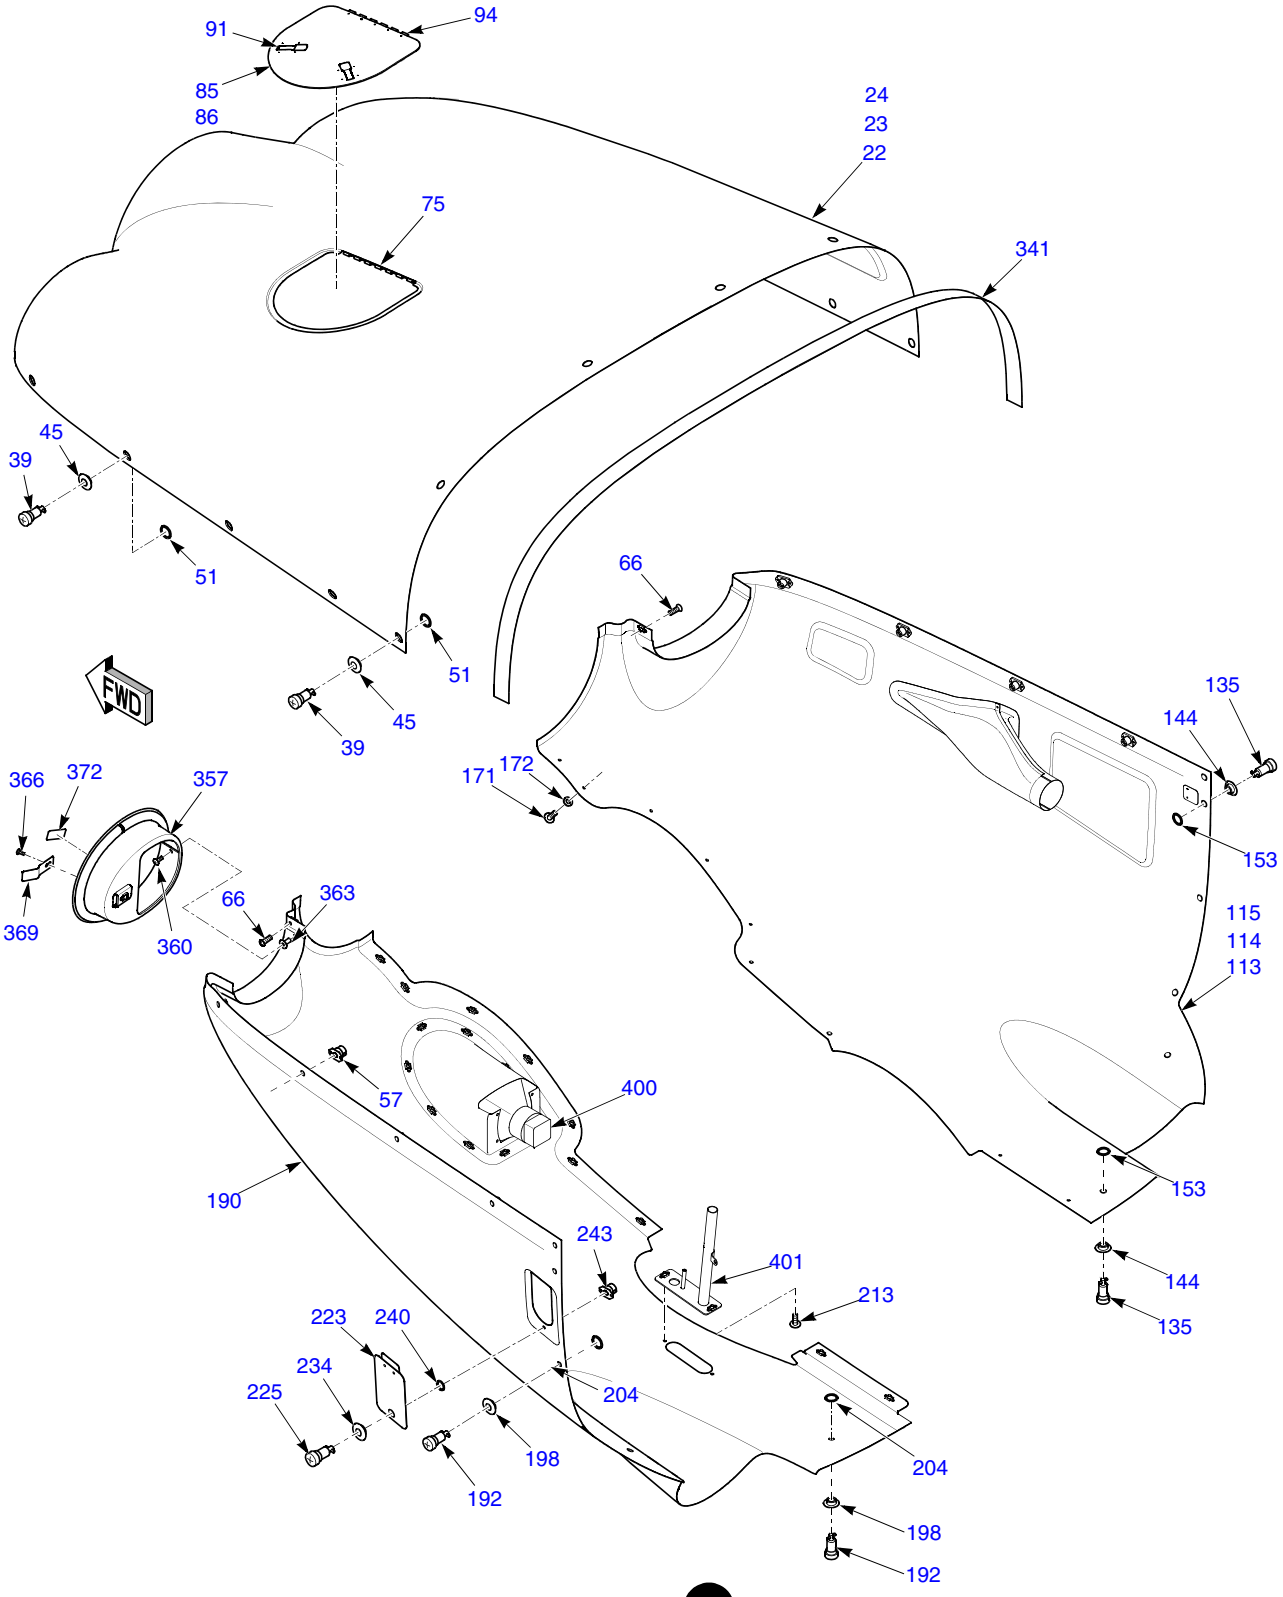

Figure-01

Cowl Assembly - Serials 22-3712 & subs (4 of 4)

EFFECTIVITY:
Serials 22-3712 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		COWL ASSEMBLY AND INSTALLATION	0002		NP
-	3	10842-004			·UPPER COWL	0002	0074	1
	6	10842-005			·UPPER COWL W/O ICE PROTECTION	0075	0379	1
-	9	10842-006			·UPPER COWL W/ ICE PROTECTION, BASIC	0334	0365	1
-	12	10842-007			·UPPER COWL	0366	0425	1
					FOR SPARES USE P/N 15450-001			
	15	15450-001			·UPPER COWL	0426	0820	1
-	18	20181-002			·UPPER COWL	0821	1170	1
					FOR SPARES USE P/N 20181-005			
-	20	20181-003			·UPPER COWL	1171	3711	1
					FOR SPARES USE P/N 20181-005			
	21	20181-005			·UPPER COWL	0821	3711	
	22	27203-002			·UPPER COWL	3712	3749	1
	23	27203-003			·UPPER COWL	3750	4017	1
	24	27203-005			·UPPER COWL	4018		1
	25	50699-009		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0002	0820	6
	27	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0002	0820	6
	30	50704-001		A	·CAMLOC RETAINING RING	0002	0820	6
-	33	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0002	0820	6
	36	50699-007		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0002	0820	8
	39	50699-007		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0821		14
	42	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0002	0820	8
	45	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0821		14
	48	50704-001		A	·CAMLOC RETAINING RING	0002	0820	8
	51	50704-001		A	·CAMLOC RETAINING RING	0821		14
	54	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0002	0820	8
	57	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0821		14
-	60	MS24694-C2		A	·SCREW	0002	0209	4
	63	AN525-832R7		A	·SCREW	0210	0820	4
	66	51219-050		A	·SCREW	0821		4
	69	14197-101			··HINGE, OIL DOOR	0002	0319	1
					FOR SPARES USE P/N 15201-101			
	72	15201-101			··HINGE, OIL DOOR	0320	0820	1
	75	20174-001			··HINGE, OIL DOOR	0821		1
-	78	20181-101			··ROD, HINGE, OIL DOOR	0821	3711	1
-	79	27203-101			··ROD, HINGE, OIL DOOR	3712		1
					ALTERNATE FOR P/N 20181-102			
-	80	20181-102			··ROD, HINGE, OIL DOOR	3712		1
					ALTERNATE FOR P/N 27203-101			
	81	10840-002			··OIL DOOR	0002	0820	1
	84	20175-001			··OIL DOOR ASSEMBLY	0821	3711	1
	85	27230-001			··OIL DOOR ASSEMBLY	3712	3851	1
					FOR SPARES USE P/N 27230-002			
	86	27230-002			··OIL DOOR ASSEMBLY	3852		1
	87	50701-001			··LATCH, OIL DOOR	0002	0820	2
	90	50701-001			···LATCH, OIL DOOR	0821	3711	2
	91	50701-002			···LATCH, OIL DOOR	3712		2
	93	20246-001			···HINGE, OIL DOOR	0821	3711	1
	94	20246-002			···HINGE, OIL DOOR	3712		1
	96	50700-063			··SEAL	0002		AR
					FOR SPARES USE P/N 53722-063			
-	99	14156-001			·LOWER COWL, RH	0002	0101	1
	102	14156-002			·LOWER COWL, RH	0102	0319	1
-	105	20439-001			·LOWER COWL, RH	0821	1012	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					FOR SPARES USE P/N 20439-003			
-	106	20439-003			·LOWER COWL, RH	1013	1103	1
-	107	20439-004			·LOWER COWL, RH	1104	1229	1
					FOR SPARES USE P/N 20439-005			
-	108	20439-005			·LOWER COWL, RH	1230	2008	1
-	109	20439-006			·LOWER COWL, RH	2009	2215	1
					FOR SPARES USE P/N 20439-008			
-	110	20439-008			·LOWER COWL, RH	2216	2437	1
	111	18396-001			·LOWER COWL, RH	2438	3059	1
	112	18396-002			·LOWER COWL, RH	3060	3711	1
	113	18396-003			·LOWER COWL, RH	3712	4083	1
	114	18396-004			·LOWER COWL, RH	4084		1
					FOR SPARES USE P/N 18396-005			
	115	18396-005			·LOWER COWL, RH	4084		1
	118	50699-009		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0002	0319	4
	120	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0002	0319	4
	123	50704-001		A	·CAMLOC RETAINING RING	0002	0319	4
-	126	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0002	0319	4
-	129	50699-007		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0002	0054	7
	132	50699-007		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0055	0319	6
	135	50699-007		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0821		5
-	138	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0002	0054	7
	141	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0055	0319	6
	144	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0821		5
-	147	50704-001		A	·CAMLOC RETAINING RING	0002	0054	7
	150	50704-001		A	·CAMLOC RETAINING RING	0055	0319	6
	153	50704-001		A	·CAMLOC RETAINING RING	0821		5
-	156	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0002	0054	7
	159	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0055	0319	6
-	162	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0821		5
	165	AN525-832R7		A	·SCREW	0002	0054	1
	168	AN525-832R7		A	·SCREW	0055	0319	2
	171	51219-050		A	·SCREW	0821		9
	172	NAS1149FN816P		A	·WASHER	0821		AR
	174	50700-063			··SEAL	0002	0319	AR
					FOR SPARES USE P/N 53722-063			
	177	14157-001			·LOWER COWL, LH	0002	0319	1
-	180	20182-002			·LOWER COWL, LH	0821	1103	1
-	183	20182-004			·LOWER COWL, LH	1104	1229	1
					FOR SPARES USE P/N 20182-005			
	186	20182-005			·LOWER COWL, LH	1230	2036	1
						2038	2042	1
	187	20182-006			·LOWER COWL, LH	2037	2037	1
						2043	3059	1
	188	20182-008			·LOWER COWL, LH	3060	3495	1
	189	20182-010			·LOWER COWL, LH	3496	3711	1
	190	20182-011			·LOWER COWL, LH	3712		1
	191	50699-009		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0002	0319	4
	192	50699-009		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0821		5
	195	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0002	0319	4
	198	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0821		5
	201	50704-001		A	·CAMLOC RETAINING RING	0002	0319	4
	204	50704-001		A	·CAMLOC RETAINING RING	0821		5
-	207	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0002	0319	4

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	210	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	0821		5
	213	AN525-10R7		A	·SCREW	0821		2
	216	11690-001			··COVER, GND. PWR. RECEPTACLE	0002	0319	1
-	219	11690-002			··COVER, GND. PWR. RECEPTACLE	0821	1196	1
					FOR SPARES USE P/N 20855-001			
-	222	20855-001			··COVER, GND. PWR. RECEPTACLE	1197	3724	1
					FOR SPARES USE P/N 20855-002			
	223	20855-002			··COVER, GND. PWR. RECEPTACLE	3725		1
	225	50699-007		A	··CAMLOC STUD ASSEMBLY, 4002 SERIES	0002	0319	1
	228	50788-002		A	··CAMLOC GROMMET, 4002 SERIES	0002	0319	1
					ALTERNATE FOR P/N 50788-001			
-	231	50788-001		A	··CAMLOC GROMMET, 4002 SERIES	0821	1196	1
					ALTERNATE FOR P/N 50788-002			
	234	50788-102		A	··CAMLOC GROMMET, PLUSH FLUSH, 4002 SERIES	1197		1
					ALTERNATE FOR P/N 50788-101			
-	237	50788-101		A	··CAMLOC GROMMET, PLUSH FLUSH, 4002 SERIES	1197		1
					ALTERNATE FOR P/N 50788-102			
	240	50704-001		A	··CAMLOC RETAINING RING	0002	0319	1
	243	50698-001		A	··CAMLOC RECEPTACLE, 4002 SERIES	0002	0319	1
	246	14106-002			·SEAL, CLOSEOUT, COWL	0002	0319	1
	249	20531-001			·FWD CLOSEOUT, LOWER COWL, LH	0821	1103	1
	252	20532-001			·FWD CLOSEOUT, LOWER COWL, RH	0821	1103	1
-	255	20660-002			·FWD CLOSEOUT, LOWER COWL	1104	1162	1
					FOR SPARES USE P/N 20660-004			
	258	20660-003			·FWD CLOSEOUT, LOWER COWL	1163	2042	1
					FOR SPARES USE P/N 20660-004			
	259	20660-004			·FWD CLOSEOUT, LOWER COWL	2043		1
	261	20665-002			·AFT CLOSEOUT, LOWER COWL	1104	3001	1
					FOR SPARES USE P/N 20665-003			
	262	20665-003			·AFT CLOSEOUT, LOWER COWL	3002		1
-	264	AN525-832R7		A	·SCREW	0002	0054	12
	267	AN525-832R7		A	·SCREW	0055	0319	14
	270	51219-050		A	·SCREW	0821		6
	273	13893-002			·OUTLET RADIUS, COWL	0002	0319	1
	276	AN525-832R7		A	·SCREW	0002	0319	3
	279	NAS1149DN832J		A	·WASHER	0002	0319	2
-	282	13937-001			··RAMP, INLET	0002	0319	1
-	285	50700-063			··SEAL	0002	0319	AR
					FOR SPARES USE P/N 53722-063			
-	288	15200-001			·LOWER COWL	0320	0379	1
-	291	15200-002			·LOWER COWL	0334	0365	1
-	294	15200-003			·LOWER COWL	0366	0425	1
	297	15200-004			·LOWER COWL	0426	0820	1
	300	50699-007		A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	0320	0820	8
	303	50788-002		A	·CAMLOC GROMMET, 4002 SERIES	0320	0820	8
	306	50704-001		A	·CAMLOC RETAINING RING	0320	0820	8
-	309	50698-001		A	··CAMLOC RECEPTACLE, 4002 SERIES	0320	0820	8
	312	11690-001			··COVER, GND. PWR. RECEPTACLE, LOWER COWL	0320	0820	1
	315	50699-007		A	··CAMLOC STUD ASSEMBLY, 4002 SERIES	0320	0820	1
	318	50788-002		A	··CAMLOC GROMMET, 4002 SERIES	0320	0820	1
	321	50704-001		A	··CAMLOC RETAINING RING	0320	0820	1
	324	50698-001		A	··CAMLOC RECEPTACLE, 4002 SERIES	0320	0820	1
	327	15203-001			·FWD CLOSEOUT, LOWER COWL, LH	0320	0820	1
	330	15203-002			·FWD CLOSEOUT, LOWER COWL, RH	0320	0820	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	333	51219-050		A	·SCREW	0320	0820	6
-	336	13937-001			··RAMP, INLET	0320	0820	1
-	339	50700-063			··SEAL	0320	3460	AR
					FOR SPARES USE P/N 53722-063			
-	340	53338-063			··SEAL	3461	3925	AR
					FOR SPARES USE P/N 53722-063			
	341	53722-063			··SEAL	3926		AR
-	342	15202-001			·AFT CLOSEOUT, LOWER COWL	0320	0399	1
	345	15202-002			·AFT CLOSEOUT, LOWER COWL	0400	0820	1
	348	51219-050		A	·SCREW	0320	0820	6
-	351	NO PRT NUMBER	@		·WINTERIZATION KIT INSTALLATION	0002		NP
					AFTER SB2X-71-04			
	354	14724-002	@		··INLET COVER	0002	0820	2
	357	20874-002	@		··INLET COVER	0821		2
	360	AN525-832R12	@	A	··SCREW	0002		2
	363	50947-001	@	A	··WELLNUT	0002		2
	366	AN525-832R8	@	A	··SCREW	0002		2
	369	14740-001	@	A	··LATCH PLATE	0002		2
	372	14741-001	@		··PLACARD, TEMPERATURE	0002		2
	375	15862-001	@		··PLACARD, IDENTIFICATION	0002	0820	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 33-40-01 DET			LANDING LIGHT INSTALLATION			
	401	RF 71-70-01 DET			ENGINE DRAIN SYSTEM INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-2334, 22-2420; REFER TO 22-2438 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					3) SERIAL NUMBER 22-4095; REFER TO 22-3712 FOR PART IDENTIFICATION.			
			@		INSTALLED AS OPTIONAL EQUIPMENT.			

EFFECTIVITY:
All

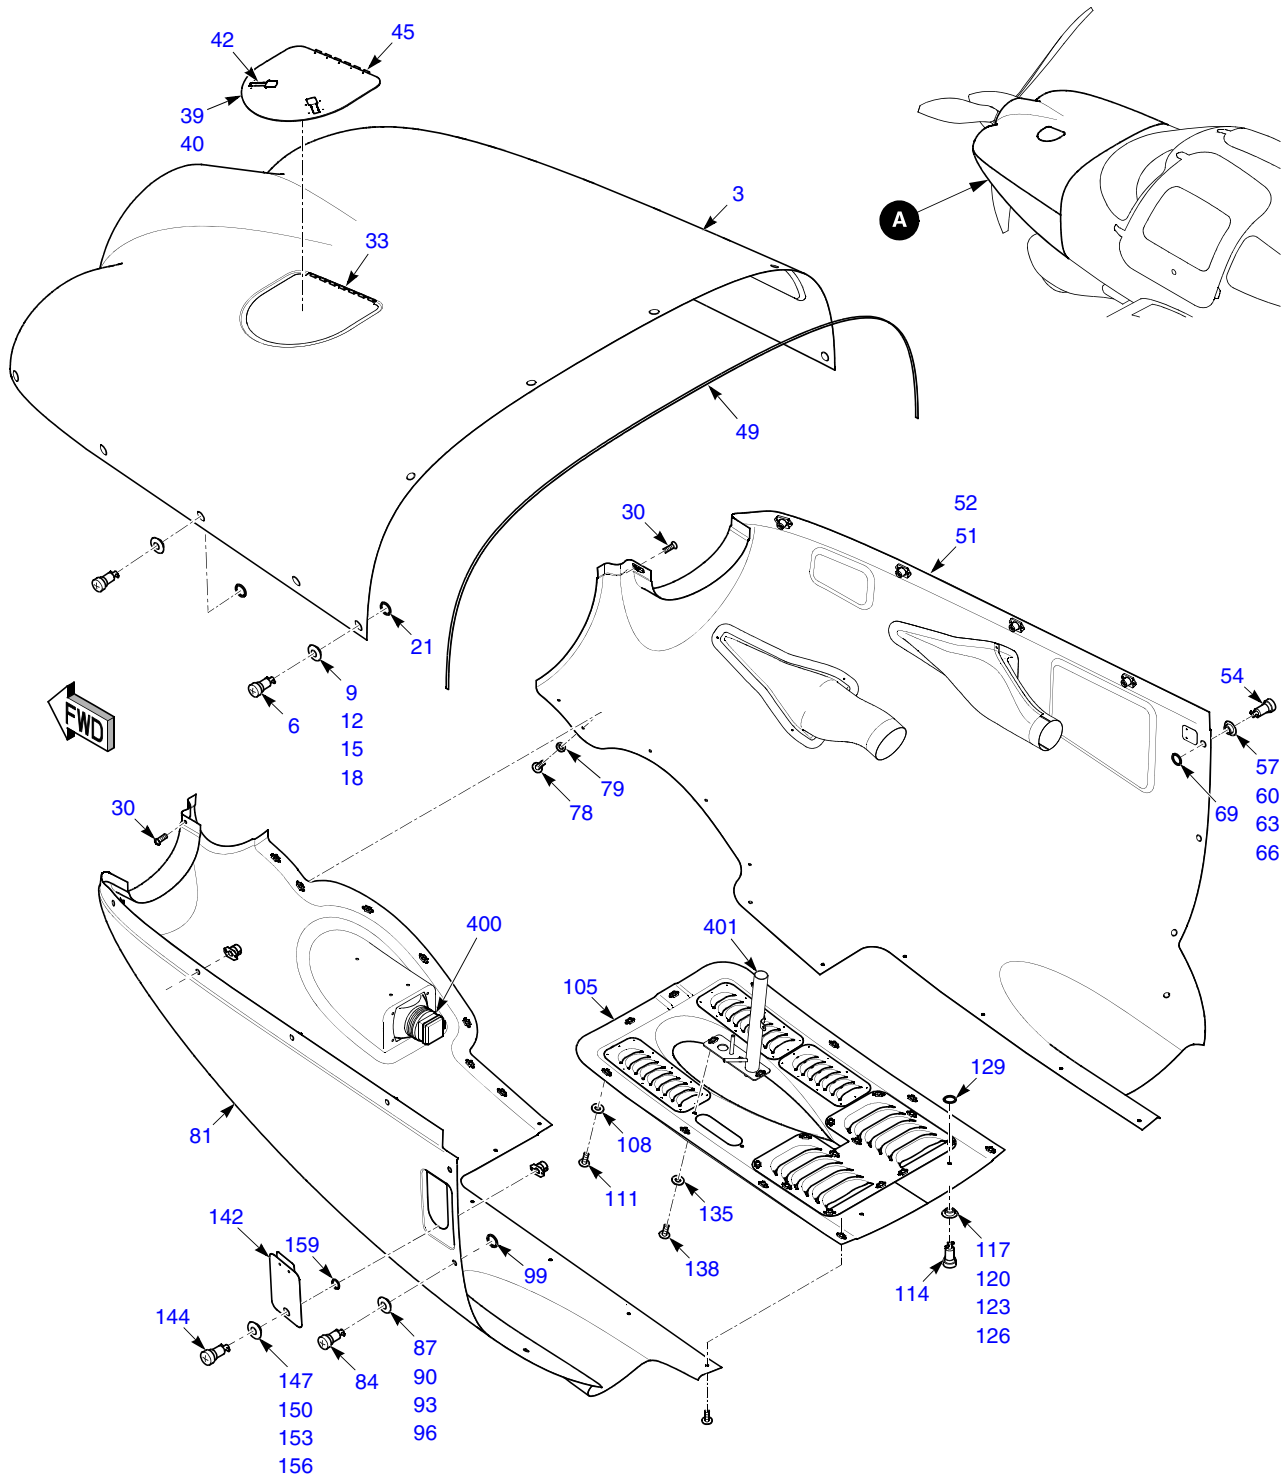

Figure-02
Cowl Assembly -Serials 22T-0001 & subs

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		COWL ASSEMBLY AND INSTALLATION	/ 0001	/	NP
-	2	27203-002			·UPPER COWL	/ 0001	/ 0641	1
	3	27203-004			·UPPER COWL	/ 0642	/	1
	6	50699-007	@	A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	/ 0001	/	14
	9	50788-001	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	14
					ALTERNATE FOR P/N 50788-002			
	12	50788-002	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	14
					ALTERNATE FOR P/N 50788-001			
	15	50788-102	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	14
					ALTERNATE FOR P/N 50788-101			
	18	50788-101	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	14
					ALTERNATE FOR P/N 50788-102			
	21	50704-001		A	·CAMLOC RETAINING RING	/ 0001	/	14
-	24	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	/ 0001	/	14
-	27	NAS1149FN816P	$	A	·WASHER	/ 0001	/	2
	30	51219-050		A	·SCREW	/ 0001	/	2
	33	20174-002			··HINGE, OIL DOOR	/ 0001	/	1
-	36	27203-101			··ROD, HINGE, OIL DOOR	/ 0001	/	1
					ALTERNATE FOR P/N 20181-102			
-	37	20181-102			··ROD, HINGE, OIL DOOR	/ 0001	/	1
					ALTERNATE FOR P/N 27203-101			
	39	27230-001			··OIL DOOR ASSEMBLY	/ 0001	/ 0318	1
					FOR SPARES USE P/N 27230-002			
	40	27230-002			··OIL DOOR ASSEMBLY	/ 0319	/	1
	42	50701-002			···LATCH, OIL DOOR	/ 0001	/	2
	45	20246-002			···HINGE, OIL DOOR	/ 0001	/	1
-	48	53338-063			··SEAL	/ 0001	/ 0475	AR
					FOR SPARES USE P/N 53722-063			
	49	53722-063			··SEAL	0476	/	AR
	51	27742-001			·LOWER COWL, RH	/ 0001	/	1
					FOR SPARES USE P/N 27742-004			
	52	27742-004			·LOWER COWL, RH	/ 0001	/	1
	54	50699-007	@	A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	/ 0001	/	4
	57	50788-001	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	4
					ALTERNATE FOR P/N 50788-002			
	60	50788-002	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	4
					ALTERNATE FOR P/N 50788-001			
	63	50788-102	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	4
					ALTERNATE FOR P/N 50788-101			
	66	50788-101	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	4
					ALTERNATE FOR P/N 50788-102			
	69	50704-001		A	·CAMLOC RETAINING RING	/ 0001	/	4
-	72	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	/ 0001	/	4
-	75	NAS1149FN816P	$	A	·WASHER	/ 0001	/	7
	78	51219-050		A	·SCREW	/ 0001	/	7
	79	NAS1149FN816P		A	·WASHER	/ 0001	/	AR
	81	27740-001			·LOWER COWL, LH	/ 0001	/	1
-	82	27739-003	%		·LOWER COWL, LH	/ 0079	/	1
	84	50699-007	@	A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	/ 0001	/	4
	87	50788-001	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	4
					ALTERNATE FOR P/N 50788-002			
	90	50788-002	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	4
					ALTERNATE FOR P/N 50788-001			
	93	50788-102	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	4

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					ALTERNATE FOR P/N 50788-101			
	96	50788-101	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	4
					ALTERNATE FOR P/N 50788-102			
	99	50704-001		A	·CAMLOC RETAINING RING	/ 0001	/	4
-	102	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	/ 0001	/	4
	105	26957-003			·CLOSEOUT, NLG	/ 0001	/	1
	108	NAS1149FN816P	$	A	·WASHER	/ 0001	/	10
	111	51219-050		A	·SCREW	/ 0001	/	10
	114	50699-007	@	A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	/ 0001	/	2
	117	50788-001	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	2
					ALTERNATE FOR P/N 50788-002			
	120	50788-002	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	2
					ALTERNATE FOR P/N 50788-001			
	123	50788-102	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	2
					ALTERNATE FOR P/N 50788-101			
	126	50788-101	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	2
					ALTERNATE FOR P/N 50788-102			
	129	50704-001		A	·CAMLOC RETAINING RING	/ 0001	/	2
-	132	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	/ 0001	/	2
	135	NAS1149FN816P	$	A	·WASHER	/ 0001	/	2
	138	51219-050		A	·SCREW	/ 0001	/	2
-	141	20855-001			··COVER, GND. PWR. RECEPTACLE	/ 0001	/ 0075	1
					FOR SPARES USE P/N 20855-002			
	142	20855-002			··COVER, GND. PWR. RECEPTACLE	/ 0076	/	1
	144	50699-007	@	A	·CAMLOC STUD ASSEMBLY, 4002 SERIES	/ 0001	/	1
	147	50788-001	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	1
					ALTERNATE FOR P/N 50788-002			
	150	50788-002	#	A	·CAMLOC GROMMET, 4002 SERIES	/ 0001	/	1
					ALTERNATE FOR P/N 50788-001			
	153	50788-102	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	1
					ALTERNATE FOR P/N 50788-101			
	156	50788-101	#		·CAMLOC RECEPTACLE, PLUS FLUSH, 4002 SERIES	/ 0001	/	1
					ALTERNATE FOR P/N 50788-102			
	159	50704-001		A	·CAMLOC RETAINING RING	/ 0001	/	1
-	162	50698-001		A	·CAMLOC RECEPTACLE, 4002 SERIES	/ 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 33-40-01 DET			LANDING LIGHT INSTALLATION			
	401	RF 71-70-01 DET			ENGINE DRAIN SYSTEM INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22T-0312, 22T-0317; REFER TO 22T-0319 FOR PART IDENTIFICATION.			
			@		FASTENER LENGTH MAY BE INCREASED OR DECREASED AS REQUIRED FOR FIT-UP.			
			#		PERMISSIBLE TO USE EITHER SET (50788-001/-002 OR 50788-101/-102) OF ALTERNATES. DO NOT INTERMINGLE SETS. FOR 50788-001/-002, COUNTERSINK PER MANU-FACTURER'S INSTRUCTIONS.			
			$		OPTIONAL INSTALLATION UNDER SCREW HEAD.			
			%		INSTALLED ON ANNIVERSARY CONFIGURED AIRCRAFT 22T-0079 AND SUBS AS OPTIONAL EQUIPMENT.			

Intentionally Left Blank

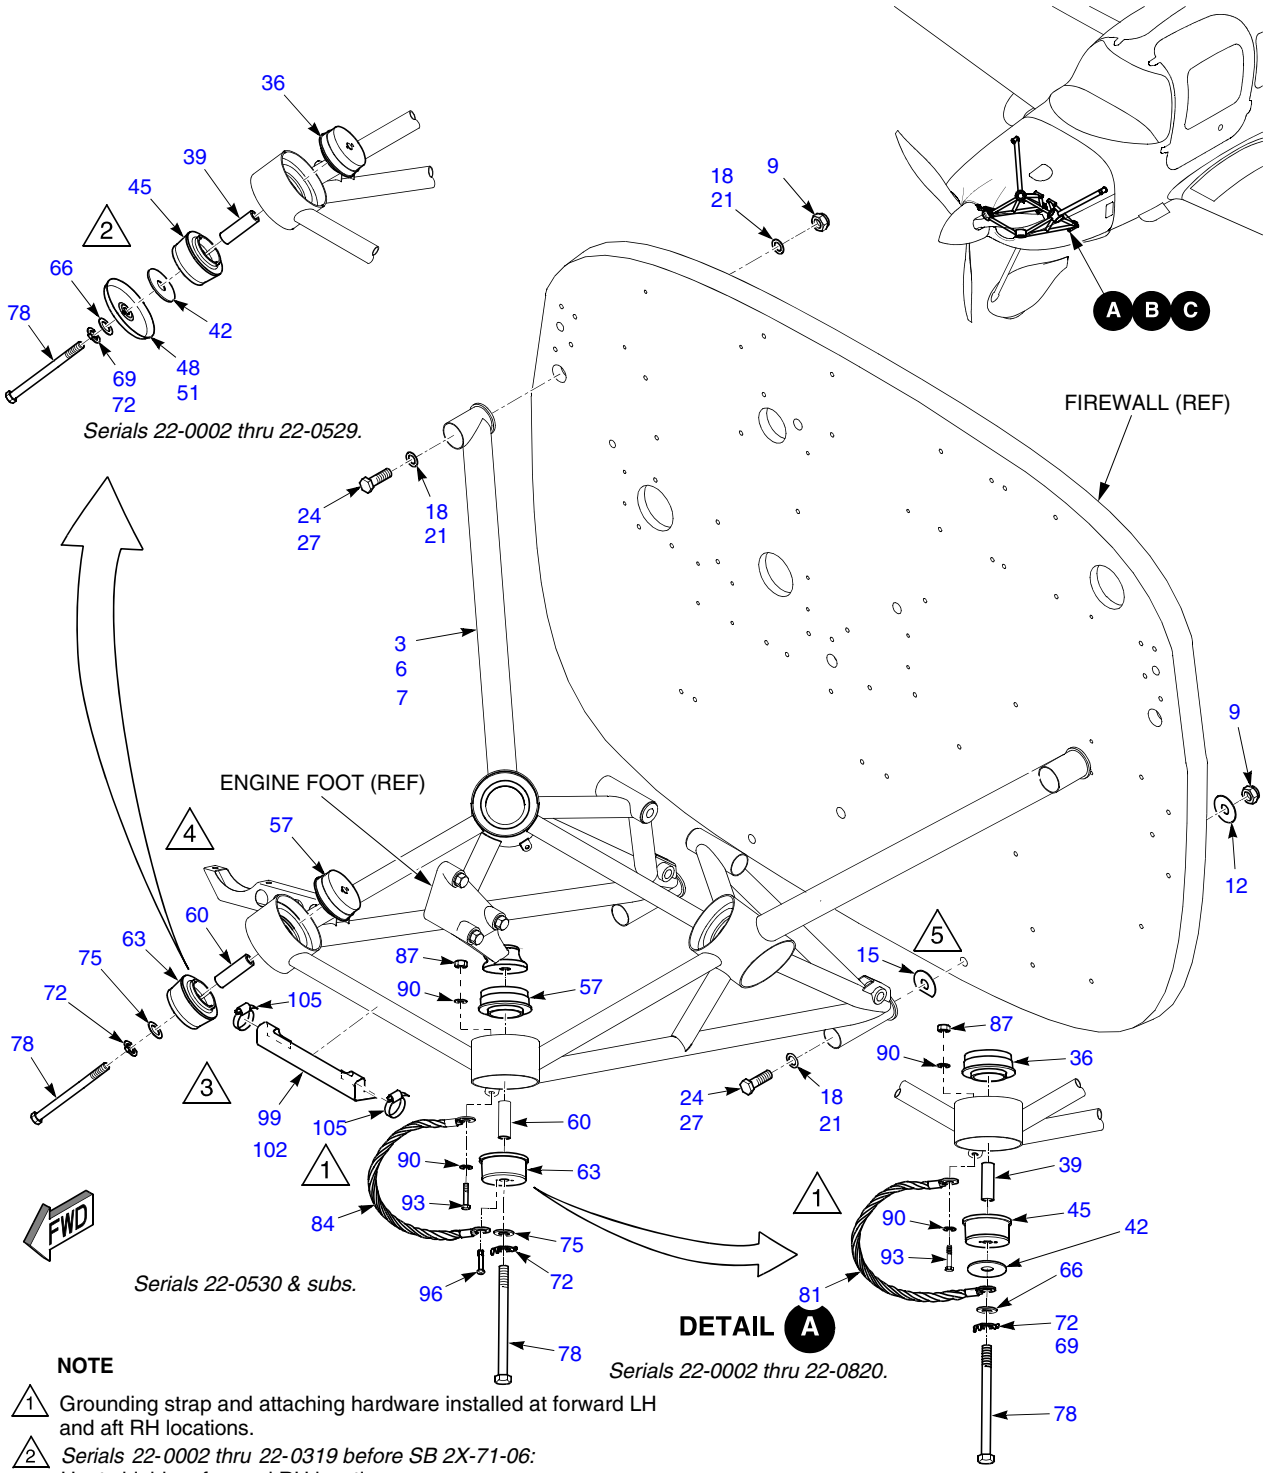

NOTE

1. Grounding strap and attaching hardware installed at forward LH and aft RH locations.
2. *Serials 22-0002 thru 22-0319 before SB 2X-71-06:* Heat shield on forward RH location.
3. *Serials 22-0002 thru 22-0319 before SB 2X-71-06: Engine mount heat shield on forward location.*
4. *Serials 22-0002 thru 22-0319:* Heat exchanger support bracket attached as part of engine mount weldment.
5. Optional installation. Installed if engine mount shimming required.

SR22_PC71_1267D

Figure-01

Engine Mount and Isolator - Serials 22-0002 thru 22-0820 w/ Four-Point Mount (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/ Four-Point Mount

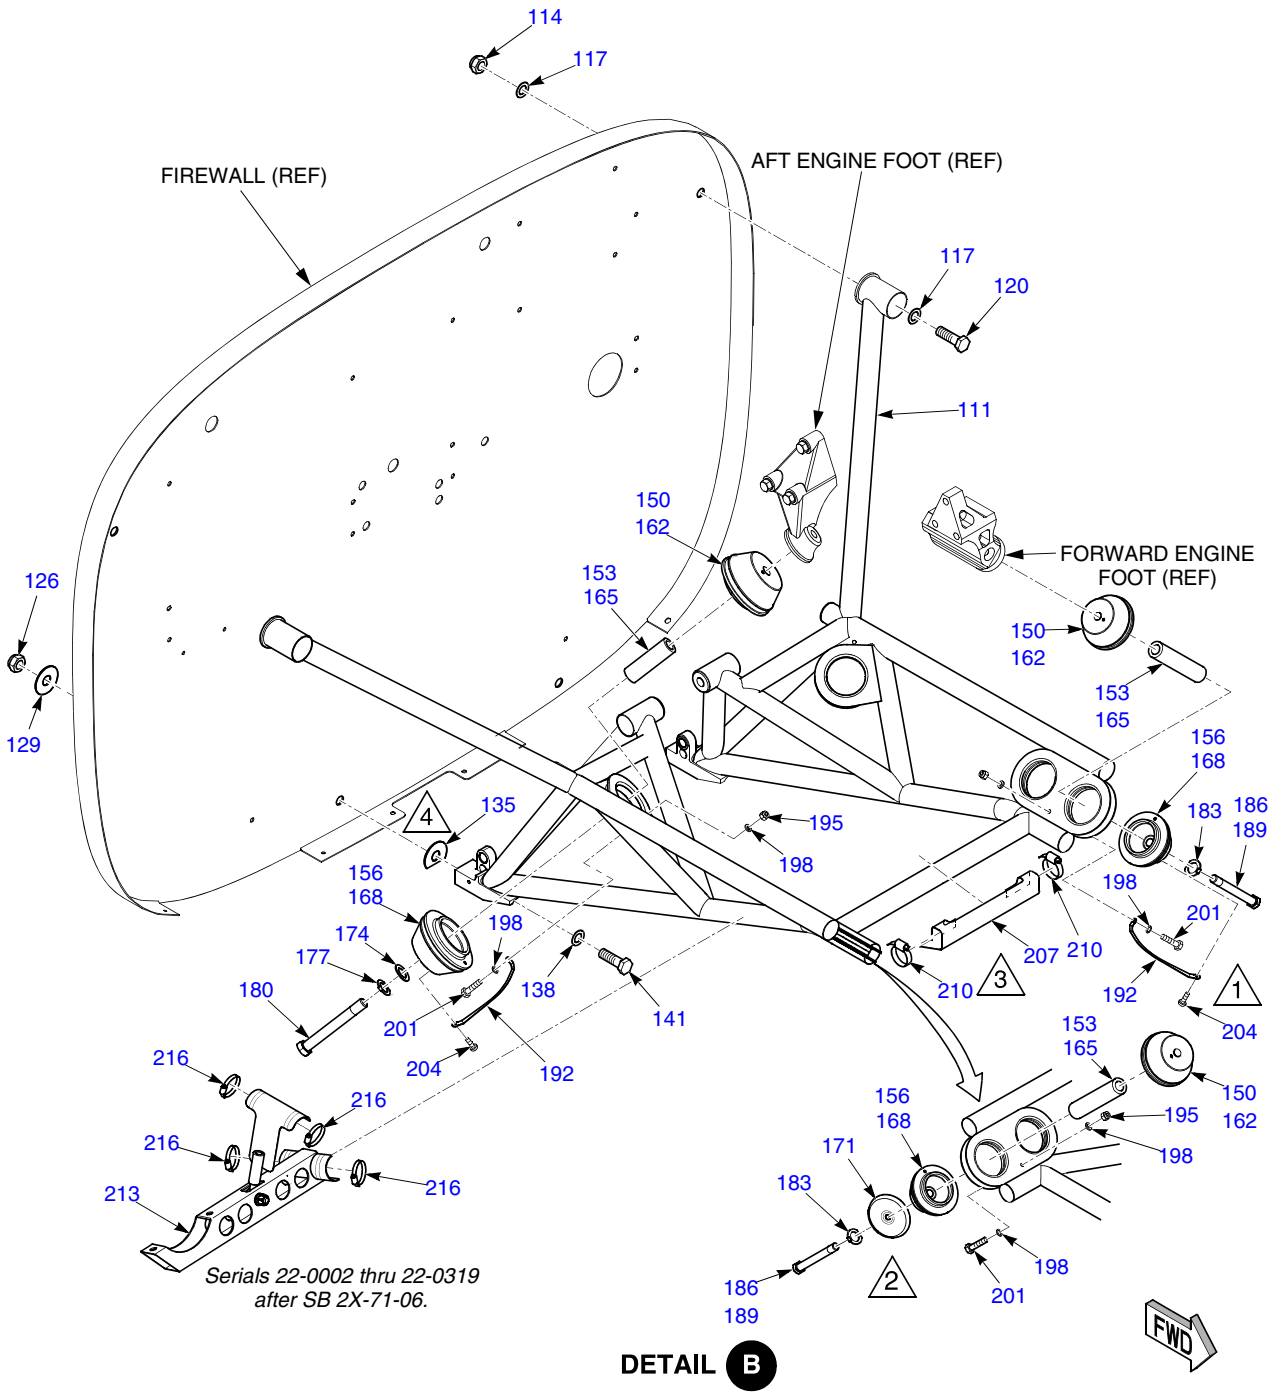

DETAIL B

Serials 22-0002 thru 22-0820.

NOTE

1. Grounding strap and attaching hardware installed at forward LH and aft RH locations.
2. Serials 22-0002 thru 22-0319 after SB 2X-71-06: *Heat shield on forward RH location.*
3. Serials 22-0002 thru 22-0319 after SB 2X-71-06: *Engine mount heat shield on forward location.*
4. Optional installation. Installed if engine mount shimming required.

SR22_PC71_1344

Figure-01

Engine Mount and Isolator - Serials 22-0002 thru 22-0820 w/ Six-Point Mount (2 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 w/ Six-Point Mount

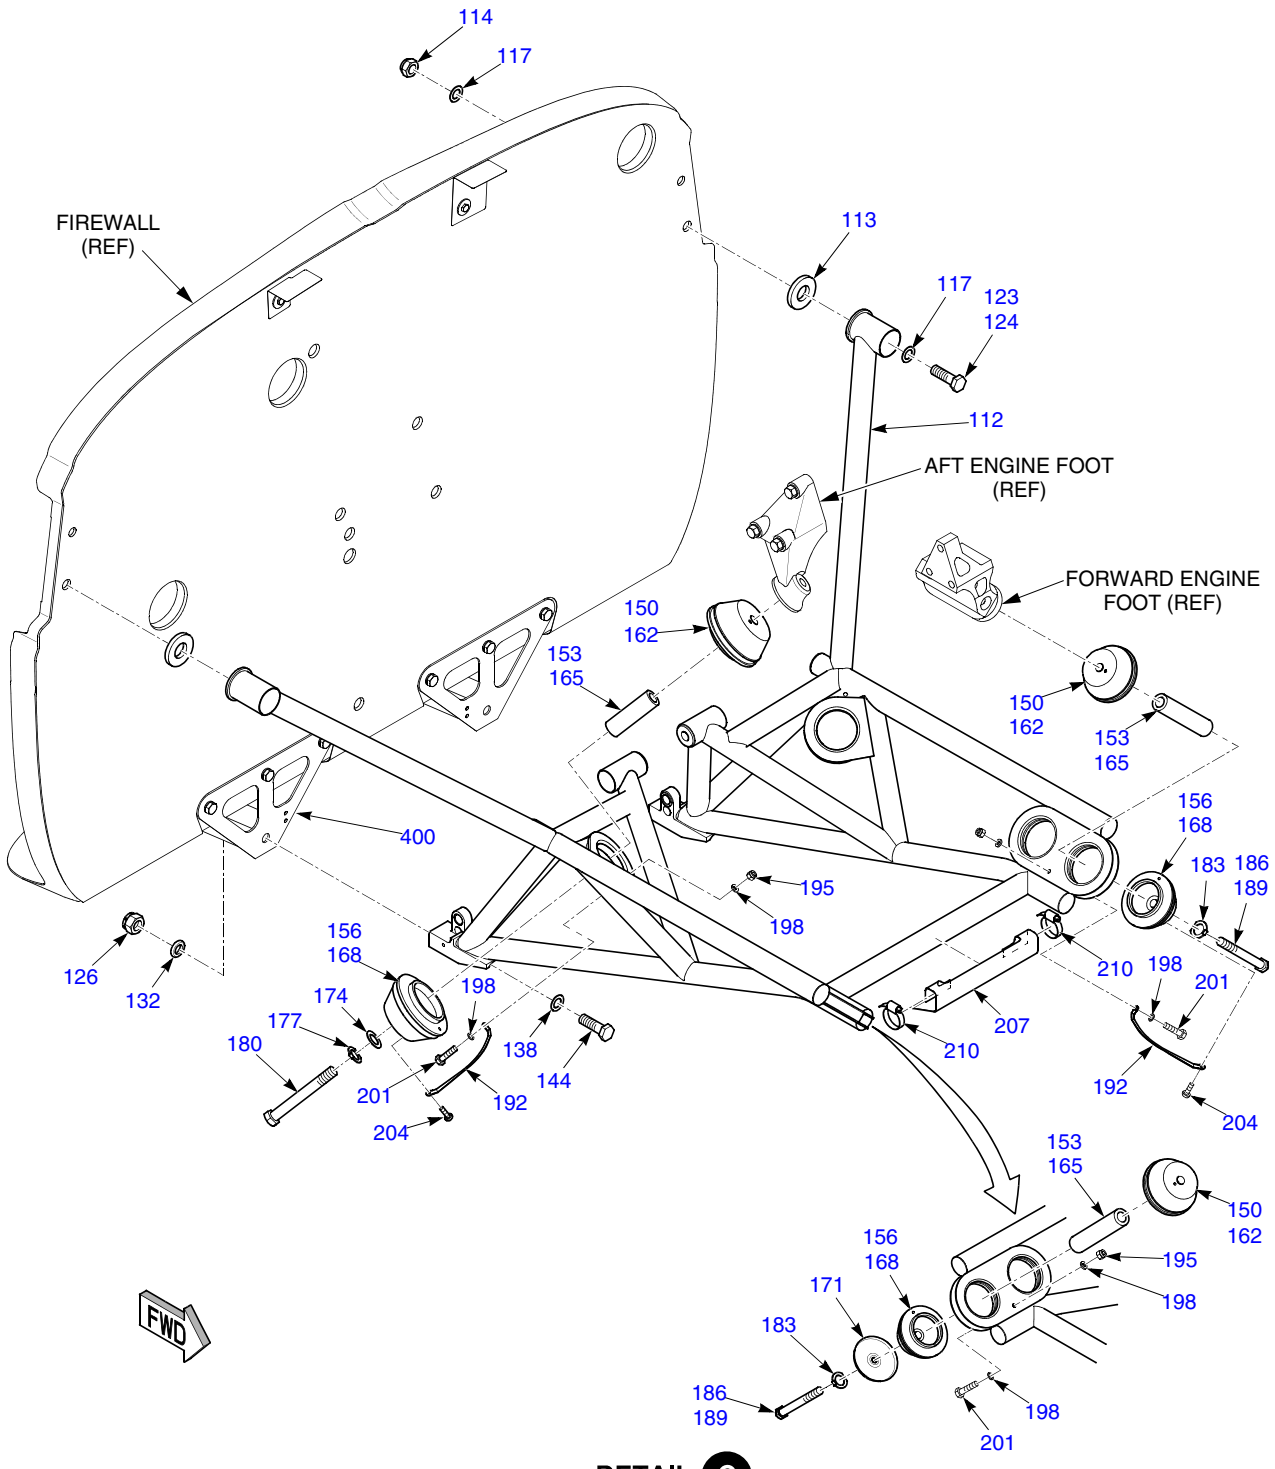

DETAIL C

Serials 22-0821 thru 22-3711.

SR22_PC71_1393B

Figure-01

Engine Mount and Isolator - Serials 22-0821 thru 22-3711 (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ENGINE MOUNT AND ISOLATOR INSTALLATION	0002	3711	NP
	3	13642-002			·ENGINE MOUNT FRAME ASSEMBLY, W/ 4-POINT MOUNT	0002	0277	1
					BEFORE SB2X-71-06			
					FOR SPARES USE P/N 13642-003			
	6	13642-003			·ENGINE MOUNT FRAME ASSEMBLY, W/ 4-POINT MOUNT	0278	0319	1
					BEFORE SB2X-71-06			
	7	13642-004	!		·ENGINE MOUNT FRAME ASSEMBLY, W/ 4-POINT MOUNT	0320	0820	1
					BEFORE SB2X-71-06			
	9	MS21045-8		A	·NUT	0002	0820	4
	12	AN970-8		A	·WASHER	0002	0820	2
	15	14197-102	@	A	·SHIM	0002	0820	2
	18	NAS1149F0863P	#	A	·WASHER	0002	0820	4
					ALTERNATE FOR P/N MS20002C8			
	21	MS20002C8	$	A	·WASHER	0002	0820	4
					ALTERNATE FOR P/N NAS1149F0863P			
	24	AN8-17A	#	A	·BOLT	0002	0820	4
					ALTERNATE FOR P/N MS20008-18			
	27	MS20008-18	$	A	·BOLT	0002	0820	4
					ALTERNATE FOR P/N AN8-17A			
-	30	14059-001			··ENGINE ISOLATOR ASSEMBLY	0002	0529	4
			^		FOR SPARES USE P/N 14059-003			
-	33	14059-003			··ENGINE ISOLATOR ASSEMBLY	0002	0529	4
	36	PT OF ITM 30&33			···VIBRATION ISOLATOR, STEPPED	0002	0529	1
	39	PT OF ITM 30&33			···SPACER	0002	0529	1
	42	PRT OF ITM 33			···WASHER	0002	0529	1
	45	PT OF ITM 30&33			···VIBRATION ISOLATOR	0002	0529	1
	48	14060-001	%		··ISOLATOR HEAT SHIELD	0002	0069	1
	51	14060-002	%		··ISOLATOR HEAT SHIELD	0070	0319	1
-	54	14059-003			··ENGINE ISOLATOR ASSEMBLY	0530	0820	4
	57	PRT OF ITM 54			···VIBRATION ISOLATOR, STEPPED	0530	0820	1
	60	PRT OF ITM 54			···SPACER	0530	0820	1
	63	PRT OF ITM 54			···VIBRATION ISOLATOR	0530	0820	1
	66	NAS1149F0732P	&	A	··WASHER	0002	0529	2
	69	MS35333-43		A	··WASHER	0002	0069	4
	72	MS9276-13		A	··WASHER, TABBED	0070	0820	4
	75	NAS1149F0763P		A	··WASHER	0530	0820	4
	78	AN7-33A		A	··BOLT	0002	0820	4
	81	11593-001	<		··GROUNDING STRAP	0002	0529	2
	84	MS25083-6BB6	<		··GROUNDING STRAP	0530	0820	2
	87	MS21045-3		A	··LOCKNUT	0002	0820	2
	90	NAS1149F0332P		A	··WASHER	0002	0820	4
	93	AN3-4A		A	··BOLT	0002	0820	2
	96	MS35206-243		A	··SCREW	0530	0820	2
	99	14061-001			··ENGINE MOUNT HEAT SHIELD	0002	0173	1
					BEFORE SB22-01-00			
	102	14785-001			··ENGINE MOUNT HEAT SHIELD	0002	0319	1
					AFTER SB22-01-00			
	105	50743-501		A	··CLAMP	0002	0319	2
-	108	15546-002			·ENGINE MOUNT FRAME ASSEMBLY, W/ 6-POINT MOUNT	0656	0702	1
					AFTER SB2X-71-06			
	111	15546-003			·ENGINE MOUNT FRAME ASSEMBLY, W/ 6-POINT MOUNT	0002	0655	1
						0703	1154	
					AFTER SB2X-71-06			
					ALTERNATE FOR P/N 16546-001			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	112	16546-001			·ENGINE MOUNT FRAME ASSEMBLY, W/ 6-POINT MOUNT	1155	3485	1
					ALTERNATE FOR P/N 15546-003			
	113	28637-001			·SHIM	3486	3711	1
	114	MS21045-8		A	·NUT	0656	3711	2
	117	NAS1149F0863P		A	·WASHER	0656	3711	4
	120	AN8-17A		A	·BOLT	0656	0820	2
	123	AN8-16A		A	·BOLT	0821	3485	2
	124	NAS6608-21		A	·BOLT	3486	3711	2
	126	MS21045-8		A	·NUT	0656	3711	2
	129	AN970-8		A	·WASHER	0656	0820	2
	132	20158-001		A	·RADIUS FILLER	0821	3711	2
	135	14197-102	@	A	·SHIM	0656	0820	2
	138	NAS1149F0863P		A	·WASHER	0656	3711	2
	141	AN8-17A		A	·BOLT	0656	0820	2
	144	AN8-13A		A	·BOLT	0821	3711	2
-	147	14059-004			··ENGINE ISOLATOR ASSEMBLY	0656	3711	6
					FOR SPARES USE P/N 14059-005			
	150	PRT OF ITM 147			···VIBRATION ISOLATOR, STEPPED	0656	3711	1
	153	PRT OF ITM 147			···SPACER	0656	3711	1
	156	PRT OF ITM 147			···VIBRATION ISOLATOR	0656	3711	1
-	159	14059-005			··ENGINE ISOLATOR ASSEMBLY	0656	3711	6
					FOR SPARES USE 26757-001			
-	160	26757-001	*		··ENGINE ISOLATOR ASSEMBLY	0656	3711	6
	162	PRT OF ITM 159			···VIBRATION ISOLATOR, STEPPED	0656	3711	1
	165	PRT OF ITM 159			···SPACER	0656	3711	1
	168	PRT OF ITM 159			···VIBRATION ISOLATOR	0656	3711	1
	171	15831-001	%		··ISOLATOR HEAT SHIELD	0002	0319	2
					AFTER SB2X-71-06			
	174	NAS1149F0763P	>	A	··WASHER	0656	3711	2
	177	MS9276-13		A	··WASHER, TABBED	0656	3711	2
	180	AN7-33A		A	··BOLT	0656	3711	2
	183	MS9276-13		A	··WASHER, TABBED			4
	186	AN7-41A		A	··BOLT	0656	0743	4
	189	AN7-40A		A	··BOLT	0744	3711	4
	192	MS25083-6BB6	<		··GROUNDING STRAP	0656	3711	2
	195	MS21045-3		A	··LOCKNUT	0656	3711	3
	198	NAS1149F0332P		A	··WASHER	0656	3711	6
	201	AN3-10A		A	··BOLT	0656	3711	3
	204	MS35206-243		A	··SCREW	0656	3711	2
	207	14785-001			··ENGINE MOUNT HEAT SHIELD	0002	0319	1
					AFTER SB2X-71-06			
	210	50743-501		A	··CLAMP	0002	0319	2
					AFTER SB2X-71-06			
	213	15698-001			·HEAT EXCHANGER SUPPORT BRACKET	0002	0319	1
					AFTER SB2X-71-06			
	216	50742-020		A	·CLAMP	0002	0319	4
					AFTER SB2X-71-06			
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-05			LOWER MOUNT ATTACH FITTINGS			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC- TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SERIAL NUMBER 22-0610; REFER TO 22-0656 FOR PART IDENTIFICATION.			
			@		OPTIONAL, 1 MAX. PER LOWER LH & RH MOUNTS.			
			#		BOLT AND WASHER MUST BE USED TOGETHER.			
			$		BOLT AND WASHER MUST BE USED TOGETHER.			
			%		INSTALLED ON FORWARD RH ISOLATOR ONLY.			
			&		INSTALLED ON FWD RH AND AFT LH ISOLATORS ONLY.			
			<		INSTALLED ON FWD LH AND AFT RH ISOLATORS ONLY.			
			>		A 0.032 INCH WASHER MAY BE SUBSTITUTED TO OBTAIN TOLERANCE BETWEEN END OF BOLT AND TOP OF ENGINE FOOT.			
			^		WHEN USED AS A SPARE FOR 14059-001 INCLUDE ITEM 75, 84, AND 96.			
			*		DO NOT INTERMINGLE 26757-001 WITH 14059-005 ON SAME AIRCRAFT.			

EFFECTIVITY:
All

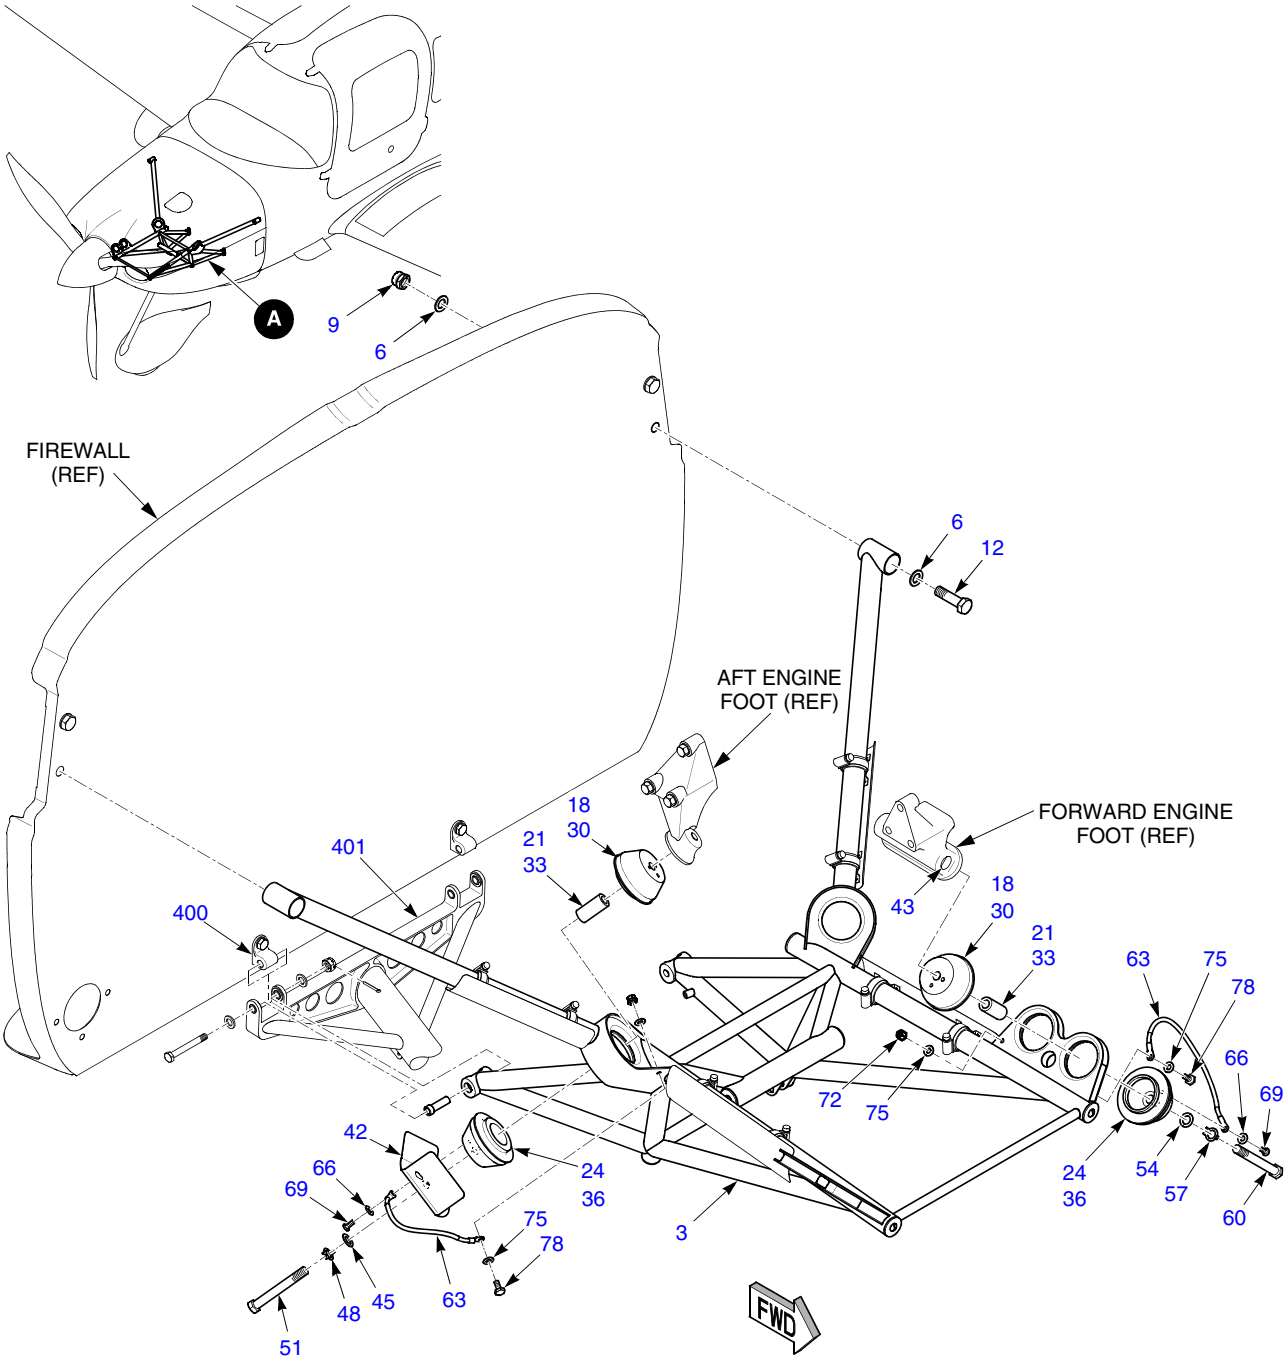

DETAIL A

Serials 22-3712 & subs, 22T-0001 & subs.

SR22_PC71_1930A

Figure-02

Engine Mount and Isolator - Serials 22-3712 & subs, 22T-0001 & subs

EFFECTIVITY:
Serials 22-3712 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			ENGINE MOUNT AND ISOLATOR INSTALLATION	3712 / 0001	/	NP
	3	19779-003			·FRAME ENGINE MOUNT, 6 POINT	3712 / 0001	/	1
	6	NAS1149F0863P			·WASHER	3712 / 0001	/	4
	9	MS21044N8			·NUT	3712 / 0001	/	4
					ALTERNATE FOR P/N MS21045-8			
-	10	MS21045-8			·NUT	3712 / 0001	/	4
					ALTERNATE FOR P/N MS21044N8			
	12	AN8-16A			·BOLT	3712 / 0001	/	2
-	15	14059-005			·ENGINE ISOLATOR ASSEMBLY	3712 / 0001	/	6
					ALTERNATE FOR P/N 14059-006			
					FOR SPARES USE 26757-001			
	18	PRT OF ITM 15			··VIBRATION ISOLATOR, STEPPED	3712 / 0001	/	1
	21	PRT OF ITM 15			··SPACER	3712 / 0001	/	1
	24	PRT OF ITM 15			··VIBRATION ISOLATOR	3712 / 0001	/	1
-	27	14059-006	@		·ENGINE ISOLATOR ASSEMBLY	3712 / 0001	3867 / 0365	6
					ALTERNATE FOR P/N 14059-005			
					FOR SPARES USE 26757-001			
-	28	26757-001	^		·ENGINE ISOLATOR ASSEMBLY	3868 / 0366	/	6
	30	PRT OF ITM 27			··VIBRATION ISOLATOR, STEPPED	3712 / 0001	/	1
	33	PRT OF ITM 27			··SPACER	3712 / 0001	/	1
	36	PRT OF ITM 27			··VIBRATION ISOLATOR	3712 / 0001	/	1
-	39	26377-001	#		·ISOLATOR HEAT SHIELD, LH	3712 / 0001	/	1
	42	26378-001	#		·ISOLATOR HEAT SHIELD, RH	3712 / 0001	/	1
	43	51324-001			·BARREL NUT	3712 / 0001	/	2
	45	NAS1149F0732P	%	A	·WASHER	3712 / 0001	/	2
	48	MS9276-13		A	·WASHER, TABBED	3712 / 0001	/	2
	51	AN7-33A		A	·BOLT	3712 / 0001	/	2
	54	NAS1149F0732P		A	·WASHER	3712 / 0001	/	4
	57	MS9276-13		A	·WASHER, TABBED	3712 / 0001	/	4
	60	AN7-40A		A	·BOLT	3712 / 0001	/	4
	63	MS25083-6BB6	$		·GROUNDING STRAP	3712 / 0001	/	2
	66	NAS1149F0332P	$	A	·WASHER	3712 / 0001	/	2
	69	MS35206-243	$	A	·SCREW	3712 / 0001	/	2
	72	MS21045-3		A	·LOCKNUT	3712 / 0001	/	2
	75	NAS1149F0332P		A	·WASHER	3712 / 0001	/	4
	78	AN3-3A		A	·BOLT	3712 / 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 53-40-05			LOWER MOUNT ATTACH FITTINGS			
	401	RF 32-20-02			NOSE LANDING GEAR INSTALLATION			
					SYMBOL NOTES:			
			@		ONLY USED AS ALTERNATE AT ISOLATOR LOCATIONS WHERE GROUNDING STRAP IS INSTALLED.			
			#		INSTALLED ON AFT ISOLATORS ONLY.			
			$		INSTALLED ON FWD-MOST LH AND AFT RH ISOLATORS ONLY.			
			%		A 0.032 INCH WASHER MAY BE SUBSTITUTED TO OBTAIN TOLERANCE BETWEEN END OF BOLT AND TOP OF ENGINE FOOT.			
			^		DO NOT INTERMINGLE 26757-001 WITH 14059-005/-006 ON SAME AIRCRAFT.			

EFFECTIVITY:
All

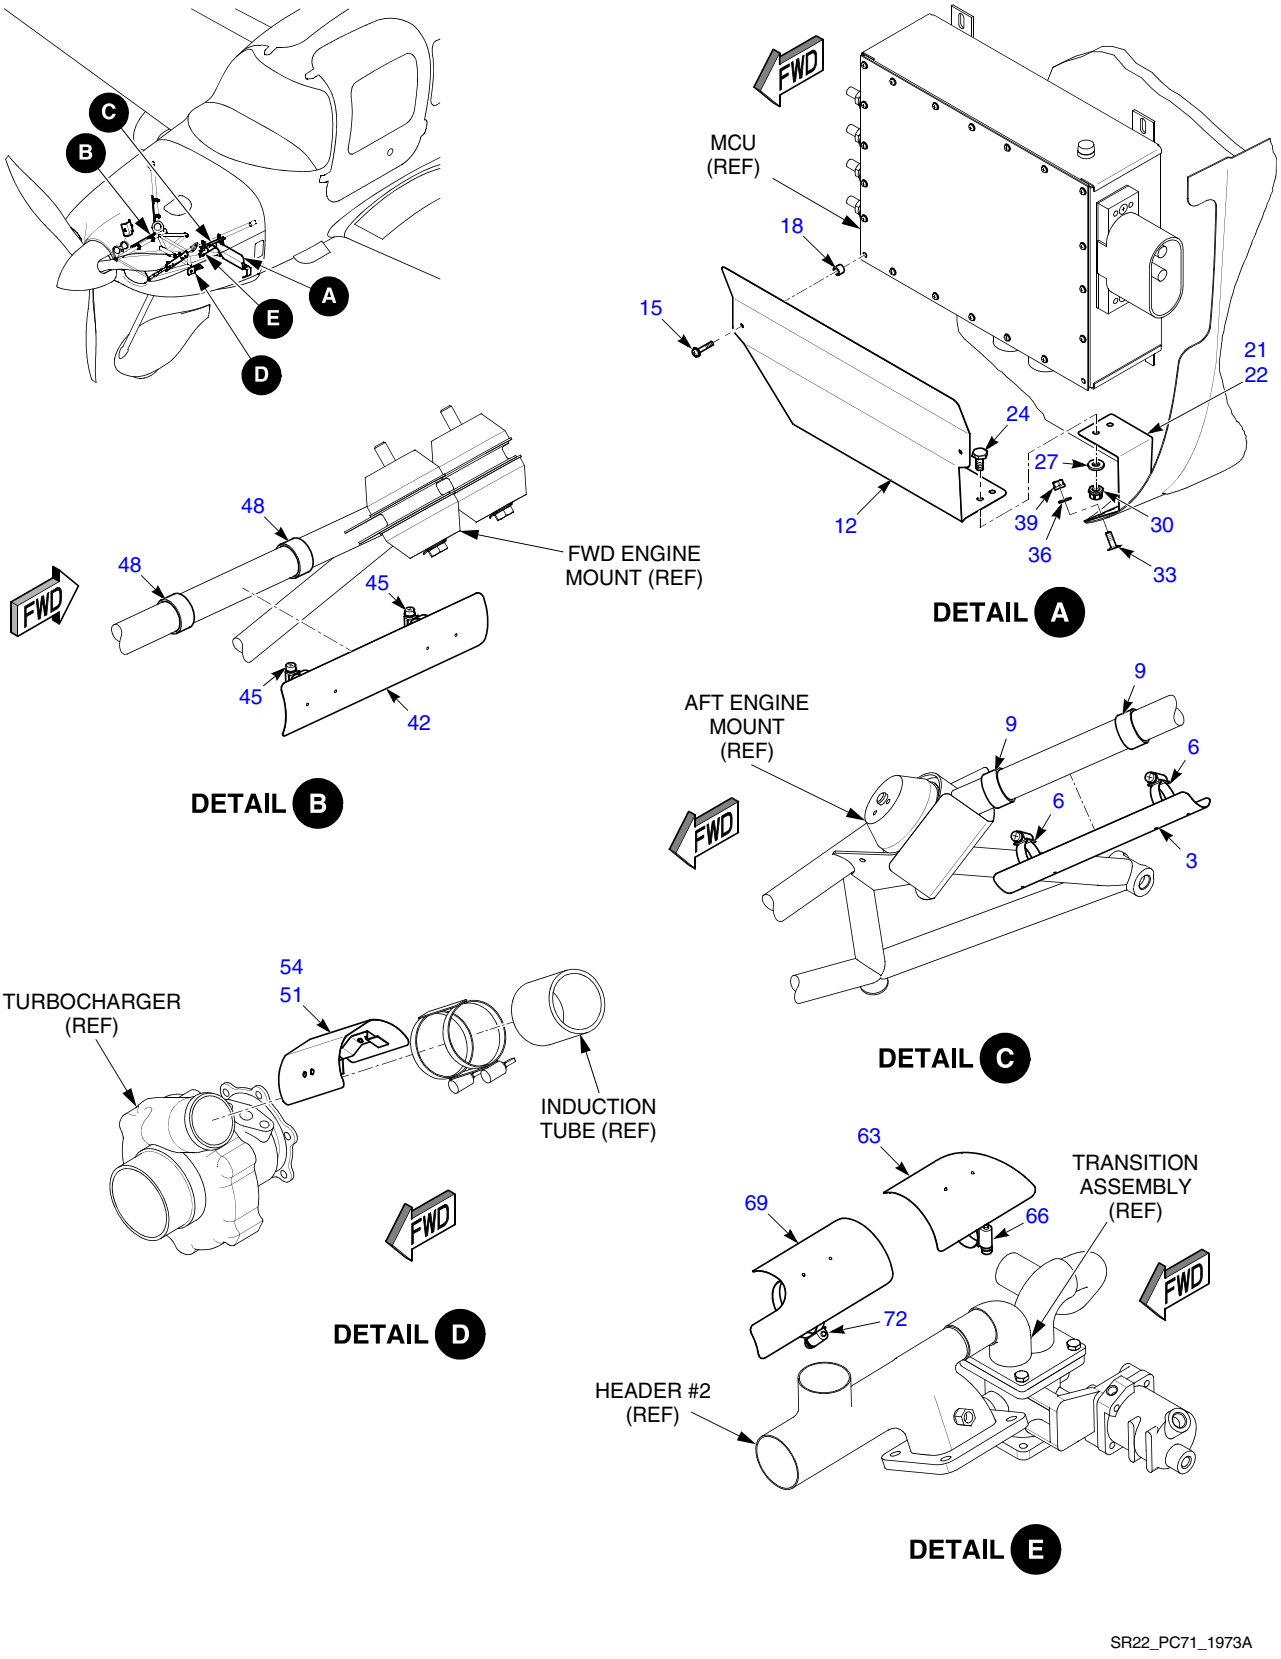

Figure-01
Heat Shield - Serials 22T-0001 & subs

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			HEAT SHIELD INSTALLATION	/ 0001	/	NP
	3	26374-001			·HEAT SHIELD, DOWN TUBE ENG MNT	/ 0001	/	2
	6	50743-601		A	·HOSE CLAMP	/ 0001	/	4
	9	26405-101			·INSULATION	/ 0001	/	4
	12	26373-001			·HEAT SHIELD, MCU	/ 0001	/	1
	15	51146-450		A	·SCREW	/ 0001	/	2
	18	NAS43DD1-12FC		A	·SPACER	/ 0001	/	2
	21	26376-001			·BRACKET, MCU HEAT SHIELD	/ 0001	/ 0199	1
					FOR SPARES USE P/N 26376-002			
	22	26376-002			·BRACKET, MCU HEAT SHIELD	/ 0200	/	1
	24	AN3-4A		A	·BOLT	/ 0001	/	2
	27	NAS1149F0363P		A	·WASHER	/ 0001	/	2
	30	MS21045-3		A	·NUT	/ 0001	/	2
	33	MS24694S50		A	·SCREW	/ 0001	/	2
	36	NAS1149F0332P		A	·WASHER	/ 0001	/	2
	39	MS21045-3		A	·NUT	/ 0001	/	2
	42	26372-001			·HEAT SHIELD, HORZ., ENG MNT	/ 0001	/	2
	45	50743-601		A	·HOSE CLAMP	/ 0001	/	4
	48	26405-101			·INSULATION	/ 0001	/	4
	51	26371-001			·HEAT SHIELD, AFT INDUC. TUBE, LH	/ 0001	/ 0001	1
					FOR SPARES USE P/N 26371-005			
	54	26371-005			·HEAT SHIELD, AFT INDUC. TUBE, LH	/ 0002	/	1
-	57	26371-002			·HEAT SHIELD, AFT INDUC. TUBE, RH	/ 0001	/ 0001	1
					FOR SPARES USE P/N 26371-006			
-	60	26371-006			·HEAT SHIELD, AFT INDUC. TUBE, RH	/ 0002	/	1
	63	24944-001			·HEAT SHIELD, TURBO, LEFT	/ 0001	/	1
	66	50743-601		A	·HOSE CLAMP	/ 0001	/	1
	69	29098-001			·HEAT SHIELD, TURBO, LEFT, FWD	/ 0001	/	1
	72	50743-801		A	·HOSE CLAMP	/ 0001	/	1

EFFECTIVITY:
All

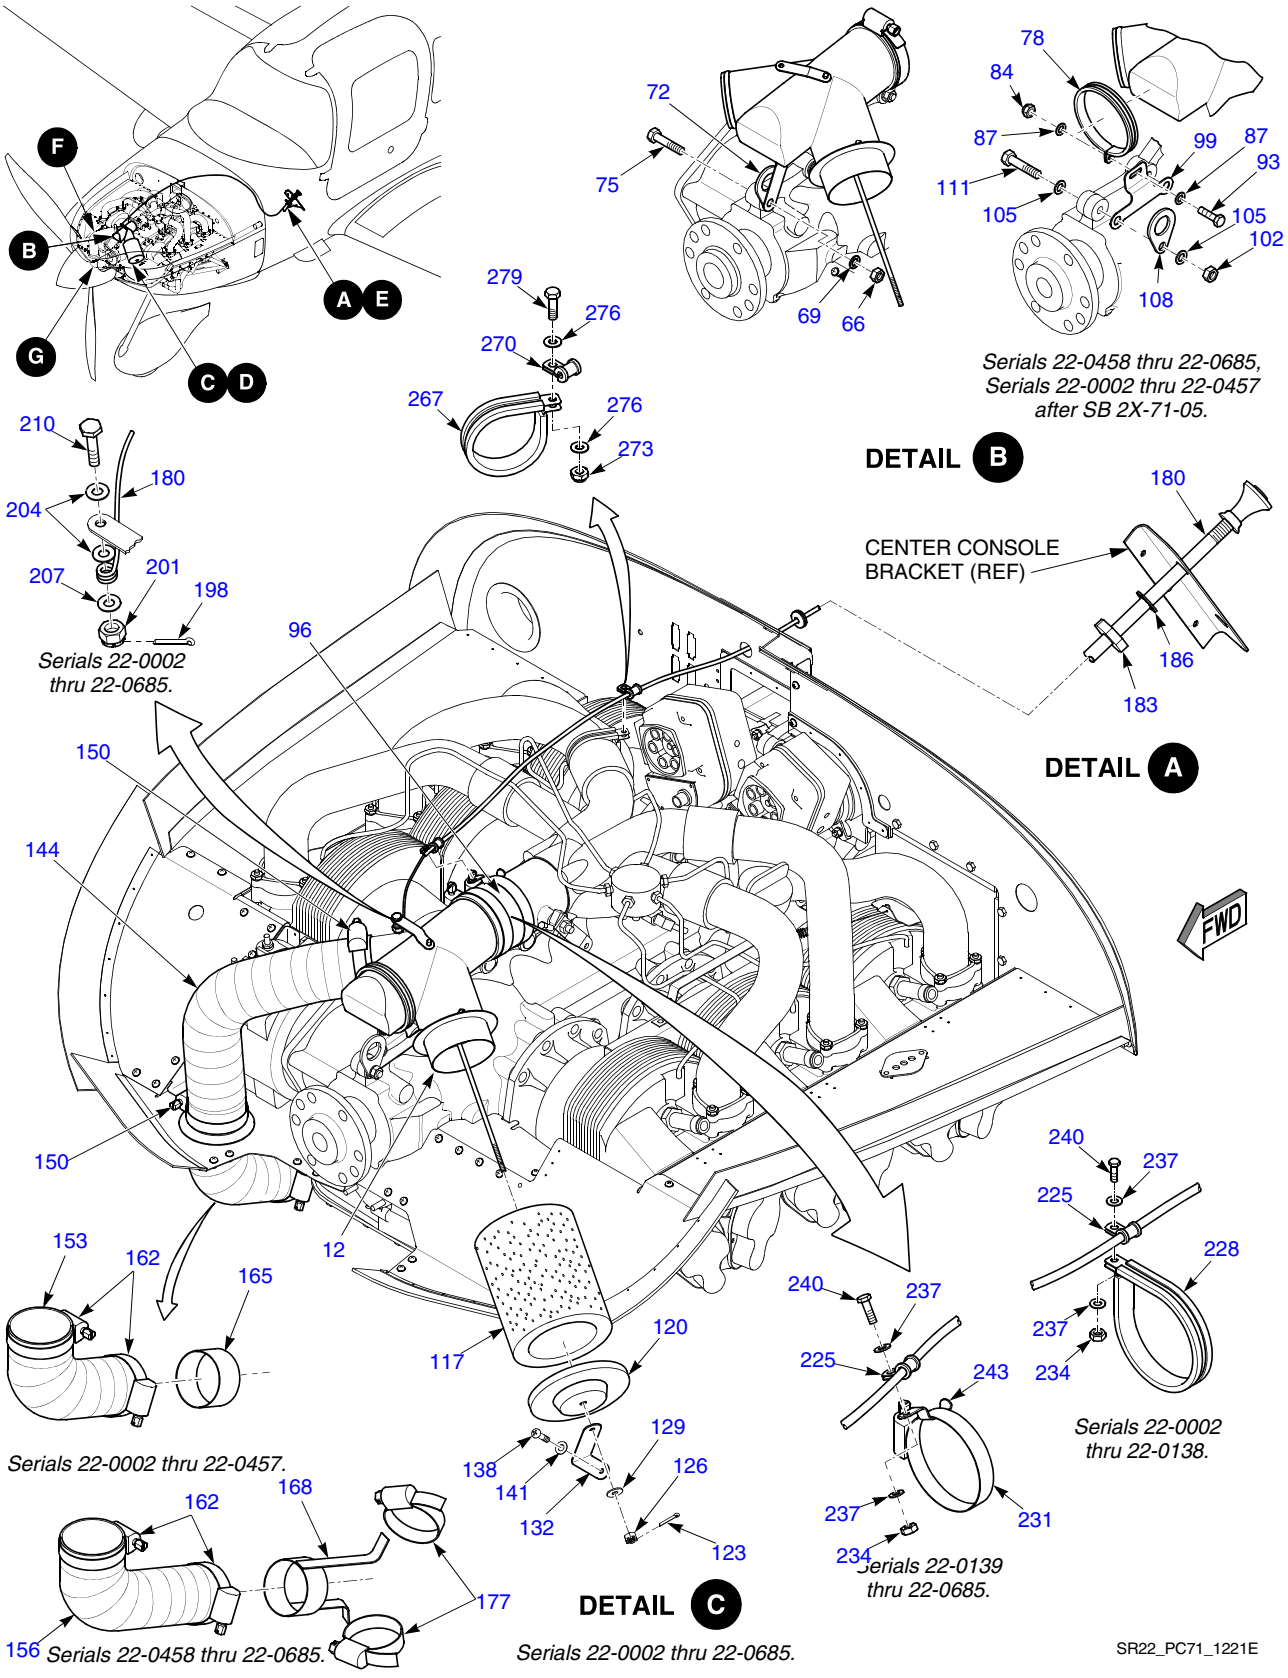

Figure-01

Induction System - Serials 22-0002 thru 22-0685 (1 of 4)

EFFECTIVITY:
Serials 22-0002 thru 22-0685

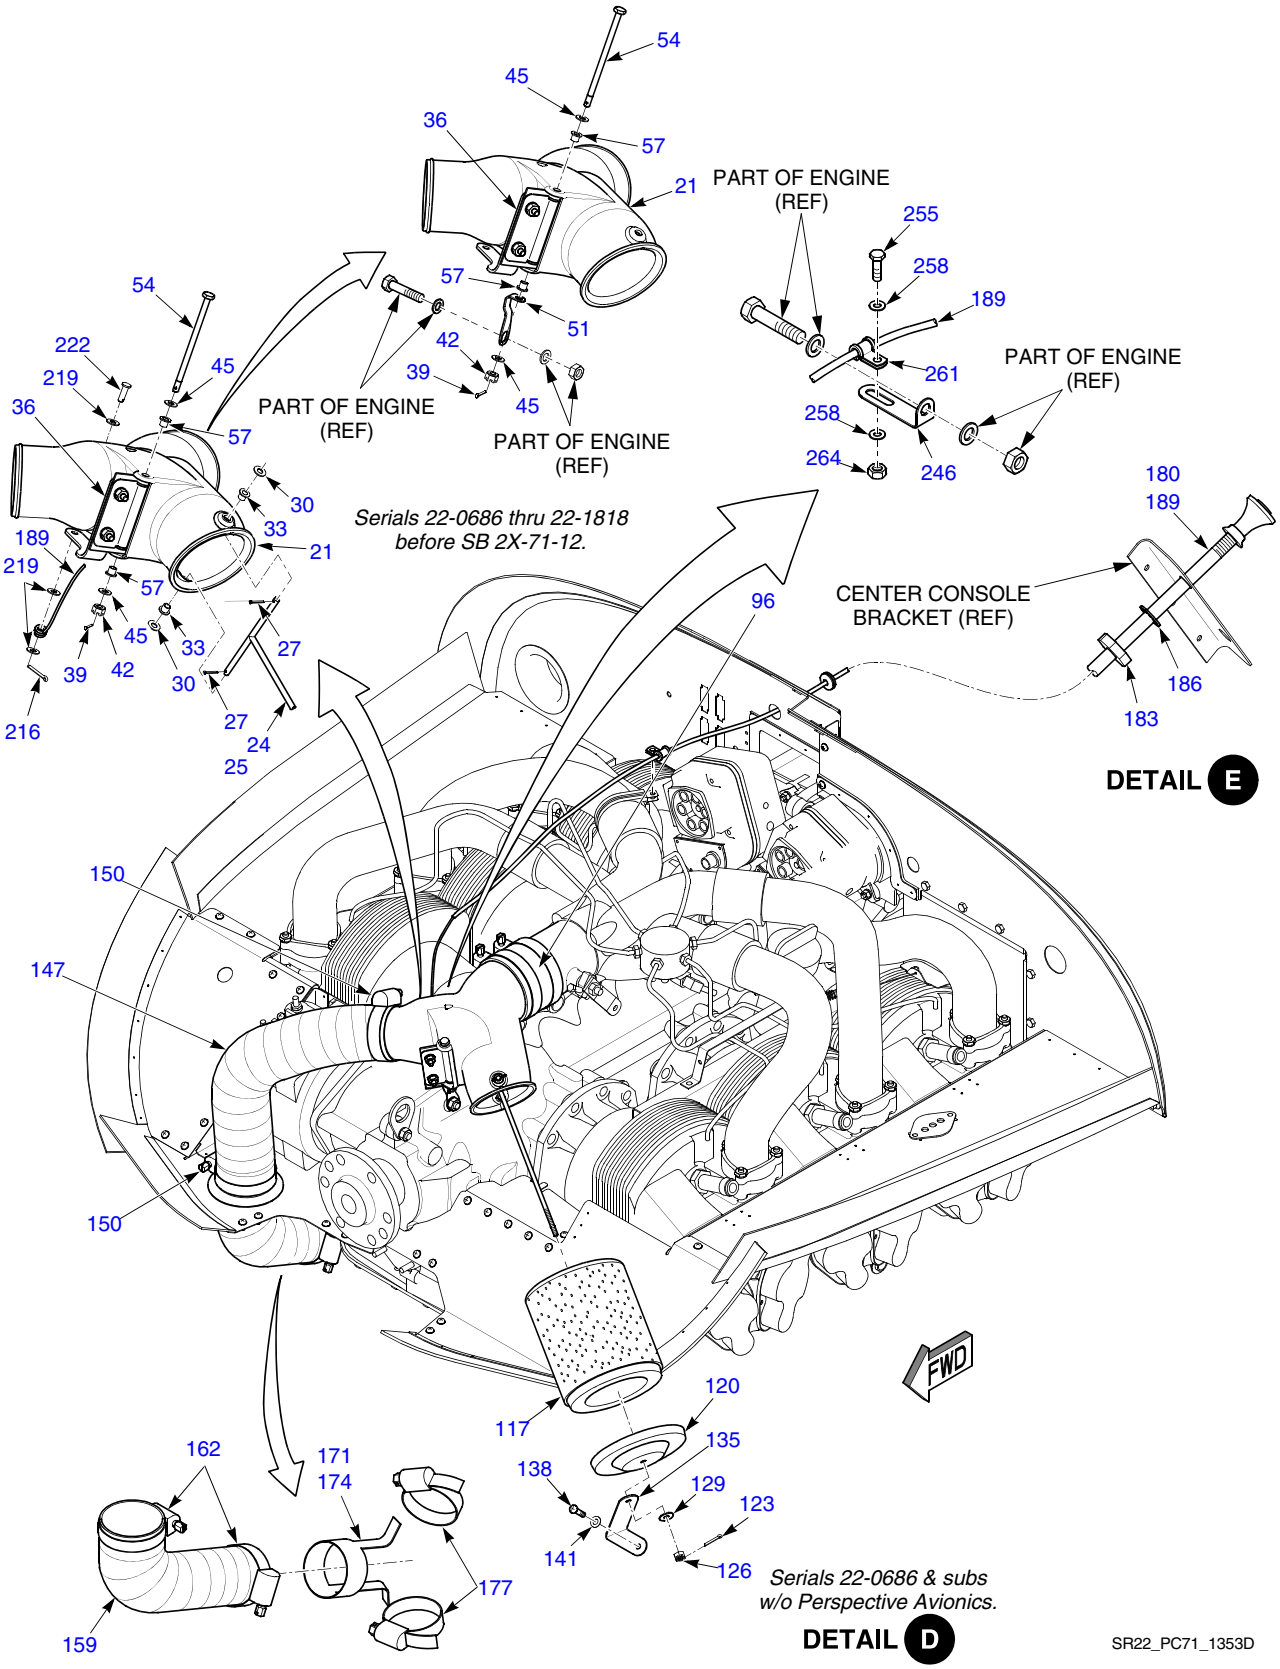

Figure-01

Induction System - Serials 22-0686 & subs w/o Perspective (2 of 4)

EFFECTIVITY:
Serials 22-0686 & subs w/o Perspective

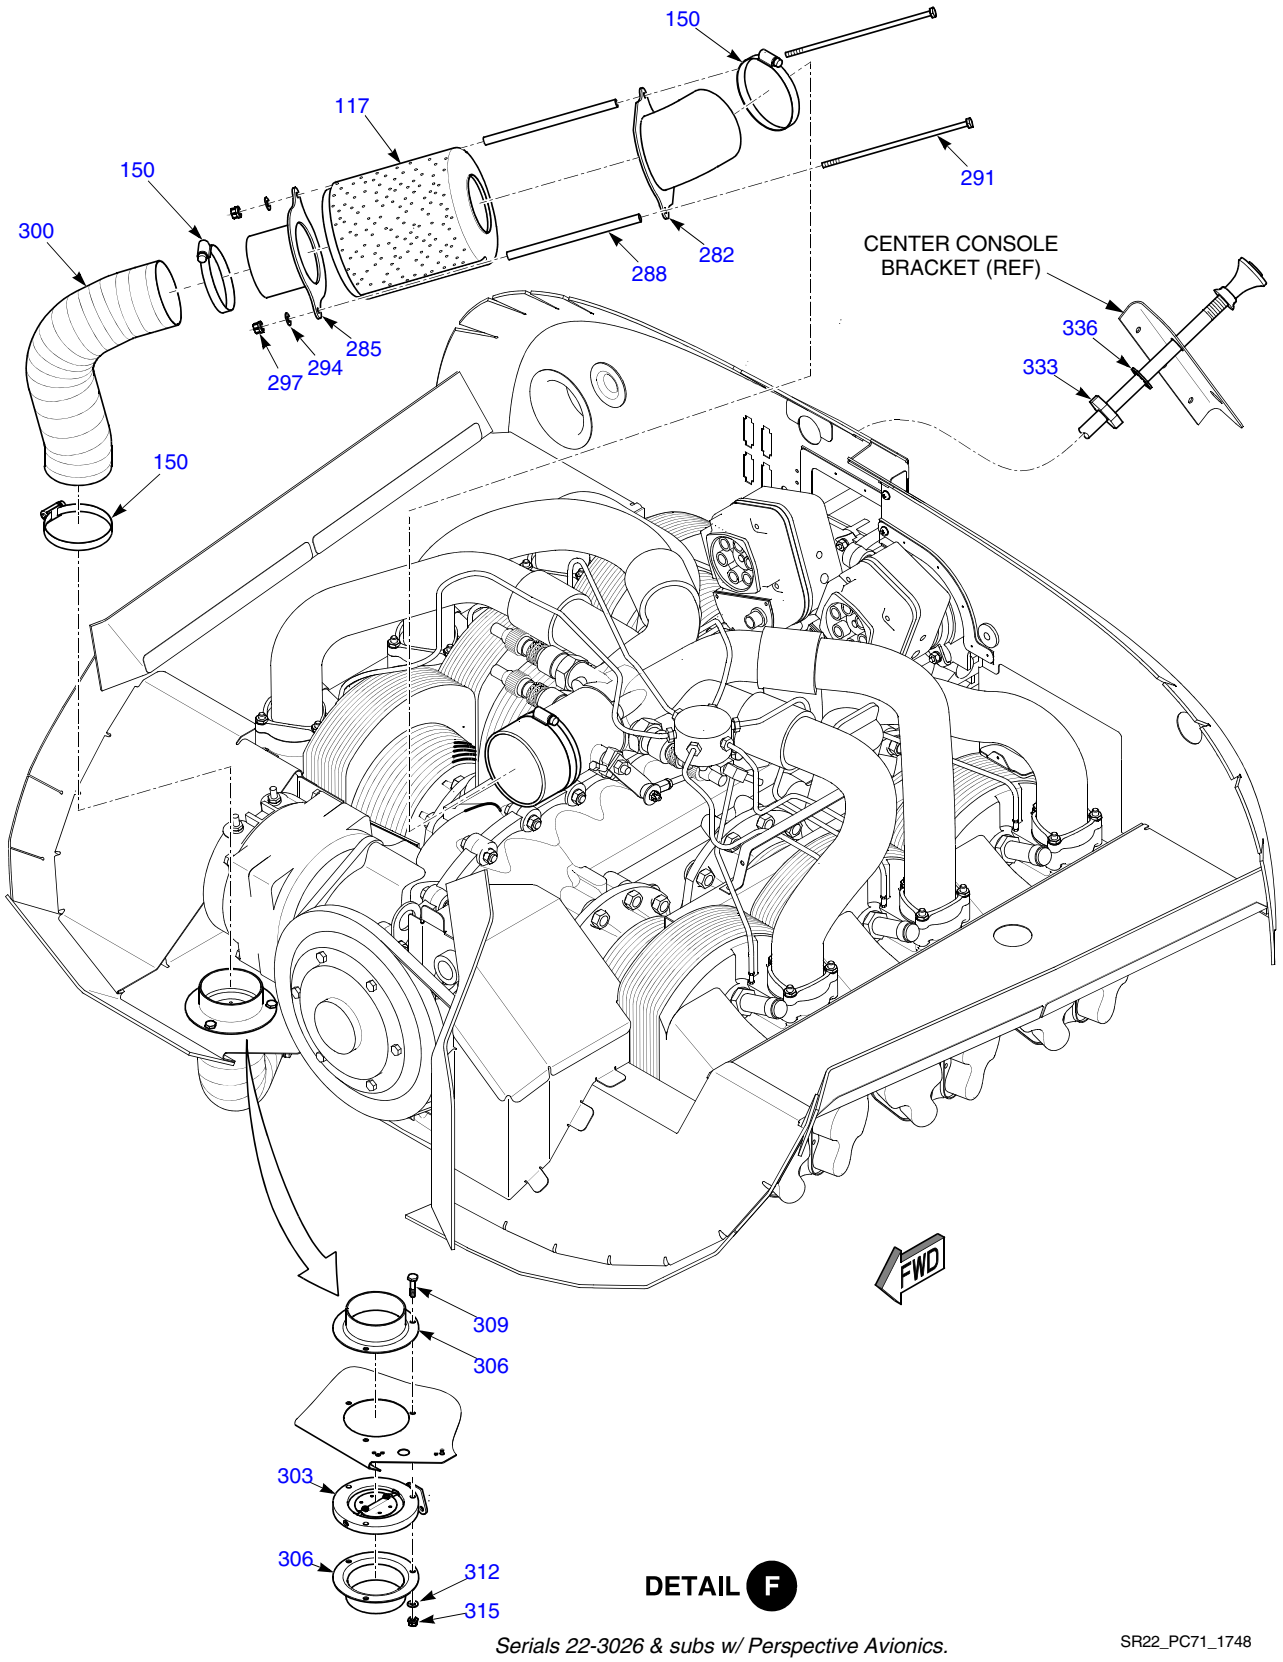

Serials 22-3026 & subs w/ Perspective Avionics.

SR22_PC71_1748

Figure-01

Induction System - Serials 22-3026 & subs w/ Perspective (3 of 4)

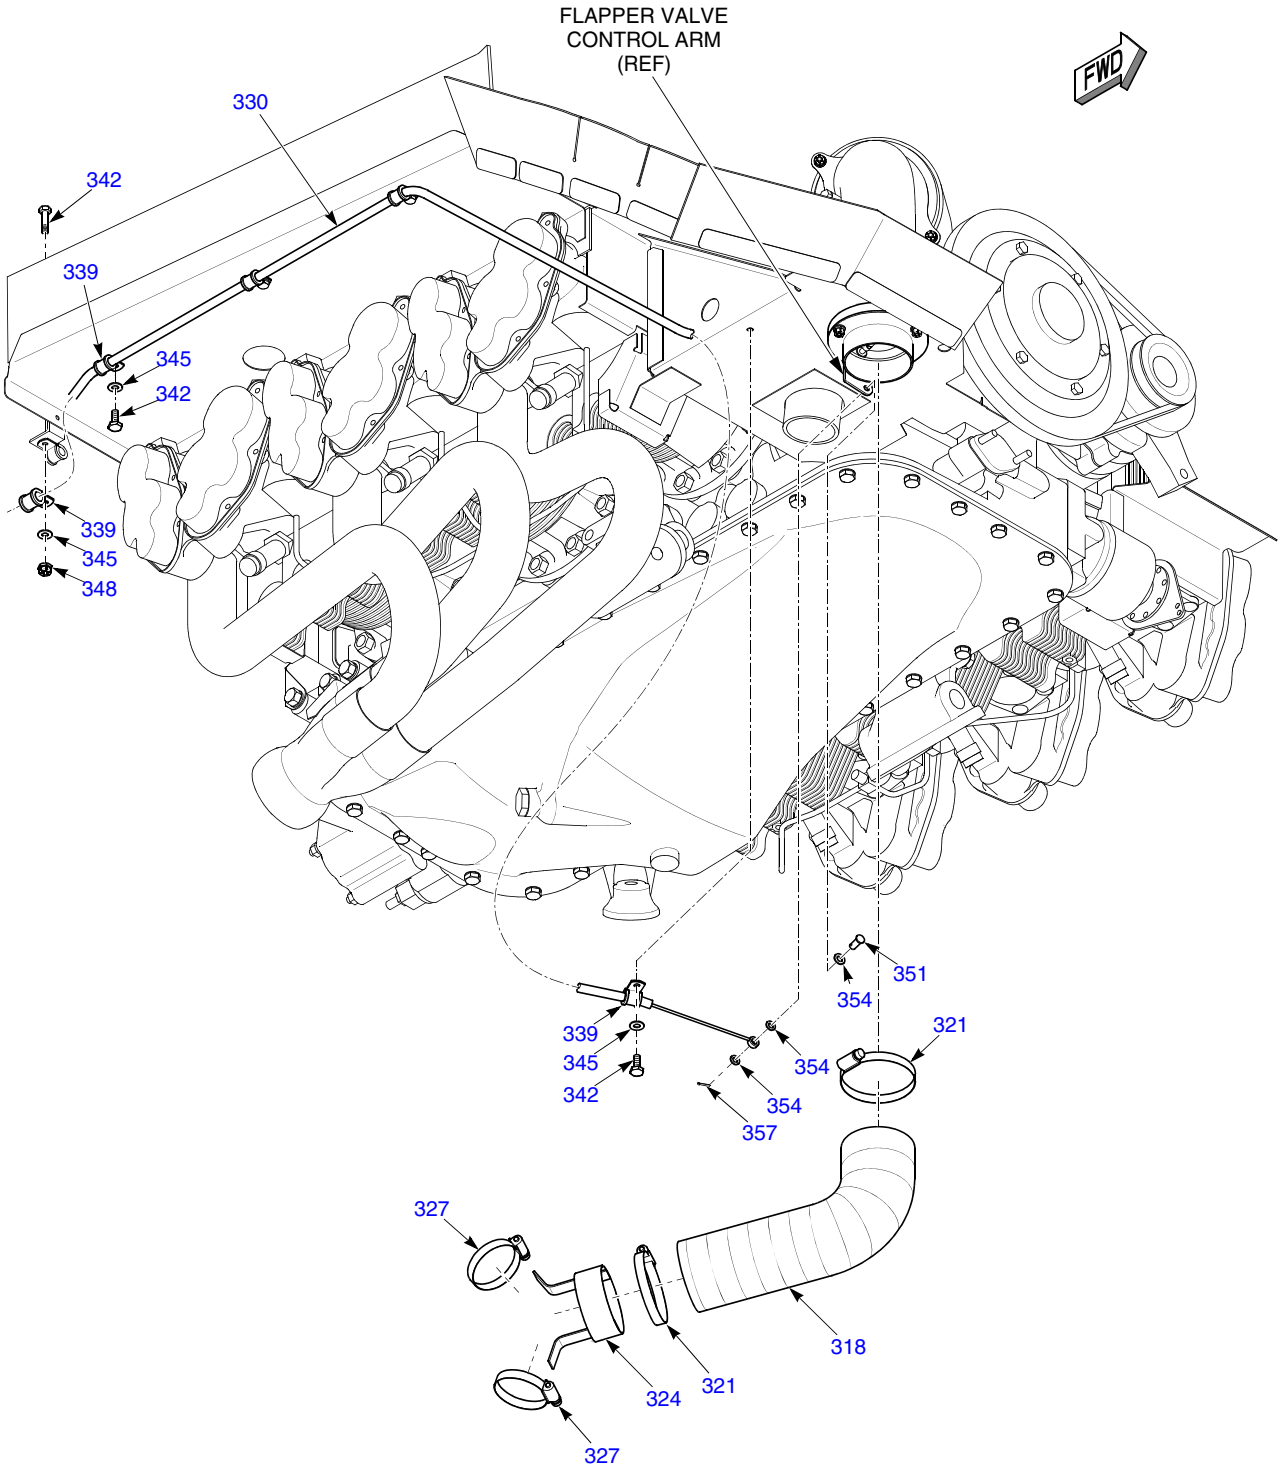

DETAIL G

Serials 22-3026 & subs w/ Perspective Avionics.

SR22_PC71_1749

Figure-01

Induction System - Serials 22-3026 & subs w/ Perspective (4 of 4)

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		INDUCTION SYSTEM	0002		NP
-	3	13846-001			·INDUCTION ASSEMBLY	0002	0138	1
					FOR SPARES USE P/N 15708-003			
-	6	14593-001			·INDUCTION ASSEMBLY	0139	0319	1
					FOR SPARES USE P/N 15708-003			
-	9	13846-001			·INDUCTION ASSEMBLY	0320	0457	1
					FOR SPARES USE P/N 15708-003			
	12	13846-002			·INDUCTION ASSEMBLY	0458	0685	1
					FOR SPARES USE P/N 15708-003			
-	15	15708-001			·INDUCTION ASSEMBLY	0686	1818	1
					FOR SPARES USE P/N 15708-003			
-	18	15708-002			·INDUCTION ASSEMBLY	1819	2164	1
					FOR SPARES USE P/N 15708-003			
-	19	15708-003			·INDUCTION ASSEMBLY W/O PERSPECTIVE	2165		1
-	20	21770-003			·INDUCTION ASSEMBLY W/ PERSPECTIVE	3026		1
	21	15296-001			··INDUCTION DUCT	0686		1
	24	14626-001			·PIN, AIR FILTER	0686	2164	1
					FOR SPARES USE P/N 14626-002			
	25	14626-002			·PIN, AIR FILTER	2165		1
	27	MS24665-132		A	·COTTER PIN	0686		2
	30	NAS1149F0332P		A	·WASHER	0686		2
	33	50200-101		A	·BUSHING	0686		2
	36	15710-001			·FLAPPER ASSEMBLY	0686		1
	39	MS24665-132		A	·COTTER PIN	0686		1
	42	AN310-3		A	·NUT	0686		1
	45	NAS1149F0332P		A	·WASHER	0686		2
-	48	15671-001		A	·SUPPORT	0686	0743	1
					BEFORE SB2X-71-12			
	51	15671-002		A	·SUPPORT	0744	1818	1
					BEFORE SB2X-71-12			
	54	AN3-34		A	·BOLT	0686		1
	57	50200-101		A	·BUSHING	0686		2
	66	PRT OF ENGINE		A	·NUT	0002	0457	1
					BEFORE SB2X-71-05			
	69	PRT OF ENGINE		A	·WASHER	0002	0457	1
					BEFORE SB2X-71-05			
	72	PRT OF ENGINE		A	·LIFTING RING	0002	0457	1
					BEFORE SB2X-71-05			
	75	PRT OF ENGINE		A	·BOLT	0002	0457	1
					BEFORE SB2X-71-05			
	78	JM44CC1SS48		A	·CLAMP	0002	0685	1
	79	51261-048			AFTER SB2X-71-05			
-	81	MS21044N3		A	·NUT	0458	0559	1
					BEFORE SB2X-71-05			
	84	MS21045-3		A	·NUT	0002	0685	1
					AFTER SB2X-71-05			
	87	NAS1149F0332P		A	·WASHER	0002	0685	2
					AFTER SB2X-71-05			
-	90	AN3-6A		A	·BOLT	0002	0457	1
					BEFORE SB2X-71-05			
	93	AN3-7A		A	·BOLT	0002	0685	1
					AFTER SB2X-71-05			
	96	50903-008			·HOSE	0002		1
	99	15400-001		A	·BRACKET	0002	0685	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						AFTER SB2X-71-05			
	102	PRT OF ENGINE		A		·NUT	0002		2
						AFTER SB2X-71-05			
	105	PRT OF ENGINE		A		·WASHER	0002		4
						AFTER SB2X-71-05			
	108	PRT OF ENGINE		A		·LIFTING RING	0002		1
						AFTER SB2X-71-05			
	111	PRT OF ENGINE		A		·BOLT	0002		2
						AFTER SB2X-71-05			
-	114	50207-001				·FILTER ASSY	0002		1
	117	50207-200				··FILTER	0002		1
	120	PRT OF ITM 114				··FILTER COVER	0002		1
	123	MS24665-132		A		·COTTER PIN	0002		1
	126	AN310-3		A		·NUT	0002		1
	129	NAS1149F0332P	@	A		·WASHER	0002		1
	132	14635-001		A		·SUPPORT, AIR FILTER	0002	0685	1
						AFTER SB22-71-02			
	135	15672-001		A		·BRACKET, AIR FILTER	0686		1
	138	PRT OF BAFFLE		A		·SCREW	0002		1
						AFTER SB22-71-02			
	141	PRT OF BAFFLE		A		·WASHER	0002		1
						AFTER SB22-71-02			
	144	13767-101				·FLEXIBLE DUCTING	0002	0319	1
						FOR SPARES USE P/N 15195-101			
	147	50206-250				·FLEXIBLE DUCTING	0320		1
	150	50743-801		A		·CLAMP	0002		2
	153	13767-102				·FLEXIBLE DUCTING	0002	0457	1
						FOR SPARES USE P/N 15195-102			
	156	13767-102				·FLEXIBLE DUCTING	0458	0685	1
						FOR SPARES USE P/N 15195-102			
	159	50206-250				·FLEXIBLE DUCTING	0686		1
	162	50743-801		A		·CLAMP	0002		2
	165	14062-001		A		·RING	0002	0457	1
	168	15196-001		A		·SUPPORT TUBE	0458	0743	1
						FOR SPARES USE P/N 18293-001			
	171	15196-002		A		·SUPPORT TUBE	0744	2368	1
						FOR SPARES USE P/N 18293-001			
	174	18293-001		A		·SUPPORT TUBE	2369		1
	177	50743-701		A		·CLAMP	0458		2
	180	14067-001				·INDUCTION CABLE W/O PERSPECTIVE	0002	1570	1
						FOR SPARES USE P/N 14067-002			
	183	PRT OF ITM 180		A		·JAM NUT	0002	1570	1
	186	PRT OF ITM 180		A		·WASHER	0002	1570	1
	189	14067-002				·INDUCTION CABLE W/O PERSPECTIVE	1571		1
-	192	PRT OF ITM 189		A		·JAM NUT	1571		1
-	195	PRT OF ITM 189		A		·WASHER	1571		1
	198	MS24665-132		A		·COTTER PIN	0002		1
	201	AN310-3		A		·NUT	0002	0685	1
	204	NAS1149F0332P		A		·WASHER	0002	0685	2
	207	NAS1149F0363P		A		·WASHER	0002	0685	1
	210	AN3-5		A		·BOLT	0002	0685	1
						ALTERNATE FOR P/N MS20392-2C11			
-	213	MS20392-2C11		A		·CLEVIS PIN	0002	0685	1
						ALTERNATE FOR P/N AN3-5			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	216	MS24665-132		A		·COTTER PIN	0686		1
	219	NAS1149F0332P		A		·WASHER	0686		2
	222	MS20392-2C11		A		·CLEVIS PIN	0686		1
	225	MS21919WDG5		A		·CLAMP	0002	0685	1
	228	MS21919WDG50		A		·CLAMP	0002	0138	2
	231	50743-901		A		·CLAMP	0139		2
	234	MS21042L3		A		·NUT	0002	0685	1
	237	NAS1149F0332P		A		·WASHER	0002	0685	2
	240	AN3-4A		A		·BOLT	0002	0685	1
	243	14636-002		A		·BRACKET	0139	0685	1
	246	15760-001		A		·BRACKET	0686		1
-	249	PRT OF ENGINE		A		·BOLT	0686		1
-	252	PRT OF ENGINE		A		·WASHER	0686		1
	255	AN3-4A		A		·BOLT	0686		1
	258	NAS1149F0332P		A		·WASHER	0686		2
	261	MS21919WDG4		A		·CLAMP	0686		1
	264	MS21042L3		A		·NUT	0686		1
	267	MS21919WDF32		A		·CLAMP	0002		1
	270	MS21919WDG4		A		·CLAMP	0002		1
	273	MS21042L3		A		·NUT	0002		1
	276	NAS1149F0363P		A		·WASHER	0002		2
	279	AN3-4A		A		·BOLT	0002		1
	282	21771-002				·INDUCTION WELDMENT W/ PERSPECTIVE	3026		1
	285	21772-002				·INDUCTION WELDMENT W/ PERSPECTIVE	3026		1
	288	21770-204		A		·SPACER	3026		2
	291	AN3-61A		A		·BOLT	3026		2
	294	NAS1149F0332P		A		·WASHER	3026		2
	297	MS21045-3		A		·NUT	3026		2
	300	50206-250				·FLEXIBLE DUCTING	3026		1
	303	21774-001				·FLAPPER ASSEMBLY	3026		1
	306	21770-203				·FLANGE DUCT	3026		2
	309	AN3-7A				·BOLT	3026		3
	312	NAS1149F0332P		A		·WASHER	3026		3
	315	MS21045-3		A		·NUT	3026		3
	318	21770-202				·FLEXIBLE DUCTING	3026		1
	321	50743-801		A		·CLAMP	3026		2
	324	15196-002		A		·SUPPORT TUBE	3026		1
	327	50743-701		A		·CLAMP	3026		2
	330	14067-004				·INDUCTION CABLE W/ PERSPECTIVE	3026		1
	333	PRT OF ITM 330		A		·JAM NUT	3026		1
	336	PRT OF ITM 330		A		·WASHER	3026		1
	339	MS21919WDG5		A		·CLAMP	3026		4
	342	AN4-4A		A		·BOLT	3026		4
	345	NAS1149F0332P		A		·WASHER	3026		4
	348	MS21042L4		A		·NUT	3026		1
	351	MS20392-2C11				·CLEVIS PIN	3026		1
	354	NAS1149F0332P		A		·WASHER	3026		3
	357	MS24665-132		A		·COTTER PIN	3026		1

SYMBOL NOTES:

** SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			
			@		ADDITIONAL WASHERS MAY BE ADDED TO PROPERLY ALIGN COTTER PIN.			

EFFECTIVITY:
All

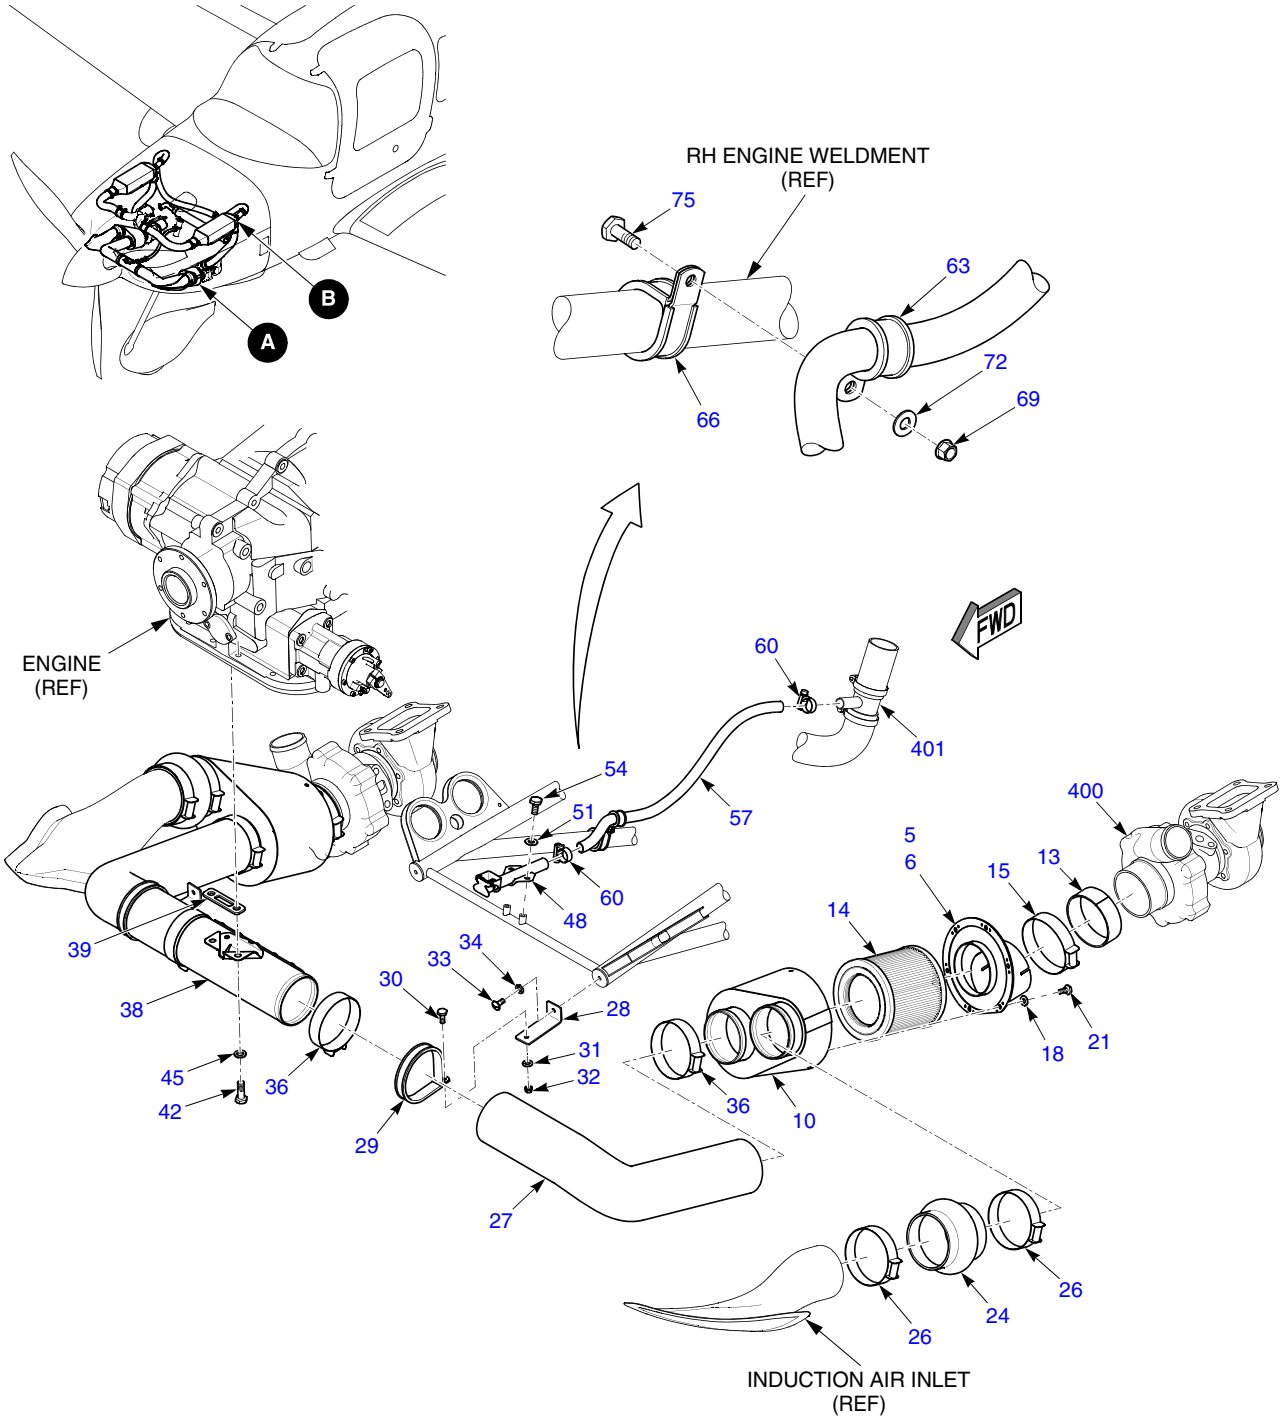

DETAIL A

SR22_PC71_1935B

Figure-02
Induction System - Serials 22T-0001 & subs (1 of 2)

EFFECTIVITY:
Serials 22T-0001 & subs

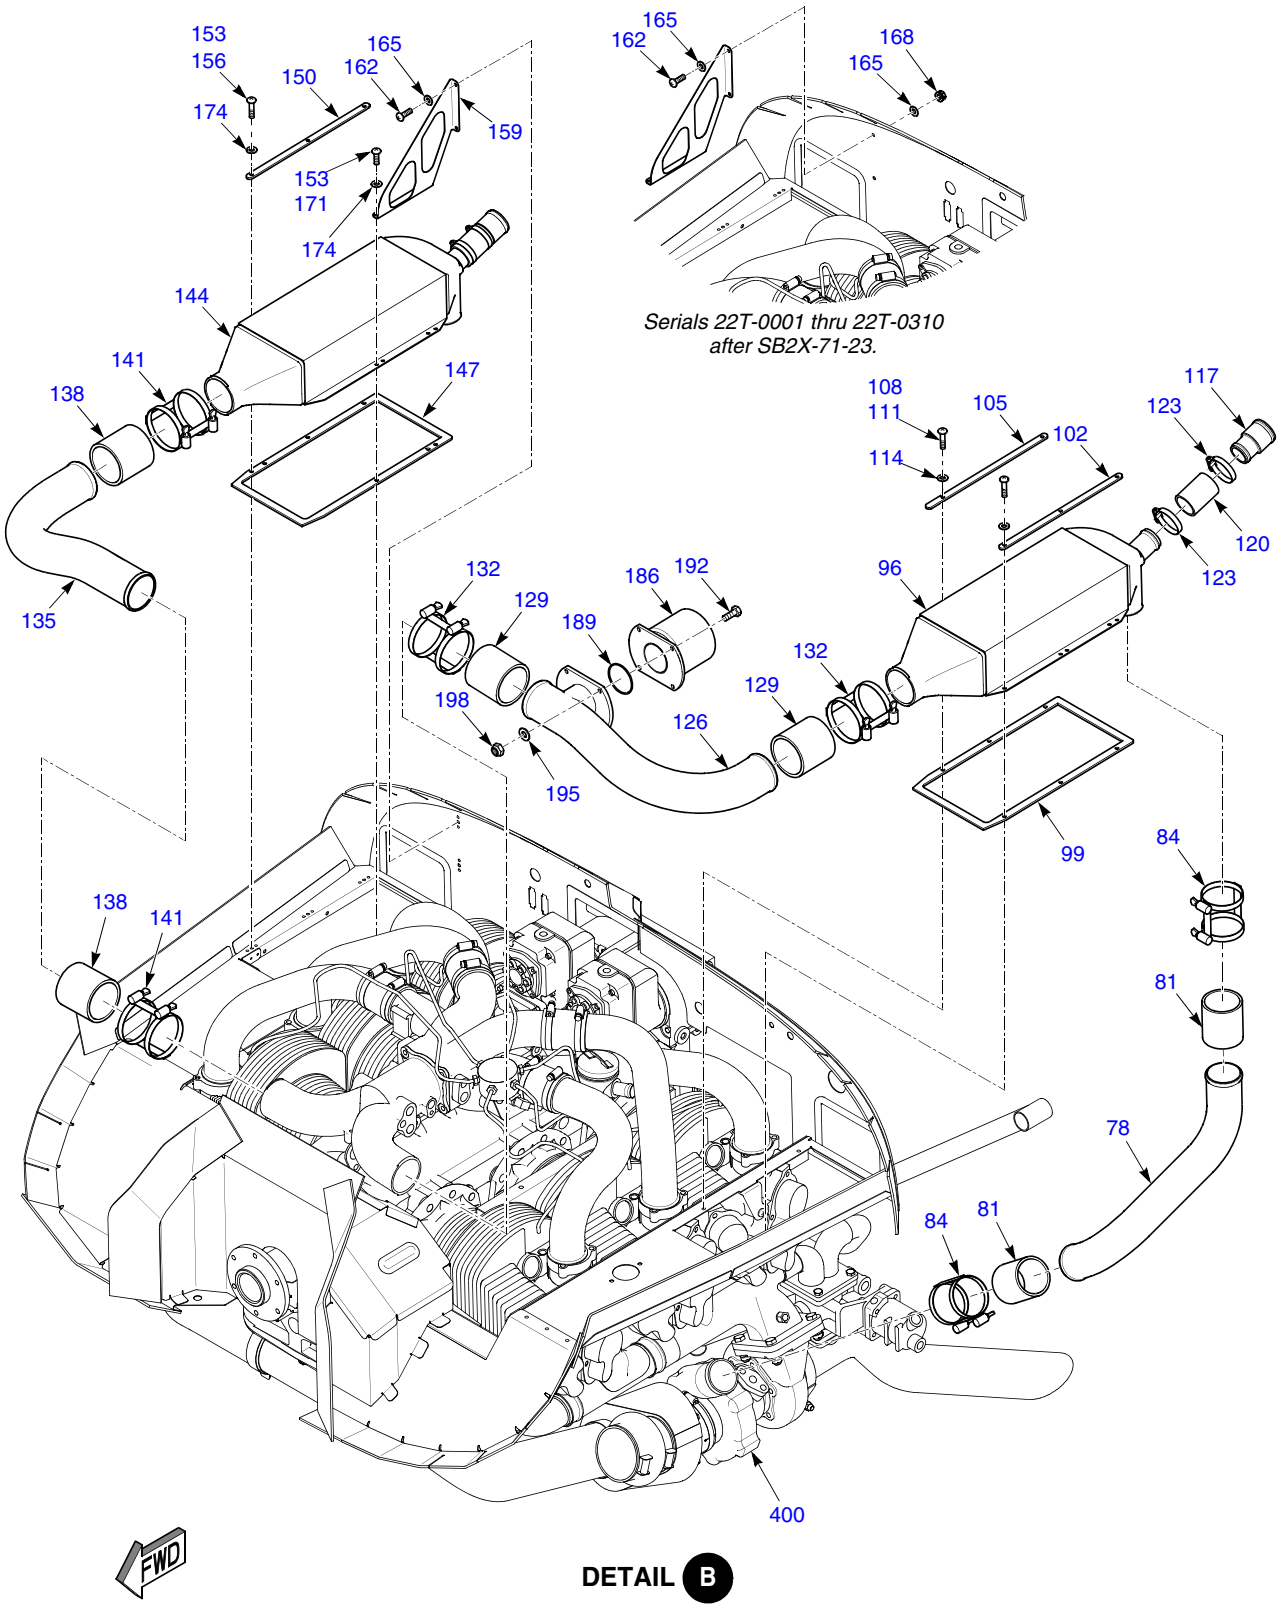

Figure-02
Induction System - Serials 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		INDUCTION SYSTEM INSTALLATION	/ 0001	/	NP
-	3	26359-001			·INDUCTION ASSEMBLY	/ 0001	/	1
-	4	26391-002			··WELDMENT MOUNTING BASE, AIR BOX, LH	/ 0001	/ 0151	1
					BEFORE SB2X-71-18			
			@		FOR SPARES USE P/N 26391-005			
	5	26391-005			··WELDMENT MOUNTING BASE, AIR BOX, LH	/ 0227	/	1
					AFTER SB2X-71-18	/ 0001	/ 0151	
	6	26391-003			··WELDMENT MOUNTING BASE, AIR BOX, LH	/ 0152	/ 0226	1
			@		FOR SPARES USE P/N 26391-005			
-	7	26391-001			··WELDMENT MOUNTING BASE, AIR BOX, RH	/ 0001	/ 0226	1
			@		FOR SPARES USE P/N 26391-004			
-	8	26391-004			··WELDMENT MOUNTING BASE, AIR BOX, RH	/ 0227	/	1
-	9	26367-001			··WELDMENT, AIR BOX, LH	/ 0001	/ 0024	1
					BEFORE SB2X-71-18			
	10	26367-002			··WELDMENT, AIR BOX, LH	/ 0025	/	1
					AFTER SB2X-71-18	/ 0001	/ 0024	
-	11	26367-001			··WELDMENT, AIR BOX, RH	/ 0001	/ 0024	1
-	12	26367-002			··WELDMENT, AIR BOX, RH	/ 0025	/	1
	13	29486-001			··SEAL	/ 0164	/	2
					AFTER SB2X-71-17	/ 0001	/ 0163	
	14	27166-001			··AIR FILTER, CARTRIDGE	/ 0001	/	2
	15	53292-002			··CLAMP	/ 0001	/	2
	18	NAS1149F0332P		A	··WASHER	/ 0001	/	12
	21	AN3-3A		A	··BOLT	/ 0001	/	12
	24	26611-001			··HOSE CONNECTOR	/ 0001	/	2
-	25	50743-901			··CLAMP	/ 0001	/ 0003	4
					FOR SPARES USE P/N 50743-902			
	26	50743-902			··CLAMP	/ 0004	/	4
	27	26359-101			··DUCT	/ 0001	/	2
	28	29254-001			··BRACKET	/ 0043	/	2
	29	MS21919WG48			··CLAMP	/ 0043	/	2
	30	AN3-4A		A	··BOLT	/ 0043	/	2
	31	NAS1149F0332P		A	··WASHER	/ 0043	/	2
	32	MS21042-3		A	··NUT	/ 0043	/	2
	33	AN525-10R8		A	··SCREW	/ 0043	/	2
	34	MS35338-43		A	··WASHER	/ 0043	/	2
-	35	50743-901			··CLAMP	/ 0001	/ 0003	4
					FOR SPARES USE P/N 50743-902			
	36	50743-902			··CLAMP	/ 0004	/	4
-	37	28895-002			··ALTERNATE AIR SOURCE ASSEMBLY	/ 0001	/ 0368	1
					BEFORE SB2X-71-22			
					FOR SPARES USE P/N 28895-003			
	38	28895-003			··ALTERNATE AIR SOURCE ASSEMBLY			1
					AFTER SB2X-71-22	/ 0001	/ 0368	
	39	27075-001			··SPACER	/ 0001	/	1
	42	PRT OF ENGINE		A	··BOLT	/ 0001	/	2
	45	PRT OF ENGINE		A	··WASHER	/ 0001	/	2
	48	28891-001			··BLAST TUBE ASSEMBLY	/ 0001	/	1
	51	NAS1149F0332P		A	··WASHER	/ 0001	/	2
	54	AN3-3A		A	··BOLT	/ 0001	/	2
	57	26359-102			··TUBE	/ 0001	/	1
	60	50743-102			··CLAMP	/ 0001	/	2
	63	MS21919DWG10			··ADEL CLAMP	/ 0001	/	1
	66	MS21919WDG16			··ADEL CLAMP	/ 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	69	MS21042-3		A	··NUT	/ 0001	/	1
	72	NAS1149F0332P		A	··WASHER	/ 0001	/	1
	75	AN3-4A		A	··BOLT	/ 0001	/	1
	78	657638			·AFT INDUCTION TUBE, LH	/ 0001	/	1
	81	26358-112			·COUPLING	/ 0001	/	2
	84	26358-113			·CLAMP	/ 0001	/	2
-	87	657639			·AFT INDUCTION TUBE, RH	/ 0001	/	1
-	88	51168-002			·ANTI CHAFE	/ 0042	/	AR
-	90	26358-112			·COUPLING	/ 0001	/	2
-	93	26358-113			·CLAMP	/ 0001	/	2
	96	26358-109			·INTERCOOLER, LH	/ 0001	/	1
	99	26396-001			·SEAL	/ 0001	/	1
	102	31796-001			·FLANGE STIFFENER, OUTBD	/ 0713	/	1
					AFTER SB2X-71-25	/ 0001	/ 0712	
	105	31796-002			·FLANGE STIFFENER, INBD	/ 0713	/	1
					AFTER SB2X-71-25	/ 0001	/ 0712	
	108	MS35206-245		A	·SCREW	/ 0001	/ 0712	5
	111	MS27039-0810		A	·SCREW	/ 0713	/	5
					AFTER SB2X-71-25	/ 0001	/ 0712	
	114	NAS1149FN832P		A	·WASHER	/ 0001	/	5
	117	646073			·NOZZLE	/ 0001	/	1
	120	642917-3			·HOSE CONNECTOR	/ 0001	/	1
	123	637255-4			·ADEL CLAMP	/ 0001	/	2
	126	643948			·FWD INDUCTION TUBE, LH	/ 0001	/	1
	129	26358-110			·COUPLING	/ 0001	/	2
	132	26358-111			·CLAMP	/ 0001	/	2
	135	643947			·FWD INDUCTION TUBE, RH	/ 0001	/	1
	138	26358-110			·COUPLING	/ 0001	/	2
	141	26358-111			·CLAMP	/ 0001	/	2
	144	26358-109			·INTERCOOLER, RH	/ 0001	/	1
	147	26396-001			·SEAL	/ 0001	/	1
	150	31796-001			·FLANGE STIFFENER, OUTBD	/ 0713	/	1
					AFTER SB2X-71-25	/ 0001	/ 0712	
	153	MS35206-245		A	·SCREW	/ 0001	/ 0712	5
					AFTER SB2X-71-23	/ 0001	/ 0310	3
	156	MS27039-0810		A	·SCREW	/ 0713	/	3
					AFTER SB2X-71-25	/ 0001	/ 0712	
	159	28403-001			·GUSSET	/ 0311	/	1
					AFTER SB2X-71-23	/ 0001	/ 0310	
	162	MS27039-0806		A	·SCREW	/ 0311	/	2
					AFTER SB2X-71-23	/ 0001	/ 0310	
	165	NAS1149FN832P		A	·WASHER	/ 0311	/	2
					AFTER SB2X-71-23	/ 0001	/ 0310	
	168	MS21045-08		A	·NUT			
					AFTER SB2X-71-23	/ 0001	/ 0310	2
	171	MS27039-0810		A	·SCREW	/ 0311	/	2
					AFTER SB2X-71-23	/ 0001	/ 0310	
	174	NAS1149FN832P		A	·WASHER	/ 0001	/	5
-	177	646073			·NOZZLE	/ 0001	/	1
-	180	642917-3			·HOSE CONNECTOR	/ 0001	/	1
-	183	637255-4			·ADEL CLAMP	/ 0001	/	2
	186	639319-26			·OVERBOOST VALVE	/ 0001	/	1
	189	MS29513-138			·GASKET	/ 0001	/	1
	192	AN3-6A		A	·BOLT	/ 0001	/	4

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····· NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	195	AN960-10L		A	·WASHER	/ 0001	/	4
	198	MS21045-3		A	·NUT	/ 0001	/	4
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0004, 22T-0019, 22T-0027, 22T-0047, 22T-0097, 22T-0126, 22T-0127, 22T-0135, 22T-0138, 22T-0139, 22T-0144, 22T-0154, 22T-0155, 22T-0157 THRU 22T-0161, 22T-0163; REFER TO 22T-0164 FOR PART IDENTIFICATION.			
			@		W/ ITEM 13, HIGH TEMP SEALANT, AND RTV PRIME COAT PER AMM 71-60.			
	400	RF 81-20-01 DET			TURBOCHARGER INSTALLATION			
	401	RF 21-40-02 DET			AIR MIXING CHAMBER INSTALLATION			

Intentionally Left Blank

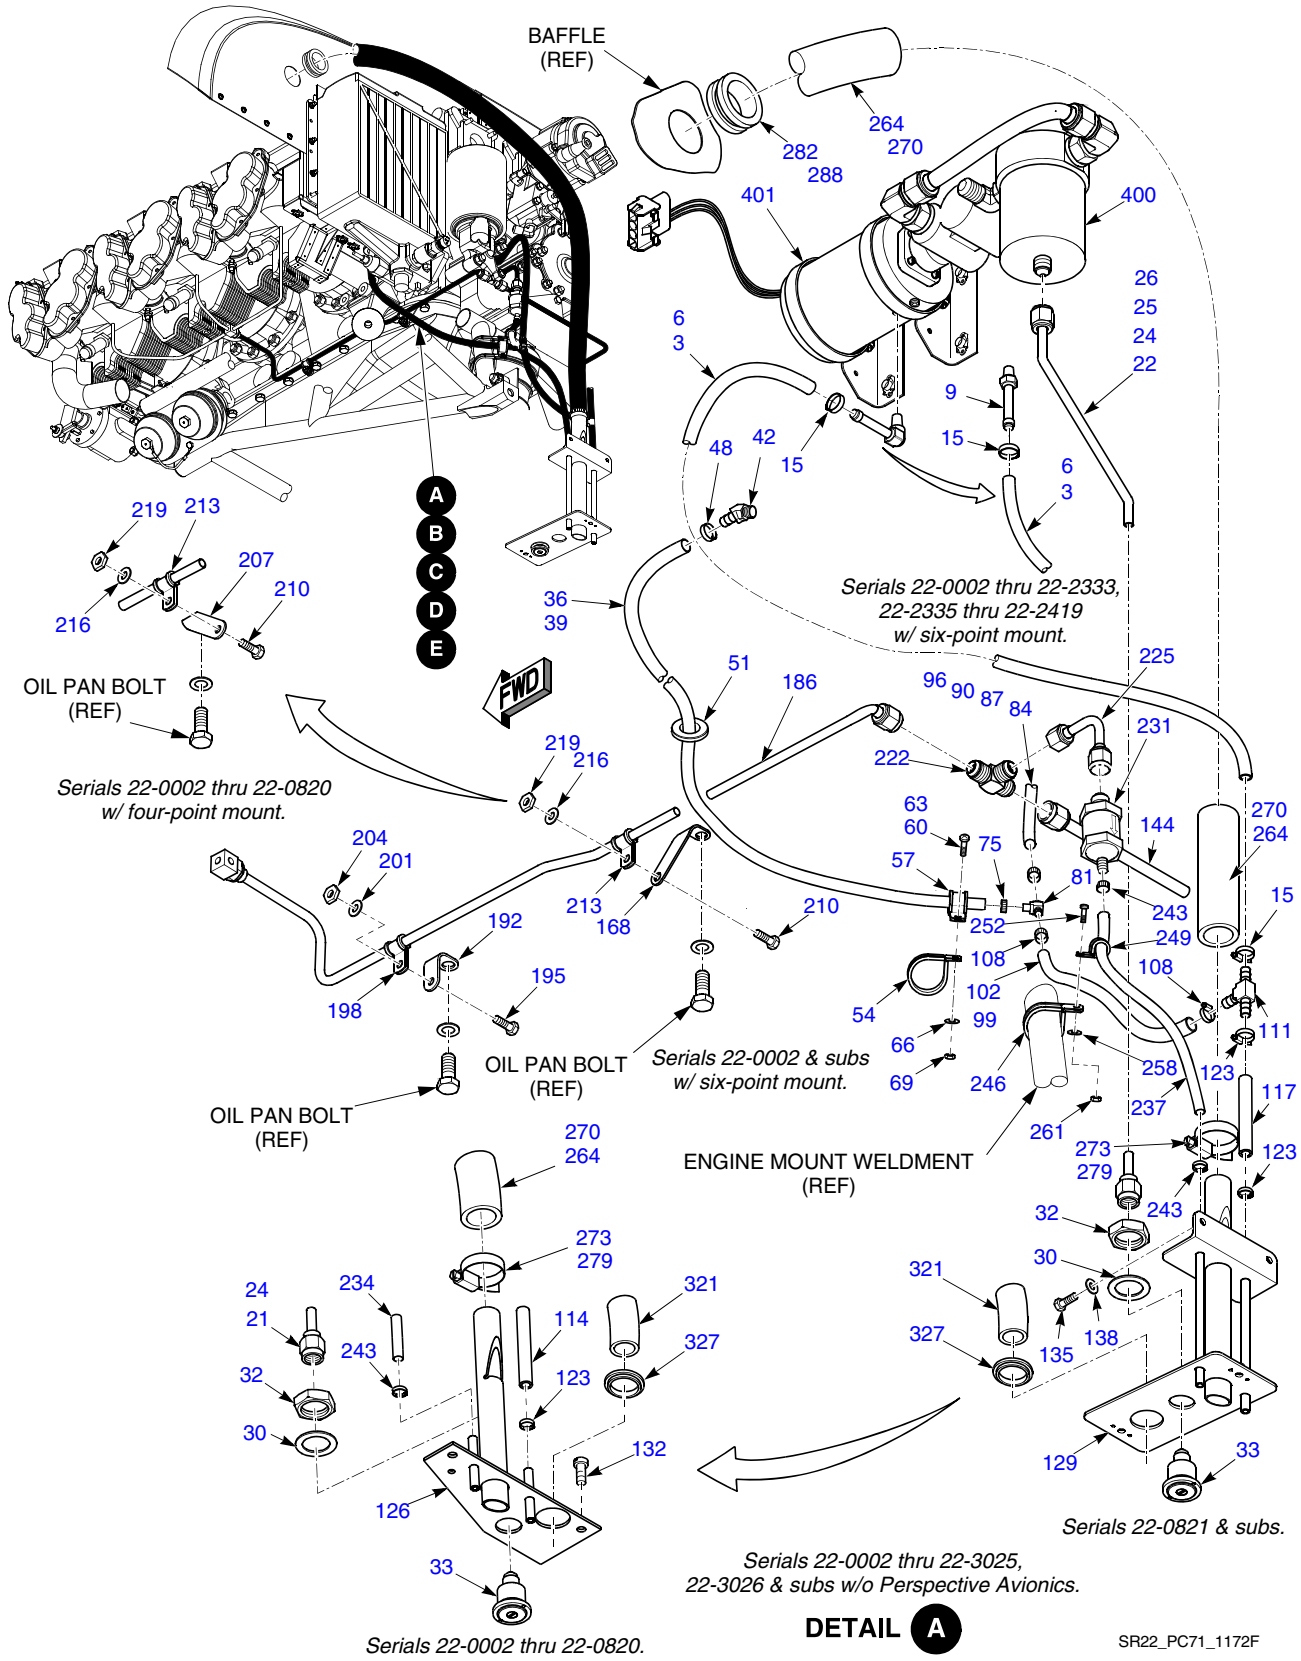

Figure-01

Engine Drain - Serials 22-0002 & subs w/o Perspective (1 of 5)

EFFECTIVITY:
Serials 22-0002 & subs w/o Perspective

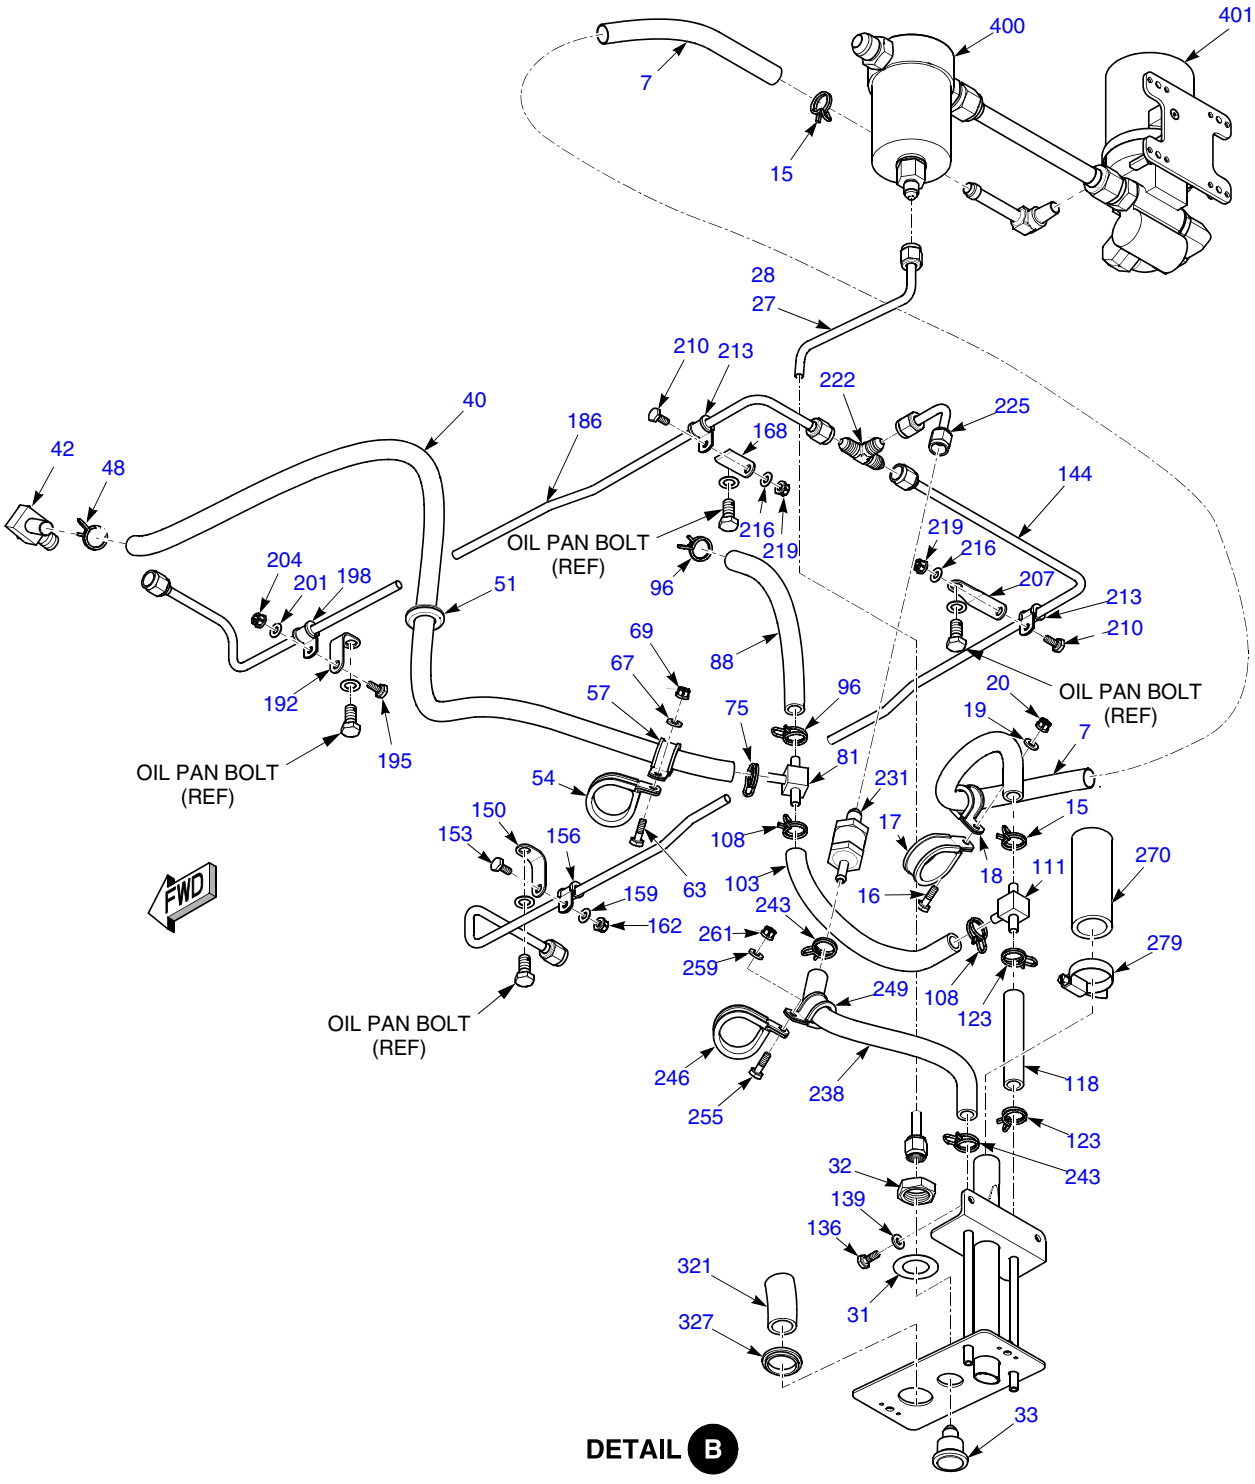

SR22_PC71_1842B

Serials 22-3026 thru 22-3711 w/ Perspective Avionics.

Figure-01

Engine Drain - Serials 22-3026 thru 22-3711 w/ Perspective (2 of 5)

EFFECTIVITY:
All

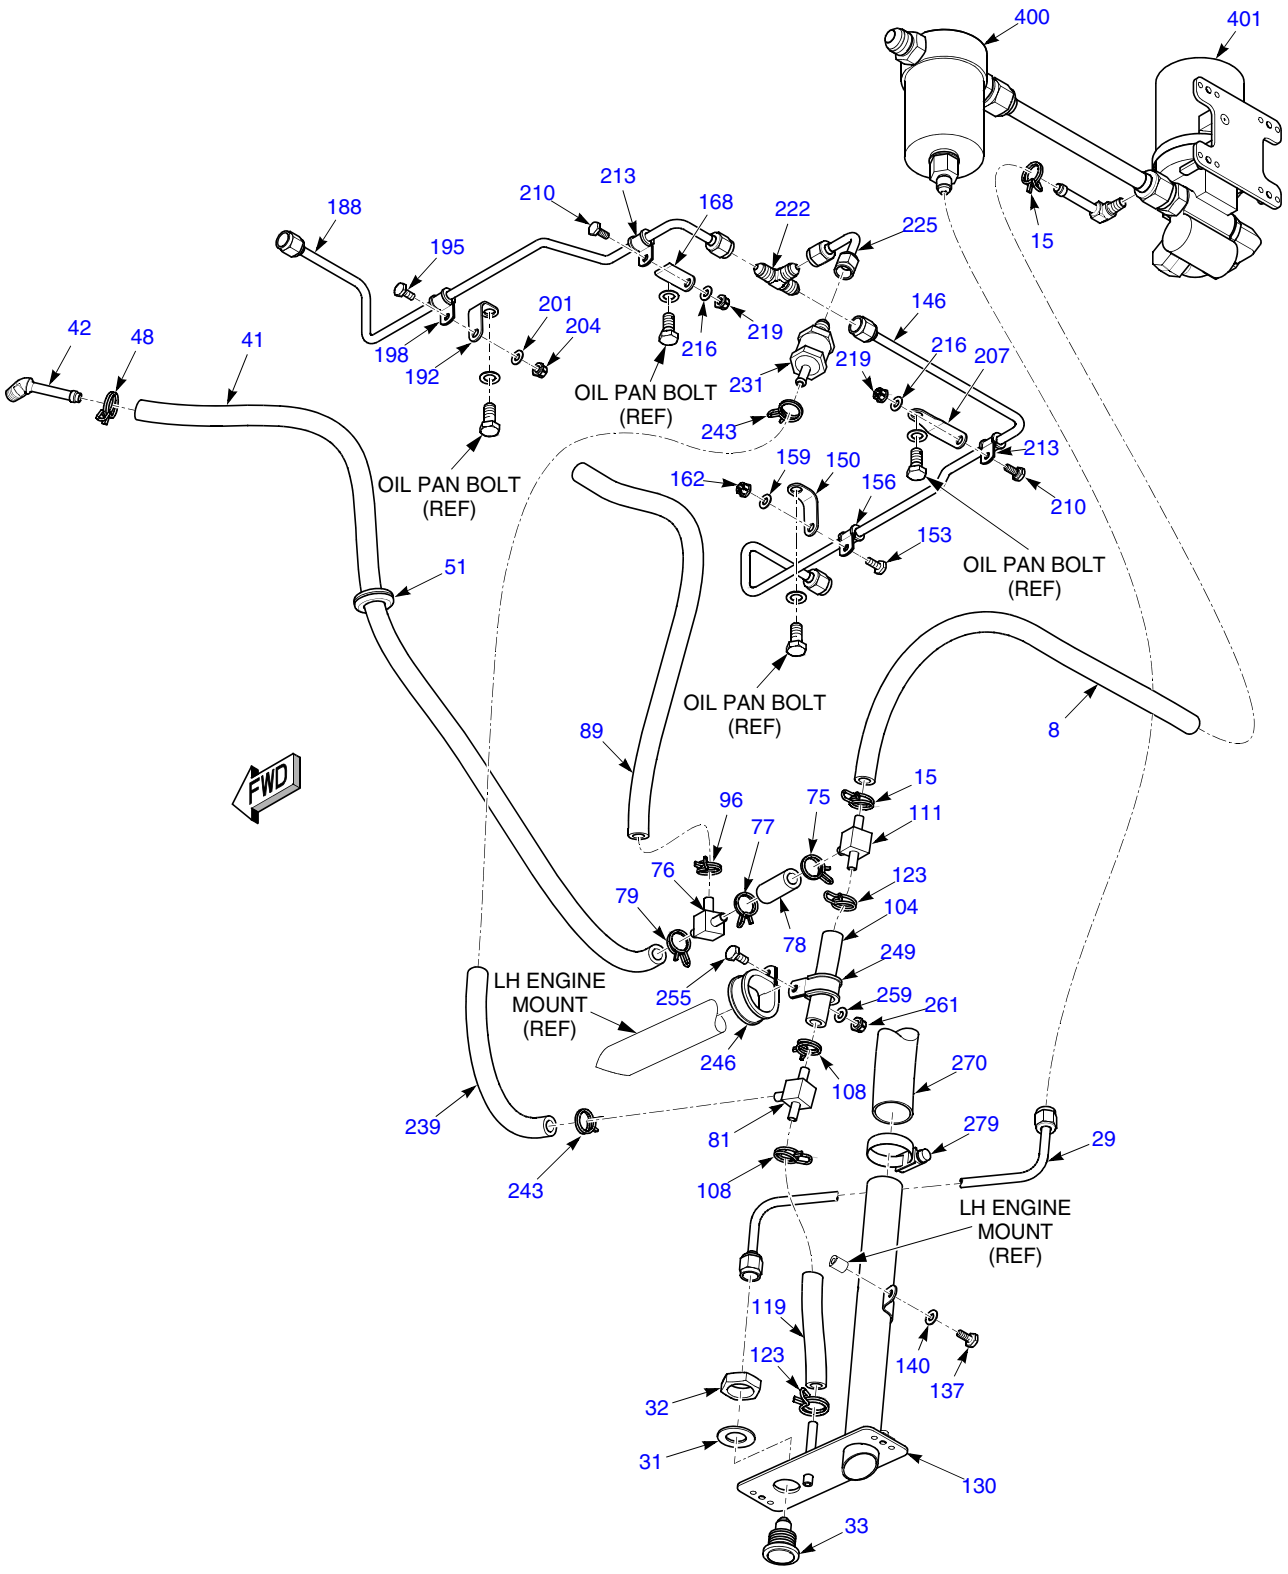

DETAIL C

Serials 22-3712 & subs.

SR22_PC71_2000

Figure-01

Engine Drain - Serials 22-3712 & subs (3 of 5)

EFFECTIVITY:
Serials 22-3712 & subs

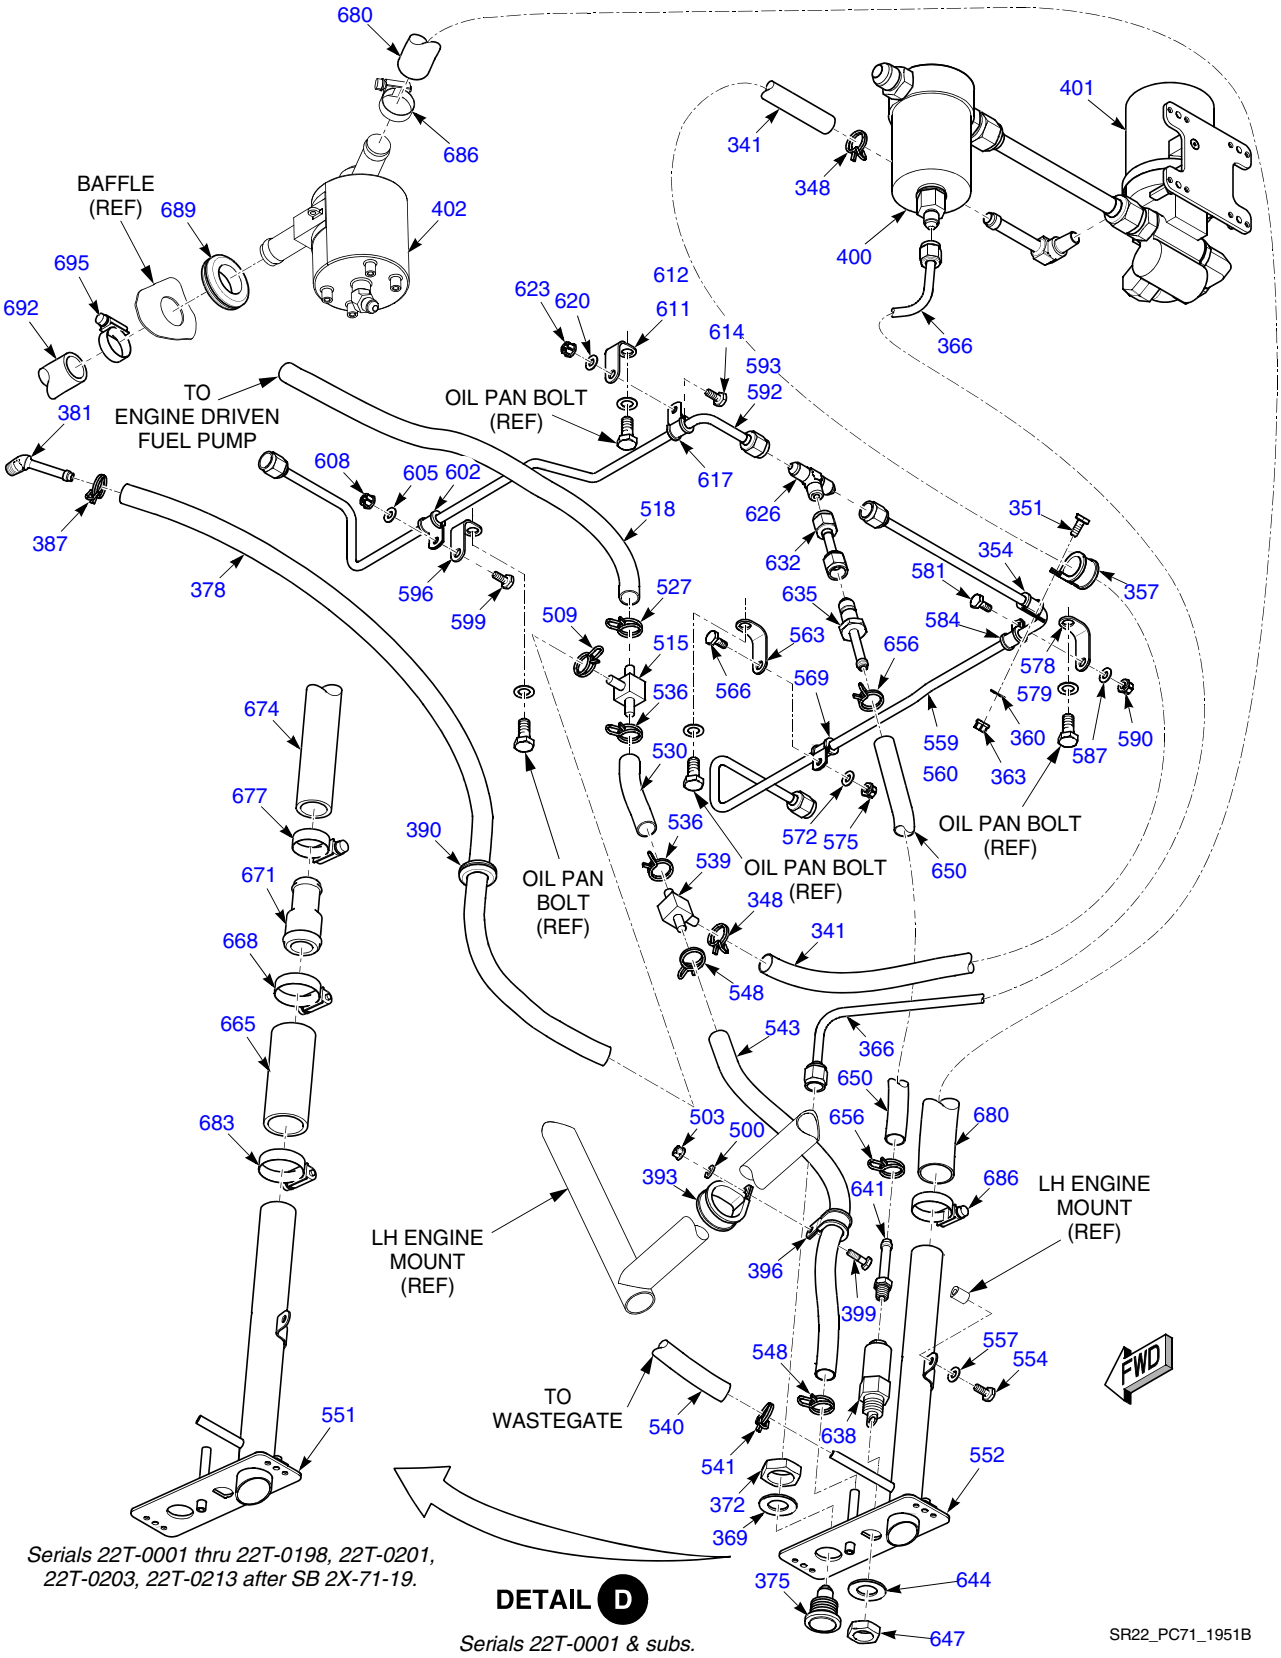

Serials 22T-0001 thru 22T-0198, 22T-0201, 22T-0203, 22T-0213 after SB 2X-71-19.

DETAIL D

Serials 22T-0001 & subs.

Figure-01

Engine Drain - Serials 22T-0001 & subs (4 of 5)

EFFECTIVITY:
All

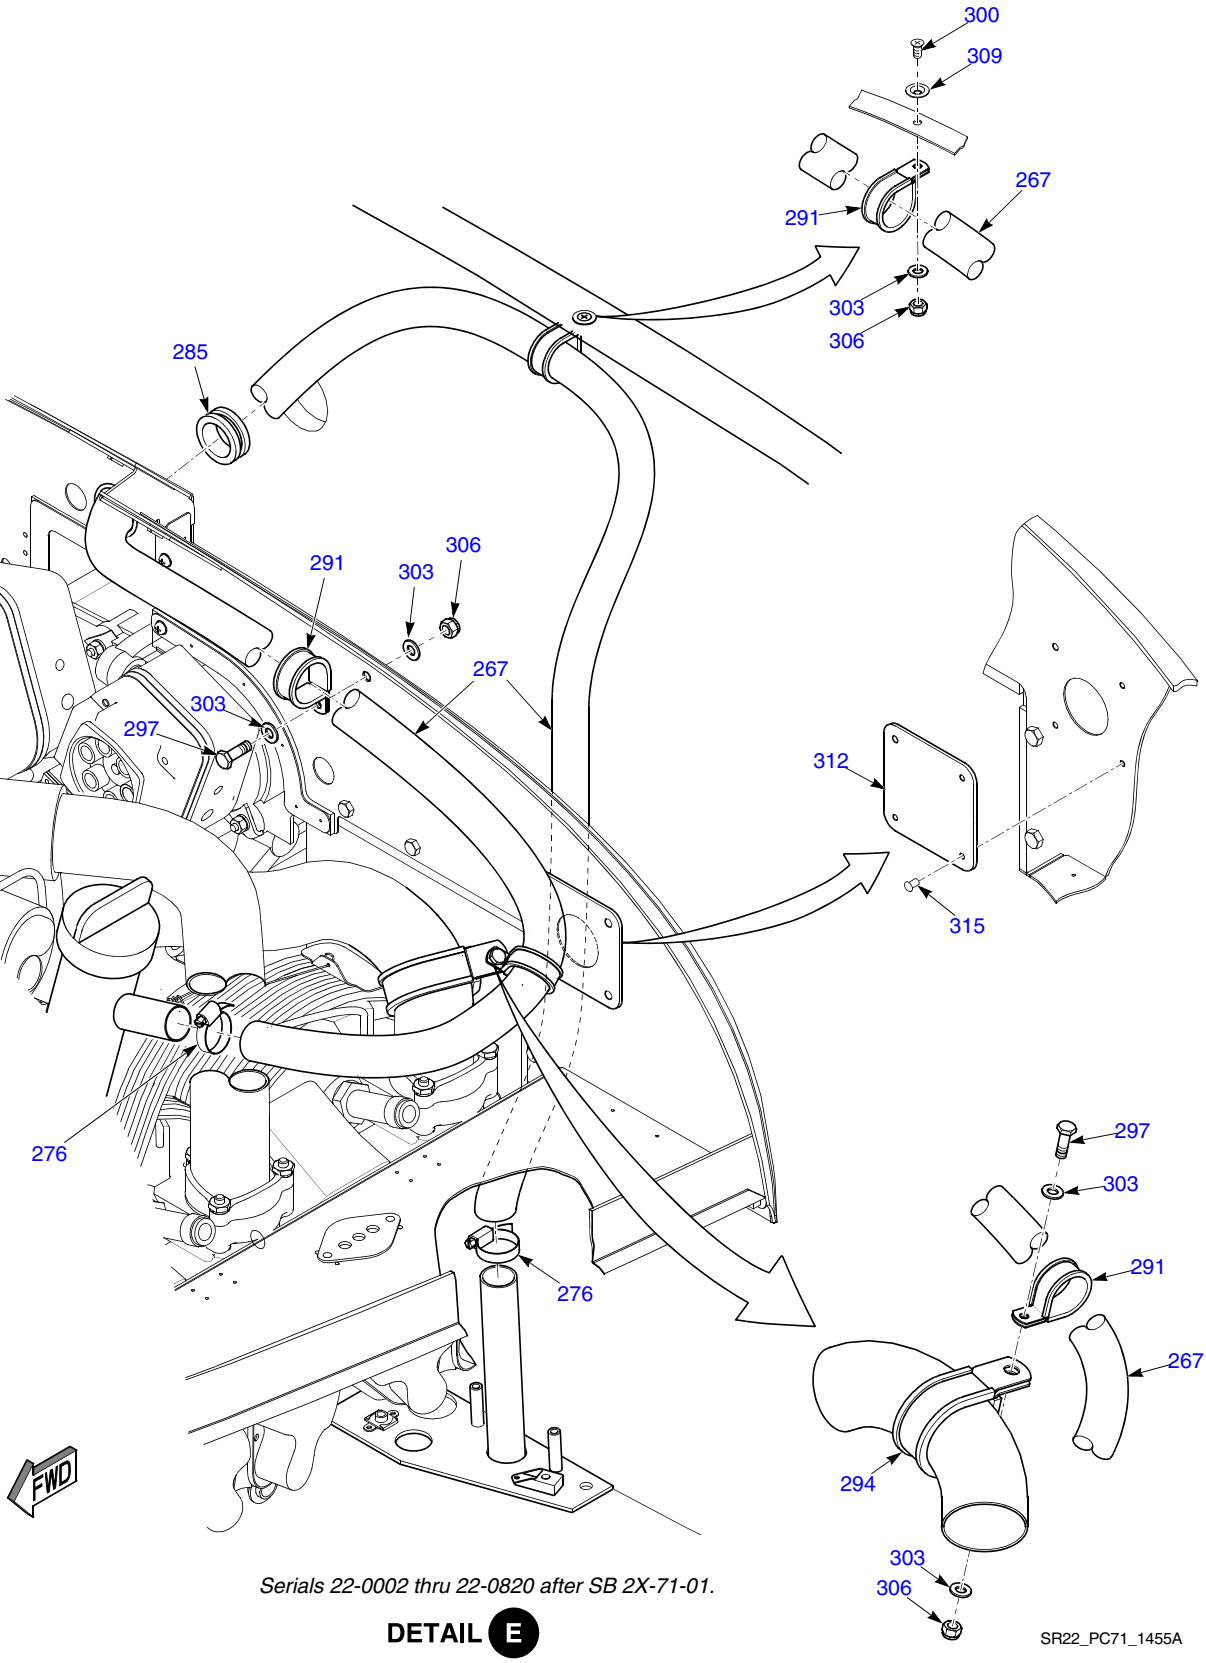

Figure-01

Engine Drain - Serials 22-0002 thru 22-0820 after SB2X-71-01 (5 of 5)

EFFECTIVITY:
Serials 22-0002 thru 22-0820 after SB2X-71-01

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ENGINE DRAIN SYSTEM INSTALLATION	0002 / 0001	/	NP
-	2	NO PRT NUMBER			ENGINE DRAIN SYSTEM W/ NORMALLY ASPIRATED ENGINE	0002		
	3	13769-105			·DRAIN HOSE, AUX. PUMP, UPPER	0002	0820	1
	6	20359-105			·DRAIN HOSE, AUX. PUMP, UPPER, W/O PERSPECTIVE	0821		1
	7	19871-103			·DRAIN HOSE, AUX. PUMP, UPPER, W/ PERSPECTIVE	3026	3711	1
	8	19871-403			·DRAIN HOSE, AUX. PUMP, UPPER, W/ PERSPECTIVE	3712		1
-	12	50743-401		A	·BREEZE CLAMP	0002		2
					ALTERNATE FOR P/N 50152-209			
	15	50152-209		A	·CLAMP	0002		2
					ALTERNATE FOR P/N 50743-401			
	16	AN3-5A			·BOLT, W/ PERSPECTIVE AVIONICS	3026	3711	1
	17	MS21919WDG18		A	·CLAMP, W/ PERSPECTIVE AVIONICS	3026	3711	1
	18	MS21919WDG10		A	·CLAMP, W/ PERSPECTIVE AVIONICS	3026	3711	1
	19	NAS1149F0363P		A	·WASHER, W/ PERSPECTIVE AVIONICS	3026	3711	1
	20	MS21045-3		A	·NUT, W/ PERSPECTIVE AVIONICS	3026	3711	1
-	21	12148-001			·TUBE ASSEMBLY, GASCOLATOR DRAIN	0002	0559	1
					FOR SPARES USE P/N 12148-002			
	22	12148-002			·TUBE ASSEMBLY, GASCOLATOR DRAIN	0560	0820	1
	24	20357-001			·TUBE ASSEMBLY, GASCOLATOR DRAIN, W/O PERSPECTIVE	0821	2437	1
					AFTER SB2X-28-08	2710	3420	
						3421		
	25	18593-001			·TUBE ASSEMBLY, GASCOLATOR DRAIN	2438	2899	1
					BEFORE SB2X-28-08			
					WHEN EXHTD USE P/N 18593-002			
	26	18593-002			·TUBE ASSY, GASCOLATOR DRAIN, W/O PERSPECTIVE	2900	3420	1
					BEFORE SB2X-28-08			
					ALTERNATE FOR P/N 18593-001			
	27	18593-003			·TUBE ASSY, GASCOLATOR DRAIN, W/ PERSPECTIVE	3026	3420	1
					BEFORE SB2X-28-08			
	28	18593-004			·TUBE ASSY, GASCOLATOR DRAIN, W/ PERSPECTIVE	3421	3711	1
					AFTER SB2X-28-08	3026	3420	
	29	26933-001			·TUBE ASSY, GASCOLATOR DRAIN, W/ PERSPECTIVE	3711		1
	30	NAS1149D1290K		A	·WASHER, W/O PERSPECTIVE	0002		2
	31	NAS1149F1216P		A	·WASHER, W/ PERSPECTIVE	3026		2
	32	AN924-8D		A	·NUT	0002		1
	33	50242-001		A	·DRAIN VALVE, GASCOLATOR	0002		1
	36	13769-101			·DRAIN HOSE, FUEL MANIFOLD	0002	0820	1
	39	20359-101			·DRAIN HOSE, FUEL MANIFOLD, W/O PERSPECTIVE	0821		1
	40	19871-106			·DRAIN HOSE, FUEL MANIFOLD, W/ PERSPECTIVE	3026	3711	1
	41	19871-406			·DRAIN HOSE, FUEL MANIFOLD, W/ PERSPECTIVE	3712		1
	42	AN842-4		A	·ELBOW, HOSE	0002		1
-	45	50743-401		A	·BREEZE CLAMP	0002		1
					ALTERNATE FOR P/N 50152-209			
	48	50152-209		A	·CLAMP	0002		1
					ALTERNATE FOR P/N 50743-401			
	51	MS35489-17		A	·GROMMET	0002		1
	54	MS21919WDG18		A	·CLAMP	0002	3711	1
	57	MS21919WDG10		A	·CLAMP	0002	3711	1
	60	MS27039-1-09		A	·SCREW	0002	0549	1
					ALTERNATE FOR P/N AN3-5A			
	63	AN3-5A			·BOLT	0550	3711	1
					ALTERNATE FOR P/N MS27039-1-09			
	66	NAS1149F0332P		A	·WASHER, W/O PERSPECTIVE	0002		1
	67	NAS1149F0363P		A	·WASHER, W/ PERSPECTIVE	3026	3711	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	69	MS21045-3		A	·NUT	0002	3711	1
-	72	50743-401		A	·BREEZE CLAMP	0002		1
					ALTERNATE FOR P/N 50152-209			
	75	50152-209		A	·CLAMP	0002		1
					ALTERNATE FOR P/N 50743-401			
	76	50372-001			·BRASS UNION TEE	3712		1
	77	50152-209		A	·CLAMP	3712		1
	78	19871-407			·DRAIN HOSE, TEE CONNECTOR	3712		1
	79	50152-209		A	·CLAMP	3712		1
-	80	50943-063			·LOOM	0002		1
	81	50372-001			·BRASS UNION TEE	0002		1
	84	13769-102			·DRAIN HOSE, FUEL PUMP	0002	0820	1
	87	20359-102			·DRAIN HOSE, FUEL PUMP, W/O PERSPECTIVE	0821		1
	88	19871-101			·DRAIN HOSE, FUEL PUMP, W/ PERSPECTIVE	3026	3711	1
	89	19871-401			·DRAIN HOSE, FUEL PUMP, W/ PERSPECTIVE	3712		1
-	90	AN840-4		A	·HOSE, NIPPLE	0002		1
-	93	50743-401		A	·BREEZE CLAMP	0002		2
					ALTERNATE FOR P/N 50152-209			
	96	50152-209		A	·CLAMP	0002		2
					ALTERNATE FOR P/N 50743-401			
	99	13769-103			·DRAIN HOSE, COMMON	0002	0820	1
	102	20359-103			·DRAIN HOSE, COMMON, W/O PERSPECTIVE	0821		1
	103	19871-104			·DRAIN HOSE, COMMON, W/ PERSPECTIVE	3026	3711	1
	104	19871-404			·DRAIN HOSE, COMMON, W/ PERSPECTIVE	3712		1
-	105	50743-401		A	·BREEZE CLAMP	0002		2
					ALTERNATE FOR P/N 50152-209			
	108	50152-209		A	·CLAMP	0002		2
					ALTERNATE FOR P/N 50743-401			
	111	50372-001		A	·BRASS UNION TEE	0002		1
	114	13769-106			·DRAIN HOSE, AUX. PUMP, LOWER	0002	0820	1
	117	20359-106			·DRAIN HOSE, AUX. PUMP, LOWER, W/O PERSPECTIVE	0821		1
	118	19871-105			·DRAIN HOSE, AUX. PUMP, LOWER, W/ PERSPECTIVE	3026	3711	1
	119	19871-405			·DRAIN HOSE, AUX. PUMP, LOWER, W/ PERSPECTIVE	3712		1
-	120	50743-401		A	·BREEZE CLAMP	0002		2
					ALTERNATE FOR P/N 50152-209			
	123	50152-209		A	·CLAMP	0002		2
					ALTERNATE FOR P/N 50743-401			
	126	14058-001			·DRAIN MANIFOLD	0002	0820	1
	129	20352-001			·DRAIN MANIFOLD	0821	3711	1
	130	26939-002			·DRAIN MANIFOLD	3712		1
	132	MS24694S50		A	·SCREW	0002	0820	2
	135	AN3-3A		A	·BOLT, W/O PERSPECTIVE	0821		2
	136	AN3-4A		A	·BOLT, W/ PERSPECTIVE	3026	3711	2
	137	AN3-3A		A	·BOLT, W/ PERSPECTIVE	3712		1
	138	NAS1149F0332P		A	·WASHER, W/O PERSPECTIVE	0821		2
	139	NAS1149F0363P		A	·WASHER, W/ PERSPECTIVE	3026	3711	2
	140	NAS1149F0332P		A	·WASHER, W/ PERSPECTIVE	3712		1
-	141	13913-001			·DRAIN LINE, FUEL, RH	0002	0118	1
	144	13913-002			·DRAIN LINE, FUEL, RH	0119	3711	1
-	145	26931-002			·DRAIN LINE, FUEL, RH	3712	3742	1
	146	26931-003			·DRAIN LINE, FUEL, RH	3743		1
-	147	14071-001		A	·BRACKET, MANIFOLD DRAIN	0002	0118	1
	150	14071-003		A	·BRACKET, MANIFOLD DRAIN	0119		1
	153	AN3-3A		A	·BOLT	0002		1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	156	MS21919WDG4		A	·CLAMP	0002		1
	159	NAS1149F0332P		A	·WASHER	0002		1
	162	MS21045-3		A	·NUT	0002		1
-	165	14071-002		A	·BRACKET, MANIFOLD DRAIN	0002	0118	1
	168	14663-002	@	A	·BRACKET, MANIFOLD DRAIN	0119		1
-	171	AN3-3A		A	·BOLT	0002		1
-	174	MS21919WDG4		A	·CLAMP	0002		1
-	177	NAS1149F0332P		A	·WASHER	0002		1
-	180	MS21045-3		A	·NUT	0002		1
-	183	13914-001			·DRAIN LINE, FUEL, LH	0002	0118	1
	186	13914-002			·DRAIN LINE, FUEL, LH	0119	3711	1
-	187	26932-002			·DRAIN LINE, FUEL, LH	3712	3742	1
	188	26932-003			·DRAIN LINE, FUEL, LH	3743		1
-	189	14071-001		A	·BRACKET, MANIFOLD DRAIN	0002	0118	1
	192	14071-003		A	·BRACKET, MANIFOLD DRAIN	0119		1
	195	AN3-3A		A	·BOLT	0002		1
	198	MS21919WDG4		A	·CLAMP	0002		1
	201	NAS1149F0332P		A	·WASHER	0002		1
	204	MS21045-3		A	·NUT	0002		1
	207	14663-001	@	A	·BRACKET, MANIFOLD DRAIN	0002		1
	210	AN3-3A		A	·BOLT	0002		1
	213	MS21919WDG4		A	·CLAMP	0002		1
	216	NAS1149F0332P		A	·WASHER	0002		1
	219	MS21045-3		A	·NUT	0002		1
	222	AN824-4D			·TEE - FLARE TUBE	0002		1
	225	14664-001			·DRAIN TUBE ASSY, 90 DEG.	0002		1
-	228	50371-001			·CHECK VALVE	0002	0118	1
					ALTERNATE FOR P/N 14473-001			
	231	14473-001			·CHECK VALVE	0119		1
					ALTERNATE FOR P/N 50371-001			
	234	13769-104			·DRAIN HOSE, CYLINDER	0002	0820	1
	237	20359-104			·DRAIN HOSE, CYLINDER, W/O PERSPECTIVE	0821		1
	238	19871-102			·DRAIN HOSE, CYLINDER, W/ PERSPECTIVE	3026	3711	1
	239	19871-402			·DRAIN HOSE, CYLINDER, W/ PERSPECTIVE	3712		1
-	240	50743-401		A	·BREEZE CLAMP	0002		2
					ALTERNATE FOR P/N 50152-209			
	243	50152-209		A	·CLAMP	0002		2
					ALTERNATE FOR P/N 50743-401			
	246	MS21919WDG18		A	·CLAMP	0002		1
	249	MS21919WDG10		A	·CLAMP	0002		1
	252	MS27039-1-09		A	·SCREW	0002	0549	1
					ALTERNATE FOR P/N AN3-5A			
-	255	AN3-5A			·BOLT	0550		1
					ALTERNATE FOR P/N MS27039-1-09			
	258	NAS1149F0332P		A	·WASHER, W/O PERSPECTIVE	0002		1
	259	NAS1149F0363P		A	·WASHER, W/ PERSPECTIVE	3026		1
	261	MS21045-3		A	·NUT	0002		1
	264	50404-750			·OIL BREATHER HOSE	0002	0820	1
					BEFORE SB2X-71-01			
	267	70077-101			·OIL BREATHER HOSE	0002	0820	1
					AFTER SB2X-71-01			
	270	50404-750			·OIL BREATHER HOSE	0821		1
	273	50743-601		A	·CLAMP	0002	0820	2
					BEFORE SB2X-71-01			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	276	50743-101		A	·CLAMP	0002	0820	2
					AFTER SB2X-71-01			
	279	50743-601		A	·CLAMP	0821		2
	282	MS35489-23		A	·GROMMET	0002	0820	1
					BEFORE SB2X-71-01			
	285	MS35489-23		A	·GROMMET	0002	0820	1
					AFTER SB2X-71-01			
	288	MS35489-23		A	·GROMMET	0821		1
	291	MS21919WDG18		A	·CLAMP	0002	0820	3
					AFTER SB2X-71-01			
	294	MS21919WDF32		A	·CLAMP	0002	0820	1
					AFTER SB2X-71-01			
	297	AN3-6A		A	·BOLT	0002	0820	2
					AFTER SB2X-71-01			
	300	MS24693S278		A	·SCREW	0002	0820	1
					AFTER SB2X-71-01			
	303	NAS1149FN316P		A	·WASHER	0002	0820	5
					AFTER SB2X-71-01			
	306	MS21044N3		A	·NUT	0002	0820	3
					AFTER SB2X-71-01			
	309	NAS1169-10		A	·COUNTERSUNK WASHER	0002	0820	1
					AFTER SB2X-71-01			
	312	70077-102			·PATCH	0002	0820	1
					AFTER SB2X-71-01			
	315	NAS9301B3-3		A	·RIVET	0002	0820	4
					AFTER SB2X-71-01			
-	318	50152-001		A	·CLAMP	0002		1
	321	50209-001			·DRAIN TUBE, ACID RESISTANT	0002	3315	AR
-	324	13457-102			·SHOULDER WASHER	0002	3025	1
					ALTERNATE FOR P/N 51050-100			
	327	51050-100			·SNAP BUSHING	0002	3025	1
					ALTERNATE FOR P/N 13457-102			
-	330	70205-001	!		5 YEAR KIT, FLEXIBLE OIL SYSTEM LINES, SR22	0002	0820	1
-	333	70205-002	%		5 YEAR KIT, FLEXIBLE OIL SYSTEM LINES, SR22	0821		1
-	337	NO PRT NUMBER			SR22T ENGINE DRAIN SYSTEM	/ 0001	/	NP
	341	26935-103			·DRAIN HOSE, AUX. PUMP, UPPER	/ 0001	/	1
-	345	50743-401		A	·BREEZE CLAMP	/ 0001	/	2
					ALTERNATE FOR P/N 50152-209			
	348	50152-209		A	·CLAMP	/ 0001	/	2
					ALTERNATE FOR P/N 50743-401			
	351	AN3-3A			·BOLT	/ 0001	/	1
	354	MS21919WDG4		A	·CLAMP	/ 0001	/	1
	357	MS21919WDG10		A	·CLAMP	/ 0001	/	1
	360	NAS1149F0332P		A	·WASHER	/ 0001	/	1
	363	MS21045-3		A	·NUT	/ 0001	/	1
	366	26933-001			·TUBE ASSY, GASCOLATOR DRAIN	/ 0001	/	1
	369	NAS1149F1216P		A	·WASHER	/ 0001	/	2
	372	AN924-8D		A	·NUT	/ 0001	/	1
	375	50242-001		A	·DRAIN VALVE, GASCOLATOR	/ 0001	/	1
	378	26935-106			·DRAIN HOSE, FUEL MANIFOLD	/ 0001	/	1
	381	AN842-4		A	·ELBOW, HOSE	/ 0001	/	1
-	384	50743-401		A	·BREEZE CLAMP	/ 0001	/	1
					ALTERNATE FOR P/N 50152-209			
	387	50152-209		A	·CLAMP	/ 0001	/	1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						ALTERNATE FOR P/N 50743-401			
	390	MS35489-17		A		·GROMMET	/ 0001	/	1
	393	MS21919WDG18		A		·CLAMP	/ 0001	/	1
	396	MS21919WDG10		A		·CLAMP	/ 0001	/	1
	399	AN3-6A				·BOLT	/ 0001	/	1
	500	NAS1149F0363P		A		·WASHER	/ 0001	/	1
	503	MS21045-3		A		·NUT	/ 0001	/	1
-	506	50743-401		A		·BREEZE CLAMP	/ 0001	/	1
						ALTERNATE FOR P/N 50152-209			
	509	50152-209		A		·CLAMP	/ 0001	/	1
						ALTERNATE FOR P/N 50743-401			
-	512	50943-063				·LOOM	/ 0001	/	1
	515	50372-001				·BRASS UNION TEE	/ 0001	/	1
	518	26935-101				·DRAIN HOSE, FUEL PUMP	/ 0001	/	1
-	521	AN840-4		A		·HOSE, NIPPLE	/ 0001	/	1
-	524	50743-401		A		·BREEZE CLAMP	/ 0001	/	2
						ALTERNATE FOR P/N 50152-209			
	527	50152-209		A		·CLAMP	/ 0001	/	2
						ALTERNATE FOR P/N 50743-401			
	530	26935-105				·DRAIN HOSE, COMMON	/ 0001	/	1
-	533	50743-401		A		·BREEZE CLAMP	/ 0001	/	2
						ALTERNATE FOR P/N 50152-209			
	536	50152-209		A		·CLAMP	/ 0001	/	2
						ALTERNATE FOR P/N 50743-401			
	539	50372-001		A		·BRASS UNION TEE	/ 0001	/	1
	540	20647-001				·DRAIN HOSE, WASTEGATE	/ 0001	/	1
	541	50152-004		A		·CLAMP	/ 0001	/	2
						ALTERNATE FOR P/N 50152-209			
-	542	50152-209		A		·CLAMP	/ 0001	/	2
						ALTERNATE FOR P/N 50152-004			
	543	26935-104				·DRAIN HOSE, AUX. PUMP, LOWER	/ 0001	/	1
-	545	50743-401		A		·BREEZE CLAMP	/ 0001	/	2
						ALTERNATE FOR P/N 50152-209			
	548	50152-209		A		·CLAMP	/ 0001	/	2
						ALTERNATE FOR P/N 50743-401			
	551	26939-003				·DRAIN MANIFOLD	/ 0001	/ 0213	1
	552	26939-004				·DRAIN MANIFOLD	0214		1
	554	AN3-3A		A		·BOLT	/ 0001	/	1
	557	NAS1149F0332P		A		·WASHER	/ 0001	/	1
	559	26931-001				·DRAIN LINE, FUEL, RH	/ 0001	/ 0120	1
	560	26931-003				·DRAIN LINE, FUEL, RH	/ 0121	/	1
	563	14071-003		A		·BRACKET, MANIFOLD DRAIN	/ 0001	/	1
	566	AN3-3A		A		·BOLT	/ 0001	/	1
	569	MS21919WDG4		A		·CLAMP	/ 0001	/	1
	572	NAS1149F0332P		A		·WASHER	/ 0001	/	1
	575	MS21045-3		A		·NUT	/ 0001	/	1
	578	14071-003		A		·BRACKET, MANIFOLD DRAIN	/ 0001	/ 0120	1
	579	14663-002		A		·BRACKET, MANIFOLD DRAIN	/ 0121	/	1
	581	AN3-3A		A		·BOLT	/ 0001	/	1
	584	MS21919WDG4		A		·CLAMP	/ 0001	/	1
	587	NAS1149F0332P		A		·WASHER	/ 0001	/	1
	590	MS21045-3		A		·NUT	/ 0001	/	1
	592	26932-001				·DRAIN LINE, FUEL, LH	/ 0001	/ 0120	1
	593	26932-003				·DRAIN LINE, FUEL, LH	/ 0121	/	1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	596	14071-003		A	·BRACKET, MANIFOLD DRAIN	/ 0001	/	1
	599	AN3-3A		A	·BOLT	/ 0001	/	1
	602	MS21919WDG4		A	·CLAMP	/ 0001	/	1
	605	NAS1149F0332P		A	·WASHER	/ 0001	/	1
	608	MS21045-3		A	·NUT	/ 0001	/	1
	611	14071-003		A	·BRACKET, MANIFOLD DRAIN	/ 0001	/ 0120	1
	612	14663-001		A	·BRACKET, MANIFOLD DRAIN	/ 0121	/	1
	614	AN3-3A		A	·BOLT	/ 0001	/	1
	617	MS21919WDG4		A	·CLAMP	/ 0001	/	1
	620	NAS1149F0332P		A	·WASHER	/ 0001	/	1
	623	MS21045-3		A	·NUT	/ 0001	/	1
	626	AN824-4D			·TEE - FLARE TUBE	/ 0001	/	1
-	629	AN912-1			·BUSHING	/ 0001	/	1
	632	26951-001			·DRAIN TUBE ASSY	/ 0001	/	1
	635	AN807-4D			·ADAPTER	/ 0001	/	1
					ALTERNATE FOR P/N AS5180D04	/ 0001	/	1
-	636	AS5180D04			·ADAPTER	/ 0001	/	1
					ALTERNATE FOR P/N AN807-4D	/ 0001	/	1
	638	26358-108			·CHECK VALVE	/ 0001	/	1
	641	AN840-4D			·ADAPTER	/ 0001	/	1
	644	NAS1149D0963K		A	·WASHER	/ 0001	/	1
	647	AN924-6D		A	·NUT	/ 0001	/	1
	650	26935-102			·DRAIN HOSE, CYLINDER	/ 0001	/	1
-	653	50743-401		A	·BREEZE CLAMP	/ 0001	/	2
					ALTERNATE FOR P/N 50152-209			
	656	50152-209		A	·CLAMP	/ 0001	/	2
					ALTERNATE FOR P/N 50743-401			
-	659	50404-100			·HOSE, OIL SEPARATOR TO DRAIN MANIFOLD	/ 0001	/ 0213	1
					BEFORE SB2X-71-19			
-	662	NO PART NUMBER			·HOSE ASSY, OIL SEPARATOR TO DRAIN MANIFOLD	/ 0001	/ 0213	1
					AFTER SB2X-71-19			
	665	50404-100	^		··HOSE, ADAPTER TO DRAIN MANIFOLD	/ 0001	/ 0213	1
	668	50743-601			··CLAMP	/ 0001	/ 0213	1
	671	29523-001			··ADAPTER	/ 0001	/ 0213	1
	674	70259-103			··HOSE, OIL SEPARATOR TO ADAPTER	/ 0001	/ 0213	1
	677	50743-501			··CLAMP	/ 0001	/ 0213	1
	680	29523-001			·HOSE, OIL SEPARATOR TO DRAIN MANIFOLD	0214		1
	683	50743-601		A	·CLAMP, BEFORE SB2X-71-19	/ 0001	/ 0213	2
					AFTER SB2X-71-19	/ 0001	/ 0213	1
	686	50743-501		A	·CLAMP	0214		2
					AFTER SB2X-71-19	/ 0001	/ 0213	1
	689	MS35489-23		A	·GROMMET	/ 0001	/	1
	692	50404-750			·HOSE, ENGINE TO OIL SEPARATOR	/ 0001	/	1
	695	50743-601		A	·CLAMP	/ 0001	/	2
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 28-20-03			GASCOLATOR			
	401	RF 28-20-03			ELECTRIC FUEL PUMP			
	402	RF 79-20-01			OIL SEPARATOR			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
					1) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22T-0199, 22T-0200, 22T-0202, 22T-0204 THRU 22T-0212; REFER TO 22T-0214 FOR PART IDENTIFICATION.			
			@		AIRCRAFT W/ 6-POINT MOUNT: INSTALL LISTED RH BRACKET ON LH SIDE. INSTALL LISTED LH BRACKET ON RH SIDE.			
			!		CONSUMES ITEMS 264, 267			
			%		CONSUMES ITEM 270			
			^		3-INCH LENGTH			

EFFECTIVITY:
All

CHAPTER 73

ENGINE FUEL SYSTEMS

Intentionally Left Blank

CHAPTER 73 - ENGINE FUELSYSTEMS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
73-LOEP	1	15 DEC 2014
73-LOEP	2	15 DEC 2014
73-TOC	1	15 DEC 2014
73-TOC	2	15 DEC 2014
73-30-01	1	15 DEC 2014
73-30-01	2	15 DEC 2014

Intentionally Left Blank

CHAPTER 73 - ENGINE FUELSYSTEMS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Fuel Flow Sensor	73-30-01

Intentionally Left Blank

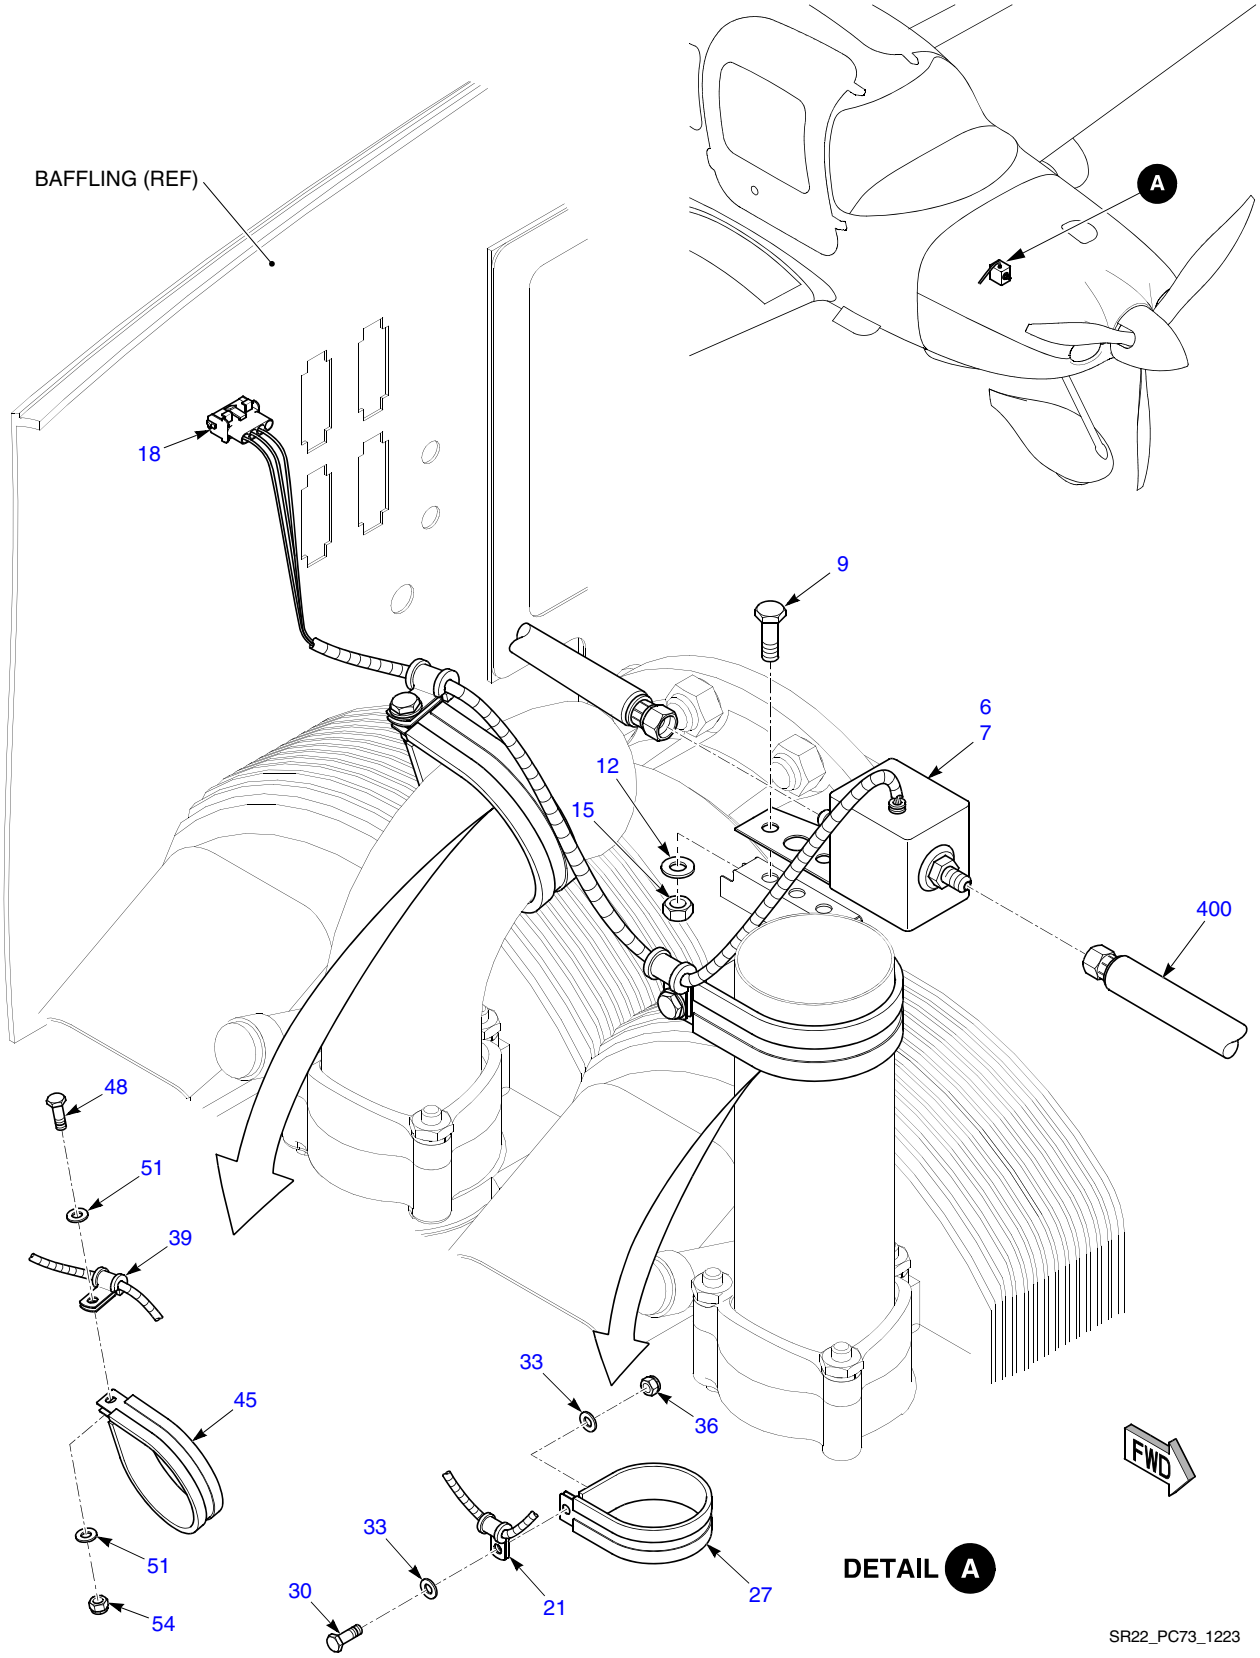

Figure-01
Fuel Flow Sensor

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			FUEL FLOW SENSOR	0002 / 0001	/	NP
-	3	13916-001			·FUEL FLOW SENSOR ASSEMBLY	0002	0549	1
					FOR SPARES USE P/N 15415-001			
	6	15415-001			·FUEL FLOW SENSOR ASSEMBLY	0550		1
	7	26370-002			·FUEL FLOW SENSOR ASSEMBLY	/ 0001	/	1
	9	AN3-3A		A	·BOLT	0002 / 0001	/	2
	12	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	15	MS21045-3		A	·NUT	0002 / 0001	/	2
	18	50162-001			·CONNECTOR	0002 / 0001	/	1
	21	MS21919WG6		A	·CLAMP	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21919WDG6			
-	24	MS21919WDG6		A	·CLAMP	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21919WG6			
	27	MS21919WDF32		A	·CLAMP	0002 / 0001	/	1
	30	AN3-4A		A	·BOLT	0002 / 0001	/	1
	33	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	36	MS21045-3		A	·NUT	0002 / 0001	/	1
	39	MS21919WG6		A	·CLAMP	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21919WDG6			
-	42	MS21919WDG6		A	·CLAMP	0002 / 0001	/	1
					ALTERNATE FOR P/N MS21919WG6			
	45	MS21919WDF32		A	·CLAMP	0002 / 0001	/	1
	48	AN3-4A		A	·BOLT	0002 / 0001	/	1
	51	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	54	MS21045-3		A	·NUT	0002 / 0001	/	1
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 28-20-03 DET			FUEL SYSTEM - DISTRIBUTION, FIREWALL FORWARD			

EFFECTIVITY:
All

CHAPTER 74

IGNITION

Intentionally Left Blank

CHAPTER 74 - IGNITION

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
74-LOEP	1	15 DEC 2014
74-LOEP	2	15 DEC 2014
74-TOC	1	15 DEC 2014
74-TOC	2	15 DEC 2014
74-10-01	1	15 DEC 2014
74-10-01	2	15 DEC 2014
74-10-01	3	15 DEC 2014
74-10-01	4	15 DEC 2014
74-30-01	1	15 DEC 2014
74-30-01	2	15 DEC 2014
74-30-01	3	15 DEC 2014
74-30-01	4	15 DEC 2014

Intentionally Left Blank

CHAPTER 74 - IGNITION

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Magneto Installation - Serials 22-0002 & subs (1 of 2)	74-10-01
Magneto Installation - Serials 22T-0001 & subs (2 of 2)	74-10-01
Ignition Switch - Serials 22-0002 thru 22-0434 (1 of 2)	74-30-01
Ignition Switch - Serials 22-0435 & subs, 22T-0001 & subs (2 of 2)	74-30-01

Intentionally Left Blank

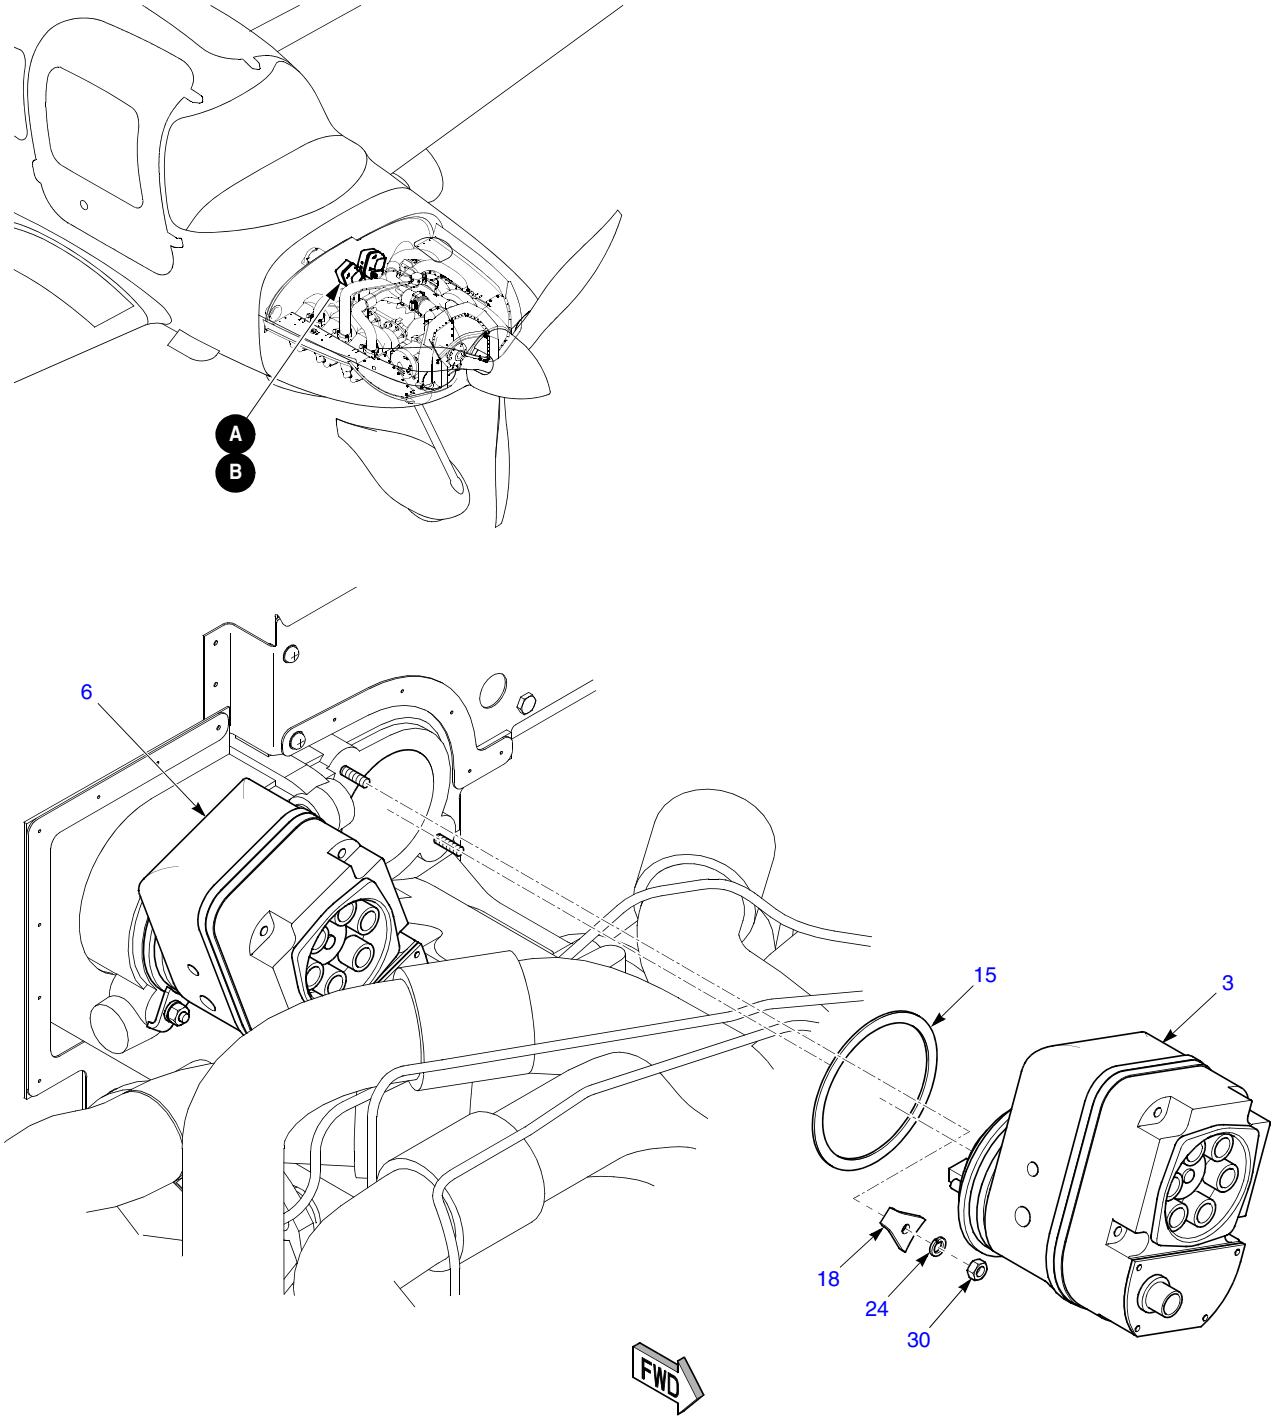

Figure-01
Magneto Installation - Serials 22-0002 & subs (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs

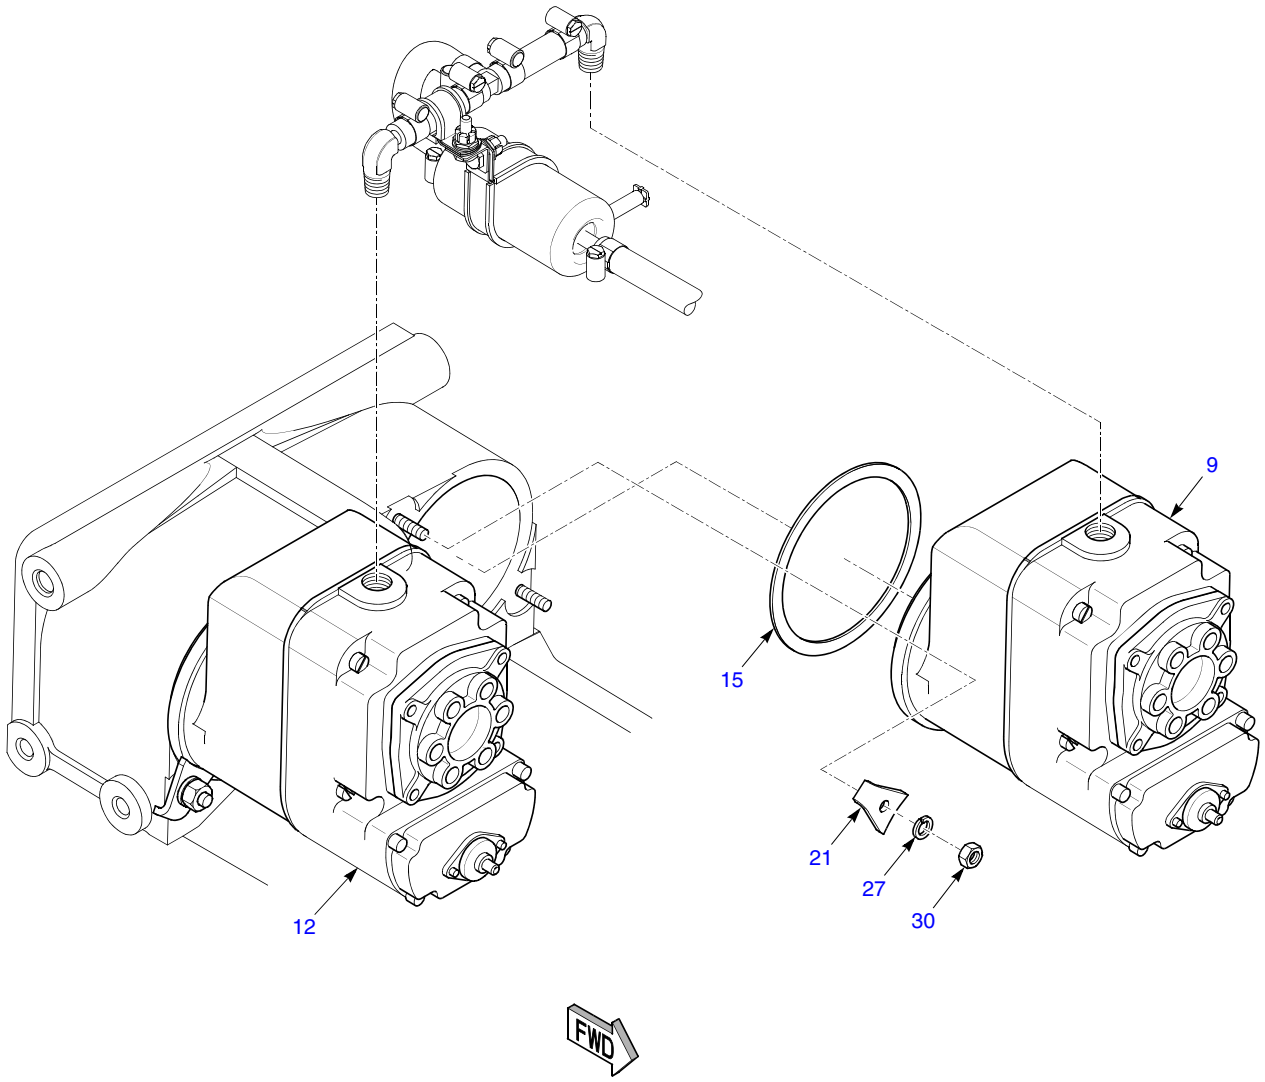

DETAIL B

SR22_PC74_2117

Figure-01
Magneto Installation - Serials 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			MAGNETO INSTALLATION	0002 / 0001	/	NP
	3	10-500556-1			·MAGNETO, LH	0002		1
	6	10-500556-1			·MAGNETO, RH	0002		1
	9	10-500556-101			·MAGNETO, LH	/ 0001	/	1
	12	10-500556-101			·MAGNETO, RH	/ 0001	/	1
	15	649954			·GASKET	0002 / 0001	/	1
	18	535847-1		A	·HOLDING WASHER	0002		2
	21	535847		A	·HOLDING WASHER	/ 0001	/	2
	24	MS35338-140		A	·LOCK WASHER	0002		2
	27	MS35338-45		A	·LOCK WASHER	/ 0001	/	2
	30	AN315-5R		A	·NUT	0002 / 0001	/	2

Intentionally Left Blank

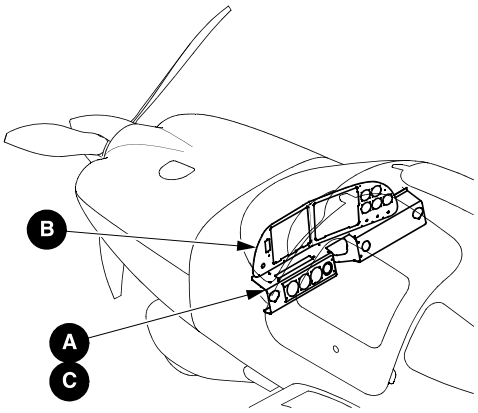

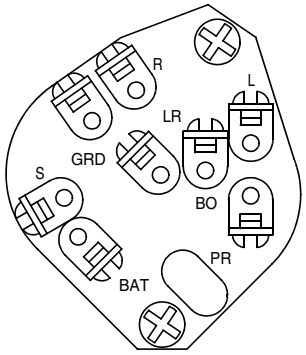

GREEN BASE

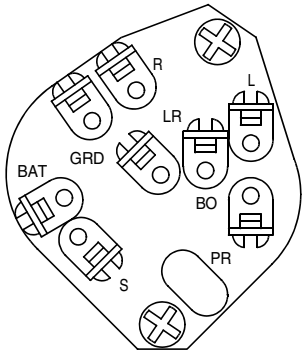

WHITE BASE

IGNITION SWITCH TERMINALS

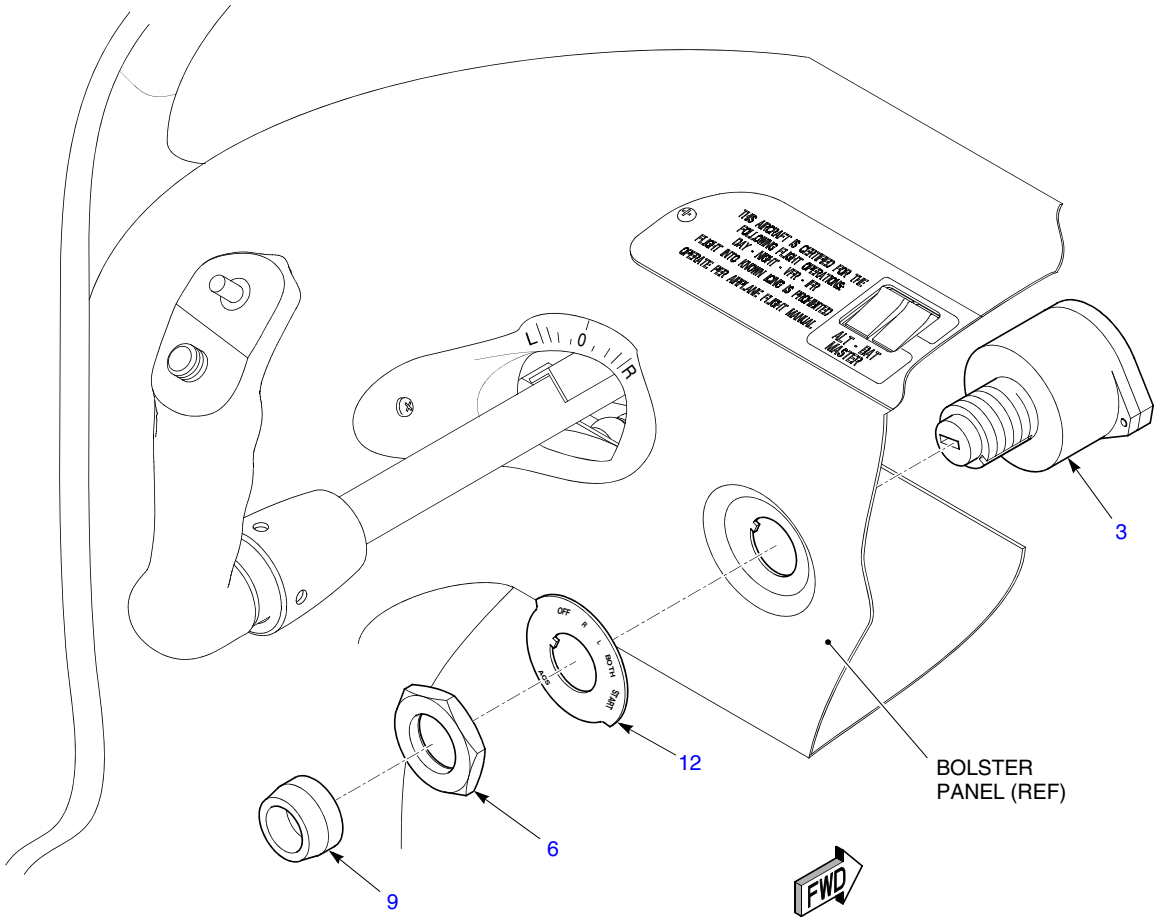

DETAIL A

Serials 22-0002 thru 22-0434.

SR22_PC74_1224A

Figure-01
Ignition Switch - Serials 22-0002 thru 22-0434 (1 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-0434

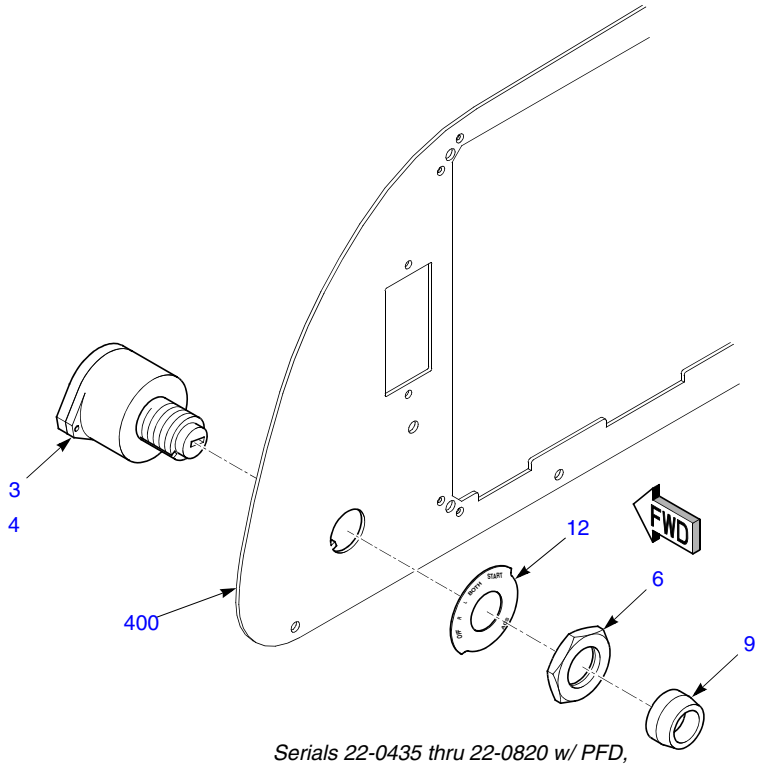

Serials 22-0435 thru 22-0820 w/ PFD, 22-0821 & subs, 22T-0001 & subs.

DETAIL B

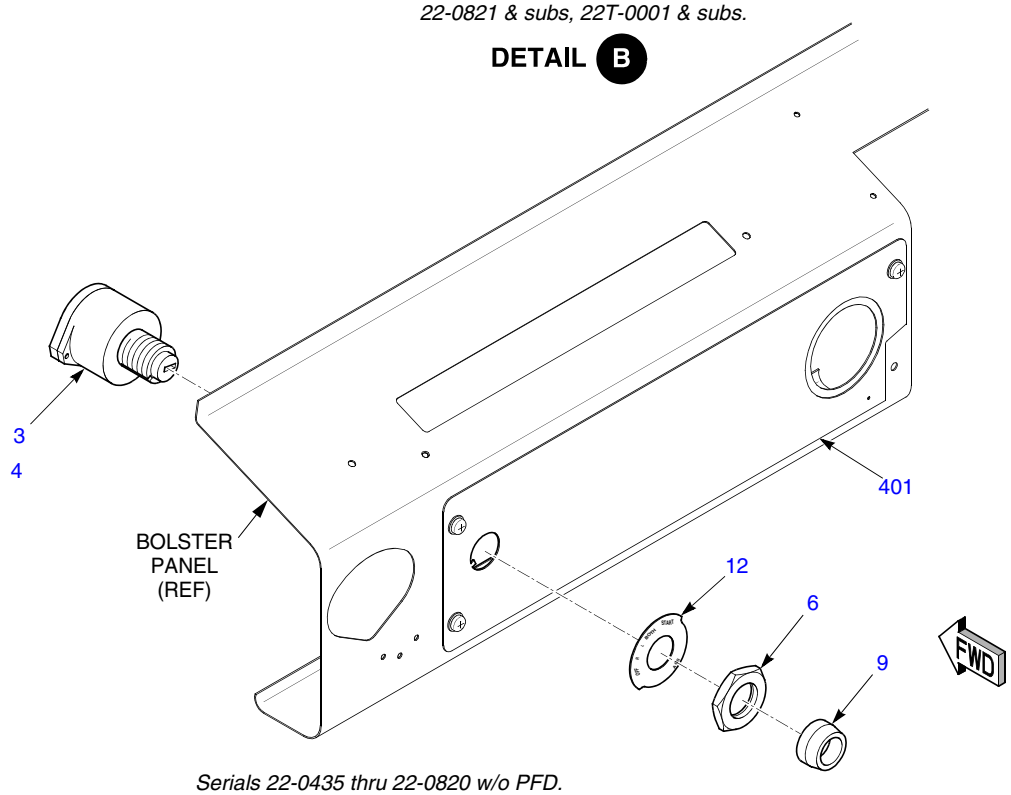

Serials 22-0435 thru 22-0820 w/o PFD.

DETAIL C

SR22_PC74_1282

Figure-01

Ignition Switch - Serials 22-0435 & subs, 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22-0435 & subs, 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			IGNITION SWITCH INSTALLATION	0002 / 0001	/	NP
	3	50314-001			·IGNITION SWITCH	0002	3023	1
	4	19537-001			·IGNITION SWITCH	3024 / 0001	/	1
	6	PRT OF ITM 3&4		A	·NUT	0002 / 0001	/	1
	9	PRT OF ITM 3&4		A	·FINISHING COLLAR	0002 / 0001	/	1
	12	PRT OF ITM 3&4			·PLACARD PLATE	0002 / 0001	/	1
-	15	A-3600			·TERMINAL BOARD ASSEMBLY	0002 / 0001	/	1
-	18	A-546-A			··TERMINAL BOARD	0002 / 0001	/	1
-	21	A-1196A			··CUP	0002 / 0001	/	3
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 31-10-01 DET			INSTRUMENT PANEL			
	401	RF 31-10-01 DET			BOLSTER PLATE			

Intentionally Left Blank

CHAPTER 76

ENGINE CONTROLS

Intentionally Left Blank

CHAPTER 76 - ENGINE CONTROLS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
76-LOEP	1	15 DEC 2014
76-LOEP	2	15 DEC 2014
76-TOC	1	15 DEC 2014
76-TOC	2	15 DEC 2014
76-10-01	1	15 DEC 2014
76-10-01	2	15 DEC 2014
76-10-01	3	15 DEC 2014
76-10-01	4	15 DEC 2014
76-10-01	5	15 DEC 2014
76-10-01	6	15 DEC 2014
76-10-02	1	15 DEC 2014
76-10-02	2	15 DEC 2014
76-10-03	1	15 DEC 2014
76-10-03	2	15 DEC 2014
76-10-03	3	15 DEC 2014
76-10-03	4	15 DEC 2014
76-10-04	1	15 DEC 2014
76-10-04	2	15 DEC 2014

Intentionally Left Blank

CHAPTER 76 - ENGINE CONTROLS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Engine Control Quadrant - Serials 22-0002 & subs w/o Perspective (1 of 3)	76-10-01
Engine Control Quadrant - Serials 22-3026 & subs w/ Perspective (2 of 3)	76-10-01
Engine Control Quadrant - Serials 22T-0001 & subs (3 of 3)	76-10-01
Mixture Control Cable	76-10-02
Throttle Control Cable (1 of 2)	76-10-03
Throttle Control Cable (2 of 2)	76-10-03
Governor Control Cable - Serials w/o TCM Turbo	76-10-04

Intentionally Left Blank

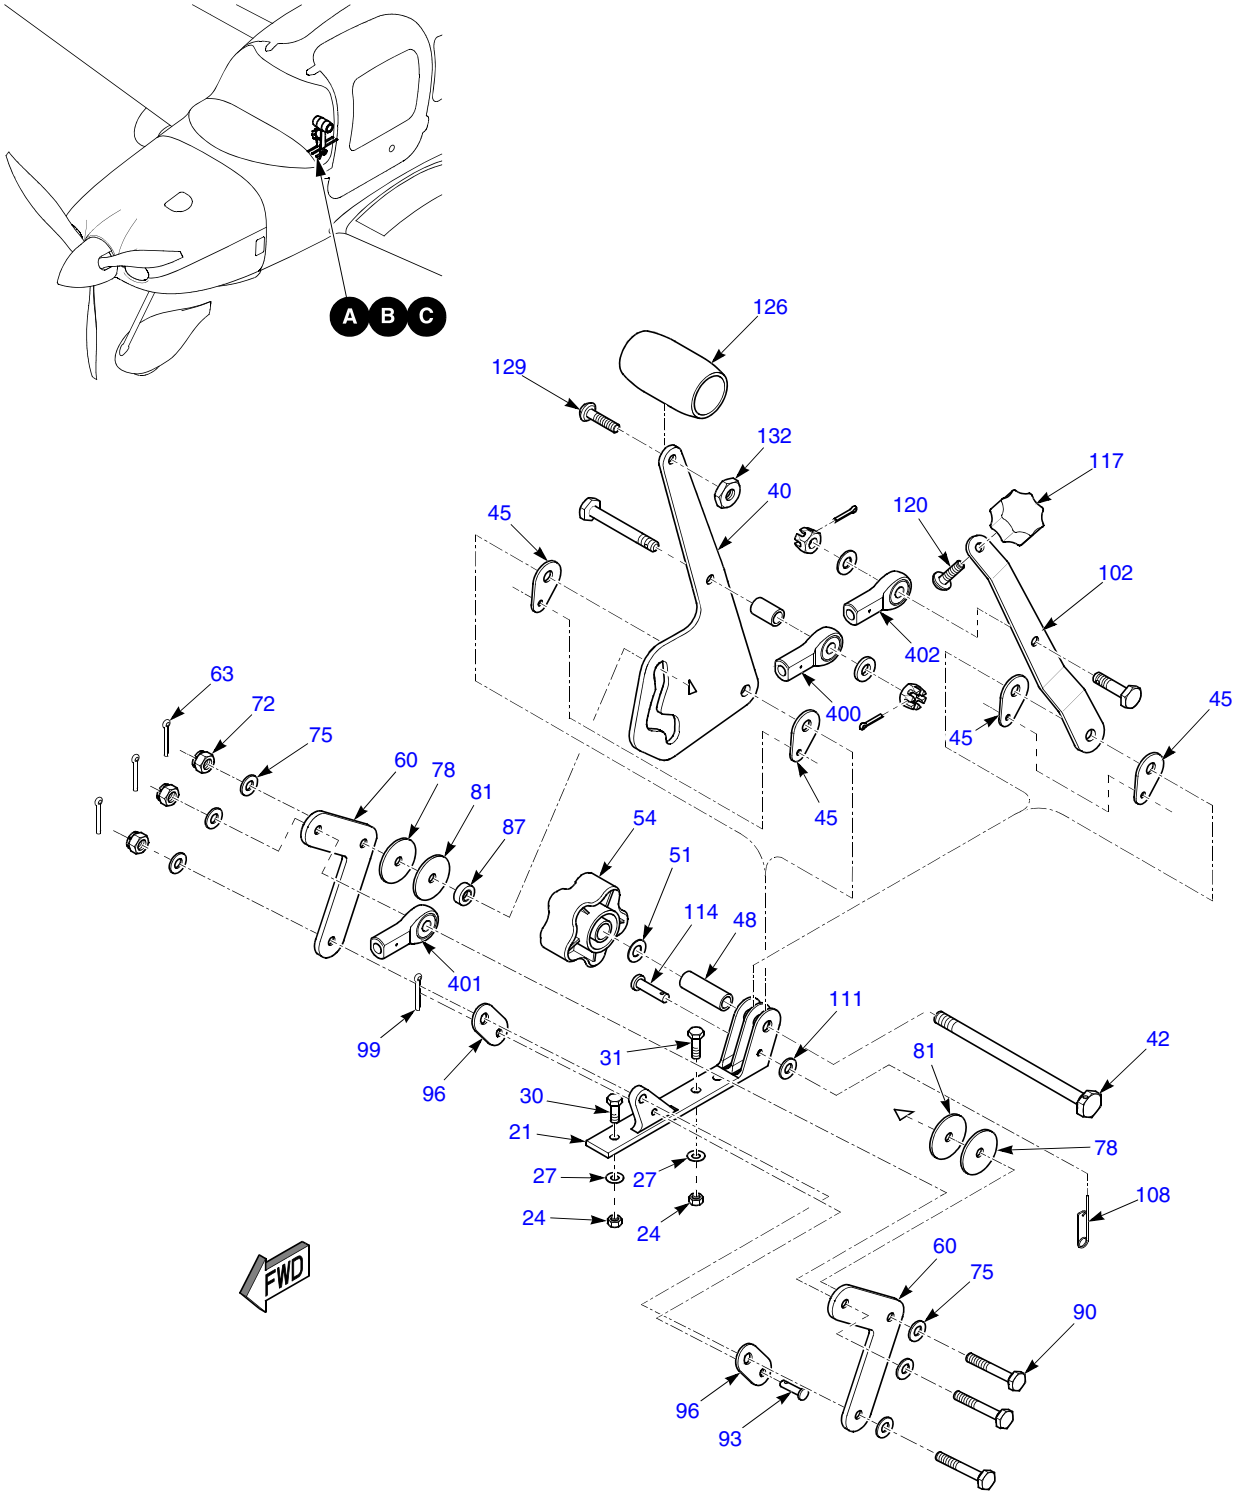

DETAIL A

Serials 22-0002 & subs w/o Perspective Avionics.

SR22_PC76_1230E

Figure-01

Engine Control Quadrant - Serials 22-0002 & subs w/o Perspective (1 of 3)

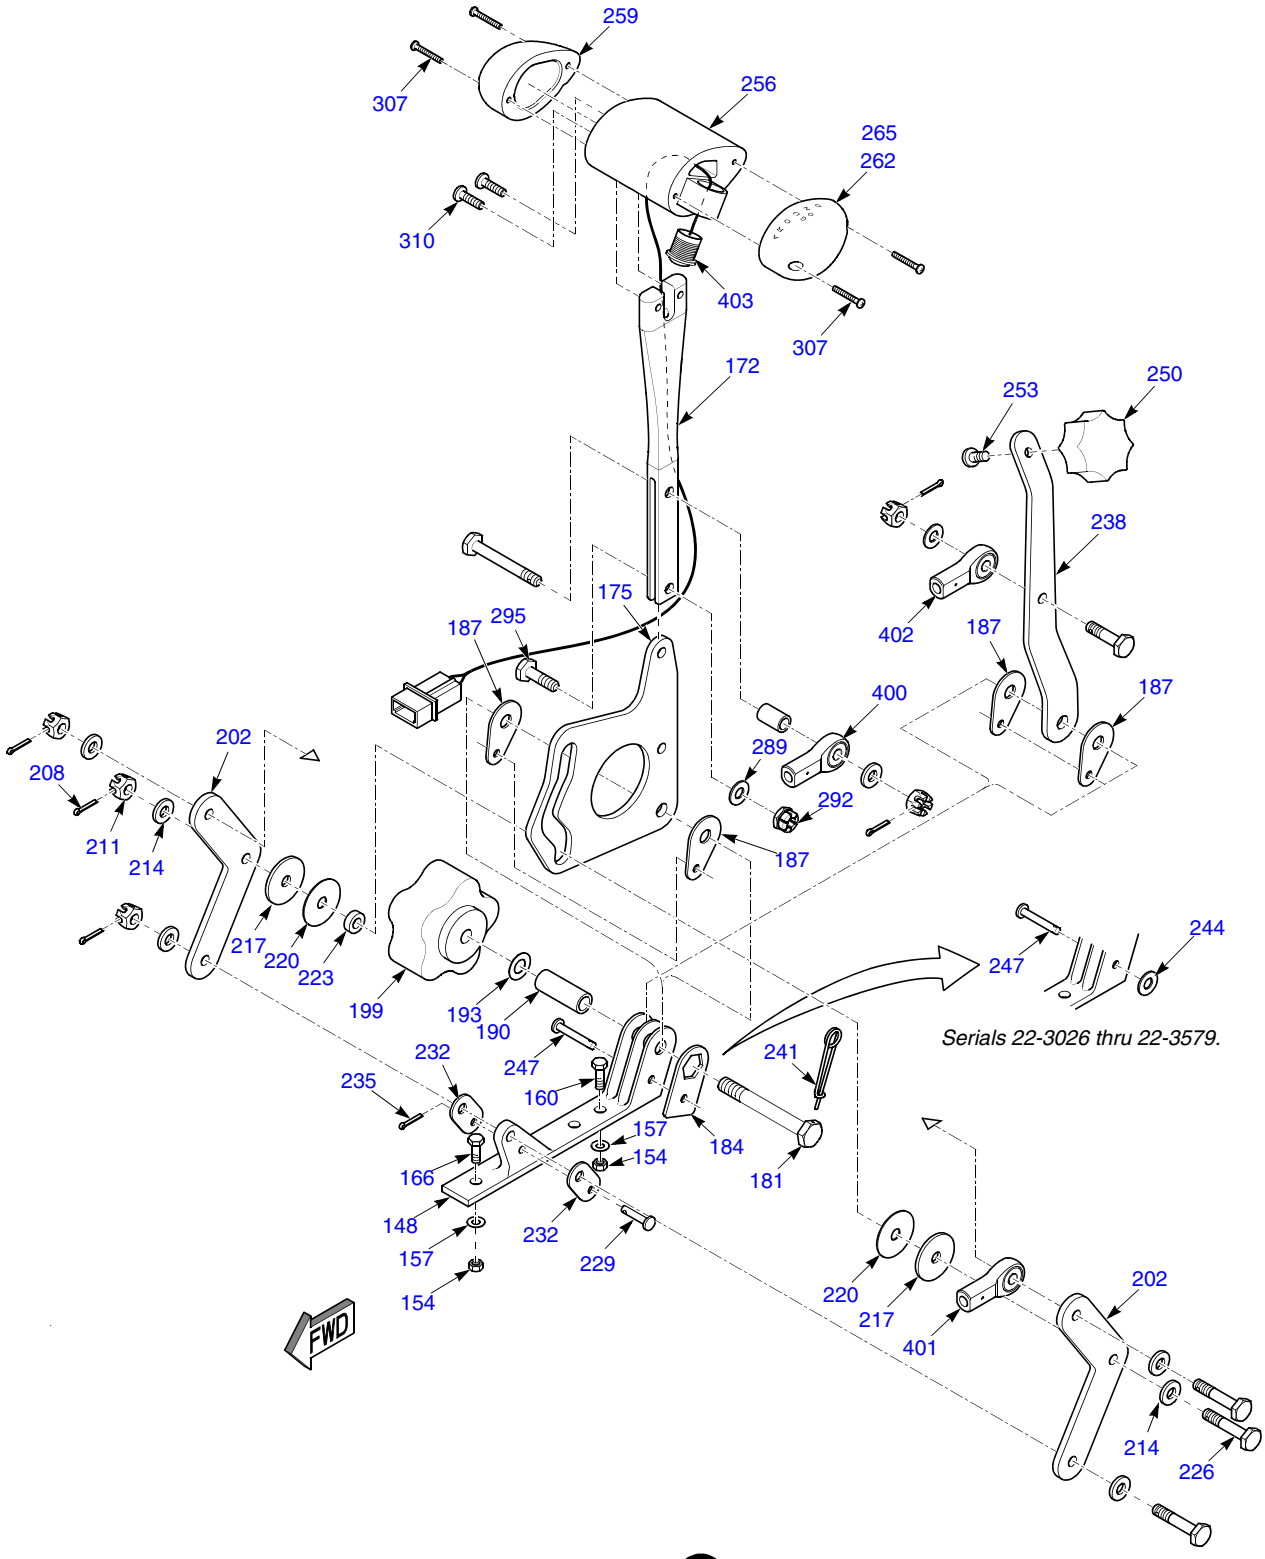

DETAIL B

Serials 22-3026 & subs w/ Perspective Avionics.

SR22_PC76_1746B

Figure-01

Engine Control Quadrant - Serials 22-3026 & subs w/ Perspective (2 of 3)

EFFECTIVITY:
All

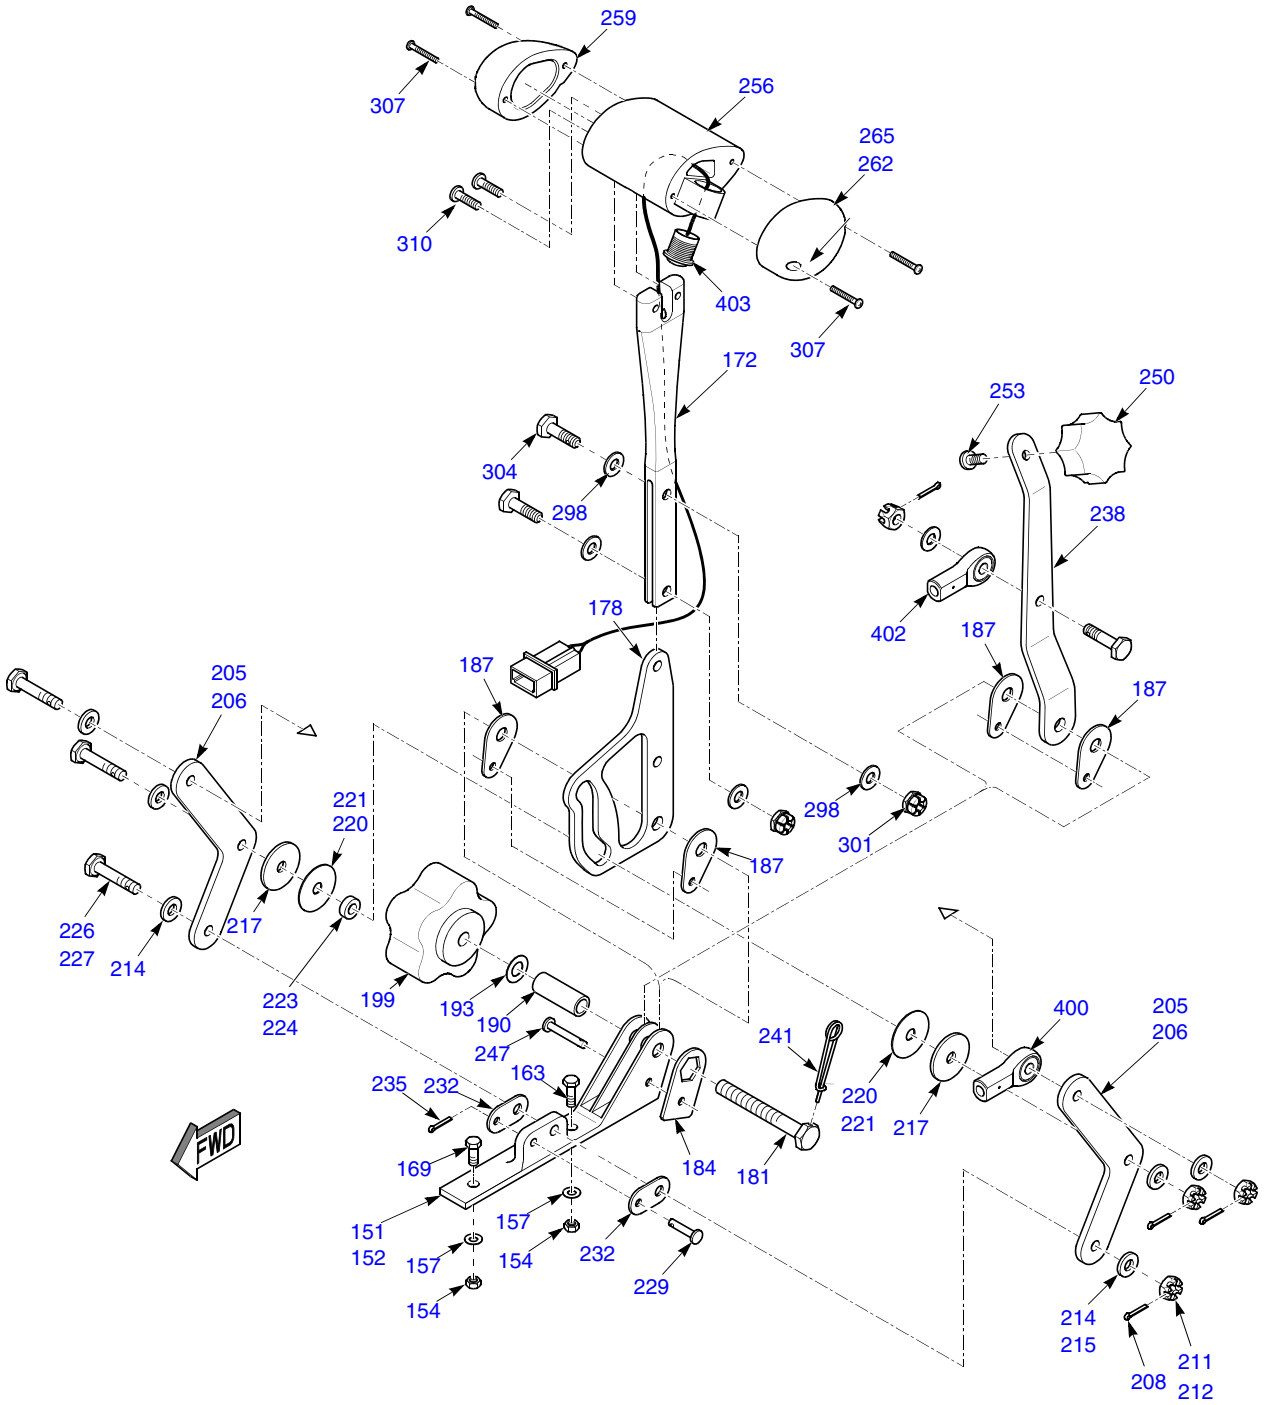

DETAIL C

Serials 22T-0001 & subs.

SR22_PC76_1938A

Figure-01
Engine Control Quadrant - Serials 22T-0001 & subs (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		ENGINE CONTROLS INSTALLATION W/O PERSPECTIVE	0002		NP
-	3	14137-001			·ENGINE CONTROL QUADRANT	0002	0209	1
-	6	14137-002			·ENGINE CONTROL QUADRANT	0210	0743	1
-	9	14137-003			·ENGINE CONTROL QUADRANT	0744	0820	1
-	12	14137-004	@		·ENGINE CONTROL QUADRANT	0656	0743	1
-	15	14137-005	#		·ENGINE CONTROL QUADRANT	0744		1
-	18	10009-003			··MOUNTING BASE	0002	0636	1
						0640	0743	
	21	15589-001			··MOUNTING BASE	0637	0639	1
						0744		
	24	MS21044N3		A	··NUT	0002		3
	27	NAS1149F0332P		A	··WASHER	0002		3
	30	AN3-4A		A	··BOLT	0002	1662	3
						1663		2
	31	AN3-5		A	··BOLT	1663		1
-	33	14063-001			··POWER LEVER	0002	0636	1
						0640	0743	
-	36	15587-001			··POWER LEVER	0637	0639	1
						0744	0820	
-	39	15587-002			··POWER LEVER	0821	1021	1
	40	15587-001			··POWER LEVER	1022		1
					FOR SPARES USE P/N 15587-002			
	42	MS20074-04-20		A	··BOLT	0002		1
	45	10011-001		A	··FRICTION WASHER A	0002		4
	48	10014-001		A	··FRICTION LOCK TUBE	0002		1
	51	NAS1149D0416J		A	··WASHER	0002		1
	54	50598-001		A	··FRICTION LOCK KNOB	0002		1
-	57	10008-001			··CAM FOLLOWER	0002	0636	2
						0640	0743	
	60	15588-001			··CAM FOLLOWER	0637	0639	2
						0744		
	63	MS24665-130		A	··COTTER PIN	0002		3
					BEFORE SB22-76-01			
-	66	MS24665-130		A	··COTTER PIN	0002	0209	2
					AFTER SB22-76-01			
-	69	MS24665-132		A	··COTTER PIN	0002	0209	1
					AFTER SB22-76-01			
	72	MS17825-3		A	··NUT	0002		3
	75	NAS1149F0332P		A	··WASHER	0002		6
	78	AN970-3		A	··WASHER	0002		2
	81	50823-001		A	··TEFLON WASHER	0002		2
-	84	B1-27		A	··BEARING	0002	0209	1
-	85	50597-001			BEFORE SB22-76-01			
	87	14929-001		A	··BUSHING	0002		1
					AFTER SB22-76-01			
	90	AN3-10		A	··BOLT	0002		3
	93	MS20392-1C15		A	··CLEVIS PIN	0002		1
	96	10012-001		A	··FRICTION WASHER B	0002		2
	99	MS24665-130		A	··COTTER PIN	0002		1
	102	10010-002			··MIXTURE LEVER	0002		1
-	105	MS24665-140		A	··COTTER PIN	0002	0209	1
					FOR SPARES USE P/N AN416-1			
	108	AN416-1		A	··COWLING SAFETY PIN	0210		1
	111	NAS1149FN832P		A	··WASHER	0002		1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ····	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	114	MS20392-1C23		A		··CLEVIS PIN	0002		1
	117	11253-002				··MIXTURE LEVER KNOB	0002		1
	120	MS27039-0806		A		··SCREW	0002		1
-	123	11254-002				··POWER LEVER KNOB	0002	0820	1
	126	15778-001				··POWER LEVER KNOB	0656		1
	129	MS35207-264		A		··SCREW	0002		1
	132	AN315-3R		A		··JAM NUT	0002		1
-	133	NO PRT NUMBER				ENGINE CONTROLS INSTALLATION W/ PERSPECTIVE	3026 / 0001	/	NP
-	136	19165-003				·ENGINE CONTROL QUADRANT W/ GO-AROUND	3026		1
-	139	19550-002				·ENGINE CONTROL QUADRANT W/O GO-AROUND	3026		1
-	142	27971-001				·ENGINE CONTROL QUADRANT W/ GO-AROUND	/ 0001	/ 0163	1
						FOR SPARES USE P/N 27971-003			
-	143	27971-003				·ENGINE CONTROL QUADRANT W/ GO-AROUND	/ 0164	/	1
-	145	27971-002				·ENGINE CONTROL QUADRANT W/O GO-AROUND	/ 0001	/ 0163	1
						FOR SPARES USE P/N 27971-004			
-	146	27971-004				·ENGINE CONTROL QUADRANT W/O GO-AROUND	/ 0164	/	1
	148	19169-001				··MOUNTING BASE	3026		1
	151	22029-001				··MOUNTING BASE	/ 0001	/ 0163	1
	152	22029-002				··MOUNTING BASE	/ 0164	/	1
	154	MS21044N3		A		··NUT	3026 / 0001	/	3
	157	NAS1149F0332P		A		··WASHER	3026 / 0001	/	3
	160	AN3-4A		A		··BOLT	3026		2
	163	AN3-4A		A		··BOLT	/ 0001	/	1
	166	AN3-5		A		··BOLT	3026		1
	169	AN3-5A		A		··BOLT	/ 0001	/	1
	172	19181-001				··POWER LEVER UPPER	3026 / 0001	/	1
	175	19179-001				··POWER LEVER LOWER	3026		1
	178	27976-001				··POWER LEVER LOWER	/ 0001	/	1
	181	MS20074-04-20		A		··BOLT	3026 / 0001	/	1
	184	28304-001		A		··ANTI-ROTATION CLIP	3580 / 0001	/	1
	187	10011-001		A		··FRICTION WASHER A	3026 / 0001	/	4
	190	10014-001		A		··FRICTION LOCK TUBE	3026 / 0001	/	1
	193	NAS1149D0416J		A		··WASHER	3026 / 0001	/	1
	199	50598-001		A		··FRICTION LOCK KNOB	3026 / 0001	/	1
	202	15588-001				··CAM FOLLOWER	3026		2
	205	27731-001				··CAM FOLLOWER	/ 0001	/ 0163	2
	206	27731-002				··CAM FOLLOWER	/ 0164	/	2
	208	MS24665-132		A		··COTTER PIN	3026 / 0001	/	3
	211	MS17825-3		A		··NUT	3026 / 0001	/ 0163	3
	212	MS17826-3		A		··NUT	/ 0164	/	3
	214	NAS1149F0363P		A		··WASHER	3026 / 0001	/ 0163	6
							/ 0164	/	3
	215	NAS1149F0332P		A		··WASHER	/ 0164	/	3
	217	AN970-3		A		··WASHER	3026 / 0001	/	2
	220	50823-001		A		··TEFLON WASHER	3026 / 0001	/ 0163	2
	221	23505-001		A		··TEFLON WASHER	/ 0164	/	2
						ALTERNATE FOR P/N 25037-001			
-	222	25037-001		A		··TEFLON WASHER	/ 0164	/	2
						ALTERNATE FOR P/N 23505-001			
	223	14929-001		A		··BUSHING	3026 / 0001	/ 0163	1
						ALTERNATE FOR P/N 14929-002			
	224	14929-002		A		··BUSHING	/ 0164	/	1
						ALTERNATE FOR P/N 14929-001			
	226	AN3-10		A		··BOLT	3026 / 0001	/ 0163	3

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	227	NAS6603D10		A		··BOLT	/ 0164	/	3
	229	MS20392-1C15		A		··CLEVIS PIN	3026 / 0001	/	1
	232	10012-001		A		··FRICTION WASHER B	3026 / 0001	/	2
	235	MS24665-132		A		··COTTER PIN	3026 / 0001	/	1
	238	19184-001				··MIXTURE LEVER	3026 / 0001	/	1
	241	AN416-1		A		··COWLING SAFETY PIN	3026 / 0001	/	1
	244	NAS1149FN832P		A		··WASHER	3026	3579	1
	247	MS20392-1C23		A		··CLEVIS PIN	3026 / 0001	/	1
	250	11253-002				··MIXTURE LEVER KNOB	3026 / 0001	/	1
	253	MS27039-0806		A		··SCREW	3026 / 0001	/	1
	256	17499-002				·KNOB, CENTER	3026 / 0001	/	1
	259	18457-003				·KNOB, RH	3026 / 0001	/	1
	262	21815-002				·KNOB, LH, W/ GO AROUND	3026 / 0001	/	1
	265	18457-003				·KNOB, LH, W/O GO AROUND	3026 / 0001	/	1
	289	NAS1149F0332P				·WASHER	3026		1
	292	MS21083N3				·NUT	3026		1
	295	AN3-5A				·BOLT	3026		1
	298	NAS1149F0332P				·WASHER	/ 0001	/	2
	301	MS21083N3				·NUT	/ 0001	/	2
	304	AN3-5A				·BOLT	/ 0001	/	2
	307	MS35206-208				·SCREW	3026 / 0001	/	4
	310	MS35206-230				·SCREW	3026 / 0001	/	2
						REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 76-10-03 DET				THROTTLE CONTROL CABLE INSTALLATION			
	401	RF 76-10-04 DET				GOVERNOR CONTROL CABLE INSTALLATION			
	402	RF 76-10-02 DET				MIXTURE CONTROL CABLE INSTALLATION			
	403	RF 22-20-01 DET				POWER LEVER-GO AROUND SWITCH INSTALLATION			
						SYMBOL NOTES:			
			**			SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
						SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
						SERIAL NUMBER 22T-0140, 22T-0154, 22T-0159; REFER TO 22T-0164 FOR PART IDENTIFICATION.			
			@			INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT.			
			#			INSTALLED ON CENTENNIAL CONFIGURED AIRCRAFT AND 0821 & SUBS.			

EFFECTIVITY:
All

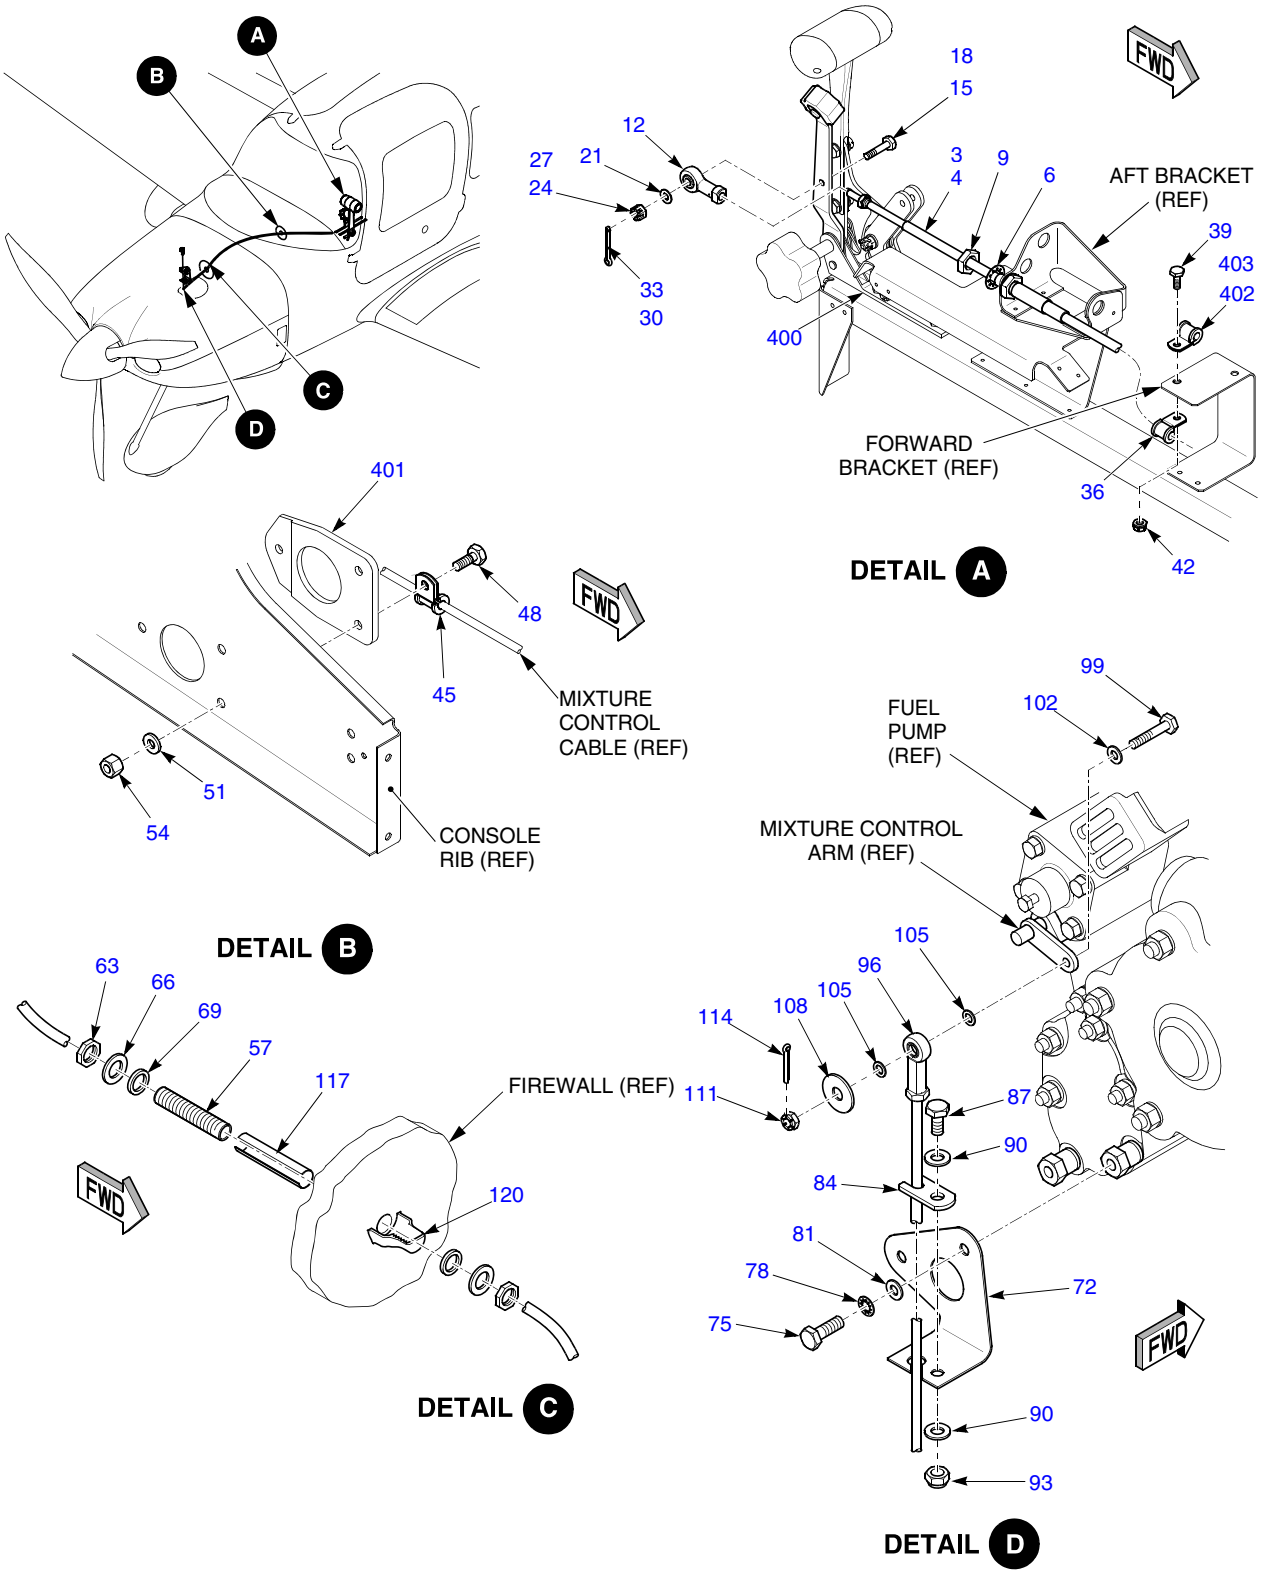

SR22_PC76_1261B

Figure-02
Mixture Control Cable

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			MIXTURE CONTROL CABLE INSTALLATION	0002 / 0001	/	NP
	3	14065-101			·CABLE	0002	3711	1
	4	27050-101			·CABLE	3712 / 0001	/	1
	6	PRT OF ITM 3		A	·WASHER	0002 / 0001	/	2
	9	PRT OF ITM 3		A	·JAM NUT	0002 / 0001	/	2
	12	11314-003			·ROD END	0002 / 0001	/	1
	15	AN3-7		A	·BOLT, W/O PERSPECTIVE	0002		1
	18	AN3-6		A	·BOLT, W/ PERSPECTIVE	3026 / 0001	/	1
	21	NAS1149F0332P		A	·WASHER	0002 / 0001	/	1
	24	AN310-3		A	·NUT, W/O PERSPECTIVE	0002		1
	27	MS17825-3		A	·NUT, W/ PERSPECTIVE	3026 / 0001	/	1
	30	MS24665-132		A	·COTTER PIN, W/O PERSPECTIVE	0002		1
	33	MS24665-130		A	·COTTER PIN, W/ PERSPECTIVE	3026 / 0001	/	1
	36	MS21919WDG4			·ADEL CLAMP	0002 / 0001	/	1
	39	AN3-4A		A	·BOLT	0002 / 0001	/	1
	42	MS21044-N3		A	·NUT	0002 / 0001	/	1
	45	MS21919WDG4			·ADEL CLAMP	0002 / 0001	/	1
	48	AN3-5A		A	·BOLT	0002 / 0001	/	1
	51	NAS1149F0332P		A	·WASHER	0002 / 0001	/	2
	54	MS21044-N3		A	·FIBERLOCK NUT	0002 / 0001	/	1
	57	12645-002			·CABLE PASS THROUGH	0002 / 0001	/	1
					ALTERNATE FOR P/N 12645-001			
-	60	12645-001			·CABLE PASS THROUGH	0002 / 0001	/	1
					ALTERNATE FOR P/N 12645-002			
	63	AN924-6		A	·NUT	0002 / 0001	/	2
	66	NAS1149F0963P		A	·WASHER	0002 / 0001	/	2
	69	12622-001		A	·FIBER WASHER	0002 / 0001	/	2
	72	13878-001			·BRACKET	0002 / 0001	/	1
	75	AN4-3A		A	·BOLT	0002 / 0001	/	2
	78	MS35333-40		A	·WASHER	0002 / 0001	/	2
	81	NAS1149F0463P		A	·WASHER	0002 / 0001	/	2
	84	50223-001			·BRACKET, CLIP MOUNTING	0002 / 0001	/	1
	87	AN4-4A		A	·BOLT	0002 / 0001	/	1
	90	NAS1149F0463P		A	·WASHER	0002 / 0001	/	2
	93	MS21042L4		A	·NUT	0002 / 0001	/	1
	96	11314-003			·ROD END	0002 / 0001	/	1
	99	AN3-10			·BOLT	0002 / 0001	/	1
	102	NAS1149F0332P		A	·WASHER	0002 / 0001	/	1
	105	NAS1149F0363P		A	·WASHER	0002 / 0001	/	2
	108	AN970-3			·WASHER	0002 / 0001	/	1
	111	AN310-3		A	·NUT	0002 / 0001	/	1
	114	MS24665-132		A	·COTTER PIN	0002 / 0001	/	1
	117	50020-125			·FIBERFRAX PAPER 1/8”	0002 / 0001	/	AR
	120	50435-736			·DOW CORNING 736 SILICONE ADHESIVE	0002 / 0001	/	AR
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 76-10-01 DET			ENGINE CONTROL QUADRANT			
	401	RF 27-00-02 DET			FLIGHT CONTROLS INSTALLATION - CONSOLE			
	402	RF 76-10-03 DET			THROTTLE CONTROL CABLE INSTALLATION			
	403	RF 76-10-03 DET			GOVERNOR CONTROL CABLE INSTALLATION			

EFFECTIVITY:
All

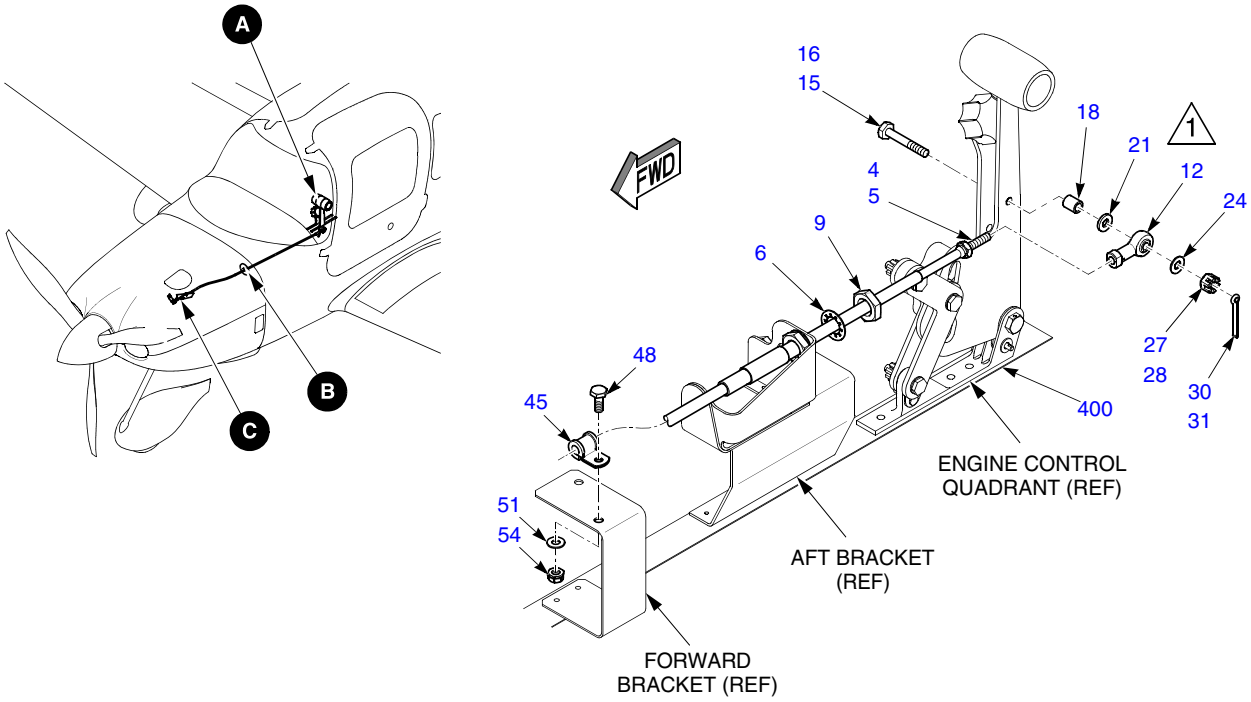

Serials 22-0002 & subs.

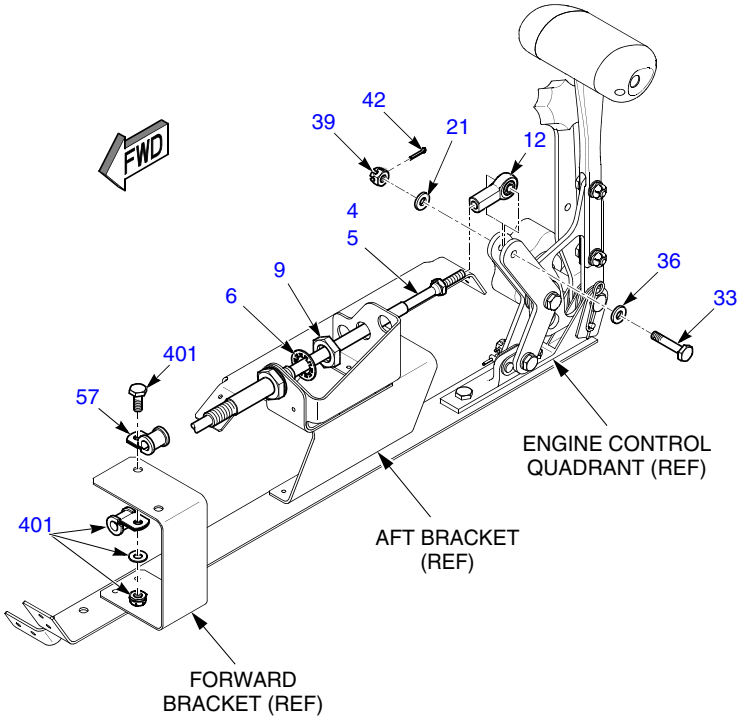

Serials 22T-0001 & subs.

DETAIL A

NOTE

1 *Serials 22-3026 & subs w/ Perspective Avionics:*
Washer is not installed between spacer and rod end.

SR22_PC76_1263A

Figure-03
Throttle Control Cable (1 of 2)

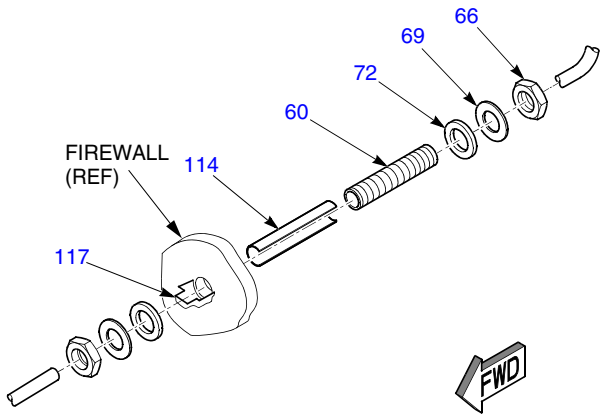

DETAIL B

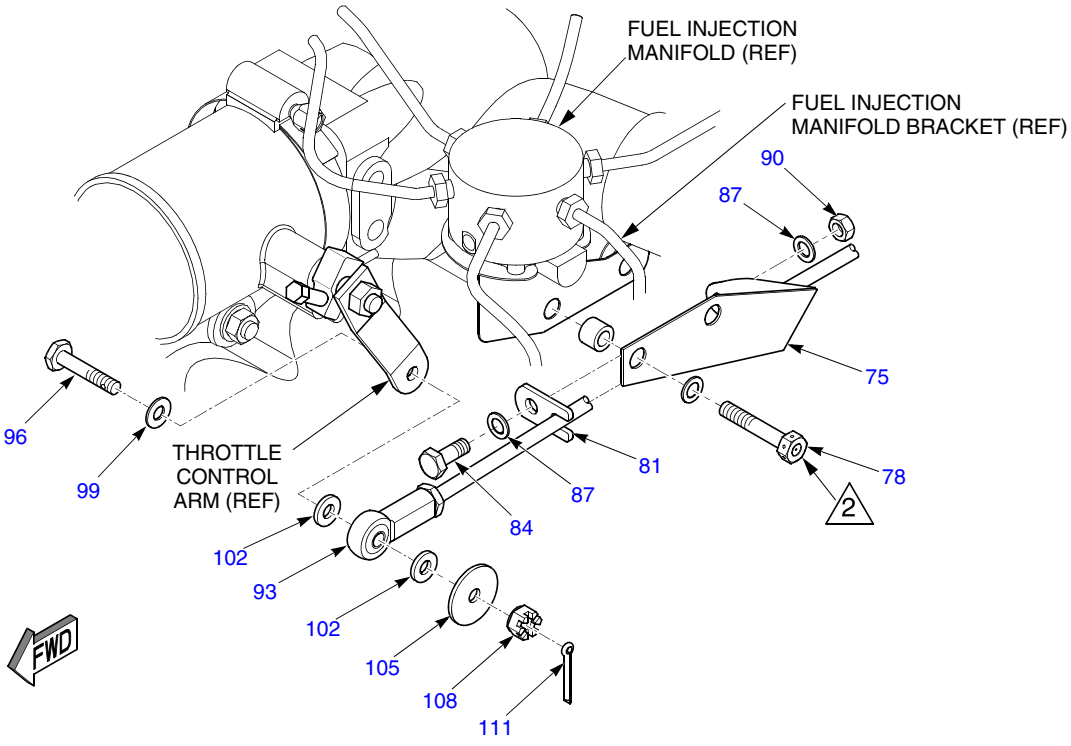

DETAIL C

NOTE

2 Attach bracket to engine using existing engine fasteners.

SR22_PC76_1939

Figure-03
Throttle Control Cable (2 of 2)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			THROTTLE CONTROL CABLE INSTALLATION	0002 / 0001	/	NP
-	3	14064-101			·CABLE	0002	0848	1
					FOR SPARES USE P/N 14064-102			
	4	14064-102			·CABLE	0849 / 0001	3668 / 0001	1
	5	14064-103			·CABLE	3669 / 0002	/	1
	6	PRT OF ITM 3		A	·WASHER	0002 / 0001	/	2
	9	PRT OF ITM 3		A	·JAM NUT	0002 / 0001	/	2
	12	11314-003			·ROD END	0002 / 0001	/	1
	15	AN3-12		A	·BOLT W/O PERSPECTIVE	0002		1
	16	AN3-14		A	·BOLT W/ PERSPECTIVE	3026		1
	18	11639-032		A	·SPACER	0002		1
	21	NAS1149F0363P		A	·WASHER	0002		1
	24	NAS1149F0332P		A	·WASHER W/O PERSPECTIVE	0002		1
	27	AN310-3		A	·NUT W/O PERSPECTIVE	0002		1
	28	MS17825-3		A	·NUT W/ PERSPECTIVE	3026		1
	30	MS24665-132		A	·COTTER PIN W/O PERSPECTIVE	0002		1
	31	MS24665-130		A	·COTTER PIN W/ PERSPECTIVE	3026		1
	33	AN3-10		A	·BOLT	/ 0001	/	1
	36	NAS1149F0363P		A	·WASHER	/ 0001	/	2
	39	MS17825-3		A	·NUT	/ 0001	/	1
	42	MS24665-130		A	·COTTER PIN	/ 0001	/	1
	45	MS21919WDG5			·ADEL CLAMP	0002		1
	48	AN3-4A		A	·BOLT	0002		1
	51	NAS1149F0332P		A	·WASHER	0002		1
	54	MS21083N3		A	·NUT	0002		1
	57	MS21919WDG4			·ADEL CLAMP	/ 0001	/	1
	60	12645-002			·CABLE PASS THROUGH	0002 / 0001	/	1
					ALTERNATE FOR P/N 12645-001			
-	63	12645-001			·CABLE PASS THROUGH	0002 / 0001	/	1
					ALTERNATE FOR P/N 12645-002			
	66	AN924-6		A	·NUT	0002 / 0001	/	2
	69	NAS1149F0963P		A	·WASHER	0002 / 0001	/	2
	72	12622-001		A	·FIBER WASHER	0002 / 0001	/	2
	75	13876-001			·BRACKET	0002 / 0001	/	1
	78	PRT OF ENGINE		A	·BOLT	0002 / 0001	/	1
	81	50223-001			·BRACKET, CLIP MOUNTING	0002 / 0001	/	1
	84	AN4-4A		A	·BOLT	0002 / 0001	/	1
	87	NAS1149F0463P		A	·WASHER	0002 / 0001	/	2
	90	MS21042L4		A	·NUT	0002 / 0001	/	1
	93	11314-003			·ROD END	0002 / 0001	/	1
	96	AN3-10		A	·BOLT	0002 / 0001	/	1
	99	NAS1149F0332P		A	·WASHER	0002 / 0001	/	1
	102	NAS1149F0363P		A	·WASHER	0002 / 0001	/	2
	105	AN970-3		A	·WASHER	0002 / 0001	/	1
	108	AN310-3		A	·NUT	0002 / 0001	/	1
	111	MS24665-132		A	·COTTER PIN	0002 / 0001	/	1
	114	50020-125			·FIBERFRAX PAPER	0002 / 0001	/	AR
	117	50435-736			·DOW CORNING 736 SILICONE ADHESIVE	0002 / 0001	/	AR
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 76-10-01 DET			ENGINE CONTROL QUADRANT			
	401	RF 76-10-02 DET			MIXTURE CONTROL CABLE INSTALLATION			

Intentionally Left Blank

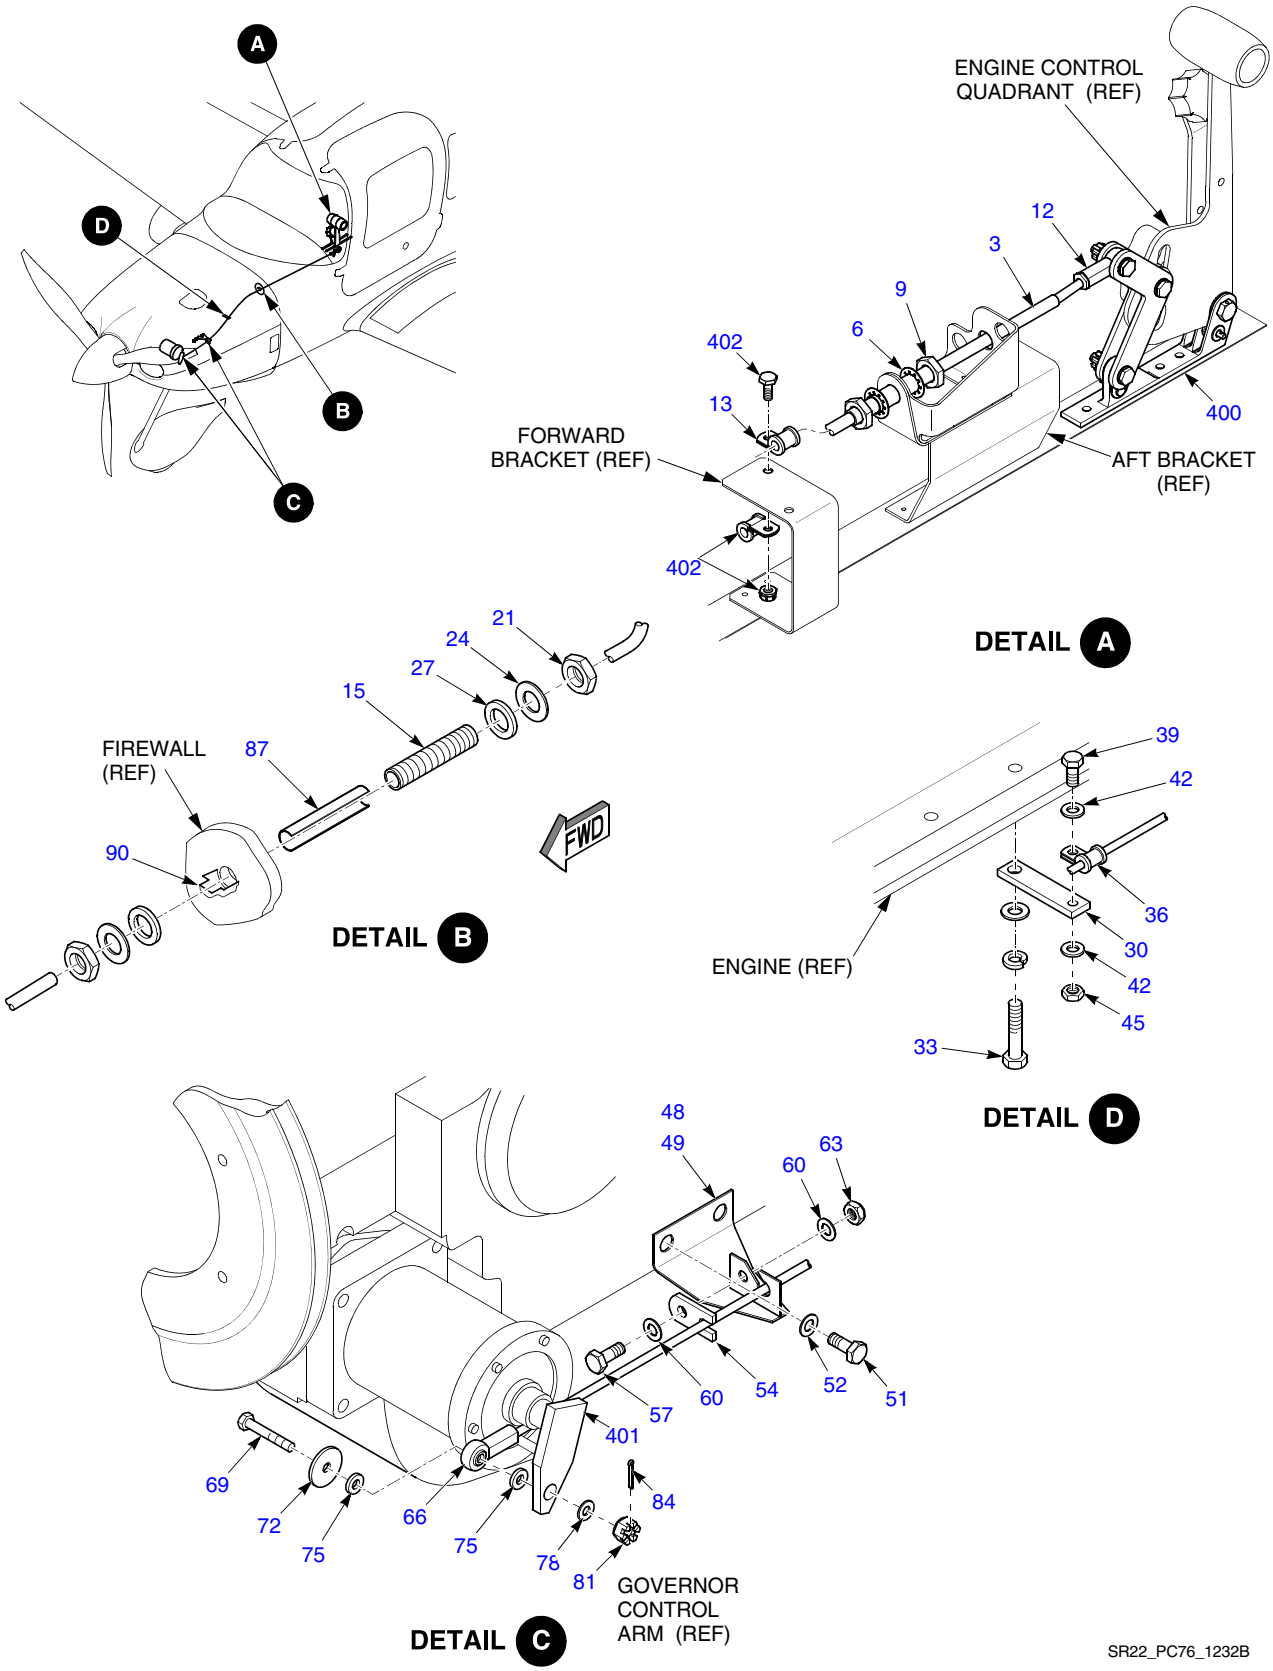

Figure-04
Governor Control Cable - Serials w/o TCM Turbo

EFFECTIVITY:
Serials w/o TCM Turbo

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 04			GOVERNOR CONTROL CABLE	0002		NP
	3	14064-101			·CABLE	0002	0848	1
					FOR SPARES USE P/N 14064-102			
-	4	14064-102			·CABLE	0849		1
	6	PRT OF ITM 3		A	·WASHER	0002		2
	9	PRT OF ITM 3		A	·JAM NUT	0002		2
	12	11314-003			·ROD END	0002		1
	13	MS21919WDG5			·ADEL CLAMP	0002		1
	15	12645-002			·CABLE PASS THROUGH	0002		1
					ALTERNATE FOR P/N 12645-001			
-	18	12645-001			·CABLE PASS THROUGH	0002		1
					ALTERNATE FOR P/N 12645-002			
	21	AN924-6		A	·NUT	0002		2
	24	NAS1149F0963P		A	·WASHER	0002		2
	27	12622-001		A	·FIBER WASHER	0002		2
	30	13880-001			·SUPPORT	0002		1
	33	PRT OF ENGINE		A	·BOLT	0002		1
	36	MS21919WDG4			·ADEL CLAMP	0002		1
	39	AN3-4A		A	·BOLT	0002		1
	42	NAS1149F0332P		A	·WASHER	0002		2
	45	MS21042L3		A	·NUT	0002		1
	48	13879-001			·BRACKET	0002	2043	1
	49	13879-002			·BRACKET	2044		1
	51	PRT OF ENGINE		A	·BOLT	0002		2
	52	PRT OF ENGINE		A	·WASHER	0002		2
	54	50223-001			·BRACKET, CLIP MOUNTING	0002		1
	57	AN4-4A		A	·BOLT	0002		1
	60	NAS1149F0463P		A	·WASHER	0002		2
	63	MS21042L4		A	·NUT	0002		1
	66	11314-003			·ROD END	0002		1
	69	AN3-12		A	·BOLT	0002		1
	72	AN970-3		A	·WASHER	0002		1
	75	NAS1149F0363P		A	·WASHER	0002		2
	78	NAS1149F0332P		A	·WASHER	0002		1
	81	AN310-3		A	·NUT	0002		1
	84	MS24665-132		A	·COTTER PIN	0002		1
	87	50020-125			·FIBERFRAX PAPER	0002		AR
	90	50435-736			·DOW CORNING 736 SILICONE ADHESIVE	0002		AR
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 76-10-01 DET			ENGINE CONTROL QUADRANT			
	401	RF 61-20-01 DET			GOVERNOR			
	402	RF 76-10-02 DET			MIXTURE CONTROL CABLE			

EFFECTIVITY:
All

CHAPTER

77

ENGINE INDICATING

Intentionally Left Blank

CHAPTER 77 - ENGINE INDICATING

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
77-LOEP	1	19 SEP 2017
77-LOEP	2	19 SEP 2017
77-TOC	1	19 SEP 2017
77-TOC	2	19 SEP 2017
77-10-01	1	15 DEC 2014
77-10-01	2	15 DEC 2014
77-10-02	1	15 DEC 2014
77-10-02	2	15 DEC 2014
77-10-02	3	15 DEC 2014
77-10-02	4	15 DEC 2014
77-20-01	1	19 SEP 2017
77-20-01	2	15 DEC 2014
77-20-01	3	19 SEP 2017
77-20-01	4	15 DEC 2014
77-20-02	1	15 DEC 2014
77-20-02	2	15 DEC 2014
77-20-03	1	15 DEC 2014
77-20-03	2	15 DEC 2014
77-40-01	1	15 DEC 2014
77-40-01	2	15 DEC 2014
77-40-02	1	15 DEC 2014
77-40-02	2	15 DEC 2014
77-40-03	1	15 DEC 2014
77-40-03	2	15 DEC 2014

Intentionally Left Blank

CHAPTER 77 - ENGINEINDICATING

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Tachometer and Sensor Assembly	77-10-01
MAP Sensor and MAP/Fuel Flow Gauge - Serials 22-0002 & subs (1 of 2)	77-10-02
MAP Sensor and MAP/Fuel Flow Gauge - Serials 22T-0001 & subs (2 of 2)	77-10-02
EGT/CHT Sensors and Gauge (1 of 2)	77-20-01
EGT/CHT Sensors and Gauge - Serials 22-0002 thru 22-1662 w/o Engine Monitoring (2 of 2)	77-20-01
Turbine Inlet Temperature Sensor	77-20-02
Manifold Air Temperature Sensor	77-20-03
Sensor Interface Unit - Serials 22-0002 thru 22-1662 w/ Engine Monitoring	77-40-01
Data Acquisition Unit - Serials 22-1663 & subs w/o Perspective	77-40-02
Engine Airframe Unit - Serials w/ Perspective	77-40-03

Intentionally Left Blank

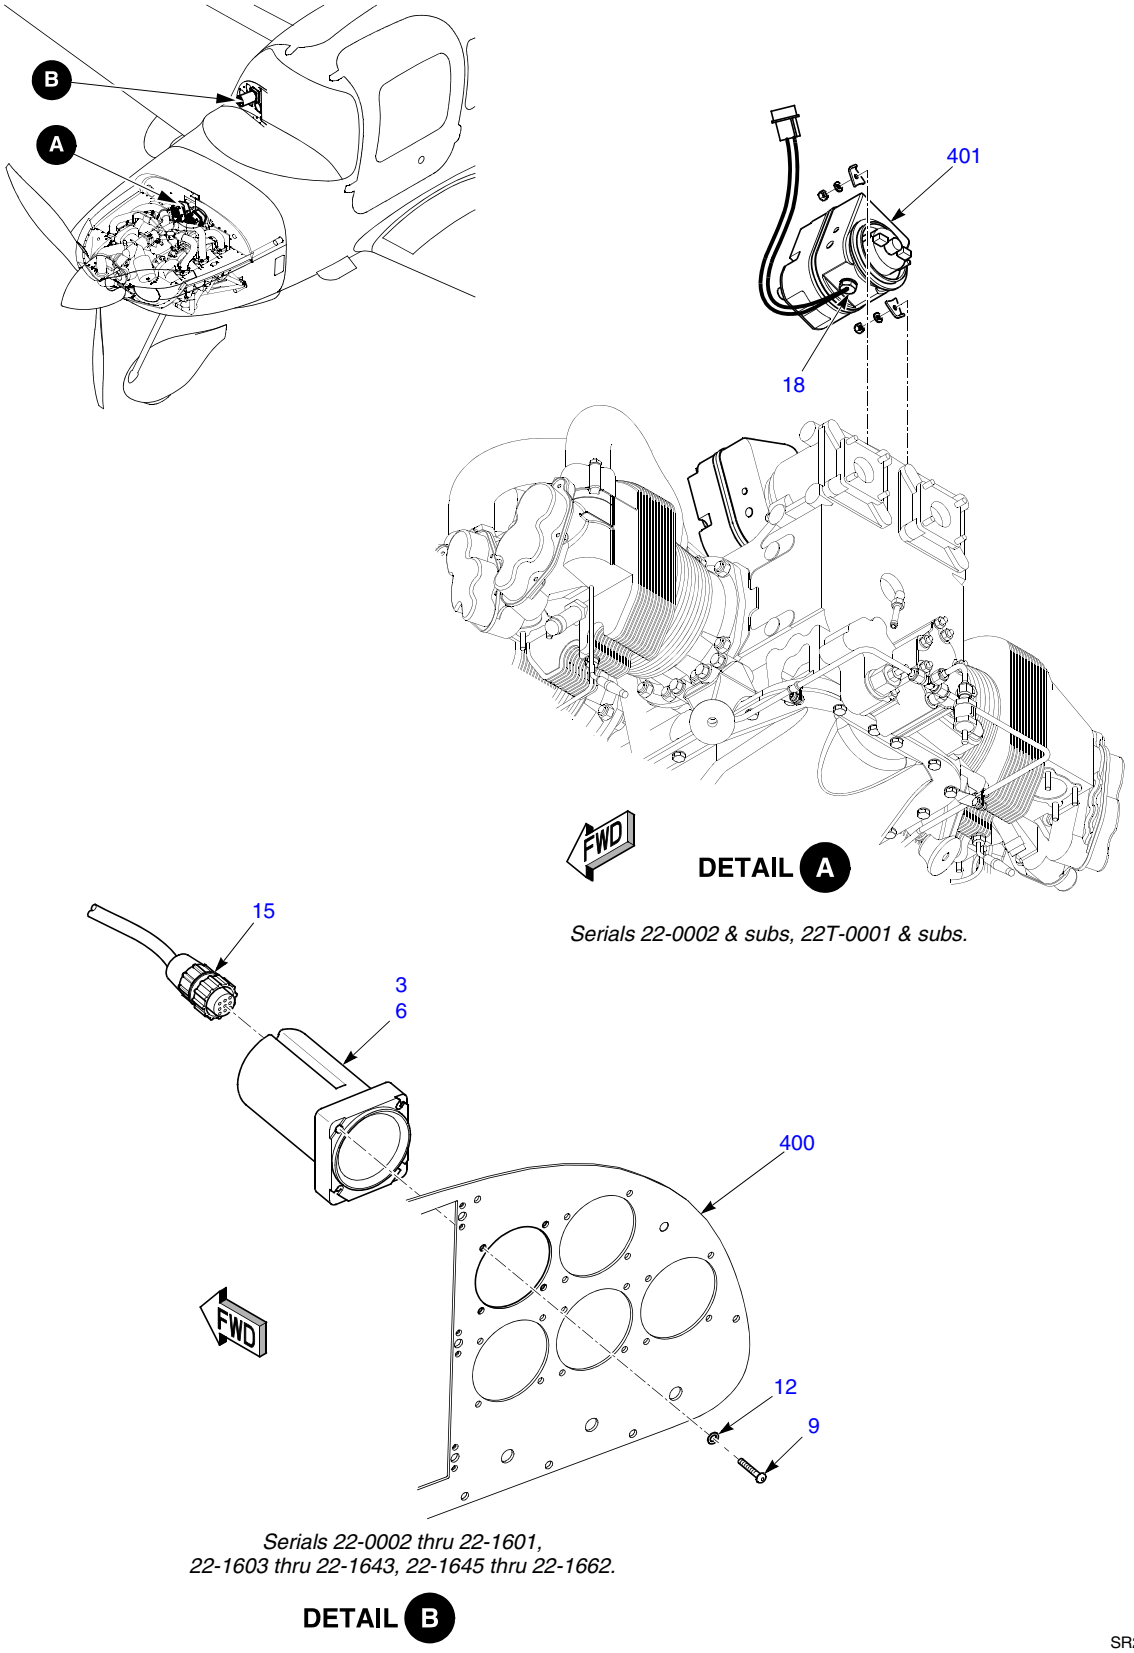

Figure-01
Tachometer and Sensor Assembly

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		TACHOMETER AND SENSOR ASSEMBLY	0002 / 0001	/	NP
	3	13559-001			·TACHOMETER	0002	0836	1
					FOR SPARES USE P/N 13559-002			
	6	13559-002	@		·TACHOMETER	0837	1662	1
	9	50834-014	@	A	·SCREW	0002	1662	4
	12	50813-001	@	A	·WASHER	0002	1662	4
	15	50274-001	@		·CONNECTOR	0002	1662	1
	18	655862			·SENSOR ASSEMBLY	0002 / 0001	/	1
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 31-10-01 DET			INSTRUMENT PANEL			
	401	RF 74-10-01 DET			MAGNETO			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1602 AND 22-1644; REFER TO 22-1663 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

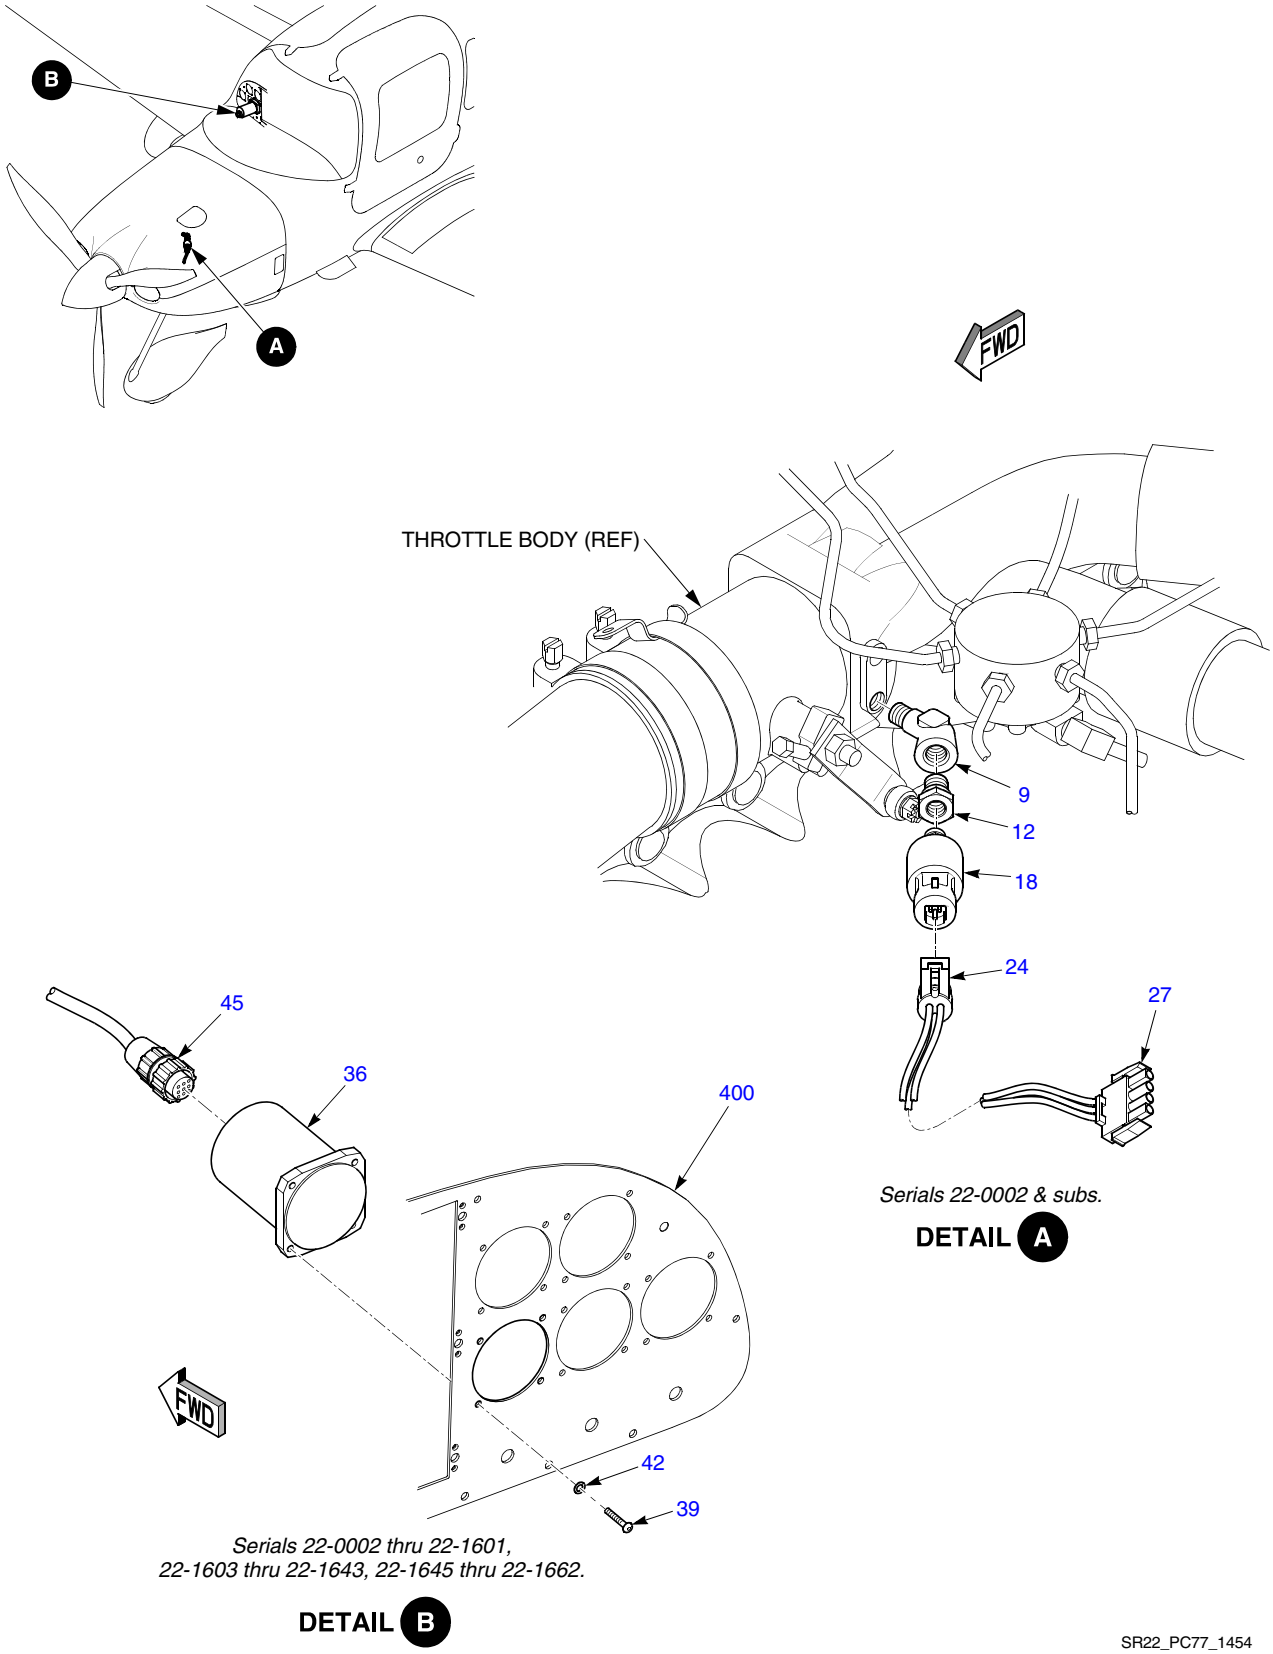

Figure-02

MAP Sensor and MAP/Fuel Flow Gauge - Serials 22-0002 & subs (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs

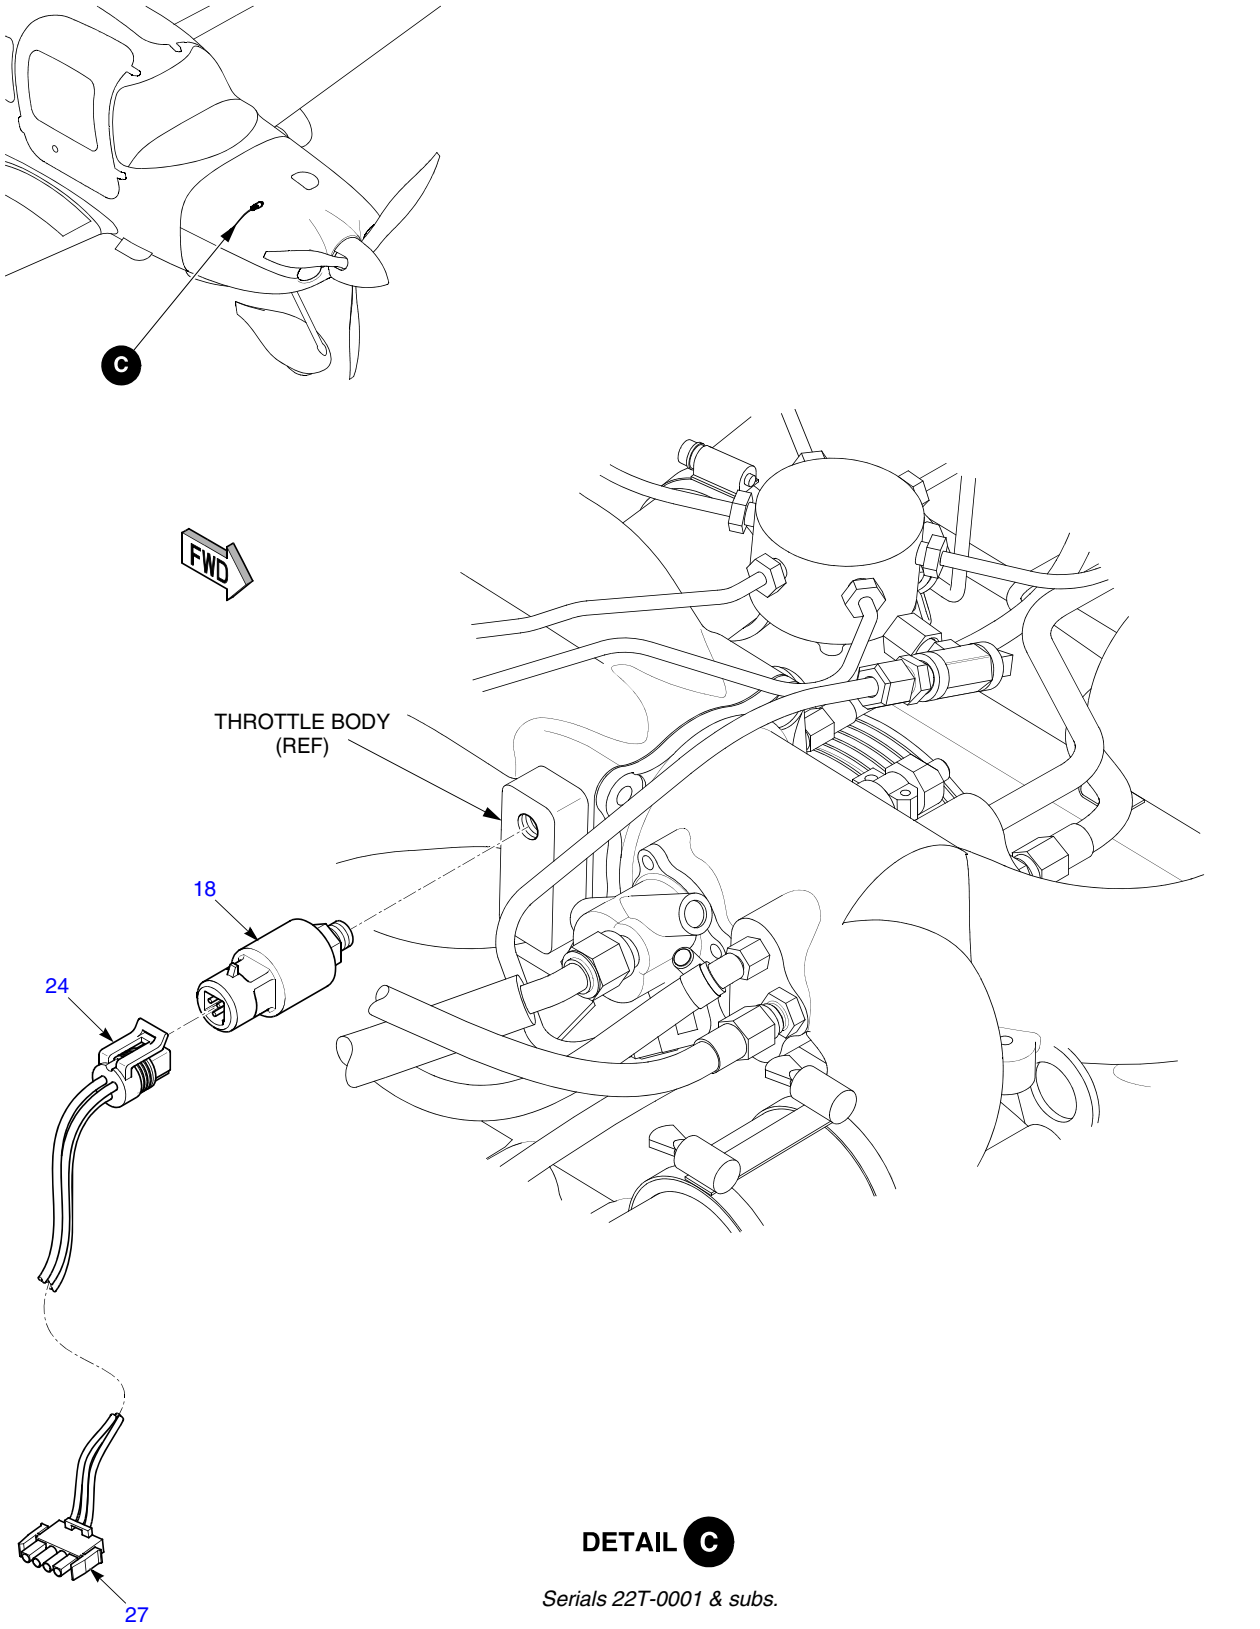

Figure-02
MAP Sensor and MAP/Fuel Flow Gauge - Serials 22T-0001 & subs (2 of 2)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		MAP SENSOR AND MAP/FUEL FLOW GAUGE INSTALLATION	0002 / 0001	/	NP
-	3	14251-001			·MAP SENSOR ASSEMBLY	0002	3932	1
-	6	28704-001			·MAP SENSOR ASSEMBLY	/ 0001	/ 0492	1
	9	AN915-2		A	·ELBOW	0002		1
	12	AN912-1		A	·ADAPTER	0002		1
-	15	12635-001			··MANIFOLD PRESSURE SENSOR	0002 / 0001	3932 / 0492	1
					FOR SPARES USE P/N 12635-003			
	18	12635-003			··MANIFOLD PRESSURE SENSOR	3933 / 0493	/	1
-	21	50167-001			··CONNECTOR	0002 / 0001	/	1
					ALTERNATE FOR P/N 50167-002			
	24	50167-002			··CONNECTOR	0002 / 0001	/	1
					ALTERNATE FOR P/N 50167-001			
	27	50164-001			··CONNECTOR	0002 / 0001	/	1
-	30	50165-001			··SOCKET	0002 / 0001	/	1
-	33	13558-001			·MAP/FUEL FLOW GAUGE	0002	1459	1
					FOR SPARES USE P/N 13558-002			
	36	13558-002			·MAP/FUEL FLOW GAUGE	1460	1662	1
	39	50834-014		A	·SCREW	0002	1662	4
	42	50813-001		A	·WASHER	0002	1662	4
	45	50274-001			·CONNECTOR	0002	1662	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 31-10-01 DET			INSTRUMENT PANEL			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1602, 22-1644; REFER TO 22-1663 FOR PART IDENTIFICATION.			

Intentionally Left Blank

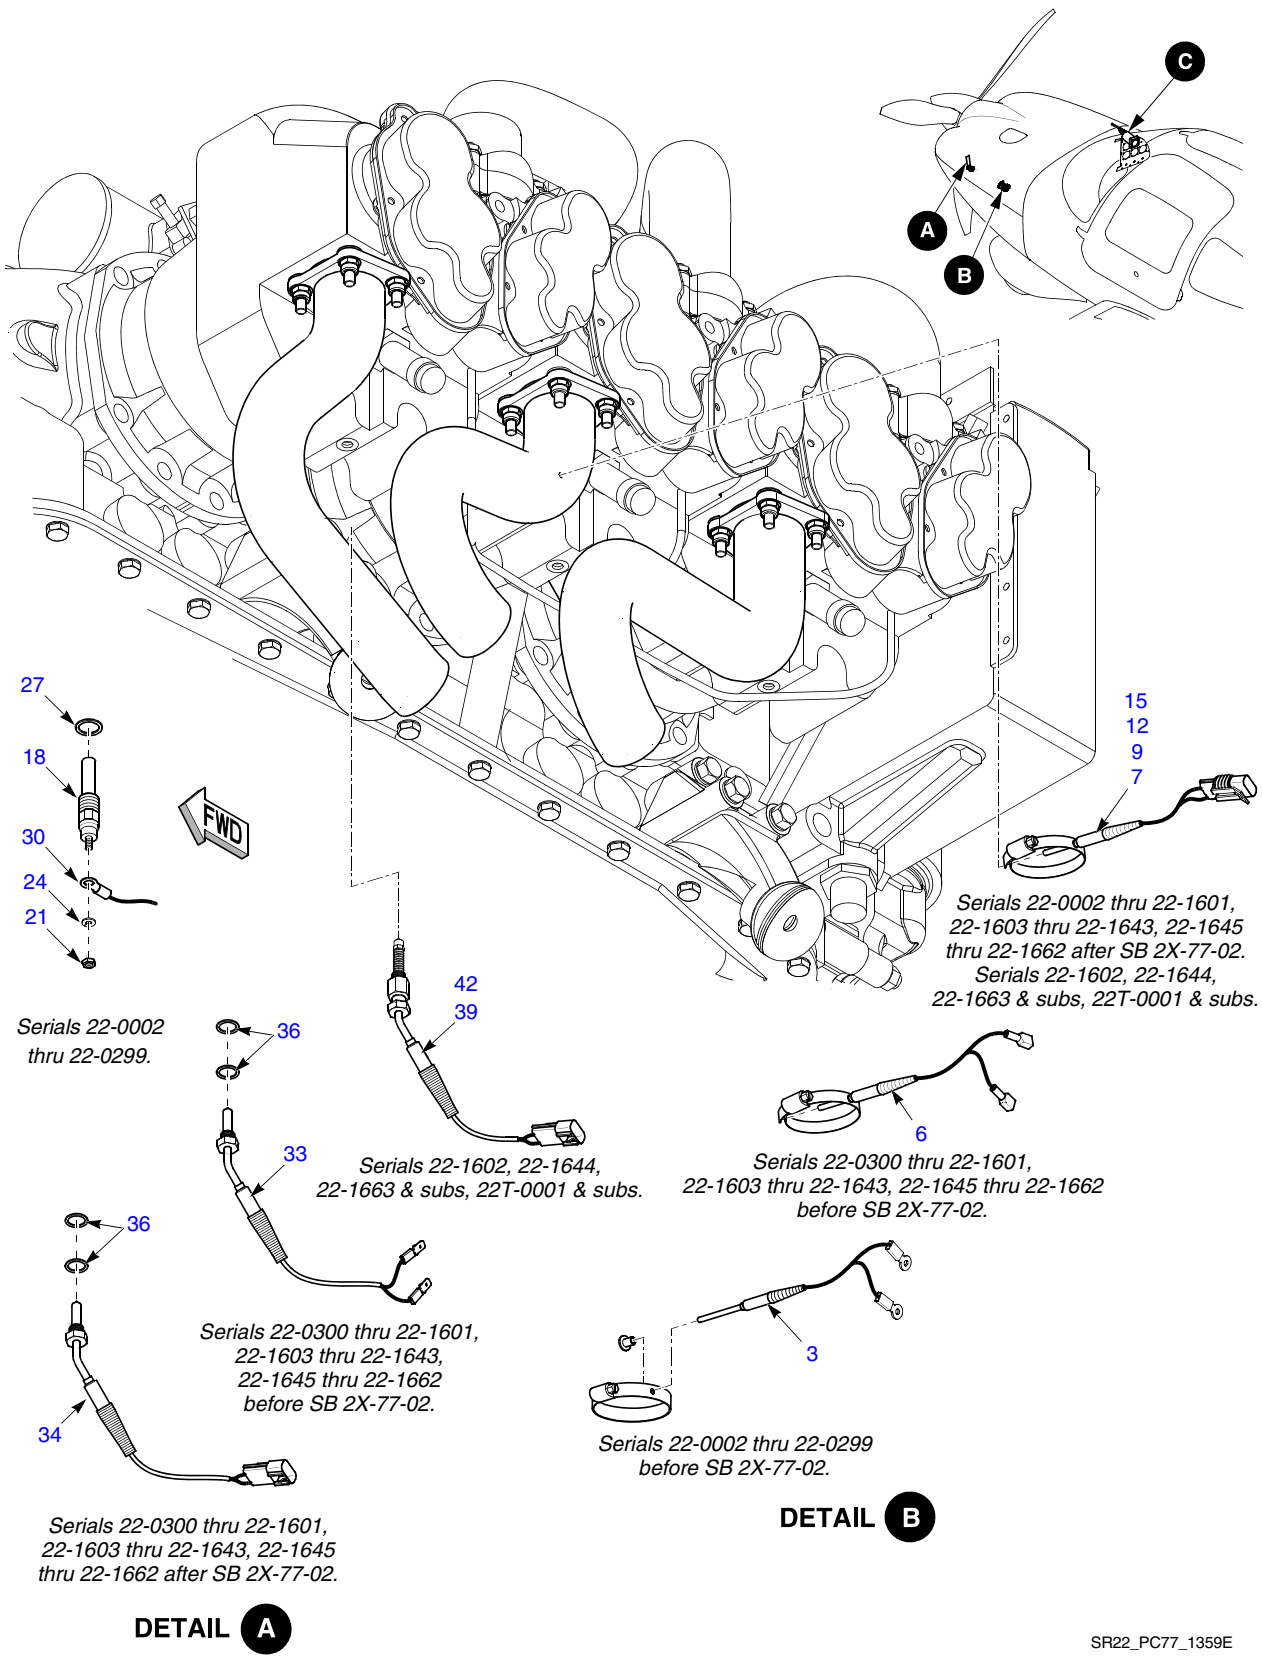

Figure-01
EGT/CHT Sensors and Gauge (1 of 2)

EFFECTIVITY:
All

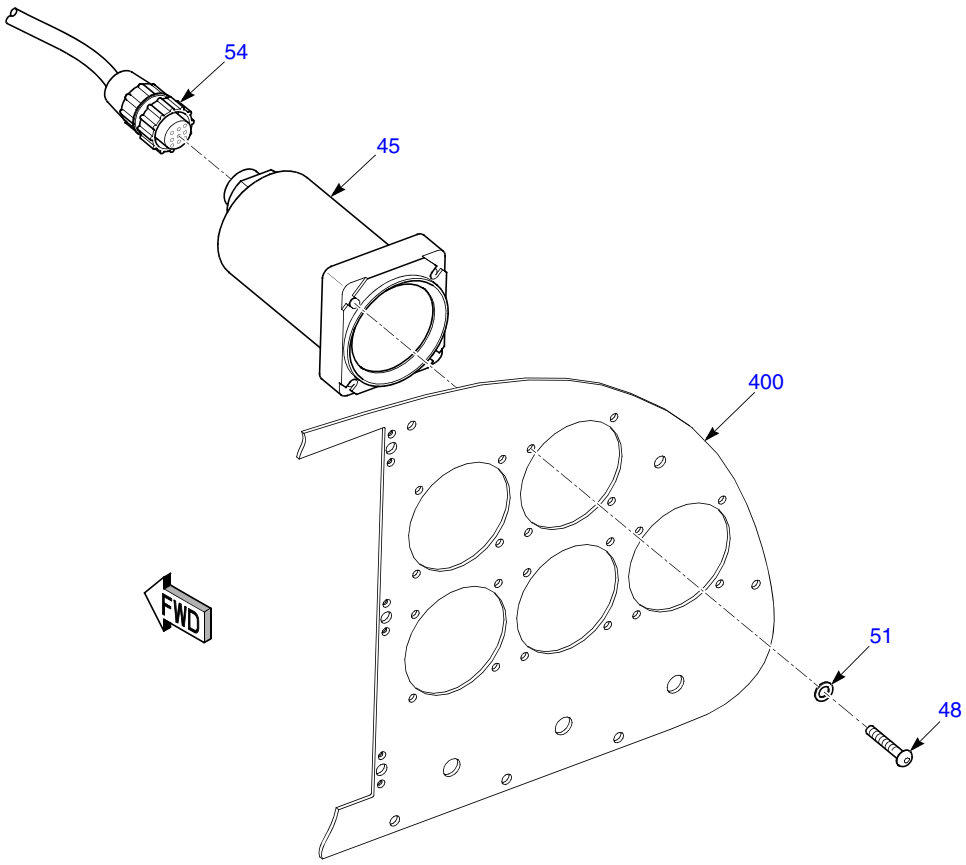

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1643, 22-1645 thru 22-1662 w/o Engine Monitoring.

DETAIL C

SR22_PC77_1516

Figure-01

EGT/CHT Sensors and Gauge - Serials 22-0002 thru 22-1662 w/o Engine Monitoring (2 of 2)

EFFECTIVITY:
Serials 22-0002 thru 22-1662 w/o Engine Monitoring

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		EGT/CHT SENSORS AND GAUGE INSTALLATION	0002 / 0001	/	AR
	3	12692-001	#		·EGT SENSOR	0002	0299	1
	6	14554-001	$		·EGT SENSOR	0300	1662	1
					FOR SPARES USE P/N 14554-003			
	7	14554-003			·EGT SENSOR	0002	1662	1
					AFTER SB2X-77-02			
	9	16579-001	%		·EGT SENSOR W/O PERSPECTIVE AVIONICS	1663	2577	1
					AFTER SB2X-77-02	0002	1662	
					ALTERNATE FOR P/N 16579-002			
	12	16579-002	%		·EGT SENSOR W/O PERSPECTIVE AVIONICS	2578		1
					ALTERNATE FOR P/N 16579-001			
	15	24585-001	%		·EGT SENSOR W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	18	12637-001	%		·CHT SENSOR	0002	0299	1
	21	PRT OF ITM 9		A	·NUT	0002	0299	1
	24	PRT OF ITM 9		A	·WASHER	0002	0299	1
	27	PRT OF ITM 9		A	·WASHER	0002	0299	1
	30	PRT OF ITM 9			·TERMINAL RING	0002	0299	1
	33	14880-001	%		·CHT SENSOR (100 OHM)	0300	1662	1
					FOR SPARES USE P/N 14880-003			
	34	14880-003	%		·CHT SENSOR (100 OHM)	0002	1662	1
					AFTER SB2X-77-02			
	36	NAS1149F0663P		A	·WASHER	0300	1662	2
	39	16578-001	%		·CHT SENSOR (1000 OHM) W/O PERSPECTIVE AVIONICS	1663		1
	42	24584-001	%		·CHT SENSOR (1000 OHM) W/ PERSPECTIVE AVIONICS	3026 / 0001	/	1
	45	12616-001			·EGT/CHT GAUGE	0002	1662	1
	48	50834-014		A	·SCREW	0002	1662	4
	51	50813-001		A	·WASHER	0002	1662	4
	54	50274-001			·CONNECTOR	0002	1662	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 31-10-01 DET			INSTRUMENT PANEL INSTALLATION			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBER 22-1602, 22-1644; REFER TO 22-1663 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBER 22-2979, 22-2992, 22-3002 W/ PERSPECTIVE AVIONICS; REFER TO 22-3026 FOR PART IDENTIFICATION.			
			#		AIRCRAFT WITH SERVICE BULLETIN INSTALLED EMAX ENGINE MONITORING WILL HAVE SEVEN EGT SENSORS.			
			$		AIRCRAFT WITH FACTORY INSTALLED EMAX ENGINE MONITORING WILL HAVE SIX EGT SENSORS.			
			%		AIRCRAFT WITH EMAX ENGINE MONITORING WILL HAVE SIX SENSORS			

.

Intentionally Left Blank

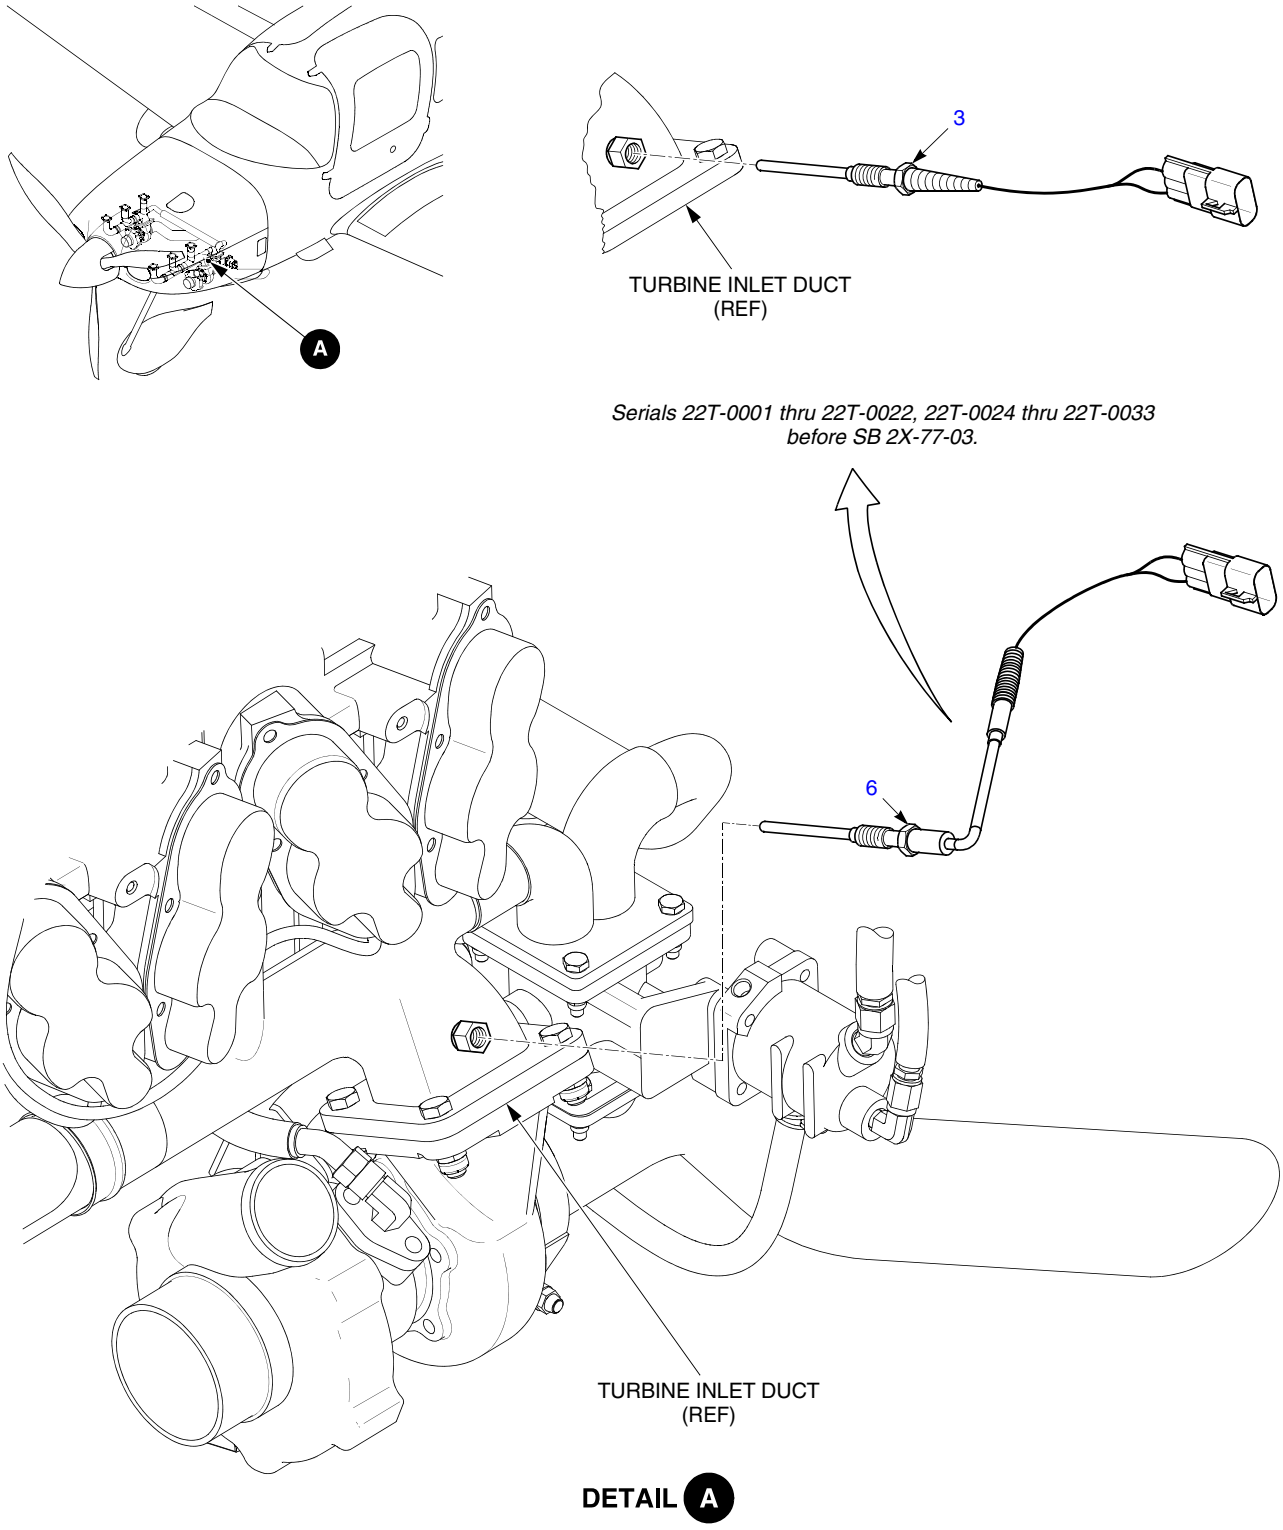

Figure-02
Turbine Inlet Temperature Sensor

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH 12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	@		TURBINE INLET TEMPERATURE SENSOR INSTALLATION	/ 0001	/	AR
	3	25597-003			·TURBINE INLET TEMPERATURE SENSOR	/ 0001	/ 0033	2
					BEFORE SB2X-77-03			
					FOR SPARES USE P/N 29211-001			
	6	29211-001			·TURBINE INLET TEMPERATURE SENSOR	/ 0034	/	2
					AFTER SB2X-77-03	/ 0001	/ 0033	
					SYMBOL NOTES:			
			@		SERIAL NUMBER 22T-0023; REFER TO 22T-0034 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

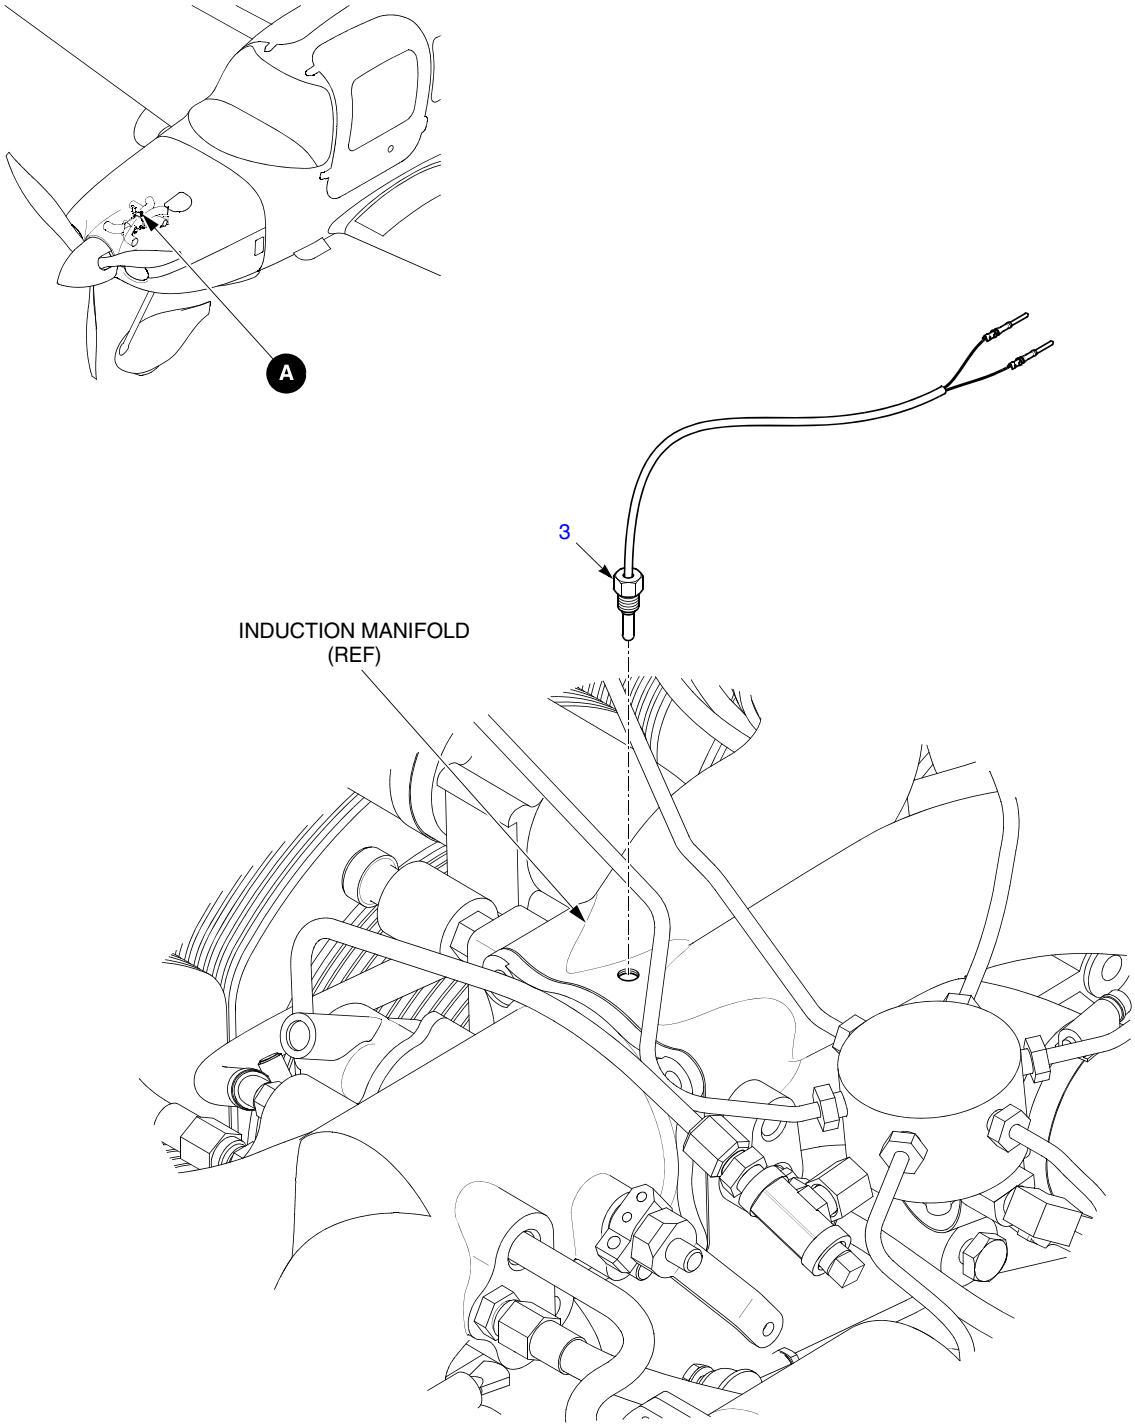

Figure-03
Manifold Air Temperature Sensor

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03			MANIFOLD AIR TEMPERATURE SENSOR	/ 0001	/	AR
	3	25598-002			·MANIFOLD AIR TEMPERATURE SENSOR	/ 0001	/	1

EFFECTIVITY:
All

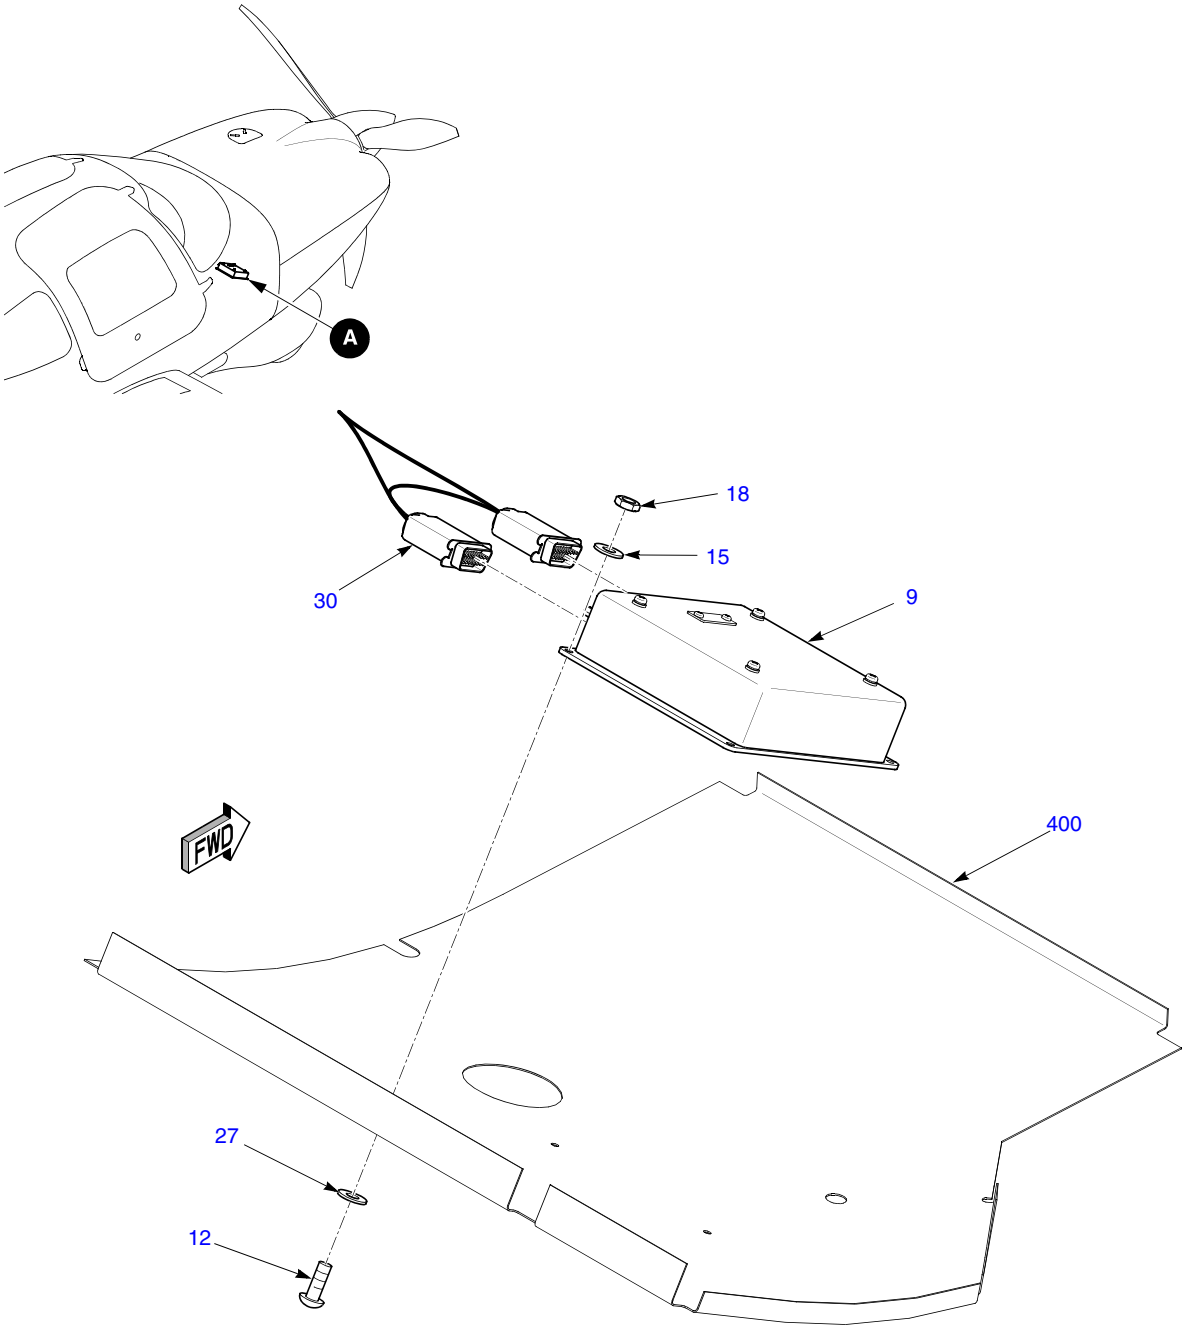

DETAIL A

Serials 22-0002 thru 22-1601, 22-1603 thru 22-1643, 22-1645 thru 22-1662 w/ Engine Monitoring.

SR22_PC77_1367A

Figure-01

Sensor Interface Unit - Serials 22-0002 thru 22-1662 w/ Engine Monitoring

EFFECTIVITY:
Serials 22-0002 thru 22-1662 w/ Engine Monitoring

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 .... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	@		SENSOR INTERFACE UNIT	0300	1662	NP
					BEFORE SB22-77-01			
-	3	NO PRT NUMBER			SENSOR INTERFACE UNIT	0002	1662	NP
					AFTER SB22-77-01			
-	6	14843-001			·SENSOR INTERFACE UNIT	0002	1130	1
					FOR SPARES USE P/N 14843-002			
	9	14843-002			·SENSOR INTERFACE UNIT	1131	1662	1
	12	50835-007		A	·SCREW	0002	1662	4
	15	NAS1149DN832J		A	·WASHER	0002	1662	4
	18	MS21042-08		A	·NUT	0002	1662	4
					ALTERNATE FOR P/N MS21042L08			
					ALTERNATE FOR P/N MS21083N08			
-	21	MS21042L08		A	·NUT	0002	1662	4
					ALTERNATE FOR P/N MS21042-08			
					ALTERNATE FOR P/N MS21083N08			
-	24	MS21083N08		A	·NUT	0002	1662	4
					ALTERNATE FOR P/N MS21042-08			
					ALTERNATE FOR P/N MS21042L08			
	27	50813-002		A	·WASHER	0002	1662	4
	30	50279-003			·CONNECTOR	0002	1662	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 25-10-04 DET			KICK PLATE, RH			
					SYMBOL NOTES:			
			@		SERIAL NUMBER 22-1602 AND 22-1644; REFER TO 77-40-02.			

EFFECTIVITY:
All

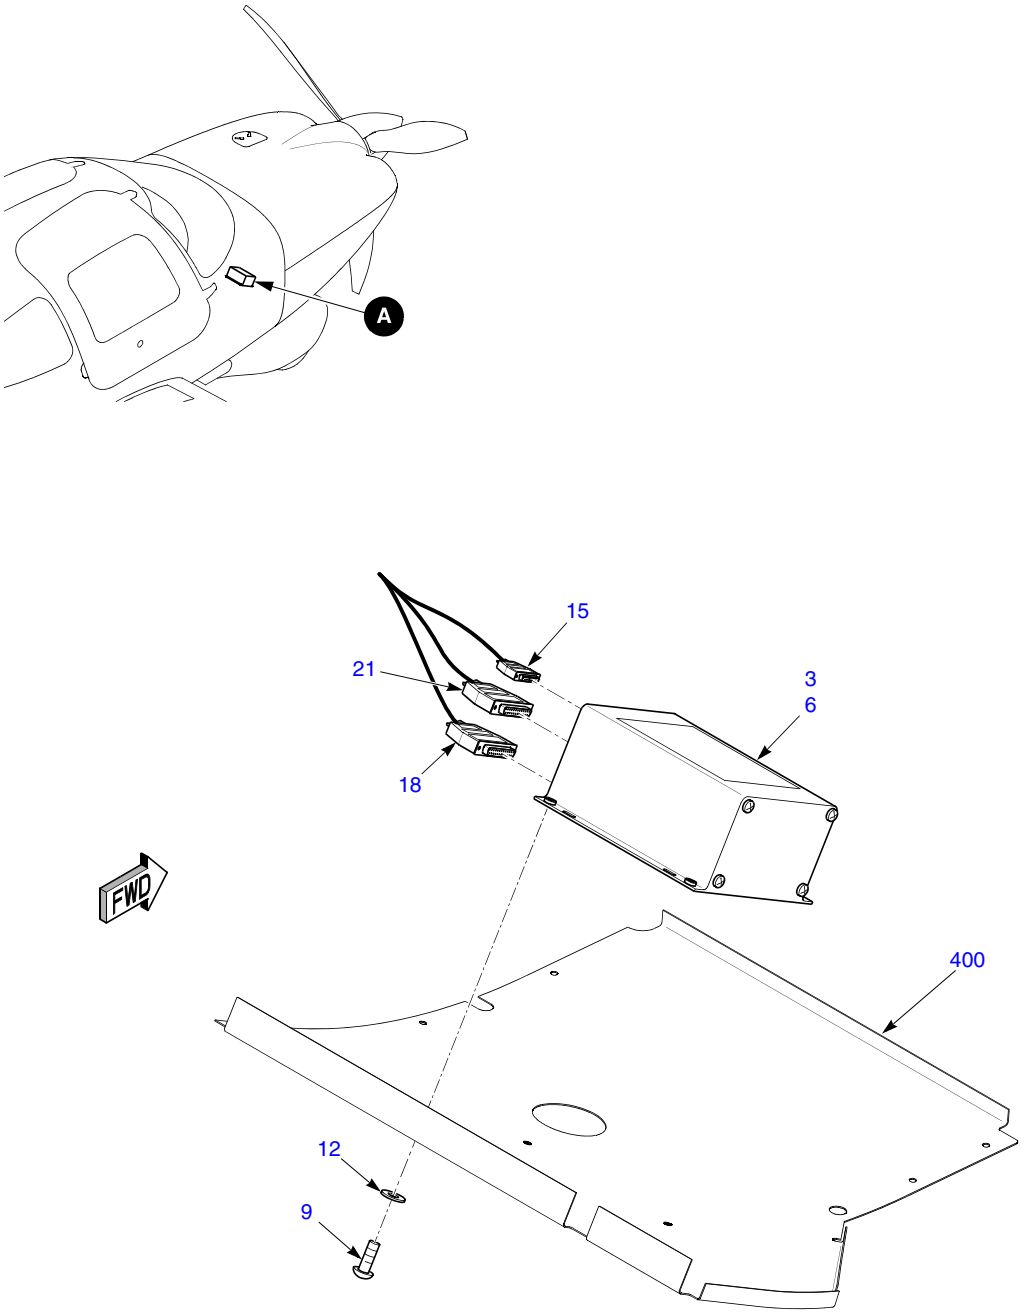

Figure-02
Data Acquisition Unit - Serials 22-1663 & subs w/o Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02	**		DATA ACQUISITION UNIT W/O PERSPECTIVE	1663		NP
	3	16692-001			·DATA ACQUISITION UNIT	1663	2187	1
					FOR SPARES USE P/N 16692-002			
	6	16692-002			·DATA ACQUISITION UNIT	2188		1
	9	50835-007		A	·SCREW	1663		4
	12	50813-002		A	·WASHER	1663		4
	15	51614-001			·CONNECTOR	1663		1
	18	51618-001			·CONNECTOR	1663		1
	21	51620-001			·CONNECTOR	1663		1
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 25-10-04 DET			KICK PLATE, RH			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-1602 AND 22-1644; REFER TO 22-1663 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

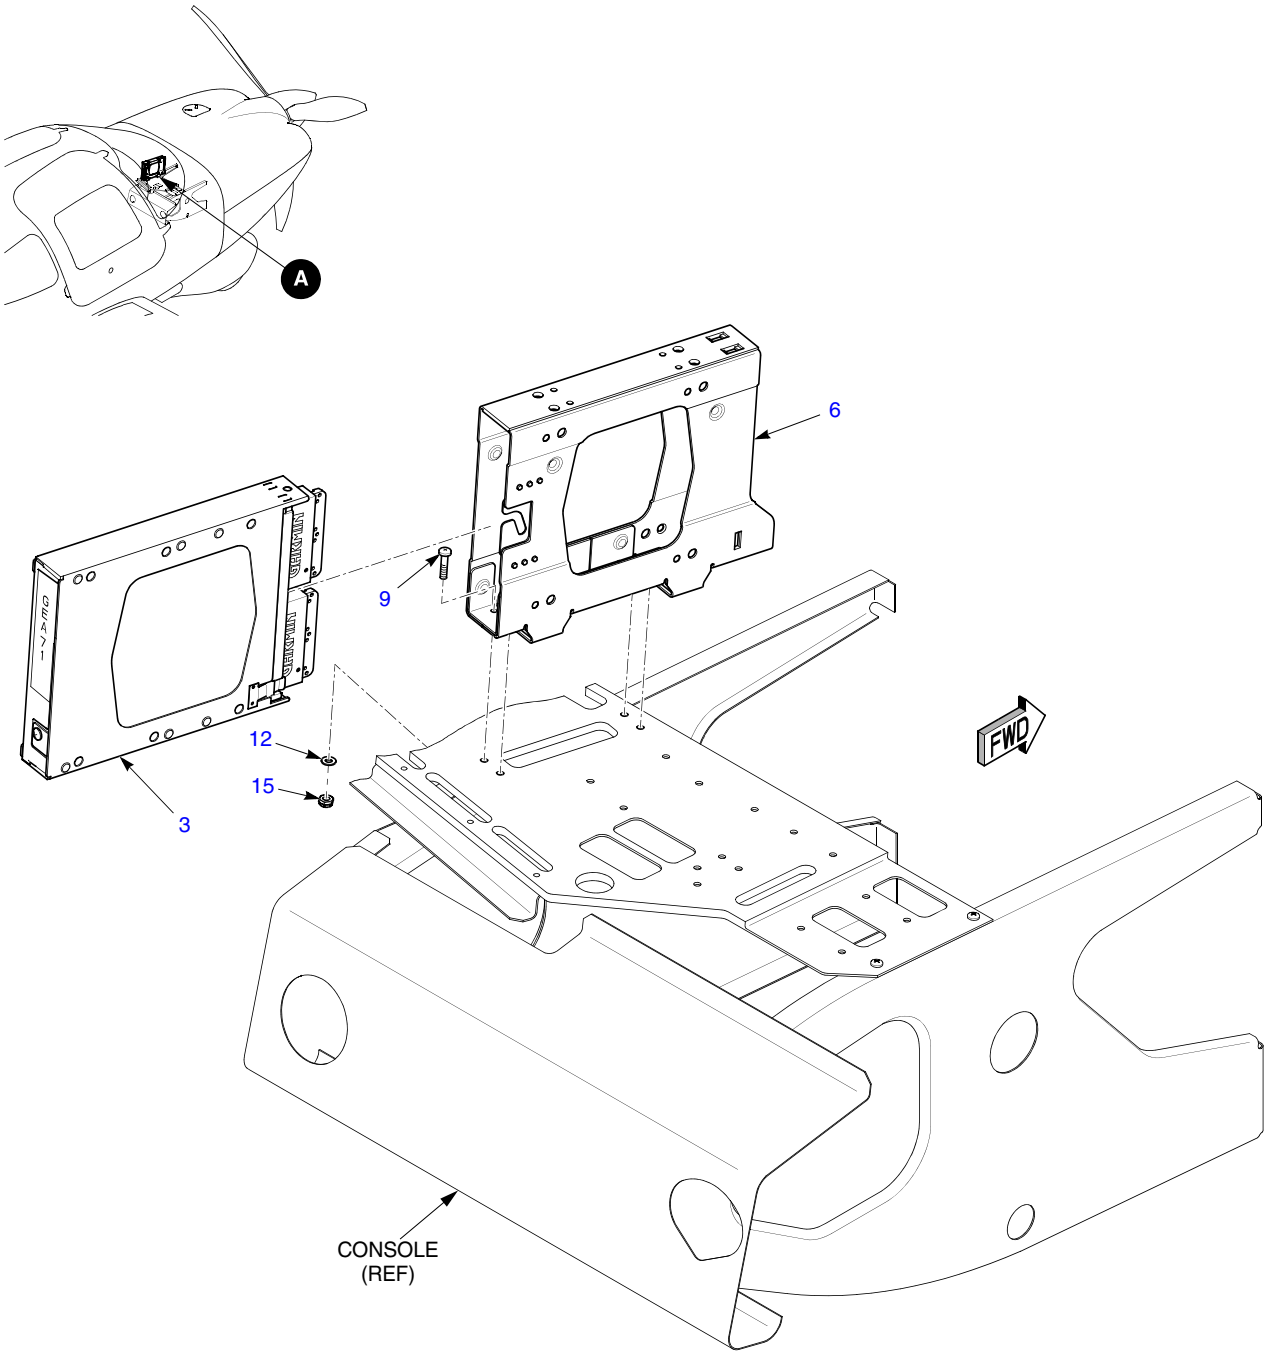

DETAIL A

SR22_PC77_1792

Figure-03
Engine Airframe Unit - Serials w/ Perspective

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 · · · · · · · ·	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 03	**		ENGINE AIRFRAME UNIT	3026 / 0001	/	NP
	3	24666-001			·GEA 71 ENGINE AIRFRAME UNIT	3026 / 0001	/	1
	6	24666-101			·RACK	3026 / 0001	/	1
	9	MS27039-0812		A	·SCREW	3026 / 0001	/	4
	12	NAS1149FN832P		A	·WASHER	3026 / 0001	/	4
	15	MS21083N08		A	·NUT	3026 / 0001	/	4
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22-2979, 22-2992 AND 22-3002 W/ PERSPECTIVE; REFER TO 22-3026 FOR PRT IDENTIFICATION.			

EFFECTIVITY:
All

CHAPTER 78

EXHAUST

Intentionally Left Blank

CHAPTER 78 - EXHAUST

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
78-LOEP	1	04 SEP 2018
78-LOEP	2	04 SEP 2018
78-TOC	1	04 SEP 2018
78-TOC	2	04 SEP 2018
78-10-01	1	15 DEC 2014
78-10-01	2	15 DEC 2014
78-20-01	1	19 SEP 2017
78-20-01	2	19 SEP 2017
78-20-01	3	19 SEP 2017
78-20-01	4	04 SEP 2018
78-20-01	5	04 SEP 2018
78-20-01	6	04 SEP 2018
78-20-01	7	04 SEP 2018
78-20-01	8	04 SEP 2018
78-20-02	1	15 DEC 2014
78-20-02	2	15 DEC 2014

Intentionally Left Blank

CHAPTER 78 - EXHAUST

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Wastegate Controller - Serials 22T-0001 & subs	78-10-01
Exhaust System - Serials 22-0002 thru 22-0319 (1 of 3)	78-20-01
Exhaust System - Serials 22-0320 thru 22-0820 (2 of 3)	78-20-01
Exhaust System - Serials 22-0821 & subs (3 of 3)	78-20-01
Exhaust System - Serials 22T-0001 & subs	78-20-02

Intentionally Left Blank

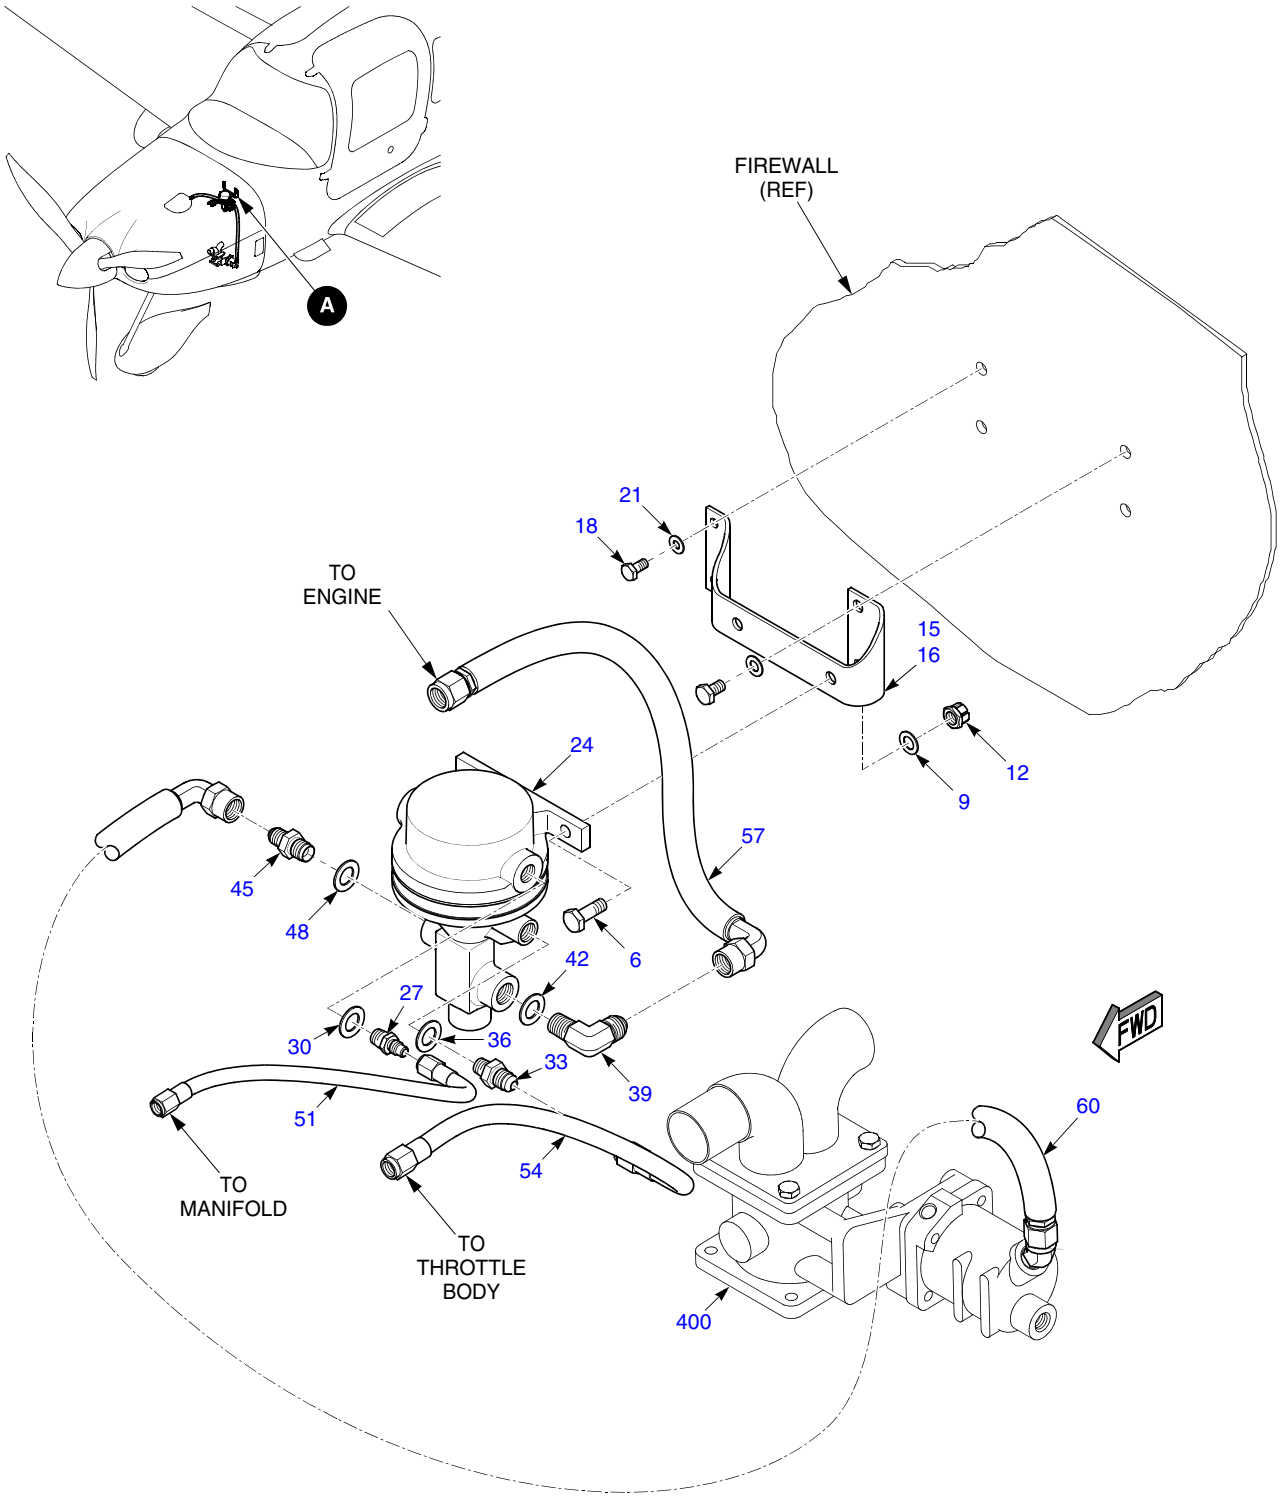

Figure-01
Wastegate Controller - Serials 22T-0001 & subs

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			WASTEGATE CONTROLLER INSTALLATION	/ 0001	/	NP
-	3	26358-104			·WASTEGATE CONTROLLER ASSEMBLY	/ 0001	/	1
	6	AN5-6A			·BOLT	/ 0001	/	2
	9	NAS1149F0532P			·WASHER	/ 0001	/	2
	12	MS21045-5			·NUT	/ 0001	/	2
	15	26938-001			·BRACKET	/ 0001	/ 0002	1
	16	26938-002			·BRACKET	/ 0003	/	1
	18	AN3-3A			·BOLT	/ 0001	/	2
	21	NAS1149F0332P			·WASHER	/ 0001	/	2
	24	646318-10			··CONTROLLER	/ 0001	/	1
	27	AN919-4			··REDUCER	/ 0001	/	1
	30	630979-16			··O-RING	/ 0001	/	1
	33	MS51525B6Z			··ADAPTER	/ 0001	/	1
	36	630979-16			··O-RING	/ 0001	/	1
	39	MS51527B6			··ELBOW	/ 0001	/	1
	42	630979-16			··O-RING	/ 0001	/	1
	45	MS51525B6Z			··ADAPTER	/ 0001	/	1
	48	630979-18			··O-RING	/ 0001	/	1
	51	53320-001			·HOSE, MANIFOLD	/ 0001	/	1
	54	53318-002			·HOSE, THROTTLE BODY	/ 0001	/	1
	57	53324-001			·HOSE, ENGINE	/ 0001	/	1
	60	53327-001			·HOSE, WASTEGATE	/ 0001	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 78-20-02 DET			EXHAUST SYSTEM INSTALLATION			

EFFECTIVITY:
All

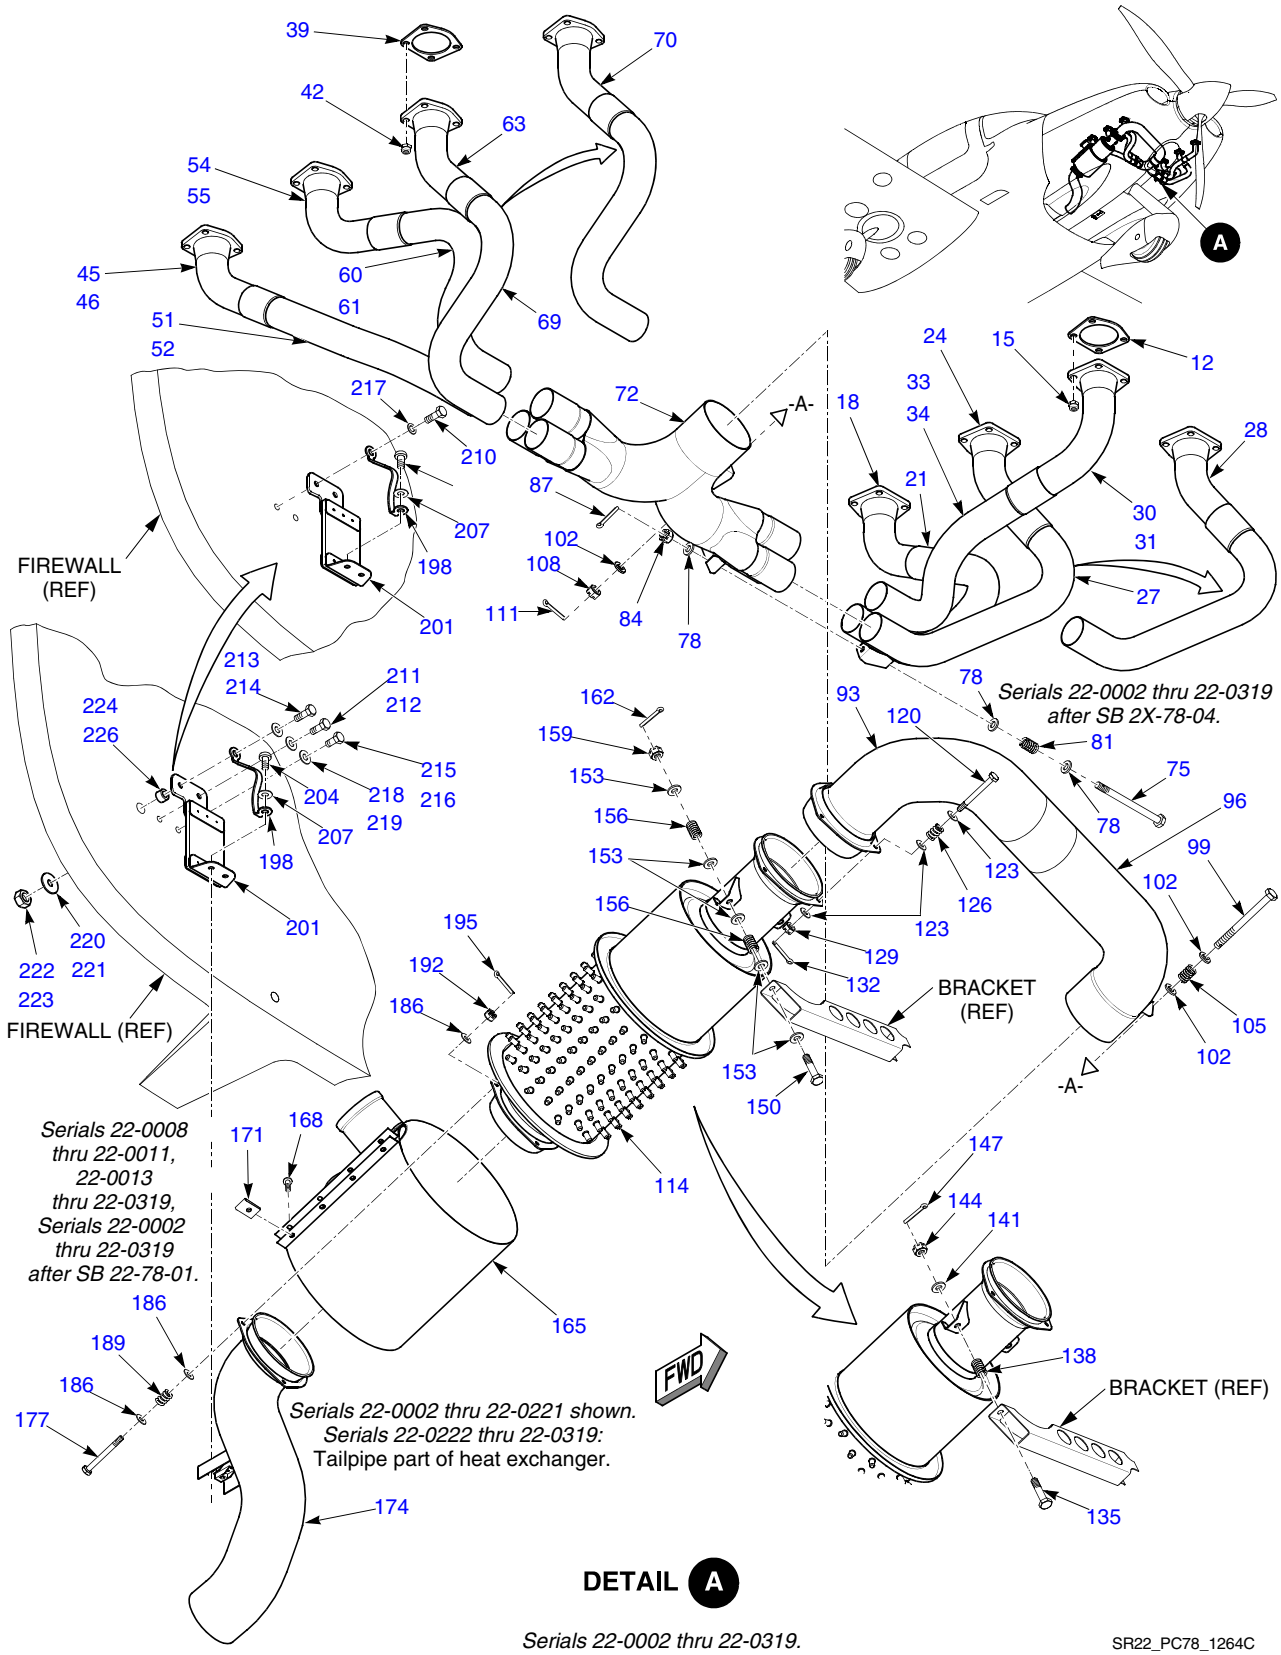

Figure-01
Exhaust System - Serials 22-0002 thru 22-0319 (1 of 3)

EFFECTIVITY:
Serials 22-0002 thru 22-0319

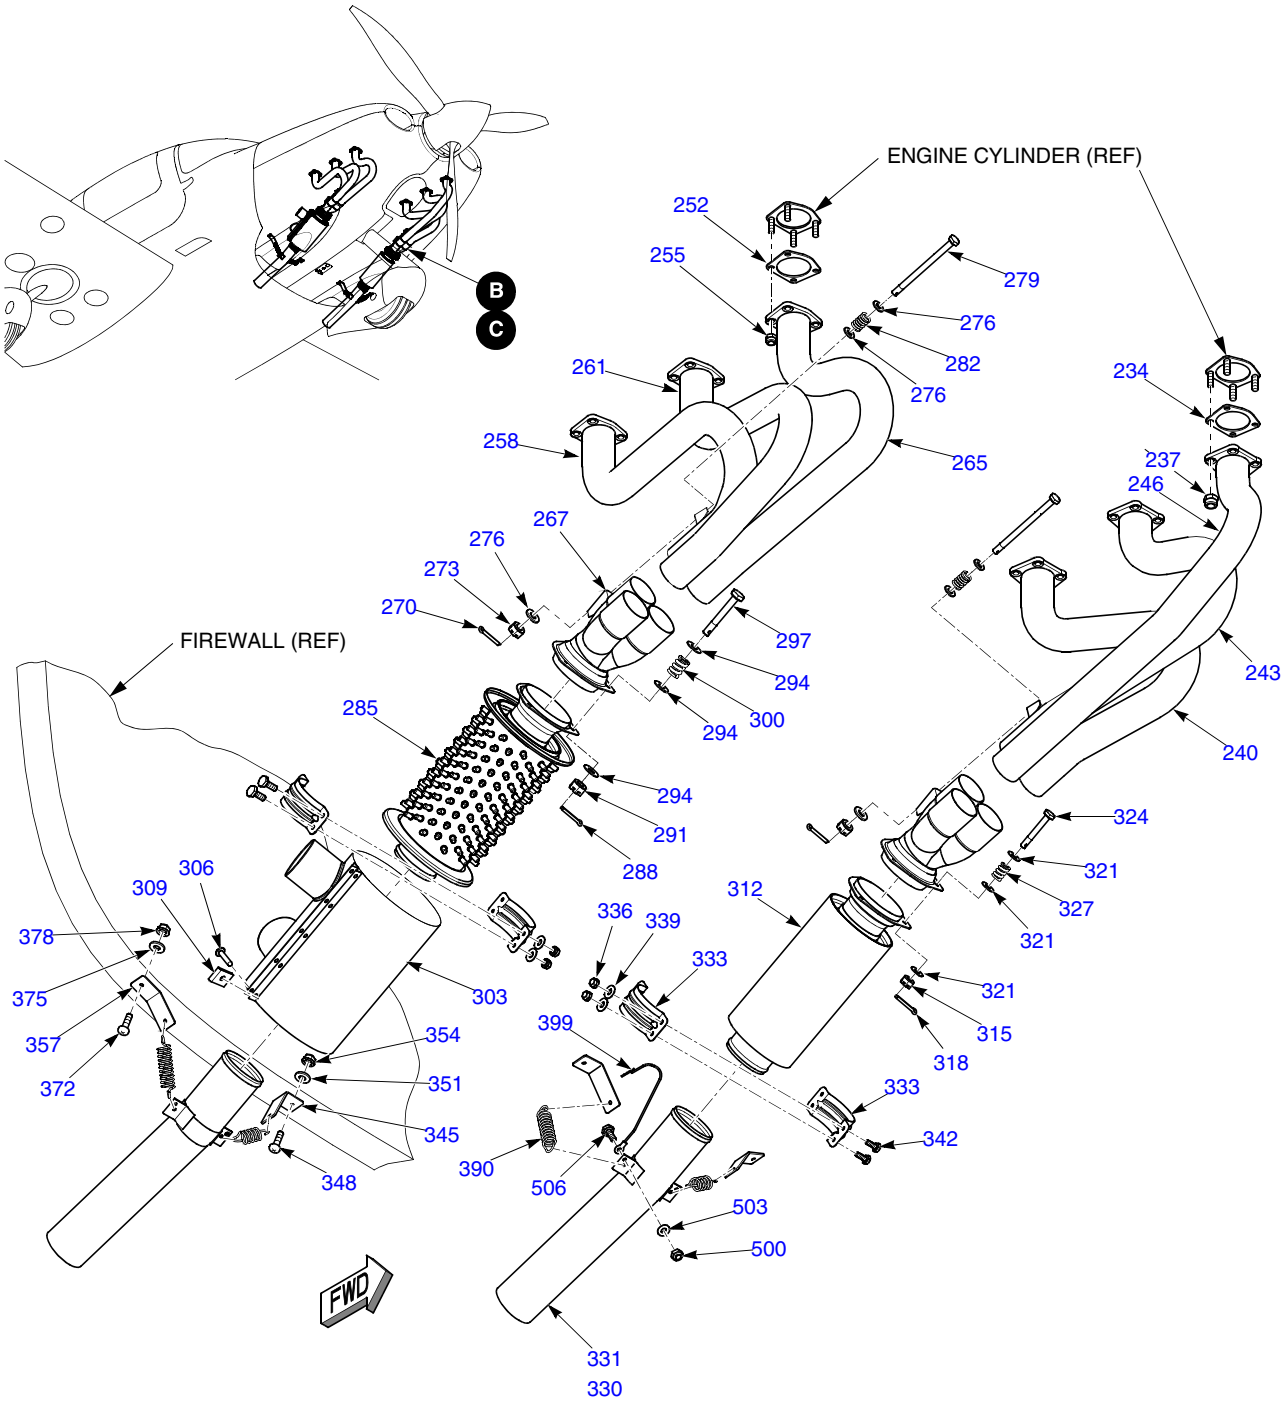

DETAIL B

Serials 22-0320 thru 22-0820.

SR22_PC78_1315B

Figure-01
Exhaust System - Serials 22-0320 thru 22-0820 (2 of 3)

EFFECTIVITY:
Serials 22-0320 thru 22-0820

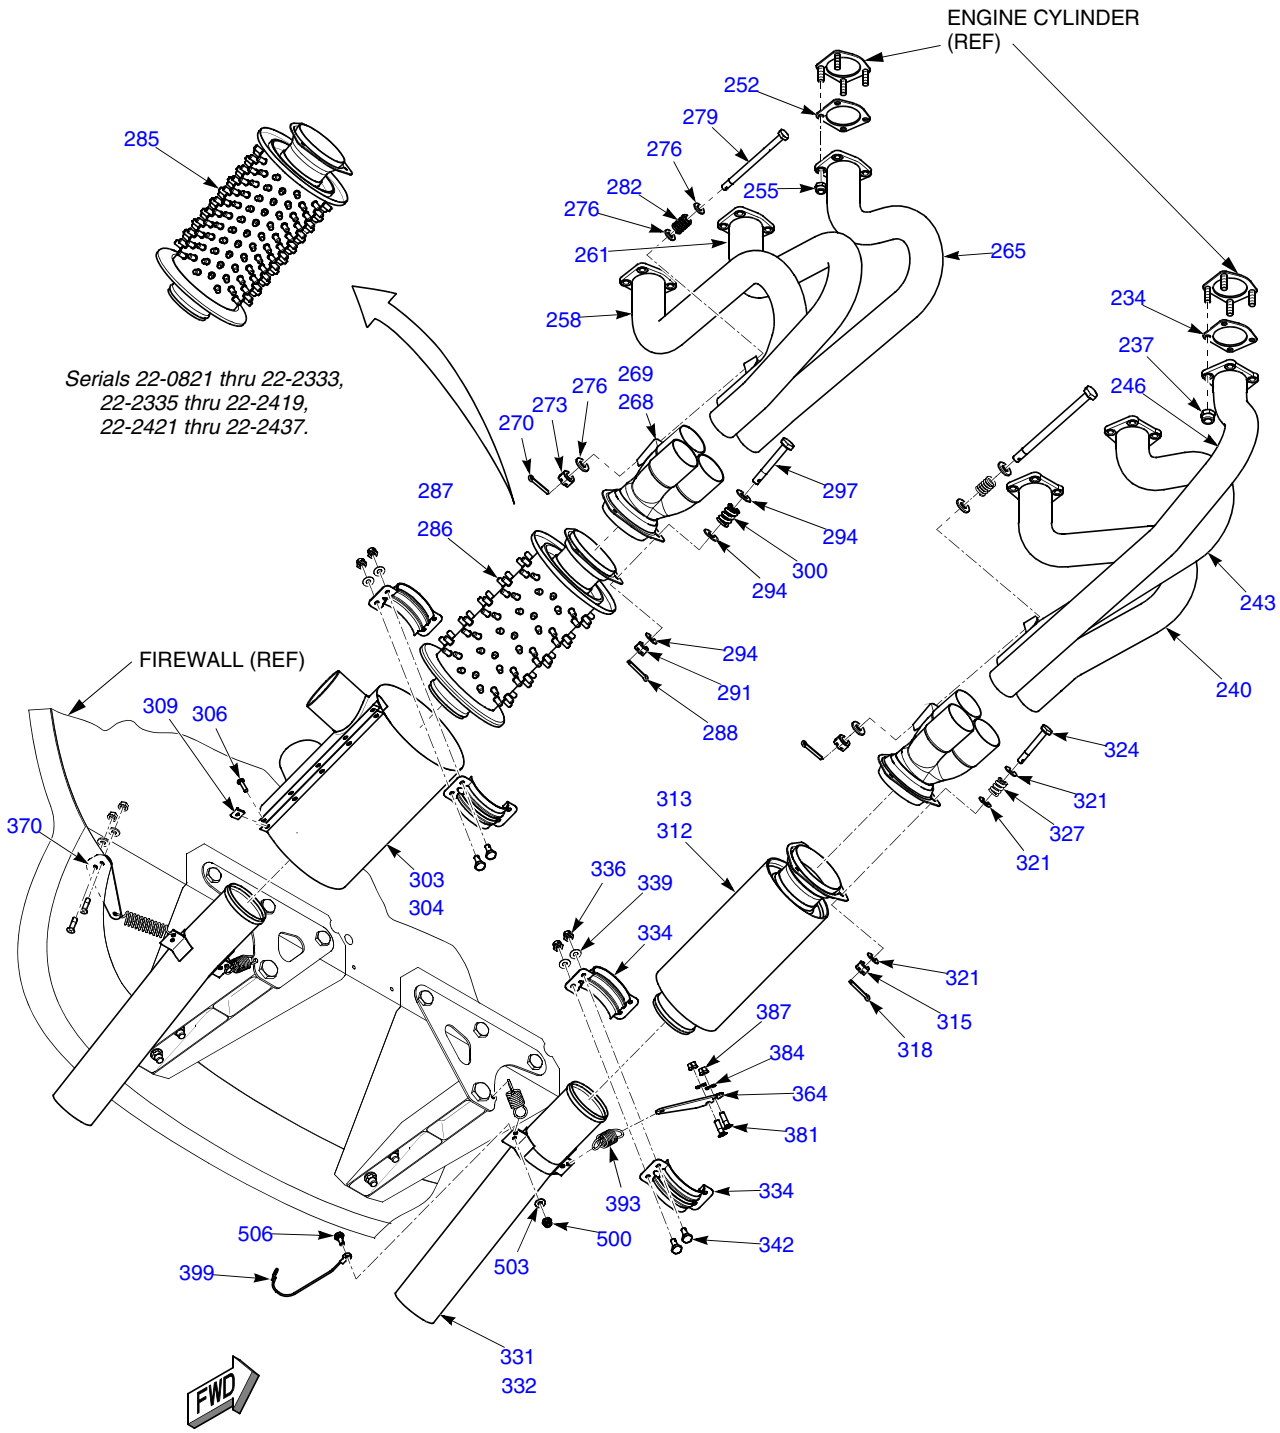

DETAIL C

SR22_PC78_1401A

Figure-01
Exhaust System - Serials 22-0821 & subs (3 of 3)

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			EXHAUST SYSTEM INSTALLATION	0002		NP
-	9	NO PRT NUMBER			·EXHAUST HEADER ASSEMBLY, LH	0002	0319	NP
	12	50965-001		A	·GASKET	0002	0319	3
	15	50966-001		A	·NUT	0002	0319	12
	18	13541-001			··HEADER #2, TOP	0002	0319	1
	21	13542-001			··HEADER #2, BOTTOM	0002	0319	1
	24	13545-001			··HEADER #4, TOP	0002	0319	1
					BEFORE SB2X-78-04			
	27	13908-001			··HEADER #4, BOTTOM	0002	0319	1
					BEFORE SB2X-78-04			
	28	70048-101			··HEADER #4, ASSY	0002	0319	1
					AFTER SB2X-78-04			
	30	13547-001			··HEADER #6, TOP	0002	0319	1
					BEFORE SB2X-71-06			
					WHEN EXHTD USE P/N 15695-001			
	31	15695-001	!		··HEADER #6, TOP	0002	0319	1
					AFTER SB2X-71-06			
	33	13548-001			··HEADER #6, BOTTOM	0002	0319	1
					BEFORE SB2X-71-06			
					WHEN EXHTD USE P/N 15696-001			
	34	15696-001	!		··HEADER #6, BOTTOM	0002	0319	1
					AFTER SB2X-71-06			
-	36	NO PRT NUMBER			·EXHAUST HEADER ASSEMBLY, RH	0002	0319	NP
	39	50965-001		A	·GASKET	0002	0319	3
	42	50966-001		A	·NUT	0002	0319	12
	45	13538-001			··HEADER #1, TOP	0002	0319	1
					BEFORE SB2X-71-06			
					WHEN EXHTD USE P/N 15691-001			
	46	15691-001	#		··HEADER #1, TOP	0002	0319	1
					AFTER SB2X-71-06			
-	48	13539-001			··HEADER #1, BOTTOM	0002	0019	1
					FOR SPARES USE P/N 13539-002			
	51	13539-002			··HEADER #1, BOTTOM	0020	0319	1
					BEFORE SB2X-71-06			
					WHEN EXHTD USE P/N 15692-001			
	52	15692-001	#		··HEADER #1, BOTTOM	0002	0319	1
					AFTER SB2X-71-06			
	54	13543-001			··HEADER #3, TOP	0002	0319	1
					BEFORE SB2X-71-06			
					WHEN EXHTD USE P/N 15693-001			
	55	15693-001	$		··HEADER #3, TOP	0002	0319	1
					AFTER SB2X-71-06			
-	57	13544-001			··HEADER #3, BOTTOM	0002	0019	1
					FOR SPARES USE P/N 13544-002			
	60	13544-002			··HEADER #3, BOTTOM	0020	0319	1
					BEFORE SB2X-71-06			
					WHEN EXHTD USE P/N 15694-001			
	61	15694-001	$		··HEADER #3, BOTTOM	0002	0319	1
					AFTER SB2X-71-06			
	63	13546-001			··HEADER #5, TOP	0002	0319	1
					BEFORE SB2X-78-04			
-	66	13909-001			··HEADER #5, BOTTOM	0002	0019	1
					FOR SPARES USE P/N 13909-002			

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678	NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
						BEFORE SB2X-78-04			
	69	13909-002				··HEADER #5, BOTTOM	0020	0319	1
						BEFORE SB2X-78-04			
	70	70048-102				··HEADER #5, ASSY	0002	0319	1
						AFTER SB2X-78-04			
	72	13535-001				·Y-PIPE COLLECTOR	0002	0319	1
	75	AN4C32		A		·BOLT	0002	0319	1
	78	NAS1149C0463R		A		·WASHER	0002	0319	3
	81	50456-001		A		·SPRING	0002	0319	1
	84	AN310C4		A		·NUT	0002	0319	1
	87	MS24665-149		A		·COTTER PIN	0002	0319	1
-	90	13755-001				·MID-PIPE	0002	0134	1
						FOR SPARES USE P/N 13755-002			
						FOR SPARES USE P/N 13755-003			
	93	13755-002				·INBOARD MID-PIPE	0135	0319	1
	96	13755-003				·OUTBOARD MID-PIPE	0135	0319	1
	99	AN4C32		A		·BOLT	0002	0319	1
	102	NAS1149C0463R		A		·WASHER	0002	0319	3
	105	50456-001		A		·SPRING	0002	0319	1
	108	AN310C4		A		·NUT	0002	0319	1
	111	MS24665-149		A		·COTTER PIN	0002	0319	1
	114	14050-002				·HEAT EXCHANGER	0002	0221	1
						FOR SPARES USE P/N 14694-002			
-	117	14694-002				·HEAT EXCHANGER/TAIL PIPE	0222	0319	1
	120	AN3C20		A		·BOLT	0002	0319	3
	123	NAS1587-3		A		·WASHER	0002	0319	9
	126	50221-001		A		·SPRING	0002	0319	3
	129	AN310C3		A		·NUT	0002	0319	3
	132	MS24665-149		A		·COTTER PIN	0002	0319	3
	135	AN4C11		A		·BOLT	0002	0173	2
						BEFORE SB22-01-00			
	138	50456-001		A		·SPRING	0002	0173	2
						BEFORE SB22-01-00			
	141	NAS1149C0463R		A		·WASHER	0002	0173	2
						BEFORE SB22-01-00			
	144	AN310C4		A		·NUT	0002	0173	2
						BEFORE SB22-01-00			
	147	MS24665-149		A		·COTTER PIN	0002	0173	2
						BEFORE SB22-01-00			
	150	AN3C16		A		·BOLT	0002	0319	2
						AFTER SB22-01-00			
	153	NAS1587-3		A		·WASHER	0002	0319	10
						AFTER SB22-01-00			
	156	50456-001		A		·SPRING	0002	0319	4
						AFTER SB22-01-00			
	159	AN310C3		A		·NUT	0002	0319	2
						AFTER SB22-01-00			
	162	MS24665-149		A		·COTTER PIN	0002	0319	2
						AFTER SB22-01-00			
	165	14028-001				·SHROUD, HEAT EXCHANGER	0002	0319	1
	168	AN530-8R12		A		·SCREW	0002	0319	4
	171	50486-002		A		·NUT	0002	0319	4
	174	13529-001				·TAILPIPE ASSEMBLY	0002	0221	1
						FOR SPARES USE P/N 14694-002			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	177	AN3C20		A	·BOLT	0002	0221	3
	186	NAS1587-3		A	·WASHER	0002	0221	9
	189	50221-001		A	·SPRING	0002	0221	3
	192	AN310C3		A	·NUT	0002	0221	3
	195	MS24665-149		A	·COTTER PIN	0002	0221	3
	198	MS25083-6BB6			·GROUND STRAP	0002	0319	1
	201	13925-001			·REAR SUPPORT ASSEMBLY	0002	0319	1
	204	MS27039C106		A	·SCREW	0002	0319	2
	207	NAS1587-3		A	·WASHER	0002	0319	2
	210	AN3-4A		A	·BOLT	0002	0007	2
						0012	0012	
					BEFORE SB22-78-01			
	211	AN3-4A		A	·BOLT	0008	0011	1
						0013	0319	
	212	AN3-4A		A	·BOLT	0002	0319	1
					AFTER SB22-78-01			
	213	AN3-10A		A	·BOLT	0008	0011	1
						0013	0319	
	214	AN3-10A		A	·BOLT	0002	0319	1
					AFTER SB22-78-01			
	215	AN3-3A		A	·BOLT	0008	0011	1
						0013	0319	
	216	AN3-3A		A	·BOLT	0002	0319	1
					AFTER SB22-78-01			
	217	NAS1149F0332P		A	·WASHER	0002	0007	2
						0012	0012	
					BEFORE SB22-78-01			
	218	NAS1149F0332P		A	·WASHER	0008	0011	3
						0013	0319	
	219	NAS1149F0332P		A	·WASHER	0002	0319	3
					AFTER SB22-78-01			
	220	AN970-3		A	·WASHER	0008	0011	1
						0013	0319	
	221	AN970-3			·WASHER	0002	0319	1
					AFTER SB22-78-01			
	222	MS21045N3		A	·NUT	0008	0011	1
						0013	0319	
	223	MS21045N3		A	·NUT	0002	0319	1
					AFTER SB22-78-01			
	224	R6176-101			·BUSHING	0008	0011	1
						0013	0319	
	226	R6176-101			·BUSHING	0002	0319	1
					AFTER SB22-78-01			
-	231	NO PRT NUMBER			·EXHAUST HEADER ASSEMBLY, LH	0320		NP
	234	50965-001		A	·GASKET	0320		3
	237	50966-001		A	·NUT	0320		12
	240	15072-001			··HEADER #2, ASSY	0320		1
	243	15073-001			··HEADER #4, ASSY	0320		1
	246	15074-001			··HEADER #6, ASSY	0320		1
-	249	NO PRT NUMBER			·EXHAUST HEADER ASSEMBLY, RH	0320		NP
	252	50965-001		A	·GASKET	0320		3
	255	50966-001		A	·NUT	0320		12
	258	15080-001			··HEADER #1, ASSY	0320		1
	261	15069-001			··HEADER #3, ASSY	0320		1

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	264	15070-001			··HEADER #5, ASSY	0320		1
					FOR SPARES USE P/N 15070-003			
	265	15070-003			··HEADER #5, ASSY	0320		1
	267	15106-001			·COLLECTOR	0320	0820	2
	268	20153-001			·COLLECTOR	0821	4298	2
	269	20153-002			·COLLECTOR	4299		2
					ALTERNATE FOR P/N 20153-001			
	270	MS24665-149		A	·COTTER PIN	0320		2
	273	AN310C4		A	·NUT	0320		2
	276	NAS1587-4		A	·WASHER	0320		6
	279	AN4C35	%	A	·BOLT	0320		2
	282	50456-001			·SPRING	0320		2
	285	14837-001			·HEAT EXCHANGER	0320	2437	1
	286	21892-001			·HEAT EXCHANGER	2438	4298	1
					FOR SPARES USE P/N 21892-002			
	287	21892-002			·HEAT EXCHANGER	4299		1
	288	MS24665-149		A	·COTTER PIN	0320		3
	291	AN310C3		A	·NUT	0320		3
	294	NAS1587-3		A	·WASHER	0320		9
	297	AN3C14	%	A	·BOLT	0320		3
	300	50221-001			·SPRING	0320		3
	303	14856-001			·SHROUD, HEAT EXCHANGER	0320	4298	1
	304	14856-002			·SHROUD, HEAT EXCHANGER	4299		1
					ALTERNATE FOR P/N 14856-001			
	306	AN530-8R12		A	·SCREW	0320		5
	309	50486-002		A	·NUT	0320		5
	312	14836-001			·MUFFLER	0320	4298	1
					FOR SPARES USE P/N 14836-002			
	313	14836-002			·MUFFLER	4299		1
	315	AN310C3		A	·NUT	0320		3
	318	MS24665-149		A	·COTTER PIN	0320		3
	321	NAS1587-3		A	·WASHER	0320		9
	324	AN3C14	%	A	·BOLT	0320		3
	327	50221-001			·SPRING	0320		3
	330	15077-001			·TAILPIPE	0320	0705	2
	331	15077-002			·TAILPIPE, SILVER	0706		2
	332	15077-003			·TAILPIPE, BLACK	0821		2
	333	14950-001		A	·CLAMP	0320	0820	4
	334	20166-001		A	·CLAMP	0821		4
	336	MS21045C3		A	·NUT	0320		8
	339	NAS1587-3		A	·WASHER	0320		8
	342	AN3C4A		A	·BOLT	0320		8
	345	12373-001			·BRACKET	0320	0820	2
	348	MS24694S52		A	·SCREW	0320	0820	2
	351	NAS1149F0332P		A	·WASHER	0320	0820	2
	354	MS21045-3		A	·NUT	0320	0820	2
	357	12374-001			·BRACKET	0320	0820	2
-	360	20155-004			·BRACKET, LH	0821	0855	1
					FOR SPARES USE P/N 20155-010			
-	363	20155-007			·BRACKET, LH	0856	2661	1
					FOR SPARES USE P/N 20155-010			
	364	20155-010			·BRACKET, LH	2662		1
-	366	20155-005			·BRACKET, RH	0821	0855	1
					FOR SPARES USE P/N 20155-009			

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	369	20155-006			·BRACKET, RH	0856	2661	1
					FOR SPARES USE P/N 20155-009			
	370	20155-009			·BRACKET, RH	2662		1
	372	MS24694S52		A	·SCREW	0320	0820	2
	375	NAS1149F0332P		A	·WASHER	0320	0820	2
	378	MS21045-3		A	·NUT	0320	0820	2
	381	MS24694S52		A	·SCREW	0821		4
	384	NAS1149F0332P		A	·WASHER	0821		4
	387	MS21045-3		A	·NUT	0821		4
	390	50442-001			·SPRING	0320	0820	4
	393	51381-001			·SPRING	0821		4
					ALTERNATE FOR P/N 51389-001			
-	396	51389-001			·SPRING	0821		4
					ALTERNATE FOR P/N 51381-001			
	399	MS25083-6BB6			·GROUNDING STRAP	0320		2
	500	MS21045C3		A	·NUT	0320		2
	503	NAS1587-3		A	·WASHER	0320		2
	506	AN3C4A		A	·BOLT	0320		2
					SYMBOL NOTES:			
			!		15695-001 MUST BE INSTALLED WITH 15696-001.			
			#		15691-001 MUST BE INSTALLED WITH 15692-001.			
			$		15693-001 MUST BE INSTALLED WITH 15694-001.			
			%		DIFFERENT LENGTH BOLTS MAY BE USED AS REQUIRED FOR PROPER COMPRESSION.			

EFFECTIVITY:
All

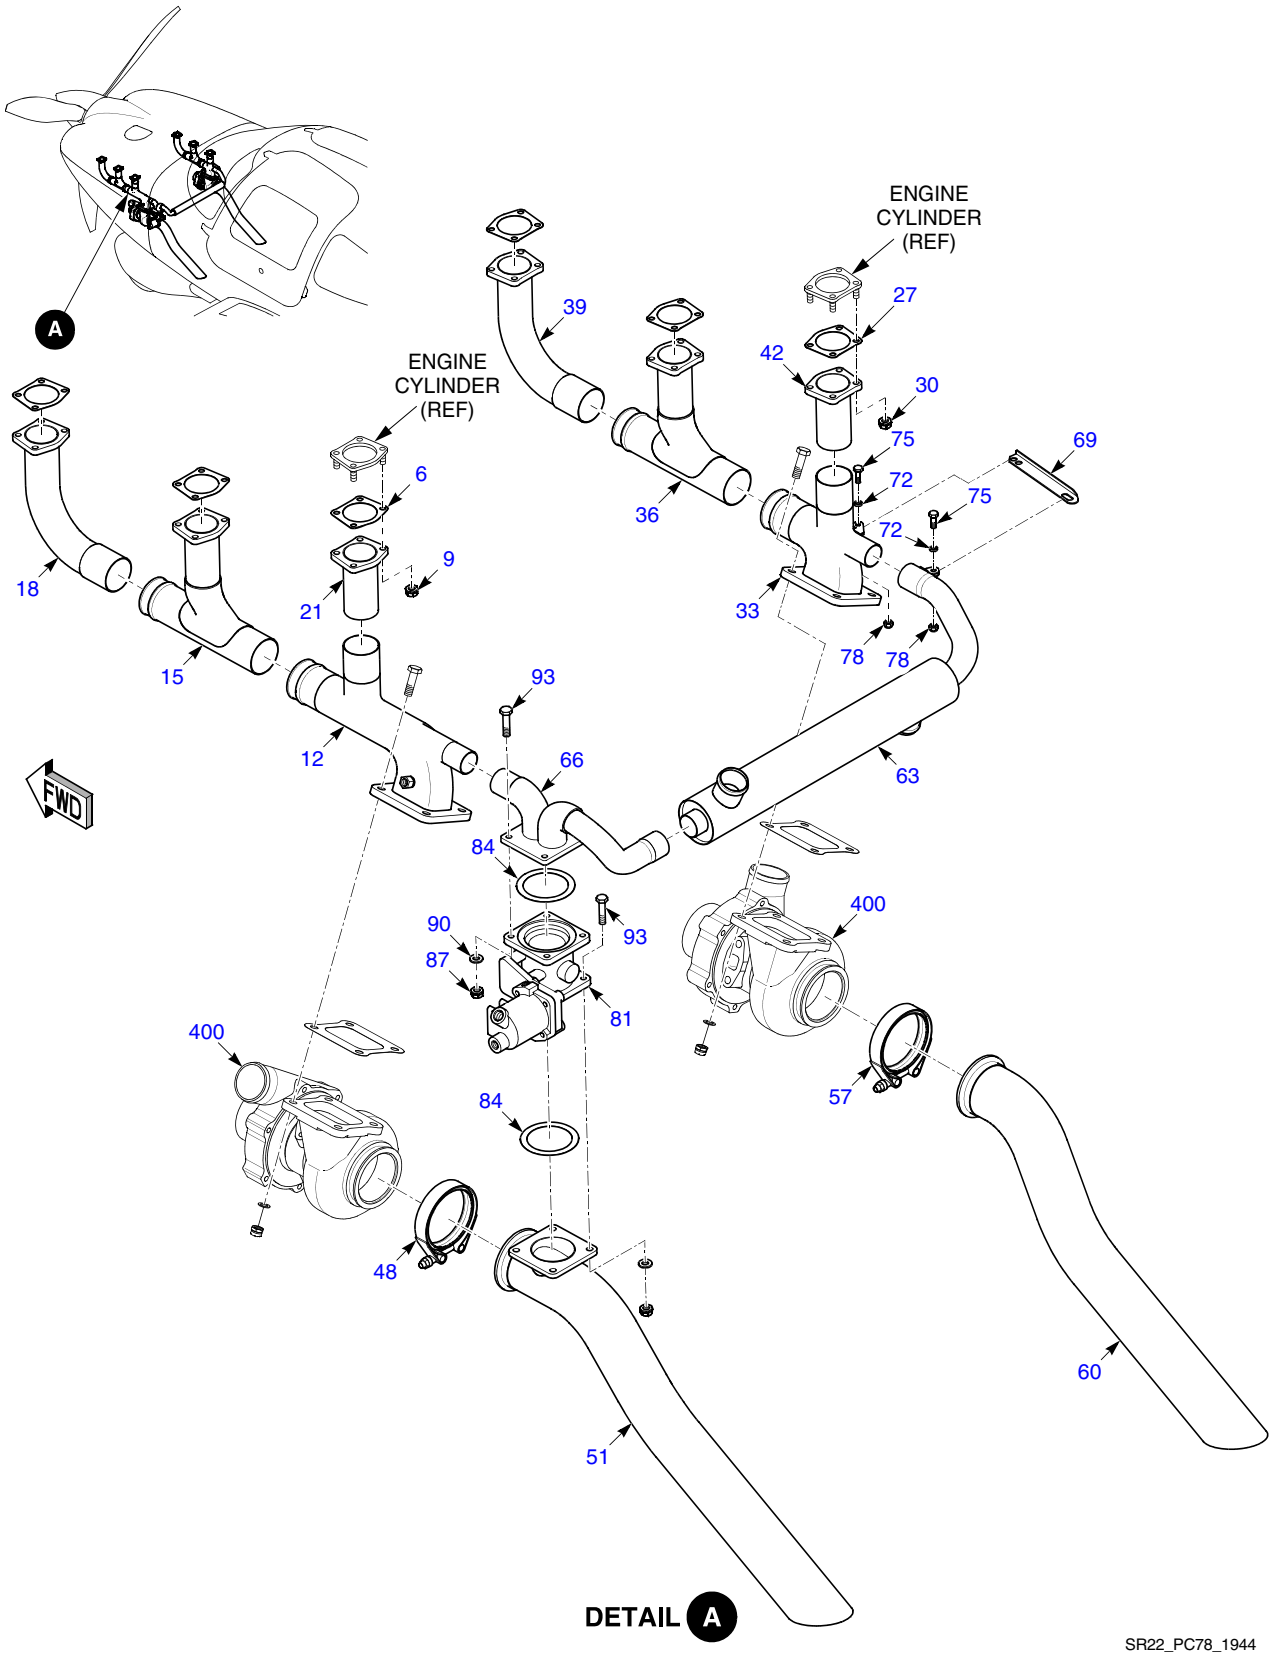

Figure-02
Exhaust System - Serials 22T-0001 & subs

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 02			EXHAUST SYSTEM	/ 0001	/	NP
-	3	NO PRT NUMBER			·EXHAUST HEADER ASSEMBLY, LH	/ 0001	/	NP
	6	652458		A	·GASKET	/ 0001	/	3
	9	MS20500-428		A	·NUT	/ 0001	/	12
	12	657631			··HEADER #2, TURBOCHARGER TRANSITION ASSY	/ 0001	/	1
	15	657648			··HEADER #4, TEE ASSY	/ 0001	/	1
	18	657650			··HEADER #6, ELBOW RISER ASSY	/ 0001	/	1
	21	657652			··RISER, ASSY	/ 0001	/	1
-	24	NO PRT NUMBER			·EXHAUST HEADER ASSEMBLY, RH	/ 0001	/	NP
	27	652458		A	·GASKET	/ 0001	/	3
	30	MS20500-428		A	·NUT	/ 0001	/	12
	33	657633			··HEADER #1, TURBOCHARGER TRANSITION ASSY	/ 0001	/	1
	36	657647			··HEADER #3, TEE ASSY	/ 0001	/	1
	39	657651			··HEADER #5, ELBOW RISER ASSY	/ 0001	/	1
	42	657652			··RISER, ASSY	/ 0001	/	1
-	45	NO PRT NUMBER			·TAILPIPE ASSEMBLY, LH	/ 0001	/	NP
	48	657198		A	·CLAMP	/ 0001	/	1
	51	657636			··TAILPIPE	/ 0001	/	1
-	54	NO PRT NUMBER			·TAILPIPE ASSEMBLY, RH	/ 0001	/	NP
	57	657198		A	·CLAMP	/ 0001	/	1
	60	657635			··TAILPIPE	/ 0001	/	1
	63	657690			·CROSSOVER ASSEMBLY	/ 0001	/	1
	66	657630			·TRANSITION ASSEMBLY	/ 0001	/	1
	69	657632			·TIE ROD	/ 0001	/	1
	72	654309		A	·SPACER	/ 0001	/	2
	75	AN3-4A		A	·BOLT	/ 0001	/	2
	78	MS21043-3		A	·NUT	/ 0001	/	2
	81	657121-4			·WASTEGATE ASSEMBLY	/ 0001	/	1
	84	652456			·GASKET	/ 0001	/	2
	87	MS20500-428		A	·NUT	/ 0001	/	8
	90	NAS1587-4		A	·WASHER	/ 0001	/	8
	93	MS20034-5		A	·BOLT	/ 0001	/	8
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 81-20-01 DET			TURBOCHARGER			

EFFECTIVITY:
All

CHAPTER 79

OIL

Intentionally Left Blank

CHAPTER 79 - OIL

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
79-LOEP	1	04 SEP 2018
79-LOEP	2	04 SEP 2018
79-TOC	1	04 SEP 2018
79-TOC	2	04 SEP 2018
79-20-01	1	15 DEC 2014
79-20-01	2	15 DEC 2014
79-20-01	3	15 DEC 2014
79-20-01	4	15 DEC 2014
79-20-02	1	15 DEC 2014
79-20-02	2	15 DEC 2014
79-30-01	1	04 SEP 2018
79-30-01	2	04 SEP 2018
79-30-01	3	04 SEP 2018
79-30-01	4	04 SEP 2018
79-30-01	5	04 SEP 2018
79-30-01	6	04 SEP 2018

Intentionally Left Blank

CHAPTER 79 - OIL

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Oil Cooler - Serials 22-0002 & subs (1 of 2)	79-20-01
Oil Cooler - Serials 22T-0001 & subs (2 of 2)	79-20-01
Oil Separator - Serials 22T-0001 & subs	79-20-02
Oil Pressure/Temp Sensors and Gauge - Serials 22-0002 & subs before SB2X-79-08 (1 of 4)	79-30-01
Oil Pressure/Temp Sensors and Gauge - Serials 22-0002 & subs after SB2X-79-08 (2 of 4)	79-30-01
Oil Pressure/Temp Sensors and Gauge - Serials 22T-0001 & subs before SB2X-79-04 (3 of 4)	79-30-01
Oil Pressure/Temp Sensors and Gauge - Serials 22T-0001 & subs after SB2X-79-04 (4 of 4)	79-30-01

Intentionally Left Blank

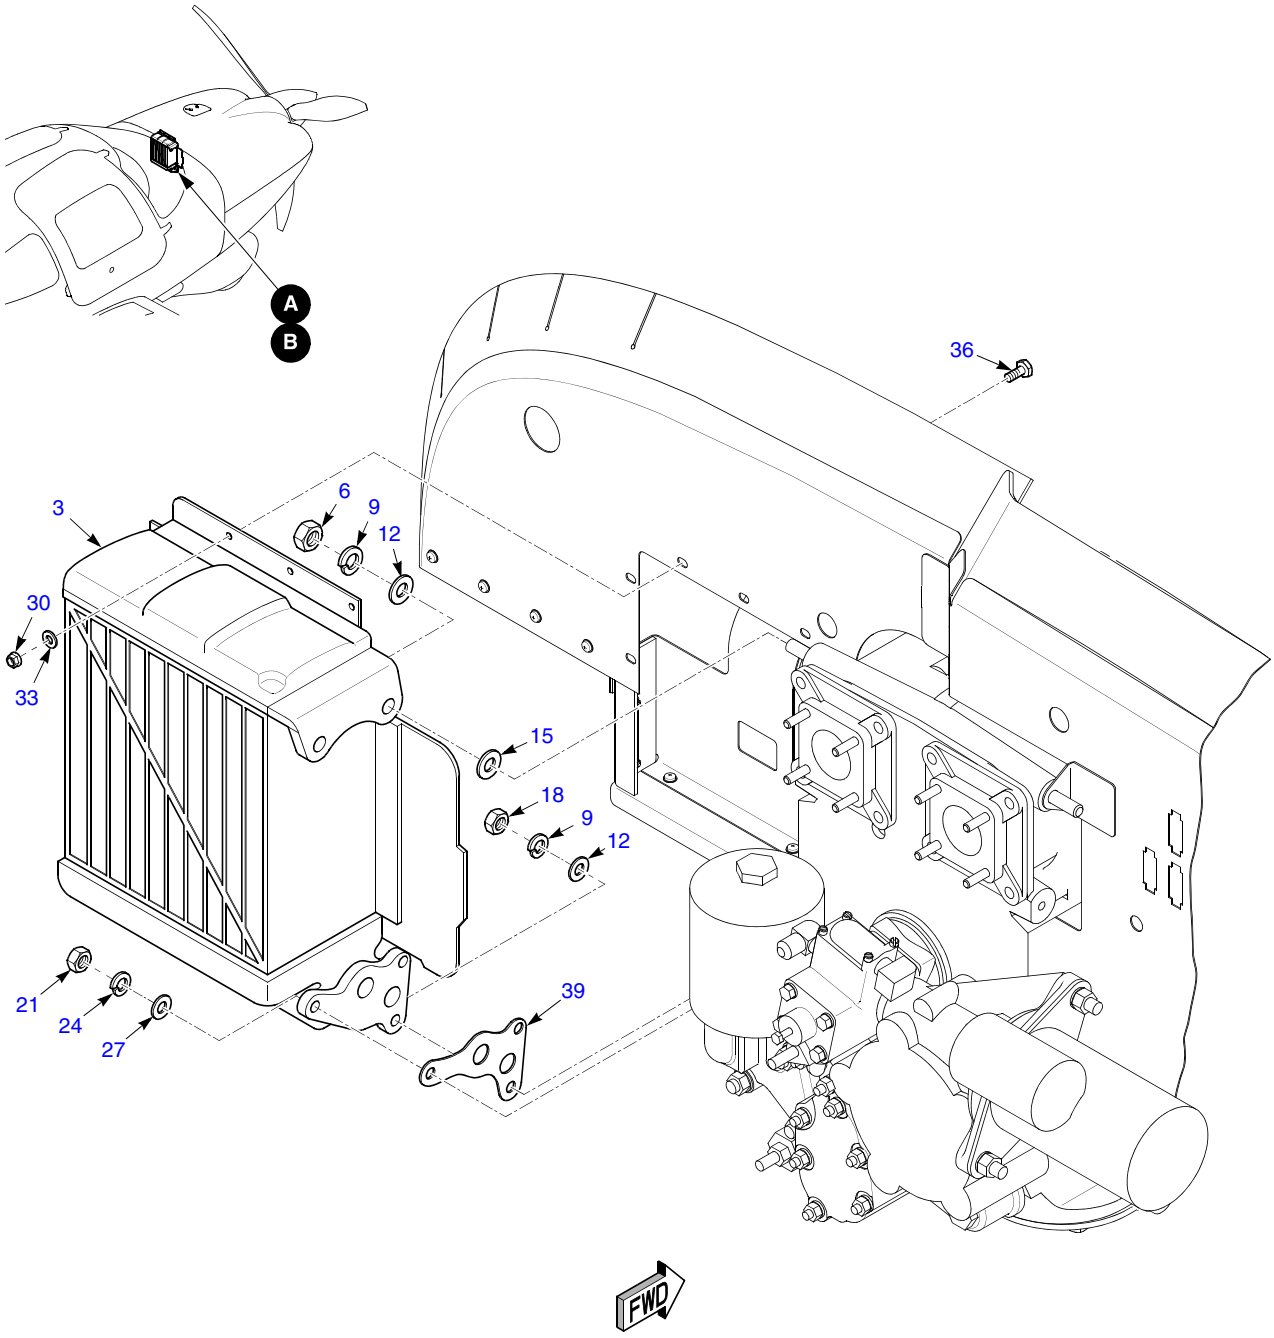

DETAIL A

Serials 22-0002 & subs.

SR22_PC79_1502B

Figure-01
Oil Cooler - Serials 22-0002 & subs (1 of 2)

EFFECTIVITY:
Serials 22-0002 & subs

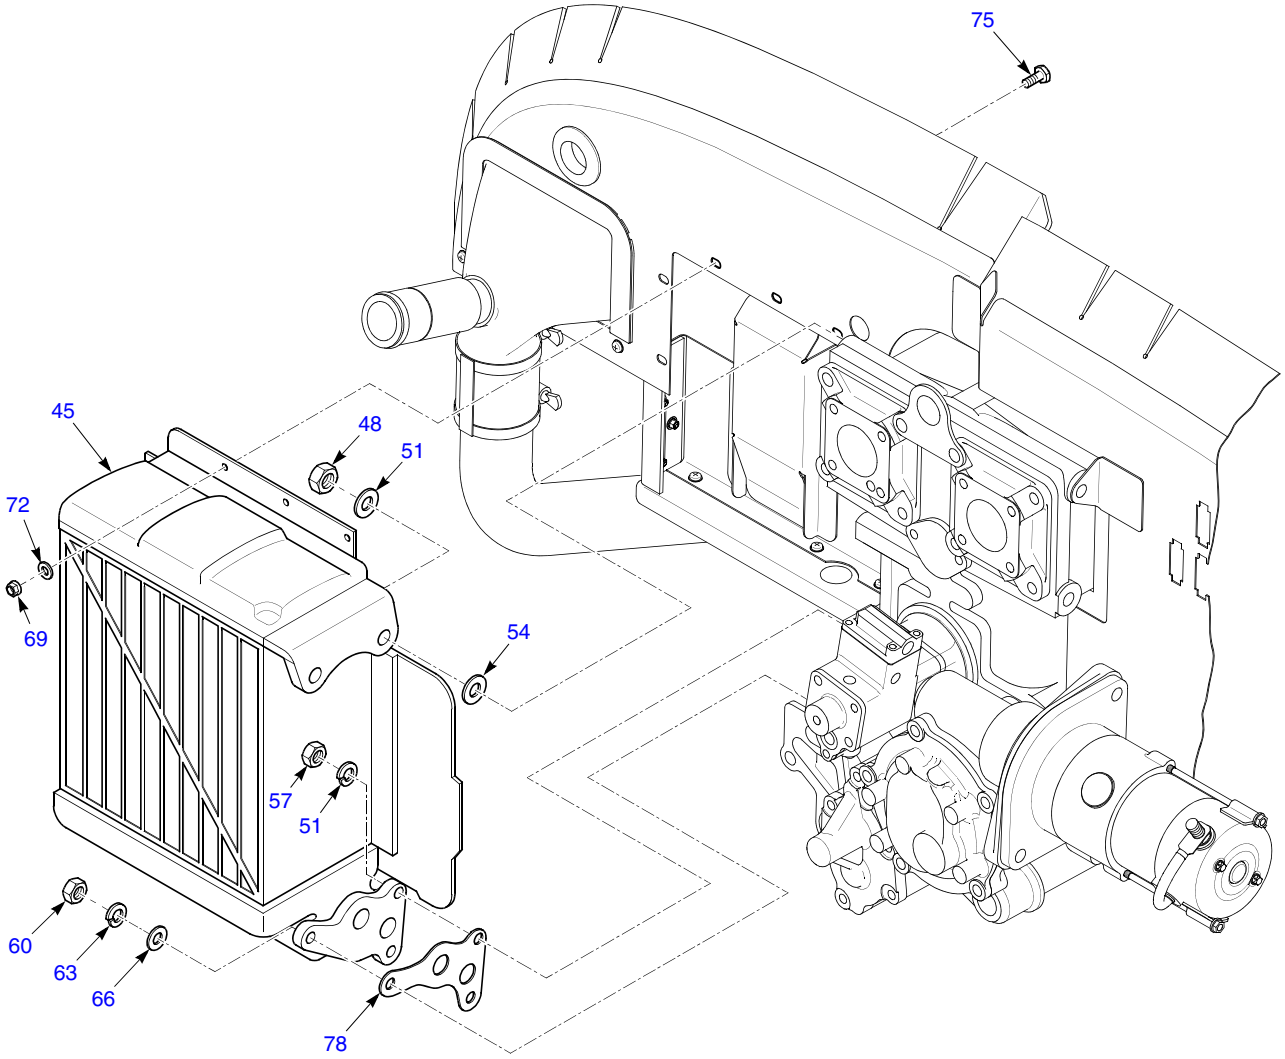

DETAIL B

Serials 22T-0001 & subs.

SR22_PC79_1943

Figure-01
Oil Cooler - Serials 22T-0001 & subs (2 of 2)

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			OIL COOLER	0002 / 0001	/	NP
-	1	NO PRT NUMBER			OIL COOLER ASSEMBLY	0002		NP
	3	654585			·OIL COOLER	0002		1
	6	2441		A	·NUT	0002		2
	9	MS35338-46		A	·WASHER	0002		4
	12	AN960-616L		A	·WASHER	0002		4
	15	649961		A	·GASKET/WASHER	0002		2
	18	652421		A	·NUT	0002		2
	21	AN315-5R		A	·NUT	0002		1
	24	MS35338-45		A	·WASHER	0002		1
	27	AN960-516		A	·WASHER	0002		1
	30	MS21042-3		A	·NUT	0002		7
	33	NAS1149F0332P		A	·WASHER	0002		7
	36	AN3-4A		A	·BOLT	0002		7
	39	649989			·GASKET	0002		1
-	42	NO PRT NUMBER			OIL COOLER ASSEMBLY	/ 0001	/	NP
	45	654585			·OIL COOLER	/ 0001	/	1
	48	2441		A	·NUT	/ 0001	/	2
	51	AN960-616L		A	·WASHER	/ 0001	/	4
	54	649961		A	·GASKET/WASHER	/ 0001	/	2
	57	652421		A	·NUT	/ 0001	/	2
	60	AN315-5R		A	·NUT	/ 0001	/	1
	63	MS35338-45		A	·WASHER	/ 0001	/	1
	66	AN960-516		A	·WASHER	/ 0001	/	1
	69	MS21042-3		A	·NUT	/ 0001	/	7
	72	NAS1149F0332P		A	·WASHER	/ 0001	/	7
	75	AN3-4A		A	·BOLT	/ 0001	/	7
	78	649989			·GASKET	/ 0001	/	1

Intentionally Left Blank

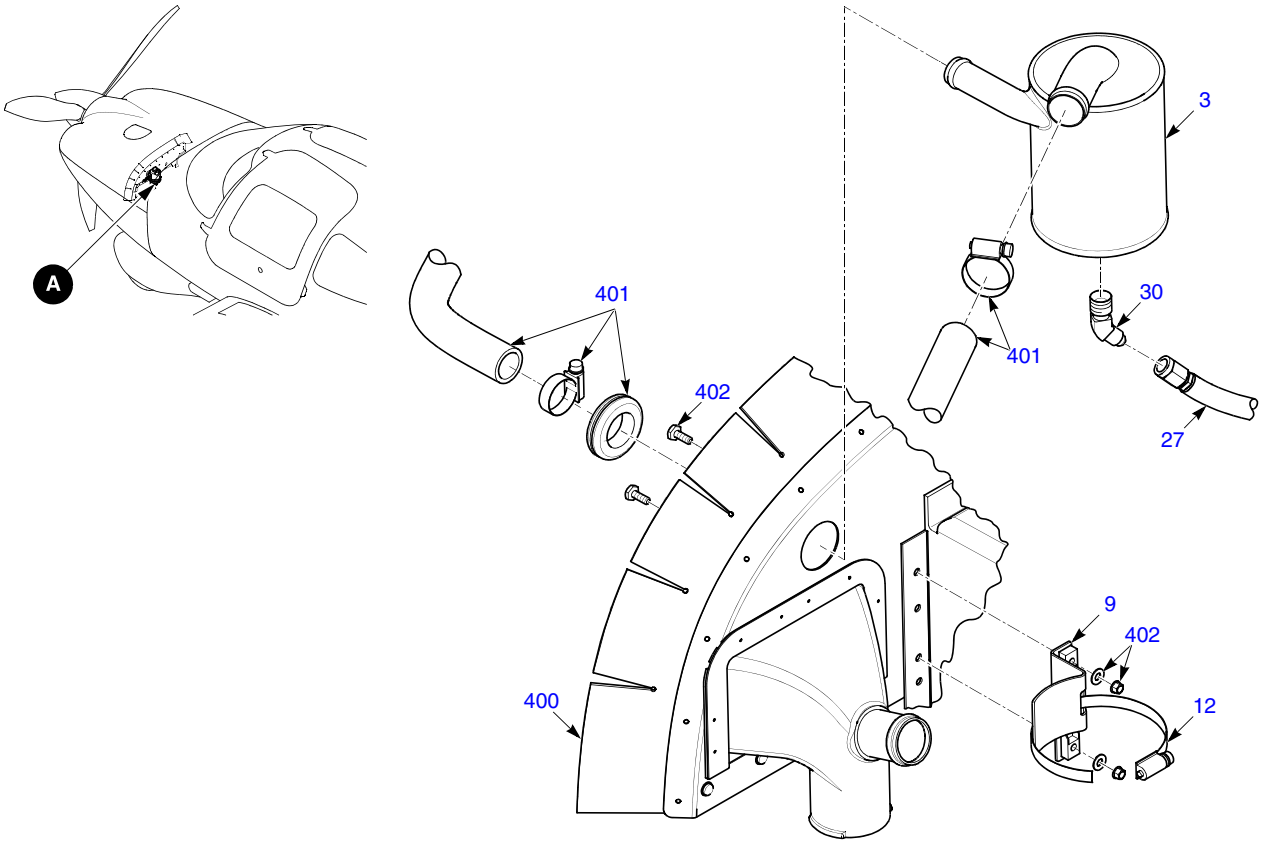

Serials 22T-0001 thru 22T-0198, 22T-0201, 22T-0203, 22T-0213 before SB 2X-71-19.

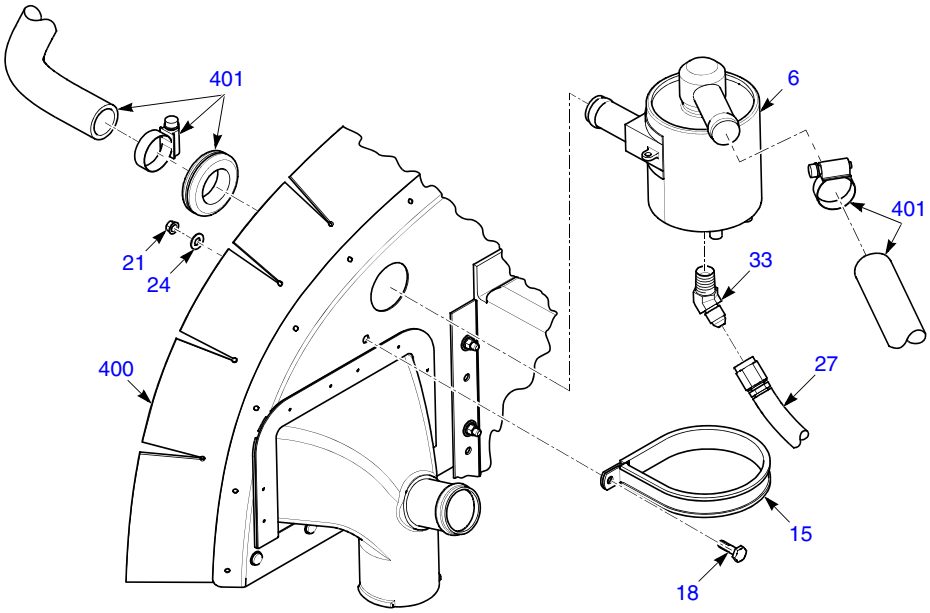

Serials 22T-0001 thru 22T-0198, 22T-0201, 22T-0203, 22T-0213 after SB 2X-71-19, 22T-0199, 22T-0200, 22T-0202, 22T-0204 thru 22T-0212, 22T-0214 & subs.

DETAIL A

SR22_PC79_2057

Figure-02
Oil Separator - Serials 22T-0001 & subs

EFFECTIVITY:
Serials 22T-0001 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	NO PRT NUMBER	**		OIL SEPARATOR INSTALLATION	/ 0001	/	NP
	3	646532			·OIL SEPARATOR	/ 0001	/ 0213	1
	6	20537-002			·OIL SEPARATOR	/ 0214	/	1
	9	29132-001		A	·BRACKET	/ 0001	/ 0213	1
	12	50743-902		A	·CLAMP	/ 0001	/ 0213	1
	15	MS21919WDG48		A	·CLAMP	/ 0214	/	1
	18	AN3-5A		A	·BOLT	/ 0214	/	1
	21	NAS1149F0332P		A	·WASHER	/ 0214	/	1
	24	MS21045-3		A	·NUT	/ 0214	/	1
	27	53326-001			·RETURN LINE ASSEMBLY	/ 0001	/	1
	30	PRT OF ITEM 3			·NIPPLE FITTING	/ 0001	/ 0213	1
	33	MS20823-4		A	·NIPPLE FITTING	/ 0214	/	1
					REFERENCED ITEMS NOT PART OF ASSY/INSTL			
	400	RF 71-00-03 DET			ENGINE BAFFLING			
	401	RF 71-70-01 DET			ENGINE DRAIN SYSTEM INSTALLATION			
	402	RF 79-20-01 DET			OIL COOLER			
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUC-TION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					SERIAL NUMBER 22T-0199, 22T-0200, 22T-0202, 22T-0204 THRU 22T-0212; REFER TO 22T-0214 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

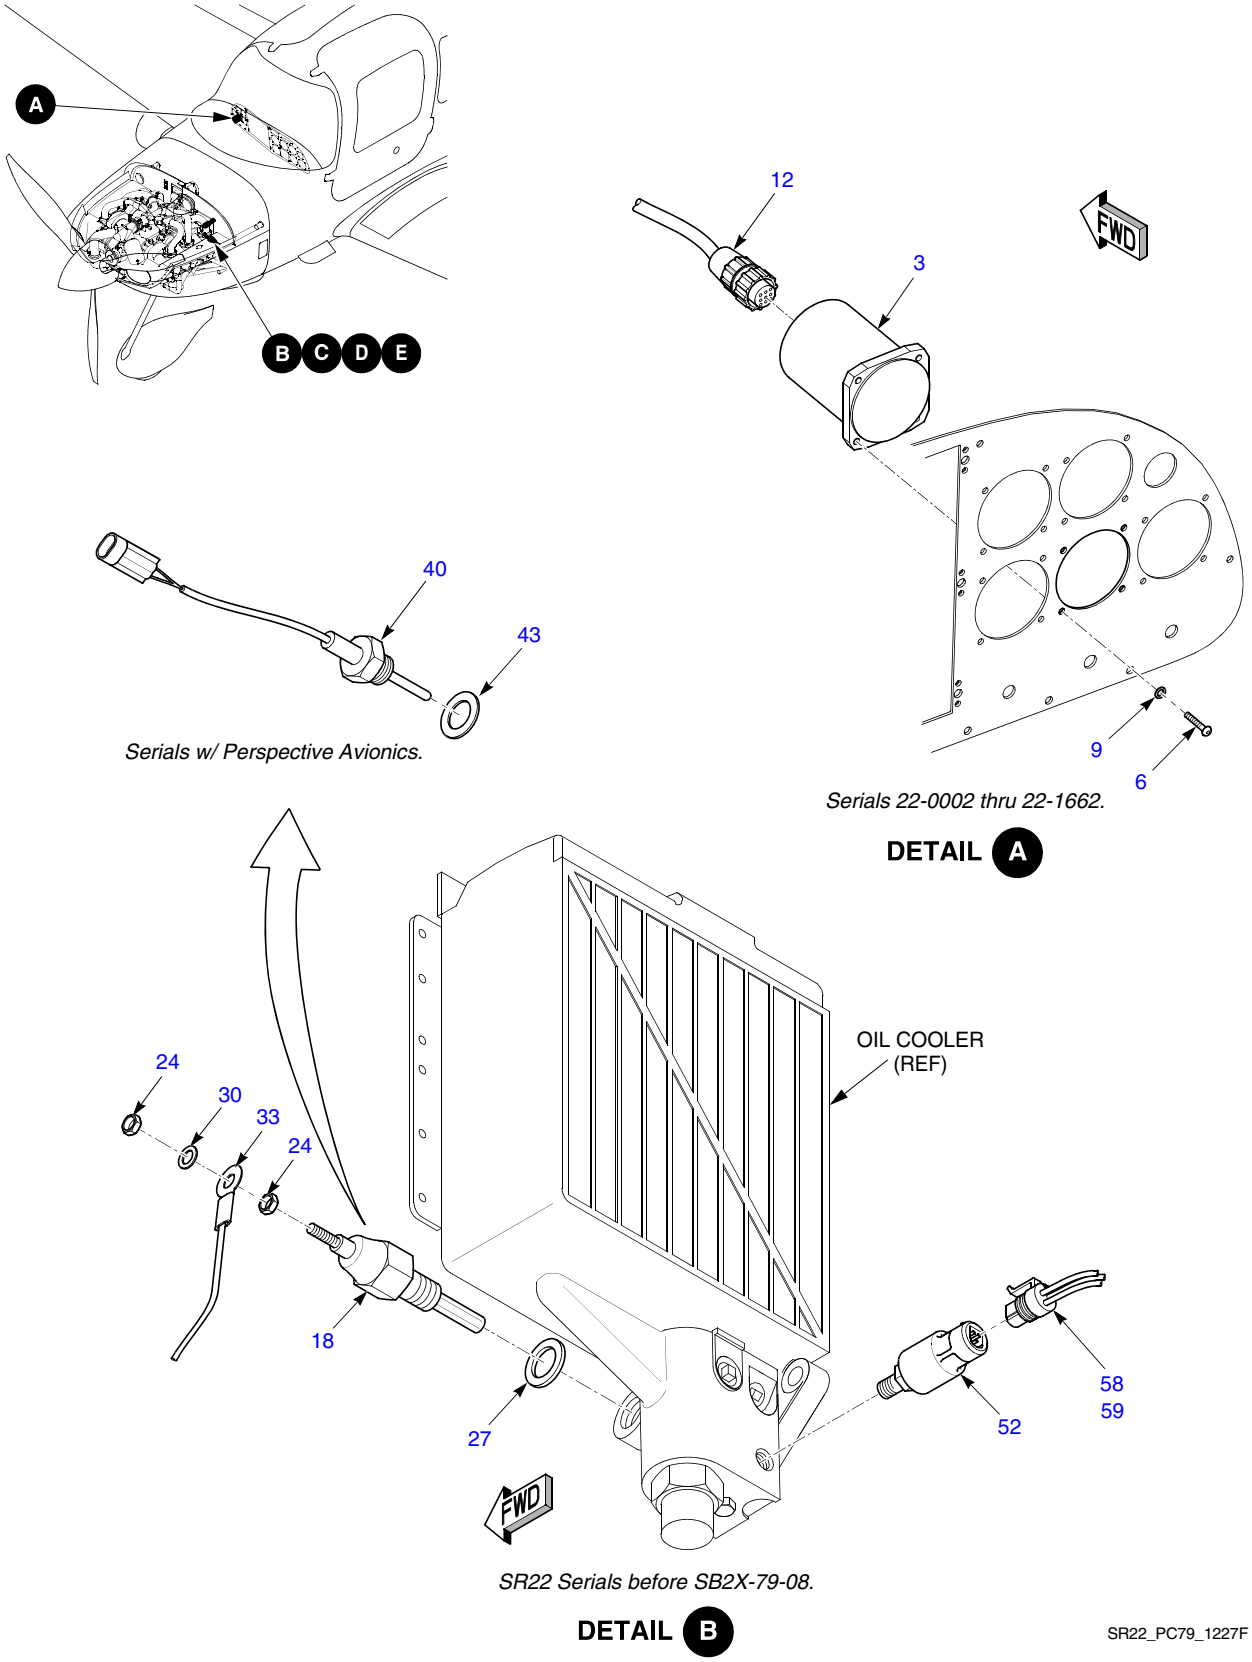

Serials w/ Perspective Avionics.

Serials 22-0002 thru 22-1662.

SR22 Serials before SB2X-79-08.

Figure-01

Oil Pressure/Temp Sensors and Gauge - Serials 22-0002 & subs before SB2X-79-08 (1 of 4)

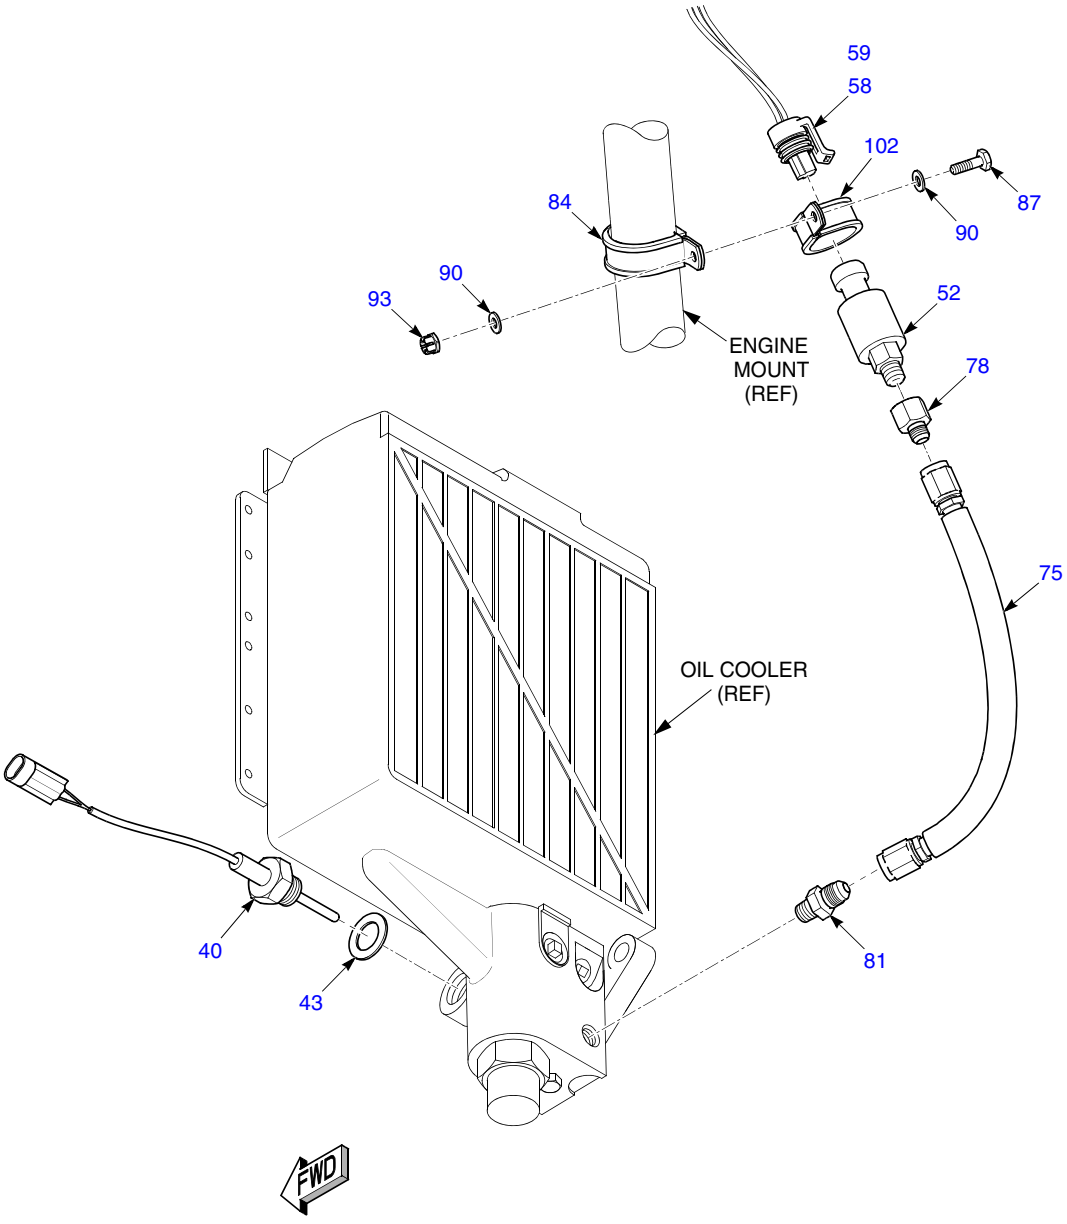

SR22 Serials after SB2X-79-08.

DETAIL C

SR22_PC79_2903

Figure-01
Oil Pressure/Temp Sensors and Gauge - Serials 22-0002 & subs after SB2X-79-08 (2 of 4)

EFFECTIVITY:
Serials 22-0002 & subs after SB2X-79-08

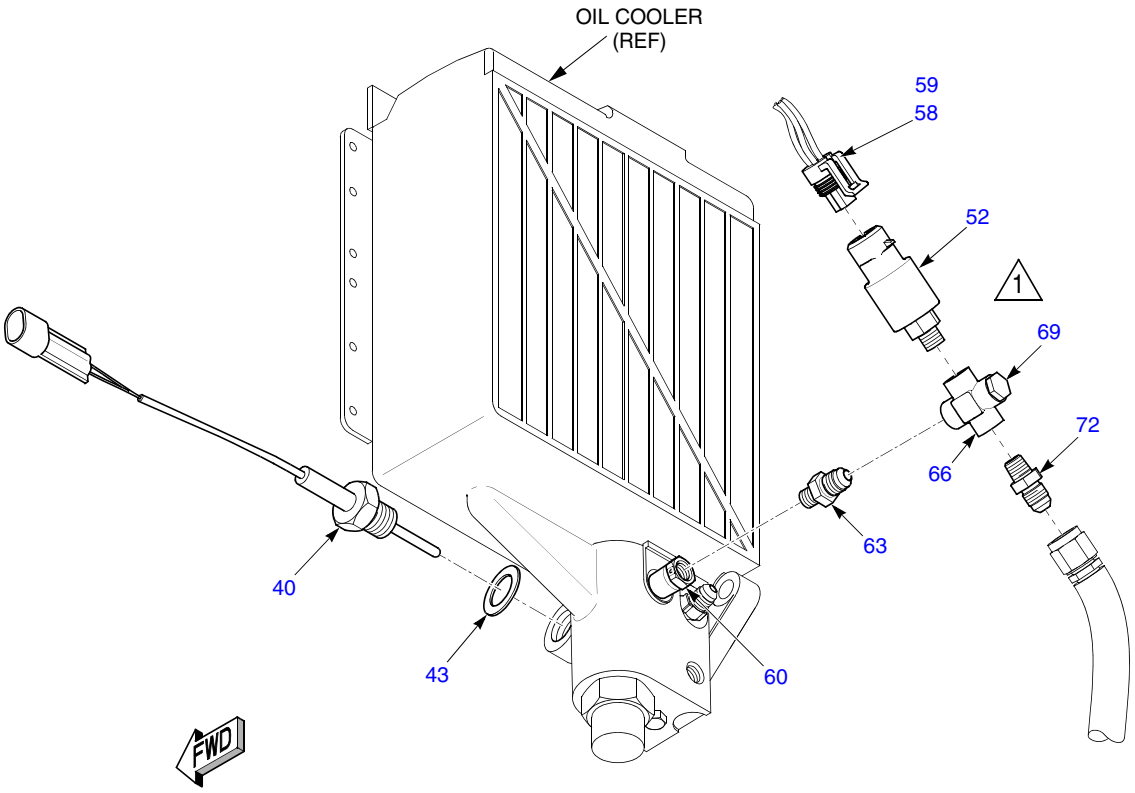

DETAIL D

SR22T Serials before SB2X-79-04.

NOTE

1 Pressure sensor installation may differ from depiction due to manufacturer Service Bulletin(s). If alternate installation is present, refer to SB2X-79-04 for more information.

SR22_PC79_1929

Figure-01

Oil Pressure/Temp Sensors and Gauge - Serials 22T-0001 & subs before SB2X-79-04 (3 of 4)

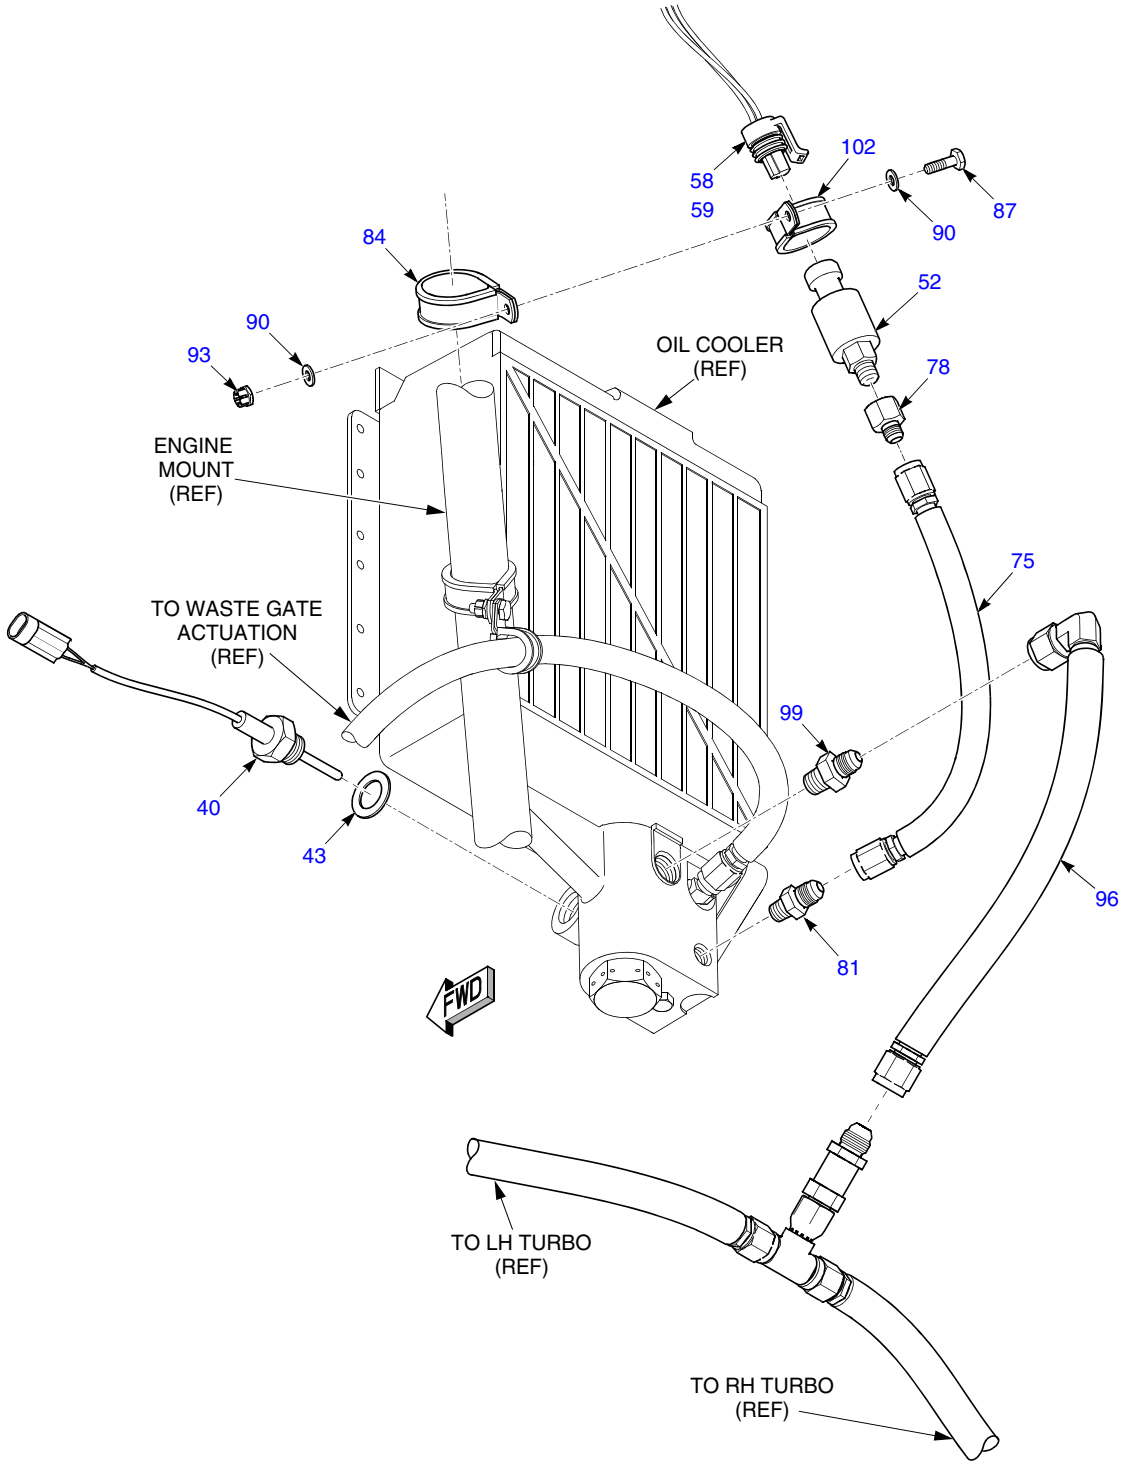

DETAIL E

SR22T Serials after SB2X-79-04.

SR22_PC79_2904

Figure-01

Oil Pressure/Temp Sensors and Gauge - Serials 22T-0001 & subs after SB2X-79-04 (4 of 4)

EFFECTIVITY:
Serials 22T-0001 & subs after SB2X-79-04

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01	**		OIL PRESSURE/TEMP SENSORS AND GAGE INSTL	0002 / 0001	/	NP
	3	12619-001			·OIL TEMPERATURE/PRESSURE INDICATOR	0002	1662	1
	6	50834-014		A	·SCREW	0002	1662	4
	9	50813-001		A	·WASHER	0002	1662	4
	12	50274-001			·CONNECTOR	0002	1662	1
-	15	NO PRT NUMBER			OIL PRESSURE/TEMP SENSORS W/O PERSPECTIVE			NP
	18	12634-001			·OIL TEMPERATURE SENSOR	0002		1
					ALTERNATE FOR P/N 15848-001			
-	21	15848-001			·OIL TEMPERATURE SENSOR	0002		1
					ALTERNATE FOR P/N 12634-001			
	24	PRT OF ITM 18		A	··NUT	0002		2
	27	PRT OF ITM 18		A	··WASHER	0002		1
	30	PRT OF ITM 18		A	··WASHER	0002		1
	33	PRT OF ITM 18			··TERMINAL RING	0002		1
-	36	NO PRT NUMBER			OIL PRESSURE/TEMP SENSORS W/ PERSPECTIVE			NP
-	39	MS28034-1			·OIL TEMPERATURE SENSOR	3026	3669	1
	40	24761-002			·OIL TEMPERATURE SENSOR	3670 / 0001	/	1
-	42	PRT OF ITM 39		A	··WASHER	3026	3669	1
	43	MS35769-11		A	··WASHER	3670 / 0001	/	1
-	45	53132-001			·CONNECTOR	3026		1
-	48	11825-001			·OIL PRESSURE SENSOR ELECTRICAL ASSY	0002 / 0001	3932 / 0492	1
-	51	12635-002			··OIL PRESSURE SENSOR	0002 / 0001	3932 / 0492	1
					FOR SPARES USE P/N 12635-004			
	52	12635-004			··OIL PRESSURE SENSOR	3933 / 0493	/	1
-	54	50167-001			··CONNECTOR	0002 / 0001	4075 / 0729	1
					ALTERNATE FOR P/N 50167-002			
					ALTERNATE FOR P/N 50167-003			
-	57	50167-002			··CONNECTOR	0002 / 0001	4075 / 0729	1
					ALTERNATE FOR P/N 50167-001			
					ALTERNATE FOR P/N 50167-003			
	58	50167-003	!		··CONNECTOR	0002 / 0001	4075 / 0729	1
					ALTERNATE FOR P/N 50167-001			
					ALTERNATE FOR P/N 50167-002			
	59	50167-004			··CONNECTOR	4076 / 0730	/	1
	60	AN912-3J			·REDUCER	/ 0001	/	1
	63	AN-911-1J			·FITTING, NIPPLE	/ 0001	/	1
	66	AN918-1J			·ADAPTER, CROSSPIPE	/ 0001	/	1
	69	2024			·PLUG	/ 0001	/	1
	72	AN816-6-2			·FITTING, NIPPLE	/ 0001	/	1
	75	38562-001	@		·HOSE, 12 INCH			
					AFTER SB2X-79-04	0001		1
					AFTER SB2X-79-08	0002		1
	78	MS51503B35	@		·FITTING			
					AFTER SB2X-79-04	0001		1
					AFTER SB2X-79-08	0002		1
	81	AN816-3	@		·FITTING			
					AFTER SB2X-79-04	0001		1
					AFTER SB2X-79-08	0002		1
	84	AS4149WDG18	@		·ADEL CLAMP			
					AFTER SB2X-79-04	0001		1
					AFTER SB2X-79-08	0002		1
	87	AN3-5A	@		·BOLT			
					AFTER SB2X-79-04	0001		1
					AFTER SB2X-79-08	0002		1

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678 ····	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
	90	NAS1149F0332P	@		··WASHER			
					AFTER SB2X-79-04	0001		2
					AFTER SB2X-79-08	0002		2
	93	MS21045-3	@		·NUT			
					AFTER SB2X-79-04	0001		1
					AFTER SB2X-79-08	0002		1
	96	38562-002	@		·RH ANGLE HOSE			
					AFTER SB2X-79-04	0001		1
	99	AN816-6-6	@		·FITTING			
					AFTER SB2X-79-04	0001		1
	102	AS4149WDG16	@		·ADEL CLAMP			
					AFTER SB2X-79-04	0001		1
					AFTER SB2X-79-08	0002		1
					SYMBOL NOTES:			
			**		SEE SPECIAL CONDITIONS SECTION OF IPC INTRODUCTION FOR DETAILED DESCRIPTIONS OF THE FOLLOWING:			
					1) SERIAL NUMBERS 22-1602, 22-1644; REFER TO 22-1663 FOR PART IDENTIFICATION.			
					2) SERIAL NUMBERS 22-2979, 22-2992, 22-3002; REFER TO 22-3026 W/ PERSPECTIVE AVIONICS FOR PART IDENTIFICATION.			
			!		SERIAL NUMBERS 22-4056 AND 22-4068, ORDER 50167-004			
			@		SERIAL NUMBERS 22T-0010, 22T-0070, 22T-0099, 22T-0100, 22T-0293, 22T-0315, 22T-0321, 22T-0361, 22T-0370, 22T-0405, 22T-0464, 22T-0479, 22T-0493, 22T-0509, 22T-0537, 22T-0586, 22T-0599, 22T-0681, 22T-0682, 22T-0693. 22T-0728, 22T-0751, 22T-0752, 22T-0760, 22T-0776, 22T-0818, 22T-0845, 22T-0852,			
					22T-0892, 22T-0930, 22T-0937, 22T-0954, 22T-0970, 22T-0973, 22T-0979, 22T-0980, 22T-1014, 22T-1109, 22T-1124, 22T-1125, 22T-1130, 22T-1136, 22T-1157, 22T-1178, 22T-1186, 22T-1192, 22T-1204, 22T-1205, 22T-1219, 22T-1234, 22T-1236, 22T-1240, 22T-1258, 22T-1283, 22T-1295, 22T-1316, 22T-1327, 22T-1361, 22T-1402, 22T-1403 BEFORE SB2X-78-04, REFER TO 22T-0001 FOR PART IDENTIFICATION.			
					SERIAL NUMBER 22-3952, 22-4307, 22-4313 BEFORE SB2X-79-08, REFER TO 22-0002 FOR PART IDENTIFICATION.			

EFFECTIVITY:
All

CHAPTER 81

TURBINES

Intentionally Left Blank

CHAPTER 81 - TURBINES

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Turbocharger - Serials 22T-0001 & subs	81-20-01

Intentionally Left Blank

CHAPTER 81 - TURBINES

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
81-LOEP	1	19 SEP 2017
81-LOEP	2	19 SEP 2017
81-TOC	1	19 SEP 2017
81-TOC	2	19 SEP 2017
81-20-01	1	15 DEC 2014
81-20-01	2	19 SEP 2017

Intentionally Left Blank

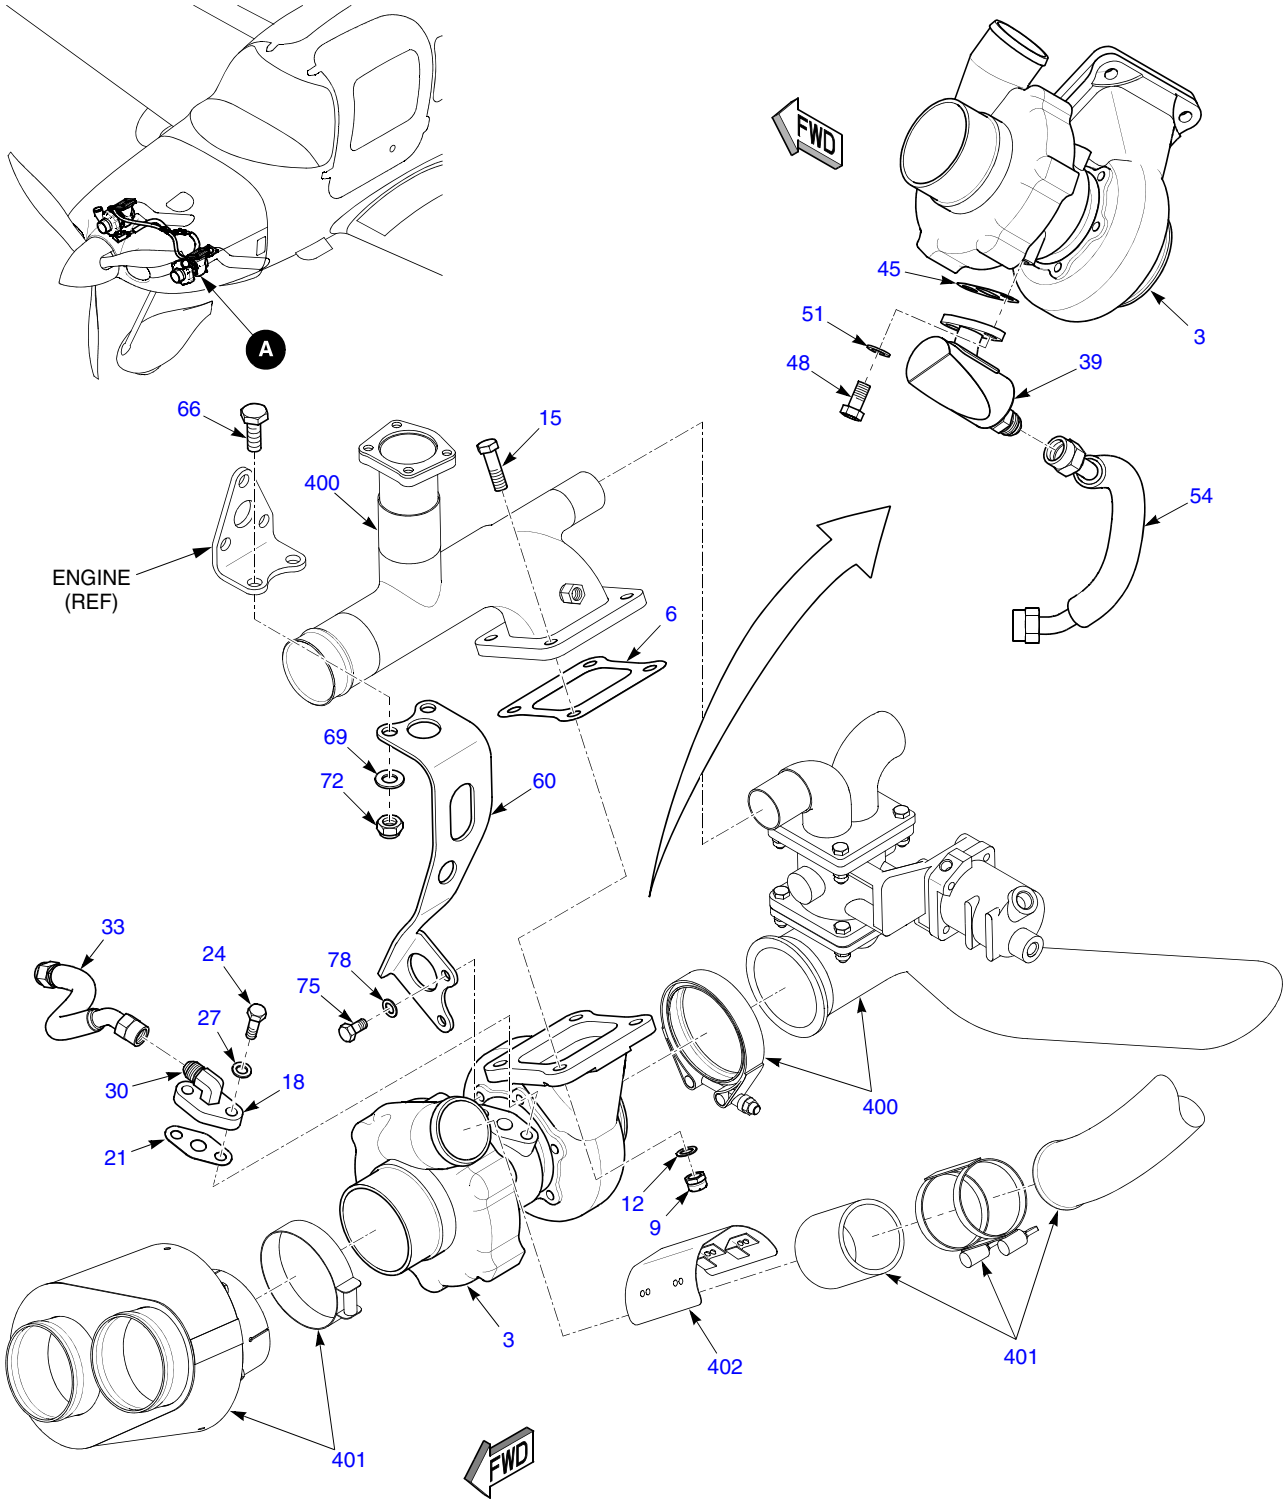

DETAIL A

Serials 22T-0001 & subs.

SR22_PC81_1946

Figure-01
Turbocharger - Serials 22T-0001 & subs

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			TURBOCHARGER	/ 0001	/	NP
	3	646677			·TURBOCHARGER ASSEMBLY	/ 0001	/	1
	6	636465			·GASKET	/ 0001	/	1
	9	NAS1587-6		A	·NUT	/ 0001	/	4
	12	NAS1006-12A		A	·WASHER	/ 0001	/	4
	15	NAS1021C6		A	·BOLT	/ 0001	/	4
	18	642659			·ADAPTER, TURBO OIL INLET	/ 0001	/	1
	21	652100			·GASKET	/ 0001	/	1
	24	537750		A	·SCREW	/ 0001	/	2
	27	MS35338-45		A	·WASHER	/ 0001	/	2
	30	628475			·ELBOW FITTING	/ 0001	/	1
	33	646644			·HOSE ASSEMBLY, LH	/ 0001	/	1
-	36	646644Y			·HOSE ASSEMBLY, RH	/ 0001	/	1
	39	657640			·RESERVOIR, LH	/ 0001	/	1
-	42	657641			·RESERVOIR, RH	/ 0001	/	1
	45	652101			·GASKET	/ 0001	/	1
	48	MS90725-58		A	·SCREW	/ 0001	/	2
	51	MS35338-46		A	·WASHER	/ 0001	/	2
	54	646644			·HOSE ASSEMBLY, LH	/ 0001	/	1
-	57	646644			·HOSE ASSEMBLY, RH	/ 0001	/	1
	60	657626			·BRACKET, LH	/ 0001	/	1
-	63	657625			·BRACKET, RH	/ 0001	/	1
	66	MS90726-33		A	·SCREW	/ 0001	/	2
	69	401506		A	·WASHER	/ 0001	/	2
	72	MS21044N5		A	·NUT	/ 0001	/	2
	75	PRT OF ITM 3		A	·BOLT	/ 0001	/	2
	78	PRT OF ITM 3		A	·WASHER	/ 0001	/	2
					REFERENCED ITEMS NOT PRT OF ASSY/INSTL			
	400	RF 78-20-02 DET			EXHAUST SYSTEM			
	401	RF 71-60-02 DET			INDUCTION SYSTEM			
	402	RF 71-30-01 DET			HEAT SHIELD			

EFFECTIVITY:
All

CHAPTER 93

SURVEILLANCE

Intentionally Left Blank

CHAPTER 93 - SURVEILLANCE

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
93-LOEP	1	01 JAN 2016
93-LOEP	2	01 JAN 2016
93-TOC	1	01 JAN 2016
93-TOC	2	01 JAN 2016
93-50-01	1	01 JAN 2016
93-50-01	2	01 JAN 2016
93-50-01	3	01 JAN 2016
93-50-01	4	01 JAN 2016

Intentionally Left Blank

CHAPTER 93 - SURVEILLANCE

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Enhanced Vision System - Serials 22-3026 thru 22-4186, 22T-0001 thru 1003	93-50-01
Enhanced Vision System - Serials 22-4187 & subs, 22T-1004 & subs	93-50-01

Intentionally Left Blank

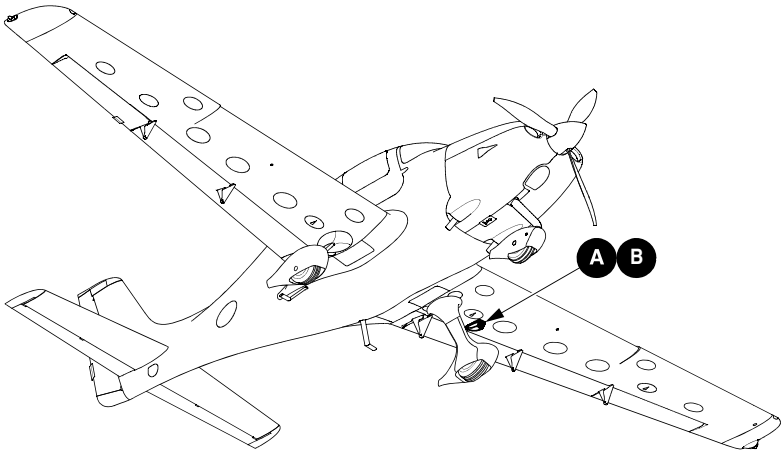

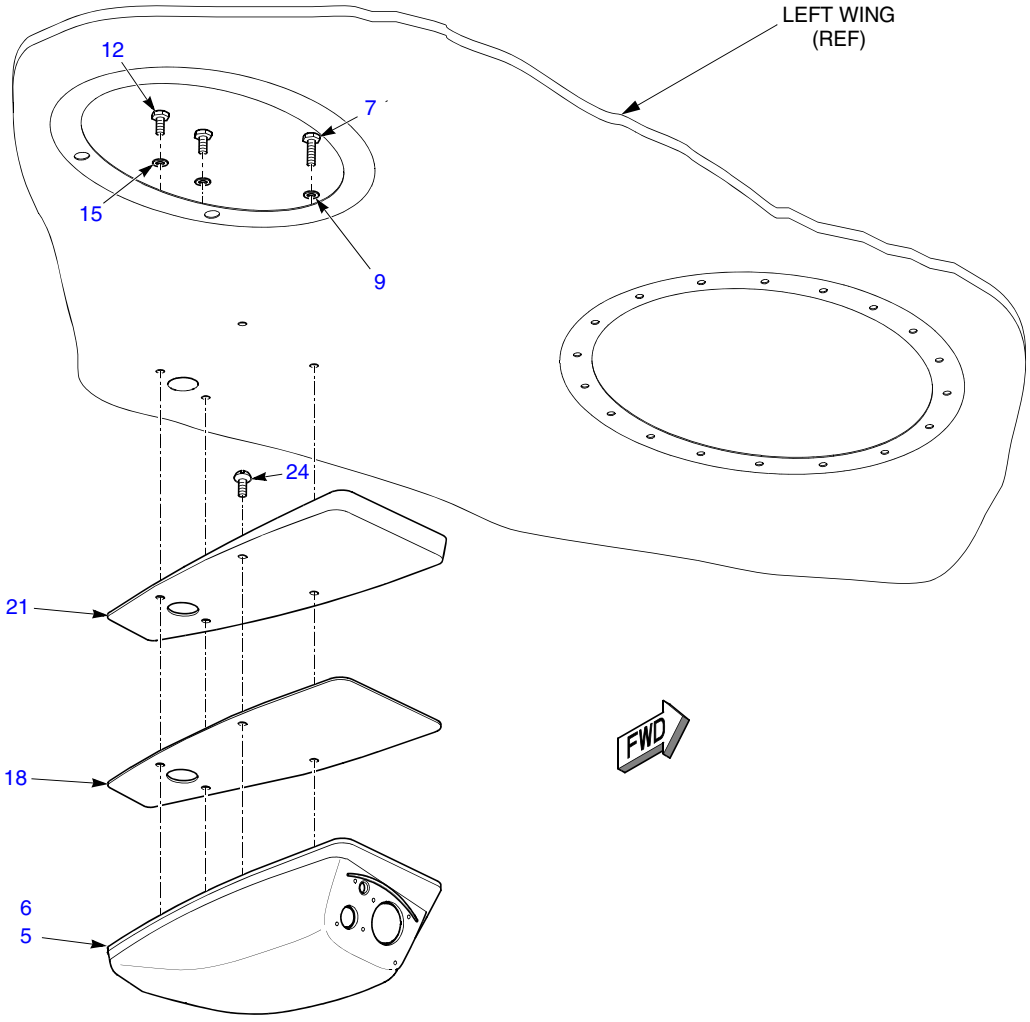

DETAIL A

Serials 22-3026 thru 22-4186, 22T-0001 thru 22T-1003.

SR22_PC93_1794B

Figure-01

Enhanced Vision System - Serials 22-3026 thru 22-4186, 22T-0001 thru 1003

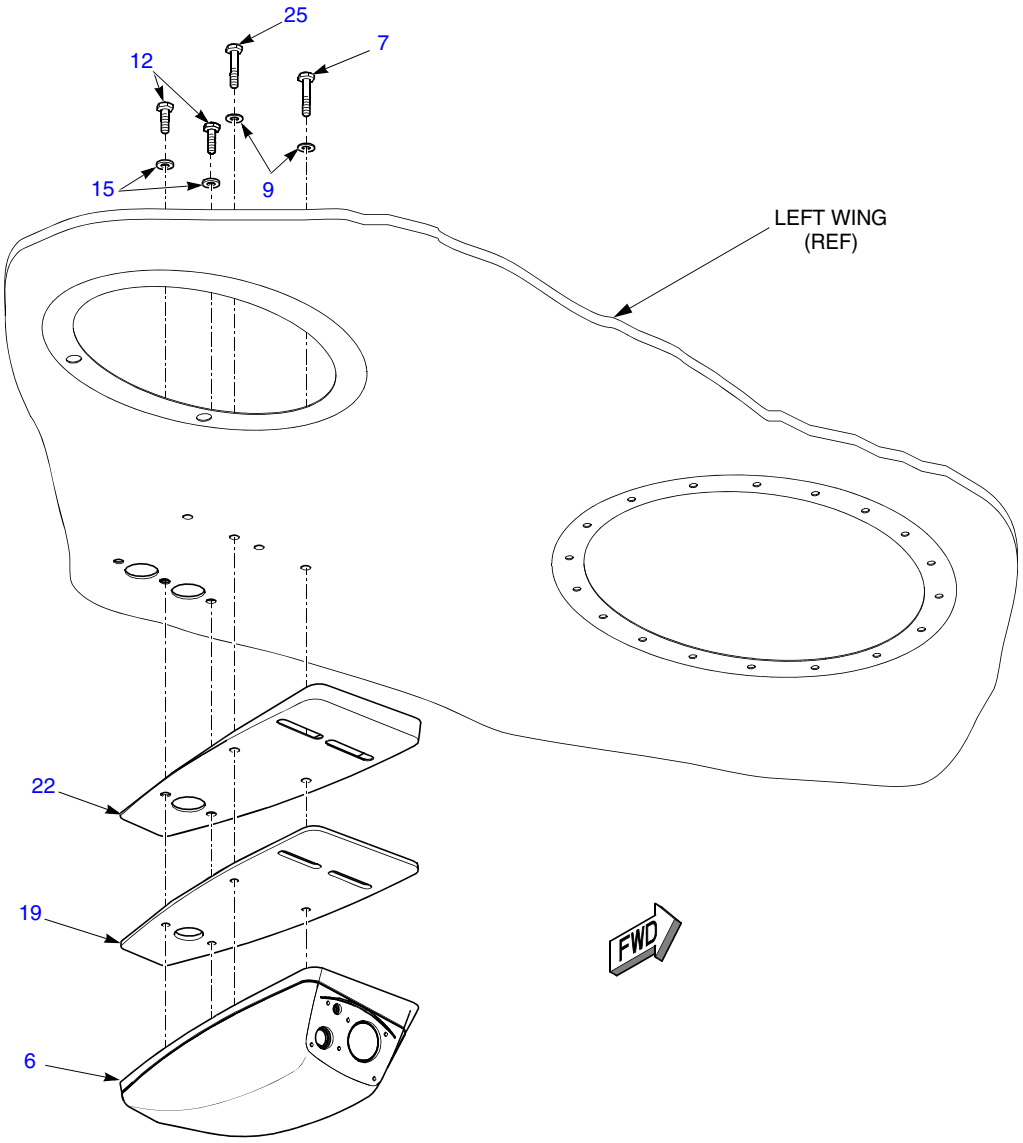

DETAIL B

Serials 22-4187 & subs, 22T-1004 & subs.

SR22_PC93_2186

Figure-01

Enhanced Vision System - Serials 22-4187 & subs, 22T-1004 & subs

EFFECTIVITY:
Serials 22-4187 & subs, 22T-1004 & subs

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	12345678 ..... NOMENCLATURE	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			ENHANCED VISION SYSTEM INSTALLATION	3026 / 0001	/	NP
-	3	24737-005			·EVS CAMERA	3026	3493	1
					FOR SPARES USE P/N 24737-007			
-	4	24737-006			·EVS CAMERA	3494 / 0001	3754 / 0127	1
					AFTER SB2X-93-02	3026	3493	
					FOR SPARES USE P/N 24737-007			
	5	24737-007			·EVS CAMERA	3755 / 0128	4113 / 0841	1
					FOR SPARES USE P/N 24737-010			
	6	24737-010			·EVS CAMERA	4114 0842		1
	7	AN3-10A		A	·BOLT	3026 / 0001	/	1
	9	NAS1149D0332K		A	·WASHER	3026 / 0001	4186 / 1003	1
						4187 / 1004	/	2
	12	AN3-5A		A	·BOLT	3026 / 0001	/	2
	15	NAS1149D0363K		A	·WASHER	3026 / 0001	/	2
	18	19547-001			·GASKET	3026 / 0001	4186 / 1003	1
					FOR SPARES USE P/N 19547-002			
	19	19547-002			·GASKET	4187 / 1004	/	1
	21	26137-001			·SPACER	3026 / 0001	4186 / 1003	1
					FOR SPARES USE P/N 26137-002			
	22	26137-002			·SPACER	4187 / 1004	/	
	24	AN525-10R6		A	·SCREW	3026 / 0001	4186 / 1003	1
	25	AN3-7A		A	·BOLT	4187 / 1004	/	

Intentionally Left Blank

CHAPTER 95

SPECIAL PURPOSE EQUIPMENT

Intentionally Left Blank

CHAPTER 95 - SPECIAL EQUIPMENT

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
95-LOEP	1	19 SEP 2017
95-LOEP	2	19 SEP 2017
95-TOC	1	19 SEP 2017
95-TOC	2	19 SEP 2017
95-00-01	1	19 SEP 2017
95-00-01	2	19 SEP 2017
95-00-02	1	19 SEP 2017
95-00-02	2	19 SEP 2017
95-00-02	3	19 SEP 2017
95-00-02	4	19 SEP 2017
95-00-03	1	19 SEP 2017
95-00-03	2	19 SEP 2017

Intentionally Left Blank

EFFECTIVITY:

CHAPTER 95 - SPECIAL EQUIPMENT

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Sensor Mounting Structure - Serials w/ Perception	95-00-01
Arm Assembly and Fairing - Serials w/ Perception (1 of 2)	95-00-02
Arm Assembly and Fairing - Serials w/ Perception (2 of 2)	95-00-02
Baggage Door Closeout - Serials w/ Perception	95-00-03

Intentionally Left Blank

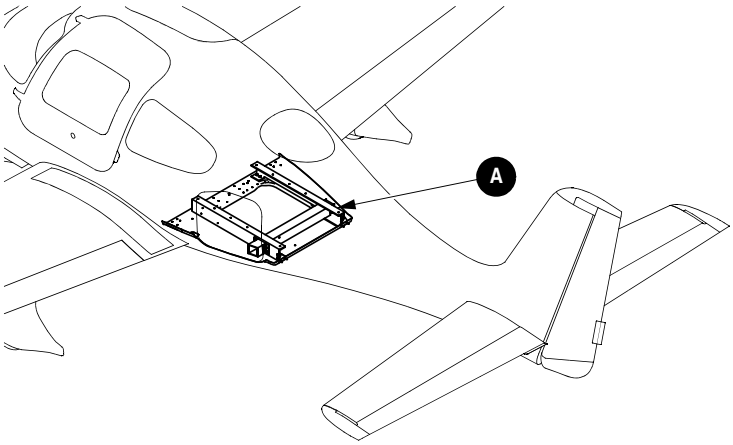

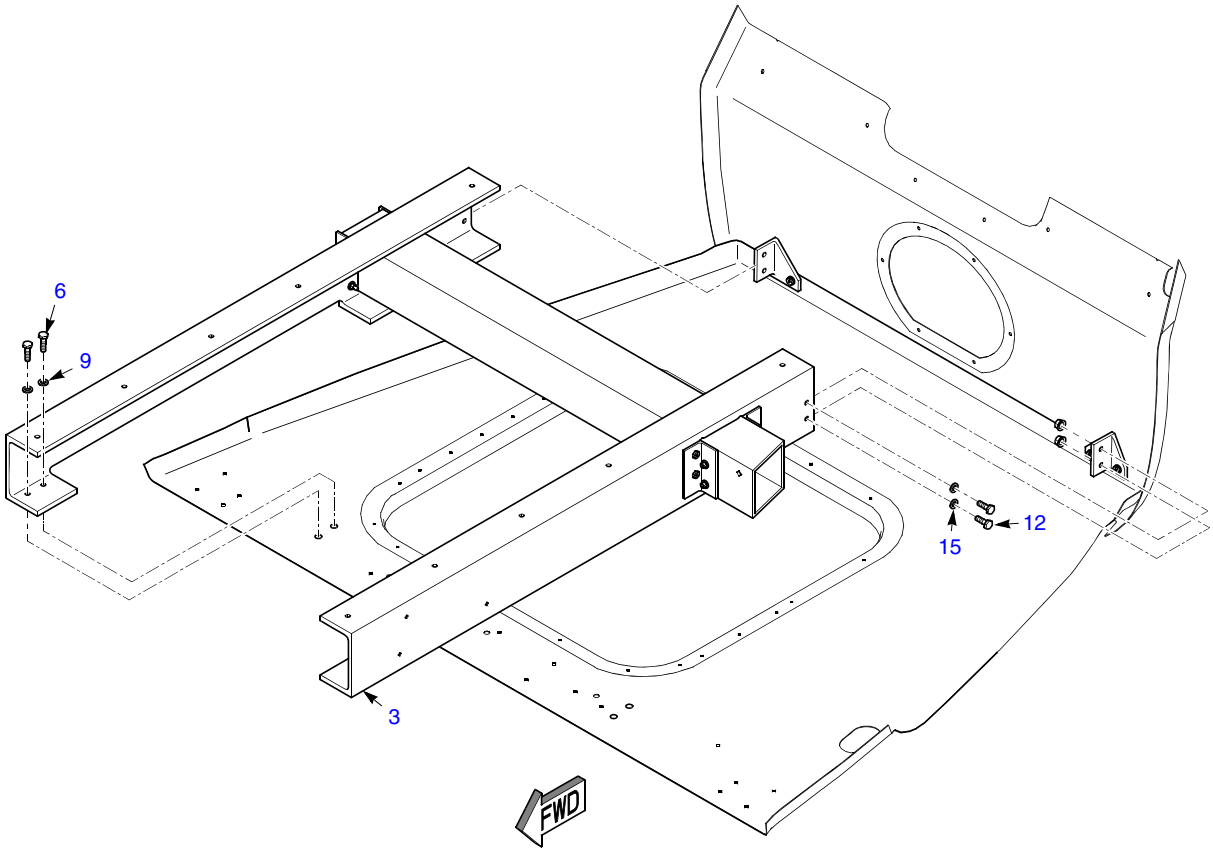

DETAIL A

Serials w/ Perception.

SR22_PC95_2453

Figure-01
Sensor Mounting Structure - Serials w/ Perception

EFFECTIVITY:
All

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM	EFFECTIVE TO	UNITS
-	1	FIGURE NO 01	**		PERCEPTION SENSOR MOUNTING STRUCTURE	4369 / 1384	/	NP
	3	35575-001			·SENSOR MOUNTING STRUCTURE	4369 / 1384	/	1
	6	AN4-7A		A	·BOLT	4369 / 1384	/	4
	9	NAS1149F0463P		A	·WASHER	4369 / 1384	/	4
	12	AN3-11A		A	·BOLT	4369 / 1384	/	4
	15	NAS1149F0363P		A	·WASHER	4369 / 1384	/	4
			**		INSTALLED ON SERIALS W/ PERCEPTION.	4369 / 1384	/	

EFFECTIVITY:
All

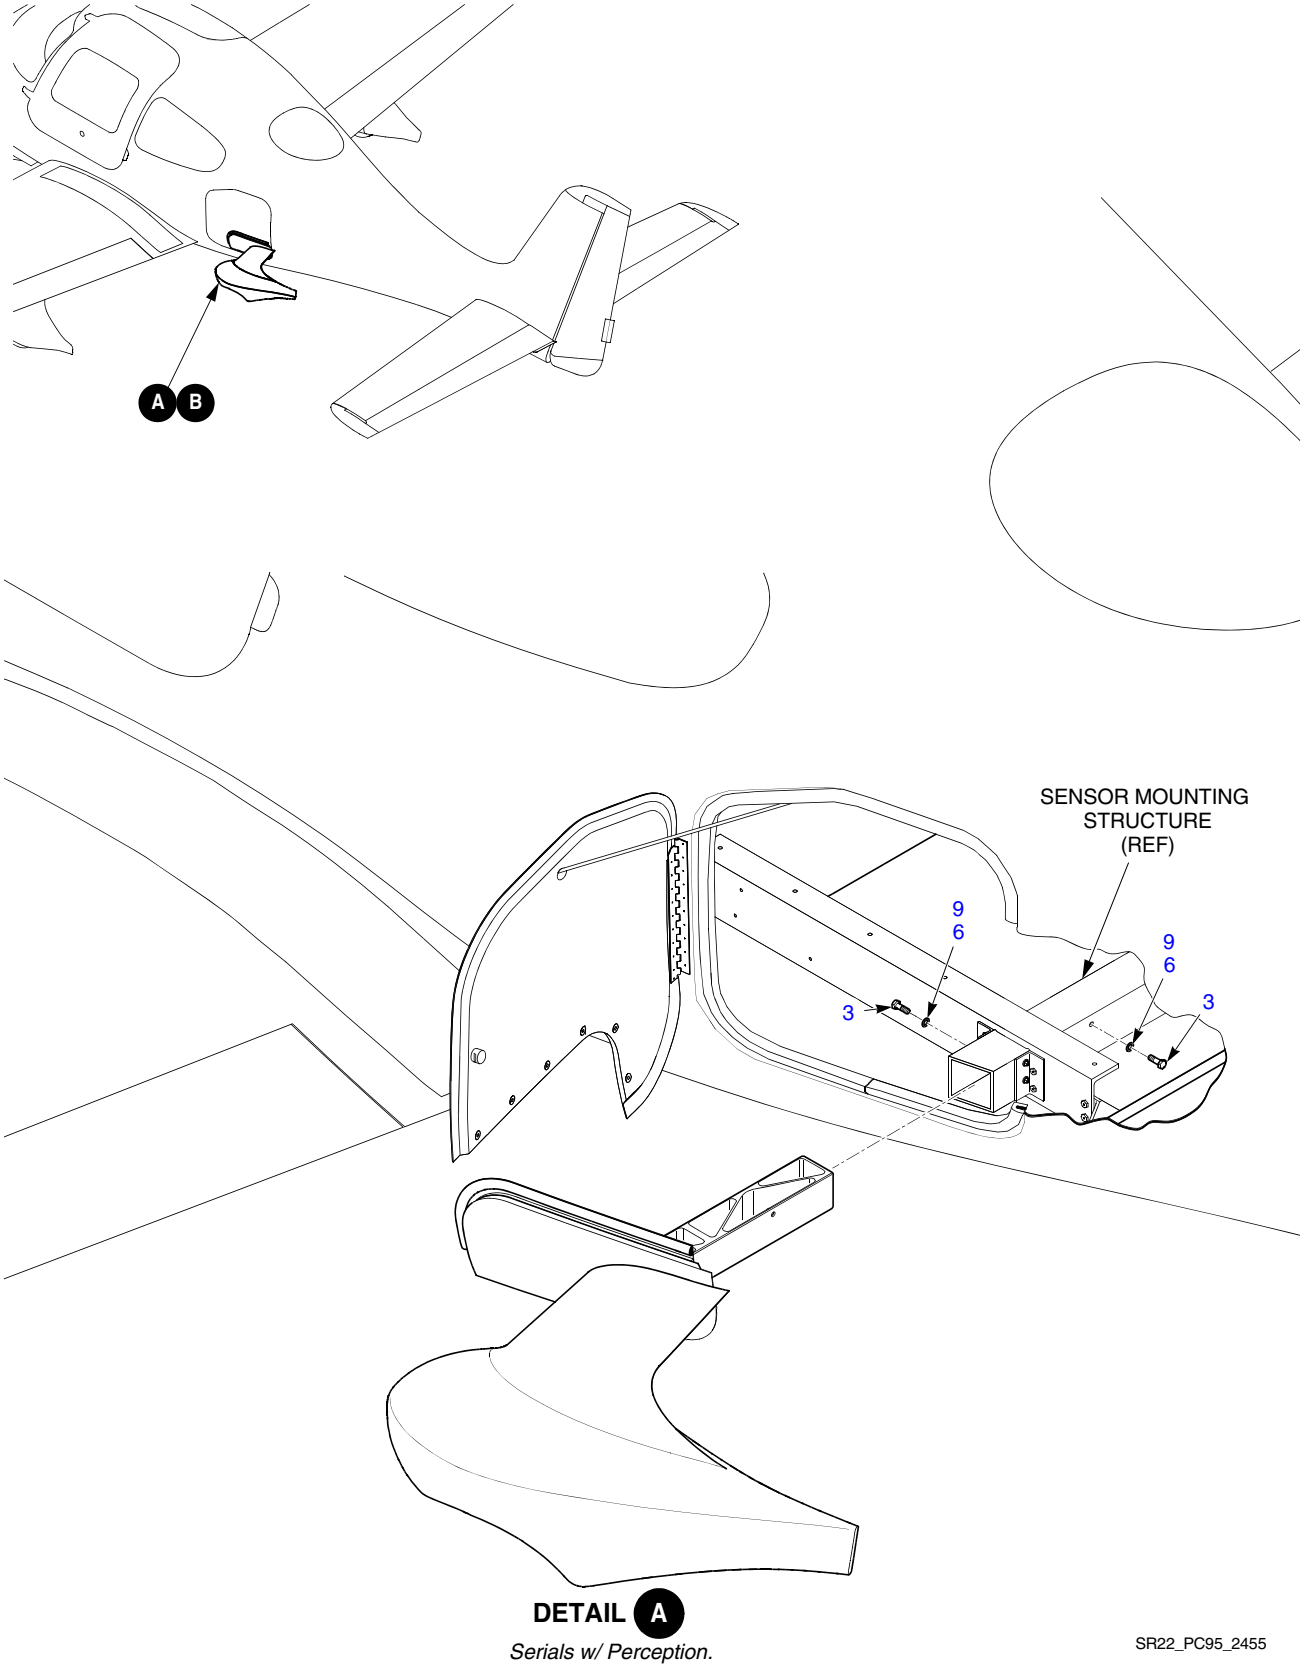

Serials w/ Perception.

Figure-02

Arm Assembly and Fairing - Serials w/ Perception (1 of 2)

EFFECTIVITY:
Serials w/ Perception

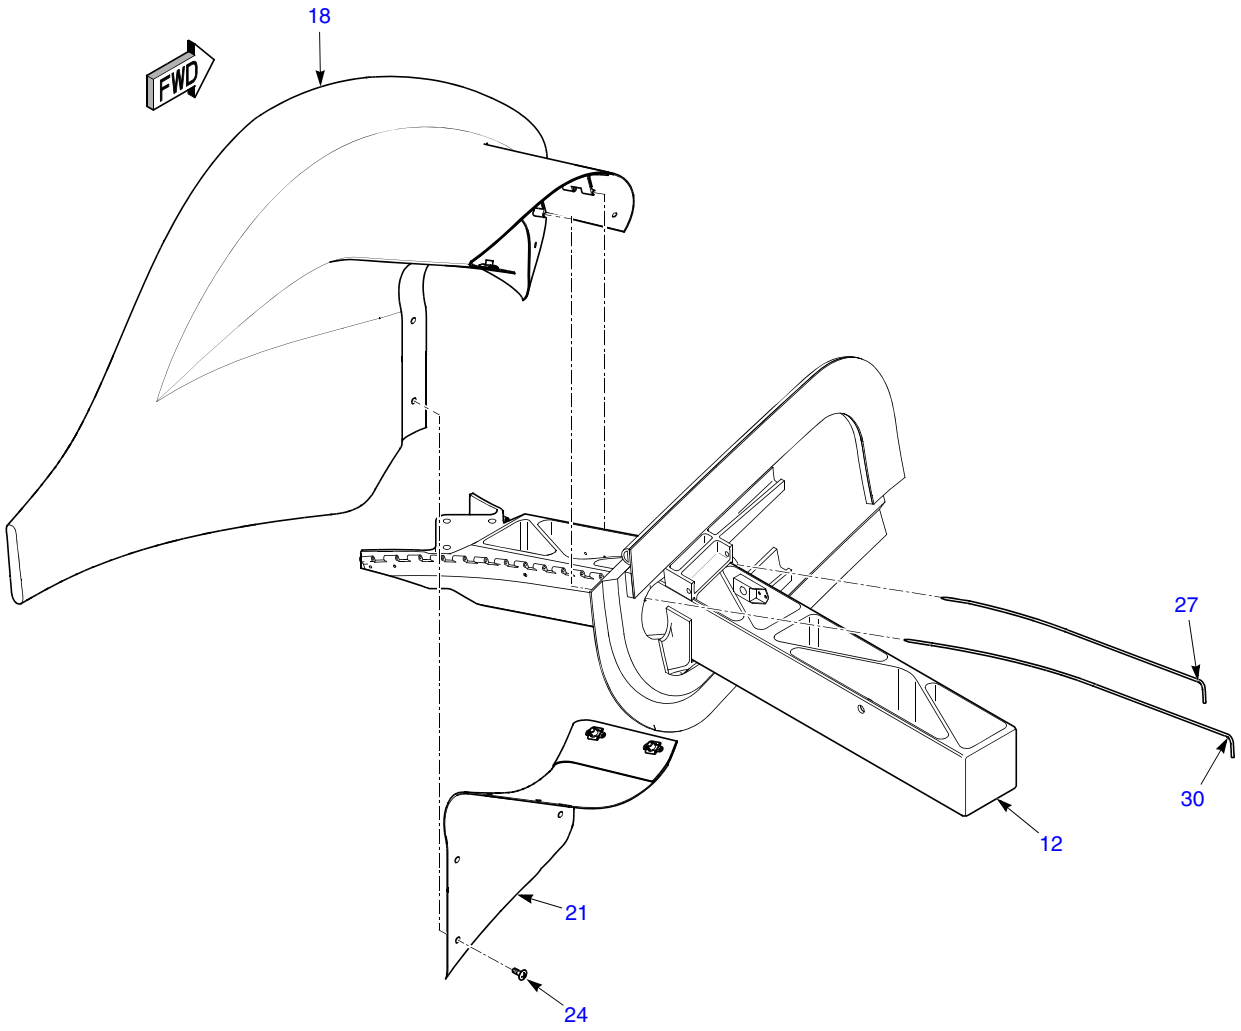

DETAIL B

Serials w/ Perception.

SR22_PC95_2454

Figure-02

Arm Assembly and Fairing - Serials w/ Perception (2 of 2)

EFFECTIVITY:
Serials w/ Perception

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM	EFFECTIVE TO	UNITS
-	1	FIGURE NO 02	**		PERCEPTION SENSOR ARM AND FAIRING INSTALLATION	4369 / 1384		NP
	3	AN5-7A		A	·BOLT	4369 / 1384	/	2
	6	NAS1149C0532R		A	·WASHER	4369 / 1384	/	2
					ALTERNATE FOR P/N NAS1132F0532P			
	9	NAS1132F0532P		A	·WASHER	4369 / 1384	/	2
					ALTERNATE FOR P/N NAS1149C0532R			
	12	35865-001			·SENSOR ARM	4369 / 1384	/	1
-	15	35574-001			·SENSOR ARM FAIRING ASSEMBLY	4369 / 1384	/	1
	18	35574-103			··SENSOR ARM FAIRING, TOP	4369 / 1384	/	1
	21	35574-104			··SENSOR ARM FAIRING, BOTTOM	4369 / 1384	/	1
	24	AN525-832R7		A	··SCREW	4369 / 1384	/	8
	27	35888-105		A	·HINGE PIN	4369 / 1384	/	1
	30	35888-106		A	·HINGE PIN	4369 / 1384	/	1
						4369 / 1384	/	
					SYMBOL NOTES:		/	
			**		INSTALLED ON SERIALS W/ PERCEPTION.		/	

Intentionally Left Blank

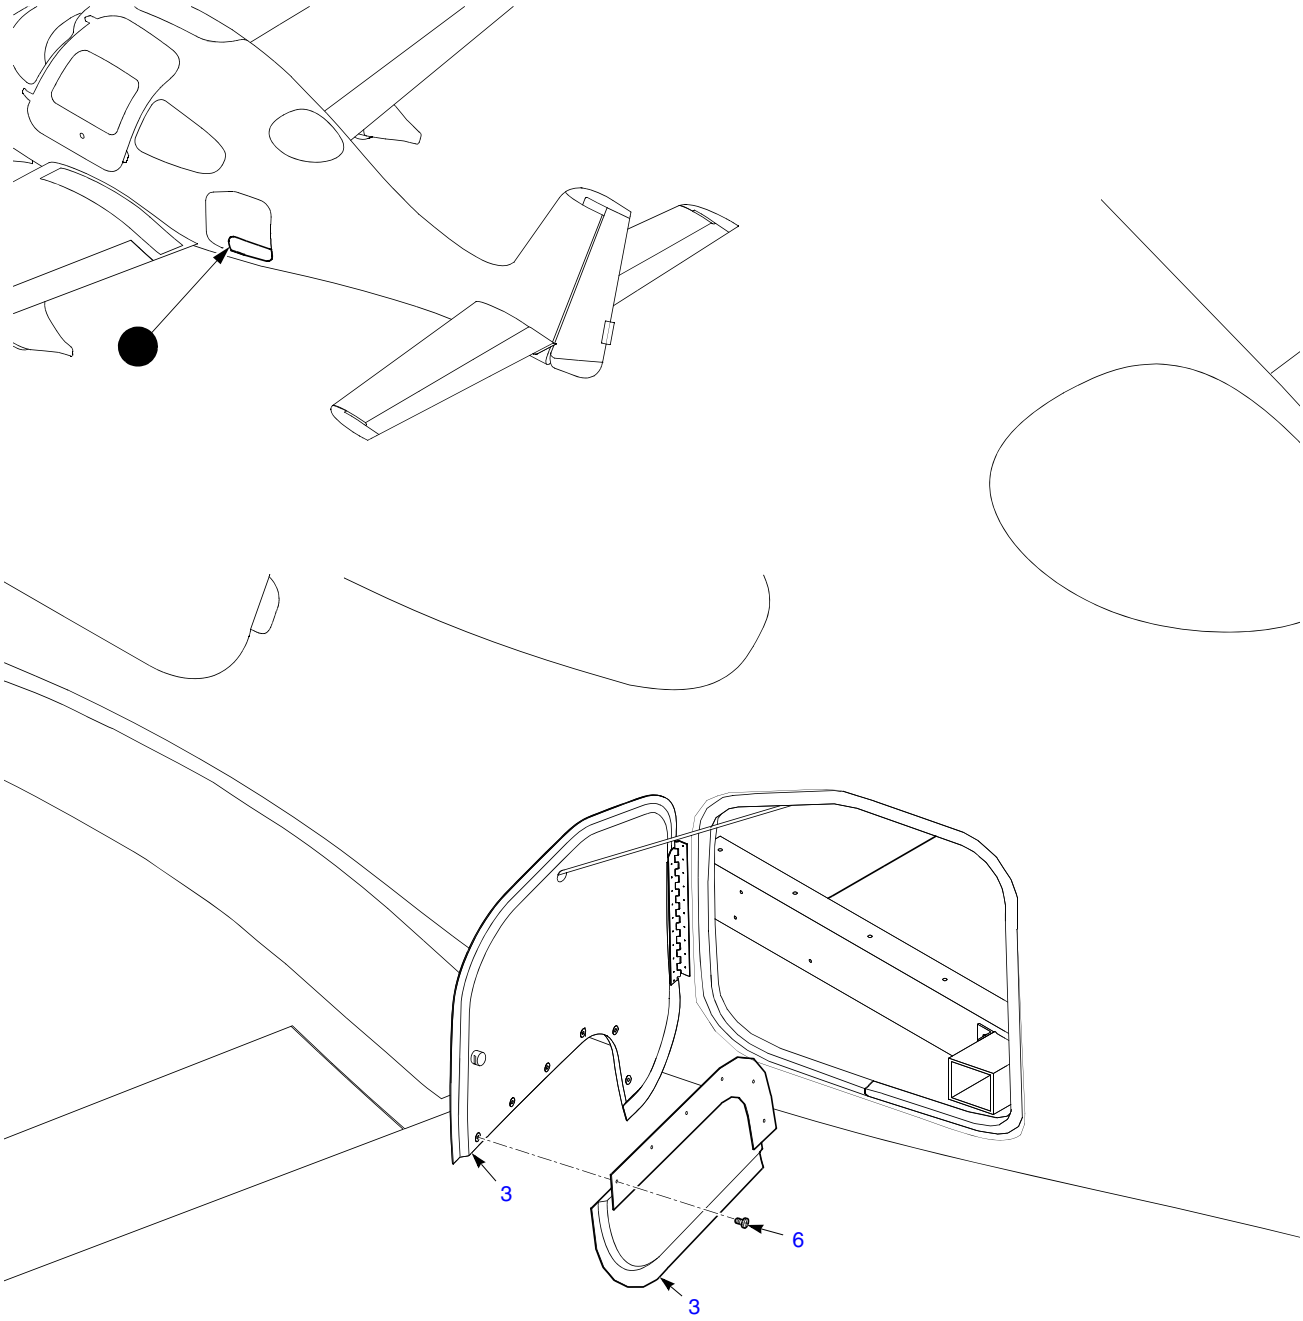

DETAIL A

Serials w/ Perception.

SR22_PC95_2456

Figure-03
Baggage Door Closeout - Serials w/ Perception

EFFECTIVITY:
Serials w/ Perception

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM	EFFECTIVE TO	UNITS
-	1	FIGURE NO 03	**		PERCEPTION BAGGAGE DOOR CLOSEOUT	4369 / 1384		NP
	3	35854-001			SENSOR BAGGAGE DOOR	4369 / 1384	/	1
	6	MS27039-1-05		A	·SCREW	4369 / 1384	/	6
					SYMBOL NOTES:			
			**		INSTALLED ON SERIALS W/ PERCEPTION.			

EFFECTIVITY:
All

CHAPTER 115

FLIGHT SIMULATOR SYSTEMS

Intentionally Left Blank

CHAPTER 115 - FLIGHT SIMULATOR SYSTEMS

LIST OF EFFECTIVE PAGES

Chap-Sect-Fig	Page	Date
115-LOEP	1	15 DEC 2014
115-LOEP	2	15 DEC 2014
115-TOC	1	15 DEC 2014
115-TOC	2	15 DEC 2014
115-00-01	1	15 DEC 2014
115-00-01	2	15 DEC 2014
115-00-01	3	15 DEC 2014
115-00-01	4	15 DEC 2014

Intentionally Left Blank

CHAPTER 115 - FLIGHT SIMULATOR SYSTEMS

TABLE OF CONTENTS

Subject	Chap-Sect-Fig
Landing Gear Simulator - 22-3026 & subs, 22T-0001 & subs w/ Perspective & w/o Oxygen (1 of 2)	115-00-01
Landing Gear Simulator - 22-3026 & subs, 22T-0001 & subs w/ Perspective & w/o Oxygen (2 of 2)	115-00-01

Intentionally Left Blank

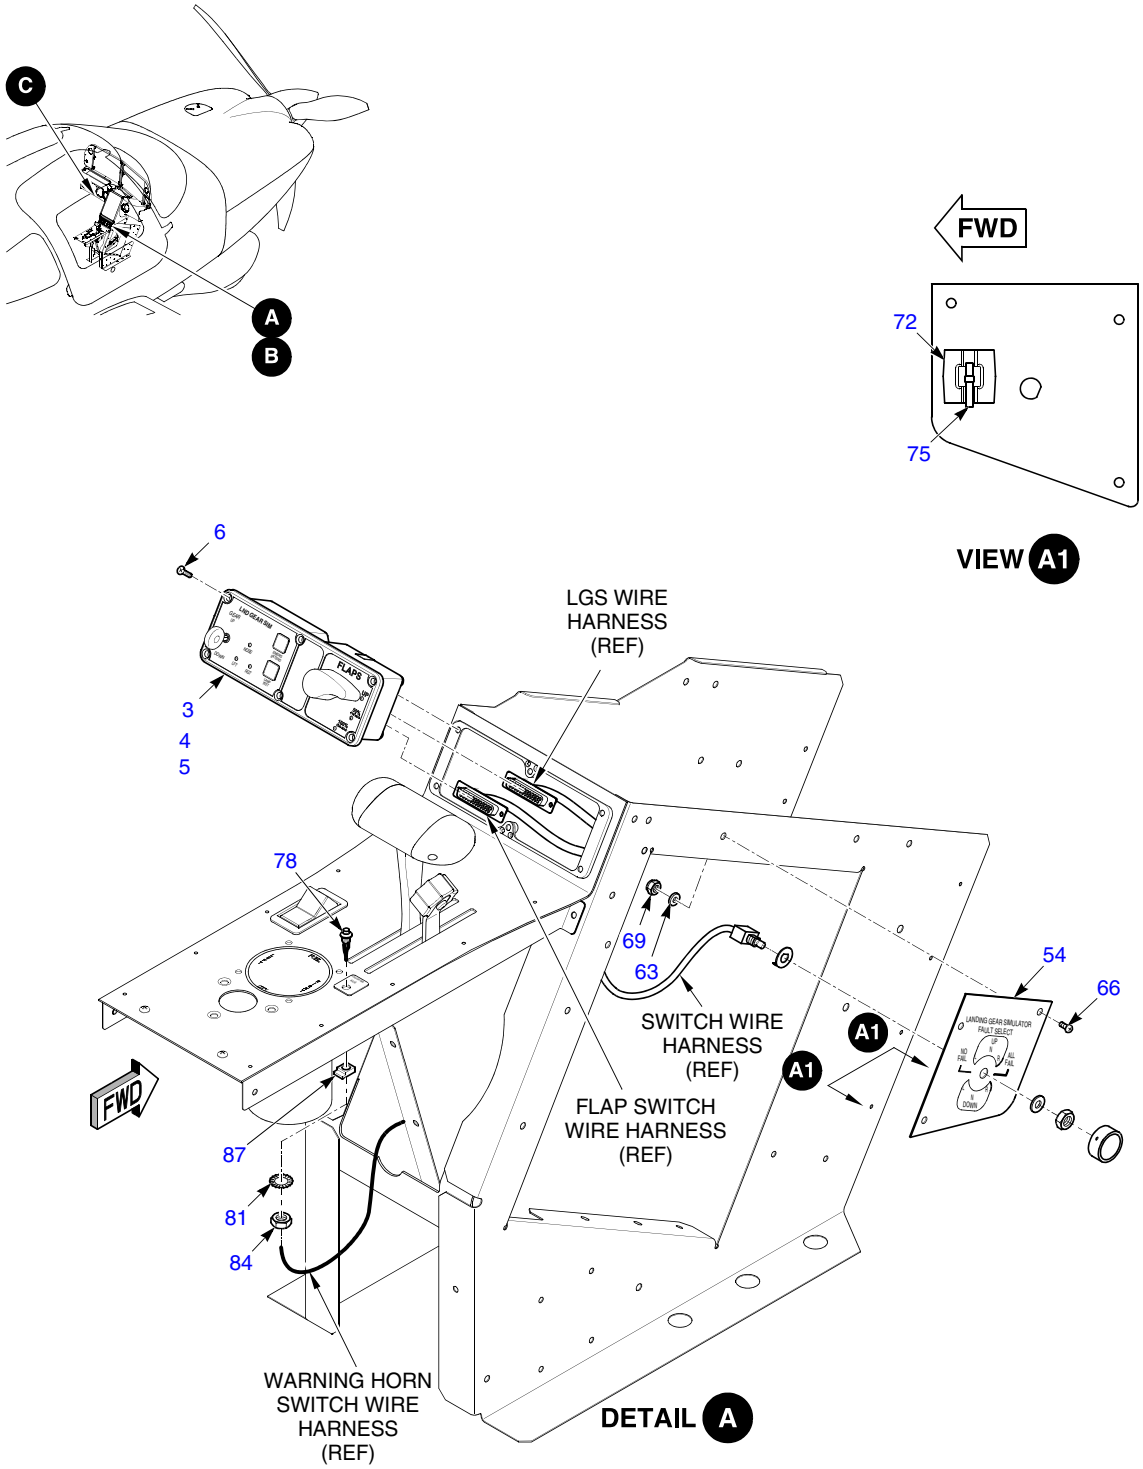

SR22_PC115_1979

Figure-01

Landing Gear Simulator - Serials 22-3026 & subs, 22T-0001 & subs w/ Perspective & w/o Oxygen (1 of 2)

EFFECTIVITY:
Serials 22-3026 & subs, 22T-0001 & subs w/ Perspective & w/o Oxygen

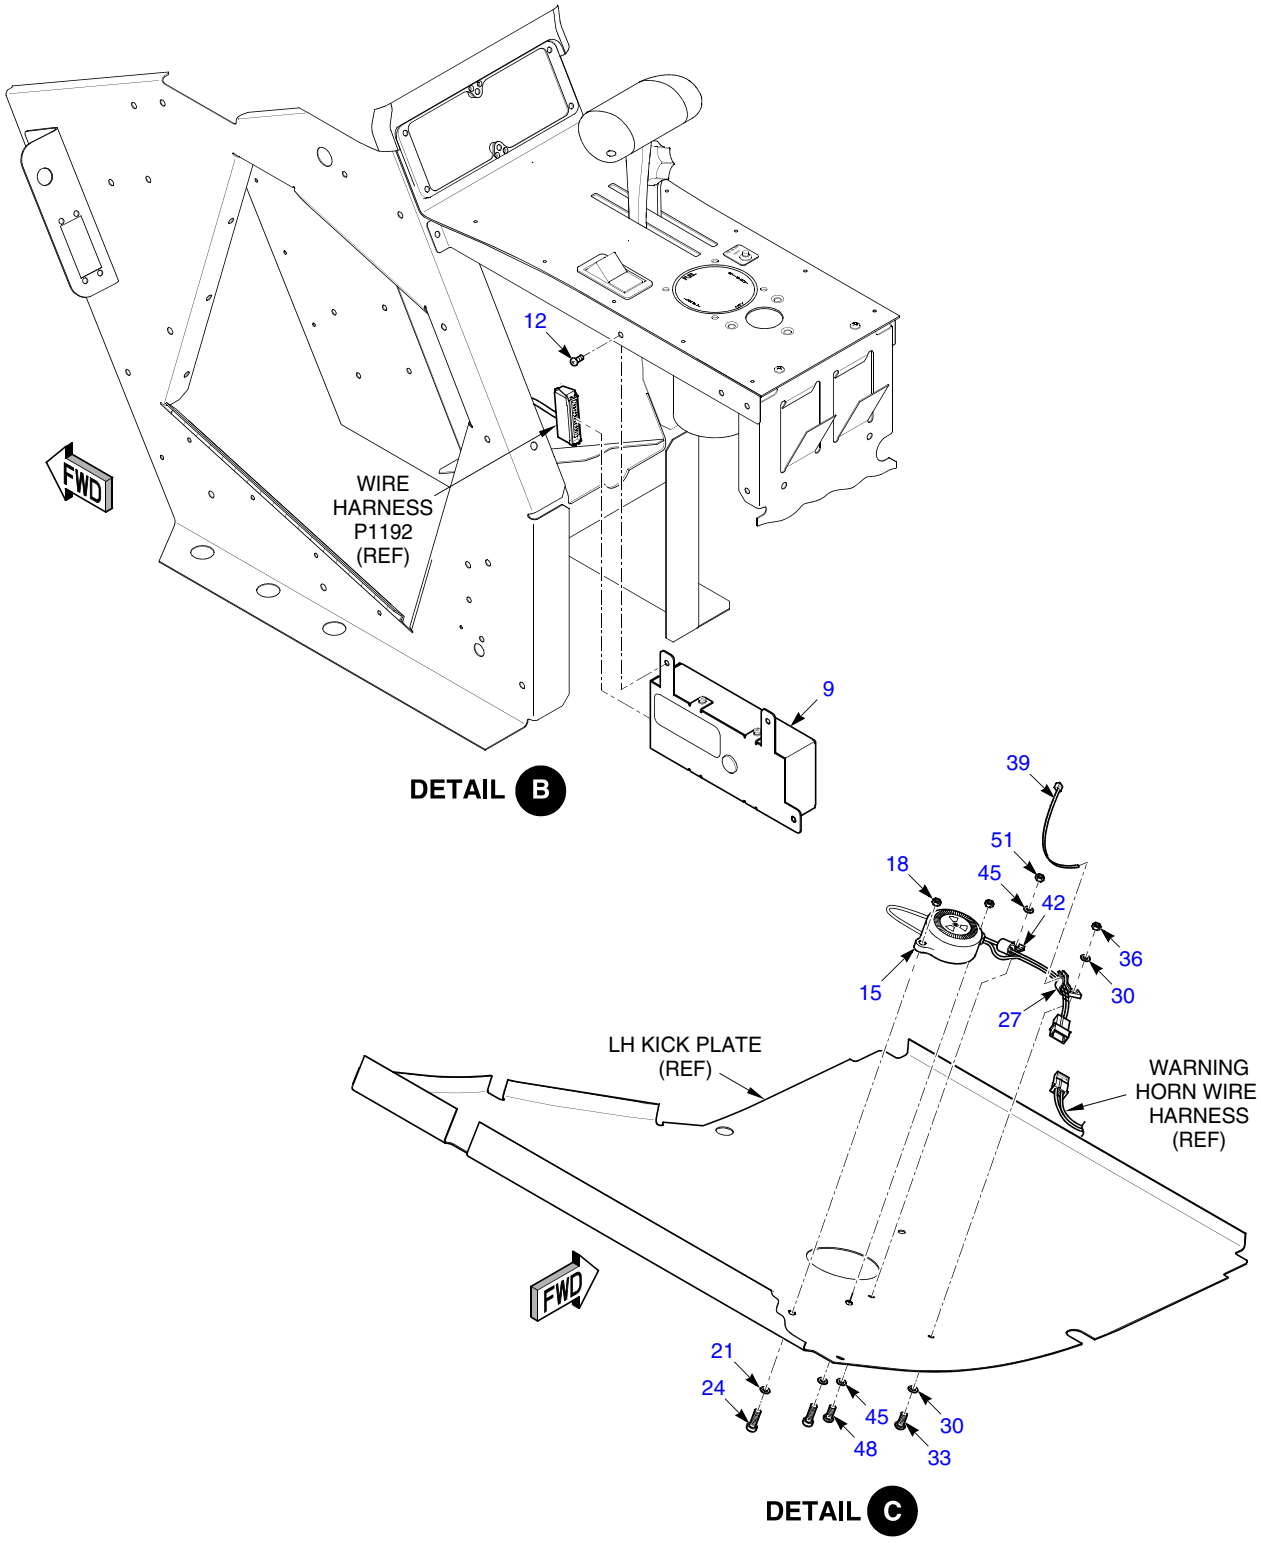

Figure-01

Landing Gear Simulator - Serials 22-3026 & subs, 22T-0001 & subs w/ Perspective & w/o Oxygen (2 of 2)

EFFECTIVITY:
Serials 22-3026 & subs, 22T-0001 & subs w/ Perspective & w/o Oxygen

NO PIC	ITEM	PART NUMBER	SYMBOL	ATTACH	NOMENCLATURE 12345678	EFFECTIVE FROM 22 / 22T	EFFECTIVE TO 22 / 22T	UNITS
-	1	FIGURE NO 01			CIRRUS LANDING GEAR SIMULATOR	3026 / 0001	/	NP
	3	24642-010			·FLAP SWITCH PANEL W/ LGS	3026 / 0001	3881 / 0388	1
					ALTERNATE FOR P/N 24642-011			
	4	24642-011			·FLAP SWITCH PANEL W/ LGS	3026 / 0001	3881 / 0388	1
					ALTERNATE FOR P/N 24642-010			
	5	24642-012			·FLAP SWITCH PANEL W/ LGS	3882 / 0389	/	1
	6	MS24693-28B			·SCREW	3026 / 0001	/	6
	9	27988-001			·LOGIC CONTROL UNIT	3026 / 0001	/	1
	12	MS3506-213			·SCREW	3026 / 0001	/	3
	15	28720-001			·LGS WARNING HORN ASSEMBLY	3026 / 0001	/	1
	18	MS21044N08			·NUT	3026 / 0001	/	2
	21	50813-002			·WASHER	3026 / 0001	/	2
	24	50835-012			·SCREW	3026 / 0001	/	2
	27	51734-001			·CLAMP, NYLON	3026 / 0001	/	1
	30	50813-001			·WASHER	3026 / 0001	/	2
	33	50834-007			·SCREW	3026 / 0001	/	1
	36	MS21044N06			·NUT	3026 / 0001	/	1
	39	50239-020			·CABLE TIE	3026 / 0001	/	1
	42	AN742D3			·CLAMP, ALUMINUM	3026 / 0001	/	1
	45	50813-001			·WASHER	3026 / 0001	/	2
	48	50834-007			·SCREW	3026 / 0001	/	1
	51	MS21044N06			·NUT	3026 / 0001	/	1
	54	NO PRT NUMBER			·INSTRUCTOR FAULT SELECTION PANEL	3026 / 0001	/	1
-	57	27980-001			··PLATE	3026 / 0001	/	1
-	60	27981-001			··OVERLAY	3026 / 0001	/	1
	63	NAS1149FN432P			·WASHER	3026 / 0001	/	3
	66	MS24693-6B			·SCREW	3026 / 0001	/	3
	69	MS21083N04			·NUT	3026 / 0001	/	3
	72	50132-001			·CABLE TIE ANCHOR	3026 / 0001	/	1
	75	50239-020			·CABLE TIE	3026 / 0001	/	1
	78	27987-001			·LGS WARNING HORN SWITCH ASSEMBLY	3026 / 0001	/	1
	81	PRT OF ITM 78			·WASHER	3026 / 0001	/	1
	84	PRT OF ITM 78			·NUT	3026 / 0001	/	1
	87	28723-001			·SHIM	3026 / 0001	/	1

Intentionally Left Blank